VOLVO S60 (11-), V60

WIRING DIAGRAM 2014

TP 39262202 Structure week 13w20

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable curtain)

Warning!

Extra caution must be exercised when working on vehicles equipped with SRS/SIPS bag/IC in order to avoid:
1. Personal injuries when performing repair work.
2. Damage or malfunction of the SRS/SIPS bag/IC system.

Work involving the SRS/SIPS bag/IC systems or other components in the vehicle that may affect the SRS/SIPS bag/IC systems must always be performed by an authorized Volvo workshop.
In case of doubt, consult the SRS and SIPS bag/IC service manual.

Is the vehicle equipped with SRS/SIPS bag/IC?

Vehicles with SRS are most easily recognized by the letters SRS in the center of the steering wheel. If the vehicle also has a passenger side airbag, the letters SRS are stamped on the dashboard above the glove compartment. SRS vehicles from 1993 and onward also have explosive seat belt tensioners. SIPS bags are only installed on SRS vehicles from 1995 and onward. SIPS bag decals are located on the windshield and seat compartment. Vehicles with IC can be recognized by the letters IC on the C/D panel (4 door) or the B panel (5 door).

General recommendations

- Be especially careful when working on or around SRS, SIPS, and IC components.
- Make sure that no wires are pinched, frayed, or pierced.
- Never fit accessories by the sensors.
- Where applicable, work on the steering wheel, steering shaft, or steering gear must be done in accordance with the methods in the SRS section of VIDA.
- Certain components of the aforementioned systems must be grounded while working. Read the appropriate sections in VIDA.
- Do not install any accessories in the areas between the A and B-posts, the B and C-posts, and the C and D-posts.

Test terminal

Fuse in cargo compartment auxiliary fuse box

Changes introduced up to and including structure week 13w20
Any changes made to the vehicle after this date are not included in the manual. If necessary, refer to service bulletins.

Volvo models are sold in versions adapted for different markets. These adaptations depend on factors such as legal requirements, taxation, and market demands.
This manual may therefore include illustrations and text that do not apply to the vehicles in your country.

Ordering:
Electronic Wiring Diagrams (EWD) can be ordered from the Technical Information Shop (TIS)
We retain the right to make modifications.

© Volvo Car Corporation

Table of Contents 1:3

Explanations & Abbreviations 6
How to use the wiring diagrams 1:2 7

Electrical distribution

Overview without Start/stop function 9
Overview with Start/stop function 10
Overview, Distribution box in engine compartment 11
Overview, Distribution box in passenger compartment 12
Overview, Distribution box in cargo compartment 13

Fuses

Distribution box in engine compartment F1 - F7 14
Distribution box in engine compartment F8 - F23 15
Distribution box in engine compartment F27 - F36 16
Distribution box in engine compartment F37 - F38 17
Distribution box in engine compartment F39 - F44 18
Central Electronic Module (CEM) F1 - F8 19
Central Electronic Module (CEM) F9 - F19 20
Central Electronic Module (CEM) F20 - F24 21
Distribution box in passenger compartment F1 - F17 ... 22
Distribution box in passenger compartment F18 - F30 . 23
Distribution box in engine compartment, cold zone 24
Distribution box in cargo compartment FA1 - FA11 25
Battery PF1 - PF2 26

Relays

Relays in the engine compartment 27
Relays in the engine compartment 28
Relays in passenger and cargo compartments 29

Ground connections

Overview 30
31/1 - 31/7 31
31/10 - 31/15 continues 32
31/15 - 31/67 33
31/68 - 31/89 34
31/90 - 31/130 35
31/131 - 31/TRM 36

Control modules

Overview locations 37
Overview designations 38
Central Electronic Module (CEM) 1:3 39
Data communication, High speed CAN 1:2 42
Data communication intermediate speed CAN, LHD ... 44
Data communication intermediate speed CAN, RHD .. 45
Data communication Local CAN 46
Data communication Extended CAN 47
Data communication, LIN 1:2 48
Data communication MOST 50
Steering Wheel Module (SWM) 51

Group 26 Cooling system

Cooling fan, 4-Cyl. Turbo 52
Cooling fan, 4-Cyl. Diesel 53
Cooling fan, 5-Cyl. Diesel 54
Cooling fan, 5-Cyl. Turbo 55
Cooling fan, 6-Cyl. 56

Group 27 Engine controls

Cruise control 4-Cyl. Turbo 1.6l 57
Cruise control 4-Cyl. Turbo 2.0l 58
Cruise control 4-Cyl. Diesel 59
Cruise control 5-Cyl. Diesel 60
Cruise control 5-Cyl. Turbo & 6-Cyl. 61
Start-/Stop function 4-Cyl. Turbo 62
Start-/Stop function 4-Cyl. Diesel 63
Start-/Stop function 5-Cyl. Diesel 64
Start-/Stop function 5-Cyl. Turbo 65

Group 28 Ignition and control system

Engine management system 4-Cyl. 1.6l Turbo 1:2 66
Engine management system 4-Cyl. 2.0l Turbo 1:2 68
Engine management system, 5-Cyl. Turbo 1:2 70
Engine management system, 6-Cyl. Turbo 1:2 72
Engine management system, 4-Cyl. Diesel 1:3 74
Engine management system, 5-Cyl. Diesel 1:3 77
Emission control 4-Cyl. 1.6l Turbo 80
Emission control 4-Cyl. 2.0l Turbo 81
Emission control 5-Cyl. Turbo 82
Emission control 6-Cyl. 83

Table of Contents 2:3

Group 32 Alternator and voltage regulator
Power supply 4-Cyl. without Start/Stop 84
Power supply 5-Cyl. & 6-Cyl. without Start/Stop..... 85
Power supply 4-Cyl. & 5-Cyl. with Start/Stop..... 86

Group 33 Starting system
Starting system 4-Cyl..... 87
Starting system, 5-Cyl. & 6-Cyl..... 88
Starting system, 5-Cyl. Diesel..... 89

Group 35 Lighting
High and low beam..... 90
High and low beam (Dual Xenon)..... 91
Beam length adjustment, manual 92
Running/Parking light, Tail lights S60..... 93
Running/Parking light, Tail lights V60..... 94
Fog lights S60..... 95
Fog lights V60..... 96
Brake lights S60..... 97
Brake lights V60..... 98
Reversing lights S60..... 99
Reversing lights V60..... 100
Follow-me-home lighting LHD 101
Follow-me-home lighting RHD..... 102
Interior lighting, LHD 1:2..... 103
Interior lighting, RHD 1:2 105
Active headlight 107
Auxiliary lights..... 108

Group 36 Additional electrical equipment
Rain sensor..... 109
Direction indicator and hazard warning flashers LHD S60 110
Direction indicator and hazard warning flashers LHD V60 111
Direction indicator and hazard warning flashers RHD S60..... 112
Direction indicator and hazard warning flashers RHD V60..... 113
Window washer and windshield wiper..... 114
Washer headlights..... 115
Wiper rear window V60..... 116
Horn 117
Keyless vehicle 1:2..... 118
Anti-theft alarm 120
Parking assistance..... 121
Collision warning with power brake booster 122
Tire pressure monitoring system (TPMS)..... 123
Alcohol lock..... 124

Group 37 Wiring and fuses
Diagnostics system 125
Outlet 12V 126
Outlet 12V, V60..... 127
Cable harness towbar/tow hitch 13-pin S60 128
Cable harness towbar/tow hitch 13-pin V60 129

Group 38 Instruments
Seat belt reminder..... 130
Driver information system 131

Group 39 Other
Audio Premium 1:3 132
Audio 1:2..... 135
Cellular phone 1:2..... 137
DAB Radio 139
Multimedia monitor with DVD, Dual Screen (RSE).... 140
TV receiver / TV control module S60 141
TV receiver / TV control module V60 142
Bluetooth Handsfree 143
Navigation system and Traffic information, portable.. 144
Satellite radio 145
Parking camera rear 146
Parking camera rear 147
Parking camera wide angle front 148
Sensus Connected Touch..... 149

Group 43 Transmission
Transmission M66..... 150
Automatic transmission AWF21 151
Automatic transmission MPS6 152
Differential Electronic Module (DEM)..... 153

Group 55 Parking brake
Electric parking brake 154

Group 59 Brake system
Brake control system & DSTC 155

Group 64 Steering
Speed dependent power steering 156

Group 76 Shock absorbers
Four-C 157

Table of Contents 3:3

Group 83 Doors and openings

Central locking front doors LHD ... 158
Central locking front doors RHD ... 159
Central locking rear doors ... 160
Central locking tailgate S60 ... 161
Central locking tailgate V60 ... 162
Central locking fuel filler flap ... 163
Signal receiver central locking ... 164
Power windows front doors LHD ... 165
Power windows front doors RHD ... 166
Power windows rear doors ... 167
Power sunroof ... 168

Group 84 Exterior decorative elements, etc.

Power door mirrors LHD ... 169
Power door mirrors RHD ... 170
Heated door mirrors LHD ... 171
Heated door mirrors RHD ... 172
Blind spot information system LHD 1:2 ... 173
Blind spot information system LHD 2:2 ... 174
Blind spot information system RHD 1:2 ... 175
Blind spot information system RHD 2:2 ... 176
Heated windscreen LHD ... 177
Heated windscreen RHD ... 178
Heated rear window ... 179

Group 85 Interior equipment

Power driver's seat with memory function, LHD ... 180
Power driver's seat with memory function, RHD ... 181
Power passenger seat, LHD ... 182
Power passenger seat, RHD ... 183
Heated steering wheel ... 184
Heated front seats with fans ... 185
Heated front seats without fans ... 186
Heated rear seat ... 187

Group 87 Climate control system

Climate control system, 4-Cyl. 1:2 ... 188
Climate control system 4-Cyl. Diesel 1:2 ... 190
Climate control system 5-Cyl. & 6-Cyl. 1:2 ... 192
Climate control system PTC-elements ... 194
Parking heater, auxiliary heater ... 195
Parking heater, remote start ... 196

Group 88 Internal equipment

Supplemental restraint system 1:2 ... 197
Rear-view mirror with automatic dimming ... 199
Remote control opener garage door ... 200
Power folding headrest ... 201

Group 89 Body other

Radiator masking blind ... 202

Connectors ... 203

Branching points ... 238

Cable harness routing in vehicle

Harness engine 4-Cyl. Turbo ... 259
Harness engine, 6-Cyl. Turbo ... 259
Harness engine, 2.0L Diesel ... 260
Harness engine, 2.4L Diesel ... 260
Engine compartment harness LHD ... 261
Engine compartment harness RHD ... 262
Harness dashboard, LHD ... 263
Harness Dashboard, RHD ... 264
Harness Floor, LHD S60 ... 265
Harness Floor, RHD S60 ... 266
Floor Harness, LHD V60 ... 267
Harness Floor, RHD V60 ... 268
Harness infotainment, LHD S60 ... 269
Harness infotainment, RHD S60 ... 270
Harness infotainment, LHD V60 ... 271
Harness infotainment, RHD V60 ... 272
Roof harness, S60 ... 273
Roof harness V60 ... 273
Center console harness ... 274
Tunnel harness ... 274
Harness front door, left ... 275
Harness front door, right ... 275
Harness rear door, left ... 276
Harness rear door, right ... 276
Trunk lid/tailgate harness, S60 ... 277
Trunk lid/tailgate harness, V60 ... 277
Harnesses rear axle ... 278

Component illustrations ... 279

Index 1:2 ... 335

List of components 1:6 ... 337

Explanations & Abbreviations

Groups

Group 26	= Cooling system
Group 27	= Engine controls
Group 28	= Ignition and control system
Group 32	= Alternator and voltage regulator
Group 33	= Starting system
Group 35	= Lighting
Group 36	= Additional electrical equipment
Group 37	= Wiring and fuses
Group 38	= Instruments
Group 39	= Other
Group 43	= Transmission
Group 55	= Parking brake
Group 59	= Brake system
Group 64	= Steering
Group 76	= Shock absorbers
Group 83	= Doors and openings
Group 84	= Exterior decorative elements, etc.
Group 85	= Interior equipment
Group 87	= Climate control system
Group 88	= Internal equipment
Group 89	= Body other

Designations ignition switch

X	= Accessories (audio position)
S	= Powered upon insertion of key
15	= The switch remains connected during start
15l	= Contact is broken while starting
30	= Constant power from the battery
50	= Start

Countries/Markets

A	= Austria
AUS	= Australia
B	= Belgium
CDN	= Canada
CH	= Switzerland
D	= Germany
DK	= Denmark
E	= Spain
EU/OS	= Markets outside USA and Canada
FIN	= Finland
GB	= Great Britain
ISR	= Israel
J	= Japan
KOR	= Korea
N	= Norway
NL	= Netherlands
S	= Sweden
USA	= United States of America
WEU	= Western Europe

Other

ACC	= Adaptive Cruise Control
Ag	= Silver plated
Au	= Gold plated
AUTO	= Automatic transmission
BLIS	= Blind Spot Information System
CAN	= CAN communication
DPY	= Display
ECC	= Electronic climate control system
ETA	= Throttle unit
EXC	= Exclusive
GDL	= Gas discharge lamp
HS	= High speed data bus
KEYLESS	= Keyless vehicle
IR	= Infrared sensor
LIN	= LIN communication
LH	= Left-hand side
LHD	= Left-hand drive
MAN	= Manual transmission
MEMORY	= Memory driver’s seat
MIRCAM	= Parking camera in rear-view mirror
MS	= Midspeed data bus
MMS	= Mass Movement Sensor
PANROOF	= Panoramic roof
PETROL	= Gasoline
RH	= Right-hand side
RHD	= Right-hand drive
RTI	= Road Traffic Information
SCR	= Screened
SRS	= Airbag
T	= Turbo engine
W/O	= Without
2WD	= Two-wheel drive
4CYL, I4	= 4-cylinder engine
5CYL, I5	= 5-cylinder engine
6CYL, I6	= 6-cylinder engine

Colors

BK, SB	= Black
BN	= Brown
BU, BL	= Blue
GN	= Green
GY, GR	= Gray
LGN	= Light Green
NL	= Natural
OG, OR	= Orange
PK, P	= Pink
RD, R	= Red
VT, VO	= Violet
WH, W	= White
YE, Y	= Yellow

How to use the wiring diagrams 1:2

The descriptions below apply in general to all wiring diagram manuals, although not all sections are necessarily contained in this manual.

The systems are shown in non-active status.i.e. with "key removed" and when the doors, hatches and hood are closed.

A. Component designation

Every component has a component designation that consists of two parts.

The first part is a type number that describes the type of component in question, for example 3/xx.

The second part of the designation is a serial number, for example x/2.

Combined these give a component designation, for example 3/2.

At the end of the manual is a list of components, where, with the help of the component designation, you can read off the name of the component, for example, 3/2 = light switch.

List of type numbers

The list shows which type of component that respective type numbers refer to, for example, 3/x = switch, 6/x = electric motor, etc.

1	Battery
2	Relay
3	Switch
4	Control module
5	Driver Information Module
6	Electric motor
7	Sensor
8	Actuator
9	Heating element
10	Light
11	Fuse
15	Electrical distribution rail/box
16	Audio
17	Service/diagnostics
18	Contact reel
19	Meter
20	Ignition component/shunt
27	Optics
31	Ground connection
73	Branching point
74	Connector

B. Branching points

The wiring diagrams contain numbered branching points, for example 73/5035.

This manual contains a section with a list of branching points. This list shows all the components which are connected to each branching point.

The location of the branching points is shown in the "Cable harness routing in vehicle" section.

C. Connectors

Connectors provide a bridge between two cable harnesses and are described in the "Connectors" section.

D. Electrical distribution

Operation of the fuses and relays is shown in the "Electrical distribution" section.

E. Data communication

Today’s cars contain CAN, LIN and MOST networks that transfer information. Connections to these networks are not shown in their entirety in the respective wiring diagram. Complete information on CAN, LIN and MOST communication is found in the section "Control modules".

F. Abbreviations

A number of different abbreviations are used in the manual. These are explained in the section "Abbreviations".

G. Component location

There is a section at the end of the manual in which the appearance and location of components is described in numerical order.

How to use the wiring diagrams 2:2

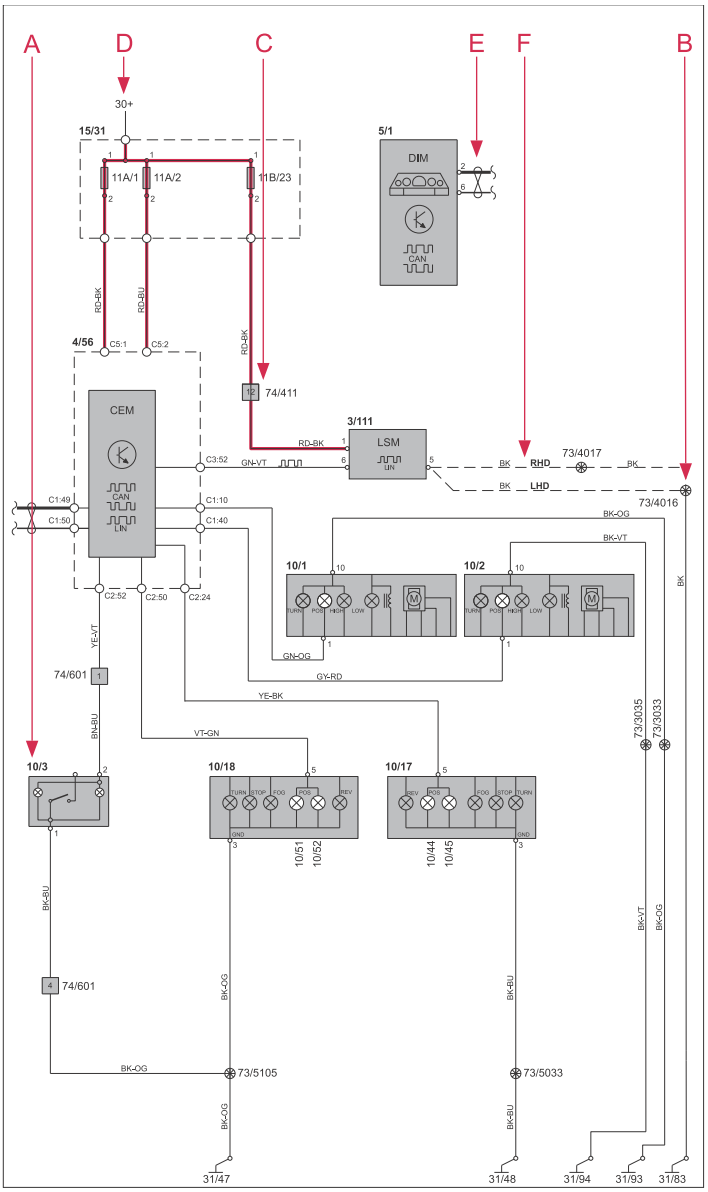

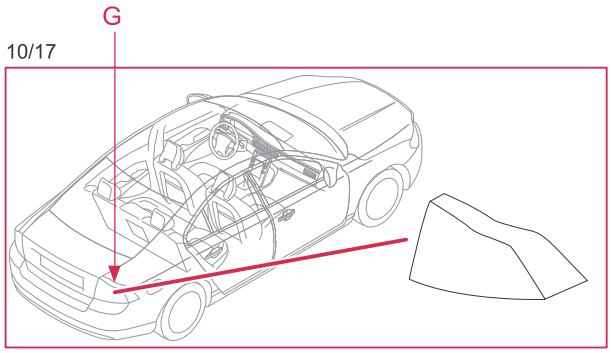

Explanation of symbols

= System voltage

= Ground connection via wiring

= Ground connection in component/chassis

= Screened wire

= Branching point

= Twisted cable

= Electrical connection

= Variant

= CAN communication

= CAN high data signal (CAN H)

= CAN low data signal (CAN L)

= LIN communication

= LIN communication

= DIN cable, coaxial cable, etc.

= Data communication

= CAN communication

= MOST communication

= MOST communication

= Connection with distribution box

= Further connection to...

= Connector between cable harnesses

= Connector connected in component

G029147

Electrical distribution
Overview without Start/stop function

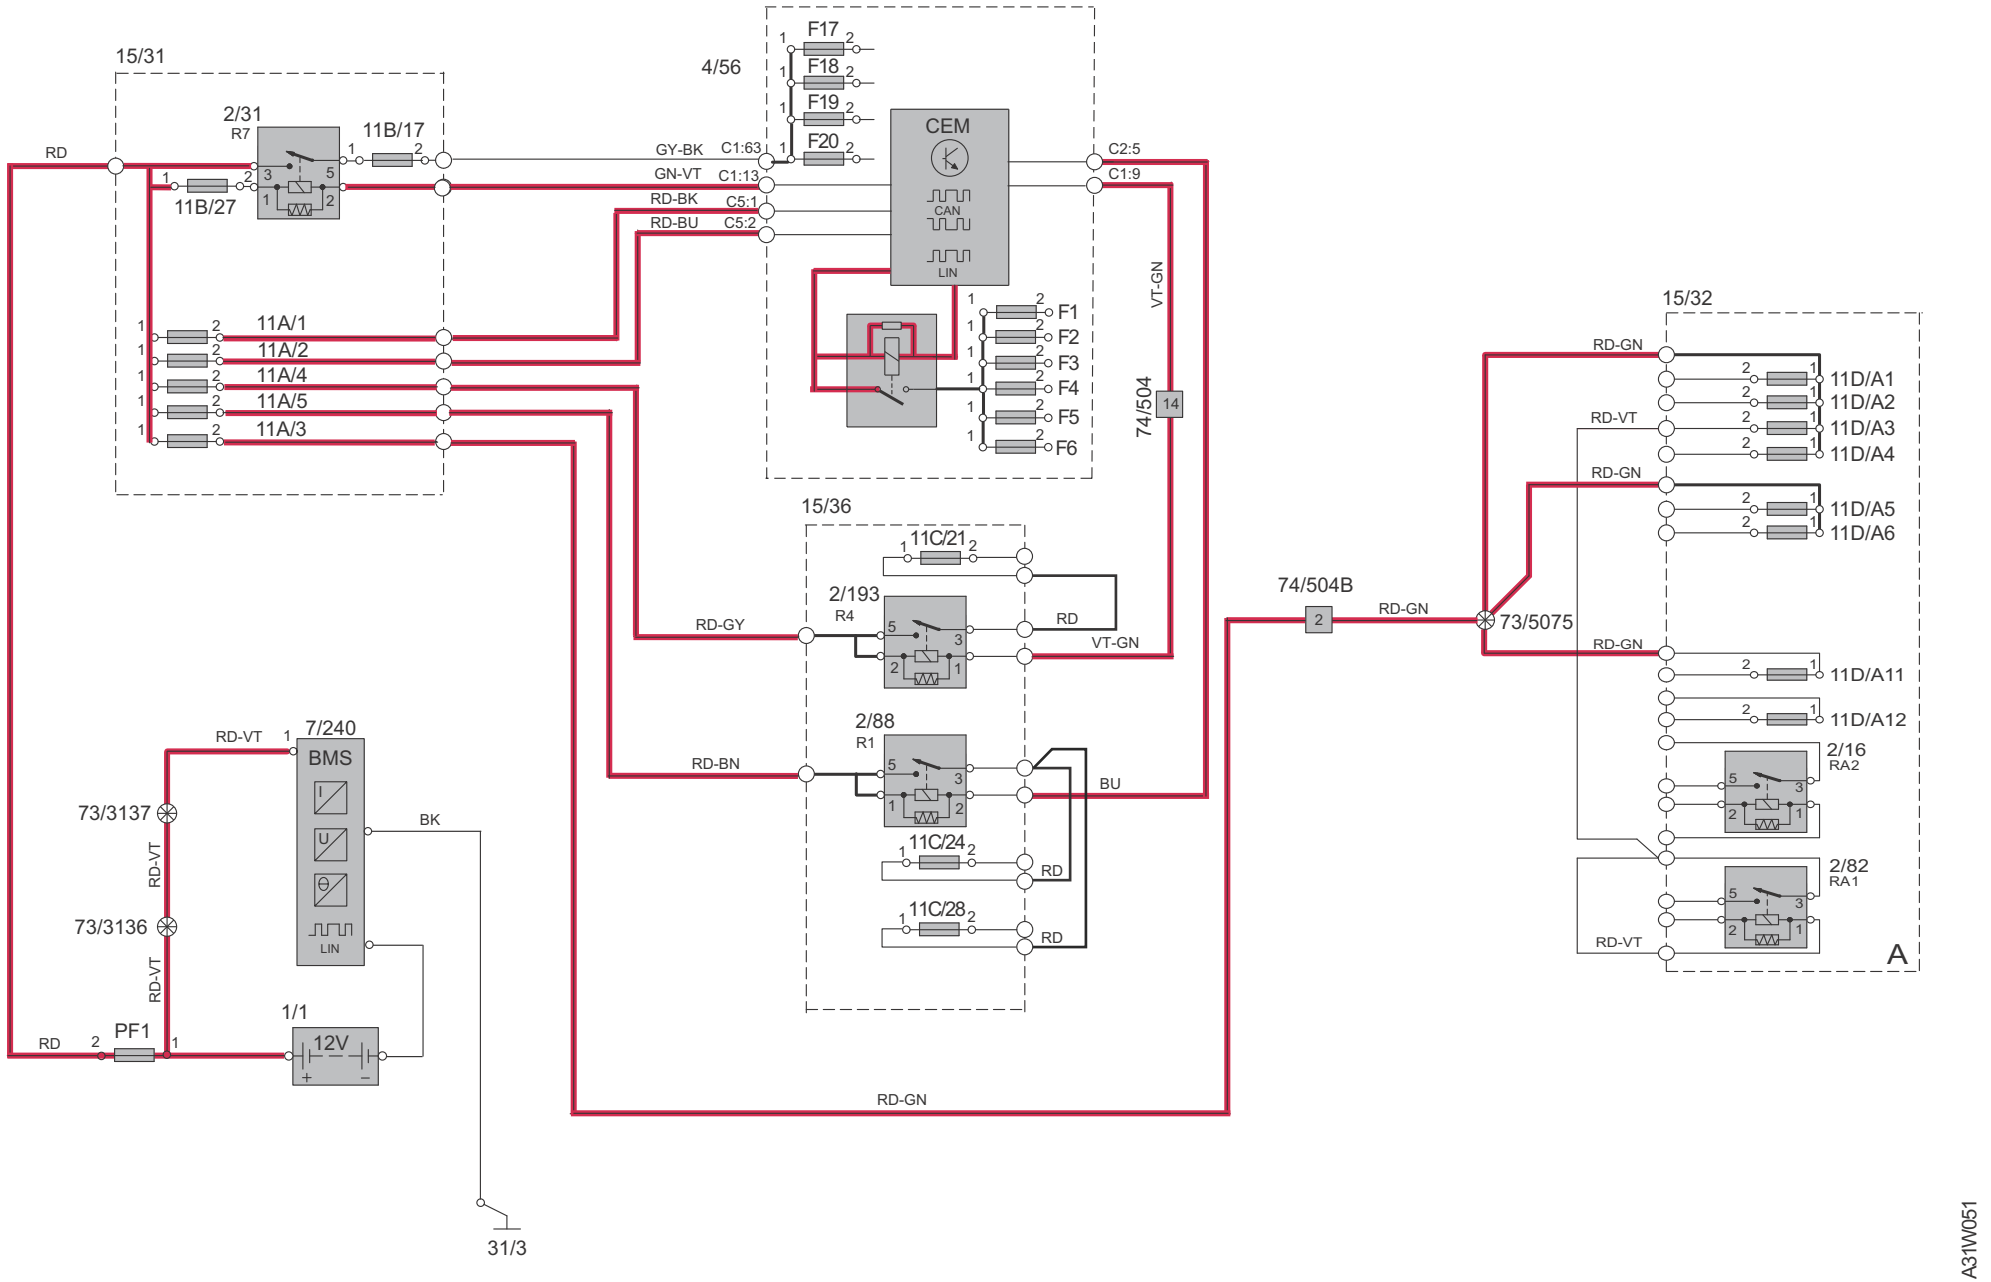

A31W051

Electrical distribution
Overview with Start/stop function

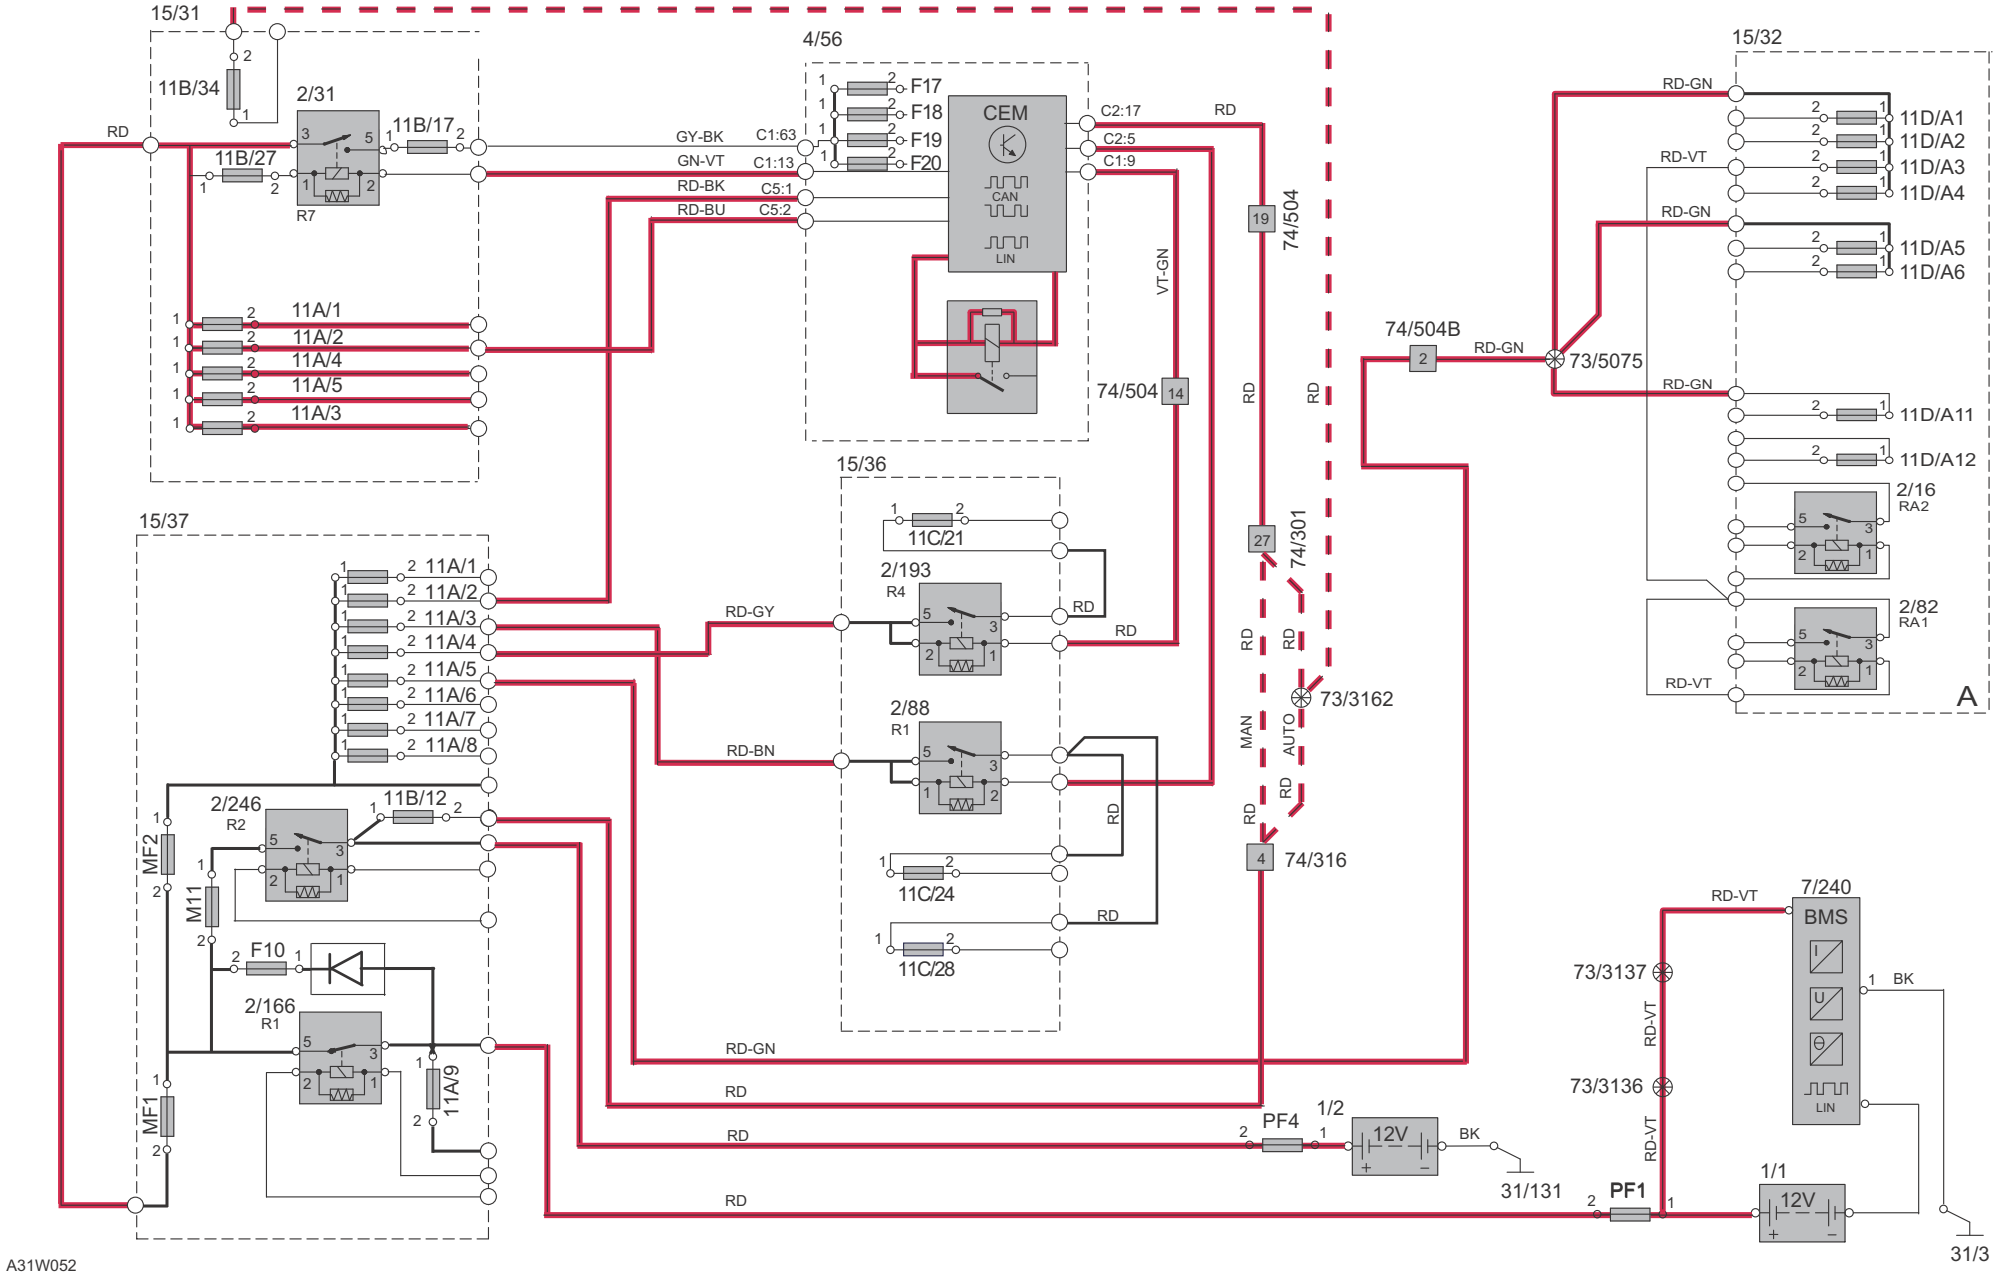

Electrical distribution 1:3
Overview, Distribution box in engine compartment

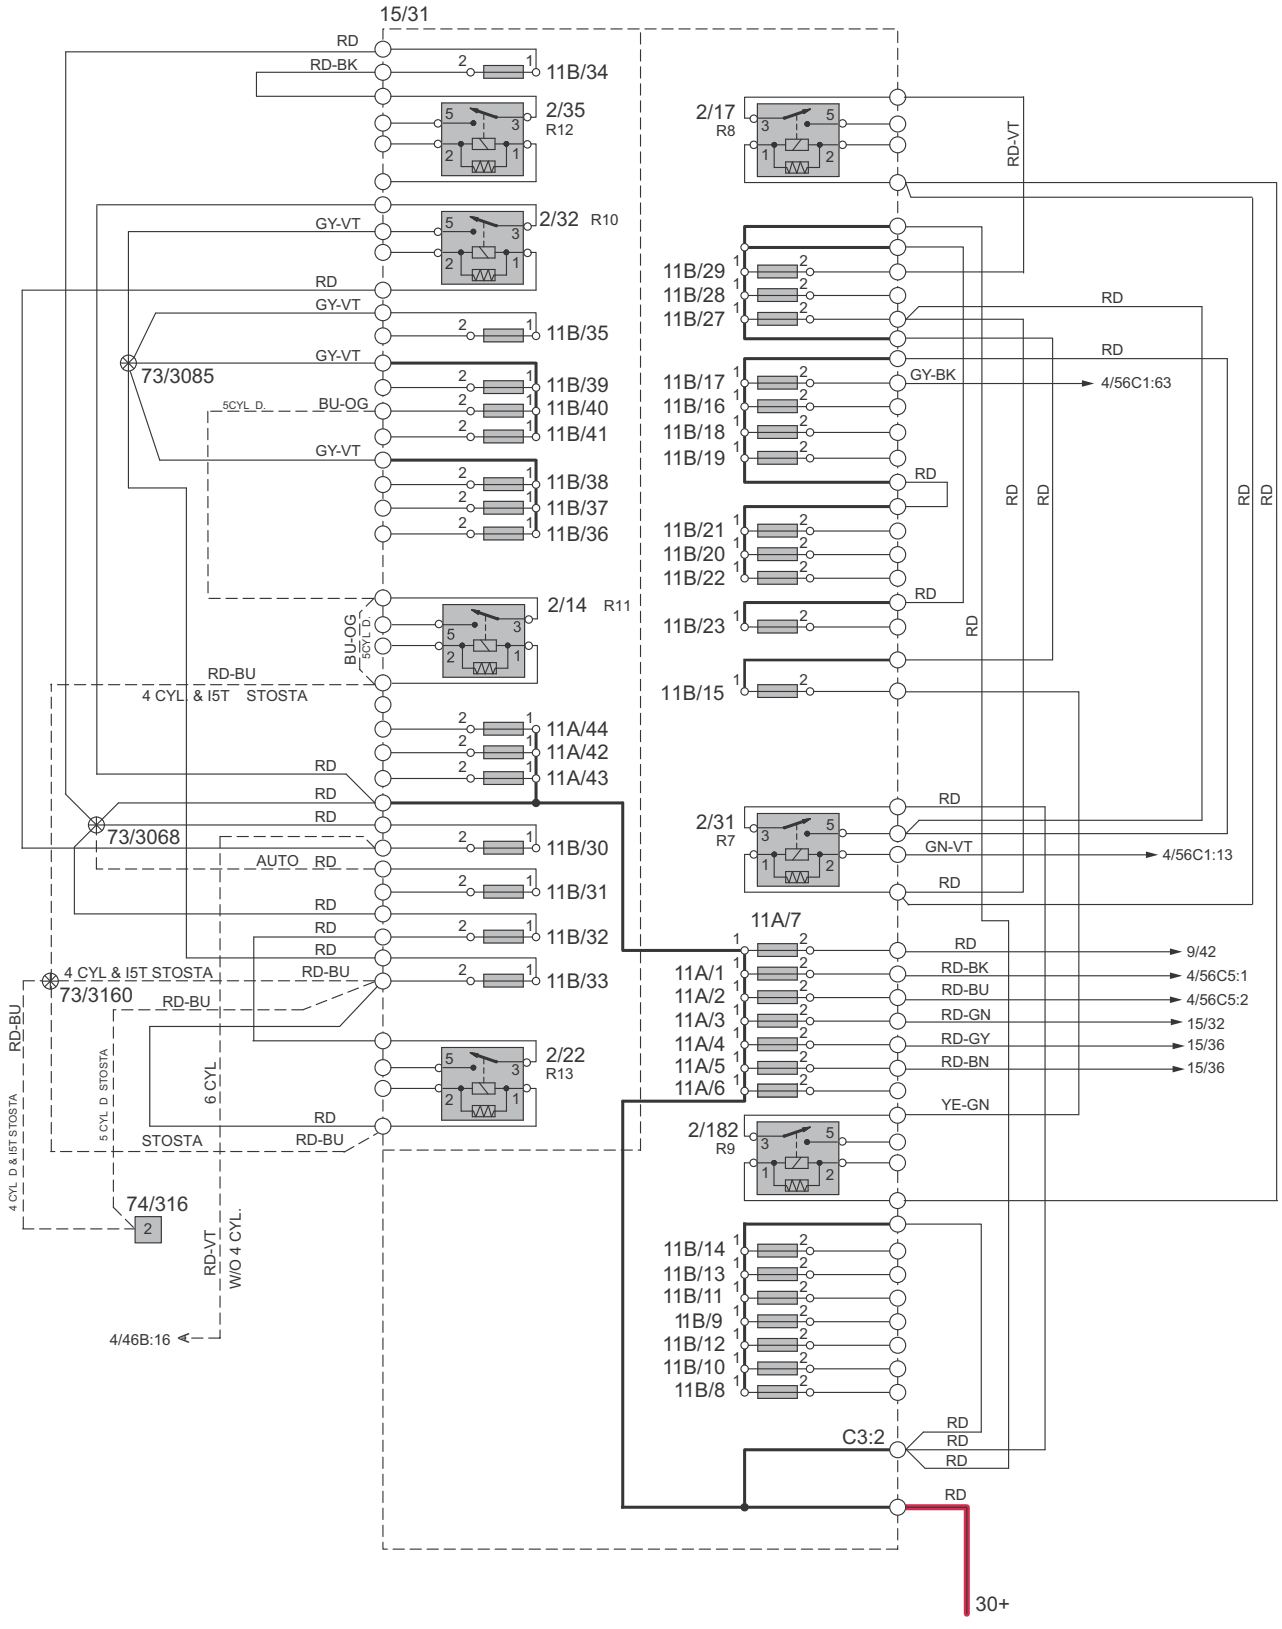

A31W053

Electrical distribution 2:3
Overview, Distribution box in passenger compartment

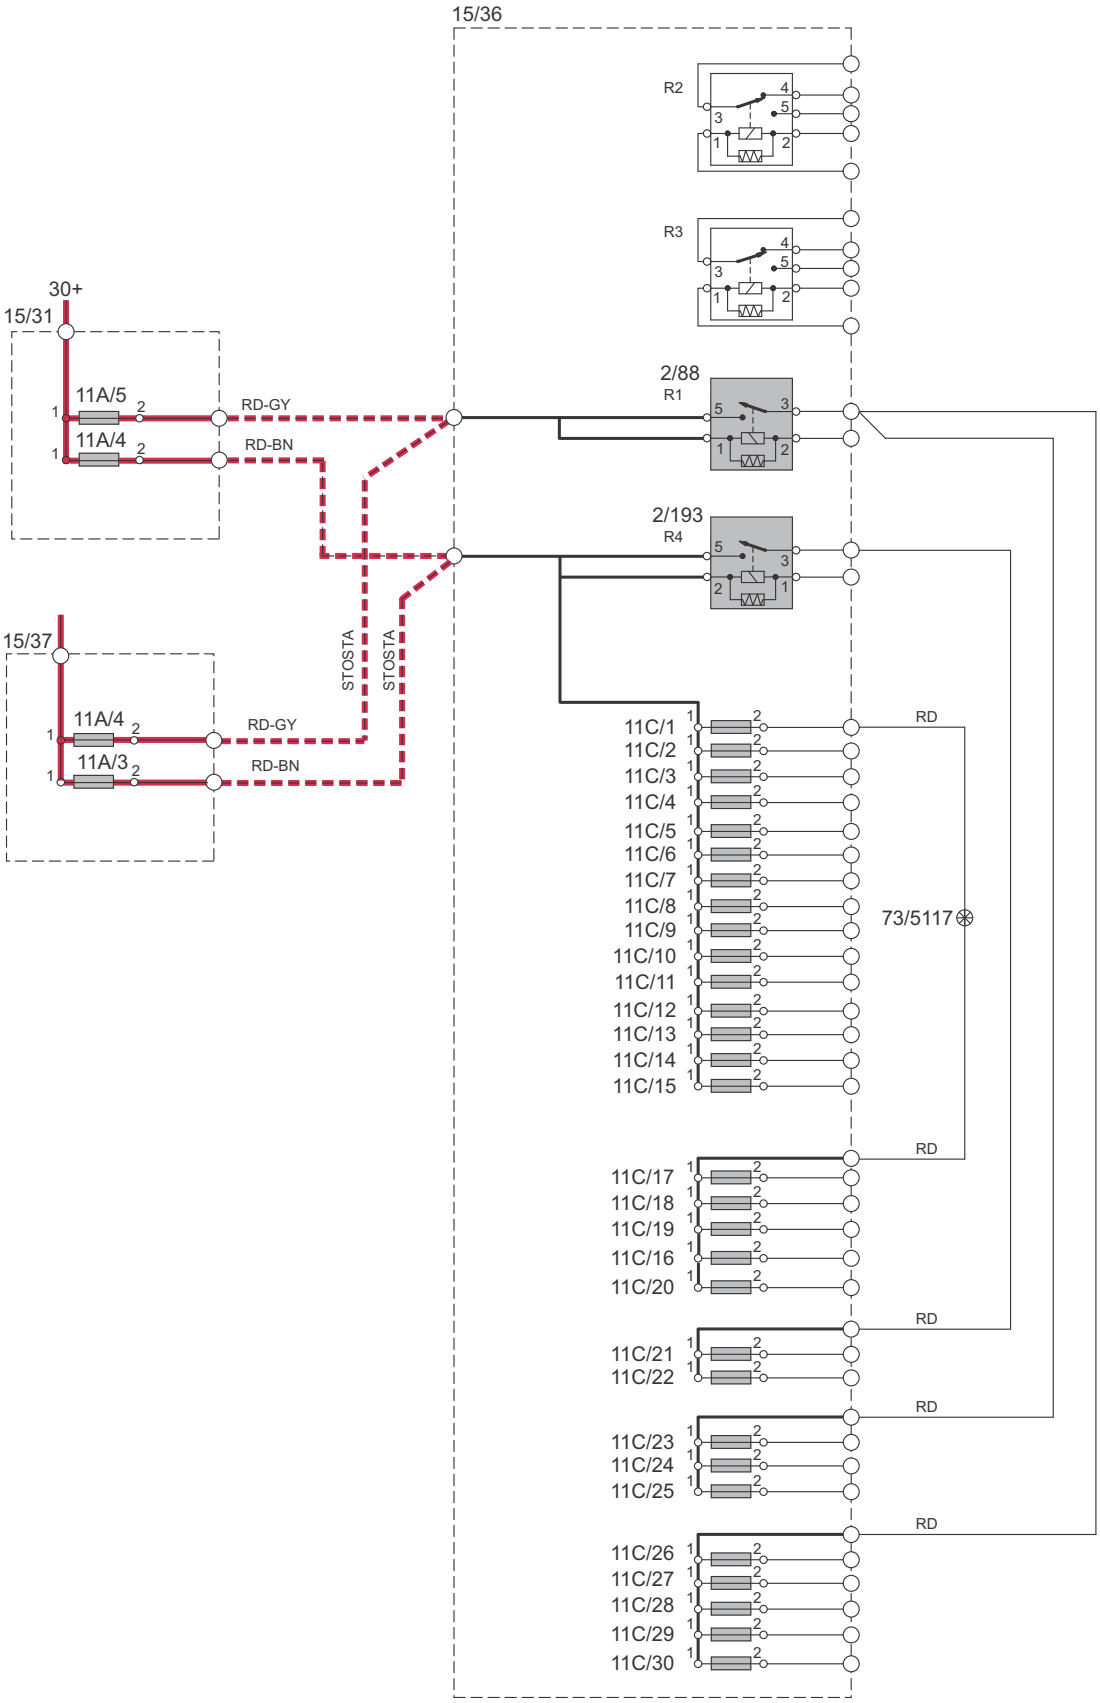

A31W054

Electrical distribution 3:3
Overview, Distribution box in cargo compartment

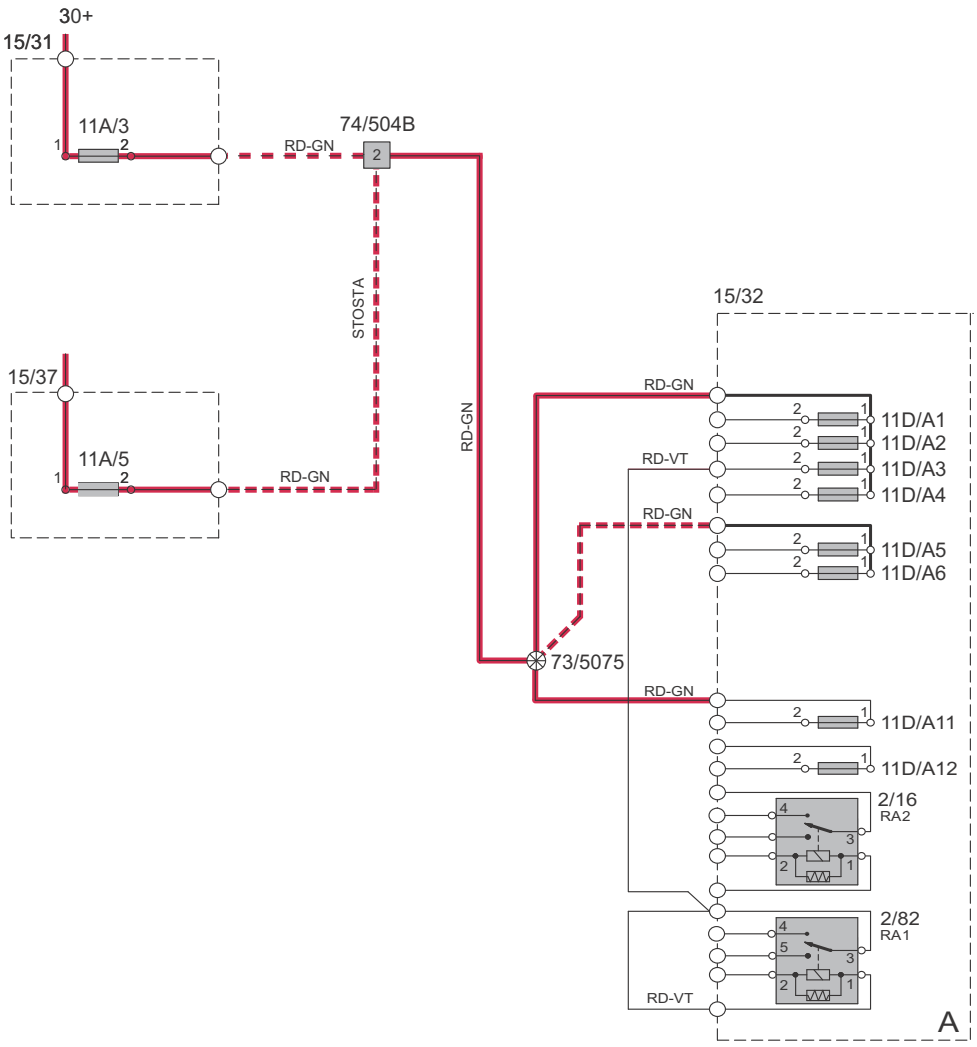

A31W055

Fuses
Distribution box in engine compartment F1 - F7

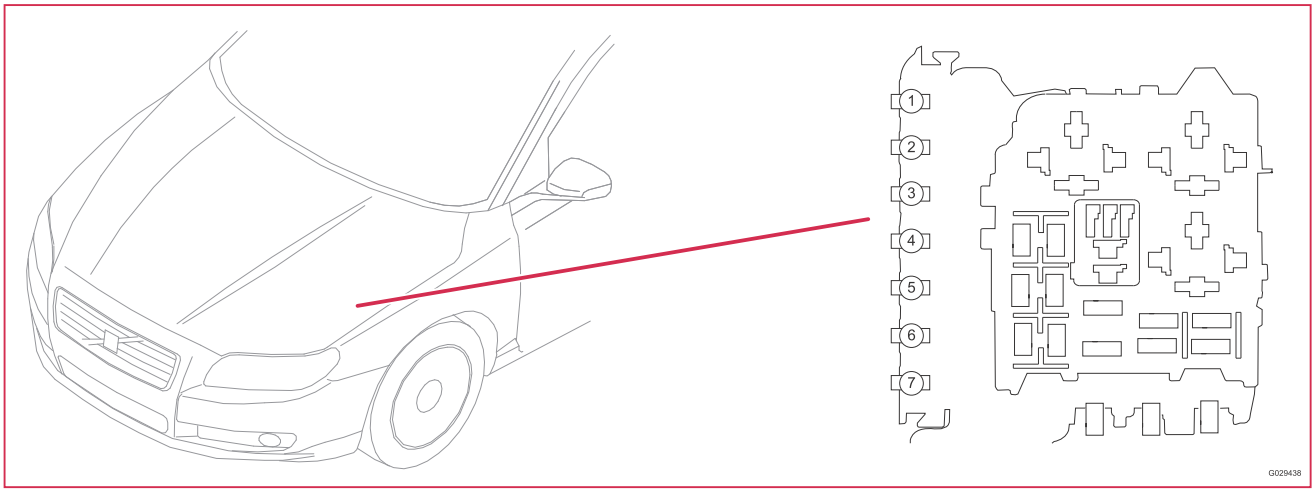

15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F1	11A/1	4/56	Central Electronic Module (CEM)	-	50
		F7	Fuse in the Central Electronic Module (CEM)	-	
		F9-F10	Fuses in the Central Electronic Module (CEM)	relay in CEM	
		F21	Fuse in the Central Electronic Module (CEM)	-	
		F23	Fuse in the Central Electronic Module (CEM)	-	
F2	11A/2	4/56	Central Electronic Module (CEM)	-	50
		F1	Fuse in the Central Electronic Module (CEM)	relay in CEM	
		F3-F6	Fuses in the Central Electronic Module (CEM)	relay in CEM	
		F8	Fuse in the Central Electronic Module (CEM)	relay in CEM	
		F11-F12	Fuse in the Central Electronic Module (CEM)	relay in CEM	
		F13-F16	Fuses in the Central Electronic Module (CEM)	-	
		F22	Fuse in the Central Electronic Module (CEM)	-	
		F24	Fuses in the Central Electronic Module (CEM)	-	
F3	11A/3	11D/A1-11D/A6	Fuses in distribution box cargo compartment	-	60
		11D/A11-11D/A12	Fuses in distribution box cargo compartment	-	
F4	11A/4	2/193	Relay, comfort functions	-	60
		11C/1-11C/15	Fuses in distribution box passenger compartment	-	
		11C/21-11C/22	Fuses in distribution box passenger compartment	2/193	
F5	11A/5	2/88	Relay, 15-feed	-	60
		4/56	Central Electronic Module (CEM)	2/88	
		11C/23-11C/25	Fuses in distribution box passenger compartment	2/88	
		11C/26-11C/30	Fuses in distribution box passenger compartment	-	
F7	11A/7	9/42	PTC element without start/stop	-	100

continues

Fuses
Distribution box in engine compartment F8 - F23

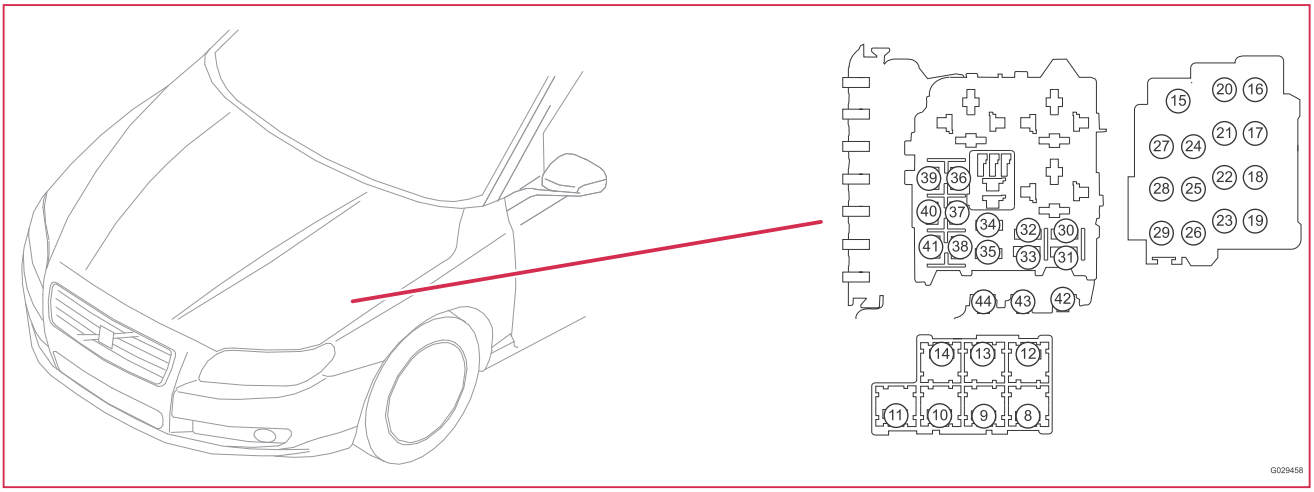

15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F8	11B/8	6/104 9/7	Washer motor headlights Heated windscreen	2/182 2/81B	40
F9	11B/9	6/1	Wiper motor module (WMM)	-	30
F10	11B/10	4/7 4/106 9/7 15/46	Combustion Preheater Module (CPM) Control module, remote parking heater start Heated windscreen Relay box in engine compartment	- - - -	25
F11	11B/11	4/31 6/28	Fan control module Motor, passenger compartment fan	- -	40
F12	11B/12	9/7 15/46	Heated windscreen Relay box in engine compartment	2/81A -	40
F13	11B/13	4/16	Brake Control Module (BCM), pump	-	40
F14	11B/14	4/16	Brake Control Module (BCM), valves	-	20
F16	11B/16	6/38 6/39 10/1 10/2	Left-hand headlight level adjustment motor Right-hand headlight level adjustment motor Left-hand front lamp housing Right-hand front lamp housing	- - - -	10
F17	11B/17	4/56 F17-F20	Central Electronic Module (CEM) Fuses in the Central Electronic Module (CEM)	- -	20
F18	11B/18	4/16	Brake Control Module (BCM)	-	5
F19	11B/19	4/99 6/164	Electronic power steering control module Electrical power steering module (EHPS)	- -	5
F20	11B/20	4/9 4/28 4/46	Supplemental Restraint System (SRS) Transmission Control Module (TCM) Engine Control Module (ECM)	- - -	10
F21	11B/21	9/58	Heated windshield washer nozzles	-	10
F23	11B/23	3/111	Light Switch Module (LSM)	-	5

continues

Fuses
Distribution box in engine compartment F27 - F36

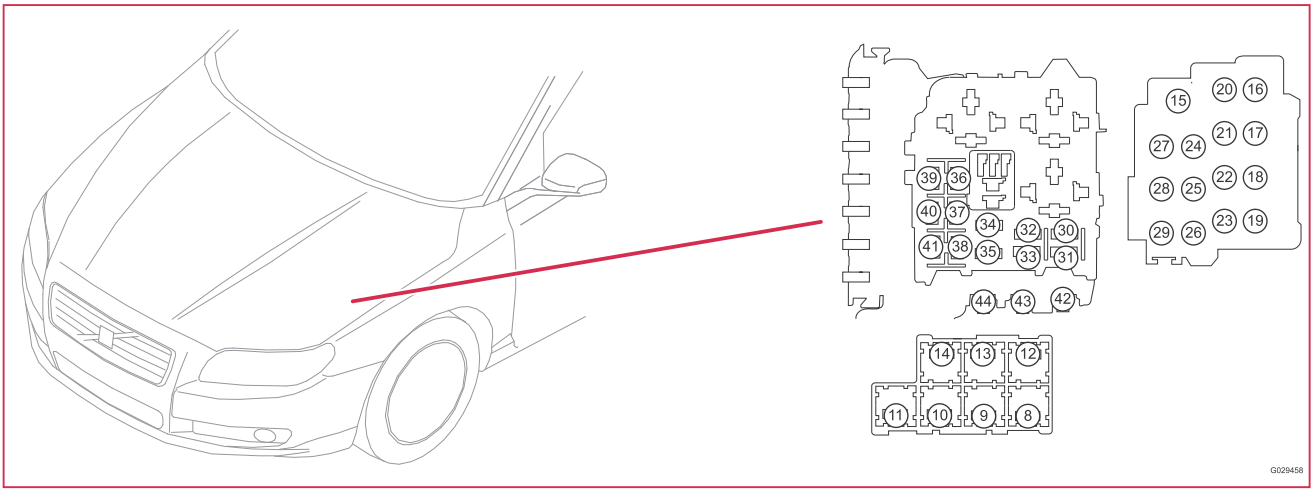

15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F27	11B/27	2/17 2/31 2/182 4/56 15/37	Relay, horn Relay, 15-feed Relay, headlight washer motor Central Electronic Module (CEM) Distribution box cold zone in engine compartment	- - - 2/31 -	5
F28	11B/28	2/64 10/65 10/69	Relay auxiliary lights Auxiliary light, front right Auxiliary light, front left	- 2/64 2/64	20
F29	11B/29	16/10 16/11	Horn 1 Horn 2	2/17 2/17	15
F30	11B/30	2/32 4/46	Main relay, engine management system Engine Control Module (ECM)	- 2/32	10
F31	11B/31	4/28	Transmission Control Module (TCM)	-	15
F32	11B/32	2/22 8/3	Relay, climate control system Electromagnetic clutch, climate control system	- 2/22	15
F33	11B/33	2/14 2/22	Relay, glow plug system Relay, climate control system	- -	5
F34	11B/34	6/25	Starter motor	2/35	30
F35	11B/35	4/109 20/3-6	Glow plug control module, 5-Cyl. Diesel Spark plug with ignition coil, 4-Cyl	- -	10
		20/3-7 20/3-8 20/16	Spark plug with ignition coil, 5-Cyl. Turbo Spark plug with ignition coil, 6-Cyl. Turbo Capacitor, 6-Cyl. Turbo	- - -	20
F36	11B/36	4/46	Engine Control Module (ECM), 4-Cyl. & 5-Cyl. Diesel	-	15
		4/46	Engine control module (ECM), 4-Cyl., 5-Cyl. & 6-Cyl. Turbo	-	10

continues

Fuses
Distribution box in engine compartment F37 - F38

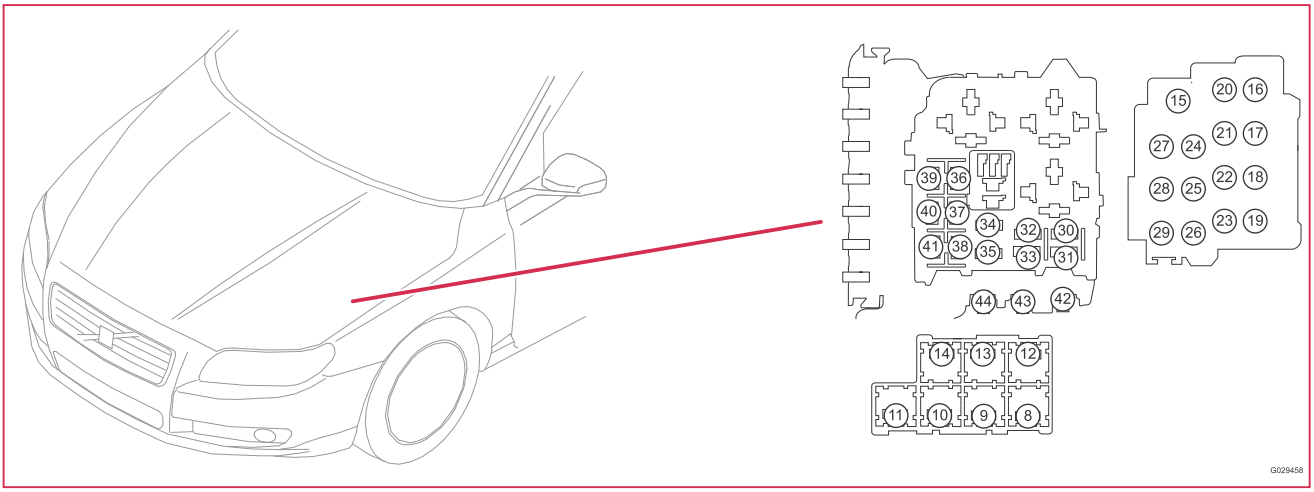

15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F37	11B/37	7/17	Mass air flow sensor MAF, 4-Cyl. 1.6l Turbo	-	10
		8/121	Bypass valve charge air cooler, 4-Cyl. 1.6l Turbo	-	
		8/167	Bypass Solenoid, 4-Cyl. 1.6l Turbo	-	
		7/17	Mass air flow sensor MAF, 4-Cyl. 1.6l Diesel	-	
		8/111	Control valve fuel flow, 4-Cyl. 1.6l Diesel	-	
		8/6-10	Injection valves, 5-Cyl. Turbo	-	15
		7/17	Mass air flow sensor MAF, 5-Cyl. Diesel	-	
		8/98	Control valve fuel pressure, 5-Cyl. Diesel	-	
		8/111	Control valve fuel flow, 5-Cyl. Diesel	-	
		4/46	Engine Control Module (ECM), 6-Cyl. Turbo	-	
		7/17	Mass air flow sensor MAF, 6-Cyl. Turbo	-	
		8/6-11	Injection valves, 6-Cyl. Turbo	-	
F38	11B/38	7/17	Mass air flow sensor MAF, 4-Cyl. Turbo	-	10
		8/18	EVAP valve, 4-Cyl. Turbo	-	
		8/19	Solenoid, variable valve timing, intake, 4-Cyl. Turbo	-	
		8/28	Turbocharger control valve, 4-Cyl. Turbo	-	
		8/81	Solenoid, variable valve timing, exhaust, 4-Cyl. Turbo	-	
		8/159	Bypass valve, 4-Cyl. Turbo	-	
		8/28	Turbocharger control valve, 4-Cyl. Diesel	-	
		8/113	Bypass valve, EGR cooling, 4-Cyl. Diesel	-	
		7/17	Mass air flow sensor MAF, 5-Cyl. Turbo	-	
		7/35	Oil level sensor, 5-Cyl. Turbo	-	
		8/28	Turbocharger control valve, 5-Cyl. Turbo	-	
		8/81	Solenoid, variable valve timing, exhaust, 5-Cyl. Turbo	-	
		8/117	Solenoid, variable valve timing, intake, 5-Cyl. Turbo	-	
		7/35	Oil level sensor, 5-Cyl. Diesel	-	
		8/3	Electromagnetic clutch, climate control system, 5-Cyl. Diesel	-	
		8/113	Bypass valve, EGR cooling, 5-Cyl. Diesel	-	
		8/164	Electric piston cooling valve, 5-Cyl. Diesel	-	
		4/46	Engine Control Module (ECM), 6-Cyl. Turbo	-	
		8/3	Electromagnetic clutch climate control system, 6-Cyl. Turbo	-	
		8/28	Turbocharger control valve, 6-Cyl. Turbo	-	
		8/68	Relief valve, 6-Cyl. Turbo	-	
		8/117	Solenoid, variable valve timing, intake, 6-Cyl. Turbo	-	

continues

Fuses
Distribution box in engine compartment F39 - F44

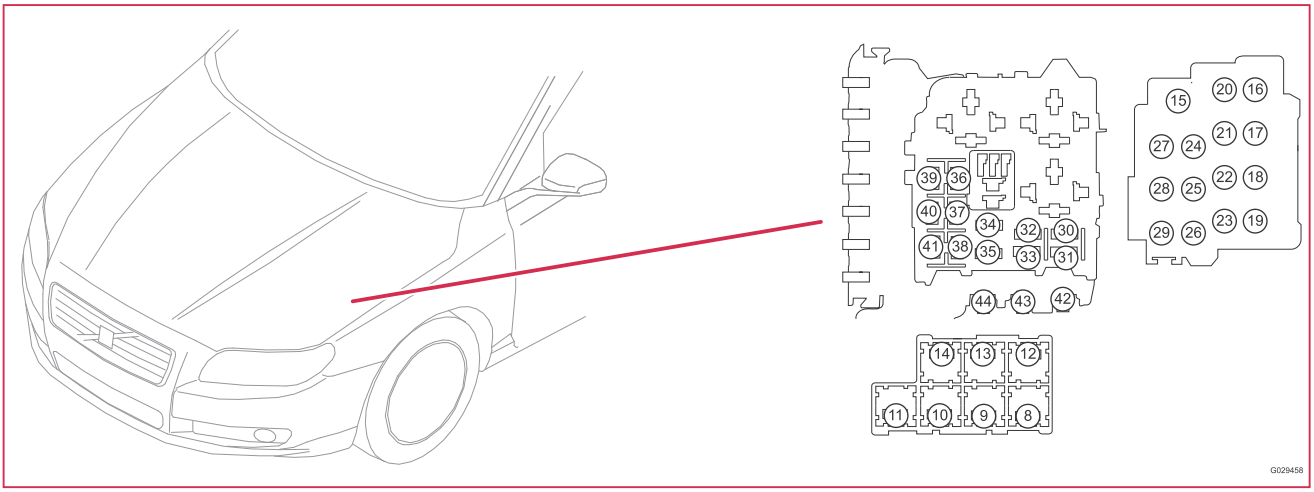

15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F39	11B/39	7/15 7/82	Front heated oxygen sensor, 4-Cyl. Turbo Rear heated oxygen sensor bank 1, 4-Cyl. Turbo	- -	10
		7/15 8/111	Front heated oxygen sensor, 4-Cyl. Diesel Control valve fuel flow, 4-Cyl. Diesel	- -	
		4/136 7/15	Radiator masking blind Front heated oxygen sensor, 5-Cyl. Diesel	- -	
		7/15 7/215 8/18	Front heated oxygen sensor, bank 1, 5-Cyl. Turbo Rear heated oxygen sensor, 5-Cyl. Turbo EVAP valve, 5-Cyl. Turbo	- - -	15
		7/15 7/82 8/18	Front heated oxygen sensor bank 1, 6-Cyl. Turbo Rear heated oxygen sensor bank 1, 6-Cyl. Turbo EVAP valve, 6-Cyl. Turbo	- - -	10
F40	11B/40	6/73	Coolant pump, 4-Cyl. Turbo, Start/Stop	2/14	10
		2/14 6/179 9/32 9/38	Relay, glow plug system Electric oil pump, 5-Cyl. & 6-Cyl. PTC resistor crankcase ventilation, 5-Cyl. Turbo Electrically heated fuel filter, 4-Cyl. Diesel	- - - -	20
F41	11B/41	6/67	Pump, fuel leakage control 6-Cyl.	-	5
		9/32 6/179	PTC resistor crankcase ventilation, 5-Cyl. Diesel Electric transmission oil pump, Diesel	- -	10
F42	11A/42	4/109	Glow plug control module	-	70
F43	11A/43	4/71	Control module cooling fan 4-Cyl. Turbo & 4-Cyl. Diesel	-	60
		4/71	Cooling fan control module, 5-Cyl. Diesel & 6-Cyl.	-	80
F44	11A/44	6/164	Electrical power steering module (EPS)	-	100

Fuses
Central Electronic Module (CEM) F1 - F8

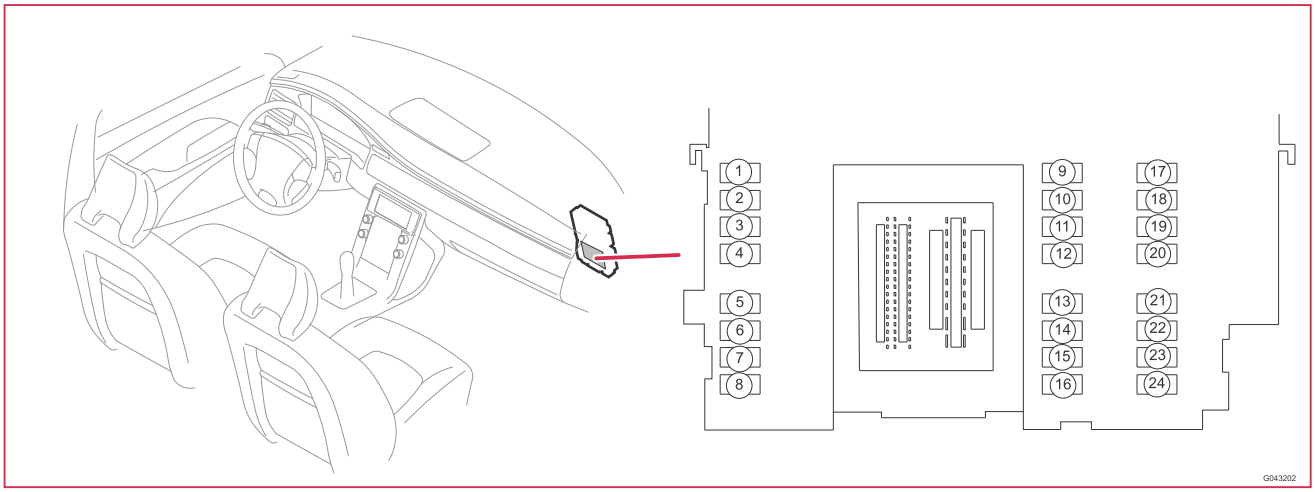

4/56 Central Electronic Module (CEM)

No.	Fuse function		via	A
F1	2/16	Relay, rear window wiper	-	15
	6/32	Rear window wiper motor	2/16	
F3	3/26	Switch unit, power driver's seat	-	7,5
	3/27	Switch unit, power passenger seat	-	
	3/176	Power window switches, driver's door	-	
	4/52	Power Seat Module (PSM)	-	
	10/29	Glove compartment lighting	-	
	10/97	Entrance lamp, driver's side	-	
	10/102	Entrance lamp, passenger side	-	
	10/127	Lighting, cargo compartment, left-hand side, S60	-	
	10/128	Lighting, cargo compartment, right-hand side, V60	-	
	10/137	Left-hand vanity mirror lighting, head restraint, V60	-	
	17/45	Alcohol lock outlet	-	
	26/8	Alcohol lock charging cradle	-	
F4	5/1	Driver Information Module (DIM)	-	5
F5	4/80	Forward Sensing Module (FSM)	-	10
	7/203	Forward-aimed radar (FLR)	-	
F6	4/76	Remote control opener garage door	-	7,5
	7/149	Rain Sensor Module (RSM)	-	
	10/22	Ceiling light	-	
	10/114	Left-hand vanity mirror lighting	-	
	10/115	Right-hand vanity mirror lighting	-	
	10/150A	Rear reading light	-	
F7	3/4	Steering wheel switch left (SWSL)	3/130	7,5
	3/131	Steering wheel switch right (SWSR)	3/130	
F8	6/37	Lock motor, fuel filler cover	relay in CEM	10

continues

Fuses
Central Electronic Module (CEM) F9 - F19

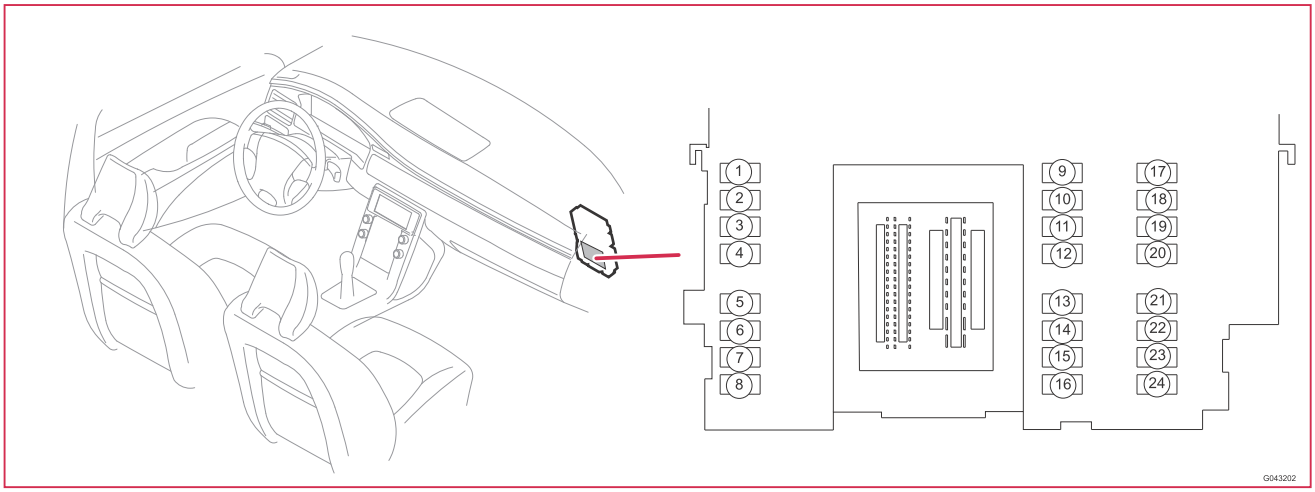

4/56 Central Electronic Module (CEM)

No.	Fuse function		via	A
F9	6/127	Washer motor	-	15
F10	6/127	Washer motor	-	15
F11	6/8	Central locking motor, trunk lid	-	10
F12	6/141 6/142 8/59 8/60	Motor folding head restraint left Motor folding head restraint right Rear left head restraint solenoid Rear right head restraint solenoid	- - - -	10
F13	4/83	Fuel pump control module	relay in CEM	20
F14	3/112 4/119 4/119.2	Climate Control Module (CCM) Remote Keyless Entry (RKE) Remote Receiver Module (RRX)	- - -	5
F15	4/102	Steering column lock module (SCL)	relay in CEM	15
F16	16/35 17/13	Siren Control Module (SCM) Data link connector	- -	5
F18	4/9 7/93	Supplemental Restraint System (SRS) Occupant Weight Sensor (OWS)	- -	10
F19	4/80 4/125 7/203	Forward Sensing Module (FSM) Closing velocity module (CVM) Forward-aimed radar (FLR)	- - -	5

continues

Fuses
Central Electronic Module (CEM) F20 - F24

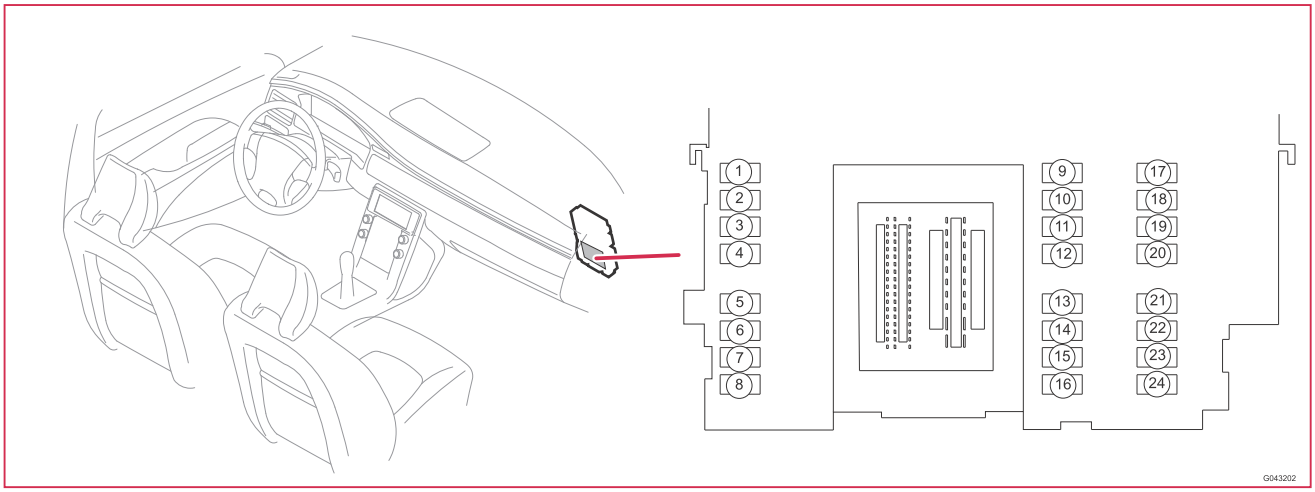

4/56 Central Electronic Module (CEM)

No.	Fuse function		via	A
F20	3/65	Switch, heated rear seat	-	7,5
	7/51	Accelerator pedal sensor	-	
	8/48	Auto-dimming rearview mirror	-	
	9/42	PTC-element	-	
F22	3/9	Brake light contact	-	5
F23	4/33	Sunroof Module (SRM)	-	20
F24	3/1	Ignition switch	-	5
	16/65	Immobilizer antenna unit (IAU)	-	

Fuses
Distribution box in passenger compartment F1 - F17

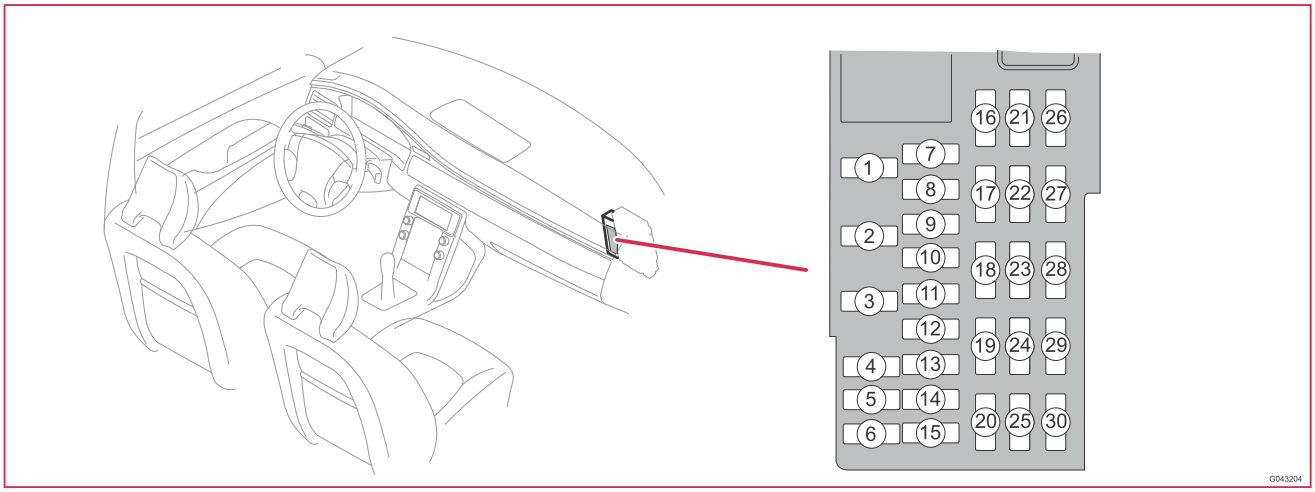

15/36 Distribution box in passenger compartment

No.	No.	Fuse function		via	A
F1	11C/1	16/105 11C/16-11C/20	Audio module (AUD) Distribution box in passenger compartment	- -	40
F2	11C/2	Spare		-	-
F3	11C/3	Spare		-	-
F4	11C/4	Spare		-	-
F6	11C/6	3/273 3/274 3/275 3/276	Lock contact, LH front door Lock contact, RH front door Lock contact, left rear door Lock contact, RH rear door	- - - -	5
F8	11C/8	3/126	Driver door module (DDM)	-	20
F9	11C/9	3/127	Passenger door module (PDM)	-	20
F10	11C/10	3/129	Right rear door module (RDM)	-	20
F11	11C/11	3/128	Left rear door module (LDM)	-	20
F12	11C/12	4/93	Keyless vehicle module (KVM)	-	7,5
F13	11C/13	3/26 4/52	Switch unit, power driver’s seat Power Seat Module (PSM)	- -	20
F14	11C/14	3/27	Switch unit, power passenger seat	-	20
F16	11C/16	3/281	Infotainment control module (ICM)	-	5
F15	11C/15	Spare		-	-
F17	11C/17	16/36 16/105 16/145 16/162	Television module (TVM) Audio module (AUD) Remote Digital Audio Receiver (RDAR) Digital Audio Broadcast Module (DABM)	- - - -	10

continues

Fuses
Distribution box in passenger compartment F18 - F30

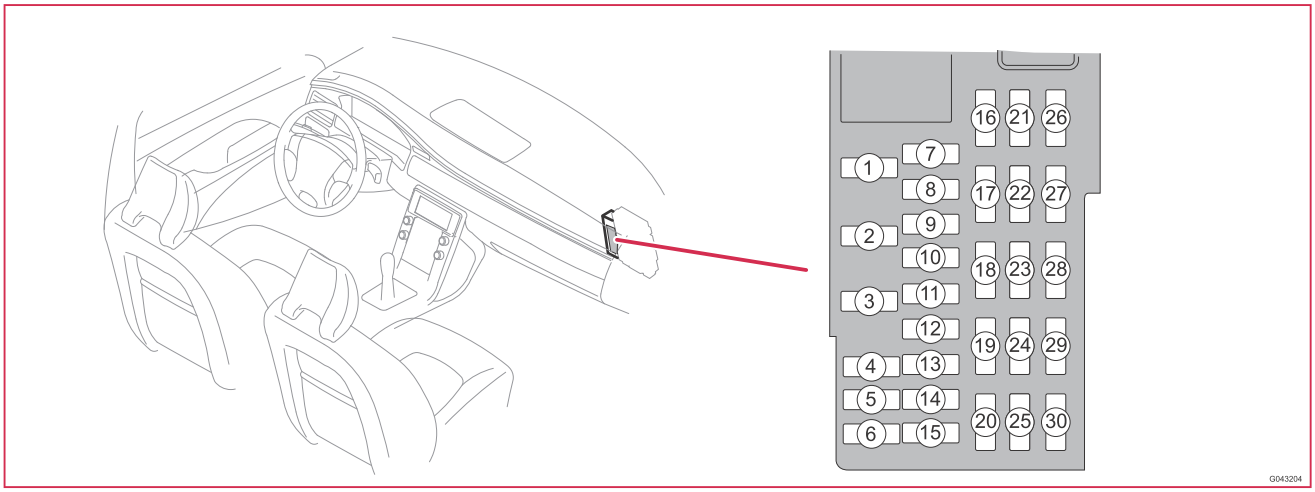

15/36 Distribution box in passenger compartment

No.	No.	Fuse function		via	A
F18	11C/18	16/1 16/159	Integrated Audio Module (IAM) Control module, cellular phone handsfree (accessory)	- -	15
F19	11C/19	16/60	Phone Module (PHM)	-	5
F20	11C/20	-		-	7,5
F21	11C/21	4/33 6/48 6/95 6/96 6/102 6/103 7/159 10/22 16/159	Panoramic roof control module Damper Motor Module (DMM), recirculation Damper Motor Module (DMM), temperature, left side Damper Motor Module (DMM), temperature, right side Damper Motor Module (DMM), defroster Damper Motor Module (DMM), floor/ventilation Air Quality Sensor (AQS) Ceiling light Control module, mobile phone handsfree	- - - - - - - 4/56 -	5
F22	11C/22	9/1 9/25 27/8	Outlet 12V front Outlet 12V rear Camera, wide angle front	- - -	15
F23	11C/23	9/15	Control module, rear right seat heater	-	15
F24	11C/24	9/14	Control module, rear left seat heater	-	15
F26	11C/26	9/13	Seat Heating Module (SHM), passenger side	-	15
F27	11C/27	9/12	Seat Heating Module (SHM), driver’s side	-	15
F28	11C/28	4/86 4/120	Parking Assistance Module (PAM) Parking Assistance Camera (PAC)	- -	5
F29	11C/29	4/82	Differential Electronic Module (DEM)	-	15
F30	11C/30	4/84	Suspension Module (SUM)	-	10

Fuses
Distribution box in engine compartment, cold zone

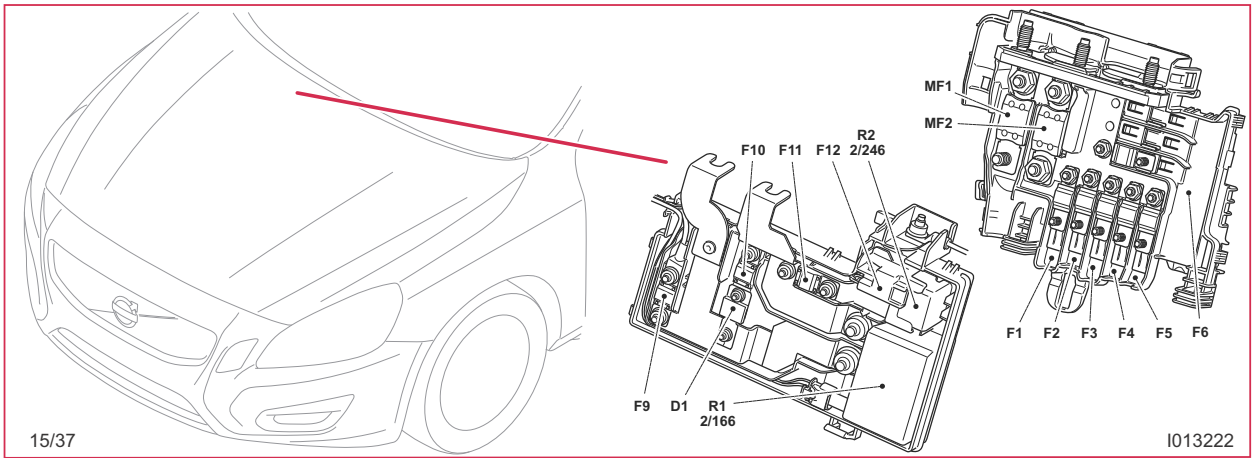

15/37 Distribution box in cold zone engine compartment, Start/Stop function

No.	No.	Fuse function		via	A
F1	11A/1	-		-	100
F2	11A/2	4/56C5:1	Central Electronic Module (CEM)	-	50
F3	11A/3	2/88 11C/1-11C/15	Relay, 15-feed rear Fuses in distribution box passenger compartment	- 2/88	60
F4	11A/4	2/193 11C/23-11C/25 11C/26-11C/30	Relay, comfort functions Fuses in distribution box passenger compartment Fuses in distribution box passenger compartment	- - -	60
F5	11A/5	15/32	Distribution box in cargo compartment	-	60
F6	11A/6	Spare		-	-
F7	11A/7	9/42	PTC-element	-	-
F8	11A/8	Spare		-	-
F9	11A/9	6/25	Starter motor	2/35	30
F10	11A/10	Spare		-	-
F11	M11	Secondary battery		2/246	70
F12	11B/12	4/56	Central Electronic Module (CEM)	-	15
MF1	MF1	2/31 11A/1-11A/8 11A/44 11B/27	Relay, 15-feed Main fuses in engine compartment fuse box (15/31) Fuse in distribution box in engine compartment Fuse in distribution box in engine compartment	- - - -	175
MF2	MF2	11A/1-11A/8	Fuses in fuse box cold zone engine compartment (15/37)	-	175

Fuses
Distribution box in cargo compartment FA1 - FA11

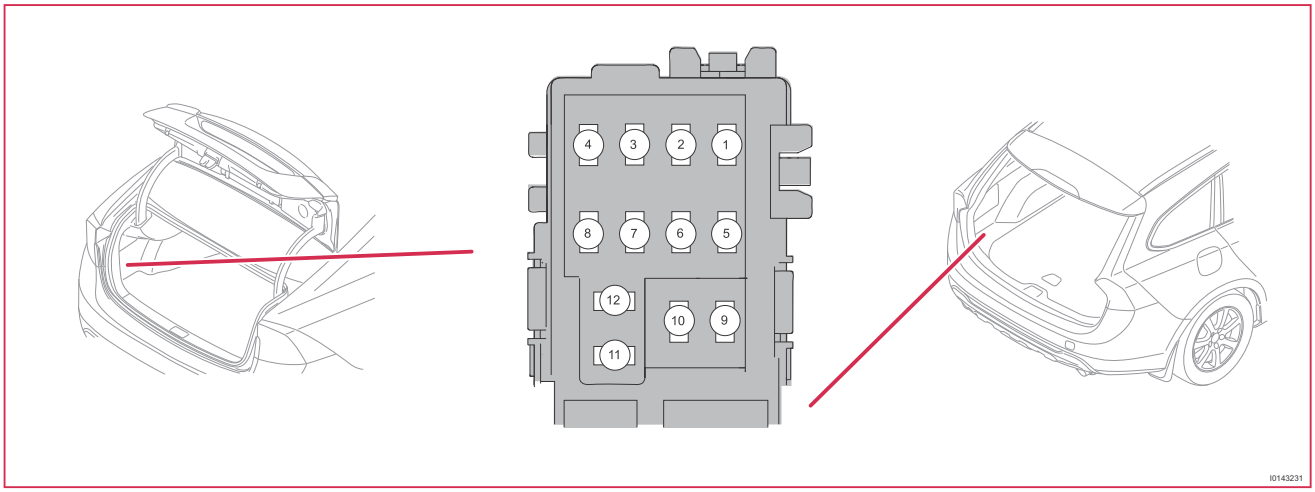

15/32 Distribution box in cargo compartment

No.	No.	Fuse function		via	A
FA1	11D/A1	4/115	Park Brake Module (PBM)	-	30
FA2	11D/A2	4/115	Park Brake Module (PBM)	-	30
FA3	11D/A3	2/82 9/2	Relay, heated rear window Heated rear window	- 2/82	30
FA4	11D/A4	17/39	13-pin outlet, cable harness towbar/tow hitch	-	15
FA5	-	-		-	-
FA6	11D/A6	17/19	12 V outlet, cargo compartment	-	15
FA11	11D/A11	4/110	Trailer Module (TRM)	-	40

Fuses
Battery PF1 - PF2

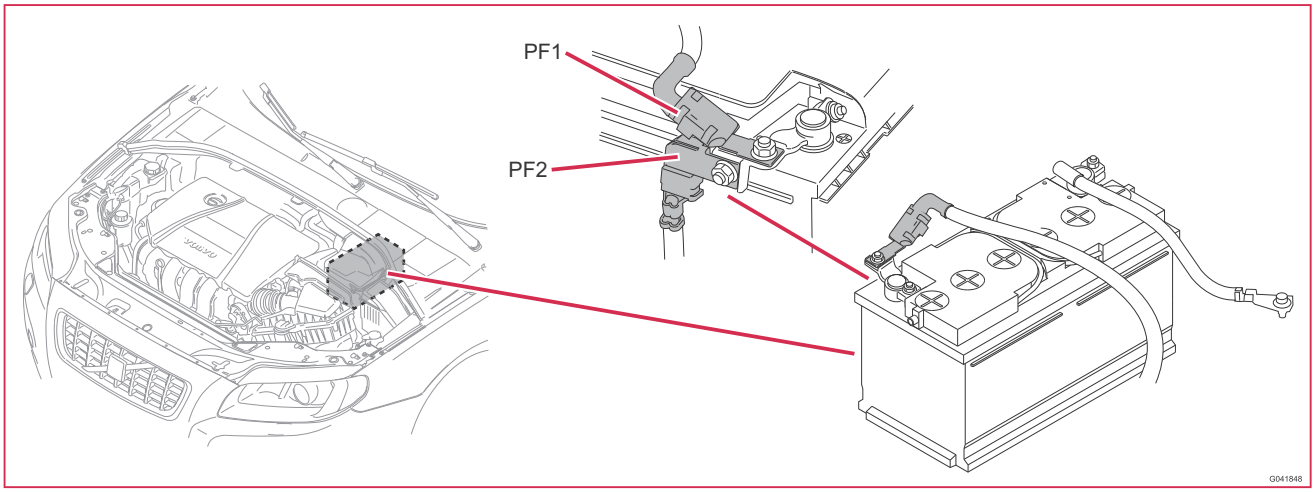

1/1 Battery

No.	Fuse function		via	A
PF1	11A/1-11A/7	Main fuses in distribution box engine compartment	-	150
	11A/42-11A/44	Main fuses in distribution box engine compartment	-	
	11B/8-11B/14	Fuses in the engine compartment distribution box	-	
	11B/16-11B/22	Fuses in the engine compartment distribution box	2/31	
	11B/23	Fuses in the engine compartment distribution box	-	
	11B/27-11B/32	Fuses in the engine compartment distribution box	-	
	11B/33	Fuses in the engine compartment distribution box	2/32	
	11B/34	Fuses in the engine compartment distribution box	-	
	11B/35-11B/41	Fuses in the engine compartment distribution box	2/32	
	15/37	Distribution box cold zone in engine compartment	-	
PF2	6/25	Starter motor	-	150
	6/26	Alternator Control Module (ACM)	-	

Relays
Relays in the engine compartment

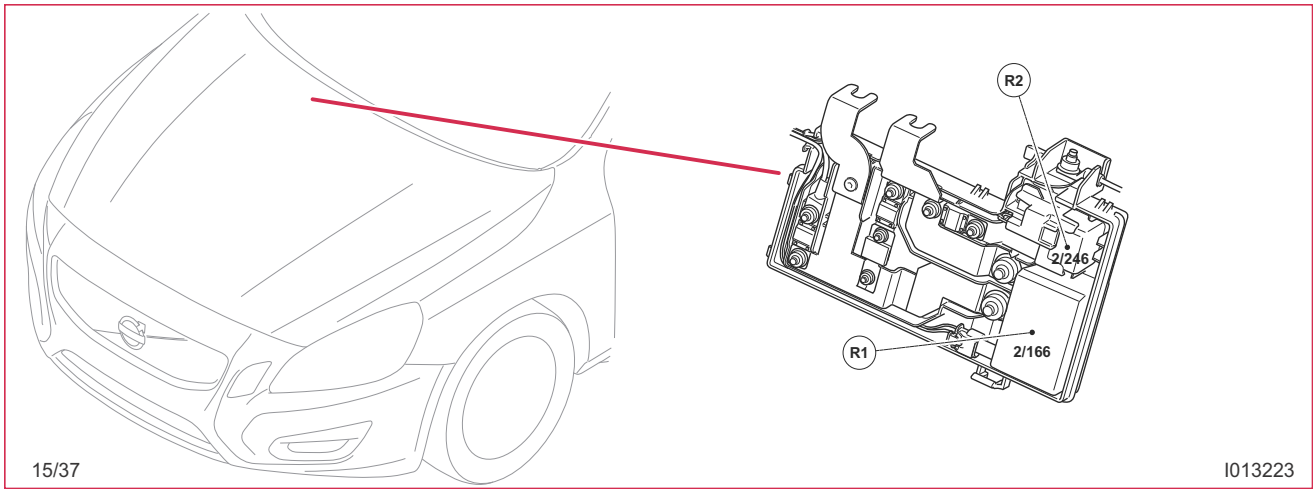

15/37 Distribution box in cold zone engine compartment

Pos	Relay function	
R1	2/166	Battery relay
R2	2/246	Secondary battery relay

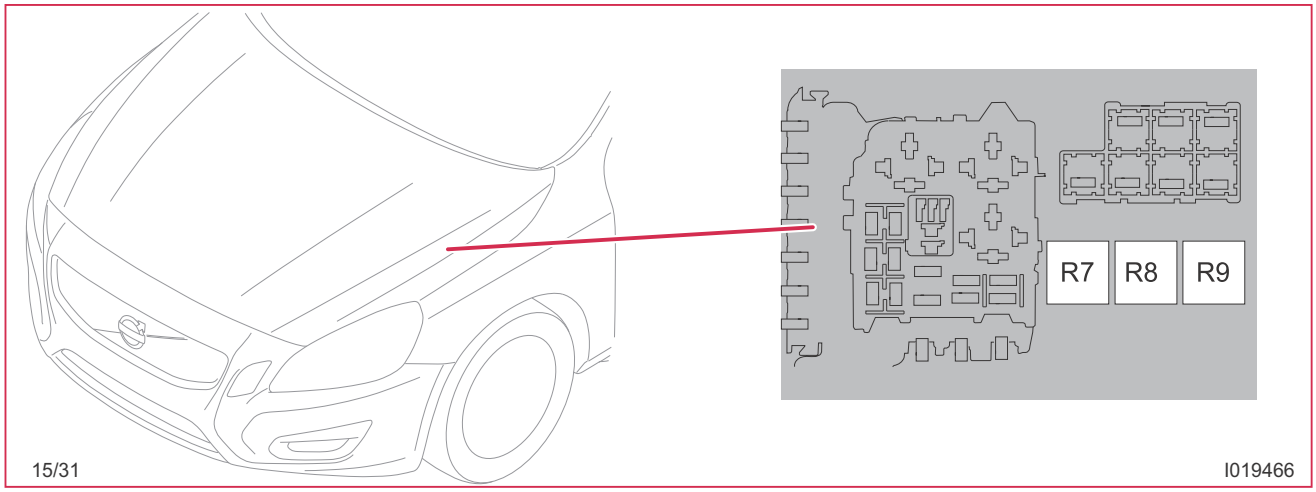

15/31 Distribution box in engine compartment

Pos	Relay function	
R7	2/31	Relay, 15-feed
R8	2/17	Relay, horn
R9	2/182	Relay, headlight washer motor

Relays
Relays in the engine compartment

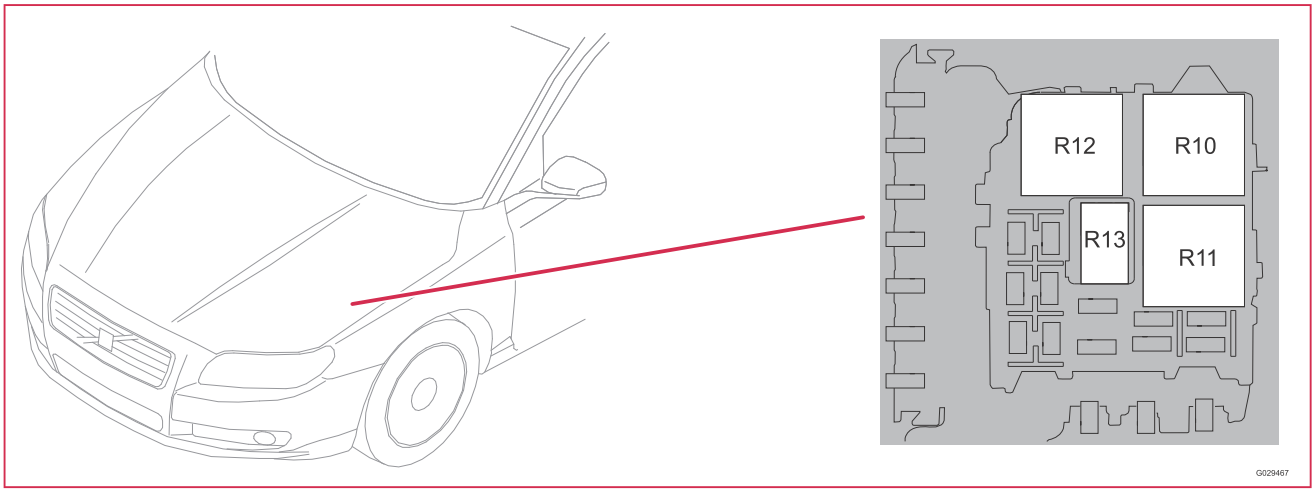

15/31 Distribution box in engine compartment

Pos	Relay function	
R10	2/32	Main relay, engine management system
R11	2/14	Relay, diesel filter heater, Diesel
	2/14	Relay, coolant pump, 4-Cyl. Turbo & 5-Cyl. Turbo
R12	2/35	Starter motor relay
R13	2/22	Relay, climate control system

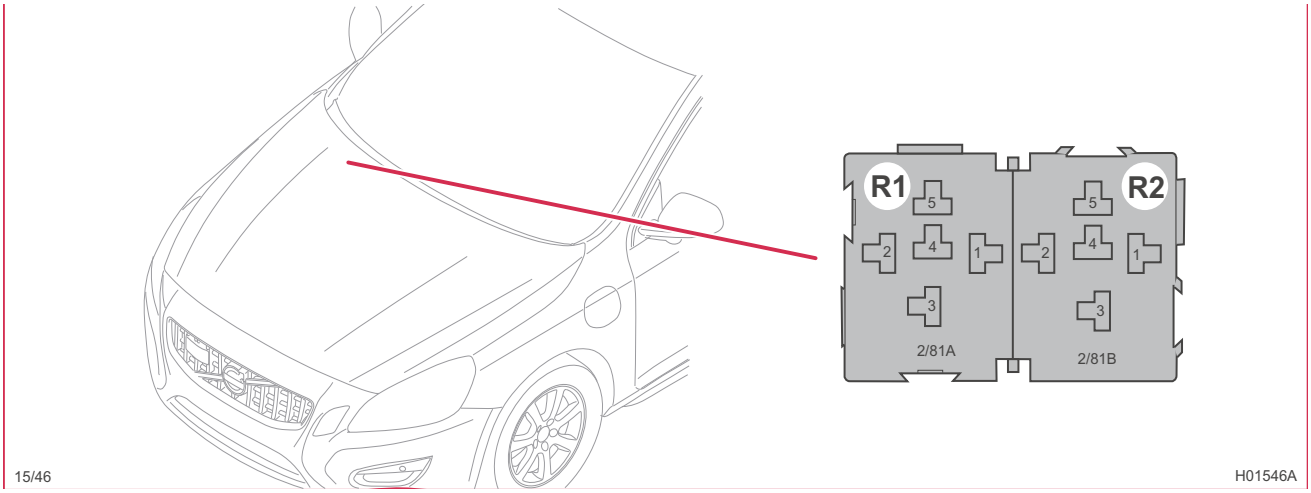

15/46 Relay box in engine compartment

Pos	Relay function	
R1	2/81A	Relay, heated windscreen, passenger side
R2	2/81B	Relay, heated windscreen, driver's side

Relays
Relays in passenger and cargo compartments

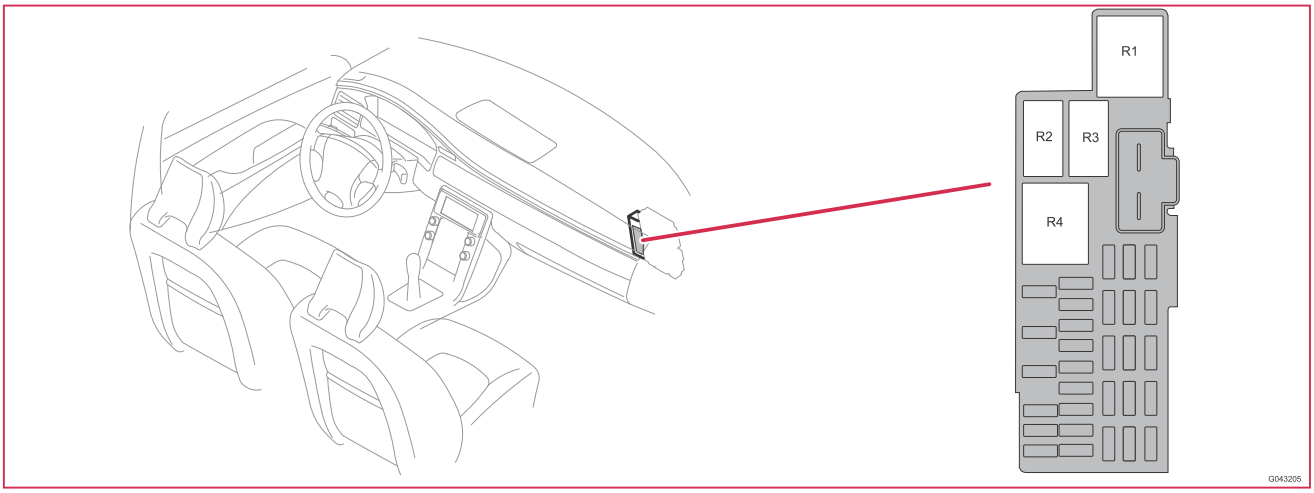

15/36 Distribution box in passenger compartment

Pos	Relay function	
R1	2/88	Relay, 15-feed
R2	2/92	Relay, washer motor windshield
R3	2/93	Relay, washer motor rear window, V60
R4	2/193	Relay, comfort functions

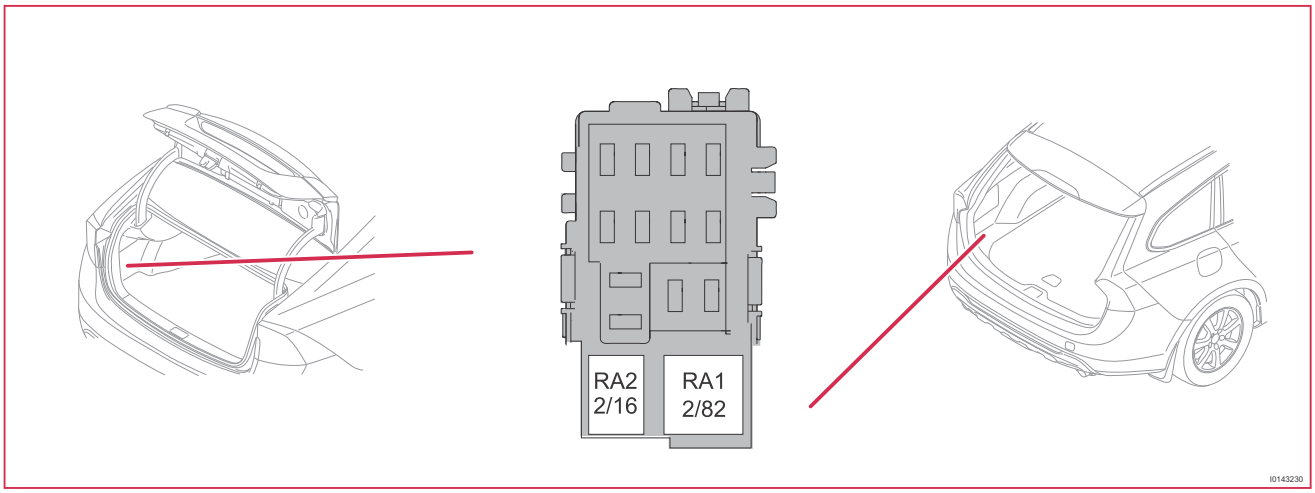

15/32 Distribution box in cargo compartment

Pos	Relay function	
RA1	2/82	Relay, heated rear window
RA2	2/16	Relay, rear window wiper

Ground connections
Overview

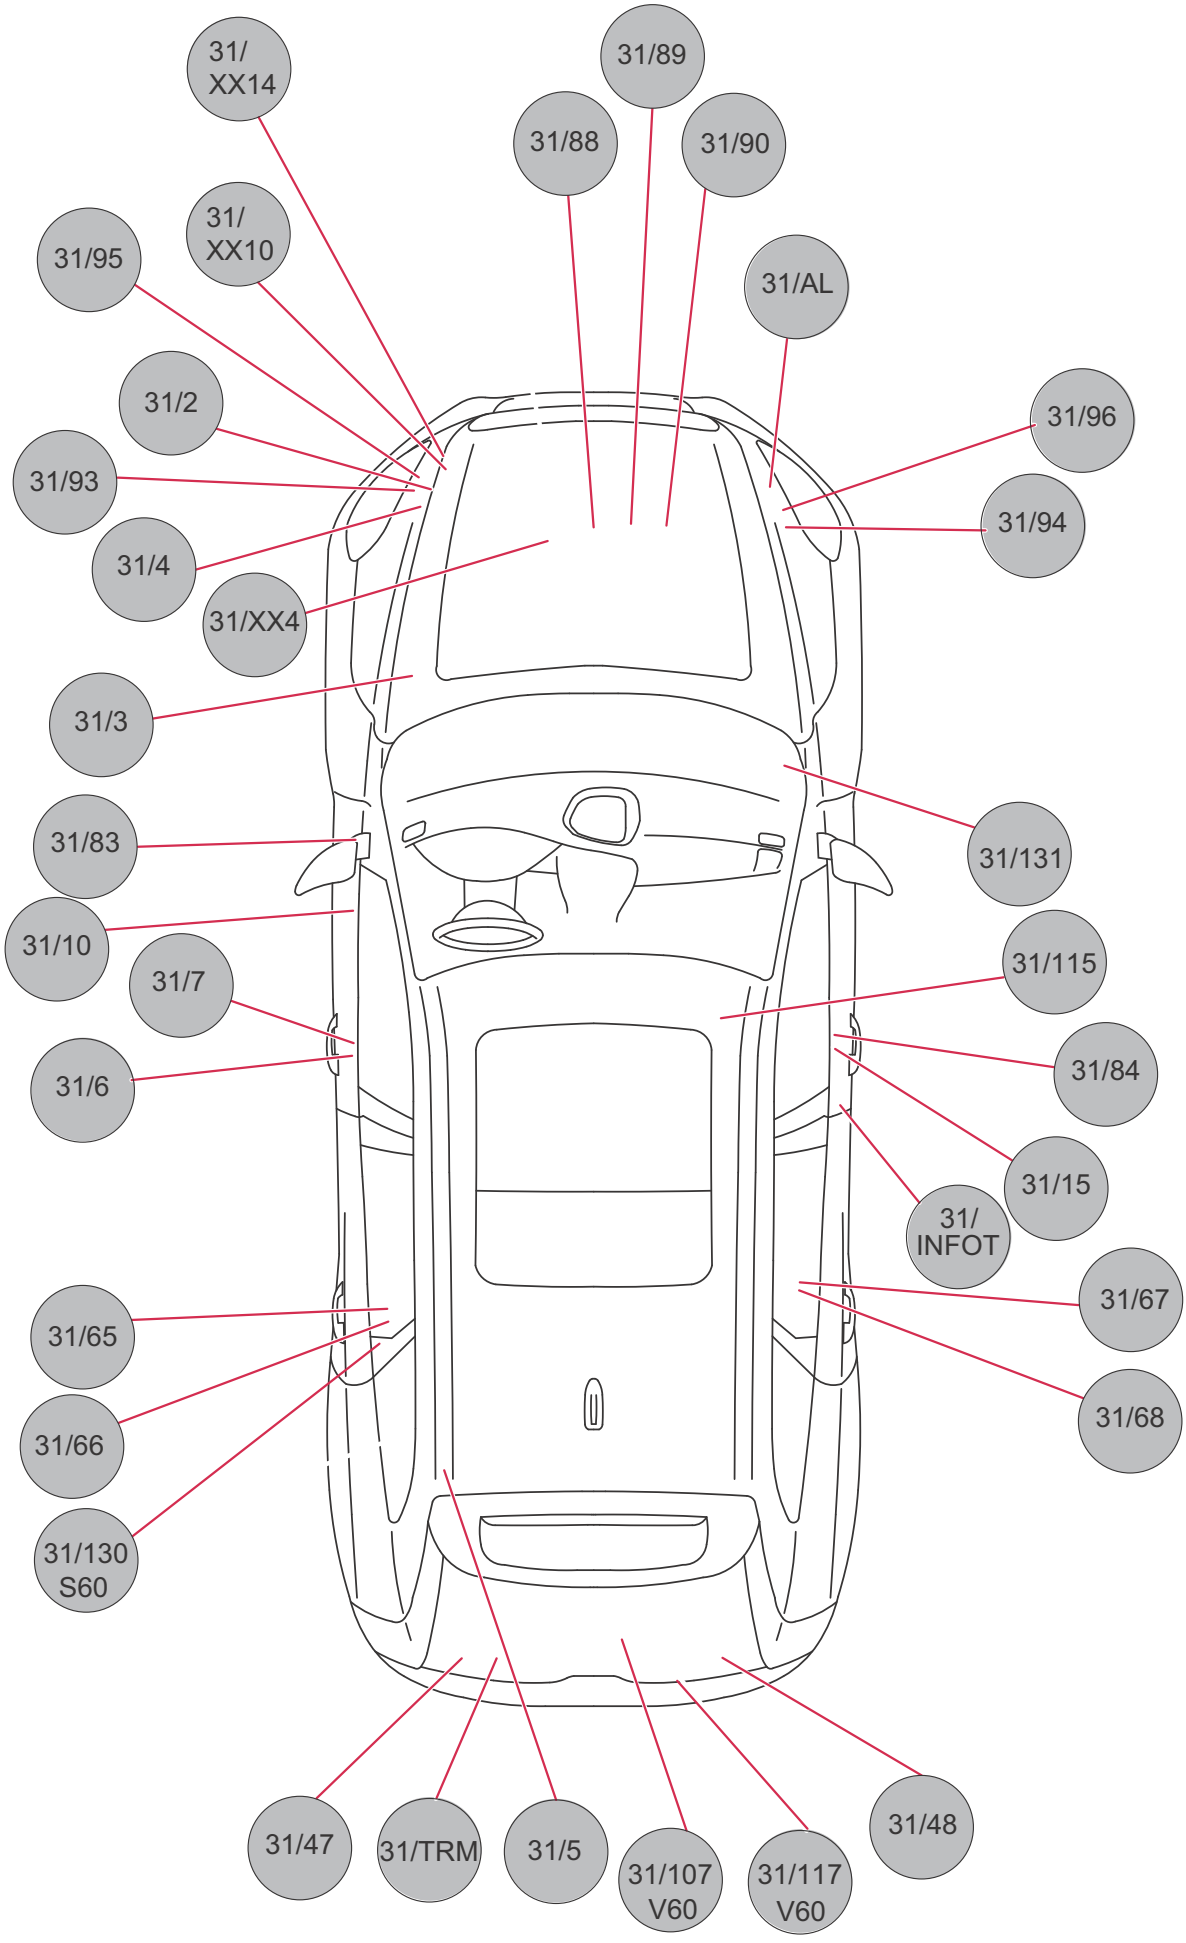

Ground connections
31/2 - 31/7

31/2	LH wheel housing
4/71	Cooling fan control module

31/3	Body, battery
1/1	Battery
7/240	Battery monitoring sensor

31/4	Engine
31/XX4	Ground connection

31/5	Rear edge roof
9/2	Heated rear window, V60

31/6	Bottom rail, left
3/27	Switch unit, power passenger seat, RHD
3/126	Driver Door Module (DDM), LHD
3/127	Passenger Door Module (PDM), RHD
3/128	Left rear door module (LDM)
3/176	Switch, driver’s door power window, LHD
4/52	Power Seat Module (PSM), LHD
9/12	Seat Heating Module (SHM), driver’s side, LHD
9/13	Seat Heating Module (SHM), passenger side, RHD
16/159	Control module, cellular phone handsfree, RHD

31/7	Bottom rail, left
3/271	Contact, immobilizer, clutch pedal, LHD
3/281	Infotainment Control Module (ICM), RHD
3/284	Diagnostic contact, brake light, LHD
4/56	Central Electronic Module (CEM), RHD
4/120	Parking Assistance Camera (PAC), RHD
7/51	Accelerator pedal sensor, LHD
7/93	Occupant Weight Sensor (OWS)
7/175	Weight sensor passenger seat, seat belt reminder, RHD
8/51	Igniter side airbag front left, LHD
8/52	Igniter side airbag front right, RHD
9/13	Seat Heating Module (SHM), passenger side, RHD
16/1	Integrated Audio Module (IAM), RHD
16/36	Television module (TVM)
16/145	Remote Digital Audio Receiver (RDAR), RHD
16/159	Control module, cellular phone handsfree, RHD
16/162	Digital Audio Broadcast Module (DABM), RHD

Ground connections
31/10 - 31/15 continues

31/10	Bottom rail, left
3/6	Hazard warning flasher switch
3/117	Switch unit, dome light
3/130	Steering Wheel Module (SWM)
3/173	Switch, trunk lid private lock
4/31	Fan control module
4/33	Sunroof control module
4/76	Remote control unit for garage door opener
4/80	Forward Sensing Module
4/102	Steering column lock module (SCL)
4/119	Remote Keyless Entry (RKE)
4/119.2	Remote Receiver Module (RRX)
4/125	Closing velocity module (CVM)
6/48	Damper Motor Module (DMM), recirculation
6/95	Damper Motor Module (DMM), temperature, left side
6/96	Damper Motor Module (DMM), temperature, right side
6/102	Damper Motor Module (DMM), defroster
6/103	Damper Motor Module (DMM), floor/ventilation
7/149	Rain Sensor Module (RSM)
7/159	Air Quality Sensor (AQS)
7/199	Ultrasonic sensor (IMS)
8/48	Auto-dimming rearview mirror
10/22	Ceiling light
10/29	Glove compartment lighting
10/114	Left-hand vanity mirror lighting
10/115	Right-hand vanity mirror lighting
10/150A	Rear reading light
17/13	Data link connector
17/45	Alcohol lock outlet
26/8	Alcohol lock charging cradle

31/15	Bottom rail, right
3/27	Switch unit, power passenger seat, LHD
3/65	Switch, heated rear seat
3/126	Driver Door Module (DDM), RHD
3/127	Passenger Door Module (PDM), LHD
3/129	Right rear door module (RDM)
3/156	Gear Selector Module (GSM), RHD
4/52	Power Seat Module (PSM), RHD
8/134	Solenoid, reverse interlock, manual, RHD
9/1	Outlet 12V front
9/12	Seat Heating Module (SHM), driver’s side, RHD

continues

Ground connections
31/15 - 31/67

31/15	Bottom rail, right
9/13	Seat Heating Module (SHM), passenger side, LHD
9/25	Outlet 12V rear
10/72	Front ashtray lighting
16/45	Portable navigation system
16/181	Rear headphone sockets
27/8	Camera, wide angle front

31/47	Rear bumper abutment, left
2/16	Relay, rear window wiper
3/35	Trunk handle switch
4/110	Trailer Module (TRM)
4/115	Park Brake Module (PBM)
6/8	Central locking motor, trunk lid
6/32	Rear window wiper motor
10/3	License plate lighting
10/17	Lamp housing, rear right
10/18	Lamp housing, rear left
10/19	Auxiliary brake light
17/19	12 V outlet, Cargo compartment

31/48	Rear bumper abutment, right
4/93	Keyless vehicle module (KVM)
4/126	Side Obstacle Detection Control Module left (SODL)
4/127	Side Obstacle Detection Control Module right (SODR)
6/37	Lock motor, fuel filler cover
10/17	Lamp housing, rear right
10/46	Fog light, right rear
10/53	Fog light, left rear

31/65	Rear seat riser, left-hand side 1
4/82	Differential Electronic Module (DEM)
6/141	Motor folding head restraint left
8/59	Rear left head restraint solenoid
9/14	Control module, rear left seat heater

31/66	Rear seat riser, left-hand side 2
4/83	Fuel pump control module
6/33	Fuel pump

31/67	Rear seat riser, RH side 1
4/84	Suspension Module (SUM)
4/86	Parking Assistance Module (PAM)
6/142	Motor folding head restraint right
8/60	Rear right head restraint solenoid
9/15	Control module, rear right seat heater

Ground connections
31/68 - 31/89

31/68	Rear seat riser, RH side 2
6/35	Fuel pump, auxiliary heater
9/38	Electrically heated fuel filter

31/83	Bottom rail, left
3/111	Light Switch Module (LSM)
3/130	Steering Wheel Module (SWM)
3/272	Switch, parking brake
3/112	Climate Control Module (CCM)
5/1	Driver Information Module (DIM)
9/42	PTC-element
10/1	Left-hand front lamp housing
10/2	Right-hand front lamp housing
10/19	Auxiliary brake light
16/60	Phone Module (PHM)
16/65	Immobilizer antenna unit (IAU)
17/13	Data link connector

31/84	Bottom rail, right
3/271	Contact, immobilizer, clutch pedal, RHD
3/281	Infotainment Control Module (ICM), LHD
3/284	Diagnostic contact, brake light, RHD
4/56	Central Electronic Module (CEM), LHD
4/120	Parking Assistance Camera (PAC), LHD
7/51	Accelerator pedal sensor, RHD
7/93	Occupant Weight Sensor (OWS)
7/175	Weight sensor passenger seat, seat belt reminder, LHD
8/51	Igniter side airbag front driver’s seat, RHD
8/52	Igniter side airbag front passenger seat, LHD
9/13	Seat Heating Module (SHM), passenger side, LHD
16/1	Integrated Audio Module (IAM), LHD
16/36	TV receiver, LHD
16/145	Remote Digital Audio Receiver (RDAR), LHD
16/162	Digital Audio Broadcast Module (DABM), LHD

31/88	Engine ignition coils
20/3	Spark plug with ignition coil, 4- & 5-Cyl. Turbo
20/4	Spark plug with ignition coil, 4- & 5-Cyl. Turbo
20/5	Spark plug with ignition coil, 4- & 6-Cyl. Turbo
20/6	Spark plug with ignition coil, 4- & 6-Cyl. Turbo

31/89	Engine ignition coils
20/5	Spark plug with ignition coil, 5-Cyl. Turbo
20/6	Spark plug with ignition coil, 5-Cyl. Turbo
20/7	Spark plug with ignition coil, 5- & 6-Cyl. Turbo
20/8	Spark plug with ignition coil, 6-Cyl. Turbo

Ground connections
31/90 - 31/130

31/90	Engine ignition coils
20/3	Spark plug with ignition coil, 6-Cyl. Turbo
20/4	Spark plug with ignition coil, 6-Cyl. Turbo
20/16	Capacitor, 6-Cyl. Turbo

31/93	LH wheel housing 2
4/56	Central Electronic Module (CEM), RHD
4/99	Electronic power steering control module
6/1	Wiper Motor Module
6/104	Washer motor headlights
7/4	Brake fluid level sensor
7/5	Washer fluid level sensor
9/58	Heated windshield washer nozzles
10/1	Left-hand front lamp housing
16/10	Horn 1
16/11	Horn 2
16/35	Siren Control Module (SCM)

31/94	RH wheel housing 2
4/7	Combustion Preheater Module (CPM)
4/106	Control module, remote parking heater start
10/2	Right-hand front lamp housing

31/95	LH wheel housing 3
6/164	Electrical power steering module (EPS)

31/96	RH wheel housing 3
3/62	Hood alarm contact
4/56	Central Electronic Module (CEM), LHD
4/136	Active Grillshutter Module (AGM)
7/73	Coolant level sensor
7/203	Forward-aimed radar (FLR)
10/2	Right-hand front lamp housing
10/11	Front left running/parking light
10/12	Front right running/parking light
15/46	Relay box in engine compartment

31/107	Trunk lid/tailgate upper edge V60
31/117	Trunk lid/tailgate lower edge V60

31/115	LH roof, A-pillar
9/7	Heated windscreen

31/117	Tailgate upper, V60
31/107	Ground connection, V60

31/130	LH roof, C-pillar
10/19	Auxiliary brake lights, S60

Ground connections
31/131 - 31/TRM

31/131	Start/stop function
1/2	Secondary battery

31/XX4	Engine - Body
31/4	Ground connection

31/XX10	LH wheel housing 1
3/10	Reversing light contact
3/282	Switch indicator 1st gear, I5D
4/28	Transmission Control Module (TCM)
4/46	Engine Control Module (ECM)
4/109	Control module glow plug, 4-Cyl. Diesel
6/73	Coolant pump
6/179	Electric catch motor
7/243	Gear position sensor neutral position
8/3	Electromagnetic clutch, climate control system, 4-Cyl.
8/78	Pressure monitor power steering, 4-Cyl. Turbo
8/84	Switch vacuum pump 4- & 5-Cyl. Turbo
9/32	PTC resistor, crankcase ventilation
9/38	Electrically heated fuel filter
20/3-6	Spark plug with ignition coil, 4-Cyl. Turbo

31/XX14	LH wheel housing 3
4/16	Brake Control Module (BCM)

31/AL	Auxiliary lights
10/65	Auxiliary light, front right
10/69	Auxiliary light, front left

31/INFOT	Infotainment
16/105	Audio module (AUD)
16/159	Control module, cellular phone handsfree

31/TRM	Accessories
17/39	13-pin outlet, tow hitch cable harness
4/110	Trailer Module (TRM)

Control modules
Overview locations

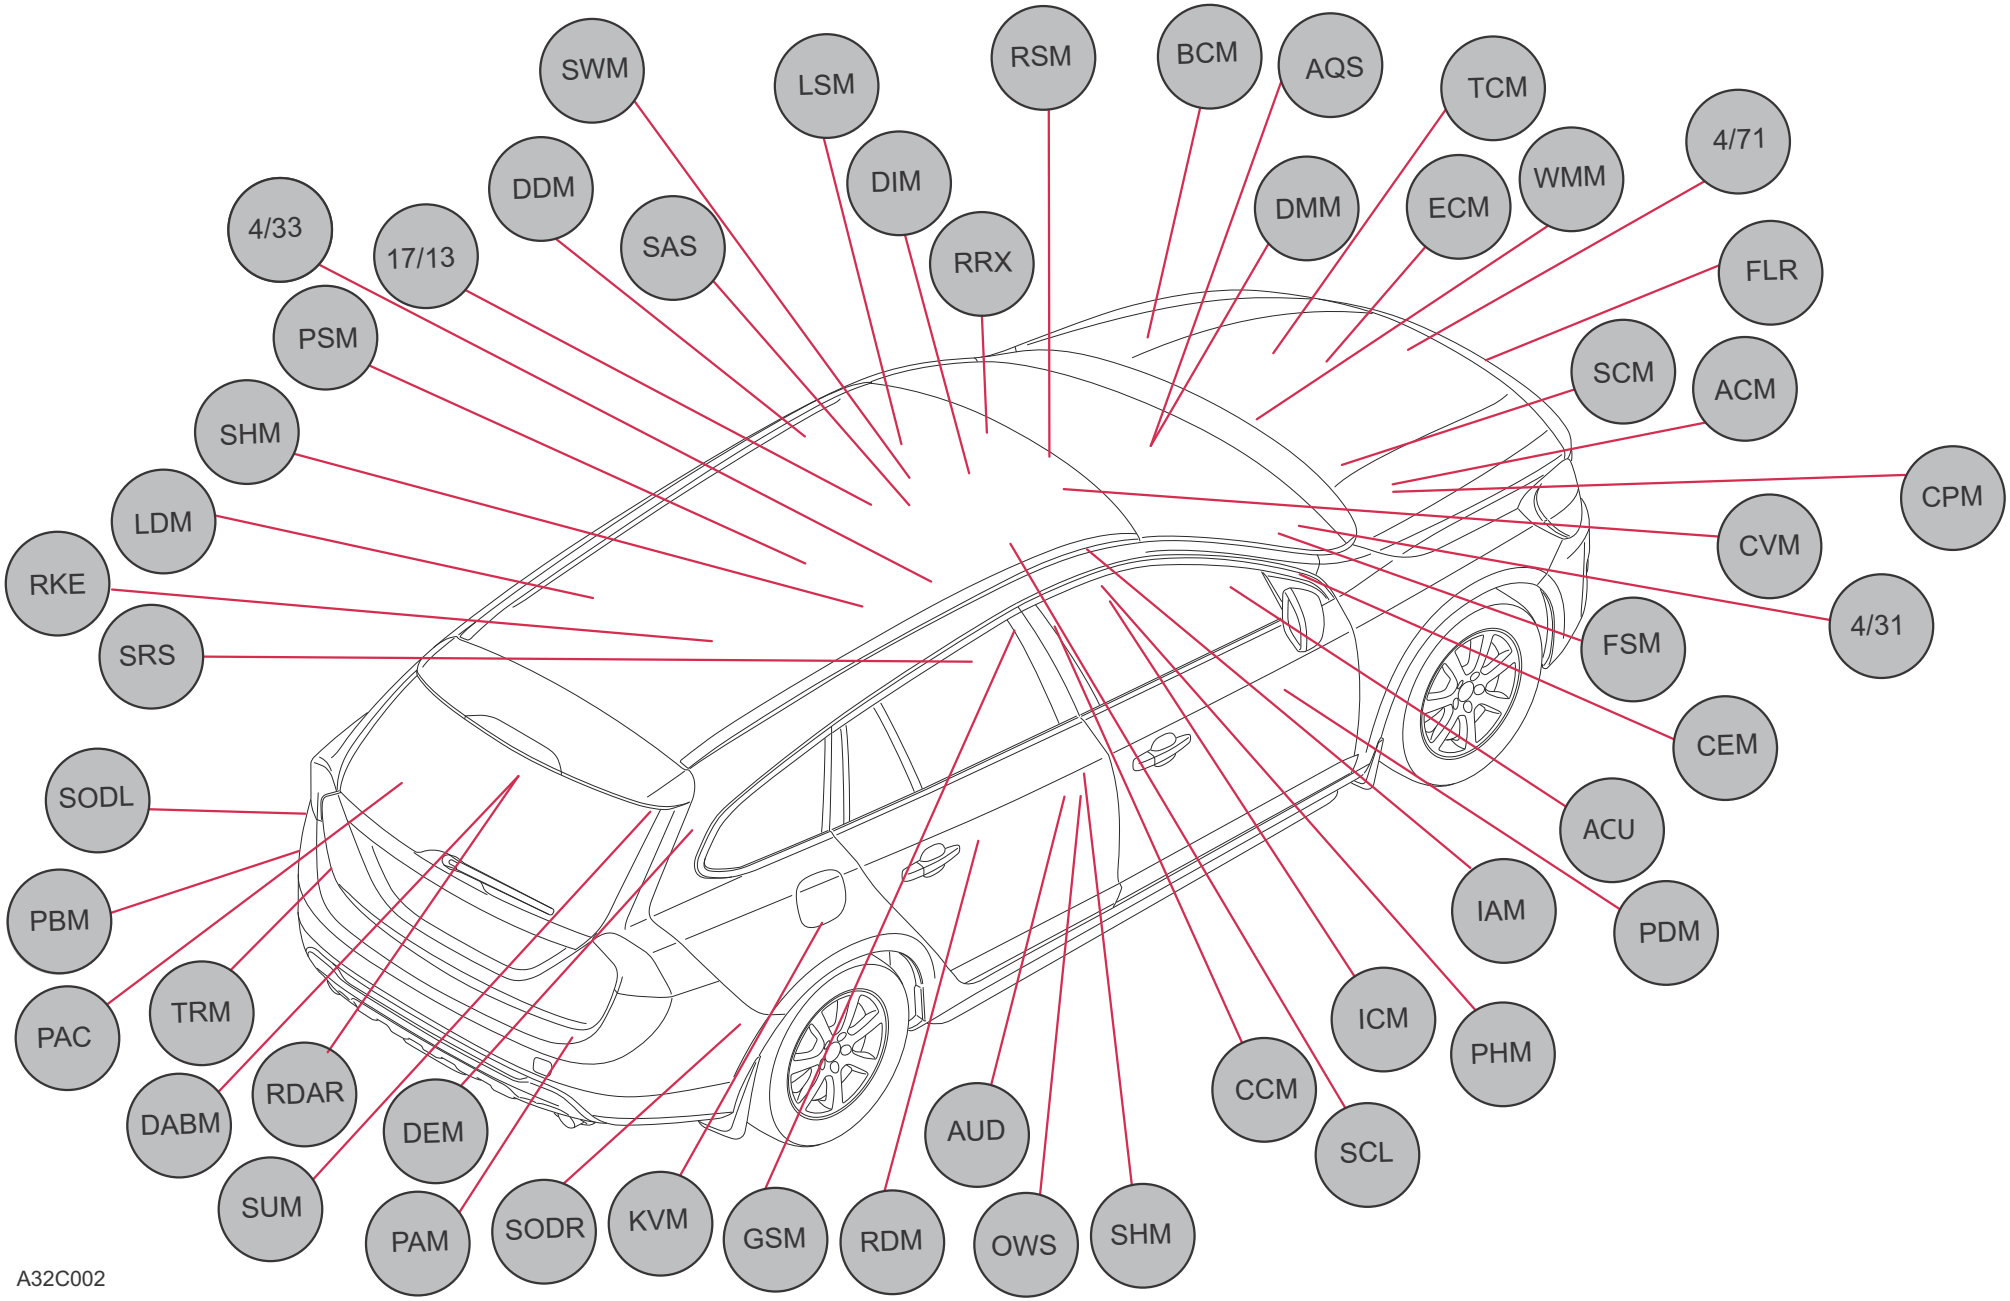

Control modules
Overview designations

Unit	Designation		Unit	Designation	
ACM	6/26	Alternator Control Module (ACM)	**PBM**	4/115	Park Brake Module (PBM)
ACU	4/156	Accessory Connectivity Unit (ACU)	**PDM**	3/127	Passenger door module (PDM)
AQS	7/159	Air Quality Sensor (AQS)	**PHM**	16/60	Phone Module (PHM)
AUD	16/105	Audio module (AUD)	**PSM**	4/52	Power Seat Module (PSM)
BCM	4/16	Brake Control Module (BCM)	**RDAR**	16/145	Remote Digital Audio Receiver (RDAR)
CCM	3/112	Climate control module (CCM)	**RDM**	3/129	Right rear door module (RDM)
CEM	4/56	Central Electronic Module (CEM)	**RKE**	4/119	Remote Keyless Entry (RKE)
CPM	4/7	Combustion Preheater Module (CPM)	**RRX**	4/119.2	Remote Receiver Module (RRX)
CVM	4/125	Closing velocity module (CVM)	**RSM**	7/149	Rain Sensor Module (RSM)
DABM	16/162	Digital Audio Broadcast Module (DABM)	**SAS**	4/68	Steering Wheel Angle Sensor Module (SAS)
DDM	3/126	Driver door module (DDM)	**SCL**	4/102	Steering column lock module (SCL)
DEM	4/82	Differential Electronic Module (DEM)	**SCM**	16/35	Siren Control Module (SCM)
DIM	5/1	Driver Information Module (DIM)	**SHM**	9/12	Seat Heating Module (SHM) driver's side
DMM		Damper Motor Module (DMM)		9/13	Seat Heating Module (SHM) passenger side
ECM	4/46	Engine Control Module (ECM)	**SODL**	4/126	Side Obstacle Detection Control Module left (SODL)
FLR	7/203	Forward-aimed radar (FLR)	**SODR**	4/127	Side Obstacle Detection Control Module right (SODR)
FSM	4/80	Forward Sensing Module (FSM)	**SRS**	4/9	Supplemental Restraint System (SRS)
GSM	3/156	Gear Selector Module (GSM)	**SUM**	4/84	Suspension Module (SUM)
IAM	16/1	Integrated Audio Module (IAM)	**SWM**	3/130	Steering Wheel Module (SWM)
ICM	3/281	Infotainment control module (ICM)	**TCM**	4/28	Transmission Control Module (TCM)
KVM	4/93	Keyless vehicle module (KVM)	**TRM**	4/110	Trailer Module (TRM)
LDM	3/128	Left rear door module (LDM)	**WMM**	6/1	Wiper motor module (WMM)
LSM	3/111	Light Switch Module (LSM)	**4/31**	4/31	Fan control module
OWS	7/93	Occupant Weight Sensor (OWS)	**4/33**	4/33	Sunroof control module
PAC	4/120	Parking Assistance Camera (PAC)	**4/71**	4/71	Cooling fan control module
PAM	4/86	Parking Assistance Module (PAM)	**17/13**	17/13	Data link connector

Control modules
Central Electronic Module (CEM) 1:3

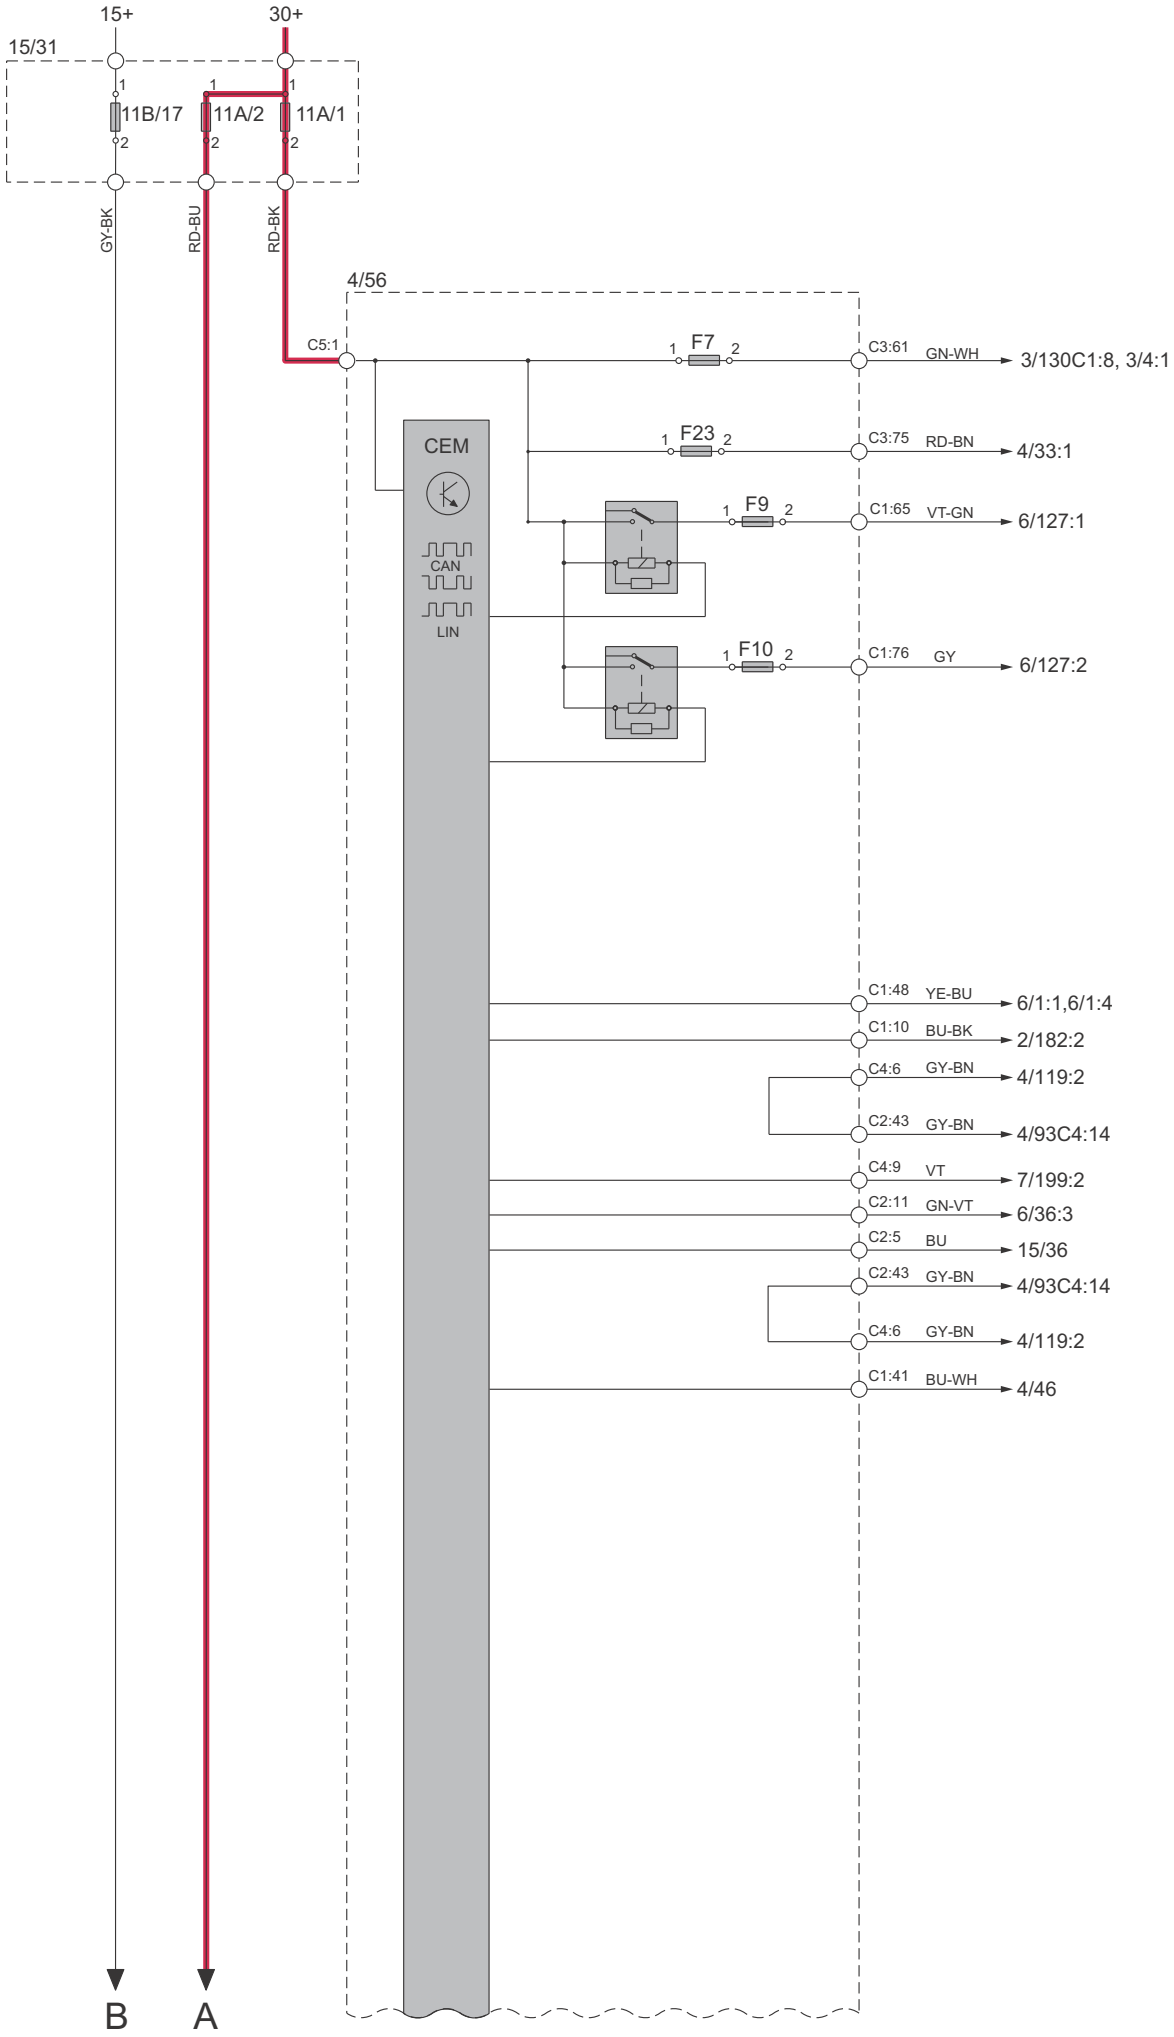

Control modules
Central Electronic Module (CEM) 2:3

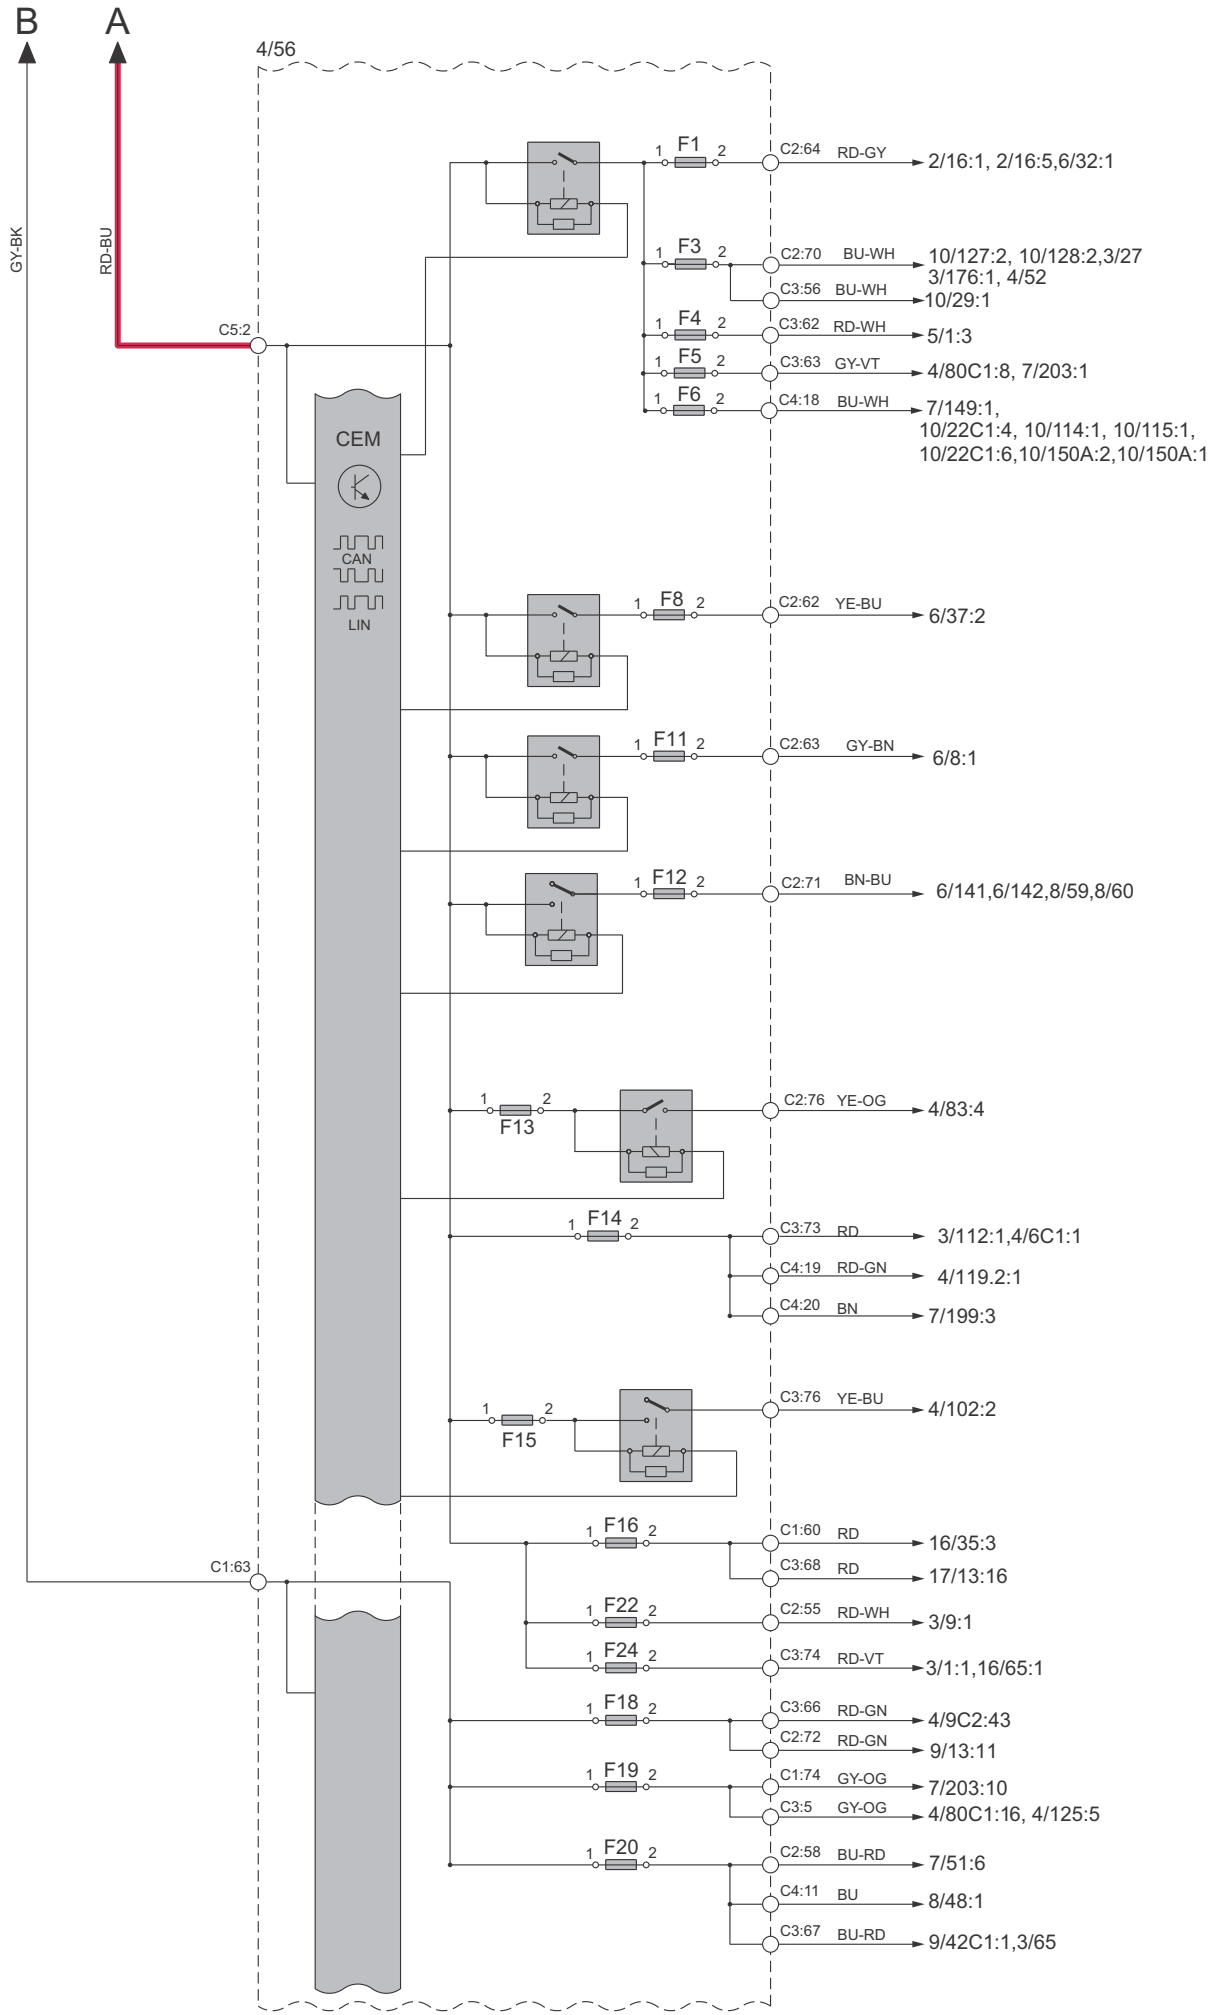

Control modules
Central Electronic Module (CEM) 3:3

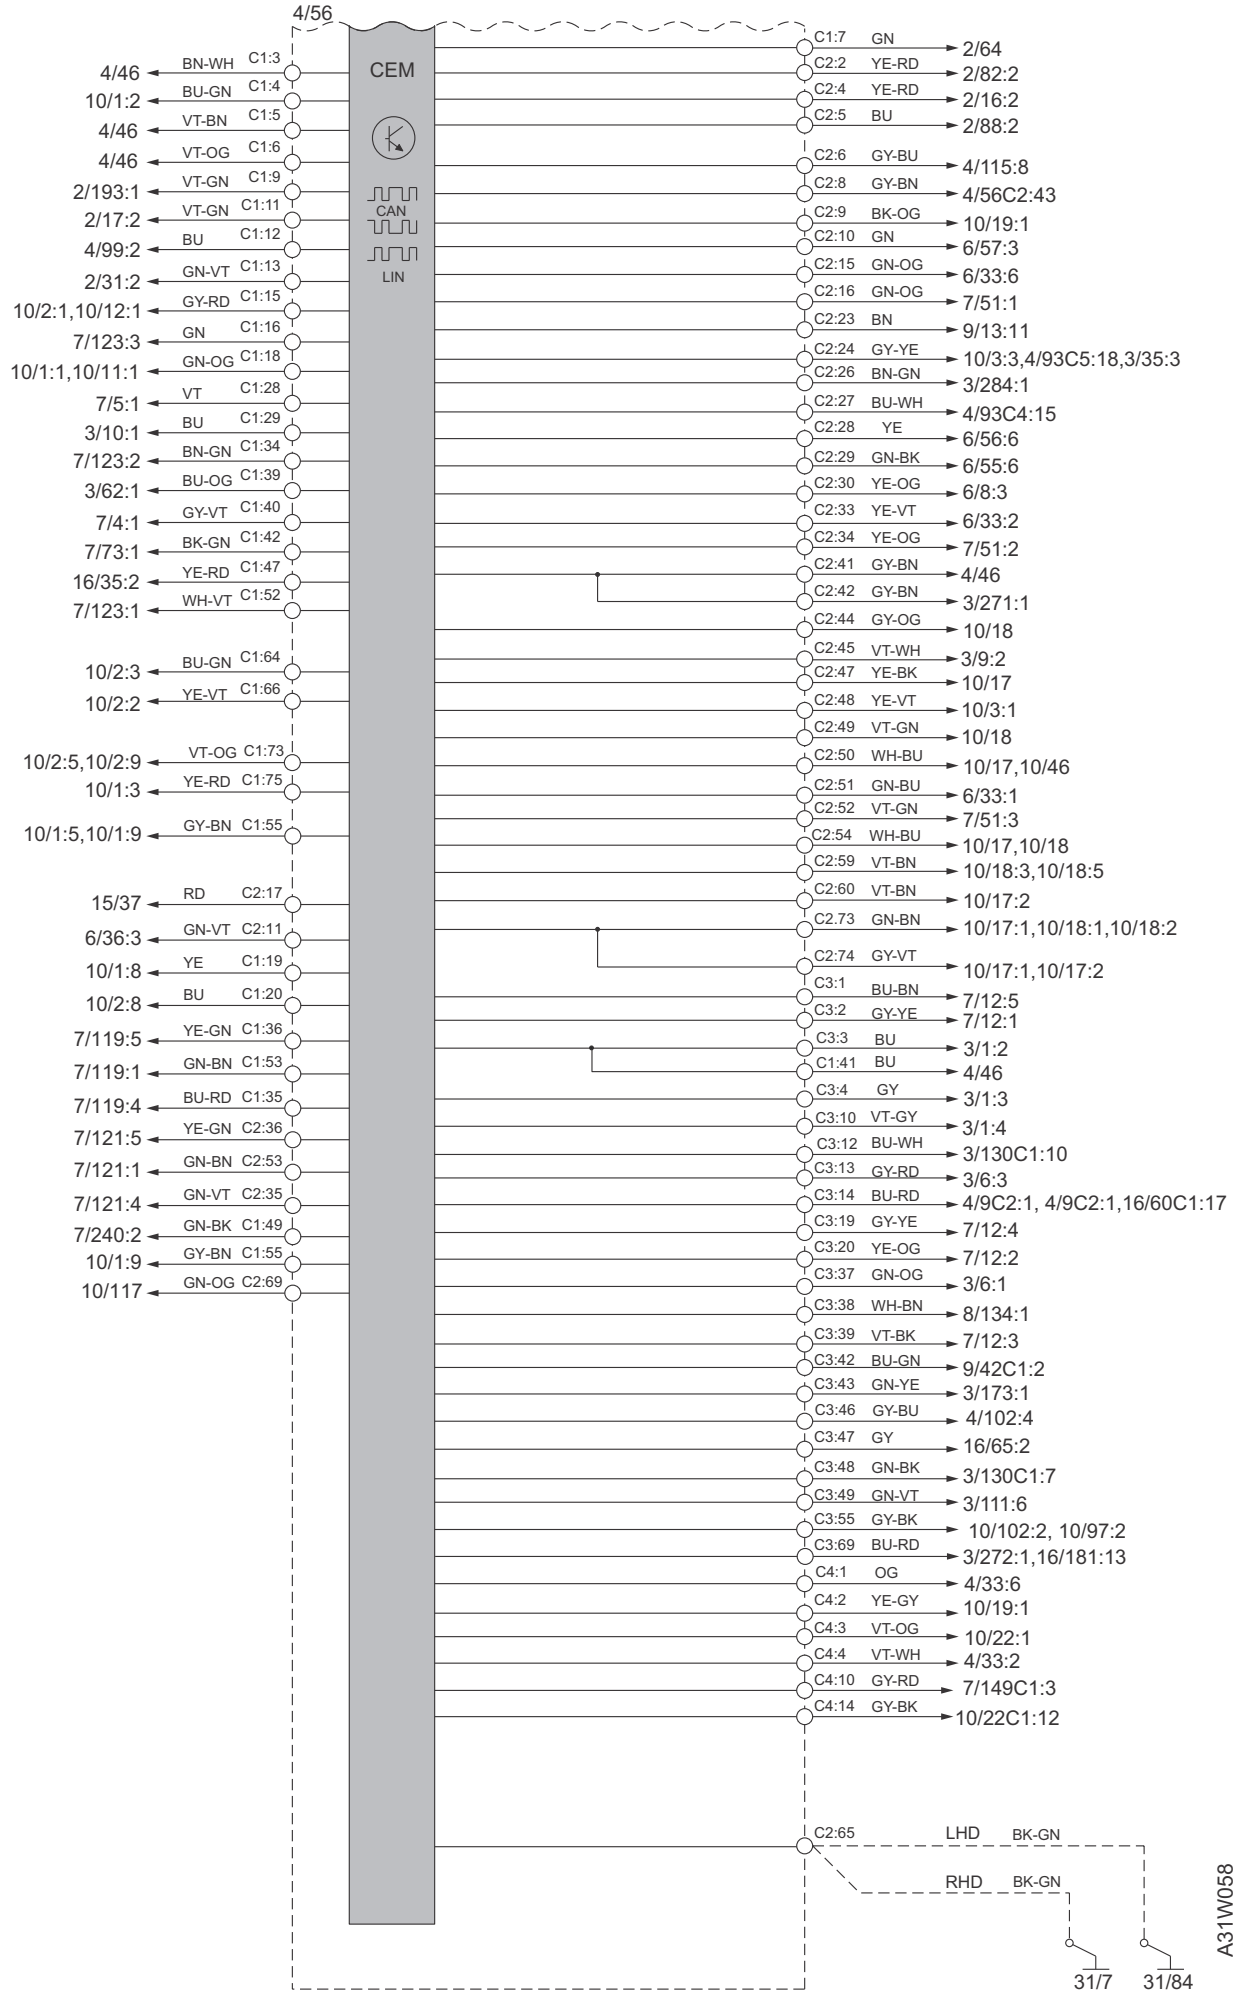

Control modules
Data communication, High speed CAN 1:2

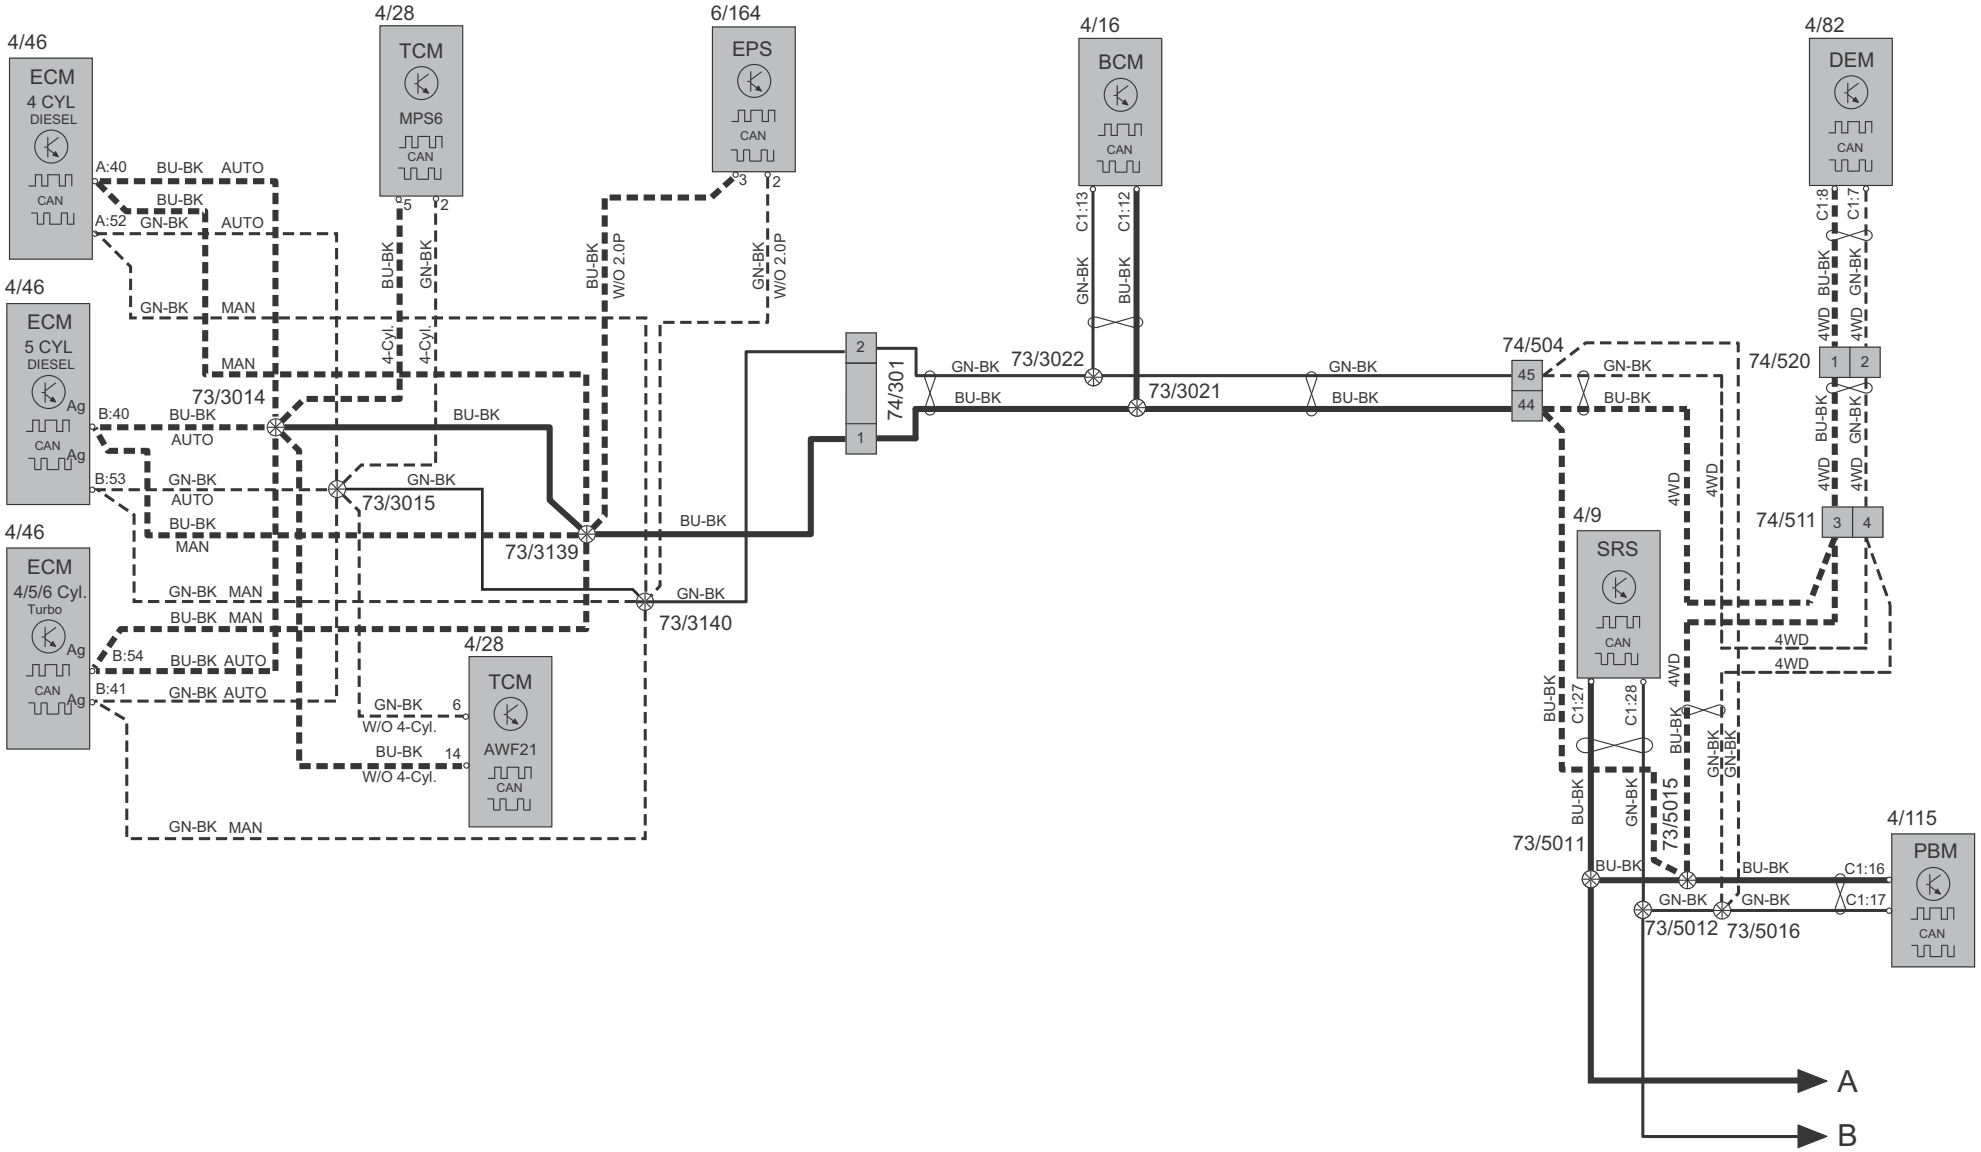

A31W059

Control modules
Data communication, High speed CAN 2:2

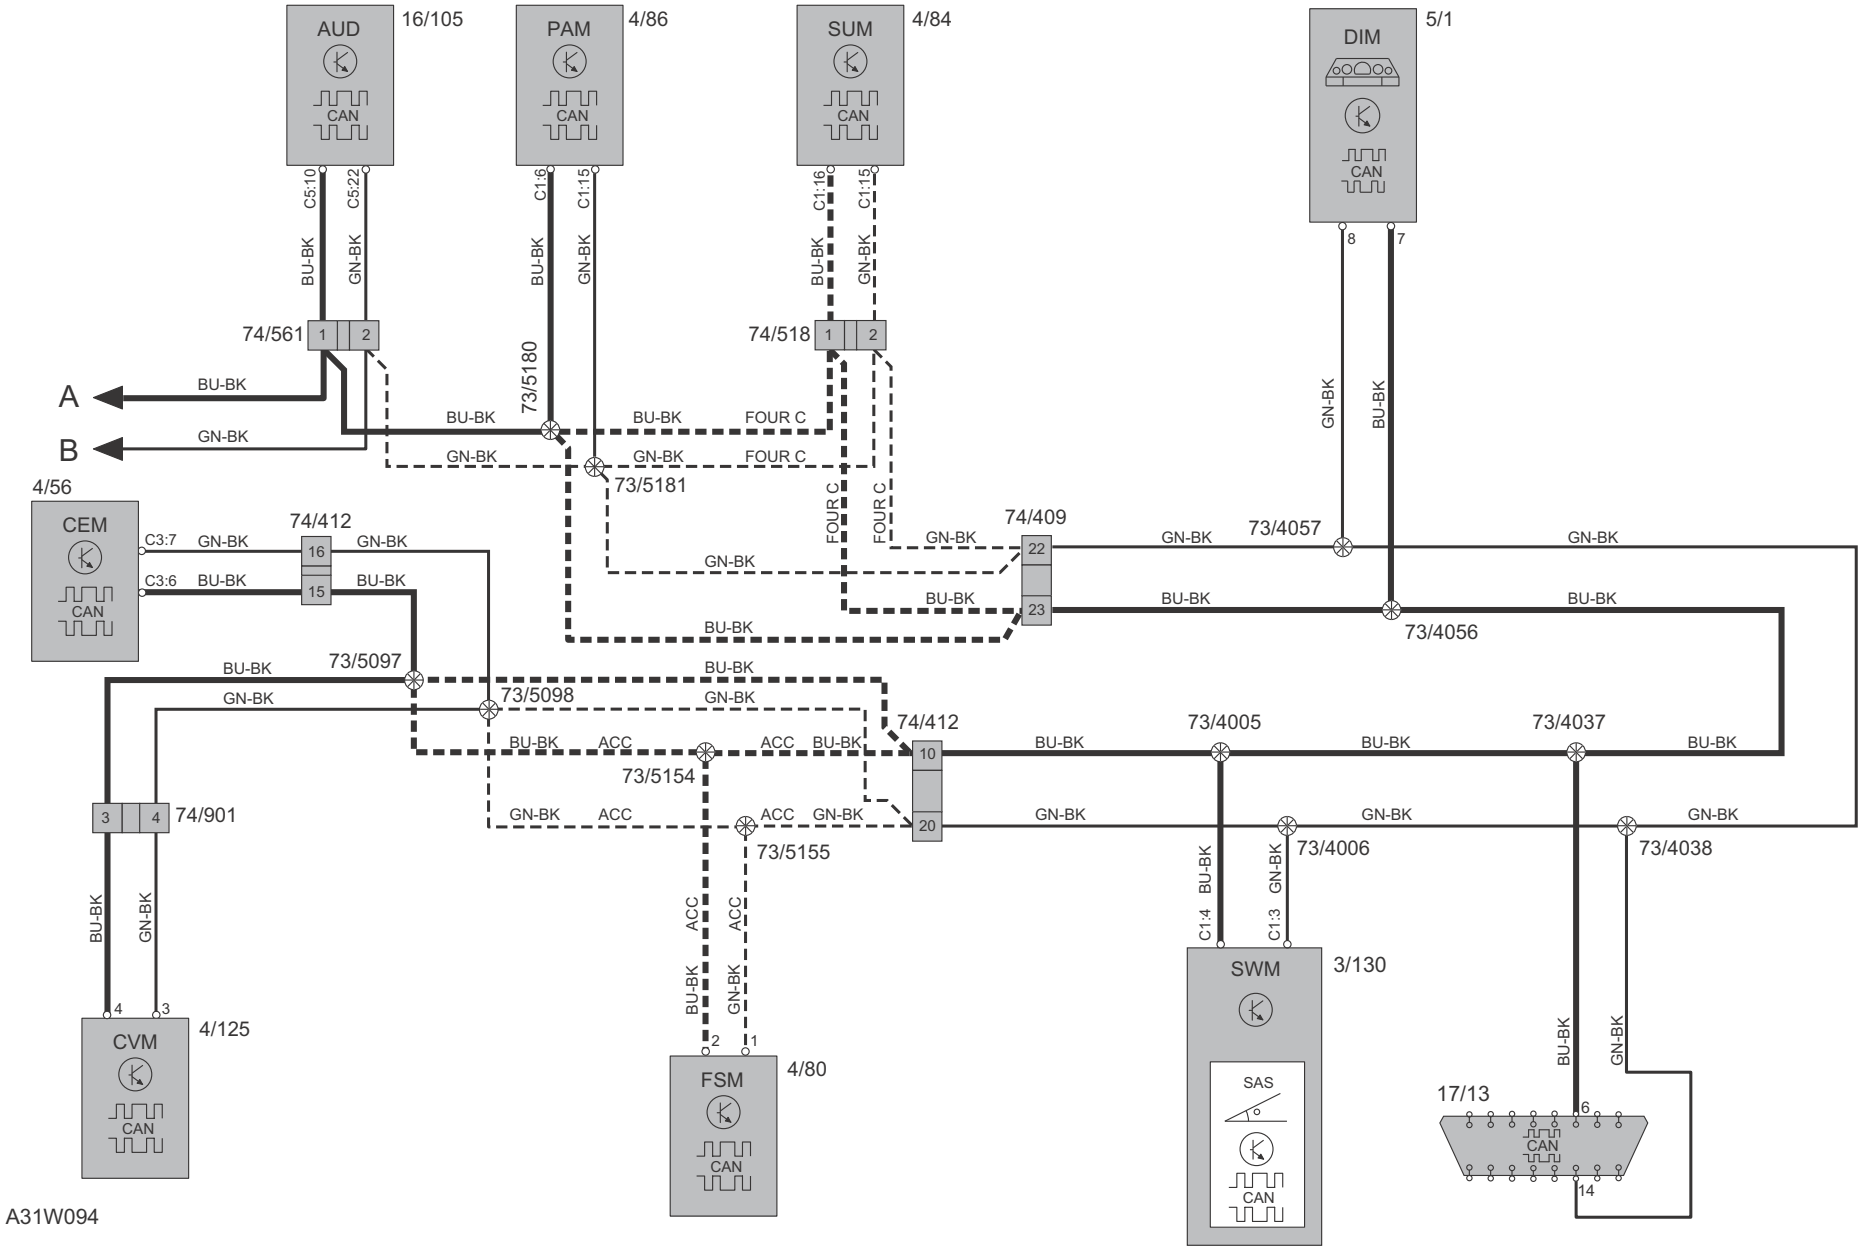

Control modules
Data communication intermediate speed CAN, LHD

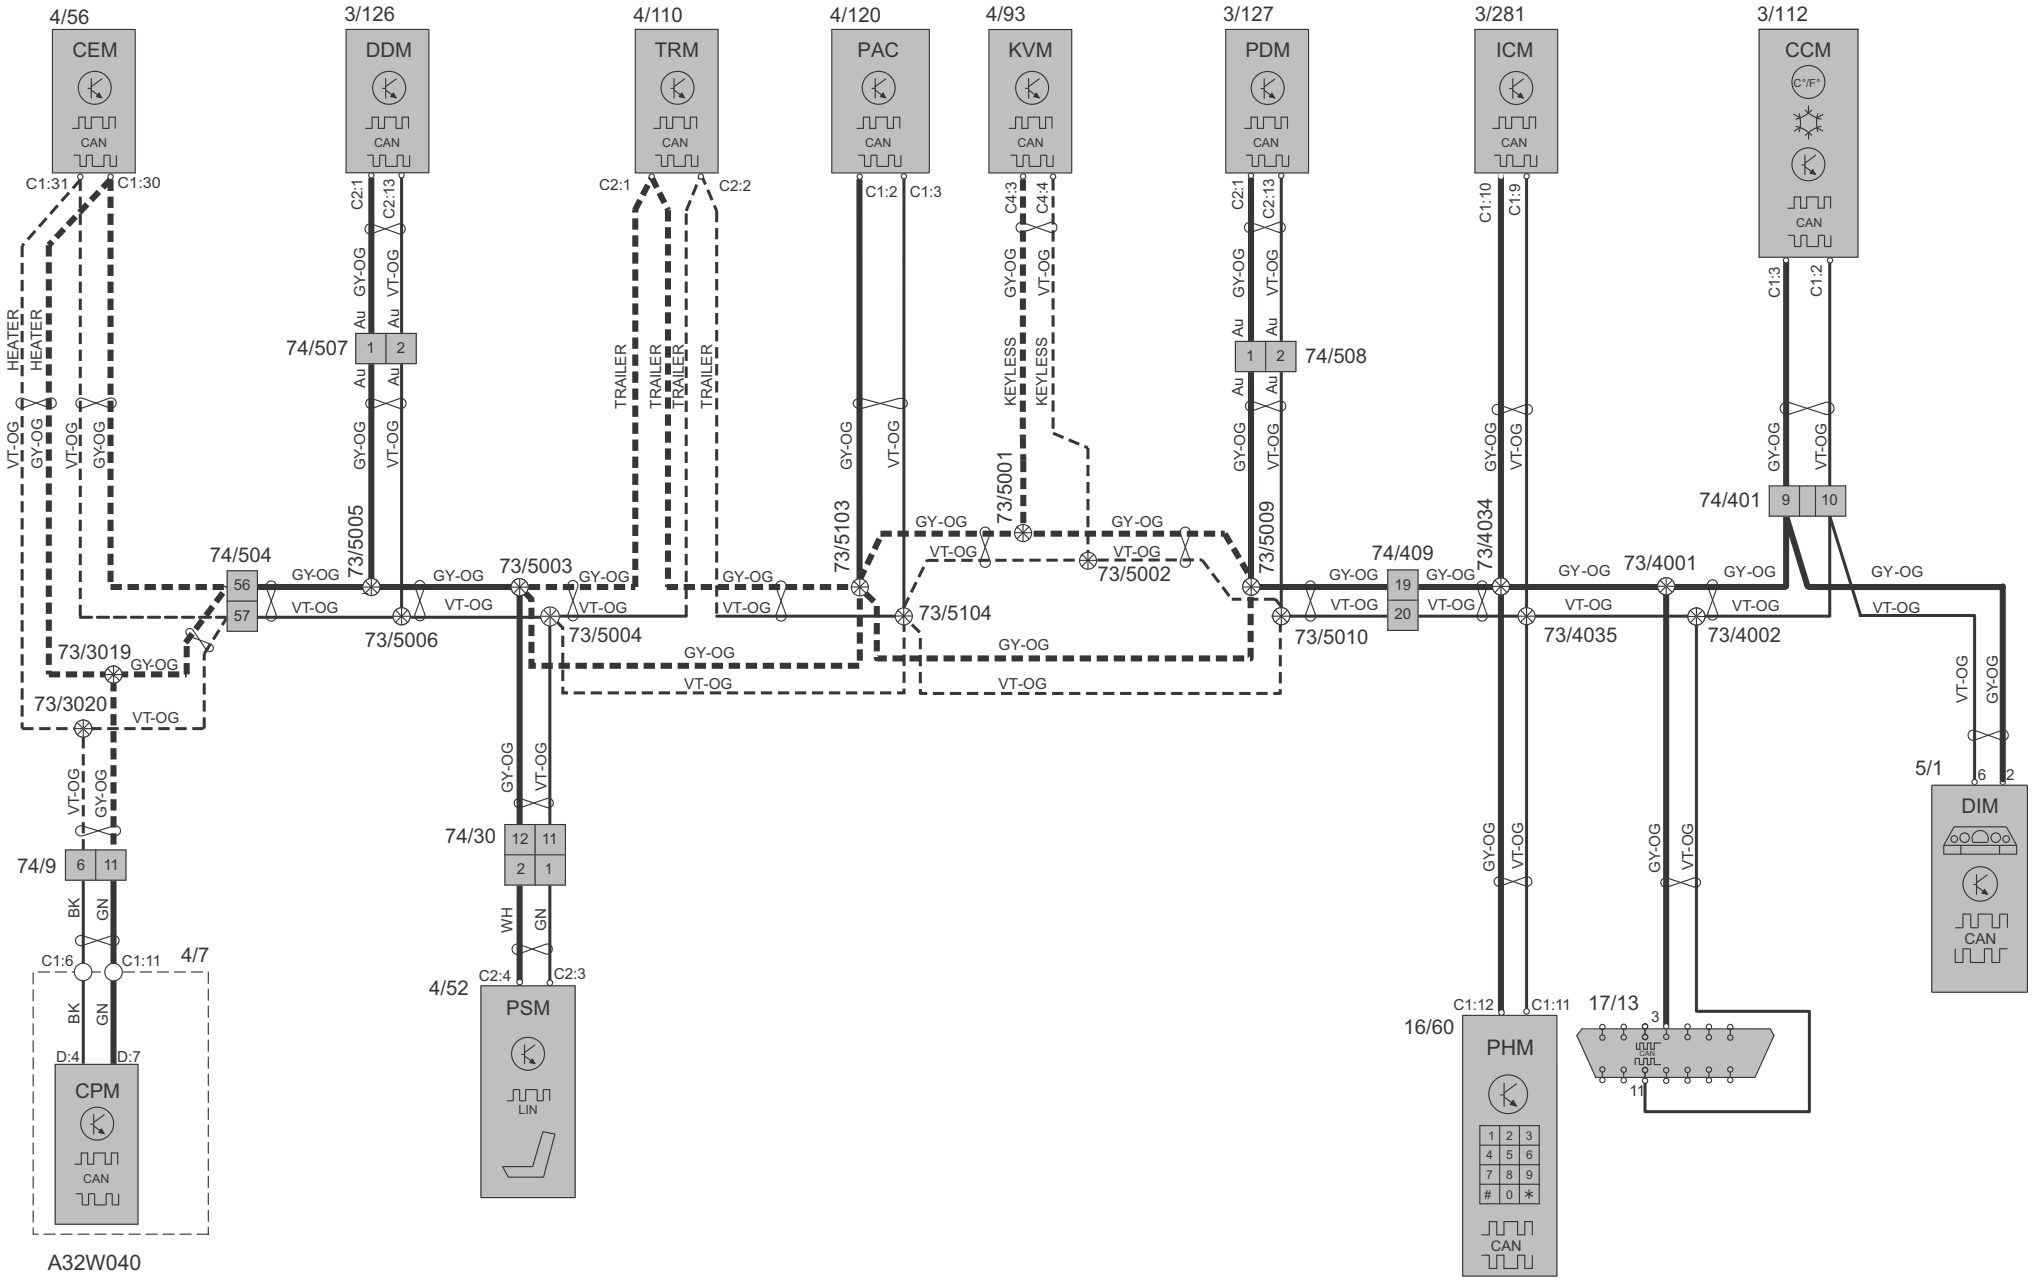

Control modules
Data communication intermediate speed CAN, RHD

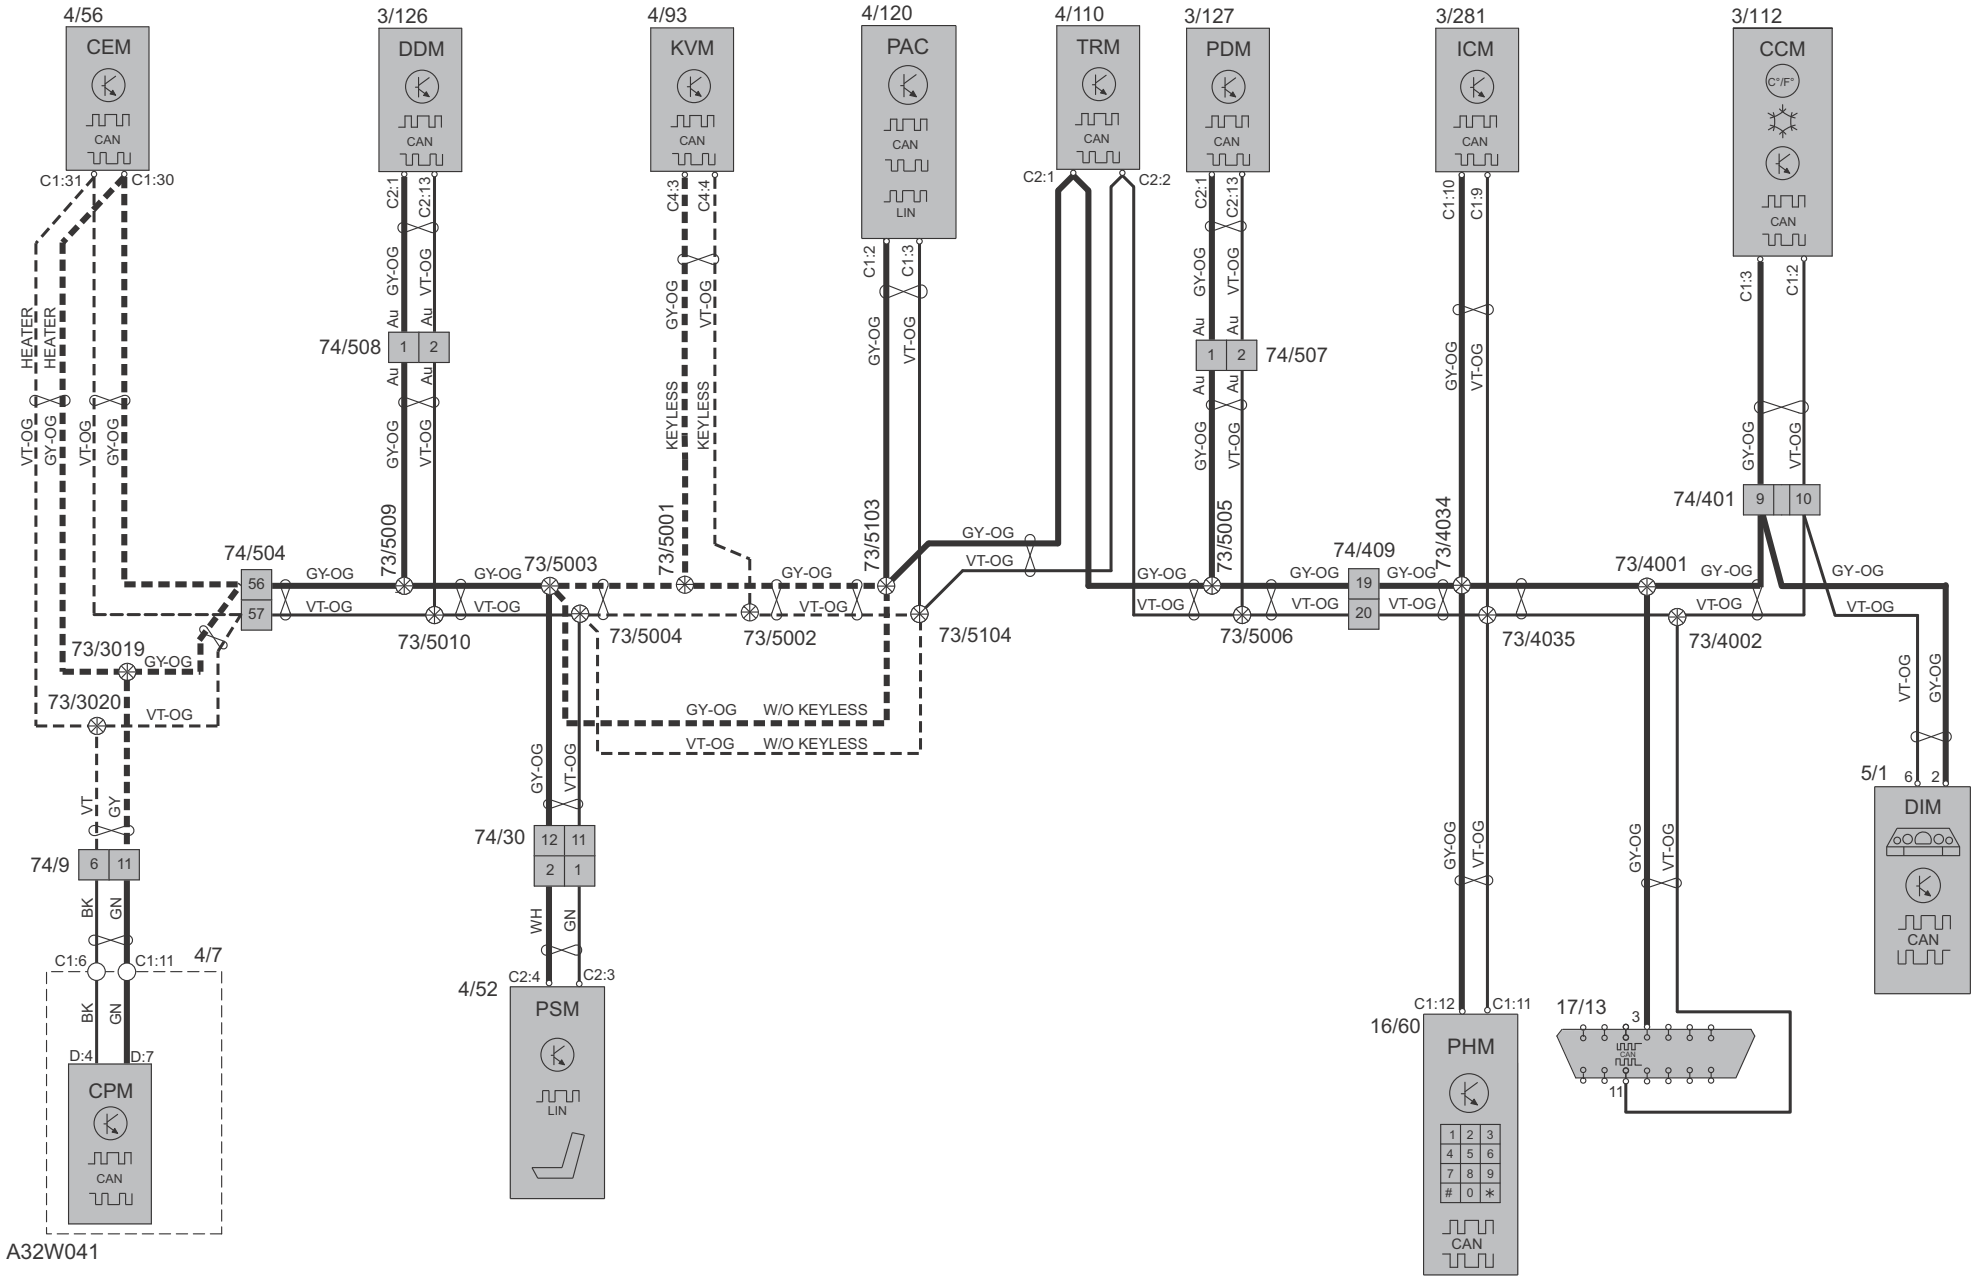

Control modules
Data communication Local CAN

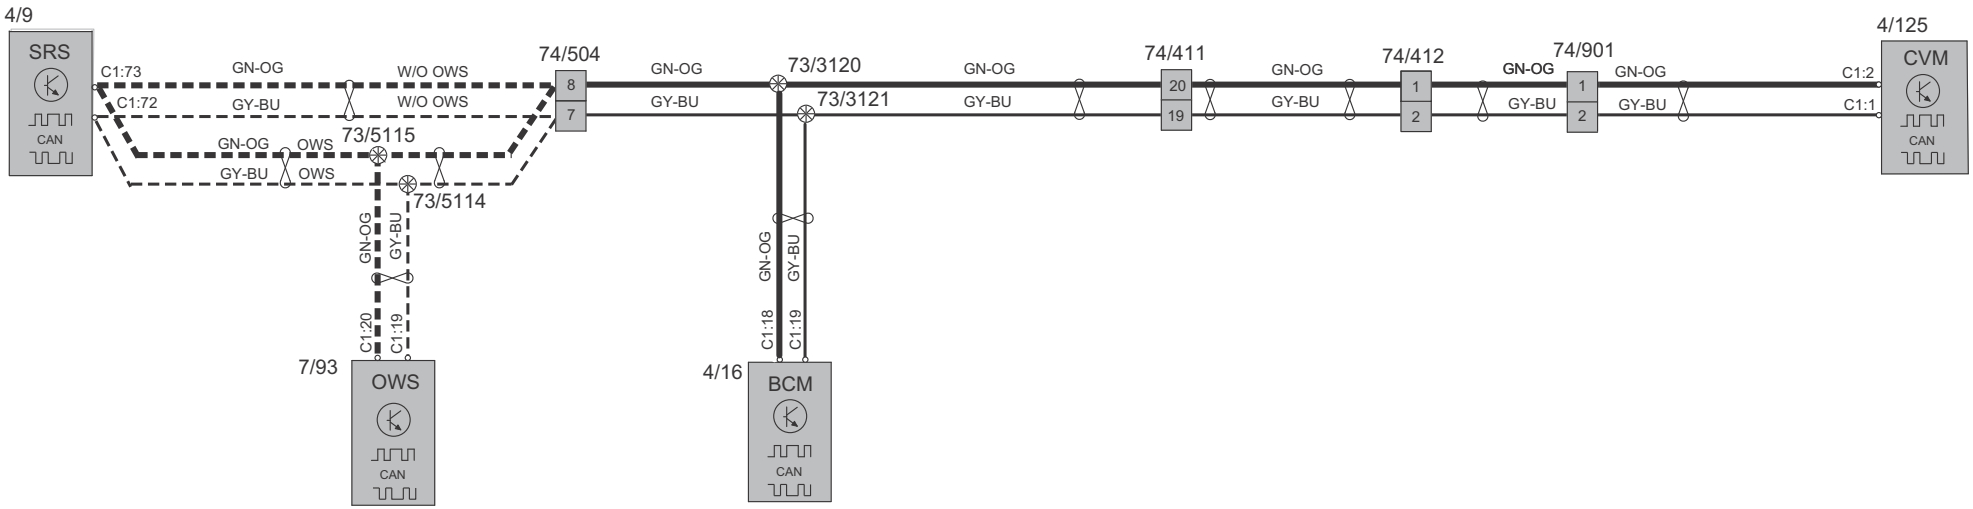

A31W062

Control modules
Data communication Extended CAN

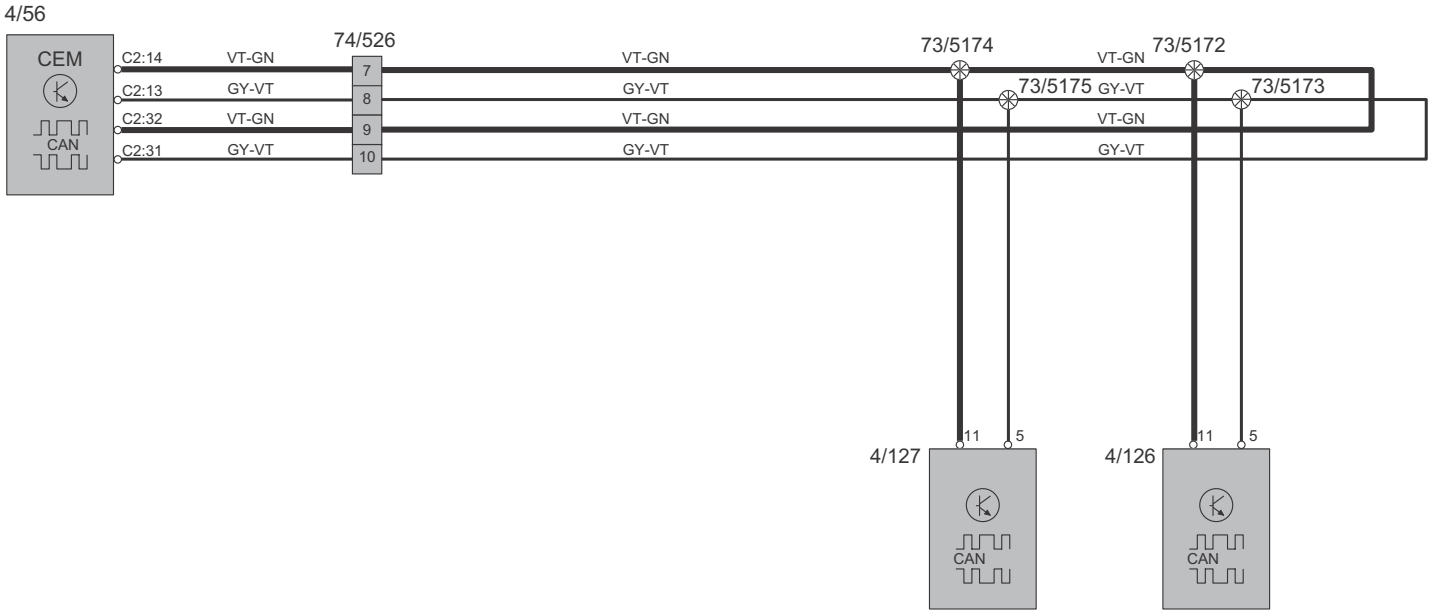

A31W063

Control modules
Data communication, LIN 1:2

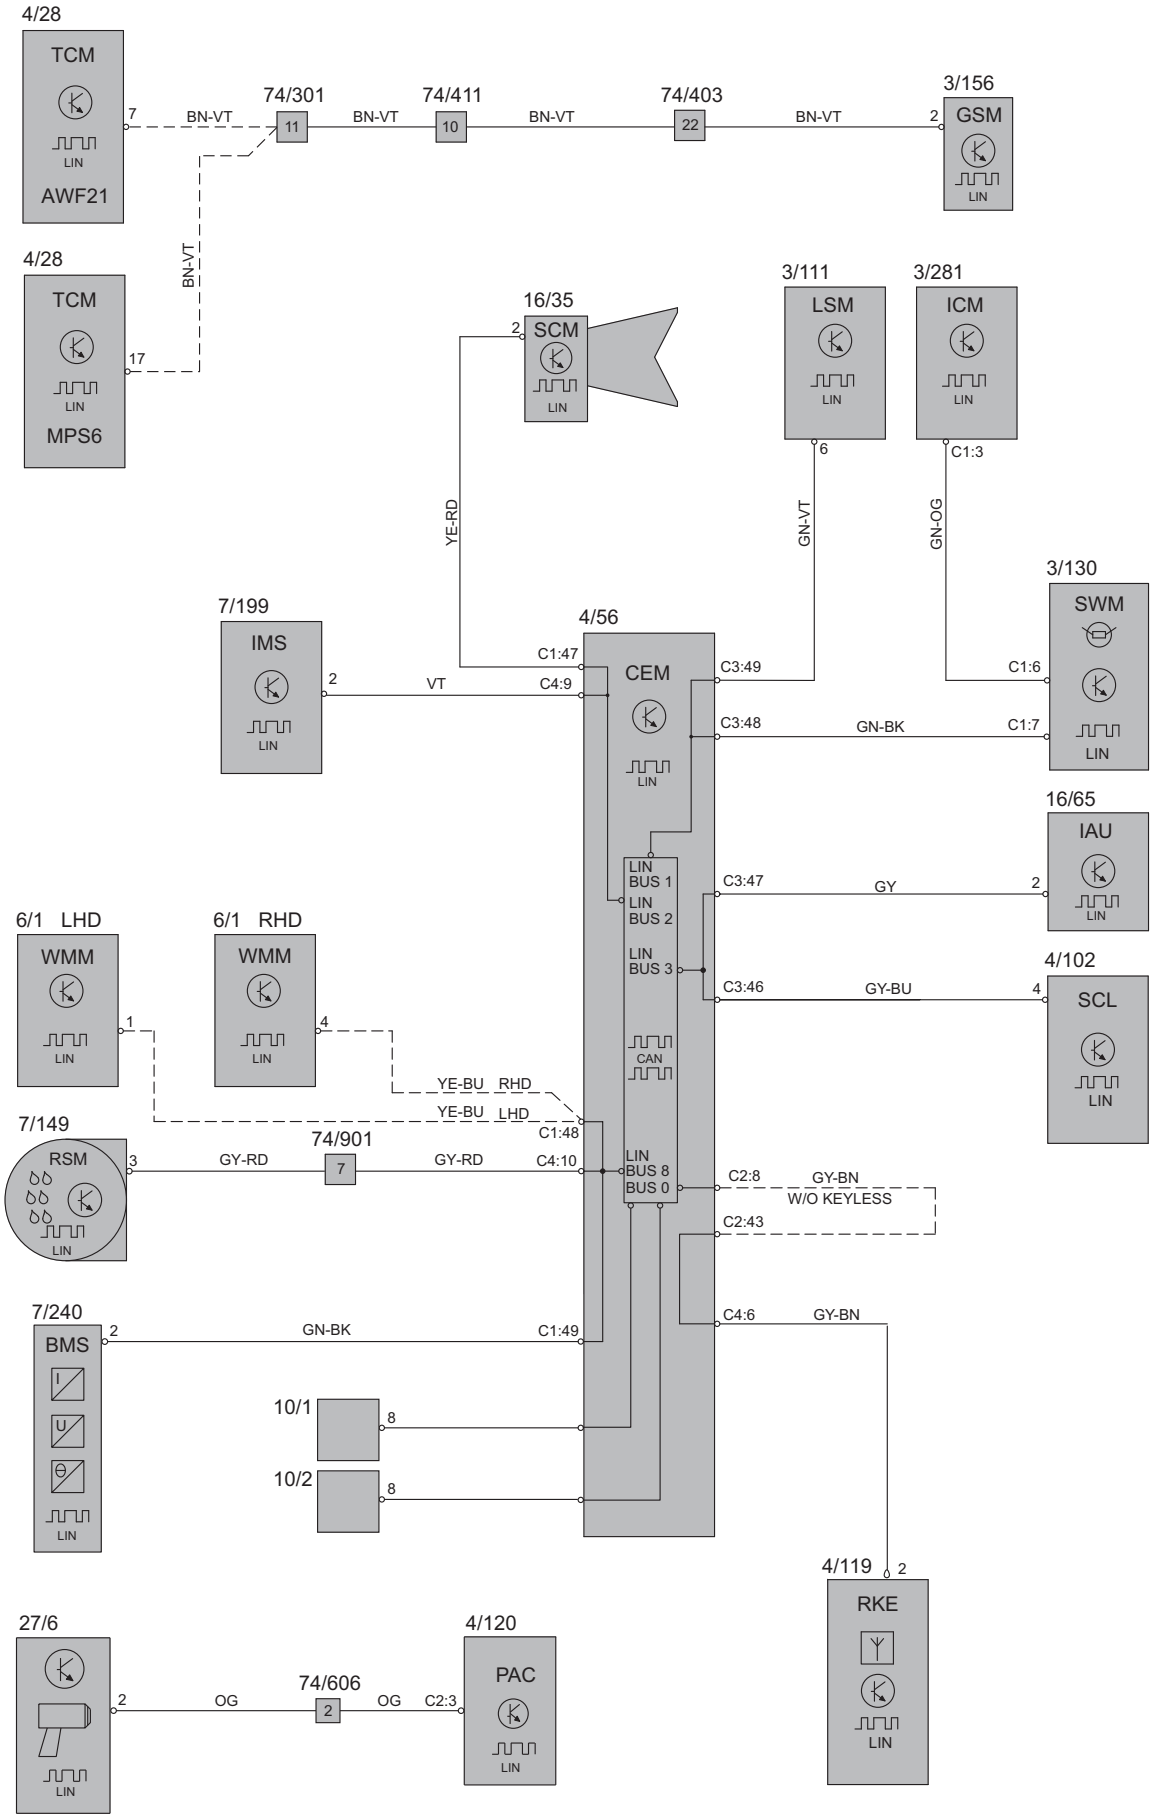

Control modules
Data communication, LIN 2:2

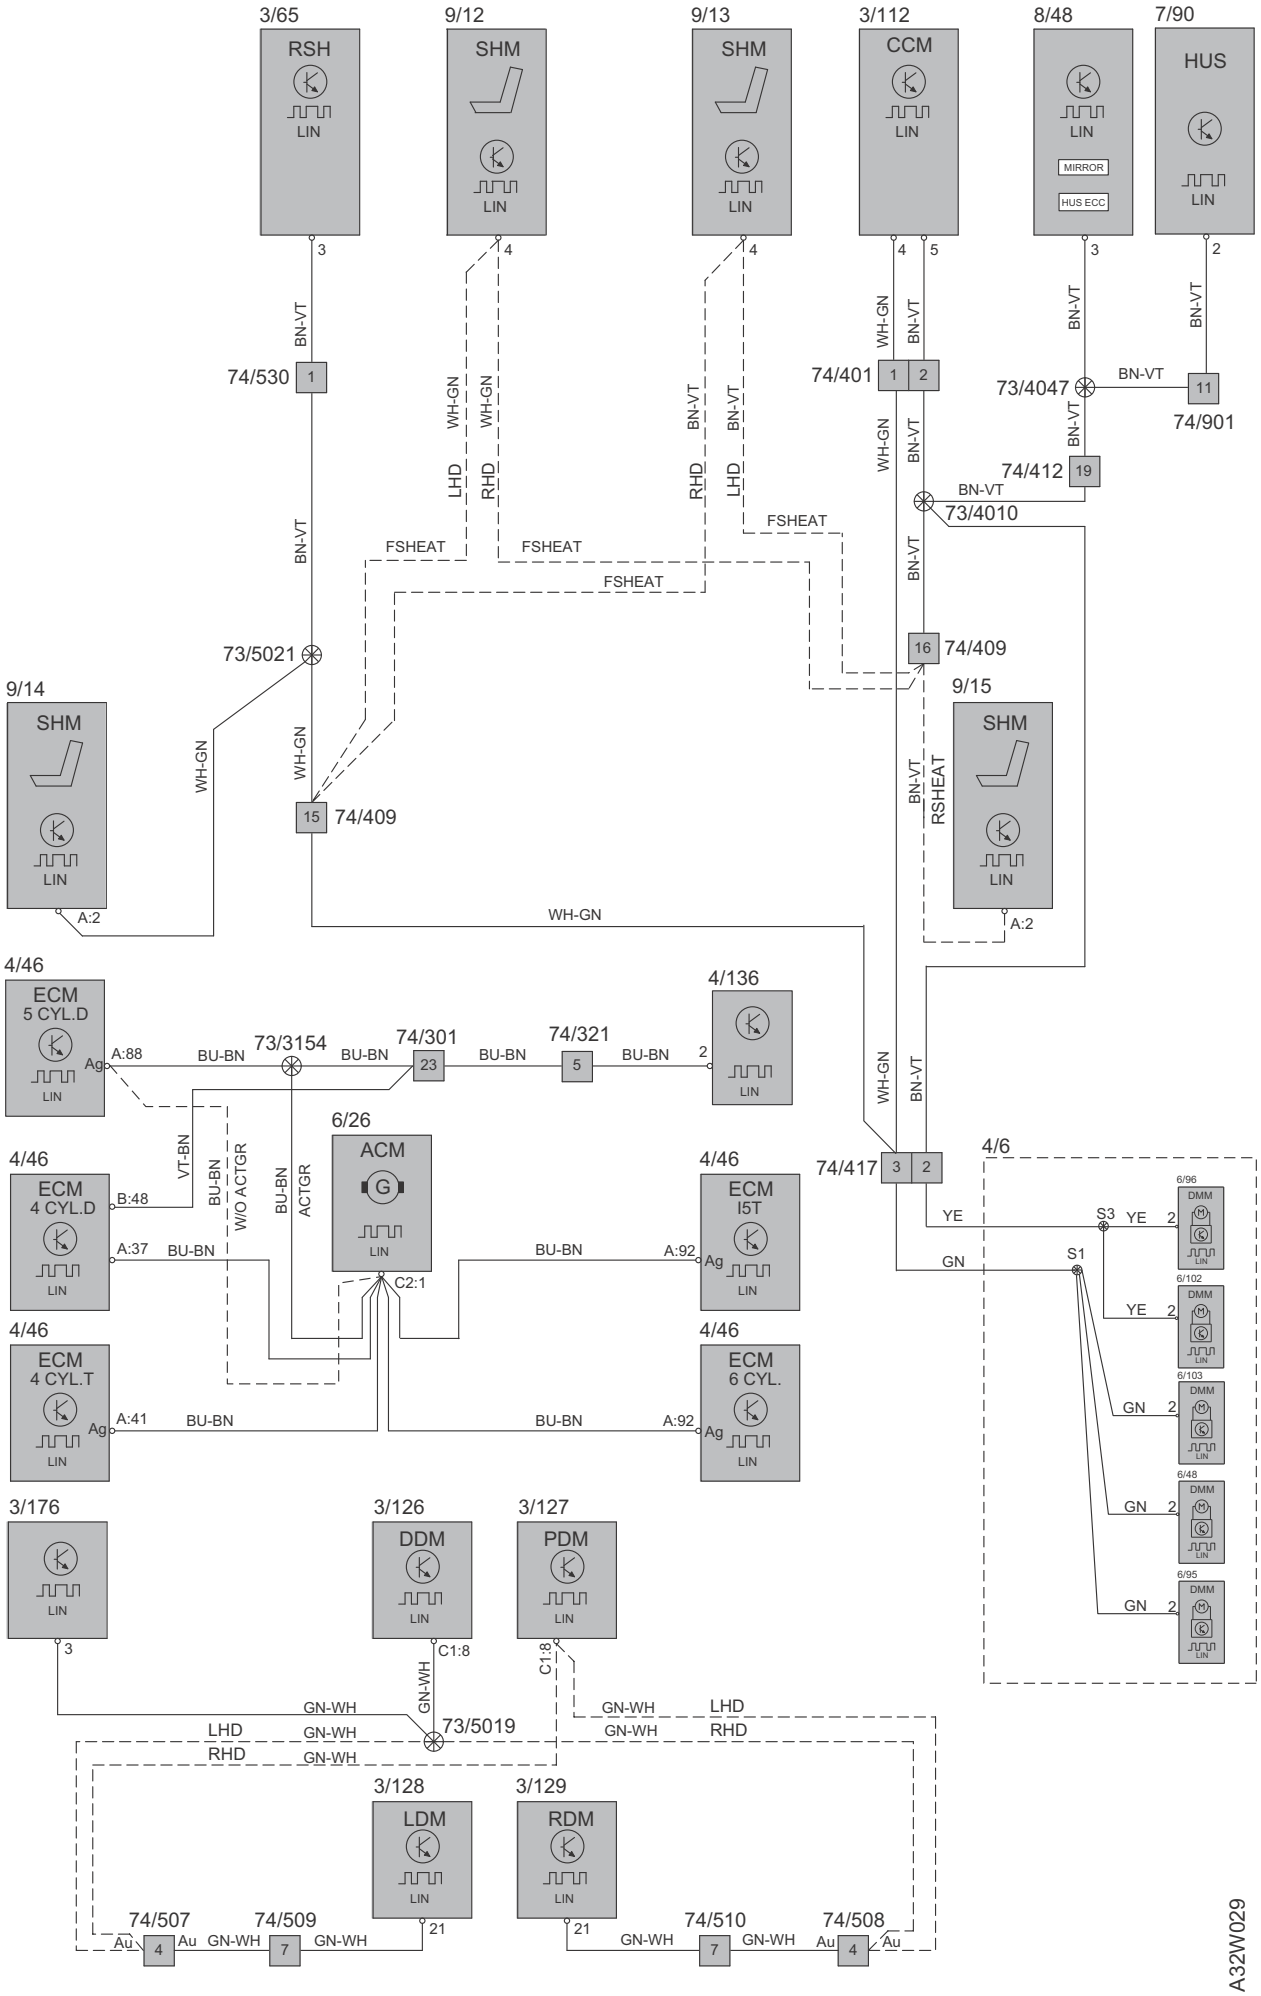

Control modules
Data communication MOST

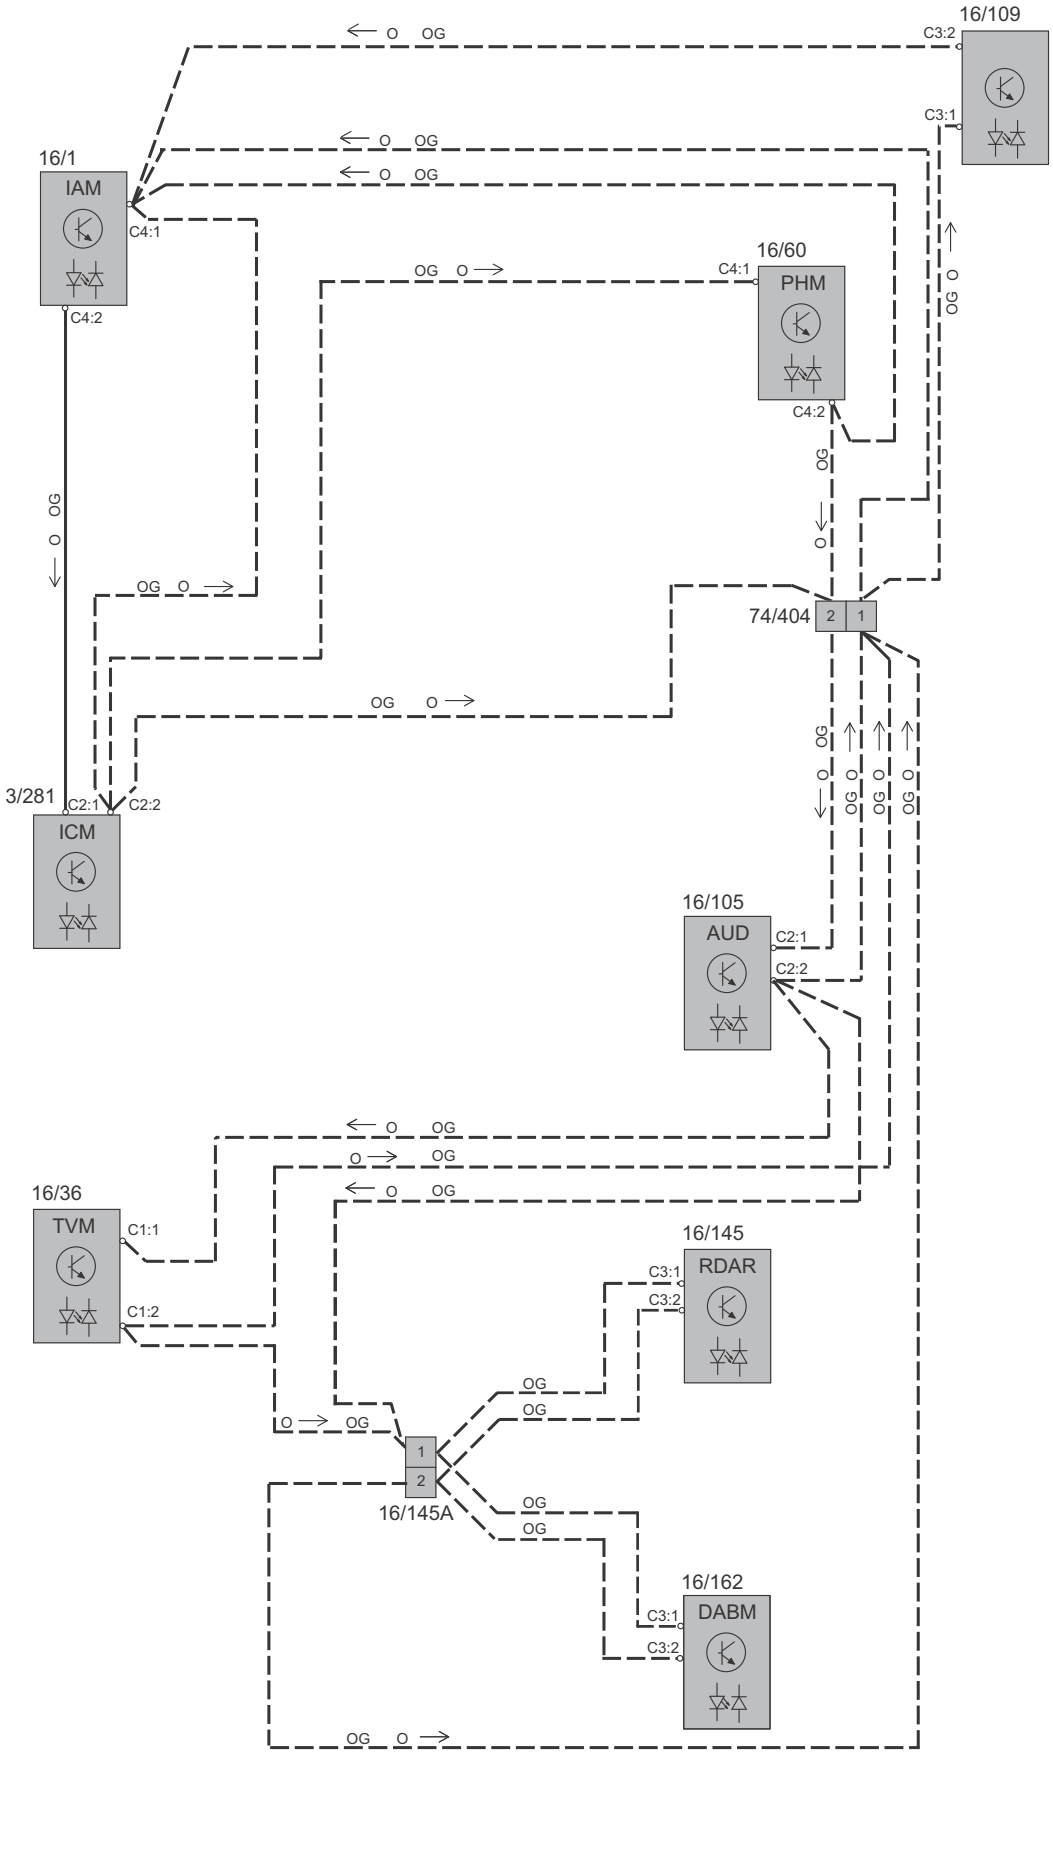

Control modules
Steering Wheel Module (SWM)

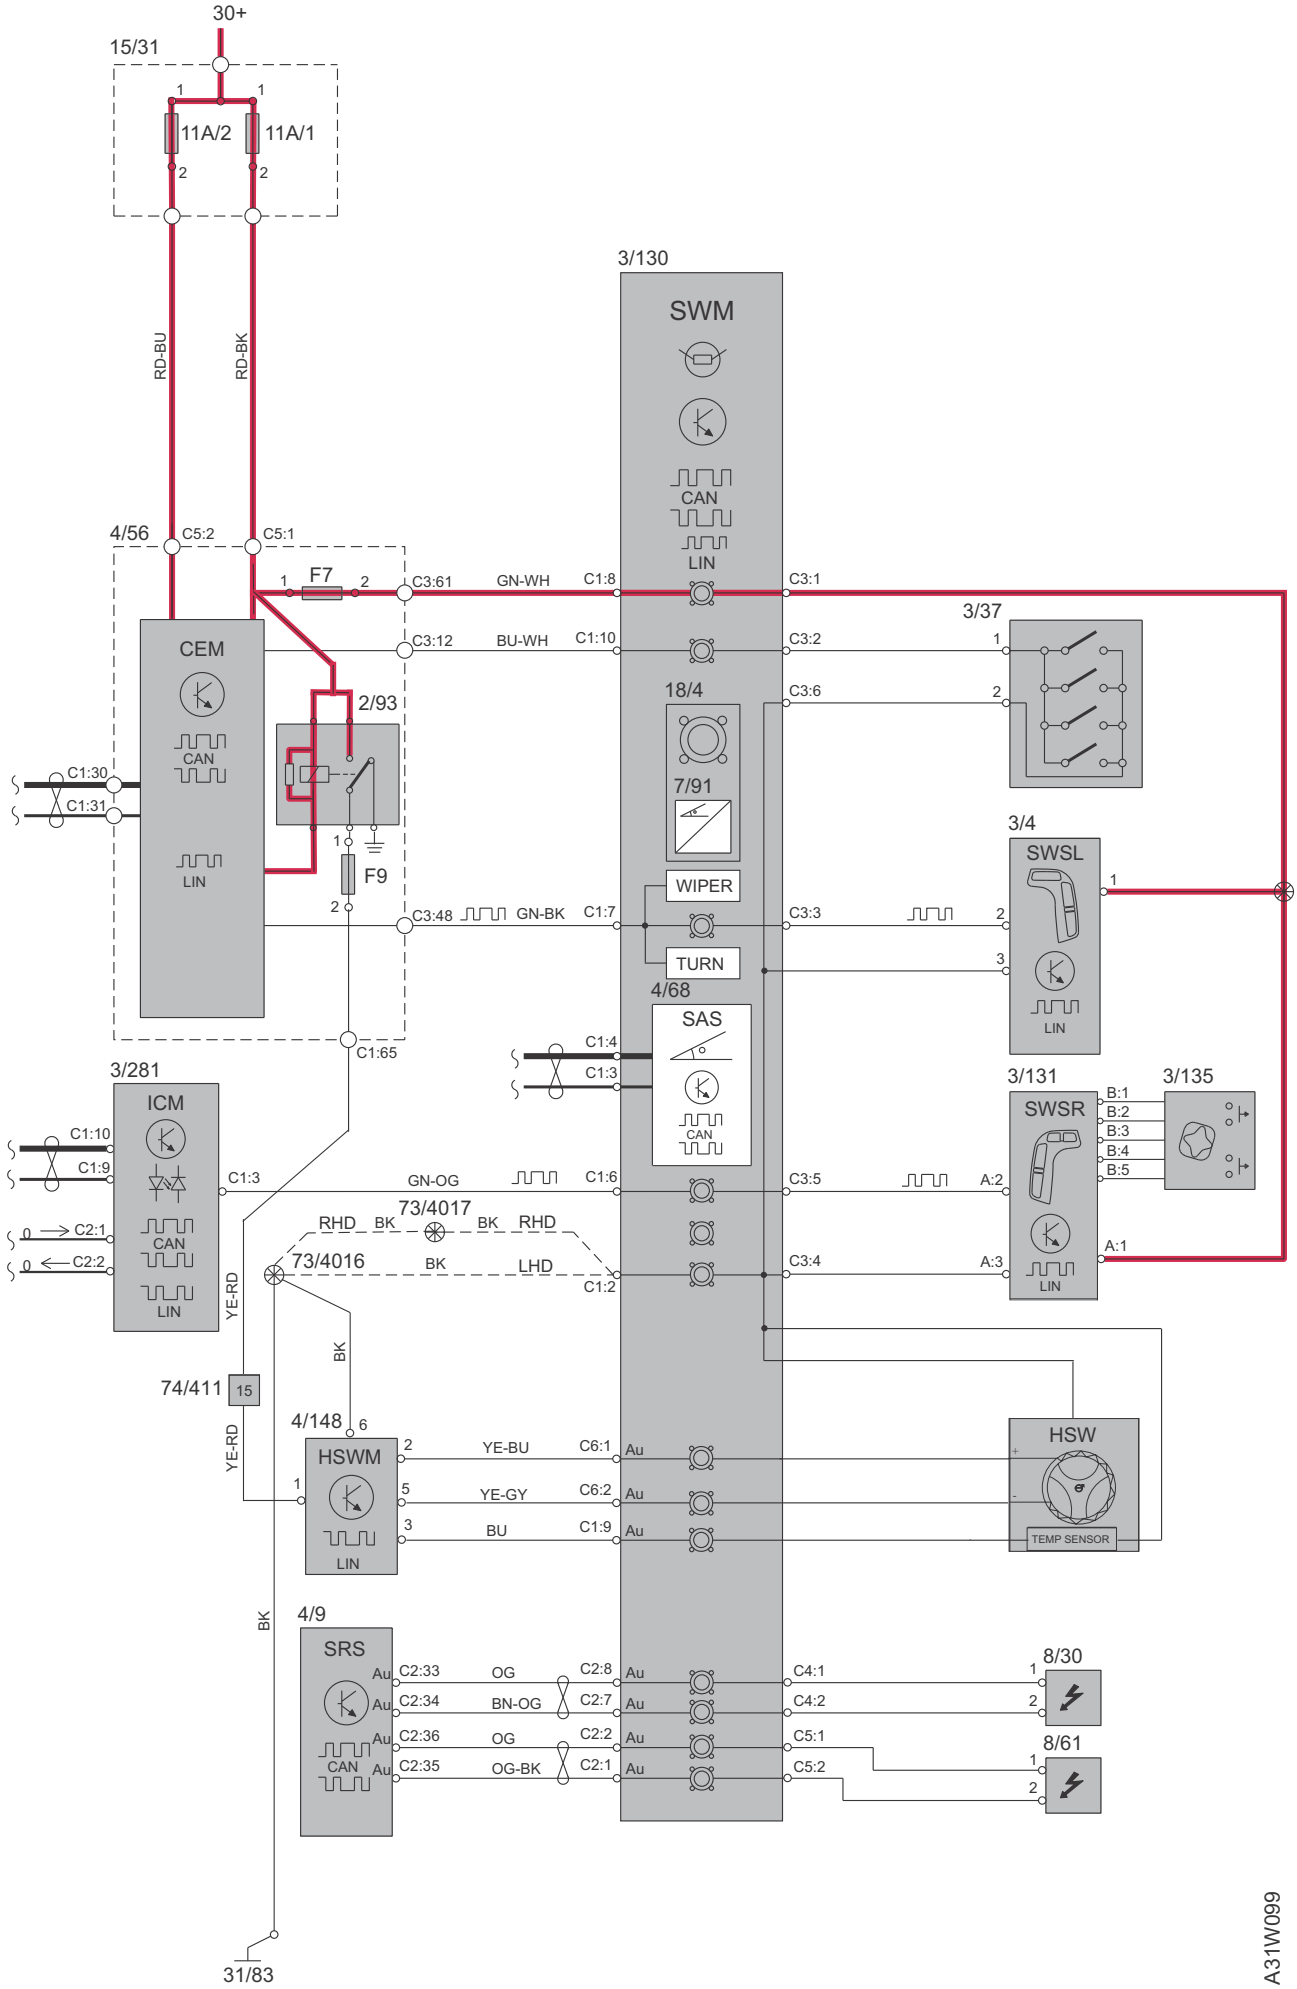

Group 26 Cooling system
Cooling fan, 4-Cyl. Turbo

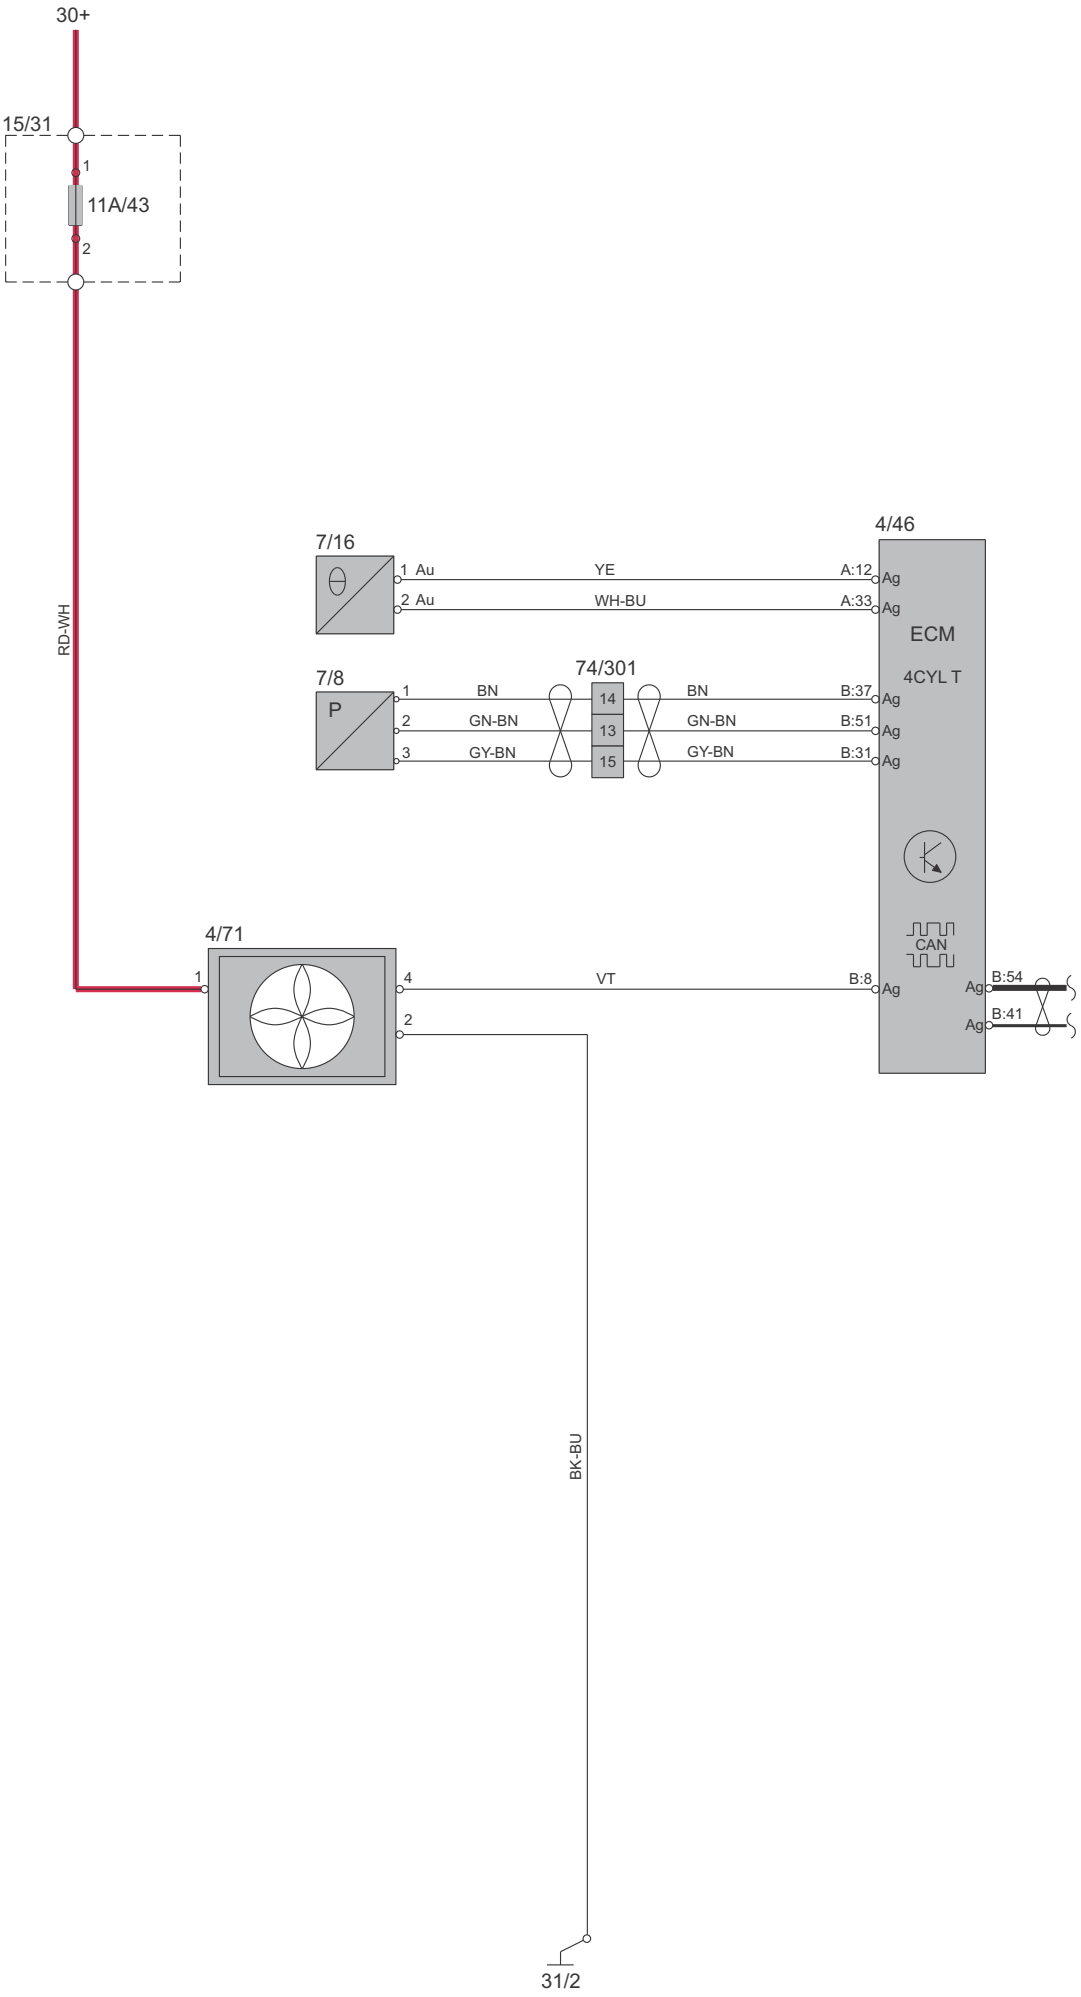

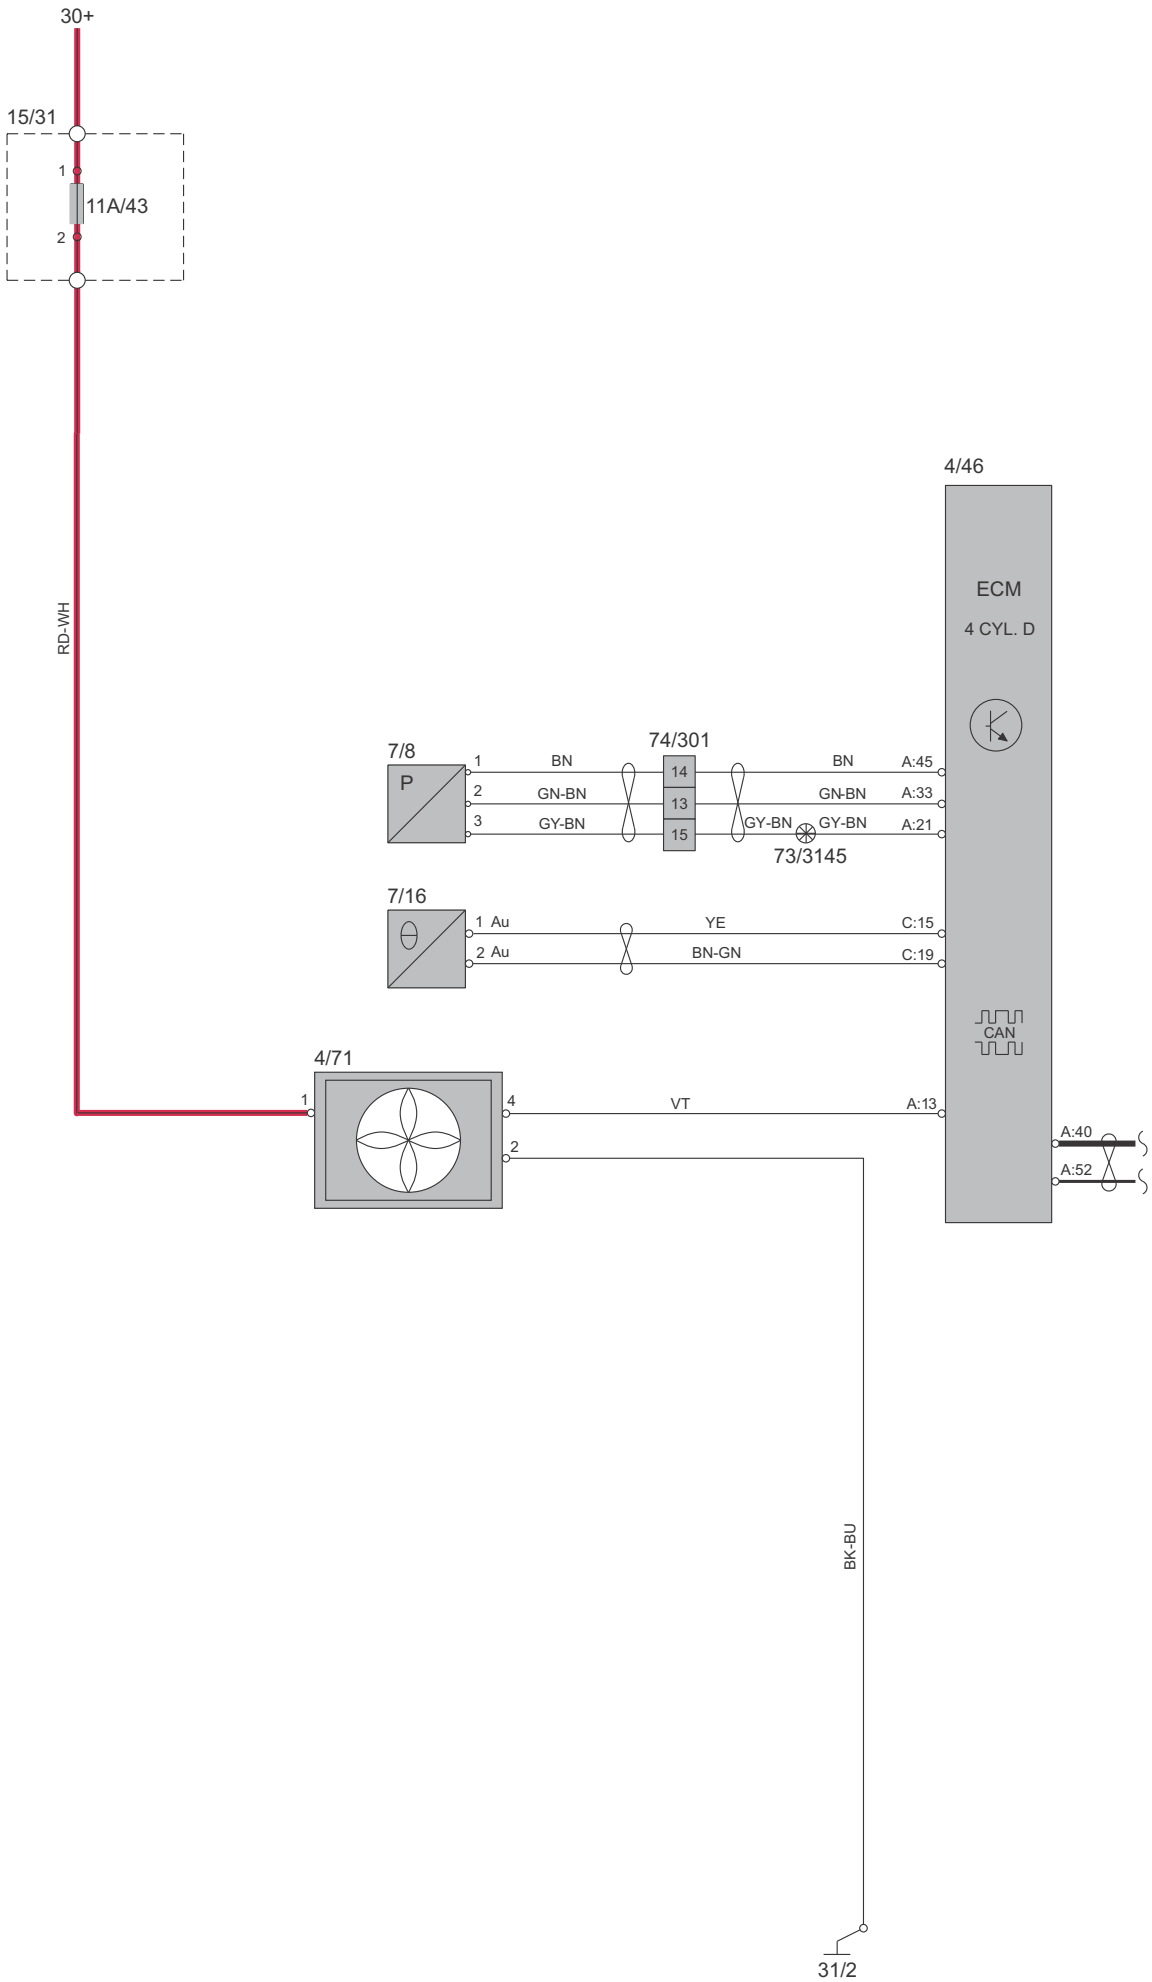
30+
15/31
1
11A/43
2
RD-WH
4/46
ECM
4 CYL. D
7/8
P
1
2
3
BN
GN-BN
GY-BN
74/301
14
13
15
BN
GN-BN
GY-BN
GY-BN
73/3145
A:45
A:33
A:21
7/16
1 Au
2 Au
YE
BN-GN
C:15
C:19
CAN
4/71
1
4
2
VT
A:13
A:40
A:52
BK-BU
31/2
A24W018

Group 26 Cooling system
Cooling fan, 5-Cyl. Diesel

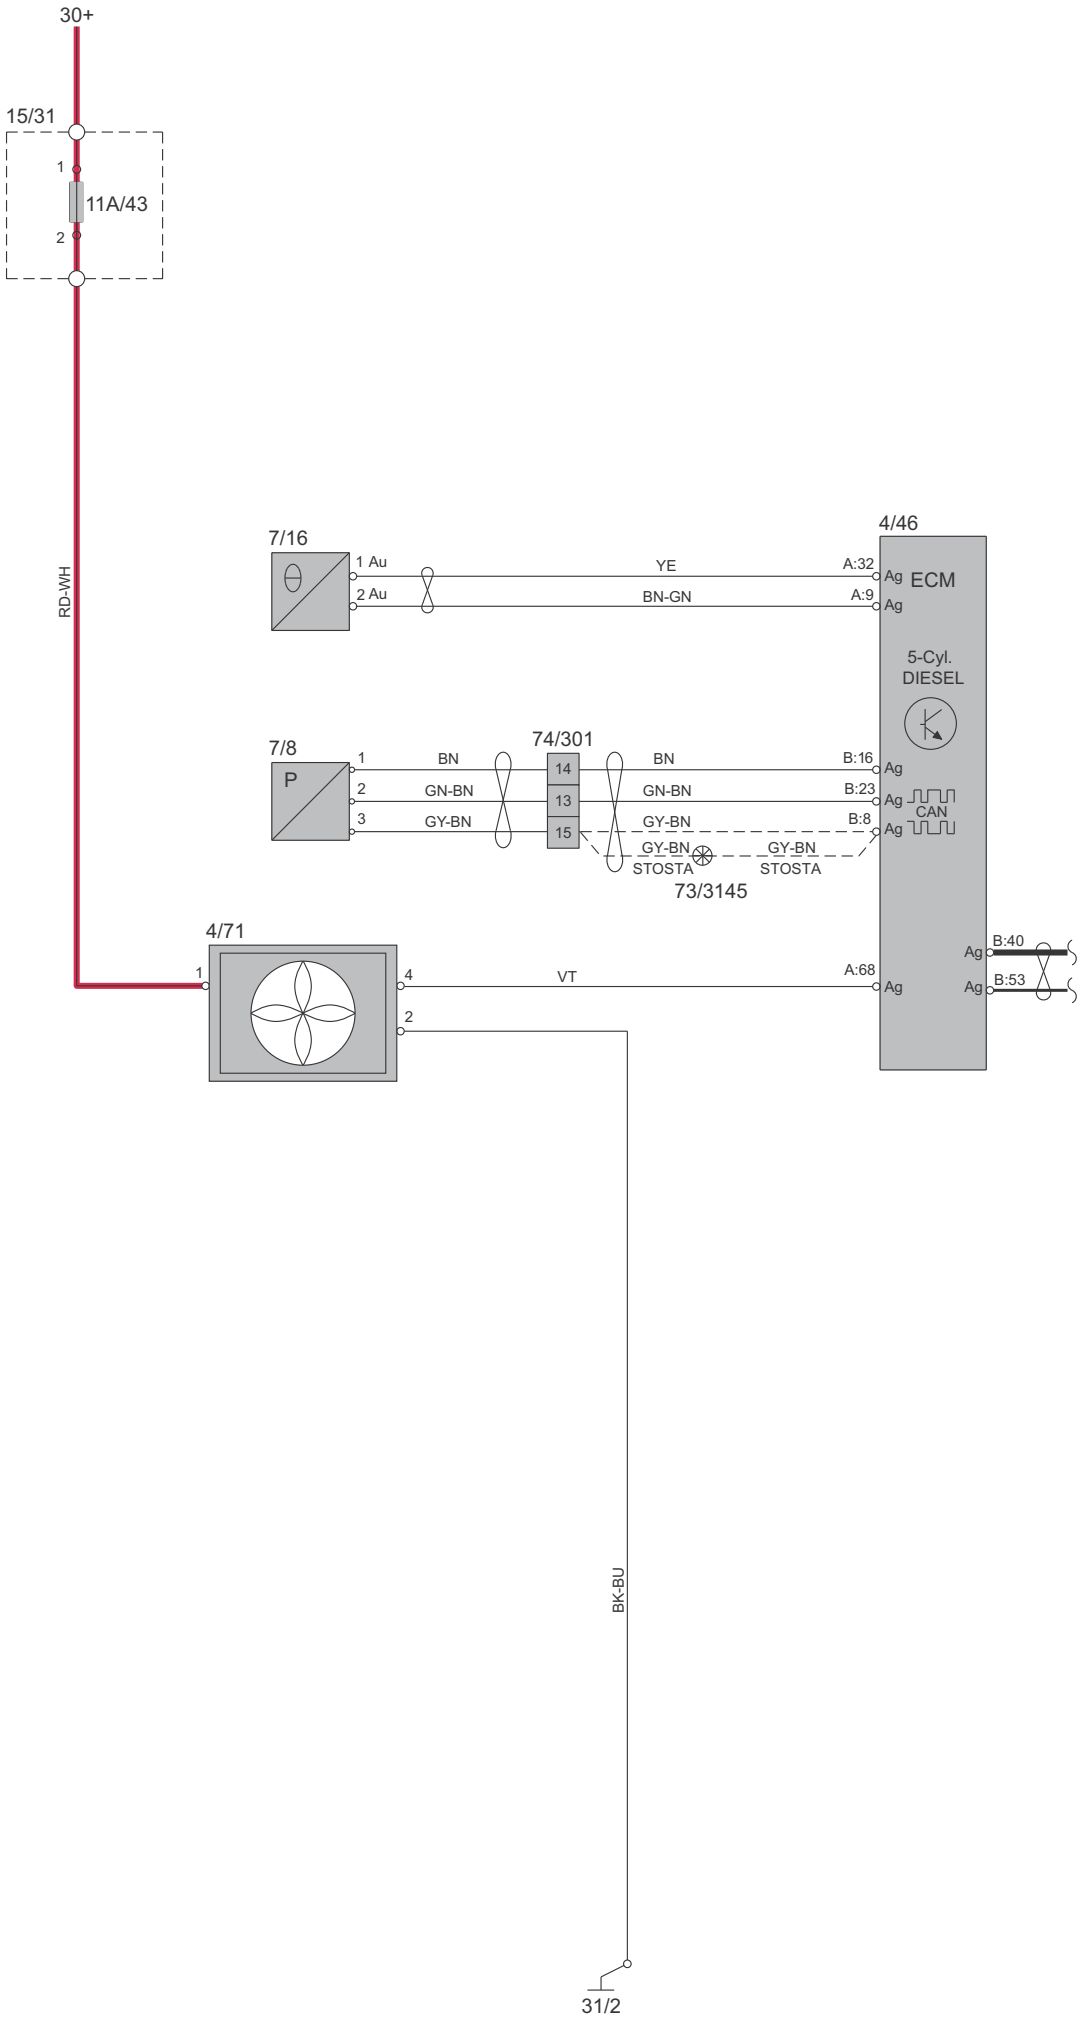

Group 26 Cooling system
Cooling fan, 5-Cyl. Turbo

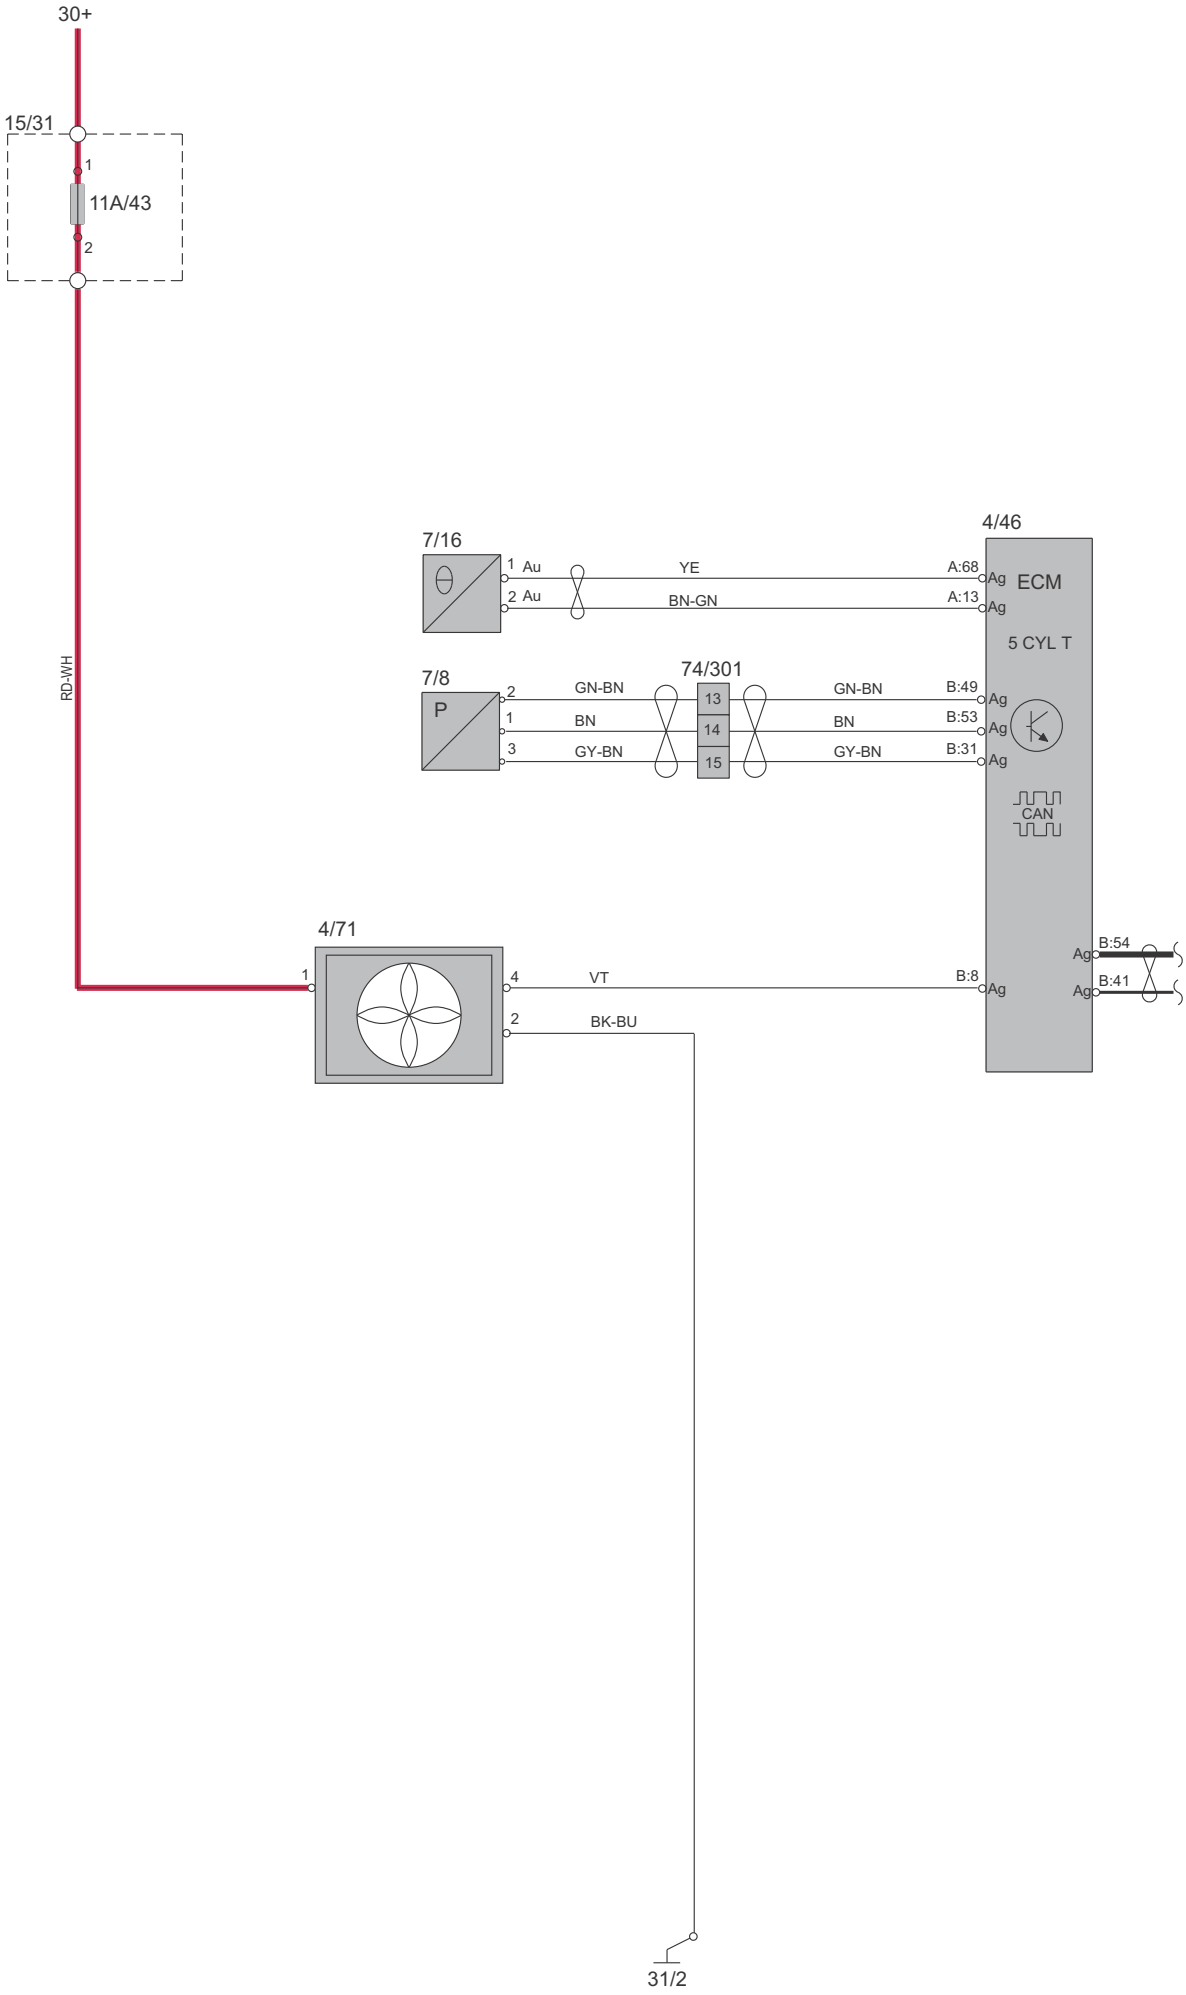

Group 26 Cooling system
Cooling fan, 6-Cyl.

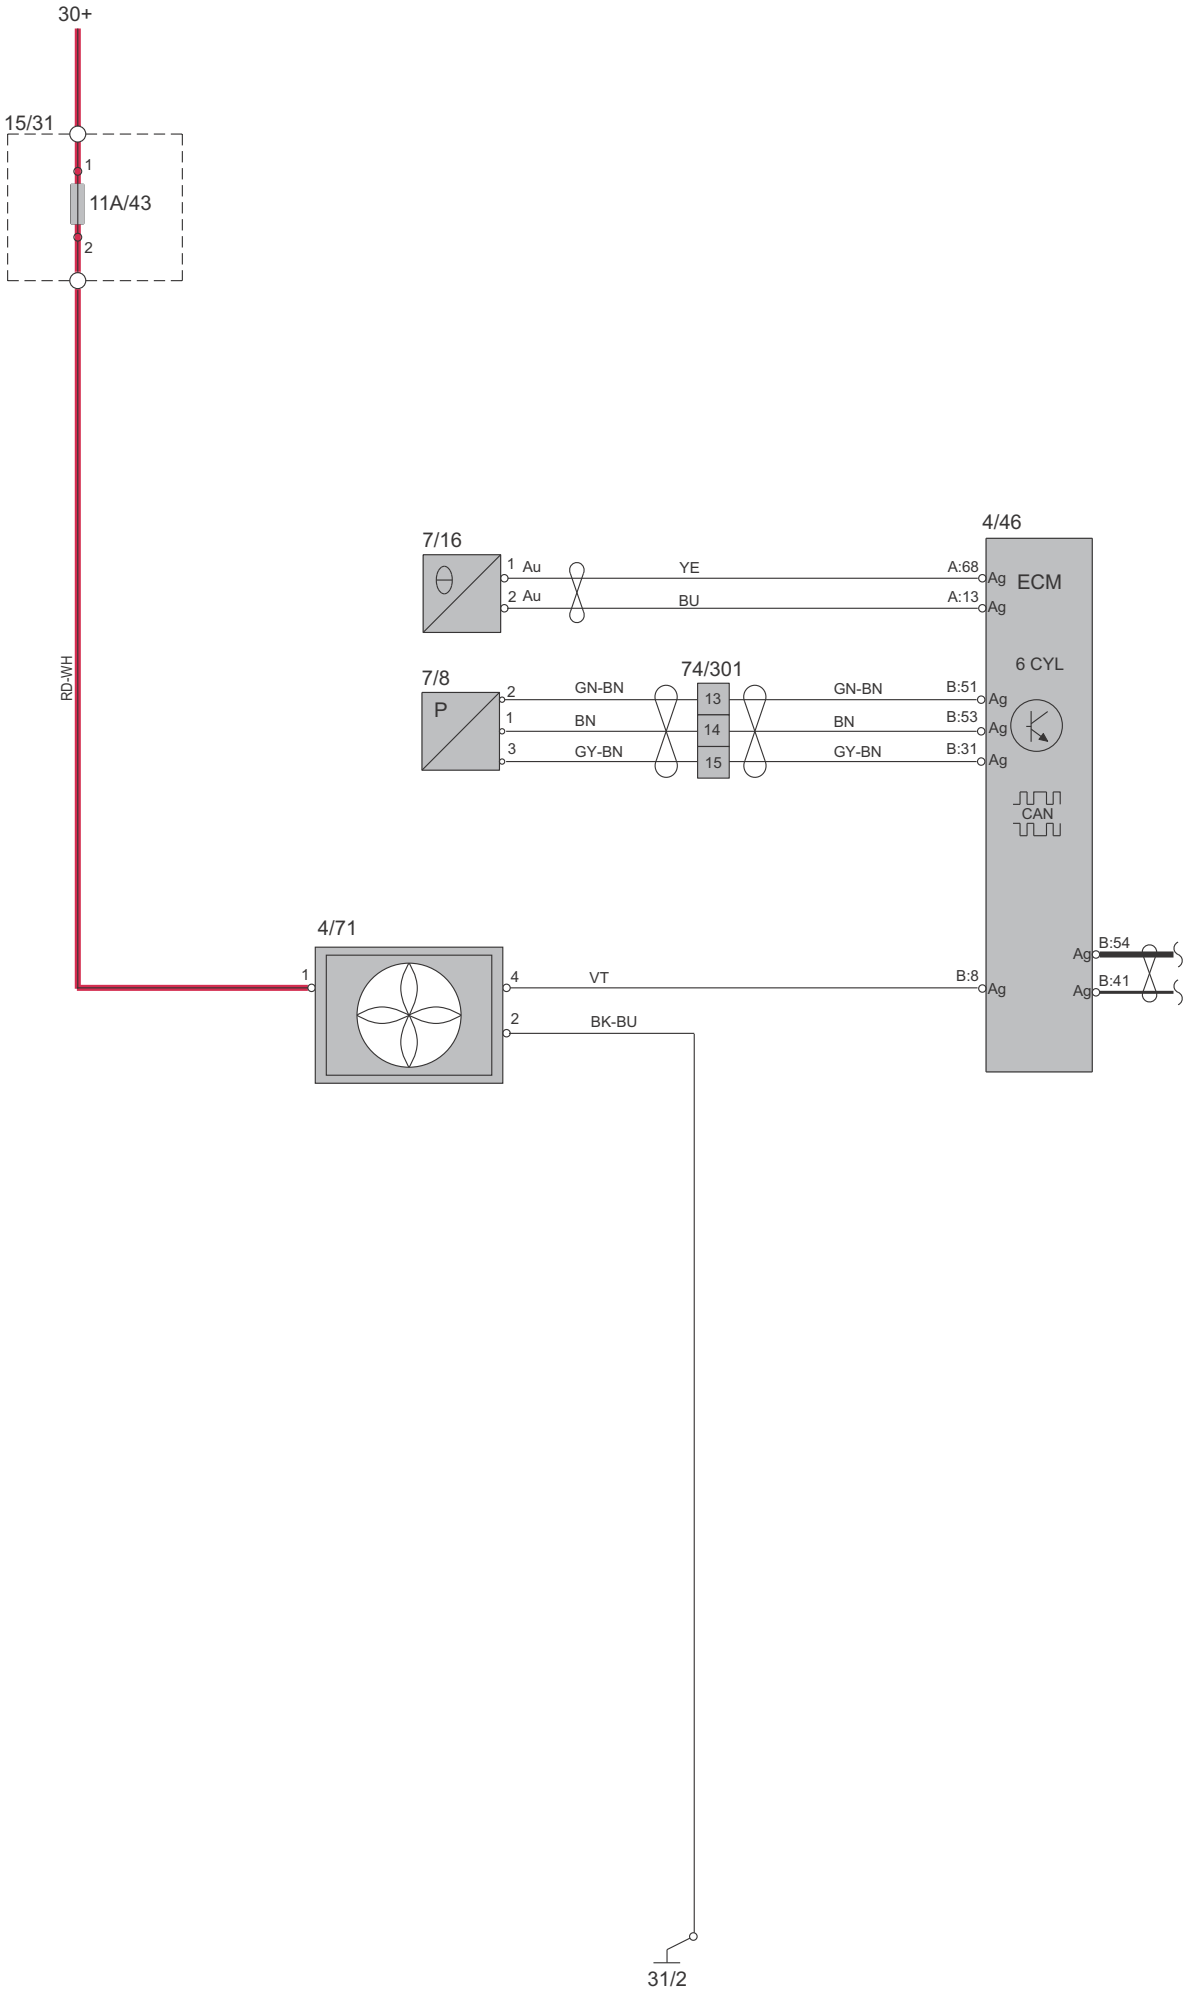

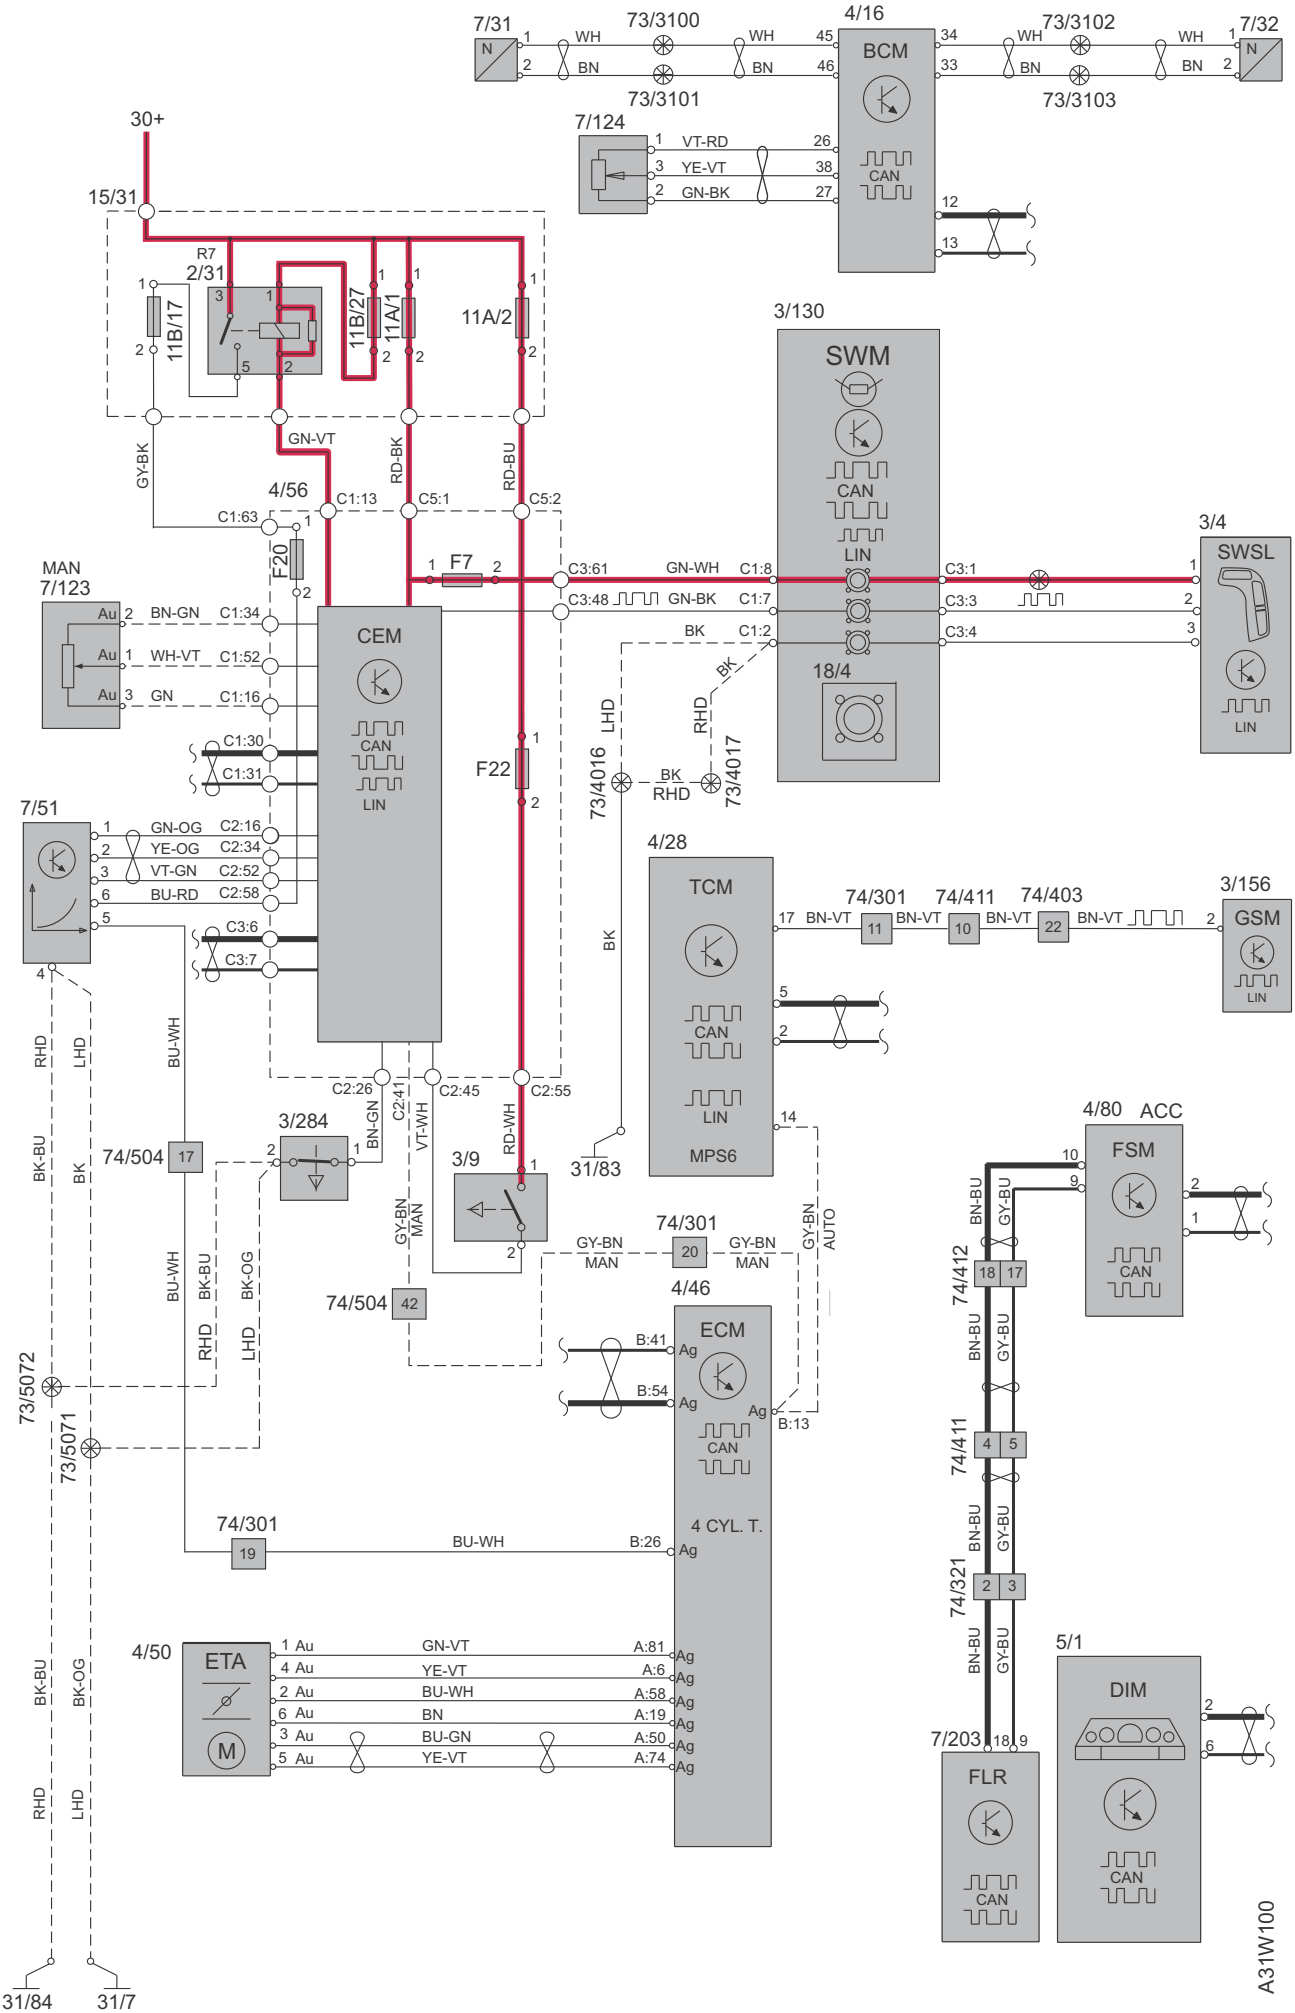
7/31
73/3100
4/16
BCM
73/3102
7/32
73/3101
73/3103
7/124
30+
15/31
R7
2/31
11B/17
11B/27
11A/1
11A/2
3/130
SWM
CAN
LIN
3/4
SWSL
MAN
7/123
CEM
F20
F7
F22
4/56
C1:63
C1:13
C5:1
C5:2
C3:61
GN-WH
C1:8
C3:48
GN-BK
C1:7
BK
C1:2
C3:1
C3:3
C3:4
18/4
73/4016
73/4017
LHD
RHD
7/51
C1:30
C1:31
C1:34
C1:52
C1:16
C2:16
C2:34
C2:52
C2:58
C3:6
C3:7
4/28
TCM
MPS6
74/301
74/411
74/403
3/156
GSM
C2:26
C2:41
C2:45
C2:55
3/284
3/9
74/504
31/83
74/412
4/80
ACC
FSM
4/46
ECM
4 CYL. T.
74/321
5/1
DIM
7/203
FLR
4/50
ETA
73/5072
73/5071
31/84
31/7
A31W100

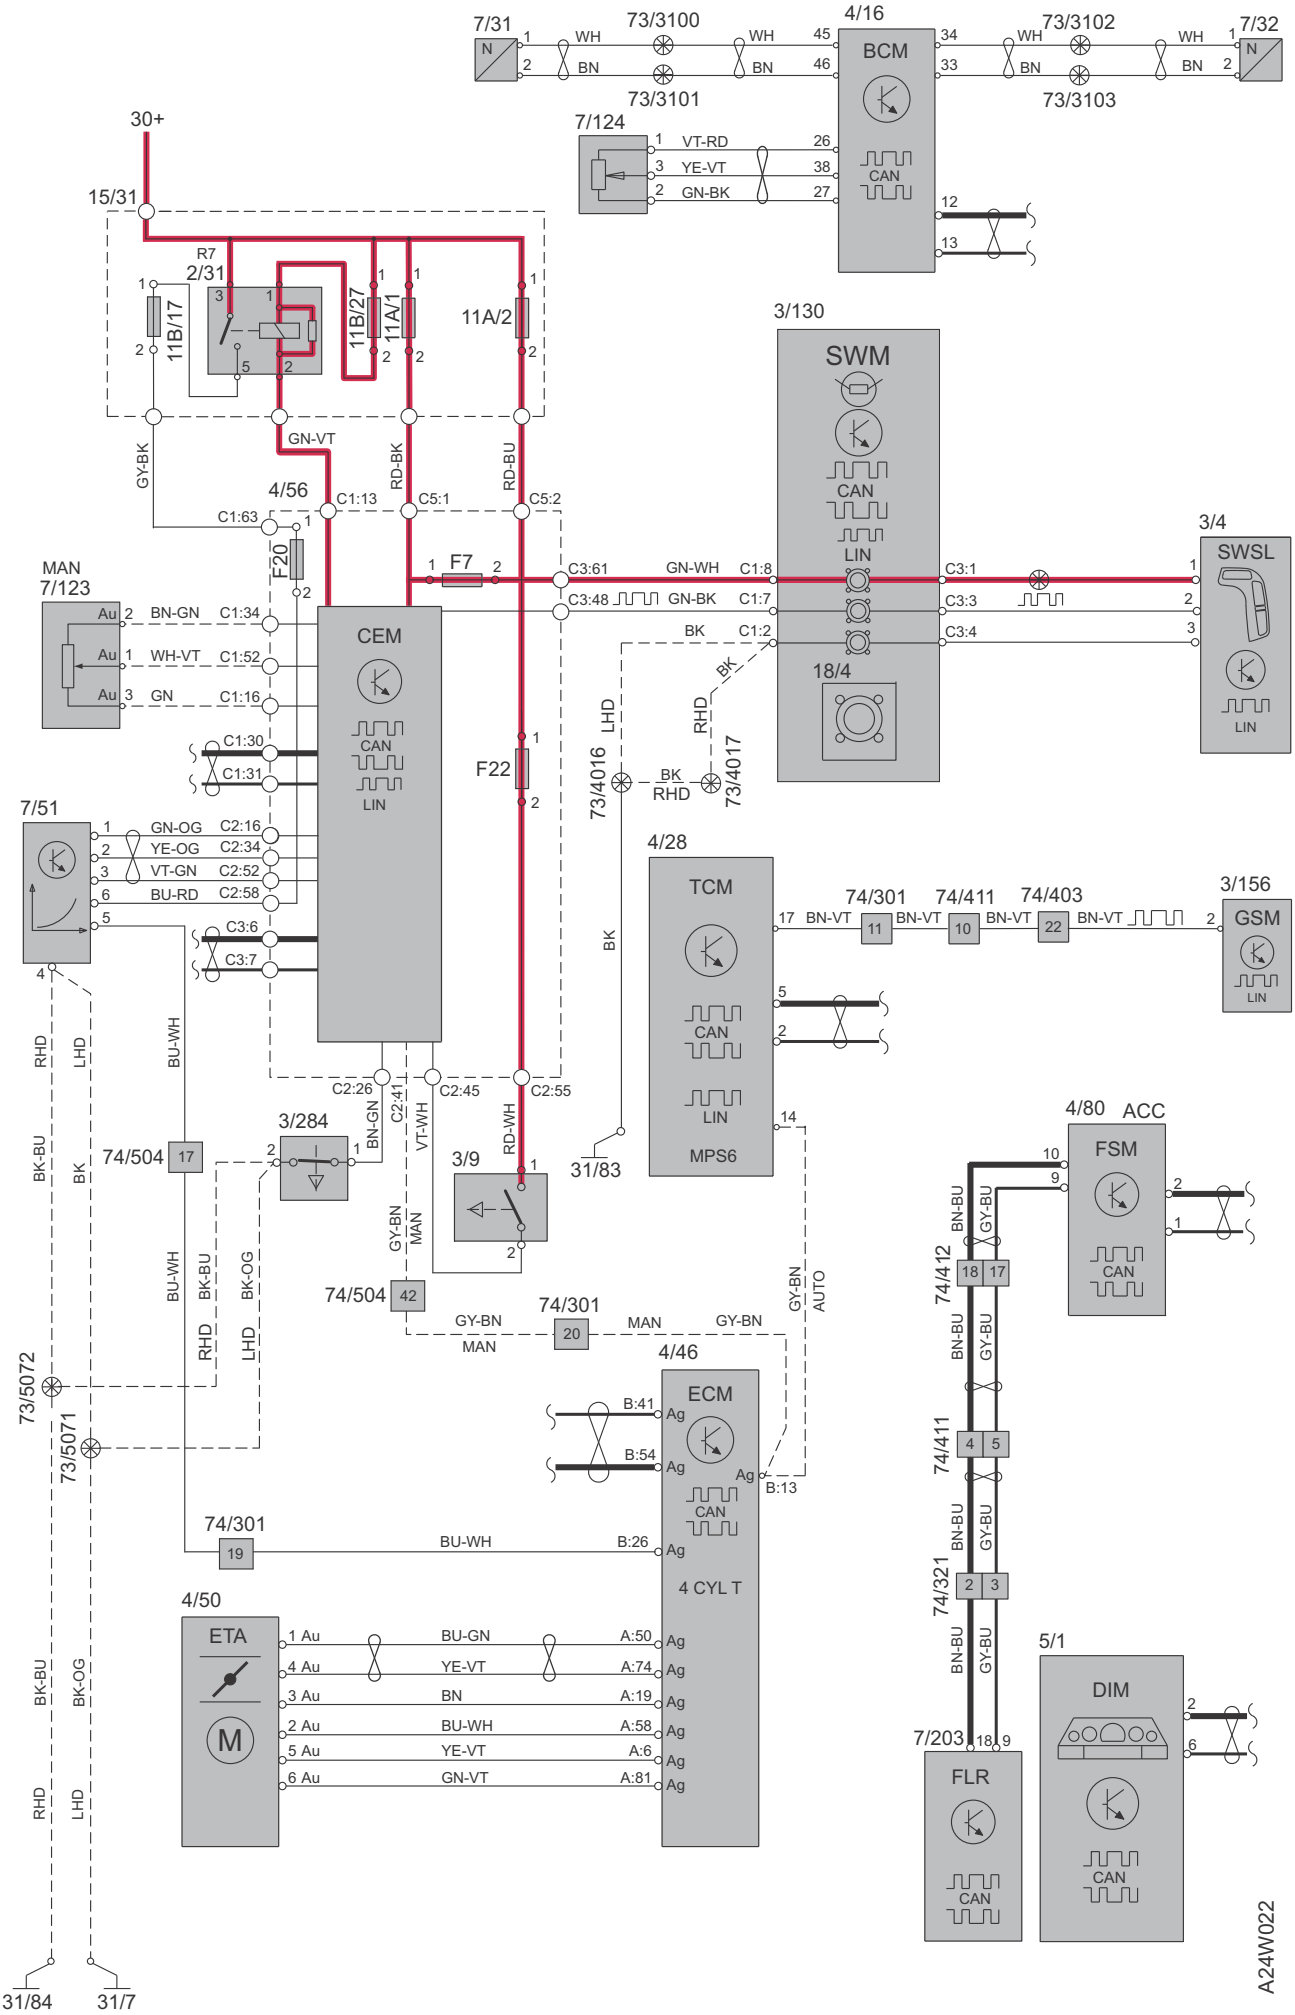
7/31
73/3100
4/16
BCM
73/3102
7/32
73/3101
73/3103
7/124
30+
15/31
R7
2/31
11B/17
11B/27
11A/1
11A/2
3/130
SWM
CAN
LIN
GN-VT
GY-BK
RD-BK
RD-BU
4/56
C1:63
C1:13
C5:1
C5:2
F20
F7
C3:61
GN-WH
C1:8
C3:48
GN-BK
C1:7
BK
C1:2
C3:1
C3:3
C3:4
3/4
SWSL
MAN
7/123
CEM
18/4
C1:34
BN-GN
C1:52
WH-VT
C1:16
GN
C1:30
C1:31
F22
73/4016
73/4017
LHD
RHD
BK
7/51
GN-OG
C2:16
YE-OG
C2:34
VT-GN
C2:52
BU-RD
C2:58
C3:6
C3:7
4/28
TCM
MPS6
74/301
74/411
74/403
3/156
GSM
BN-VT
C2:26
C2:45
C2:55
C2:41
VT-WH
BN-GN
RD-WH
3/284
3/9
31/83
74/504
17
42
20
19
GY-BN
MAN
AUTO
4/80
ACC
FSM
74/412
74/411
74/321
BN-BU
GY-BU
4/46
ECM
B:41
B:54
B:13
B:26
4 CYL T
4/50
ETA
M
1 Au
4 Au
3 Au
2 Au
5 Au
6 Au
BU-GN
YE-VT
BN
BU-WH
YE-VT
GN-VT
A:50
A:74
A:19
A:58
A:6
A:81
5/1
DIM
7/203
FLR
73/5072
73/5071
BU-WH
BK-BU
BK-OG
RHD
LHD
31/84
31/7
A24W022

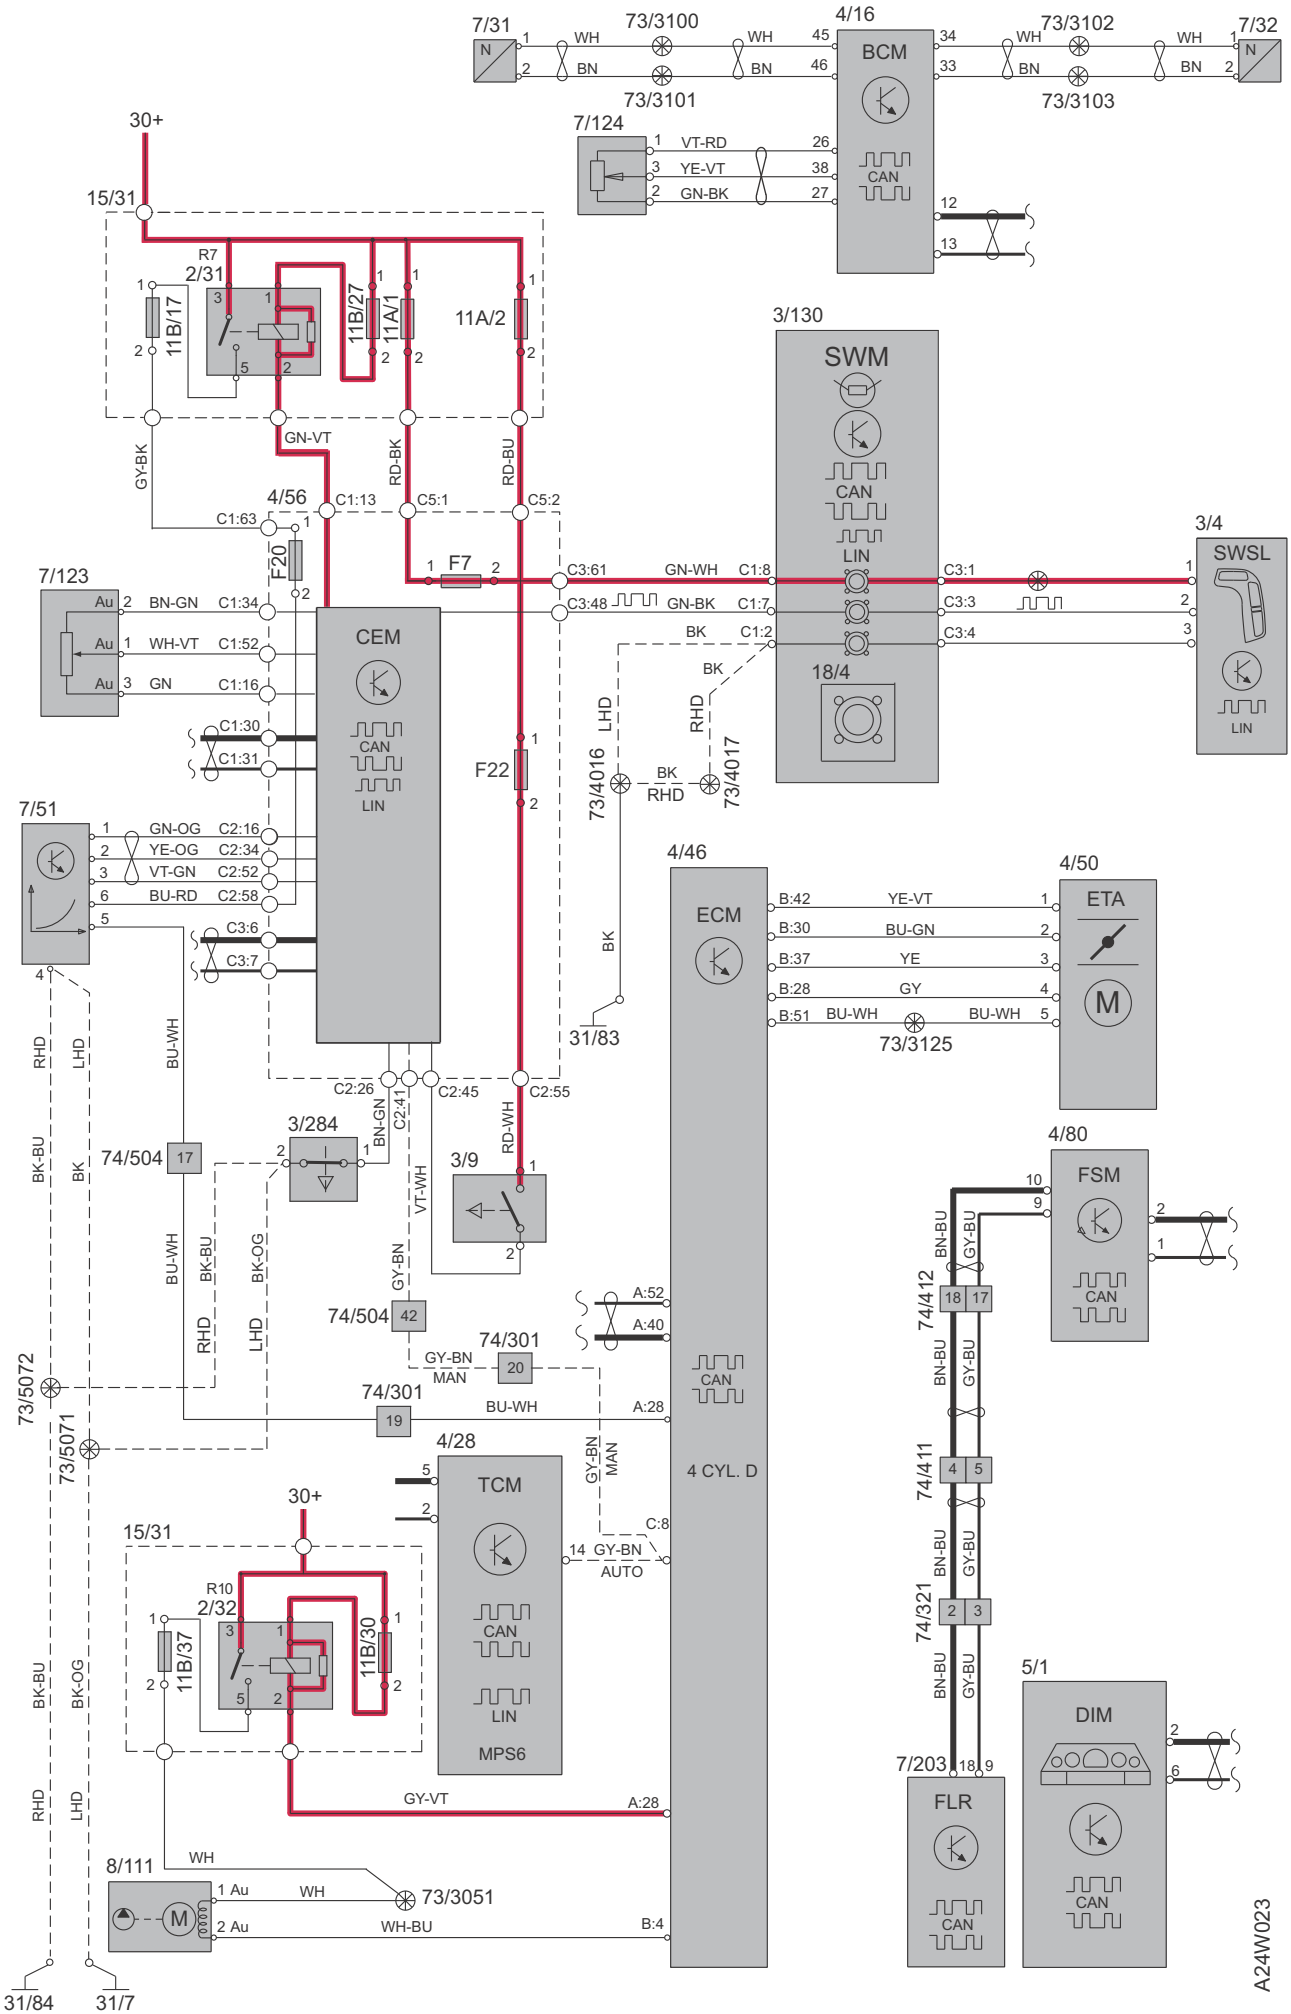
7/31
73/3100
4/16
BCM
73/3102
7/32
73/3101
73/3103
7/124
VT-RD
YE-VT
GN-BK
CAN
30+
15/31
R7
2/31
11B/17
11B/27
11A/1
11A/2
GN-VT
GY-BK
RD-BK
RD-BU
3/130
SWM
CAN
LIN
3/4
SWSL
4/56
C1:63
C1:13
C5:1
C5:2
F20
F7
C3:61
GN-WH
C1:8
C3:48
GN-BK
C1:7
C3:1
C3:3
C3:4
BK
C1:2
18/4
7/123
BN-GN
C1:34
WH-VT
C1:52
GN
C1:16
C1:30
C1:31
CEM
F22
73/4016
73/4017
LHD
RHD
7/51
GN-OG
C2:16
YE-OG
C2:34
VT-GN
C2:52
BU-RD
C2:58
C3:6
C3:7
4/46
ECM
4/50
ETA
B:42
YE-VT
B:30
BU-GN
B:37
YE
B:28
GY
B:51
BU-WH
73/3125
31/83
C2:26
C2:41
C2:45
C2:55
BN-GN
RD-WH
3/284
3/9
74/504
17
42
VT-WH
GY-BN
BU-WH
BK-BU
BK-OG
RHD
LHD
BK
A:52
A:40
74/301
20
19
MAN
BU-WH
A:28
4/80
FSM
74/412
74/411
74/321
18
17
4
5
2
3
10
9
1
73/5072
73/5071
4/28
TCM
4 CYL. D
C:8
14
AUTO
30+
15/31
R10
2/32
11B/37
11B/30
MPS6
GY-VT
5/1
DIM
7/203
FLR
8/111
1 Au
2 Au
WH
WH-BU
73/3051
B:4
31/84
31/7
A24W023

Group 27 Engine controls
Cruise control 5-Cyl. Diesel

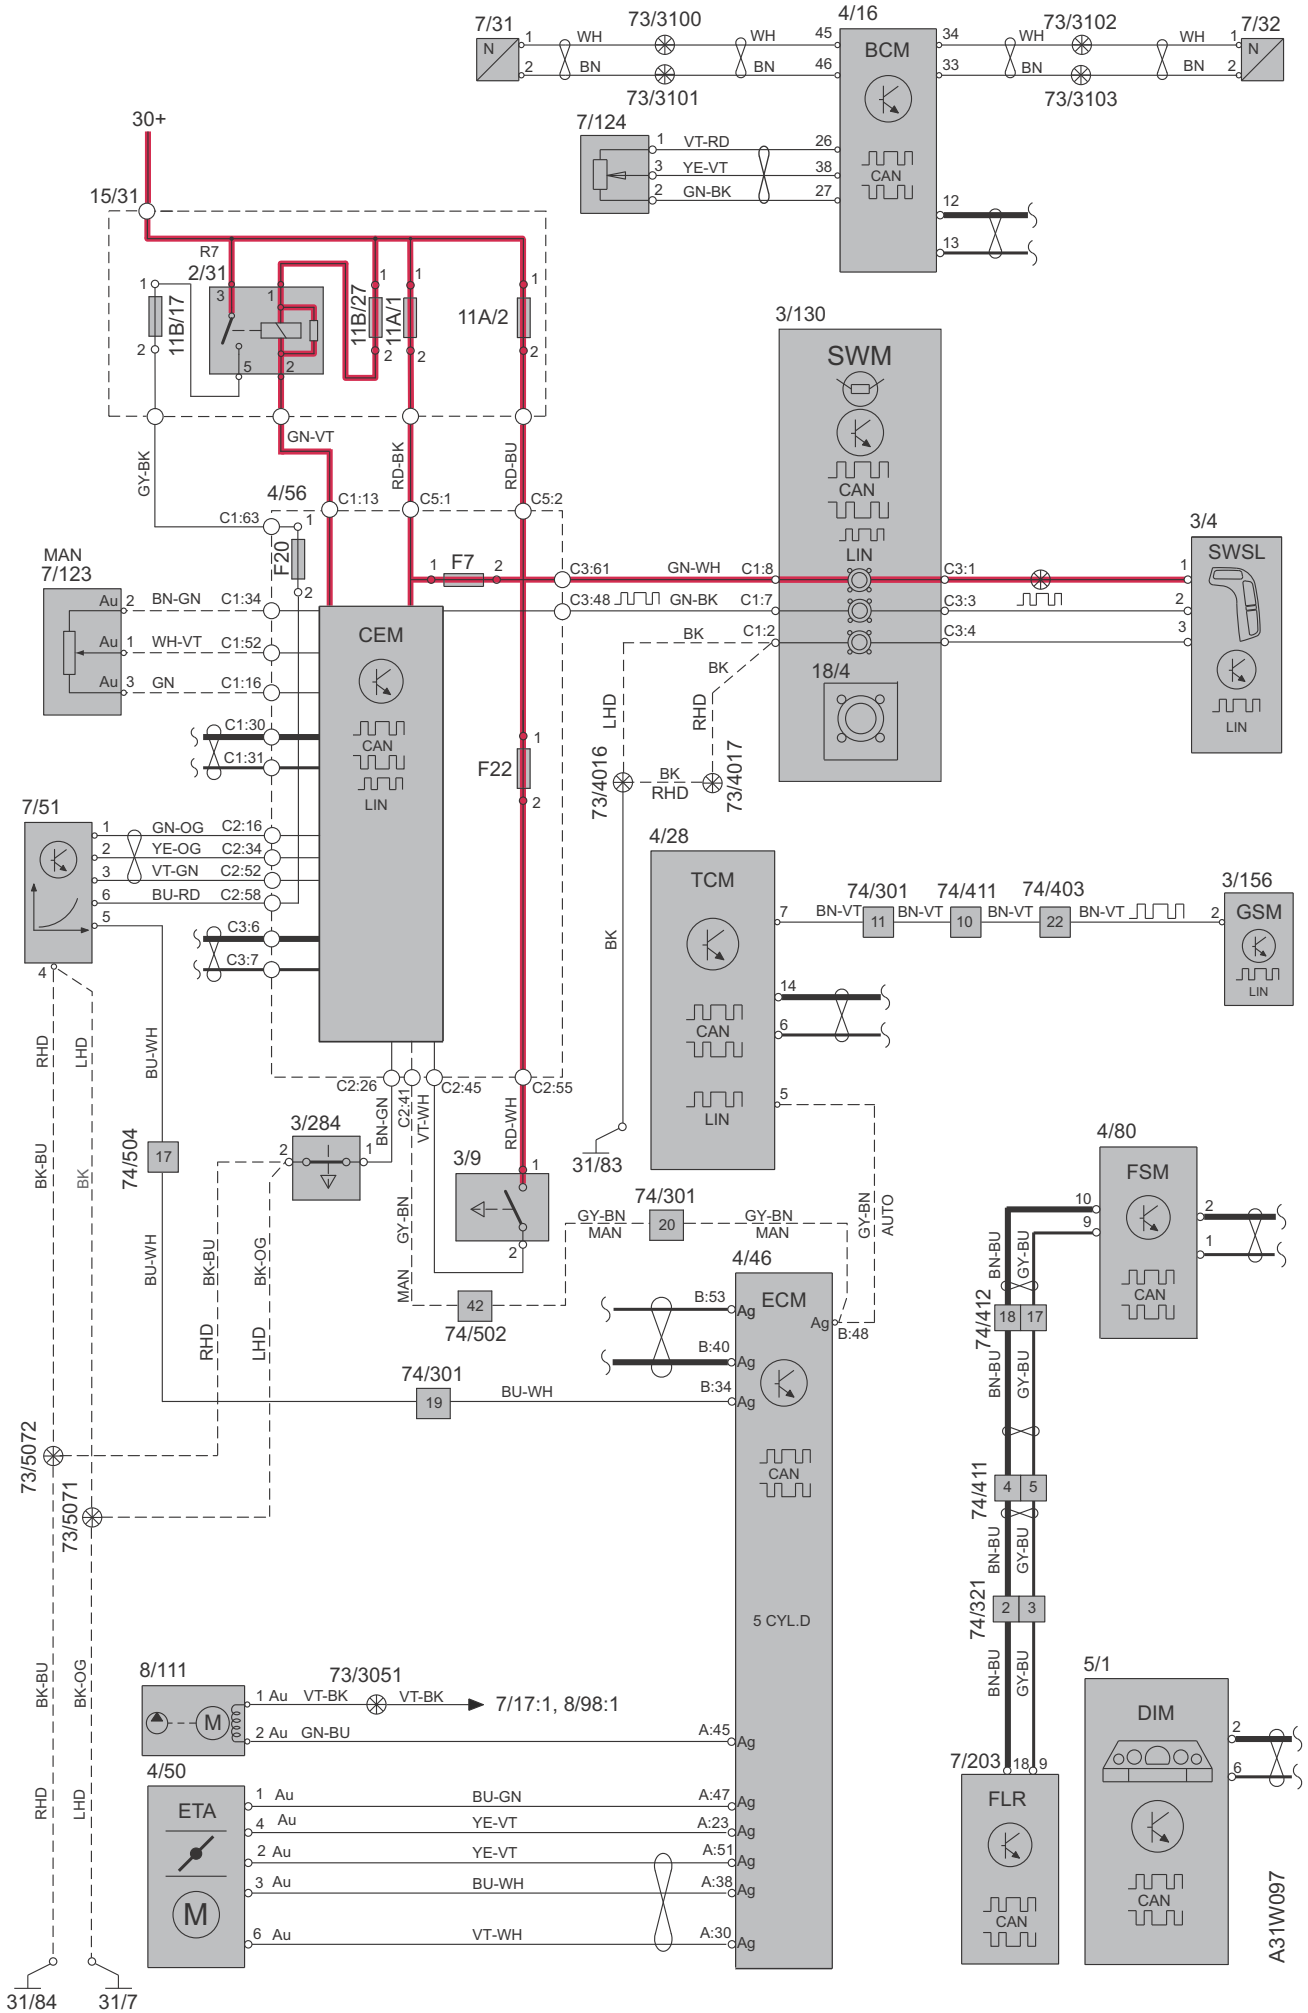

Group 27 Engine controls
Cruise control 5-Cyl. Turbo & 6-Cyl.

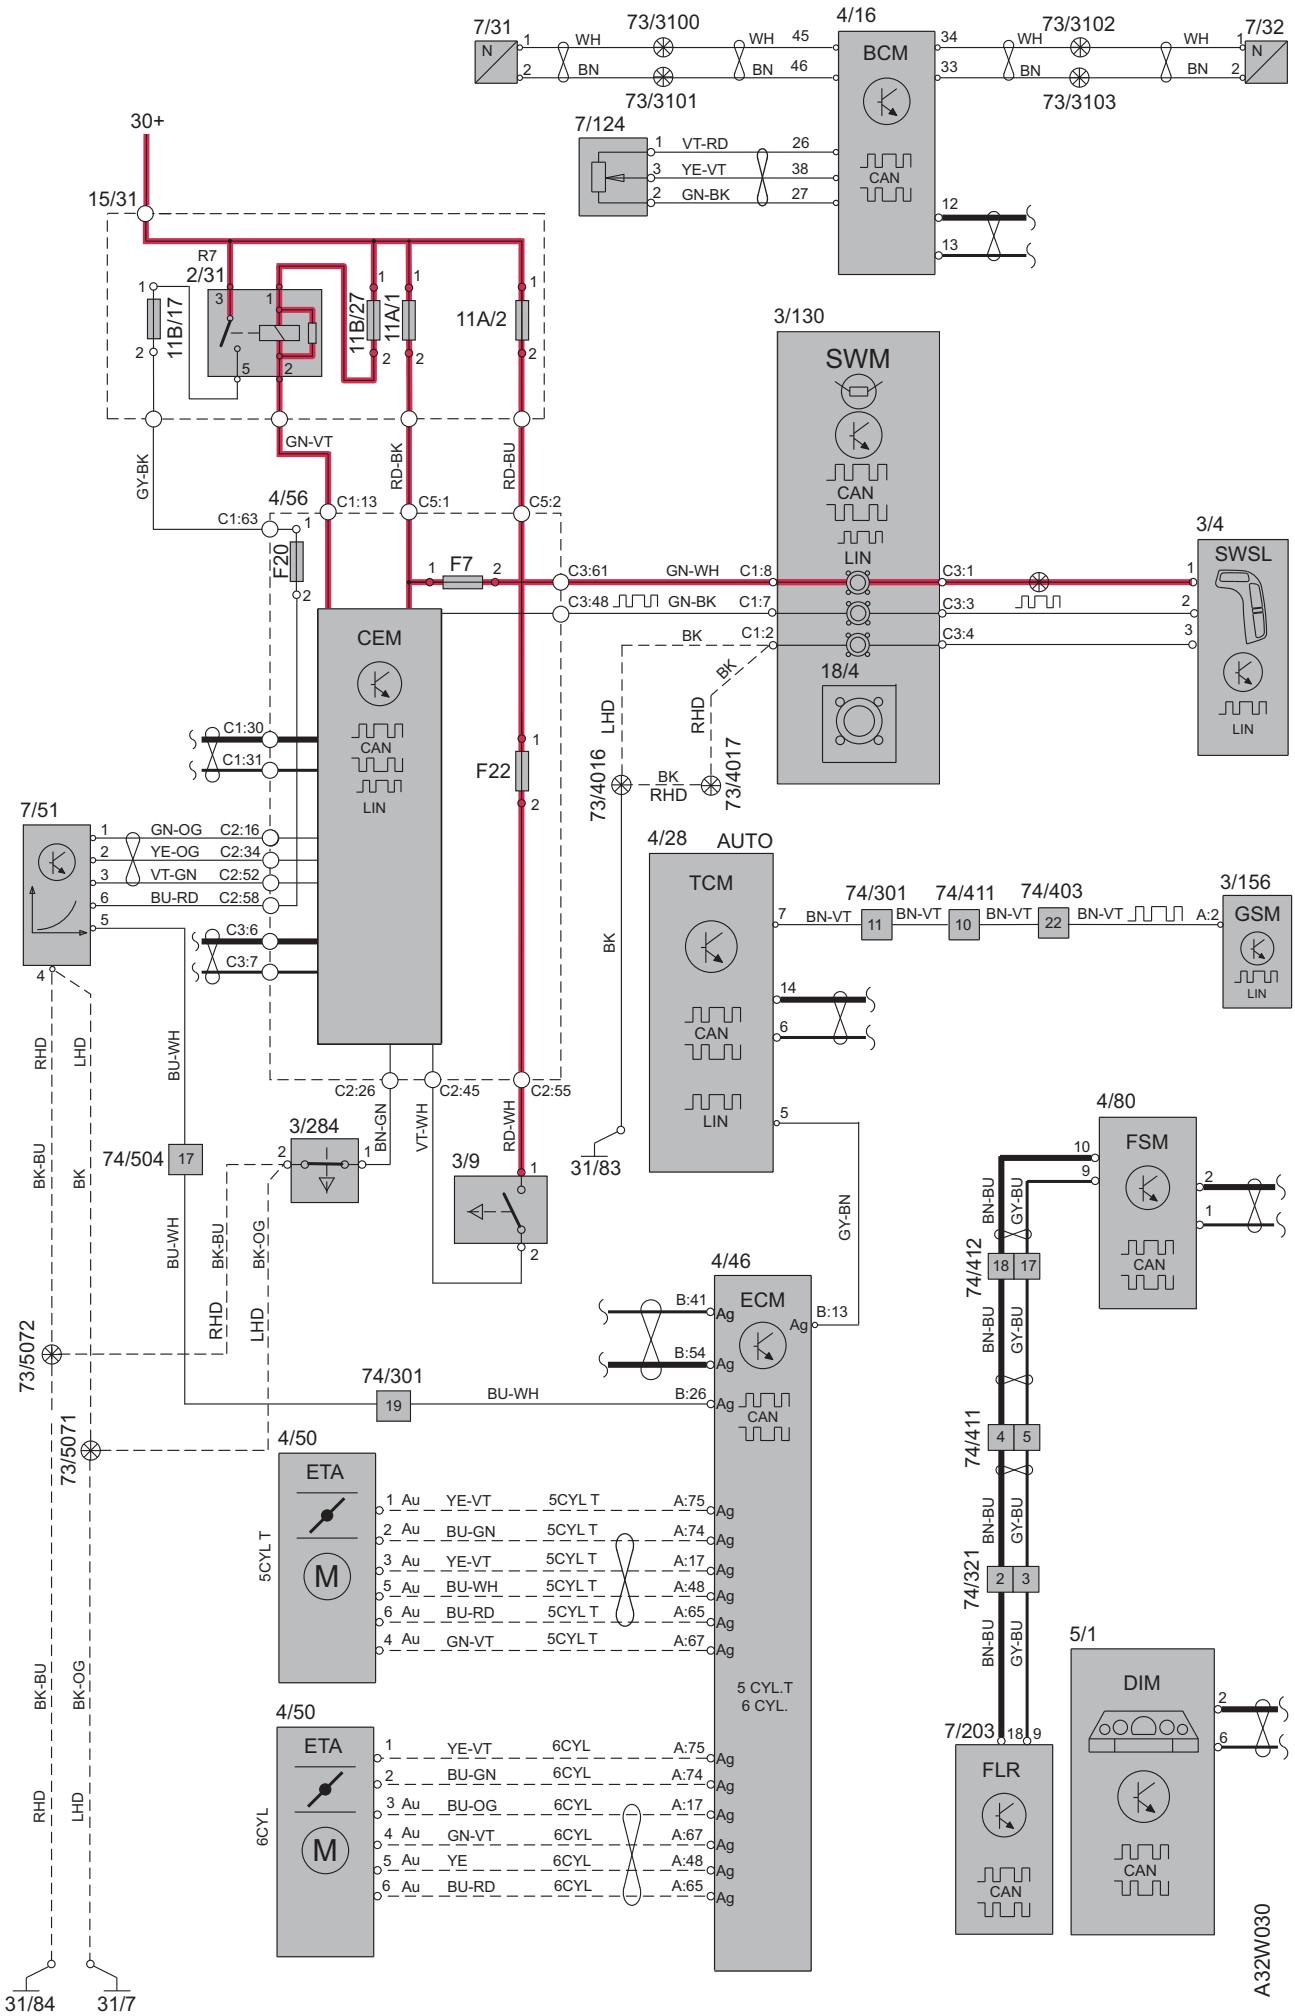

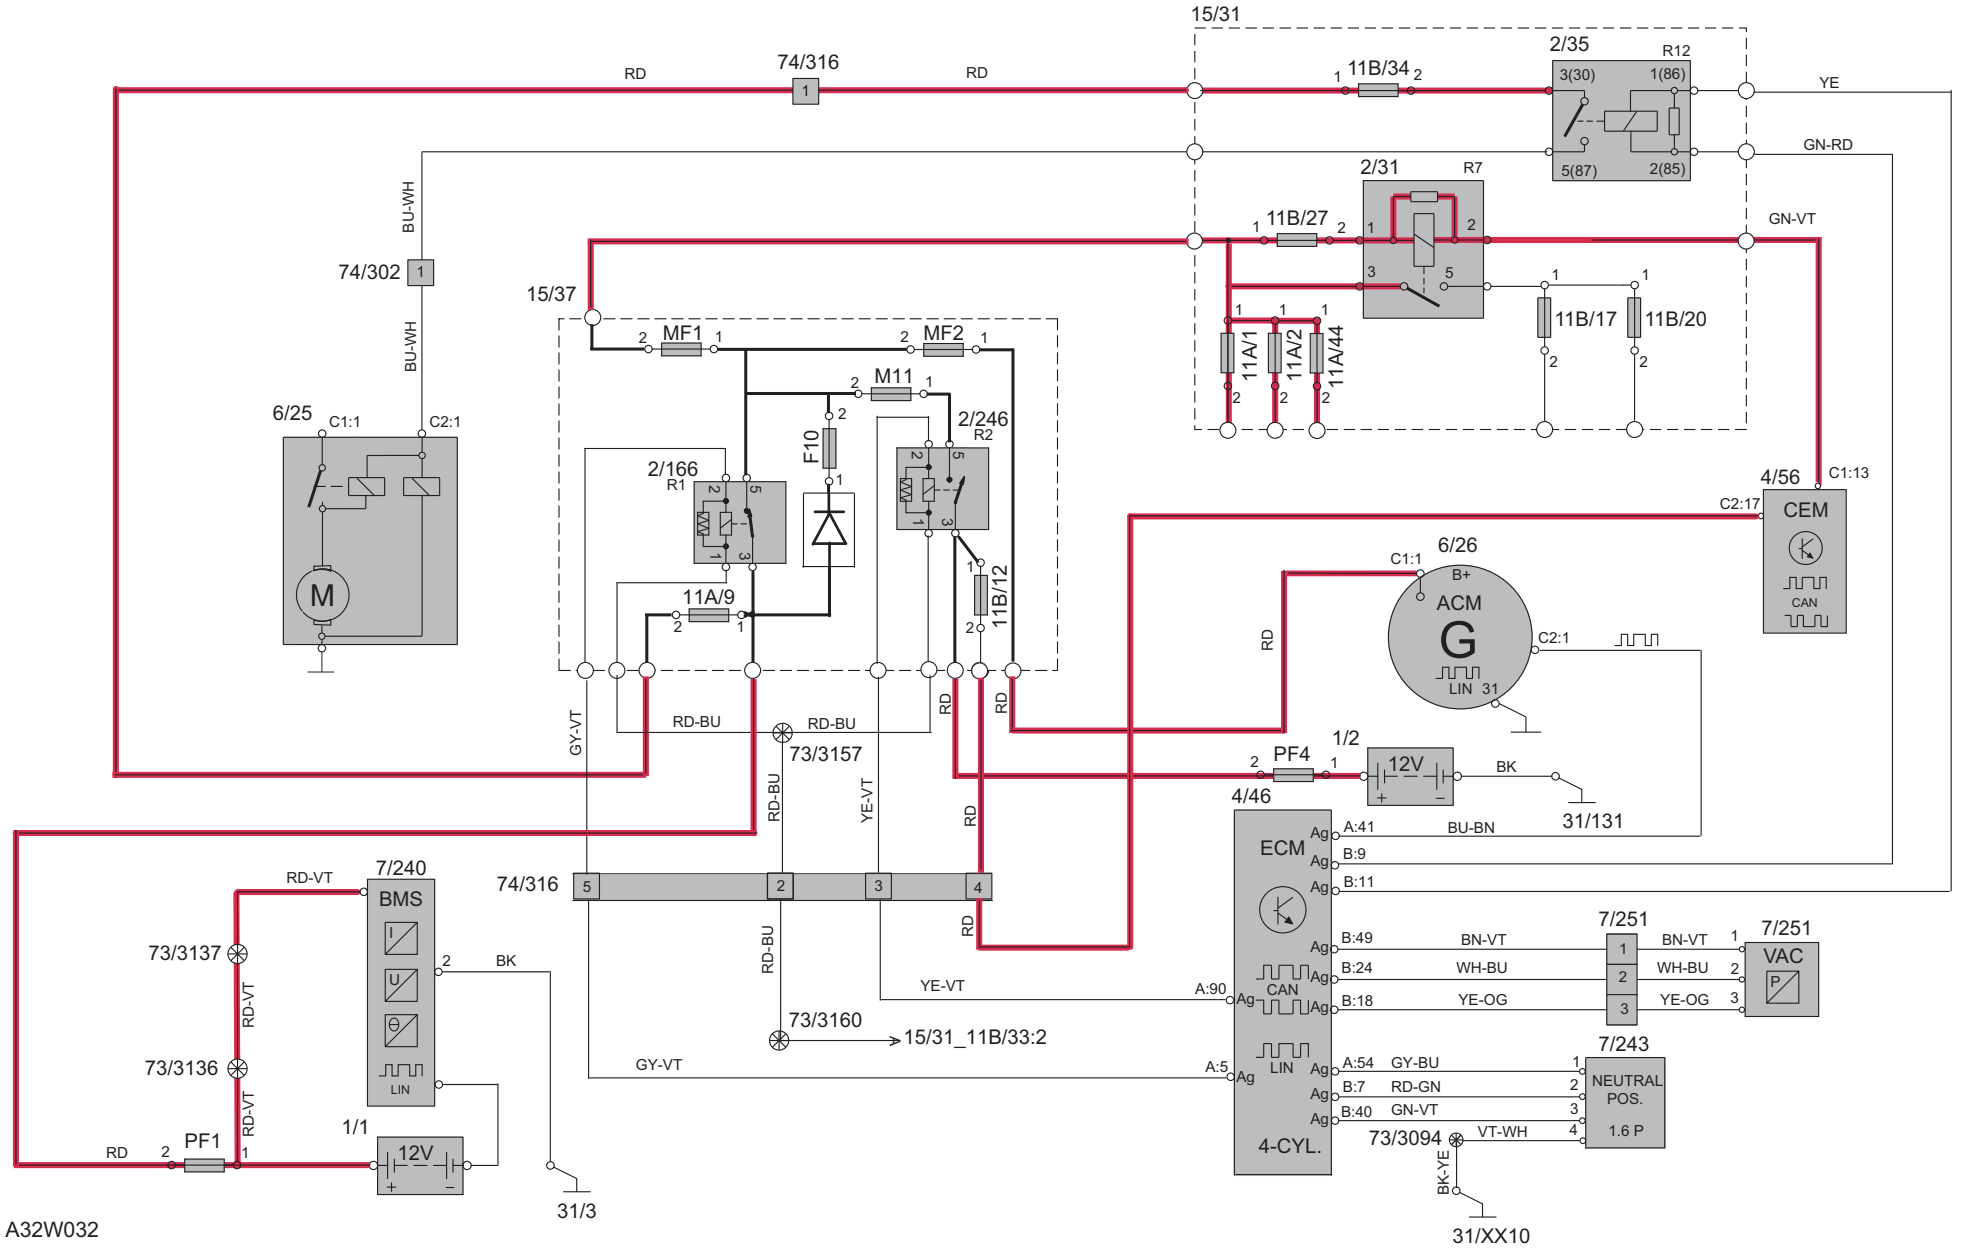
15/31
74/316
RD
11B/34
2/35
R12
3(30)
1(86)
5(87)
2(85)
YE
GN-RD
2/31
R7
11B/27
GN-VT
11B/17
11B/20
11A/1
11A/2
11A/44
74/302
BU-WH
15/37
MF1
MF2
M11
2/246
R2
2/166
R1
F10
11A/9
11B/12
6/25
C1:1
C2:1
M
4/56
C1:13
C2:17
CEM
CAN
6/26
B+
ACM
G
LIN 31
C2:1
RD
GY-VT
RD-BU
73/3157
YE-VT
PF4
1/2
12V
BK
31/131
4/46
ECM
A:41
BU-BN
B:9
B:11
7/240
BMS
RD-VT
73/3137
73/3136
PF1
1/1
12V
LIN
BK
31/3
74/316
73/3160
15/31_11B/33:2
A:90
CAN
B:49
BN-VT
B:24
WH-BU
B:18
YE-OG
7/251
VAC
A:5
LIN
A:54
GY-BU
B:7
RD-GN
B:40
GN-VT
7/243
NEUTRAL POS.
1.6 P
4-CYL.
73/3094
VT-WH
BK-YE
31/XX10
A32W032

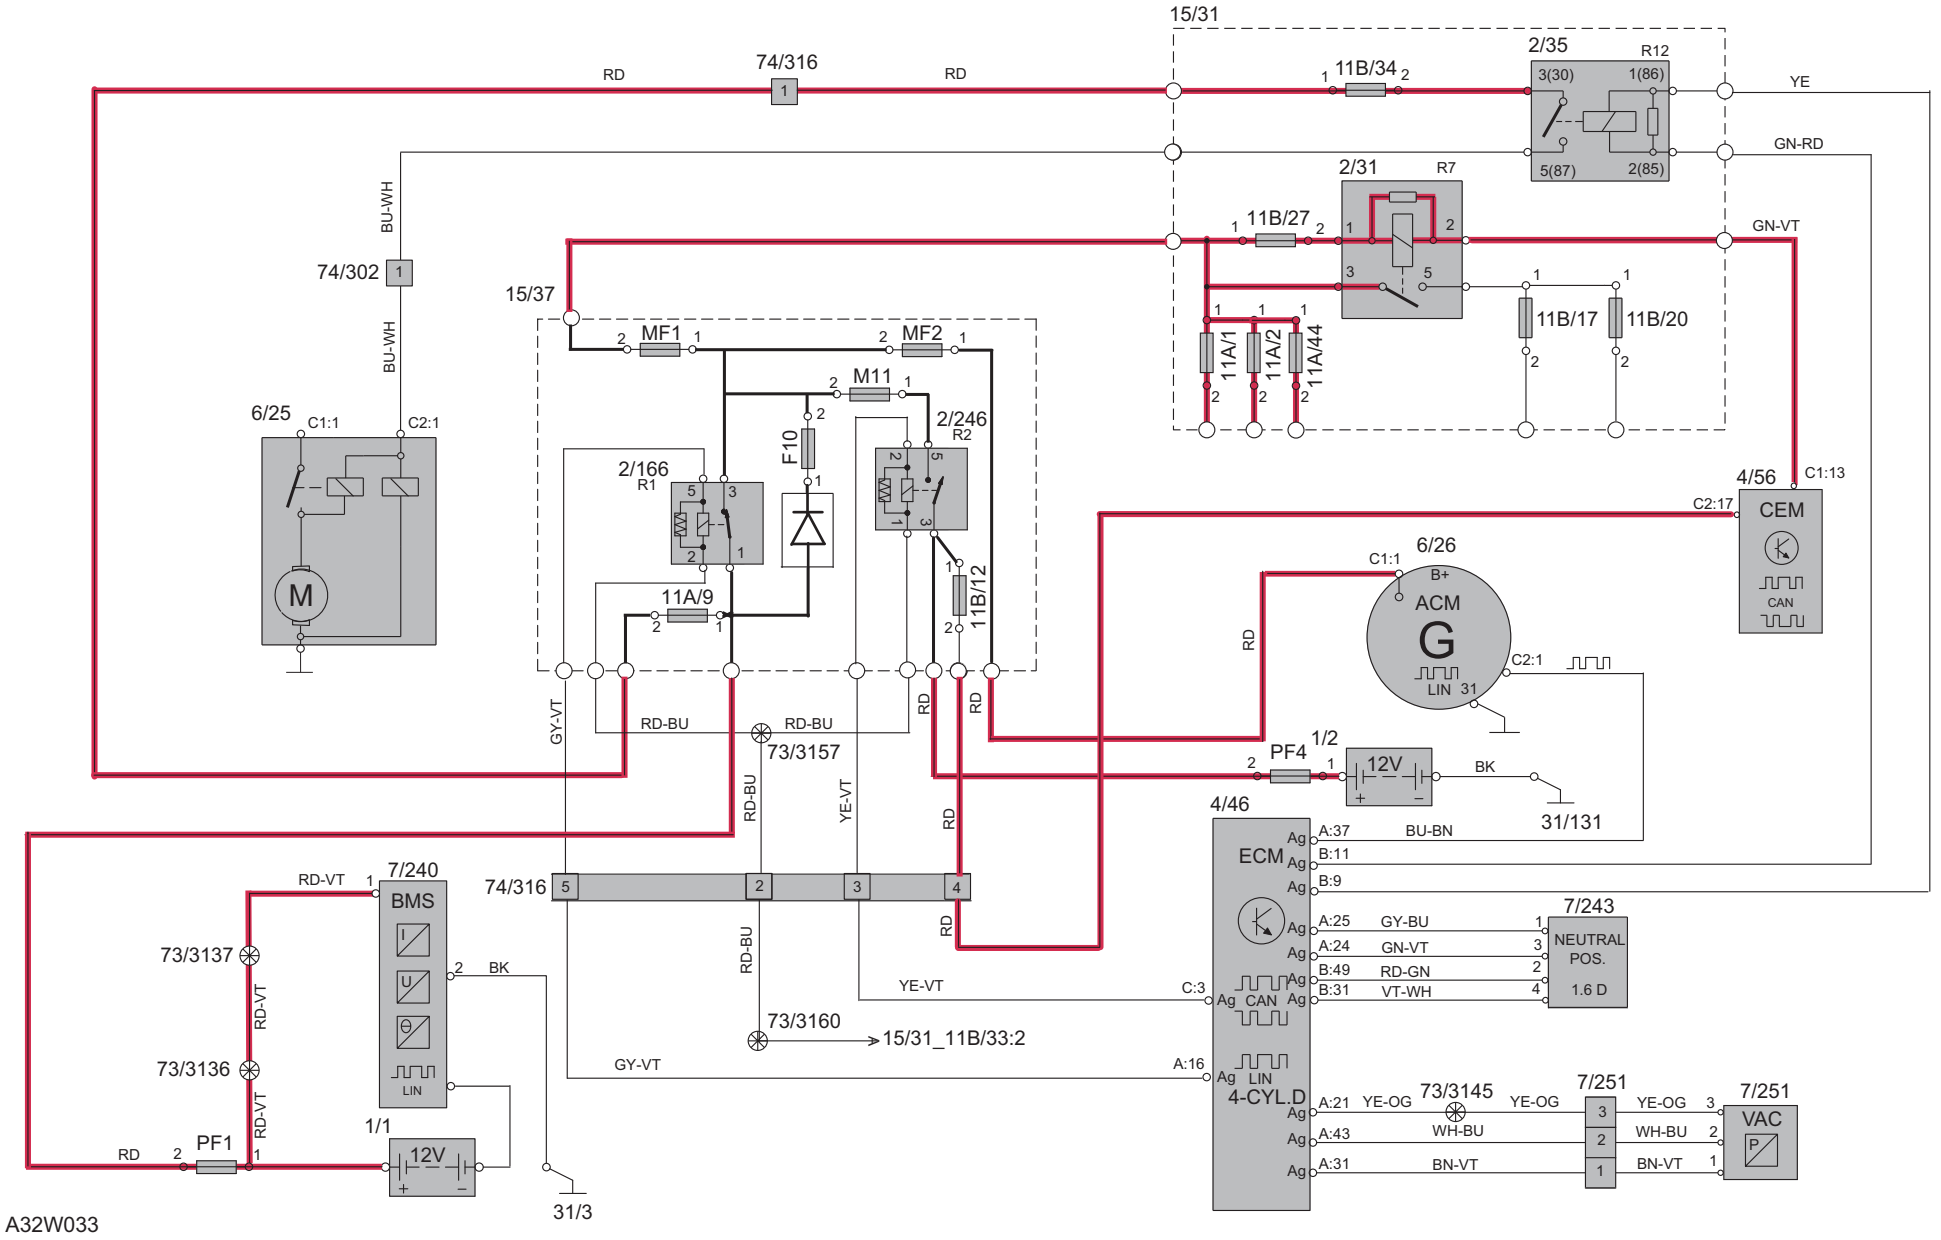
15/31
74/316
RD
11B/34
2/35
R12
3(30)
1(86)
5(87)
2(85)
YE
GN-RD
2/31
R7
11B/27
GN-VT
11B/17
11B/20
11A/1
11A/2
11A/44
74/302
BU-WH
15/37
MF1
MF2
M11
2/246
R2
2/166
R1
F10
11A/9
11B/12
6/25
C1:1
C2:1
M
4/56
C1:13
C2:17
CEM
CAN
6/26
B+
ACM
G
LIN 31
C2:1
GY-VT
RD-BU
73/3157
YE-VT
PF4
1/2
12V
BK
31/131
4/46
ECM
A:37
BU-BN
B:11
B:9
7/243
NEUTRAL POS.
1.6 D
A:25
GY-BU
A:24
GN-VT
B:49
RD-GN
B:31
VT-WH
C:3
CAN
YE-VT
73/3160
15/31_11B/33:2
GY-VT
A:16
LIN
4-CYL.D
A:21
YE-OG
73/3145
WH-BU
A:43
A:31
BN-VT
7/251
VAC
7/240
BMS
RD-VT
73/3137
73/3136
74/316
73/3135
PF1
1/1
31/3
A32W033

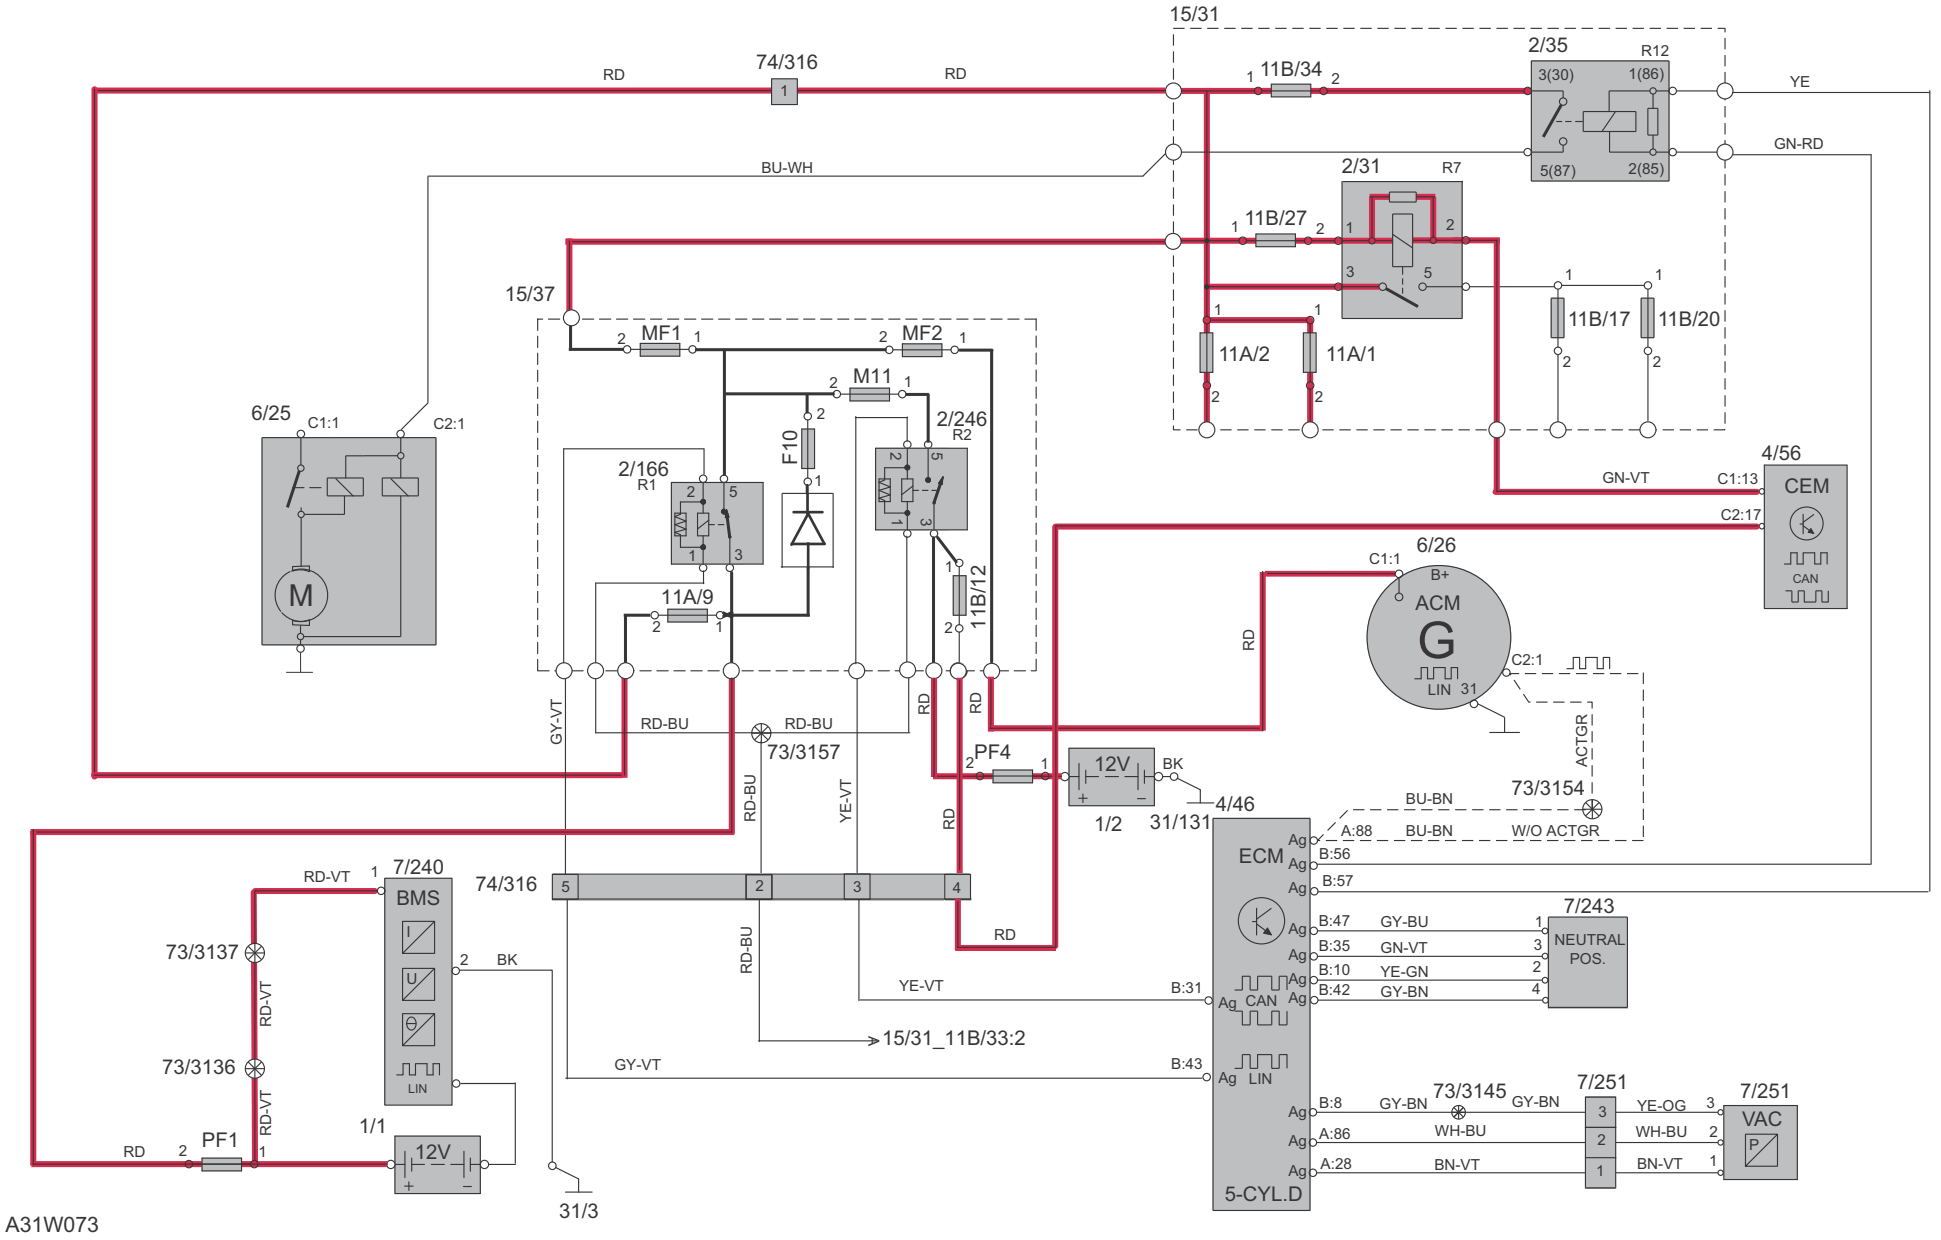
15/31
74/316
RD
11B/34
2/35
R12
3(30)
1(86)
5(87)
2(85)
YE
GN-RD
BU-WH
2/31
R7
11B/27
11B/17
11B/20
11A/2
11A/1
15/37
MF1
MF2
M11
2/246
R2
2/166
R1
F10
11A/9
11B/12
6/25
C1:1
C2:1
M
4/56
CEM
GN-VT
C1:13
C2:17
CAN
6/26
B+
ACM
G
LIN 31
C2:1
ACTGR
73/3154
BU-BN
A:88
W/O ACTGR
GY-VT
RD-BU
73/3157
YE-VT
PF4
12V
BK
1/2
31/131
4/46
ECM
5-CYL.D
B:56
B:57
B:47
GY-BU
B:35
GN-VT
B:10
YE-GN
B:42
GY-BN
7/243
NEUTRAL POS.
B:31
CAN
YE-VT
15/31_11B/33:2
B:43
LIN
GY-VT
B:8
A:86
A:28
WH-BU
BN-VT
73/3145
7/251
YE-OG
VAC
7/240
BMS
RD-VT
74/316
73/3137
73/3136
PF1
1/1
31/3
A31W073

Group 27 Engine controls
Start-/Stop function 5-Cyl. Turbo

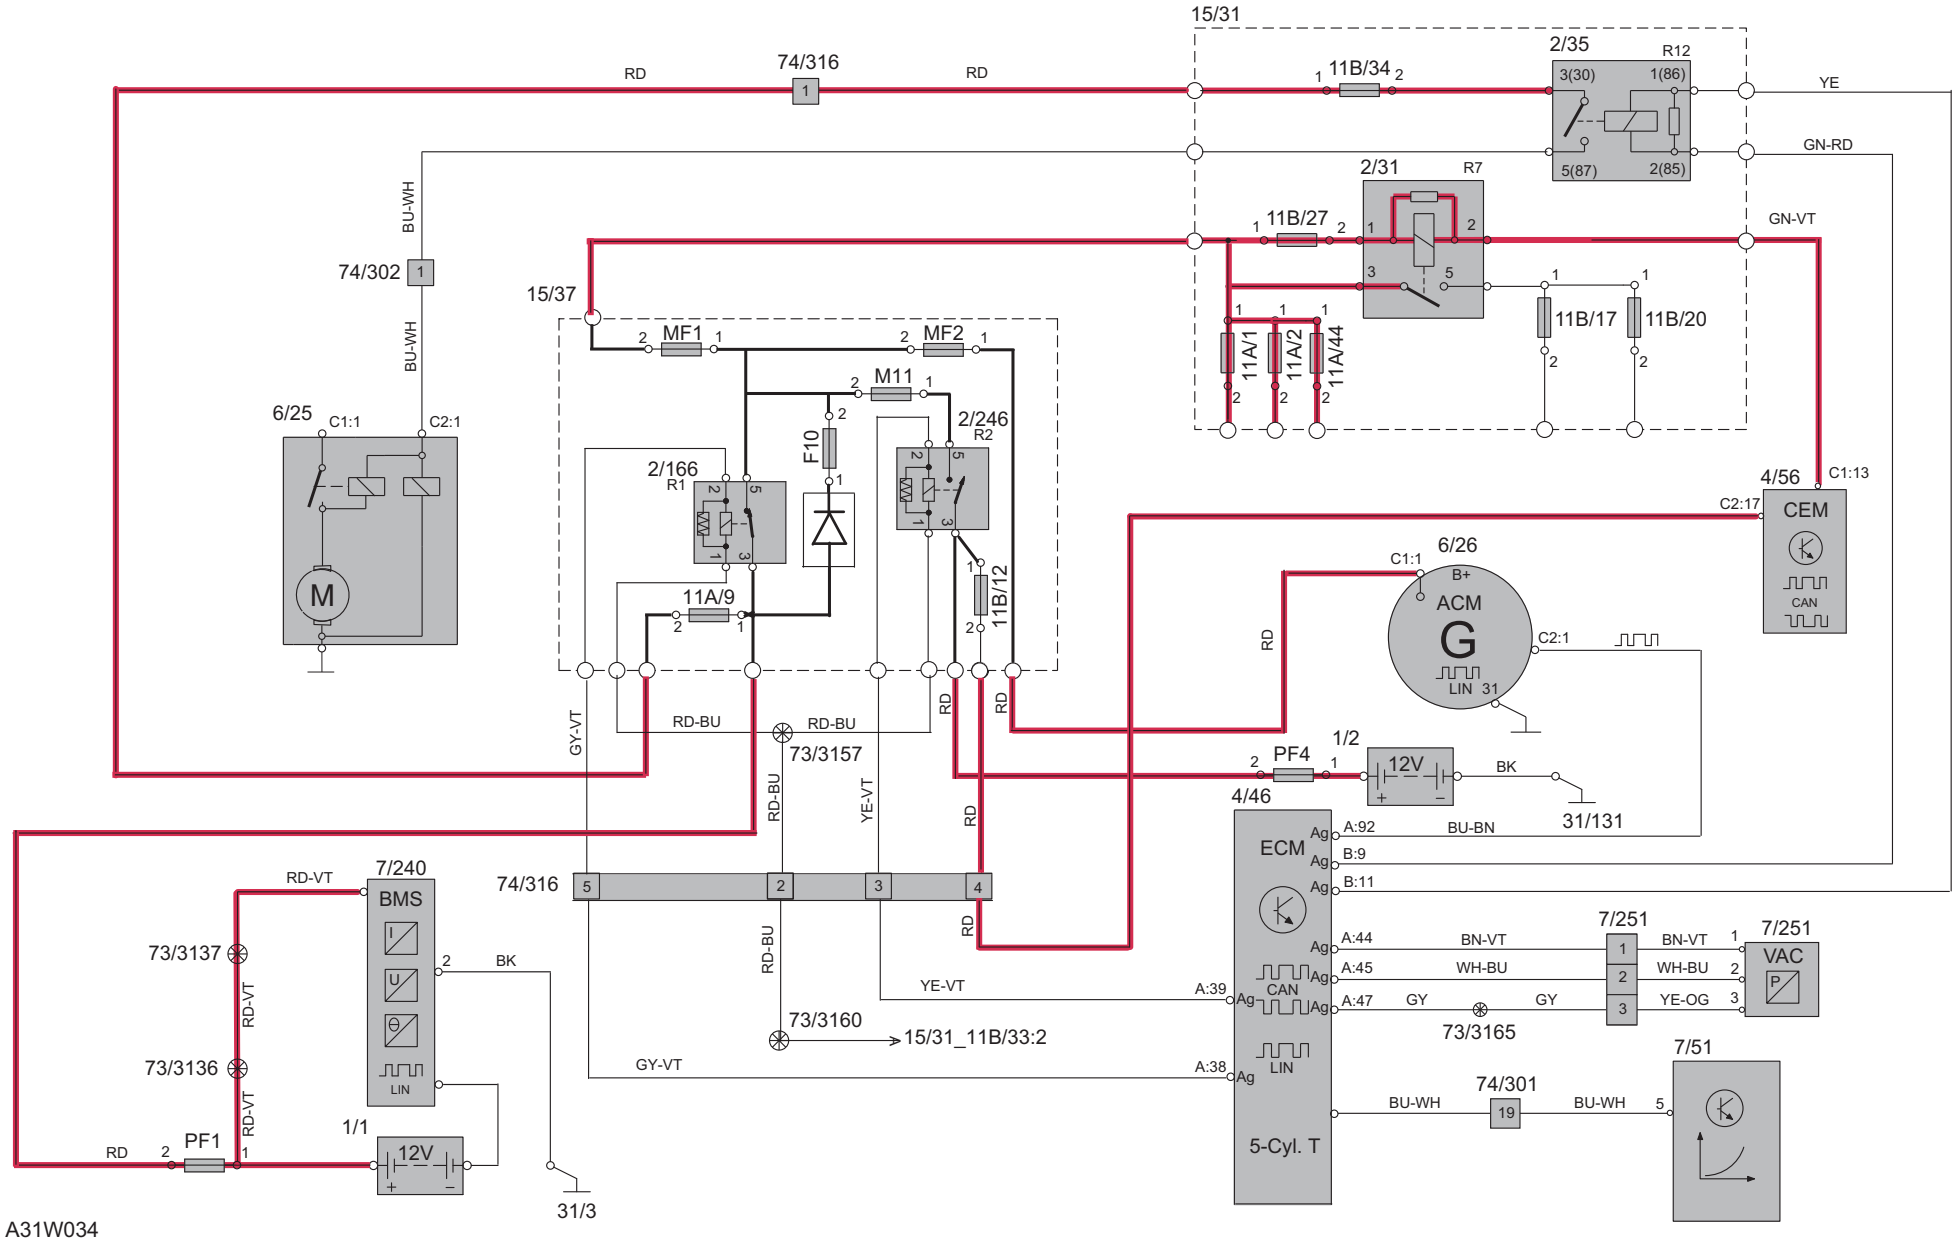

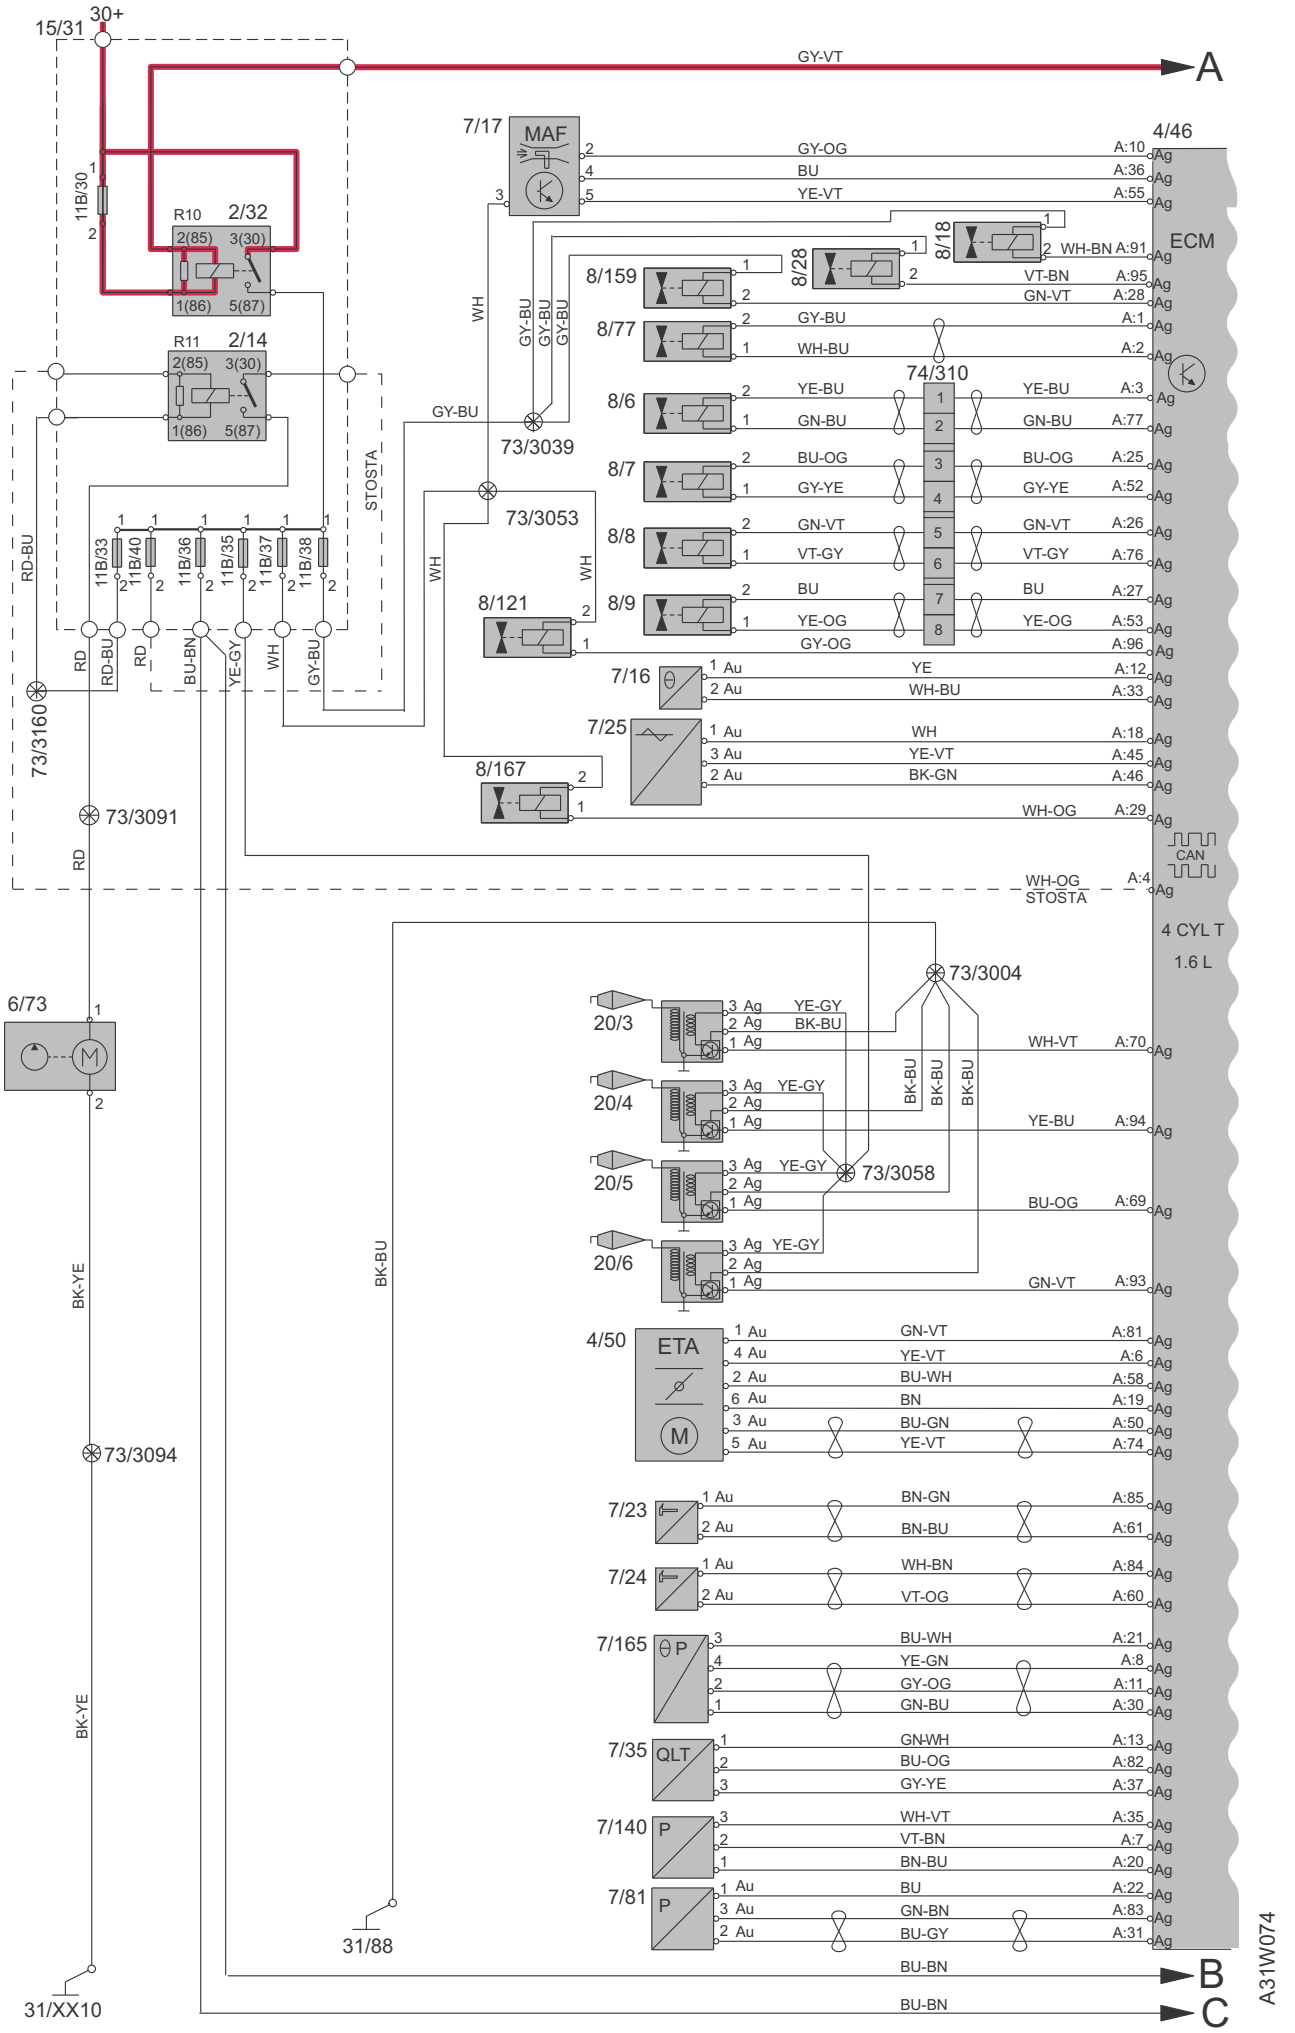
15/31
30+
GY-VT
A
7/17
MAF
GY-OG
BU
YE-VT
4/46
ECM
11B/30
R10
2/32
R11
2/14
8/159
8/28
8/18
8/77
8/6
8/7
8/8
8/9
74/310
73/3039
73/3053
8/121
8/167
7/16
7/25
73/3160
73/3091
RD-BU
RD
BU-BN
YE-GY
WH
GY-BU
STOSTA
CAN
4 CYL T
1.6 L
6/73
73/3004
20/3
20/4
20/5
20/6
73/3058
4/50
ETA
7/23
7/24
7/165
7/35
QLT
7/140
7/81
73/3094
31/88
31/XX10
BK-YE
BK-BU
B
C
A31W074

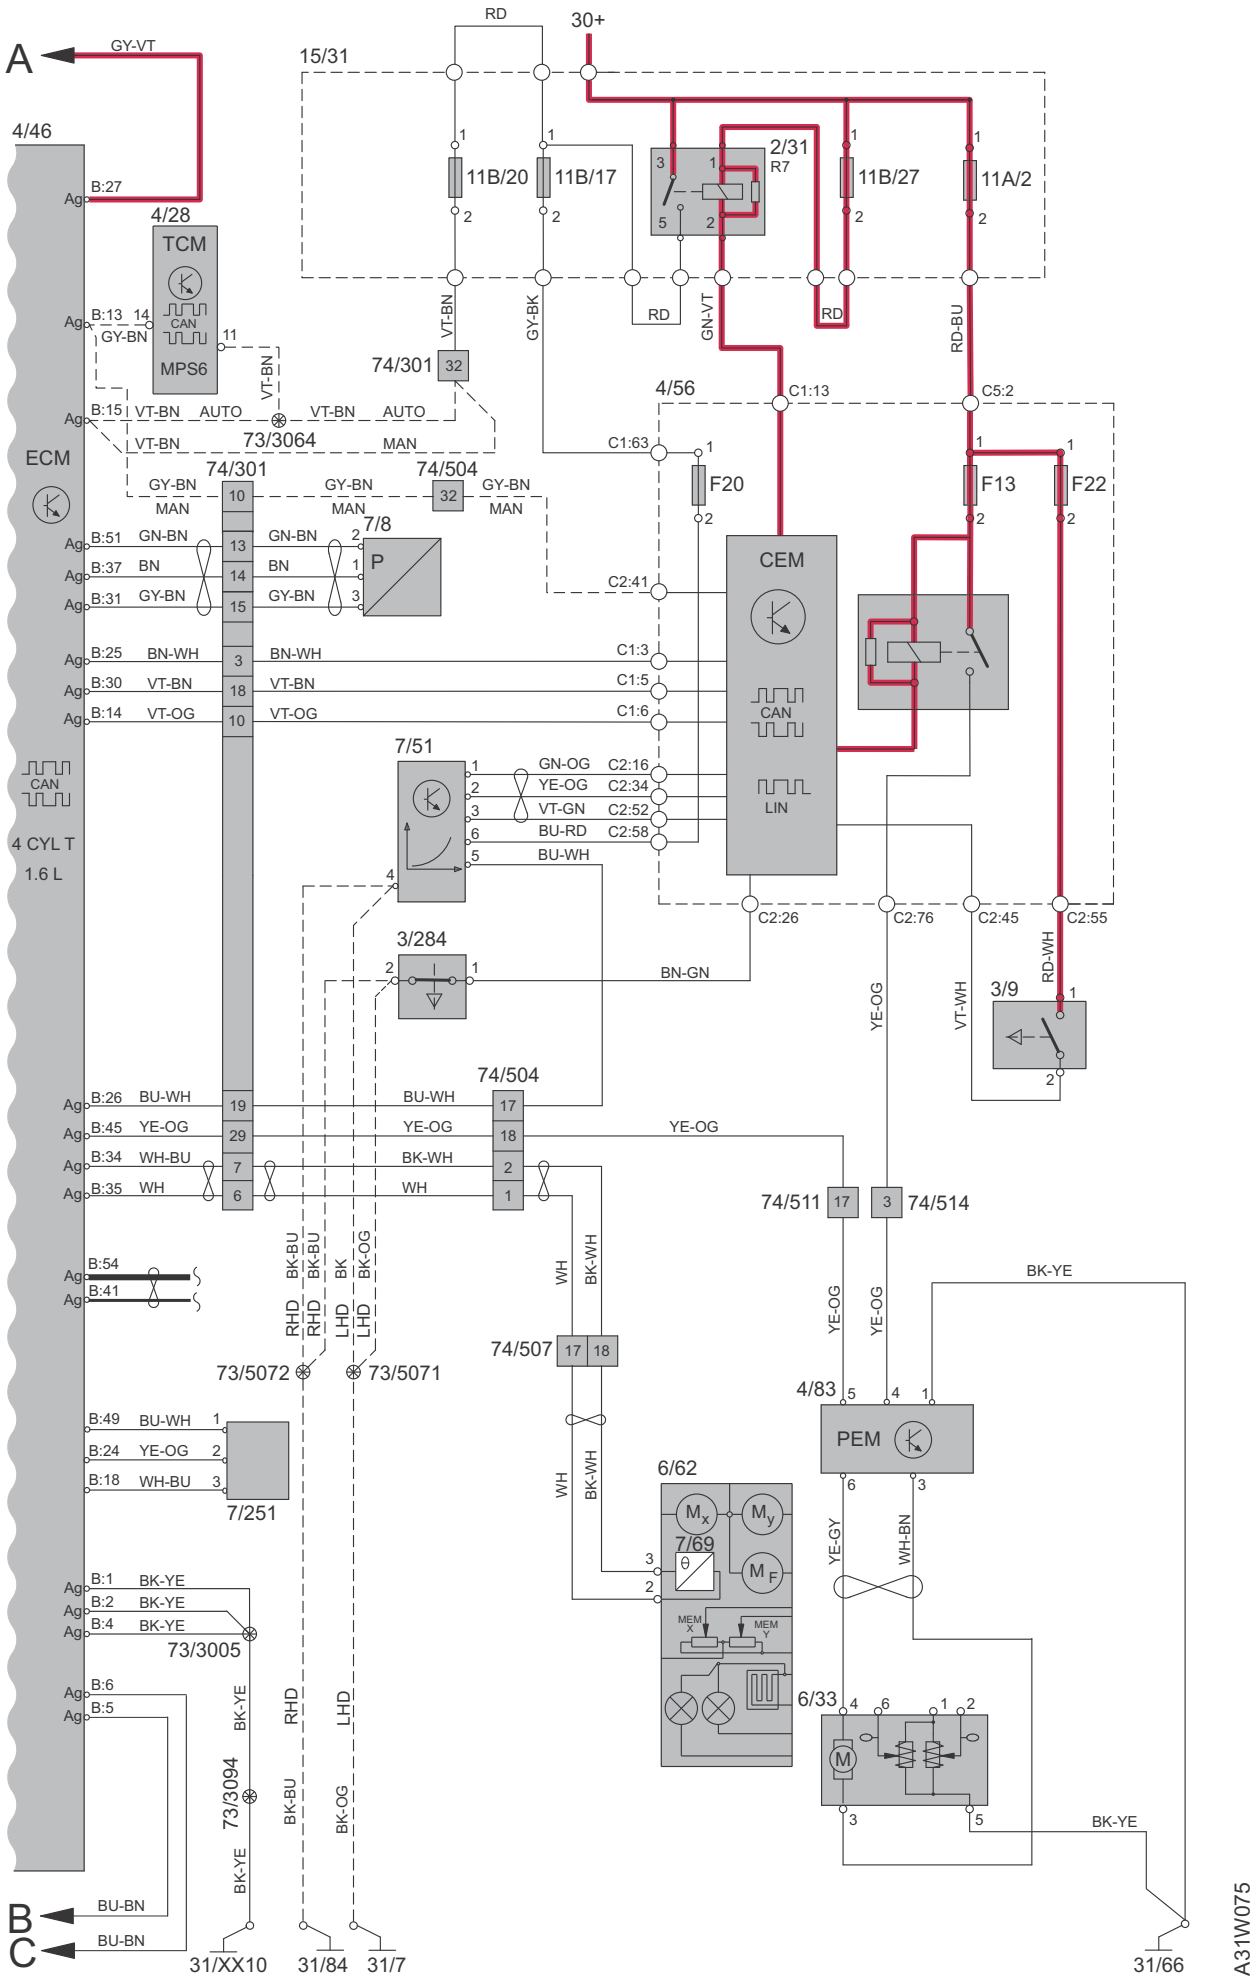
A
GY-VT
4/46
B:27
4/28
TCM
B:13 14
CAN
GY-BN
11
MPS6
VT-BN
74/301
32
B:15
VT-BN AUTO
VT-BN AUTO
VT-BN
73/3064
MAN
ECM
74/301
GY-BN MAN
10
GY-BN MAN
74/504
32
GY-BN MAN
7/8
P
B:51 GN-BN
B:37 BN
B:31 GY-BN
13
14
15
GN-BN
BN
GY-BN
2
1
3
B:25 BN-WH
B:30 VT-BN
B:14 VT-OG
3
18
10
BN-WH
VT-BN
VT-OG
CAN
4 CYL T
1.6 L
7/51
1
2
3
6
5
4
GN-OG C2:16
YE-OG C2:34
VT-GN C2:52
BU-RD C2:58
BU-WH
3/284
2
1
BN-GN
B:26 BU-WH
B:45 YE-OG
B:34 WH-BU
B:35 WH
19
29
7
6
BU-WH
YE-OG
BK-WH
WH
74/504
17
18
2
1
B:54
B:41
BK-BU
BK-BU
BK
BK-OG
RHD
RHD
LHD
LHD
73/5072
73/5071
B:49 BU-WH 1
B:24 YE-OG 2
B:18 WH-BU 3
7/251
B:1 BK-YE
B:2 BK-YE
B:4 BK-YE
73/3005
B:6
B:5
BK-YE
73/3094
BK-YE
BU-BN
BU-BN
B
C
31/XX10
RHD
LHD
BK-BU
BK-OG
31/84
31/7
RD
30+
15/31
11B/20
11B/17
2/31
R7
11B/27
11A/2
VT-BN
GY-BK
RD
GN-VT
RD
RD-BU
4/56
C1:13
C5:2
C1:63
F20
F13
F22
C2:41
CEM
CAN
LIN
C1:3
C1:5
C1:6
C2:26
C2:76
C2:45
C2:55
RD-WH
3/9
YE-OG
VT-WH
74/511
17
3
74/514
BK-YE
YE-OG
YE-OG
74/507
17
18
WH
BK-WH
WH
BK-WH
4/83
PEM
6/62
7/69
YE-GY
WH-BN
6/33
BK-YE
31/66
A31W075

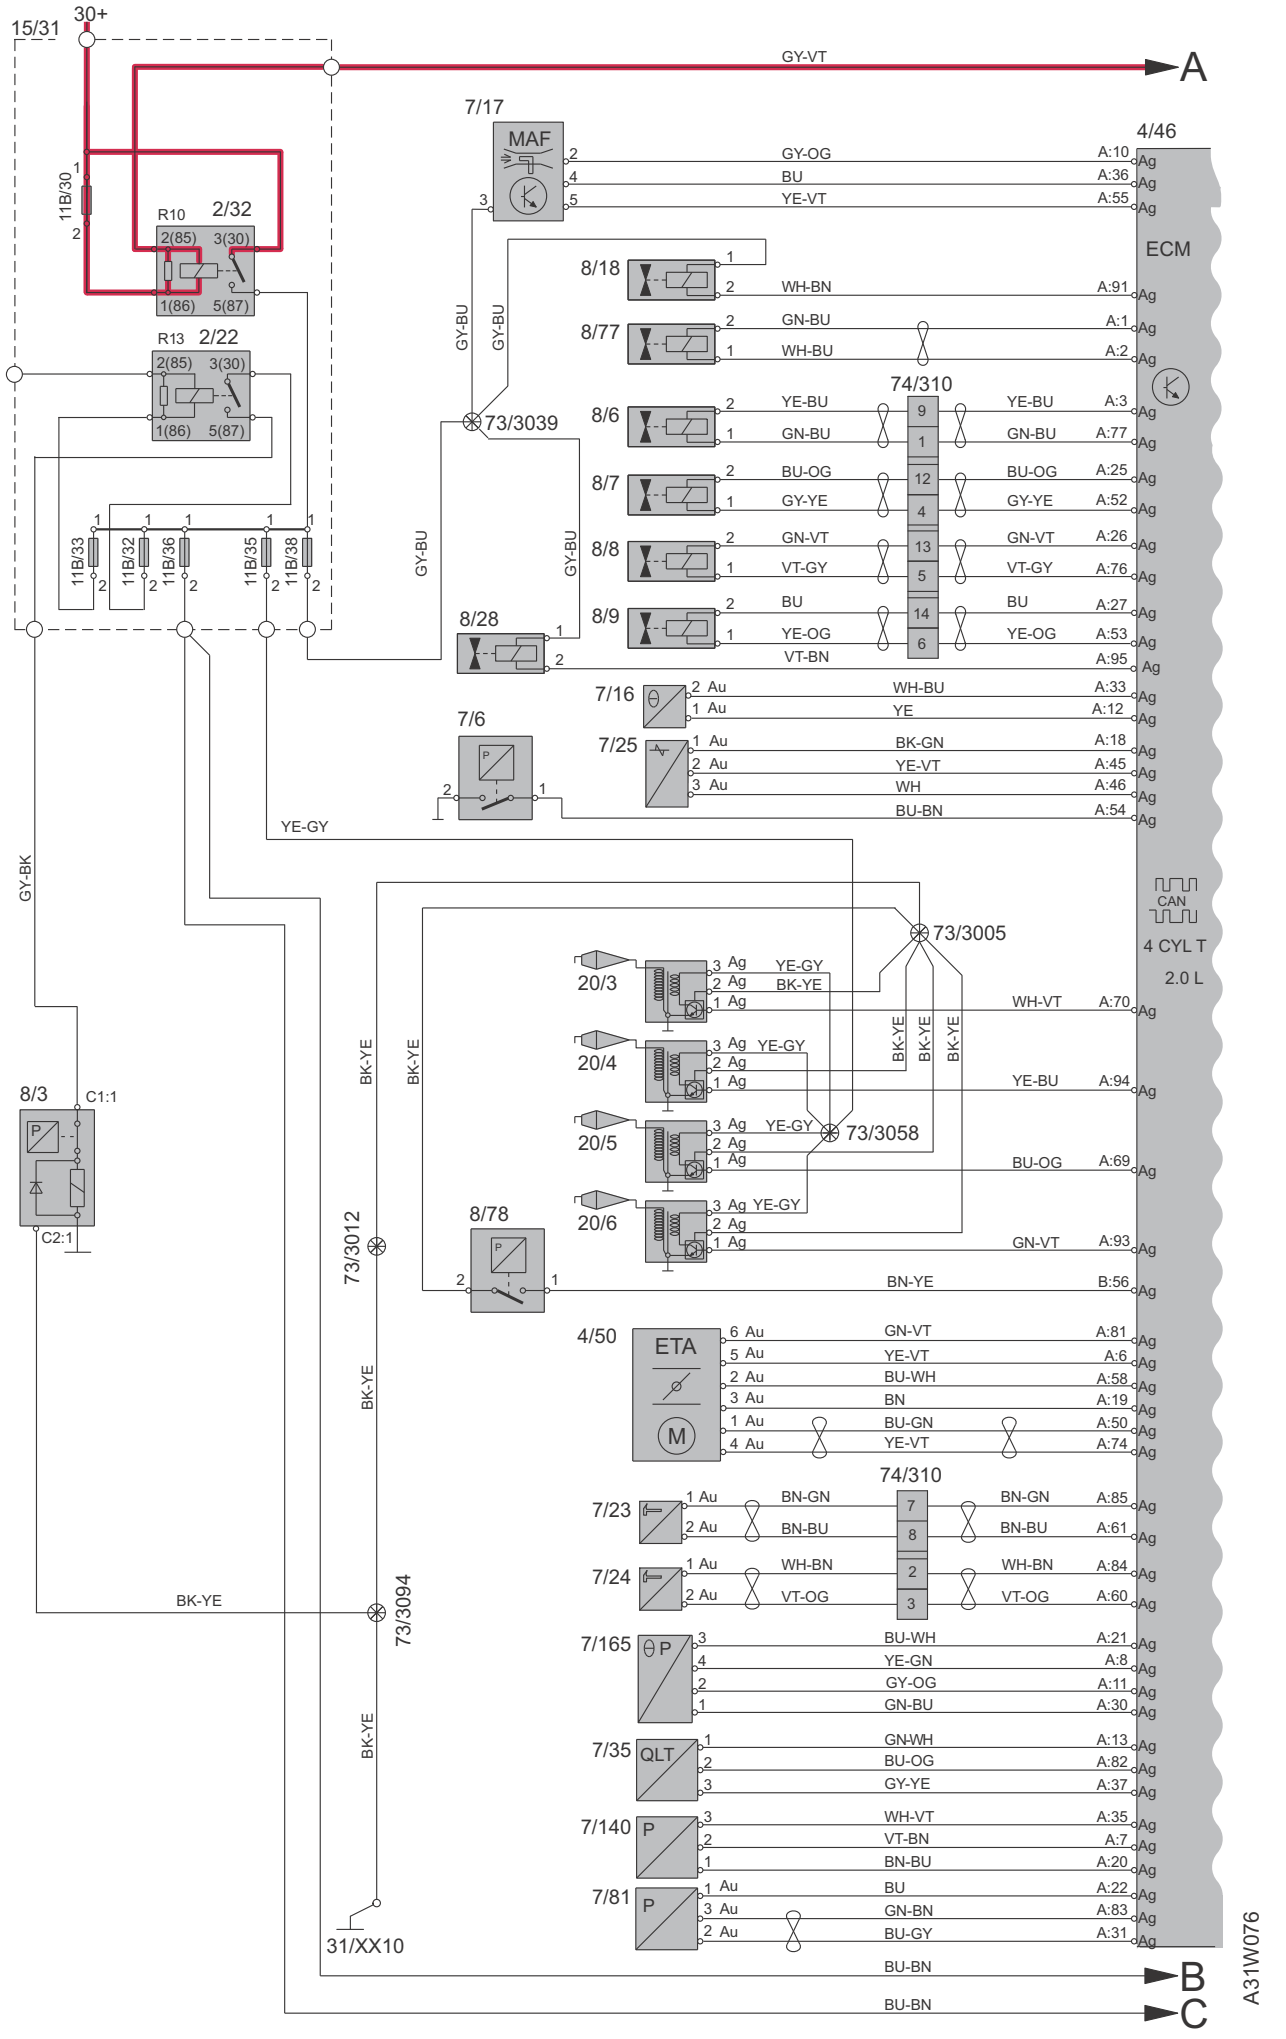
15/31
30+
GY-VT
A
7/17
MAF
4/46
ECM
11B/30
R10 2/32
R13 2/22
8/18
8/77
8/6
8/7
8/8
8/9
8/28
74/310
73/3039
GY-BU
11B/33
11B/32
11B/36
11B/35
11B/38
7/16
7/6
7/25
YE-GY
GY-BK
73/3005
CAN
4 CYL T
2.0 L
20/3
20/4
20/5
20/6
BK-YE
73/3058
8/3
C1:1
C2:1
8/78
73/3012
73/3094
4/50
ETA
7/23
7/24
7/165
7/35
QLT
7/140
7/81
31/XX10
BU-BN
B
C
A31W076

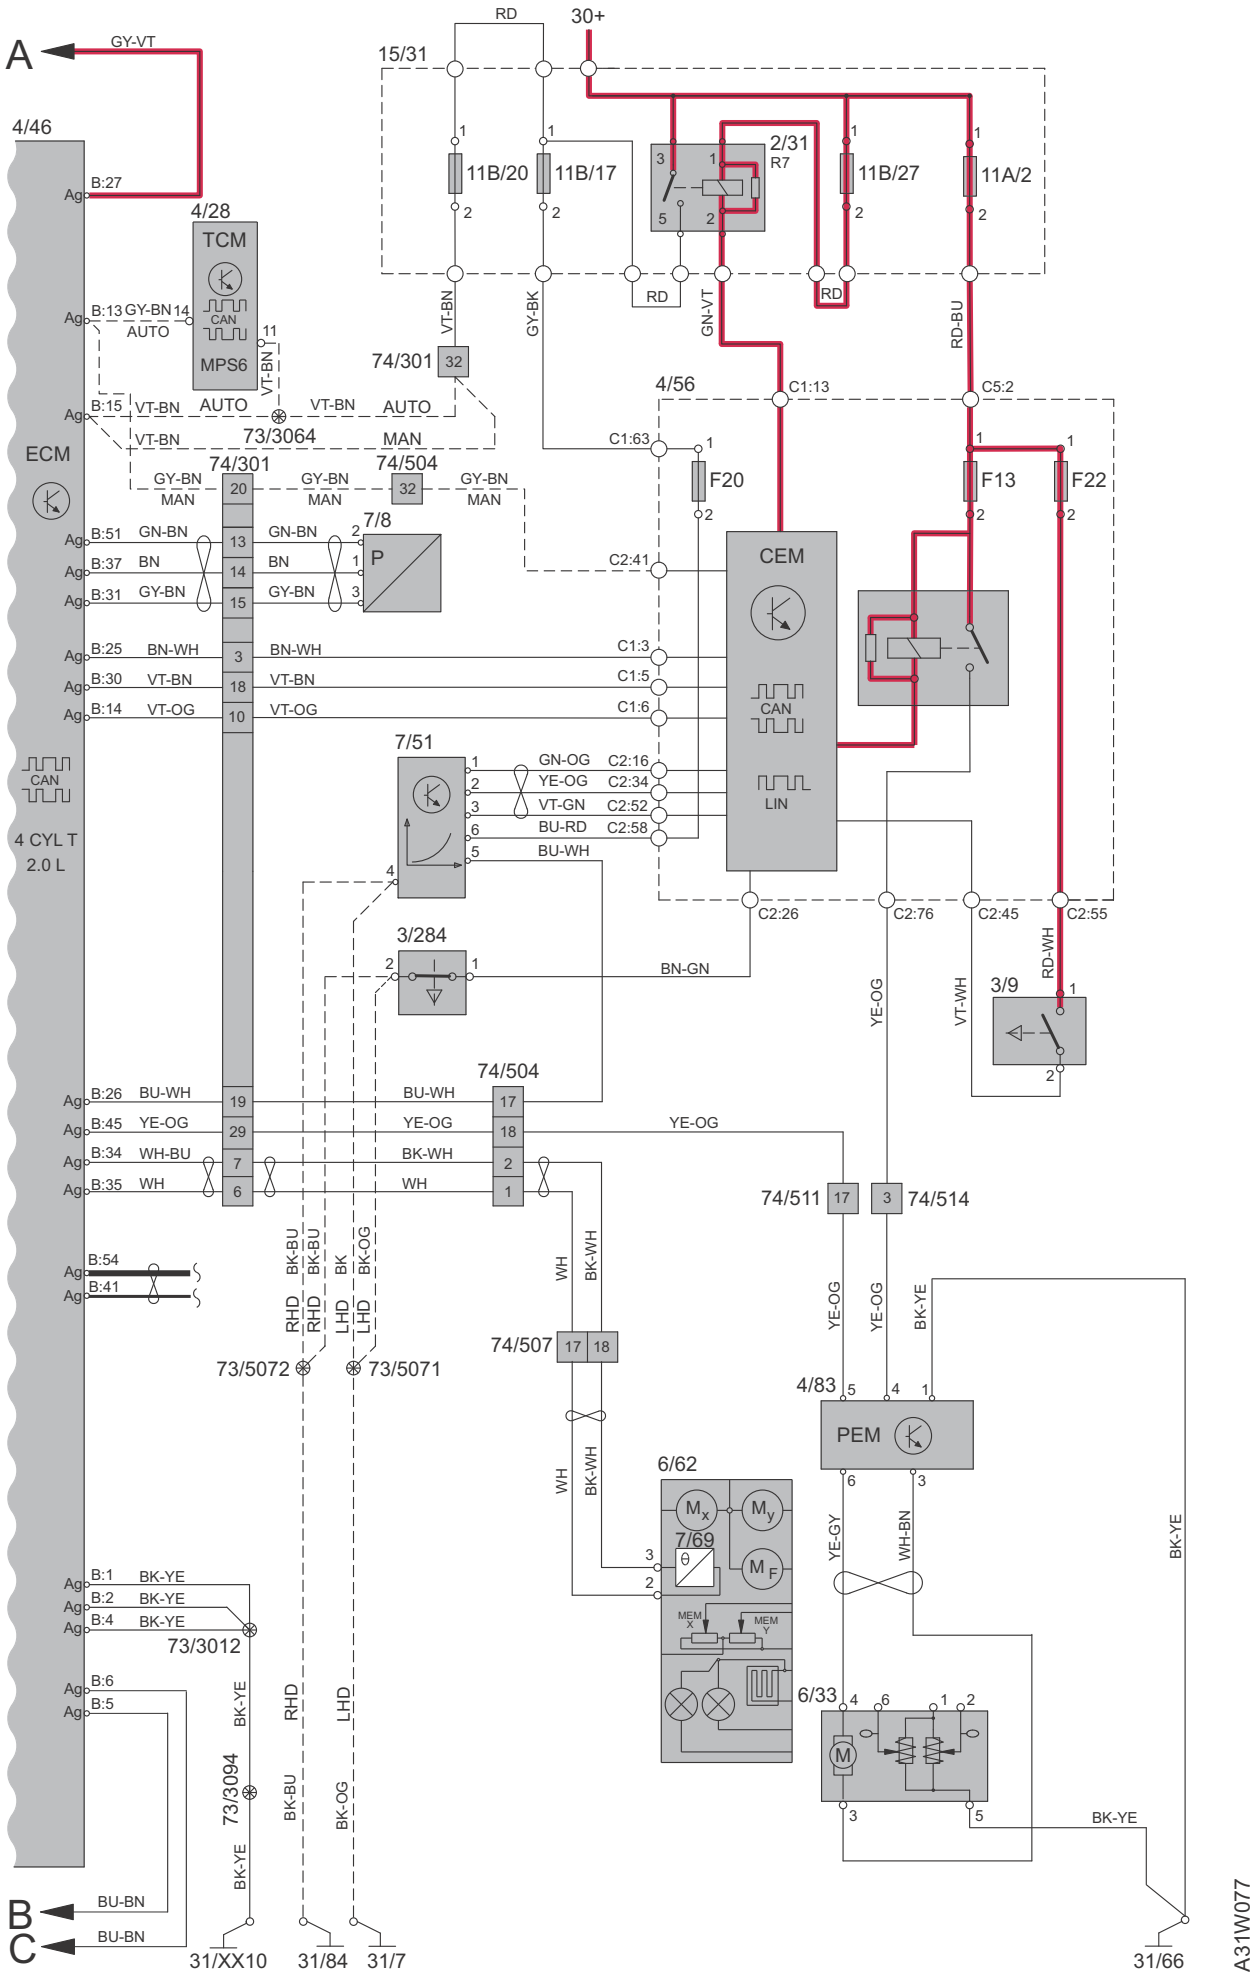
A
GY-VT
4/46
B:27
4/28
TCM
B:13 GY-BN 14
AUTO
CAN
MPS6
11
VT-BN
B:15
VT-BN
AUTO
VT-BN
AUTO
VT-BN
73/3064
MAN
ECM
74/301
20
GY-BN
MAN
GY-BN
74/504
32
GY-BN
MAN
7/8
P
B:51 GN-BN
B:37 BN
B:31 GY-BN
13
14
15
GN-BN
BN
GY-BN
B:25 BN-WH
B:30 VT-BN
B:14 VT-OG
3
18
10
BN-WH
VT-BN
VT-OG
CAN
4 CYL T
2.0 L
7/51
GN-OG C2:16
YE-OG C2:34
VT-GN C2:52
BU-RD C2:58
BU-WH
3/284
BN-GN
B:26 BU-WH
B:45 YE-OG
B:34 WH-BU
B:35 WH
19
29
7
6
BU-WH
YE-OG
BK-WH
WH
74/504
17
18
2
1
B:54
B:41
BK-BU
BK-BU
BK
BK-OG
RHD
RHD
LHD
LHD
73/5072
73/5071
74/507
17
18
WH
BK-WH
WH
BK-WH
6/62
7/69
MEM X
MEM Y
6/33
B:1 BK-YE
B:2 BK-YE
B:4 BK-YE
73/3012
B:6
B:5
BK-YE
73/3094
BK-YE
RHD
LHD
BK-BU
BK-OG
BU-BN
BU-BN
B
C
31/XX10
31/84
31/7
RD
30+
15/31
11B/20
11B/17
2/31
R7
11B/27
11A/2
RD
RD
VT-BN
GY-BK
GN-VT
RD-BU
74/301
32
4/56
C1:13
C5:2
C1:63
F20
F13
F22
C2:41
CEM
CAN
LIN
C1:3
C1:5
C1:6
C2:26
C2:76
C2:45
C2:55
RD-WH
3/9
YE-OG
VT-WH
74/511
17
3
74/514
YE-OG
YE-OG
BK-YE
4/83
PEM
YE-GY
WH-BN
BK-YE
BK-YE
31/66
A31W077

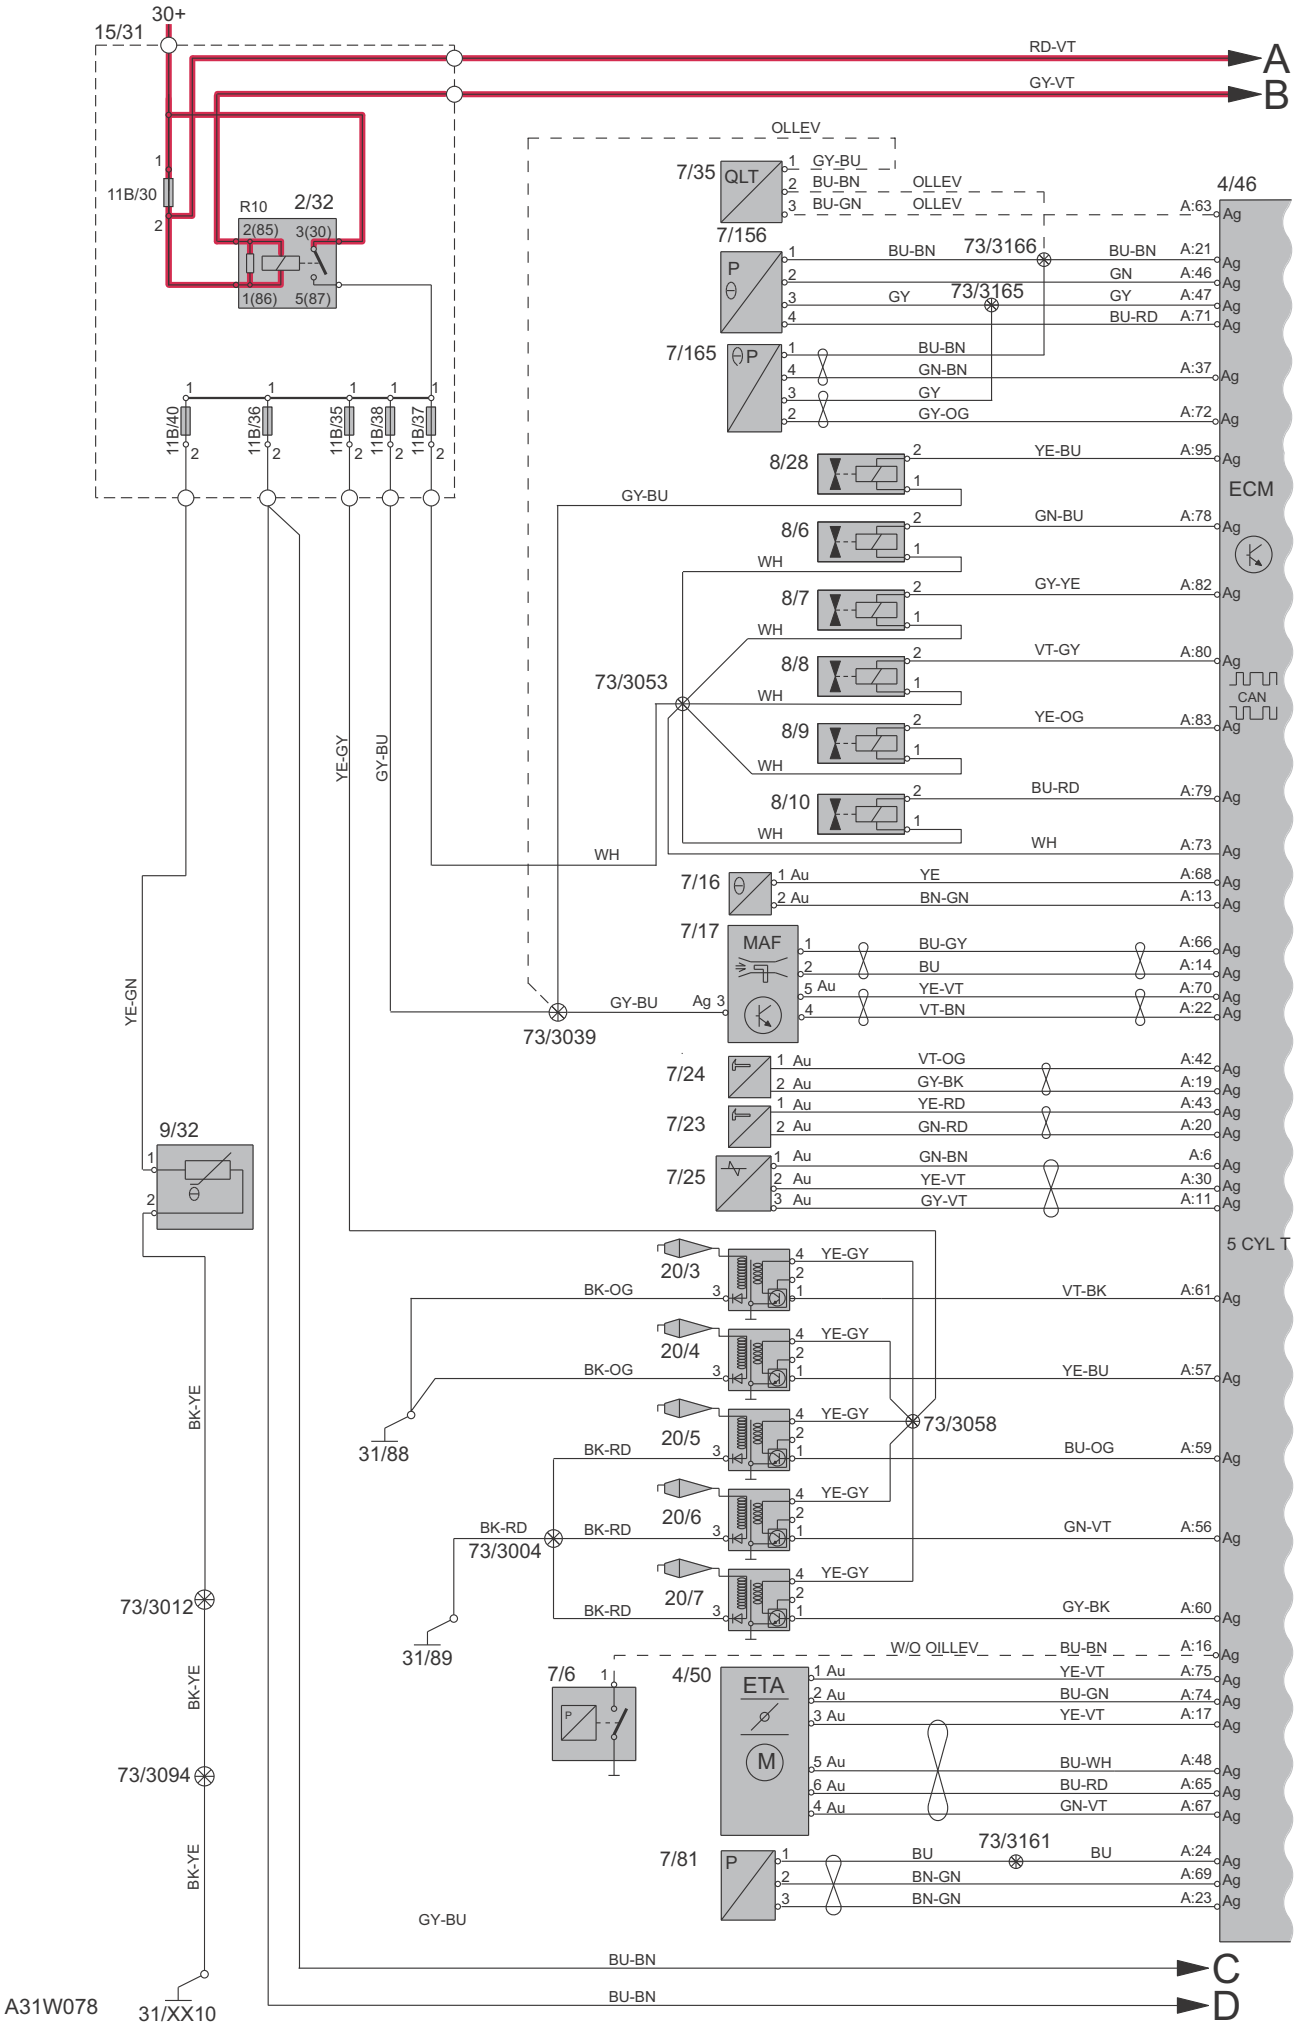
30+
15/31
11B/30
R10
2/32
2(85)
3(30)
1(86)
5(87)
11B/40
11B/36
11B/35
11B/38
11B/37
RD-VT
GY-VT
A
B
OLLEV
7/35
QLT
GY-BU
BU-BN
BU-GN
4/46
7/156
73/3166
73/3165
BU-BN
GN
GY
BU-RD
7/165
GN-BN
GY-OG
8/28
YE-BU
ECM
8/6
GN-BU
8/7
GY-YE
8/8
VT-GY
CAN
8/9
YE-OG
8/10
BU-RD
WH
73/3053
7/16
YE
BN-GN
7/17
MAF
BU-GY
BU
YE-VT
VT-BN
73/3039
7/24
VT-OG
GY-BK
7/23
YE-RD
GN-RD
7/25
GN-BN
YE-VT
GY-VT
9/32
5 CYL T
20/3
20/4
20/5
20/6
20/7
YE-GY
BK-OG
BK-RD
VT-BK
YE-BU
BU-OG
GN-VT
GY-BK
73/3058
73/3004
31/88
31/89
W/O OILLEV
7/6
4/50
ETA
M
73/3012
73/3094
BK-YE
7/81
73/3161
BU
BN-GN
A31W078
31/XX10
C
D

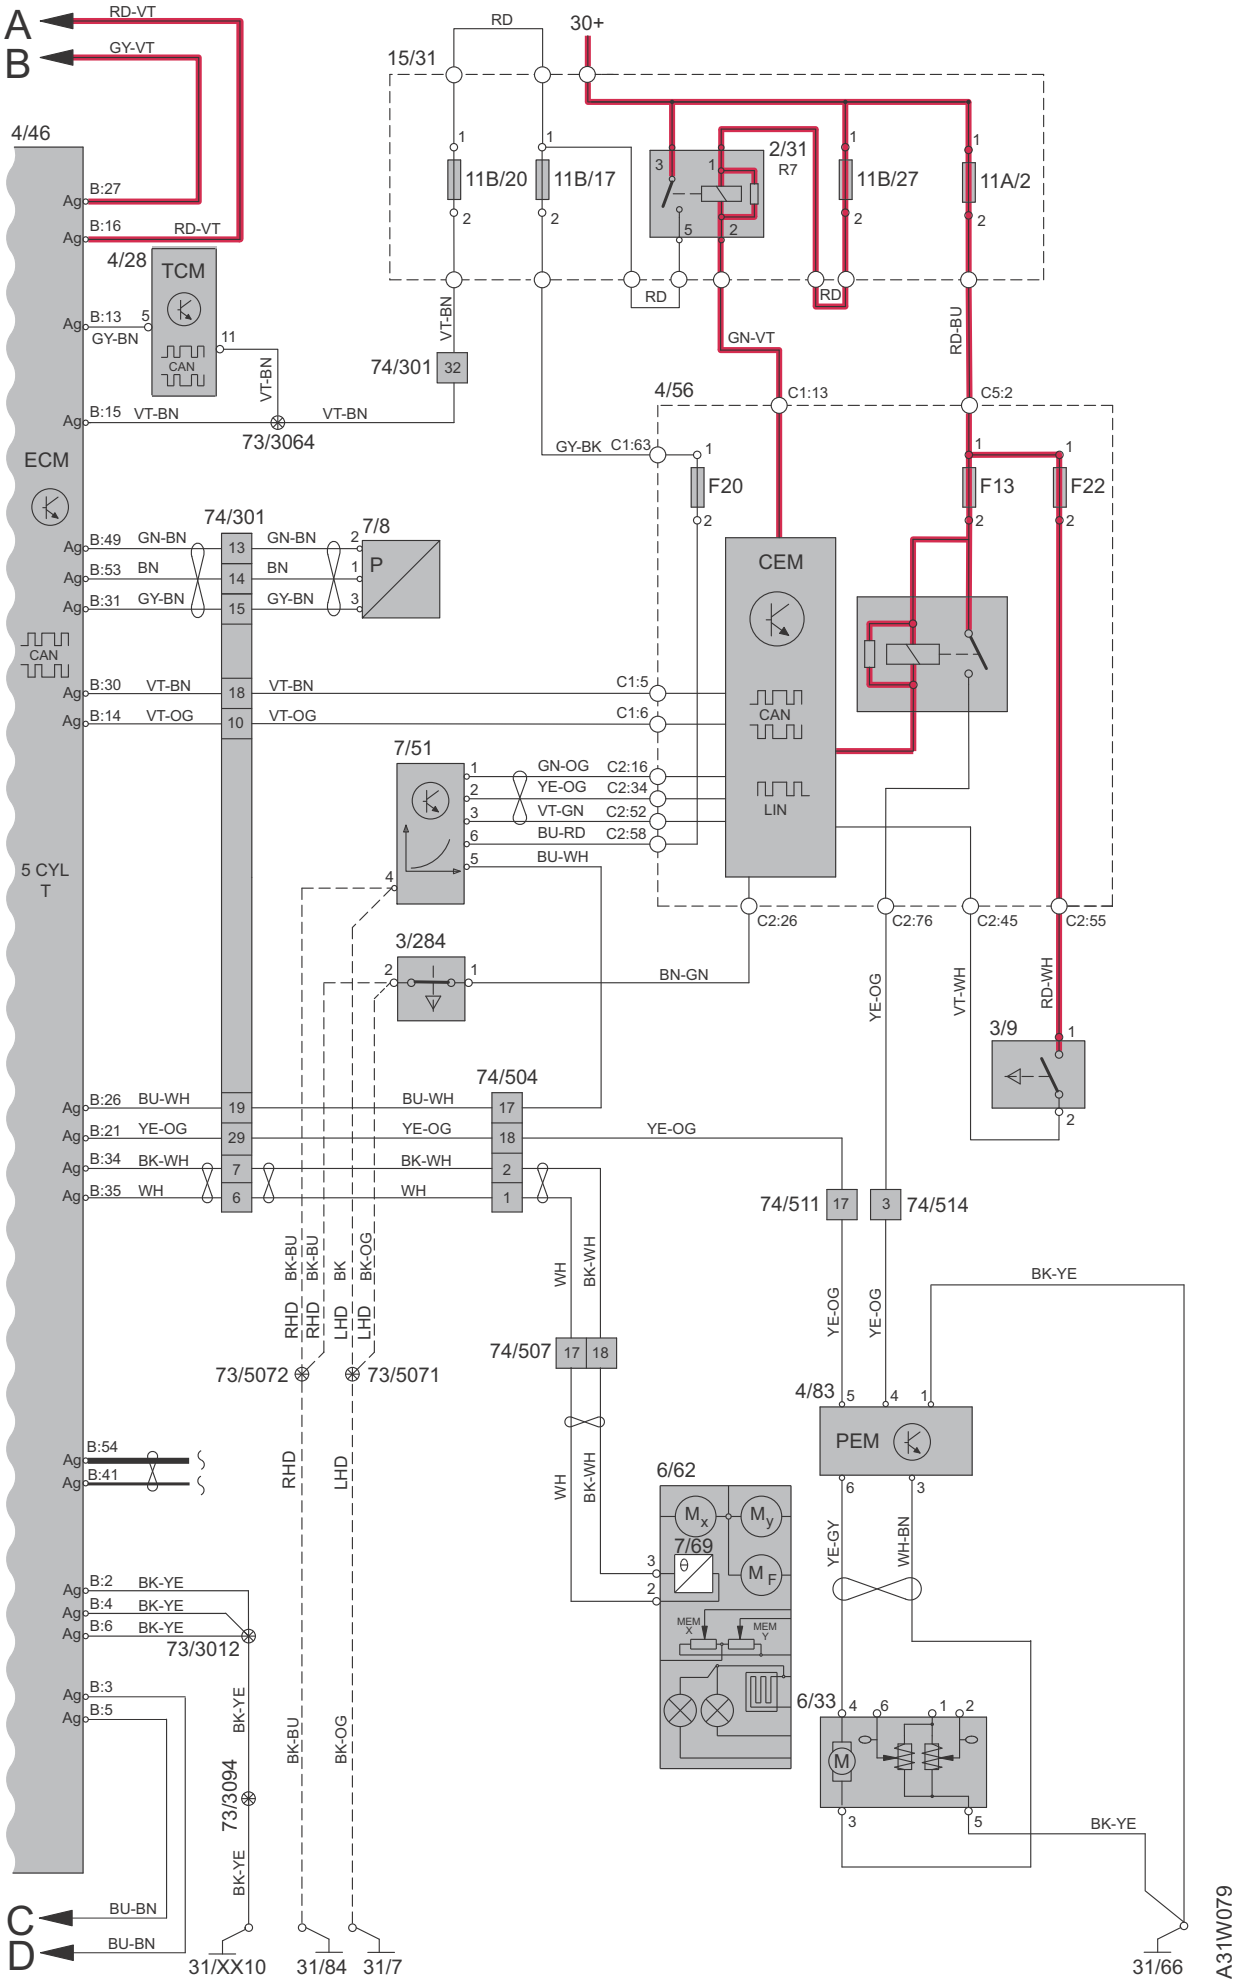
A
B
RD-VT
GY-VT
4/46
B:27
B:16
RD-VT
4/28
TCM
B:13
GY-BN
CAN
VT-BN
B:15
VT-BN
73/3064
74/301
32
ECM
5 CYL
T
74/301
B:49
GN-BN
B:53
BN
B:31
GY-BN
7/8
P
CAN
B:30
VT-BN
B:14
VT-OG
7/51
GN-OG
YE-OG
VT-GN
BU-RD
BU-WH
5 CYL
T
3/284
BN-GN
74/504
B:26
BU-WH
B:21
YE-OG
B:34
BK-WH
B:35
WH
74/507
73/5072
73/5071
RHD
LHD
B:54
B:41
B:2
BK-YE
B:4
BK-YE
B:6
BK-YE
73/3012
B:3
B:5
73/3094
BK-YE
BU-BN
BU-BN
C
D
31/XX10
31/84
31/7
15/31
RD
30+
11B/20
11B/17
2/31
R7
11B/27
11A/2
RD
RD
VT-BN
GN-VT
RD-BU
4/56
C1:13
C5:2
GY-BK
C1:63
F20
F13
F22
CEM
CAN
LIN
C1:5
C1:6
C2:16
C2:34
C2:52
C2:58
C2:26
C2:76
C2:45
C2:55
YE-OG
VT-WH
RD-WH
3/9
74/511
74/514
BK-YE
YE-OG
4/83
PEM
6/62
7/69
YE-GY
WH-BN
6/33
BK-YE
31/66
A31W079

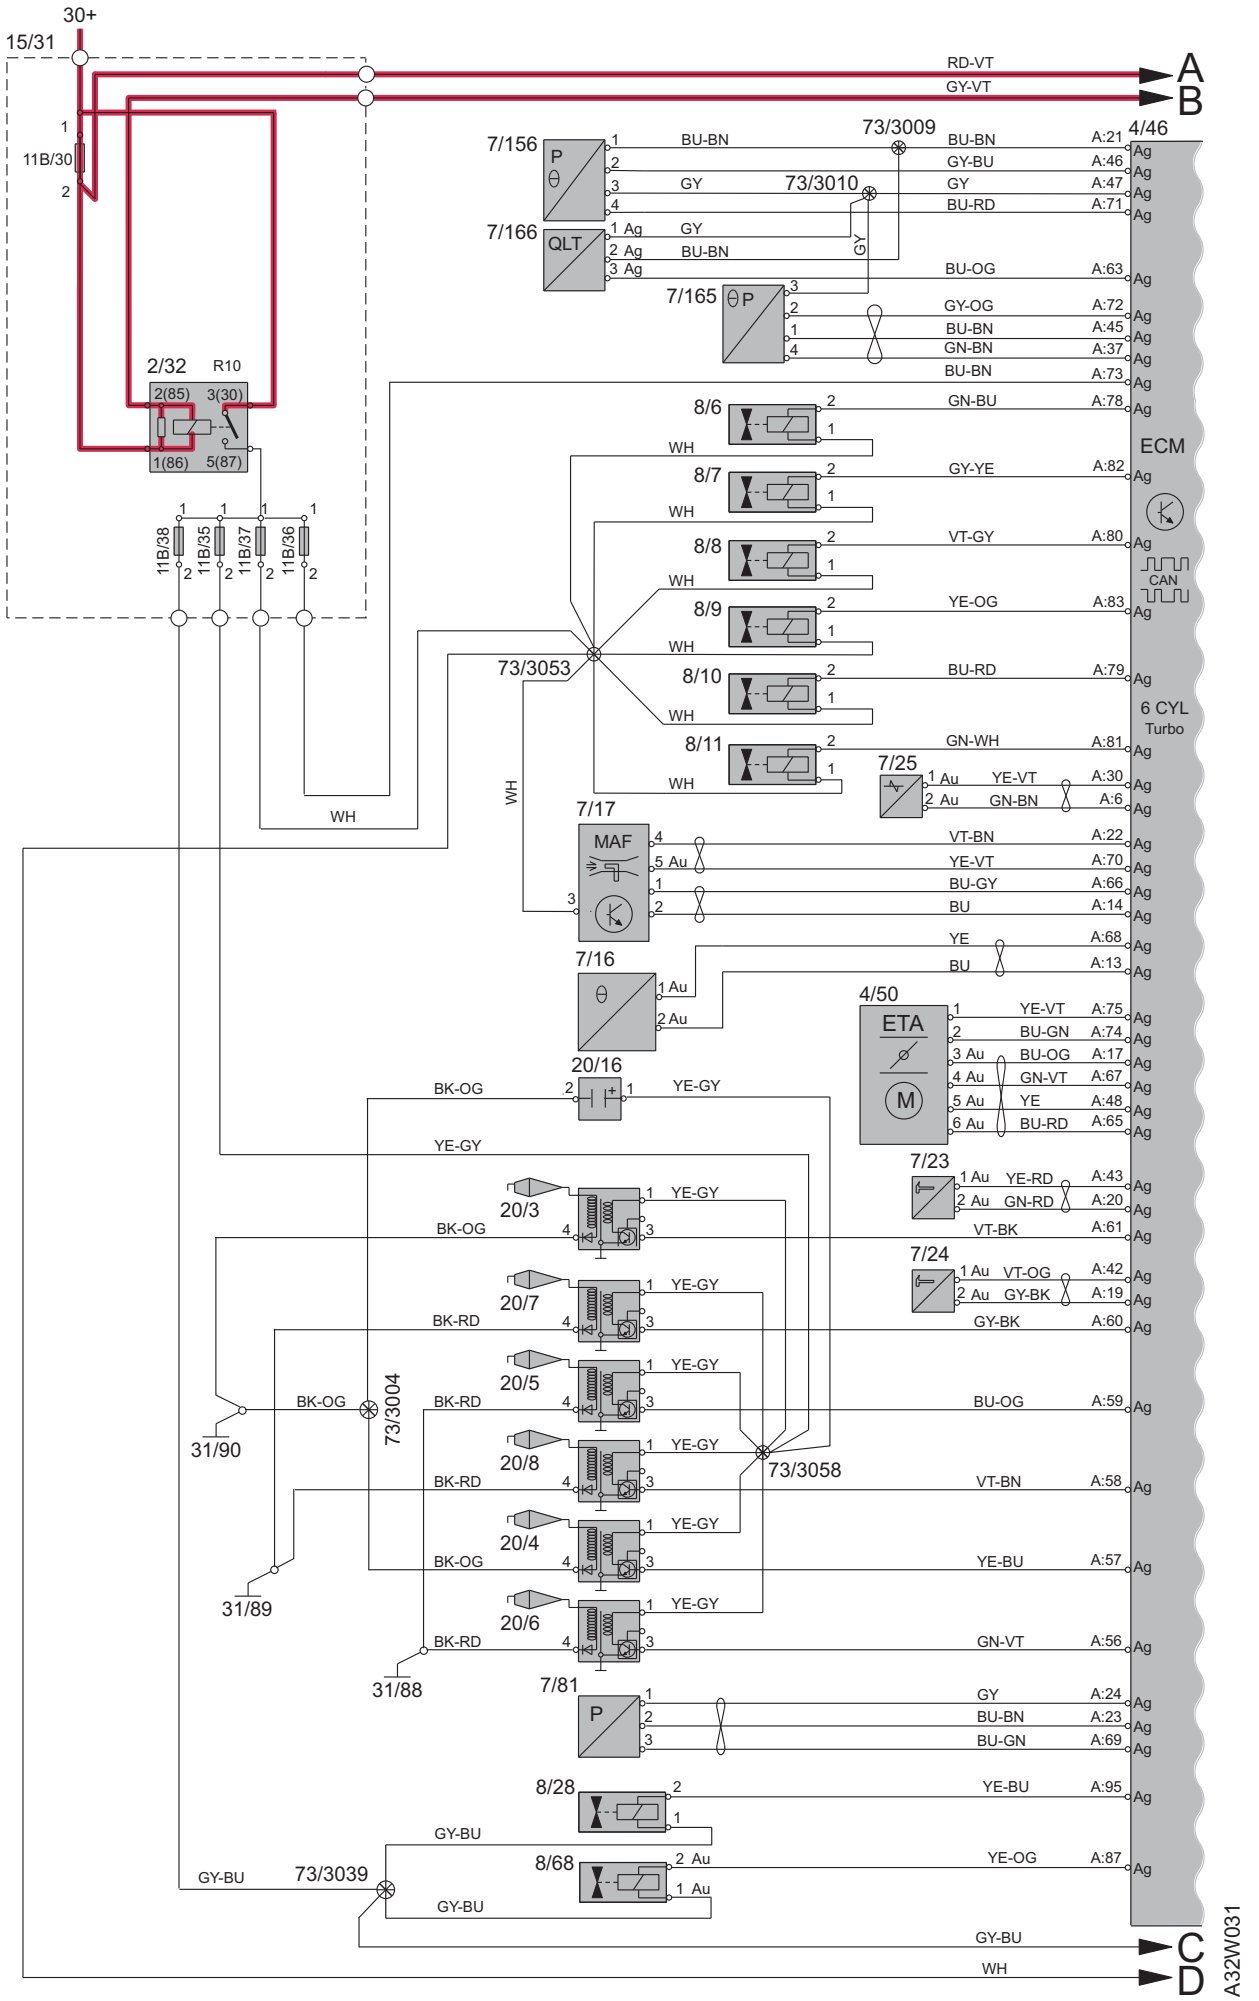
30+
15/31
11B/30
2/32
R10
2(85)
3(30)
1(86)
5(87)
11B/38
11B/35
11B/37
11B/36
RD-VT
GY-VT
A
B
4/46
73/3009
73/3010
7/156
7/166
QLT
7/165
BU-BN
GY
BU-RD
BU-OG
GY-OG
GN-BN
GN-BU
8/6
8/7
8/8
8/9
8/10
8/11
WH
GY-YE
VT-GY
YE-OG
BU-RD
GN-WH
ECM
CAN
6 CYL
Turbo
73/3053
7/25
YE-VT
GN-BN
7/17
MAF
VT-BN
BU-GY
BU
7/16
YE
4/50
ETA
BU-GN
GN-VT
20/16
BK-OG
YE-GY
7/23
YE-RD
GN-RD
VT-BK
20/3
20/7
20/5
20/8
20/4
20/6
7/24
VT-OG
GY-BK
BK-RD
73/3004
31/90
31/89
31/88
73/3058
7/81
P
BU-GN
8/28
8/68
73/3039
GY-BU
A:21
A:46
A:47
A:71
A:63
A:72
A:45
A:37
A:73
A:78
A:82
A:80
A:83
A:79
A:81
A:30
A:6
A:22
A:70
A:66
A:14
A:68
A:13
A:75
A:74
A:17
A:67
A:48
A:65
A:43
A:20
A:61
A:42
A:19
A:60
A:59
A:58
A:57
A:56
A:24
A:23
A:69
A:95
A:87
C
D
A32W031

Group 28 Ignition and control system
Engine management system, 6-Cyl. Turbo 2:2

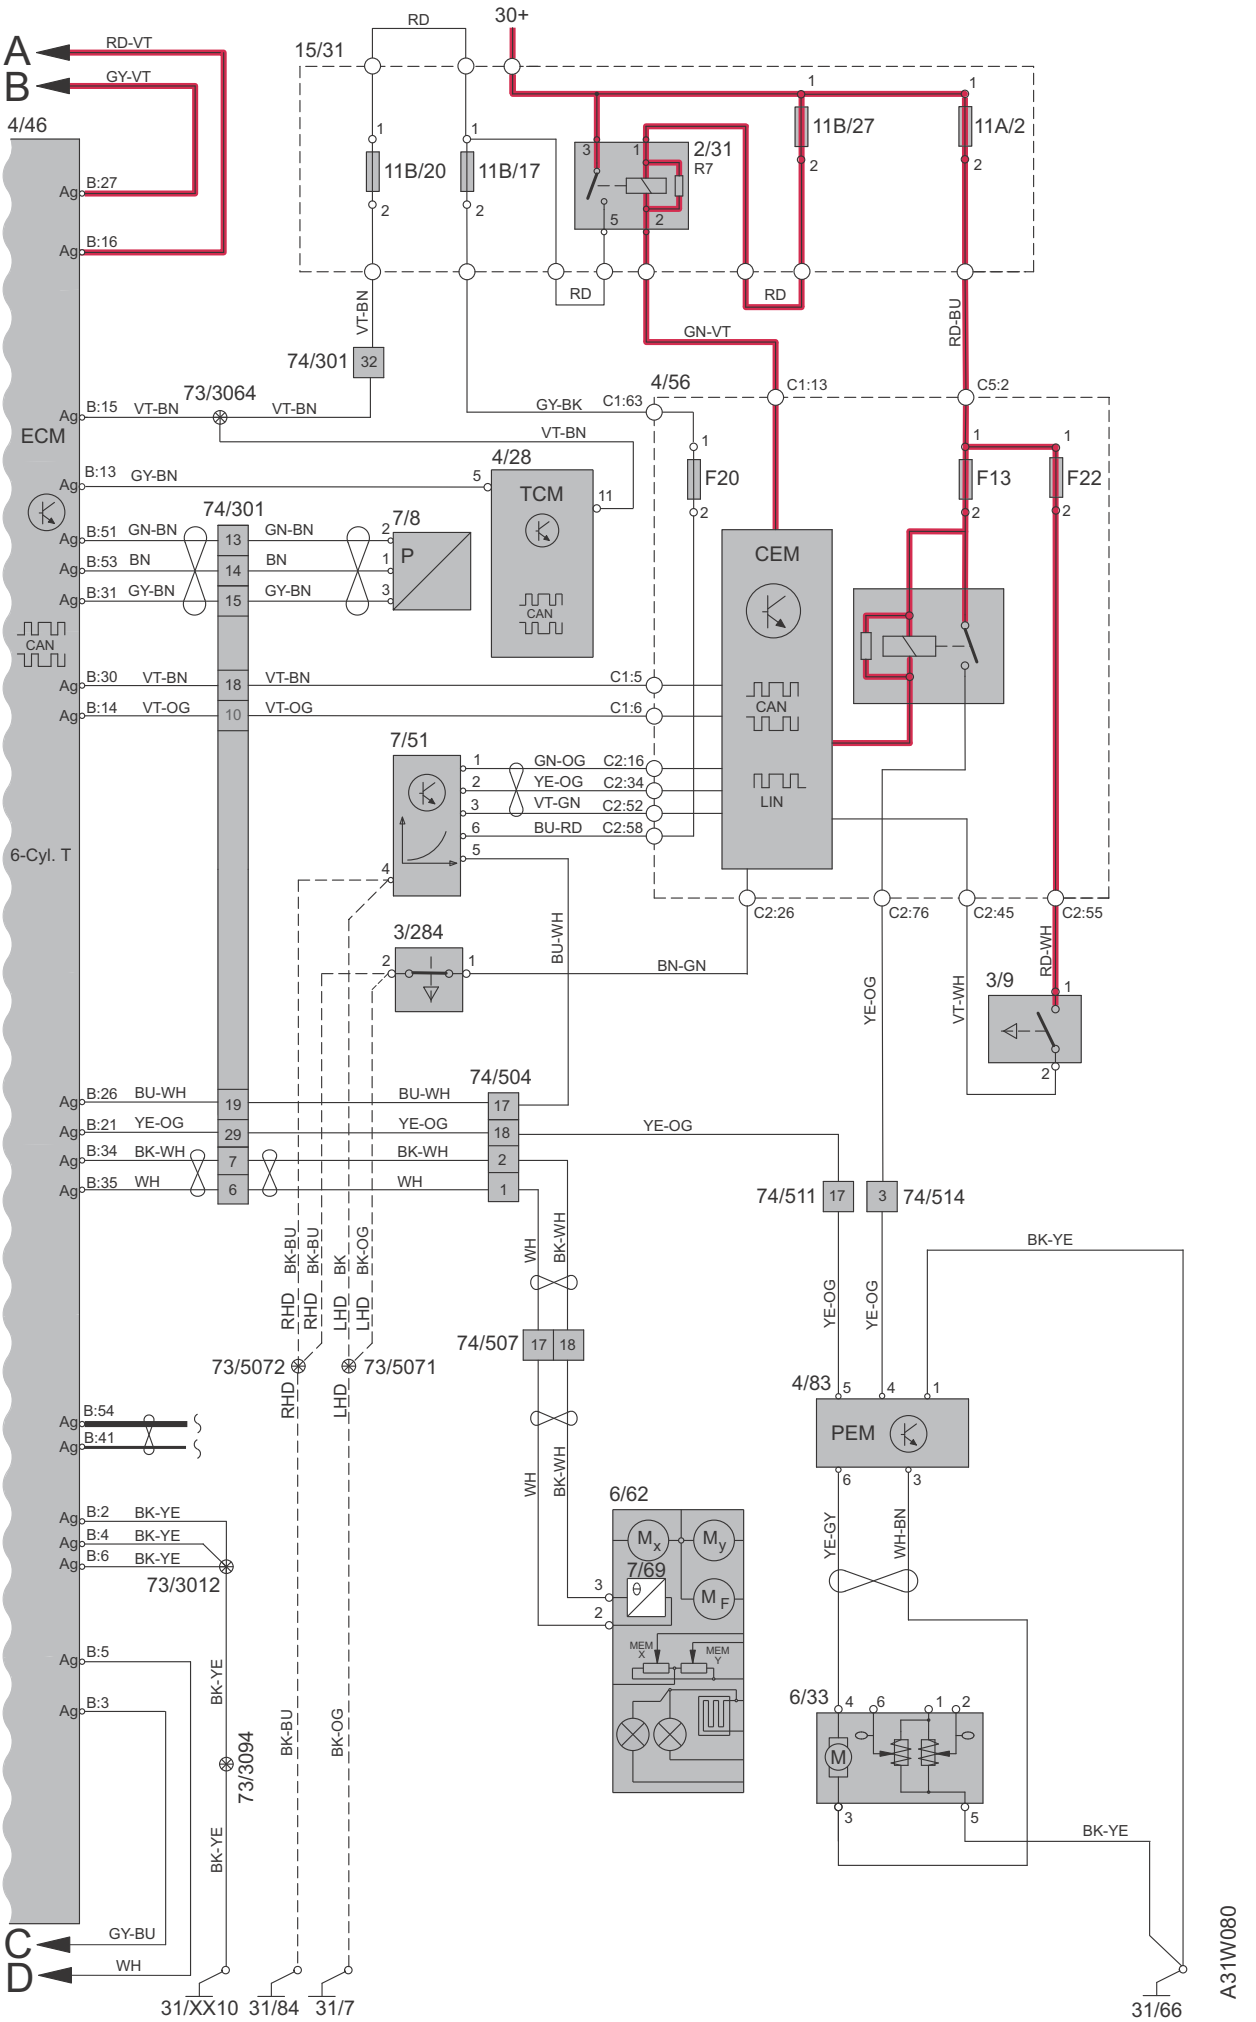

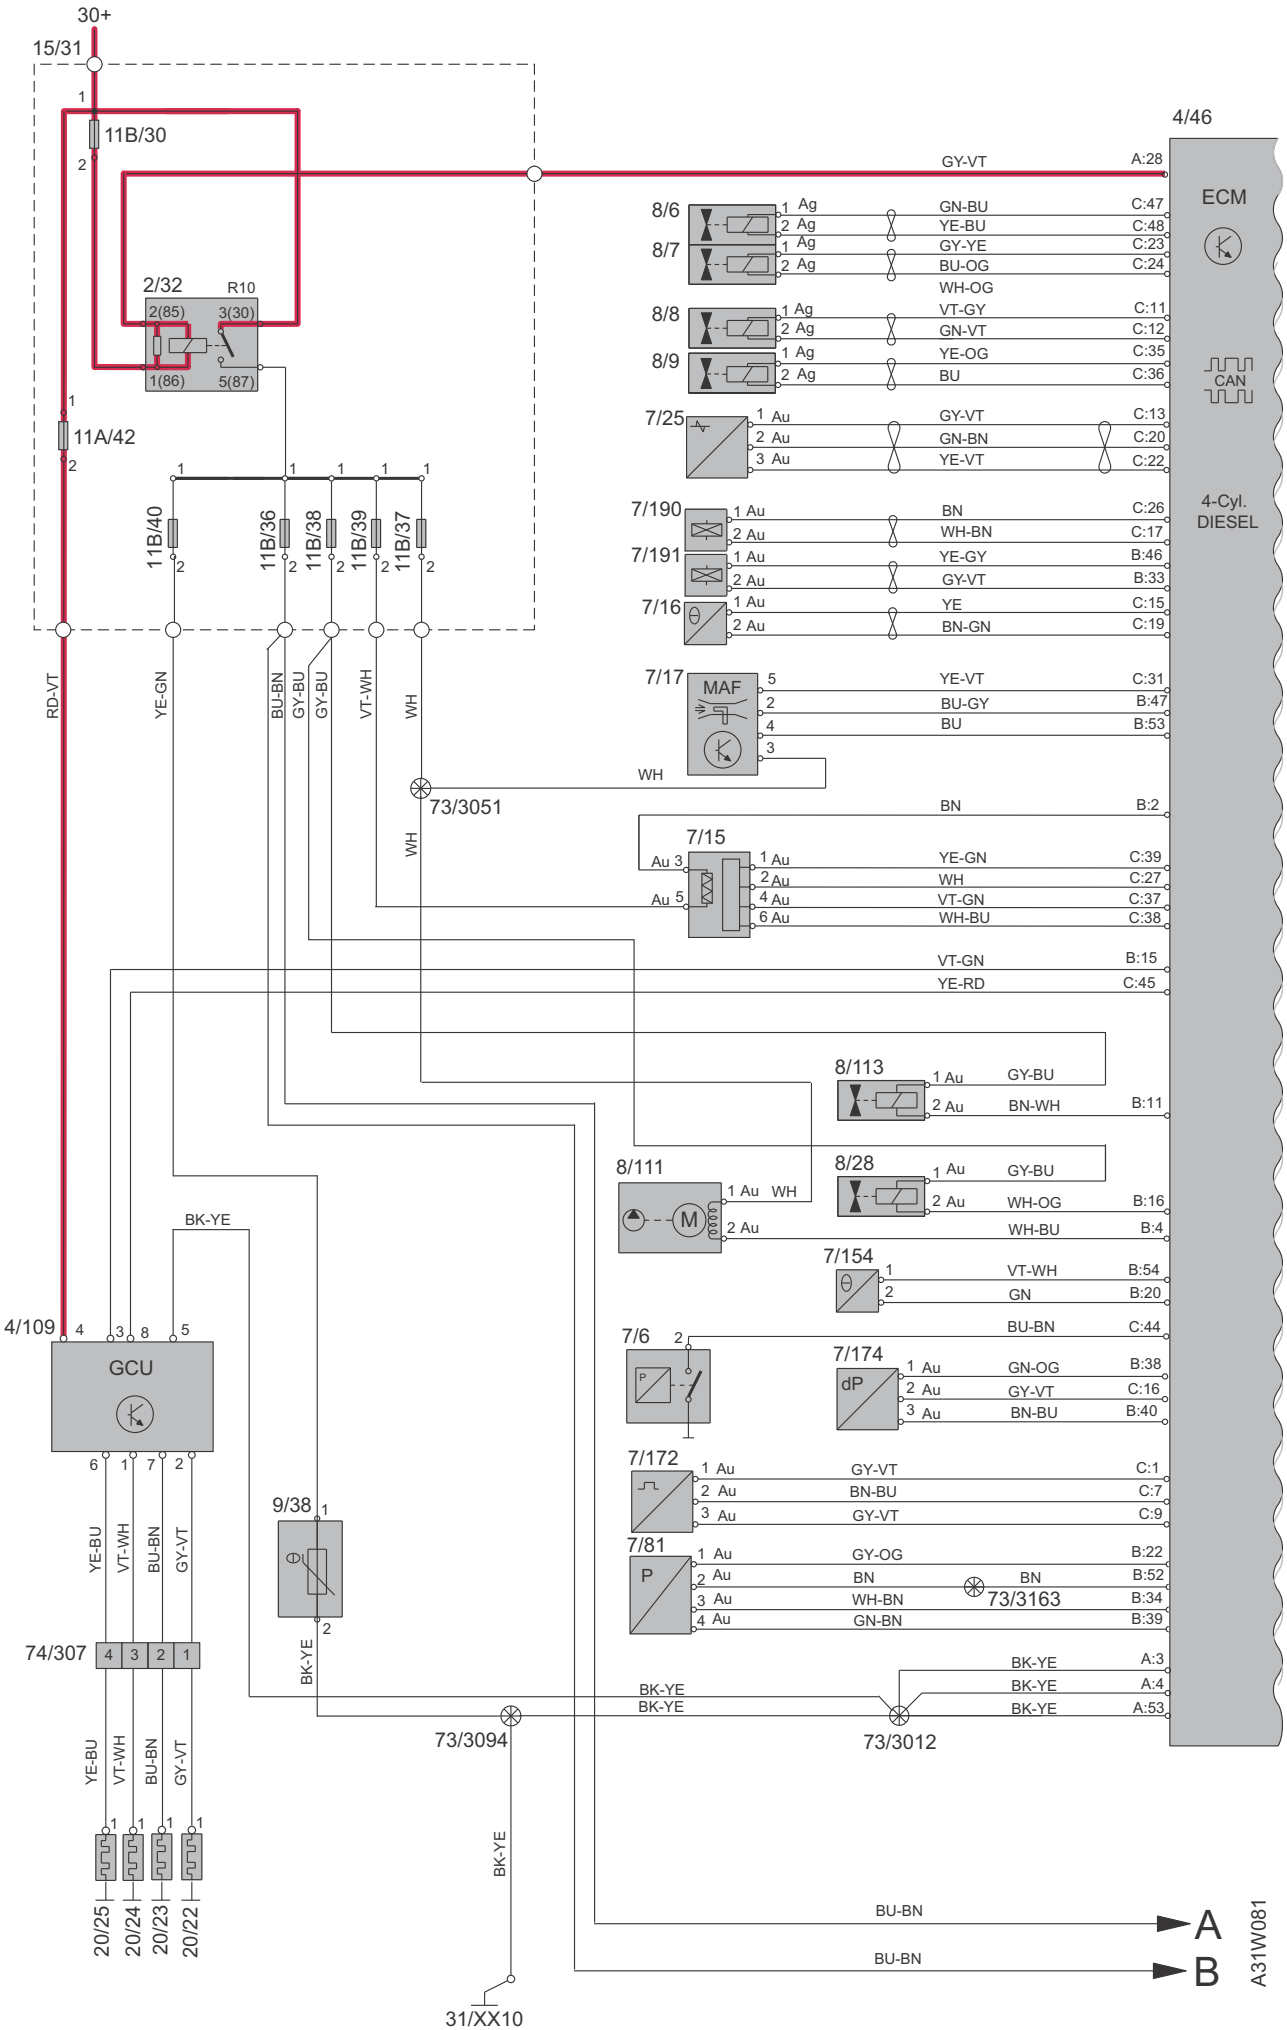
30+
15/31
11B/30
2/32
R10
2(85)
3(30)
1(86)
5(87)
11A/42
11B/40
11B/36
11B/38
11B/39
11B/37
4/46
ECM
CAN
4-Cyl. DIESEL
GY-VT
A:28
8/6
8/7
8/8
8/9
GN-BU
C:47
YE-BU
C:48
GY-YE
C:23
BU-OG
C:24
WH-OG
VT-GY
C:11
GN-VT
C:12
YE-OG
C:35
BU
C:36
7/25
GY-VT
C:13
GN-BN
C:20
YE-VT
C:22
7/190
7/191
7/16
BN
C:26
WH-BN
C:17
YE-GY
B:46
GY-VT
B:33
YE
C:15
BN-GN
C:19
7/17
MAF
YE-VT
C:31
BU-GY
B:47
BU
B:53
WH
73/3051
BN
B:2
7/15
YE-GN
C:39
WH
C:27
VT-GN
C:37
WH-BU
C:38
VT-GN
B:15
YE-RD
C:45
8/113
GY-BU
BN-WH
B:11
8/111
WH
8/28
WH-OG
B:16
WH-BU
B:4
7/154
VT-WH
B:54
GN
B:20
BU-BN
C:44
7/6
7/174
GN-OG
B:38
GY-VT
C:16
BN-BU
B:40
7/172
GY-VT
C:1
BN-BU
C:7
GY-VT
C:9
7/81
GY-OG
B:22
BN
B:52
WH-BN
B:34
GN-BN
B:39
73/3163
BK-YE
A:3
BK-YE
A:4
BK-YE
A:53
73/3012
73/3094
4/109
GCU
BK-YE
9/38
74/307
YE-BU
VT-WH
BU-BN
GY-VT
20/25
20/24
20/23
20/22
RD-VT
YE-GN
BU-BN
GY-BU
GY-BU
VT-WH
WH
WH
BU-BN
BU-BN
A
B
31/XX10
A31W081

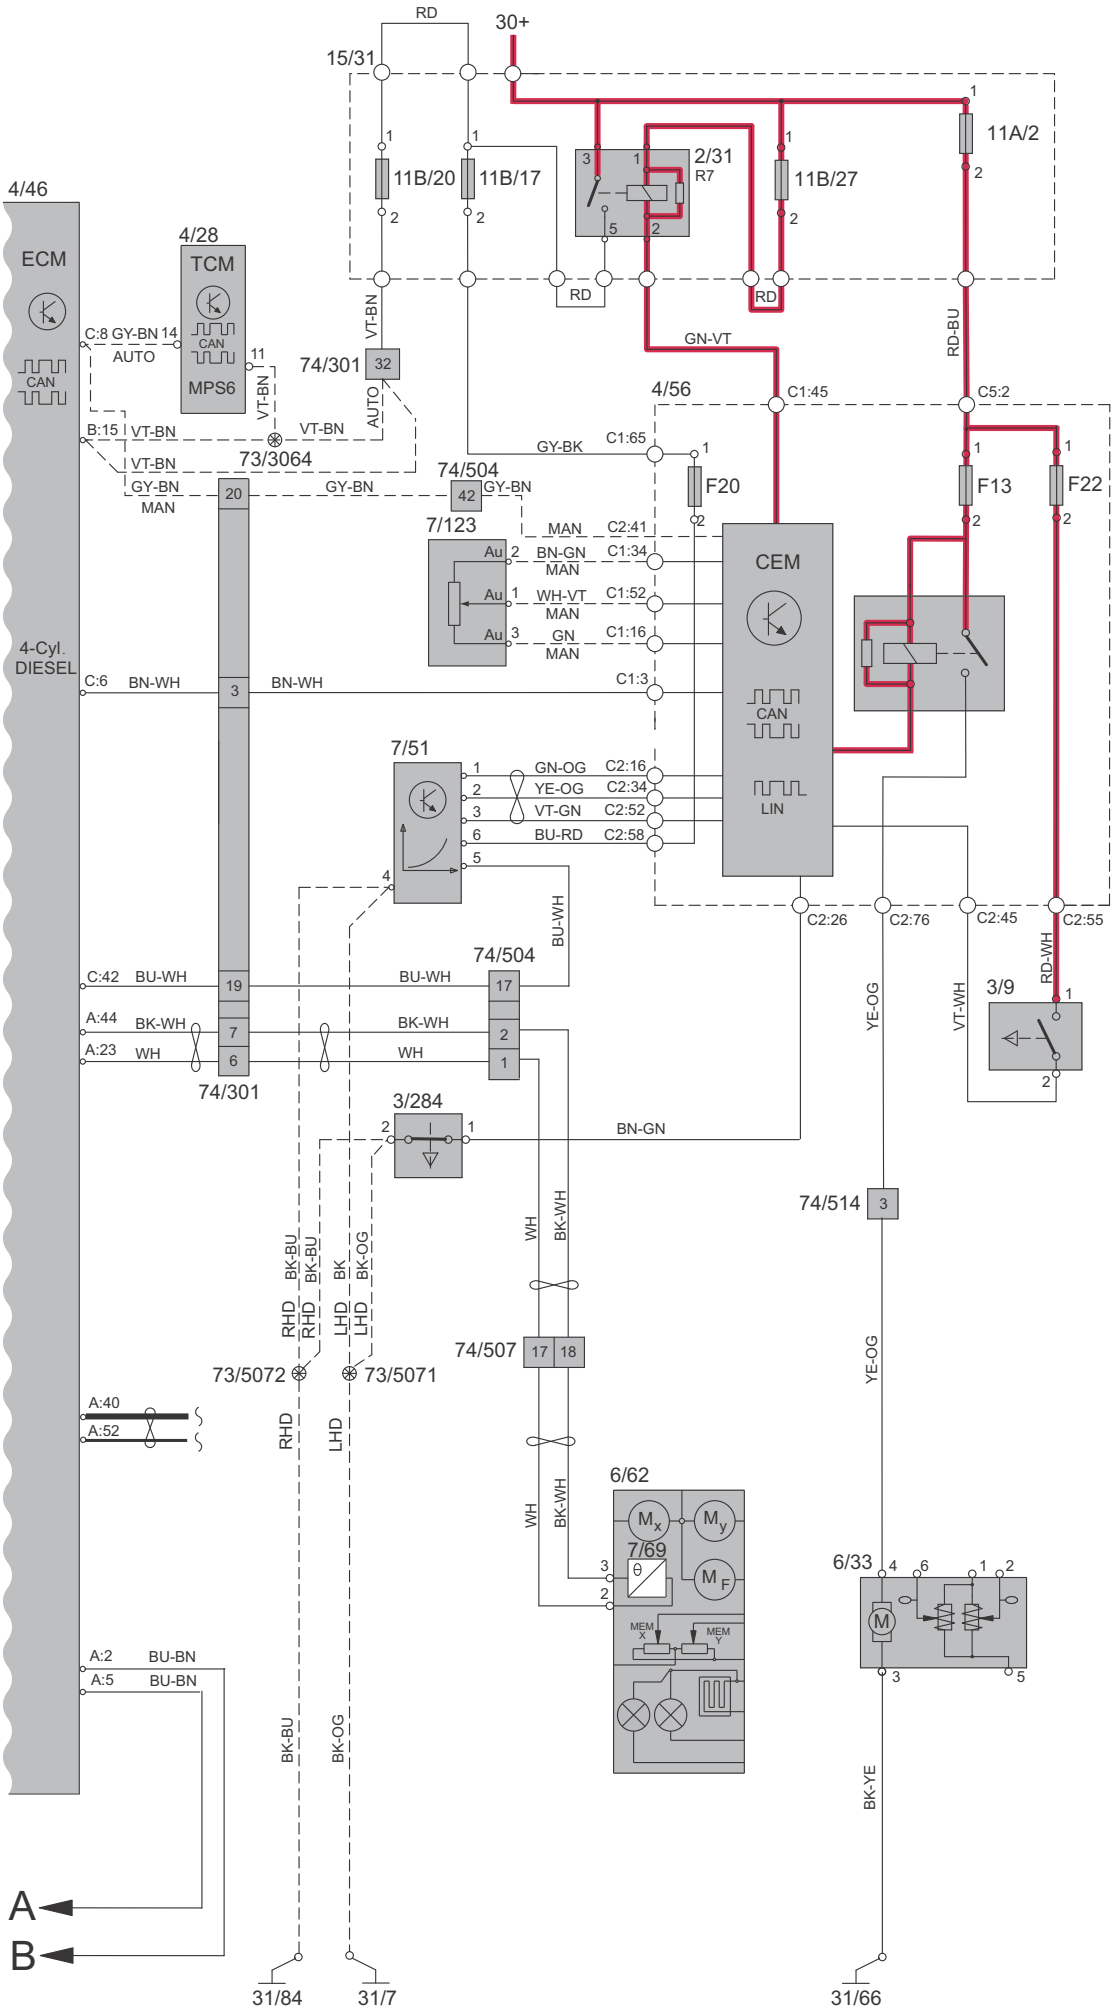
RD
30+
15/31
11B/20
11B/17
2/31
R7
11B/27
11A/2
4/46
ECM
CAN
4/28
TCM
CAN
MPS6
C:8 GY-BN 14
AUTO
11
VT-BN
74/301
32
AUTO
B:15
VT-BN
73/3064
GY-BN
MAN
20
74/504
42
GY-BN
GN-VT
RD-BU
4/56
C1:45
C5:2
GY-BK
C1:65
F20
F13
F22
7/123
MAN
C2:41
Au
BN-GN
MAN
C1:34
WH-VT
C1:52
GN
C1:16
CEM
CAN
LIN
4-Cyl.
DIESEL
C:6
BN-WH
3
C1:3
7/51
GN-OG
C2:16
YE-OG
C2:34
VT-GN
C2:52
BU-RD
C2:58
C2:26
C2:76
C2:45
C2:55
BU-WH
74/504
C:42
BU-WH
19
17
A:44
BK-WH
7
2
A:23
WH
6
1
74/301
3/9
RD-WH
VT-WH
YE-OG
3/284
BN-GN
74/514
3
WH
BK-WH
BK-BU
BK-OG
RHD
LHD
74/507
17
18
73/5072
73/5071
A:40
A:52
6/62
7/69
6/33
A:2
BU-BN
A:5
BU-BN
BK-YE
A
B
31/84
31/7
31/66
A31W082

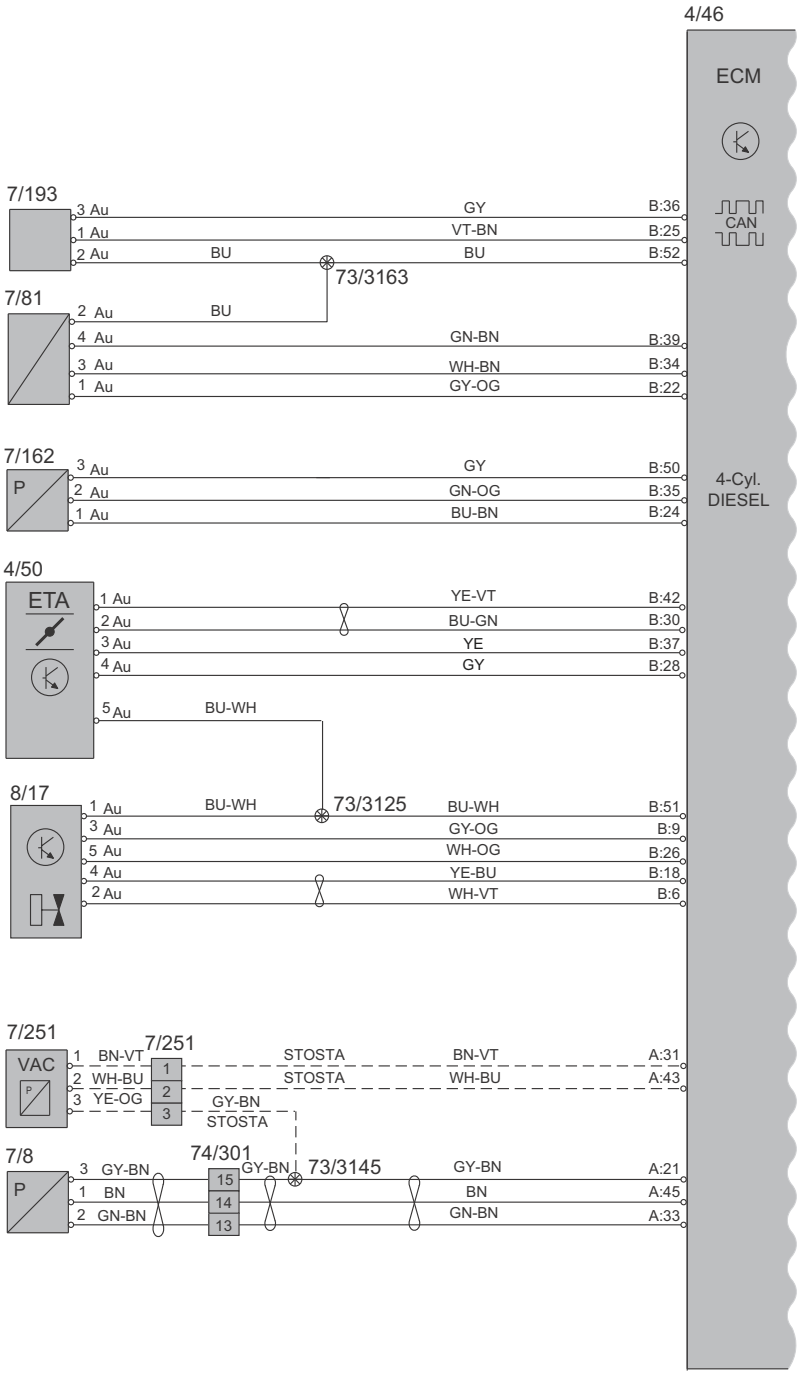
4/46
ECM
CAN
4-Cyl. DIESEL
7/193
3 Au
1 Au
2 Au
GY
VT-BN
BU
B:36
B:25
B:52
73/3163
7/81
2 Au
4 Au
3 Au
1 Au
BU
GN-BN
WH-BN
GY-OG
B:39
B:34
B:22
7/162
P
3 Au
2 Au
1 Au
GY
GN-OG
BU-BN
B:50
B:35
B:24
4/50
ETA
1 Au
2 Au
3 Au
4 Au
5 Au
YE-VT
BU-GN
YE
GY
BU-WH
B:42
B:30
B:37
B:28
8/17
1 Au
3 Au
5 Au
4 Au
2 Au
BU-WH
73/3125
BU-WH
GY-OG
WH-OG
YE-BU
WH-VT
B:51
B:9
B:26
B:18
B:6
7/251
VAC
P
1 BN-VT
2 WH-BU
3 YE-OG
7/251
1
2
3
STOSTA
STOSTA
GY-BN
STOSTA
BN-VT
WH-BU
A:31
A:43
7/8
P
3 GY-BN
1 BN
2 GN-BN
74/301
15
14
13
GY-BN
73/3145
GY-BN
BN
GN-BN
A:21
A:45
A:33

A24W039

Group 28 Ignition and control system
Engine management system, 5-Cyl. Diesel 1:3

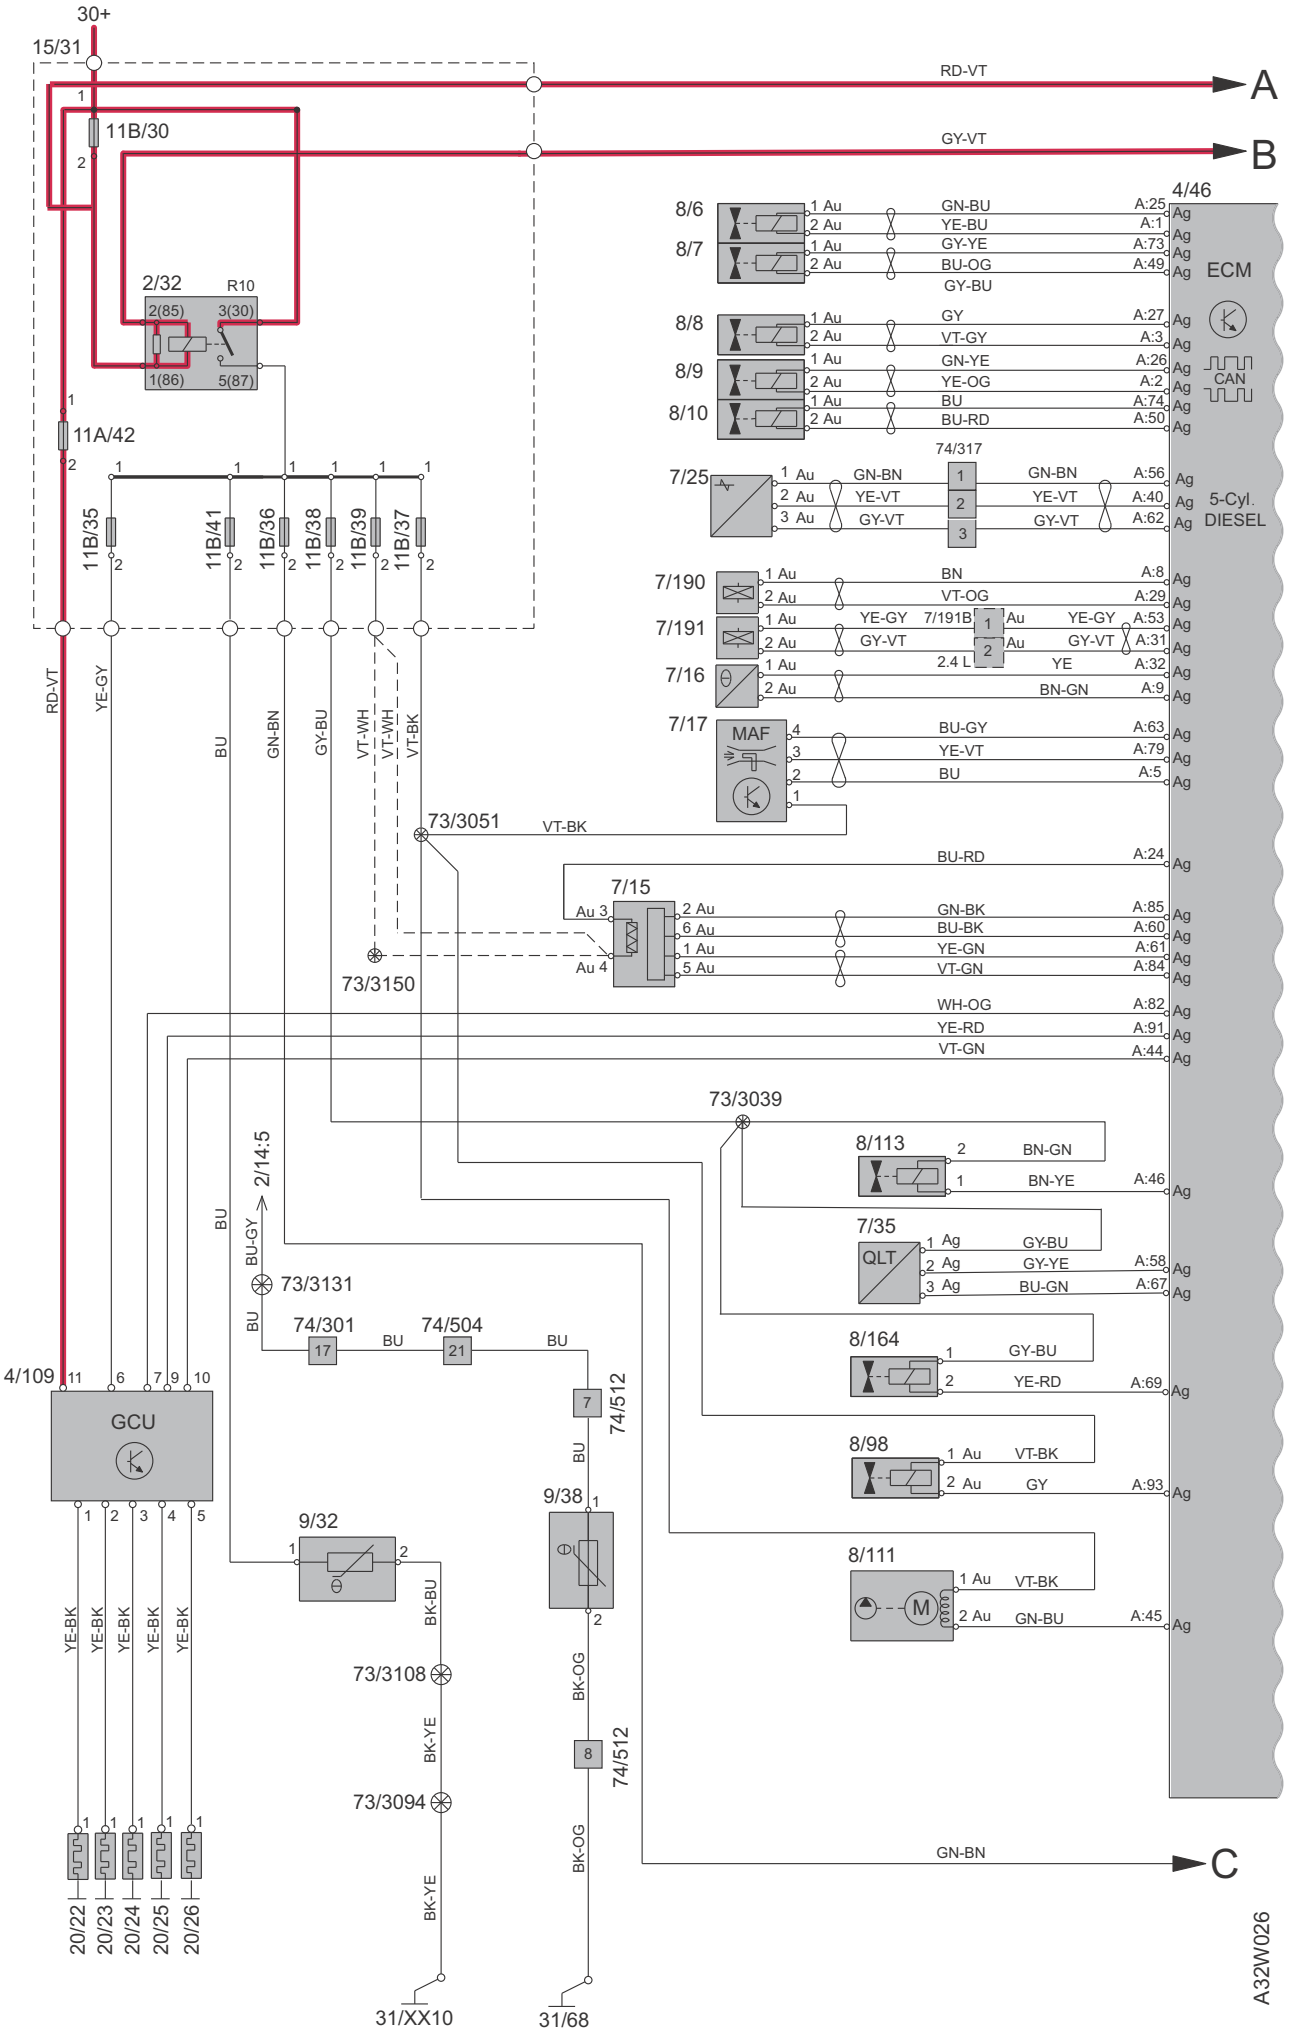

Group 28 Ignition and control system
Engine management system, 5-Cyl. Diesel 2:3

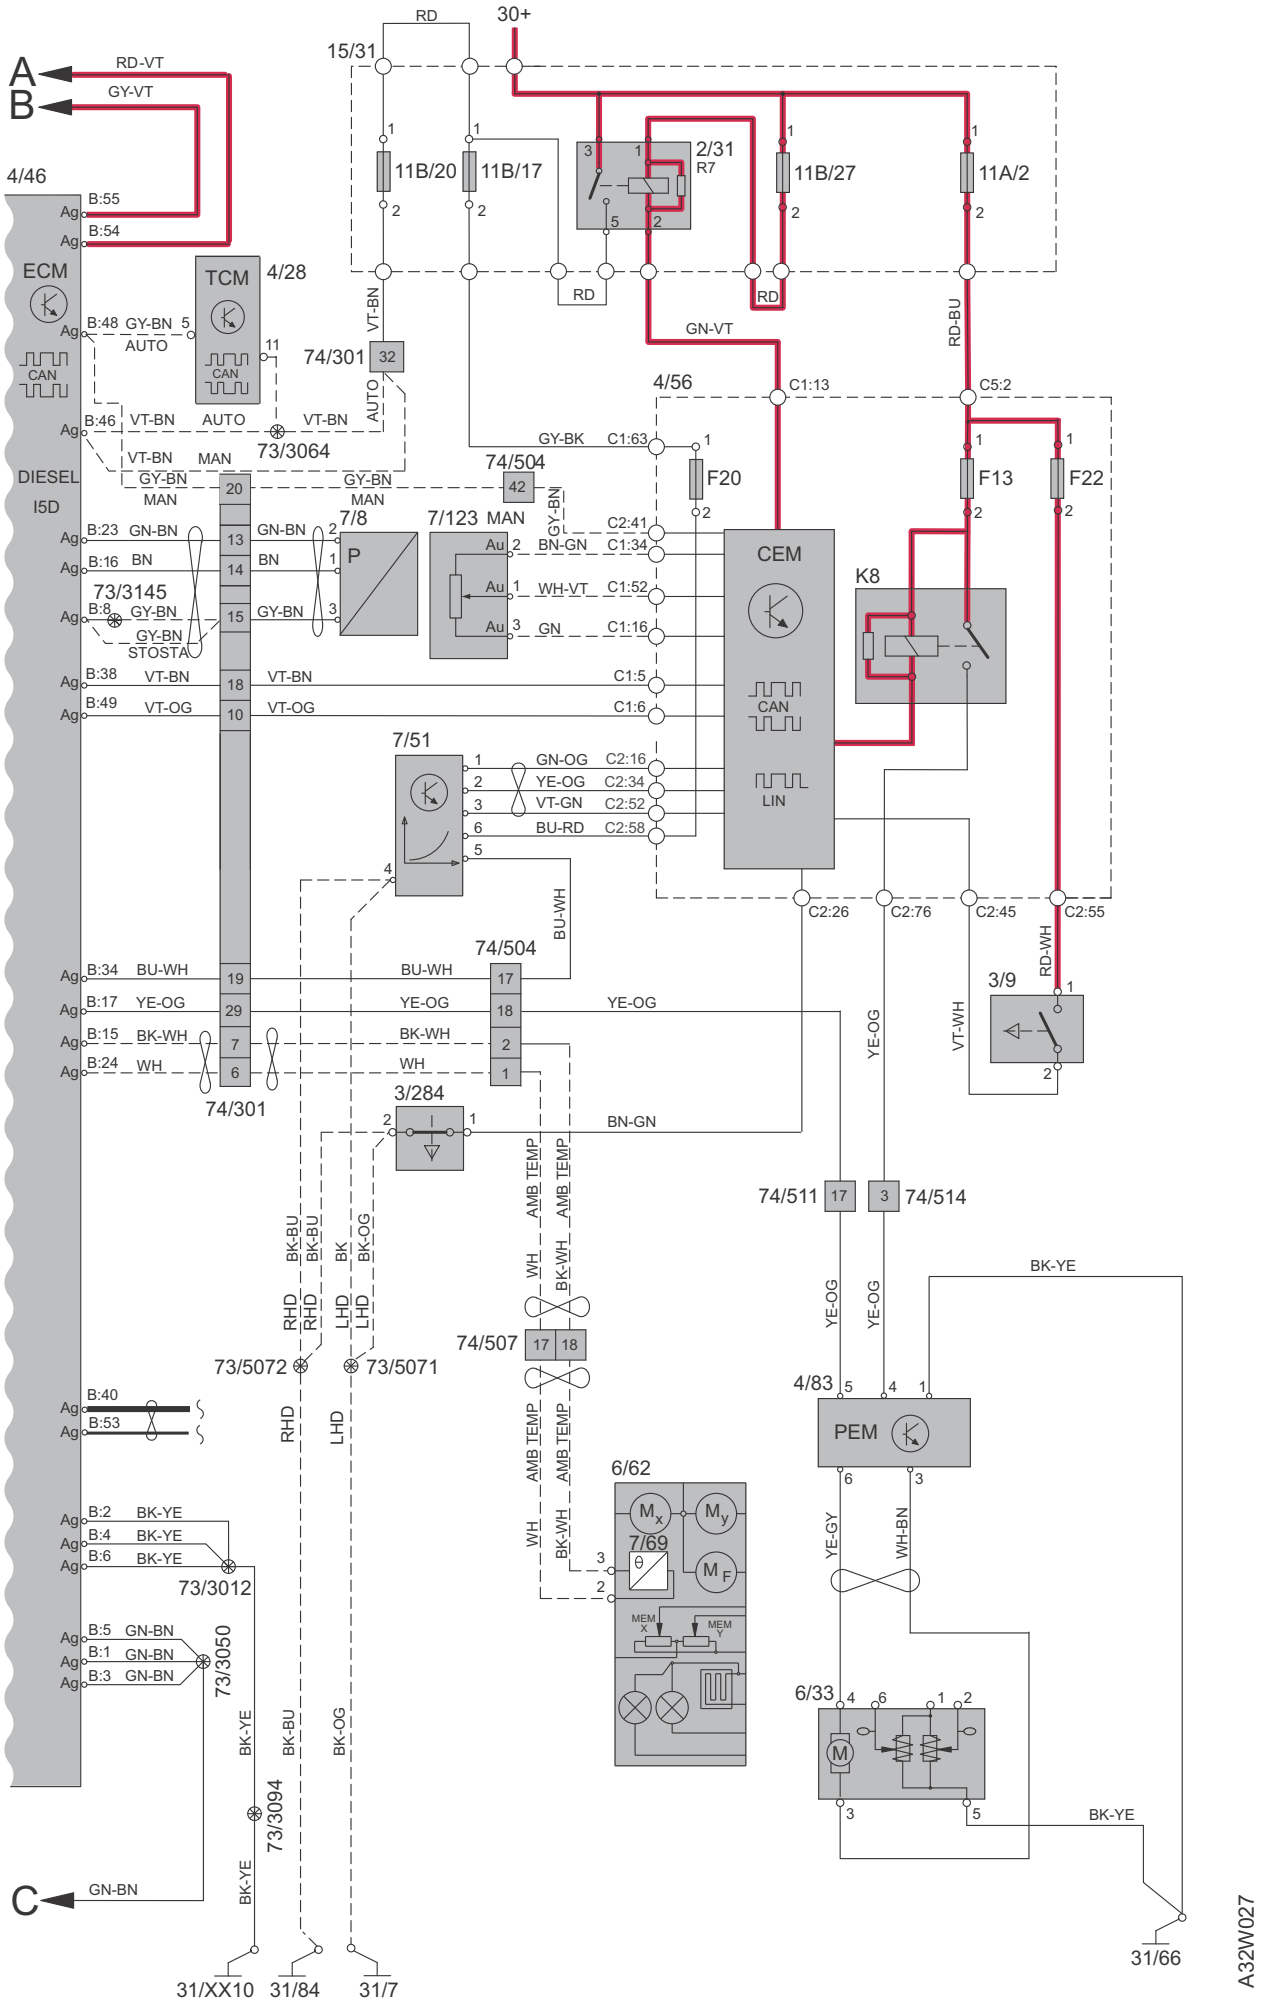

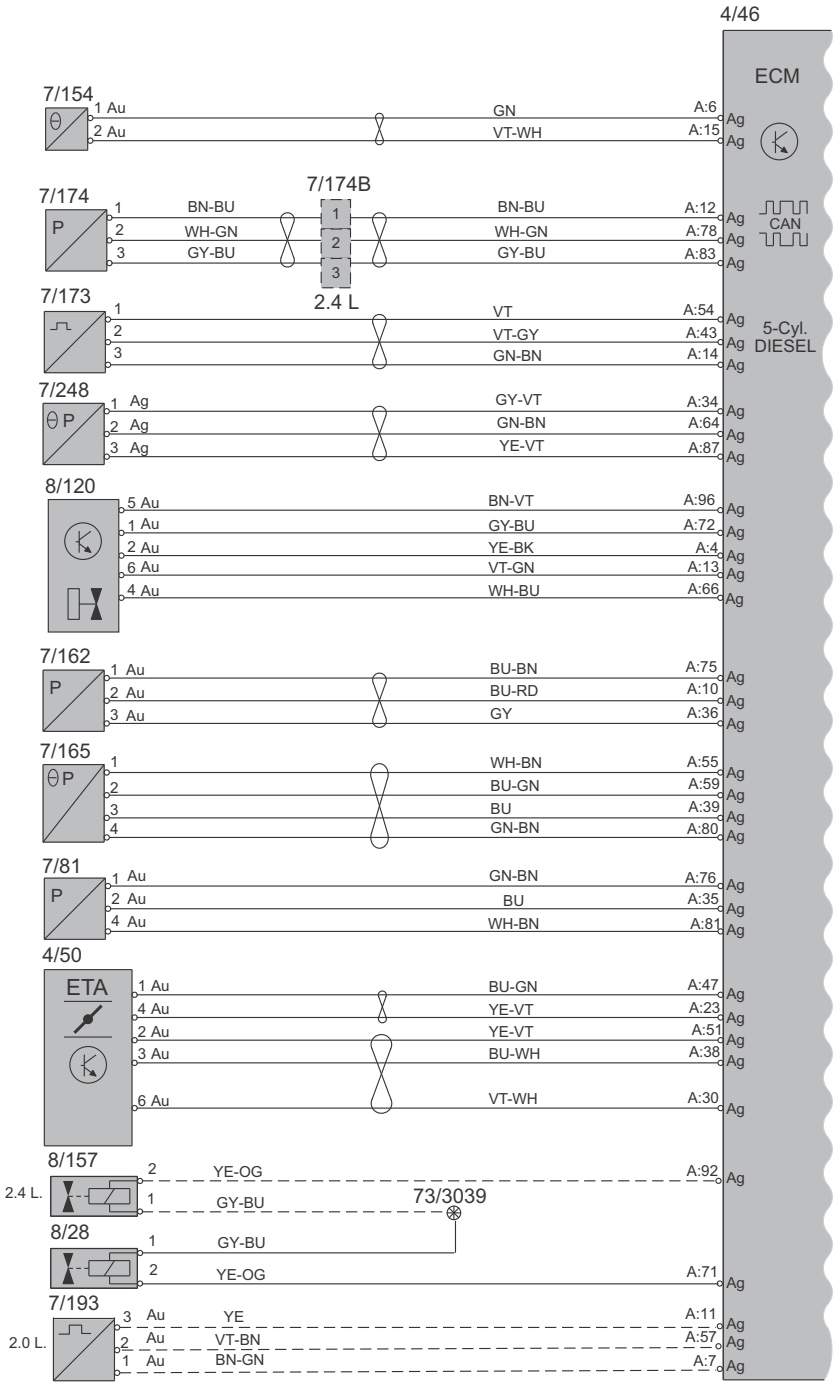
4/46
ECM
7/154
1 Au
2 Au
GN
VT-WH
A:6
A:15
Ag
7/174B
7/174
BN-BU
WH-GN
GY-BU
A:12
A:78
A:83
CAN
7/173
2.4 L
VT
VT-GY
GN-BN
A:54
A:43
A:14
5-Cyl. DIESEL
7/248
GY-VT
GN-BN
YE-VT
A:34
A:64
A:87
8/120
BN-VT
GY-BU
YE-BK
VT-GN
WH-BU
A:96
A:72
A:4
A:13
A:66
7/162
BU-BN
BU-RD
GY
A:75
A:10
A:36
7/165
WH-BN
BU-GN
BU
GN-BN
A:55
A:59
A:39
A:80
7/81
GN-BN
BU
WH-BN
A:76
A:35
A:81
4/50
ETA
BU-GN
YE-VT
YE-VT
BU-WH
VT-WH
A:47
A:23
A:51
A:38
A:30
8/157
2.4 L.
YE-OG
GY-BU
73/3039
A:92
8/28
GY-BU
YE-OG
A:71
7/193
2.0 L.
YE
VT-BN
BN-GN
A:11
A:57
A:7

A31W098

Group 28 Ignition and control system
Emission control 4-Cyl. 1.6l Turbo

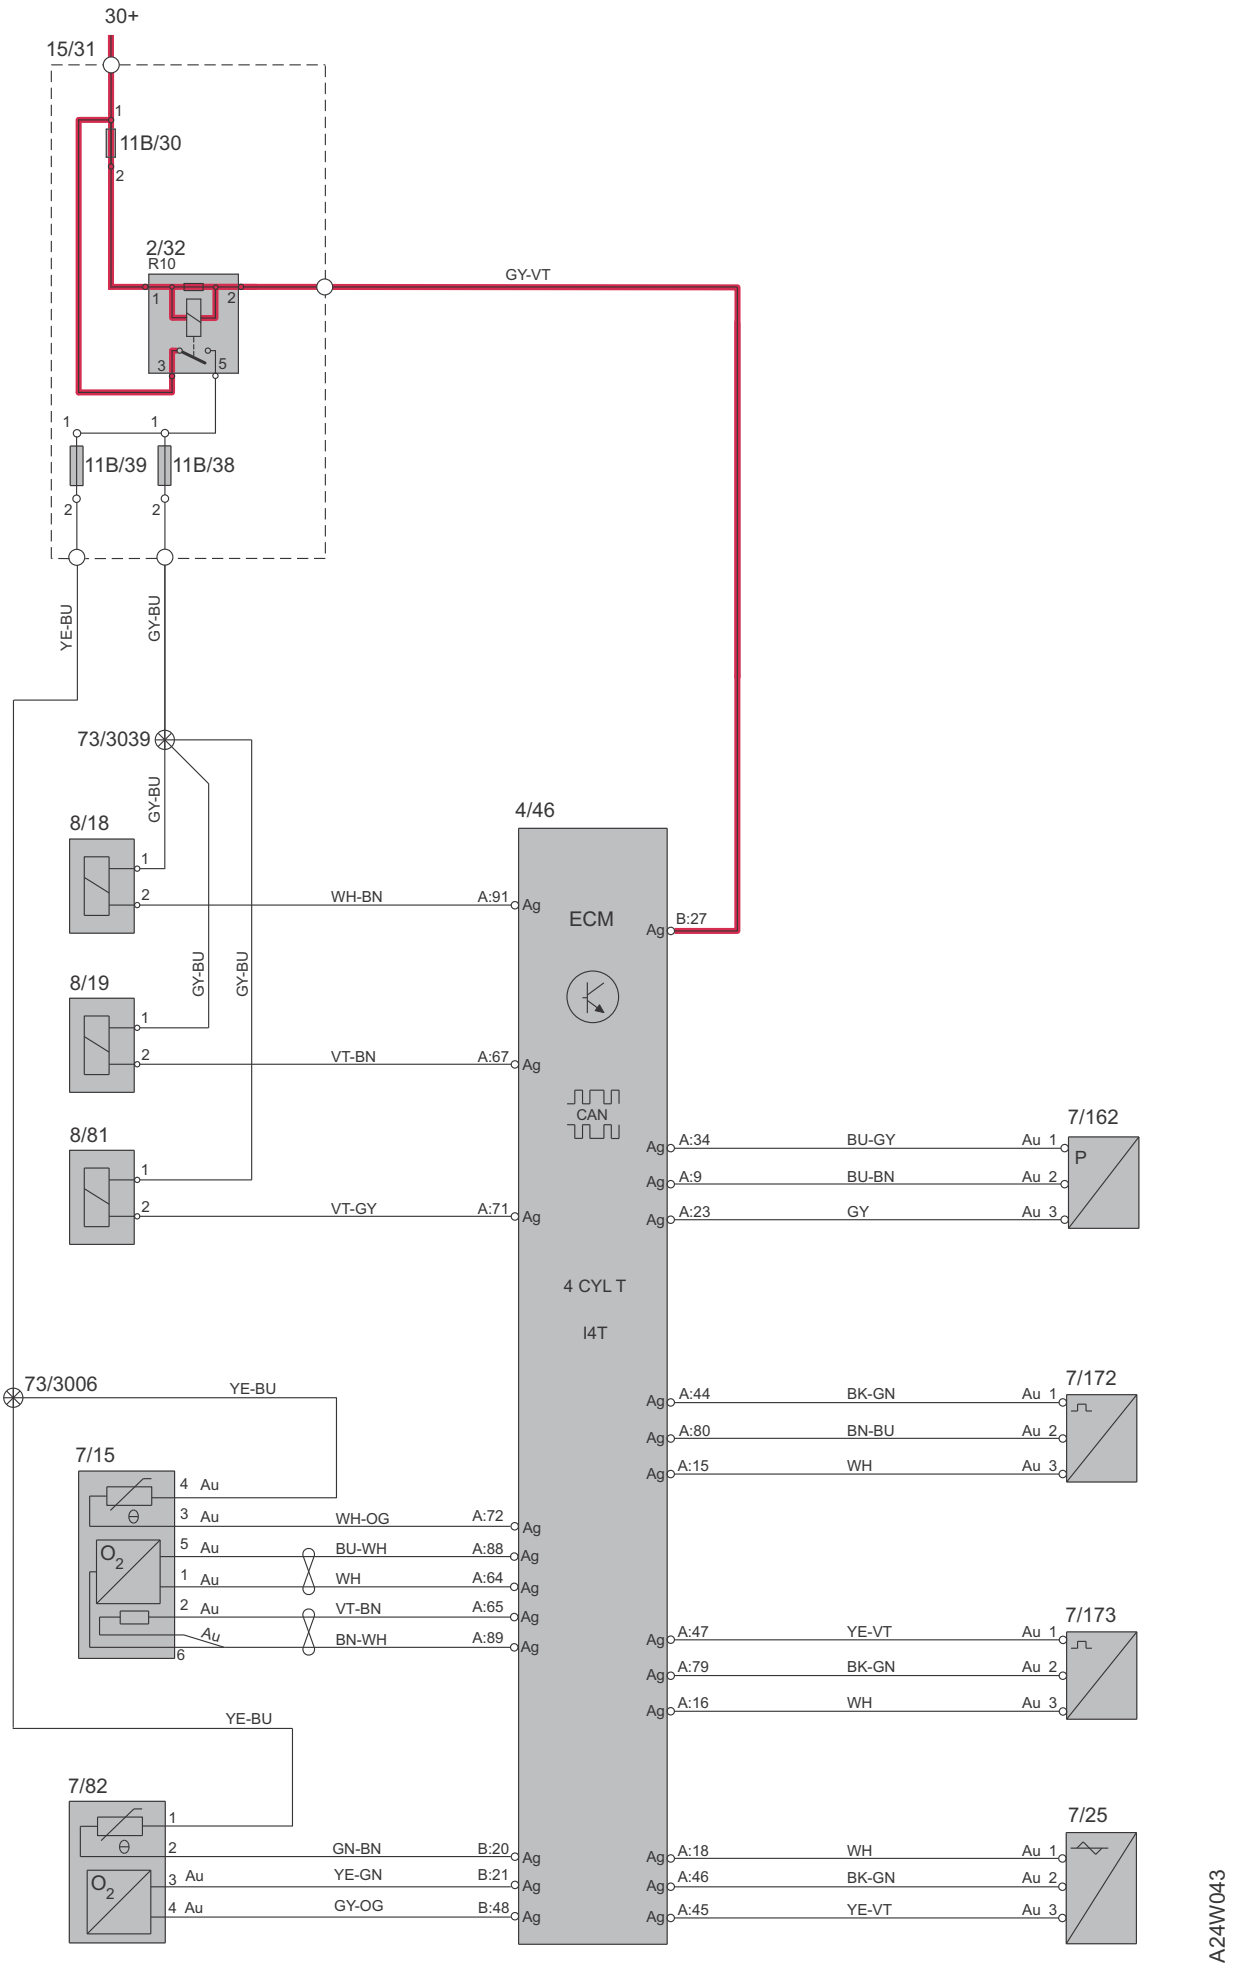

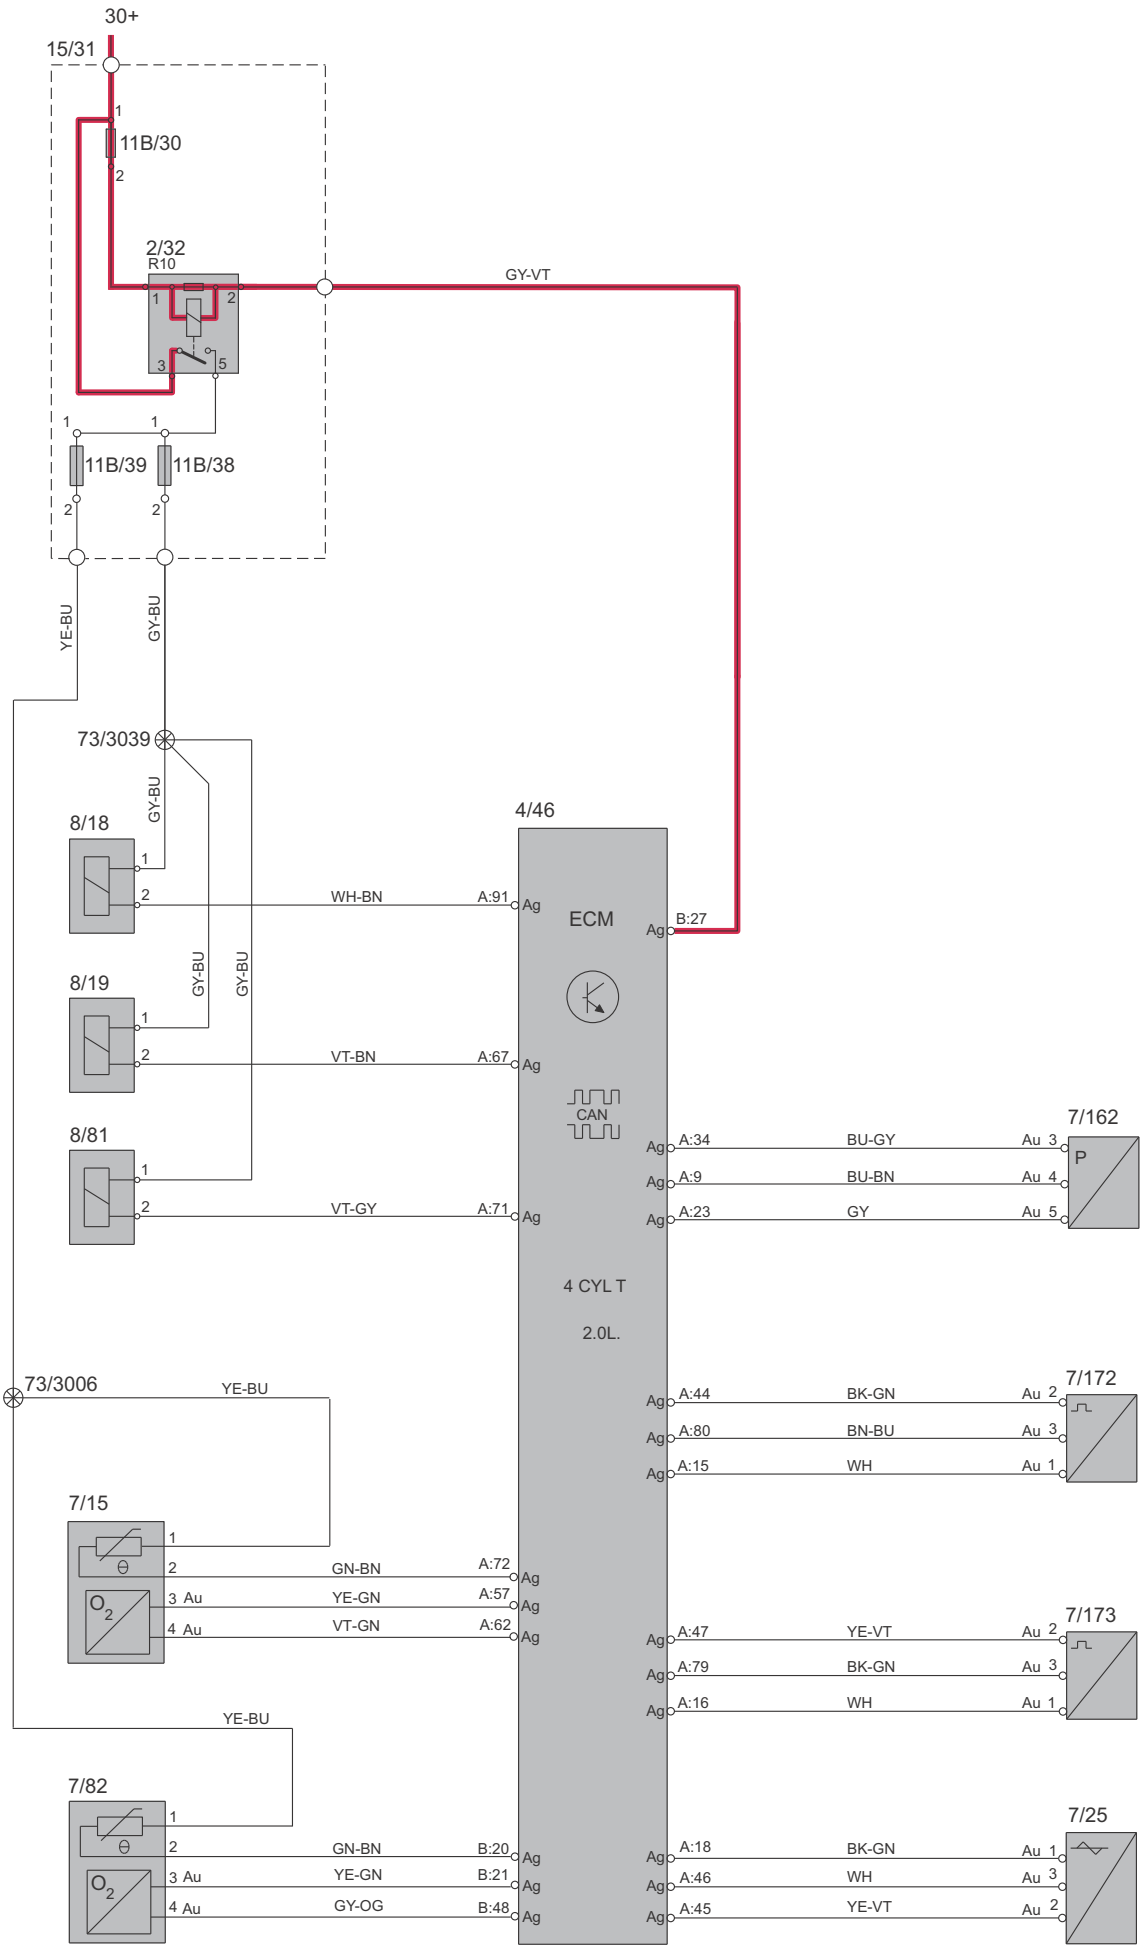
30+
15/31
11B/30
2/32
R10
GY-VT
11B/39
11B/38
YE-BU
GY-BU
73/3039
8/18
8/19
8/81
4/46
ECM
WH-BN
A:91
B:27
VT-BN
A:67
VT-GY
A:71
CAN
7/162
BU-GY
BU-BN
GY
4 CYL T
2.0L.
73/3006
7/15
GN-BN
A:72
YE-GN
A:57
VT-GN
A:62
7/172
BK-GN
BN-BU
WH
7/173
YE-VT
7/82
B:20
B:21
GY-OG
B:48
7/25
A:18
A:46
A:45
A24W044

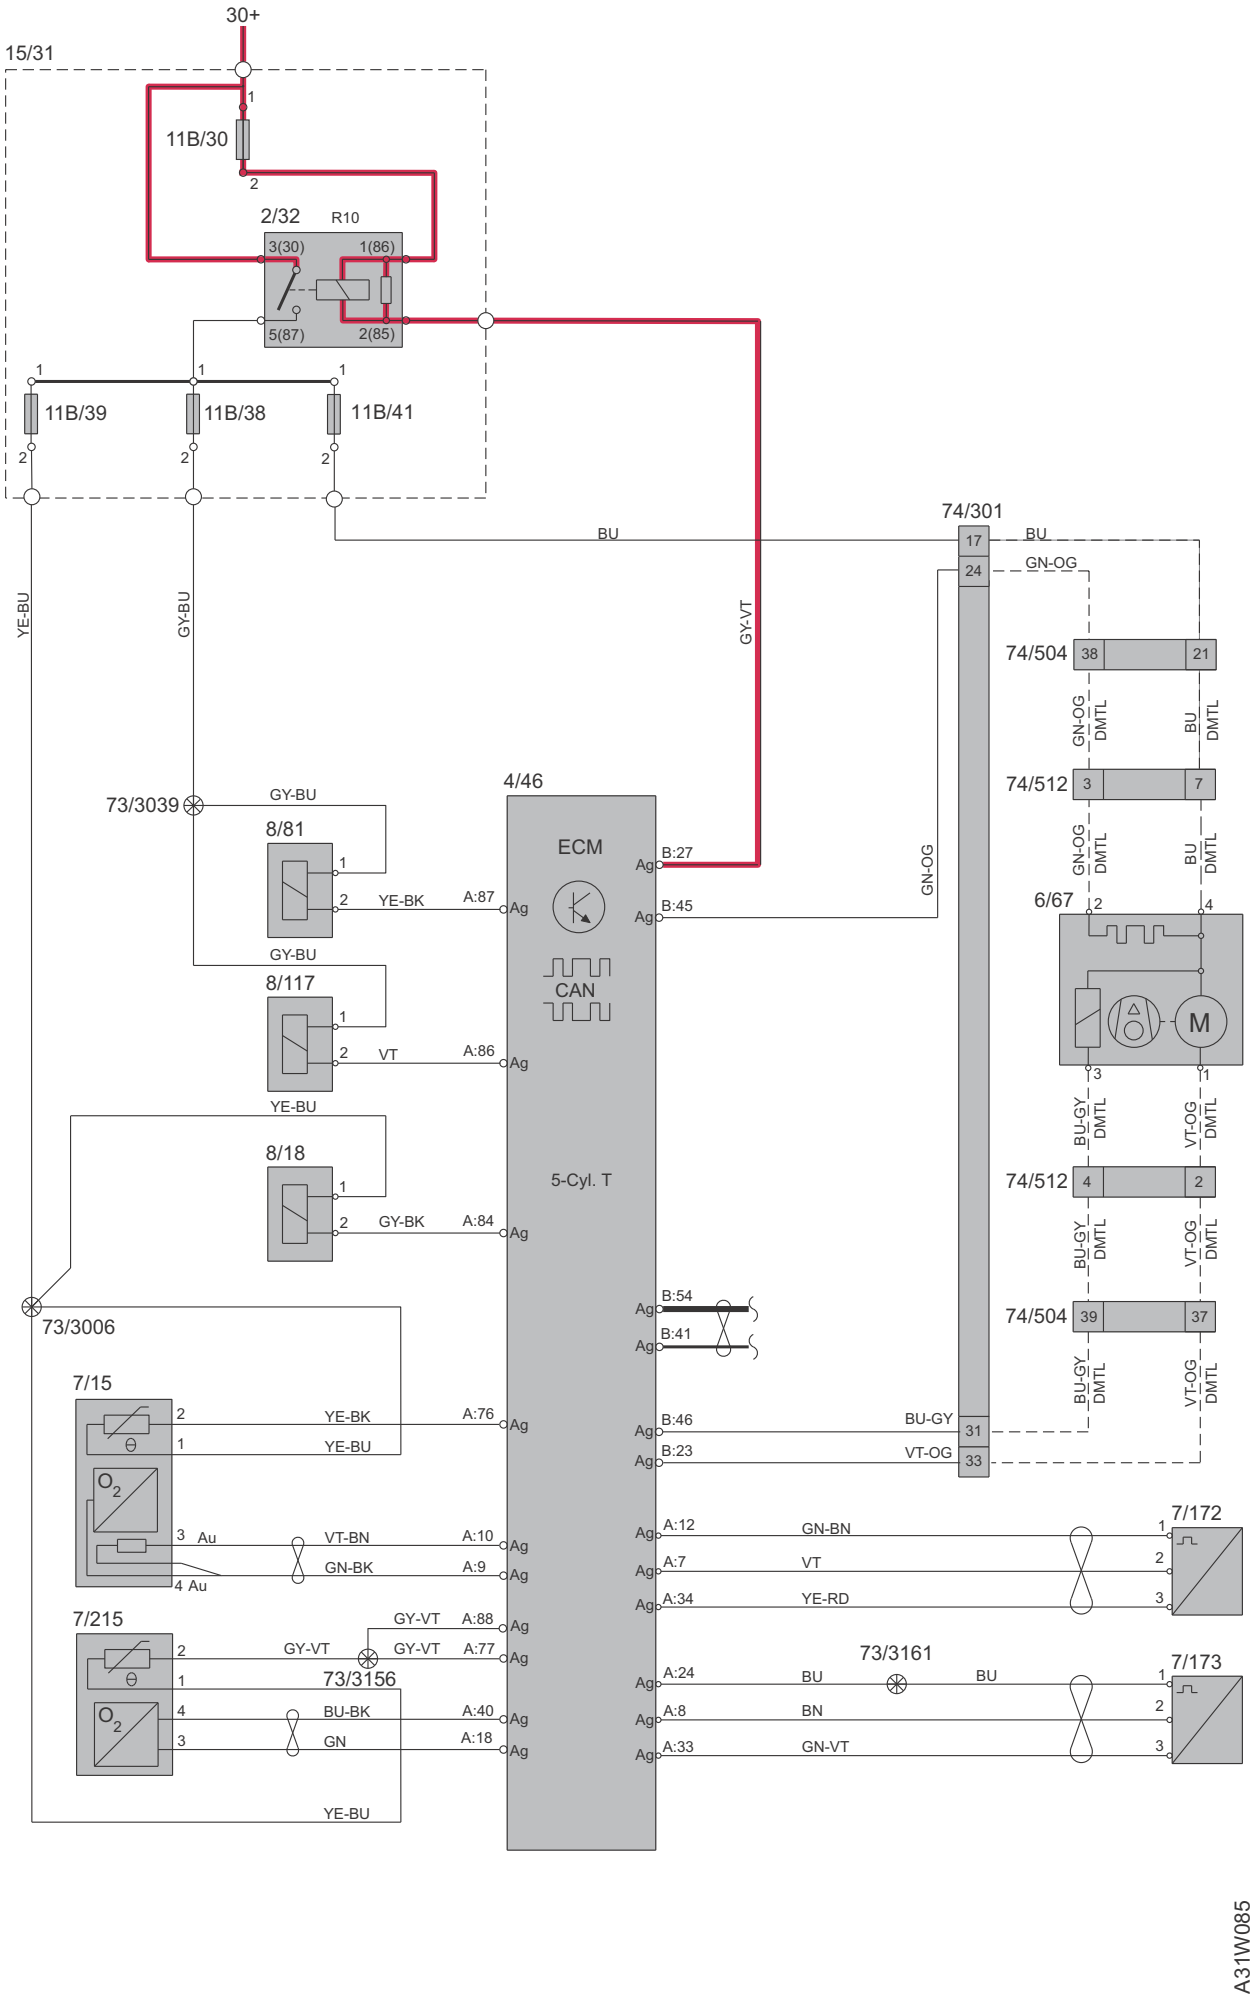
30+
15/31
11B/30
2/32
R10
3(30)
1(86)
5(87)
2(85)
11B/39
11B/38
11B/41
BU
GY-VT
YE-BU
GY-BU
74/301
17
24
BU
GN-OG
74/504
38
21
GN-OG DMTL
BU DMTL
74/512
3
7
6/67
2
4
M
3
1
BU-GY DMTL
VT-OG DMTL
74/512
4
2
74/504
39
37
73/3039
GY-BU
8/81
YE-BK
A:87
8/117
VT
A:86
8/18
GY-BK
A:84
4/46
ECM
CAN
5-Cyl. T
B:27
B:45
B:54
B:41
B:46
B:23
BU-GY
VT-OG
31
33
73/3006
7/15
YE-BK
A:76
YE-BU
O2
Au
VT-BN
A:10
GN-BK
A:9
7/215
GY-VT
A:88
A:77
73/3156
BU-BK
A:40
GN
A:18
A:12
GN-BN
A:7
VT
A:34
YE-RD
7/172
73/3161
A:24
BU
A:8
BN
A:33
GN-VT
7/173
A31W085

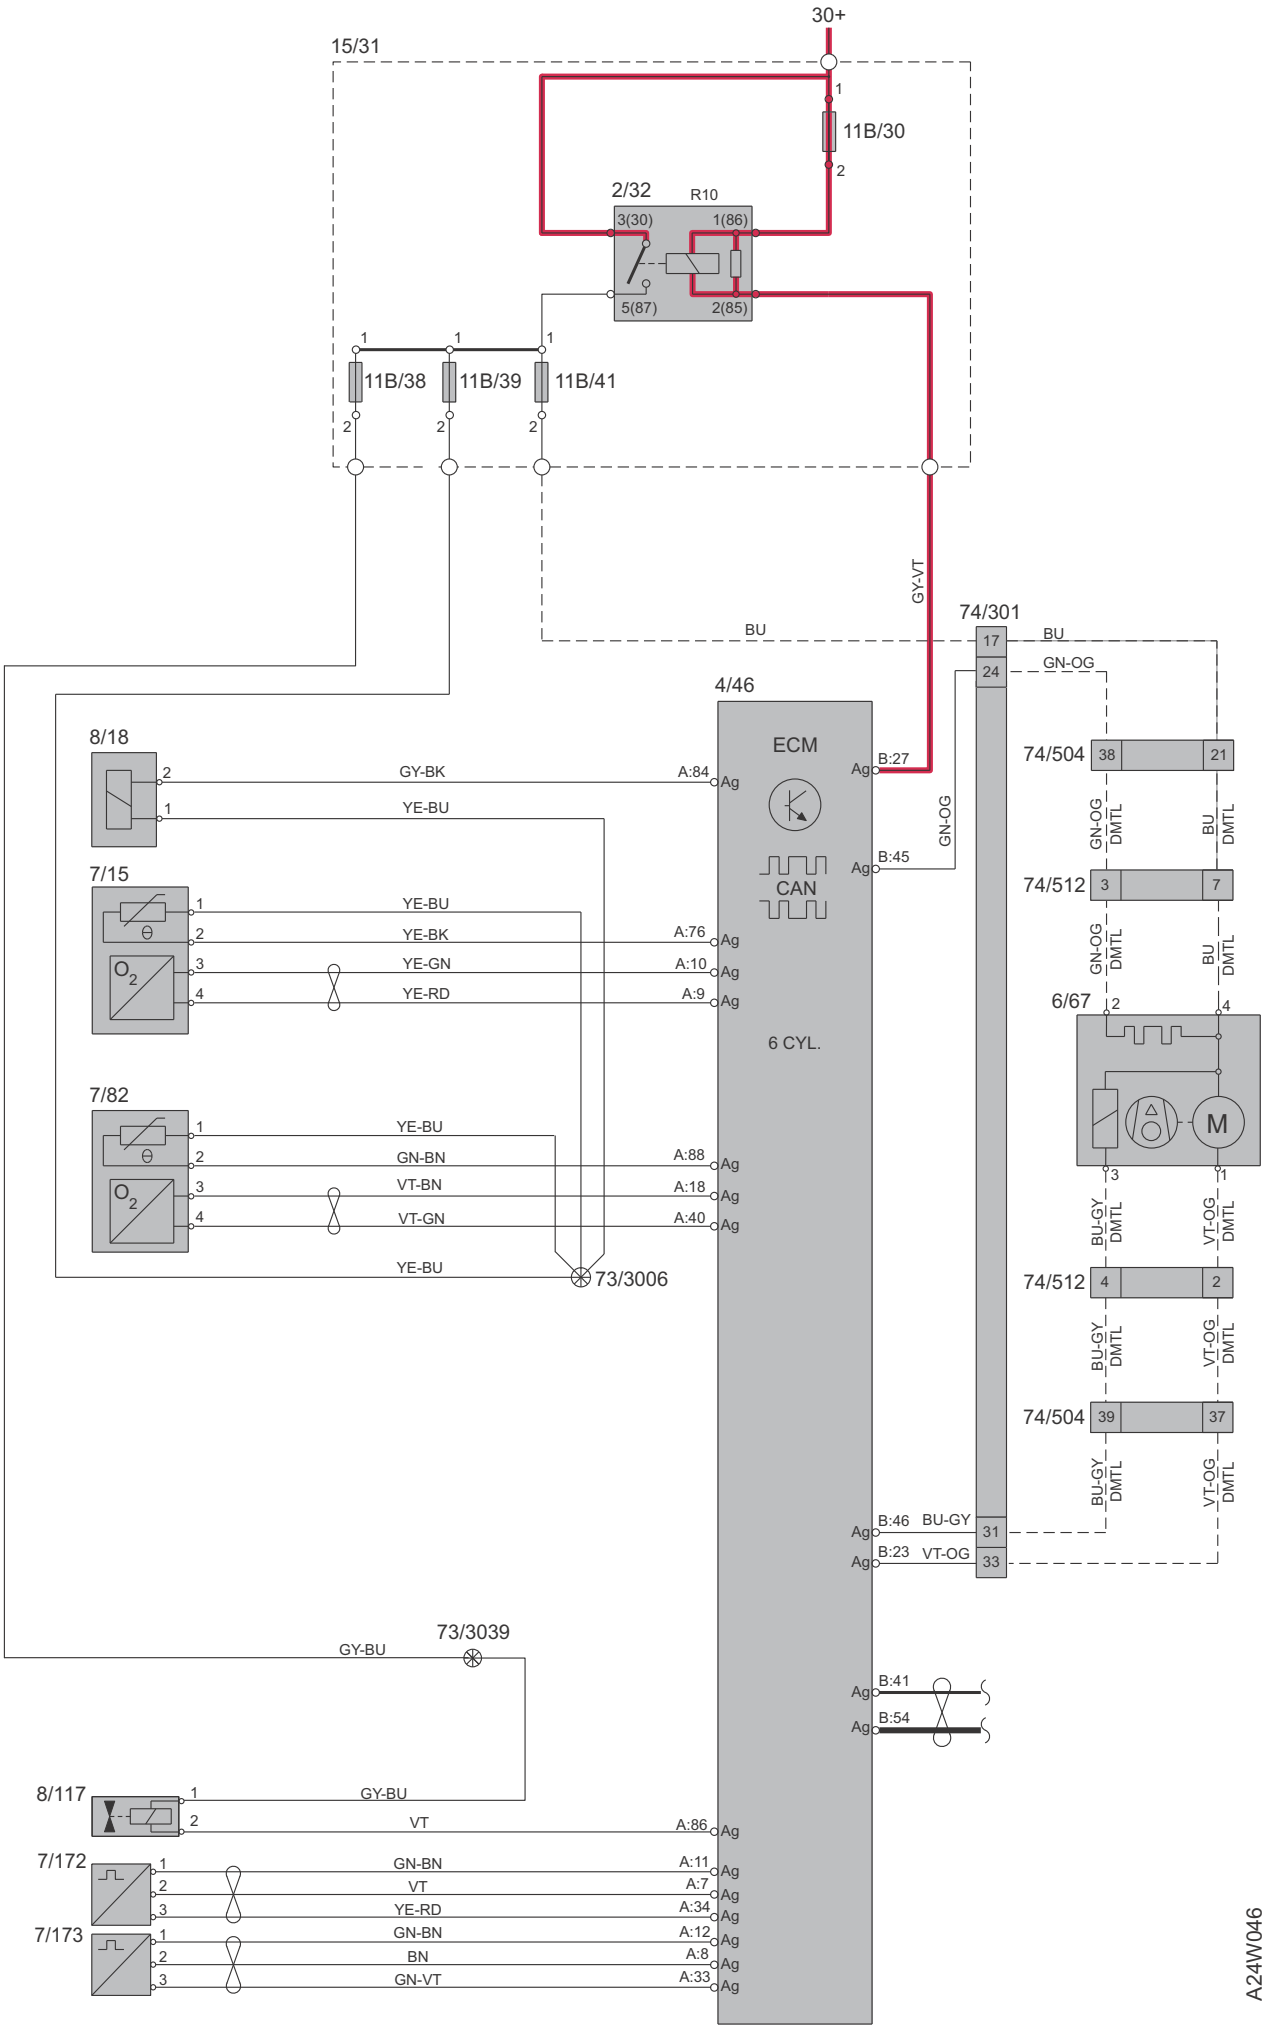
30+
15/31
11B/30
2/32
R10
3(30)
1(86)
5(87)
2(85)
11B/38
11B/39
11B/41
GY-VT
74/301
BU
GN-OG
4/46
ECM
CAN
6 CYL.
8/18
GY-BK
YE-BU
A:84
B:27
B:45
GN-OG
7/15
YE-BU
YE-BK
YE-GN
YE-RD
A:76
A:10
A:9
7/82
GN-BN
VT-BN
VT-GN
A:88
A:18
A:40
73/3006
74/504
74/512
6/67
M
BU-GY
VT-OG
DMTL
B:46
B:23
31
33
73/3039
GY-BU
8/117
VT
A:86
7/172
7/173
GN-BN
BN
GN-VT
A:11
A:7
A:34
A:12
A:8
A:33
B:41
B:54
A24W046

Group 32 Alternator and voltage regulator
Power supply 4-Cyl. without Start/Stop

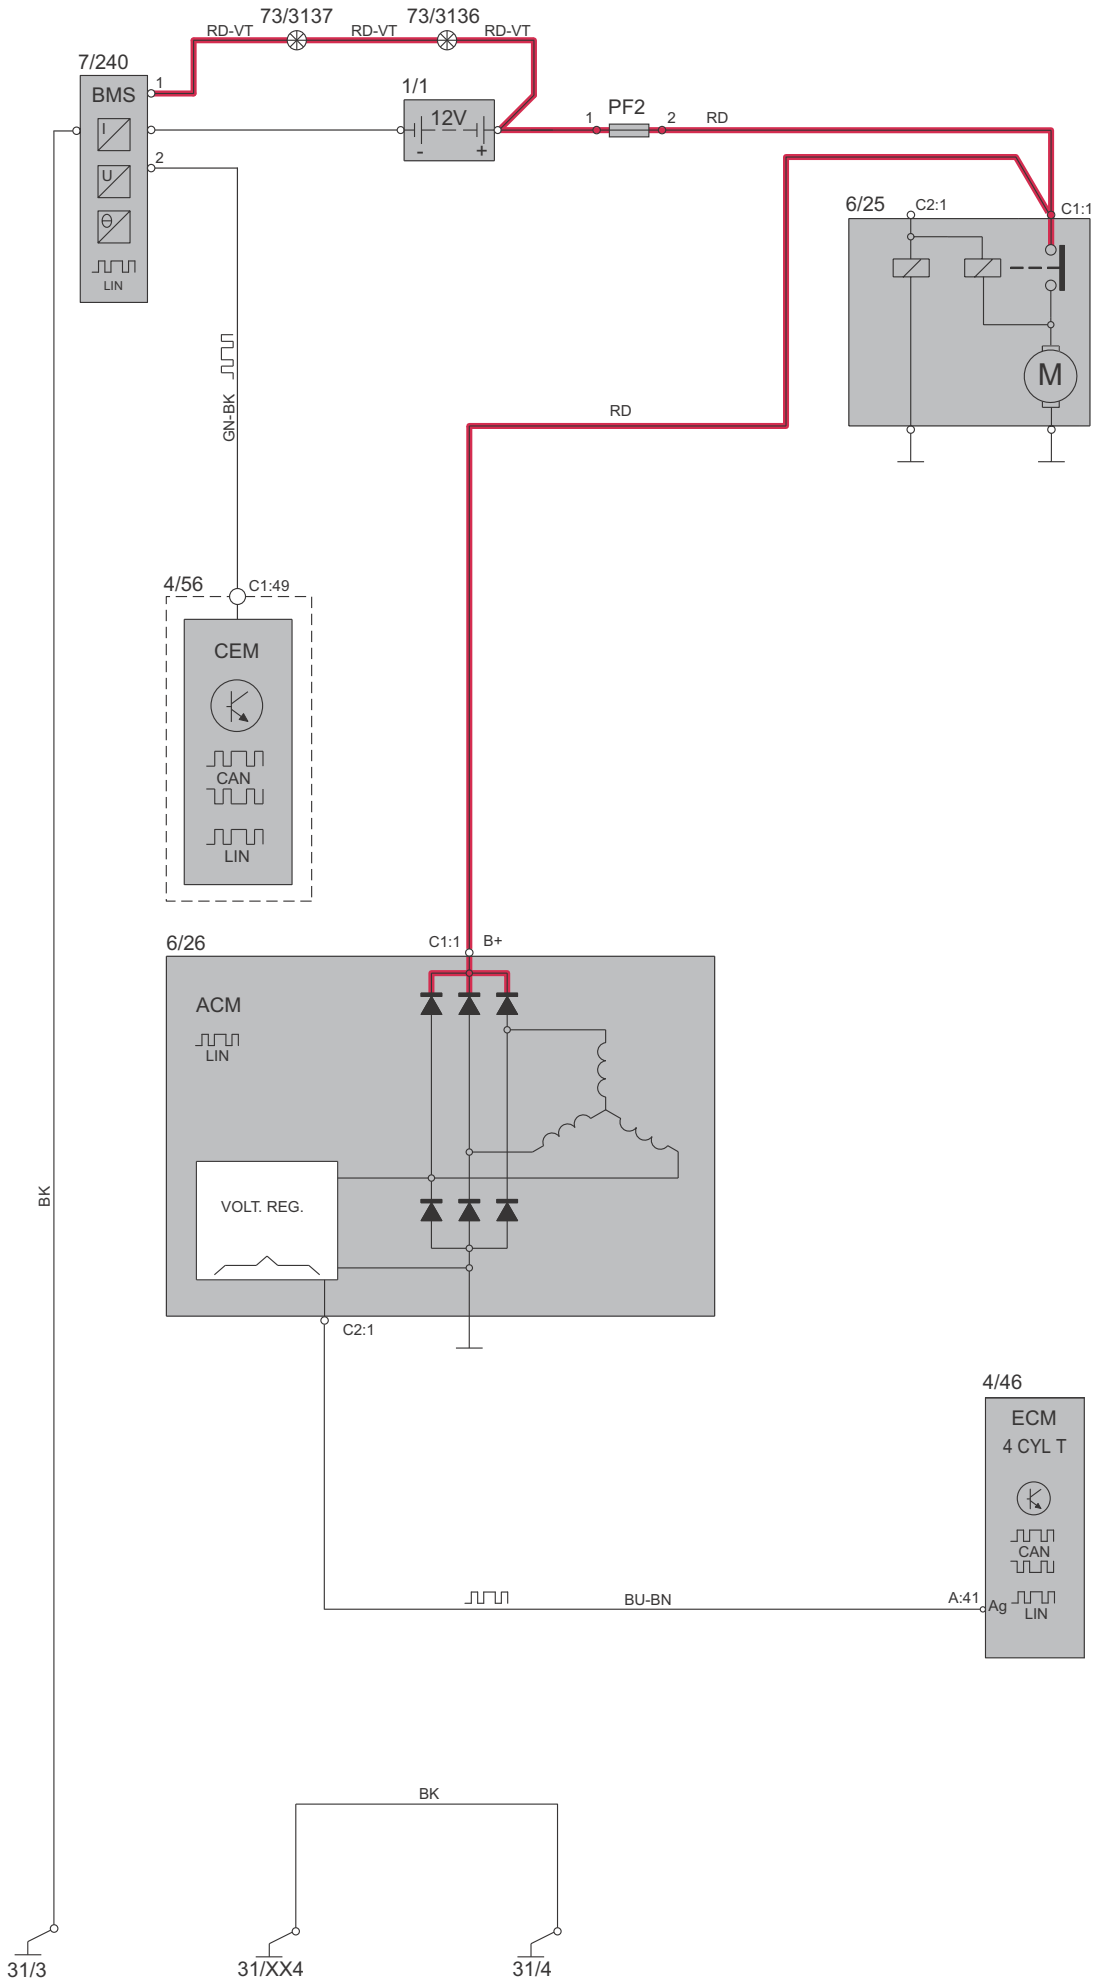

Group 32 Alternator and voltage regulator
Power supply 5-Cyl. & 6-Cyl. without Start/Stop

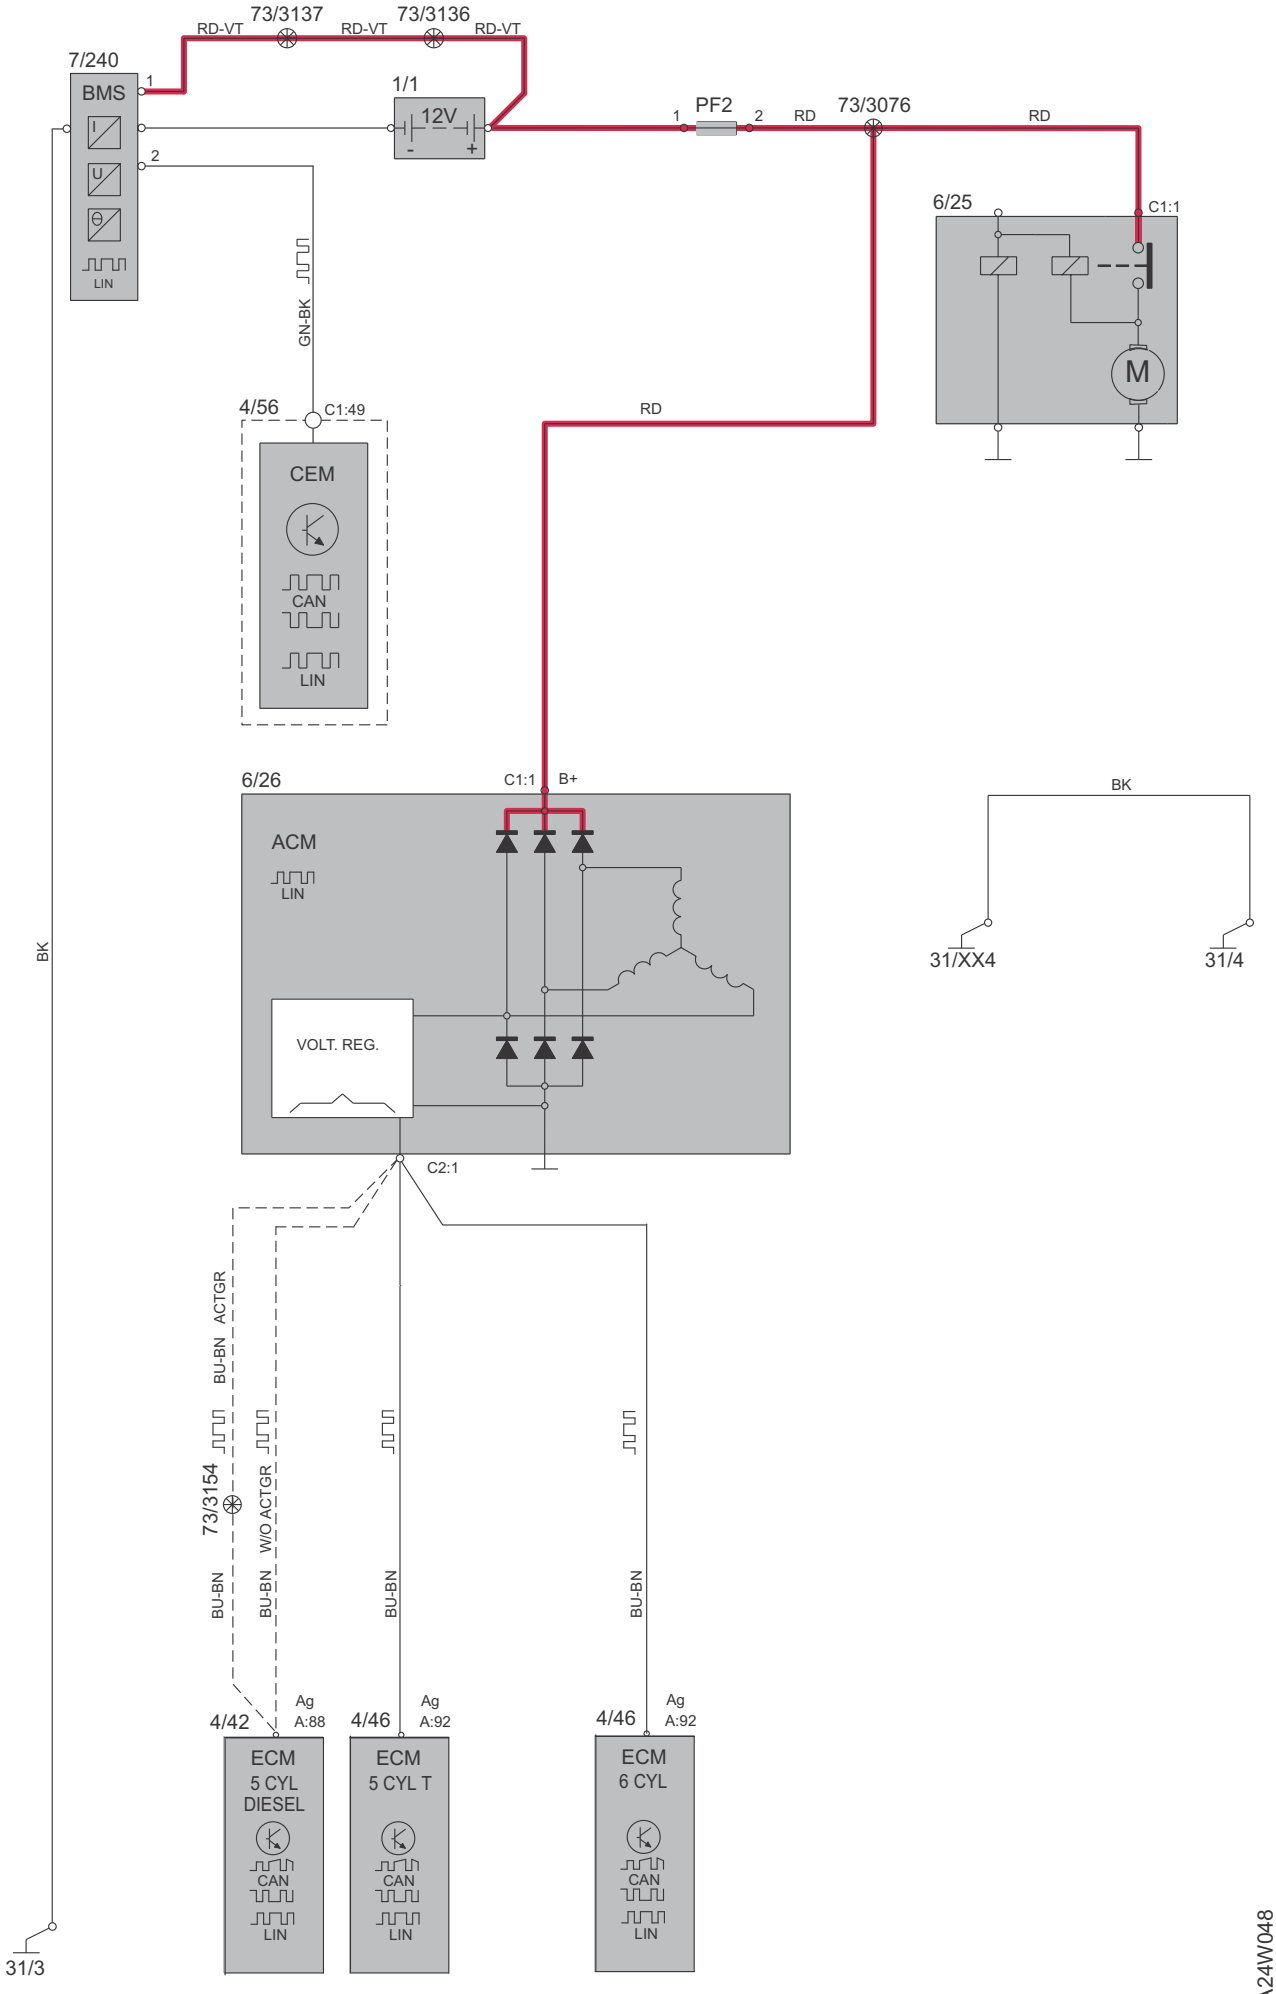

Group 32 Alternator and voltage regulator
Power supply 4-Cyl. & 5-Cyl. with Start/Stop

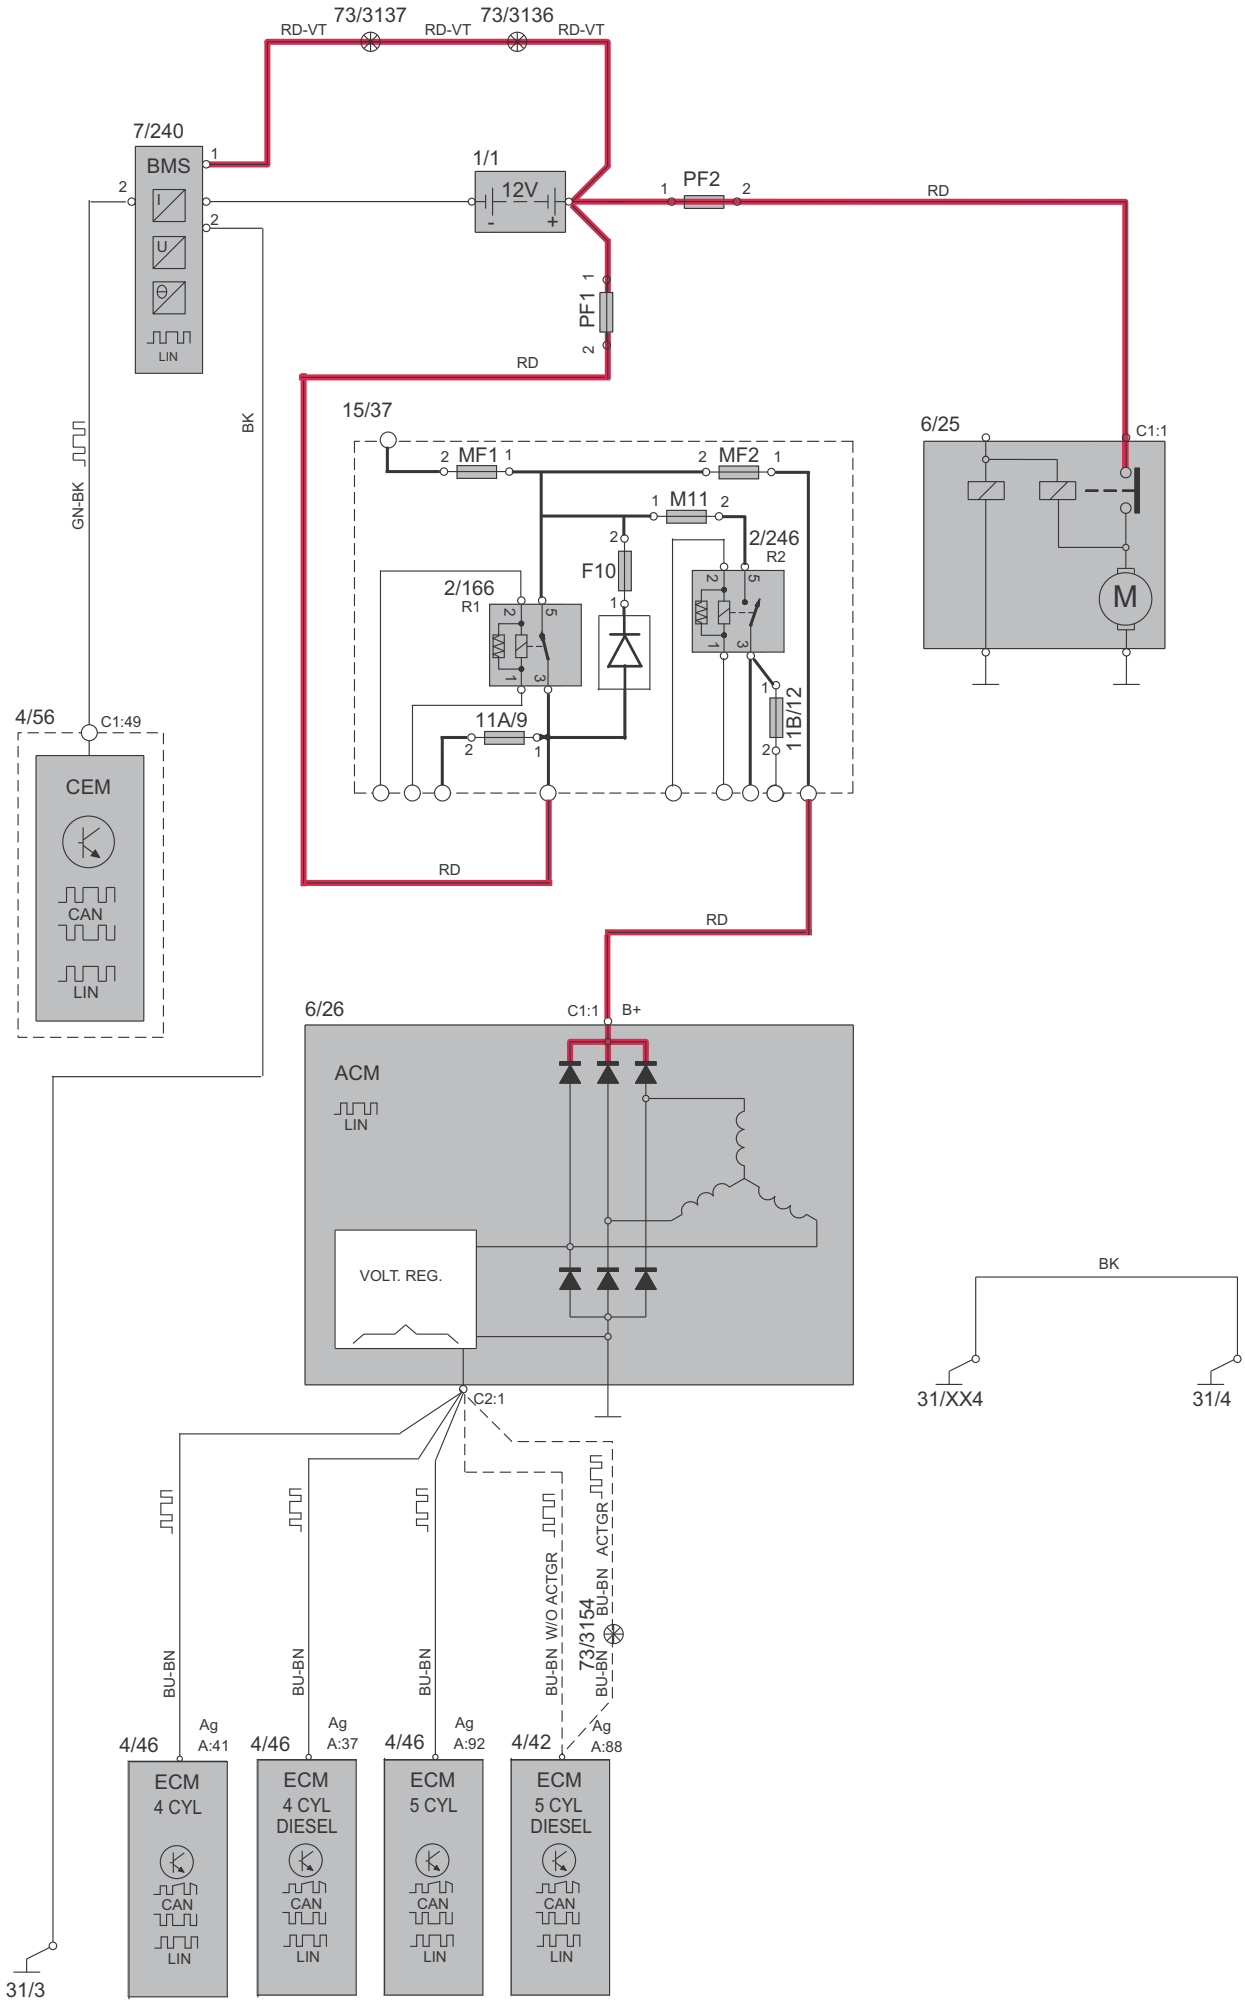

Group 33 Starting system
Starting system 4-Cyl.

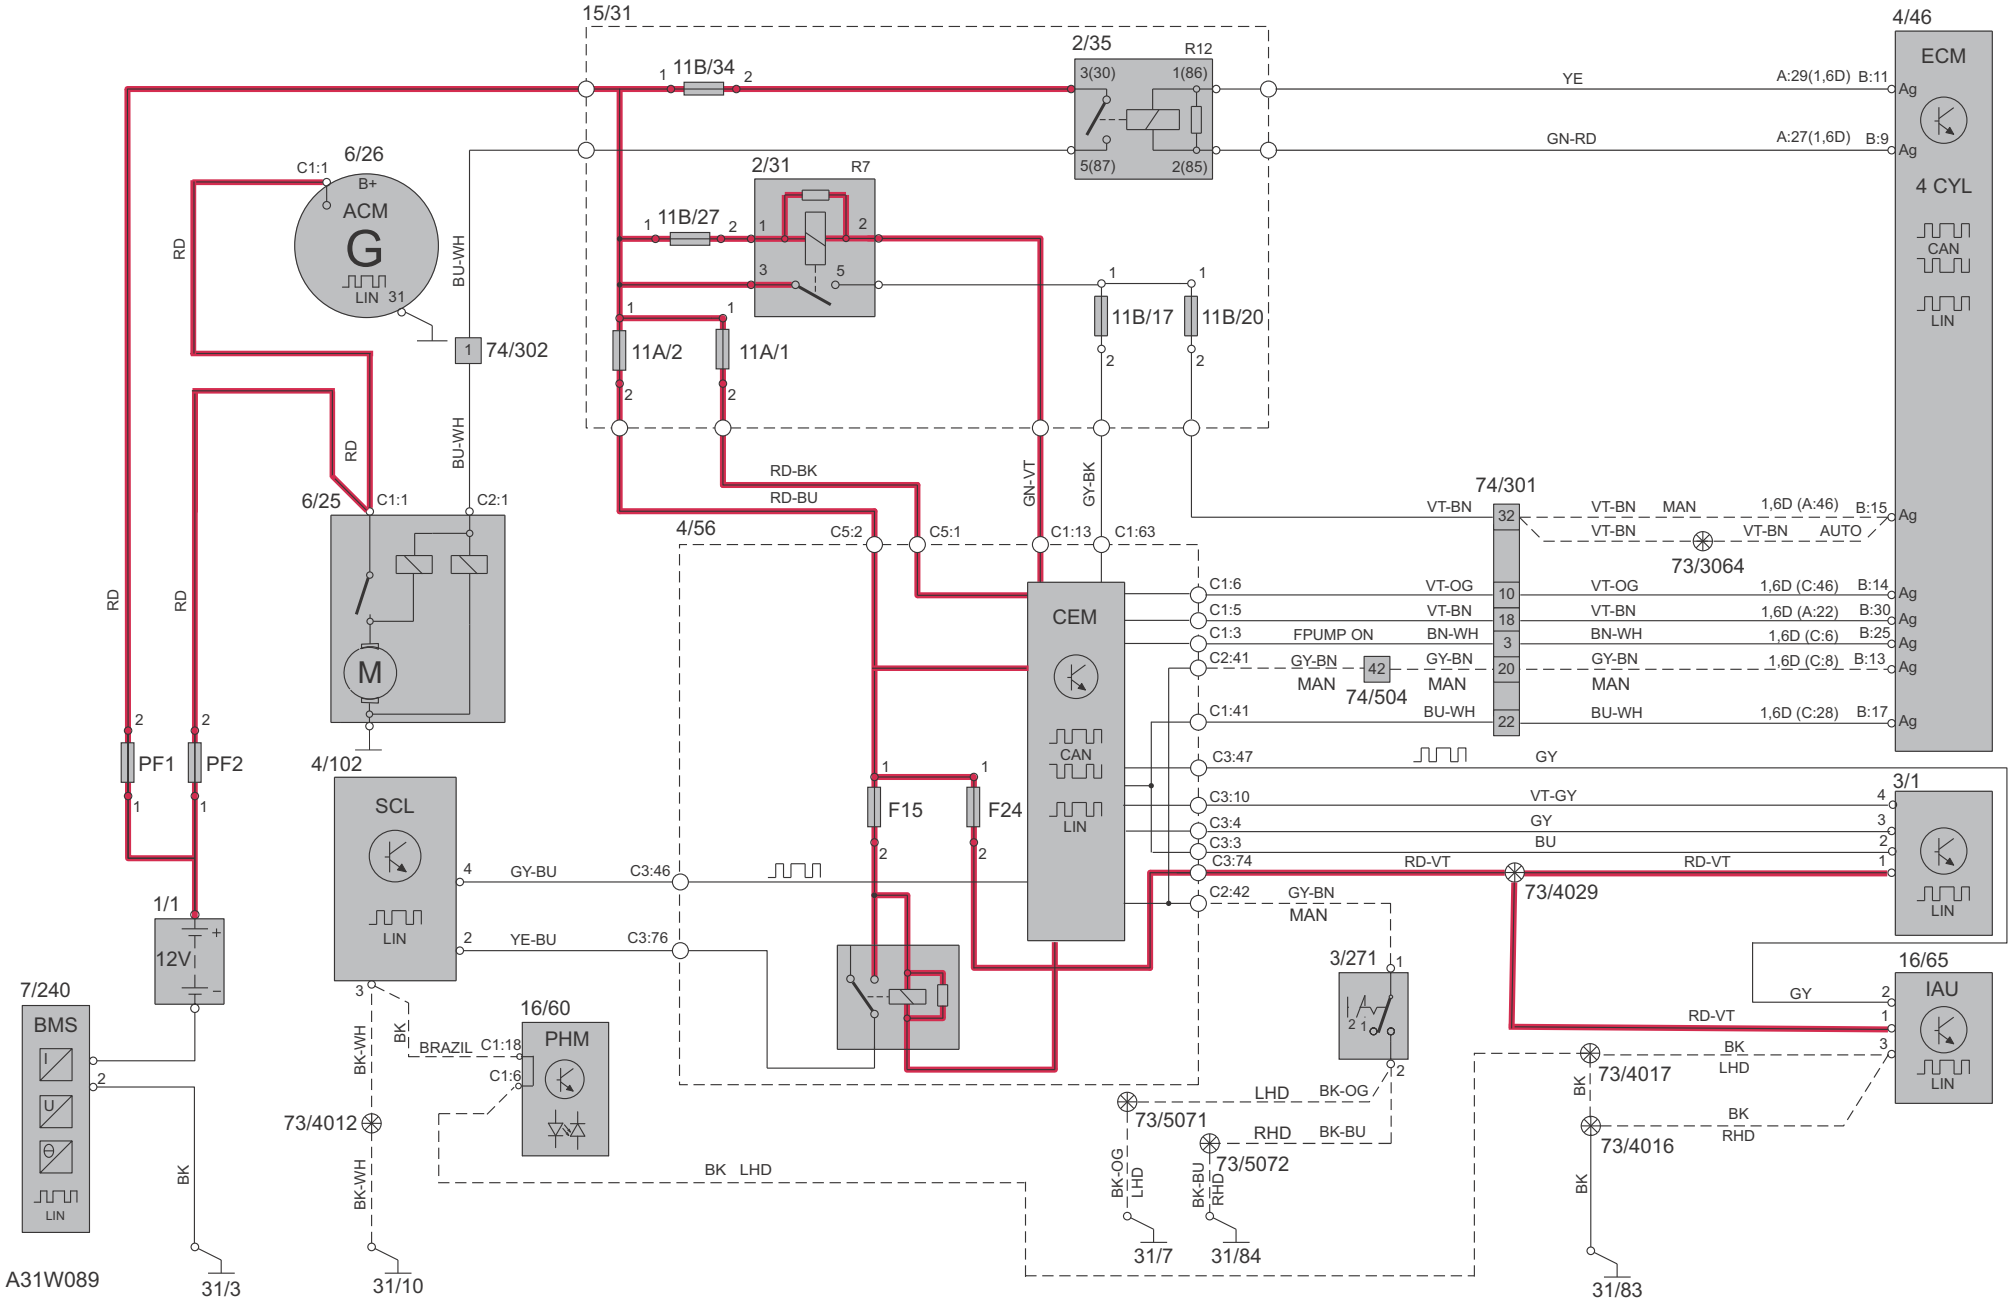

Starting system, 5-Cyl. & 6-Cyl.

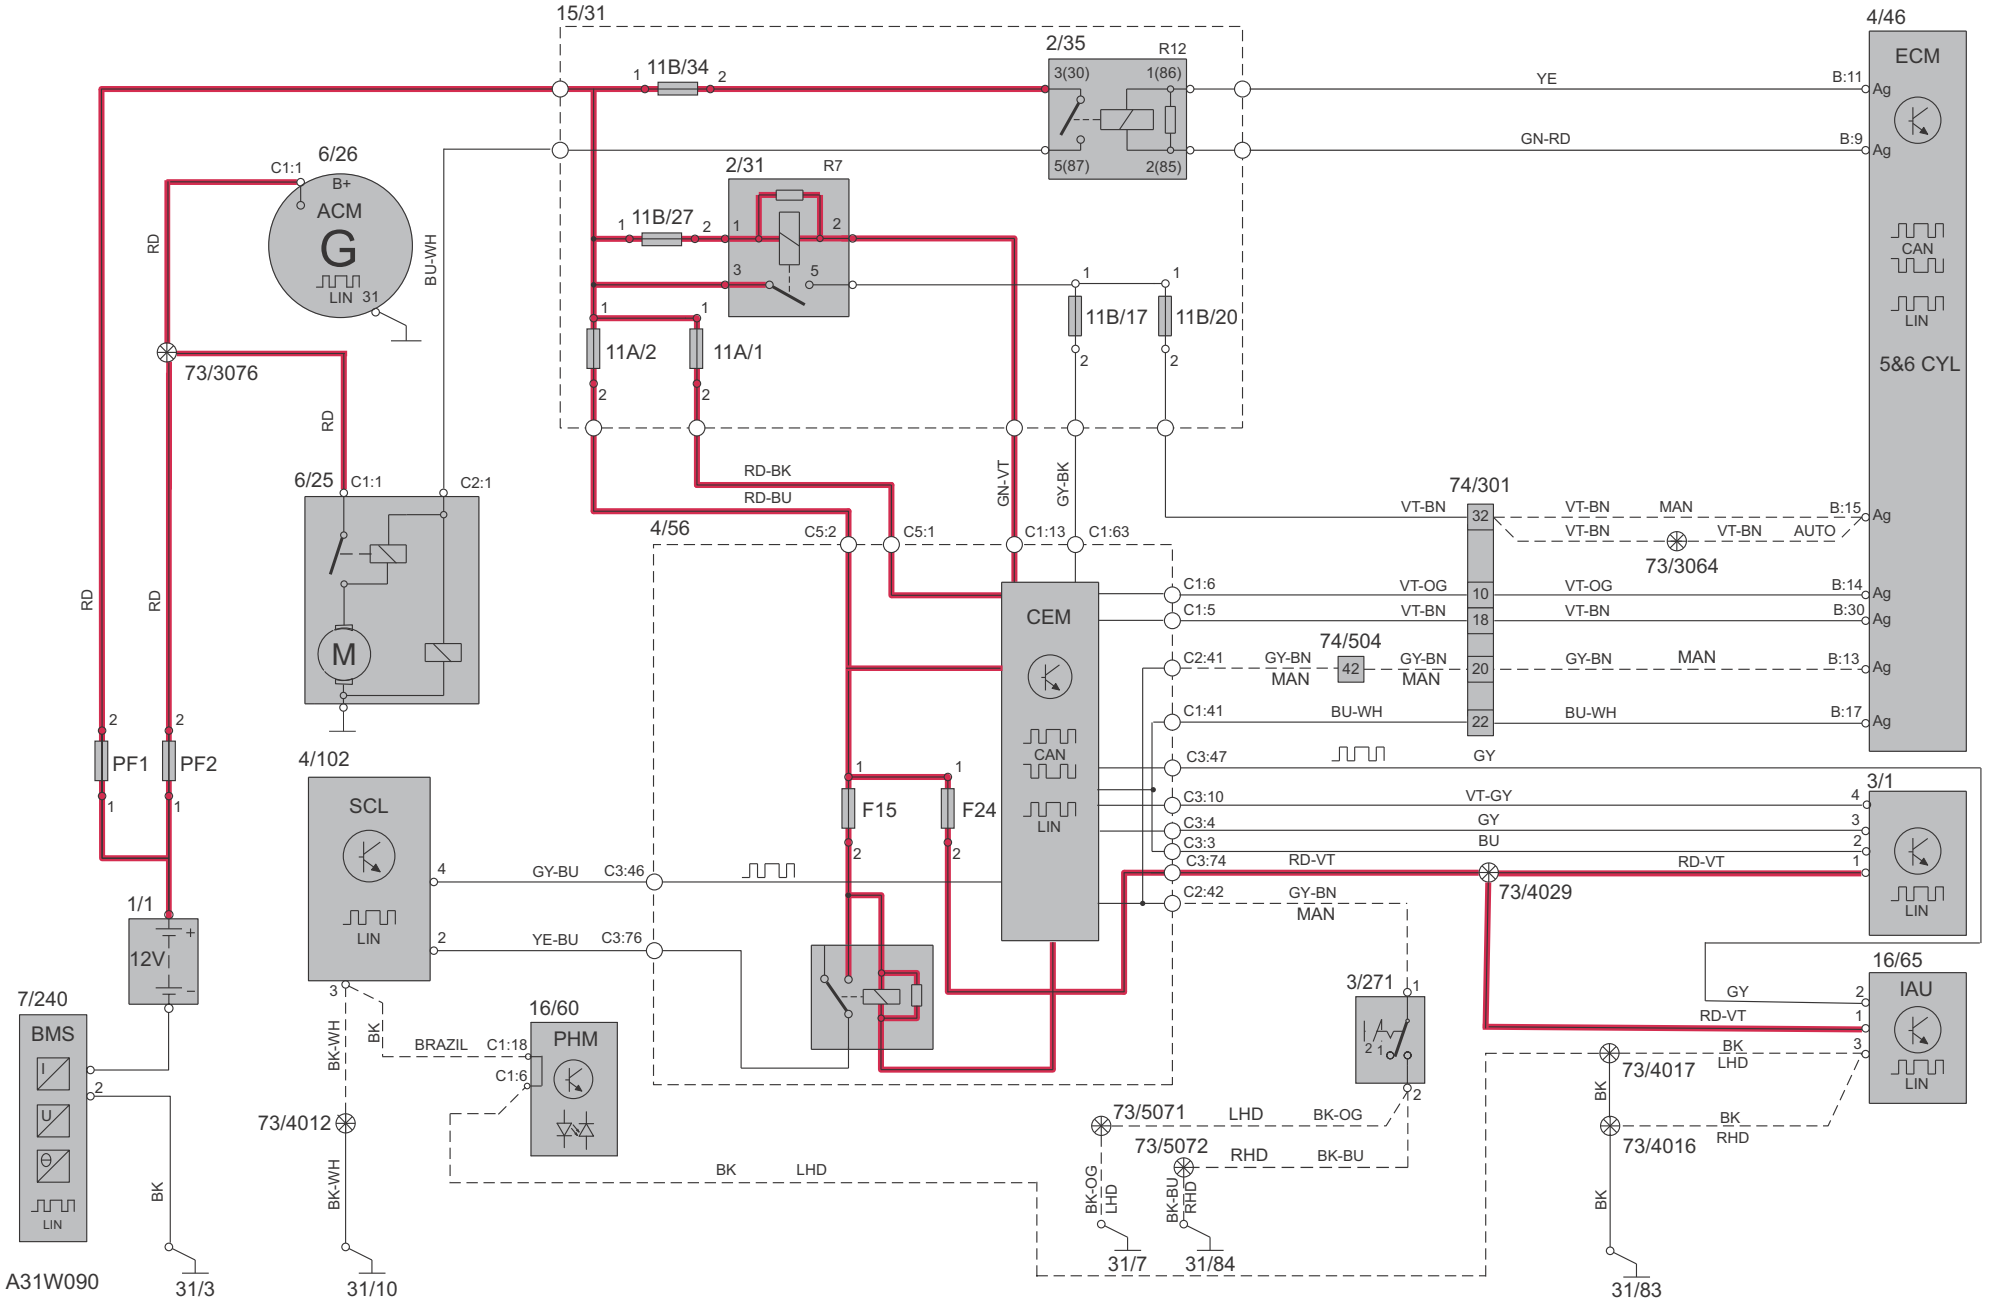

Starting system, 5-Cyl. Diesel

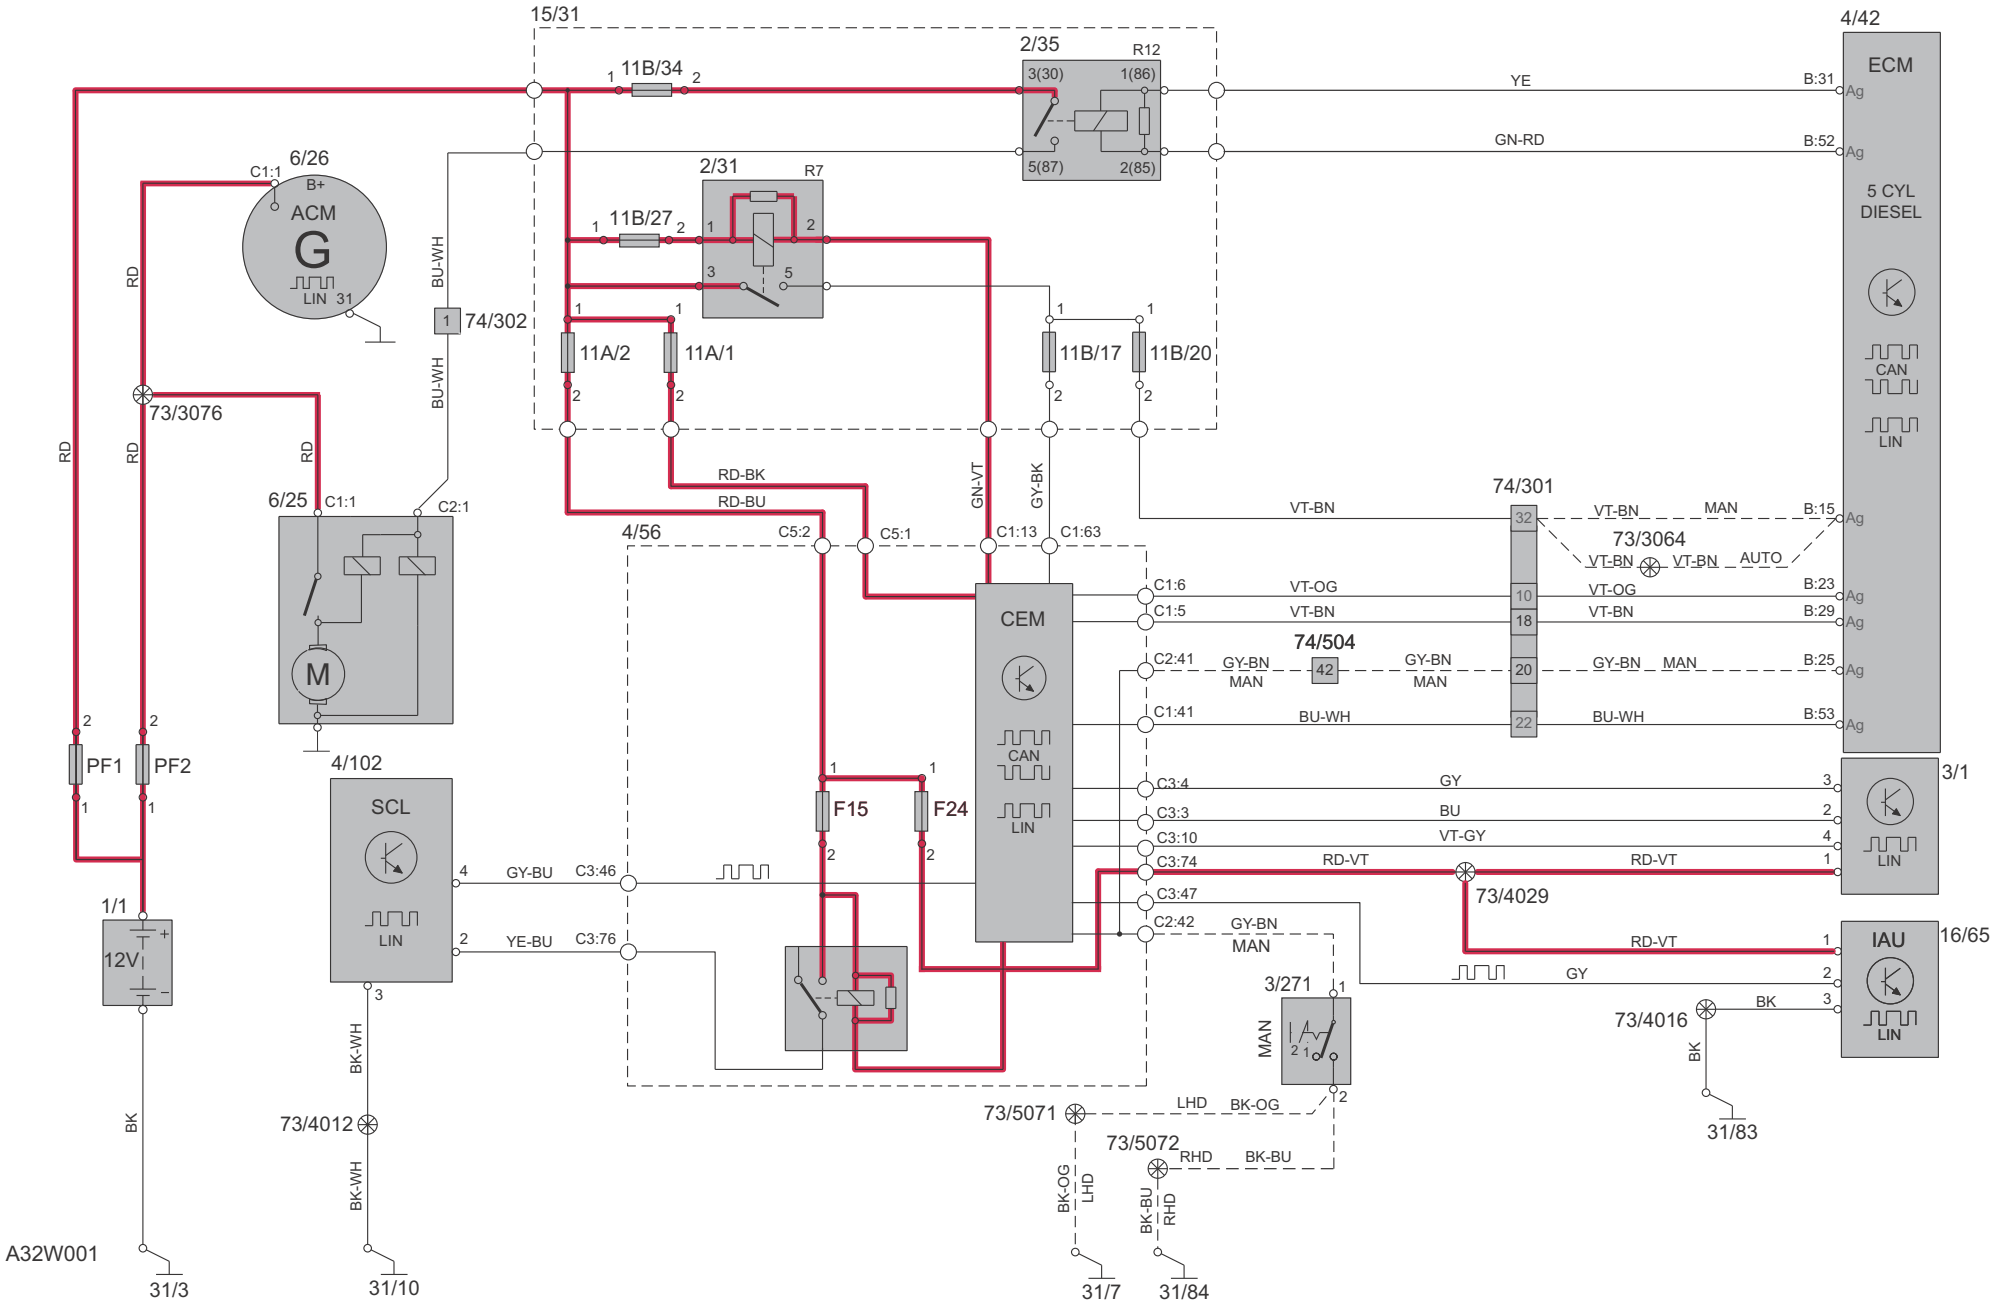

Group 35 Lighting
High and low beam

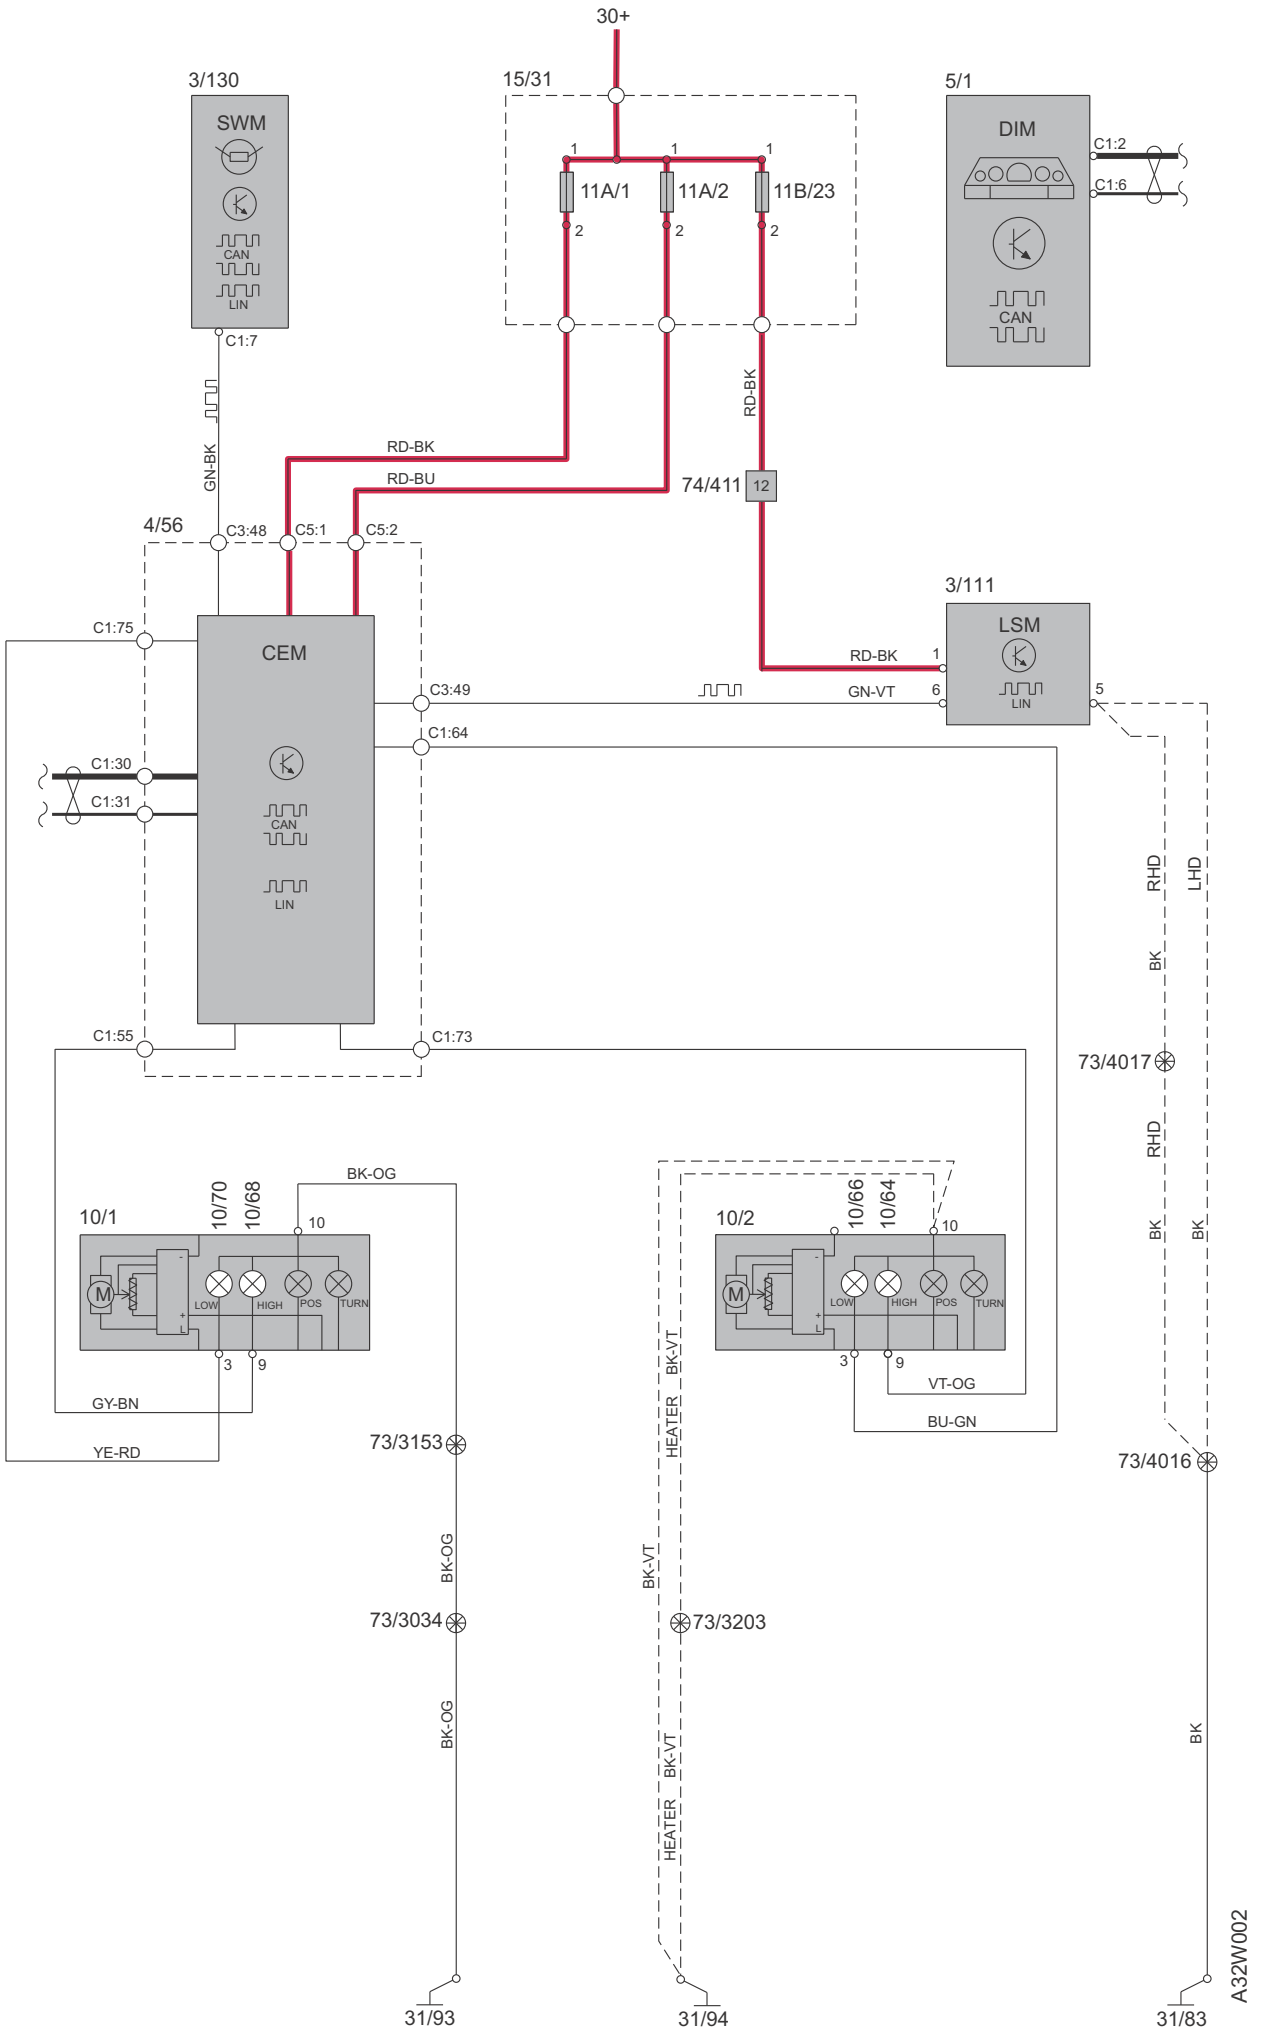

Group 35 Lighting
High and low beam (Dual Xenon)

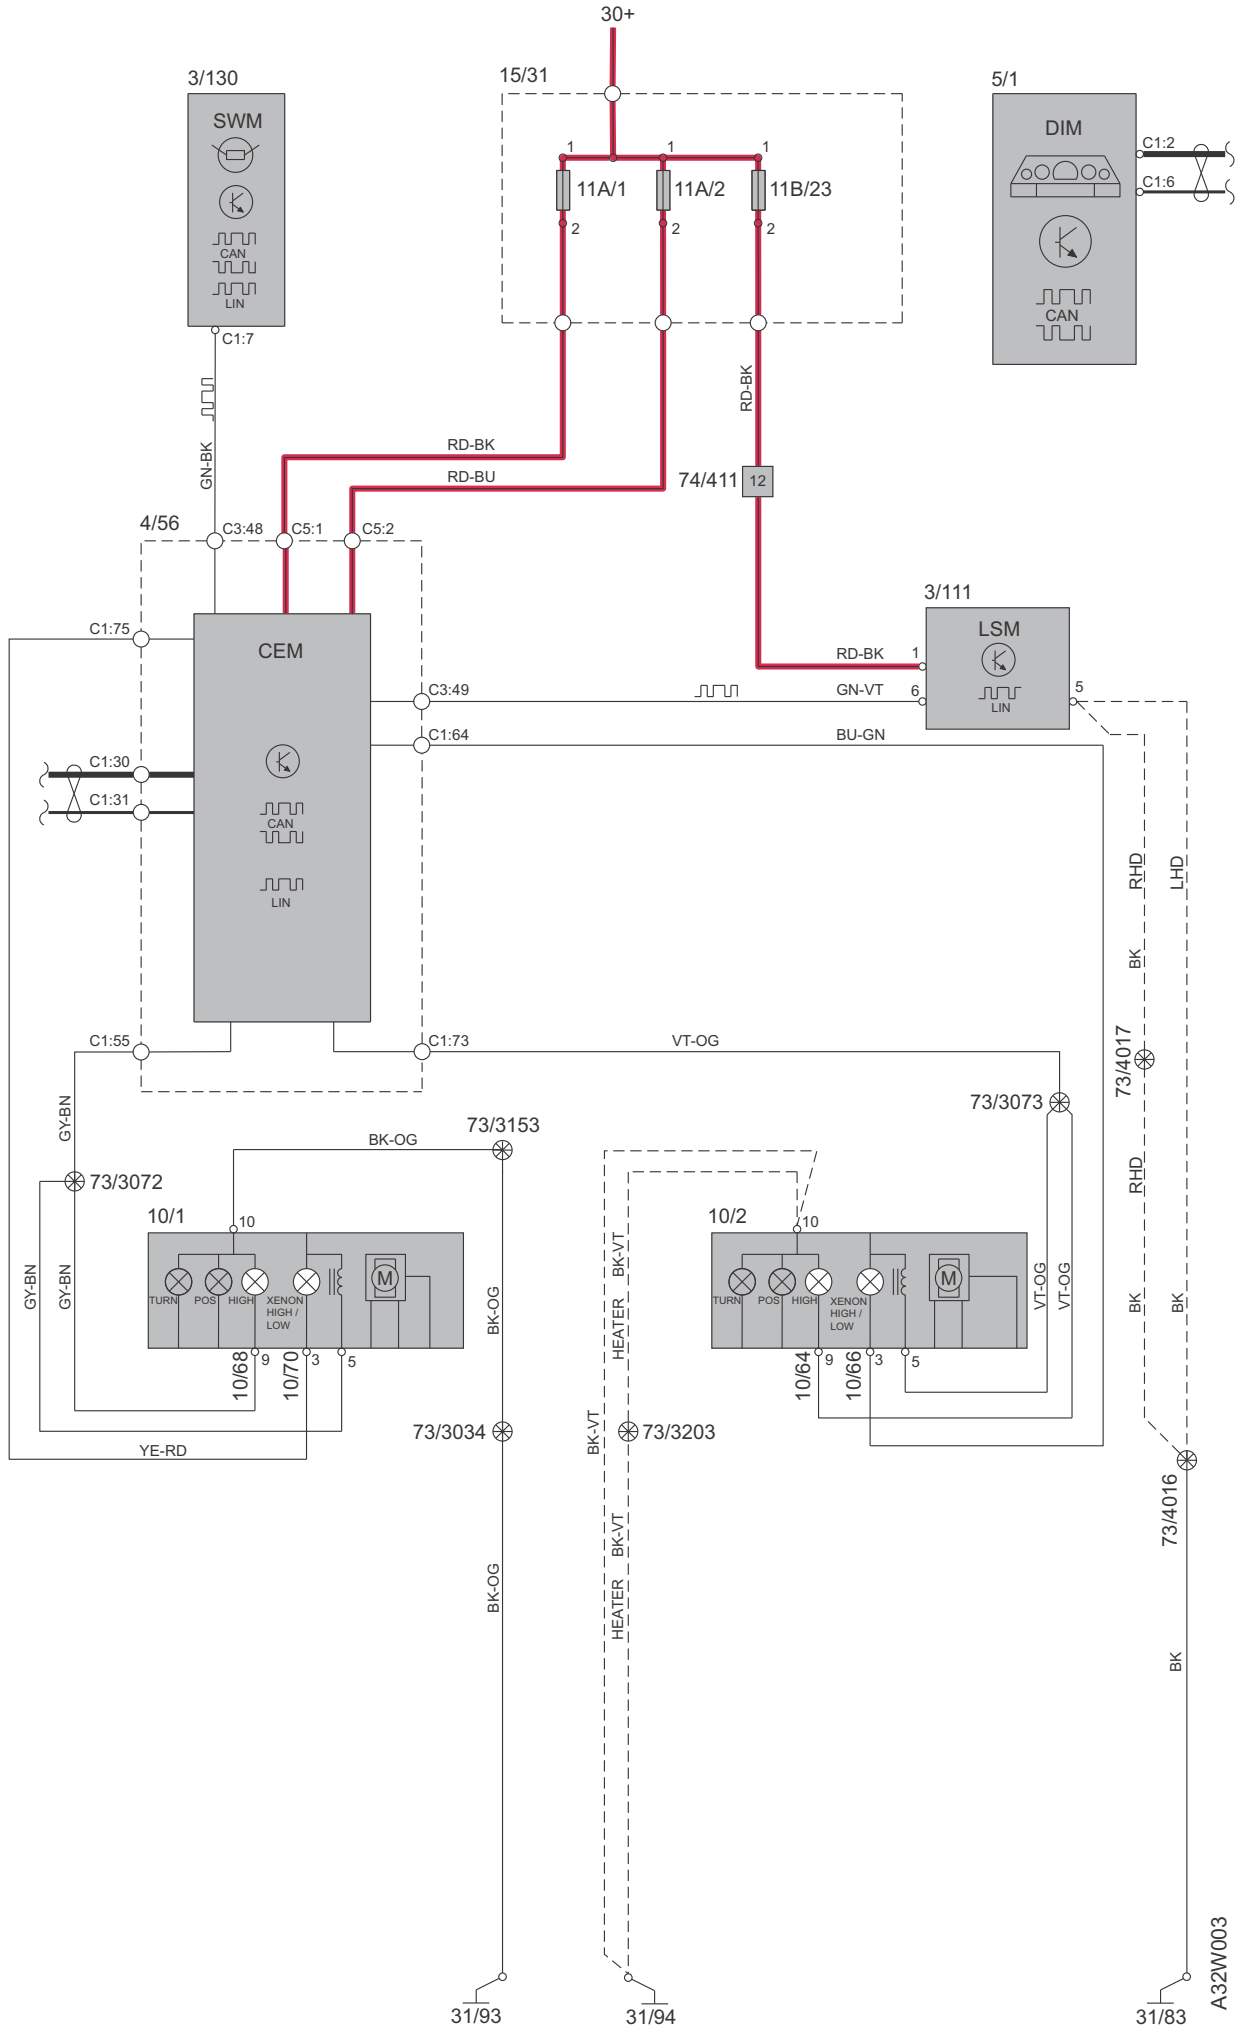

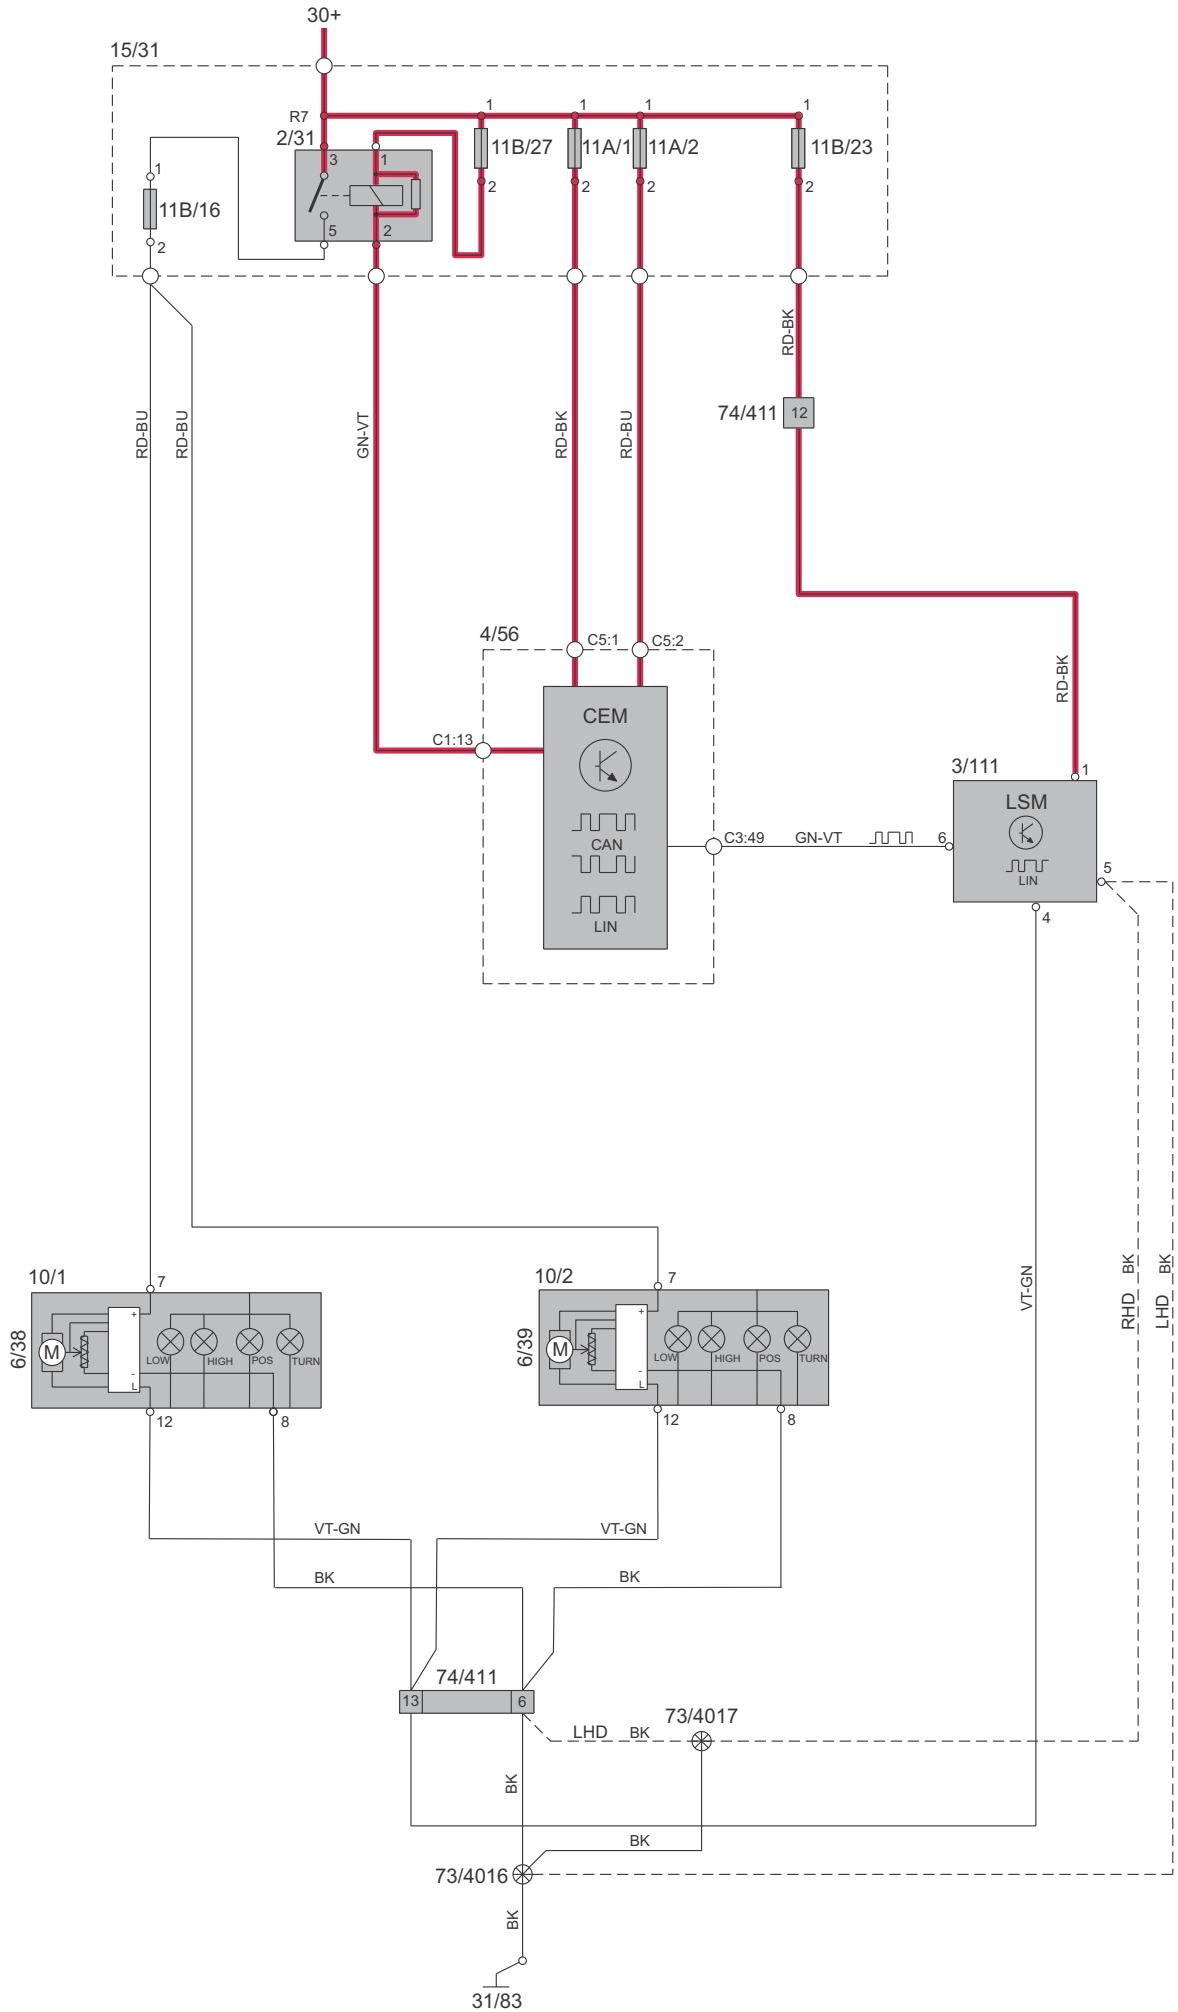
30+
15/31
R7
2/31
11B/16
11B/27
11A/1
11A/2
11B/23
RD-BU
RD-BU
GN-VT
RD-BK
RD-BU
RD-BK
74/411
12
4/56
C5:1
C5:2
C1:13
CEM
CAN
LIN
C3:49
GN-VT
3/111
LSM
LIN
RD-BK
10/1
6/38
10/2
6/39
LOW
HIGH
POS
TURN
VT-GN
VT-GN
BK
BK
74/411
13
6
73/4017
LHD
BK
BK
BK
73/4016
BK
31/83
VT-GN
RHD
BK
LHD
BK
A24W054

Group 35 Lighting
Running/Parking light, Tail lights S60

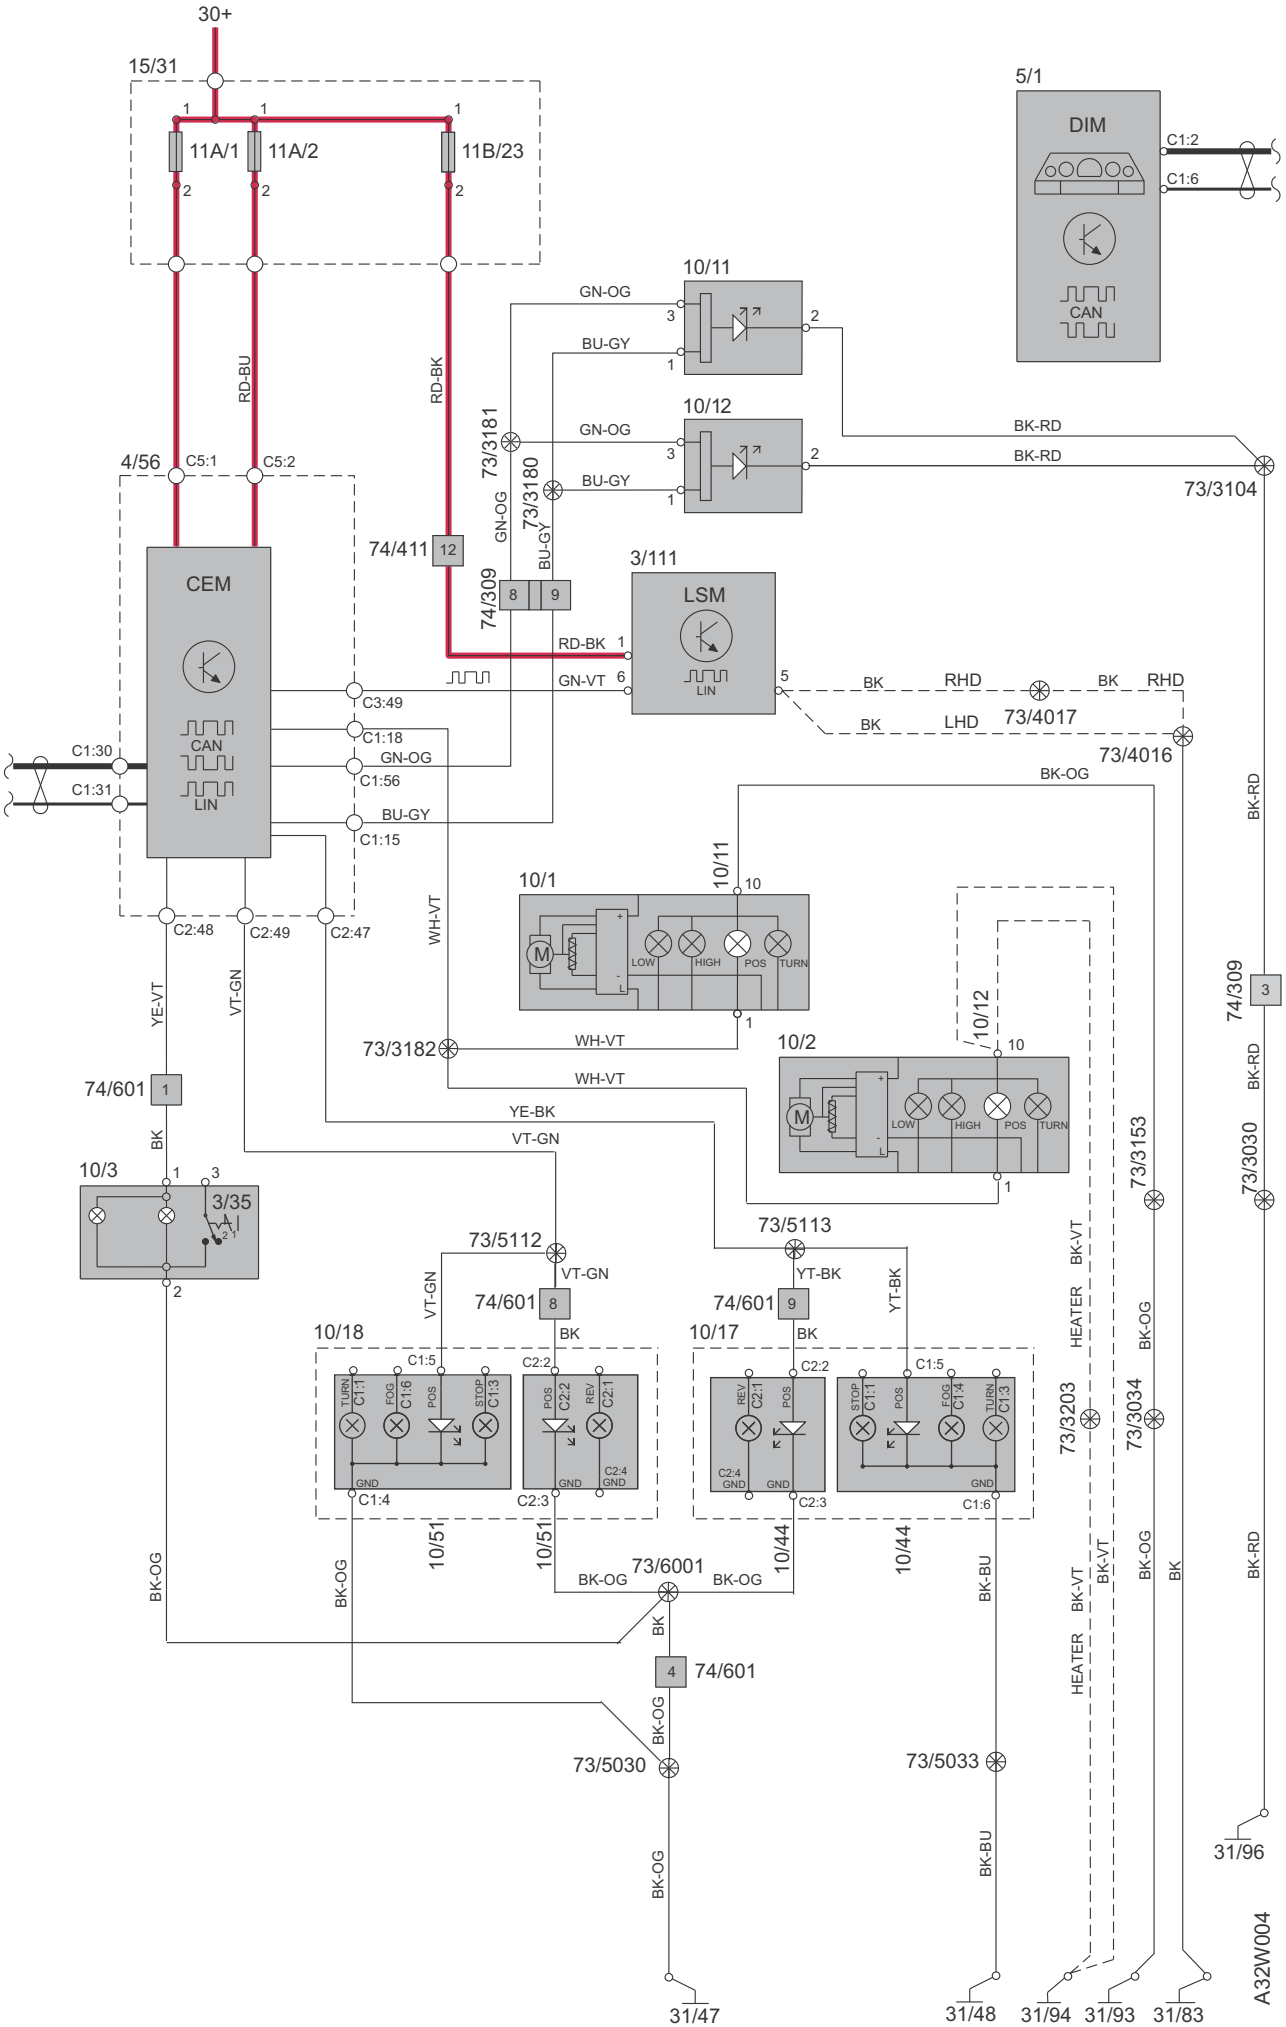

Group 35 Lighting
Running/Parking light, Tail lights V60

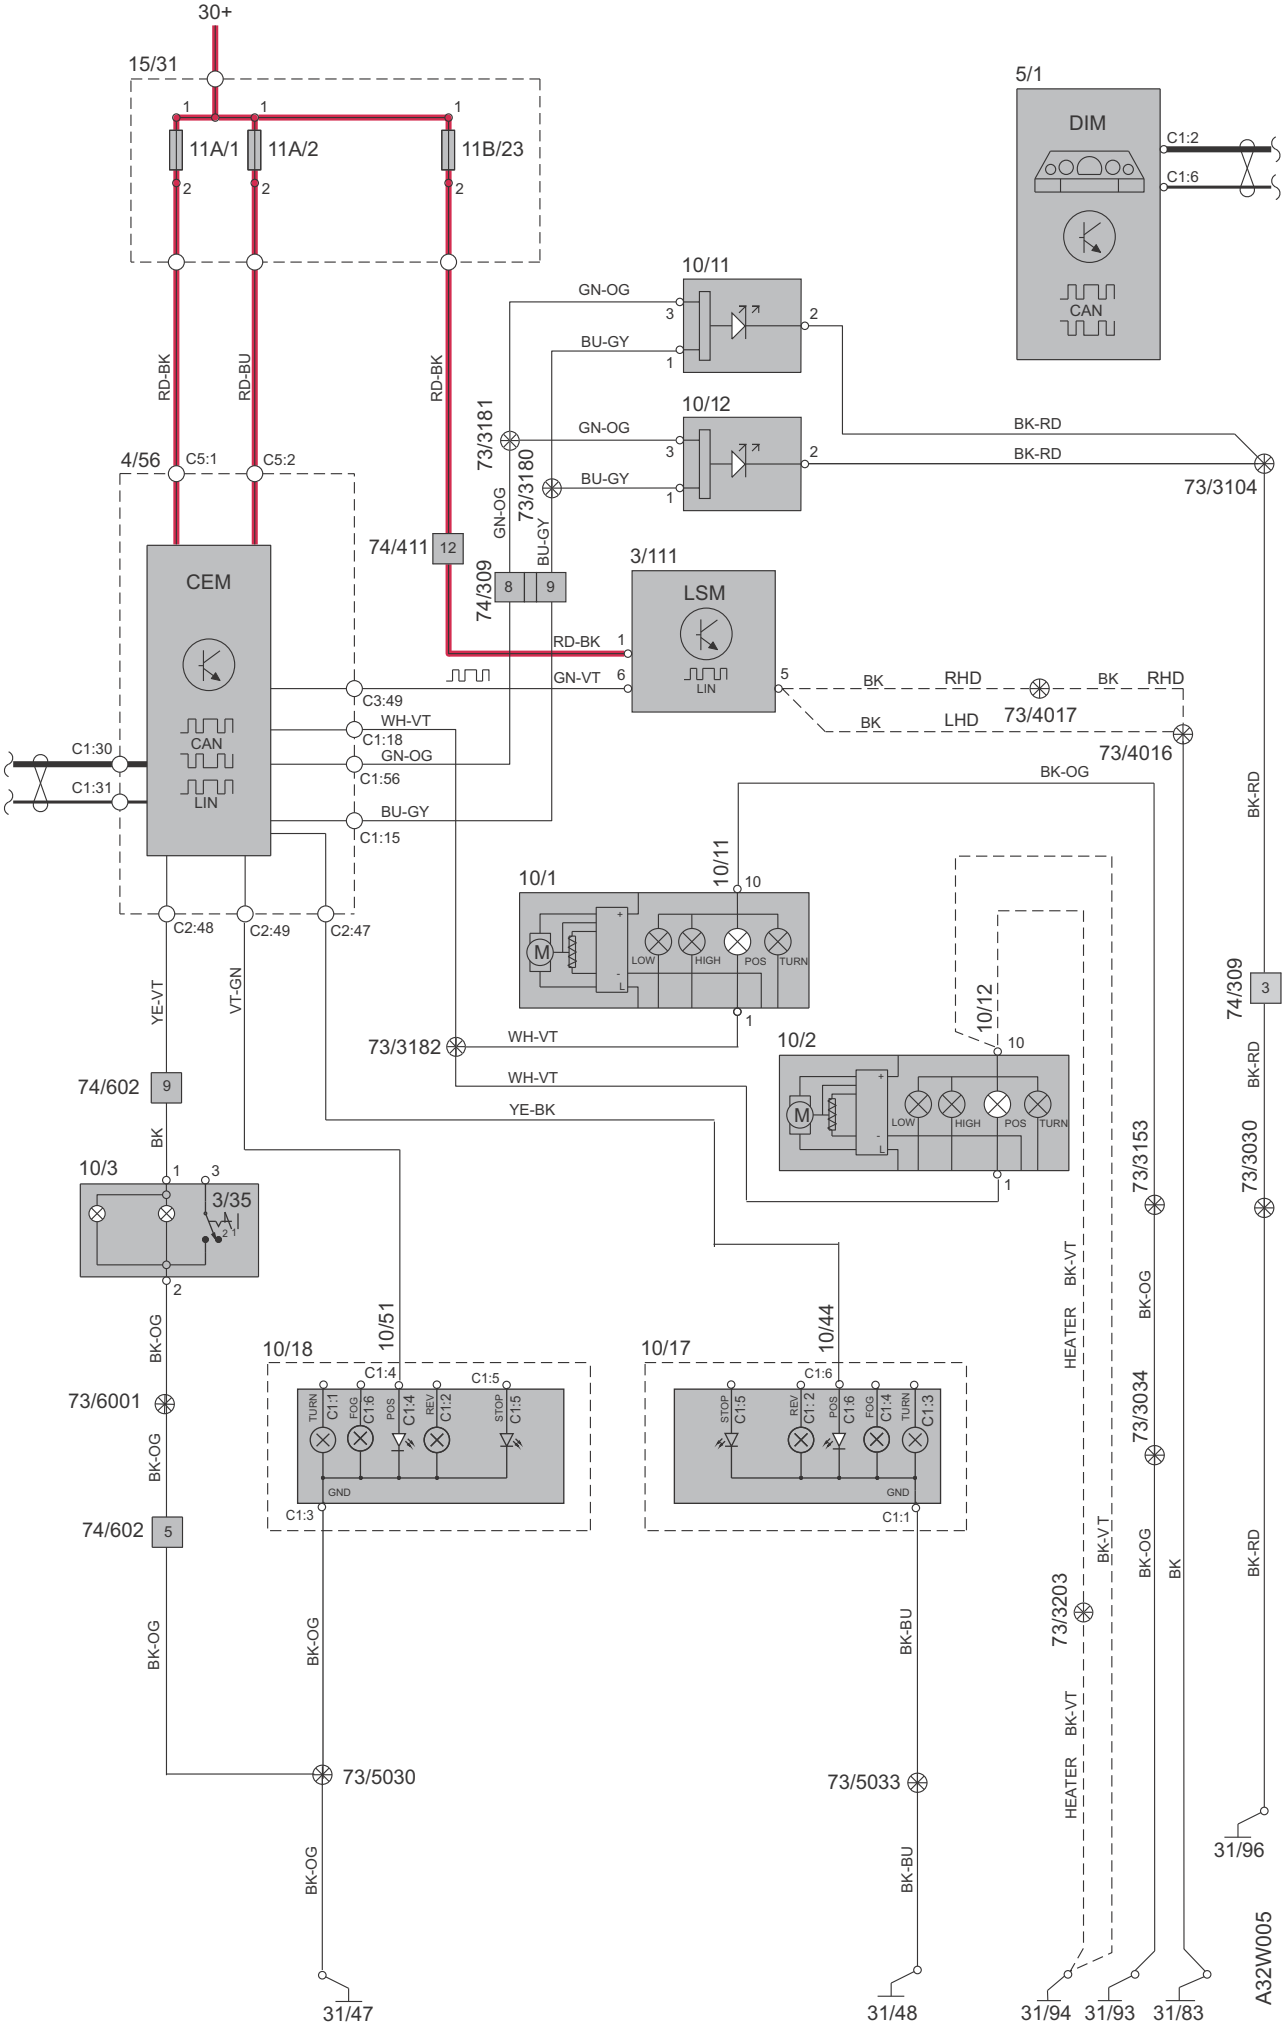

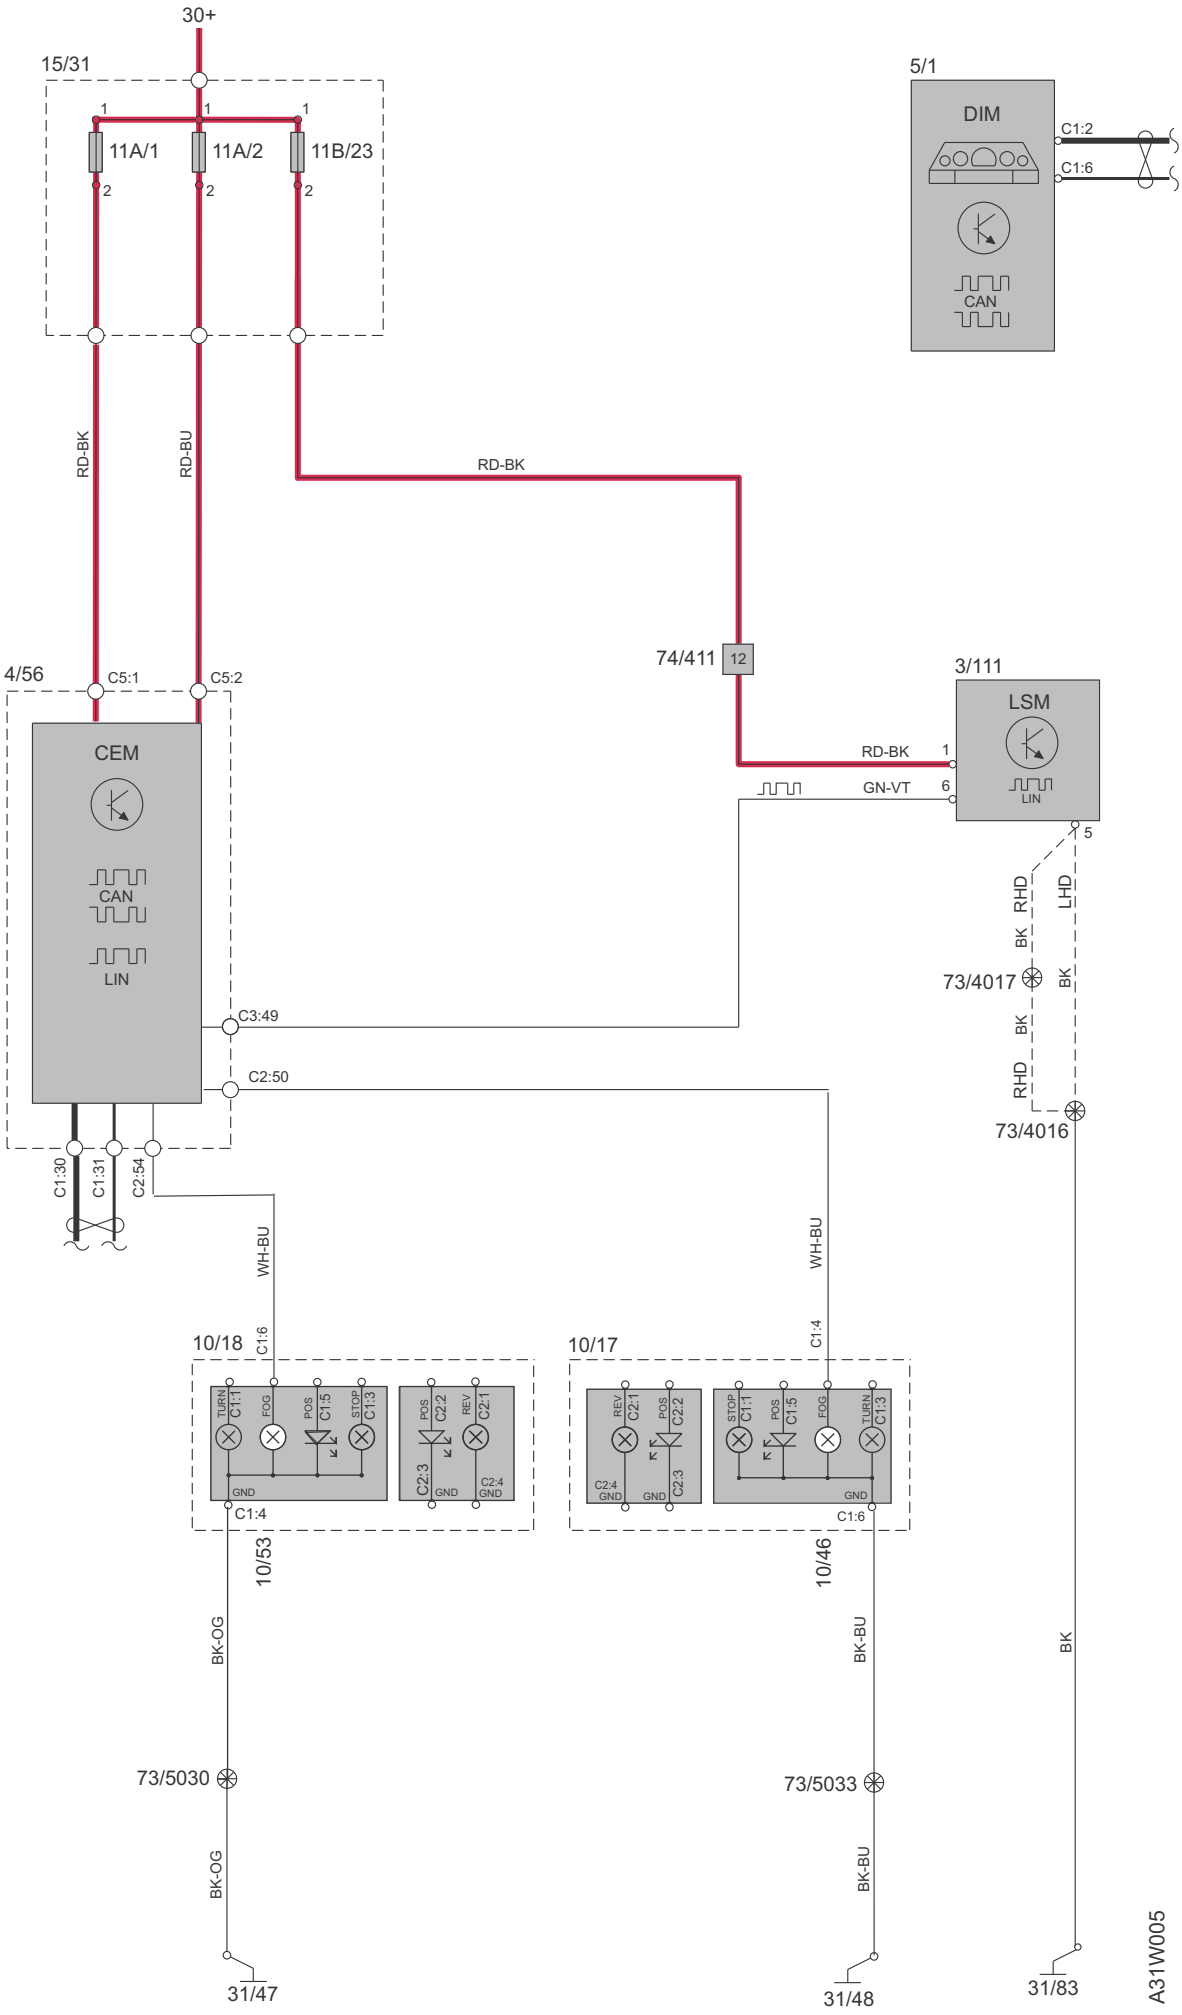
30+
15/31
11A/1
11A/2
11B/23
5/1
DIM
C1:2
C1:6
CAN
RD-BK
RD-BU
RD-BK
74/411
12
3/111
LSM
RD-BK
GN-VT
LIN
4/56
C5:1
C5:2
CEM
CAN
LIN
C3:49
C2:50
C1:30
C1:31
C2:54
WH-BU
WH-BU
RHD
LHD
BK
73/4017
BK
BK
RHD
73/4016
10/18
C1:6
TURN
C1:1
FOG
POS
C1:5
STOP
C1:3
GND
C1:4
POS
C2:2
REV
C2:1
C2:3
GND
C2:4
GND
10/17
REV
C2:1
POS
C2:2
C2:4
GND
GND
STOP
C1:1
POS
C1:5
FOG
TURN
C1:3
GND
C1:6
C1:4
10/53
10/46
BK-OG
BK-BU
BK
73/5030
73/5033
BK-OG
BK-BU
31/47
31/48
31/83
A31W005

Group 35 Lighting
Fog lights V60

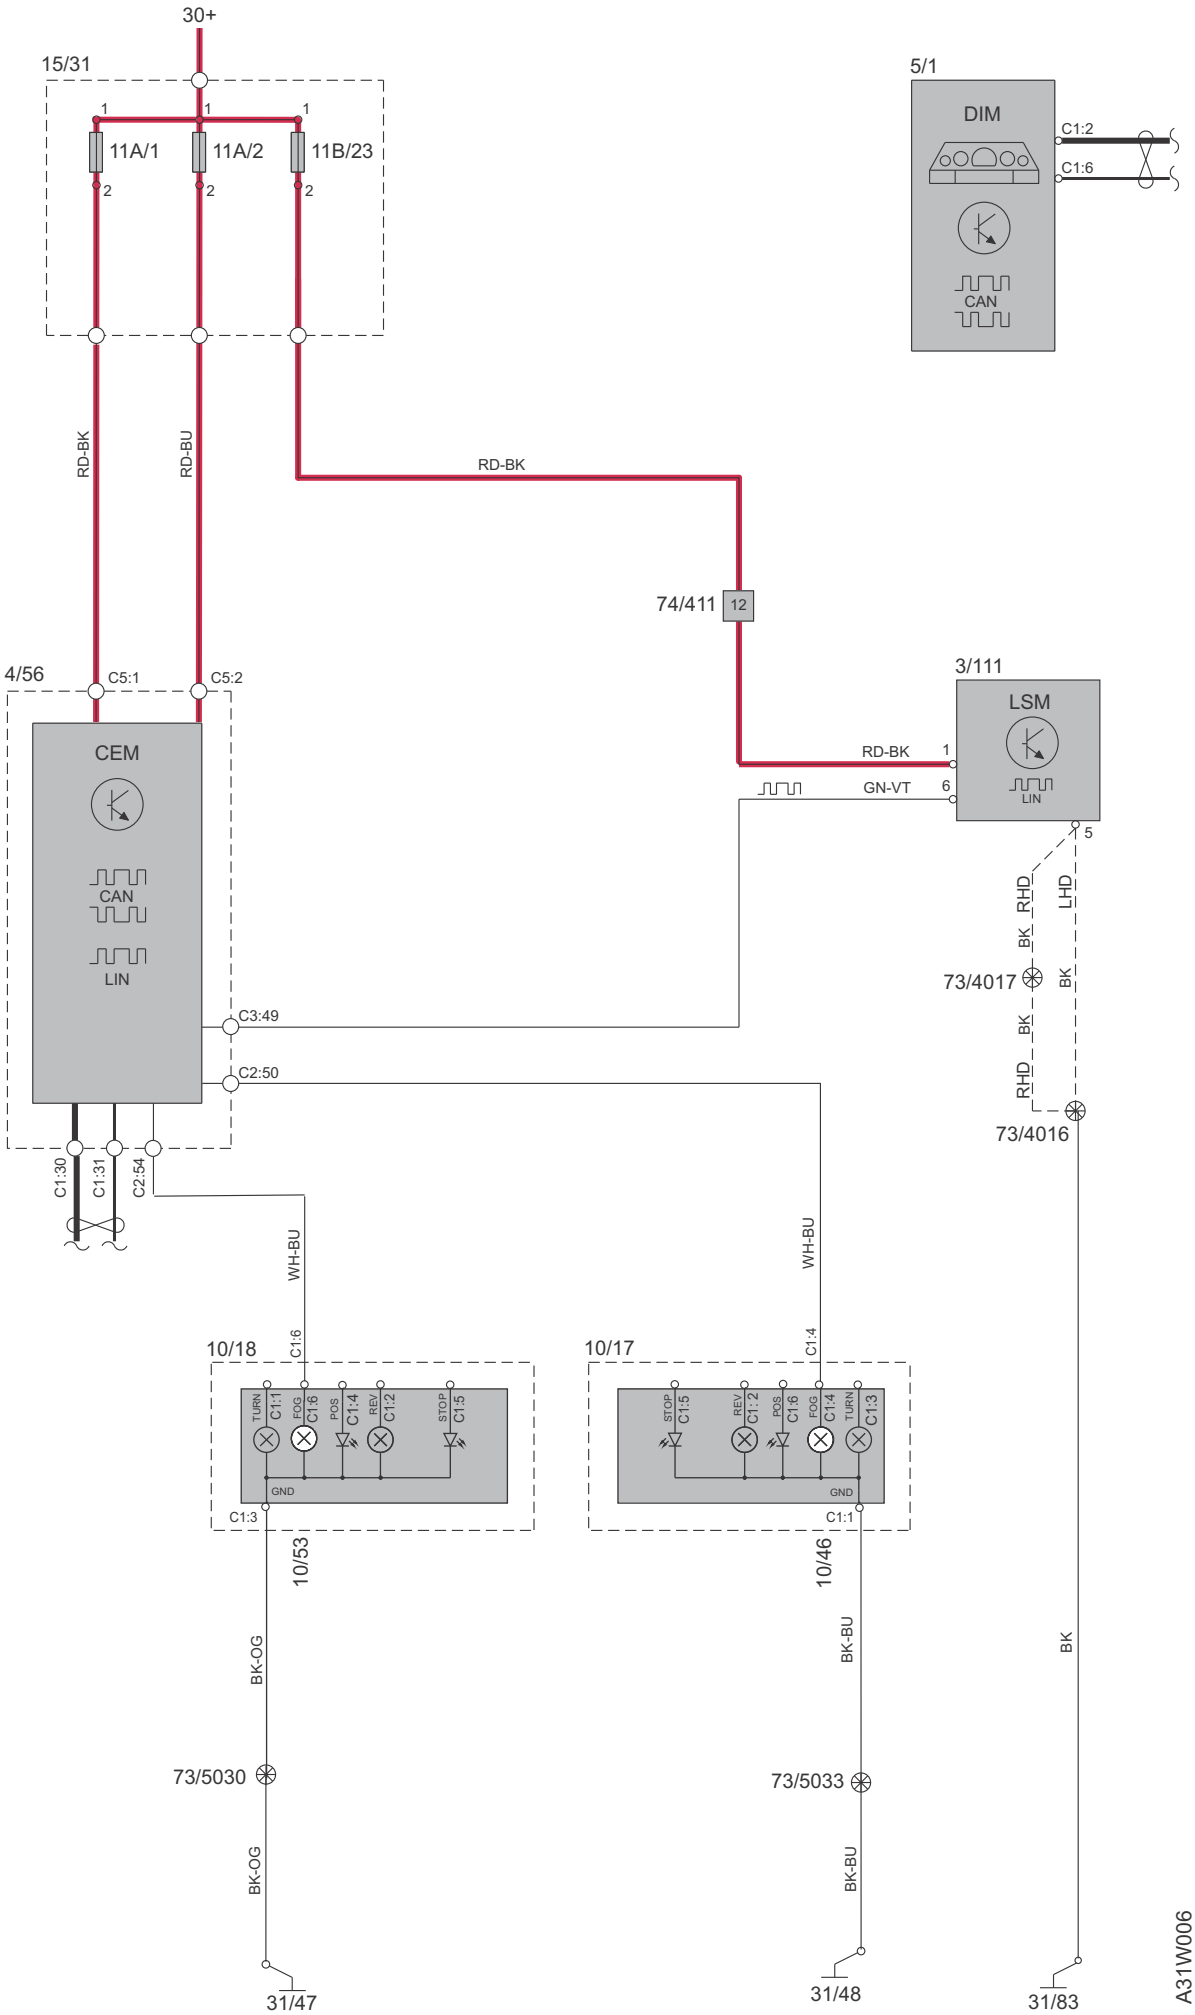

Group 35 Lighting
Brake lights S60

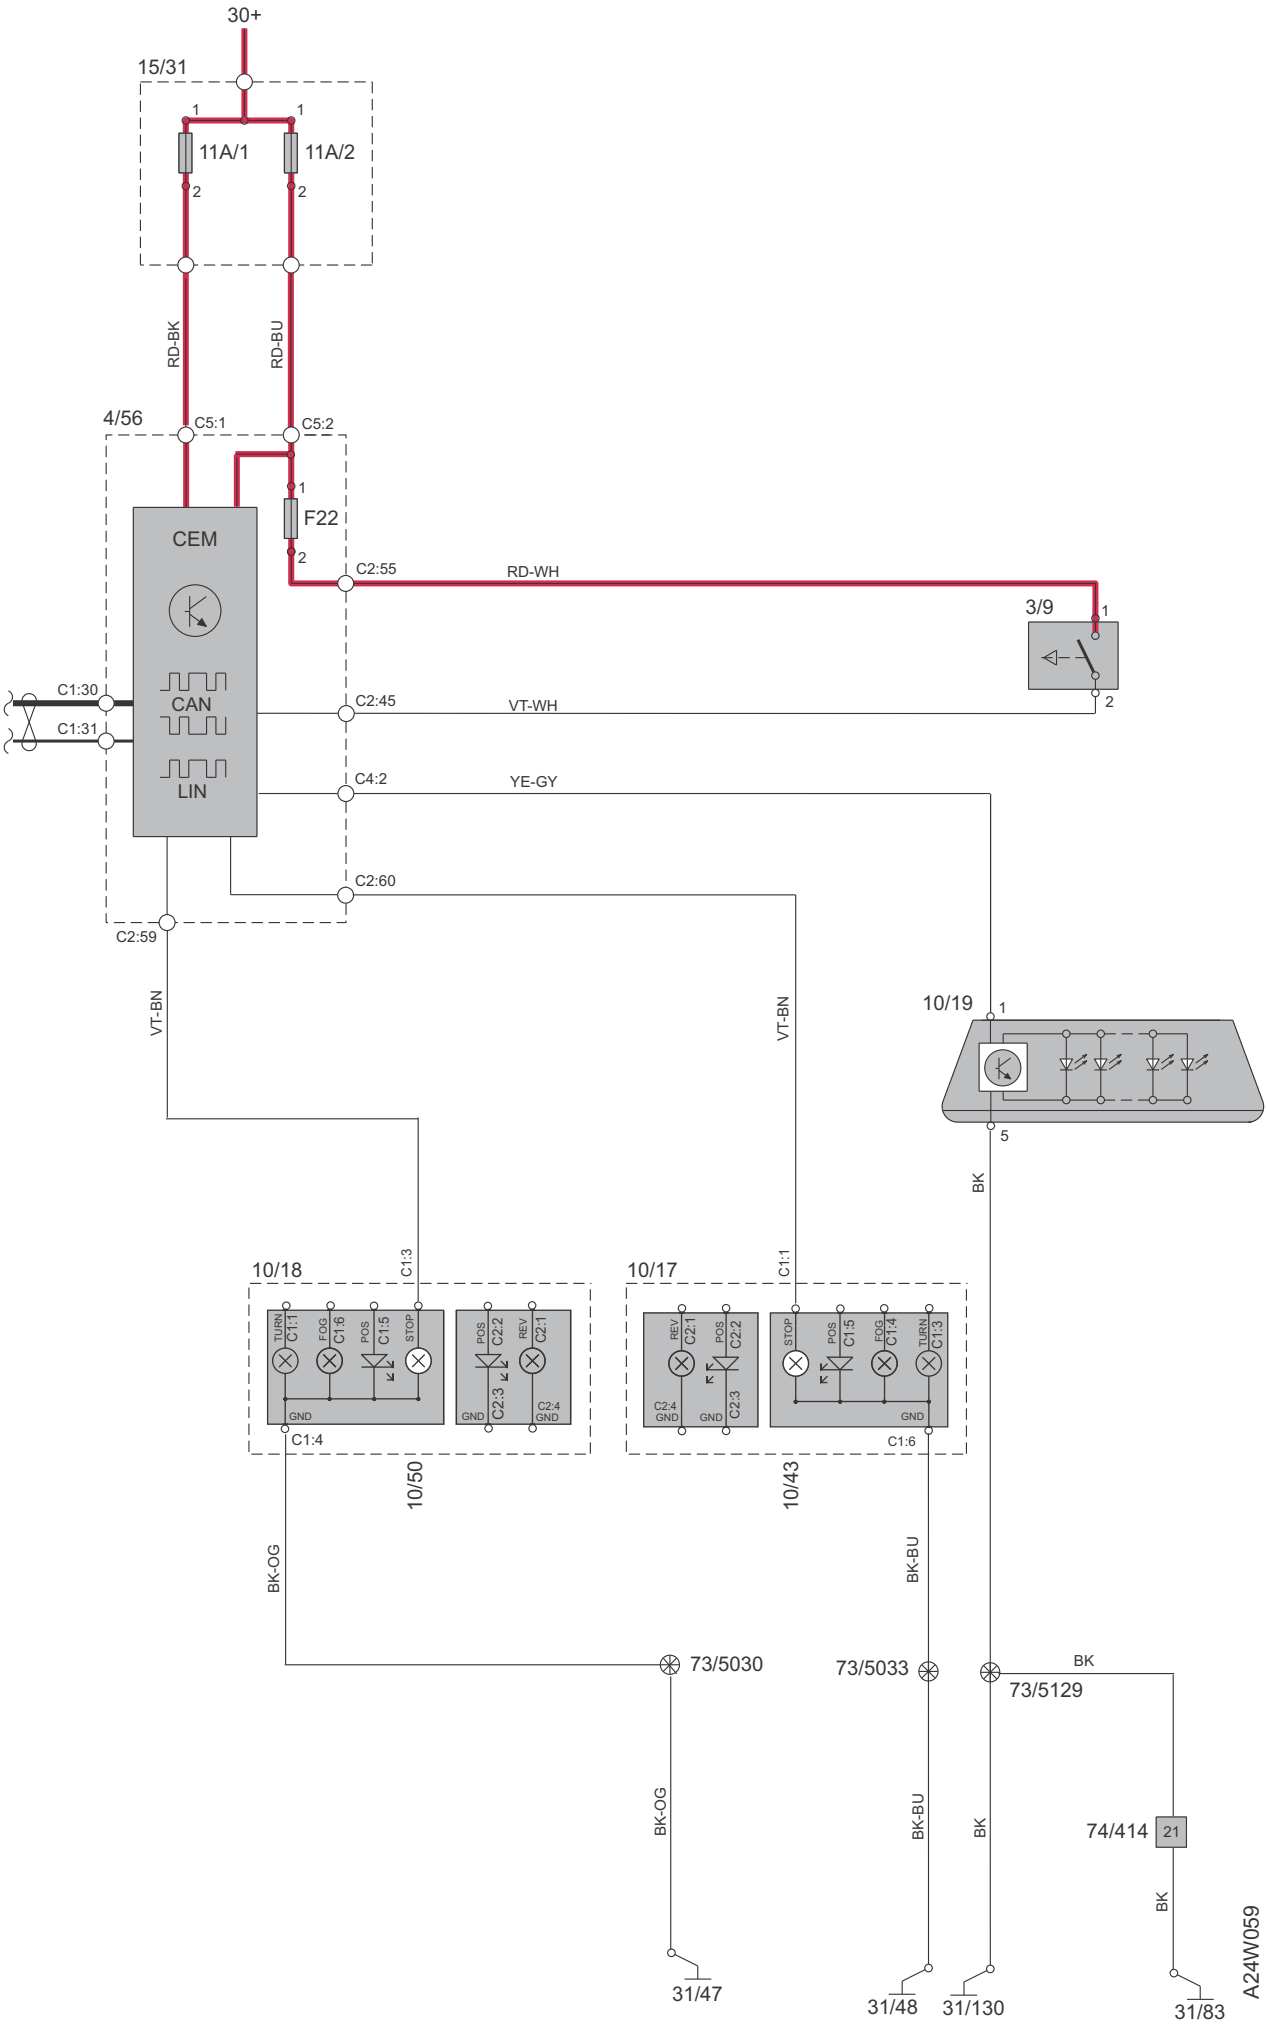

Group 35 Lighting
Brake lights V60

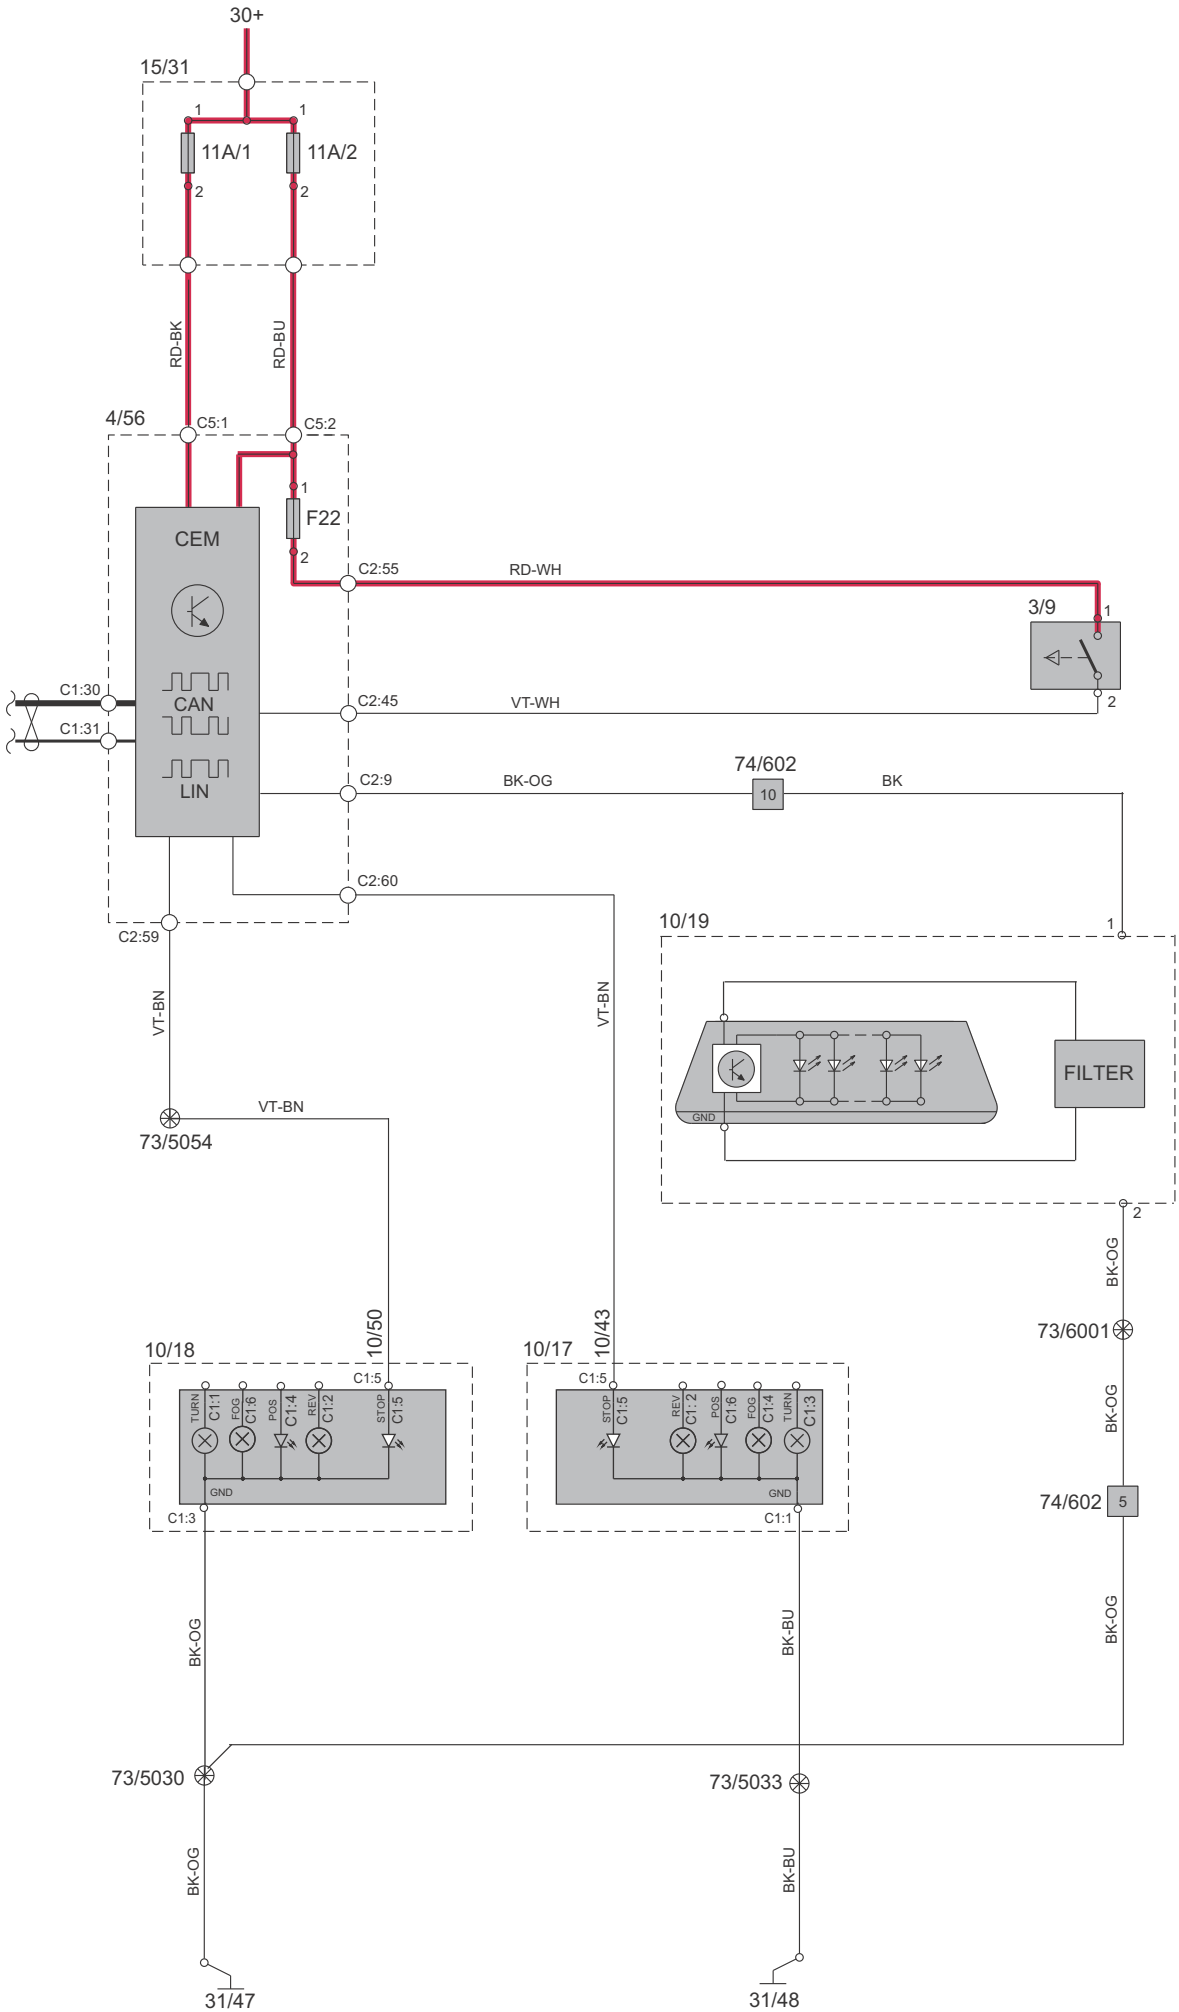

Group 35 Lighting
Reversing lights S60

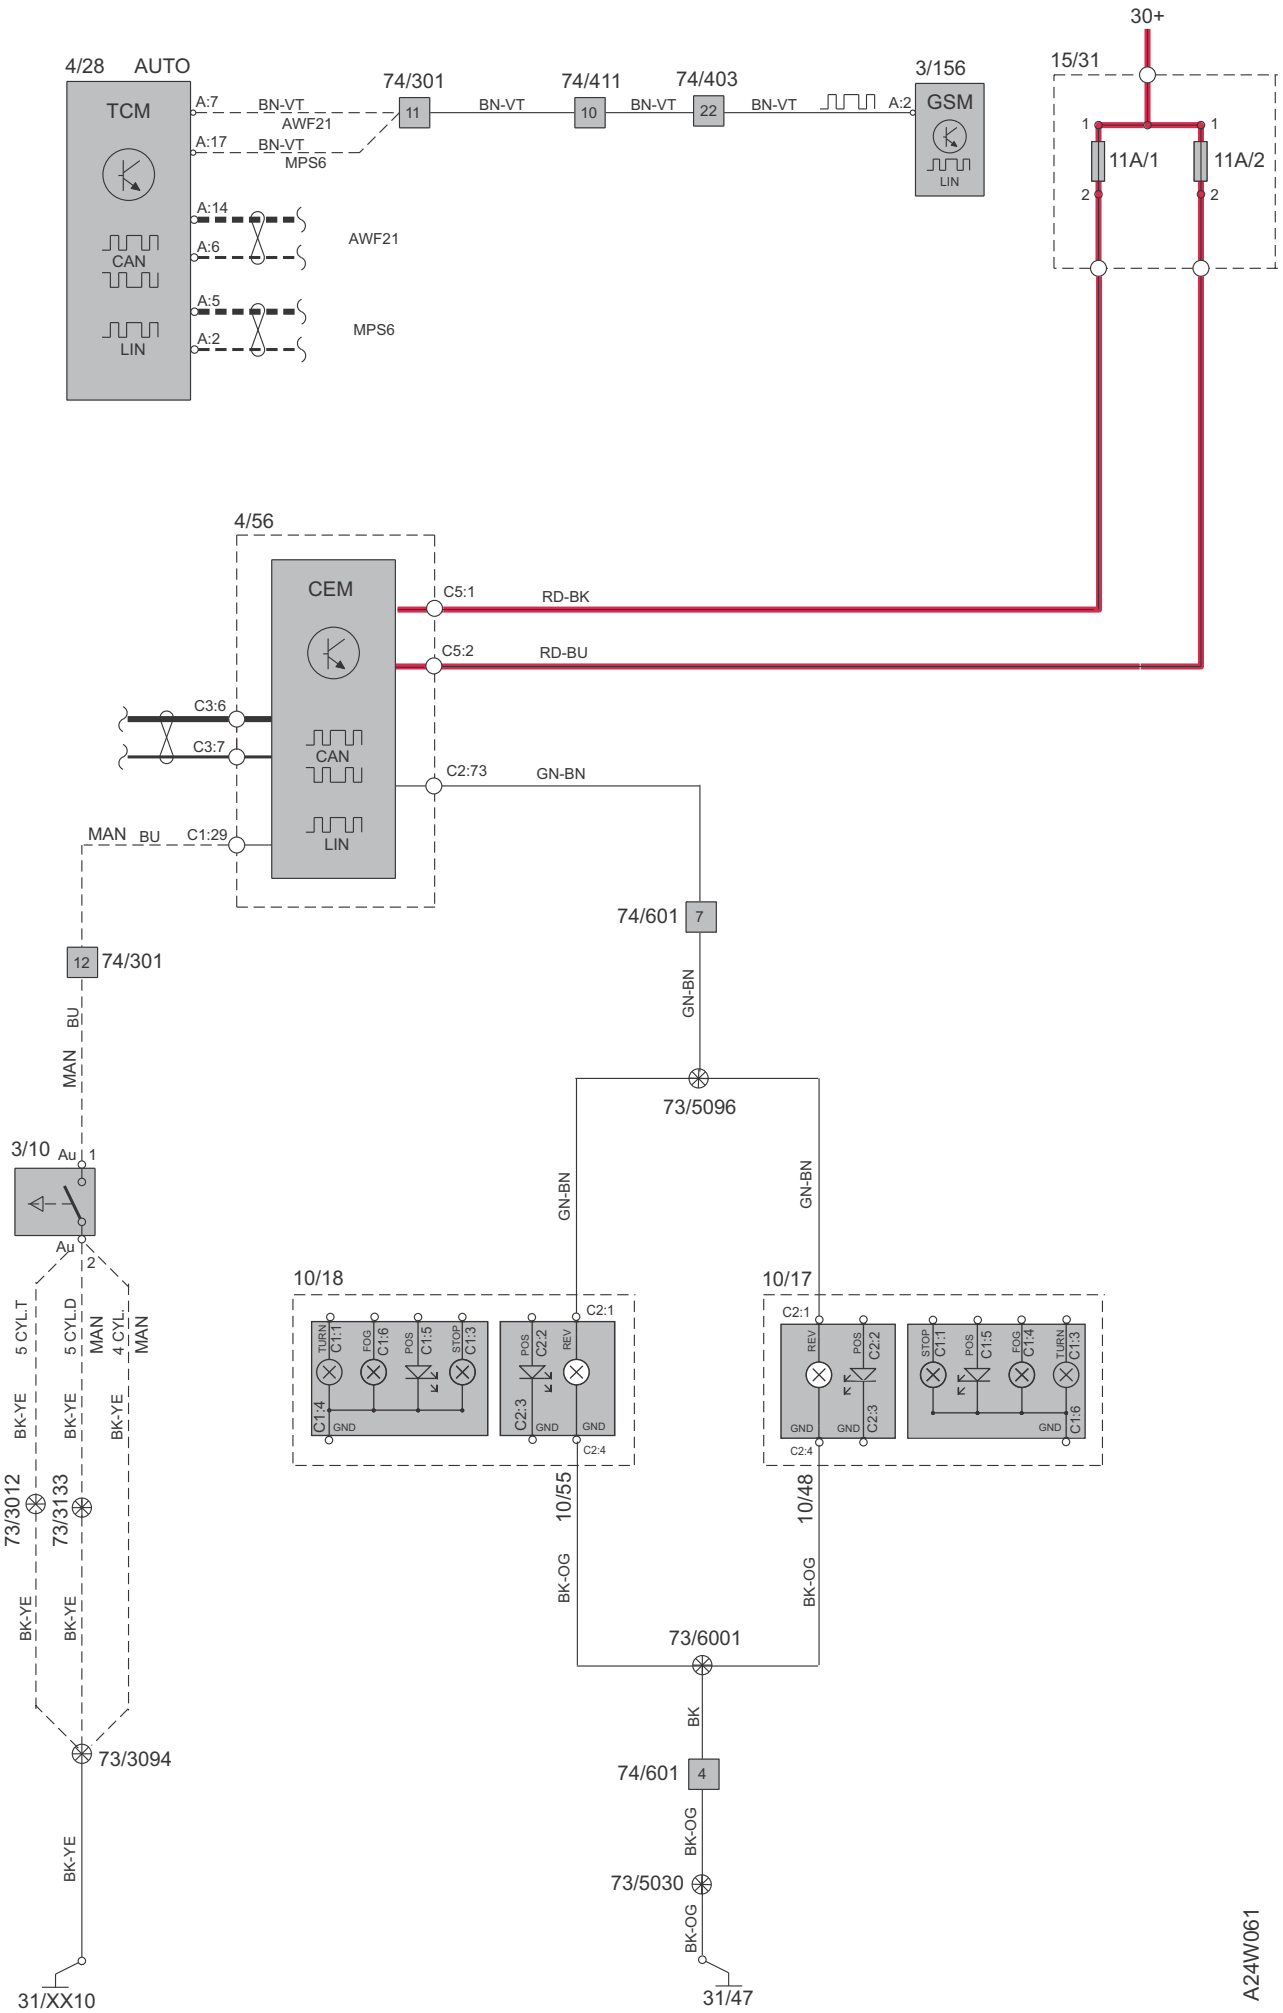

Group 35 Lighting
Reversing lights V60

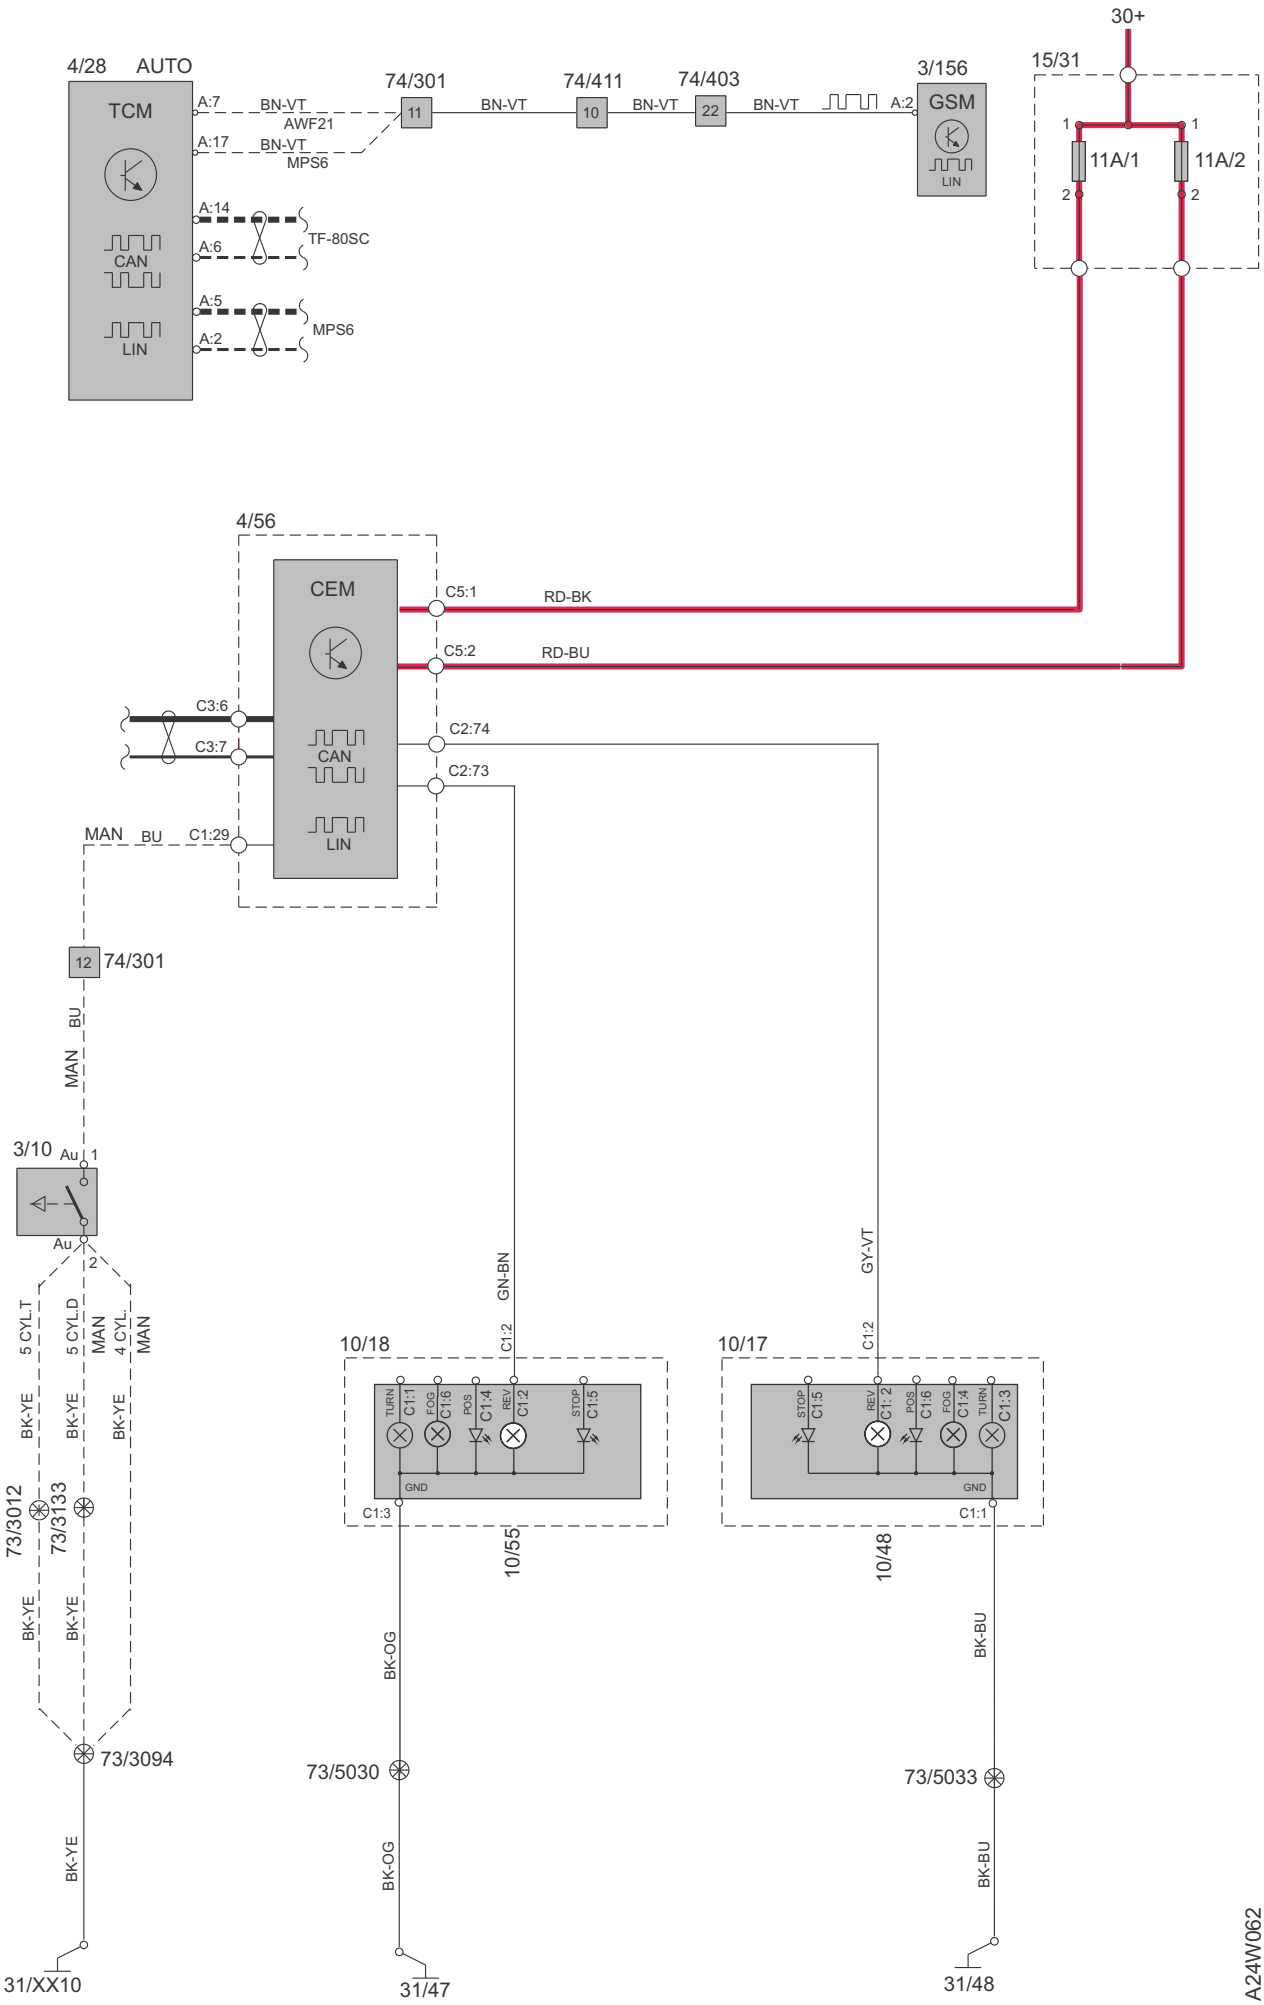

Group 35 Lighting
Follow-me-home lighting LHD

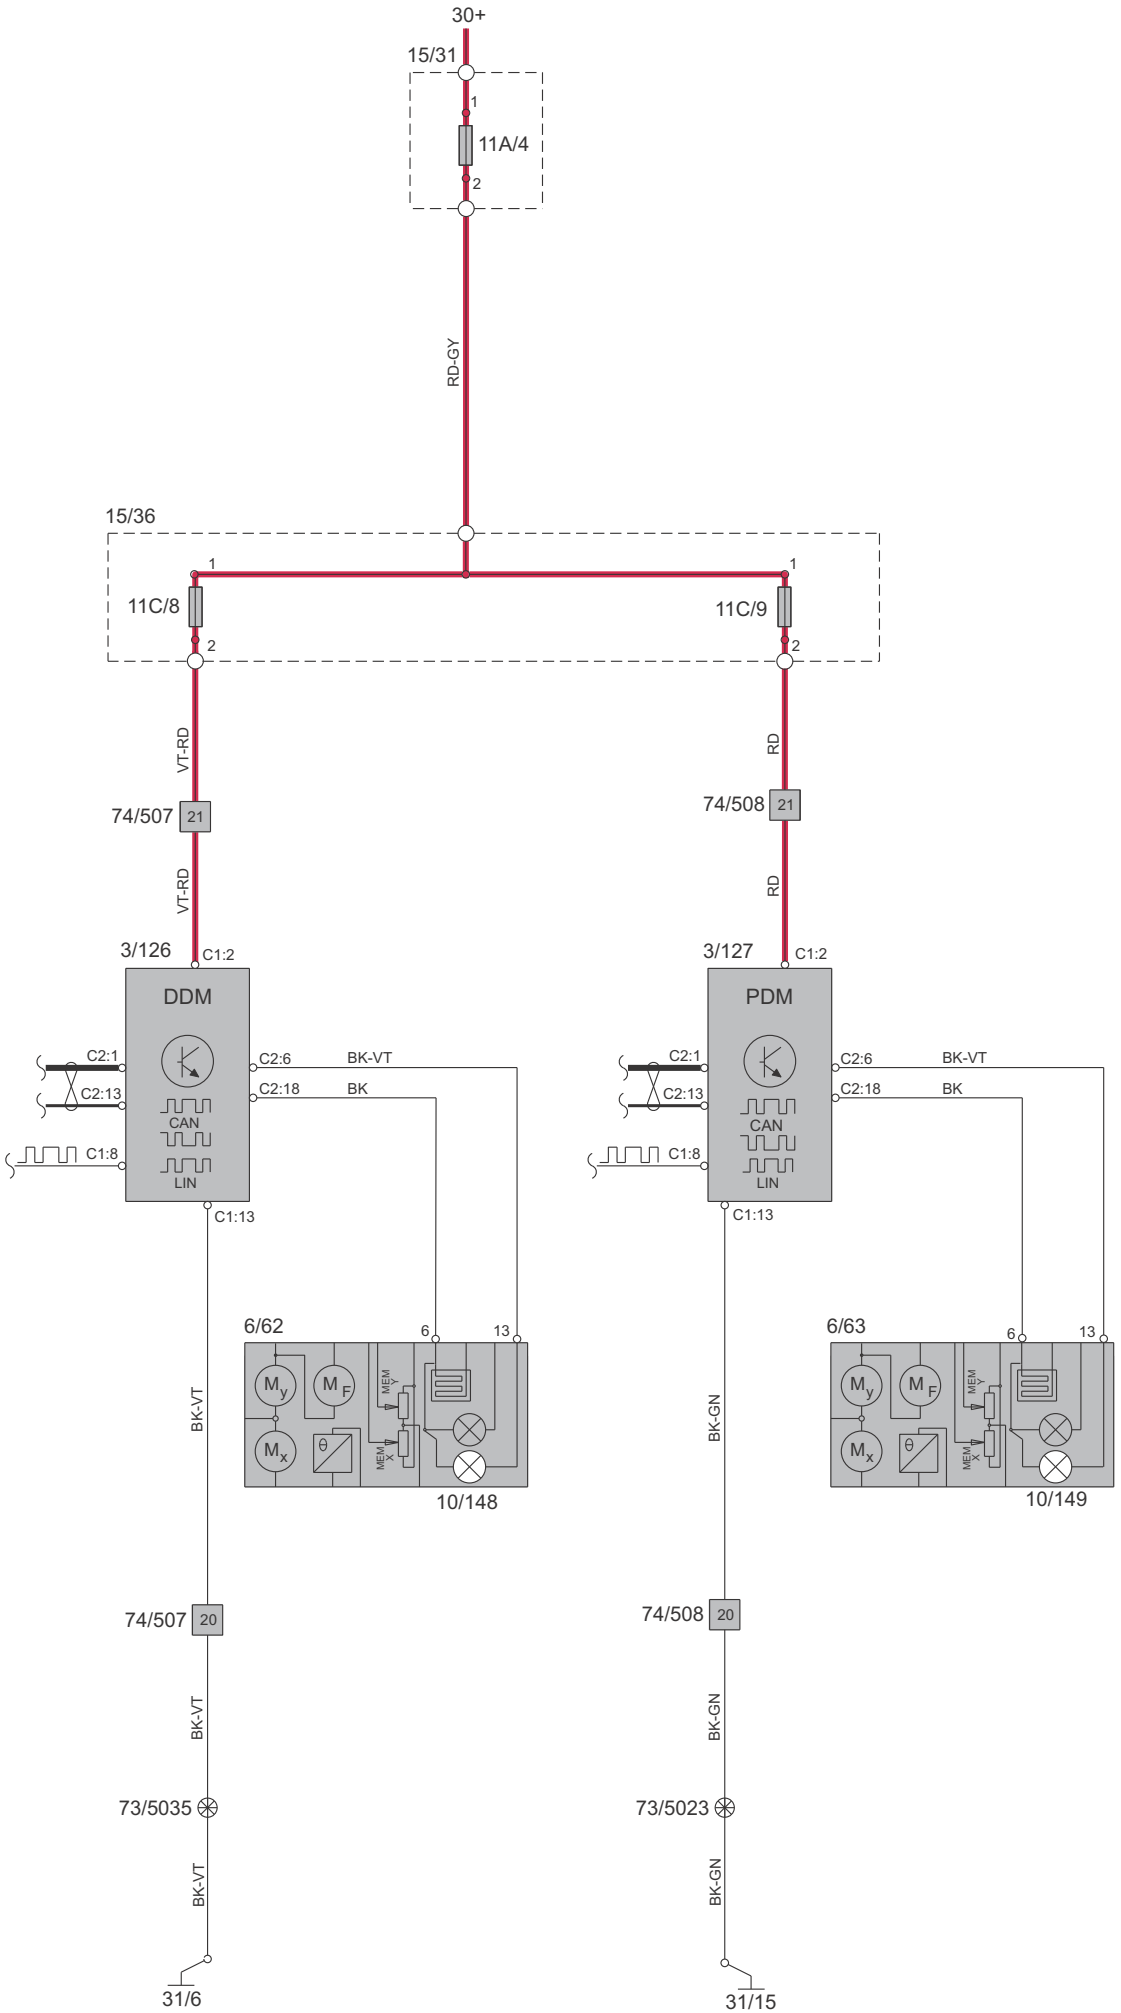

Group 35 Lighting
Follow-me-home lighting RHD

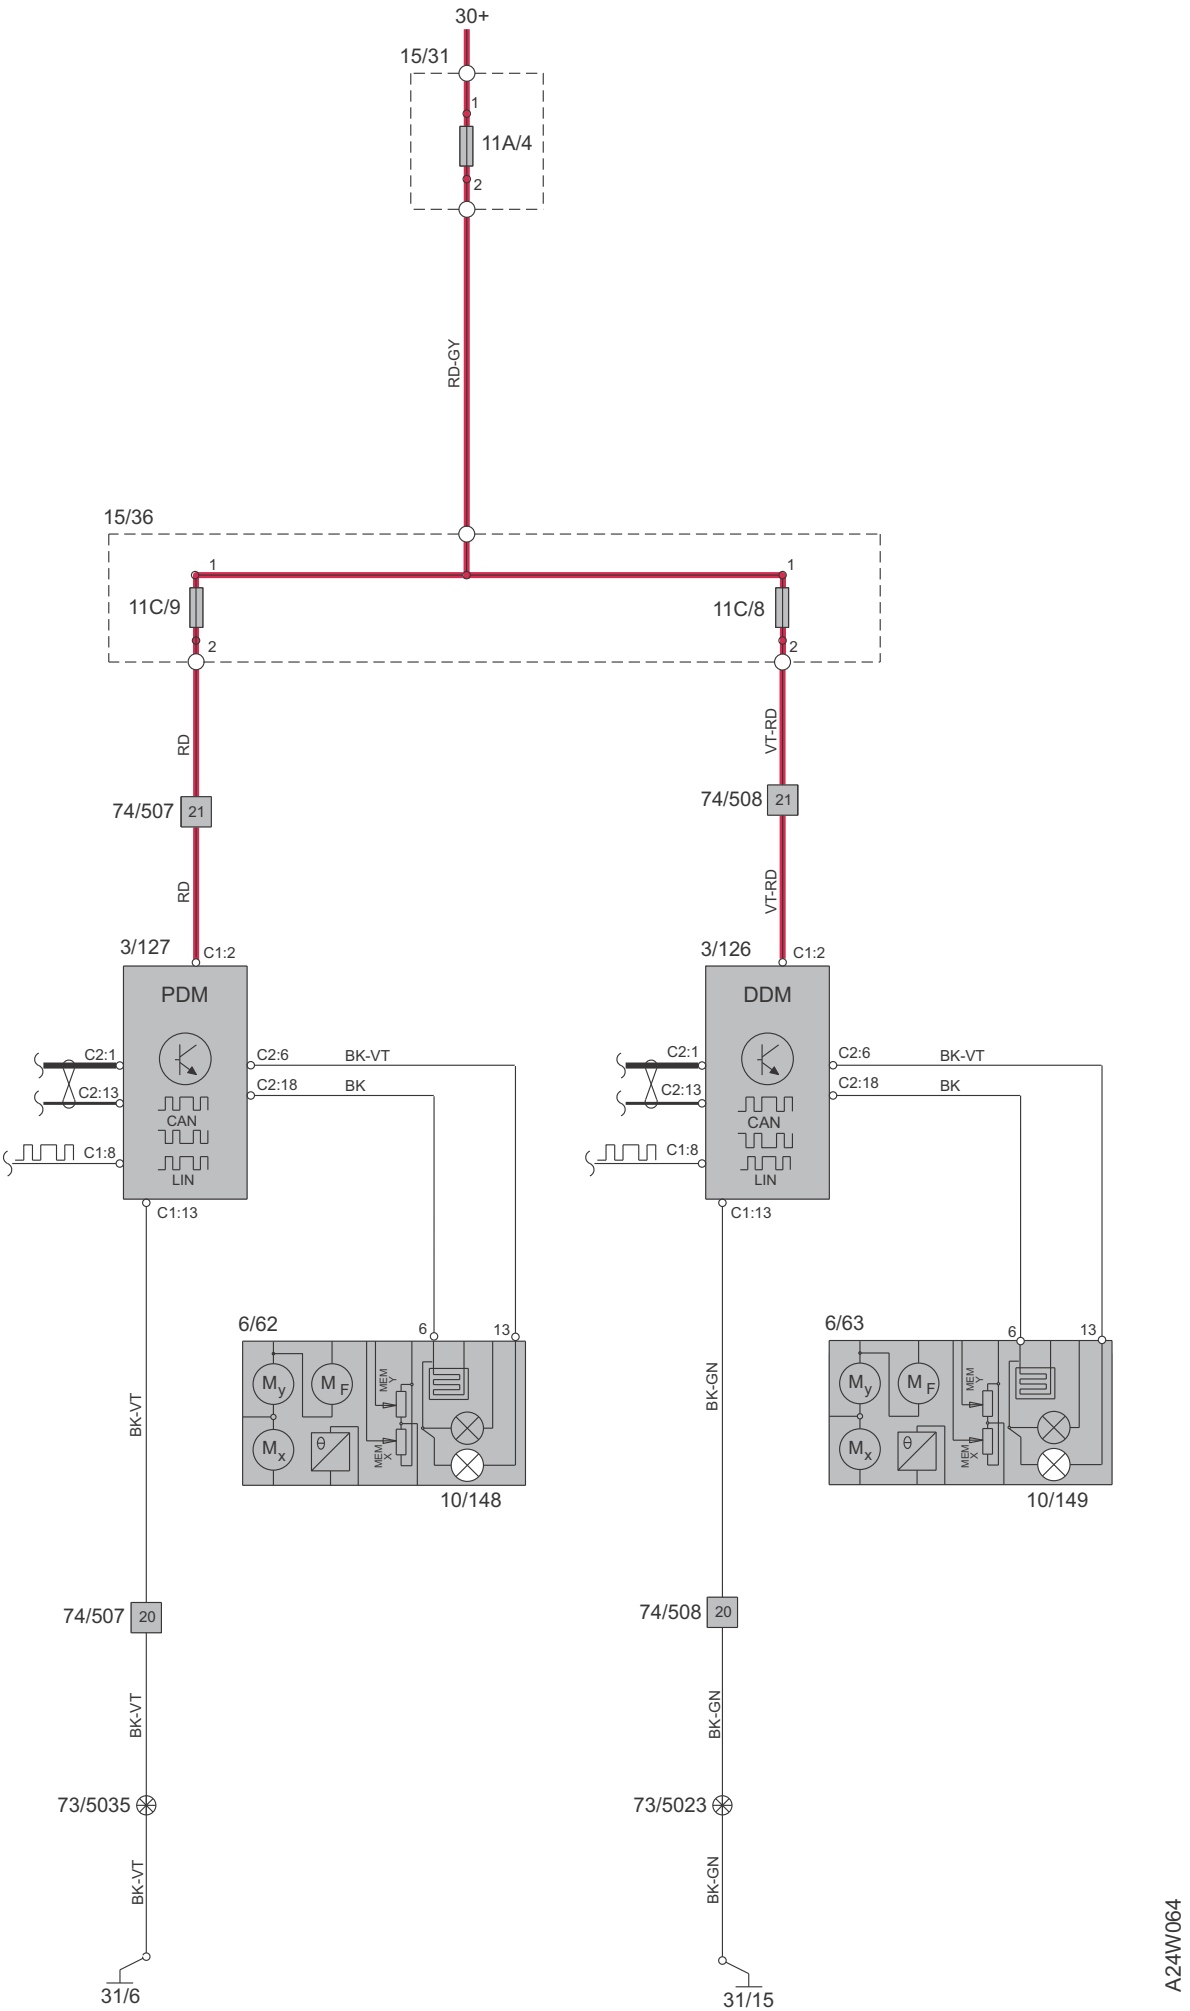

Group 35 Lighting
Interior lighting, LHD 1:2

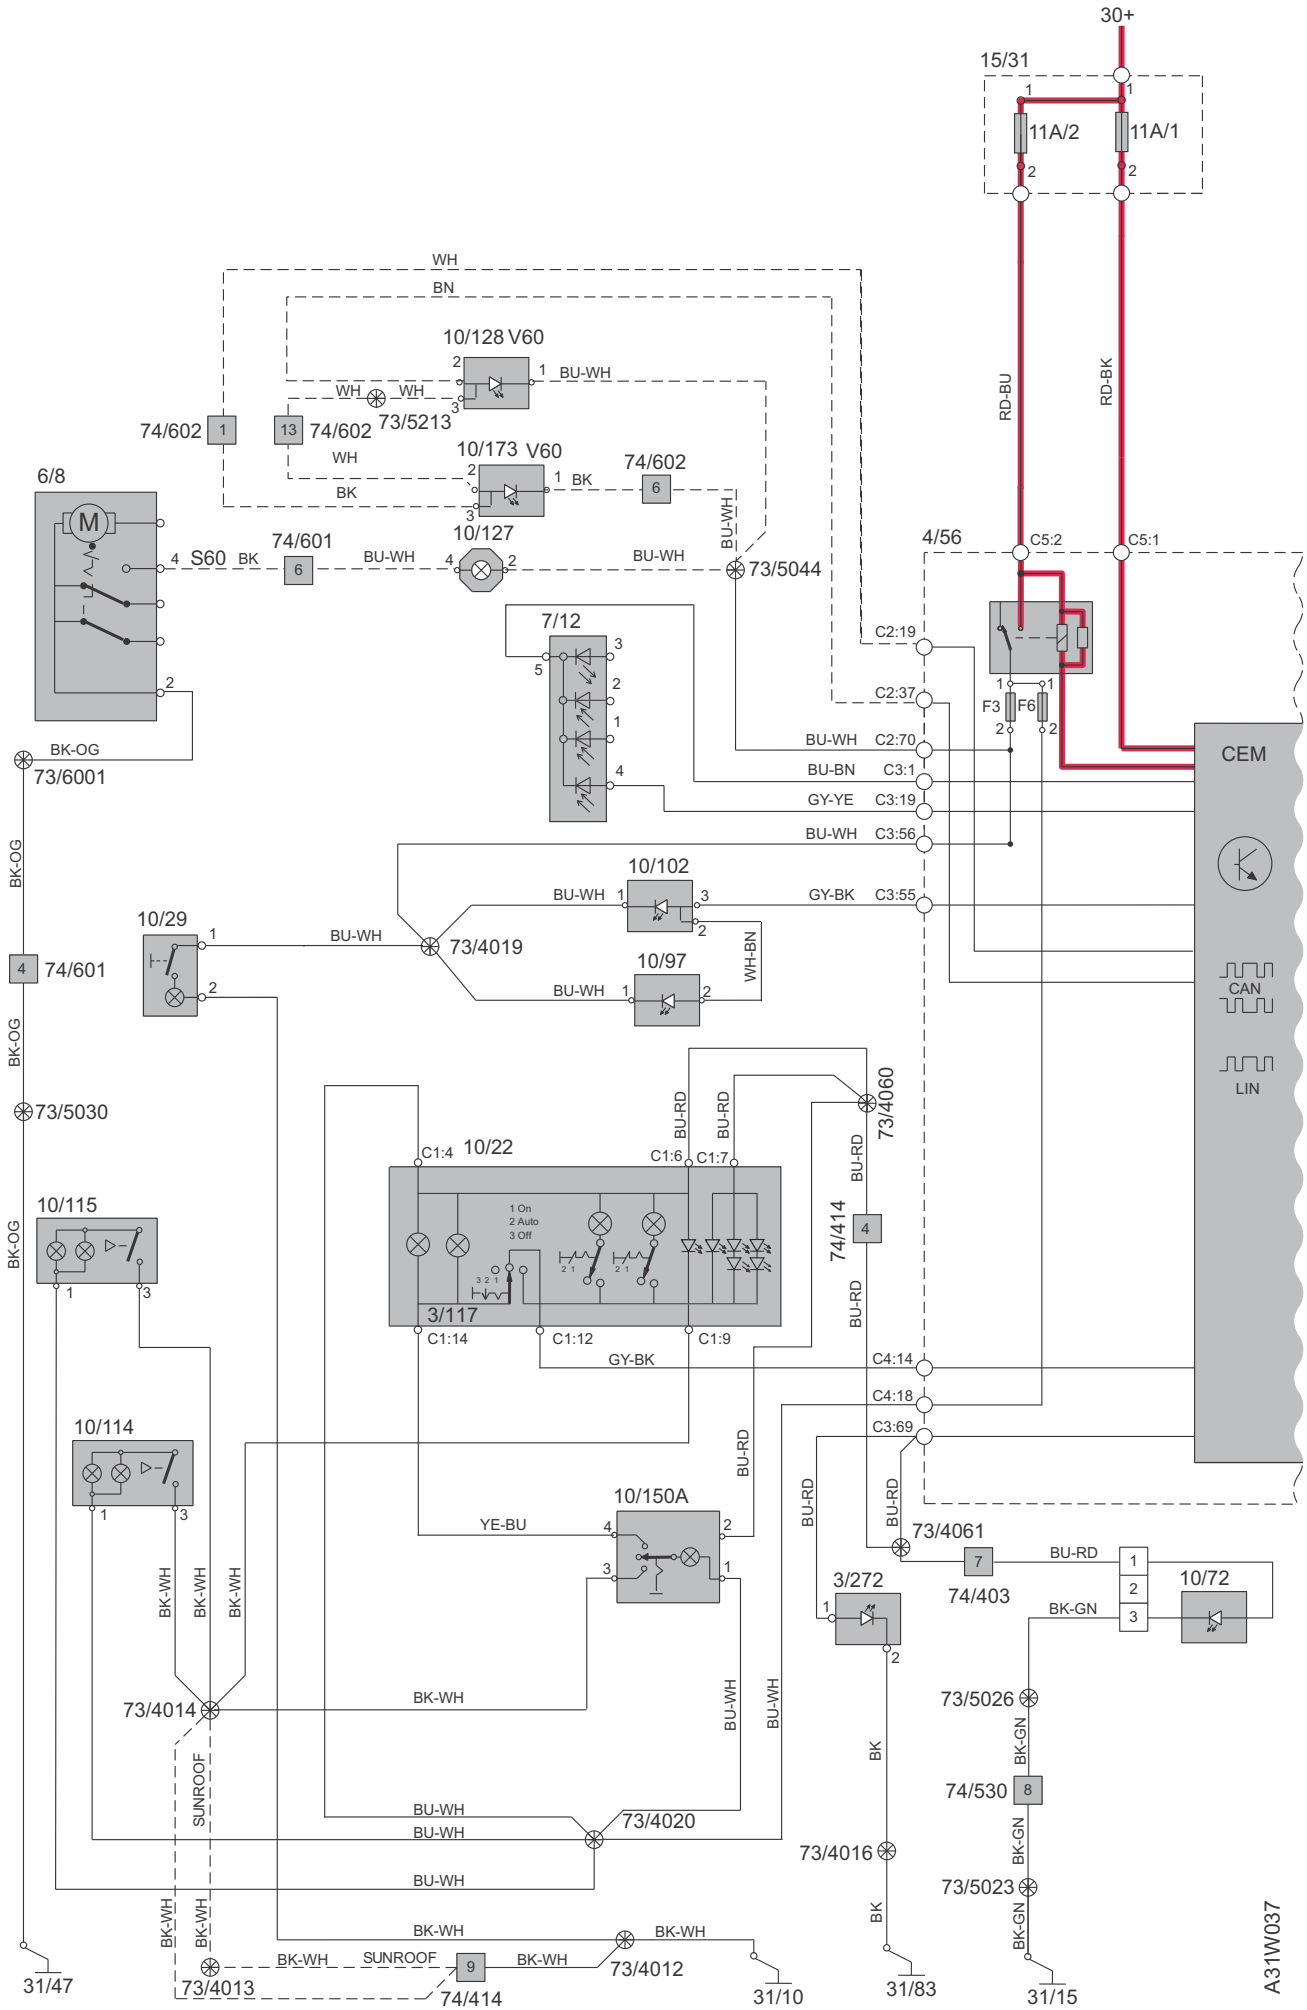

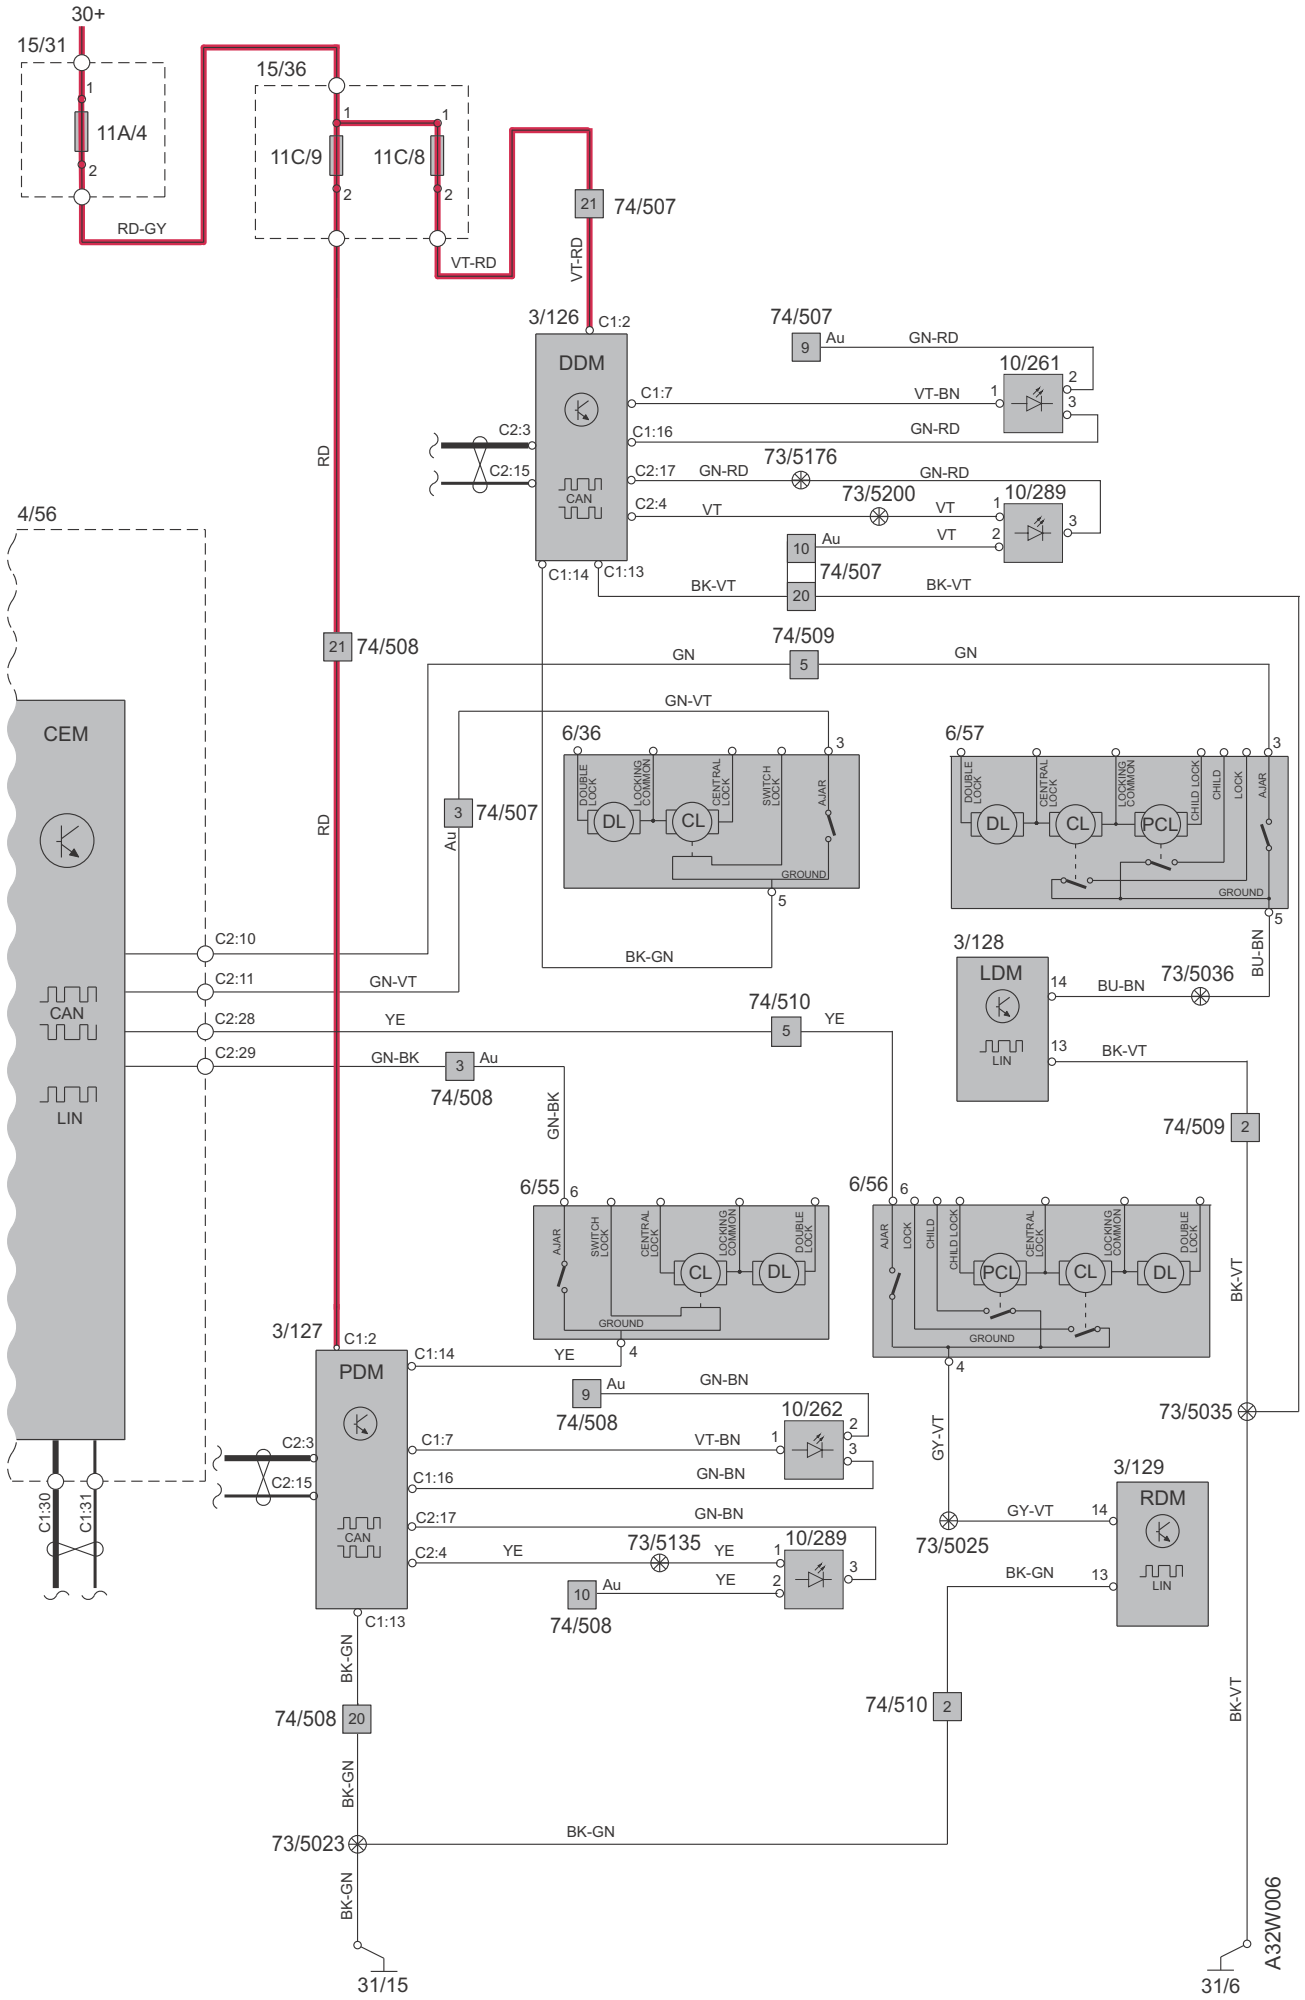
30+
15/31
11A/4
RD-GY
15/36
11C/9
11C/8
VT-RD
21 74/507
VT-RD
3/126
C1:2
DDM
C1:7
VT-BN
C1:16
GN-RD
C2:3
C2:15
C2:17
GN-RD
73/5176
GN-RD
CAN
C2:4
VT
73/5200
VT
10/261
10/289
74/507
9 Au
GN-RD
10 Au
VT
74/507
20
BK-VT
BK-VT
C1:14
C1:13
4/56
21 74/508
RD
RD
74/509
5
GN
GN
GN-VT
CEM
6/36
3
DOUBLE LOCK
LOCKING COMMON
CENTRAL LOCK
SWITCH LOCK
AJAR
DL
CL
GROUND
5
3 74/507
Au
6/57
3
DOUBLE LOCK
CENTRAL LOCK
LOCKING COMMON
CHILD LOCK
CHILD
LOCK
AJAR
DL
CL
PCL
GROUND
5
C2:10
C2:11
GN-VT
BK-GN
BU-BN
3/128
LDM
14
BU-BN
73/5036
C2:28
YE
74/510
5
YE
CAN
C2:29
GN-BK
3 Au
74/508
13
BK-VT
LIN
74/509 2
GN-BK
6/55
6
AJAR
SWITCH LOCK
CENTRAL LOCK
LOCKING COMMON
DOUBLE LOCK
CL
DL
GROUND
4
YE
6/56
6
AJAR
LOCK
CHILD
CHILD LOCK
CENTRAL LOCK
LOCKING COMMON
DOUBLE LOCK
PCL
CL
DL
GROUND
4
BK-VT
3/127
C1:2
PDM
C1:14
YE
9 Au
GN-BN
74/508
10/262
C2:3
C1:7
VT-BN
C2:15
C1:16
GN-BN
C2:17
GN-BN
CAN
C2:4
YE
73/5135
YE
10/289
YE
10 Au
74/508
C1:13
73/5035
GY-VT
3/129
RDM
GY-VT
14
73/5025
BK-GN
13
LIN
C1:30
C1:31
BK-GN
74/508 20
74/510 2
BK-VT
BK-GN
BK-GN
73/5023
BK-GN
BK-GN
31/15
31/6
A32W006

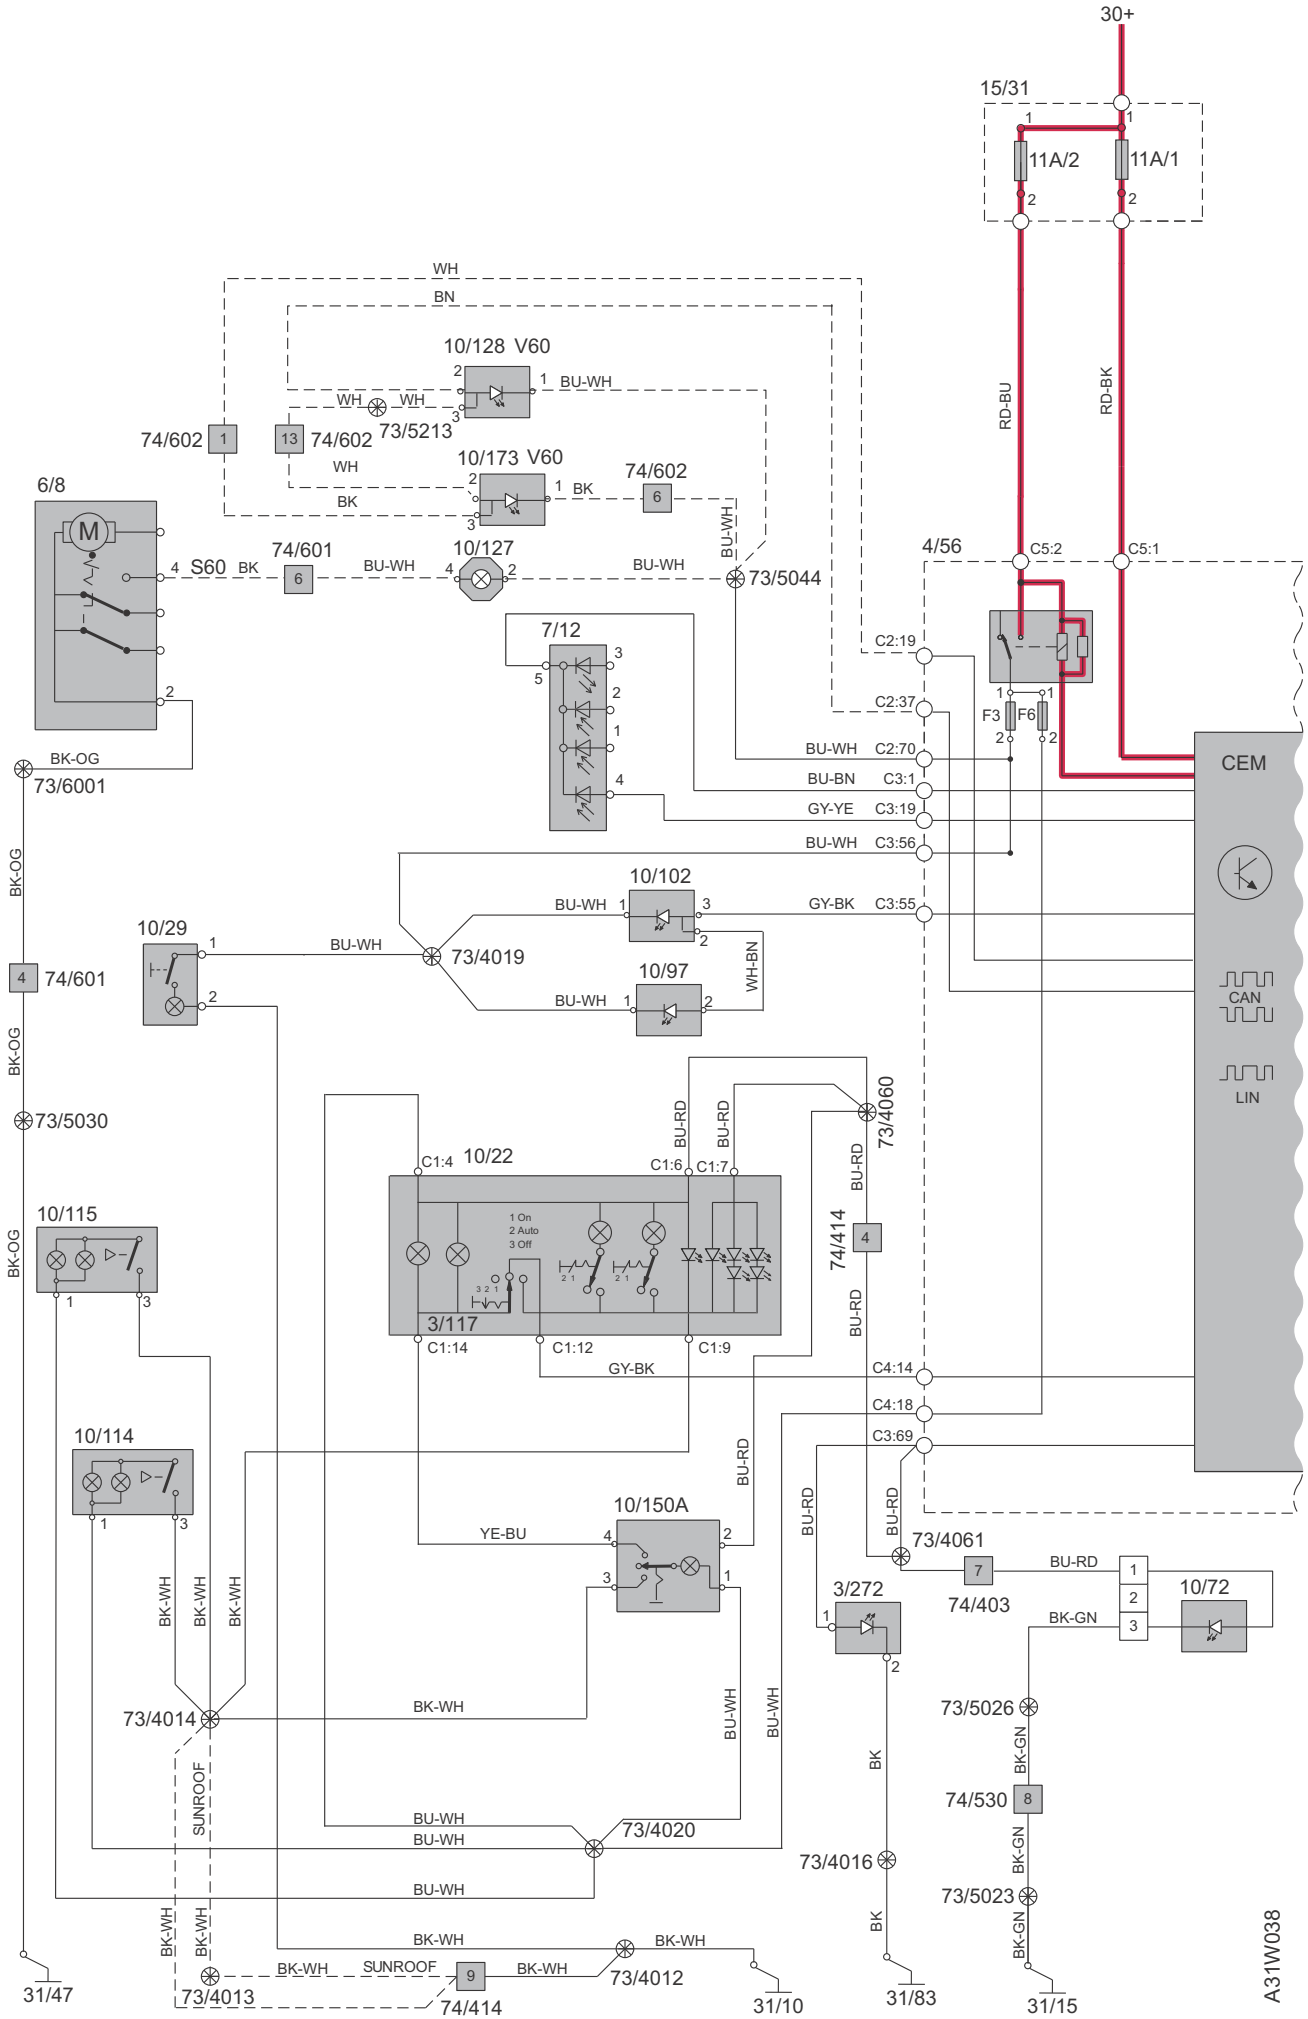
30+
15/31
11A/2
11A/1
RD-BU
RD-BK
4/56
C5:2
C5:1
F3
F6
CEM
CAN
LIN
C2:19
C2:37
C2:70
C3:1
C3:19
C3:56
C3:55
C4:14
C4:18
C3:69
WH
BN
10/128 V60
74/602
73/5213
10/173 V60
BK
BU-WH
6/8
M
S60
74/601
10/127
73/5044
7/12
73/6001
BK-OG
10/102
GY-BK
10/29
73/4019
10/97
WH-BN
73/5030
10/115
10/22
C1:4
C1:6
C1:7
1 On
2 Auto
3 Off
3/117
C1:14
C1:12
C1:9
GY-BK
BU-RD
73/4060
74/414
10/114
10/150A
YE-BU
73/4061
74/403
3/272
10/72
BK-GN
73/5026
74/530
73/4016
73/5023
BK-WH
73/4014
SUNROOF
73/4020
73/4012
73/4013
74/414
31/47
31/10
31/83
31/15
A31W038

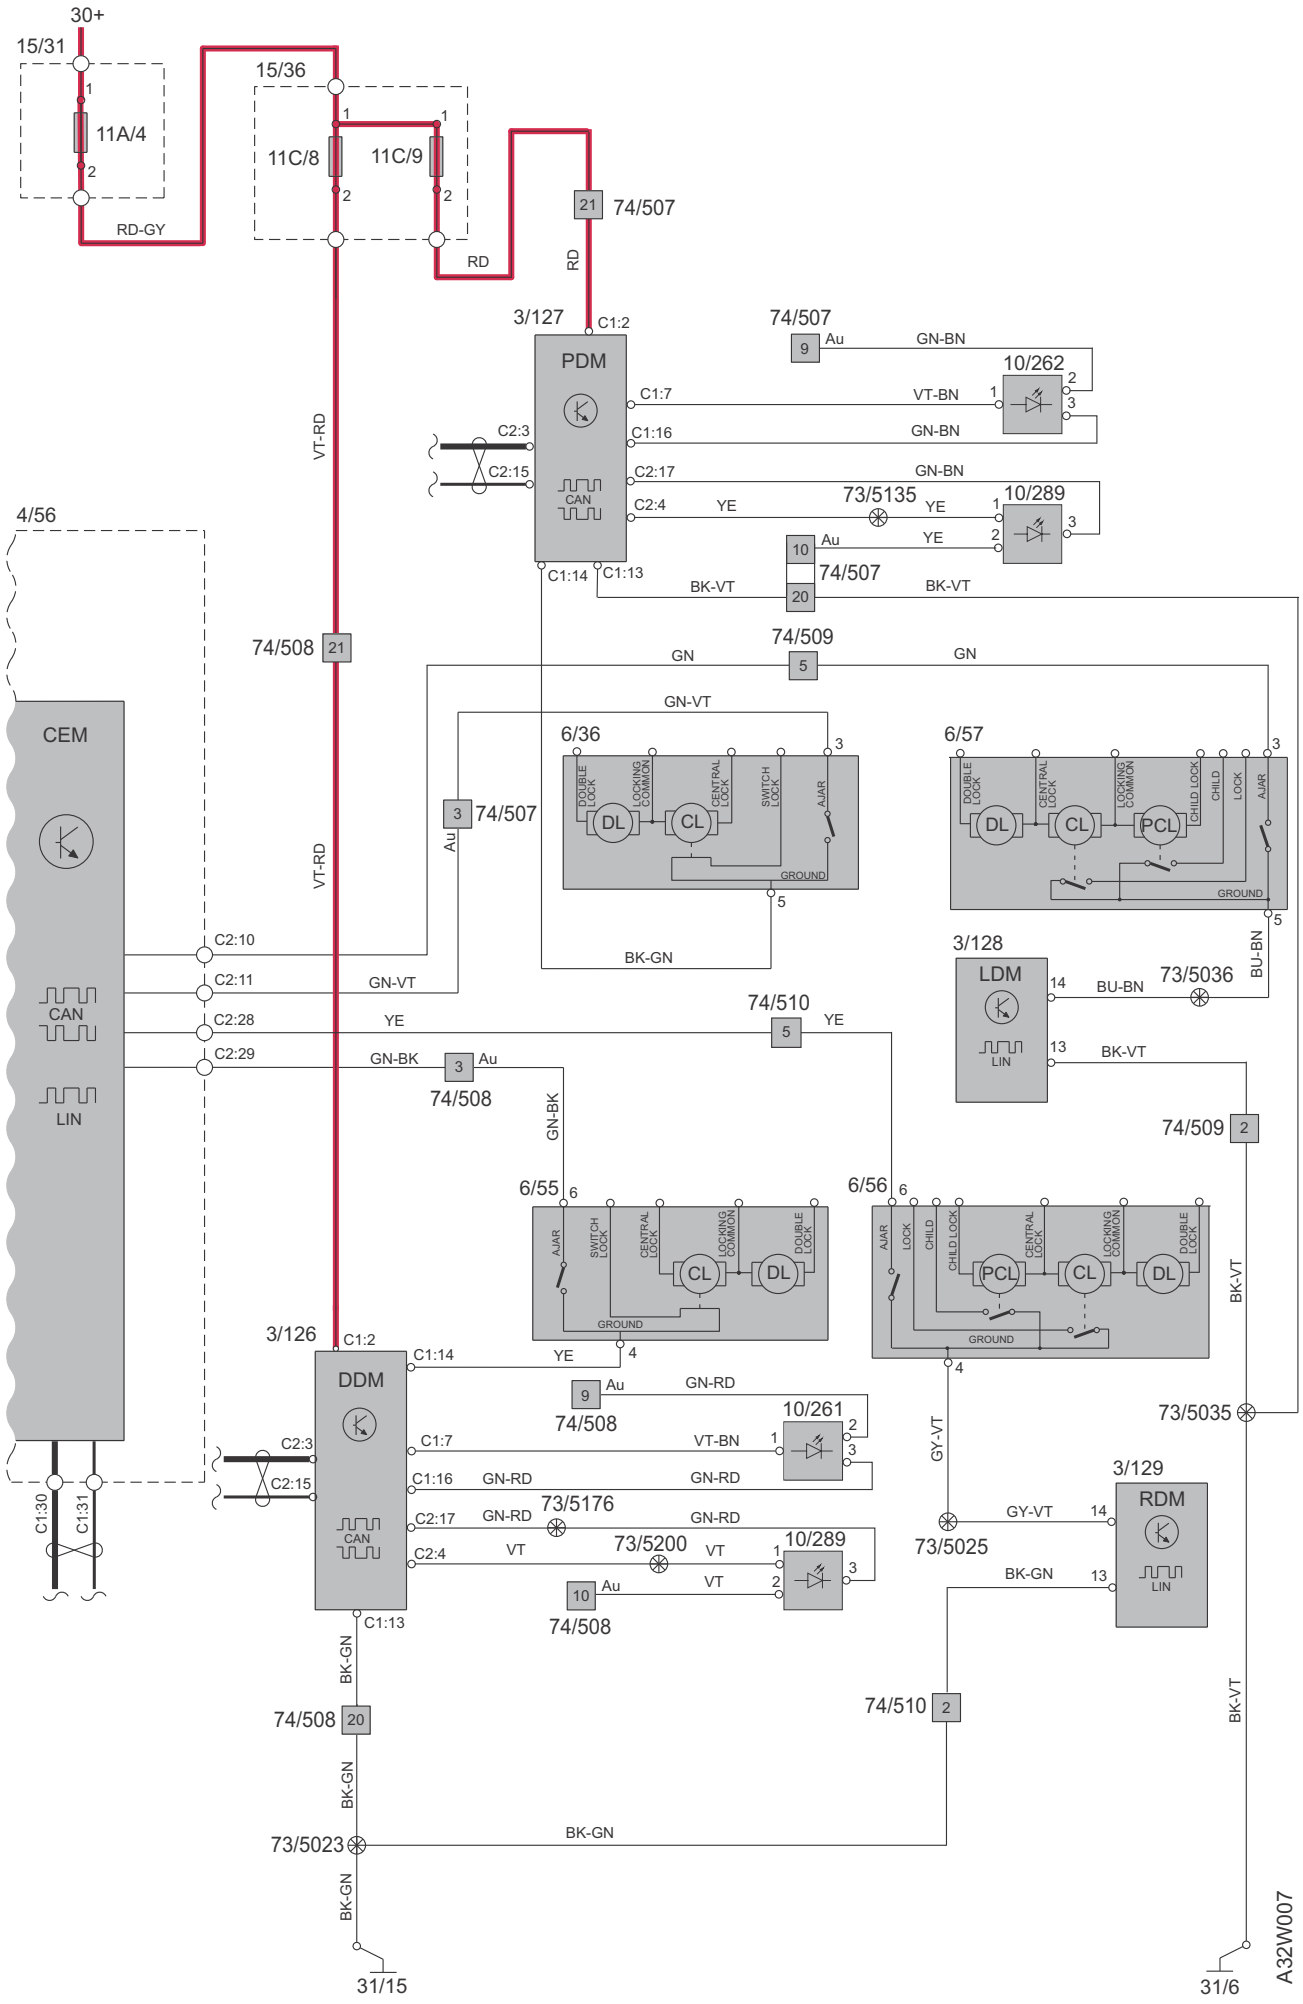
30+
15/31
11A/4
15/36
11C/8
11C/9
RD-GY
RD
21 74/507
3/127
C1:2
PDM
C2:3
C2:15
CAN
C1:7
C1:16
C2:17
C2:4
C1:14
C1:13
74/507
9 Au GN-BN
10/262
VT-BN
GN-BN
73/5135
YE
10/289
10 Au YE
20 BK-VT
74/508 21
VT-RD
74/509
5 GN
GN-VT
4/56
CEM
C2:10
C2:11
C2:28
C2:29
CAN
LIN
3 74/507 Au
6/36
DOUBLE LOCK
LOCKING COMMON
CENTRAL LOCK
SWITCH LOCK
AJAR
DL
CL
GROUND
BK-GN
6/57
PCL
CHILD LOCK
CHILD
LOCK
3/128
LDM
14 BU-BN
73/5036
BU-BN
13 BK-VT
74/510
5 YE
GN-BK
3 Au
74/508
74/509 2
6/55
6/56
3/126
DDM
C1:30
C1:31
C1:7
C1:16
C2:17
C2:4
9 Au GN-RD
74/508
10/261
VT-BN
GN-RD
73/5176
73/5200
VT
10 Au VT
74/508
73/5035
GY-VT
3/129
RDM
73/5025
BK-GN
74/508 20
BK-GN
73/5023
74/510 2
BK-VT
31/15
31/6
A32W007

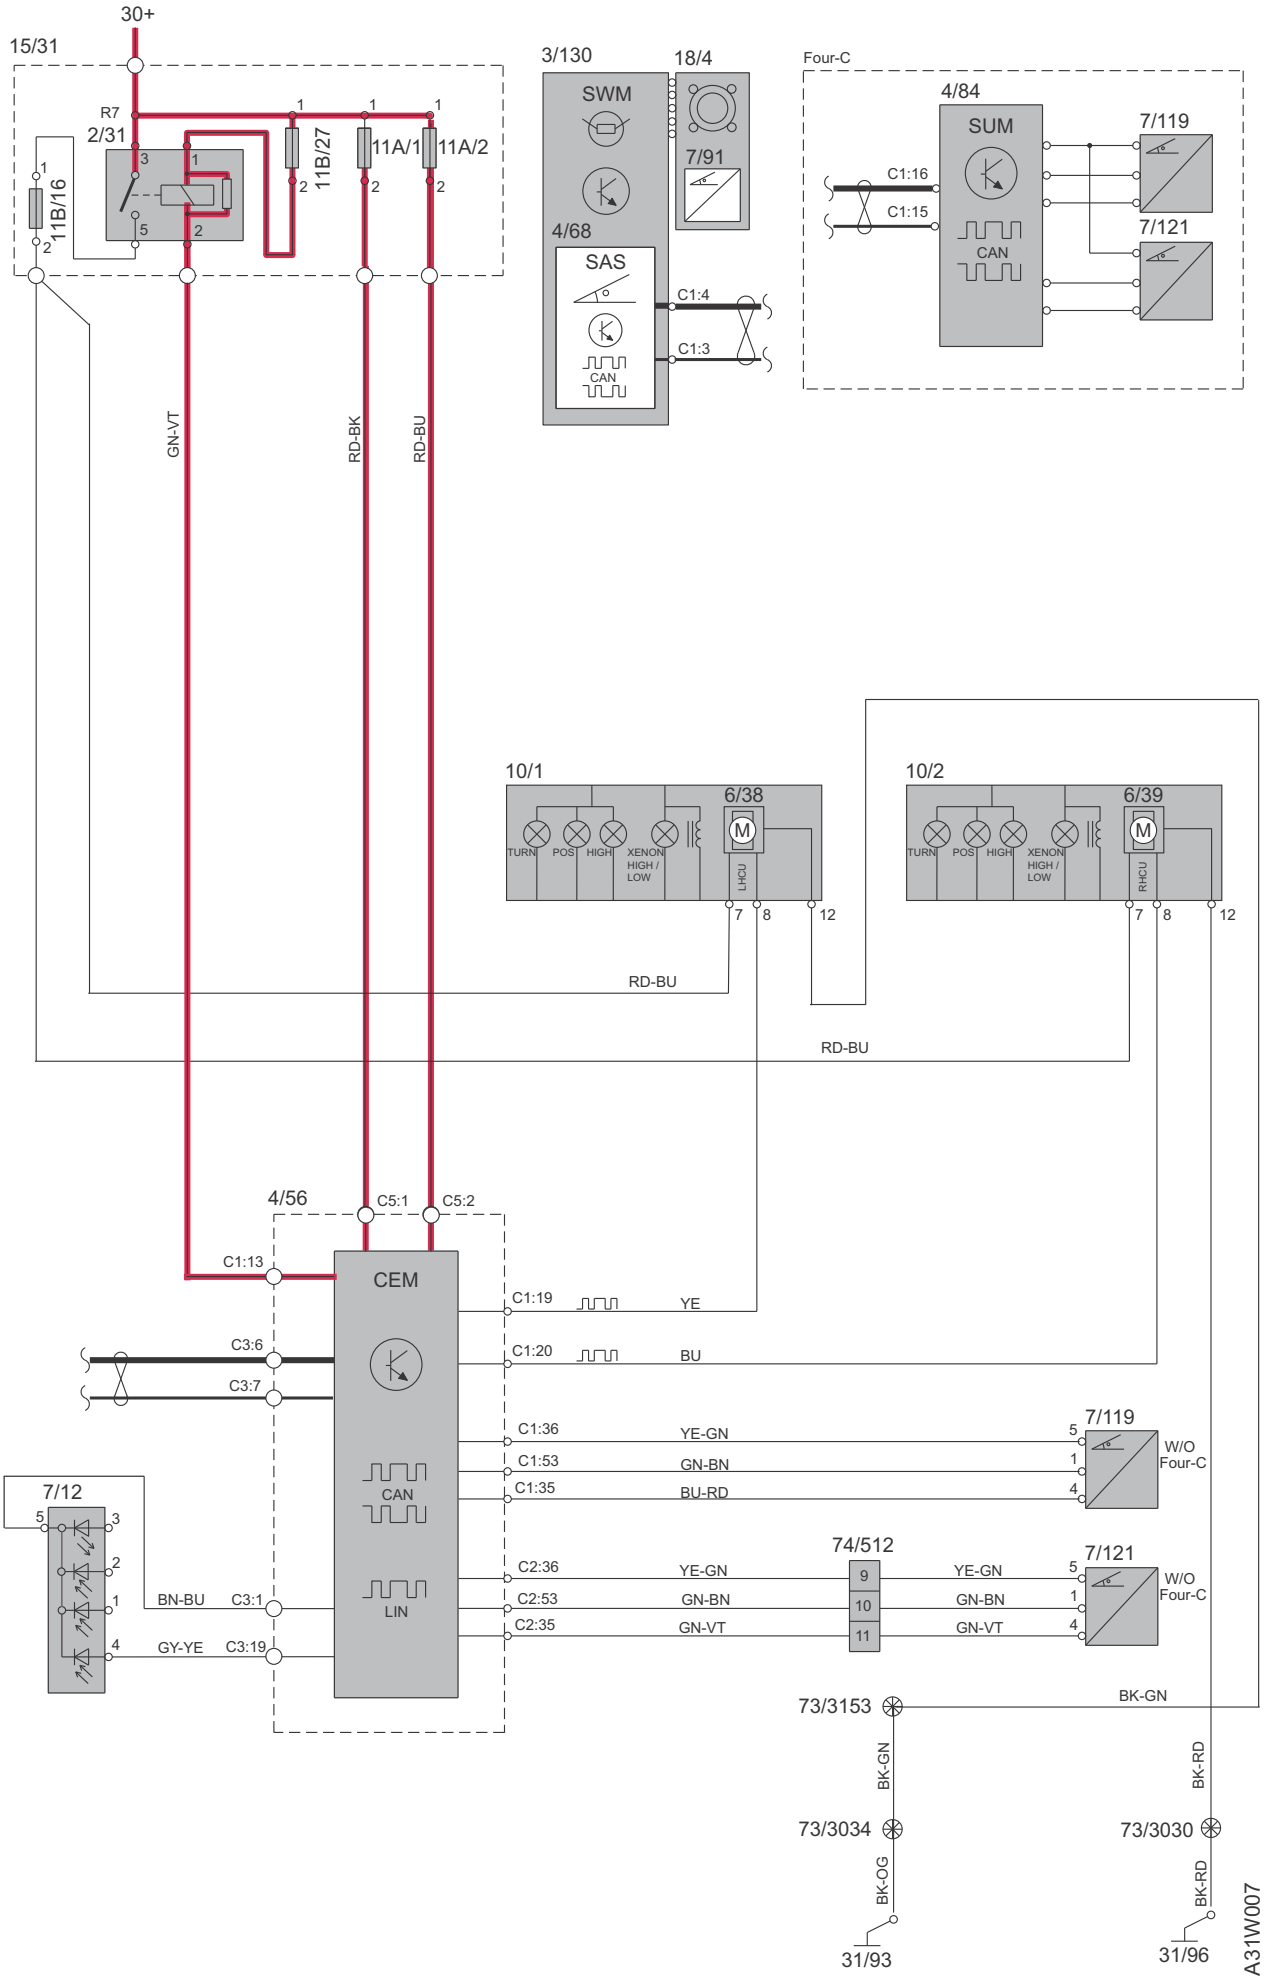
30+
15/31
R7
2/31
11B/16
11B/27
11A/1
11A/2
3/130
SWM
18/4
7/91
4/68
SAS
CAN
C1:4
C1:3
Four-C
4/84
SUM
C1:16
C1:15
7/119
7/121
GN-VT
RD-BK
RD-BU
10/1
6/38
TURN
POS
HIGH
XENON HIGH / LOW
LHCU
10/2
6/39
RHCU
RD-BU
4/56
C5:1
C5:2
C1:13
CEM
C1:19
YE
C3:6
C3:7
C1:20
BU
C1:36
YE-GN
C1:53
GN-BN
C1:35
BU-RD
W/O Four-C
7/12
BN-BU
C3:1
GY-YE
C3:19
CAN
LIN
74/512
C2:36
C2:53
C2:35
GN-VT
73/3153
BK-GN
BK-RD
73/3034
BK-OG
73/3030
31/93
31/96
A31W007

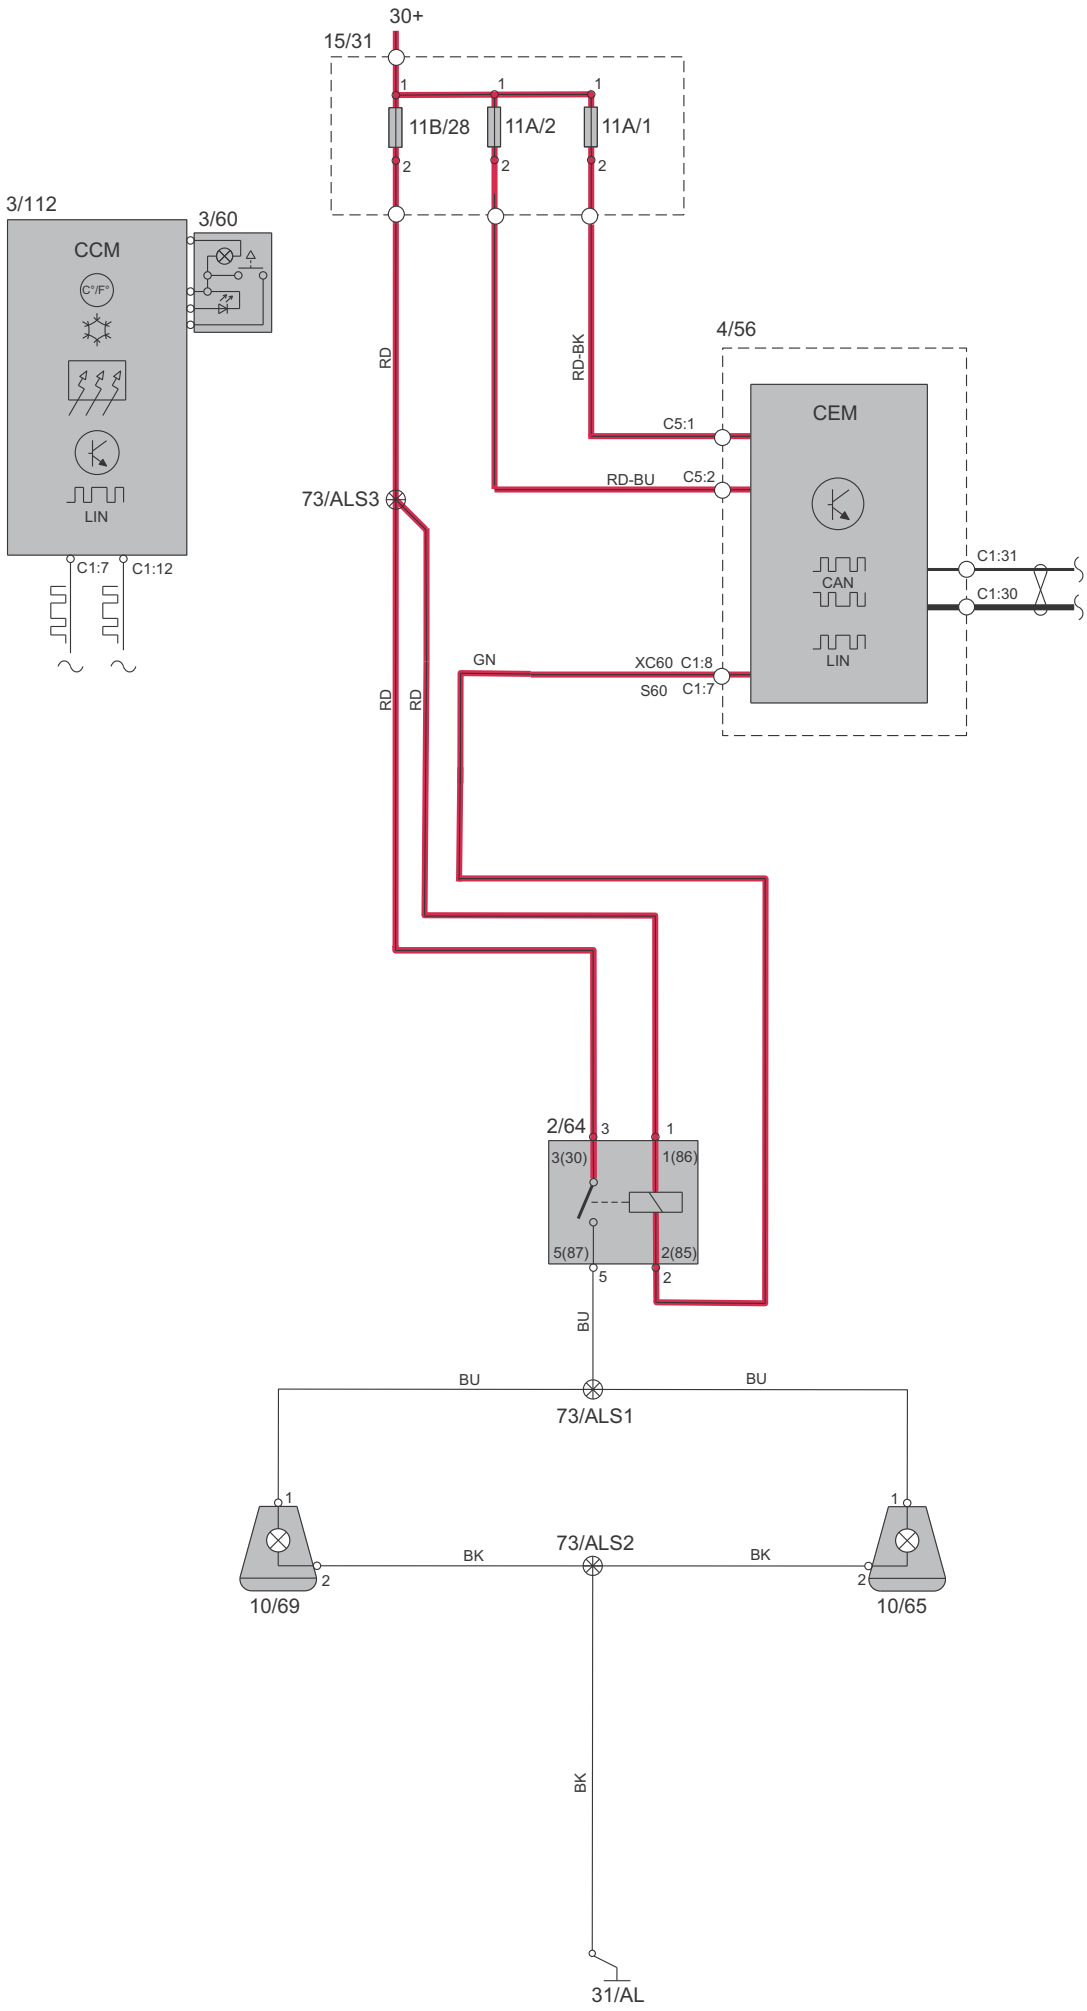
30+
15/31
11B/28
11A/2
11A/1
3/112
CCM
3/60
LIN
C1:7
C1:12
RD
RD-BK
4/56
CEM
C5:1
C5:2
RD-BU
73/ALS3
C1:31
C1:30
CAN
LIN
GN
XC60 C1:8
S60 C1:7
2/64
3(30)
1(86)
5(87)
2(85)
BU
73/ALS1
73/ALS2
BK
10/69
10/65
31/AL
A32W042

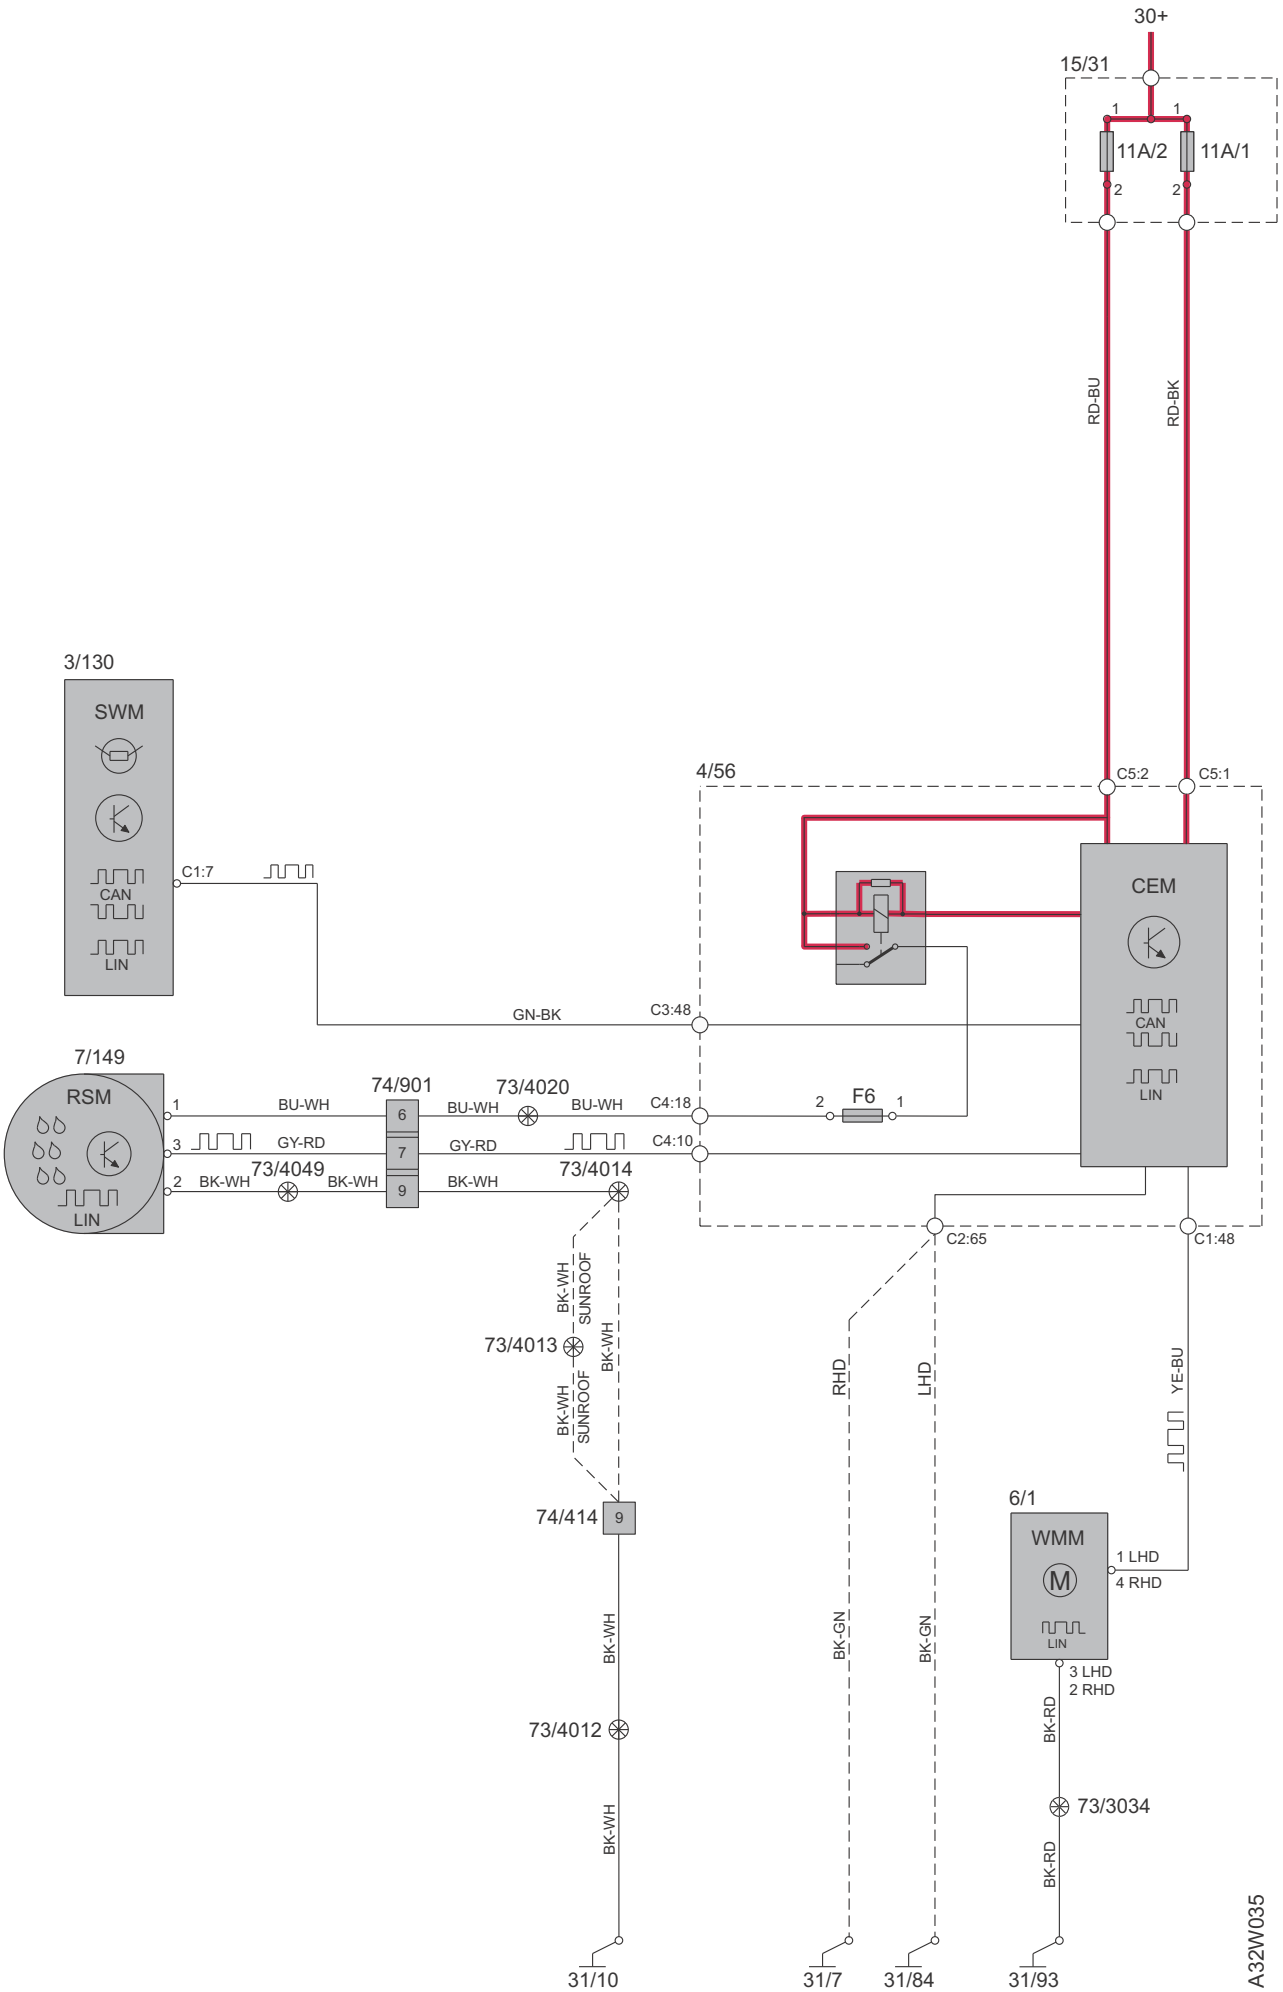
30+
15/31
11A/2
11A/1
RD-BU
RD-BK
3/130
SWM
CAN
LIN
C1:7
GN-BK
4/56
C5:2
C5:1
CEM
C3:48
7/149
RSM
74/901
73/4020
BU-WH
GY-RD
BK-WH
C4:18
C4:10
F6
73/4049
73/4014
C2:65
C1:48
BK-WH SUNROOF
73/4013
74/414
RHD
LHD
YE-BU
6/1
WMM
1 LHD
4 RHD
3 LHD
2 RHD
BK-GN
BK-RD
73/4012
73/3034
31/10
31/7
31/84
31/93
A32W035

Group 36 Additional electrical equipment
Direction indicator and hazard warning flashers LHD S60

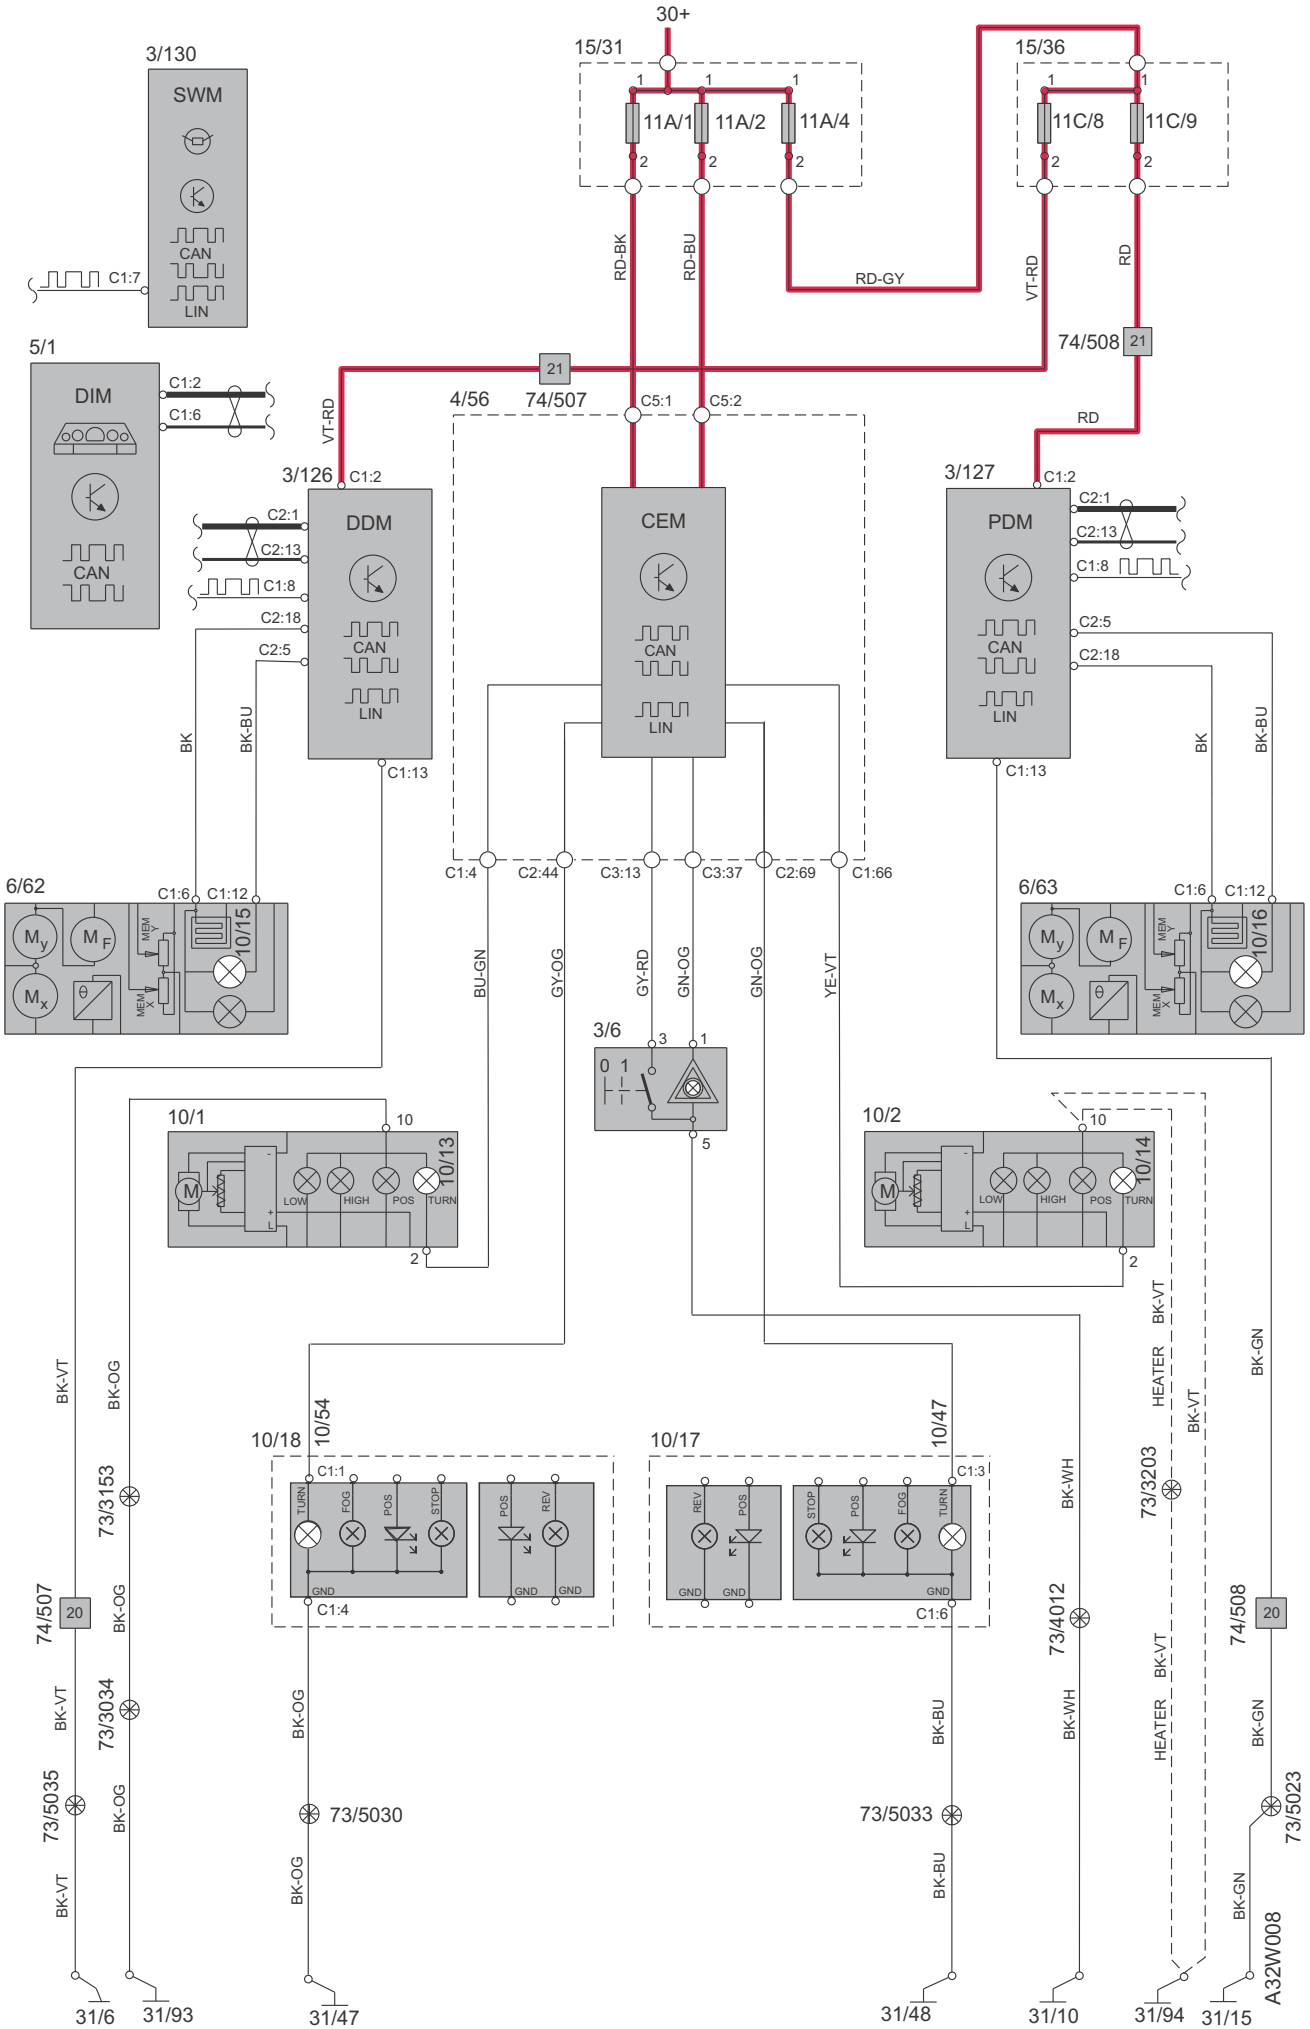

Group 36 Additional electrical equipment
Direction indicator and hazard warning flashers LHD V60

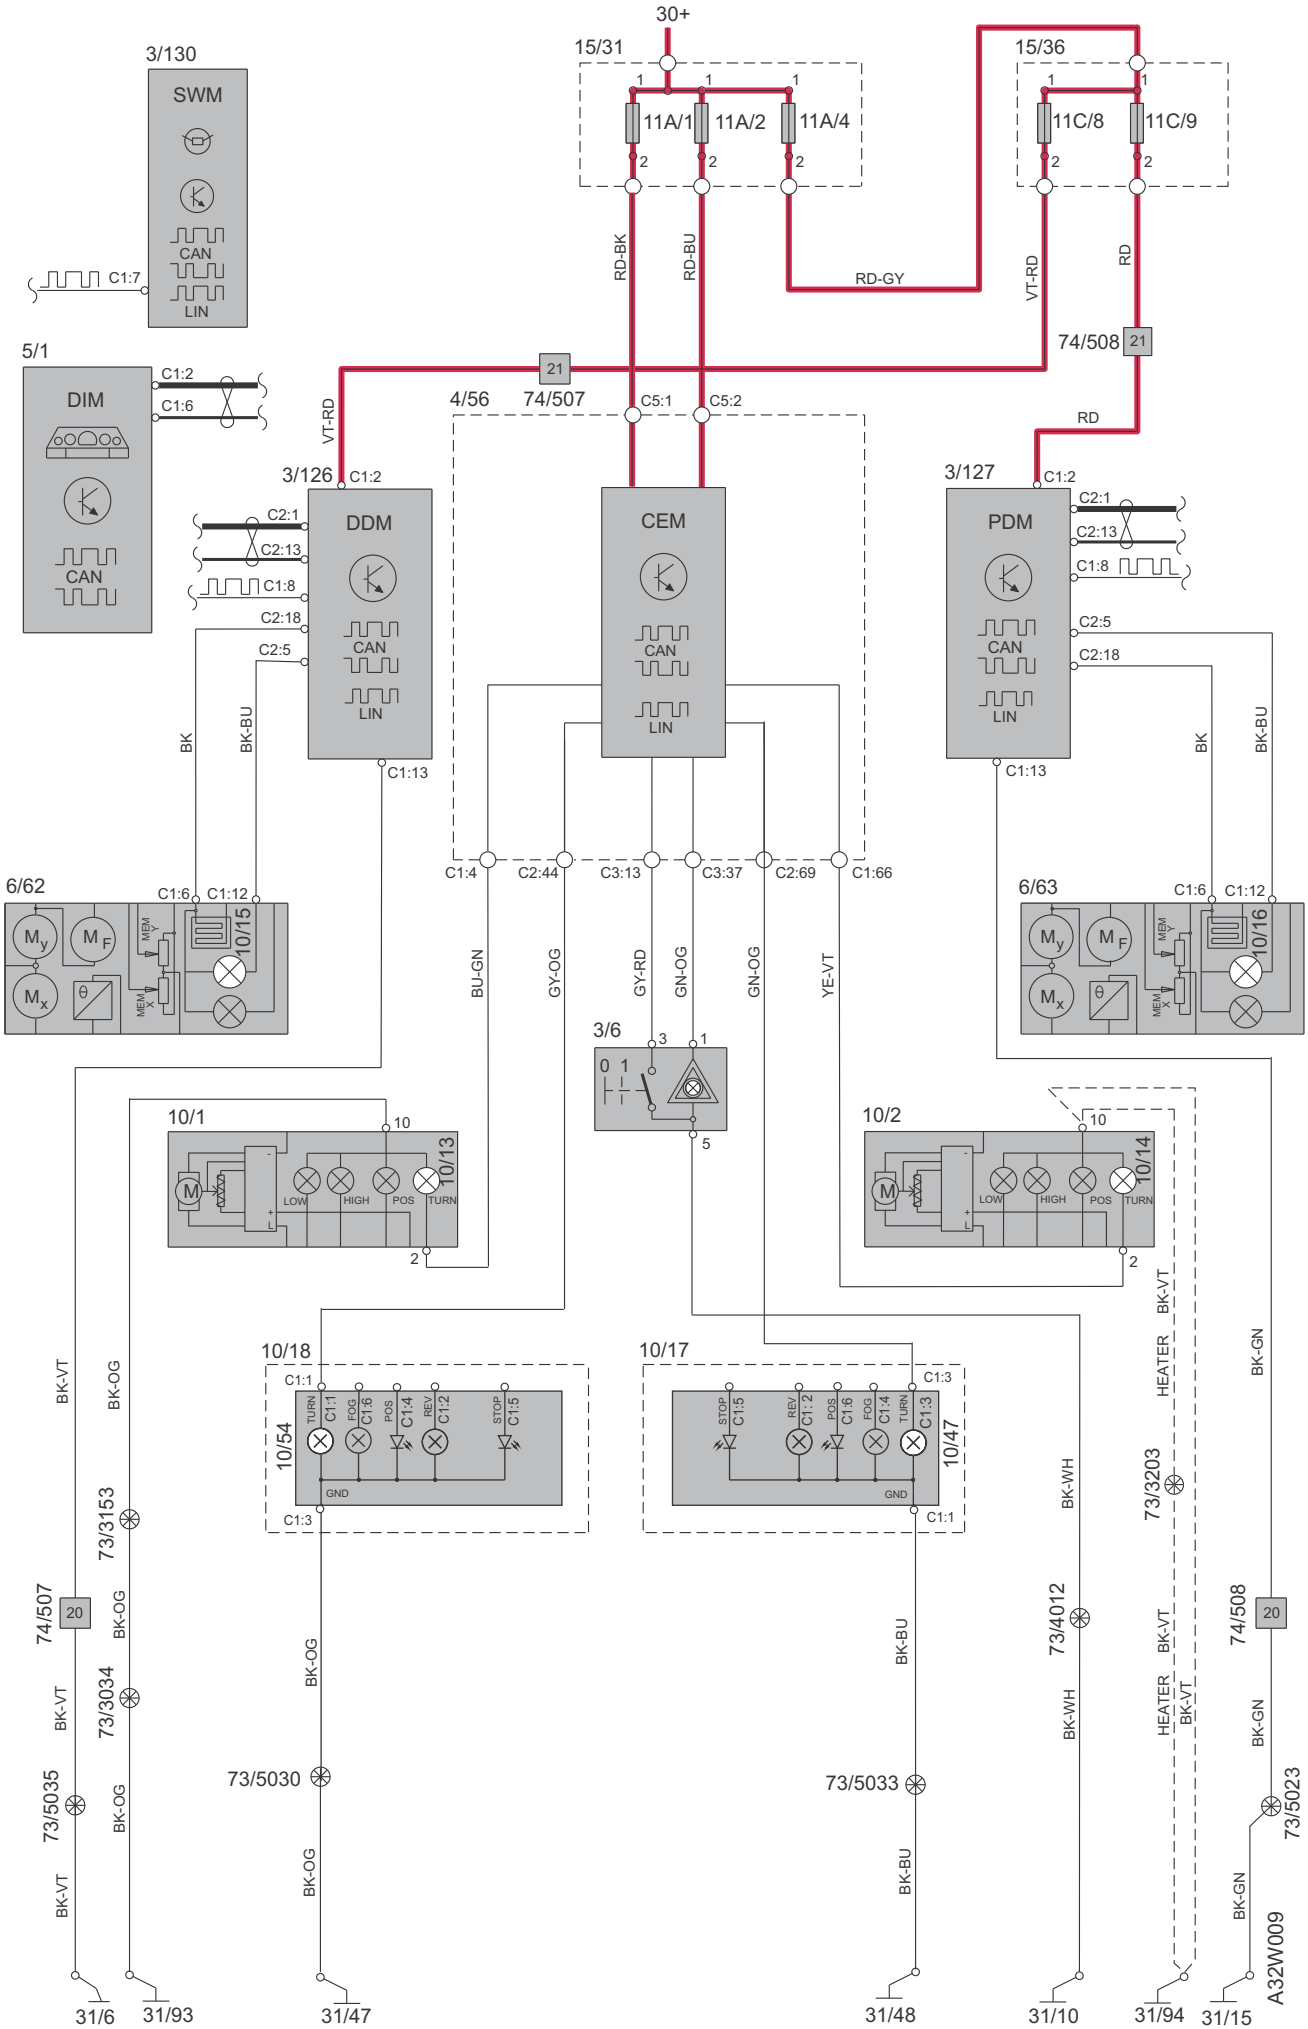

Group 36 Additional electrical equipment
Direction indicator and hazard warning flashers RHD S60

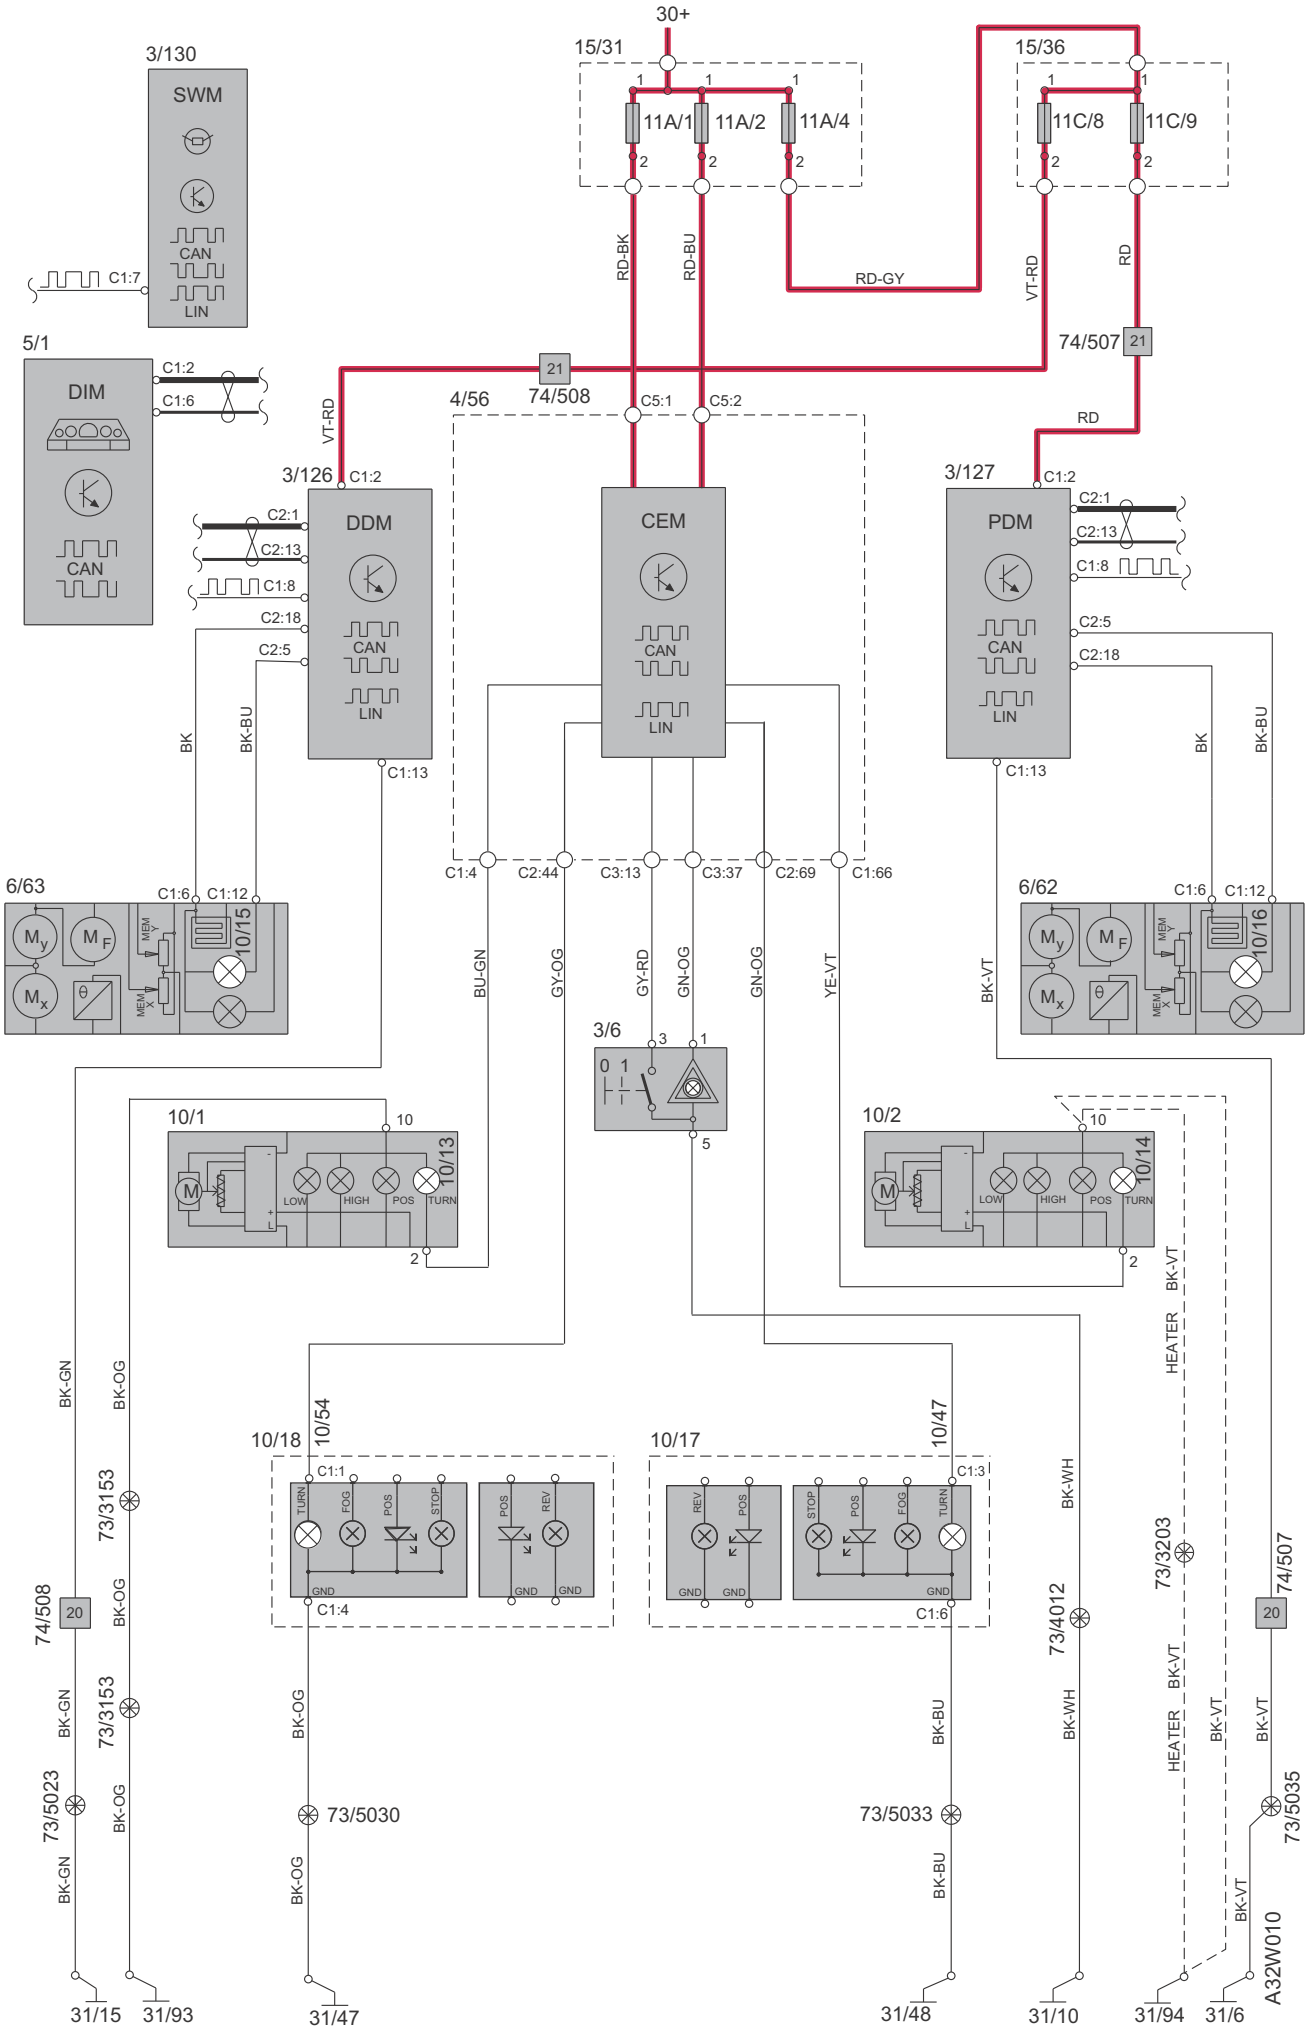

Group 36 Additional electrical equipment
Direction indicator and hazard warning flashers RHD V60

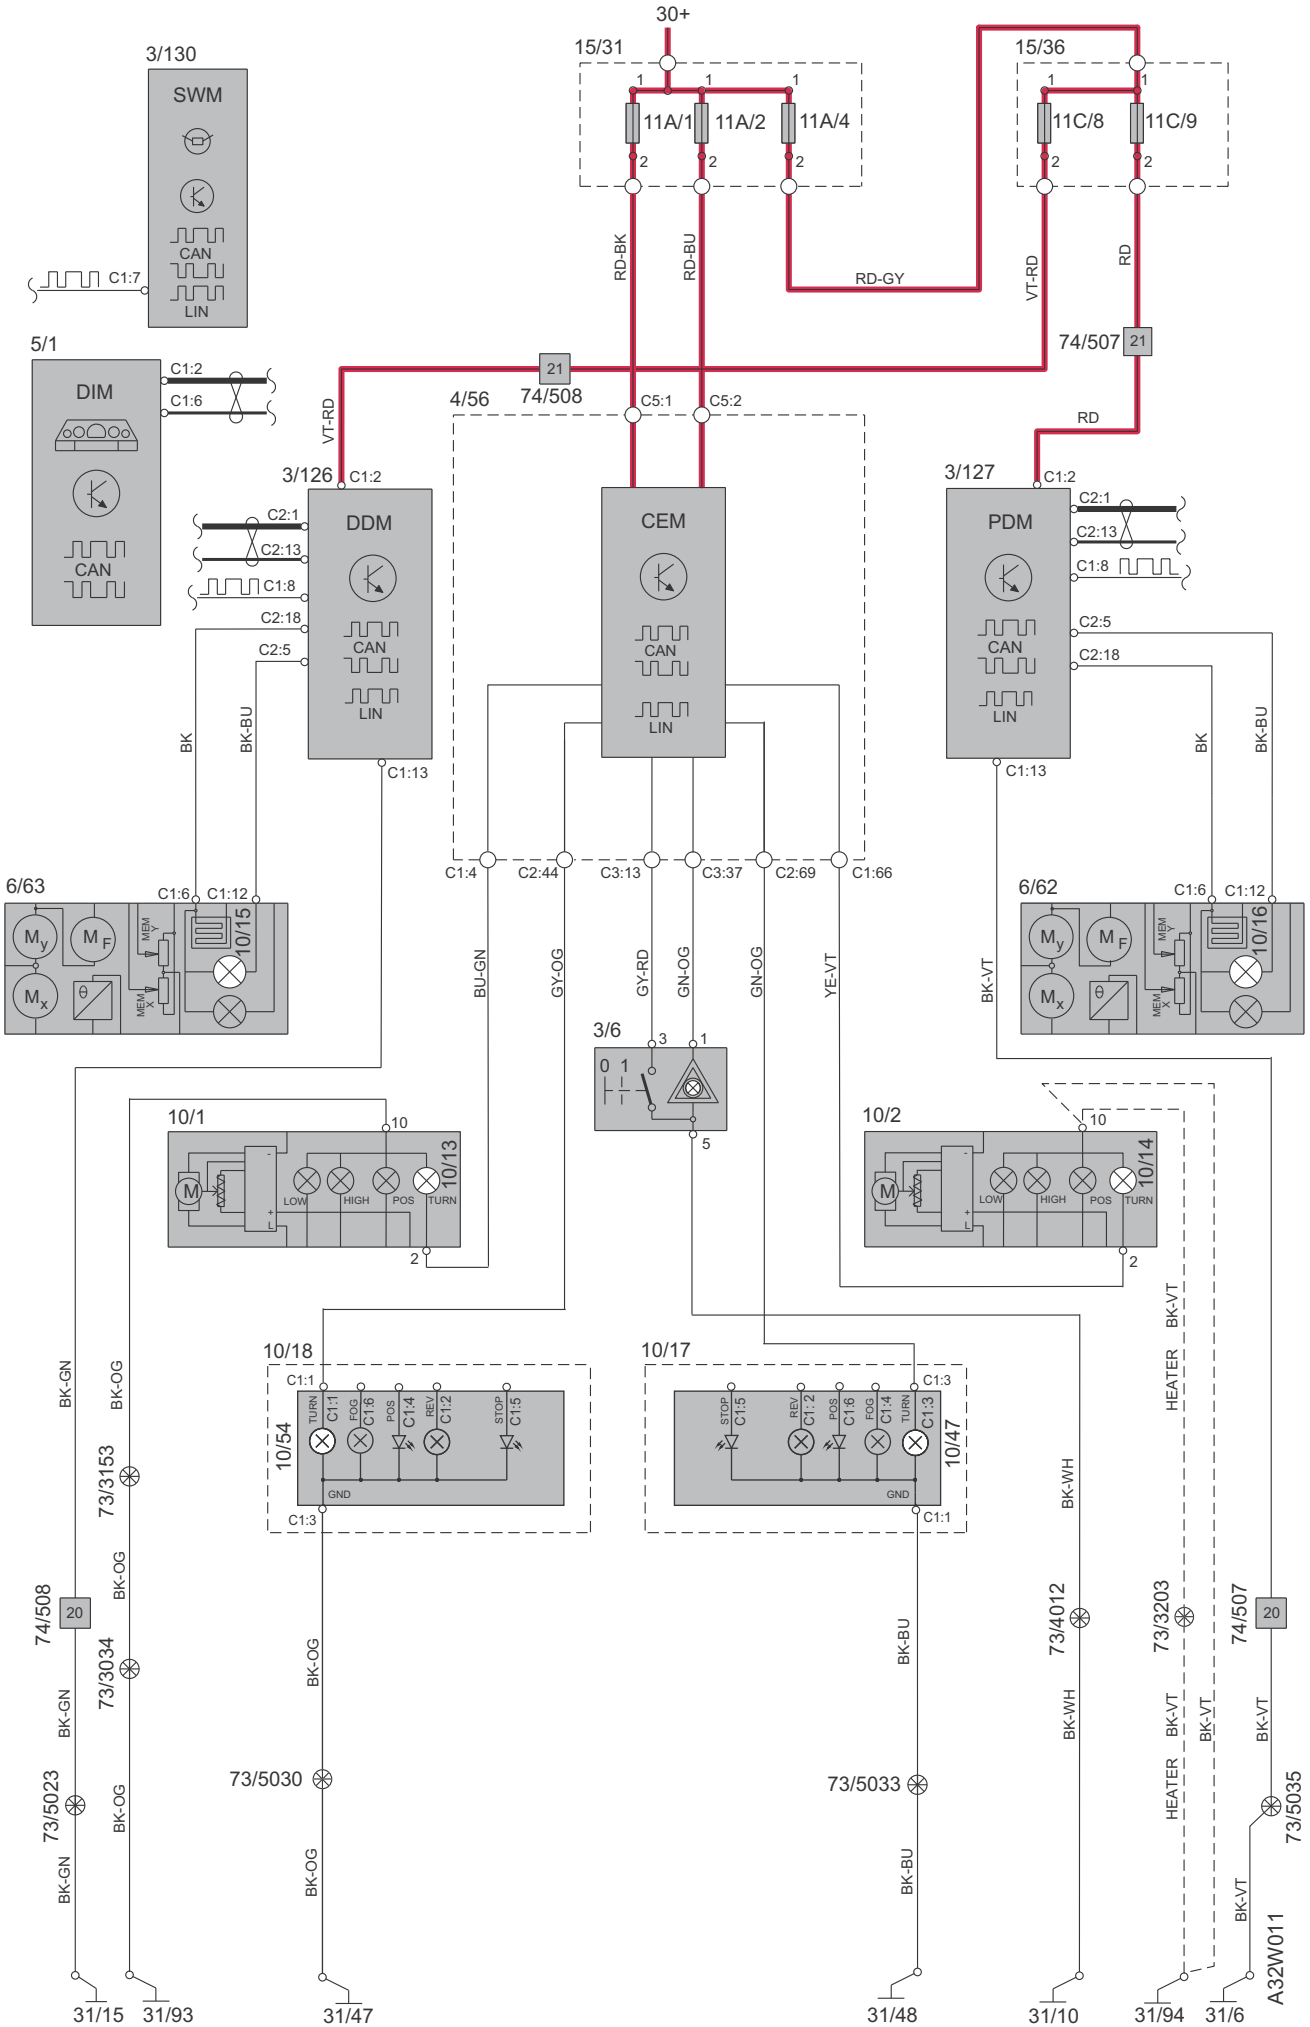

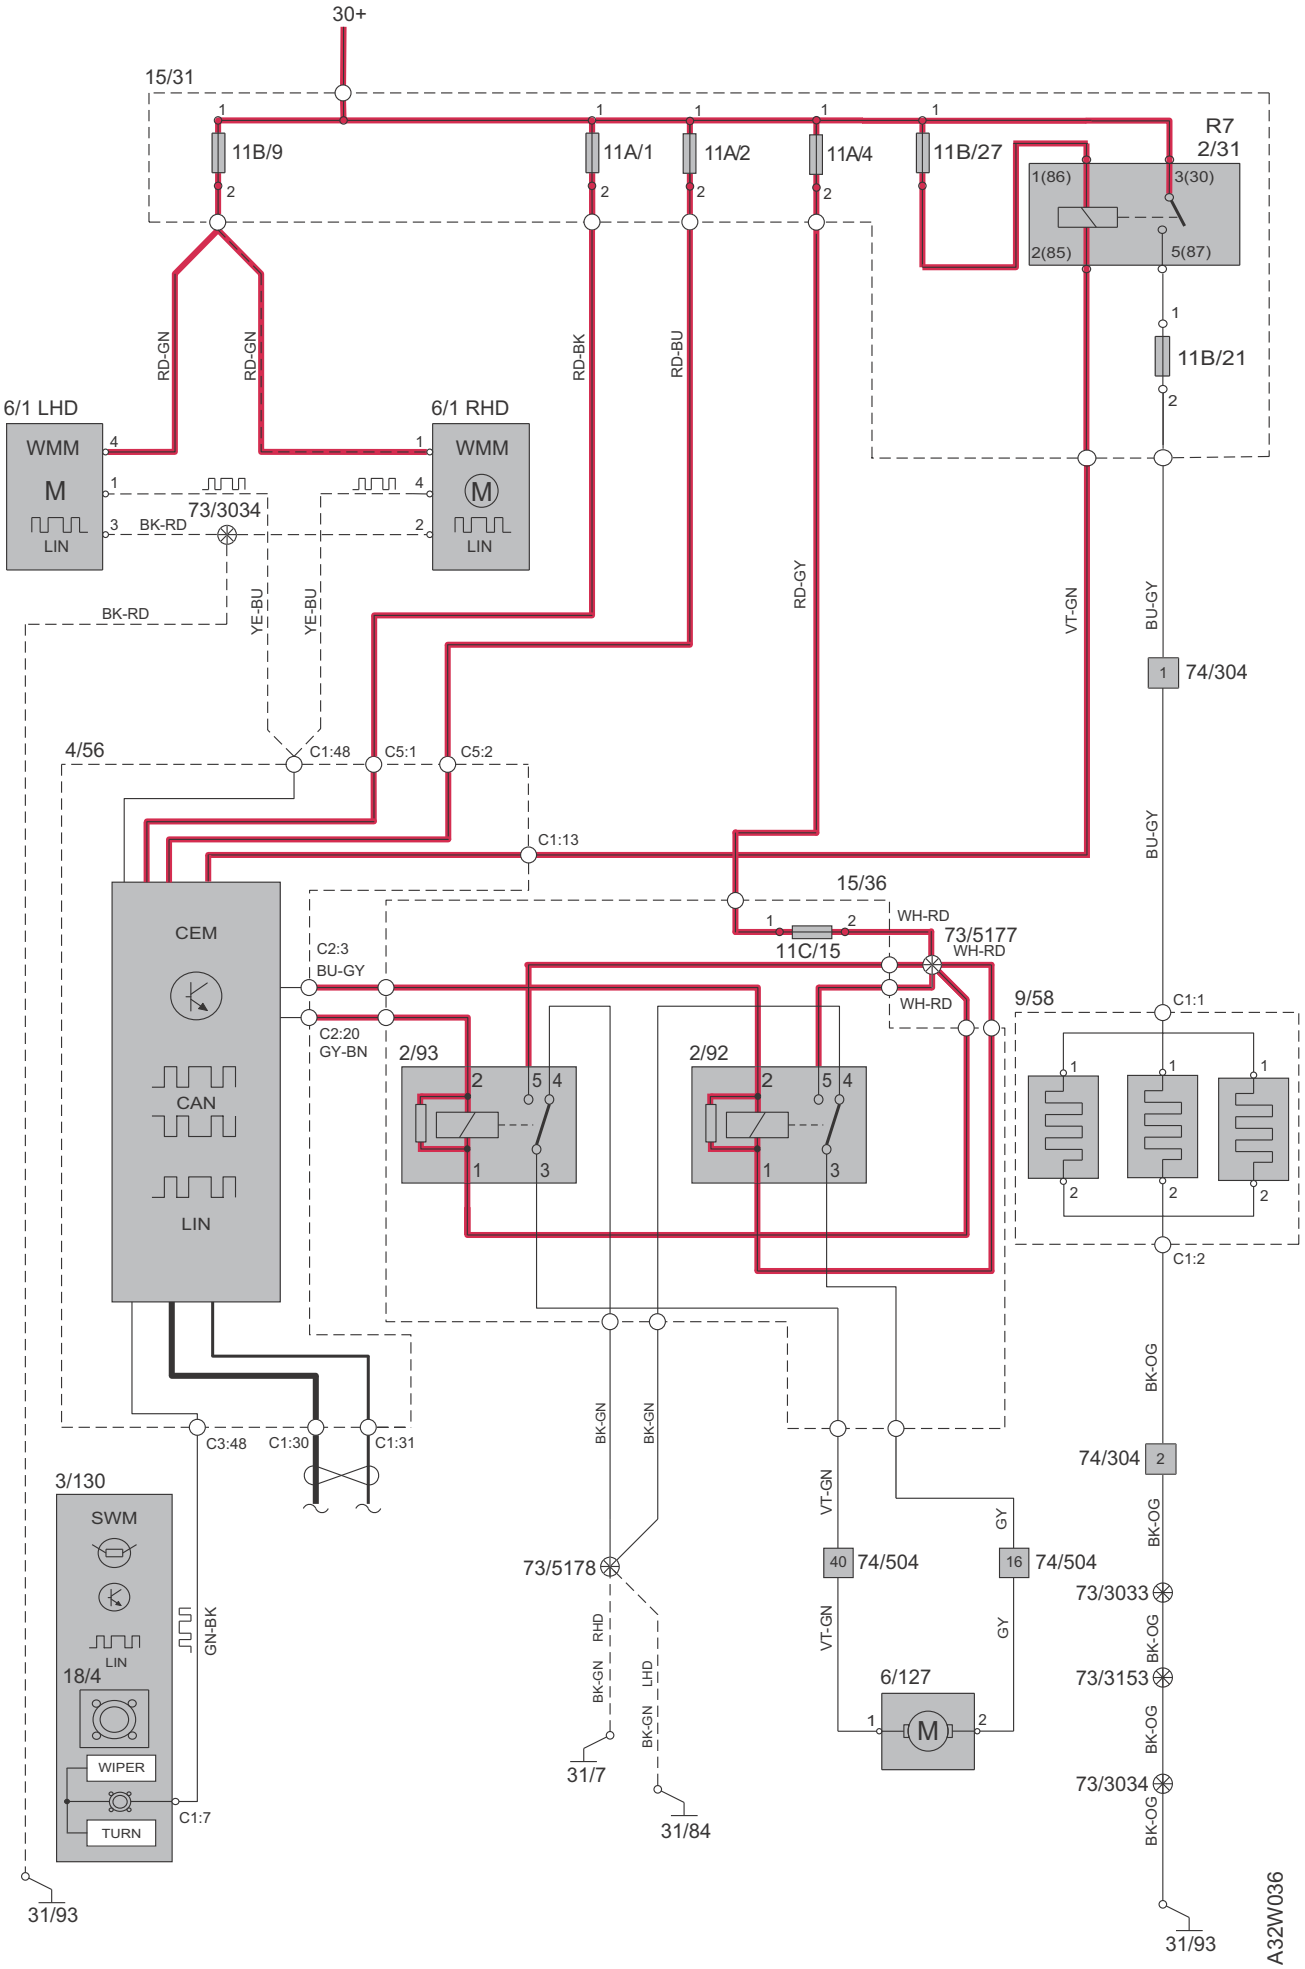
30+
15/31
11B/9
11A/1
11A/2
11A/4
11B/27
R7
2/31
1(86)
3(30)
2(85)
5(87)
11B/21
RD-GN
RD-GN
RD-BK
RD-BU
RD-GY
VT-GN
BU-GY
6/1 LHD
WMM
M
LIN
6/1 RHD
WMM
M
LIN
73/3034
BK-RD
BK-RD
YE-BU
YE-BU
74/304
4/56
C1:48
C5:1
C5:2
C1:13
15/36
WH-RD
11C/15
73/5177
WH-RD
WH-RD
9/58
C1:1
C1:2
CEM
CAN
LIN
C2:3
BU-GY
C2:20
GY-BN
2/93
2/92
C3:48
C1:30
C1:31
BK-GN
BK-GN
BK-OG
3/130
SWM
LIN
18/4
WIPER
TURN
C1:7
GN-BK
73/5178
RHD
LHD
BK-GN
BK-GN
31/7
31/84
VT-GN
GY
40
74/504
16
74/504
VT-GN
GY
6/127
M
74/304
2
BK-OG
73/3033
BK-OG
73/3153
BK-OG
73/3034
BK-OG
31/93
31/93
A32W036

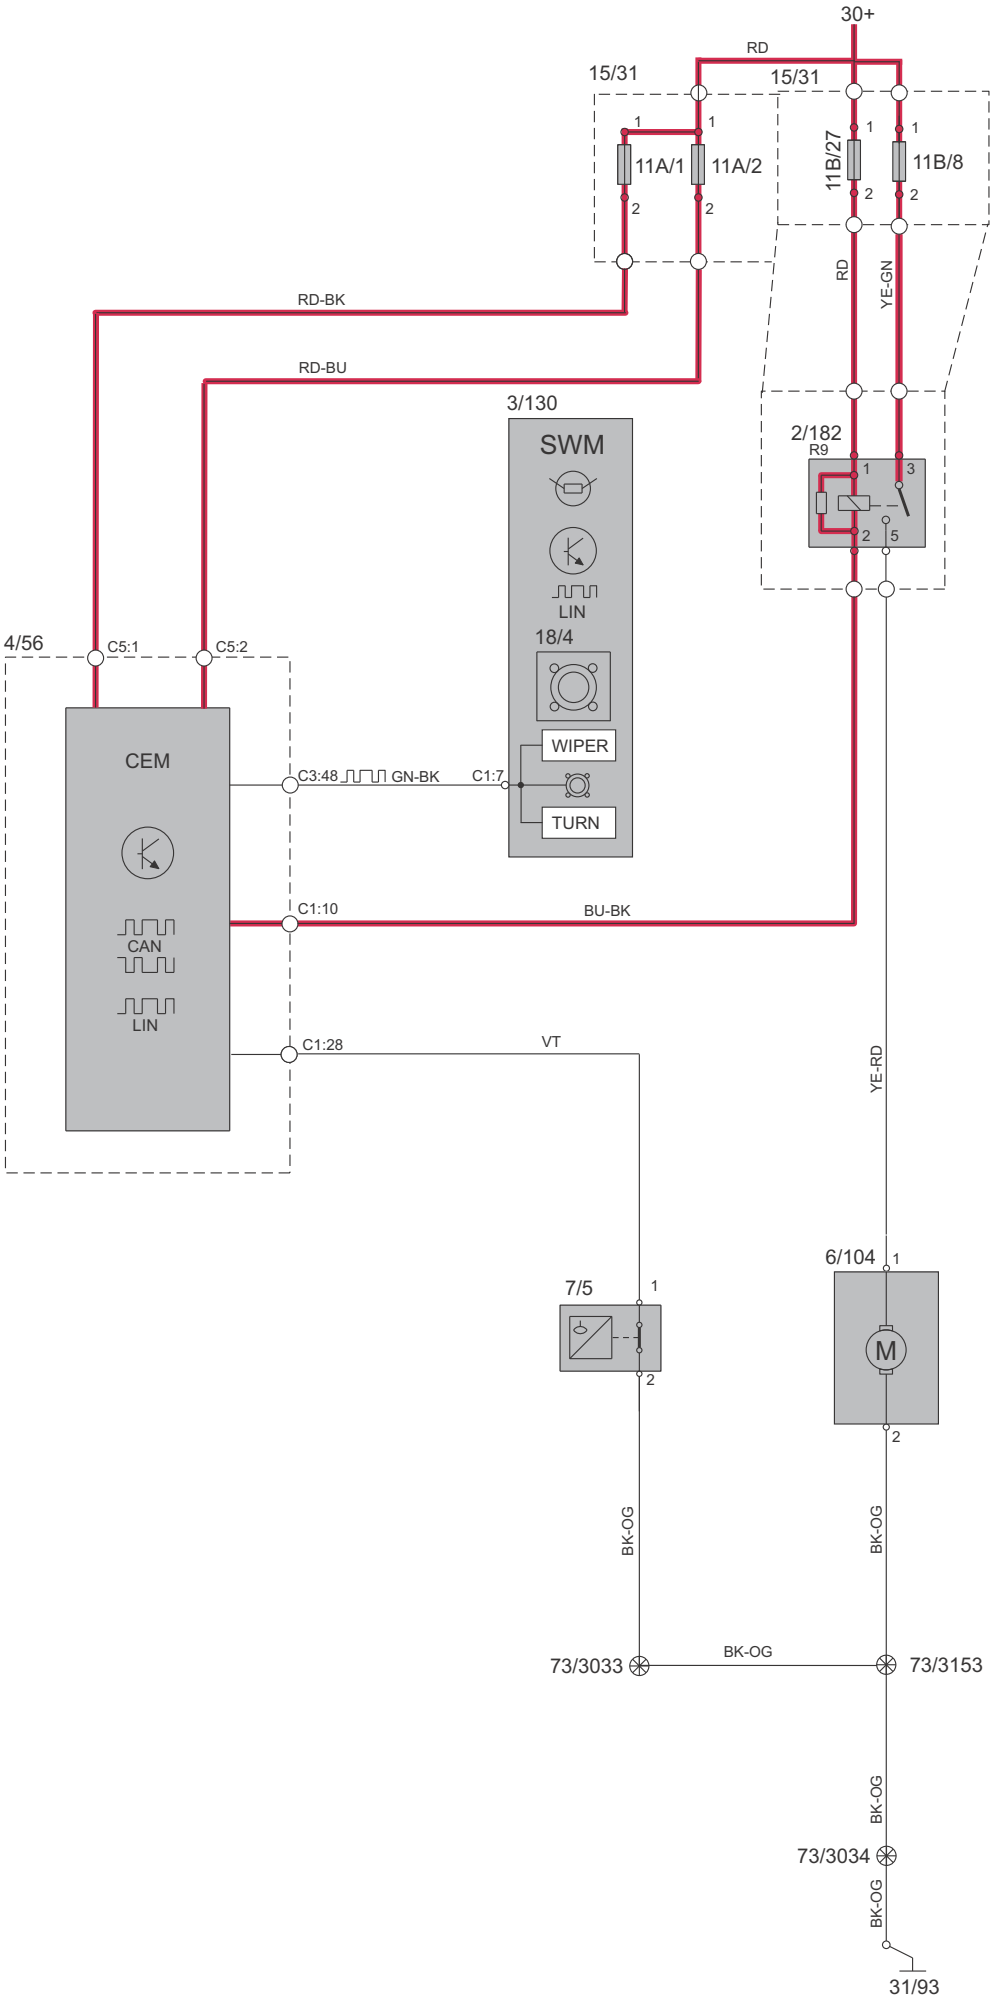
30+
RD
15/31
15/31
11A/1
11A/2
11B/27
11B/8
RD
YE-GN
RD-BK
RD-BU
3/130
SWM
LIN
18/4
WIPER
TURN
2/182
R9
4/56
C5:1
C5:2
CEM
CAN
LIN
C3:48
GN-BK
C1:7
C1:10
BU-BK
C1:28
VT
YE-RD
7/5
6/104
M
BK-OG
BK-OG
73/3033
BK-OG
73/3153
BK-OG
73/3034
BK-OG
31/93
A31W014

Group 36 Additional electrical equipment
Wiper rear window V60

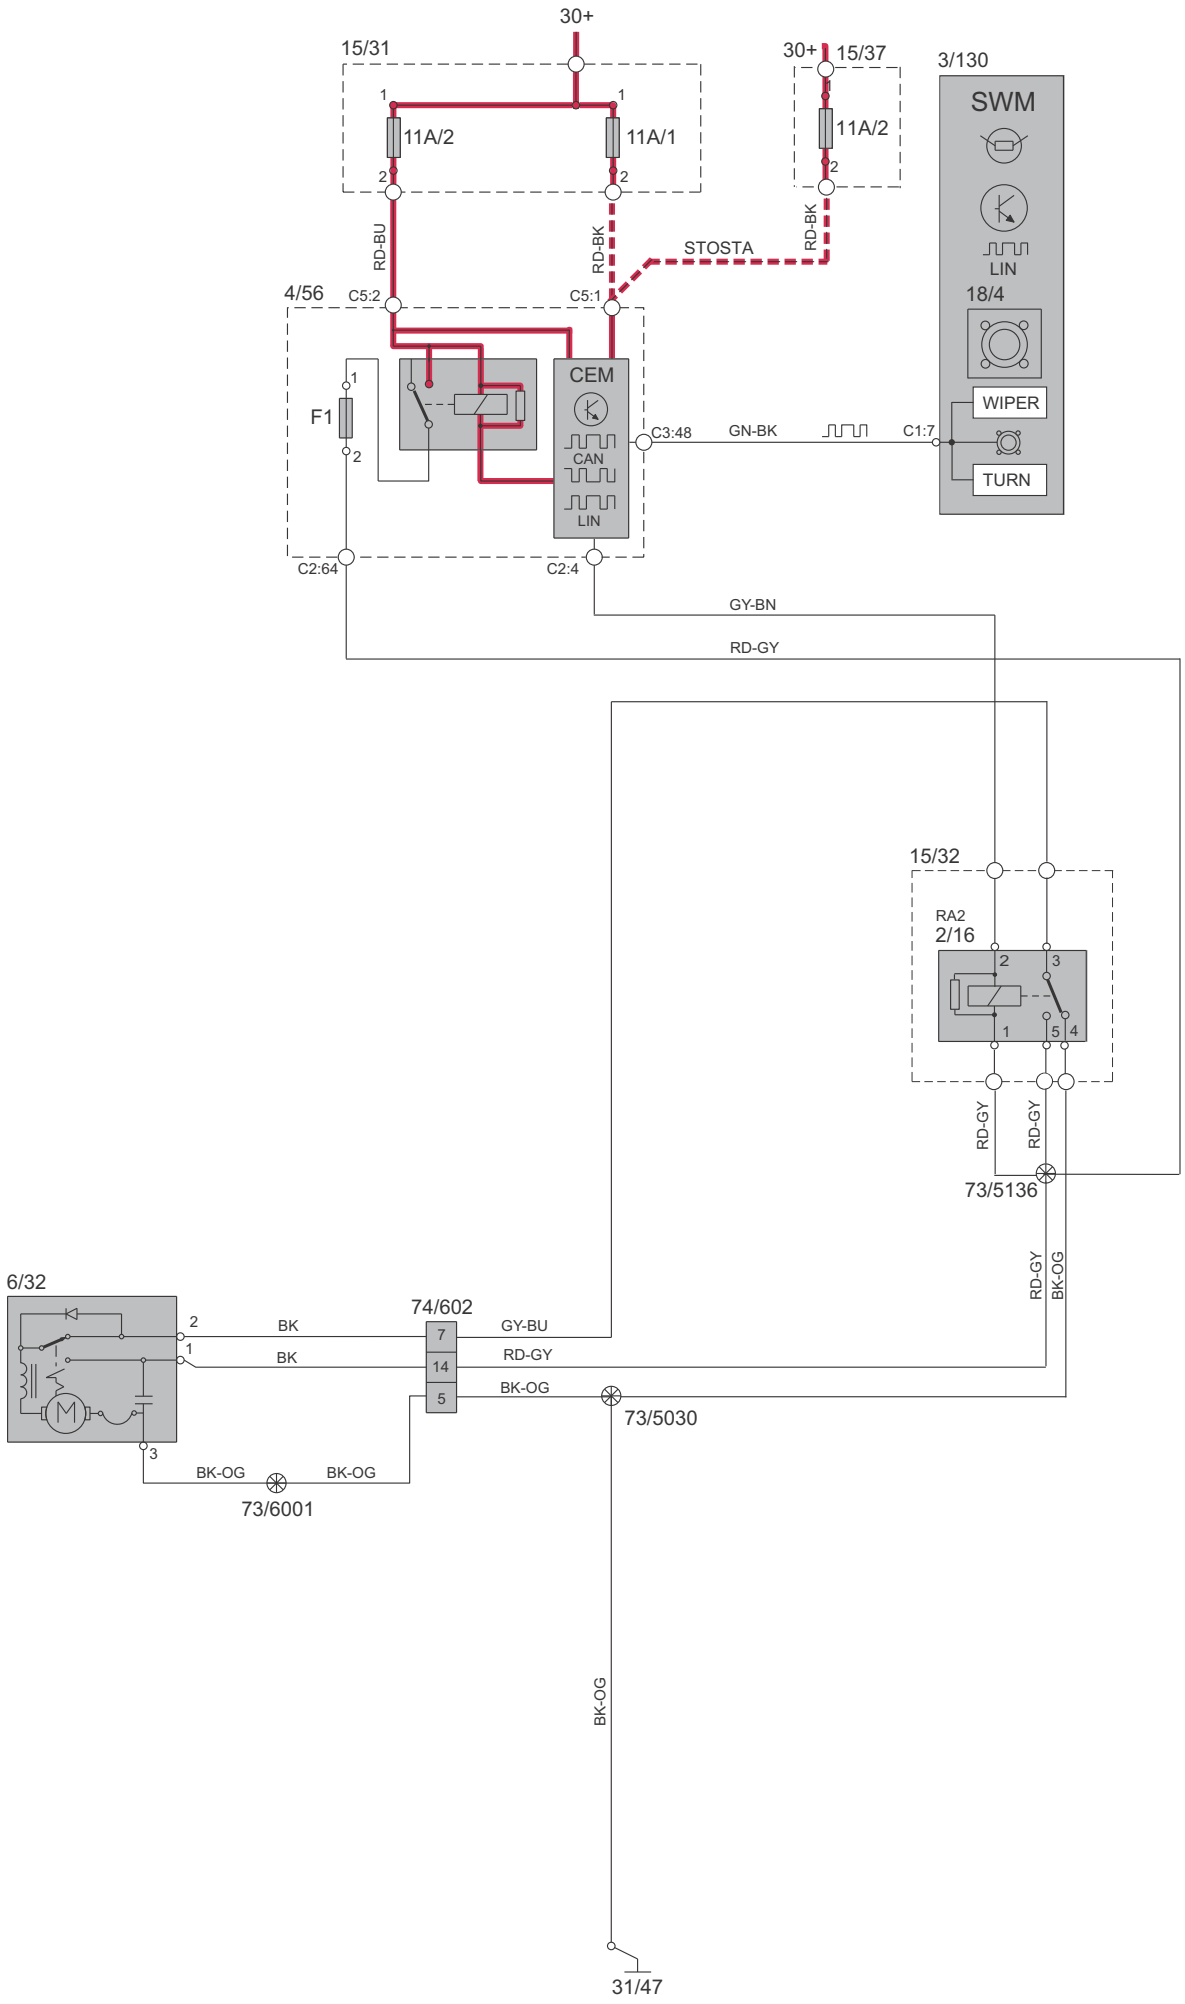

Group 36 Additional electrical equipment
Horn

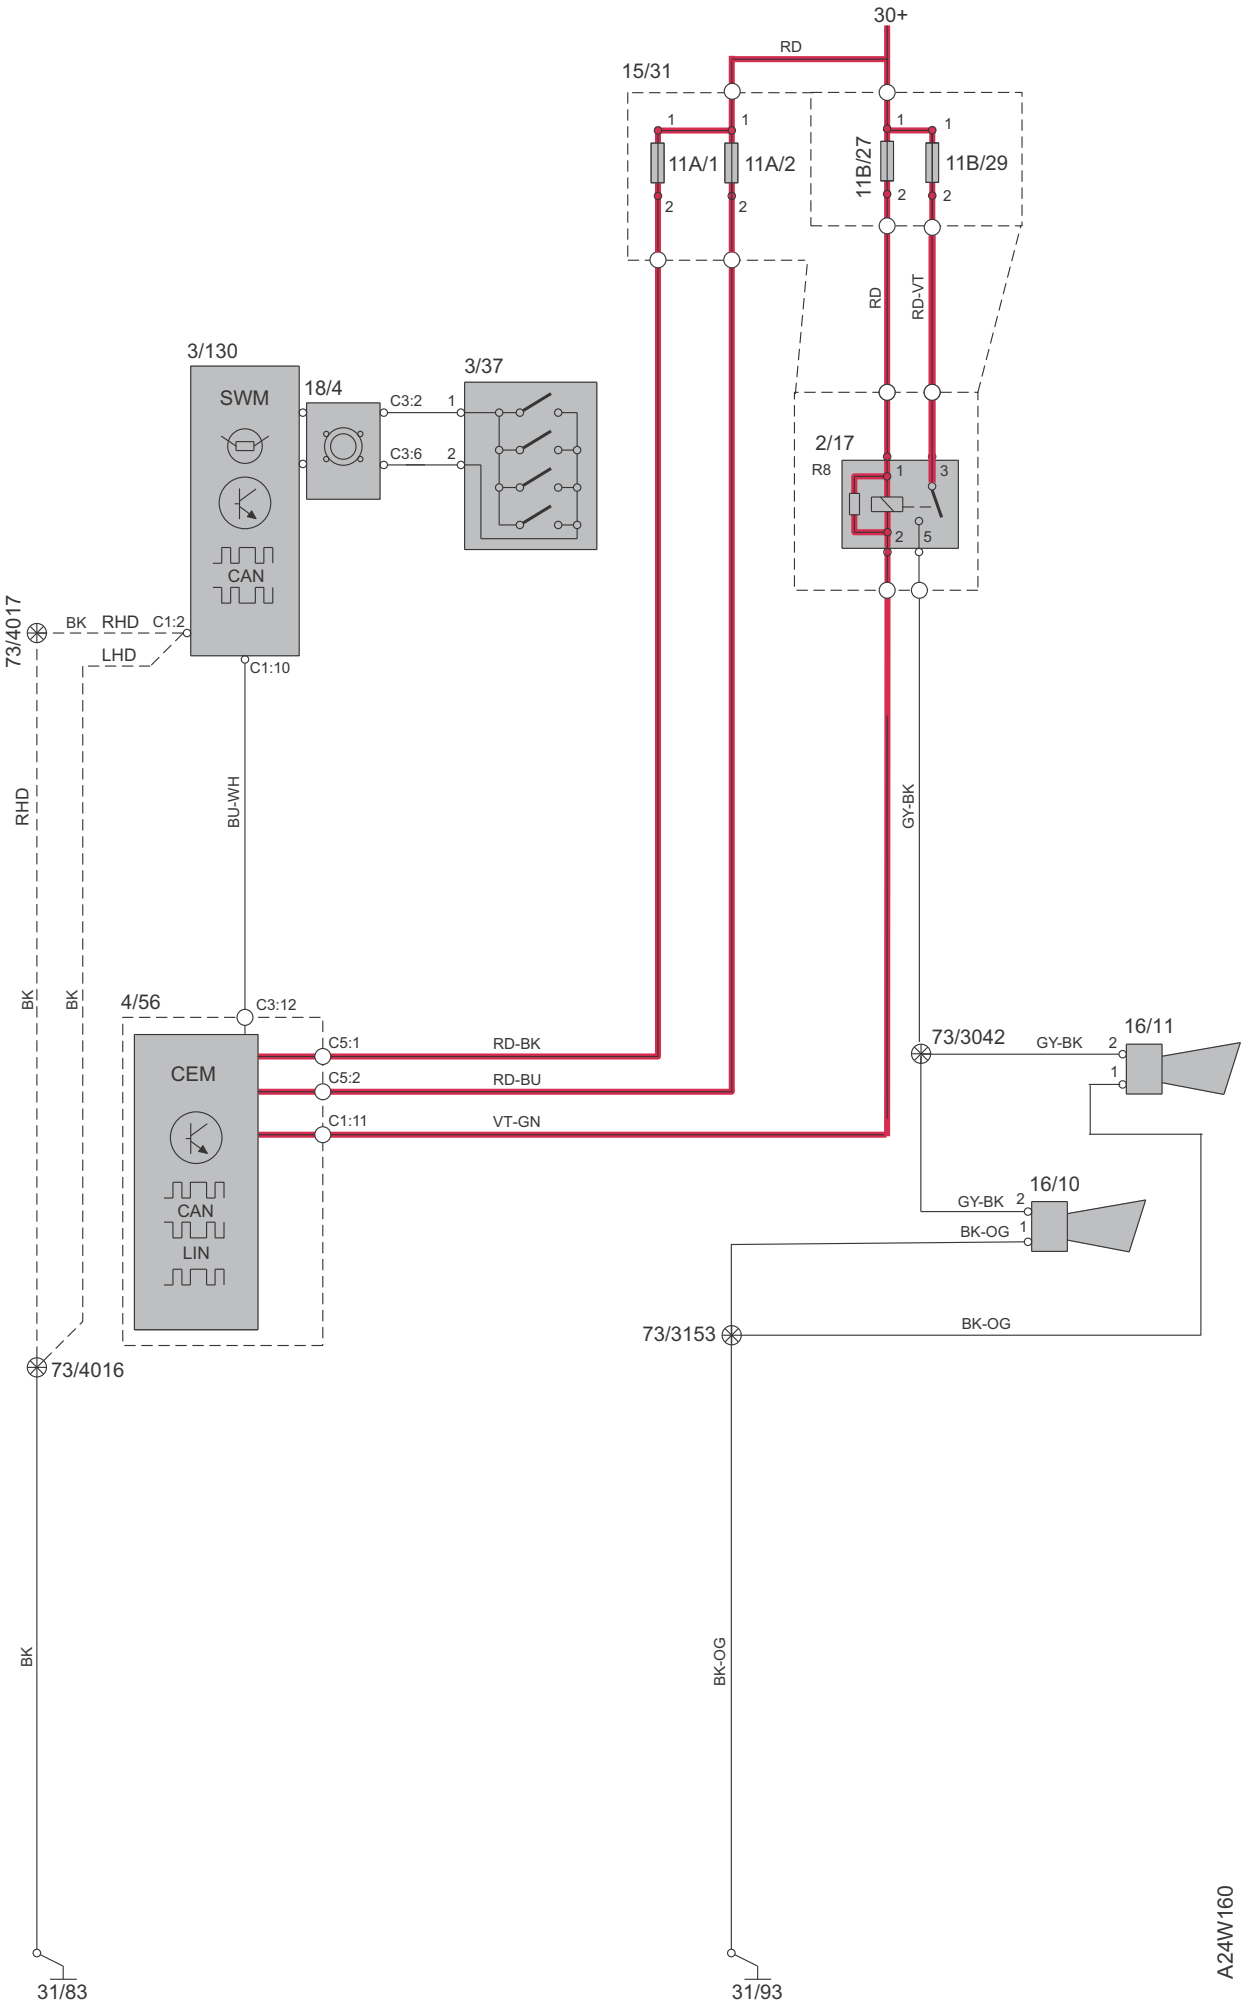

Group 36 Additional electrical equipment
Keyless vehicle 1:2

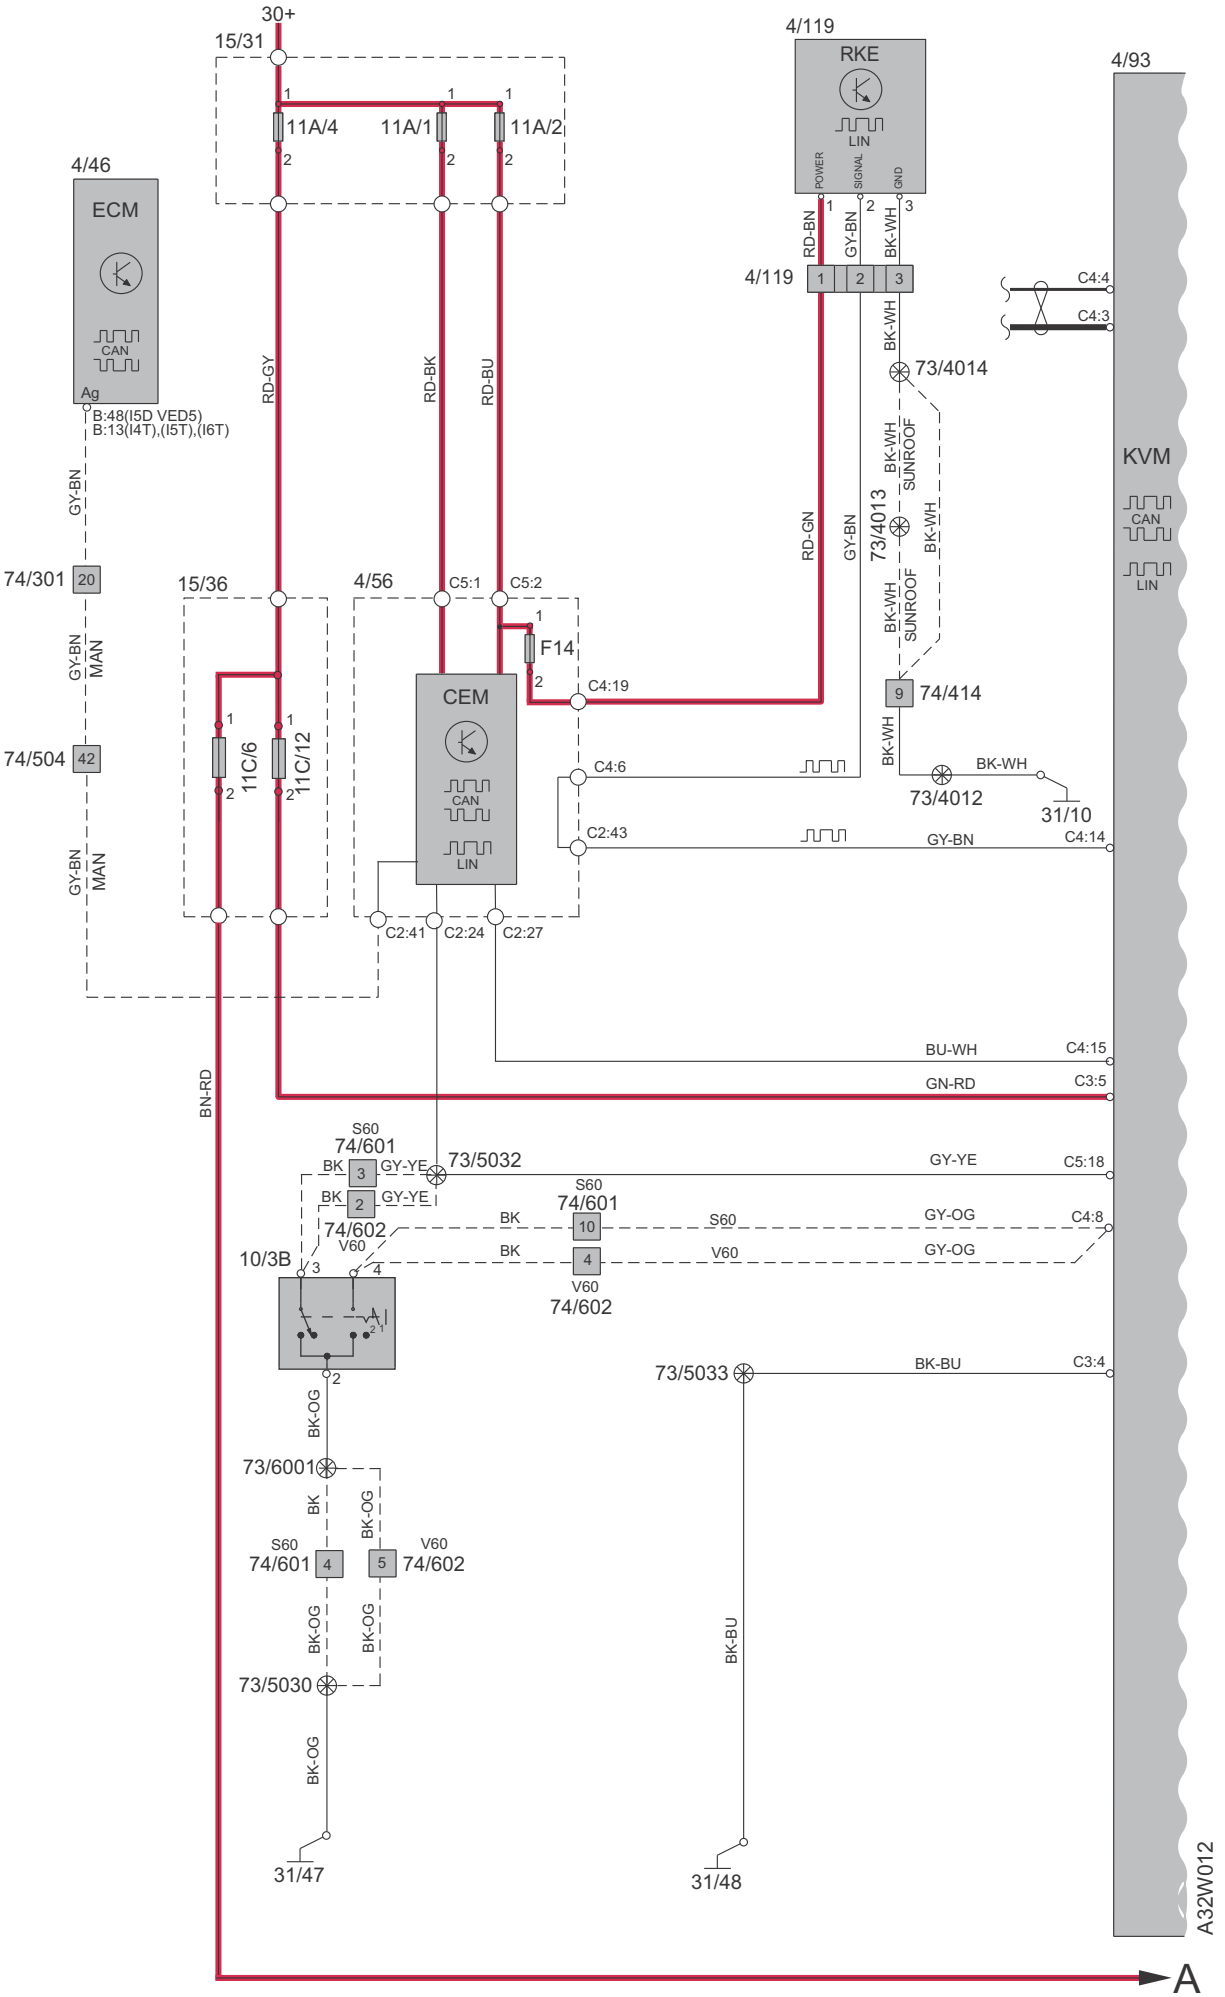

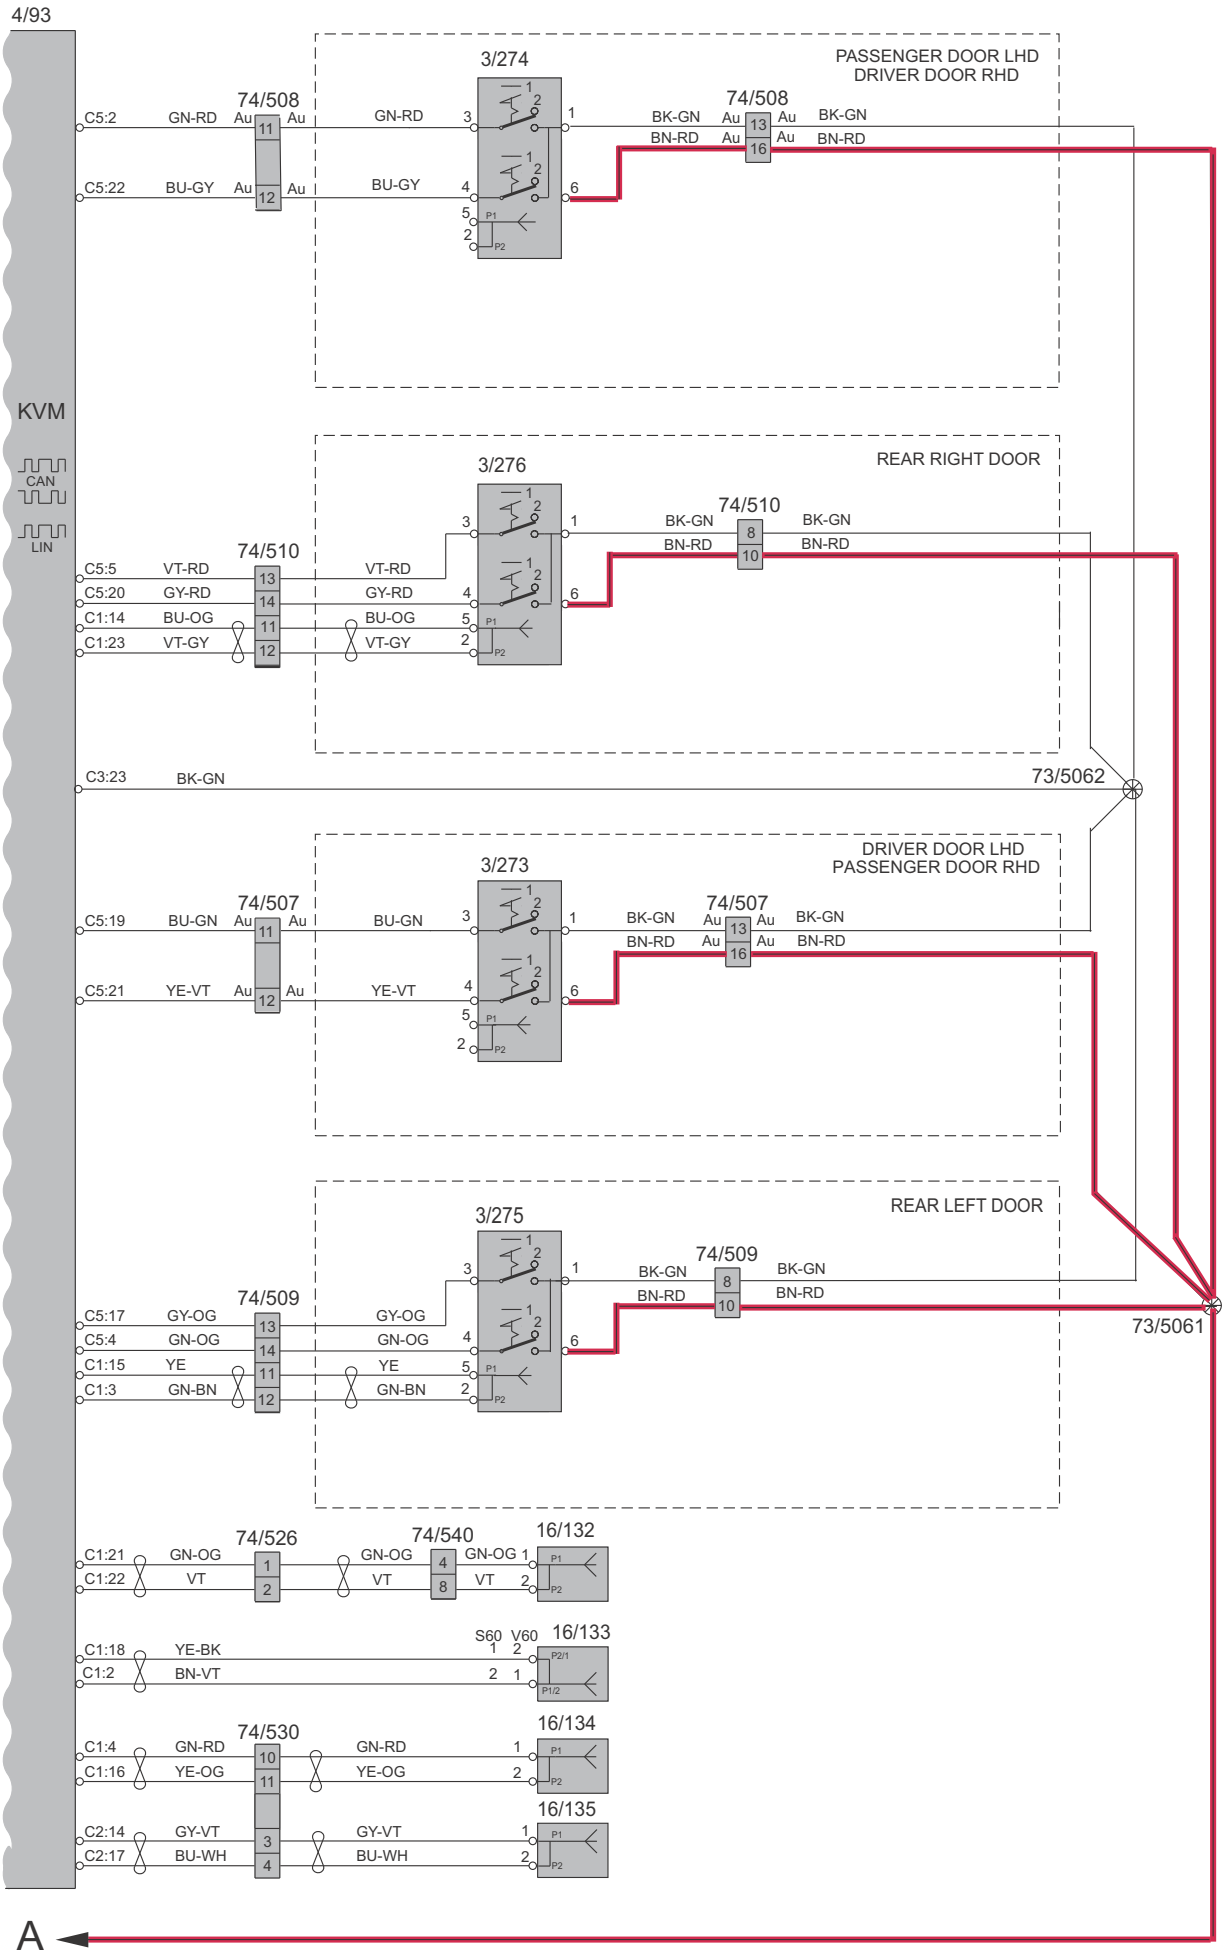
4/93
KVM
CAN
LIN
PASSENGER DOOR LHD
DRIVER DOOR RHD
3/274
74/508
C5:2 GN-RD
C5:22 BU-GY
GN-RD
BU-GY
BK-GN
BN-RD
REAR RIGHT DOOR
3/276
74/510
C5:5 VT-RD
C5:20 GY-RD
C1:14 BU-OG
C1:23 VT-GY
C3:23 BK-GN
73/5062
DRIVER DOOR LHD
PASSENGER DOOR RHD
3/273
74/507
C5:19 BU-GN
C5:21 YE-VT
REAR LEFT DOOR
3/275
74/509
C5:17 GY-OG
C5:4 GN-OG
C1:15 YE
C1:3 GN-BN
73/5061
74/526
74/540
16/132
C1:21 GN-OG
C1:22 VT
16/133
C1:18 YE-BK
C1:2 BN-VT
74/530
16/134
C1:4 GN-RD
C1:16 YE-OG
16/135
C2:14 GY-VT
C2:17 BU-WH
A
A32W056

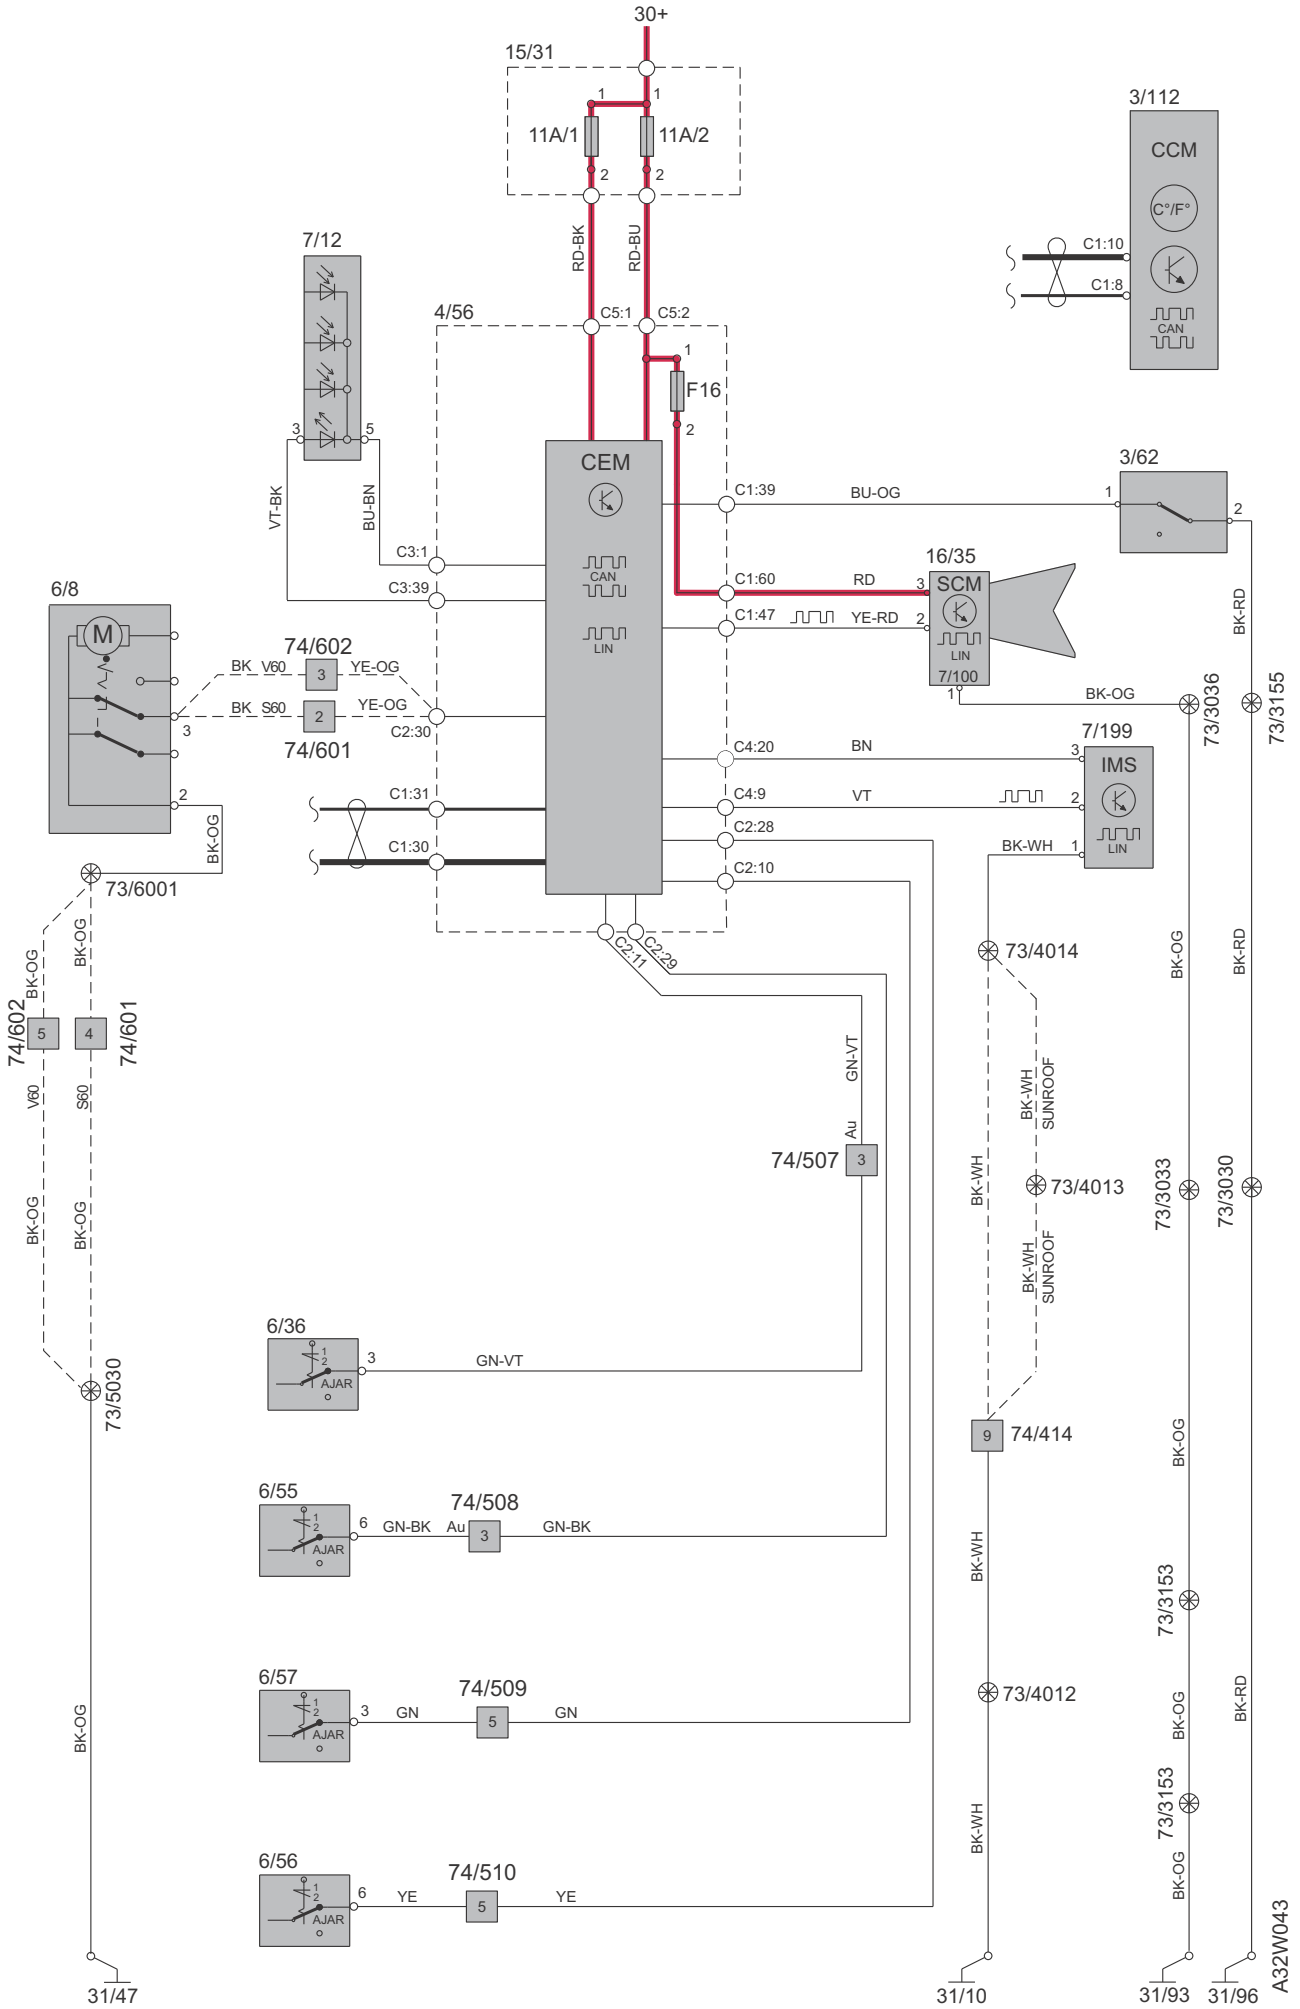
30+
15/31
11A/1
11A/2
RD-BK
RD-BU
4/56
C5:1
C5:2
F16
7/12
3/112
CCM
C°/F°
CAN
C1:10
C1:8
CEM
CAN
LIN
C1:39
BU-OG
3/62
C3:1
C3:39
C1:60
RD
C1:47
YE-RD
16/35
SCM
LIN
7/100
6/8
M
74/602
BK
V60
YE-OG
BK
S60
YE-OG
74/601
C2:30
BK-OG
73/3036
73/3155
BK-RD
7/199
IMS
LIN
C4:20
BN
C4:9
VT
C2:28
C2:10
C1:31
C1:30
BK-WH
73/6001
C2:11
C2:29
73/4014
74/602
74/601
BK-OG
V60
S60
GN-VT
74/507
Au
BK-WH
SUNROOF
73/4013
73/3033
73/3030
6/36
AJAR
GN-VT
73/5030
9
74/414
6/55
74/508
GN-BK
Au
GN-BK
73/3153
6/57
74/509
GN
GN
73/4012
6/56
74/510
YE
YE
31/47
31/10
31/93
31/96
A32W043

Group 36 Additional electrical equipment
Parking assistance

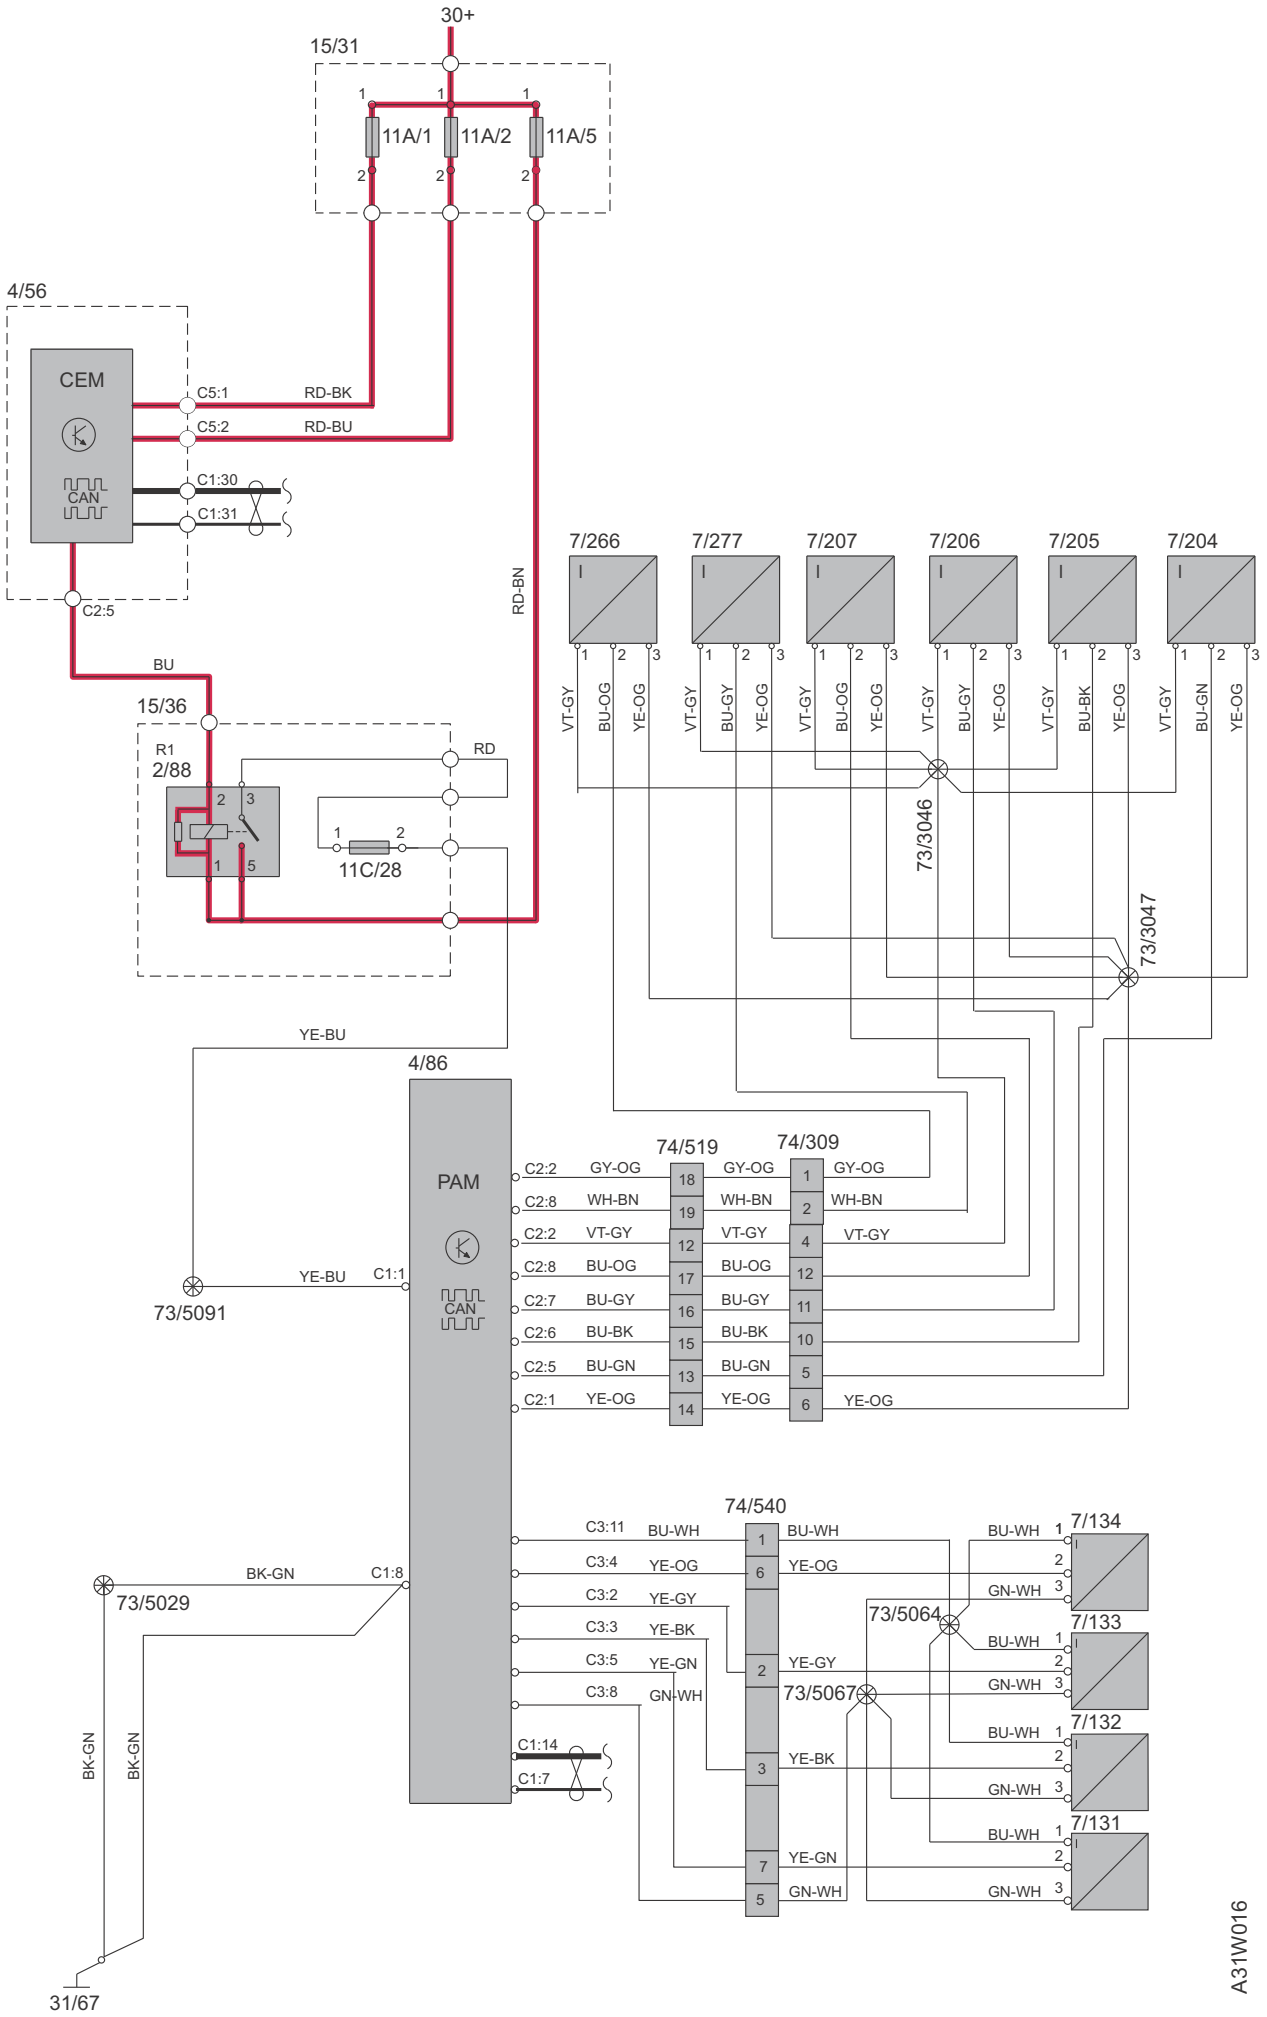

Group 36 Additional electrical equipment
Collision warning with power brake booster

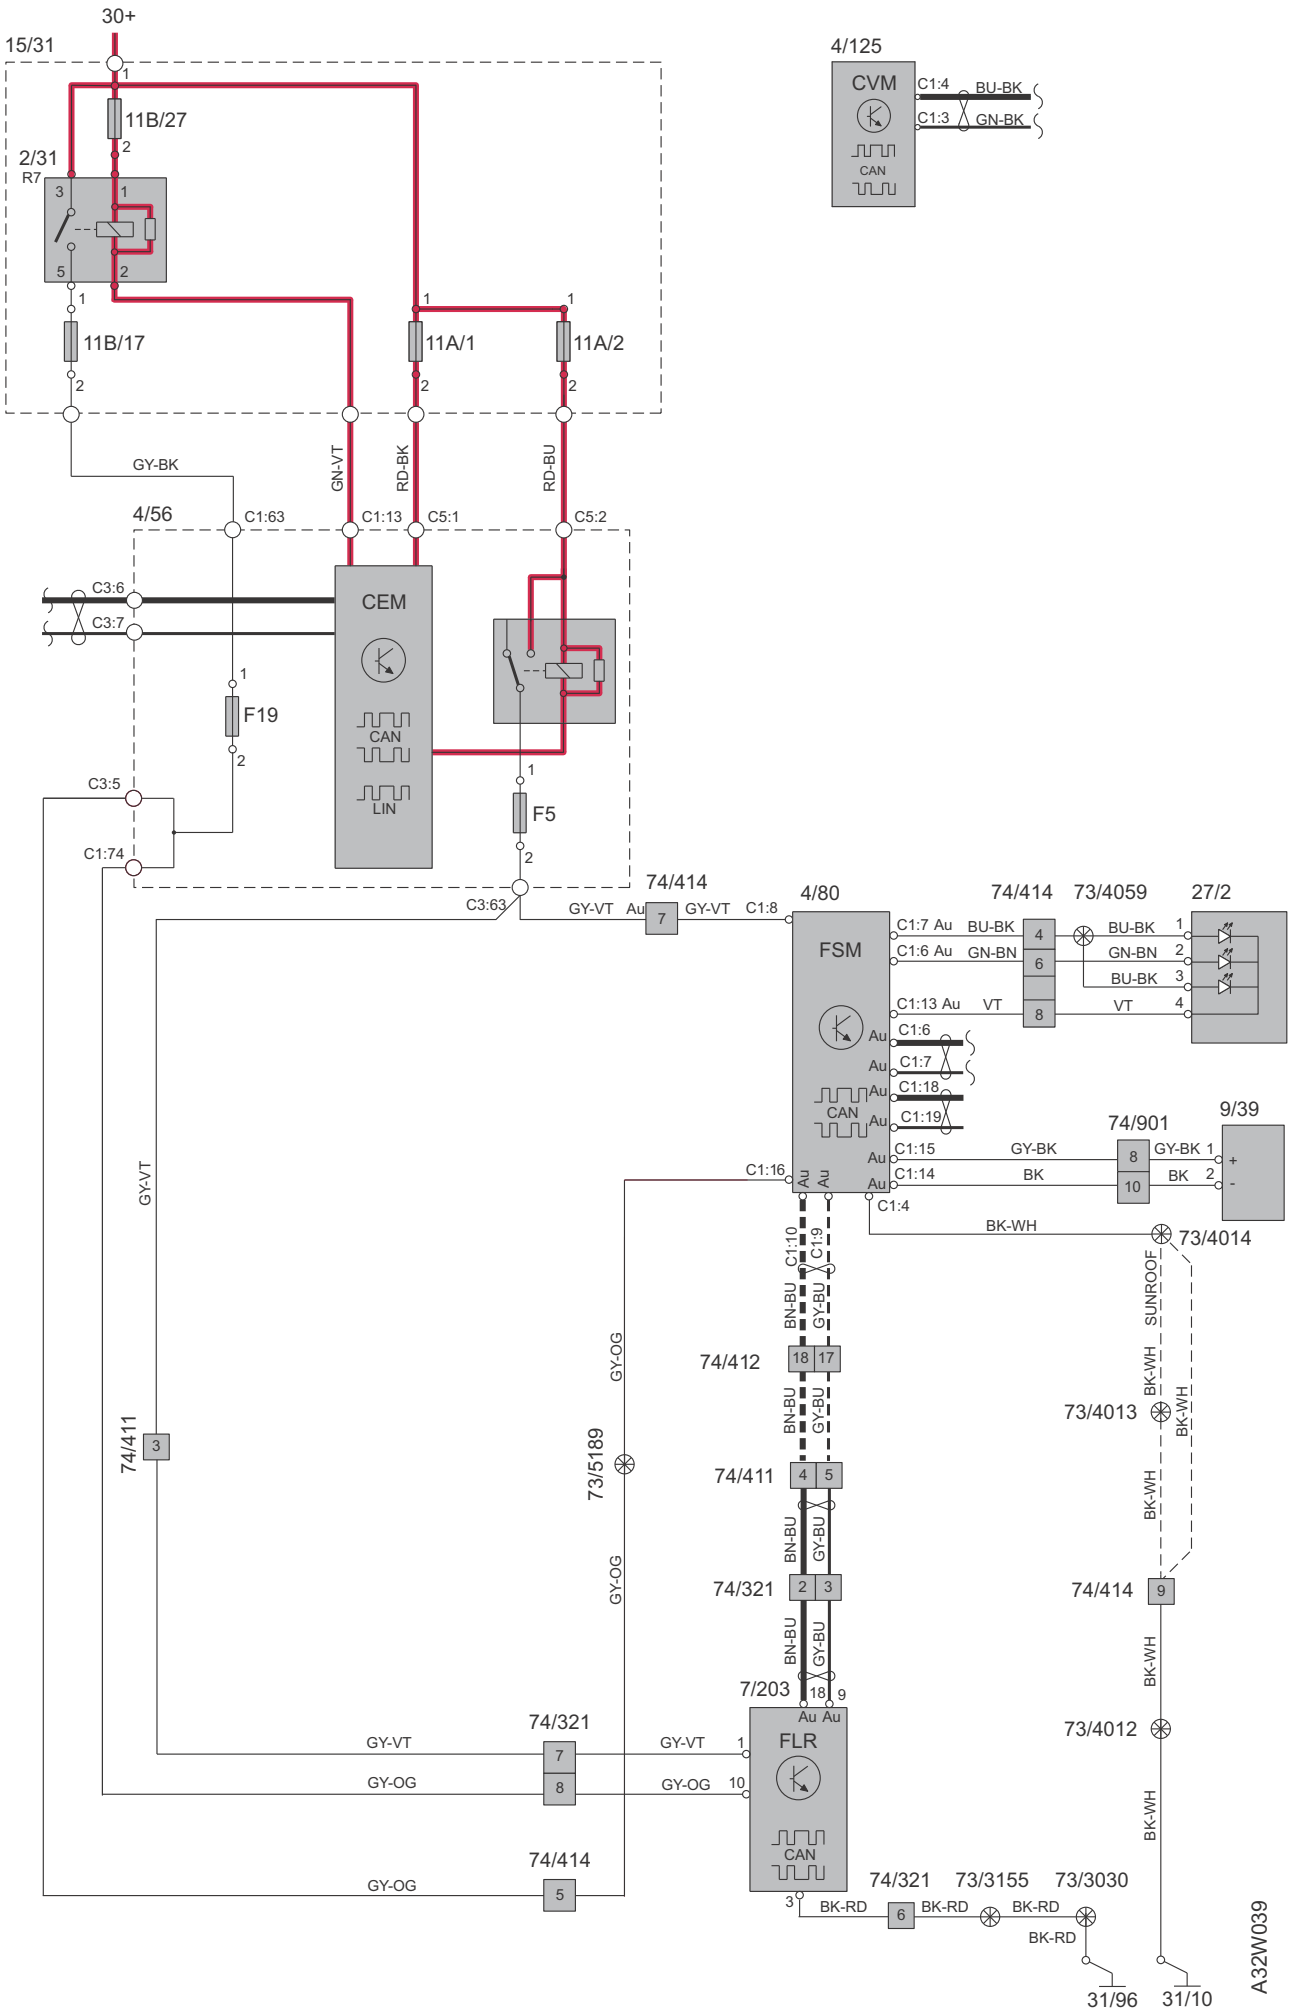

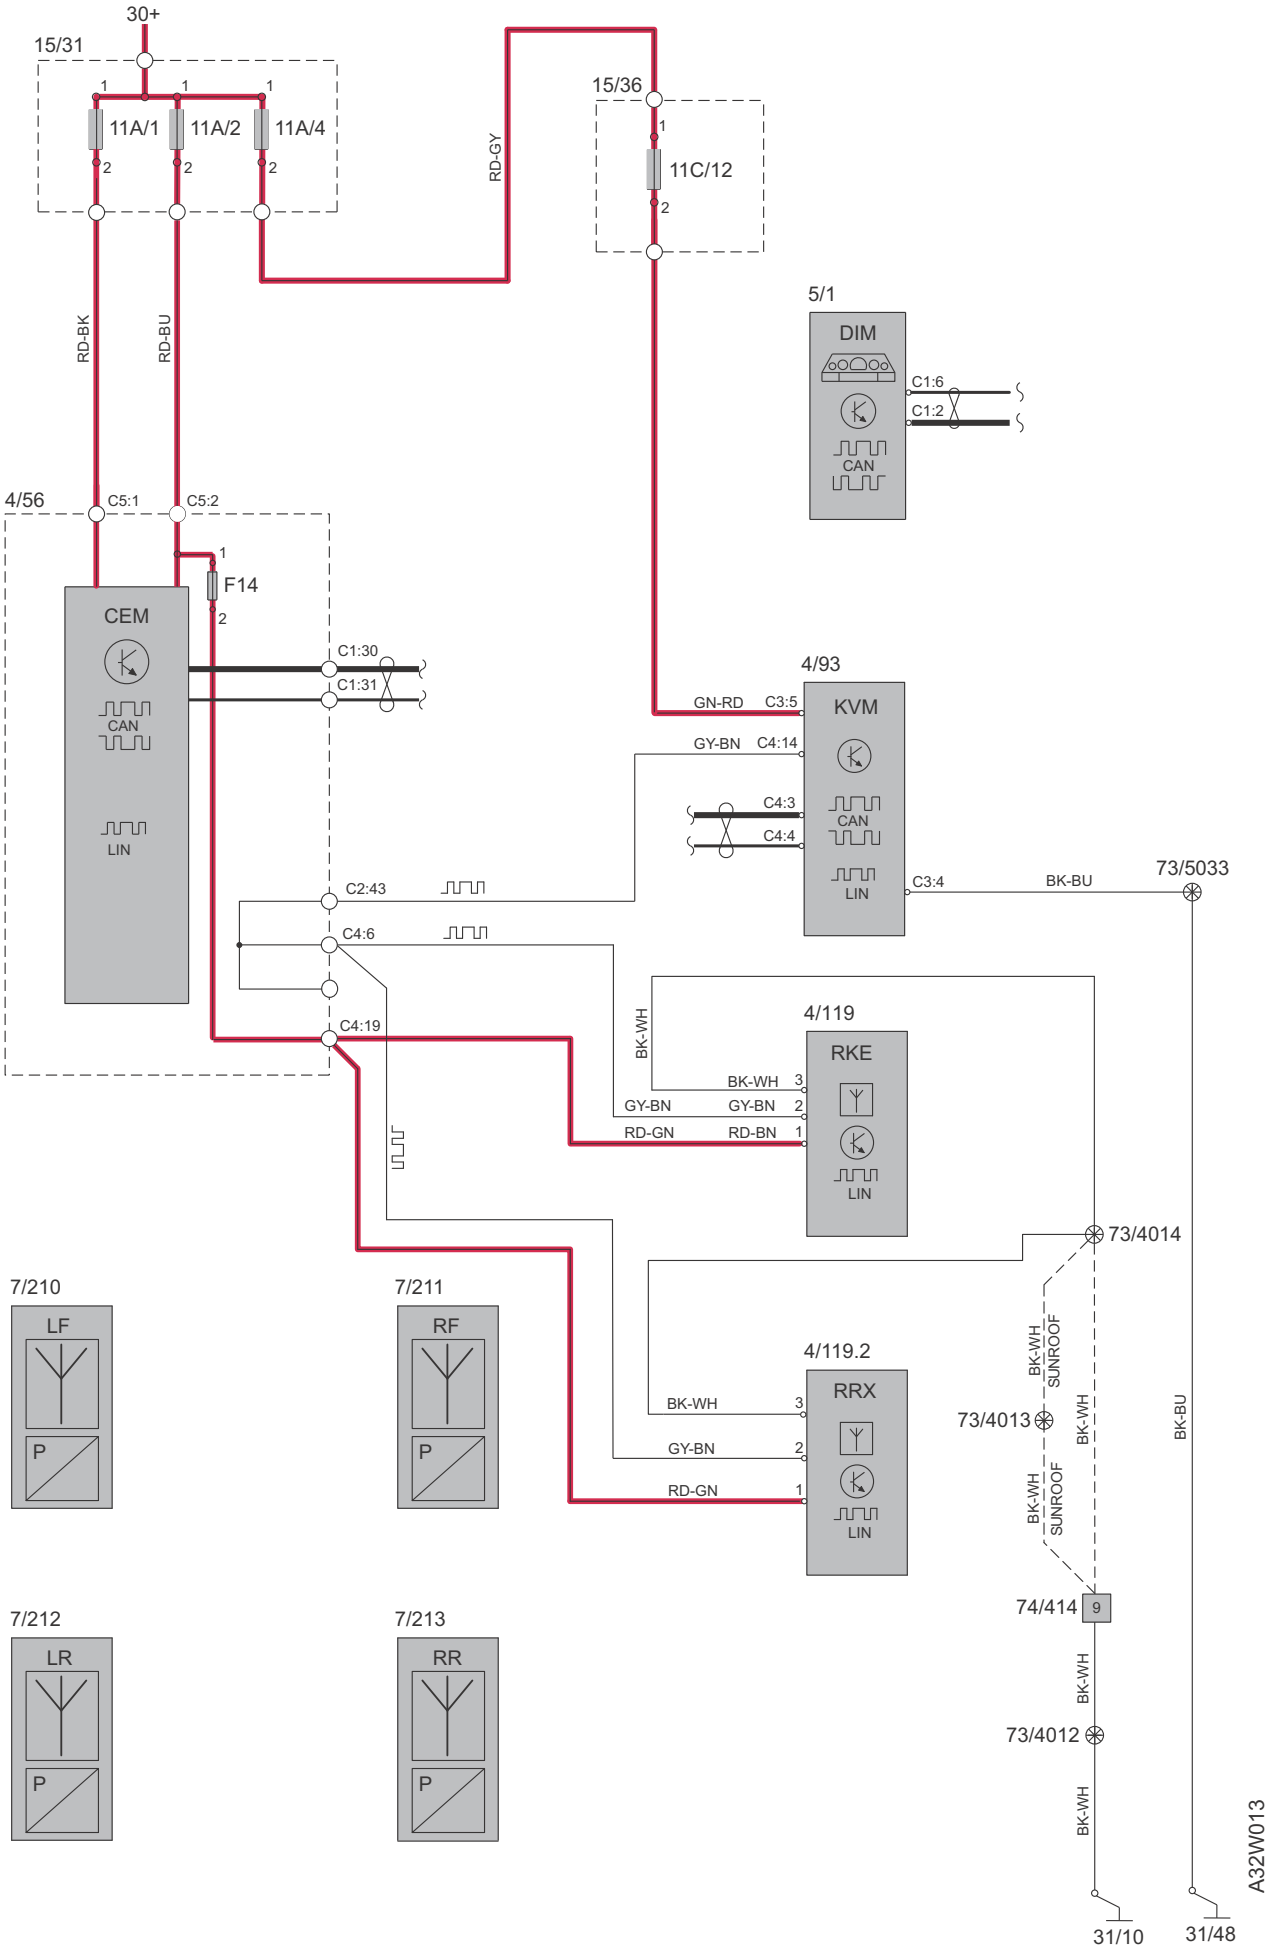
30+
15/31
11A/1
11A/2
11A/4
RD-GY
15/36
11C/12
5/1
DIM
C1:6
C1:2
CAN
RD-BK
RD-BU
4/56
C5:1
C5:2
F14
CEM
C1:30
C1:31
CAN
LIN
4/93
KVM
GN-RD
C3:5
GY-BN
C4:14
C4:3
C4:4
CAN
LIN
C3:4
BK-BU
73/5033
C2:43
C4:6
C4:19
BK-WH
4/119
RKE
BK-WH
3
GY-BN
2
RD-GN
1
GY-BN
RD-BN
LIN
73/4014
7/210
LF
P
7/211
RF
P
4/119.2
RRX
BK-WH
3
GY-BN
2
RD-GN
1
LIN
BK-WH
SUNROOF
73/4013
BK-WH
BK-WH
SUNROOF
BK-BU
74/414
9
BK-WH
73/4012
BK-WH
7/212
LR
P
7/213
RR
P
A32W013
31/10
31/48

Group 36 Additional electrical equipment
Alcohol lock

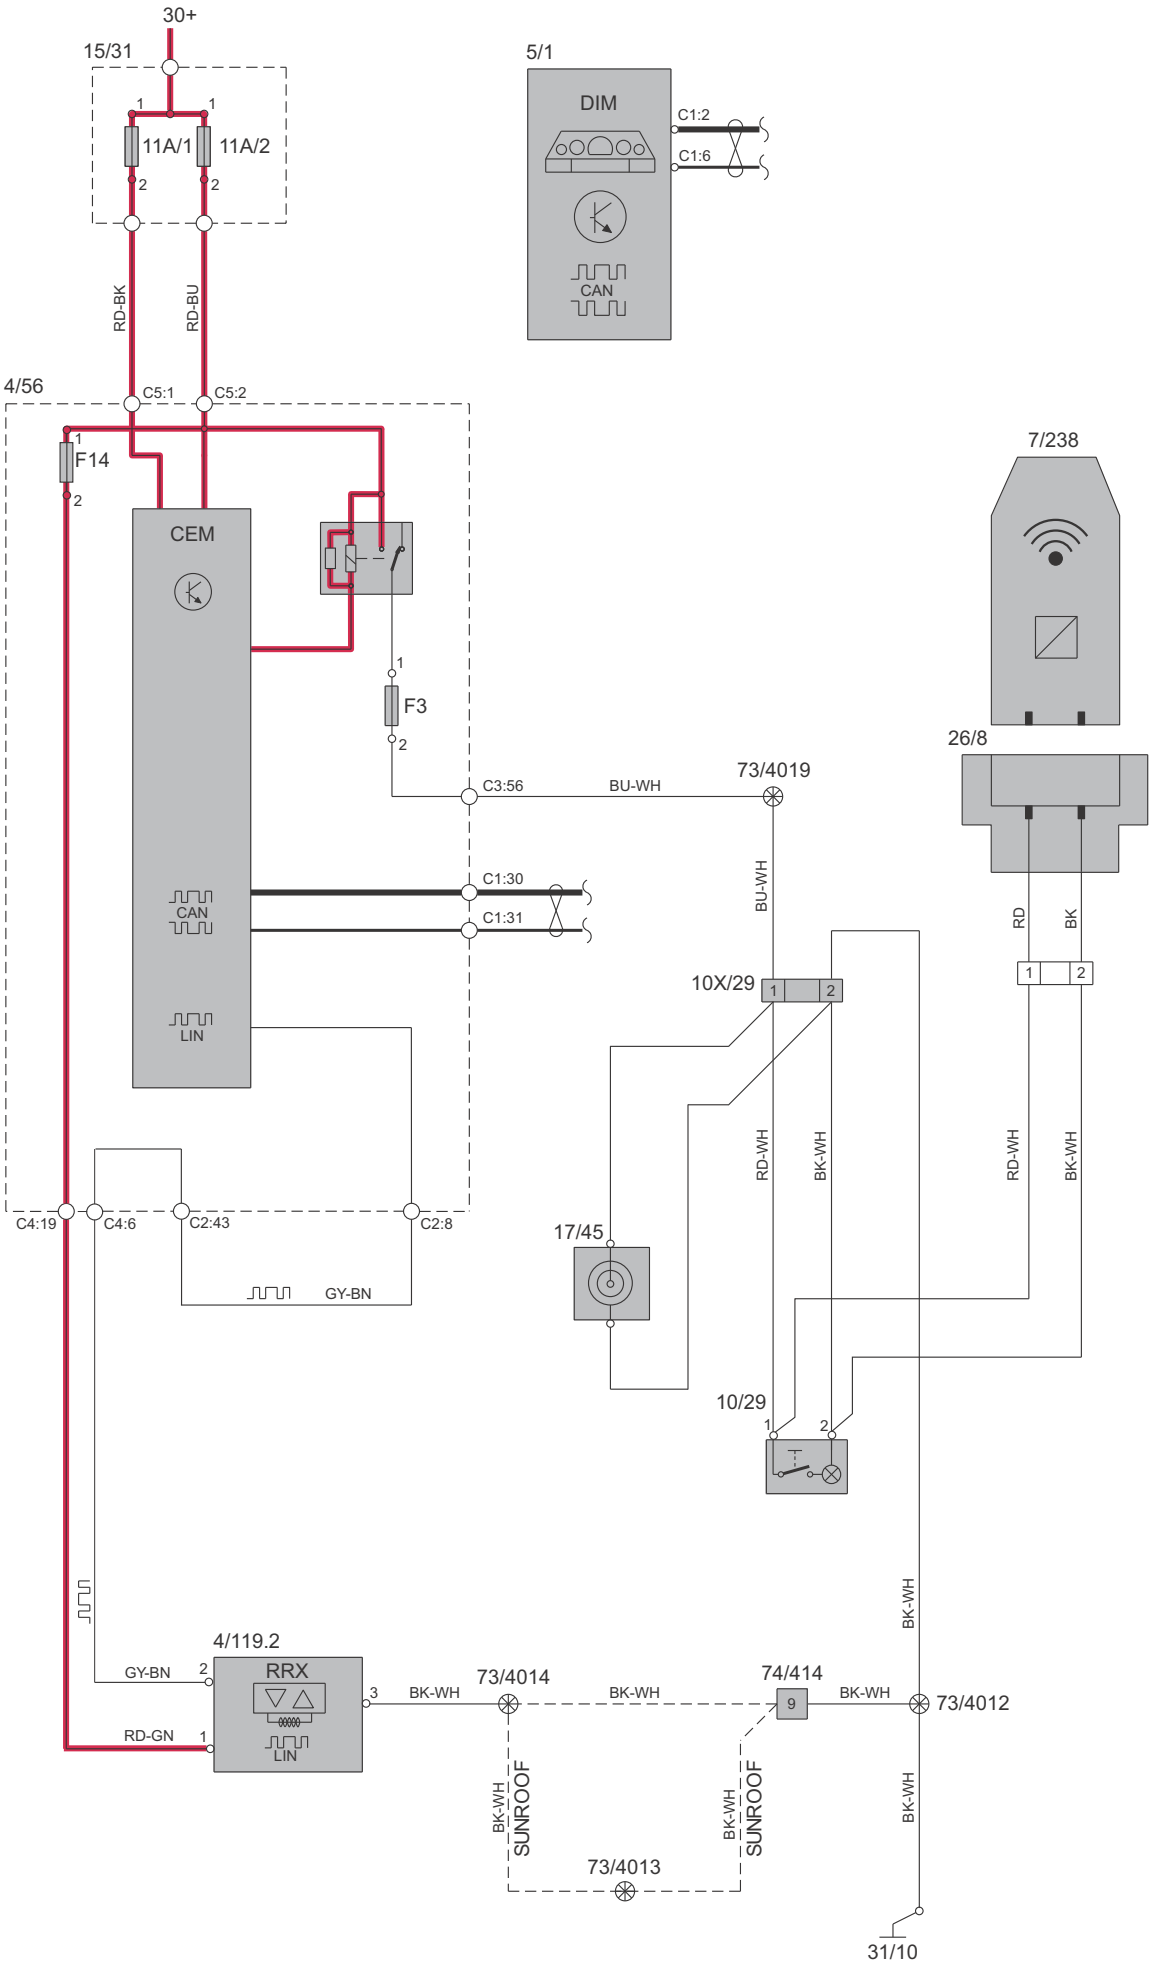

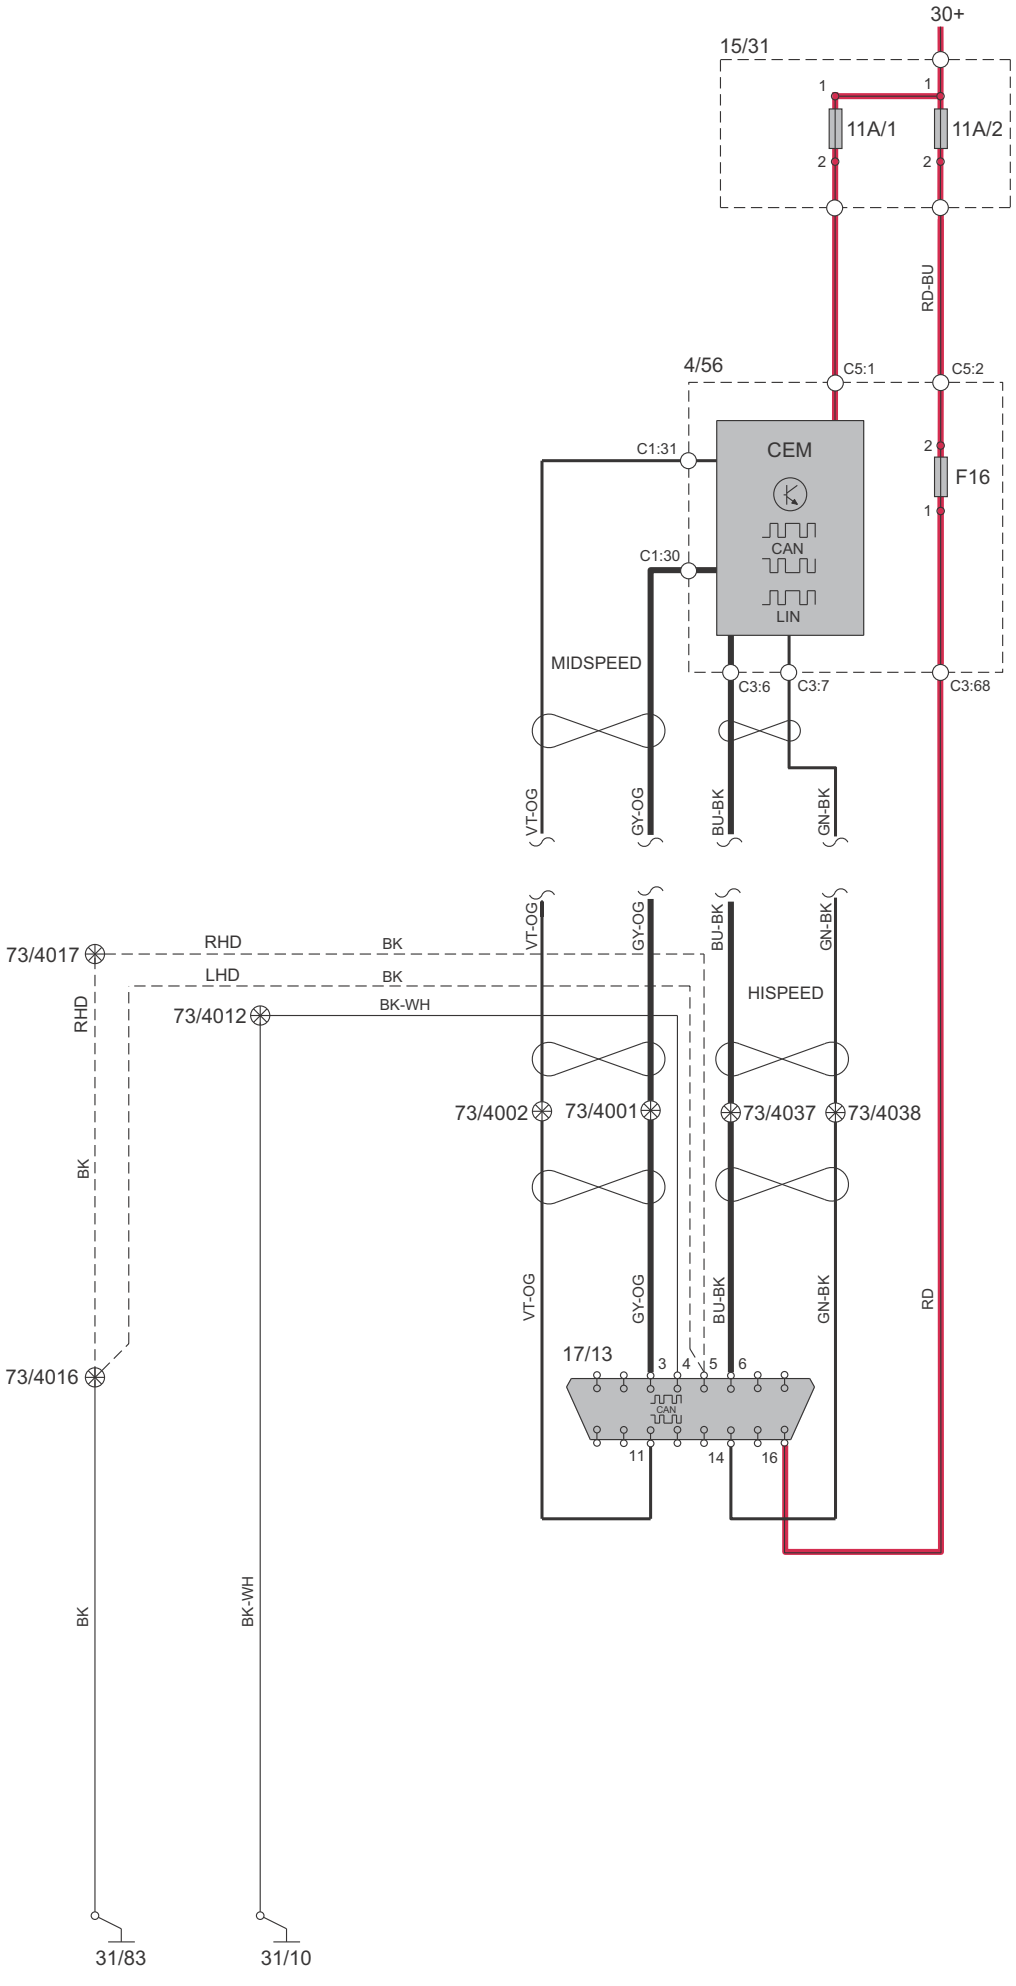
30+
15/31
1
1
11A/1
11A/2
2
2
RD-BU
4/56
C5:1
C5:2
C1:31
CEM
2
F16
1
C1:30
CAN
LIN
MIDSPEED
C3:6
C3:7
C3:68
VT-OG
GY-OG
BU-BK
GN-BK
73/4017
RHD
BK
LHD
BK
BK-WH
73/4012
RHD
BK
HISPEED
73/4002
73/4001
73/4037
73/4038
73/4016
17/13
3
4
5
6
11
14
16
RD
BK
BK-WH
31/83
31/10
A31W091

Group 37 Wiring and fuses
Outlet 12V

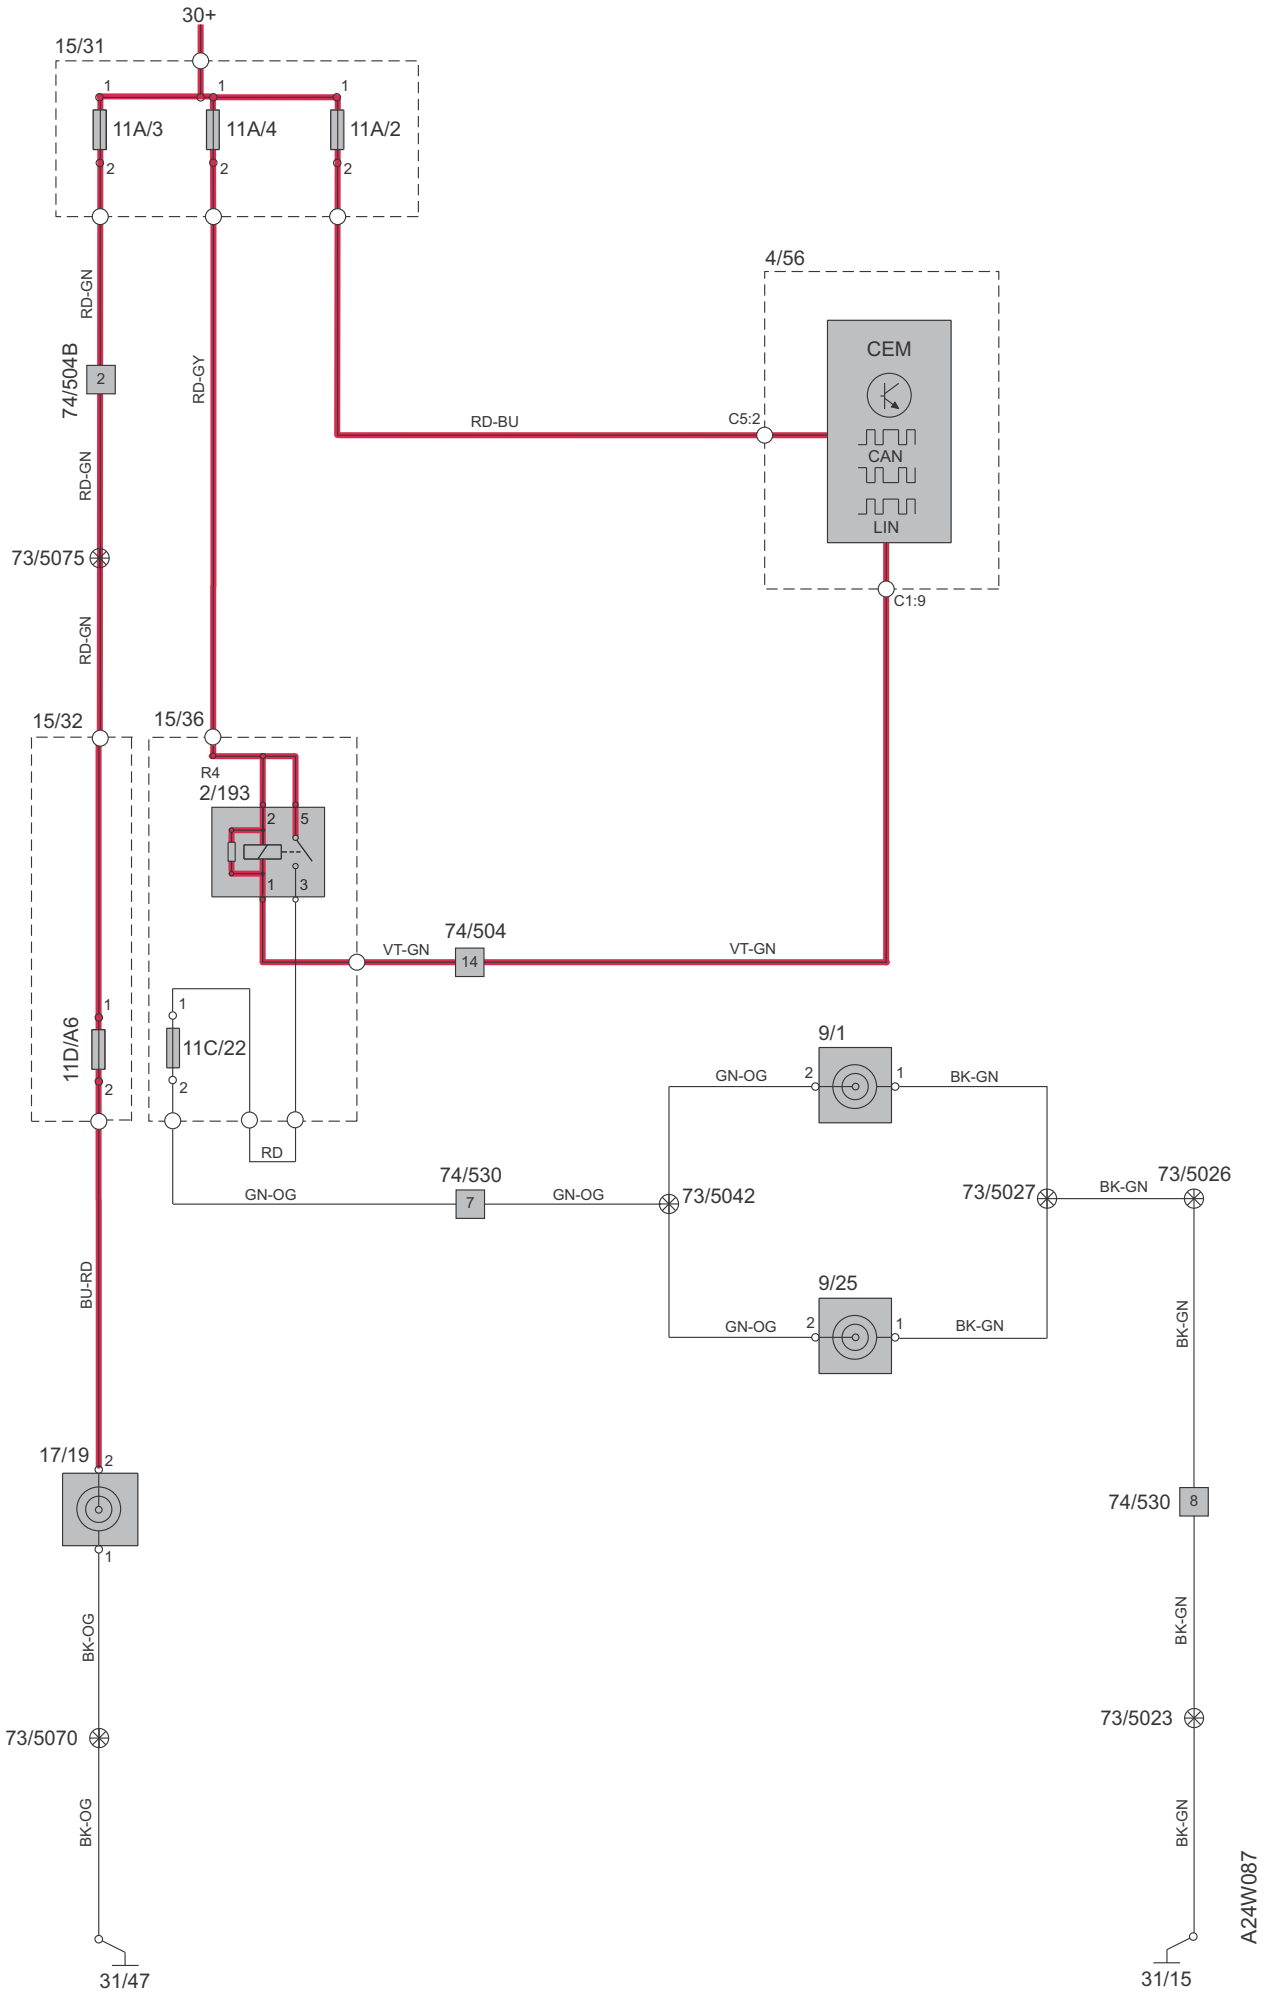

Group 37 Wiring and fuses, Accessories
Outlet 12V, V60

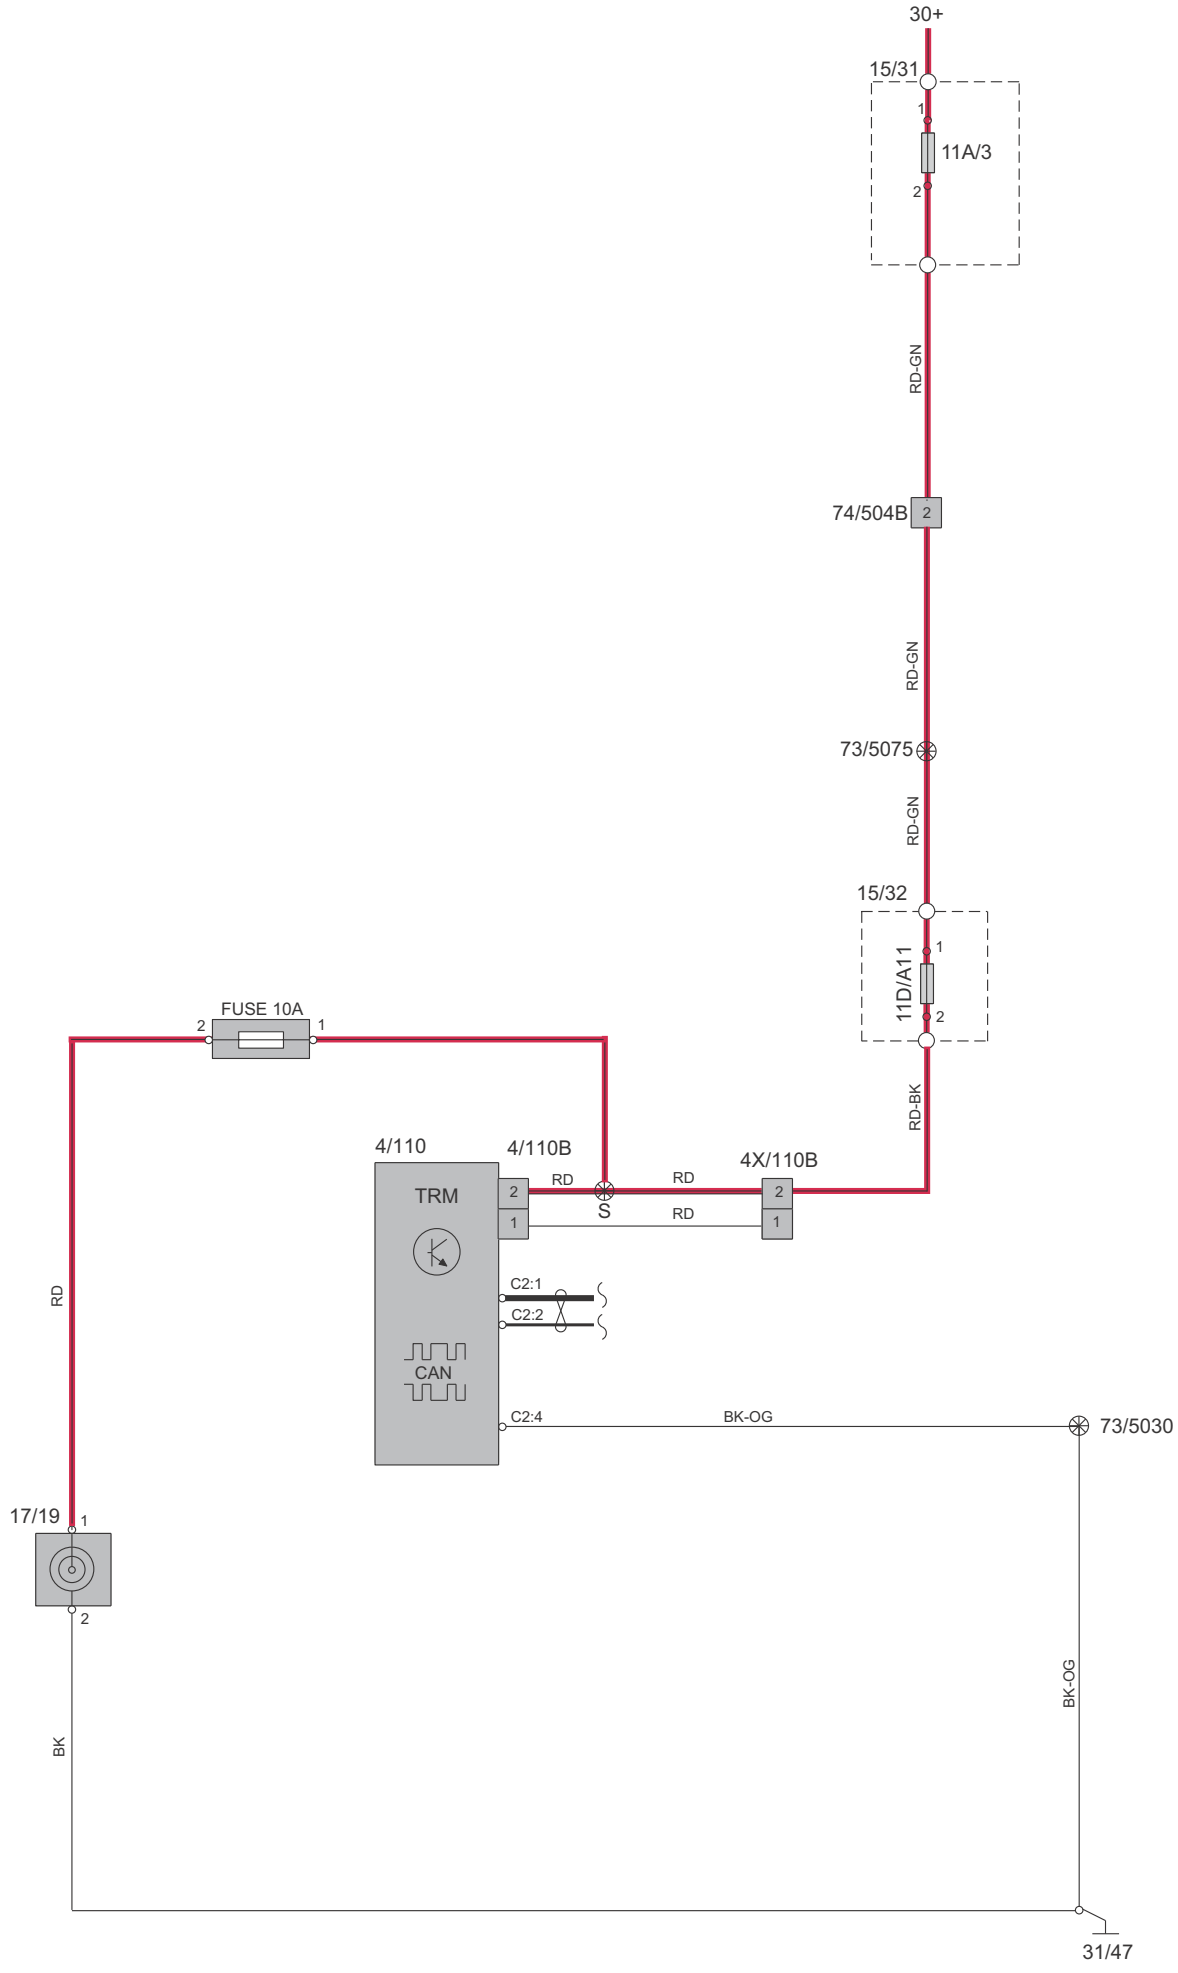

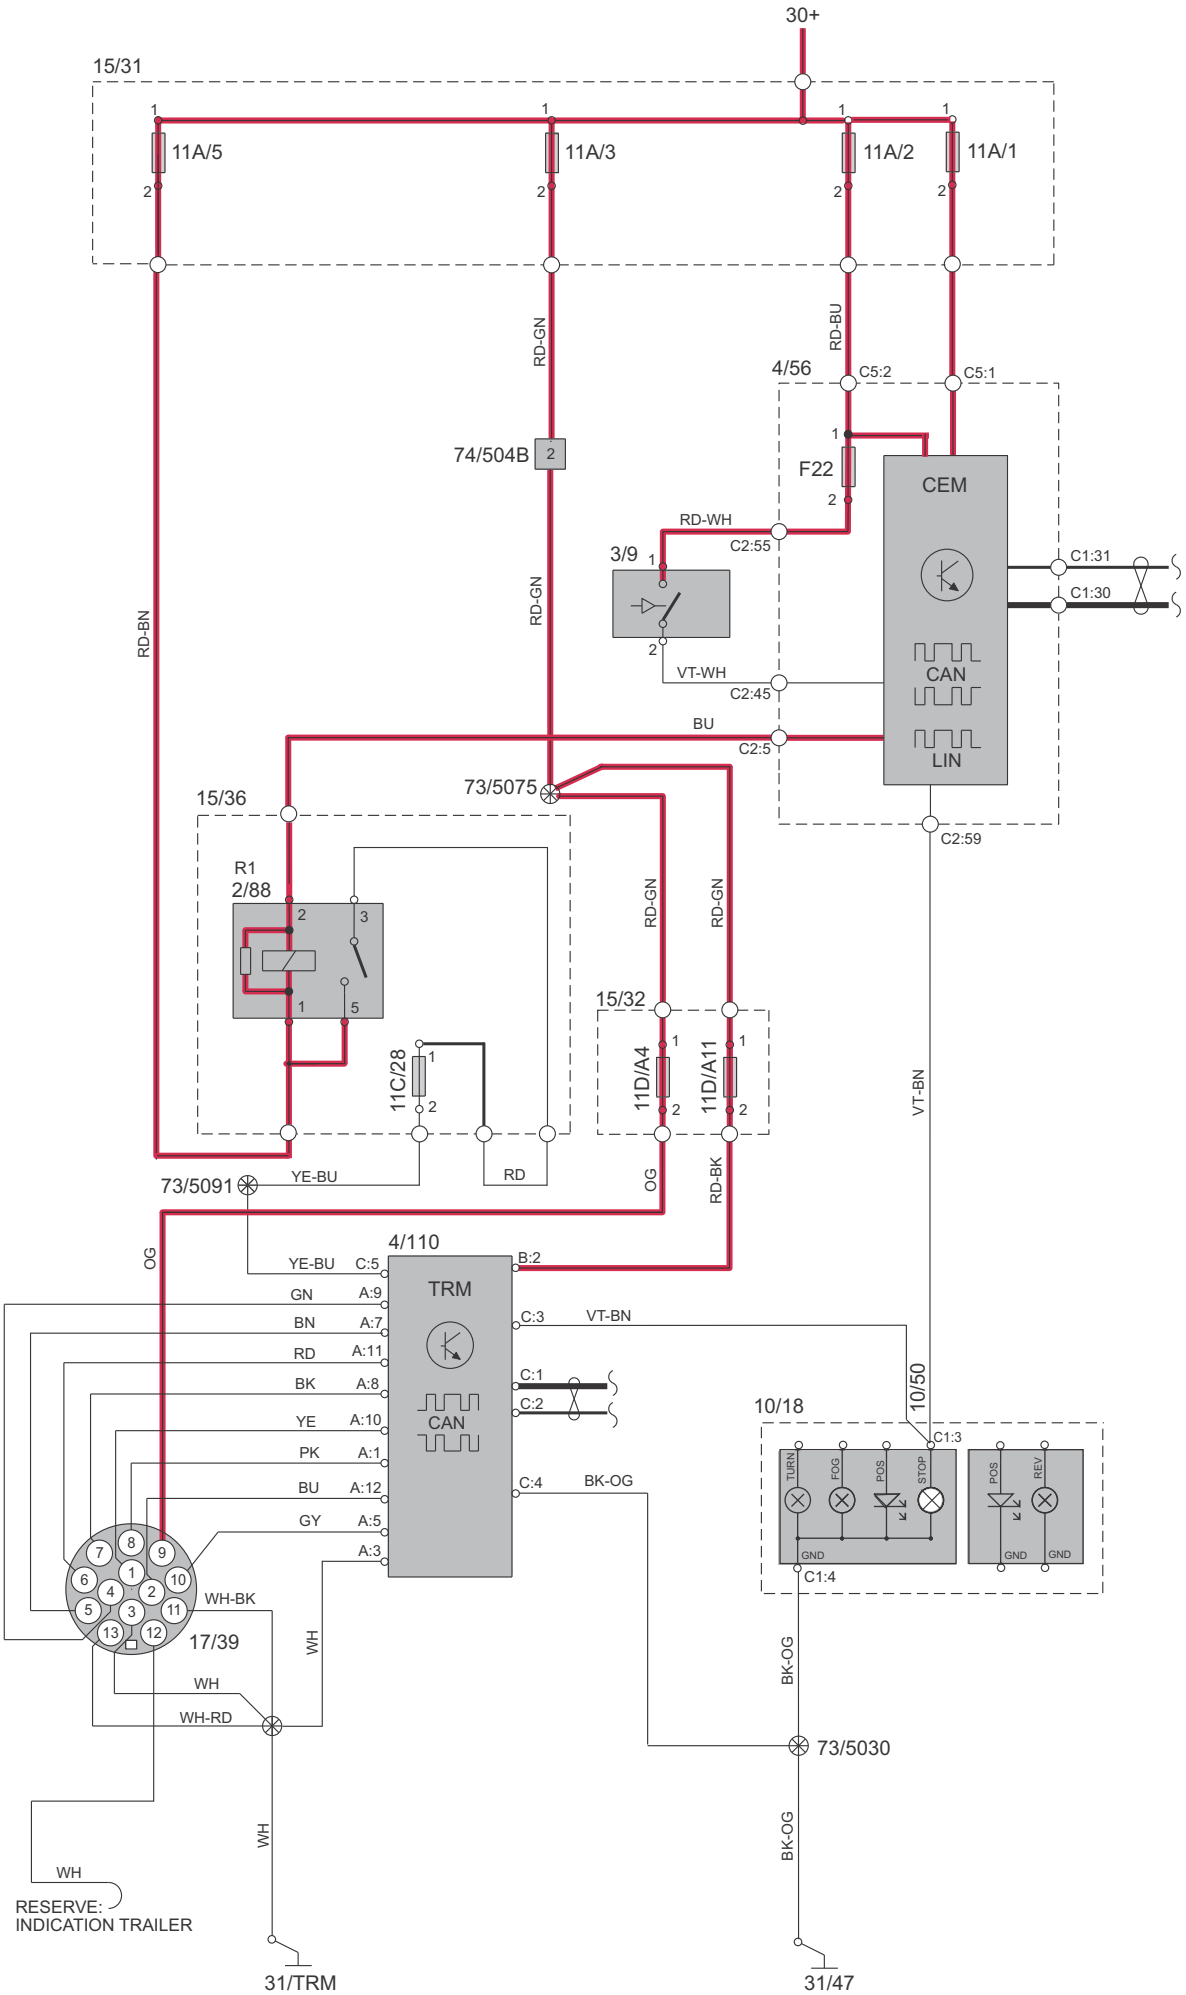
30+
15/31
11A/5
11A/3
11A/2
11A/1
RD-GN
RD-BU
4/56
C5:2
C5:1
74/504B
F22
CEM
RD-WH
C2:55
3/9
C1:31
C1:30
RD-BN
VT-WH
C2:45
CAN
BU
C2:5
LIN
73/5075
15/36
C2:59
R1
2/88
15/32
11C/28
11D/A4
11D/A11
VT-BN
73/5091
YE-BU
RD
OG
RD-BK
4/110
TRM
GN
BN
RD
BK
YE
PK
BU
GY
C:5
A:9
A:7
A:11
A:8
A:10
A:1
A:12
A:5
A:3
B:2
C:3
C:1
C:2
C:4
BK-OG
10/18
10/50
C1:3
C1:4
TURN
FOG
POS
STOP
REV
GND
WH-BK
17/39
WH
WH-RD
73/5030
RESERVE:
INDICATION TRAILER
31/TRM
31/47
A24W090

Group 37 Wiring and fuses, Accessories
Cable harness towbar/tow hitch 13-pin V60

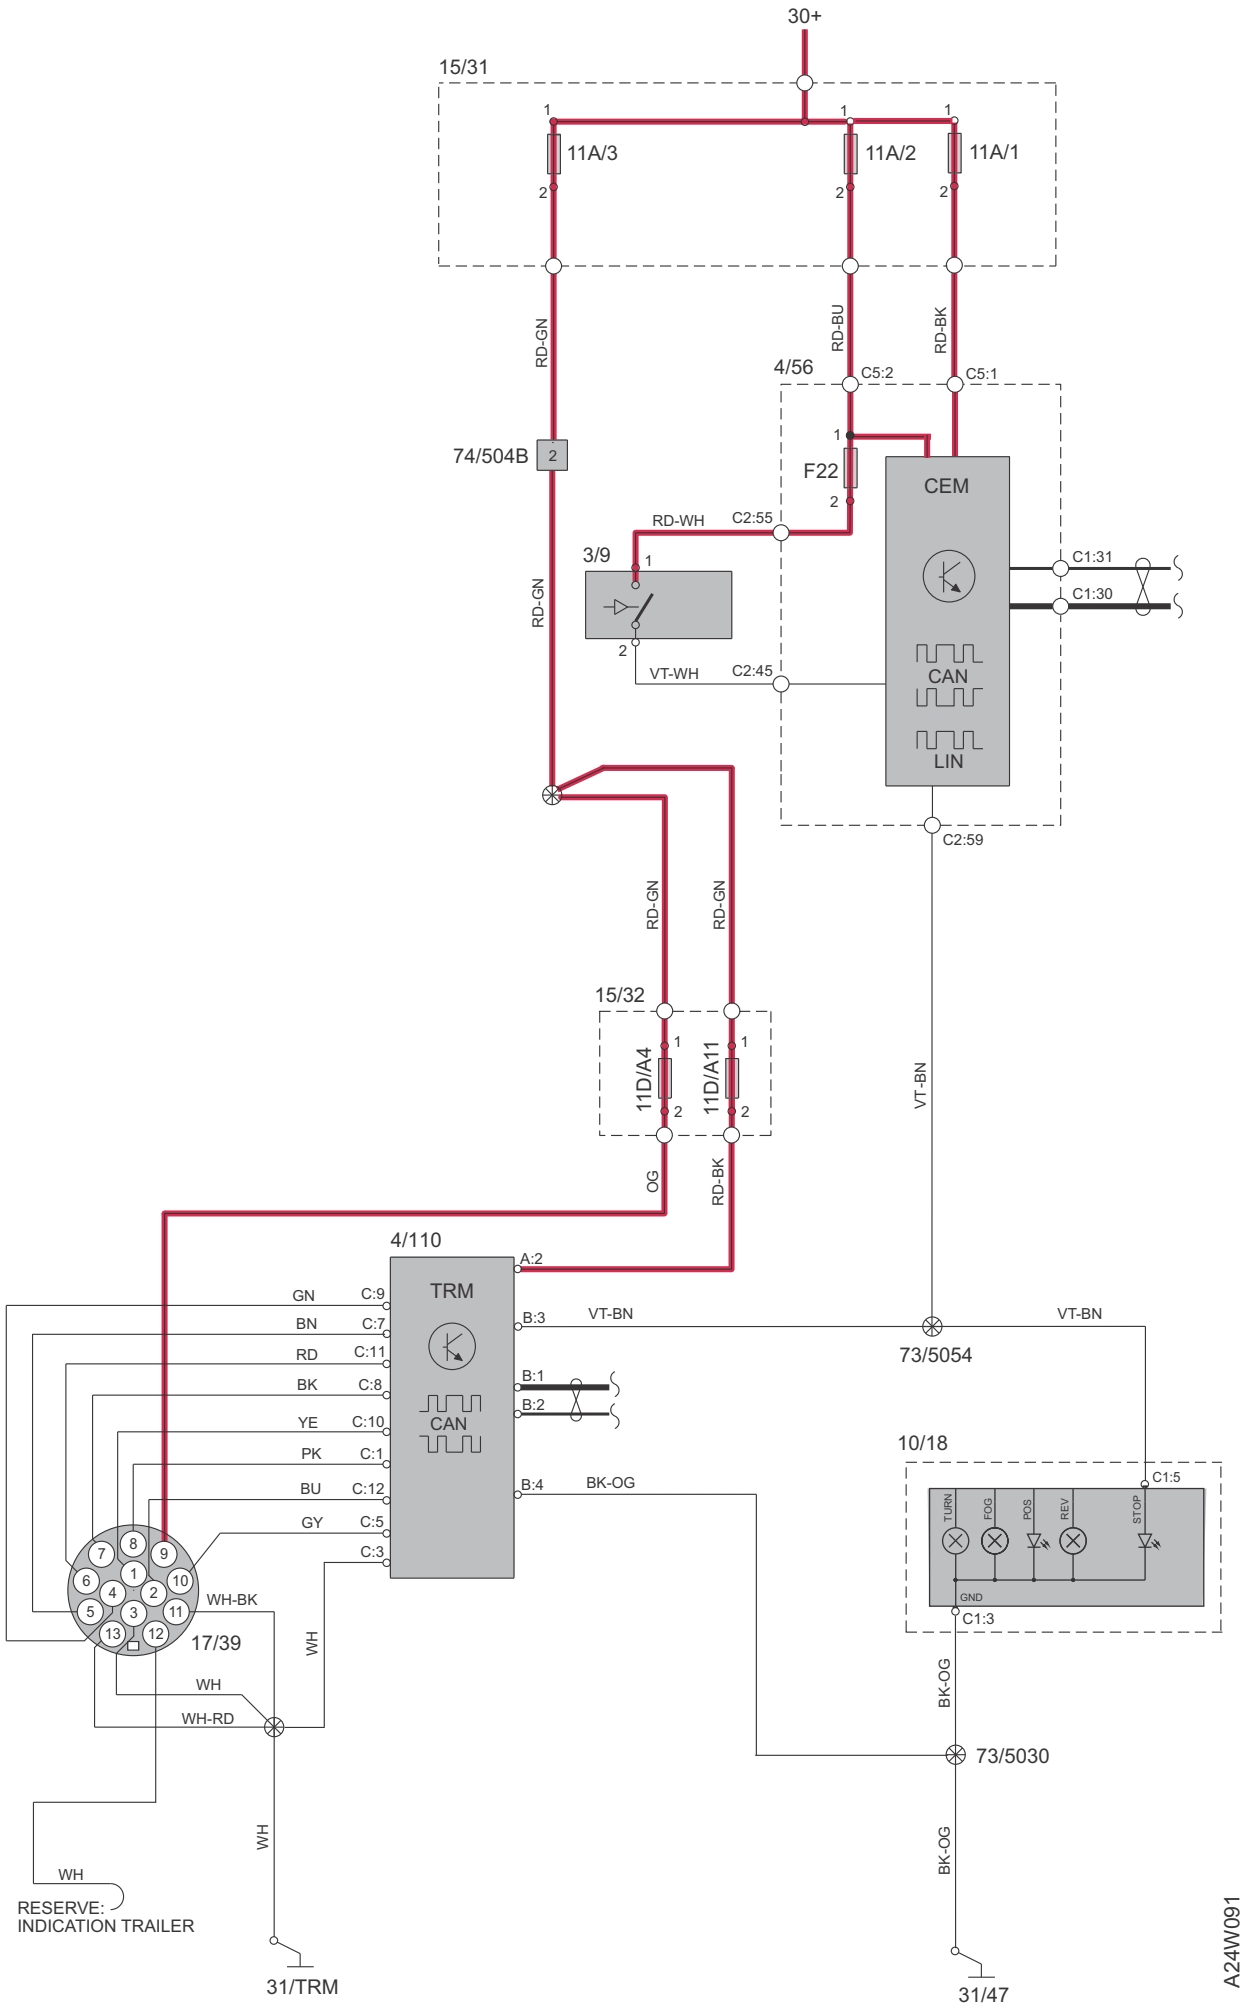

Group 38 Instruments
Seat belt reminder

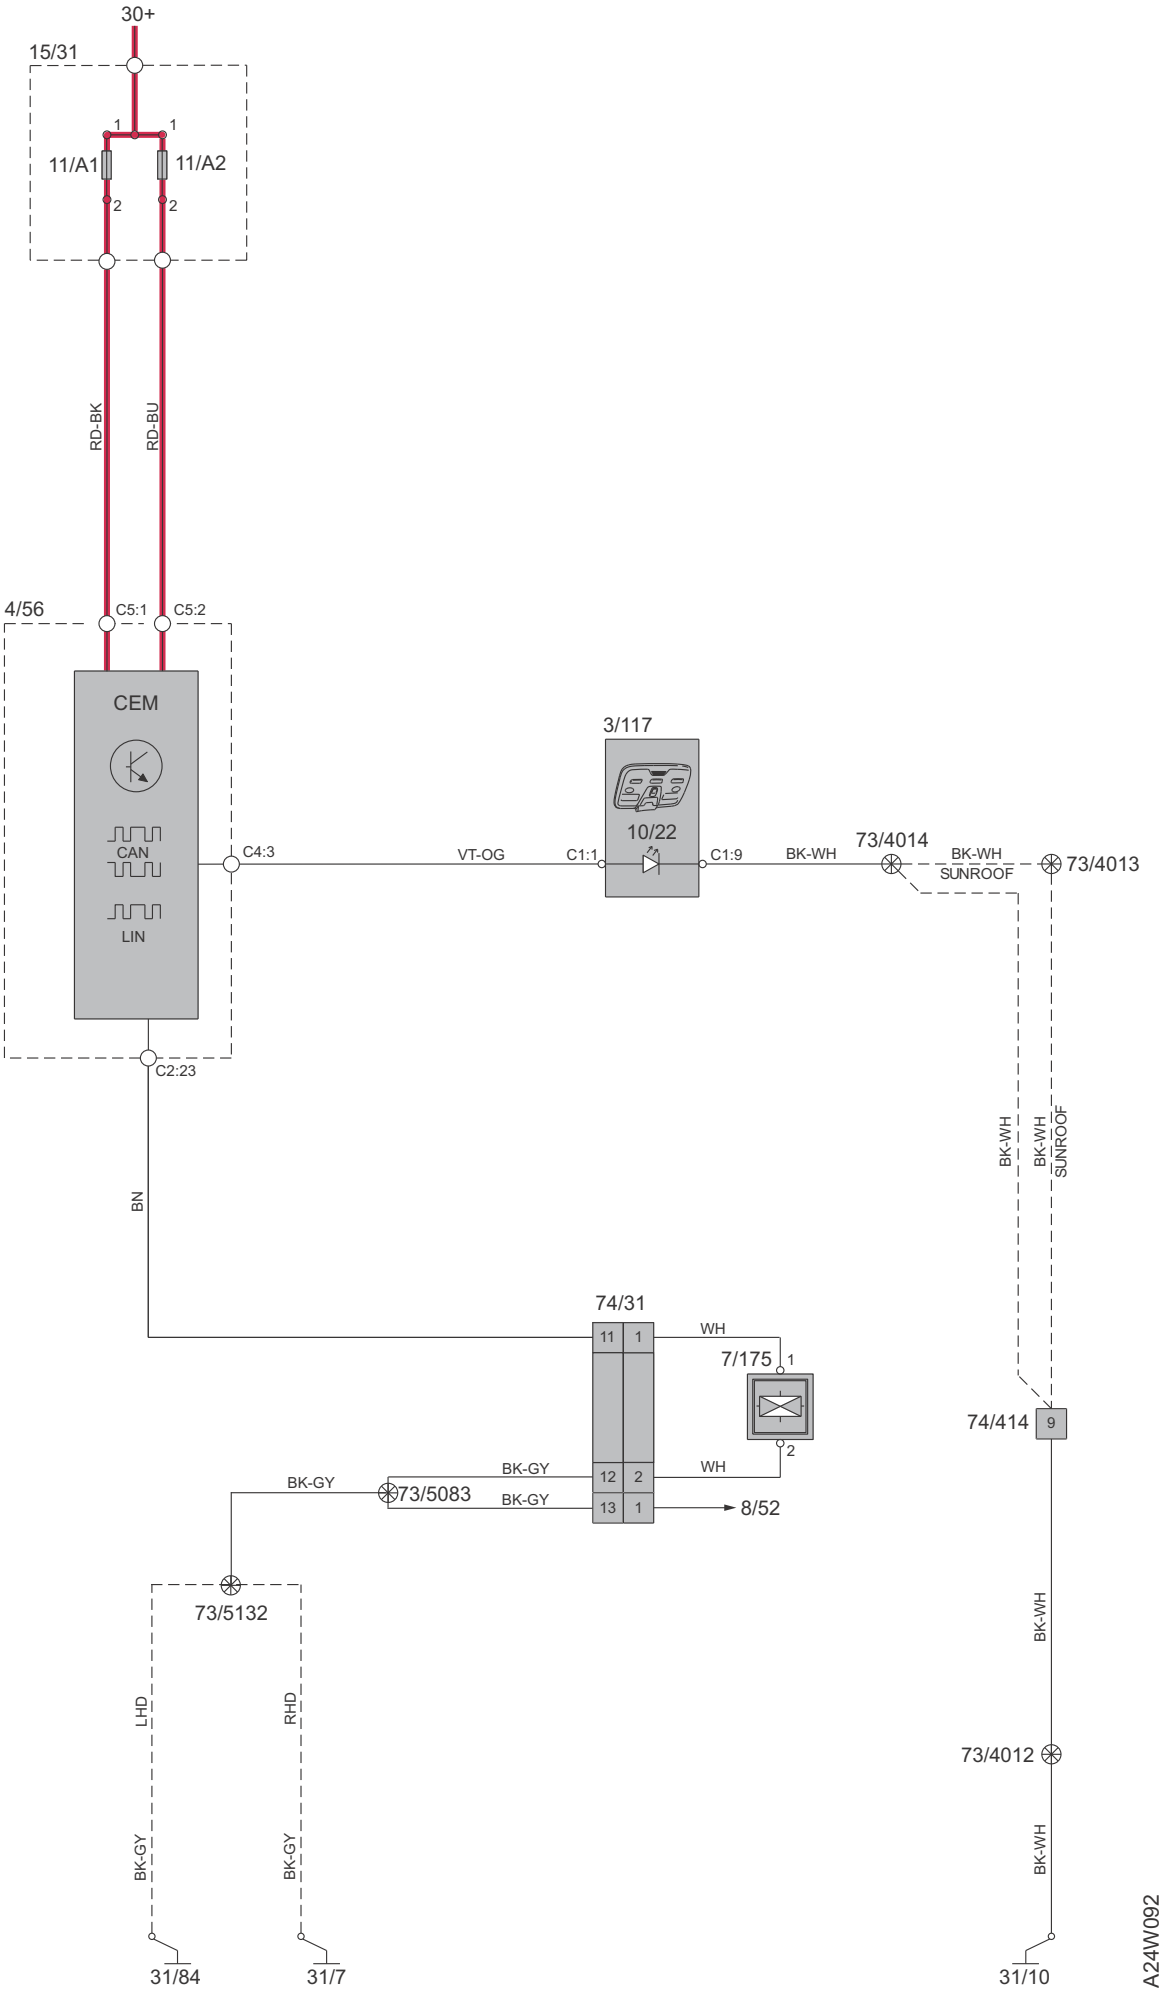

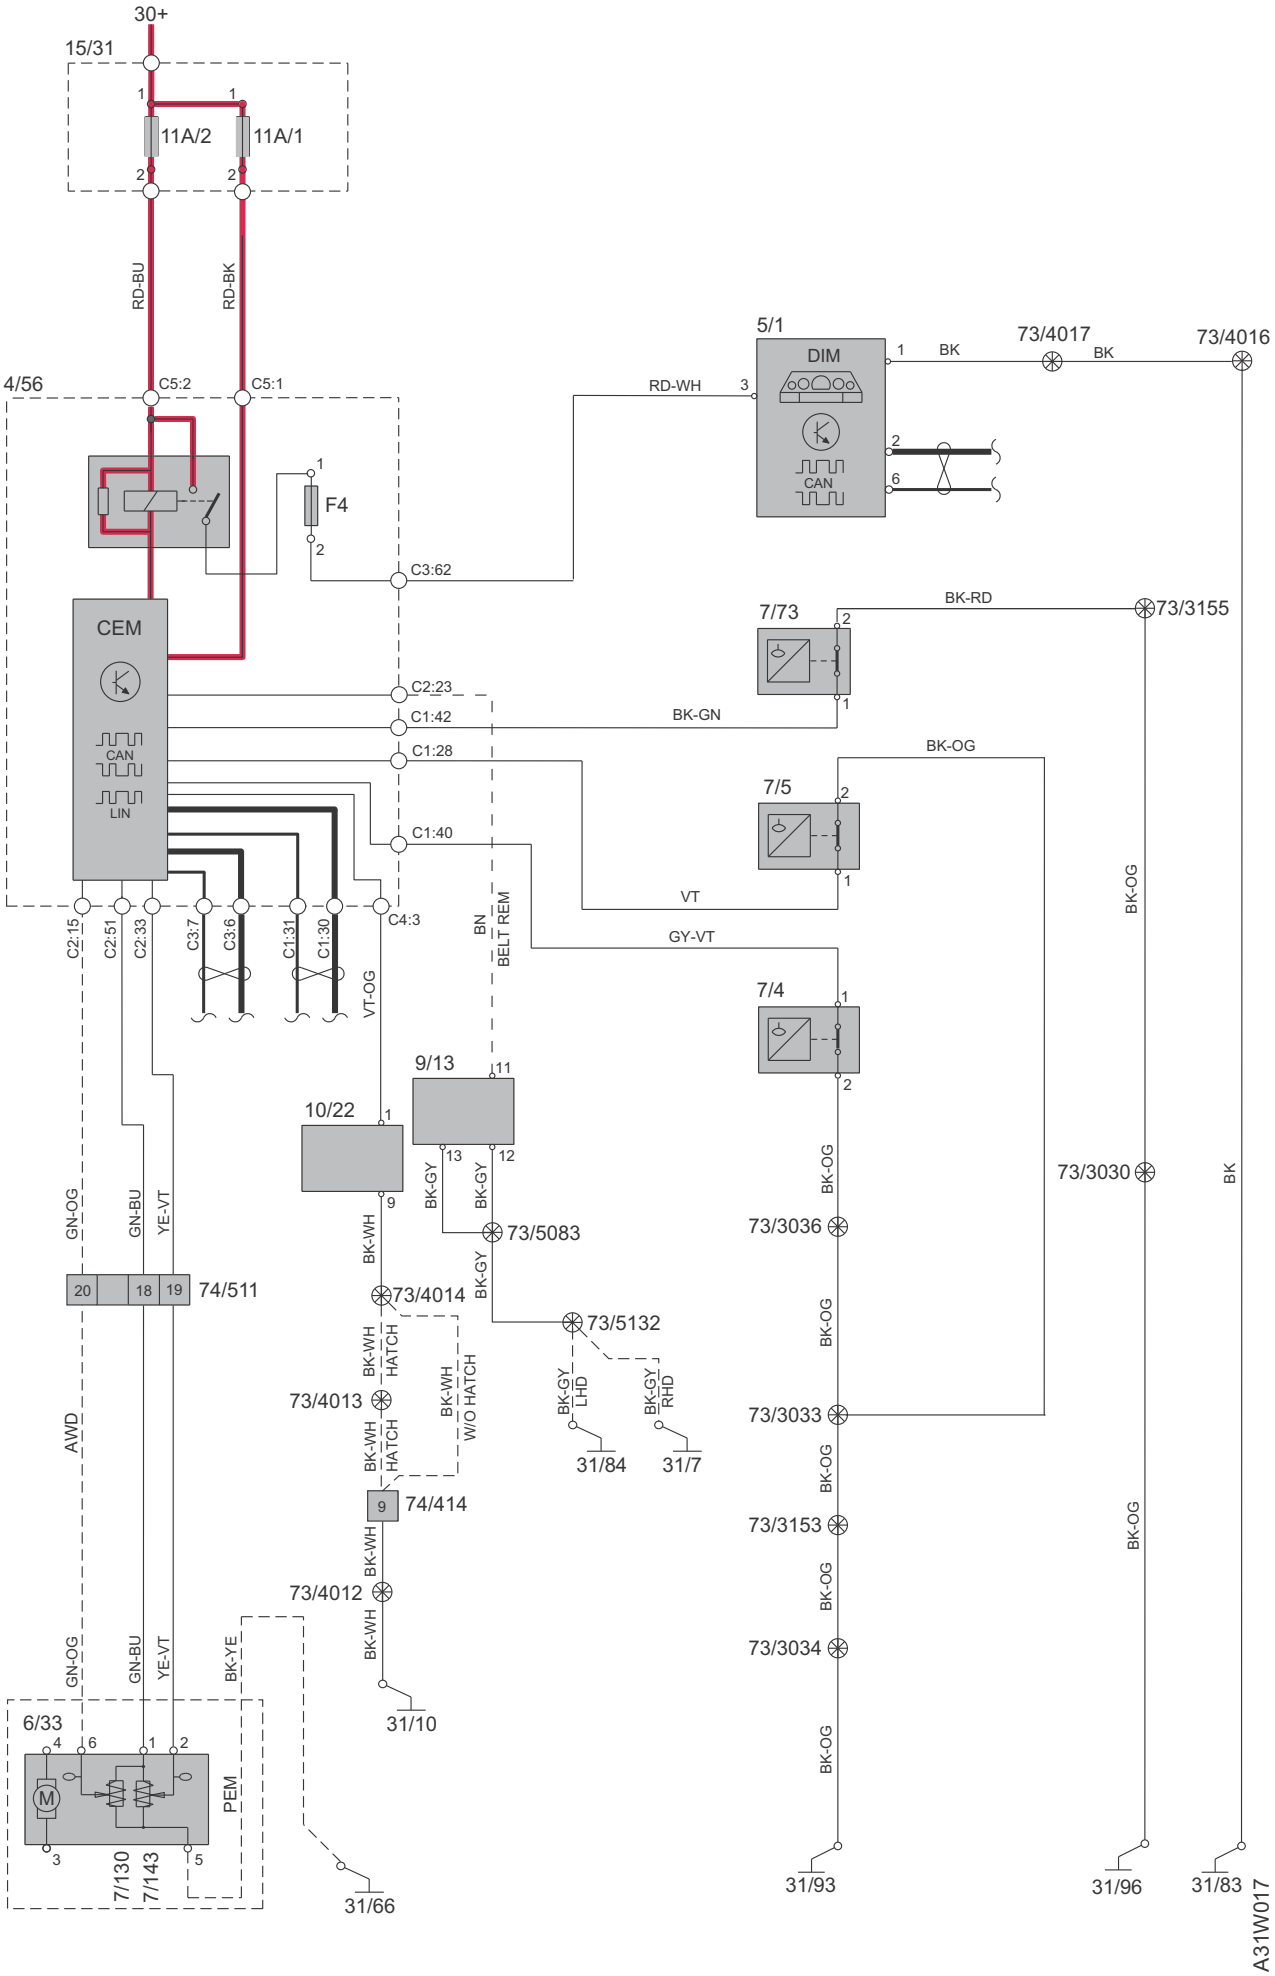
30+
15/31
11A/2
11A/1
RD-BU
RD-BK
4/56
C5:2
C5:1
F4
C3:62
CEM
CAN
LIN
C2:23
C1:42
C1:28
C1:40
C4:3
C2:15
C2:51
C2:33
C3:7
C3:6
C1:31
C1:30
VT-OG
BN
BELT REM
5/1
DIM
RD-WH
73/4017
73/4016
BK
7/73
BK-RD
73/3155
BK-GN
7/5
BK-OG
VT
GY-VT
7/4
9/13
10/22
BK-GY
73/5083
BK-WH
73/4014
73/5132
73/4013
BK-WH HATCH
BK-WH W/O HATCH
BK-GY LHD
BK-GY RHD
31/84
31/7
74/414
73/4012
31/10
73/3030
73/3036
73/3033
73/3153
73/3034
31/93
31/96
31/83
GN-OG
GN-BU
YE-VT
20
18
19
74/511
AWD
BK-YE
6/33
PEM
7/130
7/143
31/66
A31W017

Group 39 Other
Audio Premium 1:3

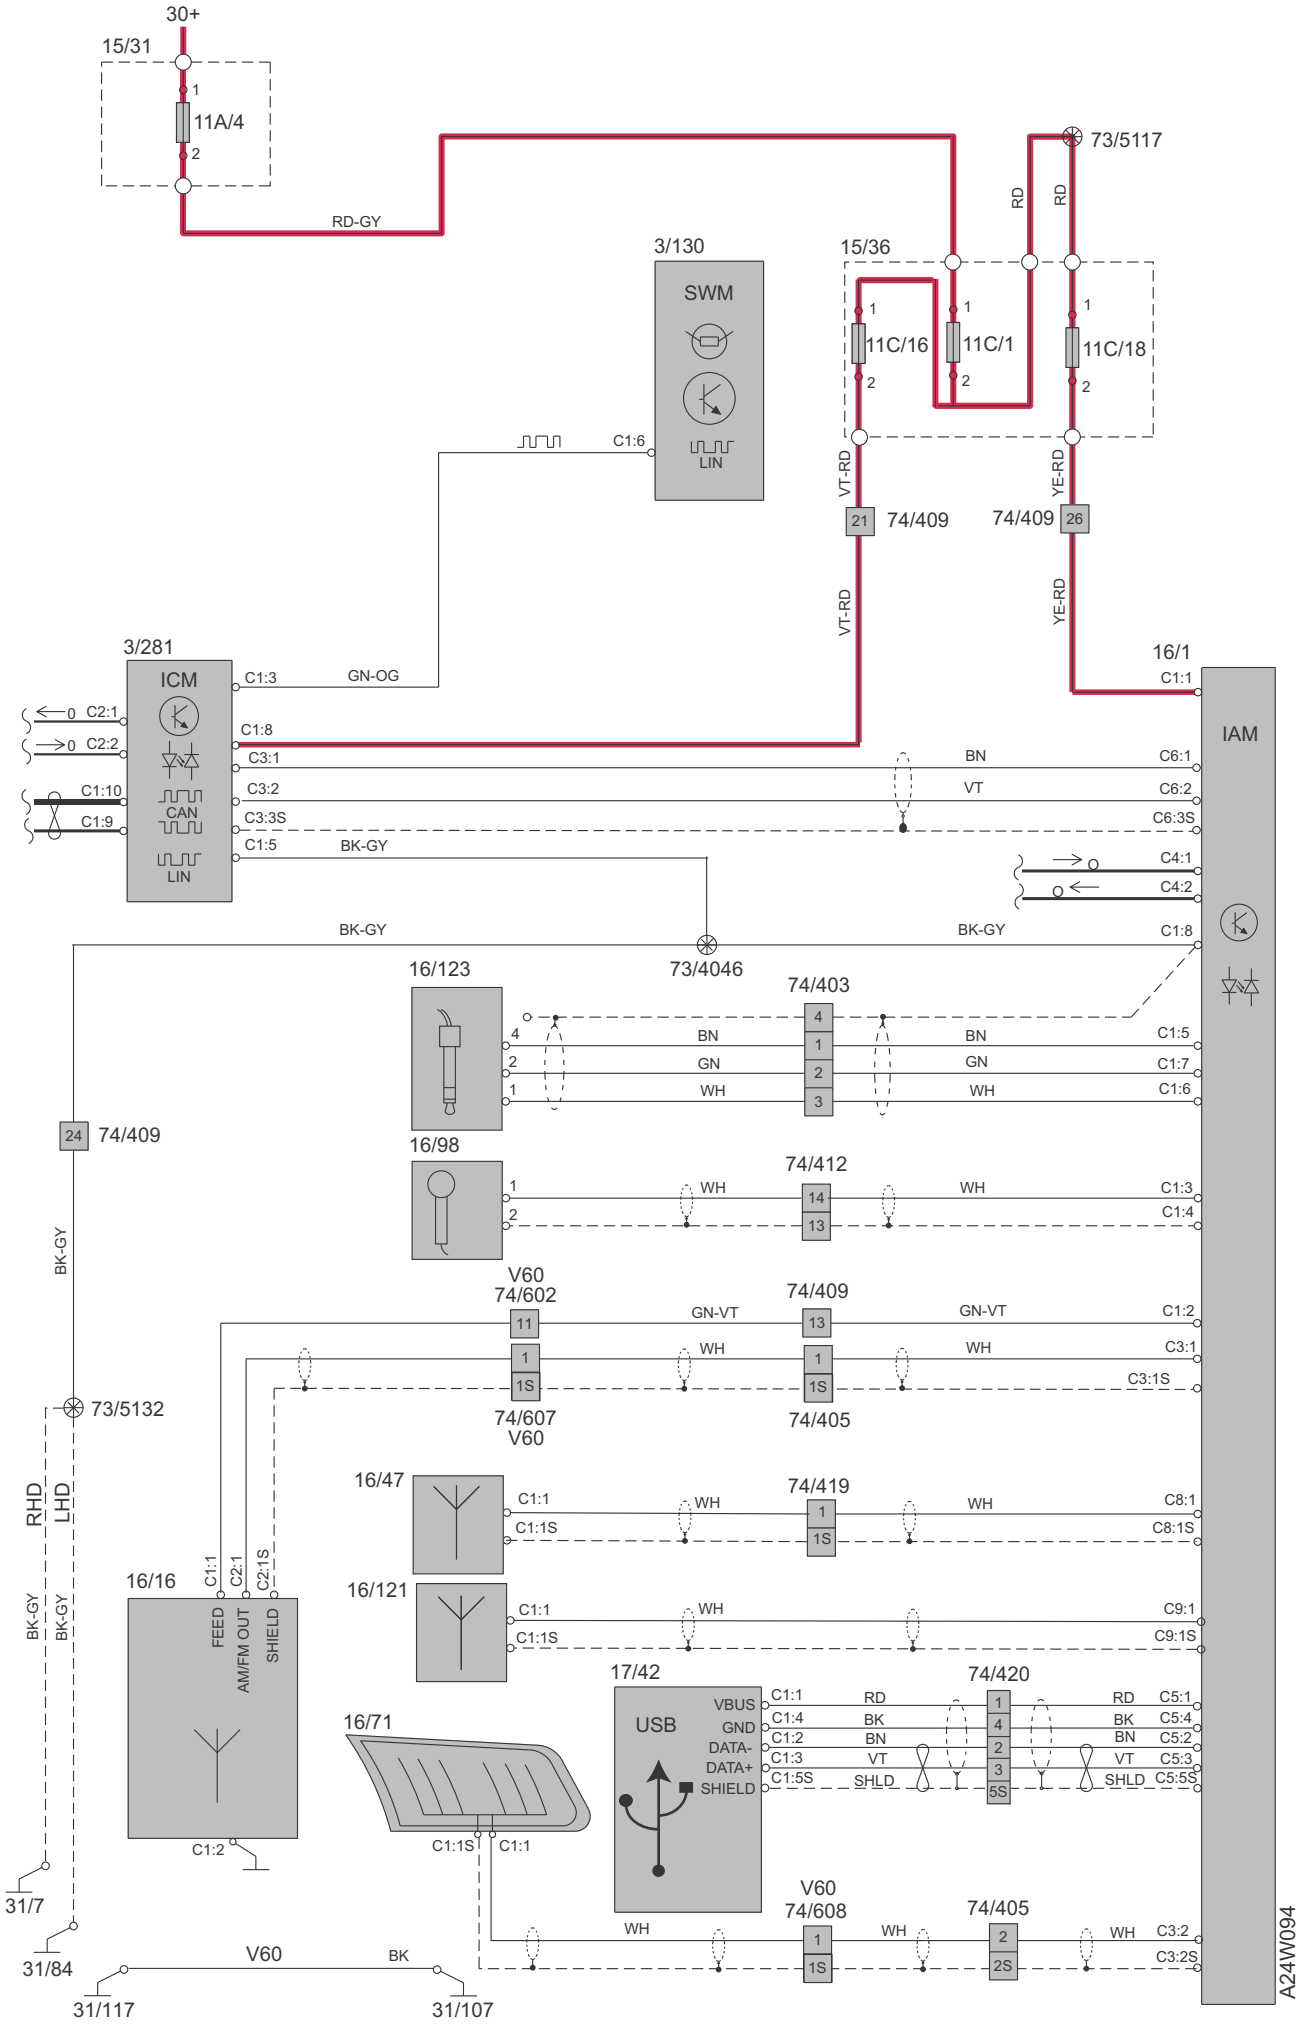

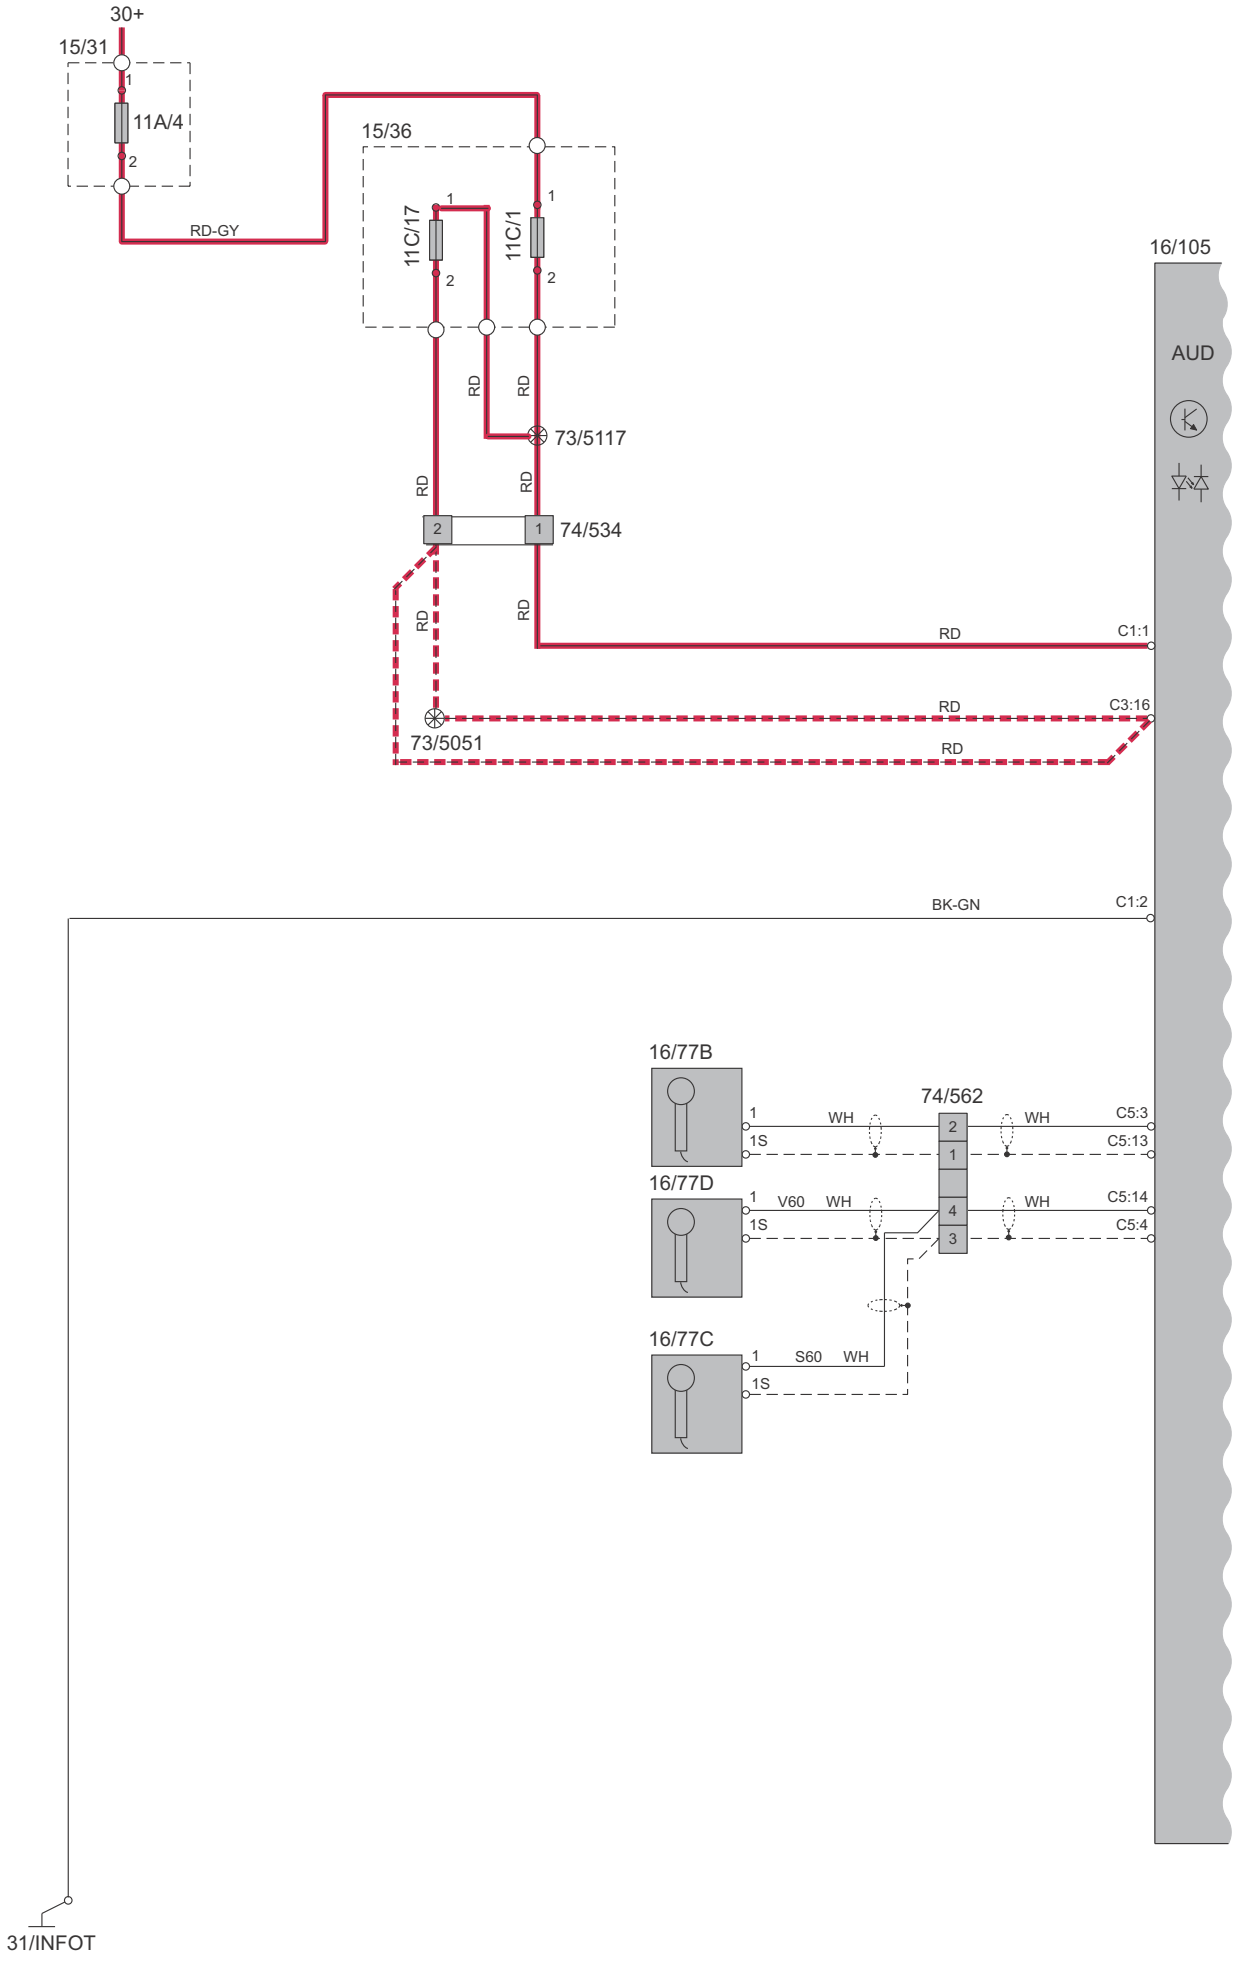
30+
15/31
1
11A/4
2
RD-GY
15/36
11C/17
11C/1
1
2
RD
73/5117
74/534
73/5051
16/105
AUD
C1:1
C3:16
BK-GN
C1:2
16/77B
16/77D
16/77C
74/562
WH
V60
S60
1S
C5:3
C5:13
C5:14
C5:4
31/INFOT
A32W015

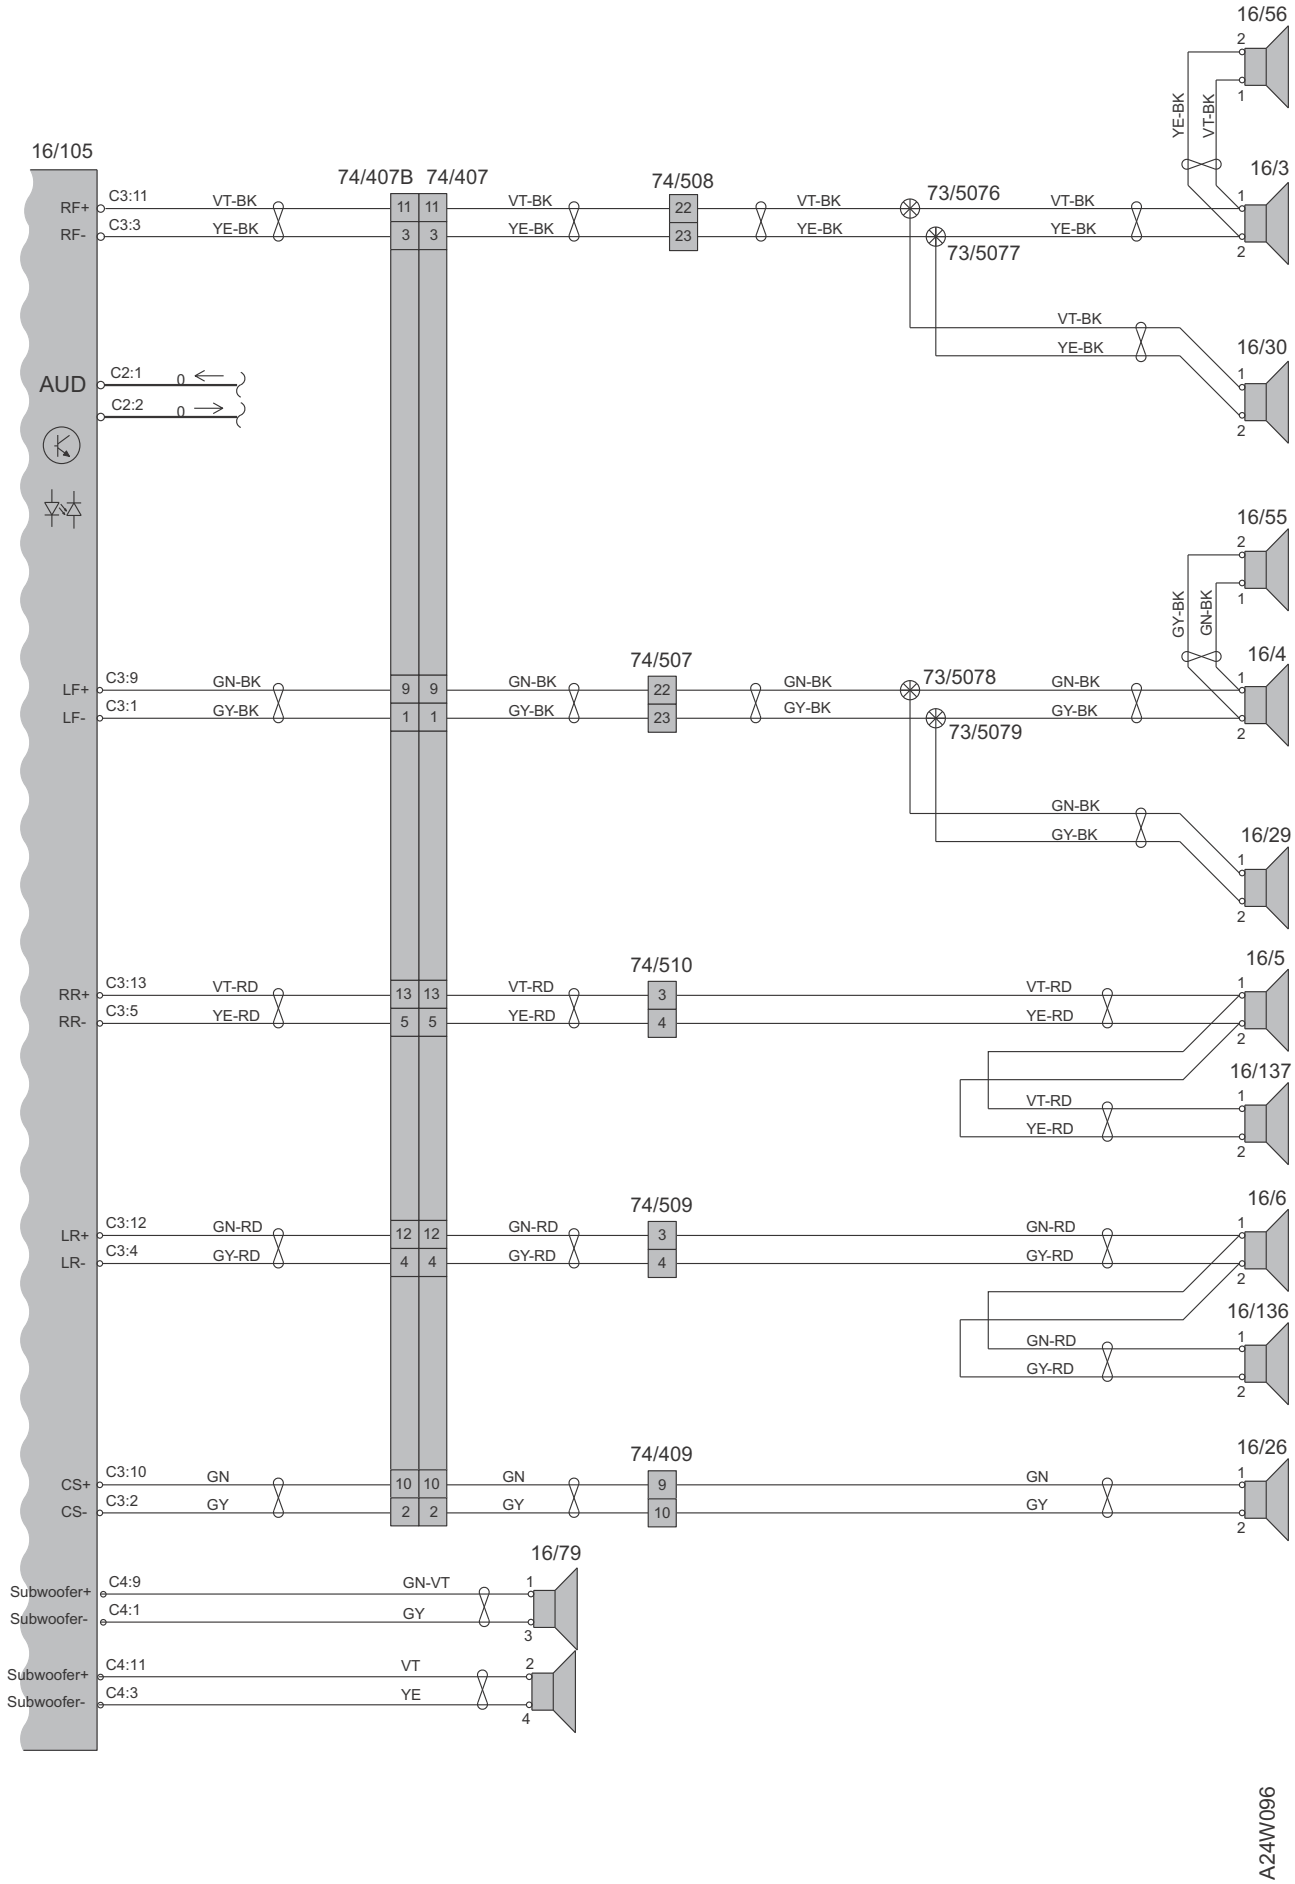
16/105
RF+
RF-
C3:11
C3:3
VT-BK
YE-BK
74/407B
74/407
11
3
74/508
22
23
73/5076
73/5077
16/56
YE-BK
VT-BK
16/3
16/30
AUD
C2:1
C2:2
16/55
GY-BK
GN-BK
LF+
LF-
C3:9
C3:1
GN-BK
GY-BK
9
1
74/507
73/5078
73/5079
16/4
16/29
RR+
RR-
C3:13
C3:5
VT-RD
YE-RD
13
5
74/510
16/5
16/137
LR+
LR-
C3:12
C3:4
GN-RD
GY-RD
12
4
74/509
16/6
16/136
CS+
CS-
C3:10
C3:2
GN
GY
10
2
74/409
16/26
16/79
Subwoofer+
Subwoofer-
C4:9
C4:1
C4:11
C4:3
GN-VT
GY
VT
YE

A24W096

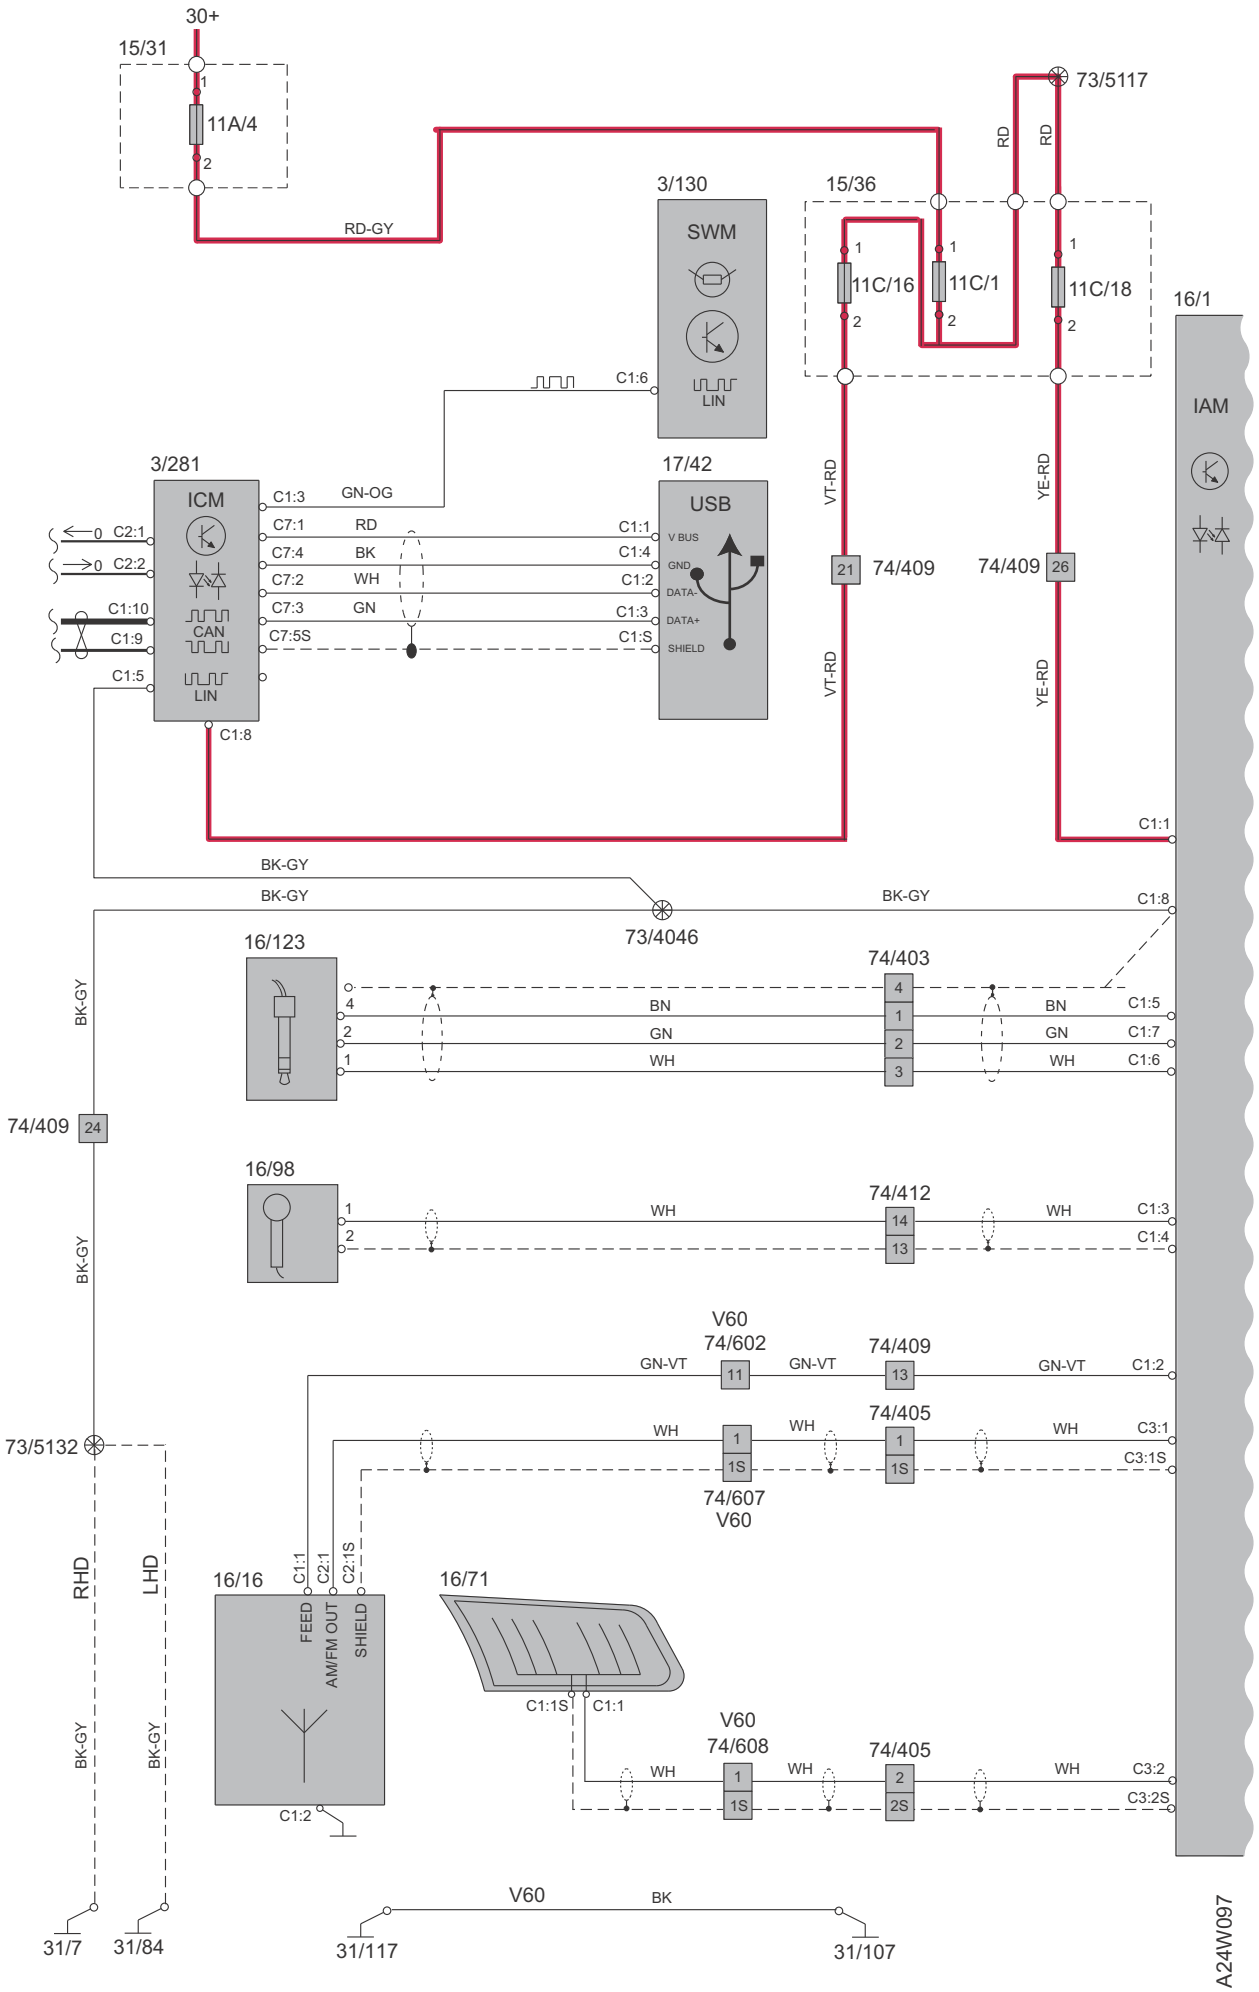
30+
15/31
11A/4
RD-GY
73/5117
RD
RD
3/130
SWM
LIN
C1:6
15/36
11C/16
11C/1
11C/18
16/1
IAM
3/281
ICM
C1:3
GN-OG
C7:1
RD
C7:4
BK
C7:2
WH
C7:3
GN
C7:5S
C2:1
C2:2
C1:10
C1:9
C1:5
CAN
LIN
C1:8
17/42
USB
V BUS
GND
DATA-
DATA+
SHIELD
C1:1
C1:4
C1:2
C1:3
C1:S
VT-RD
VT-RD
21
74/409
YE-RD
YE-RD
74/409
26
C1:1
BK-GY
BK-GY
73/4046
BK-GY
C1:8
16/123
74/403
4
BN
2
GN
1
WH
BN
C1:5
GN
C1:7
WH
C1:6
74/409
24
BK-GY
16/98
74/412
1
2
WH
14
13
WH
C1:3
C1:4
V60
74/602
GN-VT
11
GN-VT
74/409
13
GN-VT
C1:2
73/5132
WH
1
1S
WH
74/405
1
1S
WH
C3:1
C3:1S
74/607
V60
RHD
LHD
16/16
C1:1
C2:1
C2:1S
FEED
AM/FM OUT
SHIELD
C1:2
16/71
C1:1S
C1:1
V60
74/608
WH
1
1S
WH
74/405
2
2S
WH
C3:2
C3:2S
BK-GY
BK-GY
V60
BK
31/7
31/84
31/117
31/107
A24W097

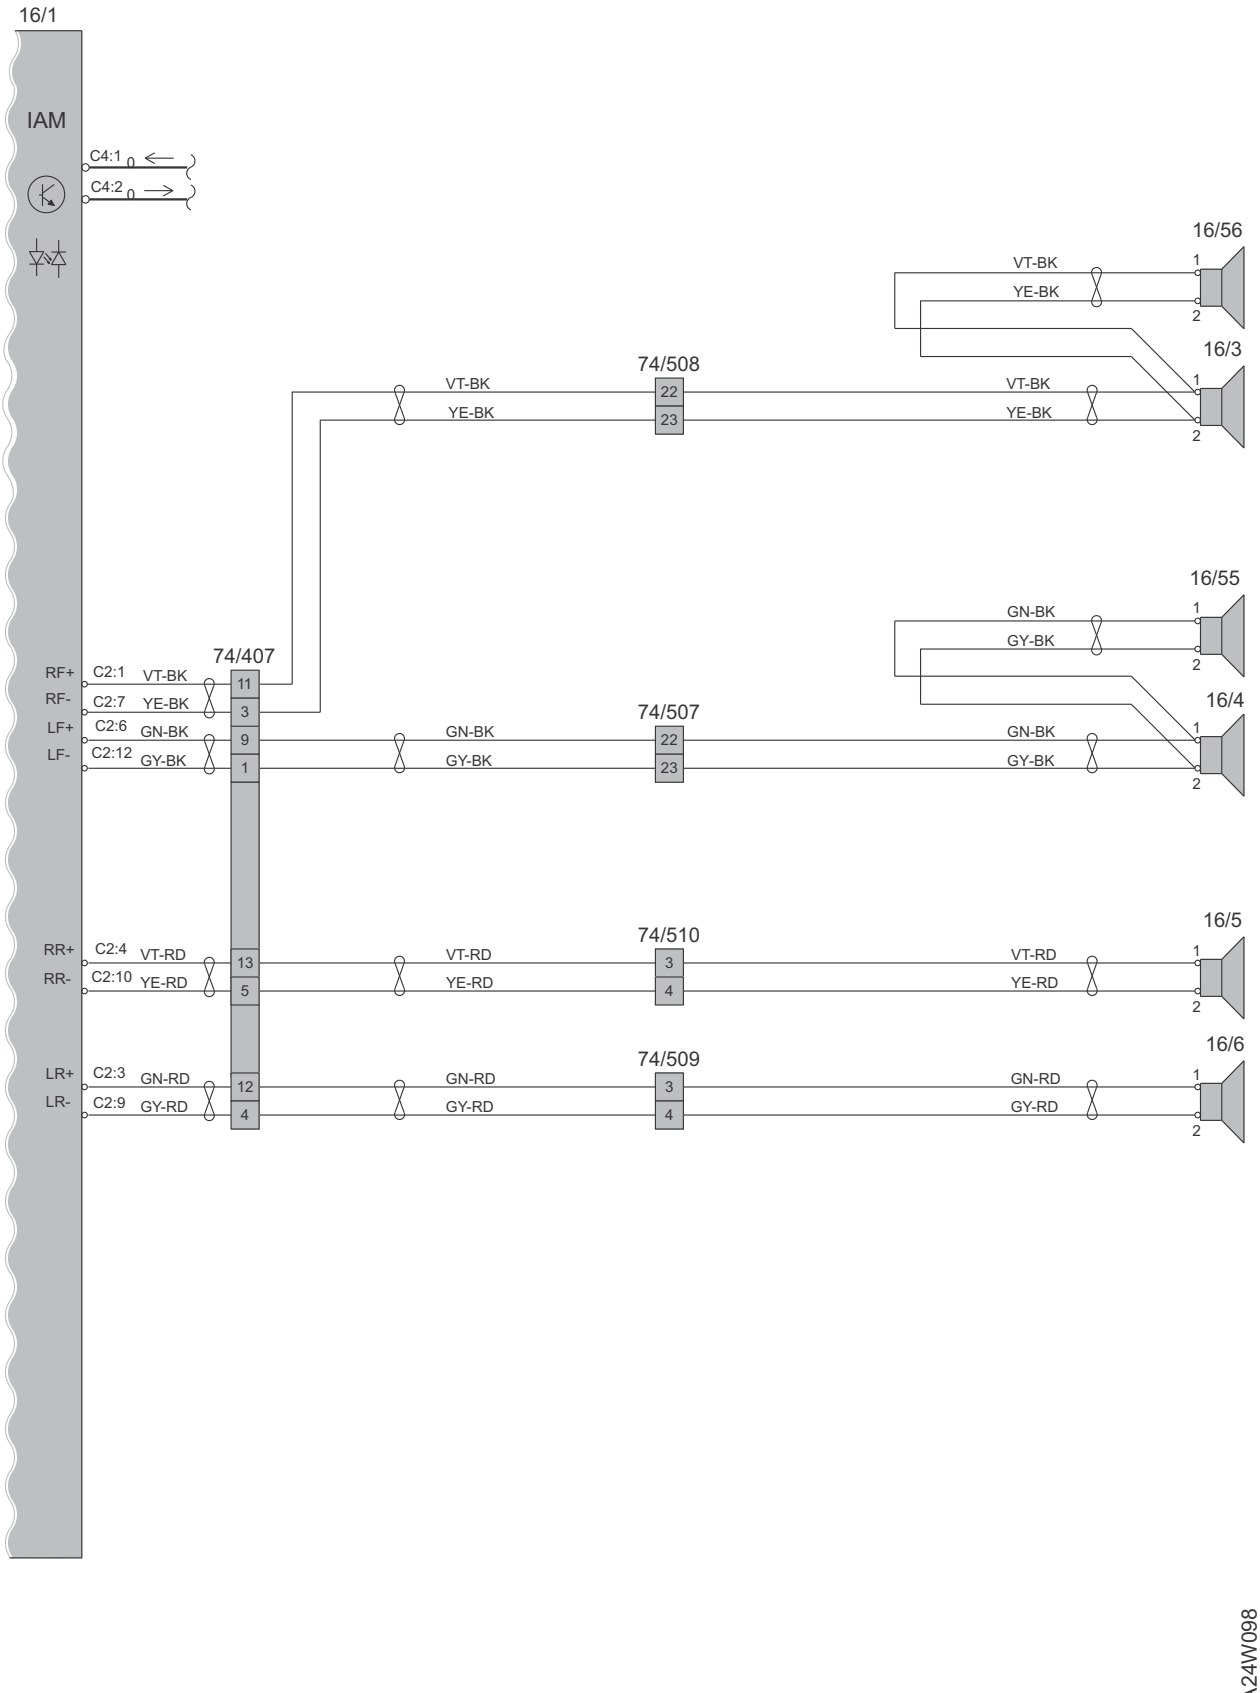
16/1
IAM
C4:1
C4:2
16/56
VT-BK
YE-BK
16/3
74/508
VT-BK
YE-BK
22
23
16/55
GN-BK
GY-BK
74/407
RF+
RF-
LF+
LF-
C2:1
C2:7
C2:6
C2:12
VT-BK
YE-BK
GN-BK
GY-BK
11
3
9
1
74/507
16/4
RR+
RR-
LR+
LR-
C2:4
C2:10
C2:3
C2:9
VT-RD
YE-RD
GN-RD
GY-RD
13
5
12
4
74/510
16/5
74/509
16/6

A24W098

Group 39 Other
Cellular phone 1:2

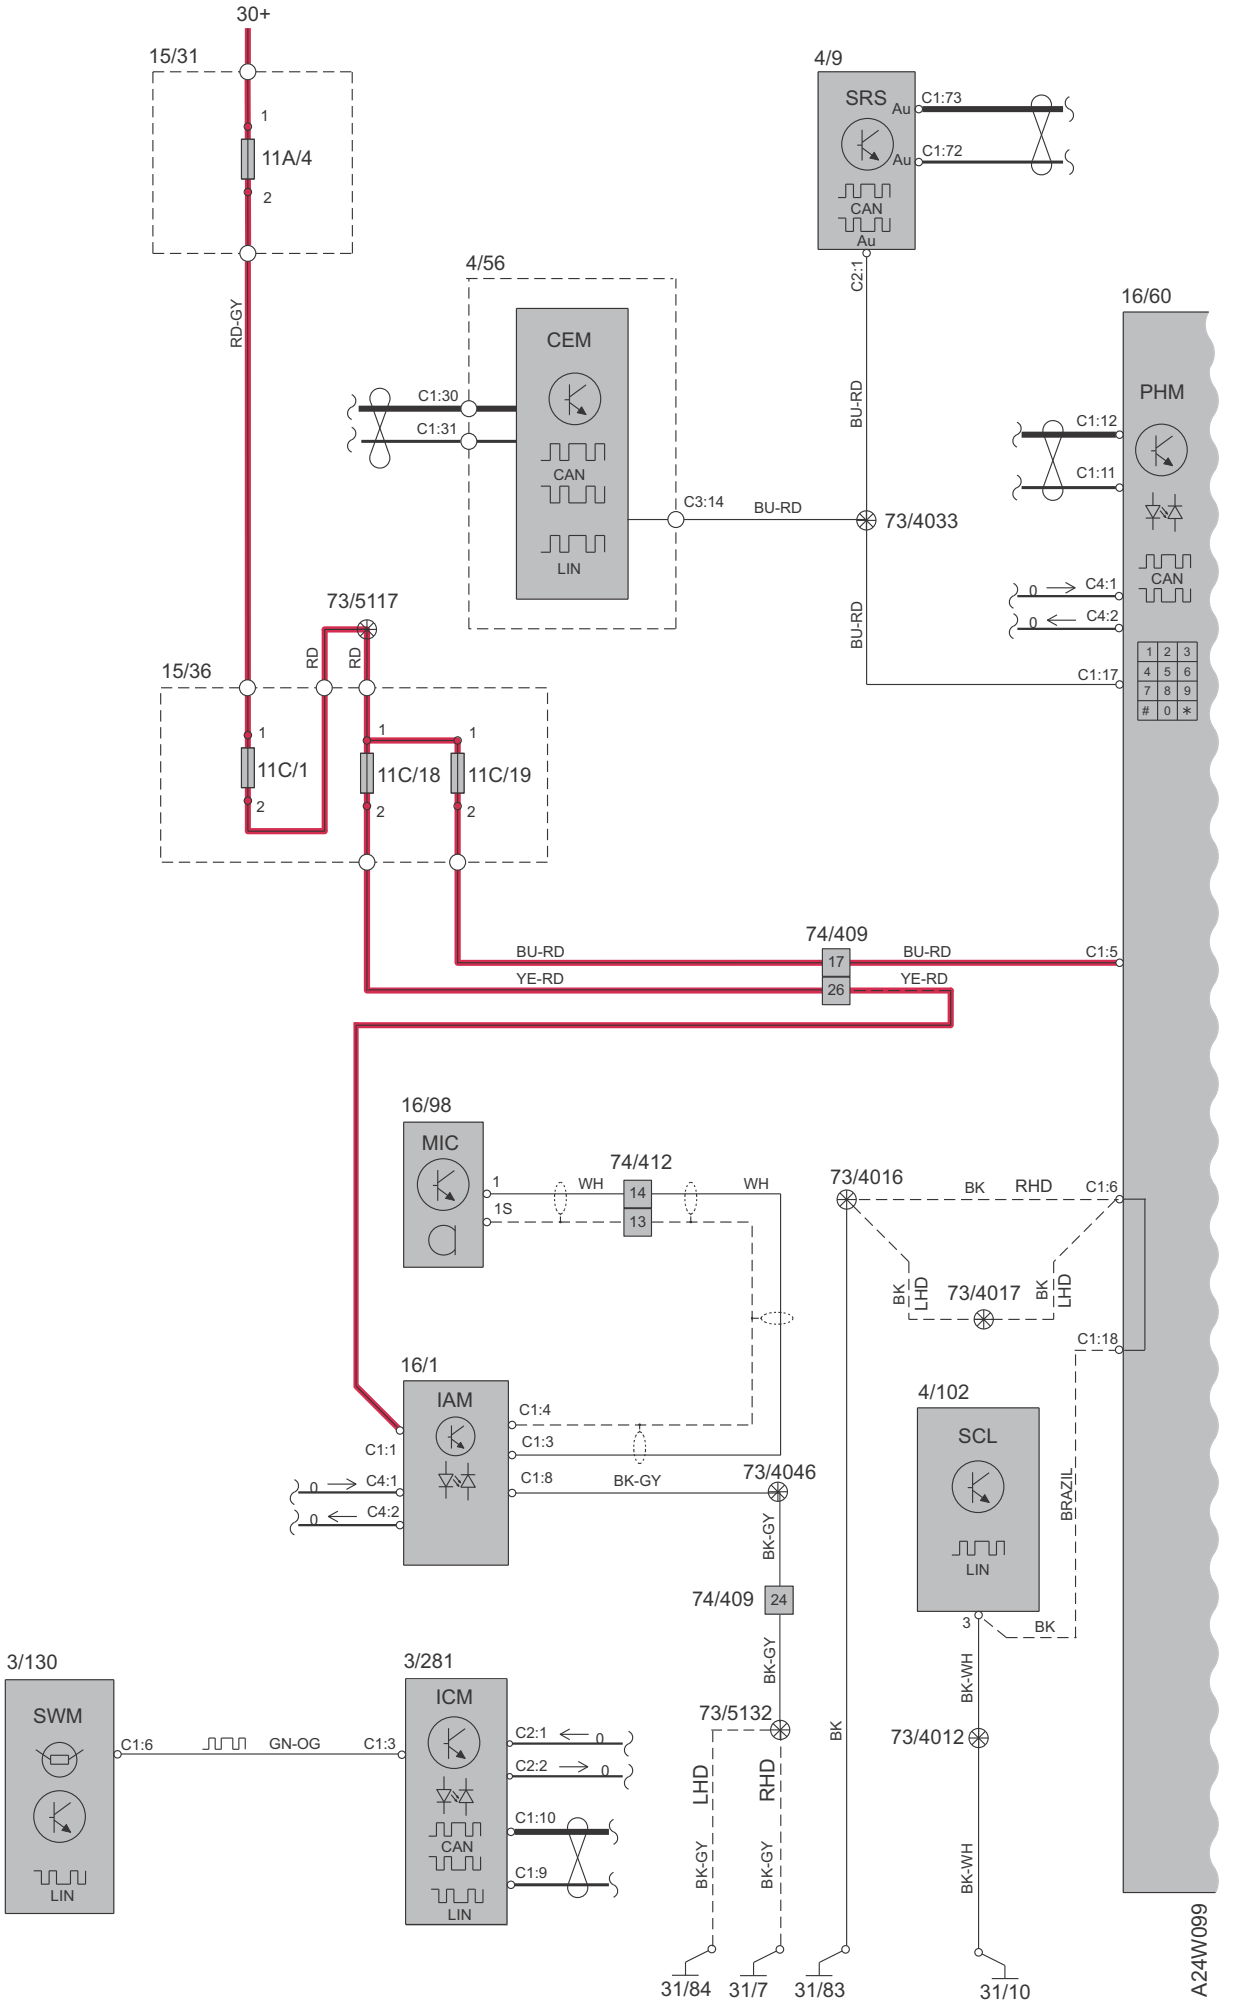

Group 39 Other
Cellular phone 2:2

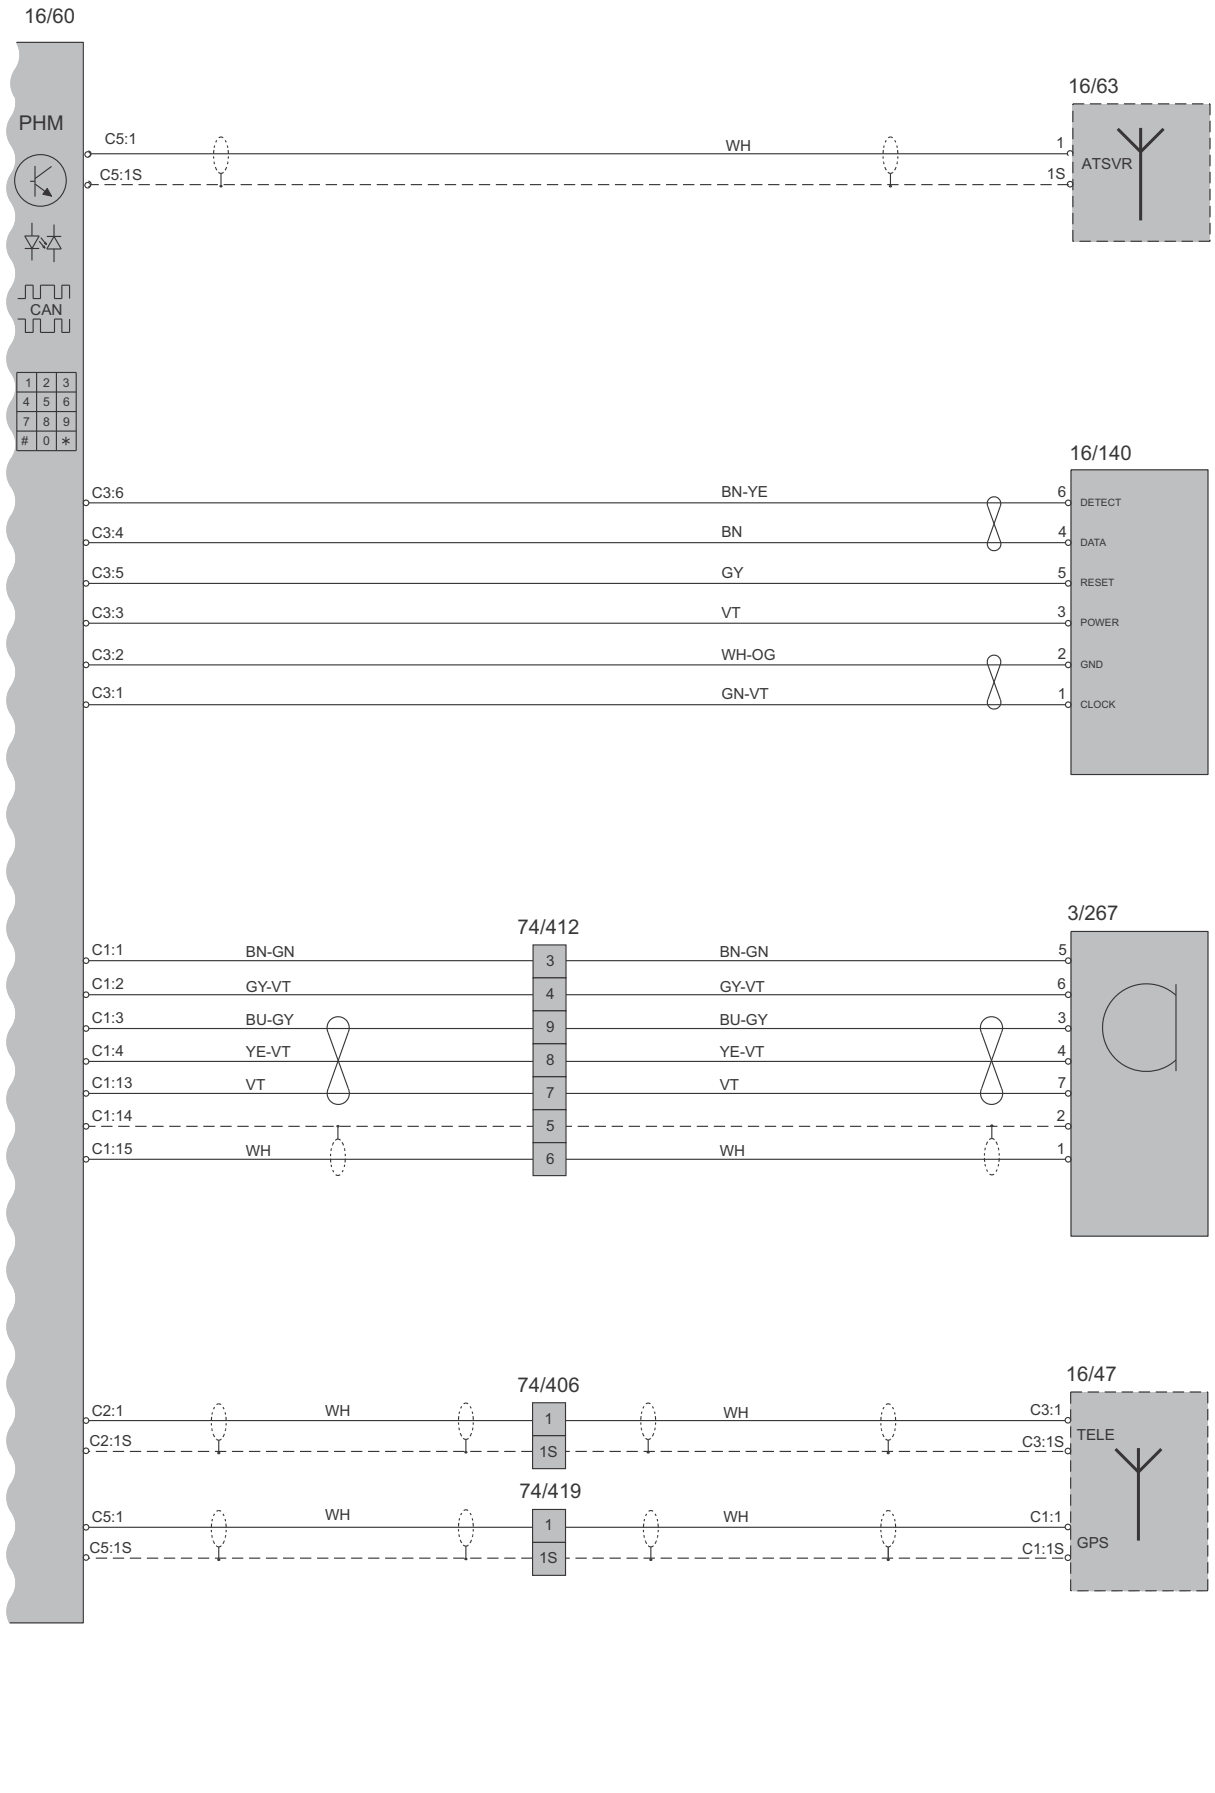

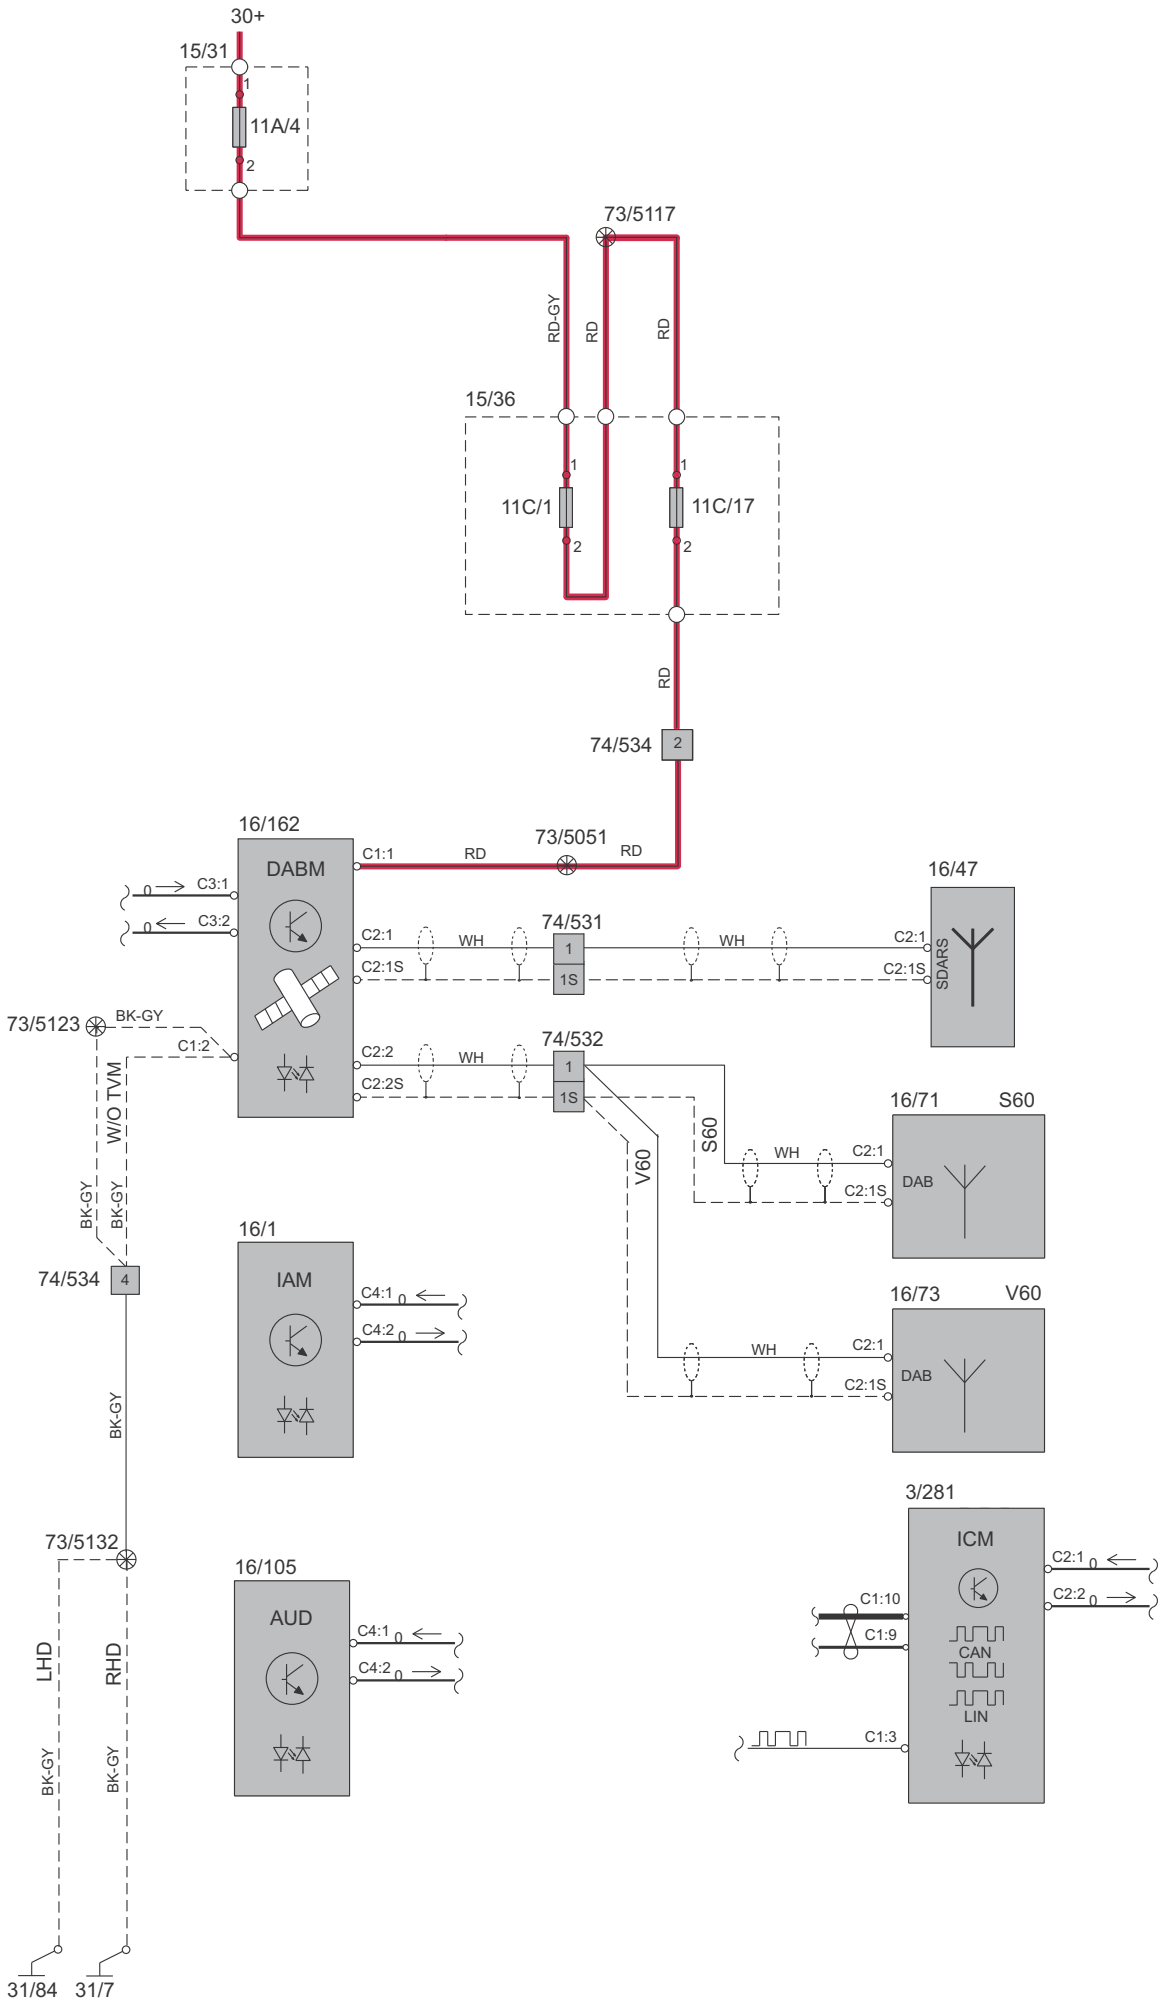
30+
15/31
1
11A/4
2
73/5117
RD-GY
RD
RD
15/36
1
11C/1
2
1
11C/17
2
RD
74/534
2
16/162
DABM
C1:1
RD
73/5051
RD
C3:1
C3:2
C2:1
C2:1S
WH
74/531
1
1S
WH
16/47
C2:1
C2:1S
SDARS
73/5123
BK-GY
C1:2
C2:2
C2:2S
WH
74/532
1
1S
W/O TVM
BK-GY
BK-GY
S60
V60
16/71
S60
WH
C2:1
C2:1S
DAB
16/1
IAM
74/534
4
C4:1
C4:2
16/73
V60
WH
C2:1
C2:1S
DAB
BK-GY
3/281
ICM
73/5132
C2:1
C2:2
C1:10
C1:9
CAN
LIN
C1:3
16/105
AUD
C4:1
C4:2
LHD
RHD
BK-GY
BK-GY
31/84
31/7
A24W101

Group 39 Other, Accessories
Multimedia monitor with DVD, Dual Screen (RSE)

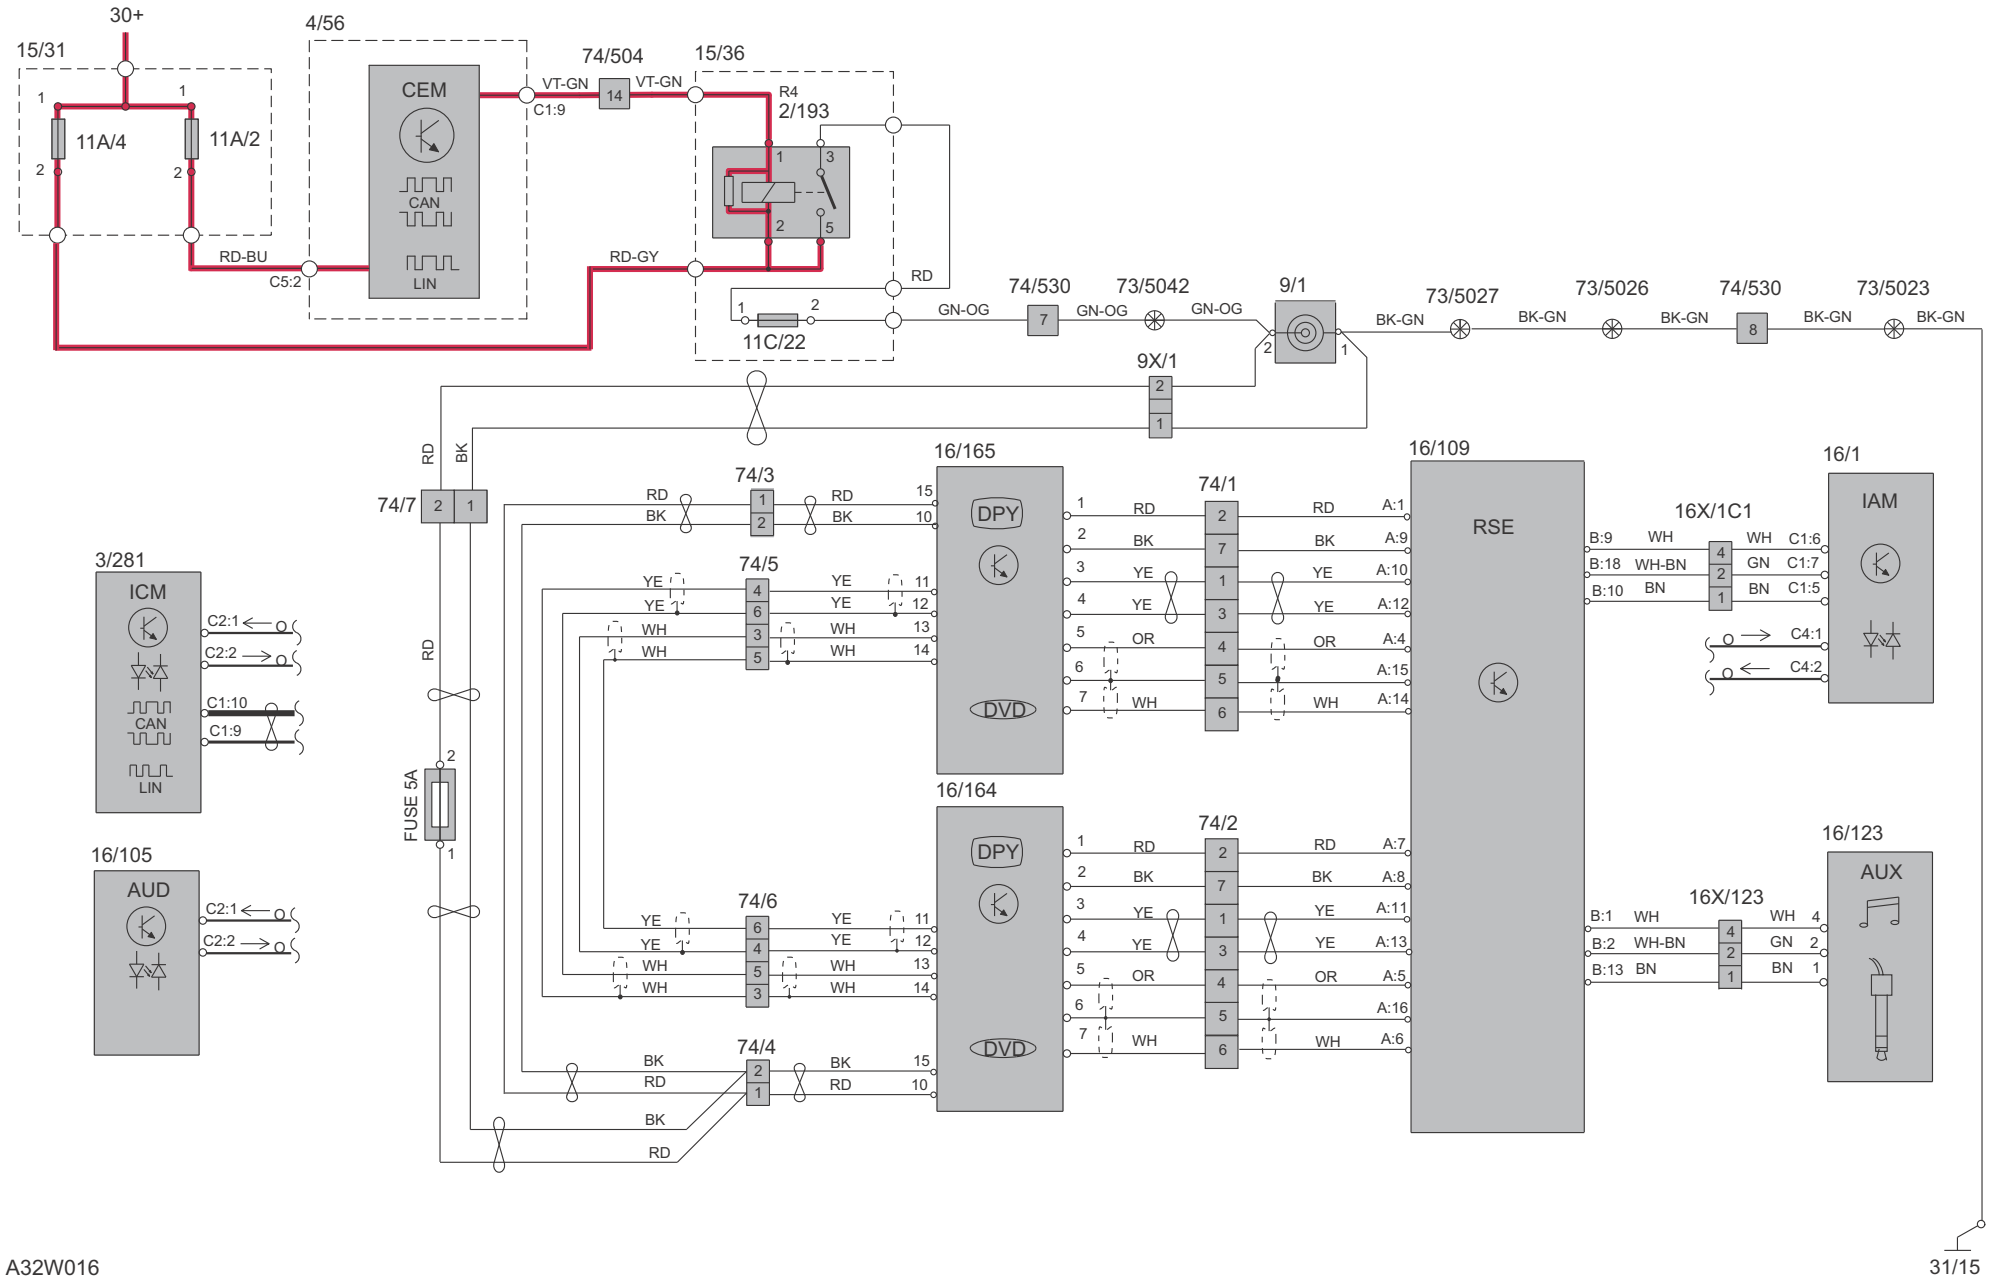

TV receiver / TV control module S60

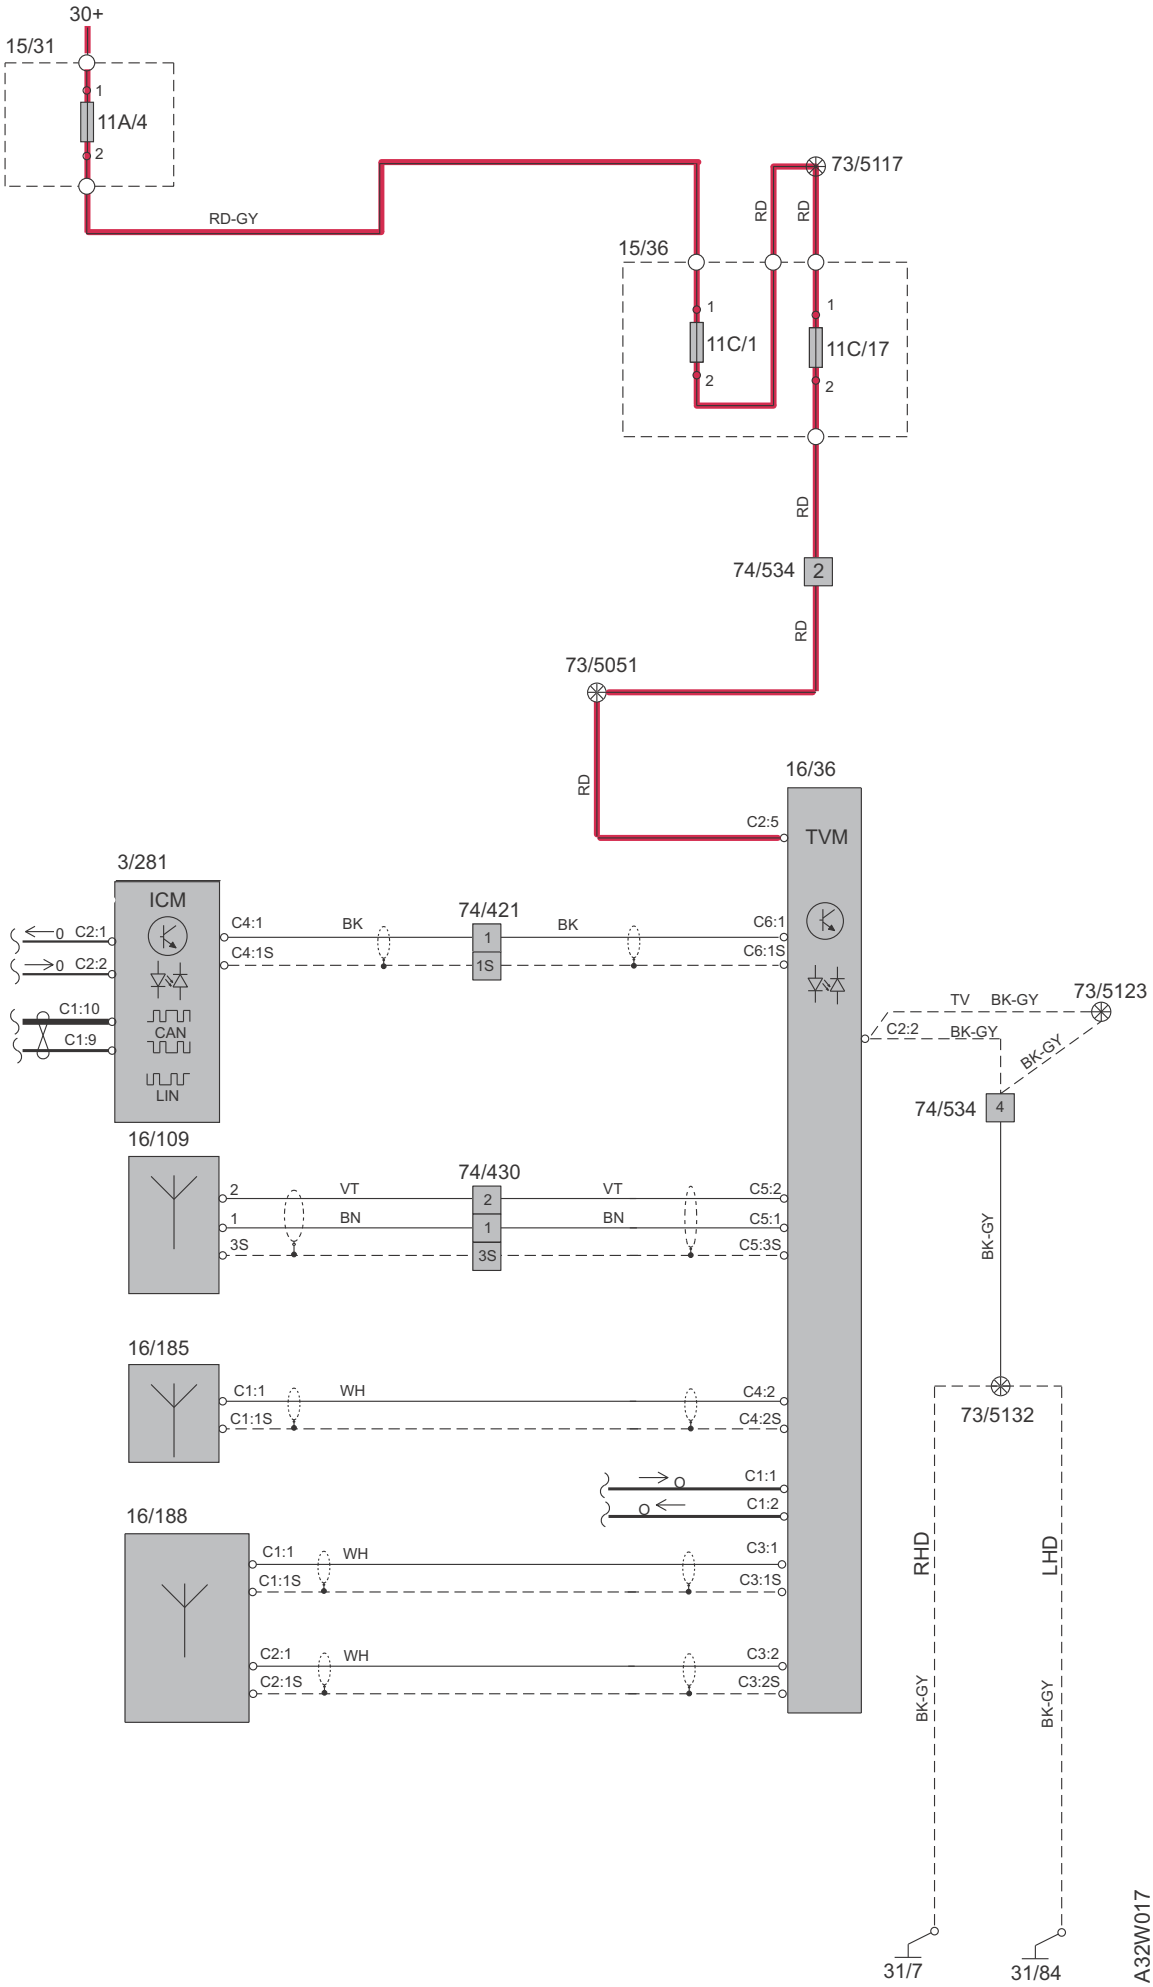

Group 39 Other
TV receiver / TV control module V60

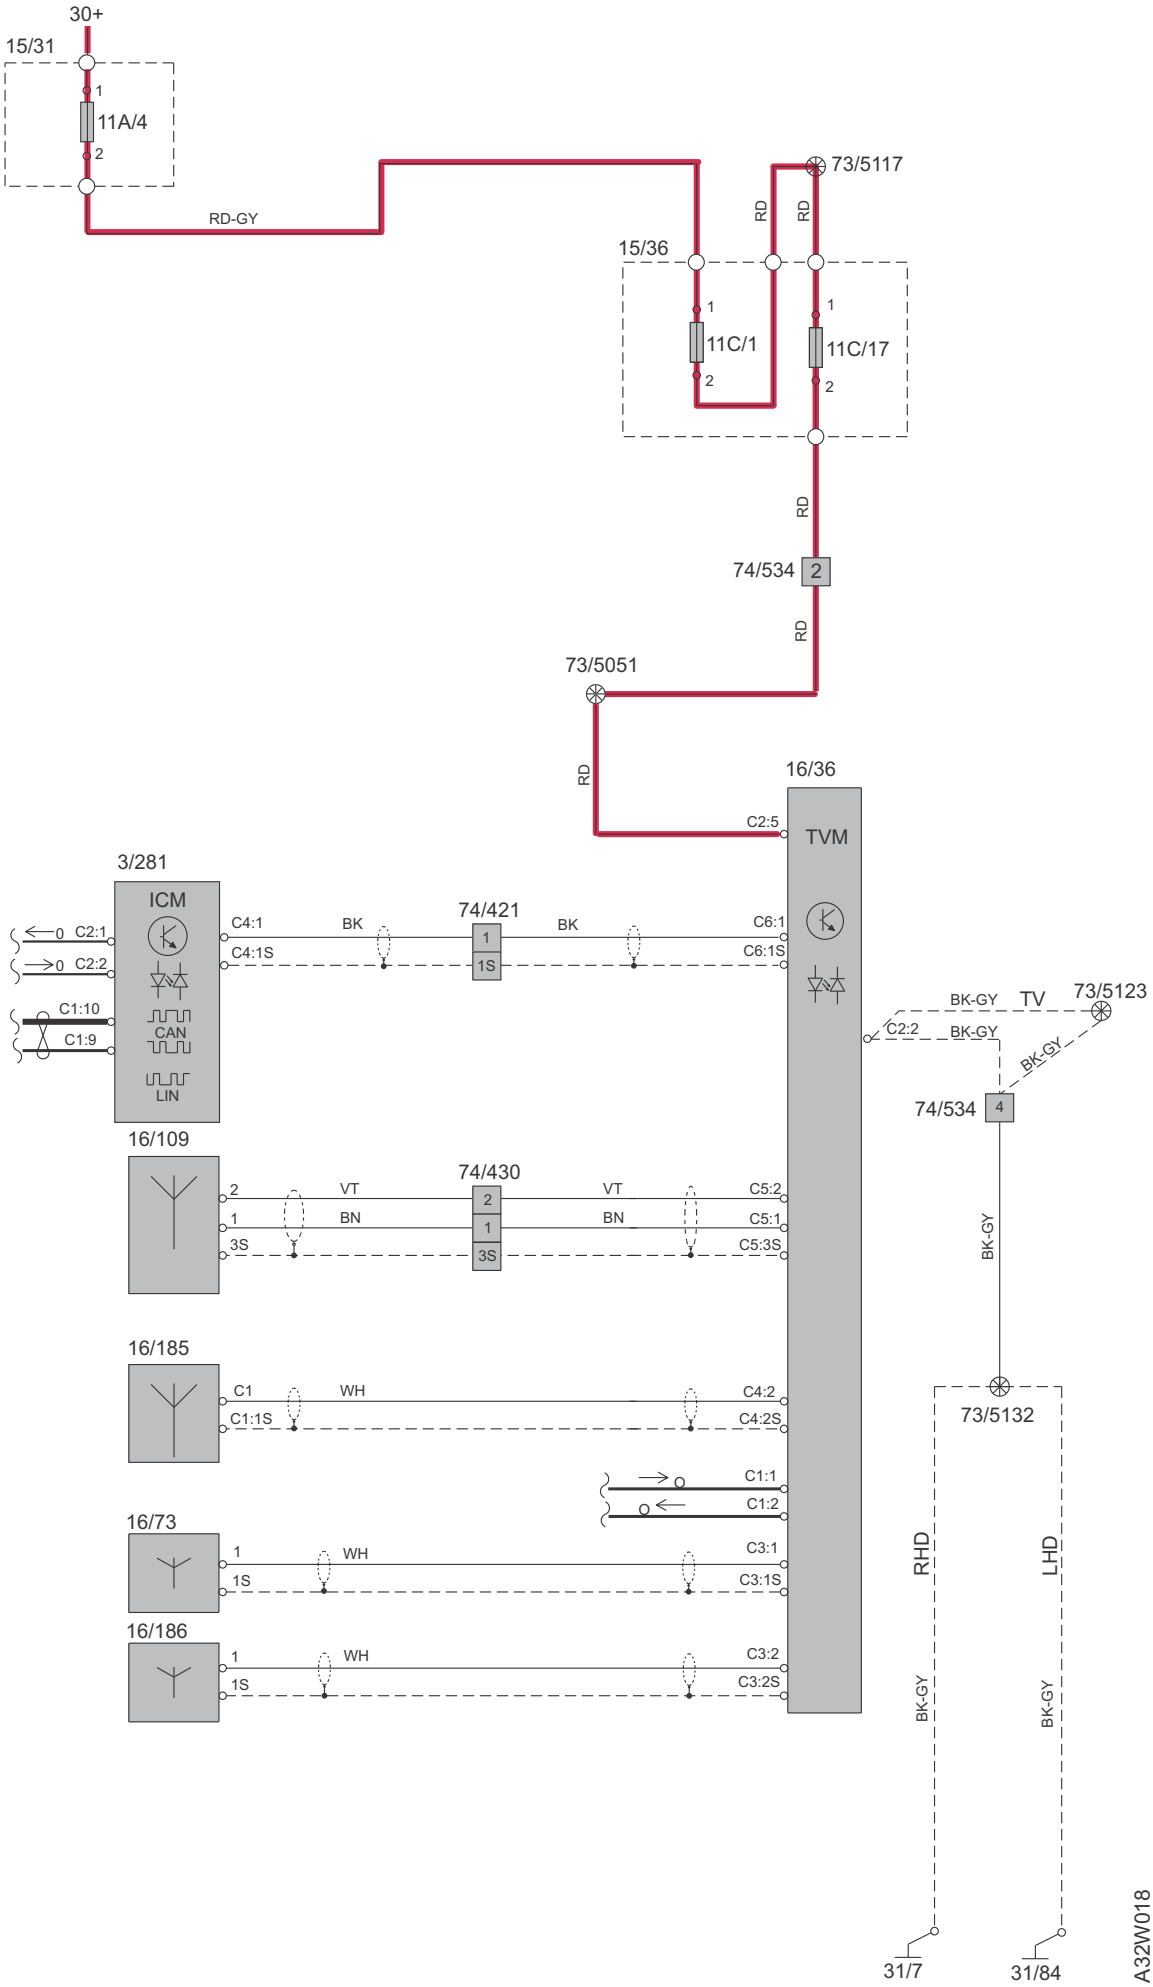

Group 39 Other, Accessories
Bluetooth Handsfree

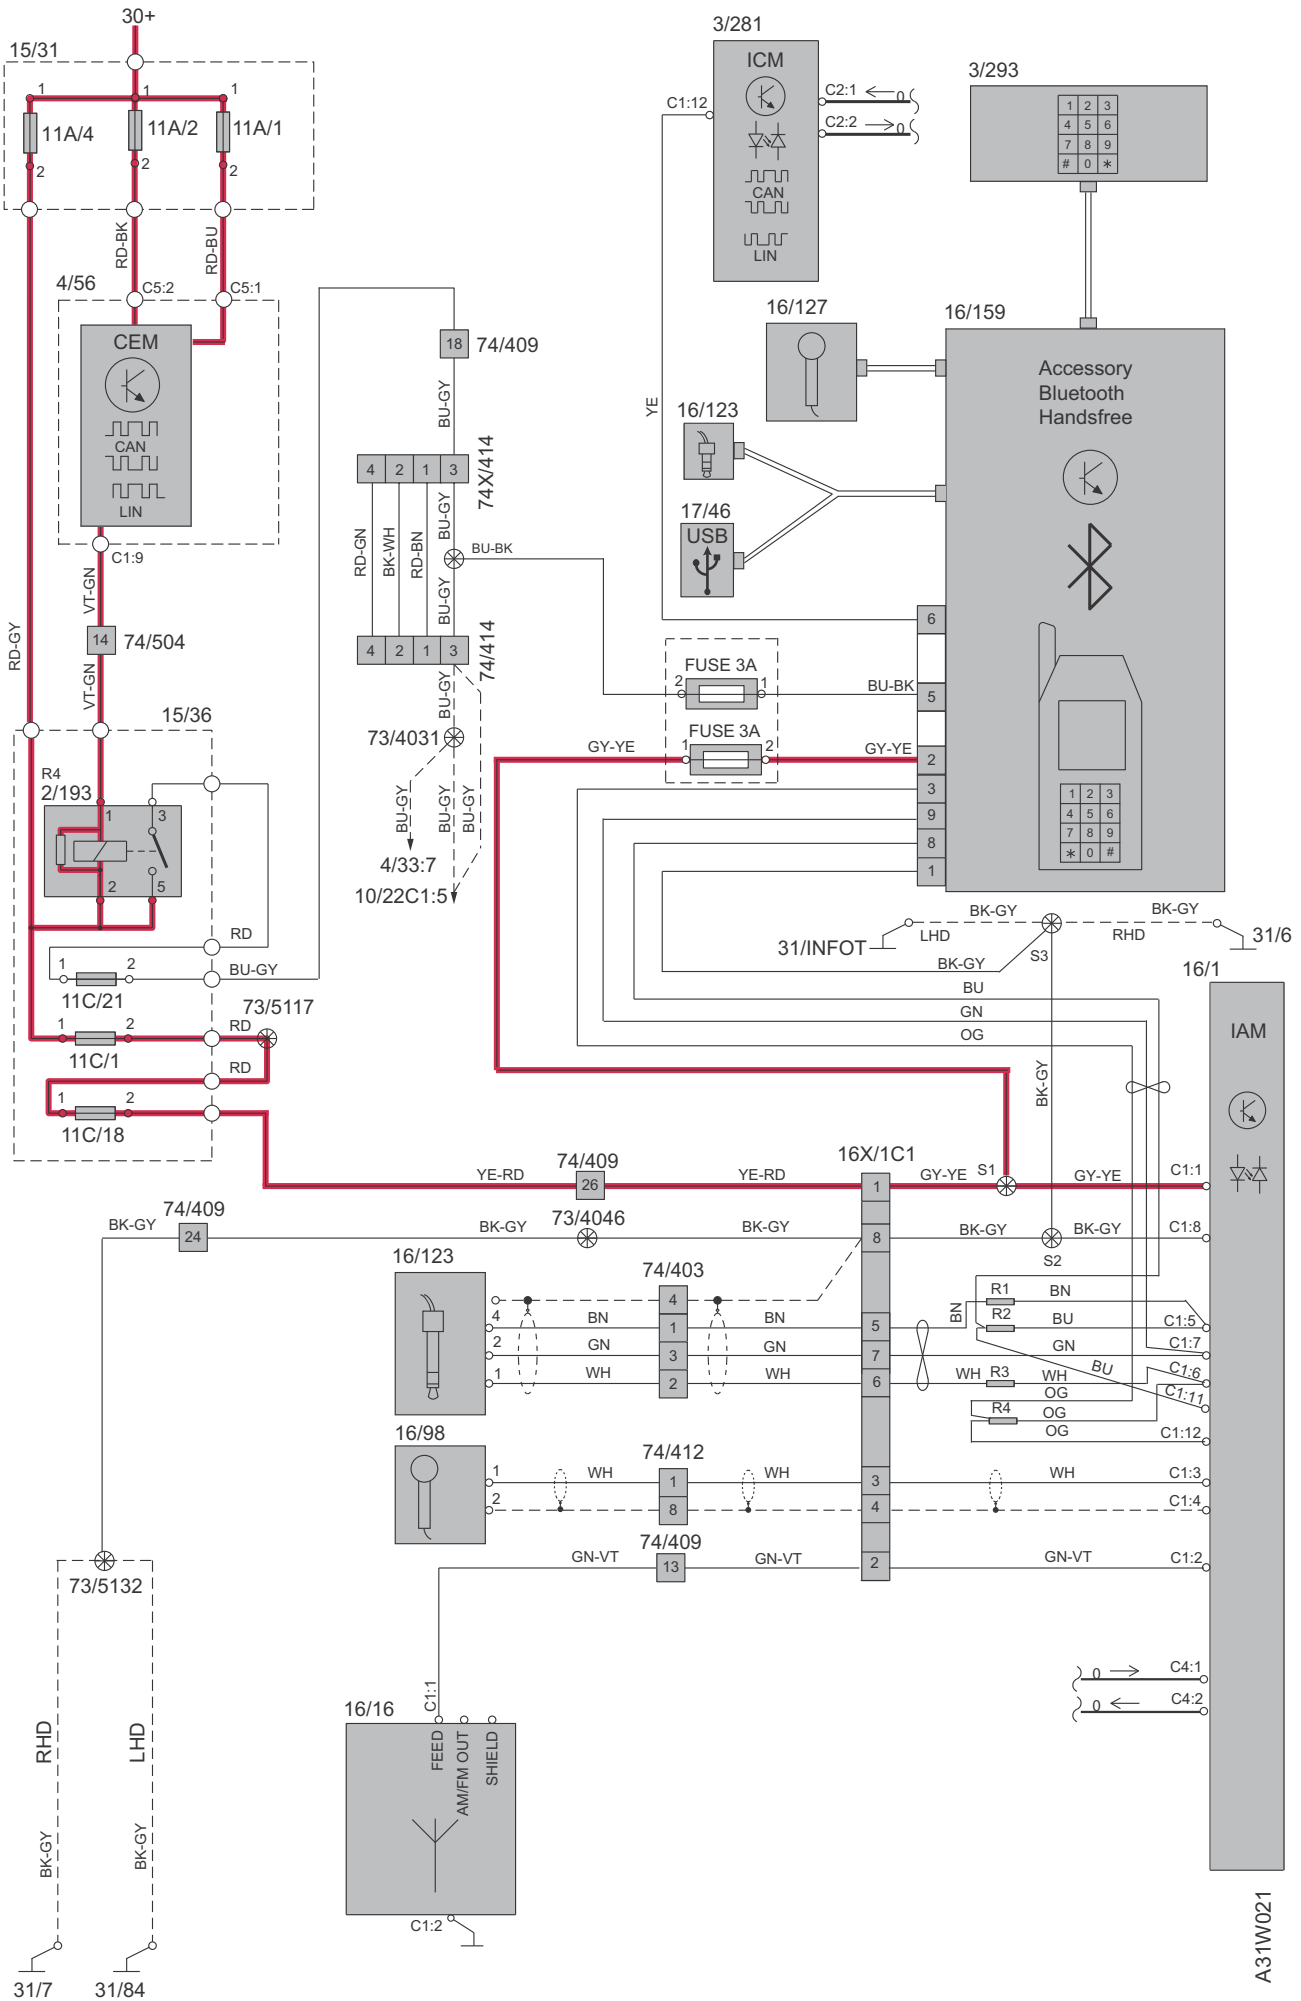

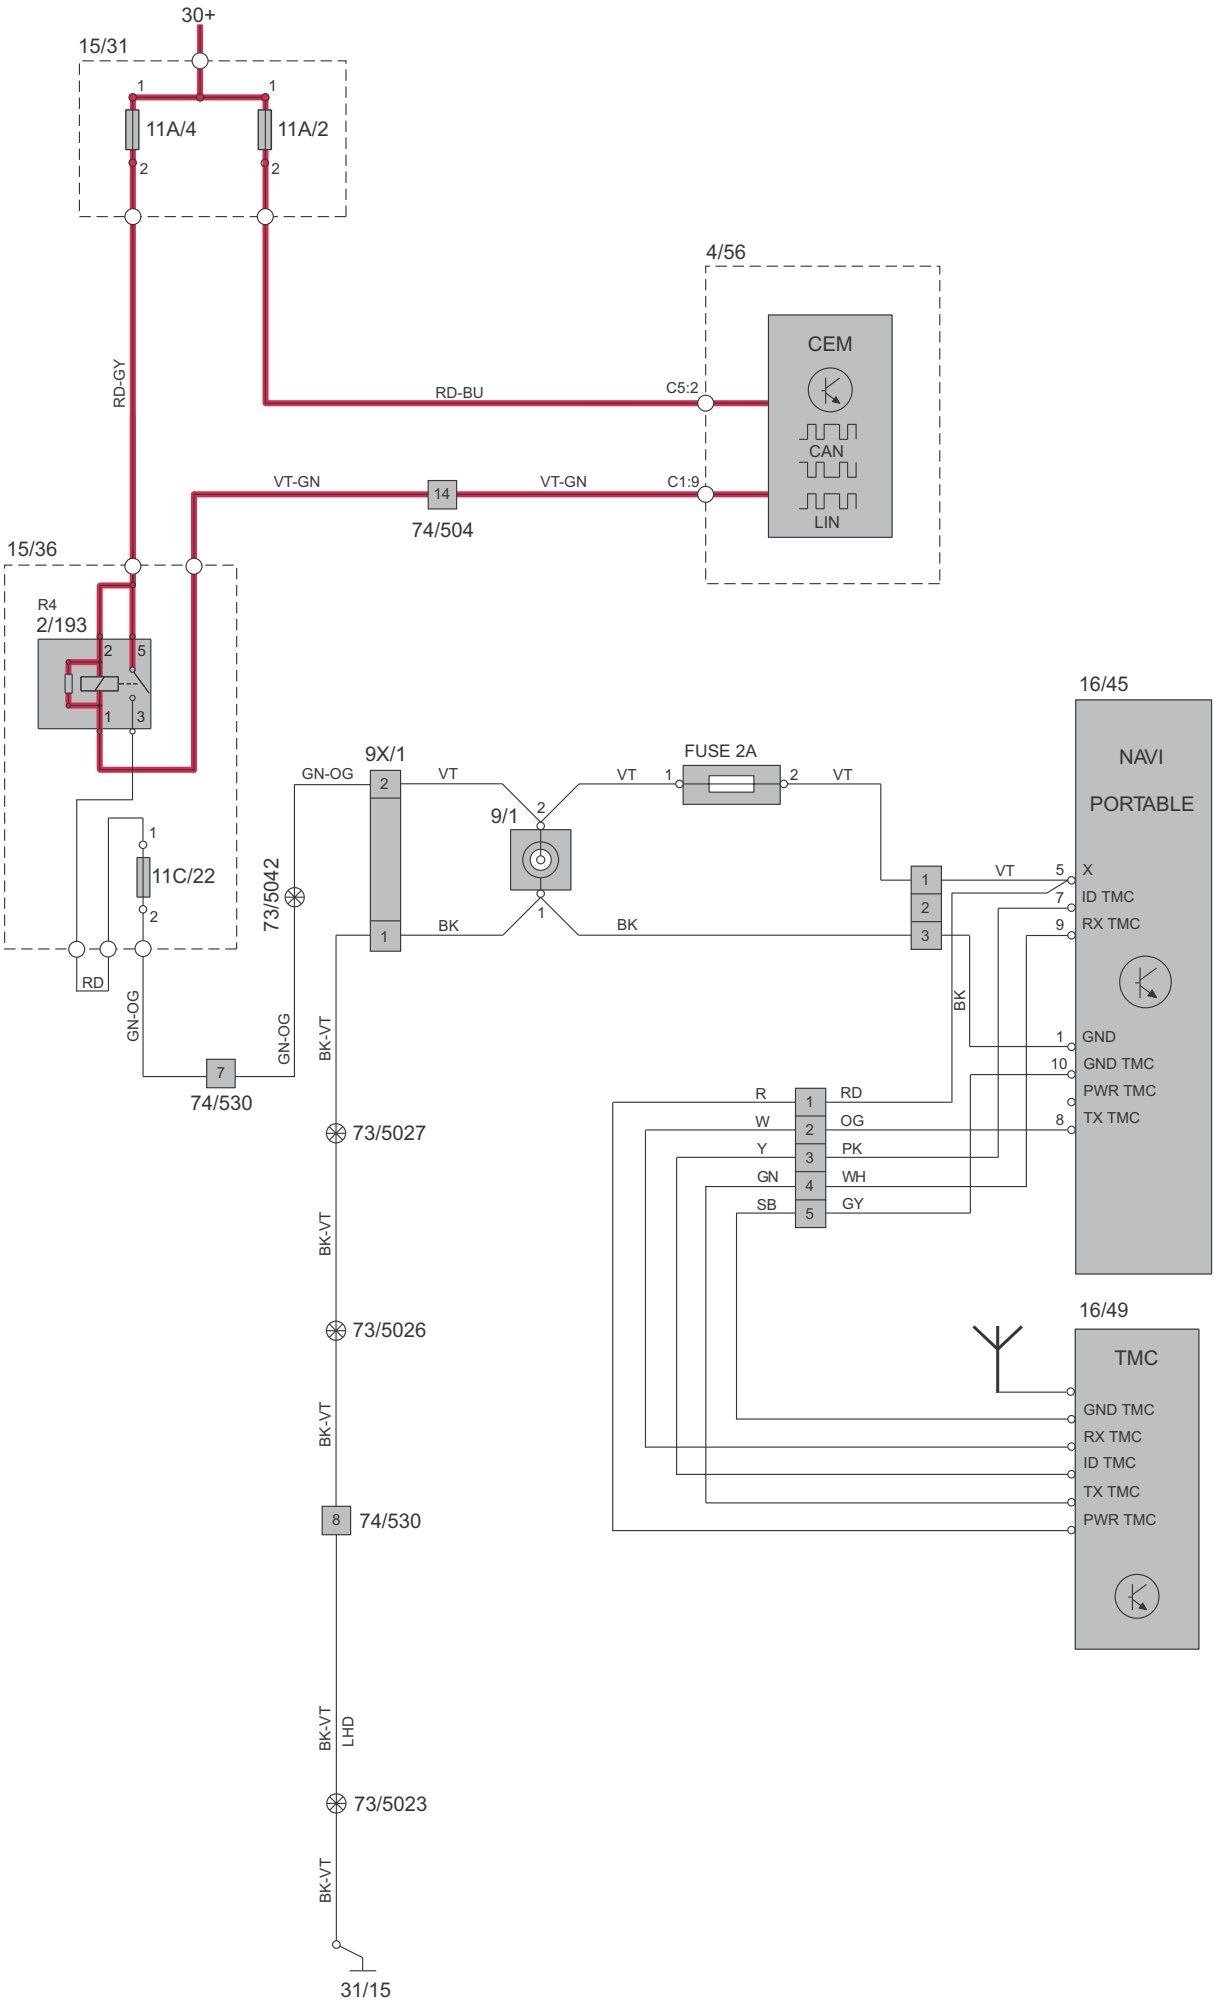
30+
15/31
11A/4
11A/2
4/56
CEM
CAN
LIN
RD-GY
RD-BU
C5:2
VT-GN
14
74/504
C1:9
15/36
R4
2/193
11C/22
RD
GN-OG
7
74/530
73/5042
9X/1
GN-OG
VT
BK
9/1
FUSE 2A
16/45
NAVI
PORTABLE
X
ID TMC
RX TMC
GND
GND TMC
PWR TMC
TX TMC
R
W
Y
GN
SB
RD
OG
PK
WH
GY
16/49
TMC
BK-VT
73/5027
73/5026
8
74/530
LHD
73/5023
31/15
A31W022

Satellite radio

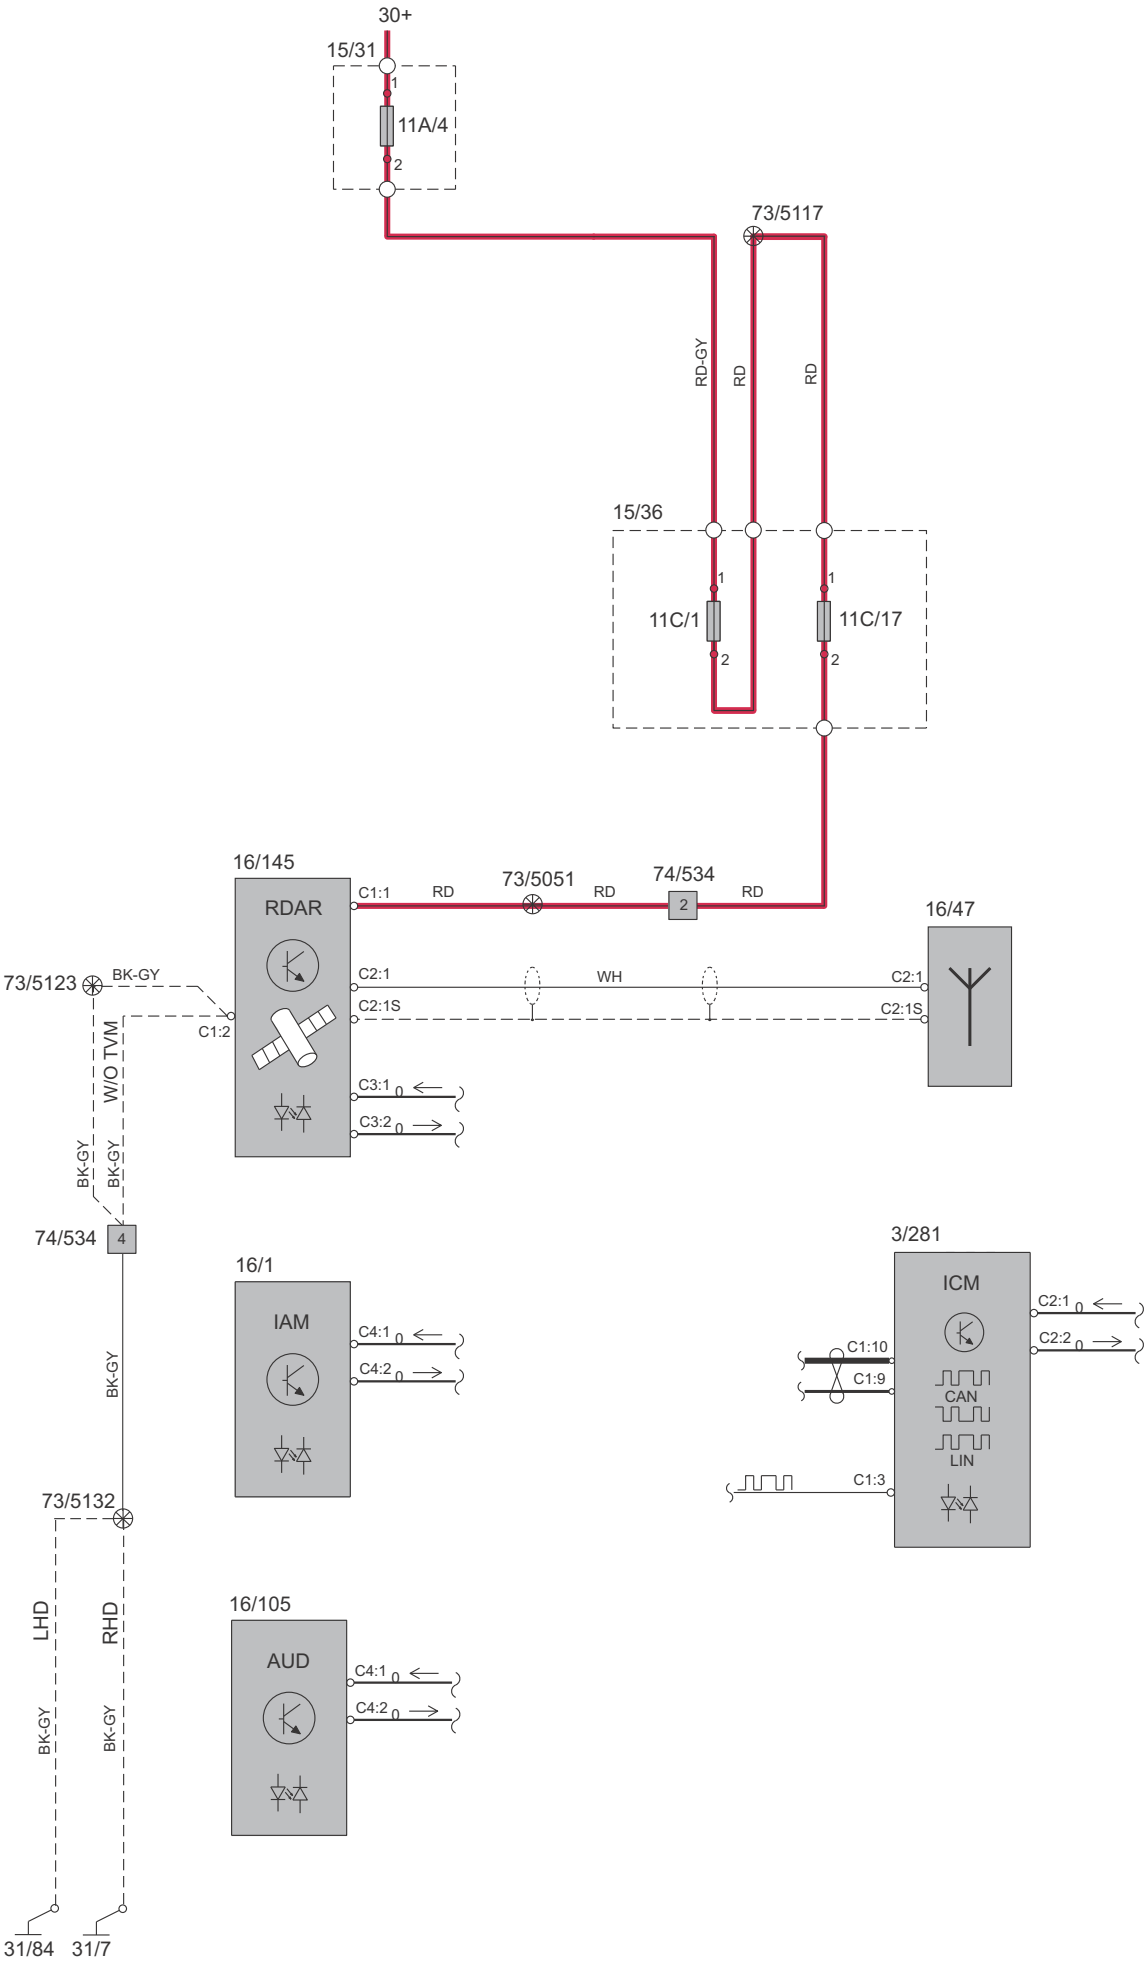

A24W107

Group 39 Other
Parking camera rear

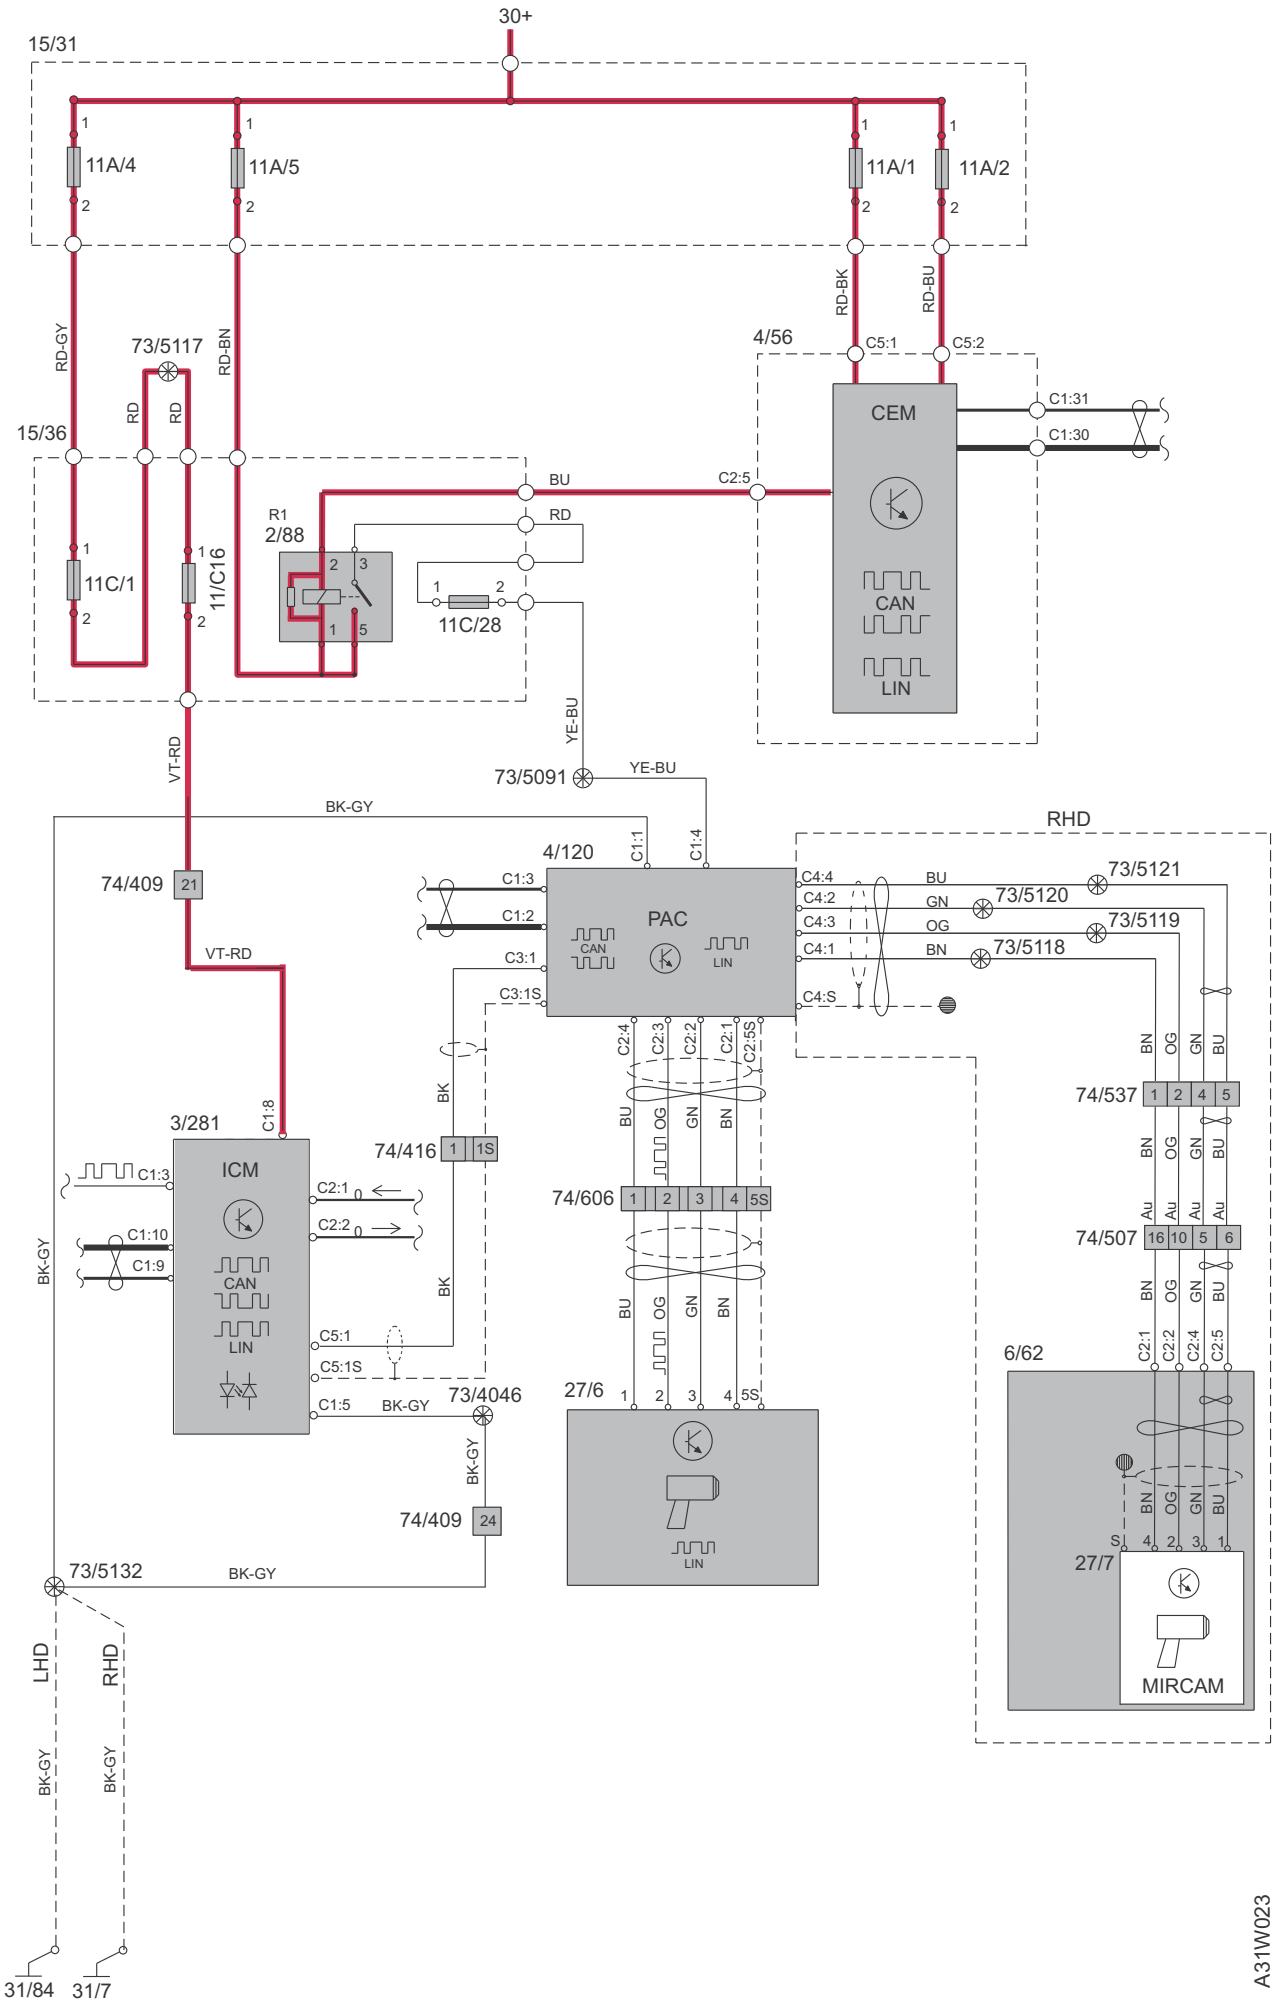

Group 39 Other, Accessories
Parking camera rear

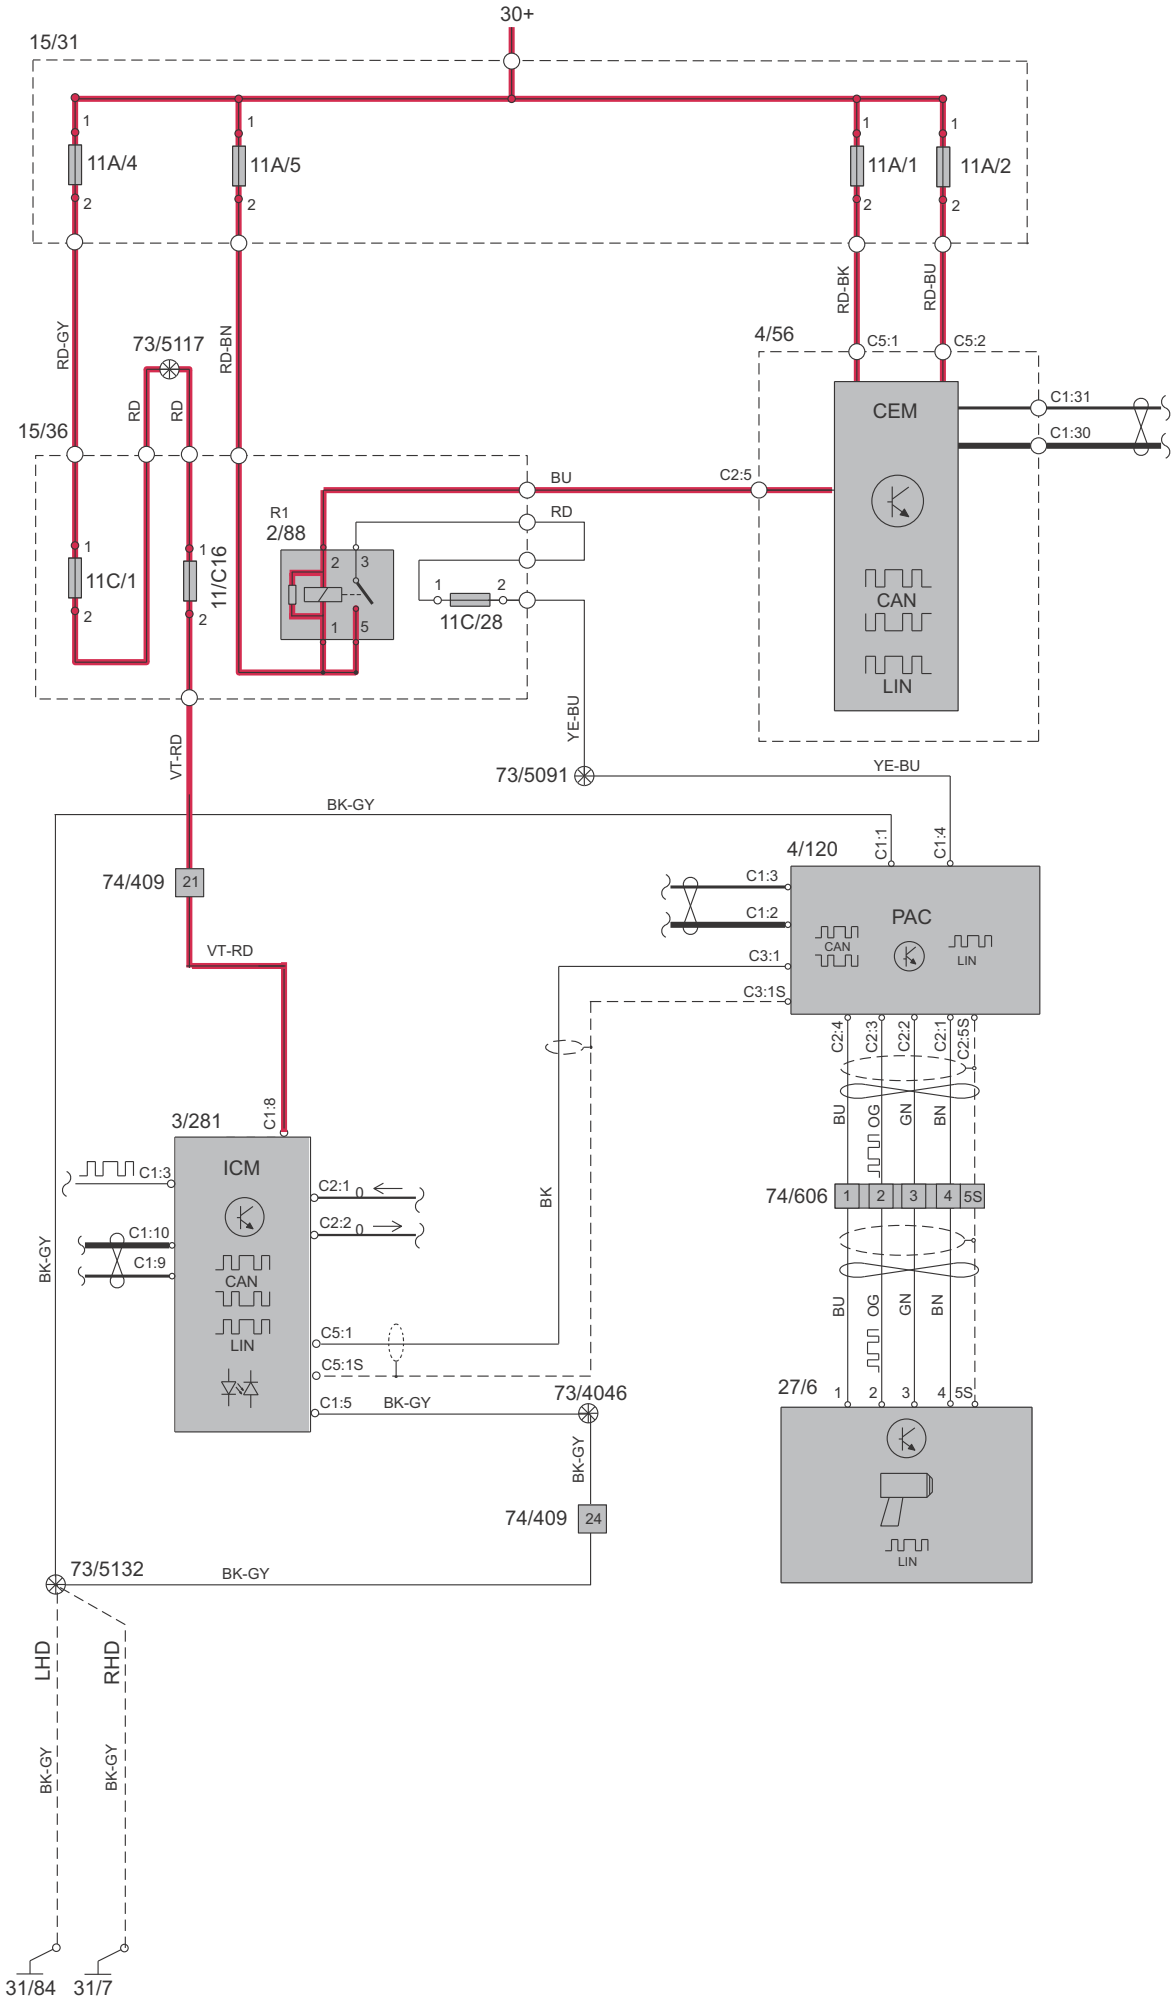

Group 39 Other, Accessories
Parking camera wide angle front

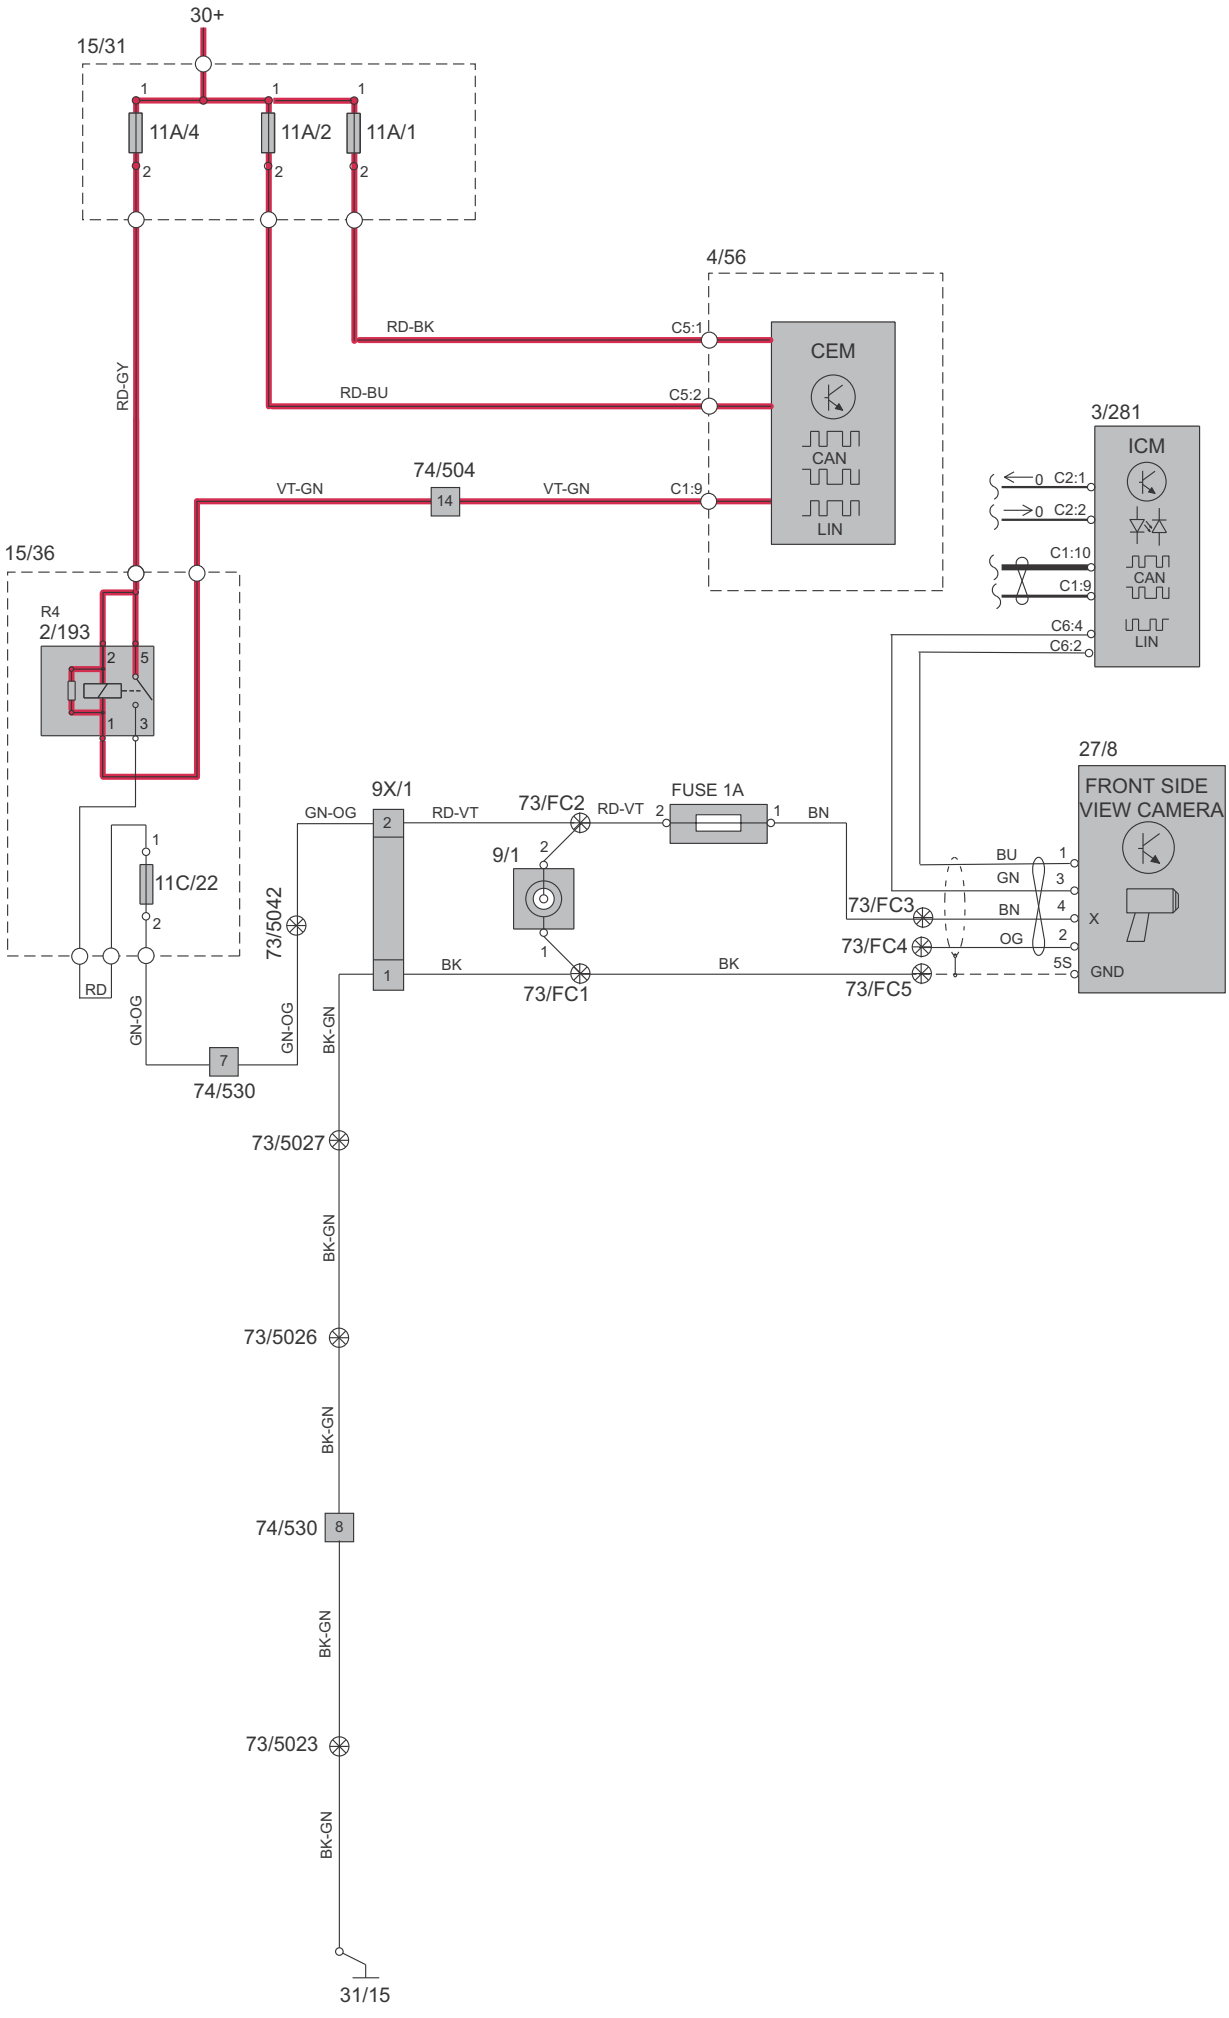

Group 39 Other, Accessories
Sensus Connected Touch

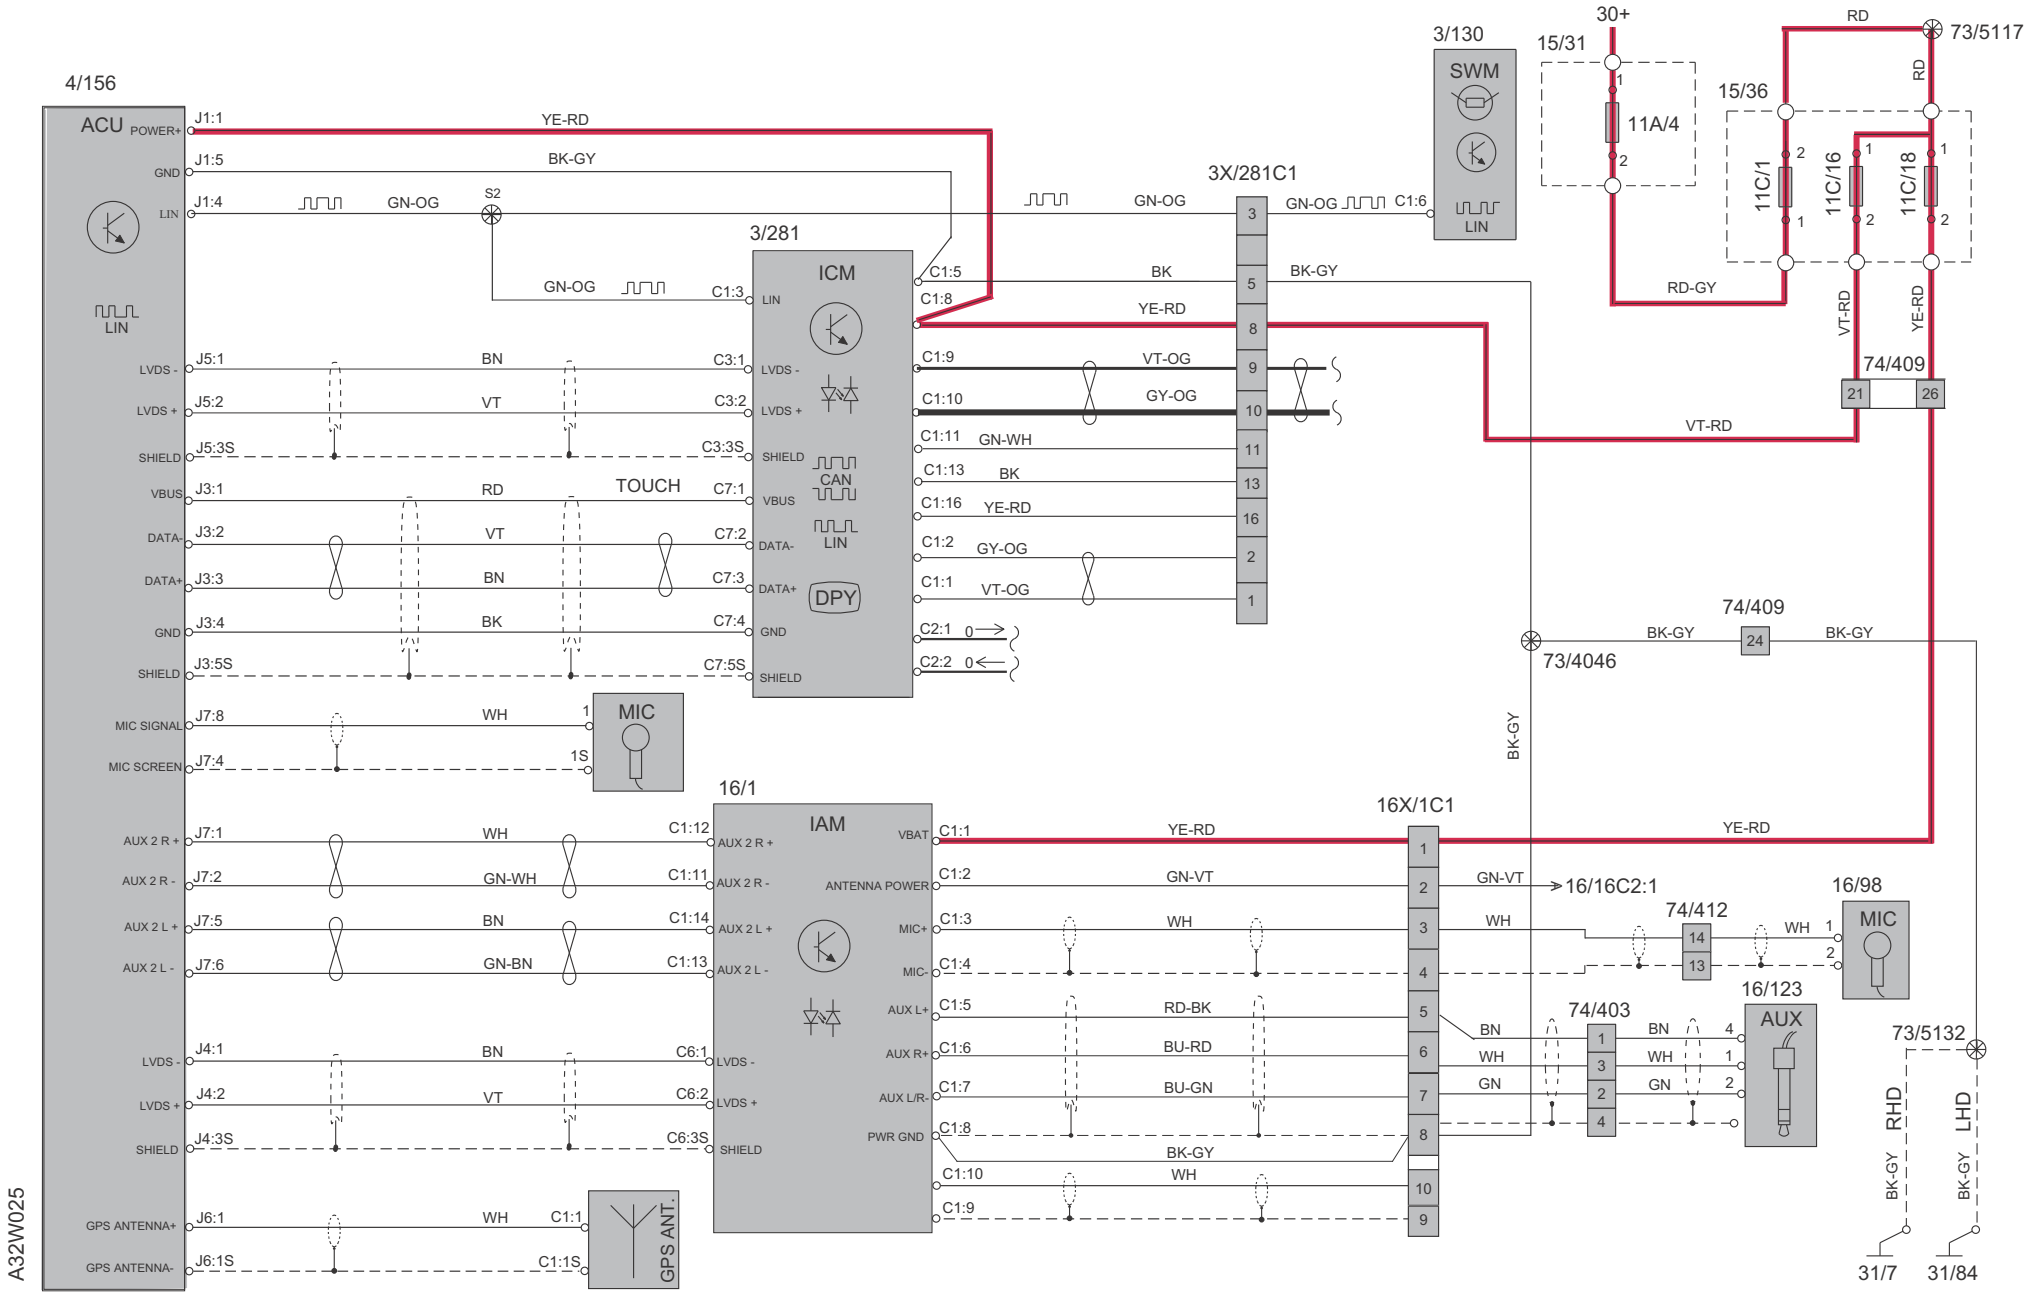

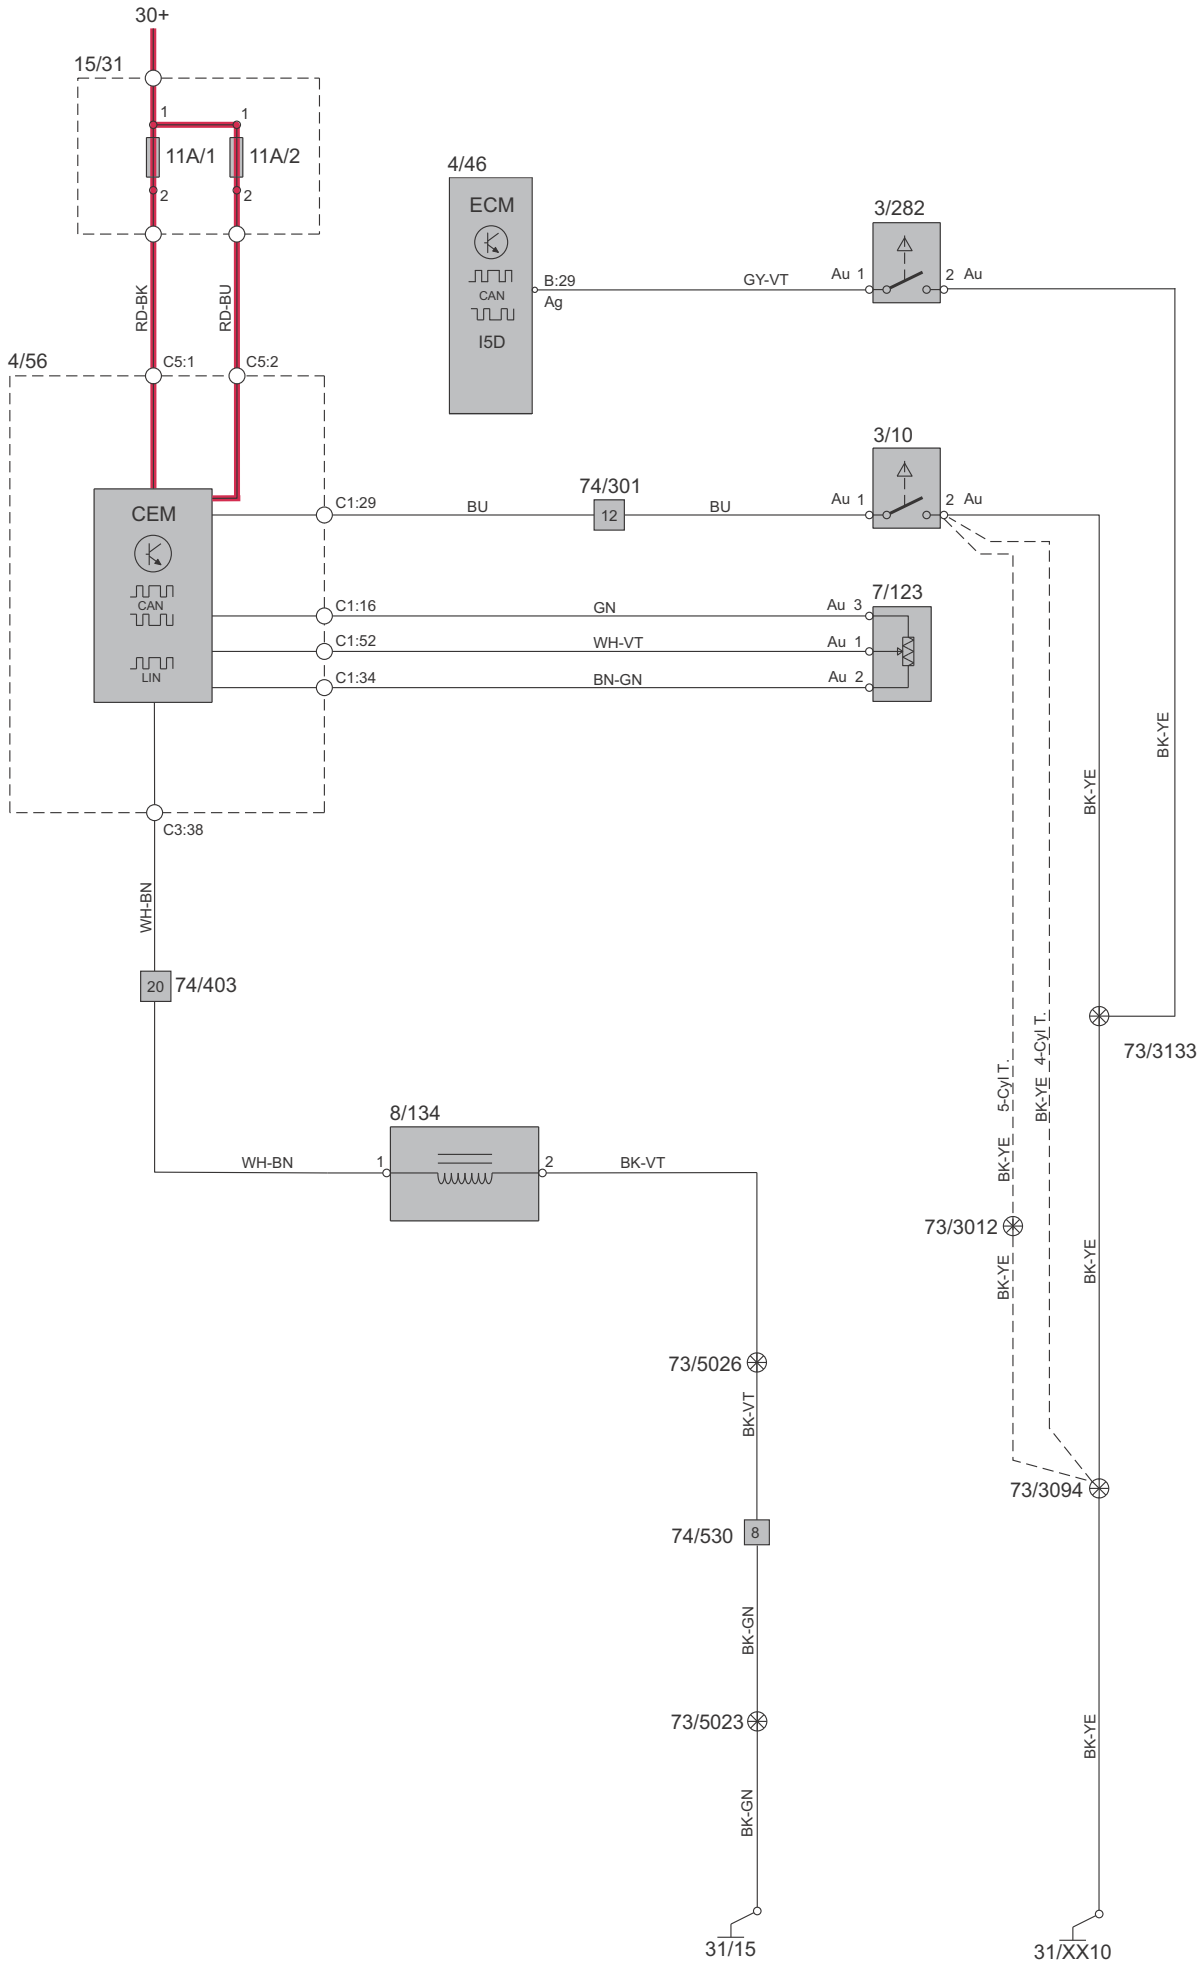
30+
15/31
1
1
11A/1
11A/2
2
2
RD-BK
RD-BU
4/56
C5:1
C5:2
CEM
CAN
LIN
C3:38
WH-BN
20
74/403
4/46
ECM
CAN
I5D
B:29
Ag
GY-VT
3/282
Au 1
2 Au
3/10
74/301
12
C1:29
BU
BU
C1:16
GN
C1:52
WH-VT
C1:34
BN-GN
7/123
Au 3
Au 1
Au 2
BK-YE
73/3133
8/134
WH-BN
1
2
BK-VT
5-Cyl T.
4-Cyl T.
BK-YE
73/3012
73/3094
73/5026
BK-VT
74/530
8
BK-GN
73/5023
BK-GN
31/15
31/XX10
A31W024

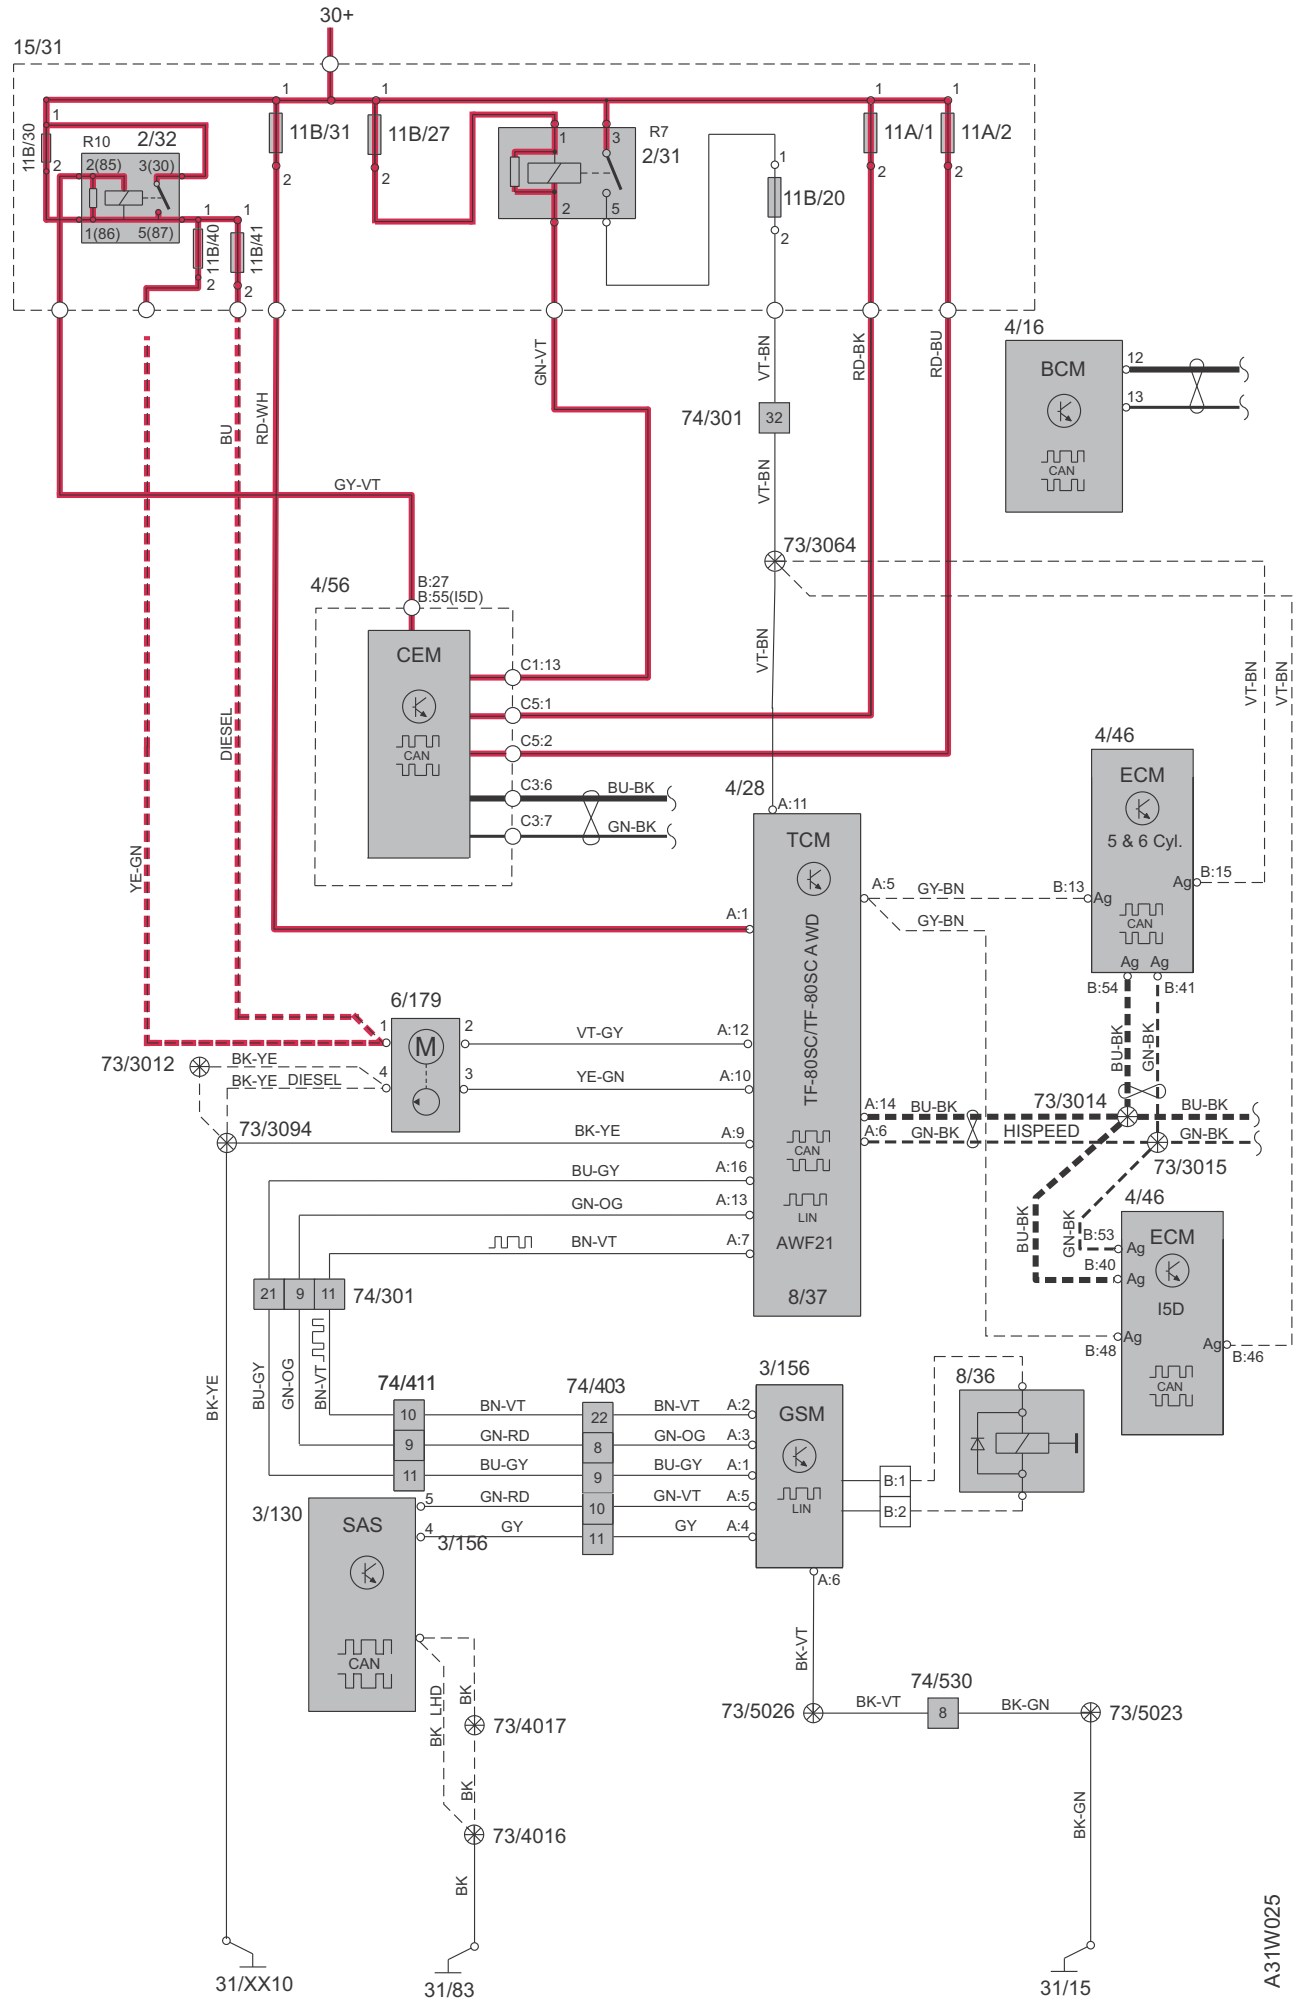
30+
15/31
11B/30
R10
2/32
2(85)
3(30)
1(86)
5(87)
11B/31
11B/27
R7
2/31
11B/20
11A/1
11A/2
11B/40
11B/41
4/16
BCM
CAN
12
13
74/301
32
GN-VT
VT-BN
RD-BK
RD-BU
BU
RD-WH
GY-VT
73/3064
4/56
B:27
B:55(I5D)
CEM
CAN
C1:13
C5:1
C5:2
C3:6
C3:7
BU-BK
GN-BK
DIESEL
YE-GN
4/28
A:11
TCM
TF-80SC/TF-80SC AWD
A:1
A:5
GY-BN
4/46
ECM
5 & 6 Cyl.
B:13
B:15
B:54
B:41
6/179
M
VT-GY
YE-GN
A:12
A:10
73/3012
BK-YE
BK-YE DIESEL
73/3094
BK-YE
A:9
BU-GY
A:16
GN-OG
A:13
BN-VT
A:7
CAN
LIN
AWF21
8/37
A:14
A:6
73/3014
HISPEED
73/3015
4/46
ECM
I5D
B:53
B:40
B:48
B:46
21
9
11
74/301
74/411
74/403
3/156
GSM
8/36
10
9
11
22
8
9
10
11
BN-VT
GN-RD
BU-GY
GN-VT
GY
A:2
A:3
A:1
A:5
A:4
B:1
B:2
3/130
SAS
CAN
5
4
3/156
A:6
BK-VT
74/530
73/5026
8
BK-GN
73/5023
BK_LHD
BK
73/4017
73/4016
31/XX10
31/83
31/15
A31W025

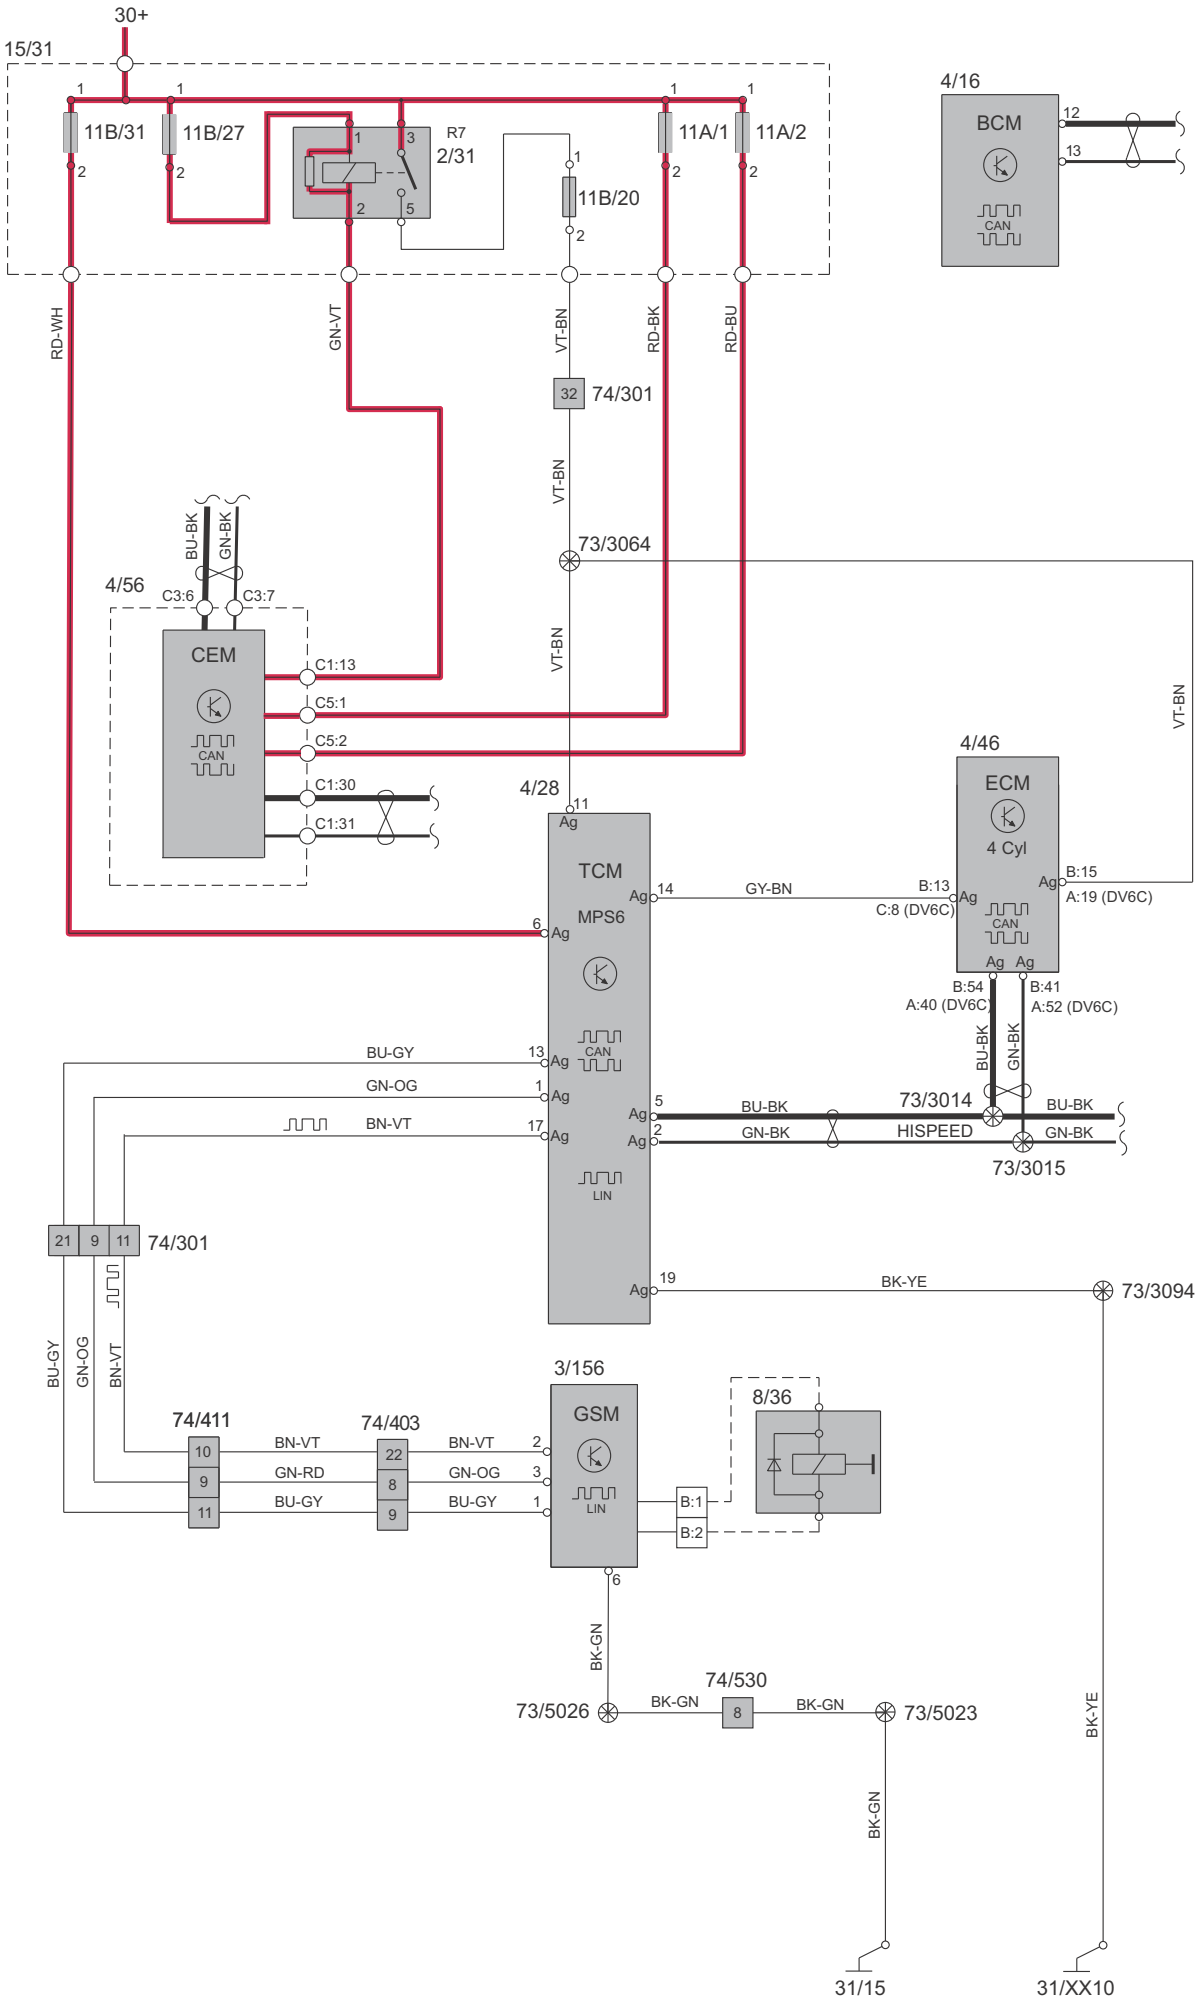
30+
15/31
11B/31
11B/27
R7
2/31
11B/20
11A/1
11A/2
4/16
BCM
CAN
RD-WH
GN-VT
VT-BN
RD-BK
RD-BU
32
74/301
73/3064
BU-BK
GN-BK
4/56
C3:6
C3:7
CEM
C1:13
C5:1
C5:2
C1:30
C1:31
4/28
TCM
MPS6
LIN
4/46
ECM
4 Cyl
B:13
C:8 (DV6C)
B:15
A:19 (DV6C)
B:54
A:40 (DV6C)
B:41
A:52 (DV6C)
GY-BN
BU-GY
GN-OG
BN-VT
73/3014
HISPEED
73/3015
21
9
11
74/301
BK-YE
73/3094
3/156
GSM
8/36
74/411
74/403
GN-RD
B:1
B:2
BK-GN
74/530
73/5026
73/5023
31/15
31/XX10
A24W113

Differential Electronic Module (DEM)

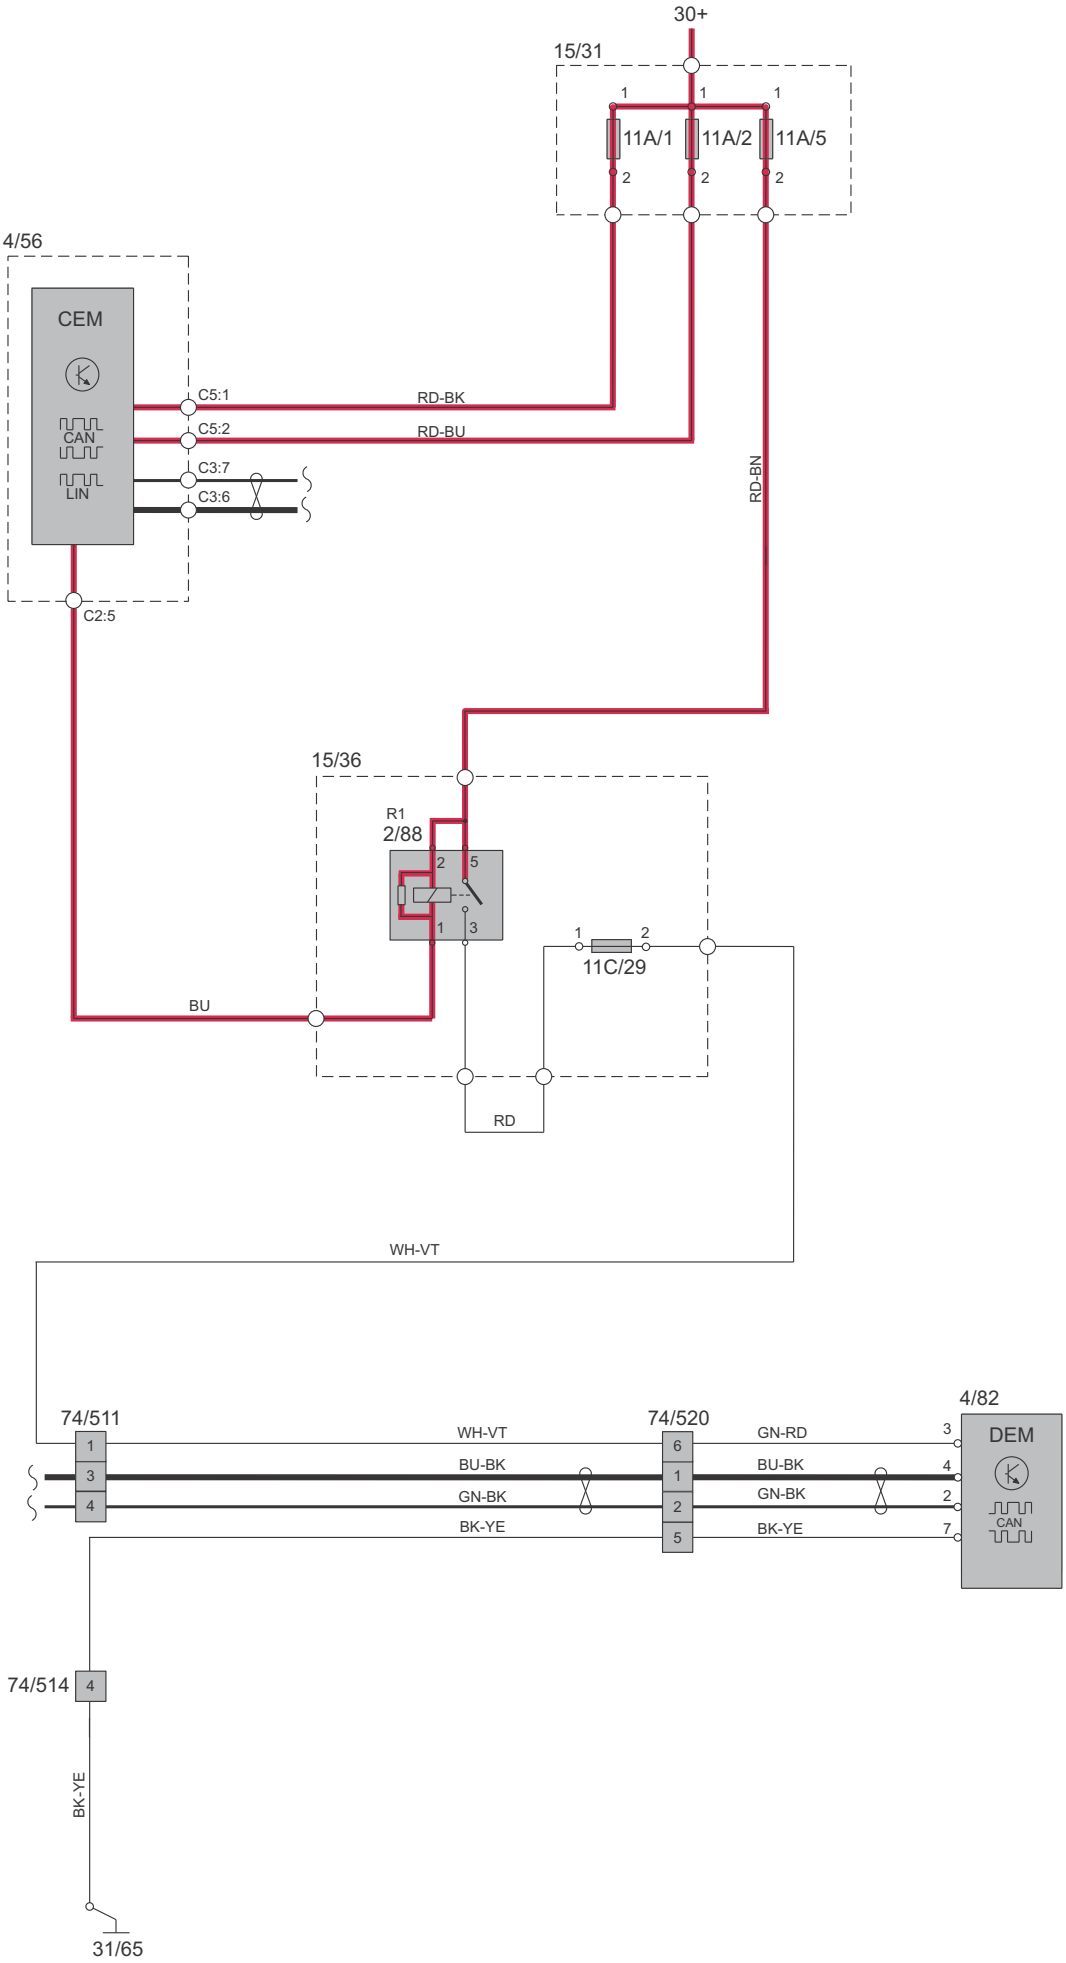

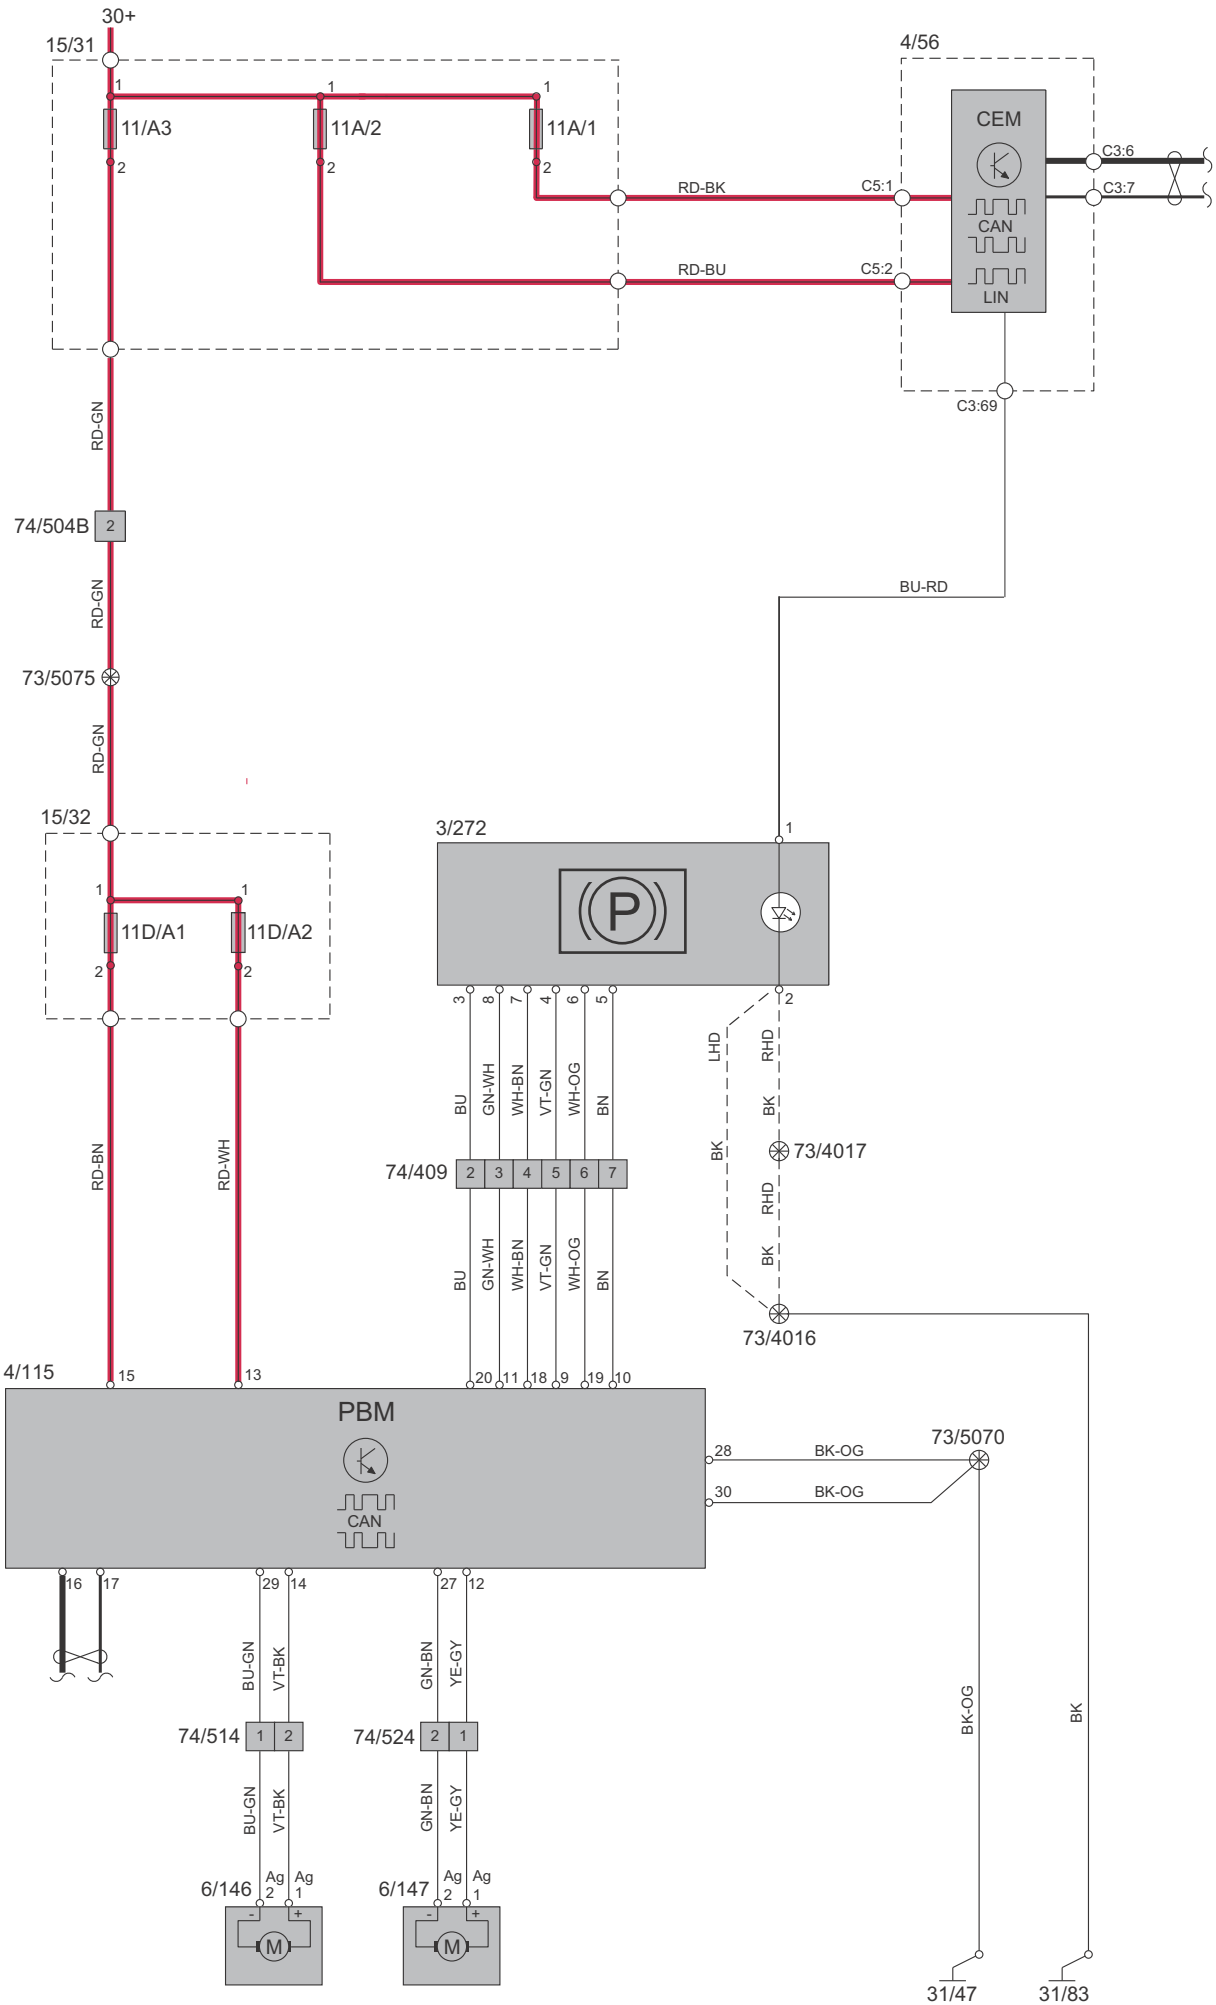
30+
15/31
11/A3
11A/2
11A/1
RD-BK
RD-BU
4/56
CEM
C3:6
C3:7
C5:1
C5:2
CAN
LIN
C3:69
RD-GN
74/504B
BU-RD
73/5075
15/32
11D/A1
11D/A2
3/272
P
73/4017
73/4016
LHD
RHD
BK
74/409
BU
GN-WH
WH-BN
VT-GN
WH-OG
BN
RD-BN
RD-WH
4/115
PBM
73/5070
BK-OG
BU-GN
VT-BK
GN-BN
YE-GY
74/514
74/524
6/146
6/147
Ag
31/47
31/83
A24W115

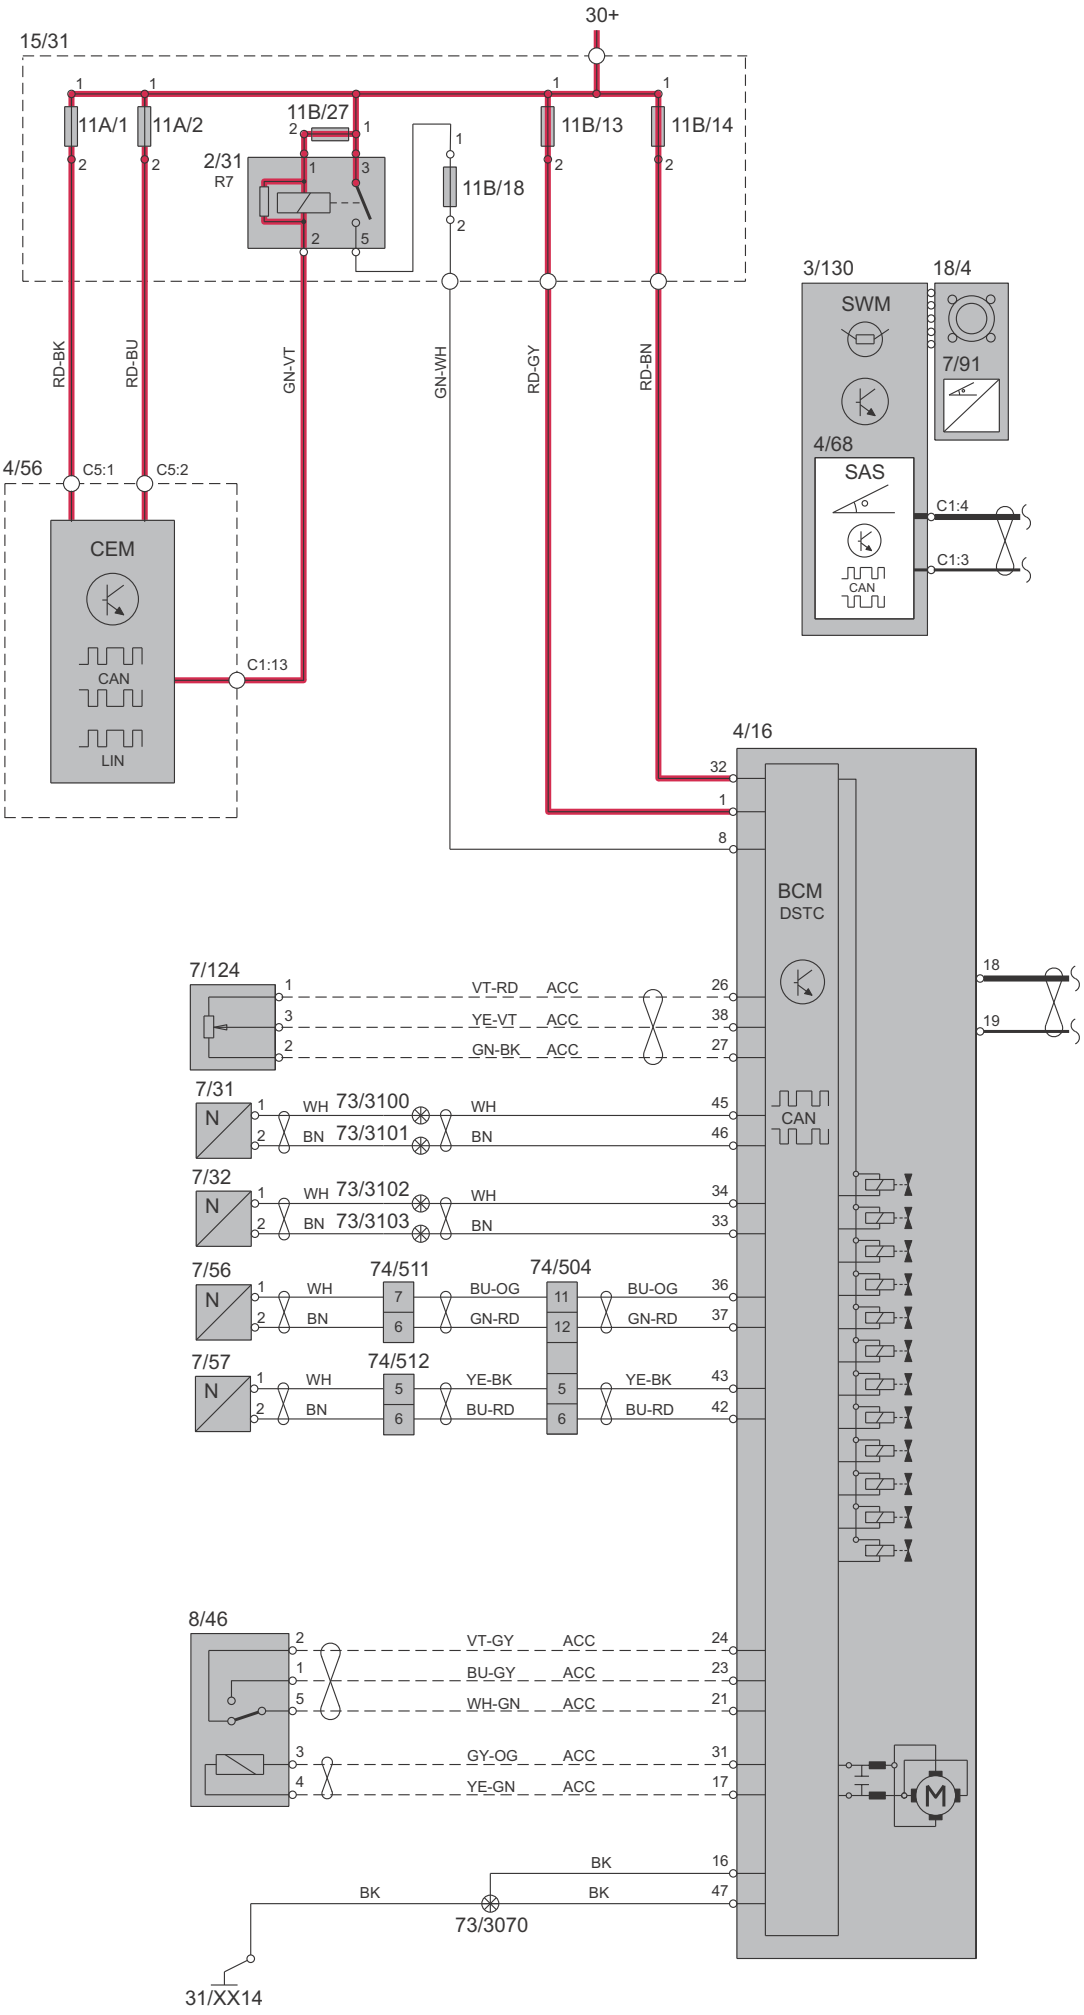
30+
15/31
11A/1
11A/2
11B/27
2/31
R7
11B/18
11B/13
11B/14
3/130
SWM
18/4
7/91
4/68
SAS
C1:4
C1:3
CAN
RD-BK
RD-BU
GN-VT
GN-WH
RD-GY
RD-BN
4/56
C5:1
C5:2
CEM
CAN
LIN
C1:13
4/16
BCM
DSTC
7/124
VT-RD ACC
YE-VT ACC
GN-BK ACC
7/31
WH 73/3100
BN 73/3101
7/32
WH 73/3102
BN 73/3103
7/56
74/511
74/504
BU-OG
GN-RD
7/57
74/512
YE-BK
BU-RD
8/46
VT-GY ACC
BU-GY ACC
WH-GN ACC
GY-OG ACC
YE-GN ACC
BK
73/3070
31/XX14
A24W116

Speed dependent power steering

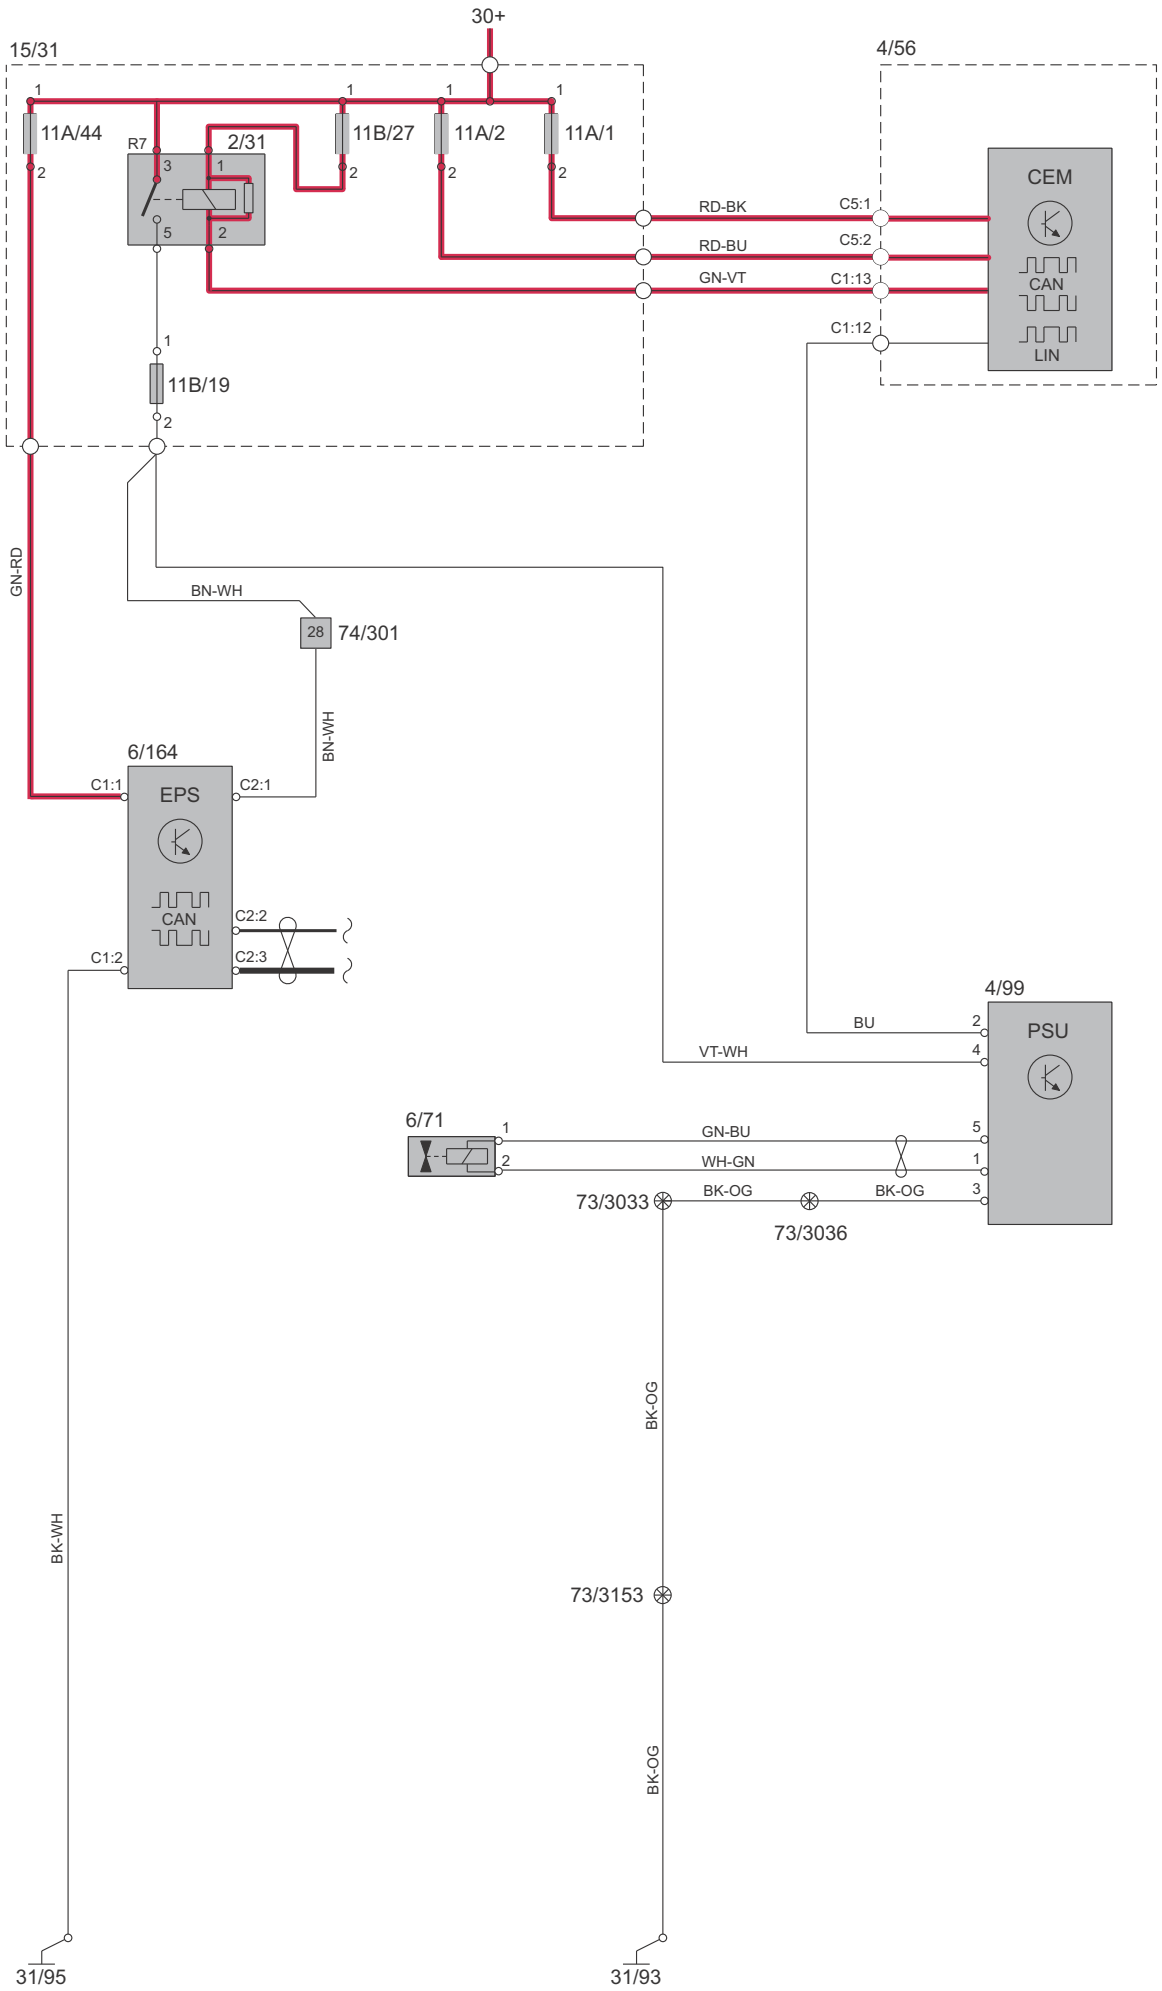

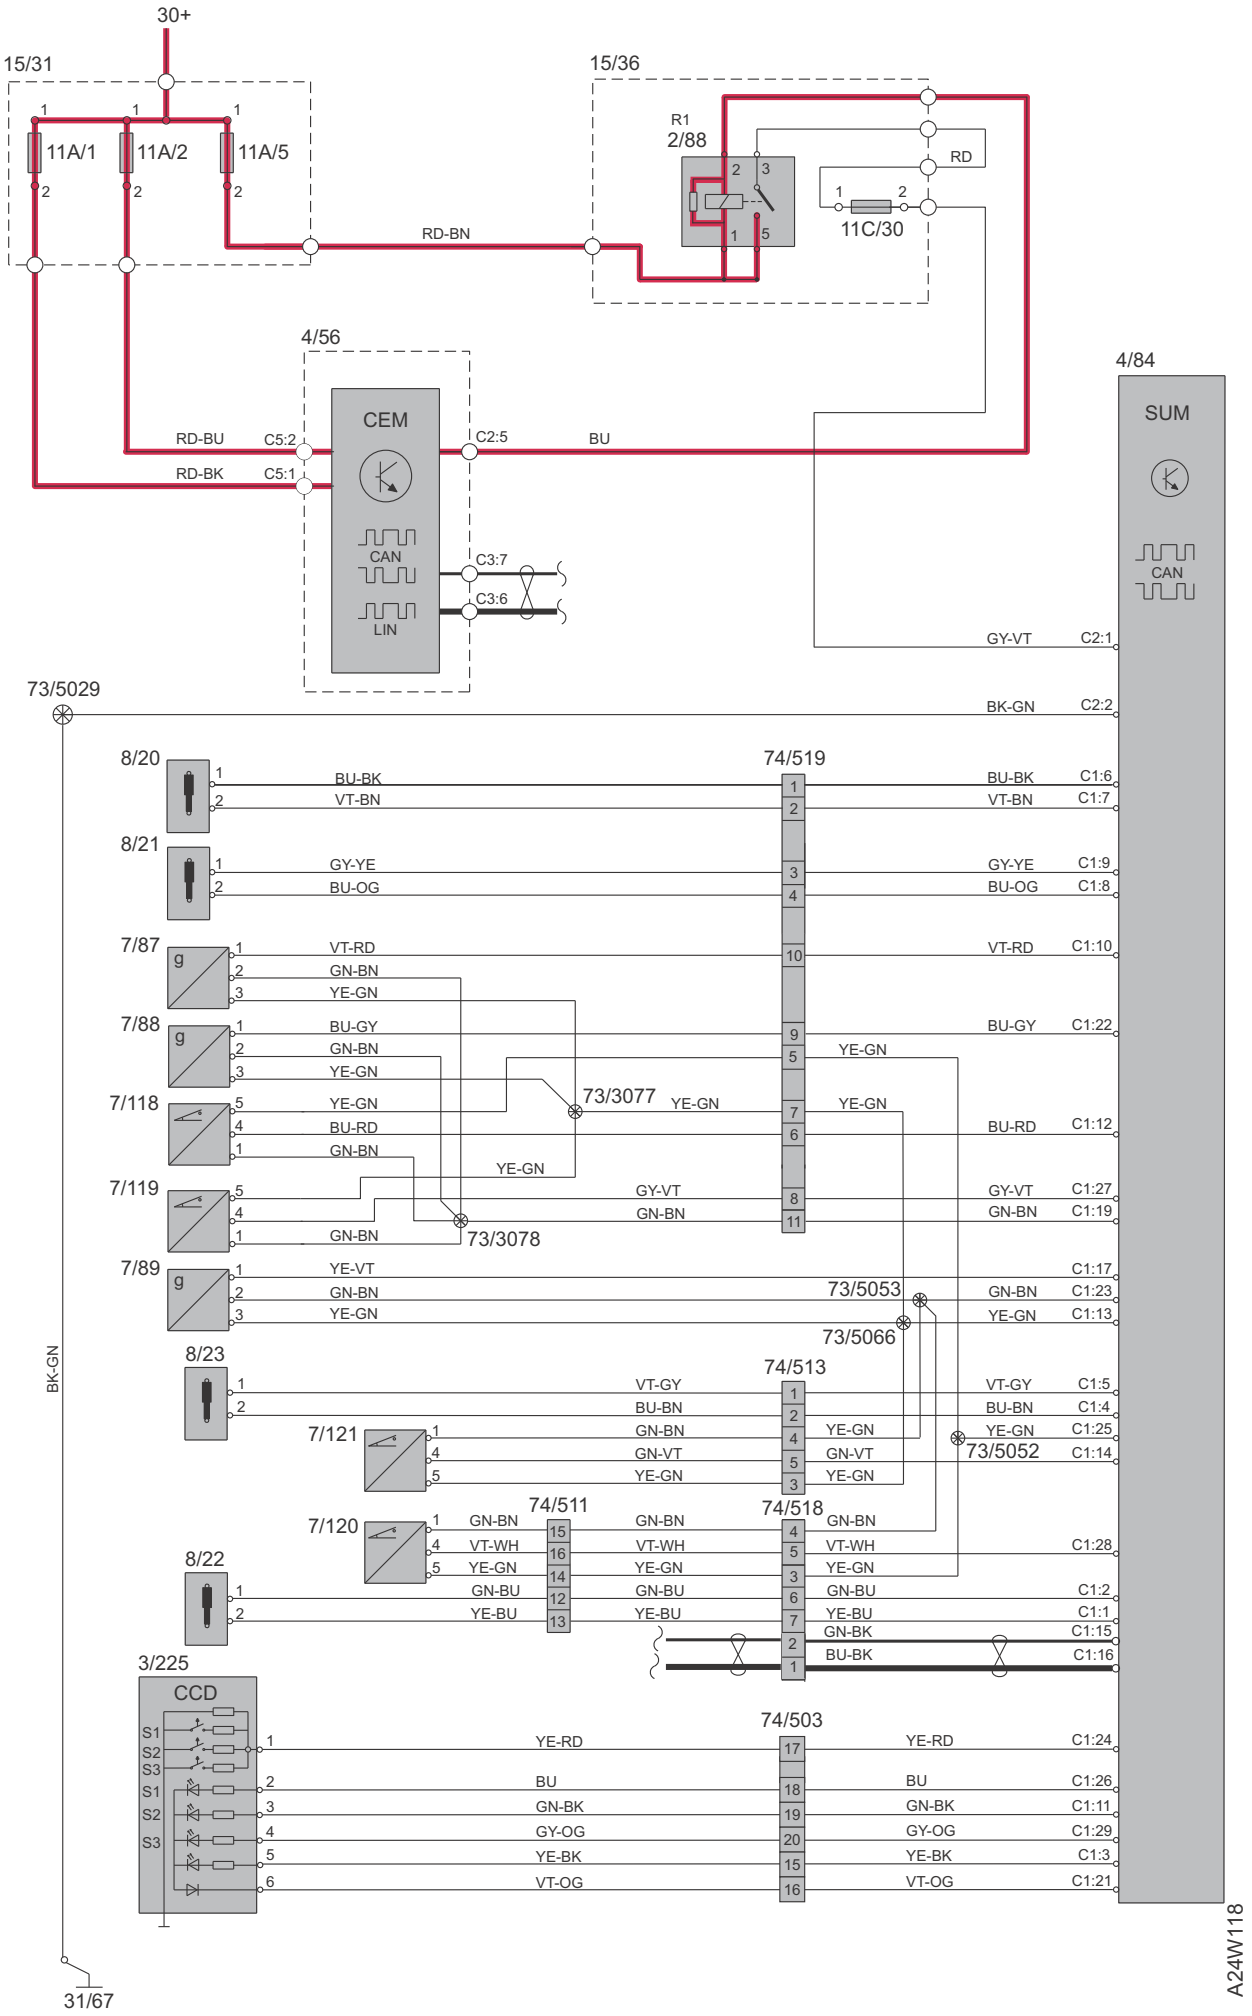
30+
15/31
11A/1
11A/2
11A/5
RD-BN
15/36
R1
2/88
RD
11C/30
4/56
CEM
CAN
LIN
RD-BU
RD-BK
C5:2
C5:1
C2:5
BU
C3:7
C3:6
4/84
SUM
CAN
GY-VT
C2:1
73/5029
BK-GN
C2:2
8/20
BU-BK
VT-BN
74/519
BU-BK
VT-BN
C1:6
C1:7
8/21
GY-YE
BU-OG
GY-YE
BU-OG
C1:9
C1:8
7/87
VT-RD
GN-BN
YE-GN
VT-RD
C1:10
7/88
BU-GY
GN-BN
YE-GN
BU-GY
C1:22
7/118
YE-GN
BU-RD
GN-BN
73/3077
YE-GN
YE-GN
BU-RD
C1:12
7/119
GY-VT
GN-BN
GY-VT
GN-BN
C1:27
C1:19
73/3078
7/89
YE-VT
GN-BN
YE-GN
73/5053
73/5066
GN-BN
YE-GN
C1:23
C1:13
C1:17
8/23
VT-GY
BU-BN
74/513
VT-GY
BU-BN
C1:5
C1:4
7/121
GN-BN
GN-VT
YE-GN
YE-GN
GN-VT
YE-GN
YE-GN
73/5052
C1:25
C1:14
7/120
74/511
74/518
GN-BN
VT-WH
YE-GN
GN-BU
YE-BU
C1:28
C1:2
C1:1
8/22
GN-BK
BU-BK
C1:15
C1:16
3/225
CCD
S1
S2
S3
74/503
YE-RD
BU
GN-BK
GY-OG
YE-BK
VT-OG
C1:24
C1:26
C1:11
C1:29
C1:3
C1:21
BK-GN
31/67
A24W118

Group 83 Doors and openings
Central locking front doors LHD

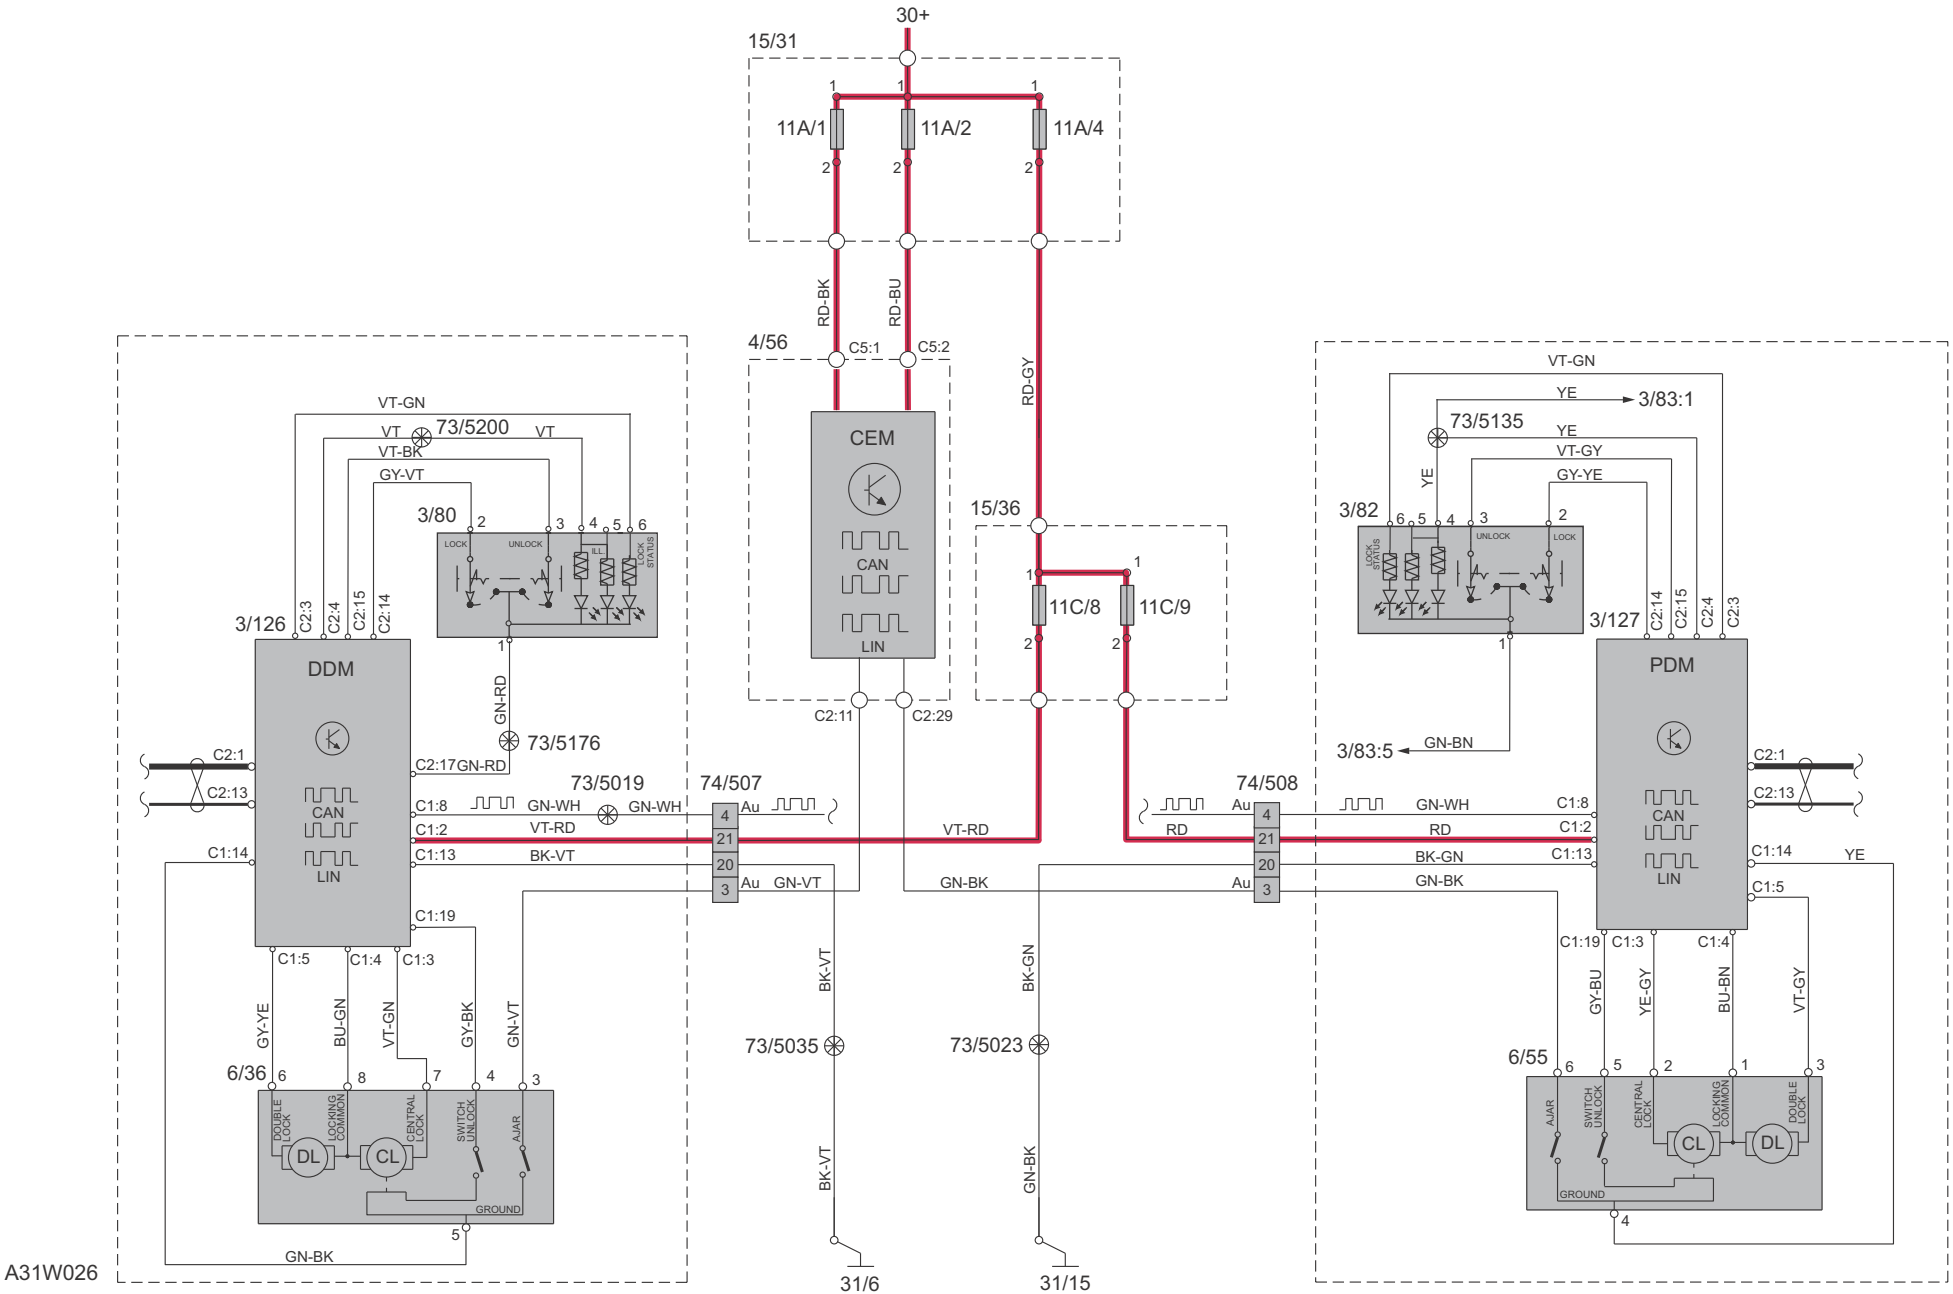

A31W026

Group 83 Doors and openings
Central locking front doors RHD

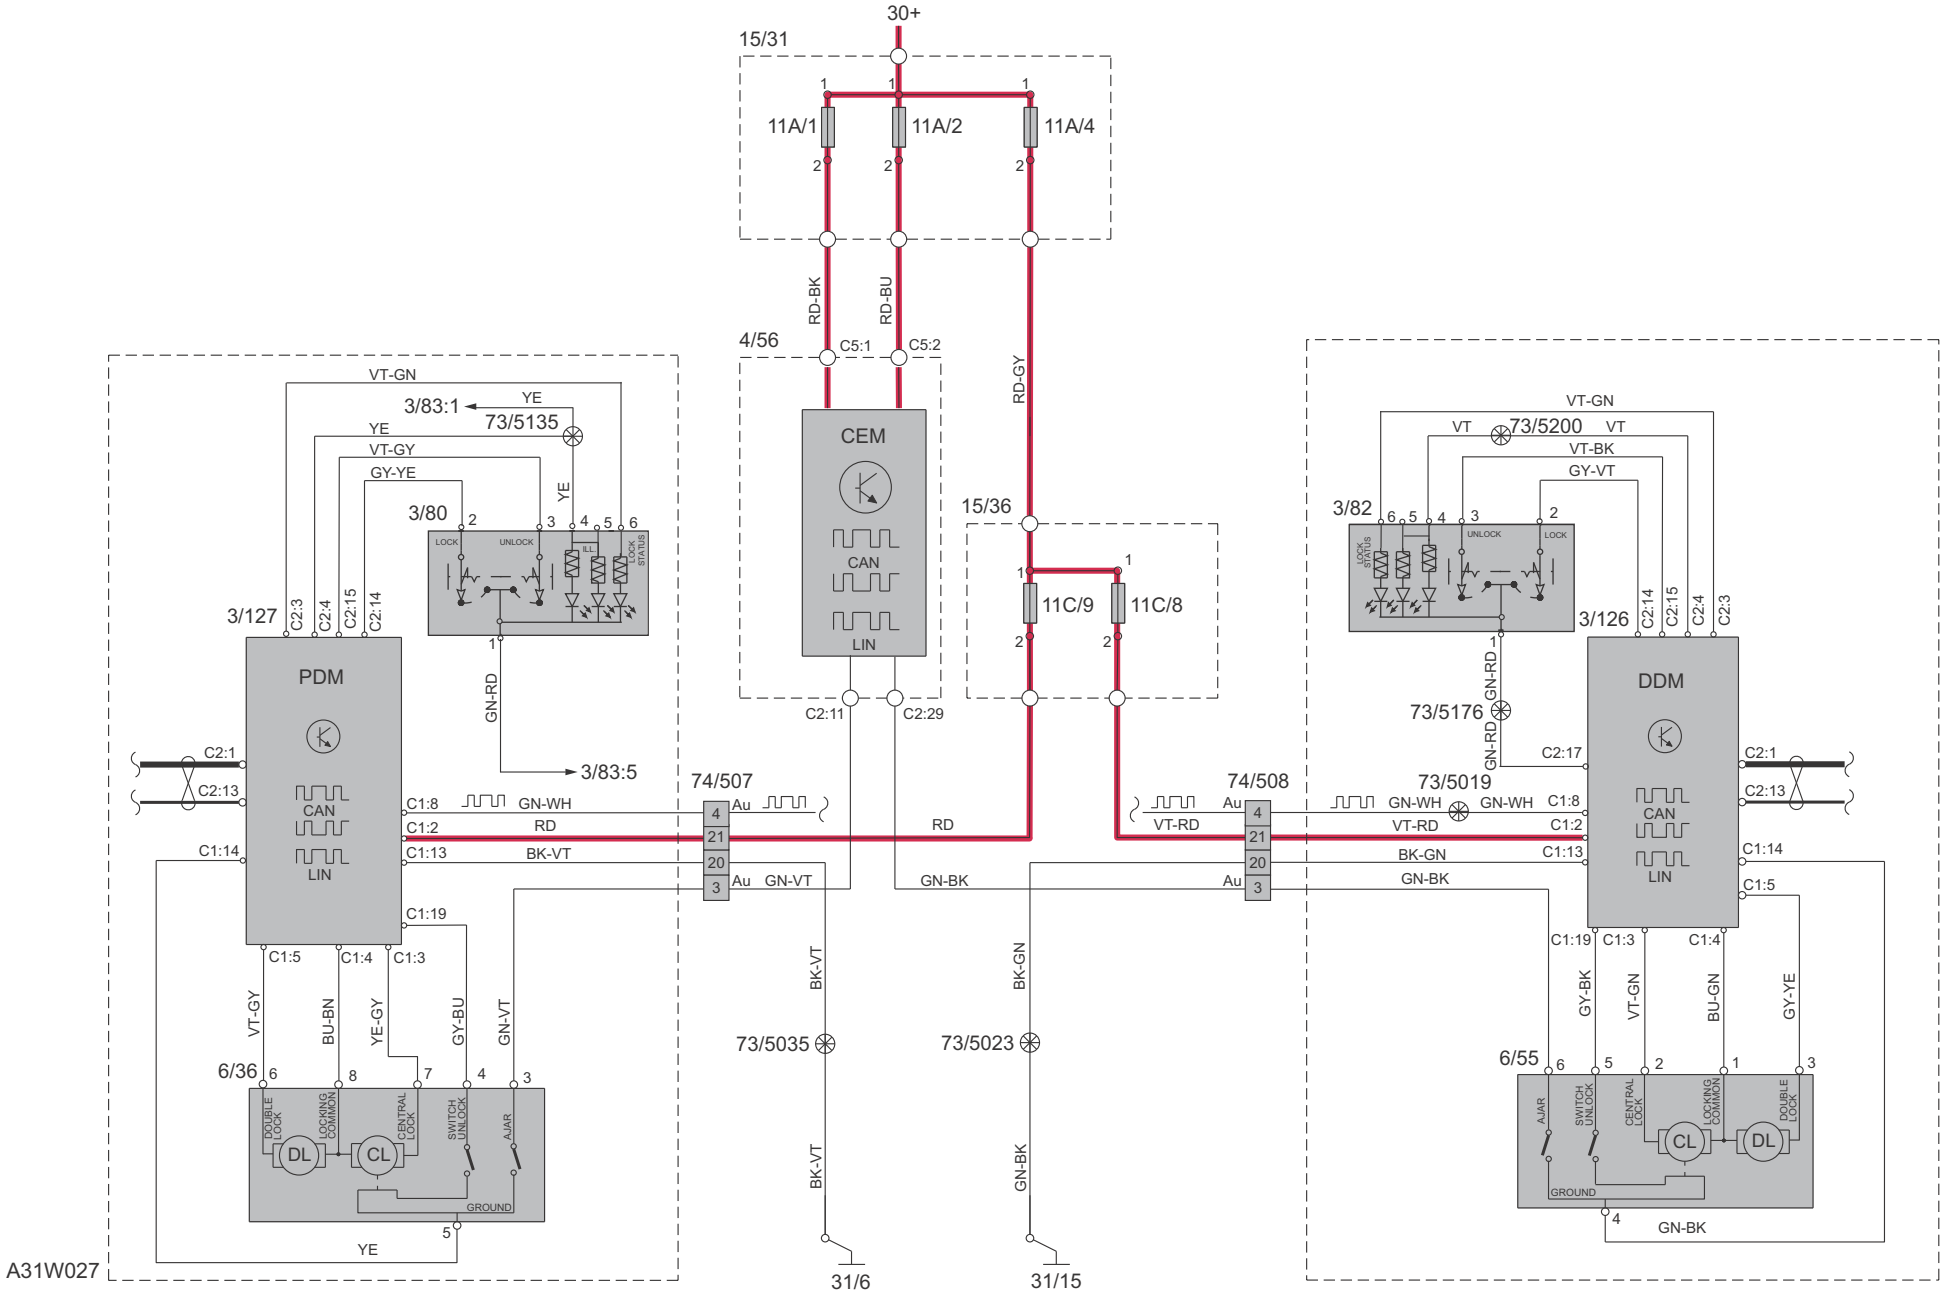

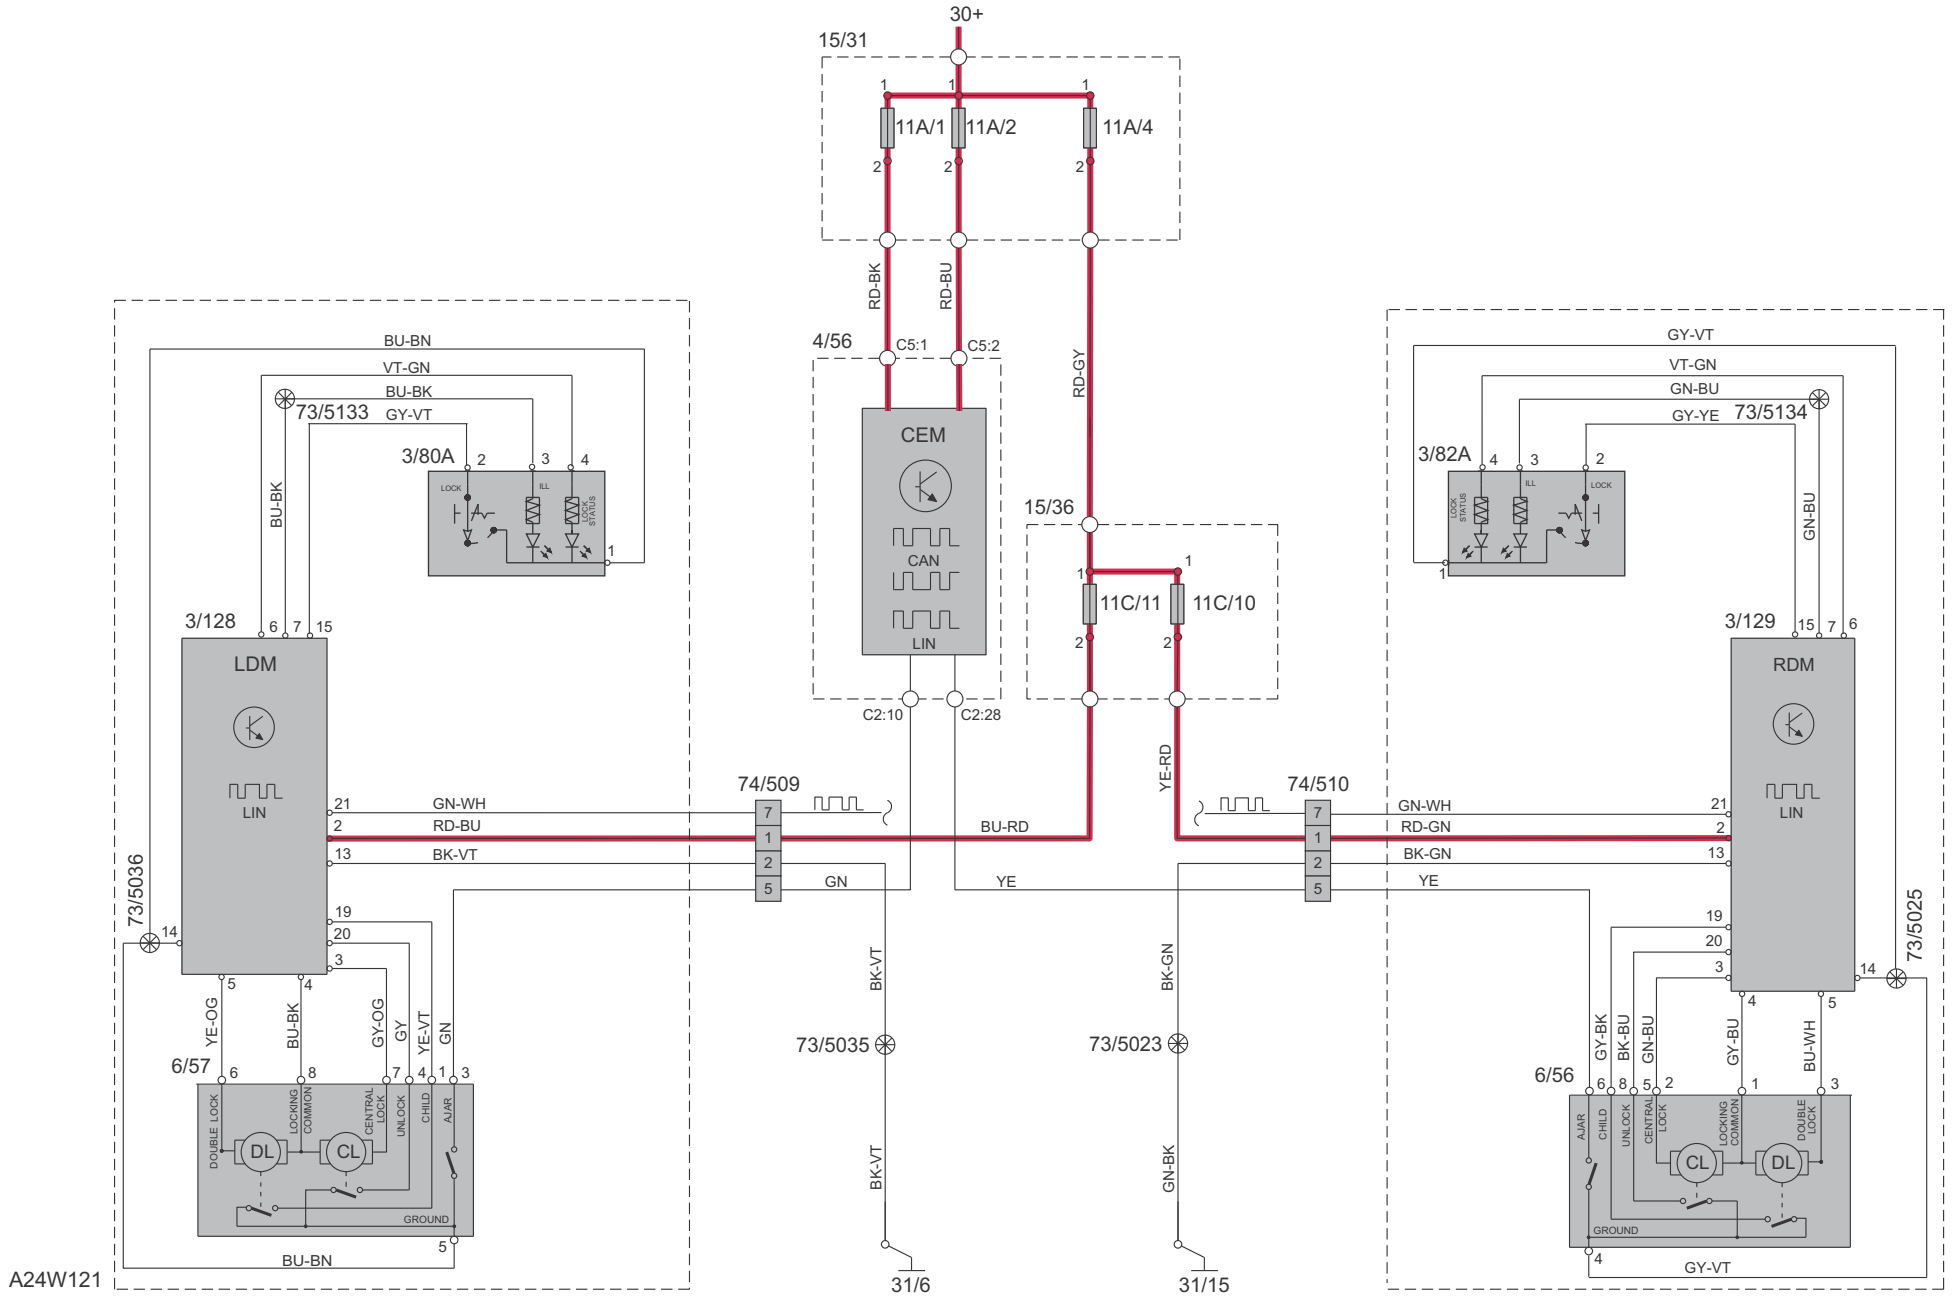
30+
15/31
11A/1
11A/2
11A/4
RD-BK
RD-BU
RD-GY
4/56
C5:1
C5:2
CEM
CAN
LIN
C2:10
C2:28
15/36
11C/11
11C/10
YE-RD
BU-BN
VT-GN
BU-BK
GY-VT
73/5133
3/80A
BU-BK
3/128
LDM
LIN
73/5036
74/509
74/510
GN-WH
RD-BU
BK-VT
GN
BU-RD
YE
BK-VT
BK-GN
73/5035
73/5023
BK-VT
GN-BK
31/6
31/15
YE-OG
BU-BK
GY-OG
GY
YE-VT
GN
6/57
DOUBLE LOCK
LOCKING COMMON
CENTRAL LOCK
UNLOCK
CHILD
AJAR
DL
CL
GROUND
BU-BN
A24W121
GY-VT
VT-GN
GN-BU
GY-YE
73/5134
3/82A
3/129
RDM
LIN
73/5025
GN-WH
RD-GN
BK-GN
YE
GY-BK
BK-BU
GN-BU
GY-BU
BU-WH
6/56
GY-VT

Group 83 Doors and openings
Central locking tailgate S60

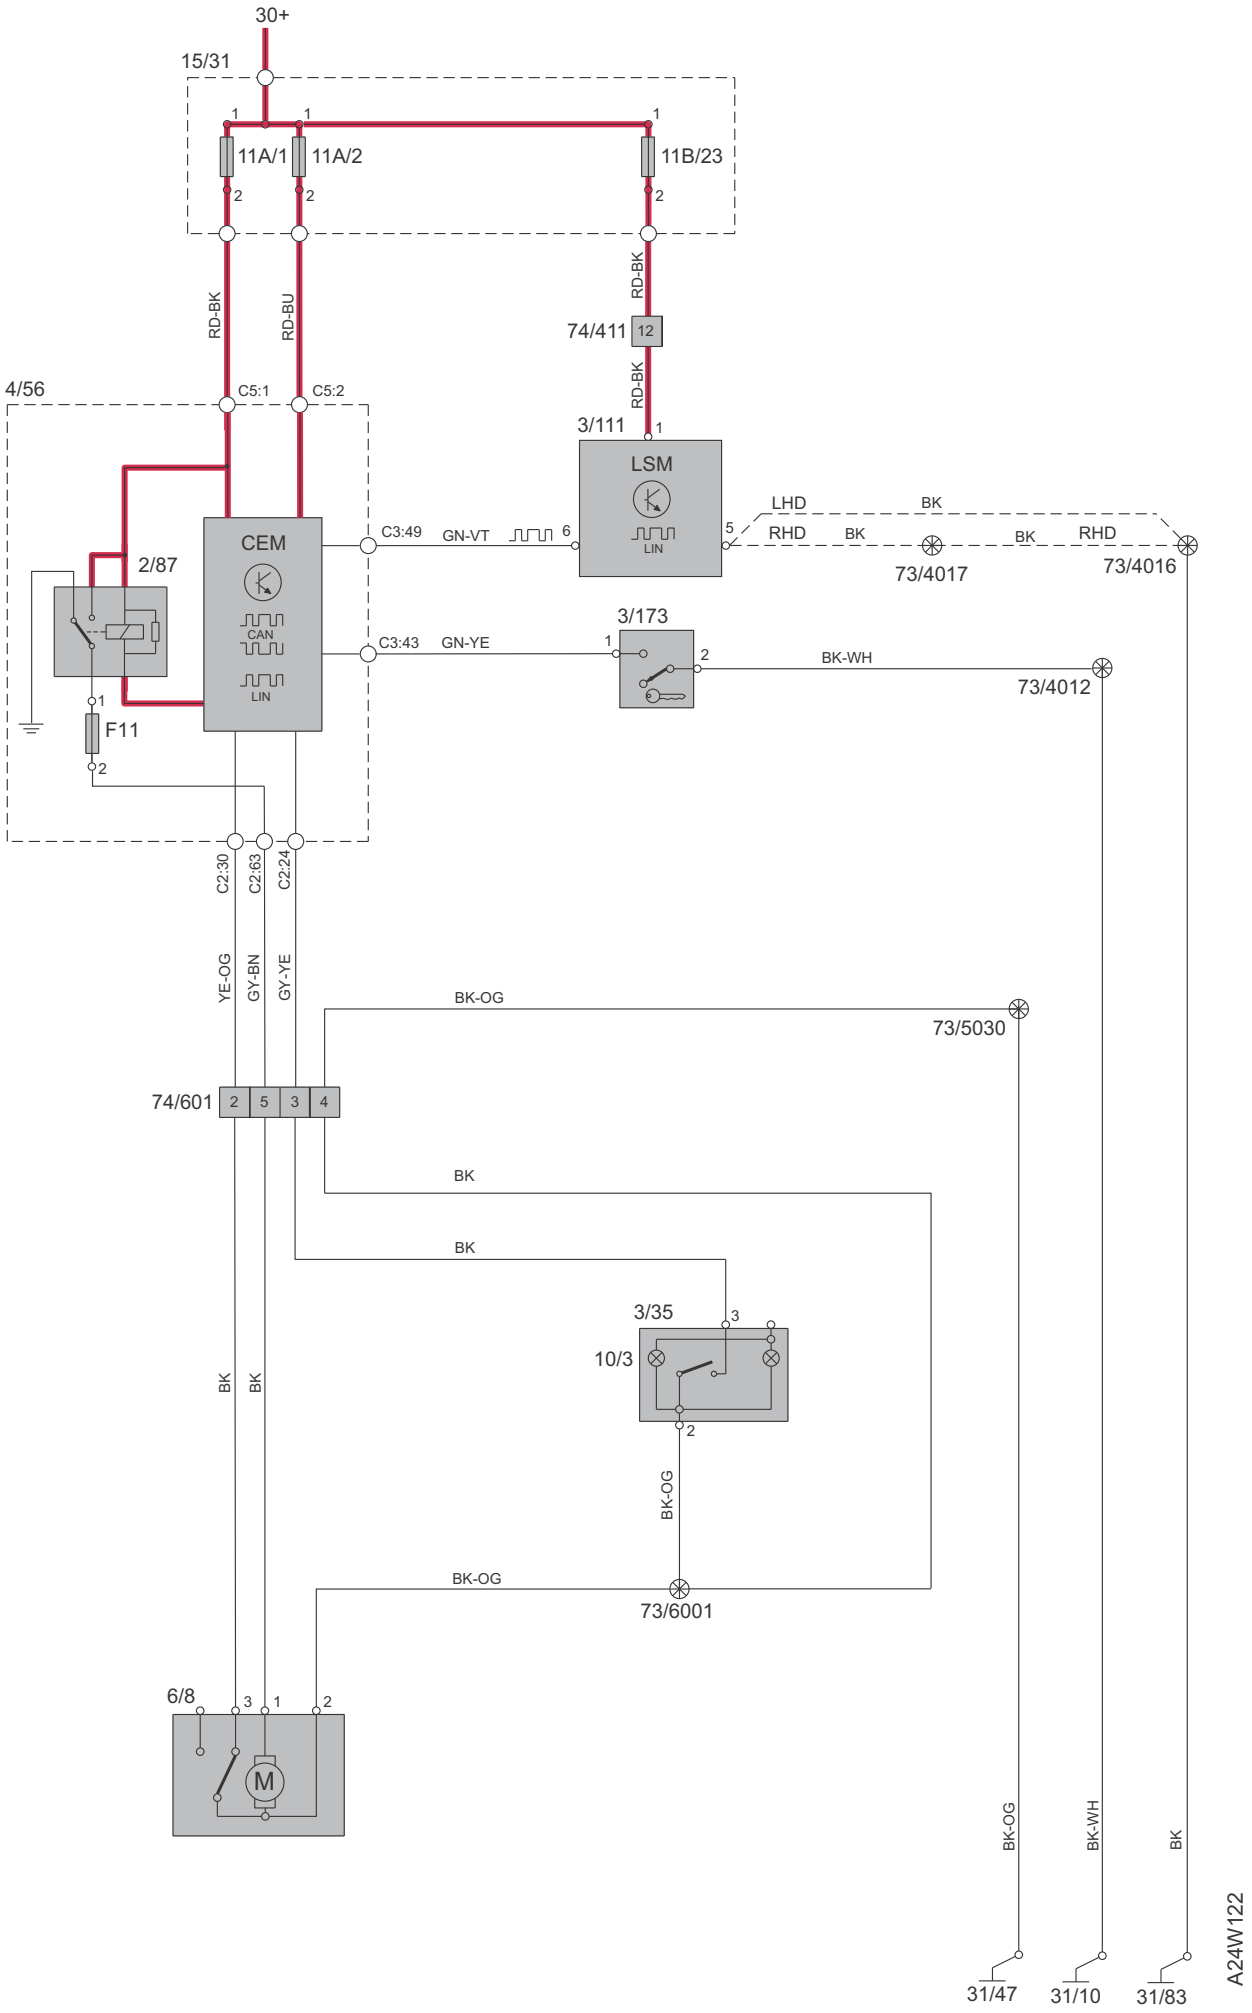

Group 83 Doors and openings
Central locking tailgate V60

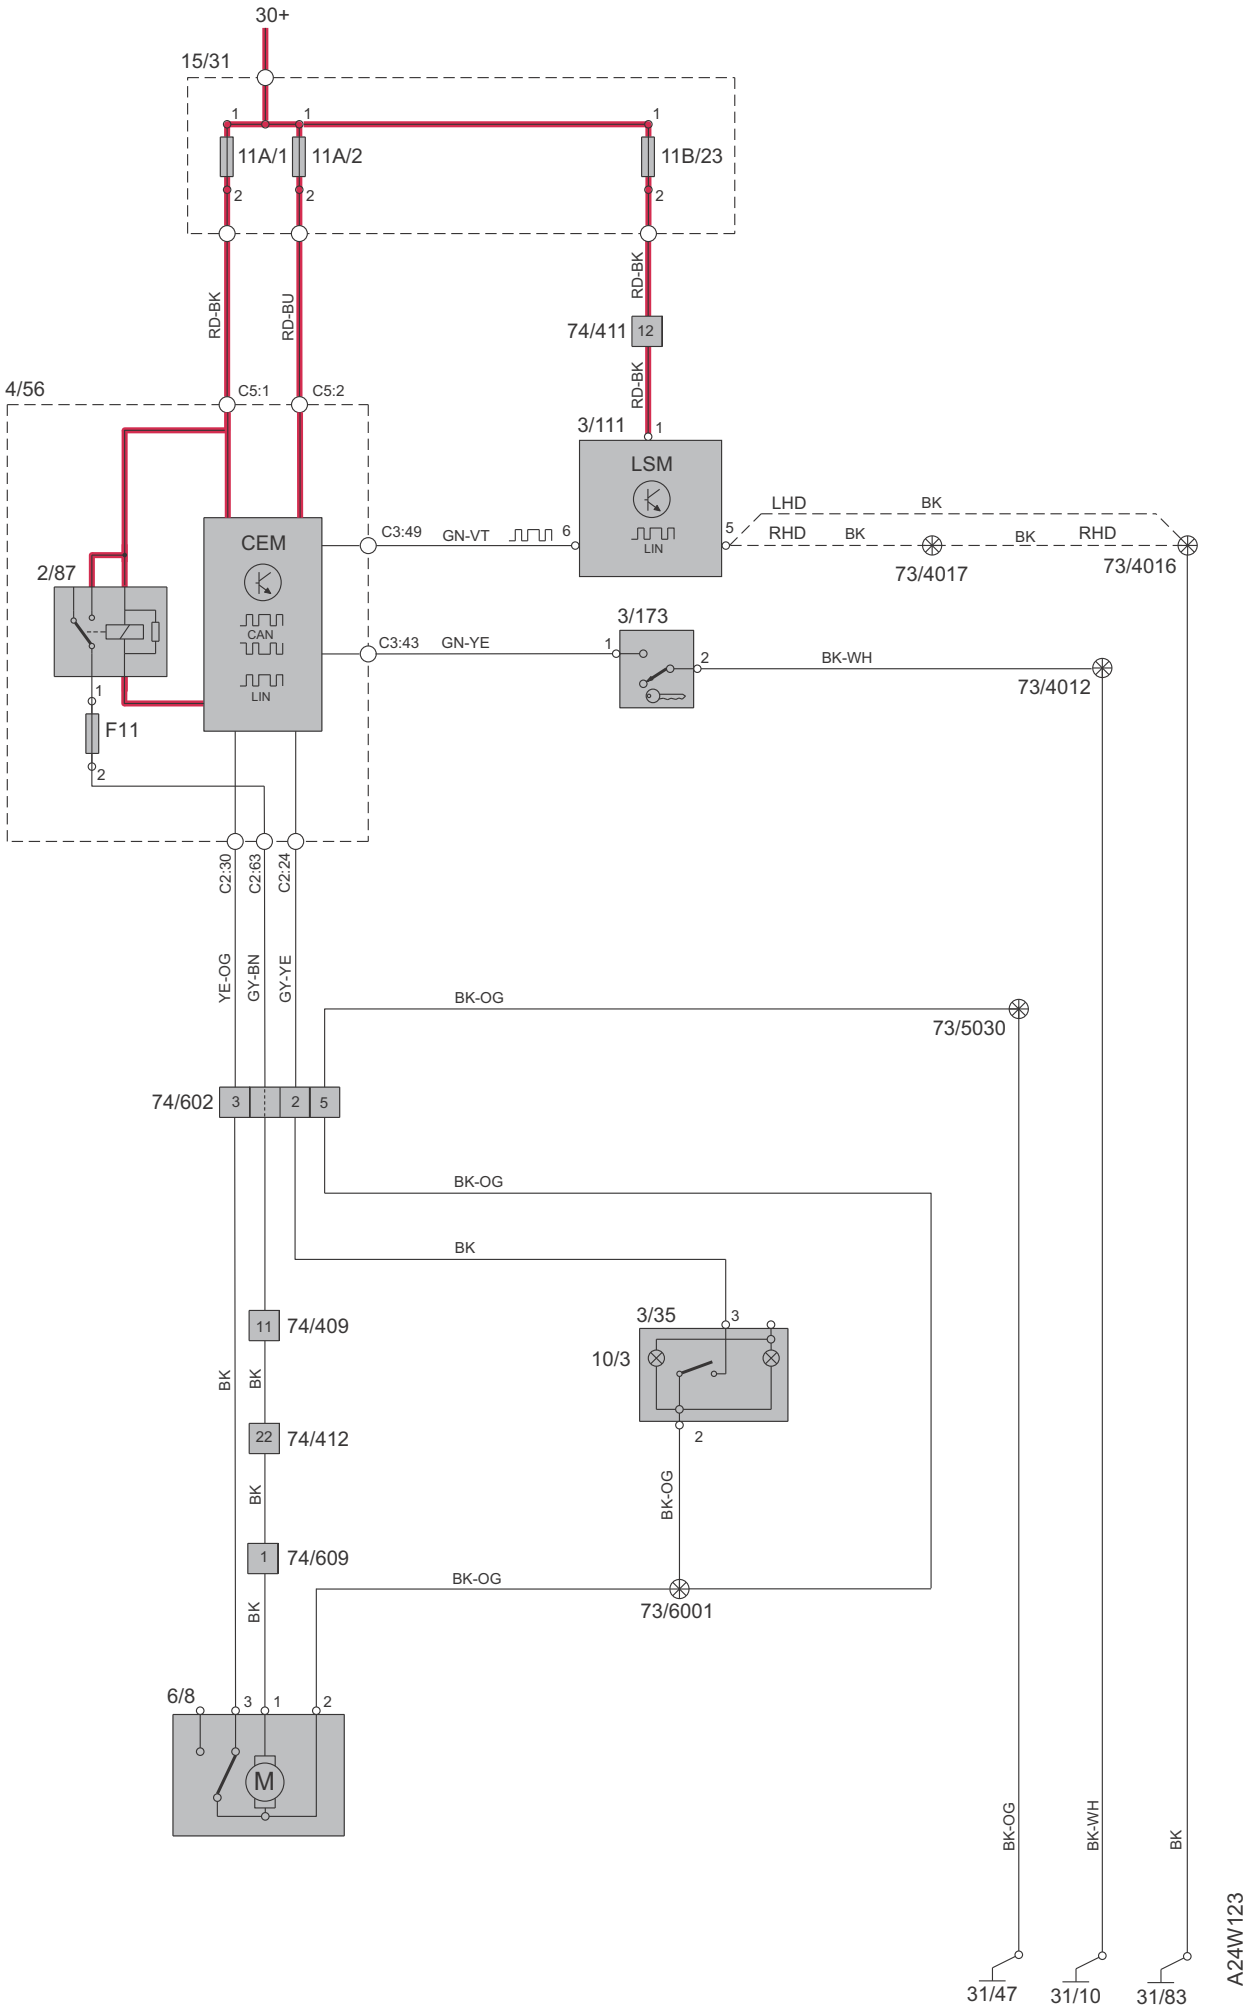

Group 83 Doors and openings
Central locking fuel filler flap

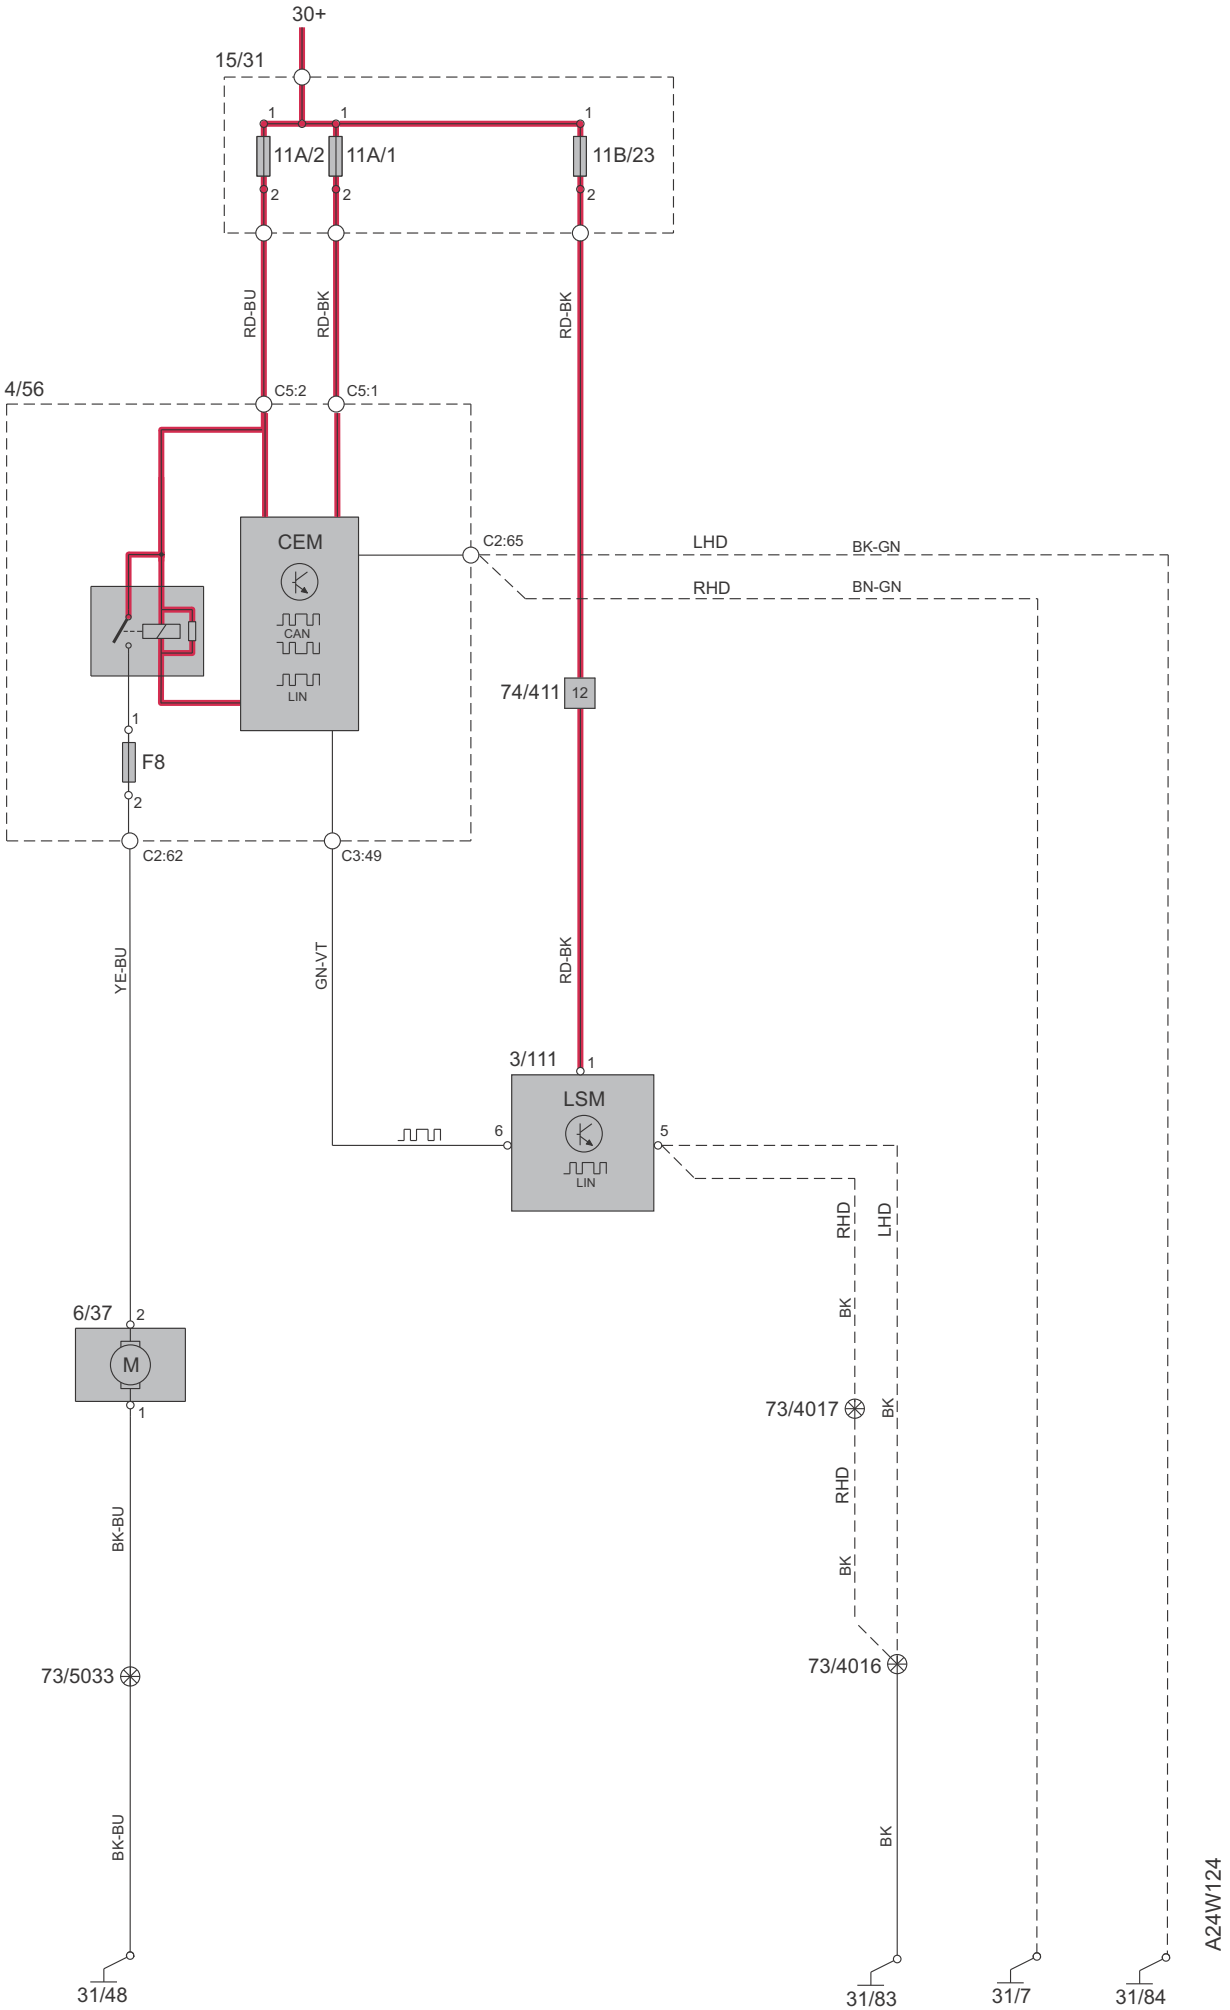

Group 83 Doors and openings
Signal receiver central locking

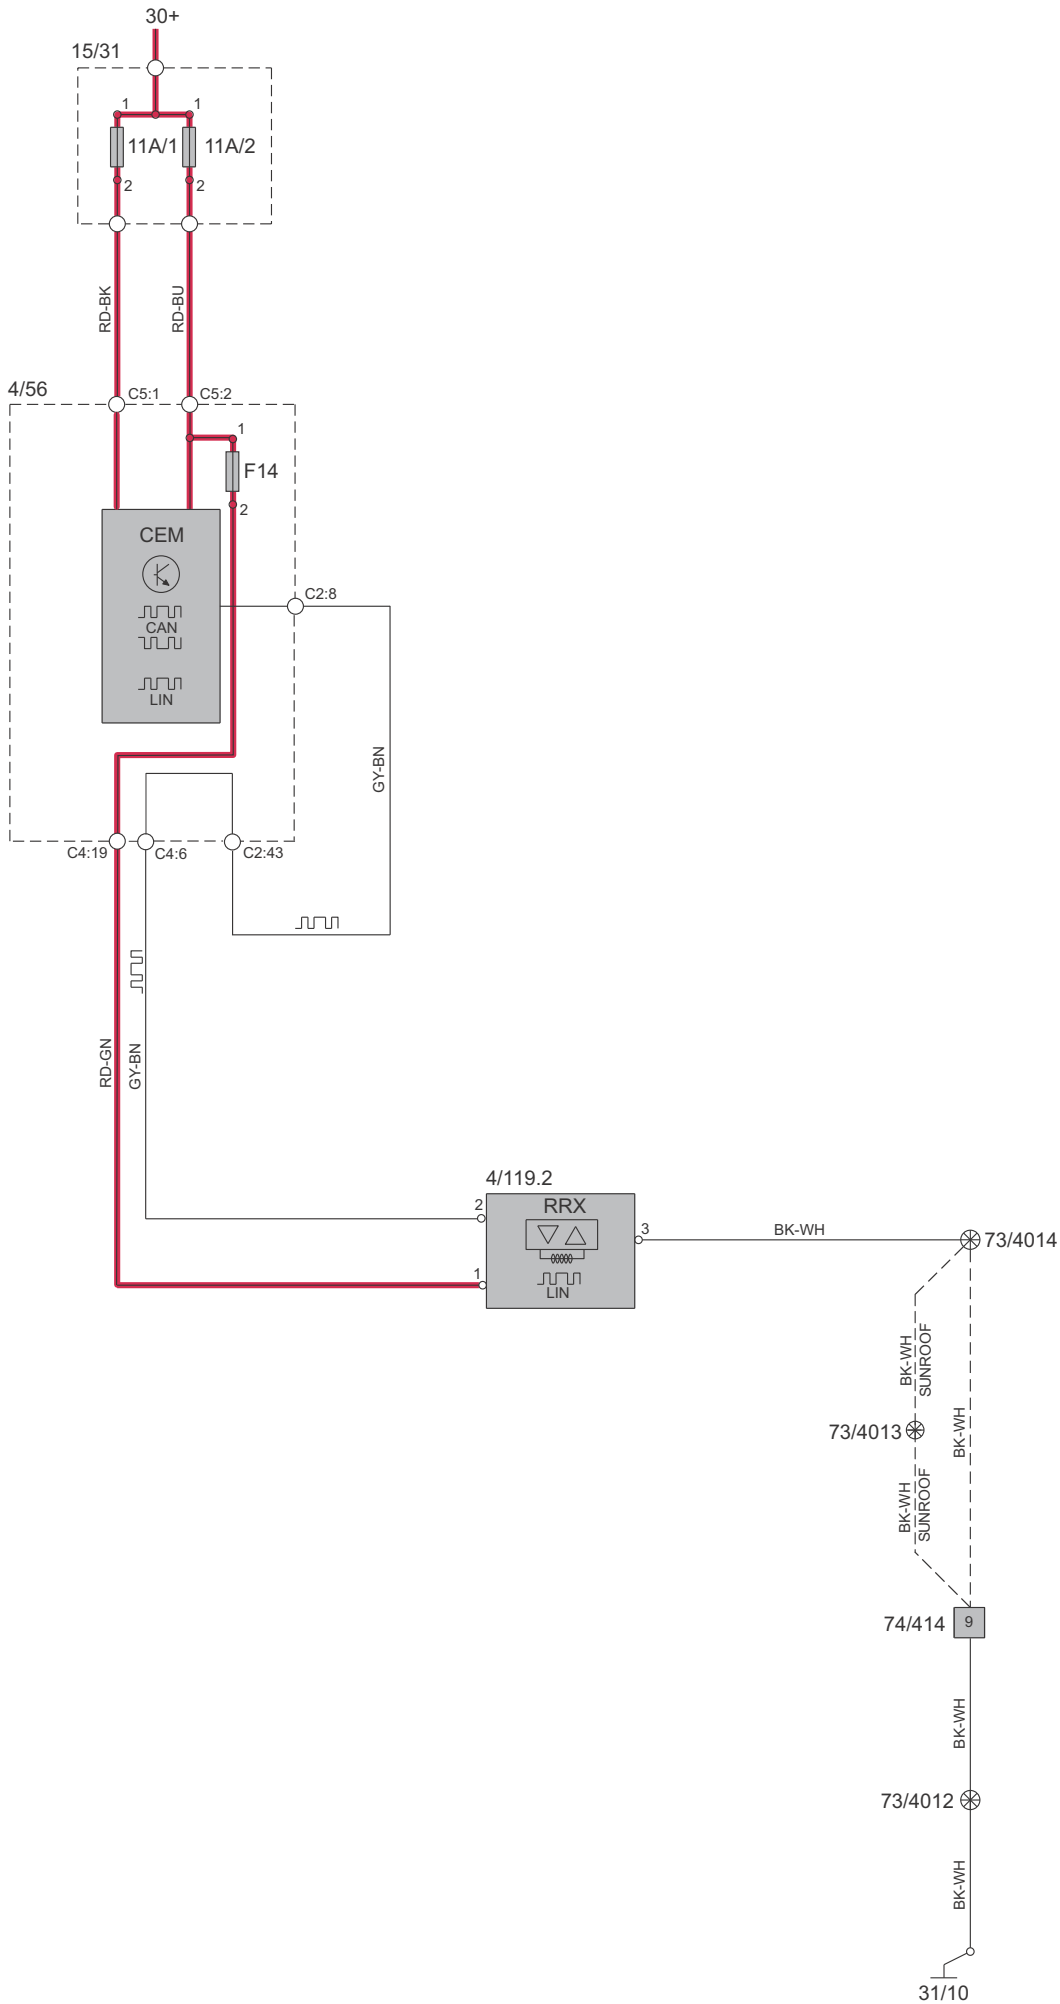

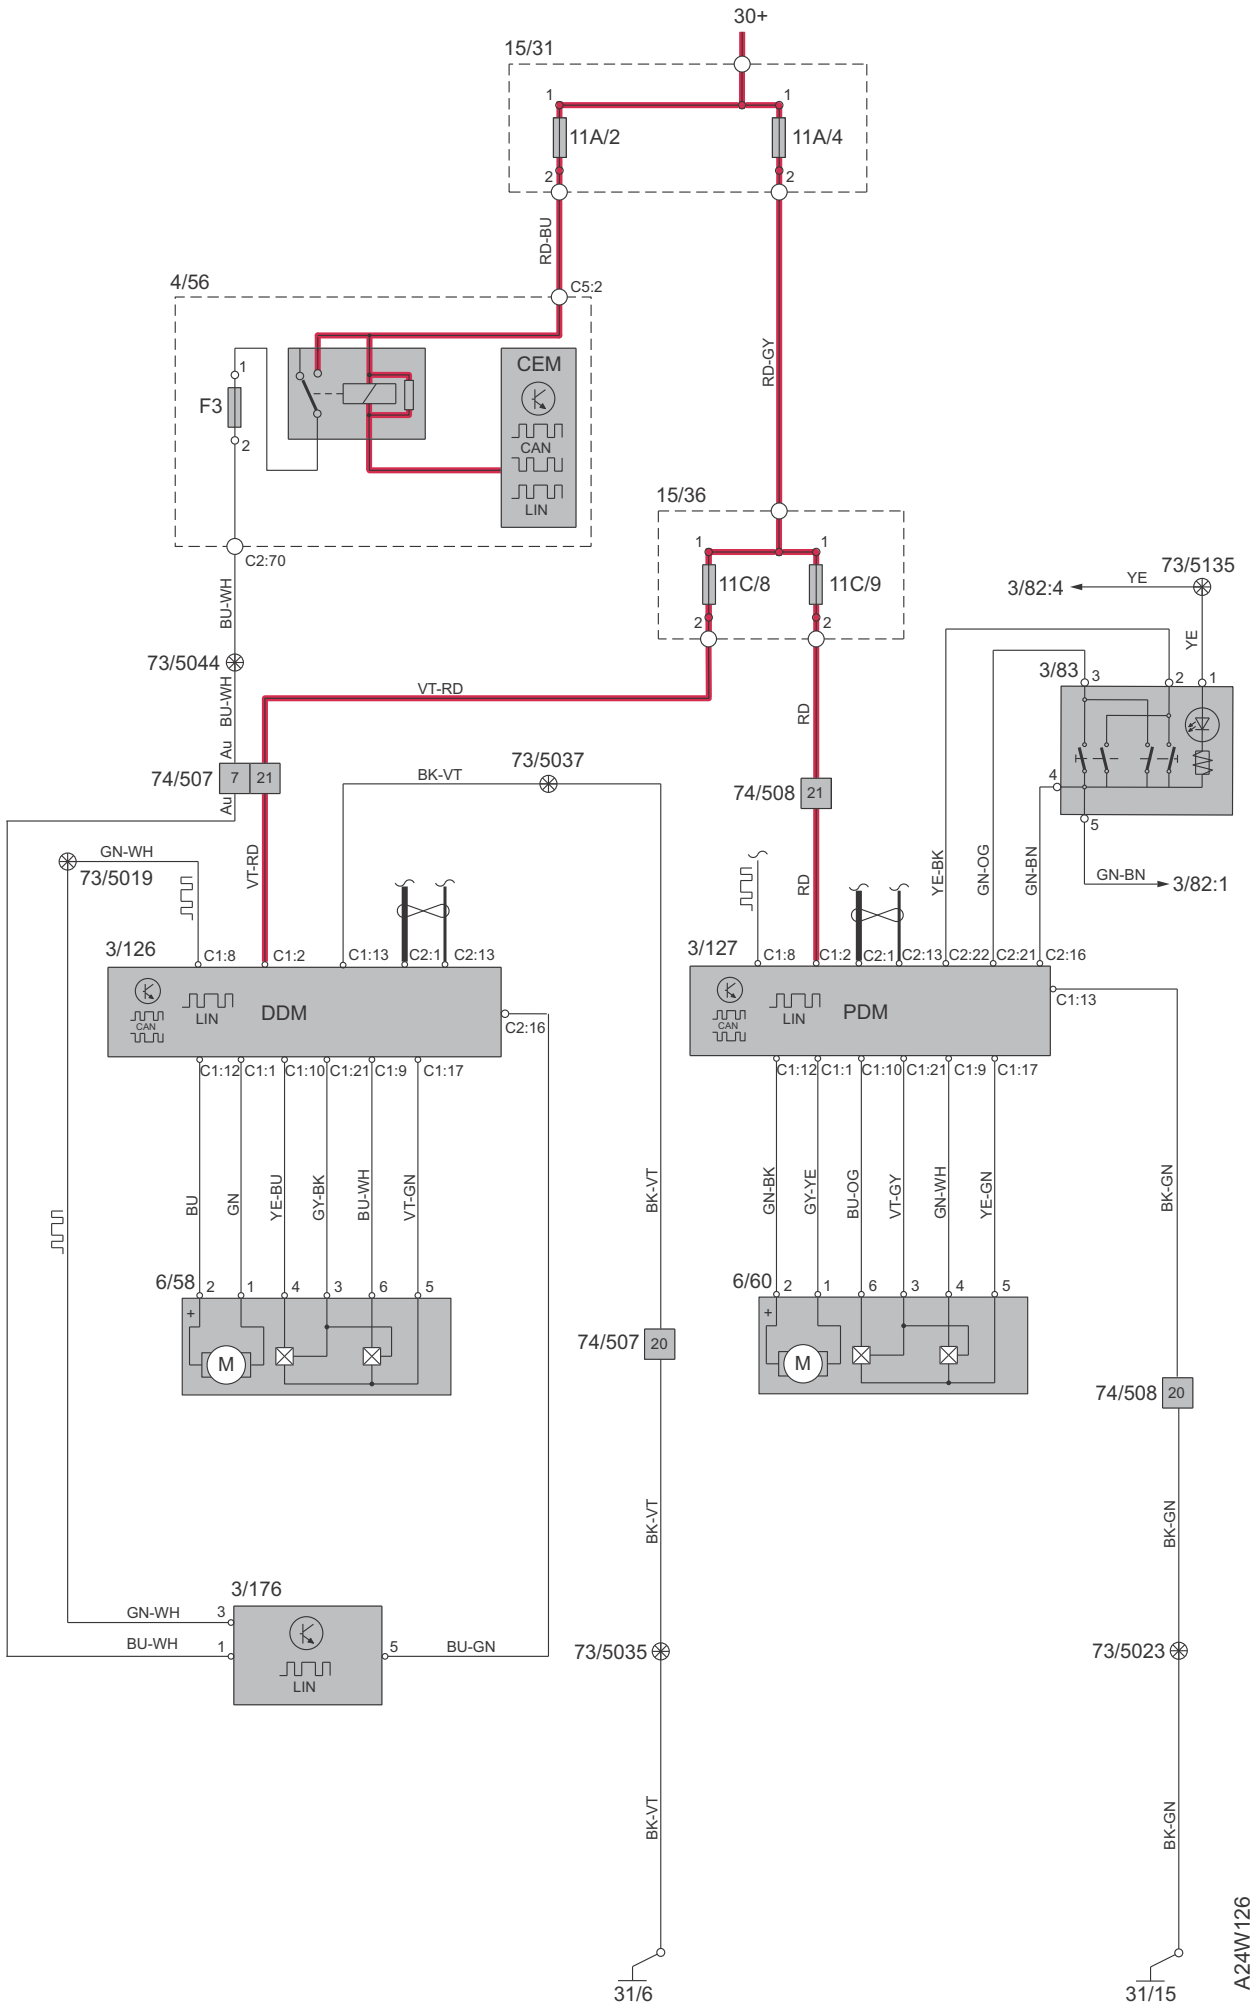
30+
15/31
11A/2
11A/4
RD-BU
4/56
C5:2
CEM
CAN
LIN
F3
RD-GY
15/36
11C/8
11C/9
C2:70
BU-WH
73/5044
VT-RD
RD
73/5135
3/82:4
YE
3/83
74/507
74/508
BK-VT
73/5037
GN-WH
73/5019
YE-BK
GN-OG
GN-BN
3/82:1
3/126
3/127
DDM
PDM
C2:16
C1:13
BU
GN
YE-BU
GY-BK
BU-WH
VT-GN
GN-BK
GY-YE
BU-OG
VT-GY
GN-WH
YE-GN
BK-GN
6/58
6/60
74/507
74/508
3/176
BU-GN
73/5035
73/5023
31/6
31/15
A24W126

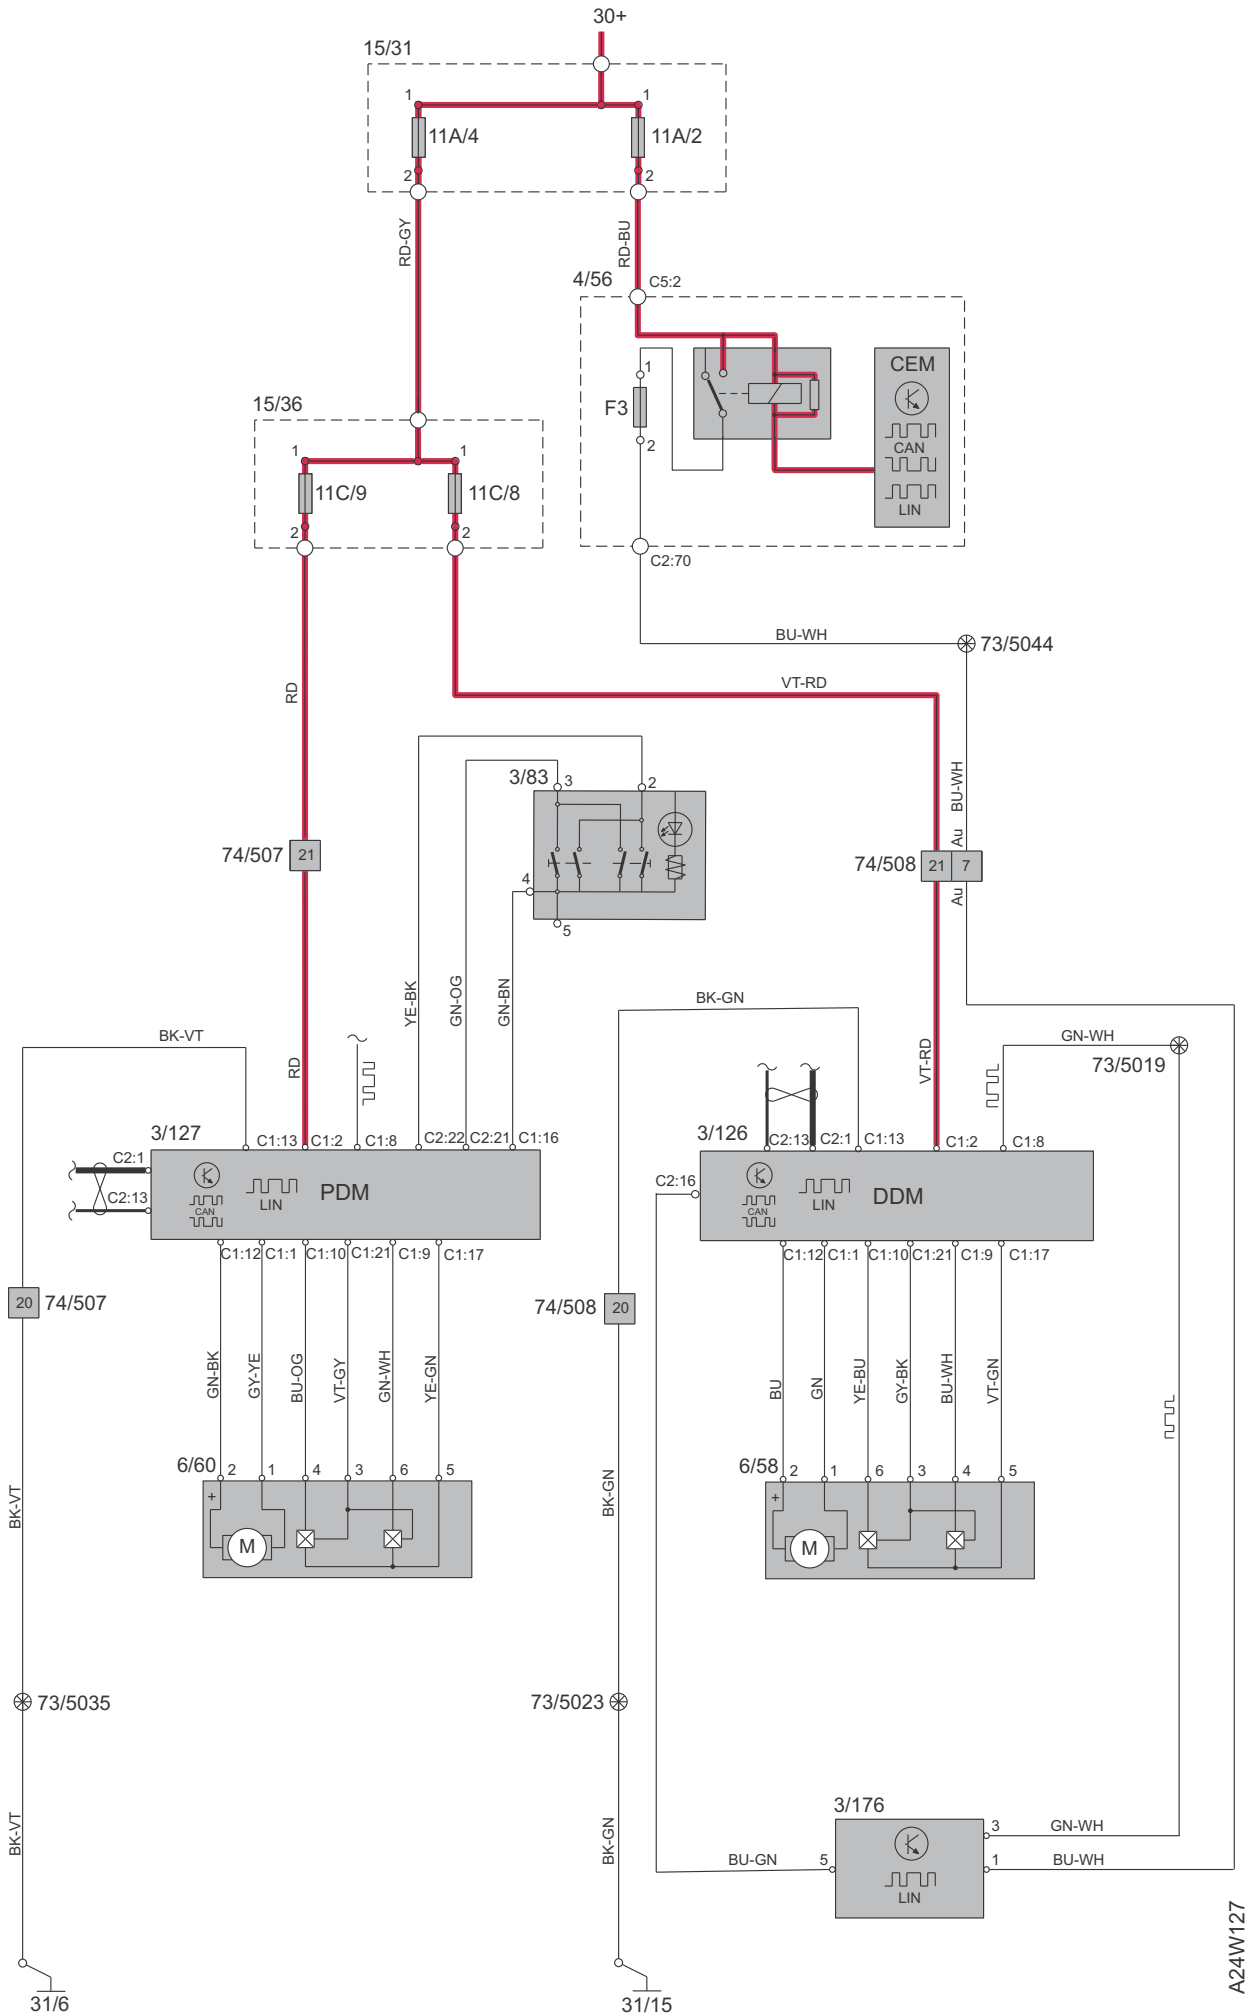
30+
15/31
11A/4
11A/2
RD-GY
RD-BU
4/56
C5:2
F3
CEM
CAN
LIN
15/36
11C/9
11C/8
C2:70
BU-WH
73/5044
VT-RD
RD
3/83
74/507
21
74/508
21
7
BU-WH
Au
YE-BK
GN-OG
GN-BN
BK-GN
BK-VT
GN-WH
73/5019
3/127
C1:13
C1:2
C1:8
C2:22
C2:21
C2:1
C2:13
PDM
C1:16
3/126
C2:16
DDM
C1:12
C1:1
C1:10
C1:21
C1:9
C1:17
20
74/507
74/508
20
GN-BK
GY-YE
BU-OG
VT-GY
GN-WH
YE-GN
BU
GN
YE-BU
GY-BK
BU-WH
VT-GN
6/60
6/58
M
73/5035
73/5023
3/176
BU-GN
5
GN-WH
BU-WH
31/6
31/15
A24W127

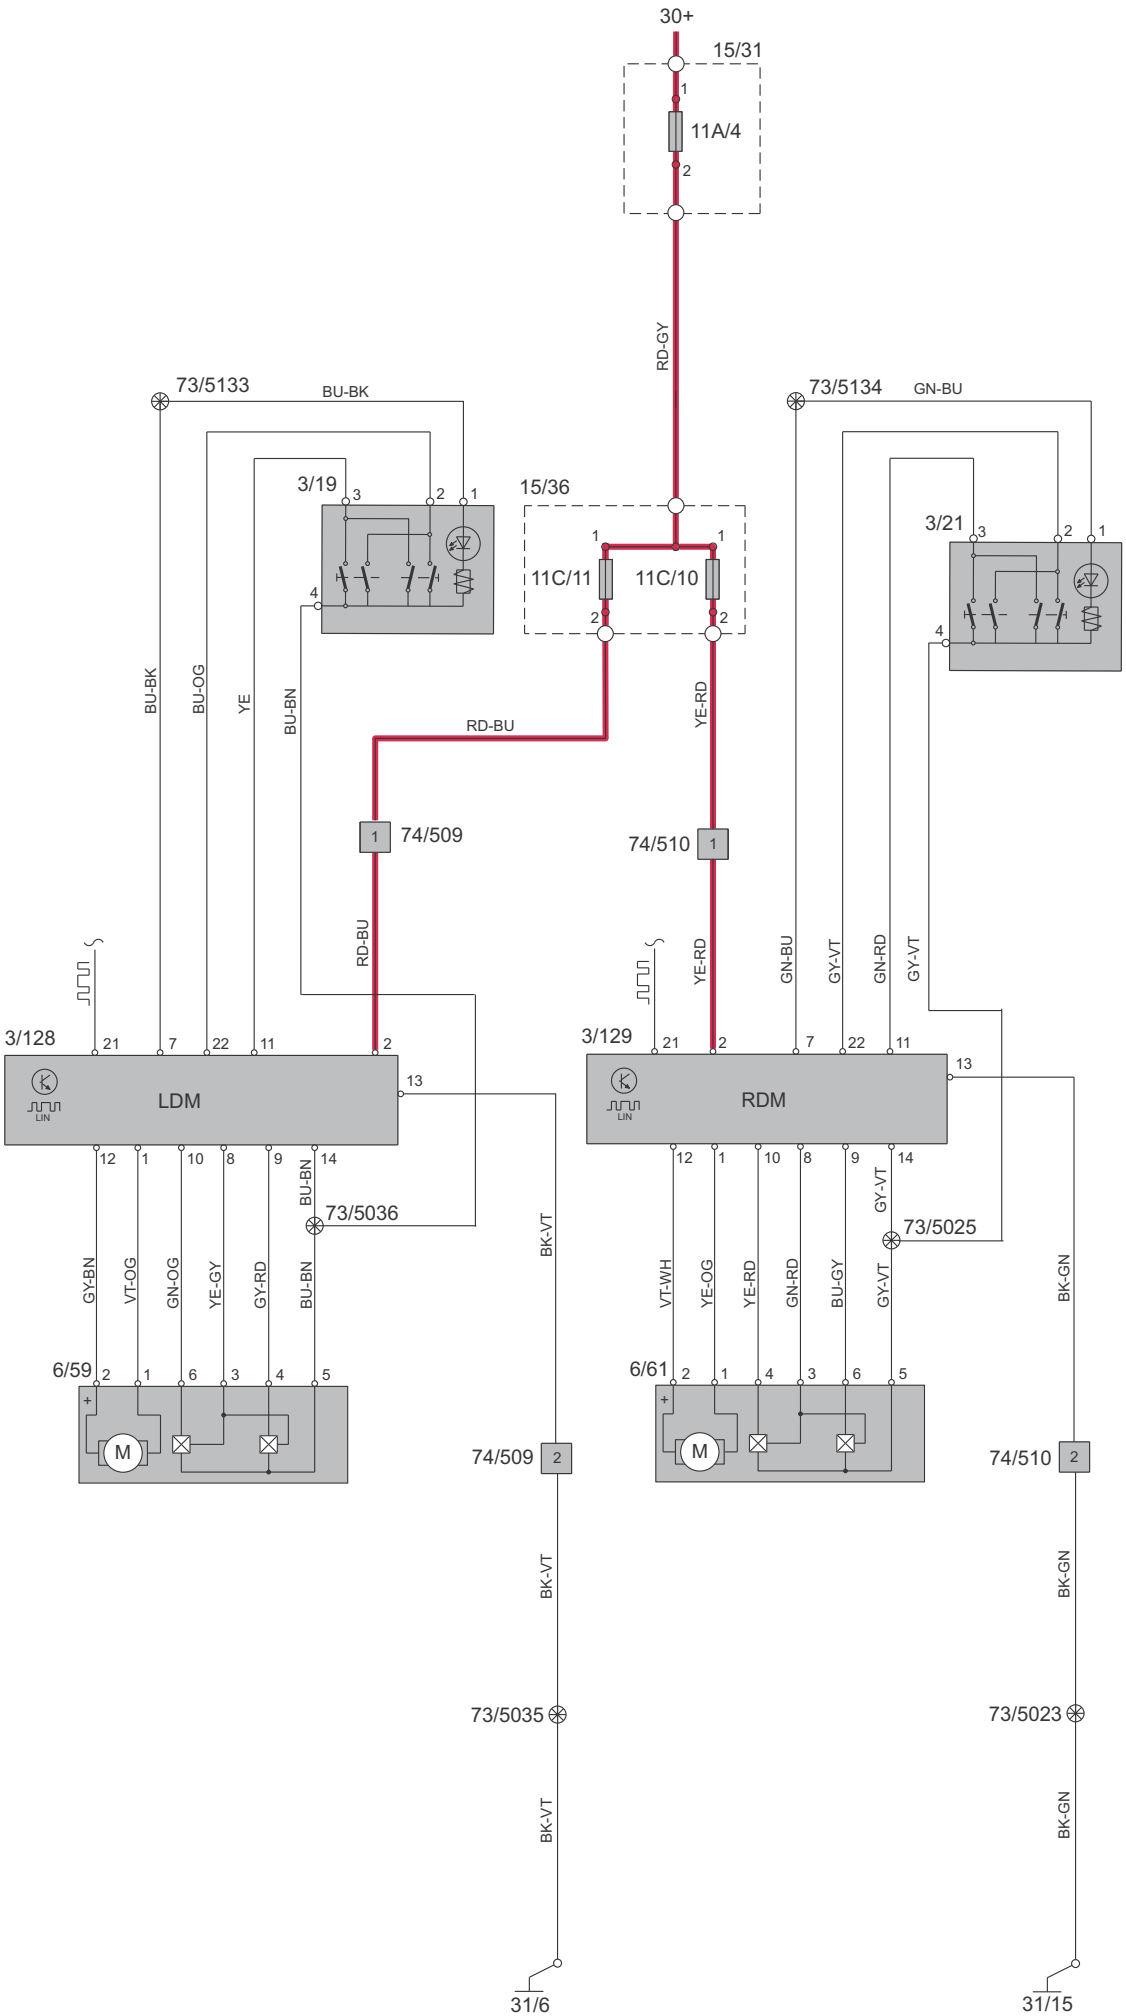
30+
15/31
11A/4
RD-GY
73/5133
BU-BK
73/5134
GN-BU
3/19
15/36
3/21
11C/11
11C/10
BU-BK
BU-OG
YE
BU-BN
RD-BU
YE-RD
74/509
74/510
GN-BU
GY-VT
GN-RD
3/128
LDM
3/129
RDM
LIN
BU-BN
73/5036
BK-VT
GY-VT
73/5025
BK-GN
GY-BN
VT-OG
GN-OG
YE-GY
GY-RD
VT-WH
YE-OG
YE-RD
GN-RD
BU-GY
6/59
6/61
M
74/509
74/510
BK-VT
BK-GN
73/5035
73/5023
31/6
31/15
A24W128

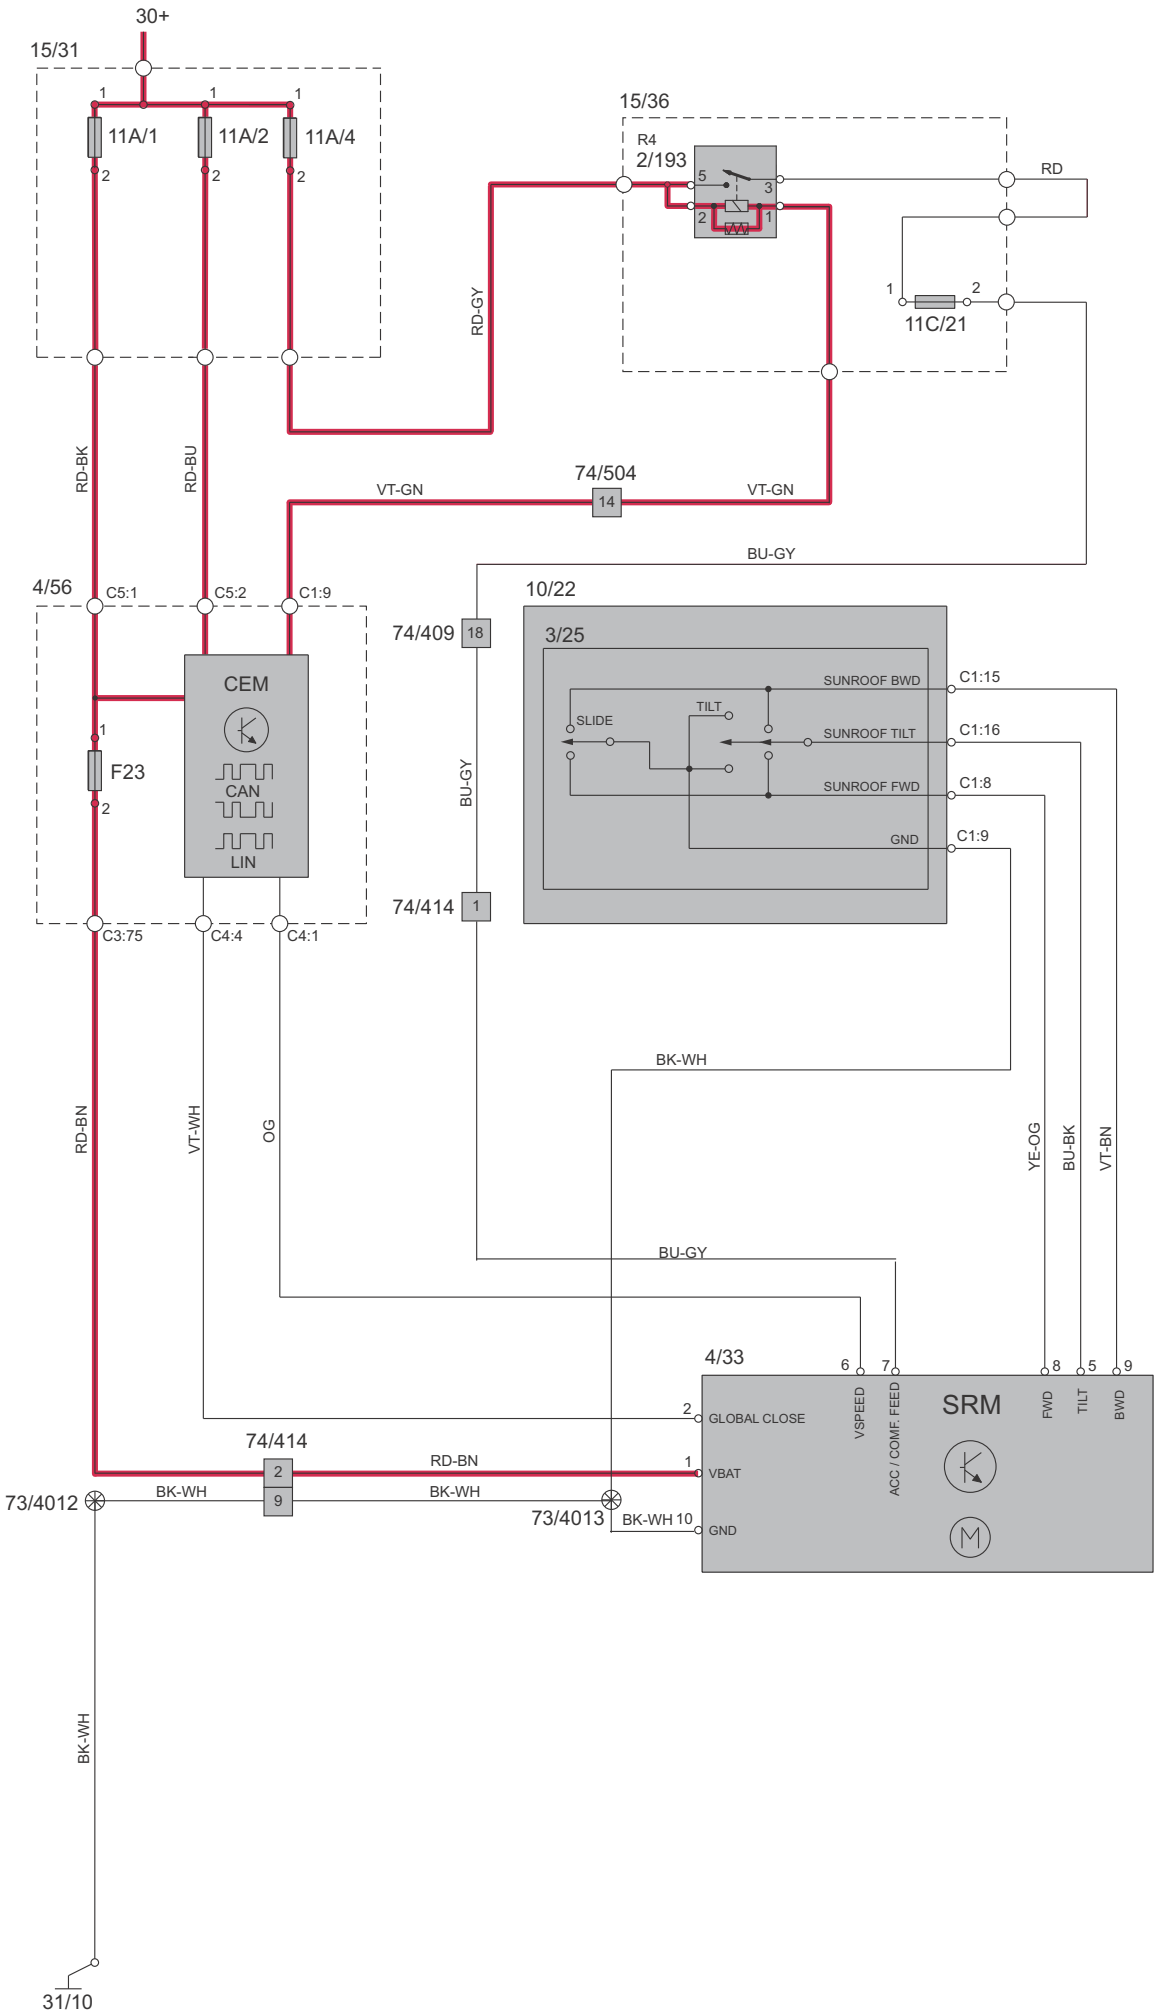
30+
15/31
11A/1
11A/2
11A/4
15/36
R4
2/193
RD
11C/21
RD-GY
RD-BK
RD-BU
VT-GN
74/504
14
BU-GY
4/56
C5:1
C5:2
C1:9
CEM
F23
CAN
LIN
74/409
18
10/22
3/25
SUNROOF BWD
SLIDE
TILT
SUNROOF TILT
SUNROOF FWD
GND
C1:15
C1:16
C1:8
C1:9
74/414
1
C3:75
C4:4
C4:1
BK-WH
RD-BN
VT-WH
OG
YE-OG
BU-BK
VT-BN
4/33
SRM
GLOBAL CLOSE
VBAT
GND
VSPEED
ACC / COMF. FEED
FWD
TILT
BWD
74/414
2
9
73/4012
73/4013
BK-WH 10
31/10

A31W028

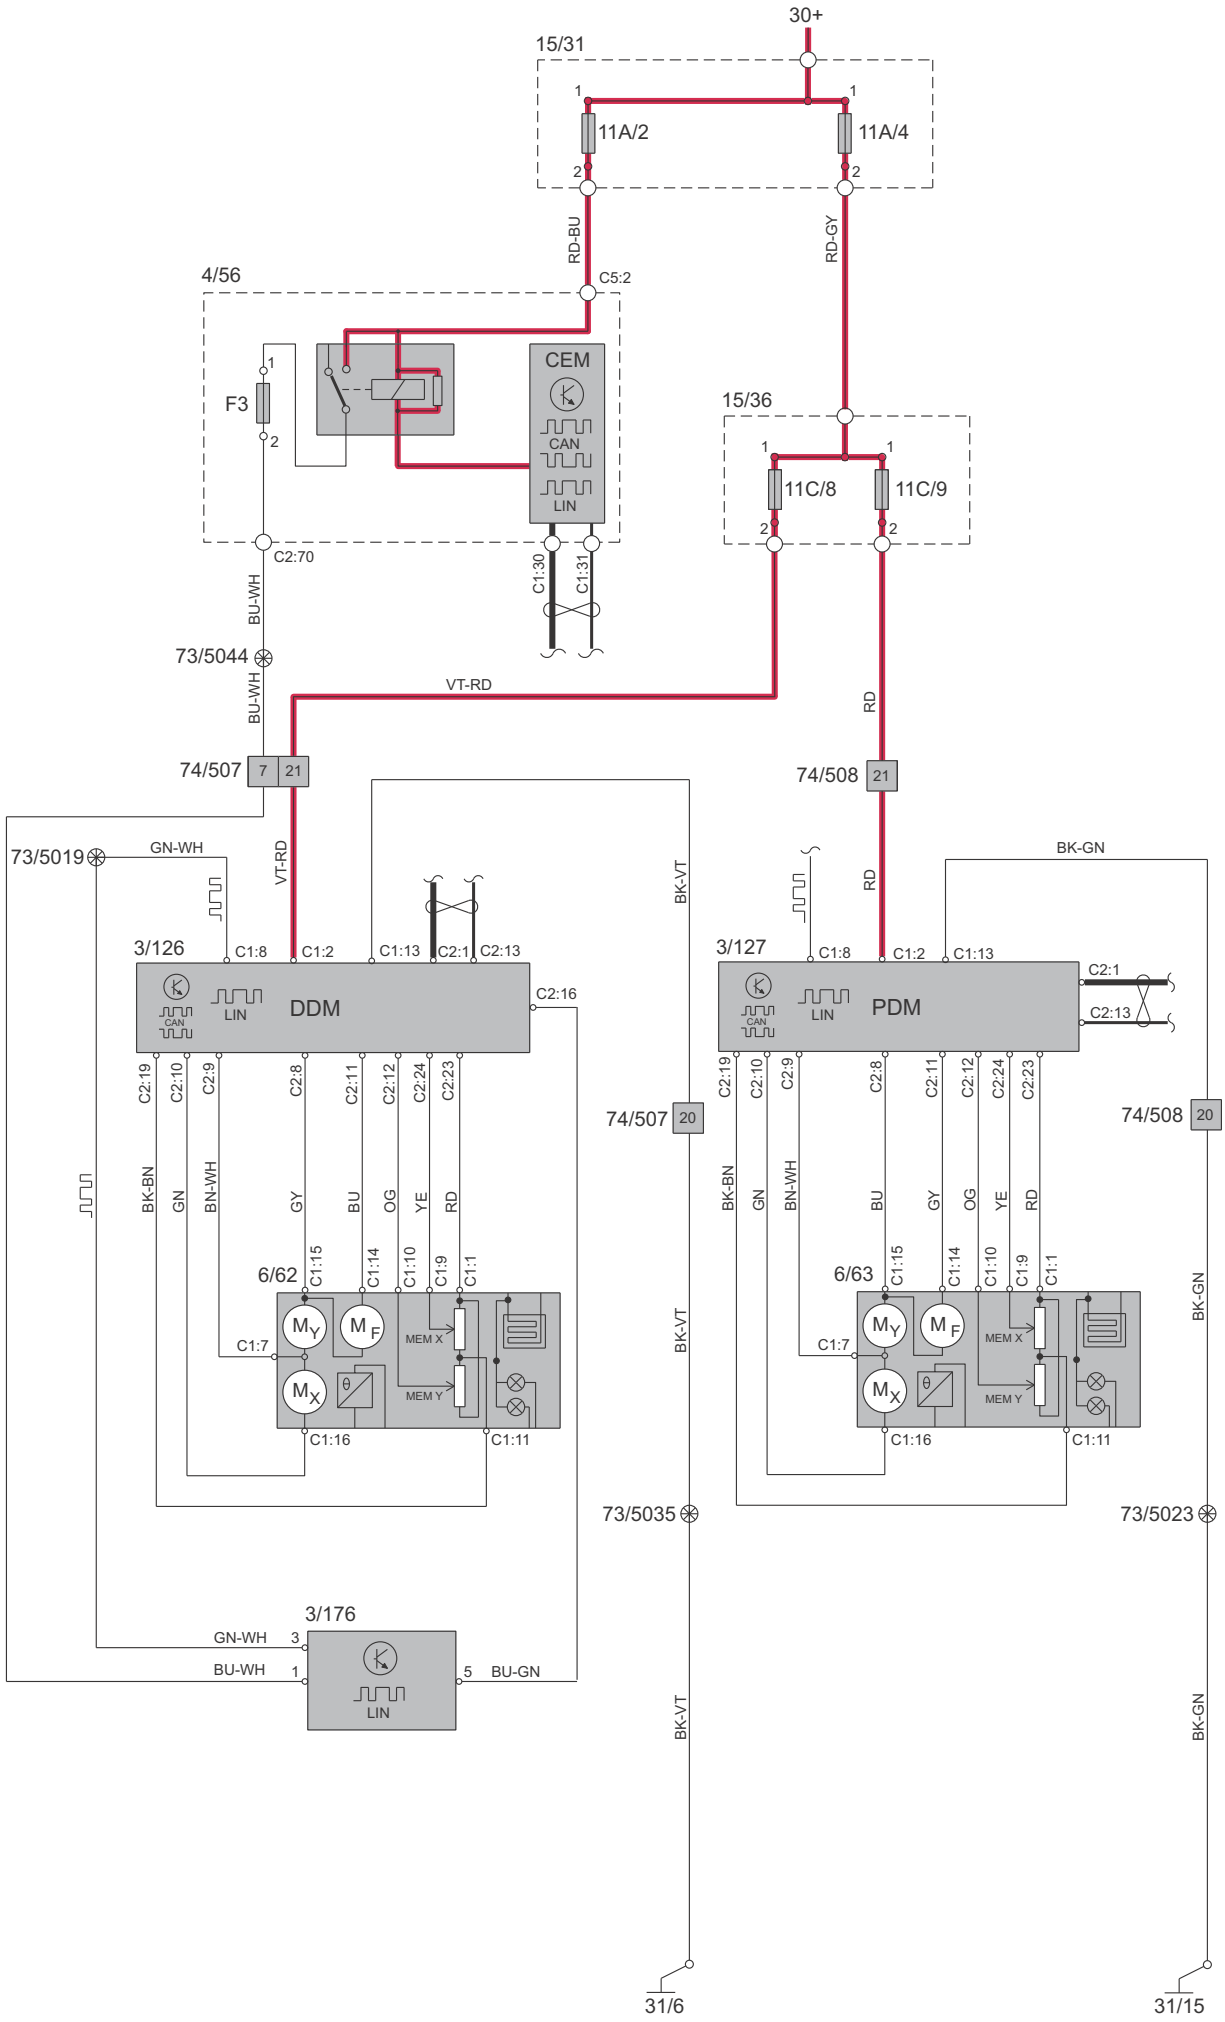
30+
15/31
11A/2
11A/4
RD-BU
RD-GY
4/56
C5:2
F3
CEM
CAN
LIN
15/36
11C/8
11C/9
C2:70
C1:30
C1:31
BU-WH
73/5044
VT-RD
RD
74/507
74/508
73/5019
GN-WH
BK-GN
BK-VT
3/126
3/127
DDM
PDM
C1:8
C1:2
C1:13
C2:1
C2:13
C2:16
74/507 20
74/508 20
BK-BN
GN
BN-WH
GY
BU
OG
YE
RD
6/62
6/63
C1:15
C1:14
C1:10
C1:9
C1:1
C1:7
C1:16
C1:11
MEM X
MEM Y
73/5035
73/5023
3/176
BU-GN
31/6
31/15
A24W130

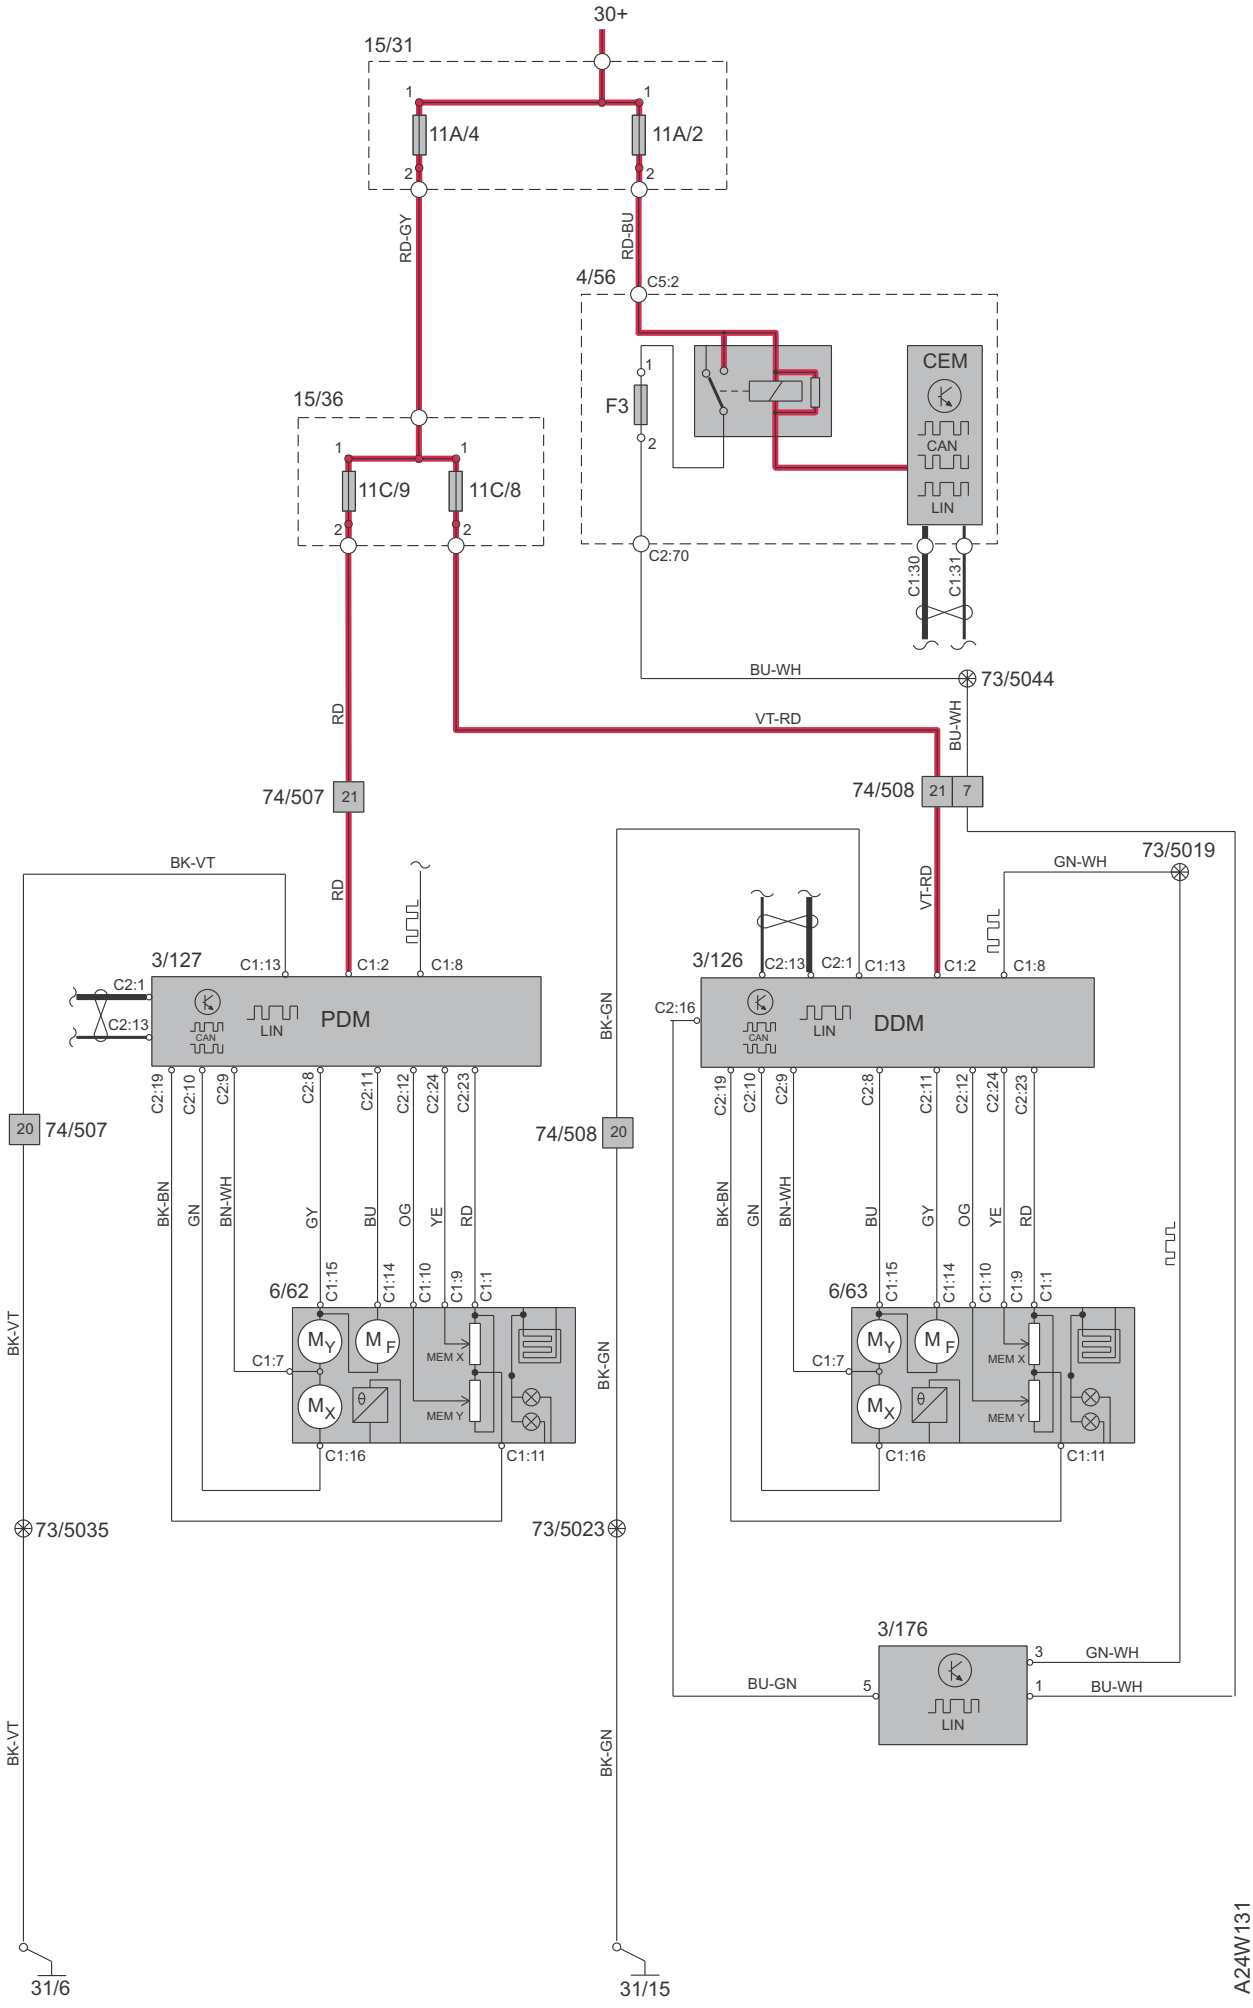
30+
15/31
11A/4
11A/2
RD-GY
RD-BU
4/56
C5:2
F3
CEM
CAN
LIN
15/36
11C/9
11C/8
C2:70
C1:30
C1:31
BU-WH
73/5044
RD
VT-RD
BU-WH
74/507
21
74/508
21
7
BK-VT
RD
GN-WH
73/5019
3/127
C1:13
C1:2
C1:8
C2:1
C2:13
PDM
3/126
C2:13
C2:1
C1:13
C1:2
C1:8
DDM
C2:16
BK-GN
VT-RD
20
74/507
74/508
20
C2:19
C2:10
C2:9
C2:8
C2:11
C2:12
C2:24
C2:23
BK-BN
GN
BN-WH
GY
BU
OG
YE
RD
6/62
6/63
C1:15
C1:14
C1:10
C1:9
C1:1
C1:7
MEM X
MEM Y
C1:16
C1:11
73/5035
73/5023
3/176
BU-GN
GN-WH
BU-WH
5
3
1
BK-VT
BK-GN
31/6
31/15
A24W131

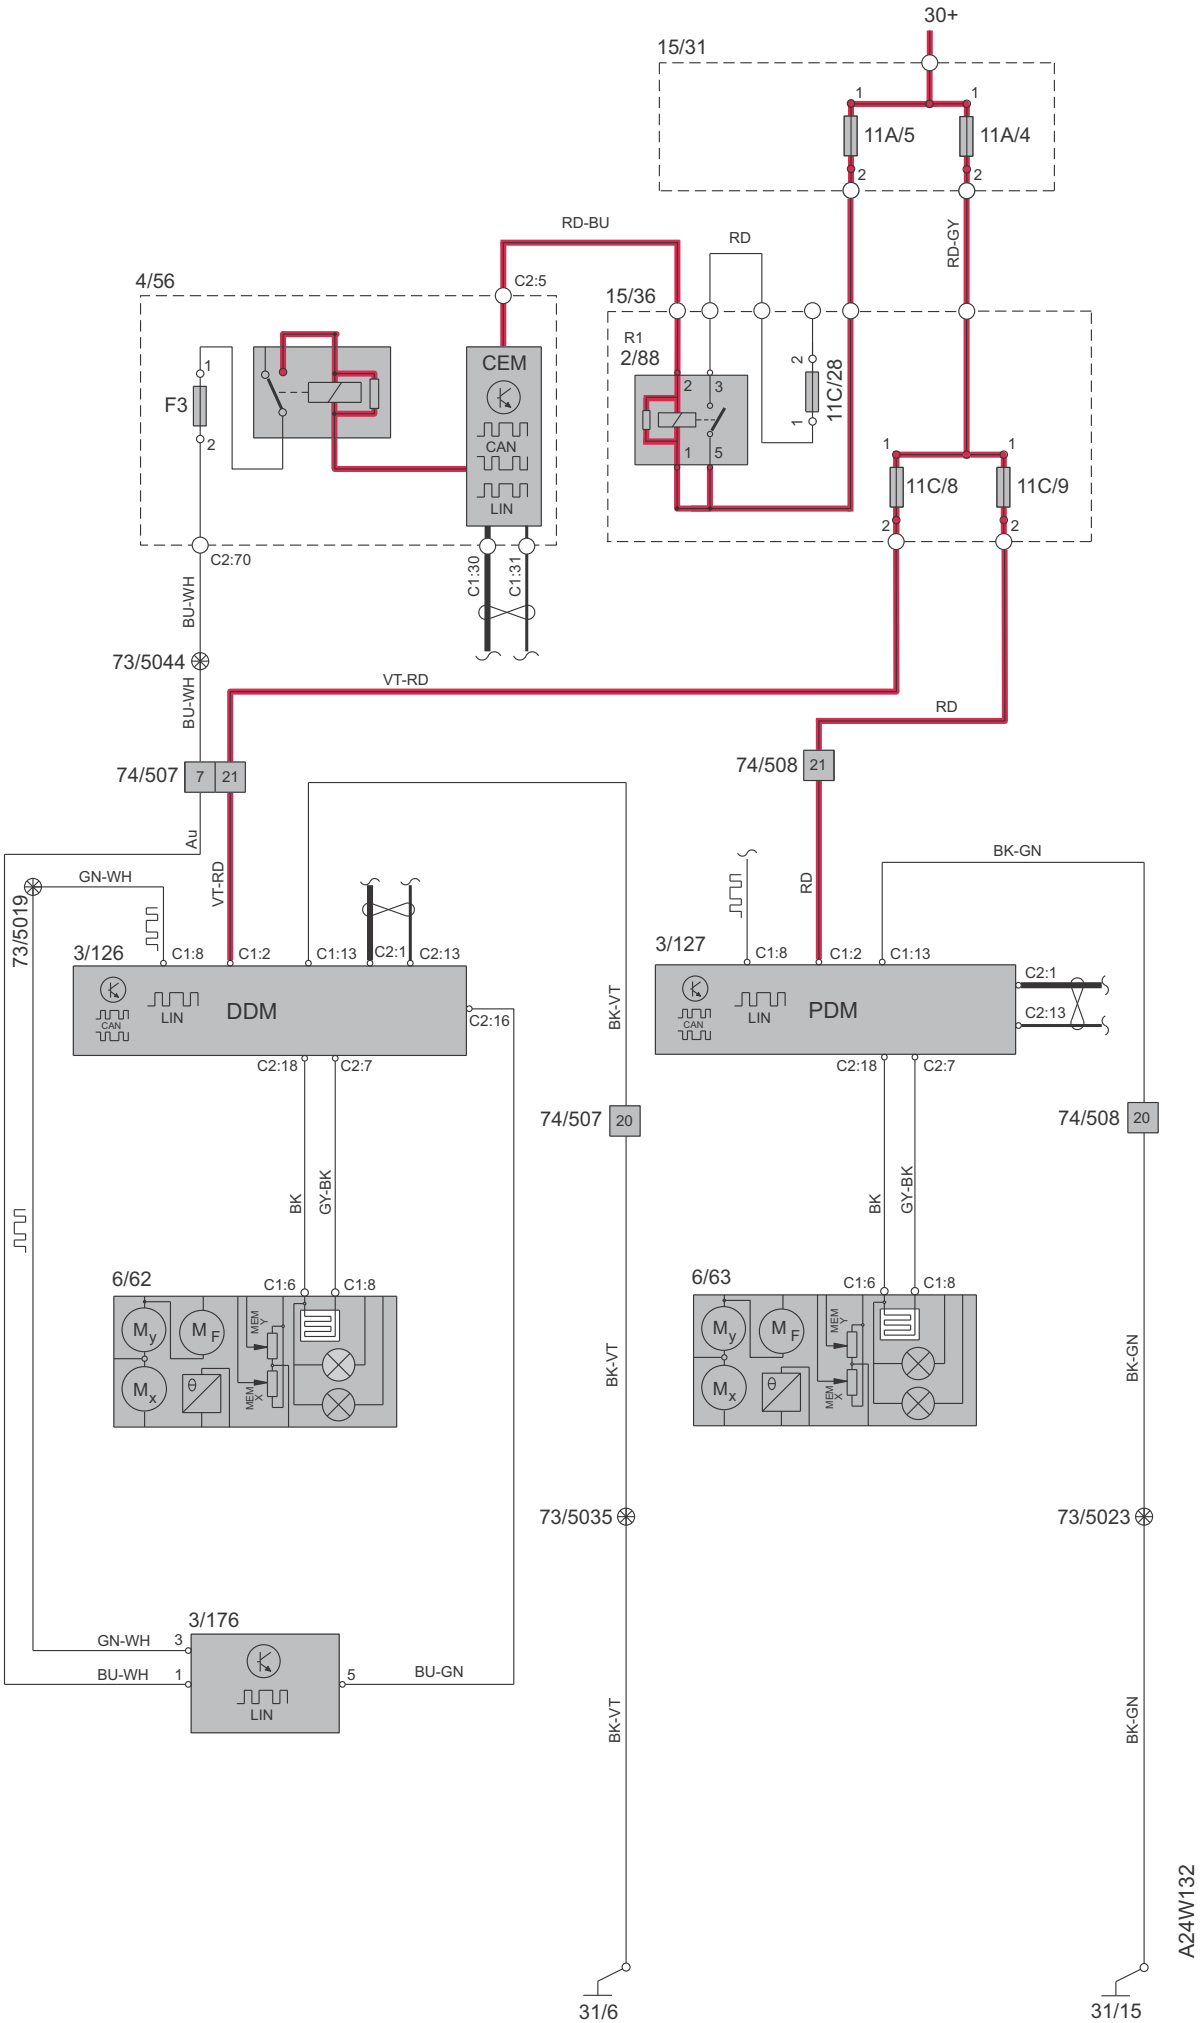
30+
15/31
11A/5
11A/4
RD-BU
RD
RD-GY
4/56
C2:5
15/36
CEM
CAN
LIN
F3
R1
2/88
11C/28
11C/8
11C/9
C2:70
C1:30
C1:31
BU-WH
73/5044
VT-RD
RD
74/507
74/508
Au
GN-WH
73/5019
BK-GN
3/126
3/127
C1:8
C1:2
C1:13
C2:1
C2:13
DDM
PDM
C2:16
C2:18
C2:7
BK-VT
BK
GY-BK
6/62
6/63
C1:6
M y
M F
M x
θ
MEM Y
MEM X
73/5035
73/5023
3/176
BU-WH
BU-GN
31/6
31/15
A24W132

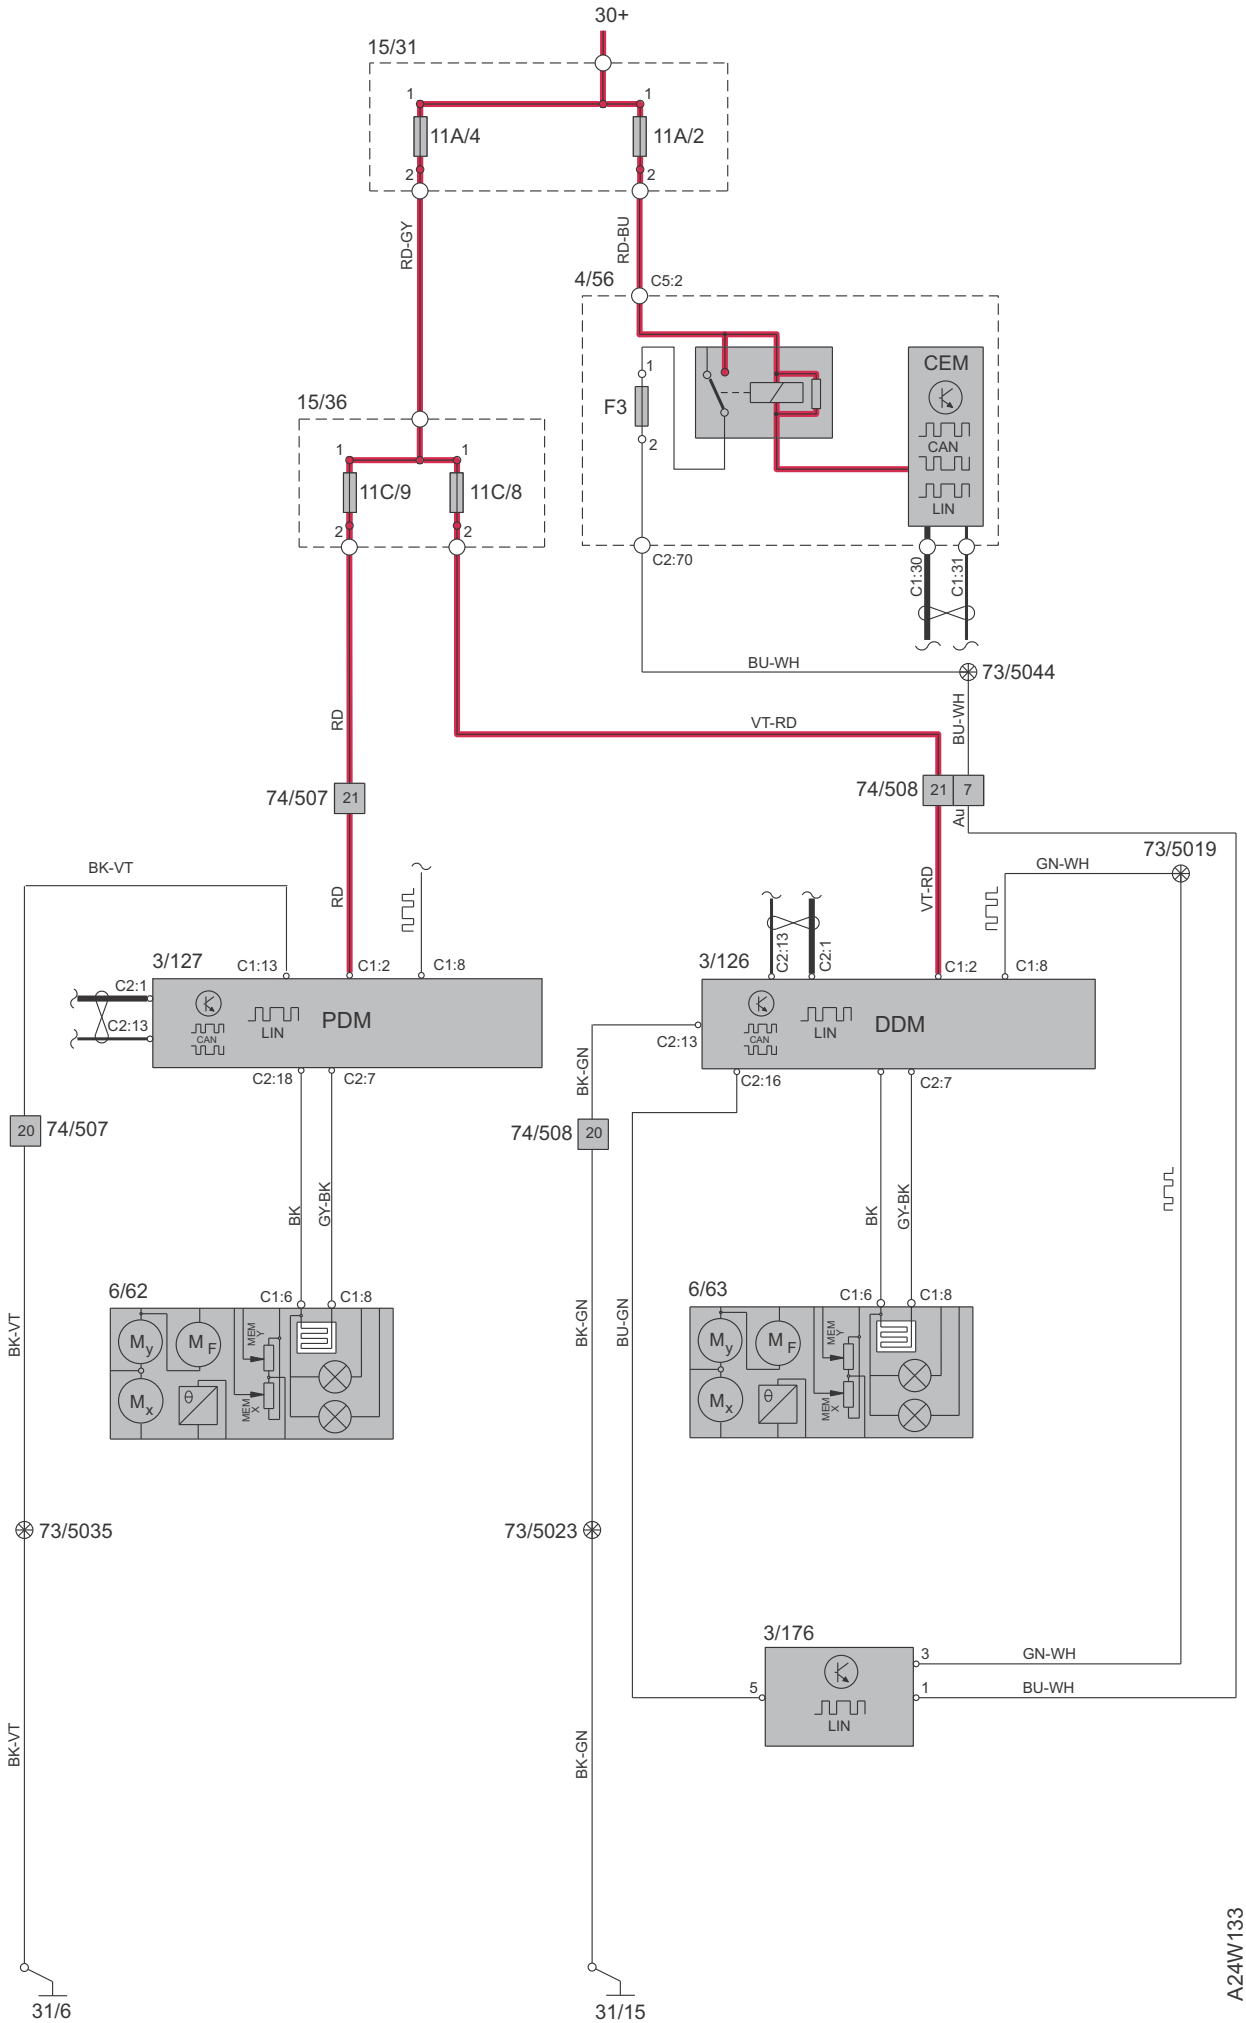
30+
15/31
11A/4
11A/2
RD-GY
RD-BU
4/56
C5:2
F3
CEM
CAN
LIN
15/36
11C/9
11C/8
C2:70
C1:30
C1:31
BU-WH
73/5044
RD
VT-RD
BU-WH
74/507
21
74/508
21
7
Au
73/5019
GN-WH
BK-VT
RD
VT-RD
3/127
C1:13
C1:2
C1:8
C2:1
C2:13
PDM
C2:18
C2:7
3/126
C2:13
C2:1
C1:2
C1:8
DDM
C2:16
C2:7
BK-GN
20
74/507
74/508
20
BK
GY-BK
6/62
C1:6
C1:8
6/63
C1:6
C1:8
BK-VT
BU-GN
73/5035
73/5023
3/176
3
5
1
GN-WH
BU-WH
BK-VT
BK-GN
31/6
31/15
A24W133

Group 84 Exterior decorative elements, etc.
Blind spot information system LHD 1:2

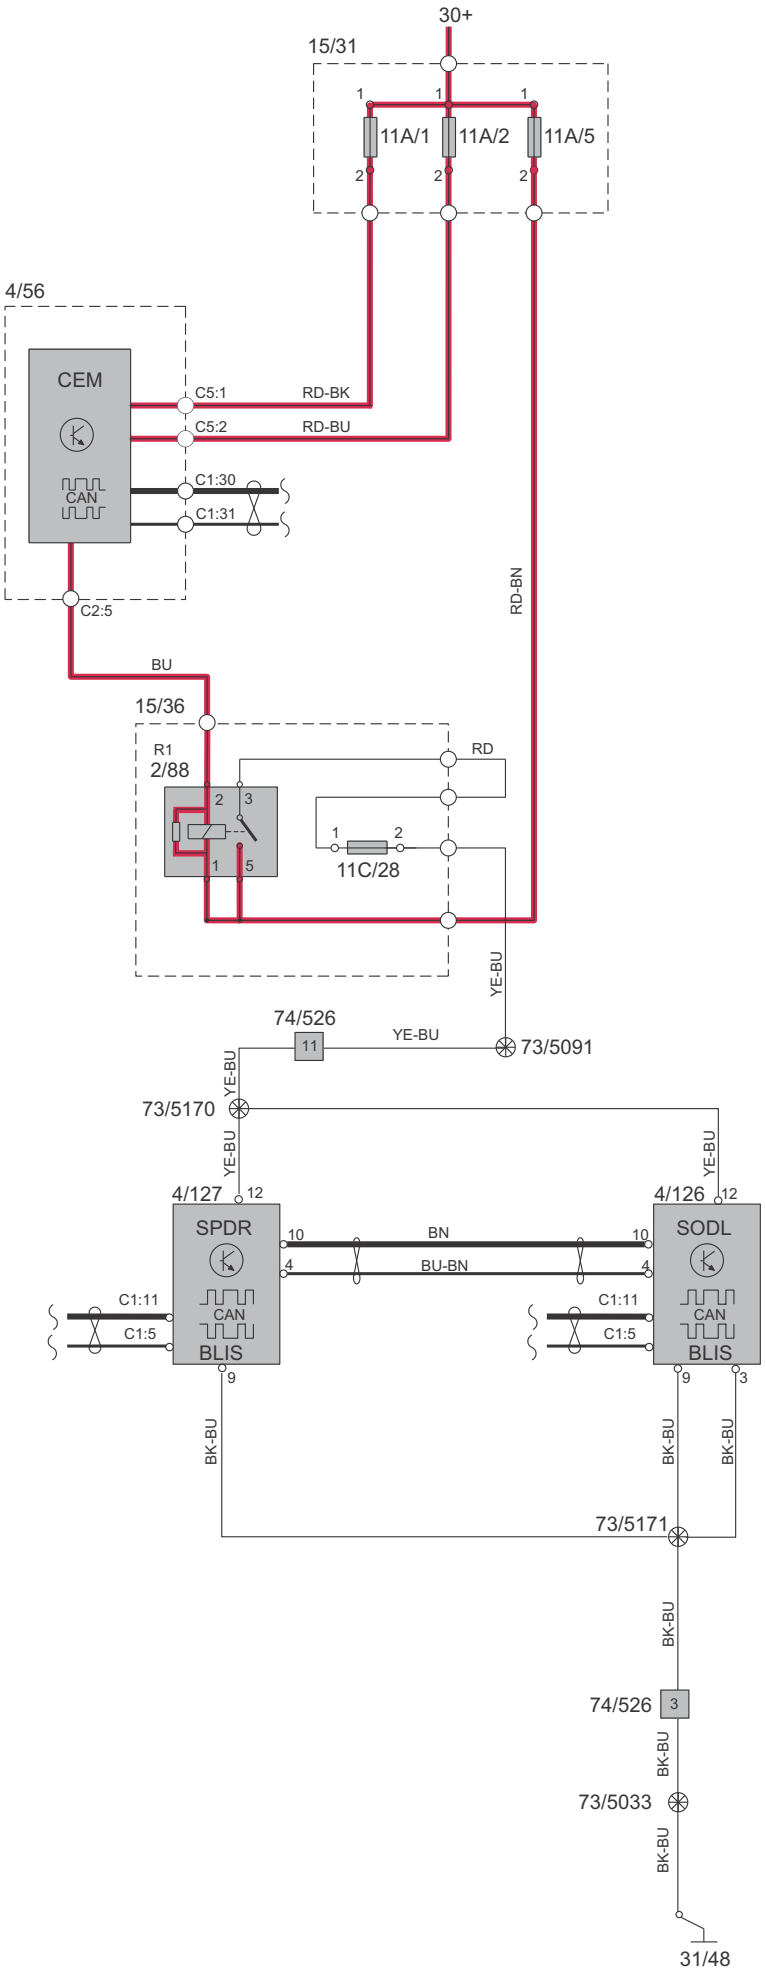

A31W034

Group 84 Exterior decorative elements, etc.
Blind spot information system LHD 2:2

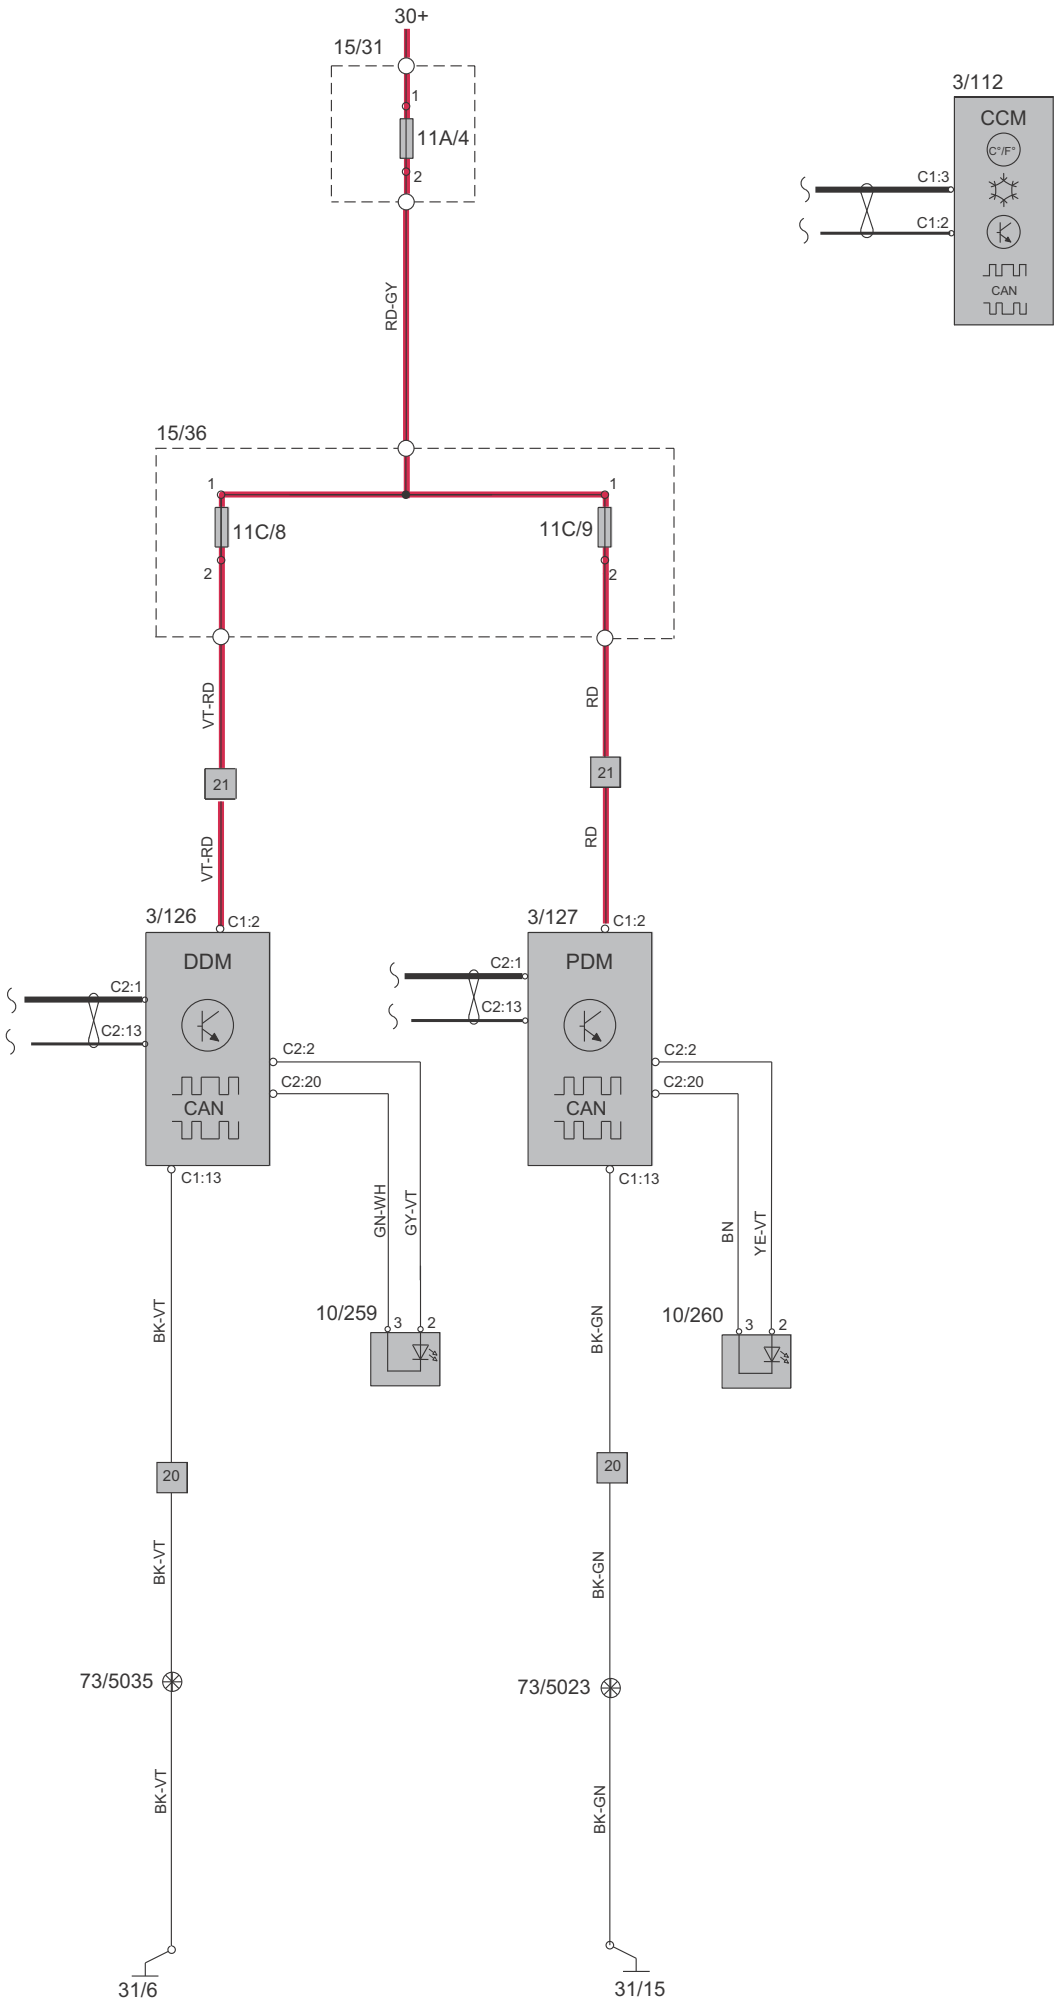

A32W044

Group 84 Exterior decorative elements, etc.
Blind spot information system RHD 1:2

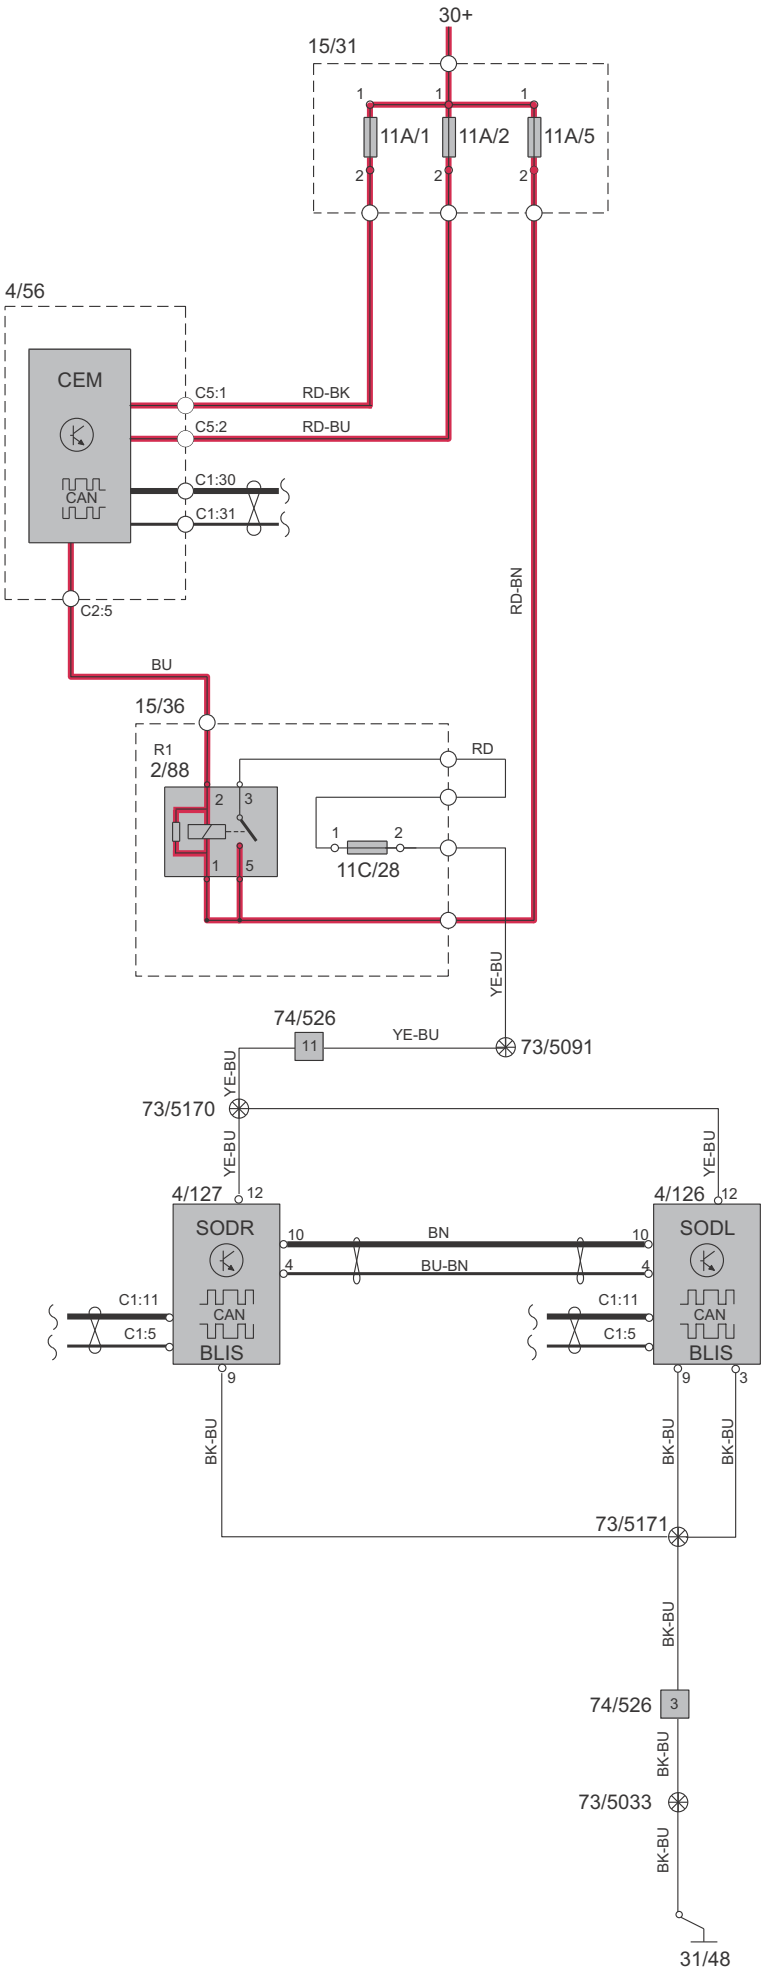

A31W039

Group 84 Exterior decorative elements, etc.
Blind spot information system RHD 2:2

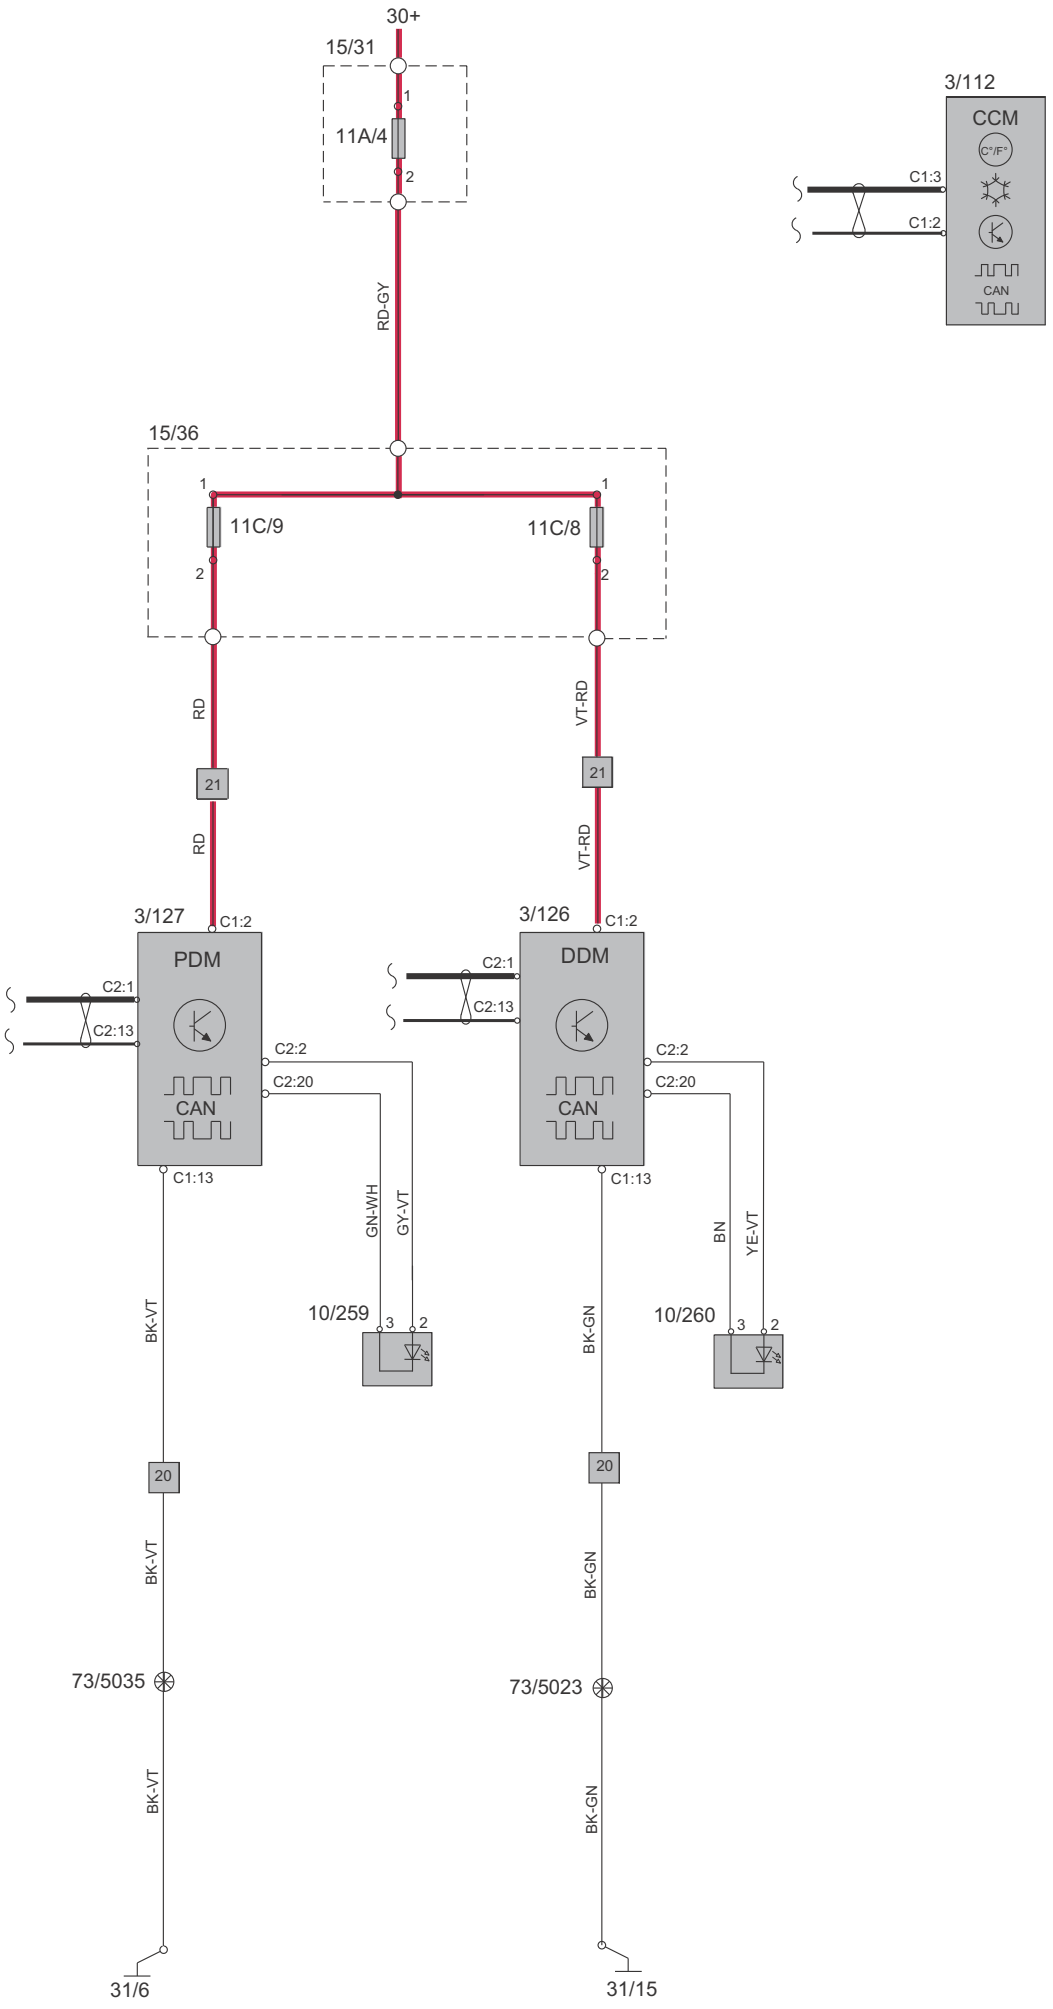

A32W045

Group 84 Exterior decorative elements, etc.
Heated windscreen LHD

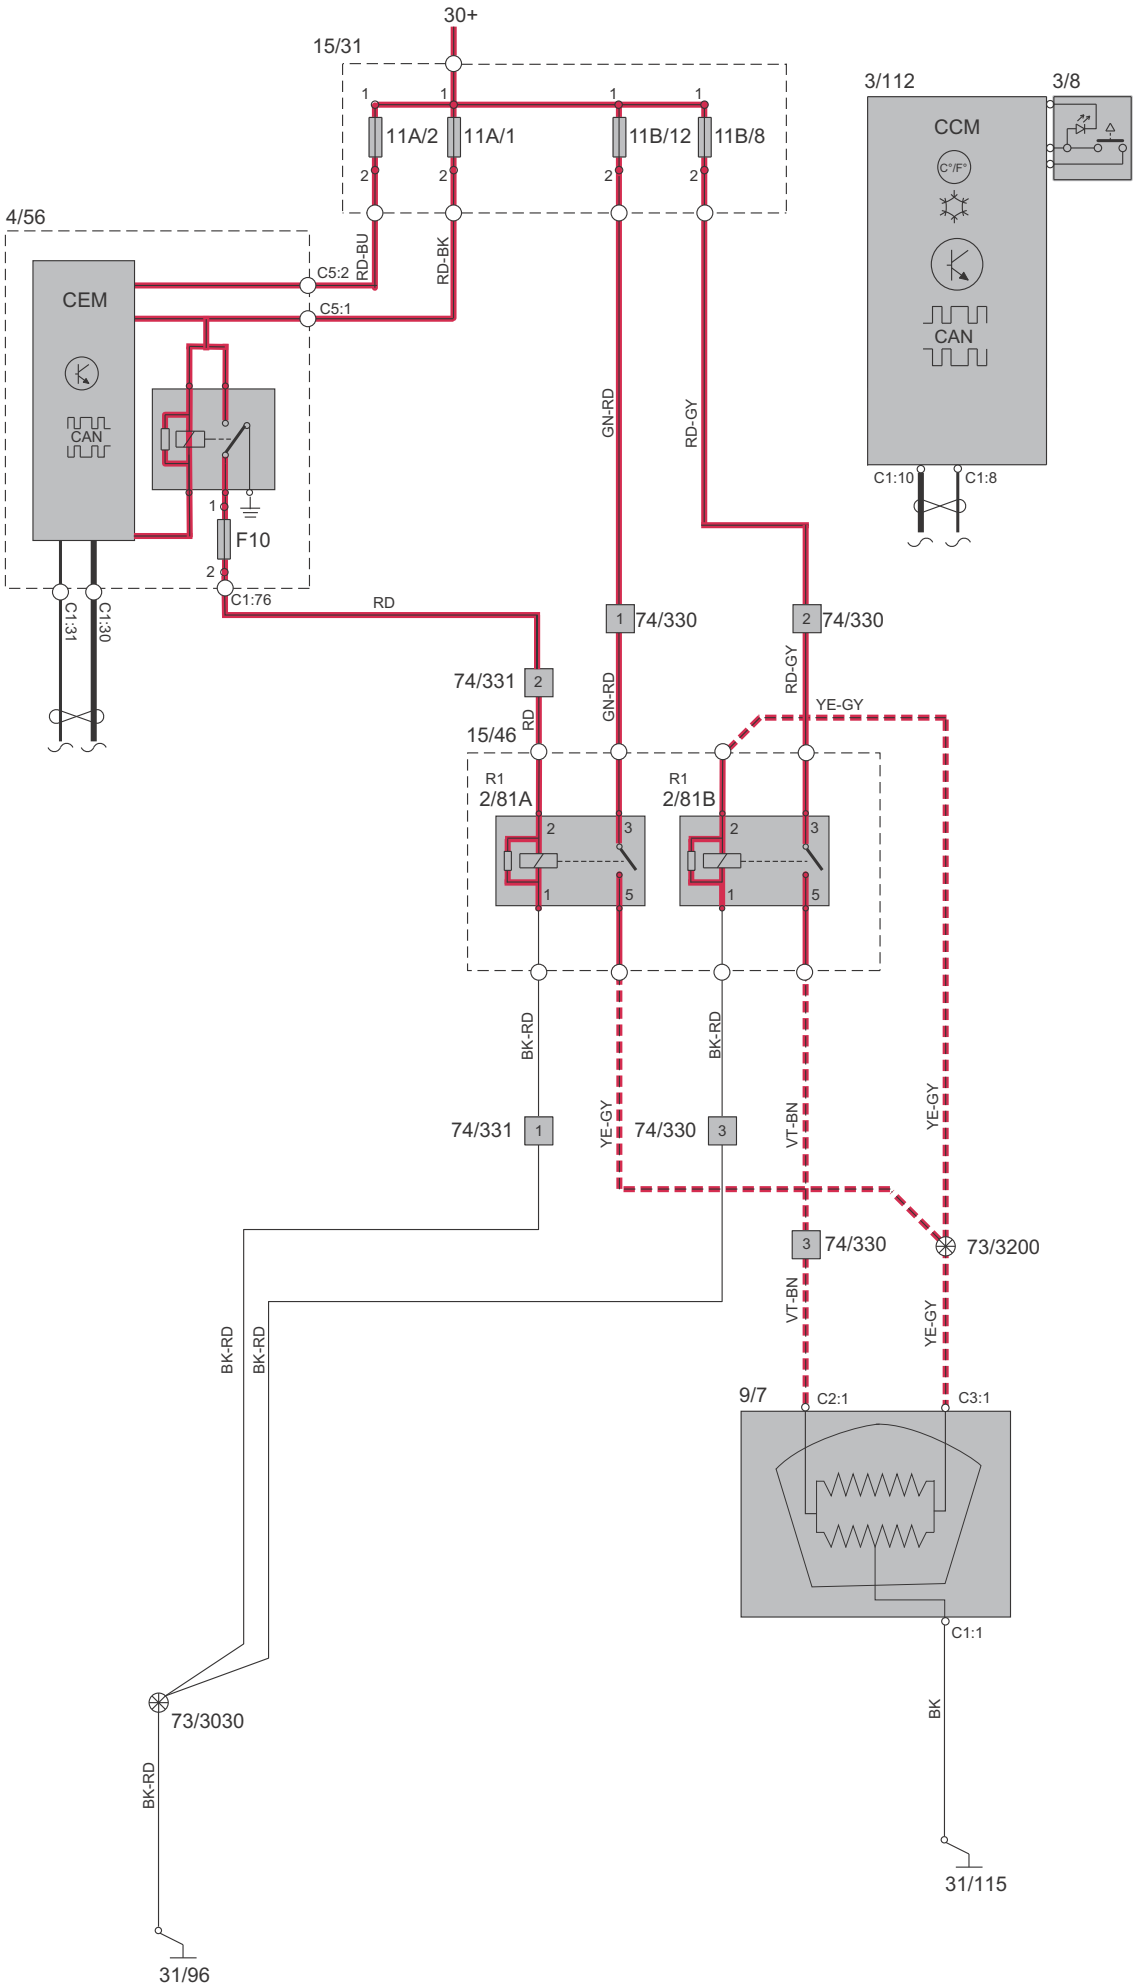

Group 84 Exterior decorative elements, etc.
Heated windscreen RHD

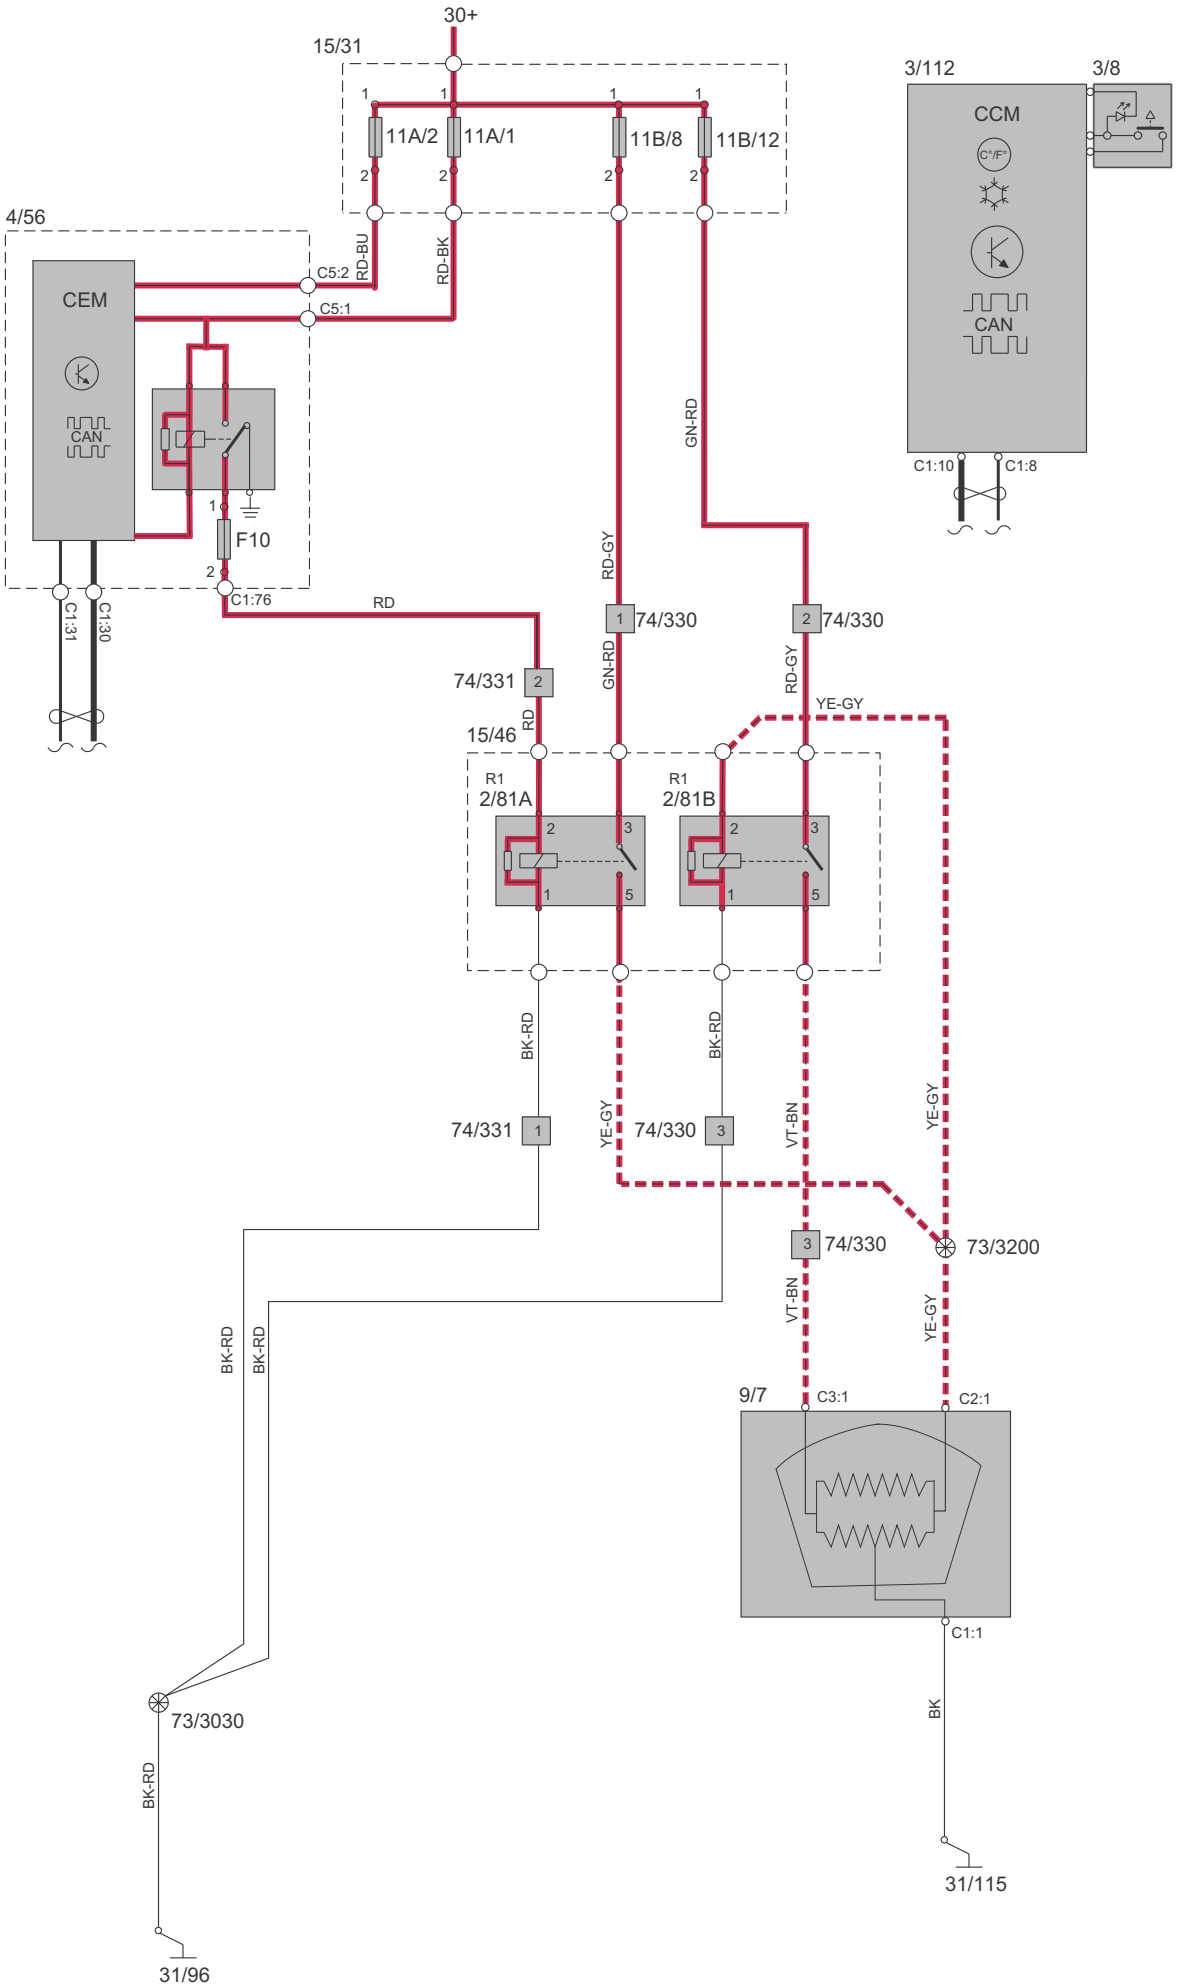

Group 84 Exterior decorative elements, etc.
Heated rear window

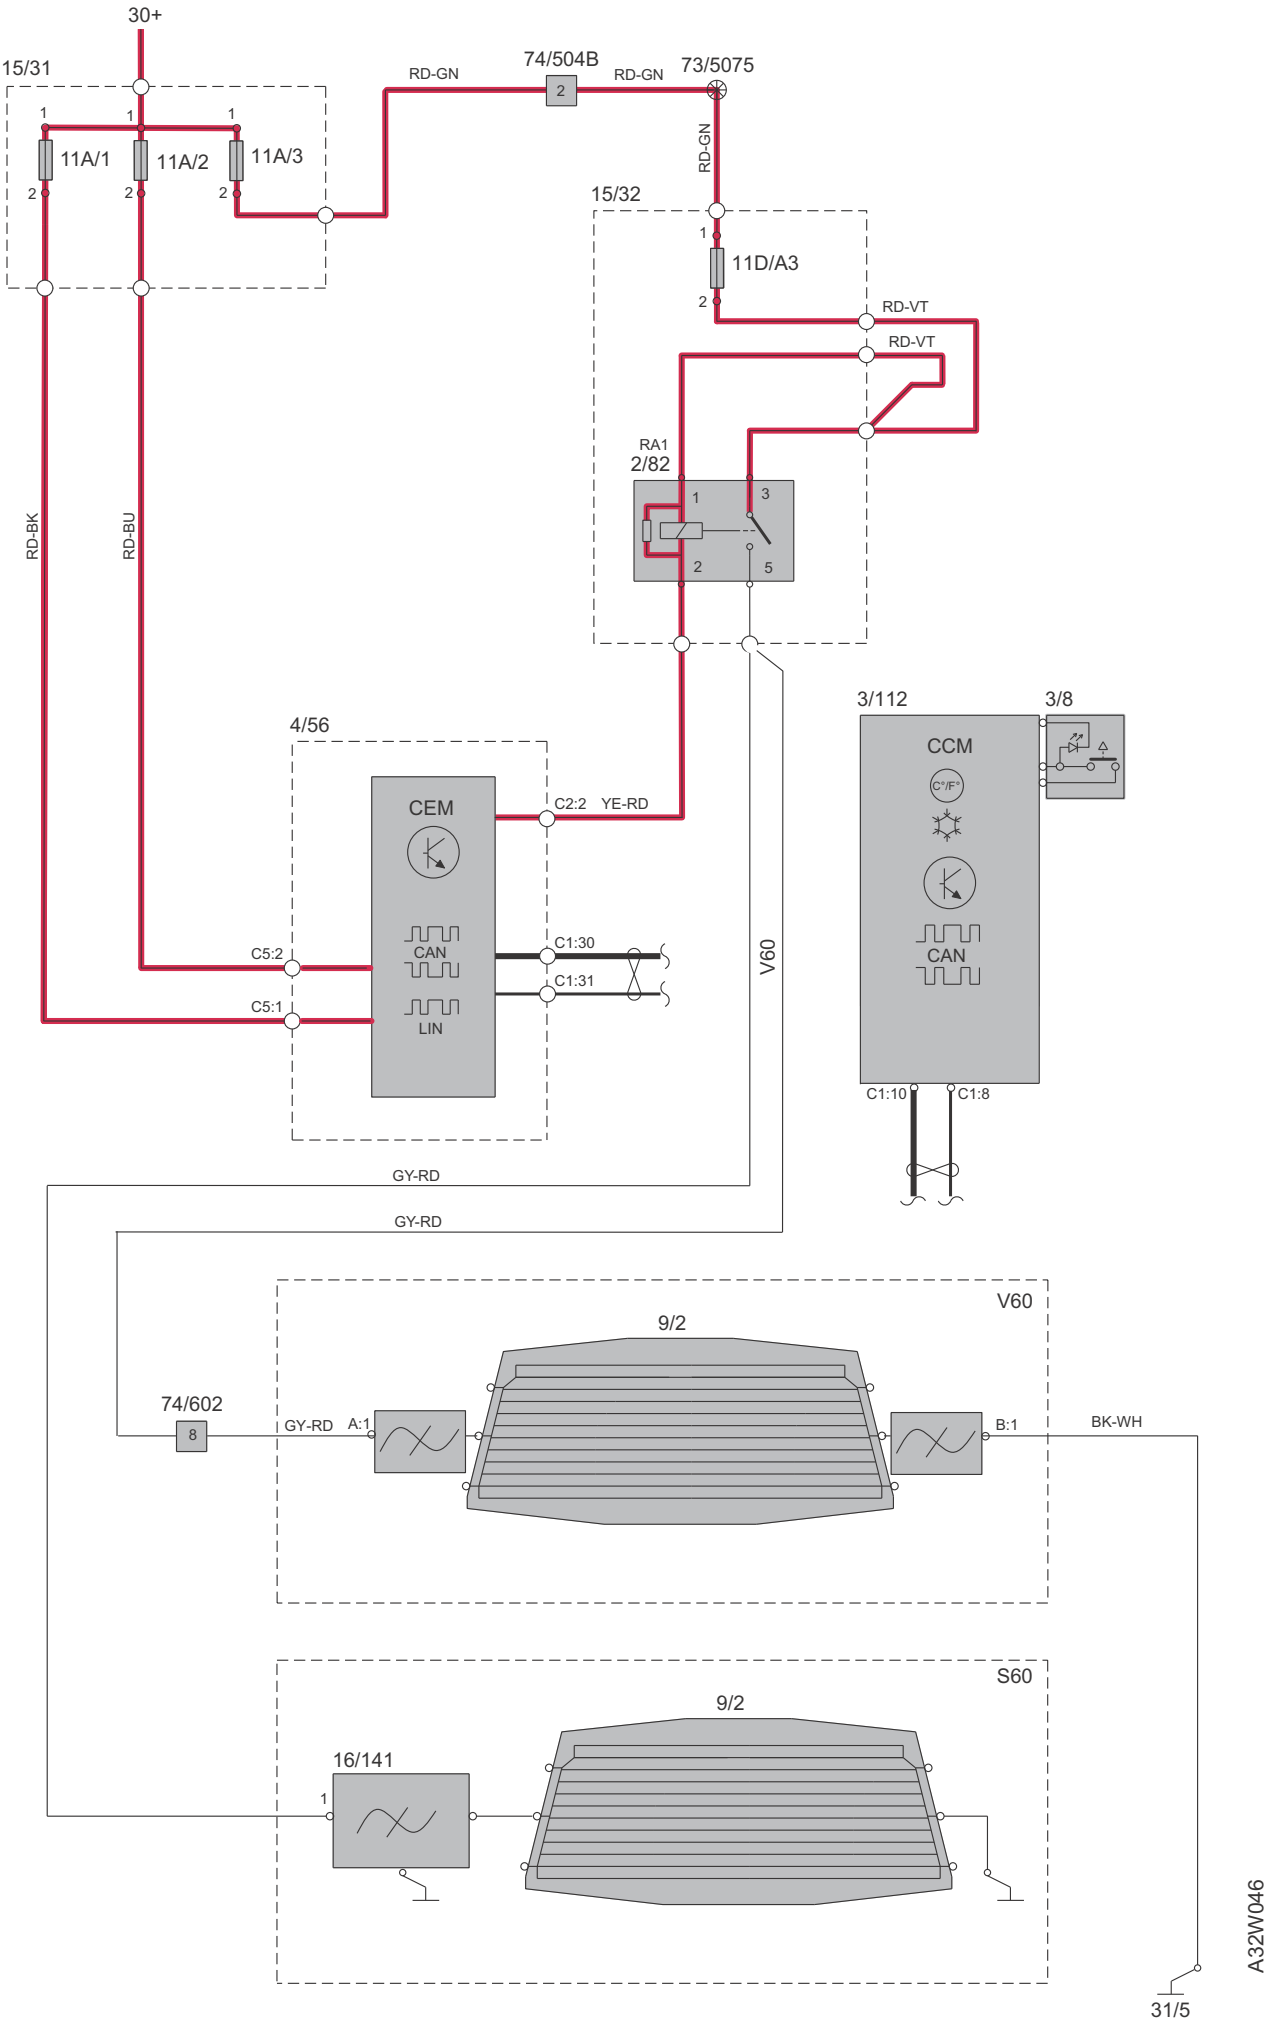

Group 85 Interior equipment
Power driver's seat with memory function, LHD

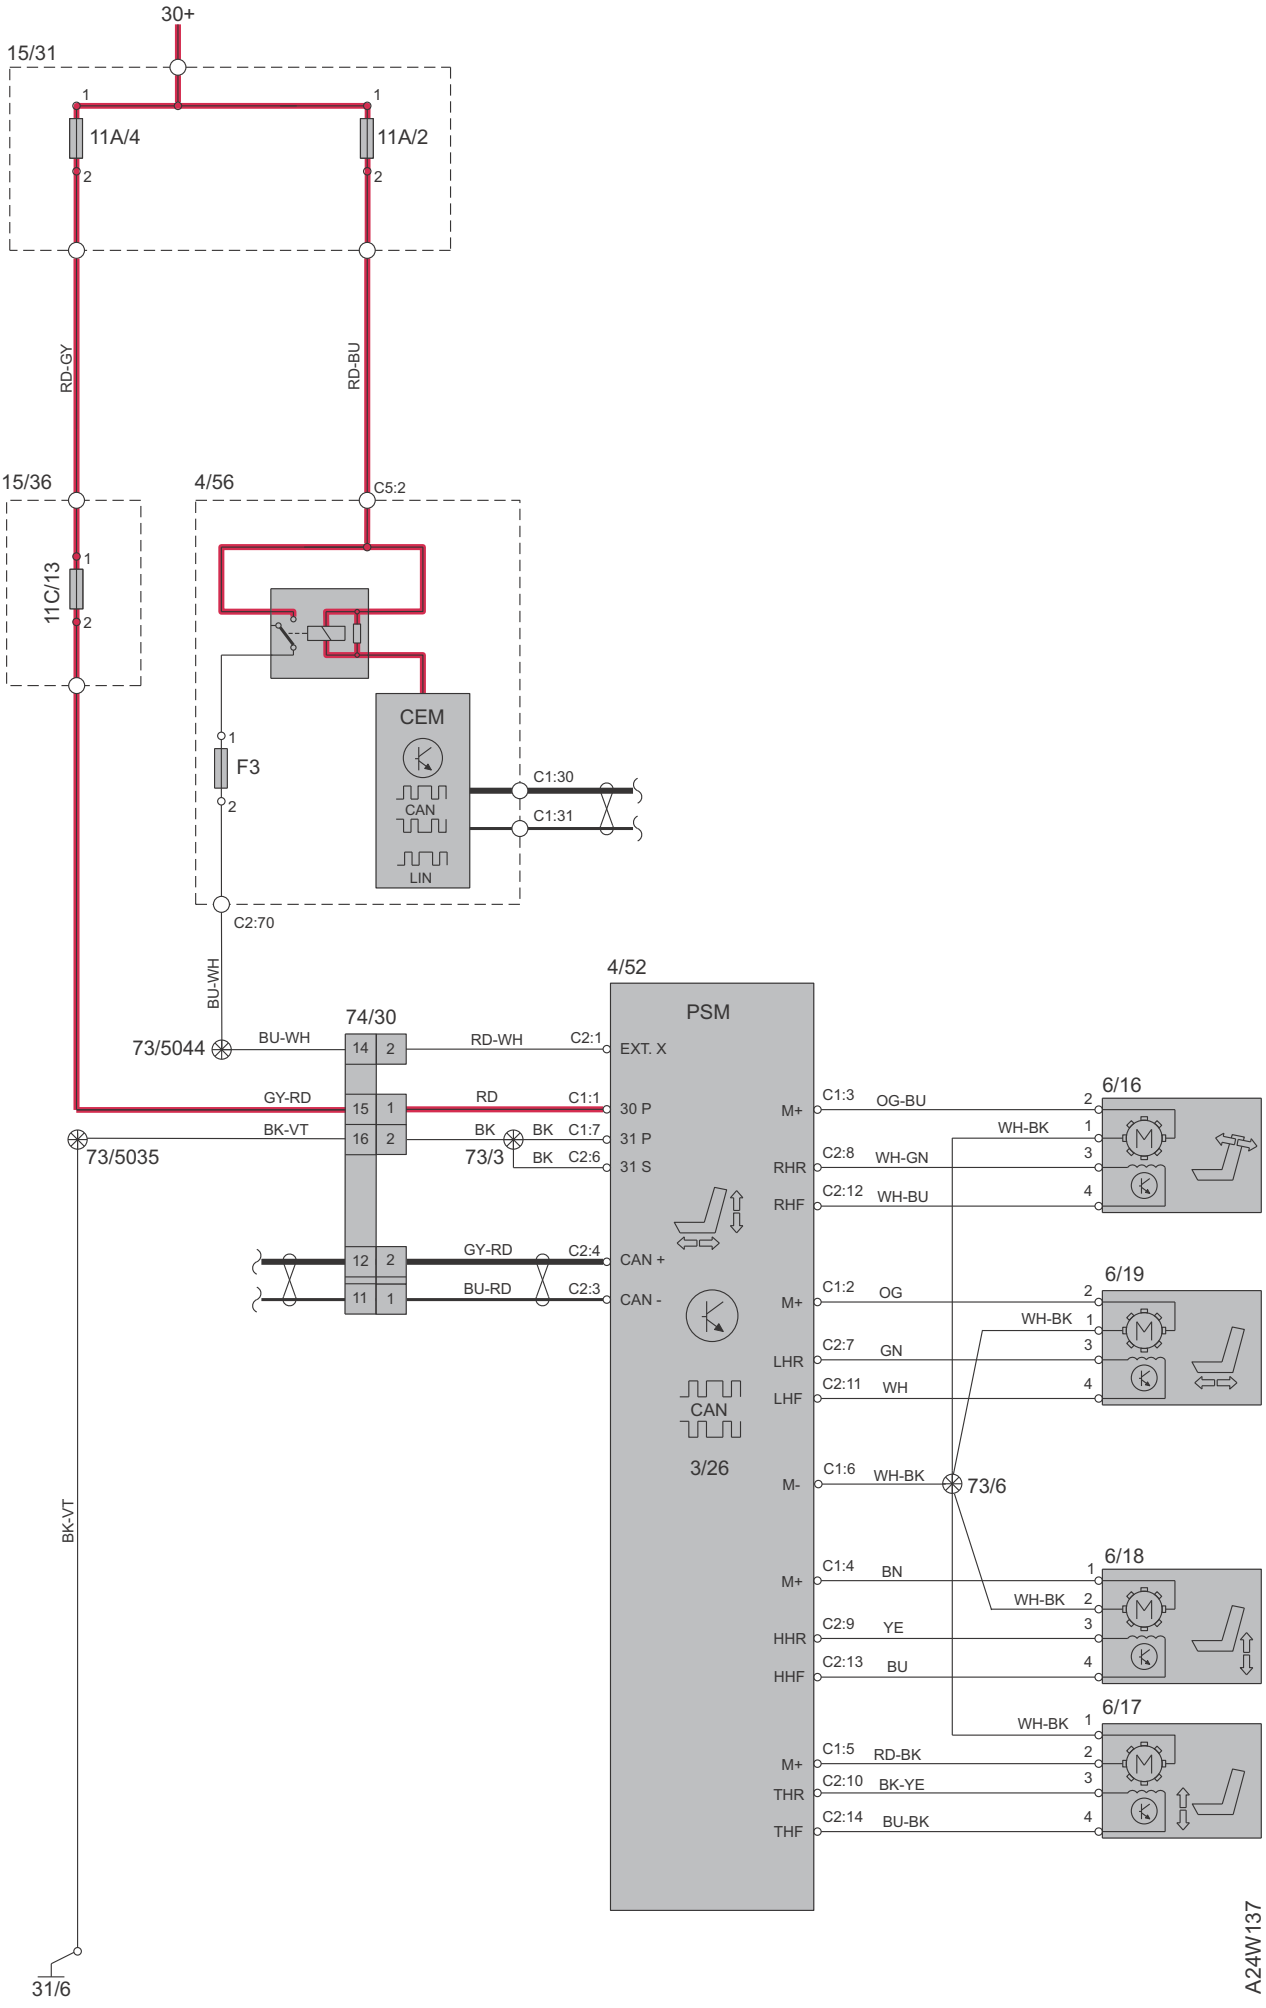

Group 85 Interior equipment
Power driver's seat with memory function, RHD

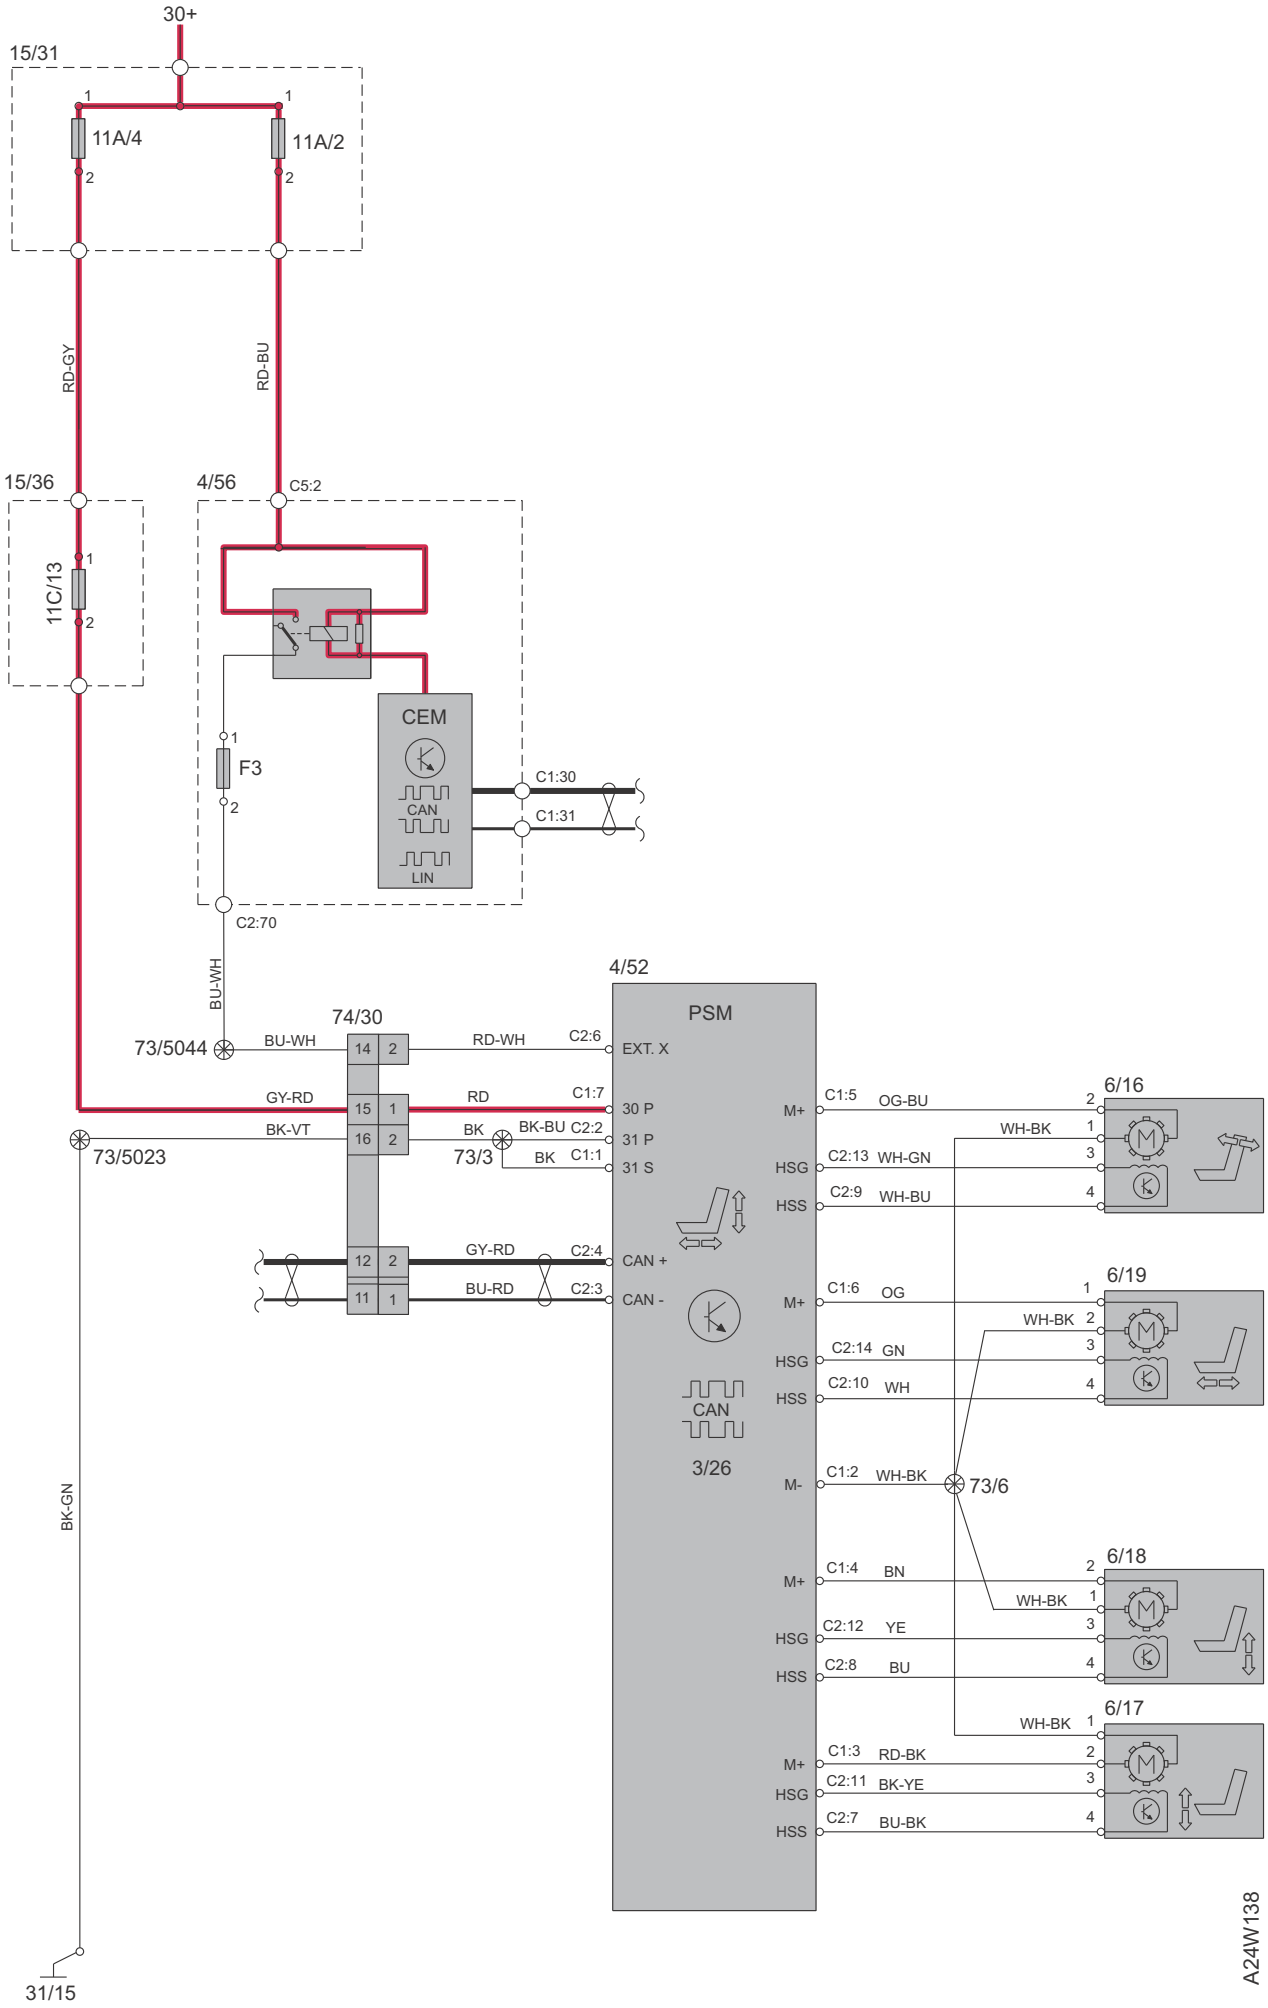

Group 85 Interior equipment
Power passenger seat, LHD

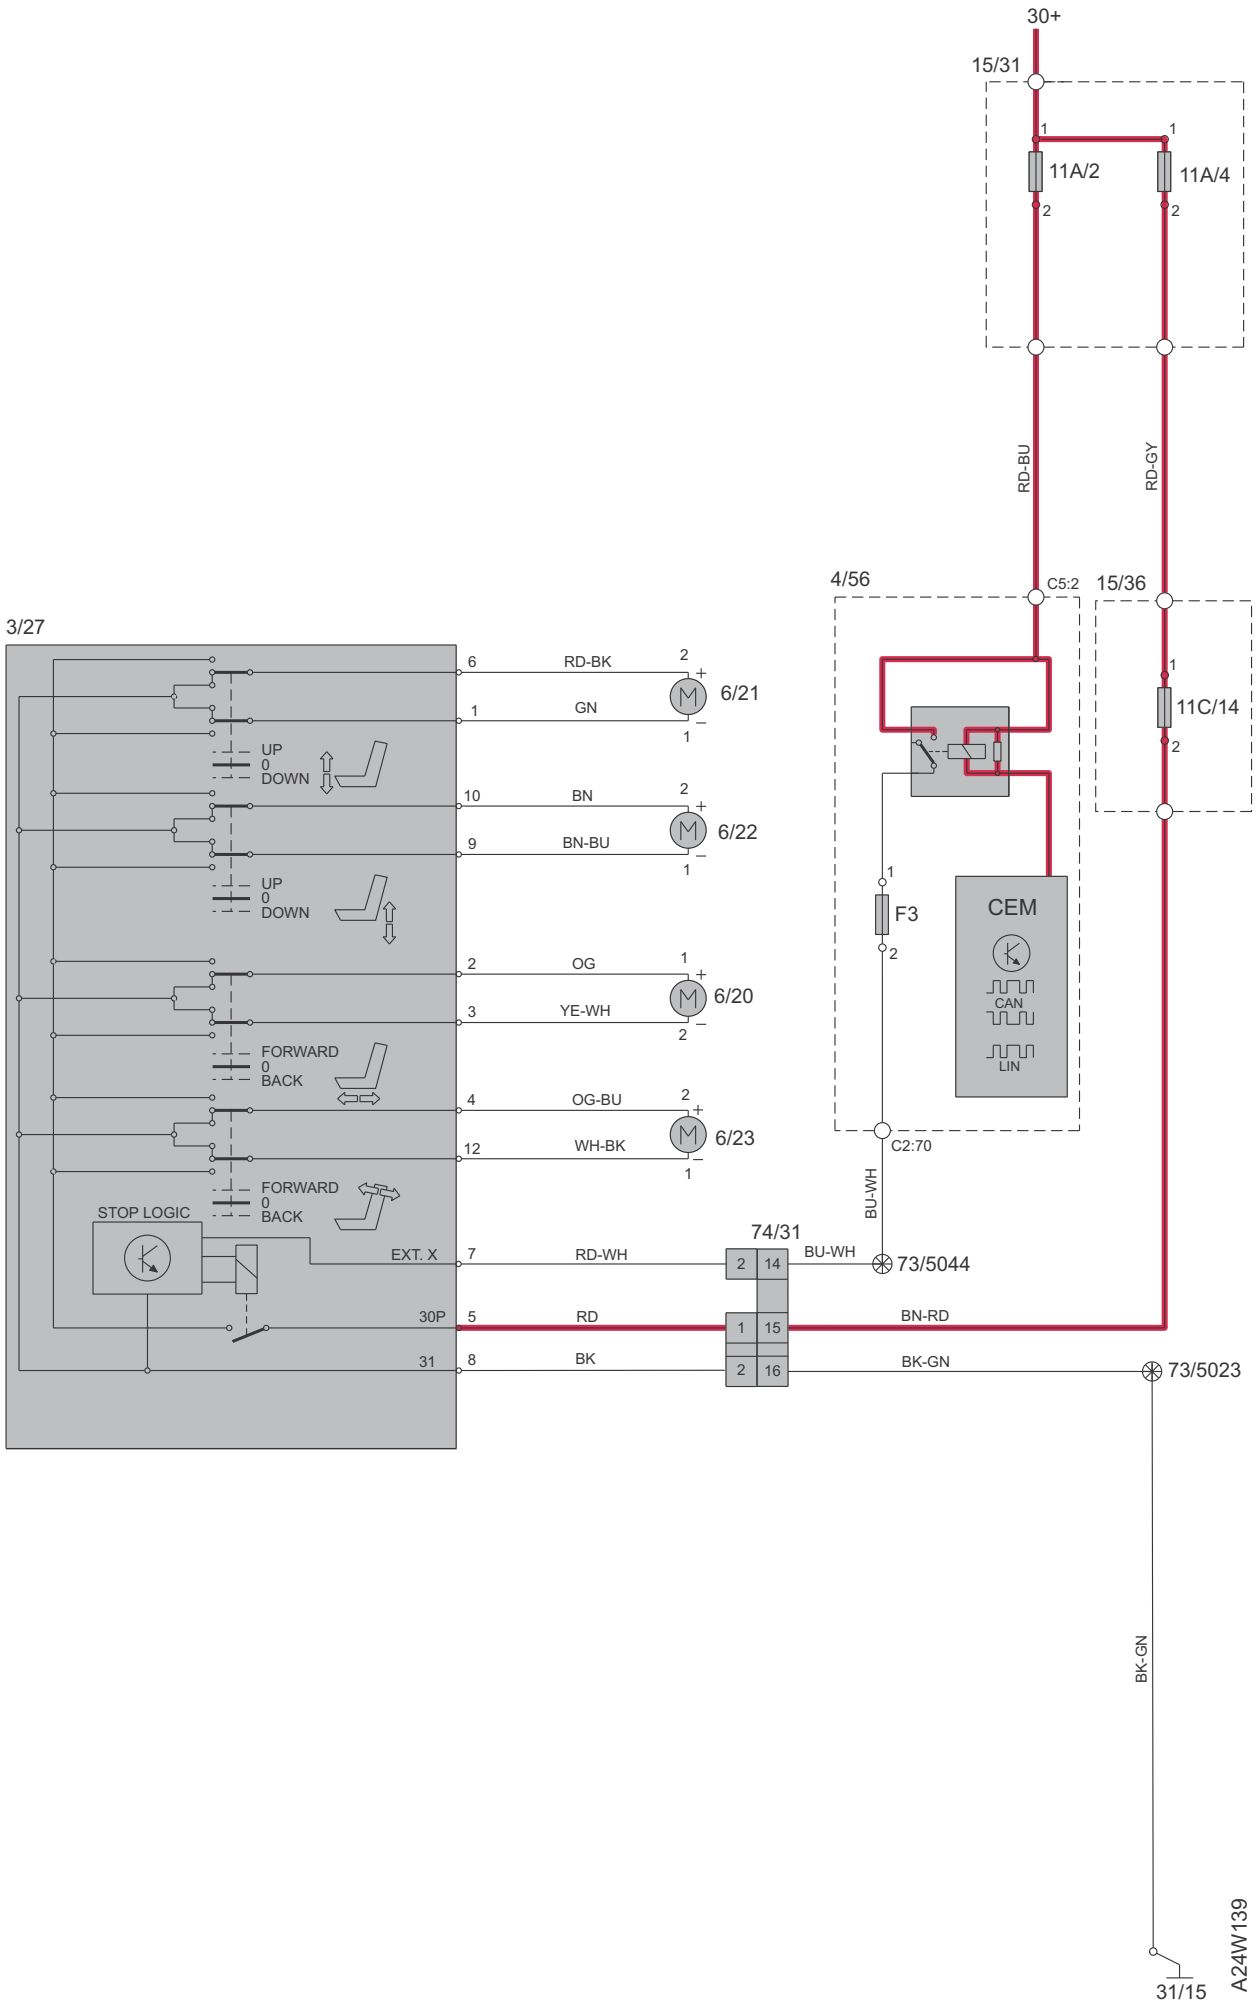

Group 85 Interior equipment
Power passenger seat, RHD

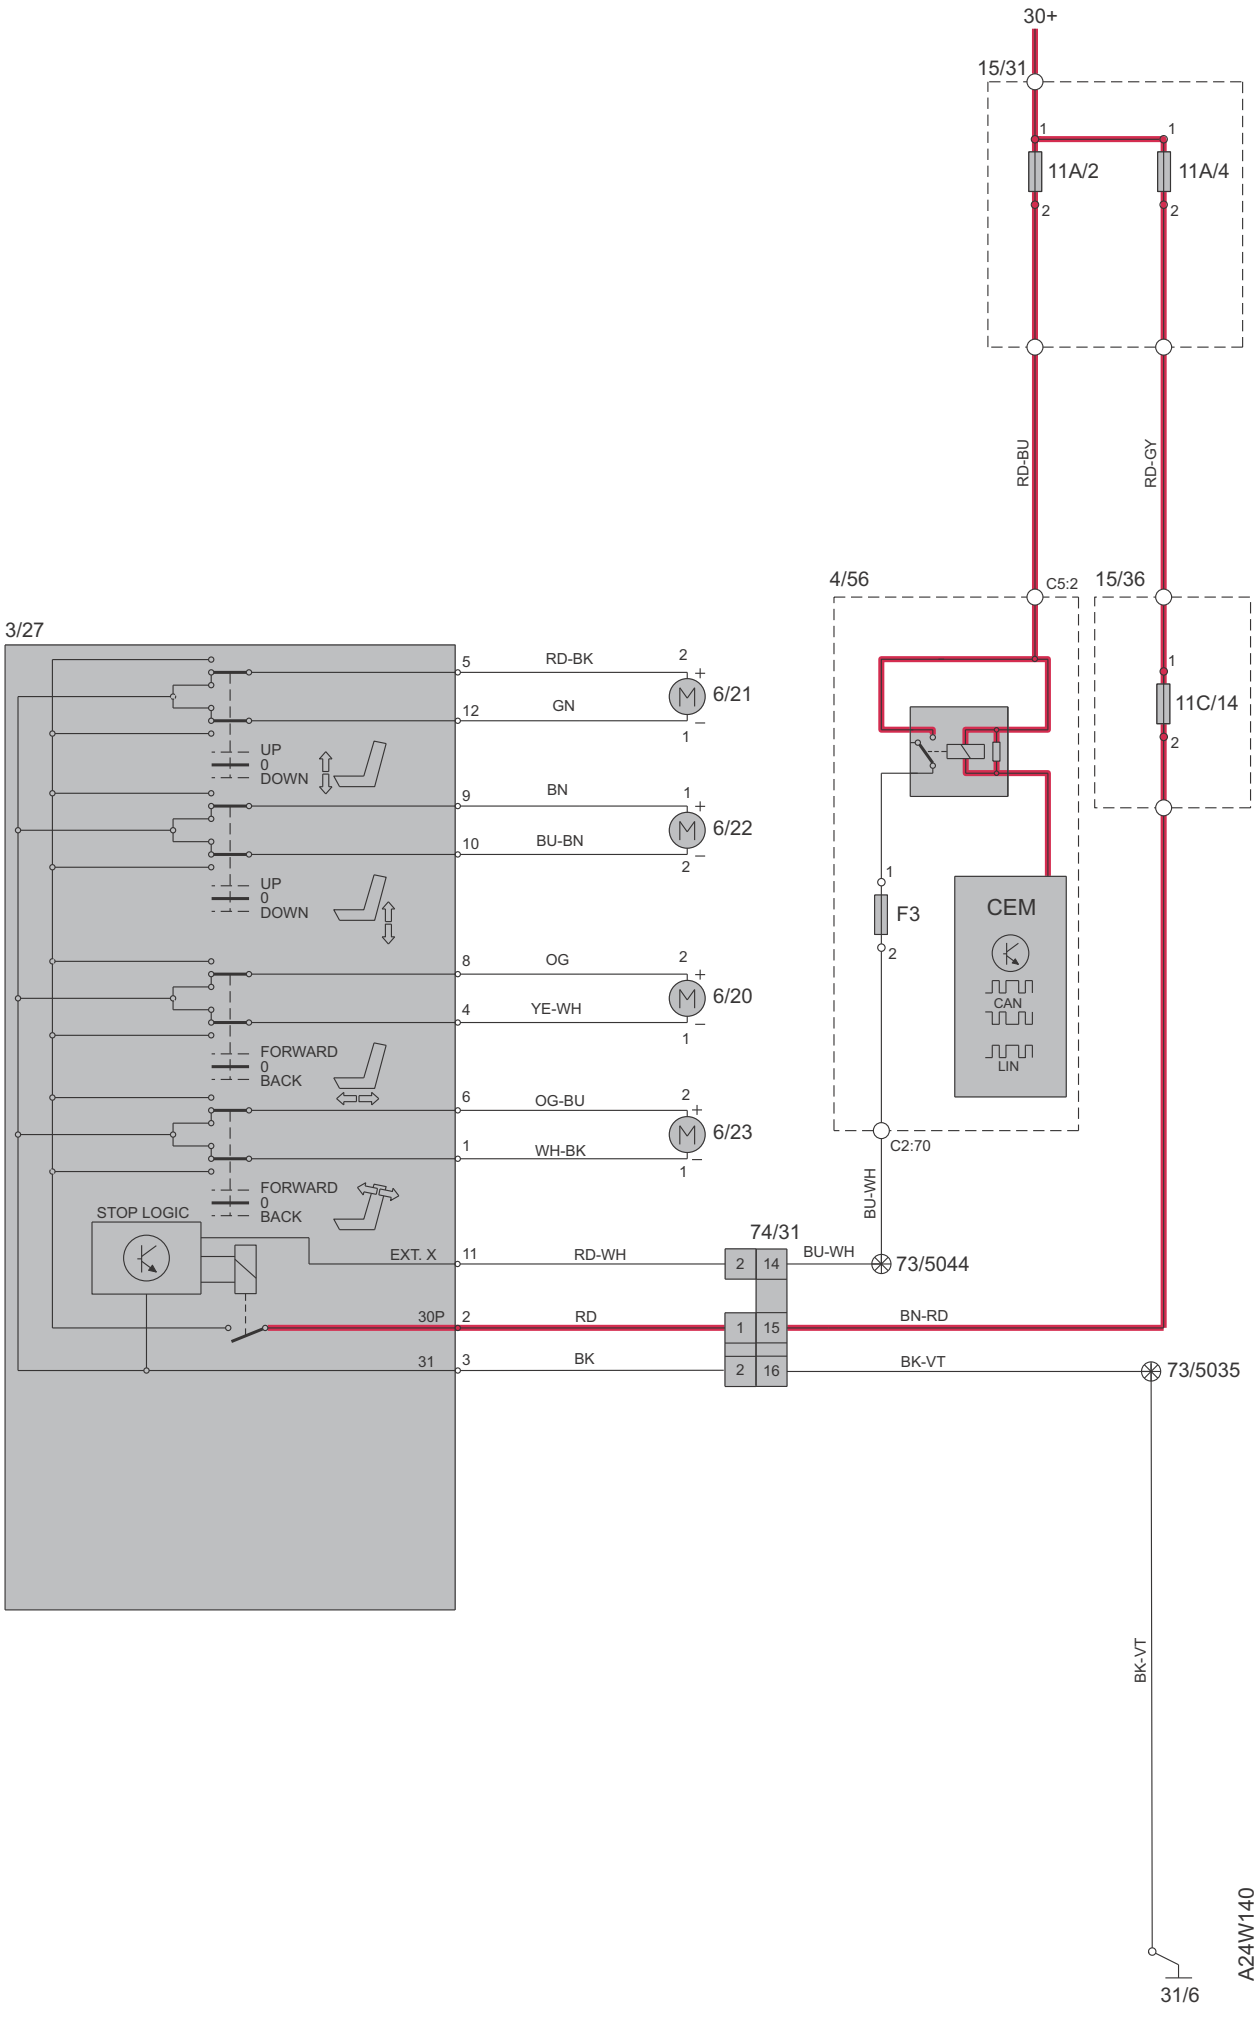

Group 85 Interior equipment
Heated steering wheel

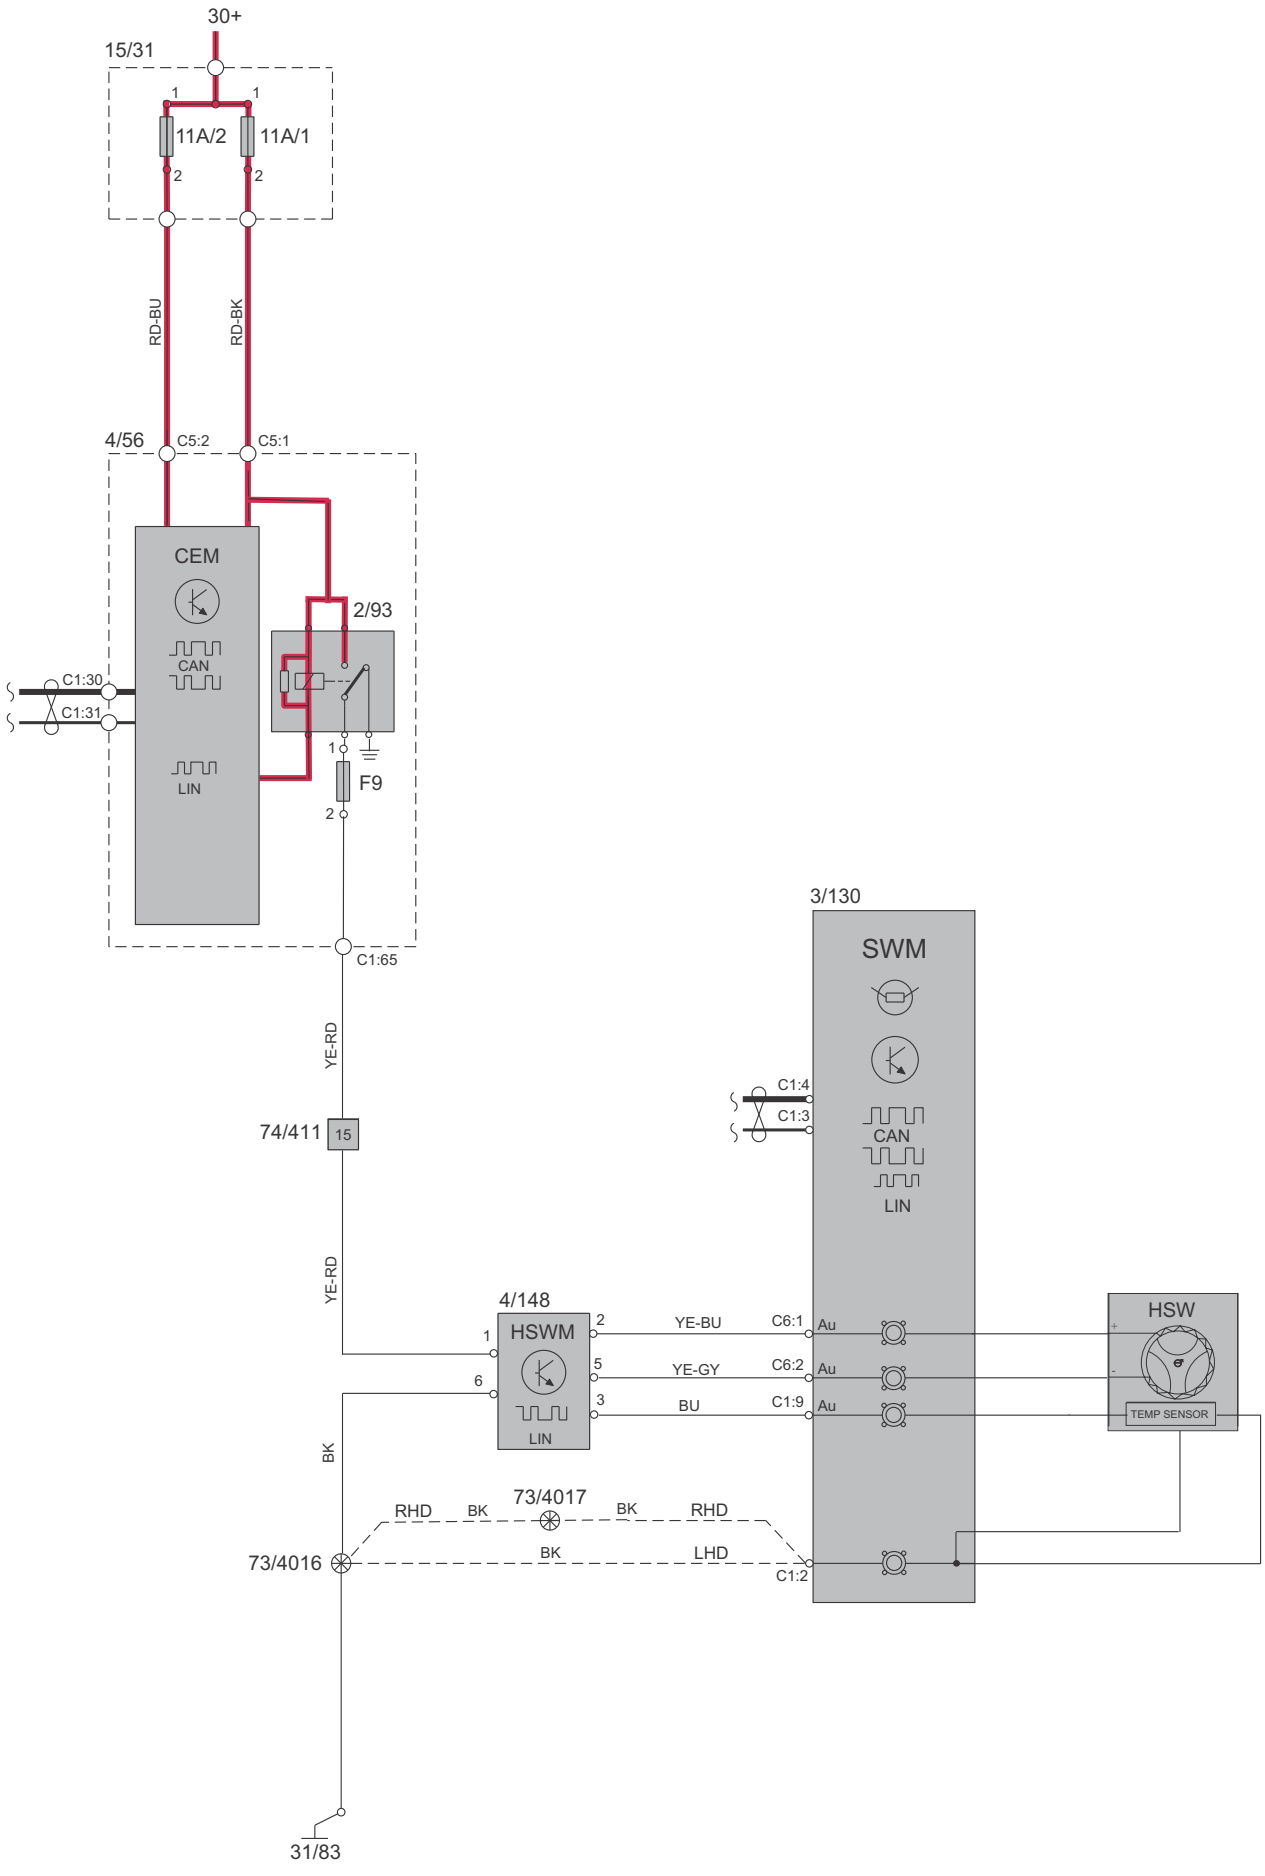

A31W033

Group 85 Interior equipment
Heated front seats with fans

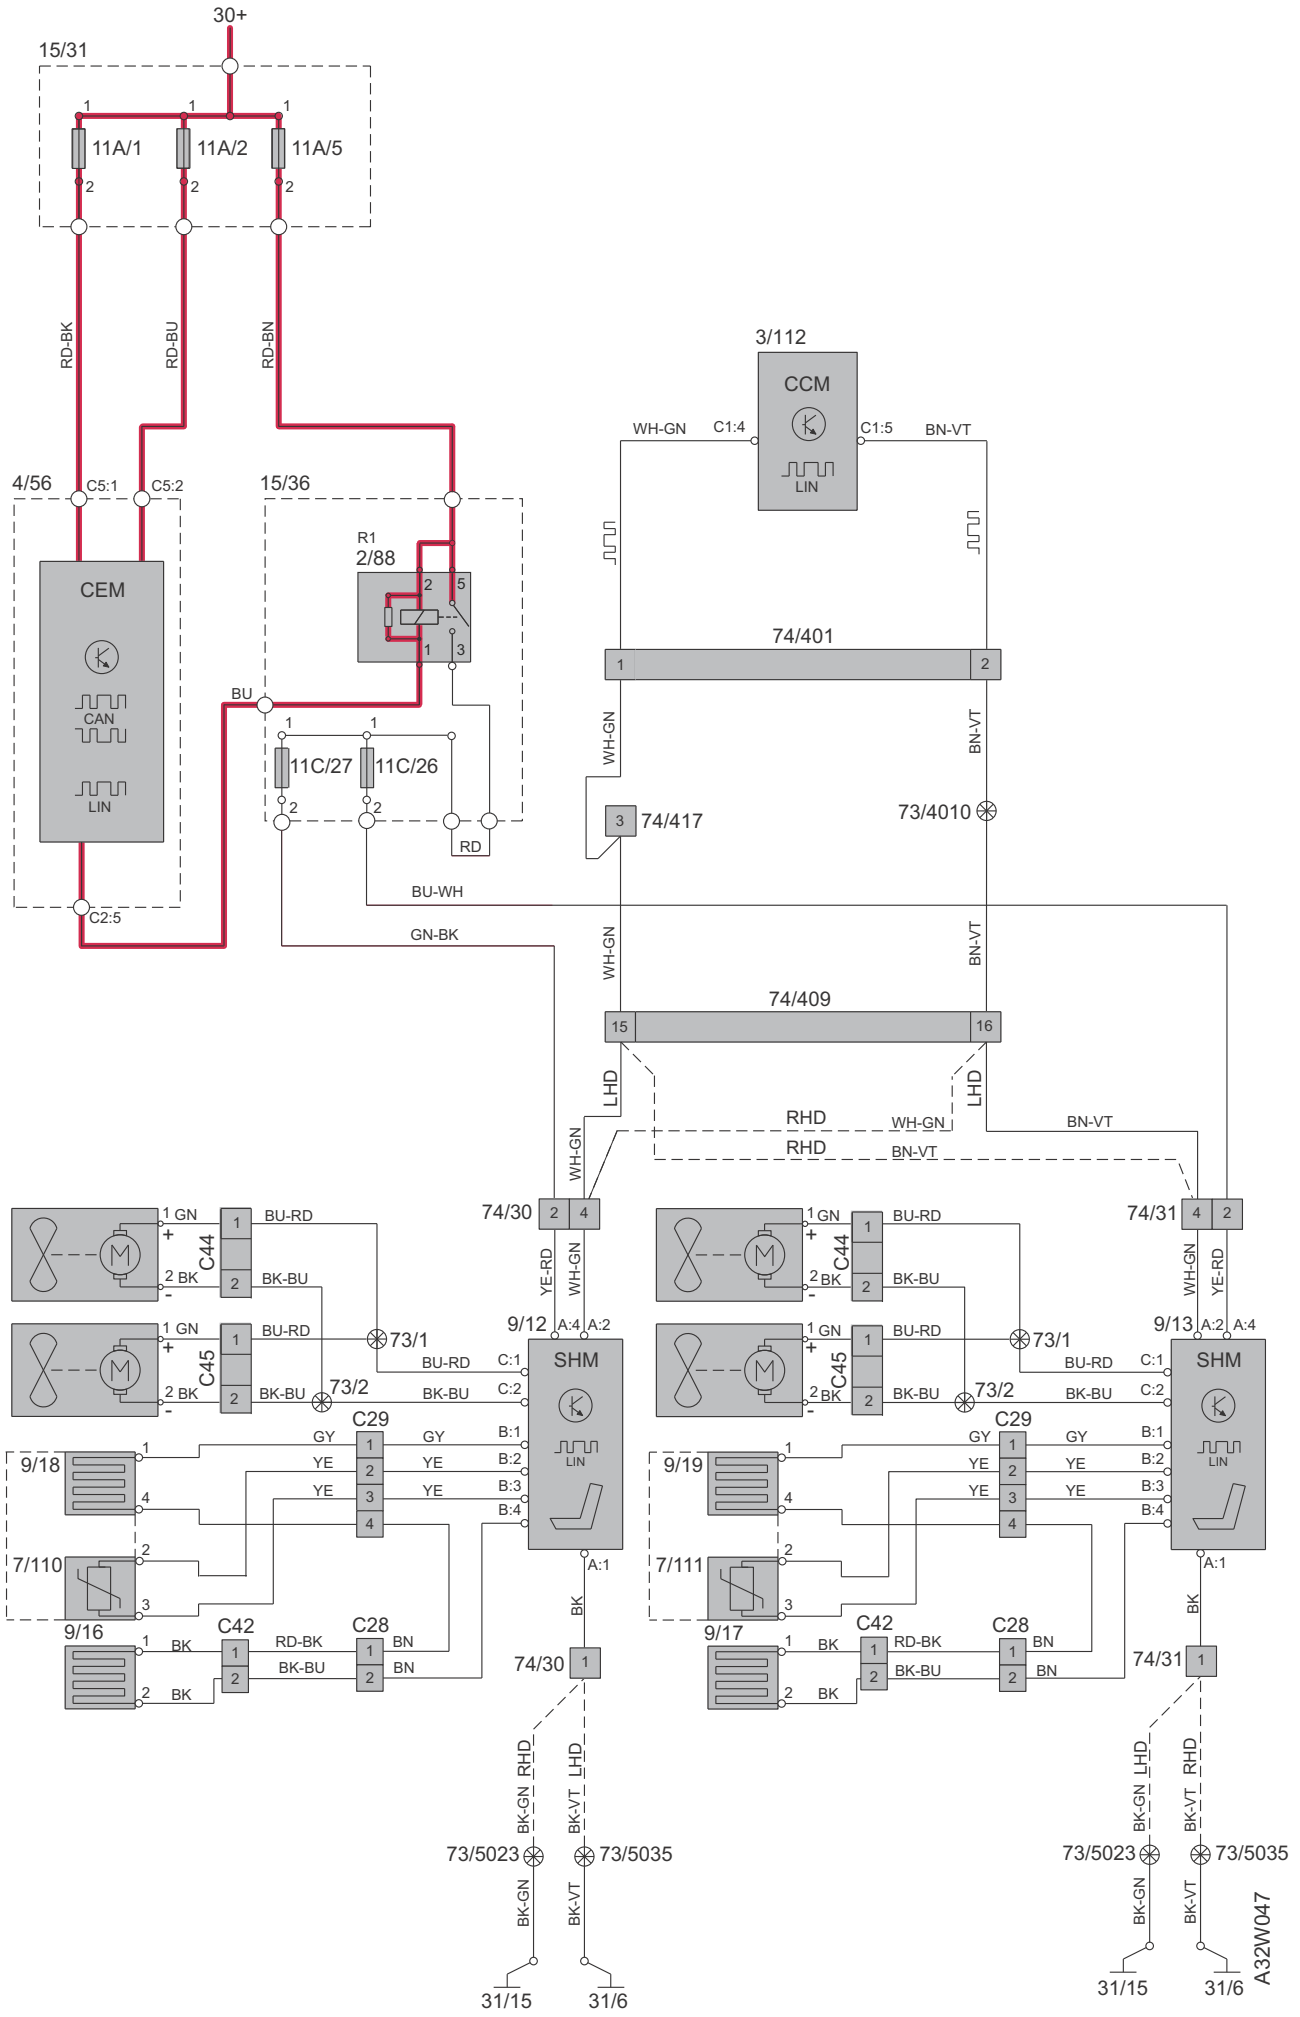

Group 85 Interior equipment
Heated front seats without fans

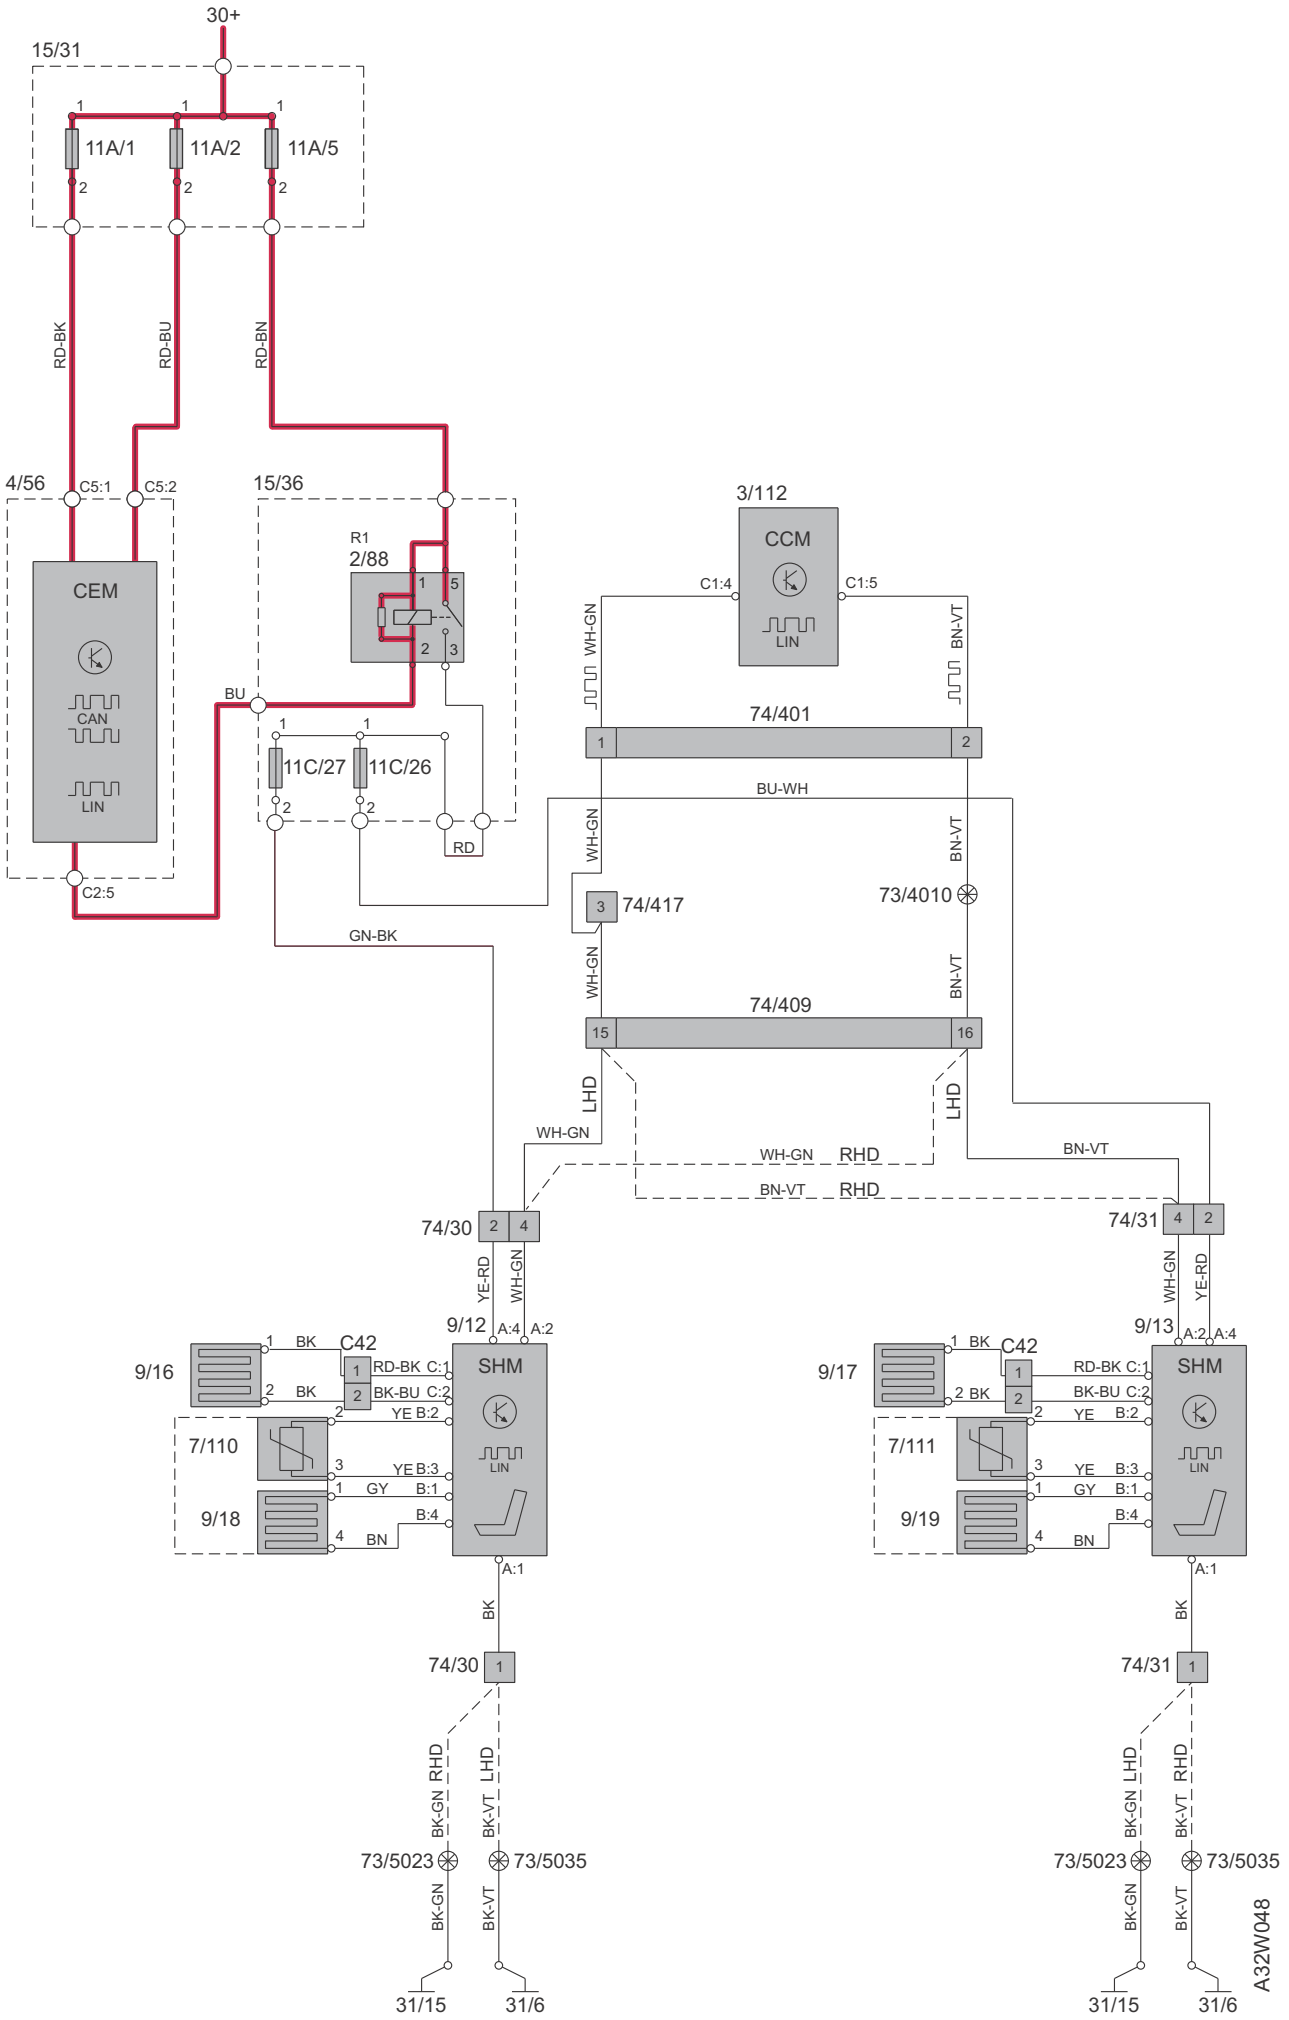

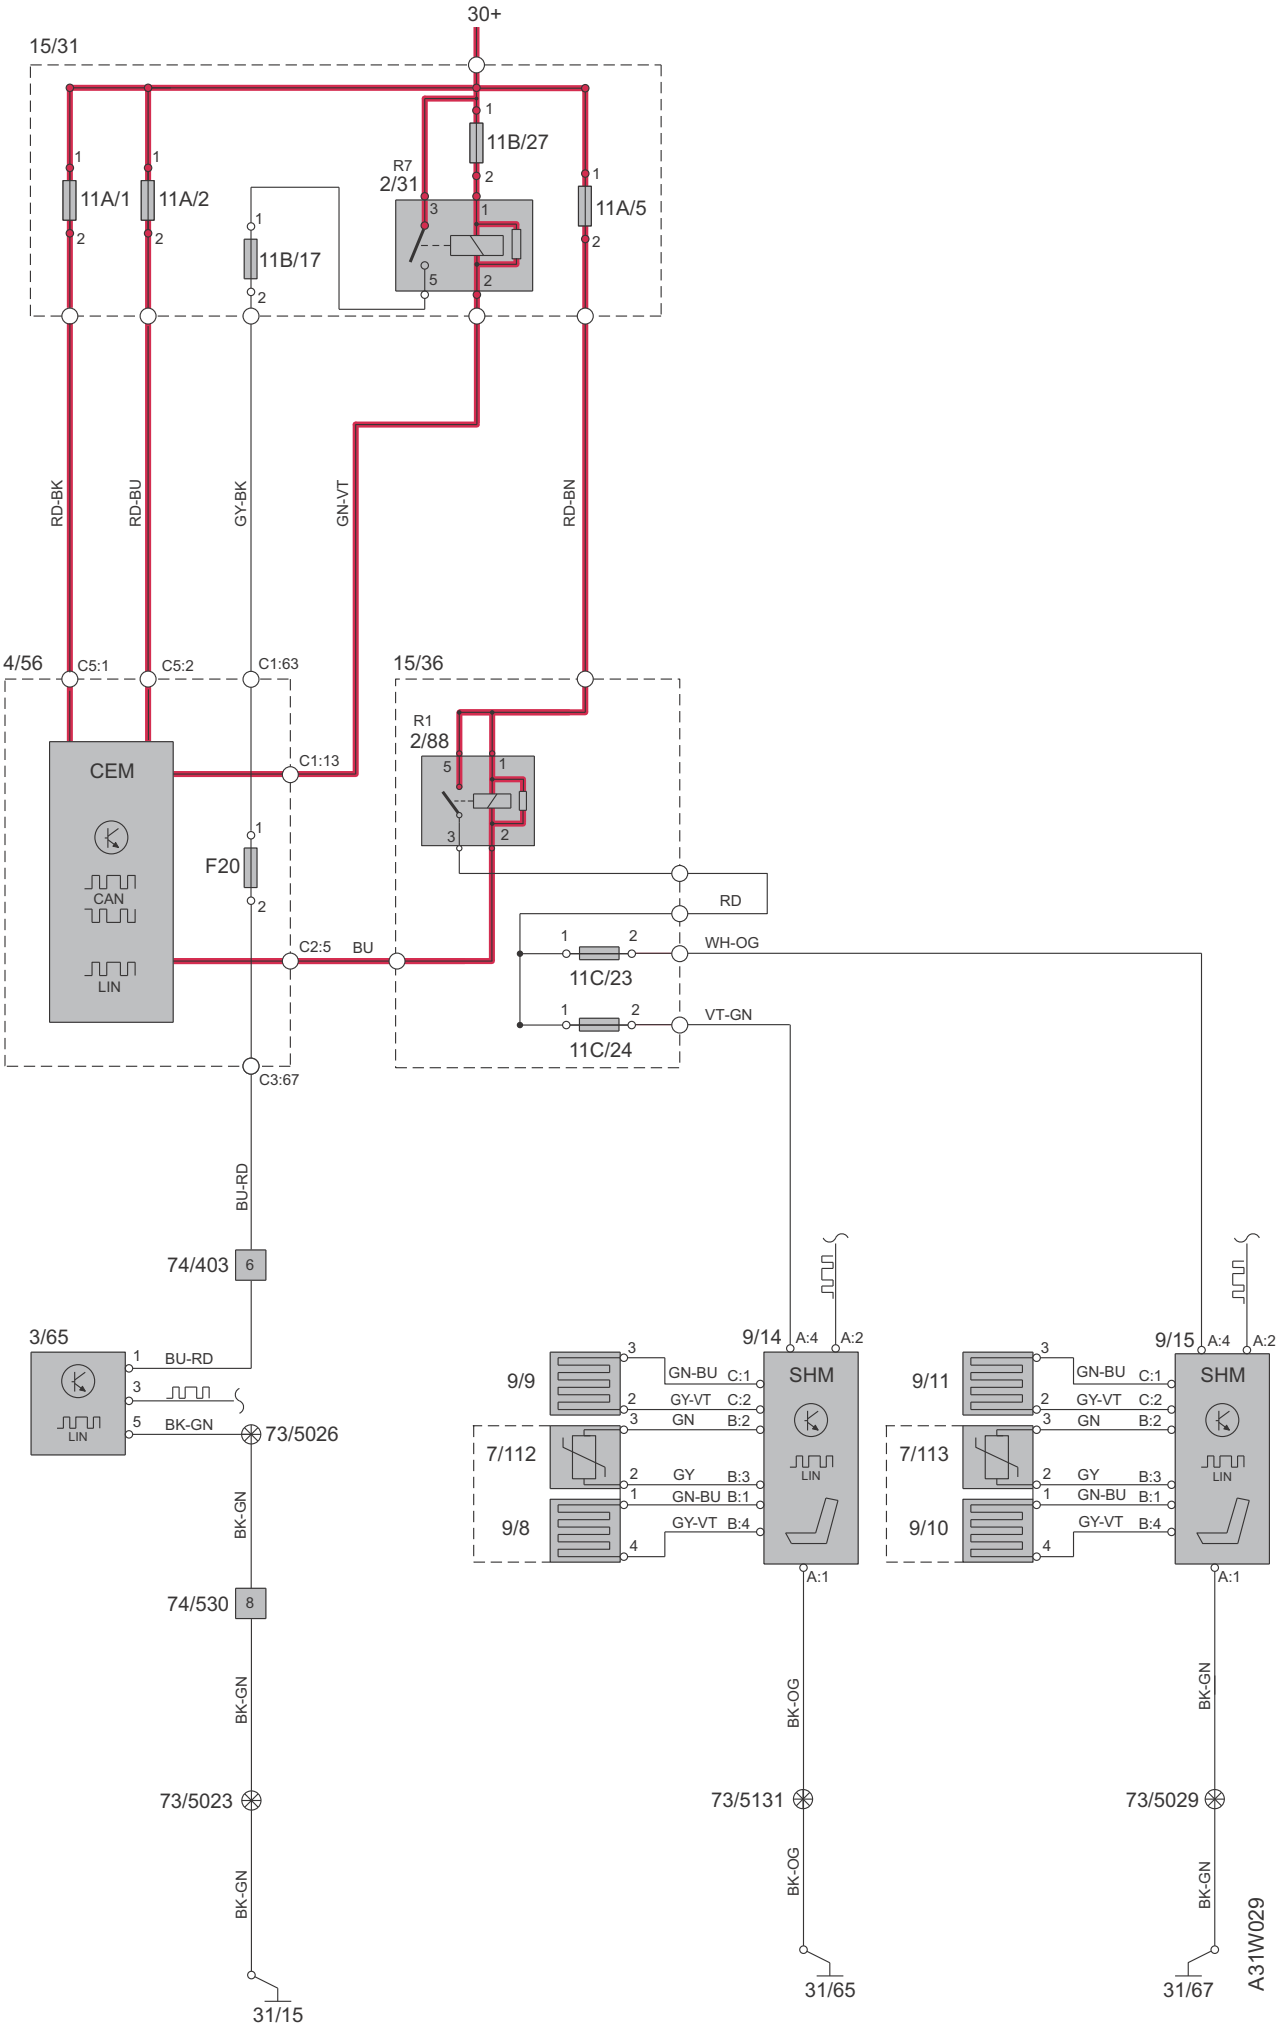
30+
15/31
11A/1
11A/2
11B/17
R7
2/31
11B/27
11A/5
RD-BK
RD-BU
GY-BK
GN-VT
RD-BN
4/56
C5:1
C5:2
C1:63
15/36
CEM
CAN
LIN
C1:13
F20
C2:5
BU
R1
2/88
RD
WH-OG
11C/23
VT-GN
11C/24
C3:67
BU-RD
74/403
6
3/65
BU-RD
BK-GN
73/5026
BK-GN
74/530
8
BK-GN
73/5023
BK-GN
31/15
9/14
A:4
A:2
SHM
LIN
A:1
9/9
7/112
9/8
GN-BU C:1
GY-VT C:2
GN B:2
GY B:3
GN-BU B:1
GY-VT B:4
BK-OG
73/5131
BK-OG
31/65
9/15
9/11
7/113
9/10
BK-GN
73/5029
BK-GN
31/67
A31W029

Climate control system, 4-Cyl. 1:2

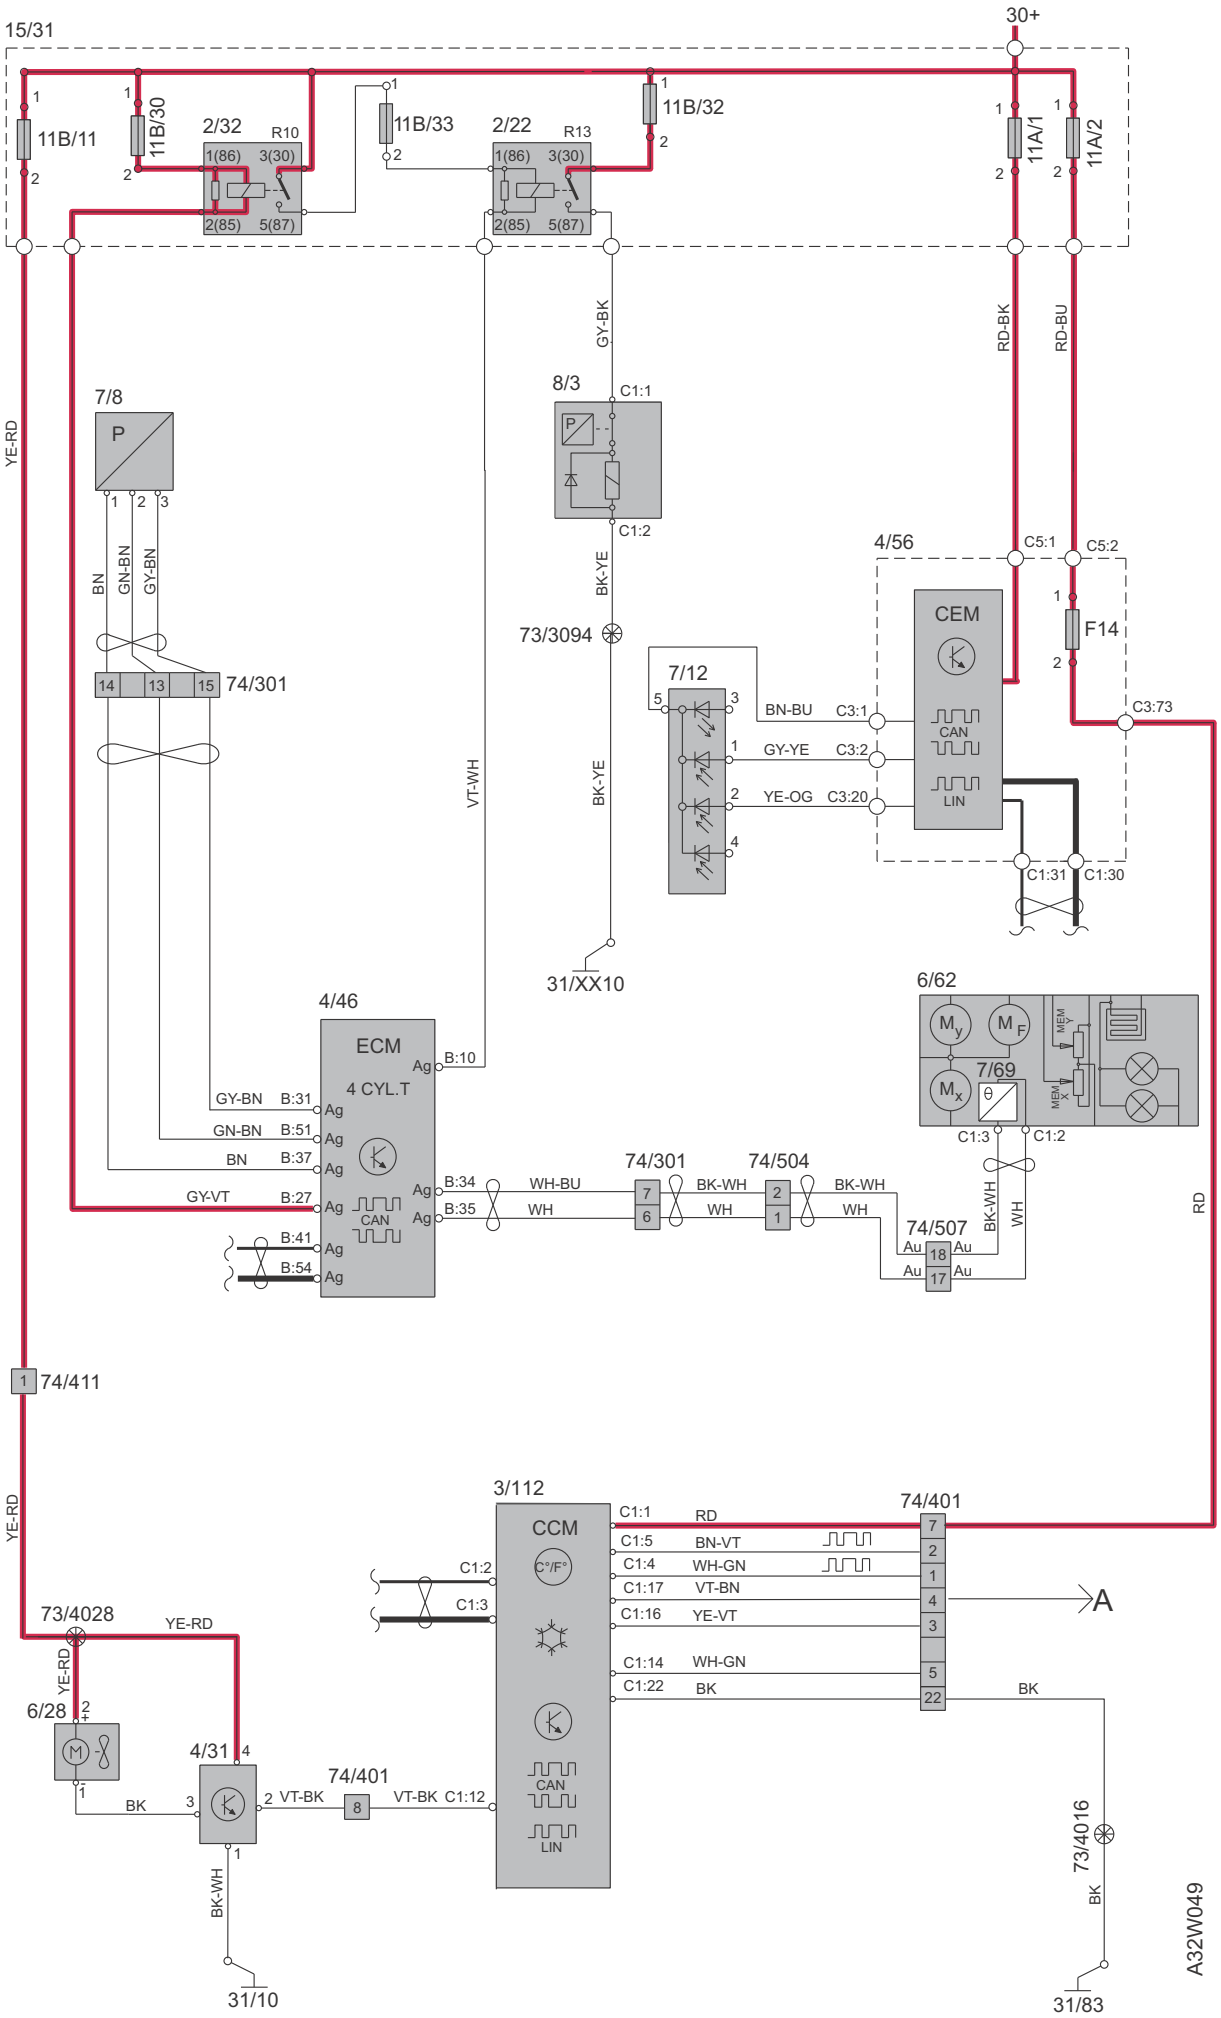

Climate control system, 4-Cyl. 2:2

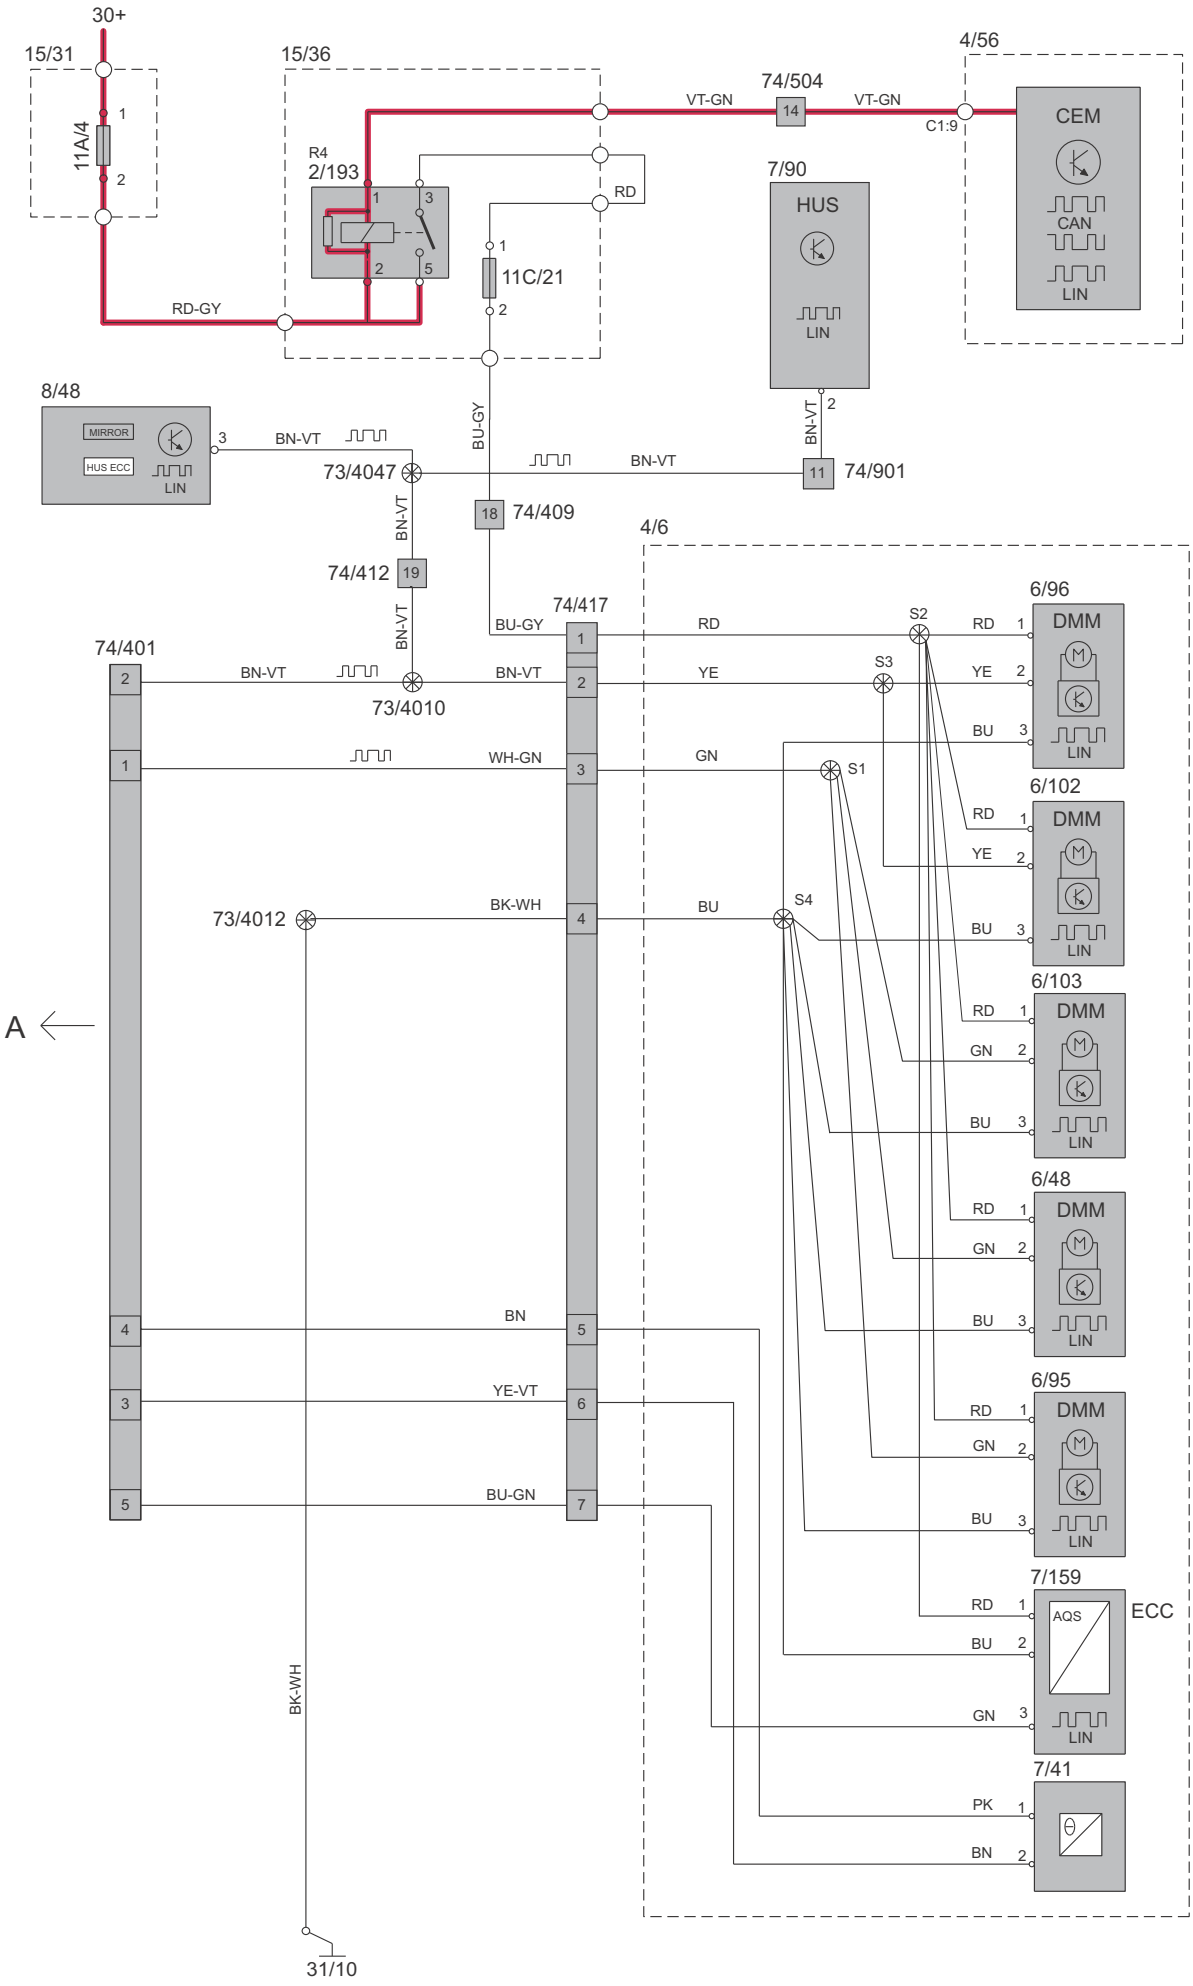

A32W053

Group 87 Climate control system
Climate control system 4-Cyl. Diesel 1:2

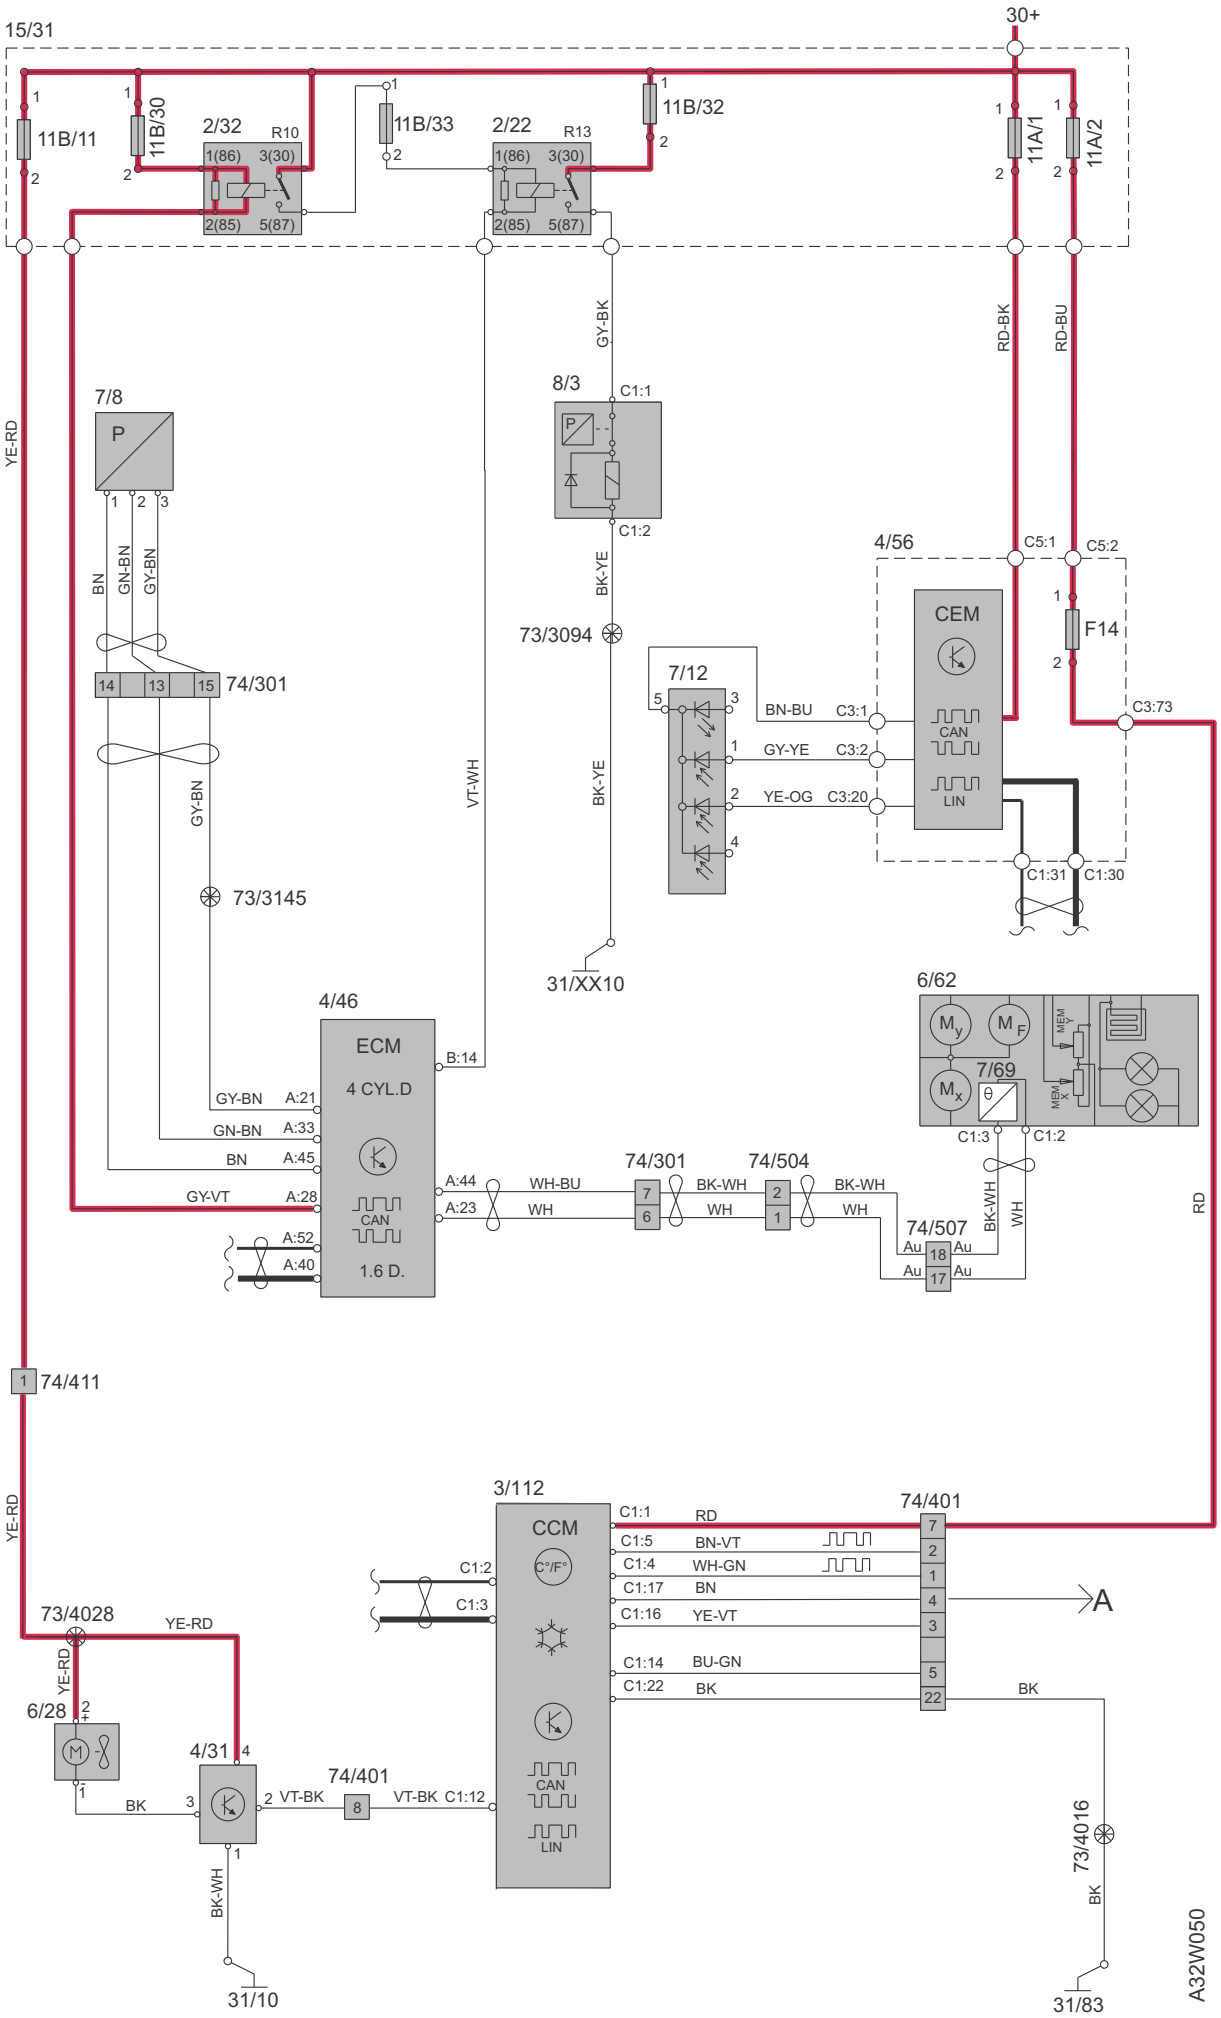

Climate control system 4-Cyl. Diesel 2:2

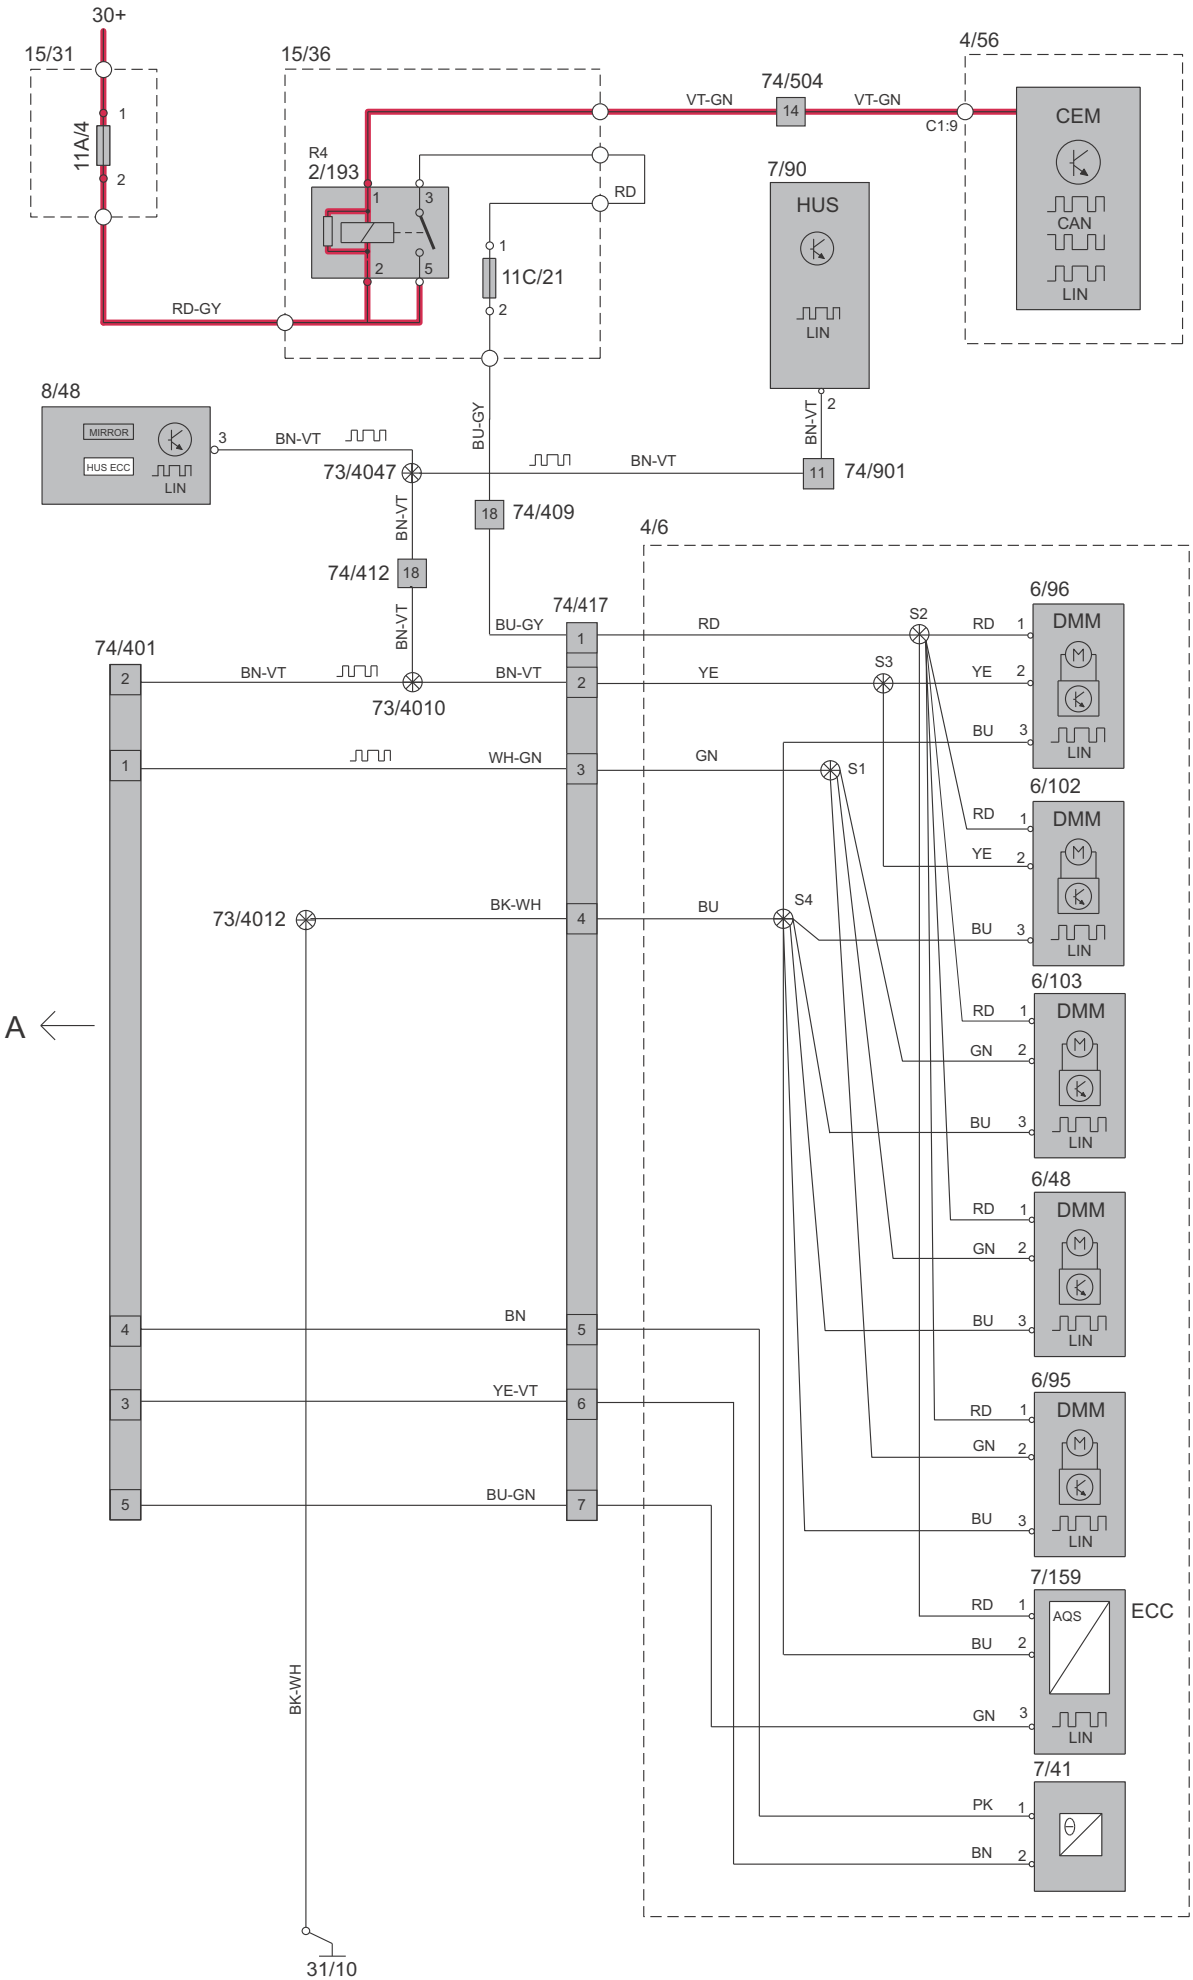

Climate control system 5-Cyl. & 6-Cyl. 1:2

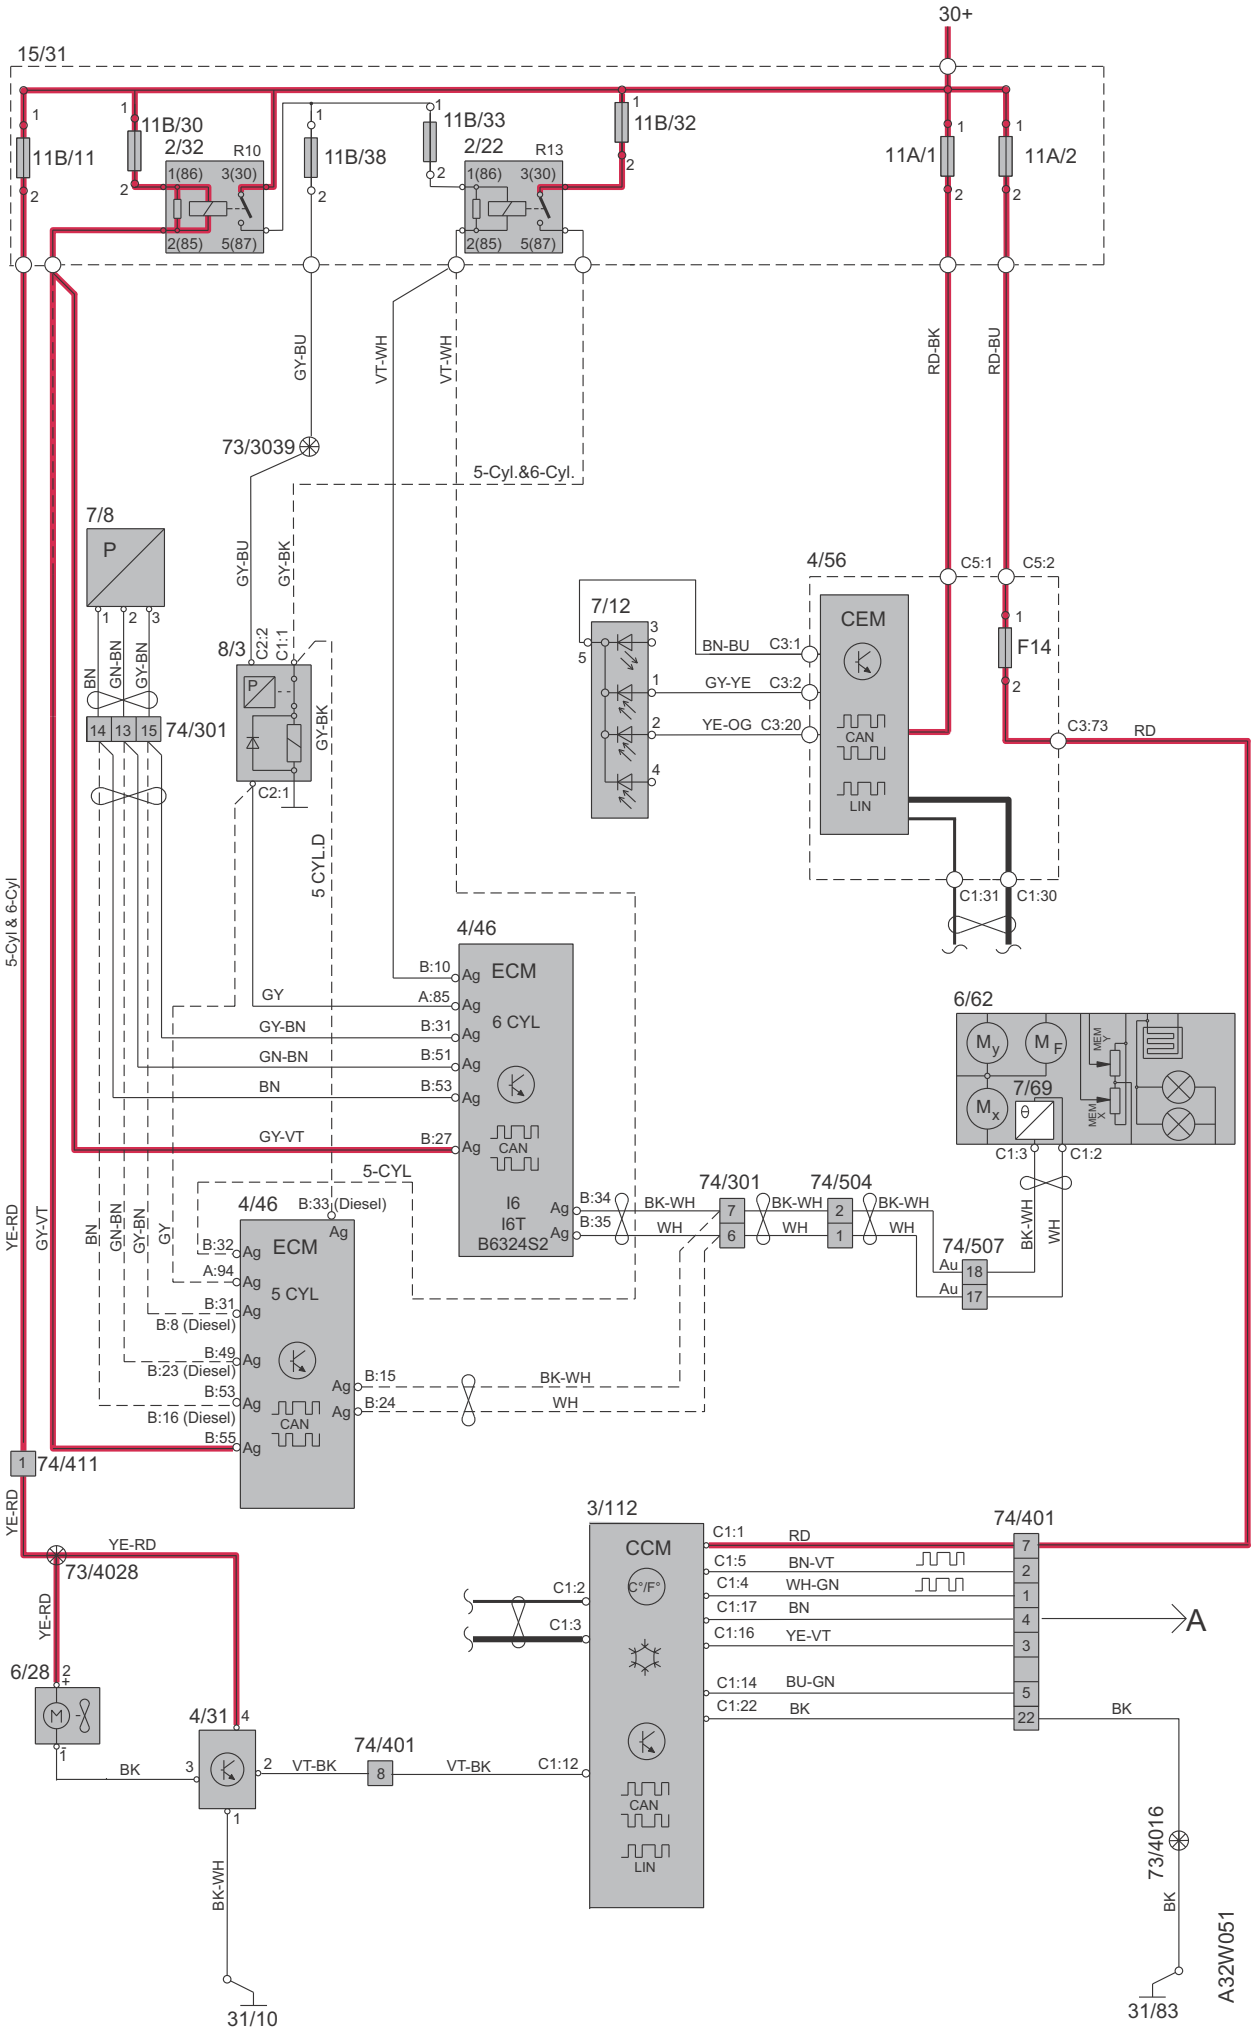

Climate control system 5-Cyl. & 6-Cyl. 2:2

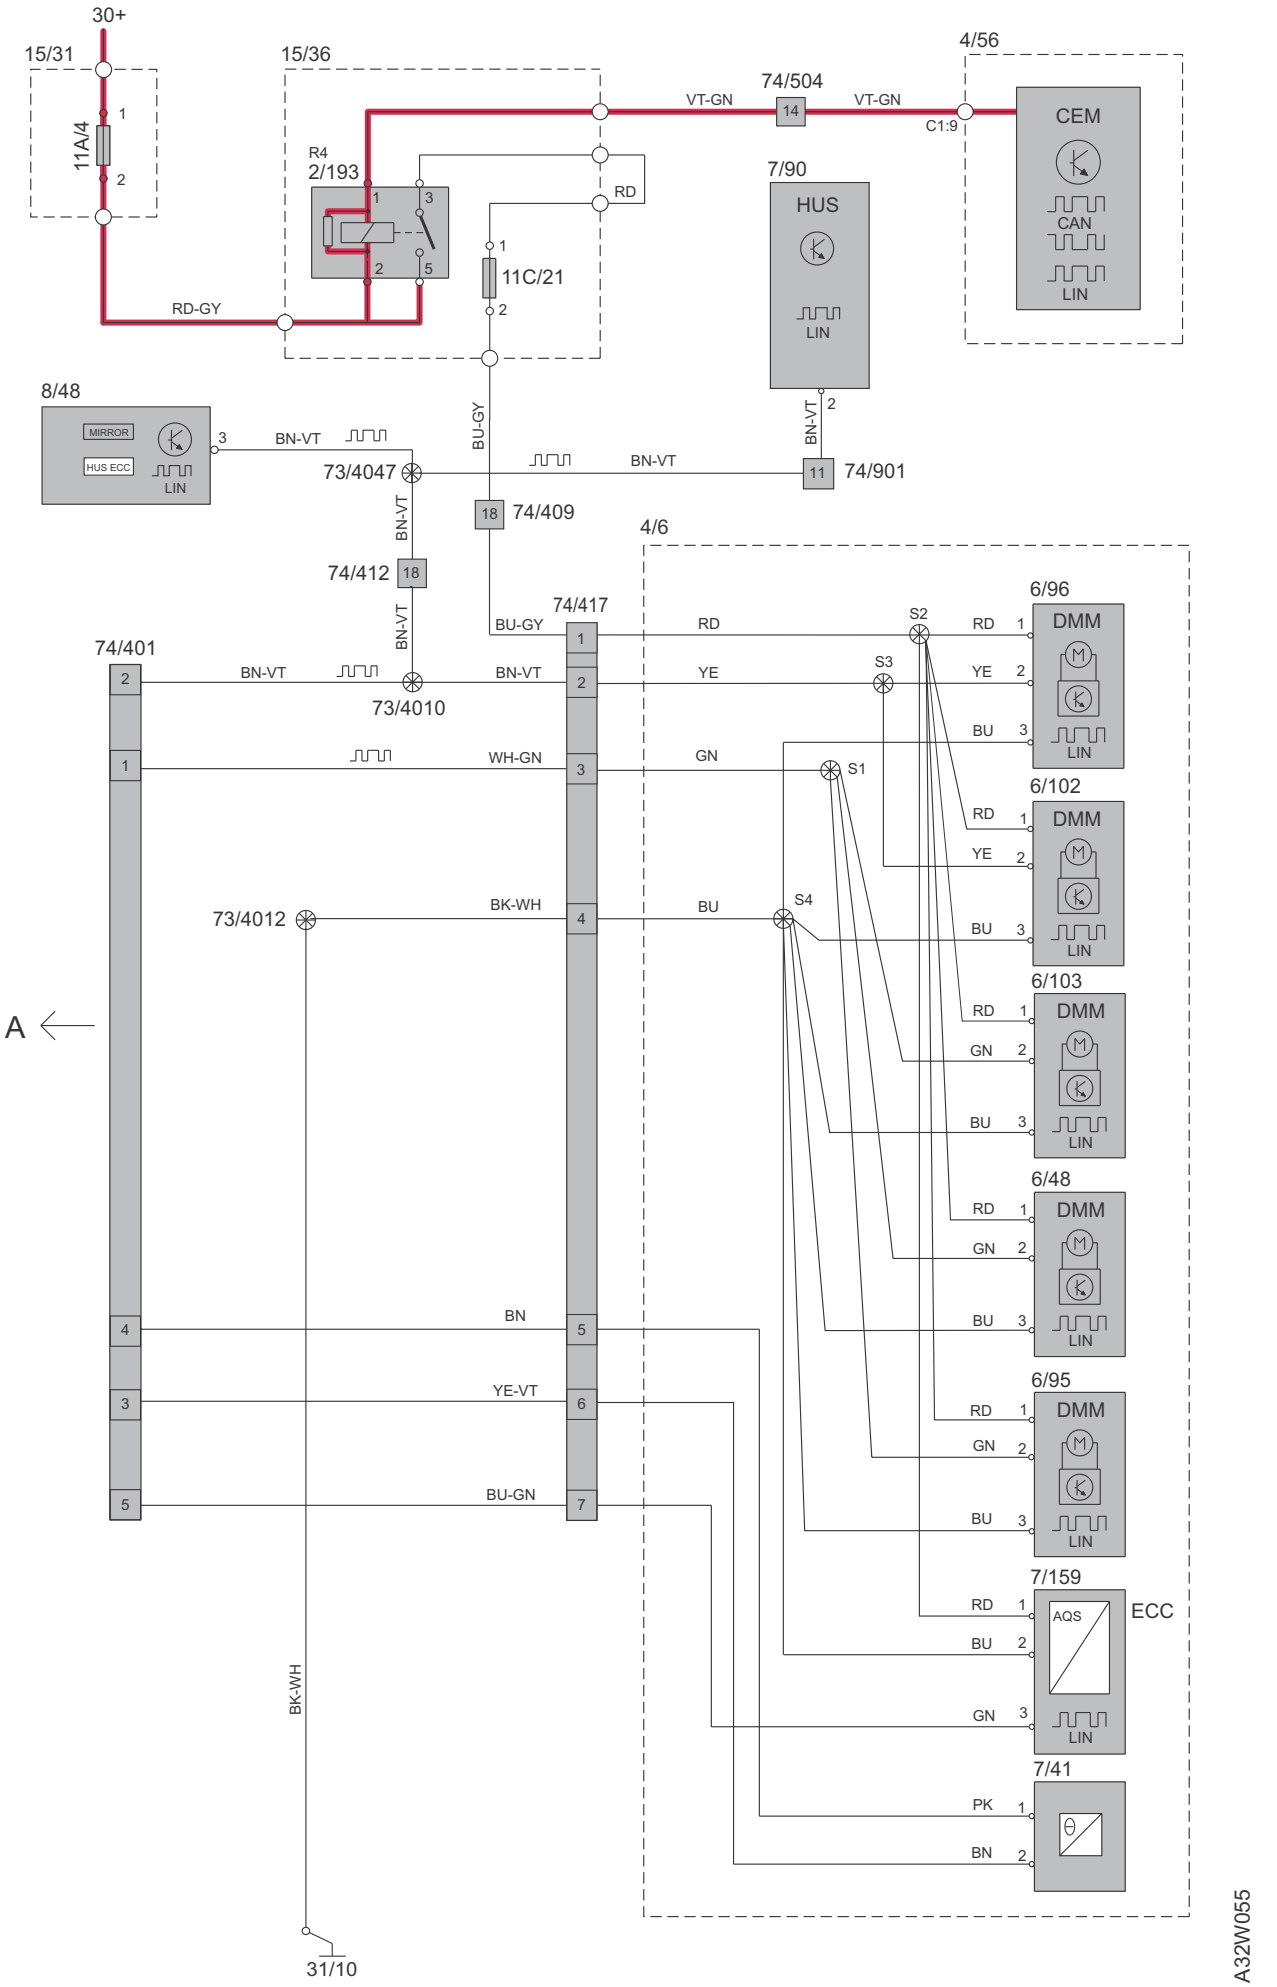

Climate control system PTC-elements

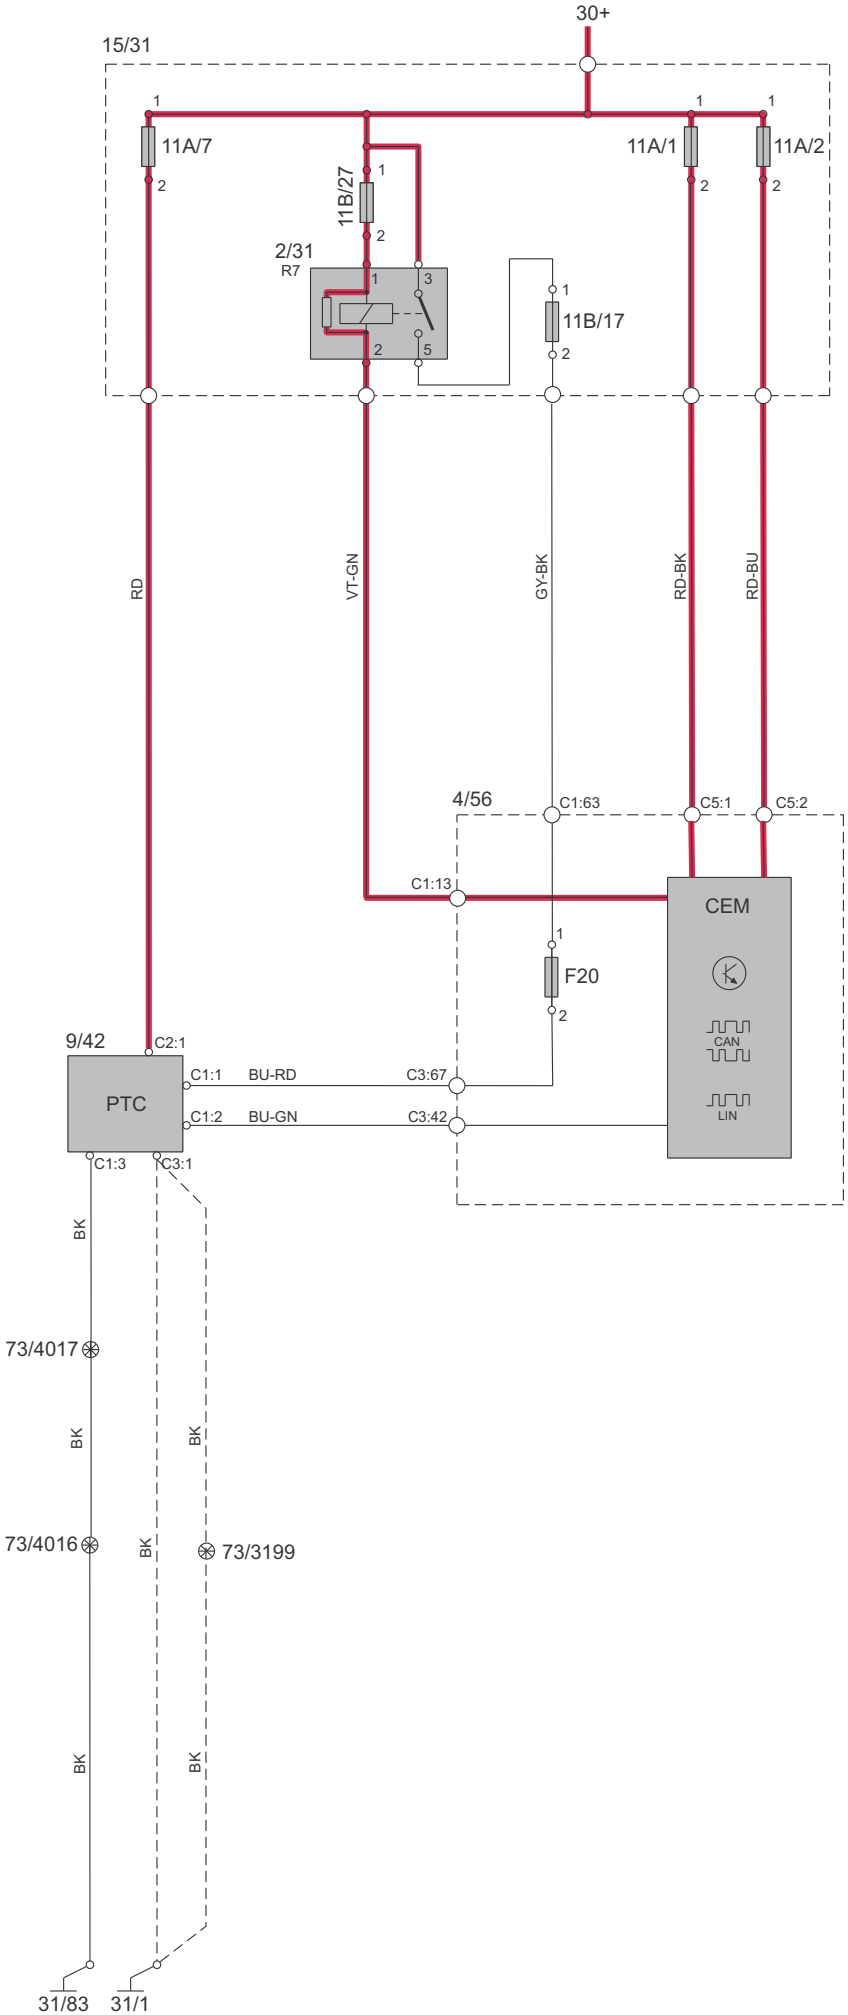

A31W030

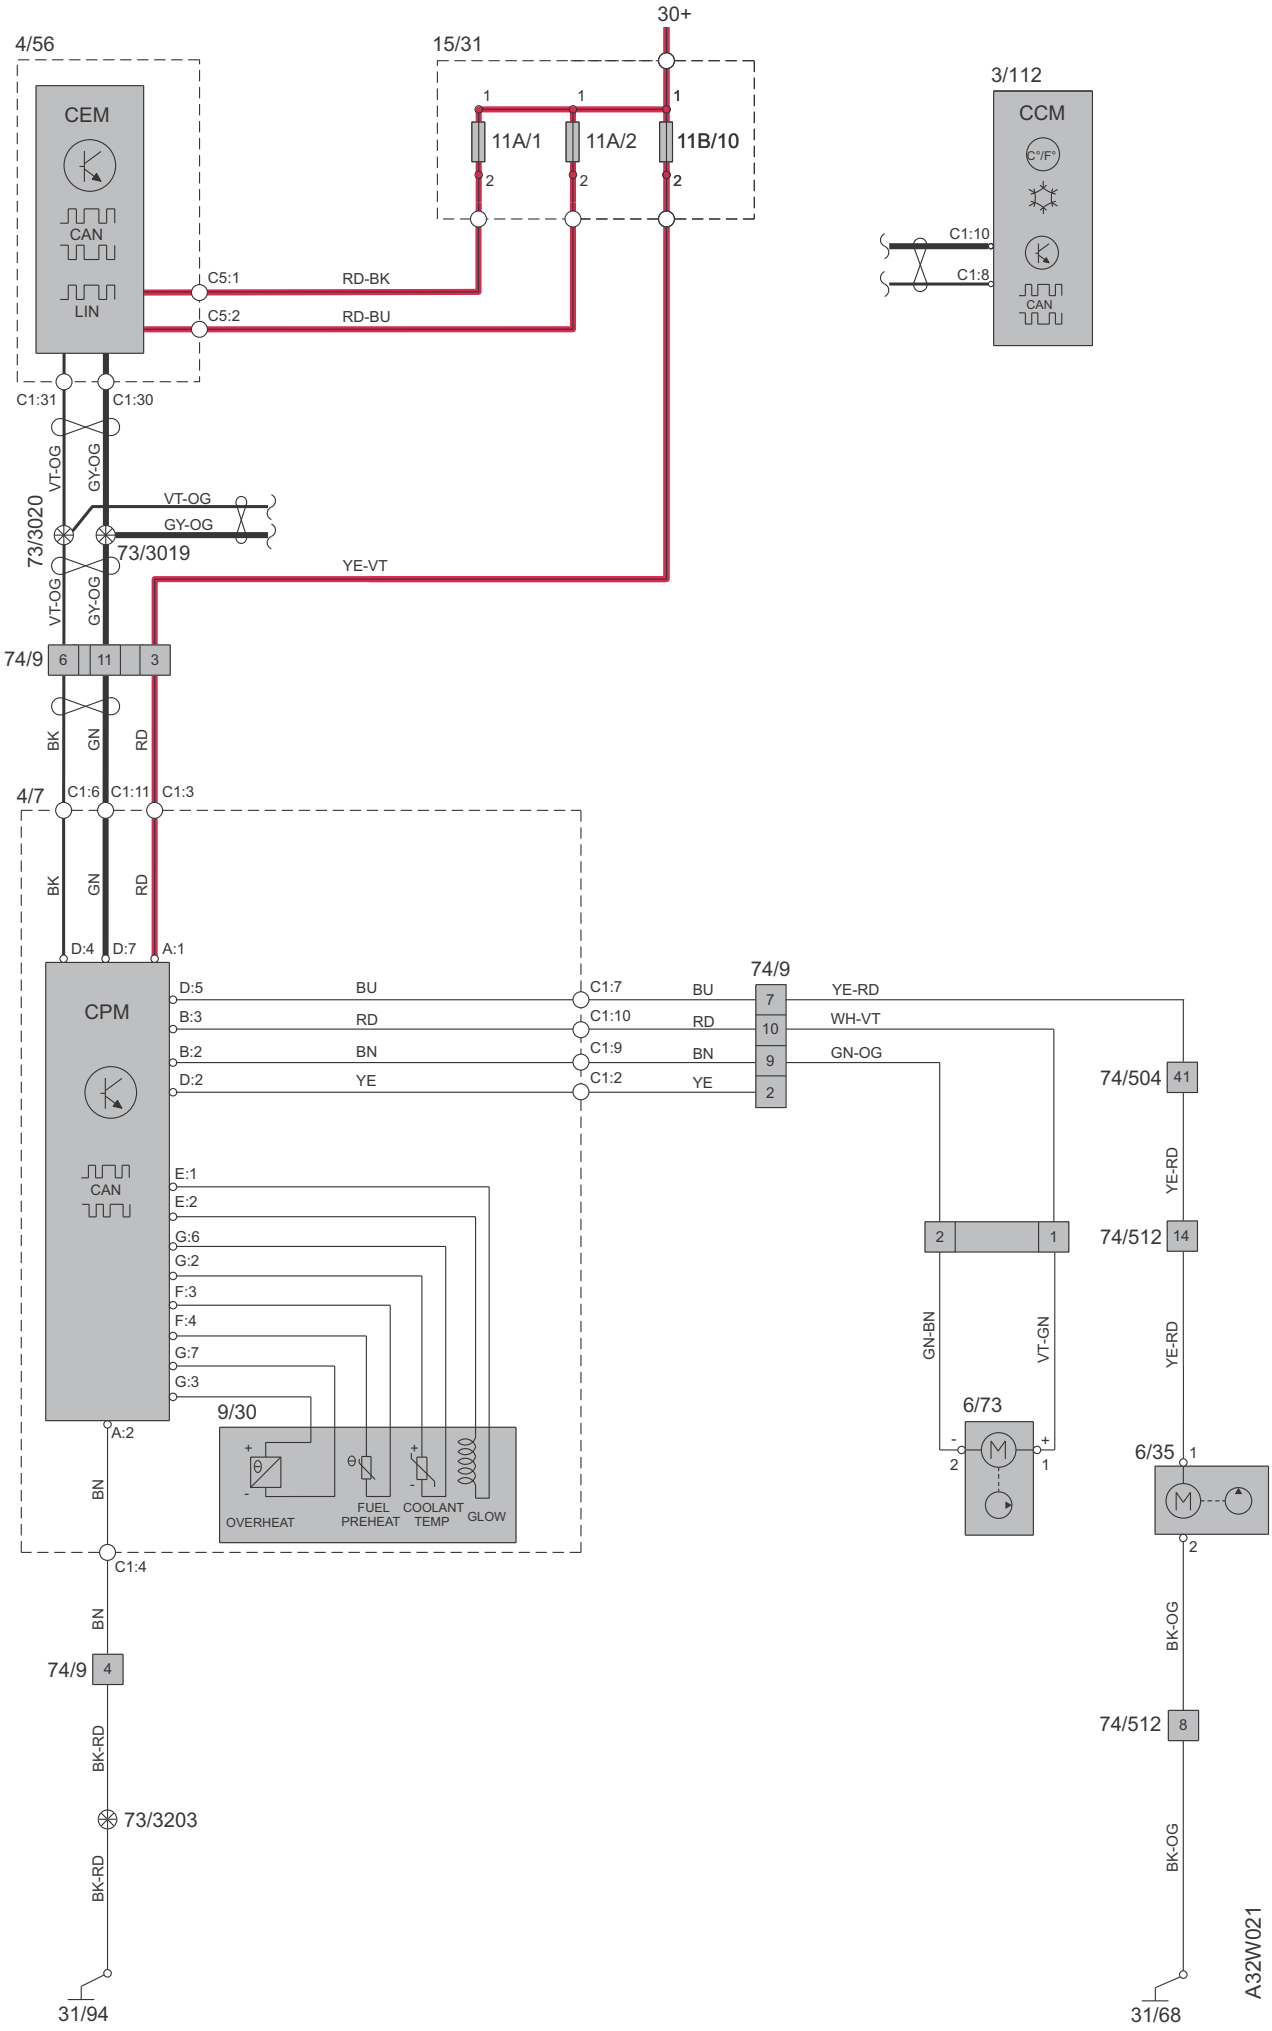
30+
4/56
15/31
3/112
CEM
CAN
LIN
11A/1
11A/2
11B/10
CCM
C°/F°
CAN
C1:10
C1:8
C5:1
RD-BK
C5:2
RD-BU
C1:31
C1:30
VT-OG
GY-OG
73/3020
VT-OG
GY-OG
73/3019
YE-VT
74/9
6
11
3
BK
GN
RD
4/7
C1:6
C1:11
C1:3
D:4
D:7
A:1
CPM
CAN
D:5
BU
C1:7
BU
B:3
RD
C1:10
RD
B:2
BN
C1:9
BN
D:2
YE
C1:2
YE
74/9
7
10
9
2
YE-RD
WH-VT
GN-OG
74/504
41
YE-RD
74/512
14
YE-RD
2
1
GN-BN
VT-GN
6/73
2
1
6/35
1
2
E:1
E:2
G:6
G:2
F:3
F:4
G:7
G:3
9/30
OVERHEAT
FUEL PREHEAT
COOLANT TEMP
GLOW
A:2
BN
C1:4
BN
74/9
4
BK-RD
73/3203
BK-RD
31/94
BK-OG
74/512
8
BK-OG
31/68
A32W021

Group 87 Climate control system, Accessories
Parking heater, remote start

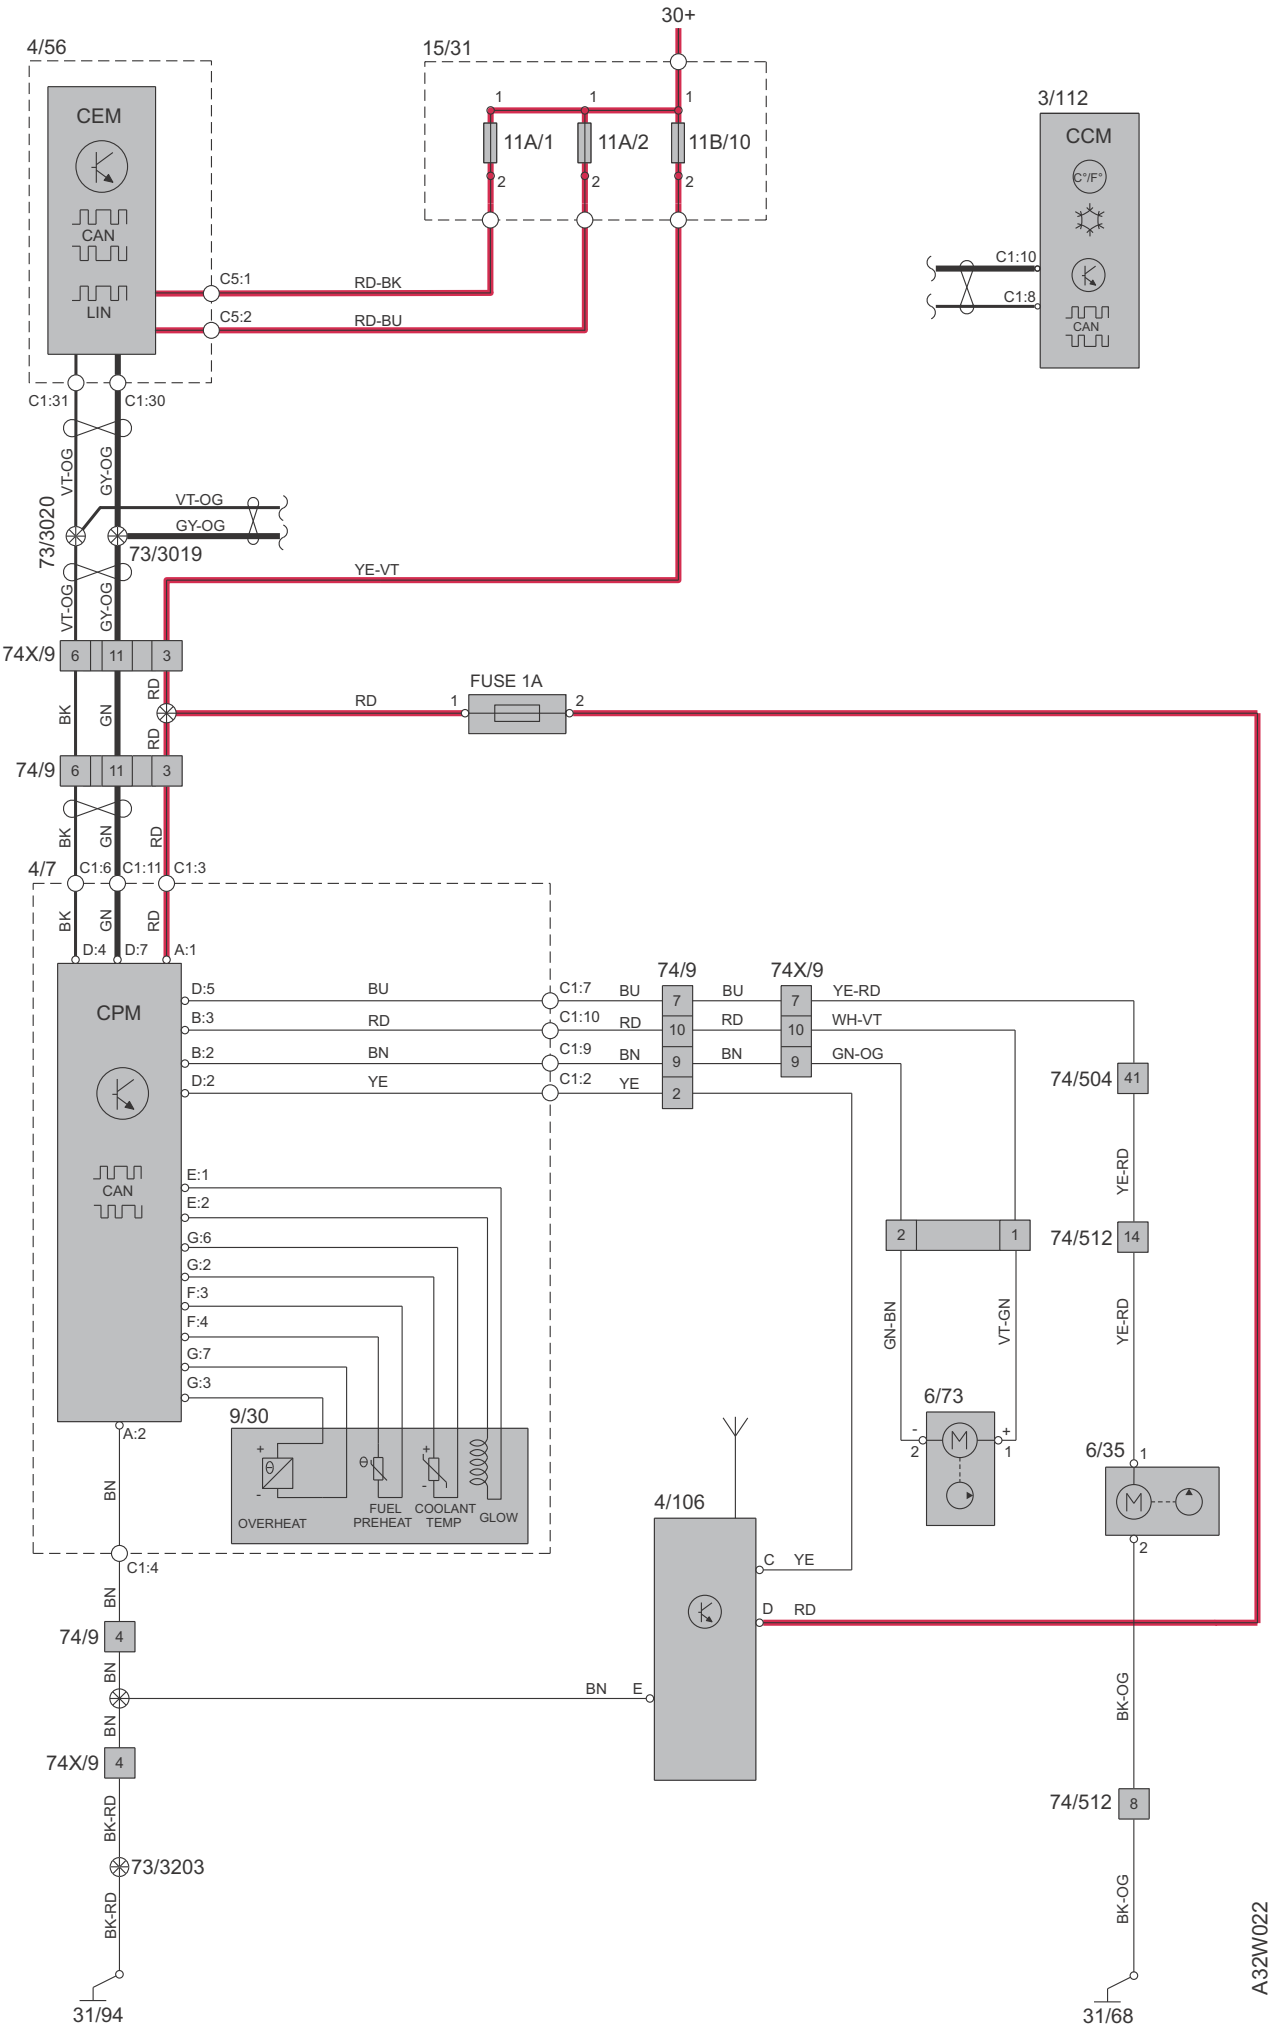

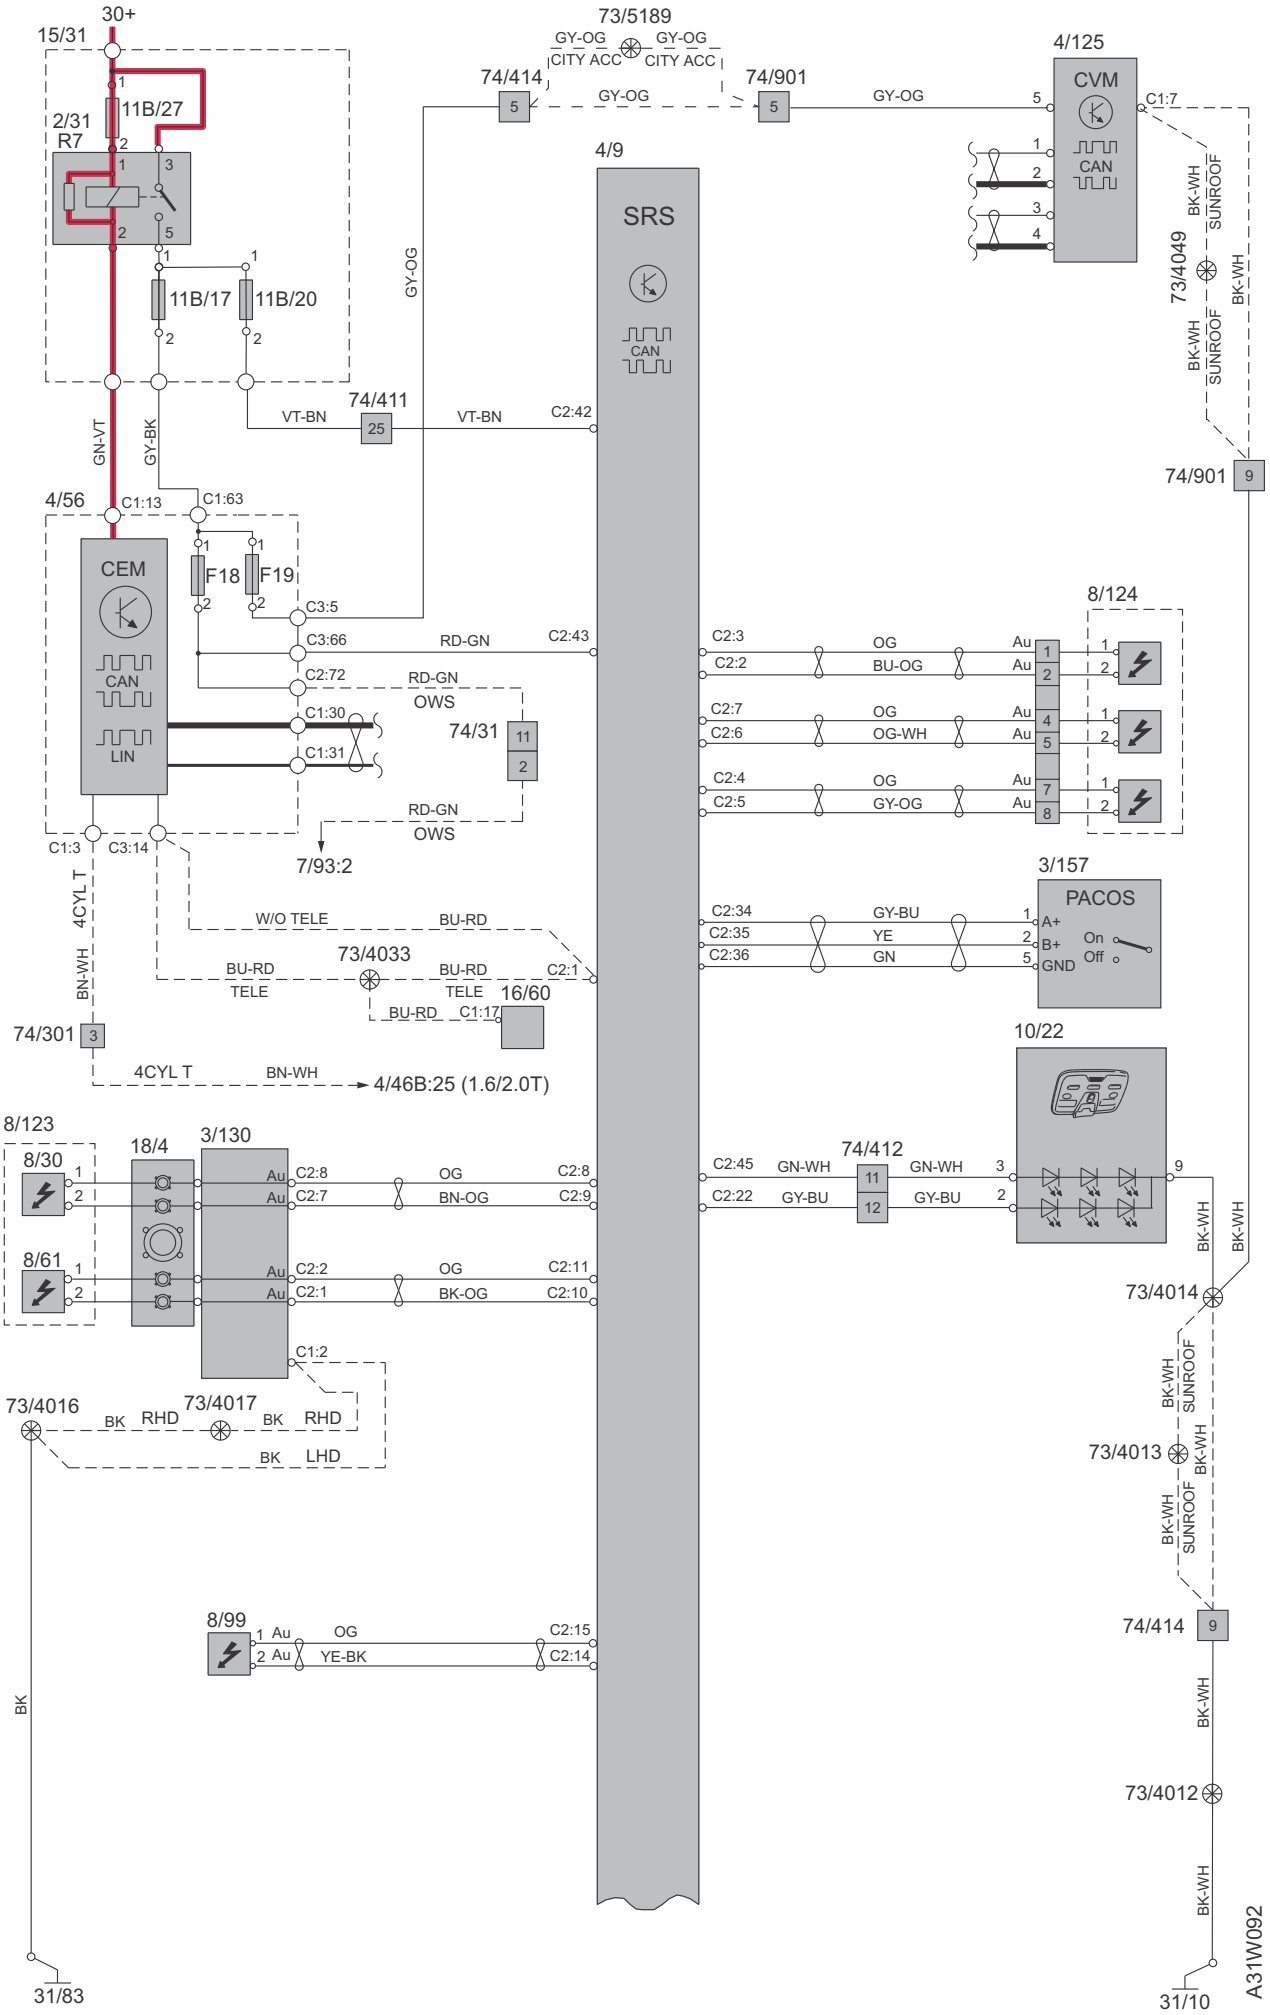
30+
15/31
11B/27
2/31
R7
11B/17
11B/20
GN-VT
GY-BK
4/56
C1:13
C1:63
CEM
CAN
LIN
F18
F19
C3:5
C3:66
RD-GN
C2:43
C2:72
RD-GN
OWS
C1:30
C1:31
74/31
11
2
RD-GN
OWS
7/93:2
C1:3
C3:14
4CYL T
BN-WH
W/O TELE
BU-RD
73/4033
BU-RD
TELE
BU-RD
TELE
C2:1
16/60
BU-RD
C1:17
74/301
3
4CYL T
BN-WH
4/46B:25 (1.6/2.0T)
8/123
8/30
8/61
18/4
3/130
Au
C2:8
OG
C2:8
Au
C2:7
BN-OG
C2:9
Au
C2:2
OG
C2:11
Au
C2:1
BK-OG
C2:10
C1:2
73/4016
BK
RHD
73/4017
BK
RHD
BK
LHD
8/99
1 Au
OG
C2:15
2 Au
YE-BK
C2:14
BK
31/83
73/5189
GY-OG
CITY ACC
GY-OG
CITY ACC
74/414
5
GY-OG
74/901
5
GY-OG
4/125
CVM
CAN
5
C1:7
1
2
3
4
BK-WH
SUNROOF
73/4049
BK-WH
SUNROOF
BK-WH
74/901
9
4/9
SRS
CAN
GY-OG
74/411
25
VT-BN
VT-BN
C2:42
C2:3
OG
Au
1
C2:2
BU-OG
Au
2
C2:7
OG
Au
4
C2:6
OG-WH
Au
5
C2:4
OG
Au
7
C2:5
GY-OG
Au
8
8/124
1
2
1
2
1
2
3/157
PACOS
C2:34
GY-BU
1
A+
C2:35
YE
2
B+
On
C2:36
GN
5
GND
Off
10/22
74/412
C2:45
GN-WH
11
GN-WH
3
9
C2:22
GY-BU
12
GY-BU
2
BK-WH
BK-WH
73/4014
BK-WH
SUNROOF
73/4013
BK-WH
BK-WH
SUNROOF
74/414
9
BK-WH
73/4012
BK-WH
31/10
A31W092

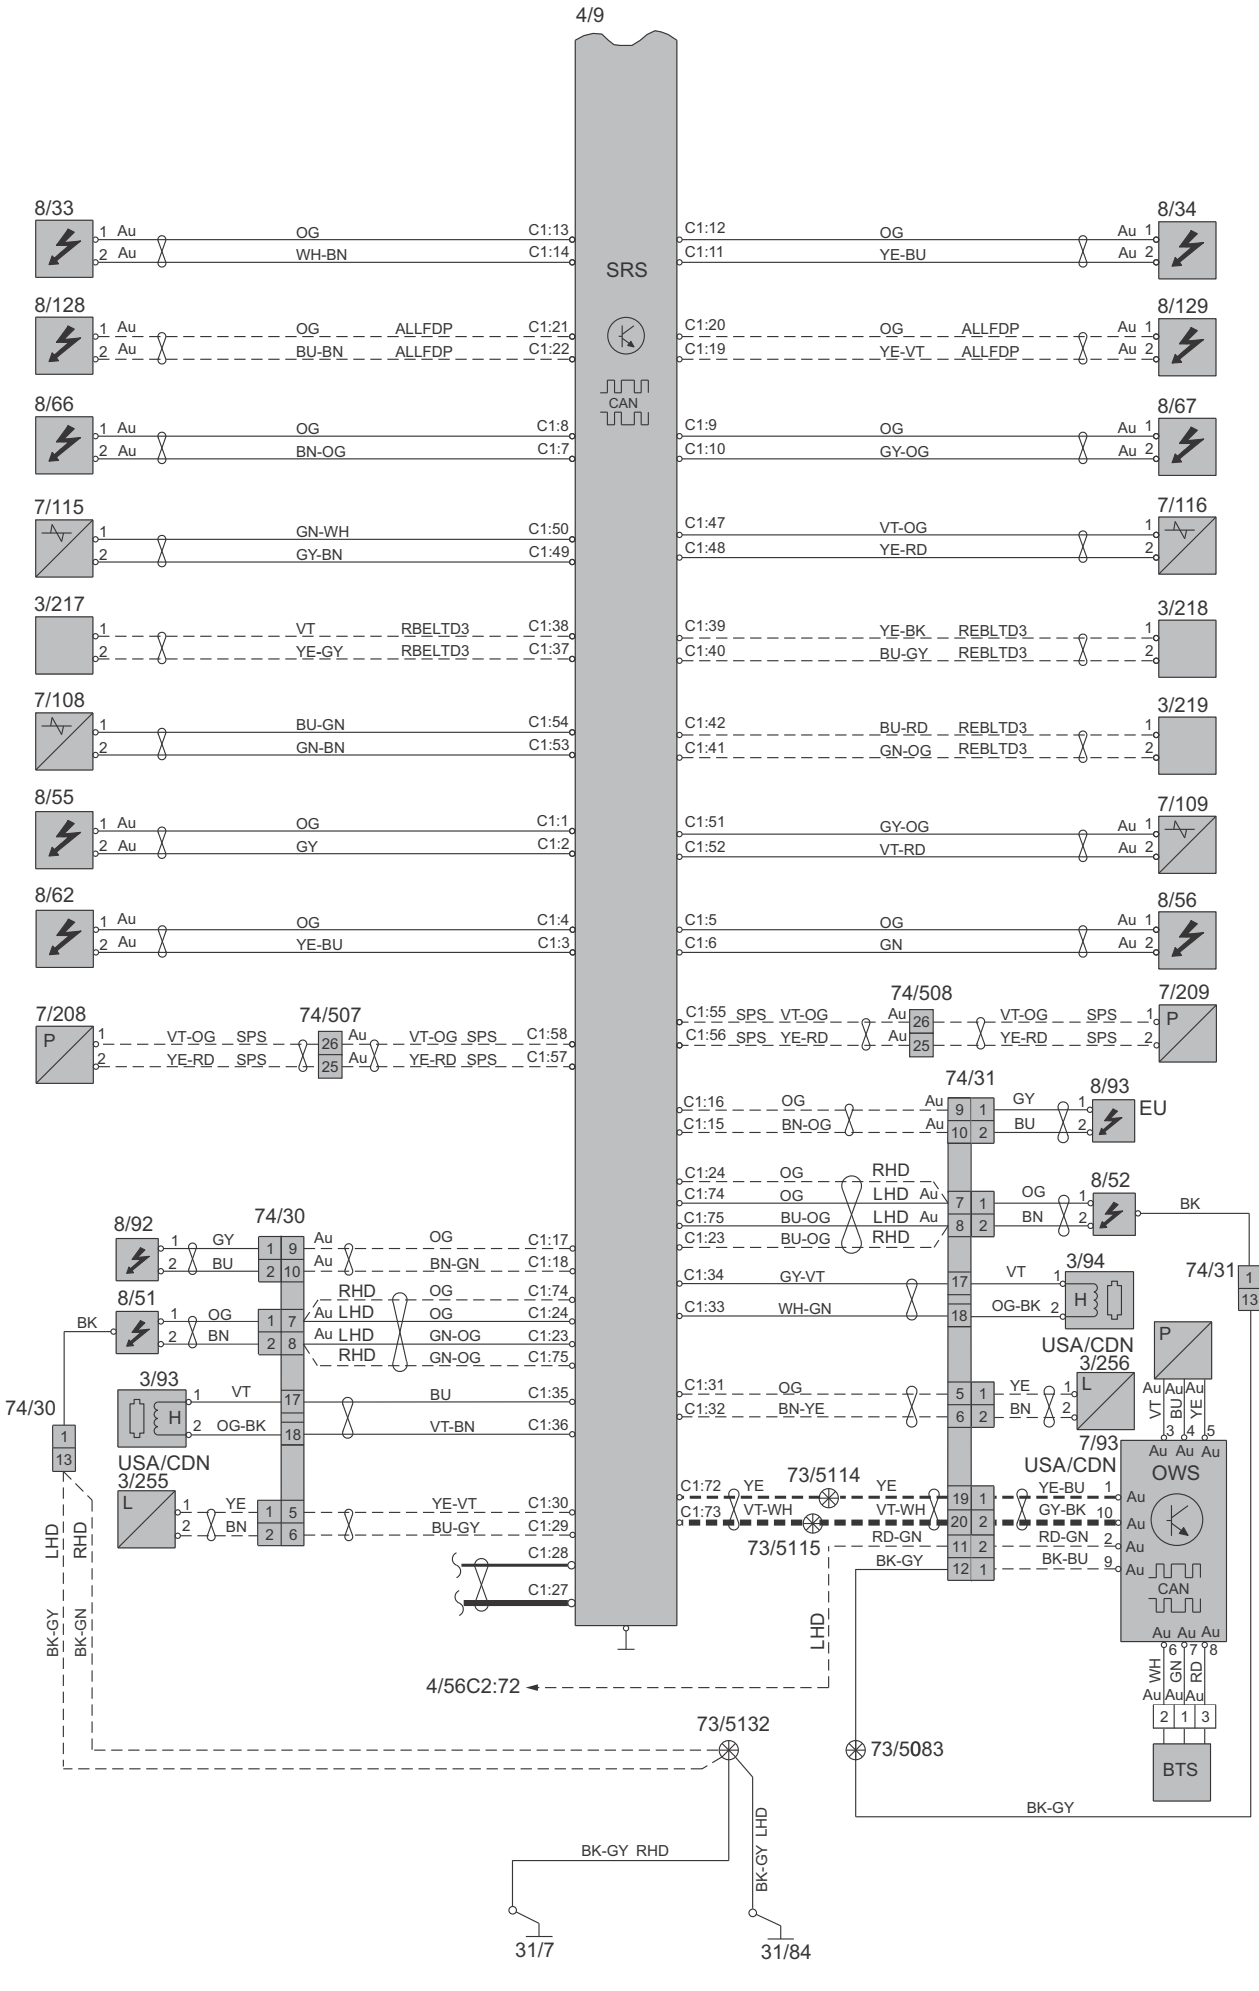
4/9
SRS
CAN
8/33
8/34
8/128
8/129
8/66
8/67
7/115
7/116
3/217
3/218
7/108
3/219
8/55
7/109
8/62
8/56
7/208
74/507
74/508
7/209
74/31
8/93
EU
8/92
74/30
8/52
8/51
3/94
74/31
USA/CDN
3/256
3/93
USA/CDN
3/255
7/93
USA/CDN
OWS
73/5114
73/5115
LHD
RHD
CAN
4/56C2:72
73/5132
73/5083
BTS
BK-GY RHD
BK-GY LHD
31/7
31/84
A31W093

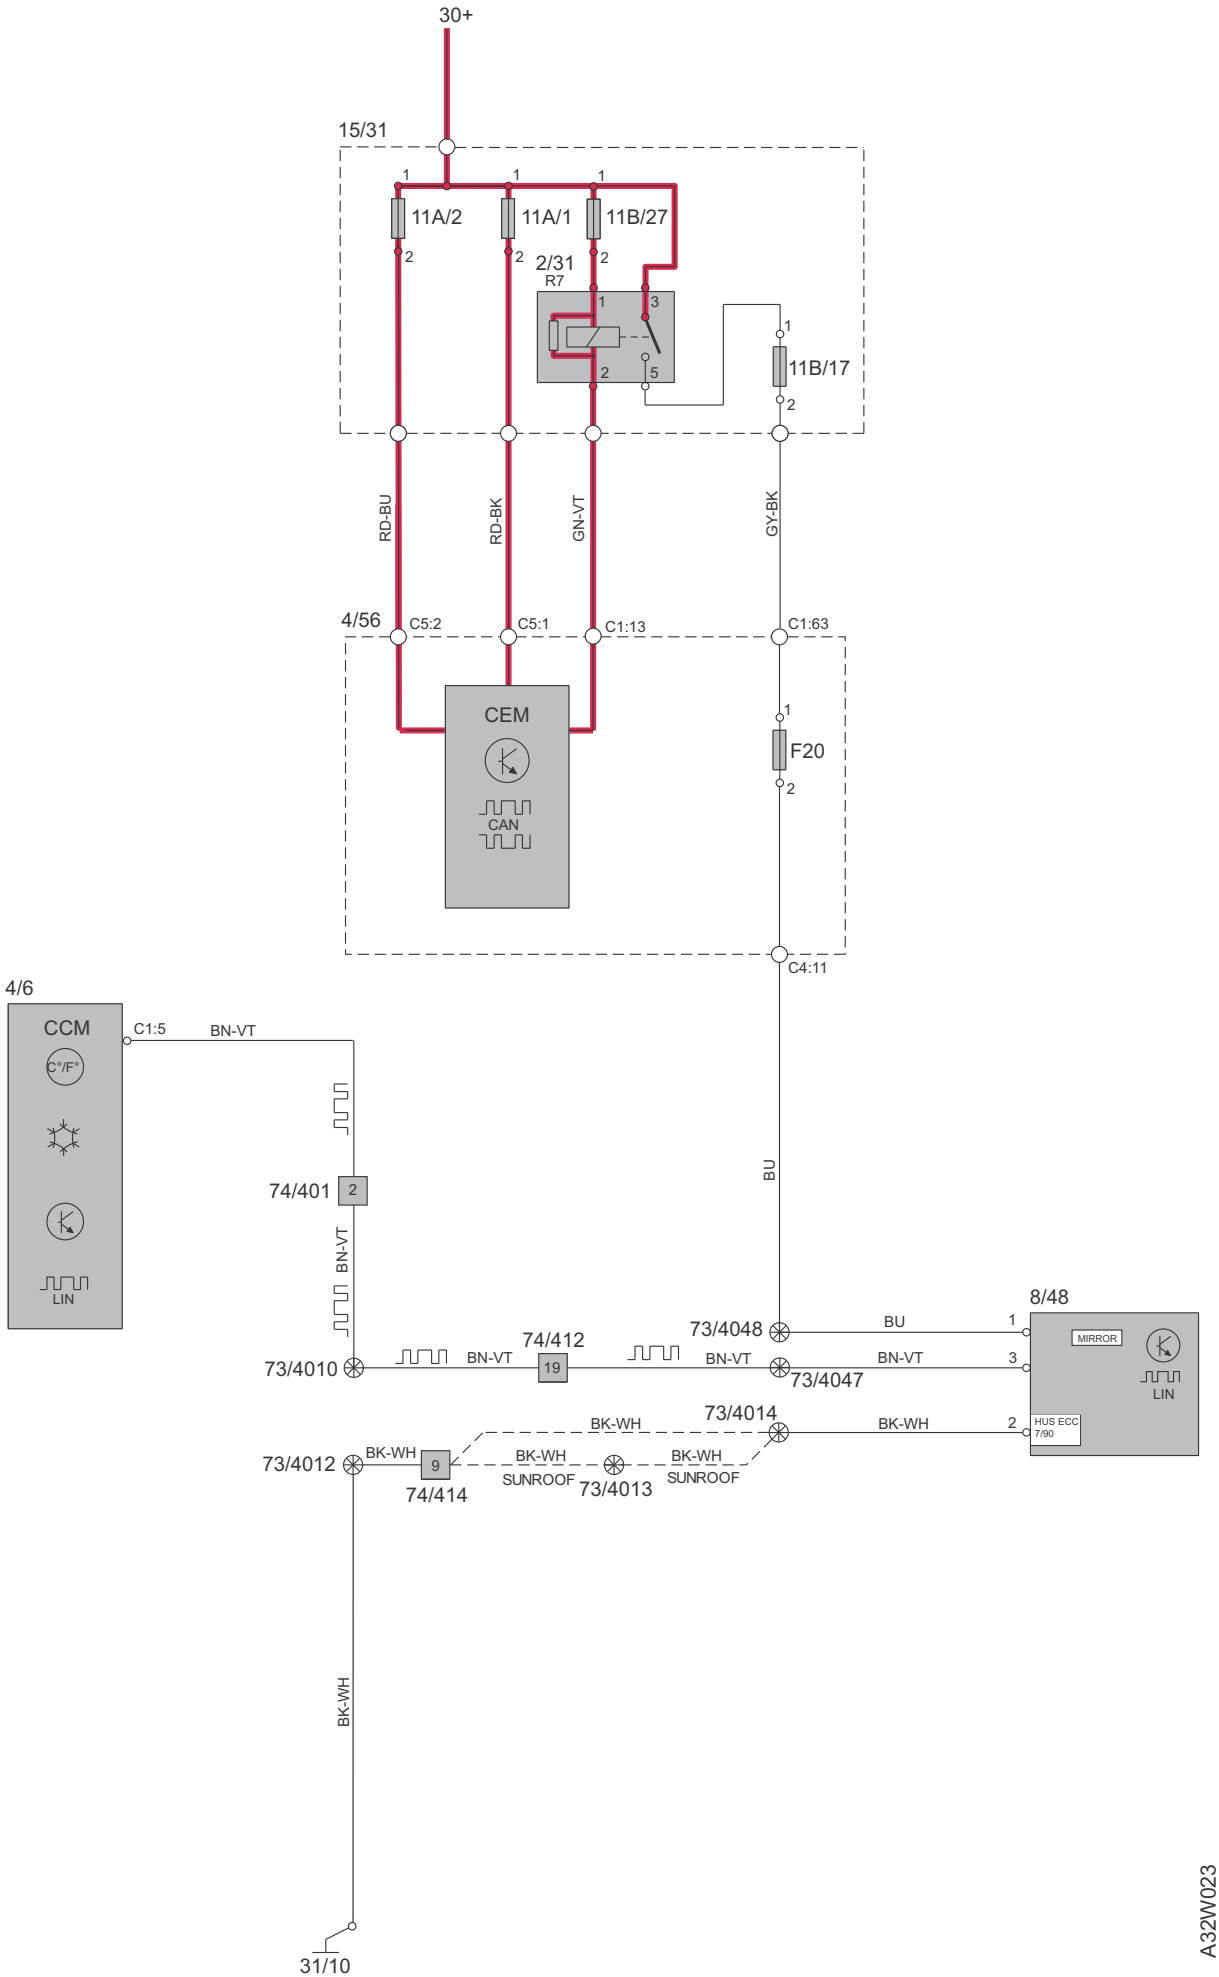
30+
15/31
11A/2
11A/1
11B/27
2/31
R7
11B/17
RD-BU
RD-BK
GN-VT
GY-BK
4/56
C5:2
C5:1
C1:13
C1:63
CEM
CAN
F20
C4:11
4/6
CCM
C1:5
BN-VT
74/401
BN-VT
LIN
BU
8/48
73/4048
74/412
73/4010
BN-VT
19
BN-VT
BN-VT
73/4047
MIRROR
LIN
73/4014
BK-WH
BK-WH
HUS ECC 7/90
73/4012
BK-WH
9
BK-WH
SUNROOF
73/4013
BK-WH
SUNROOF
74/414
BK-WH
31/10
A32W023

Group 88 Internal equipment
Remote control opener garage door

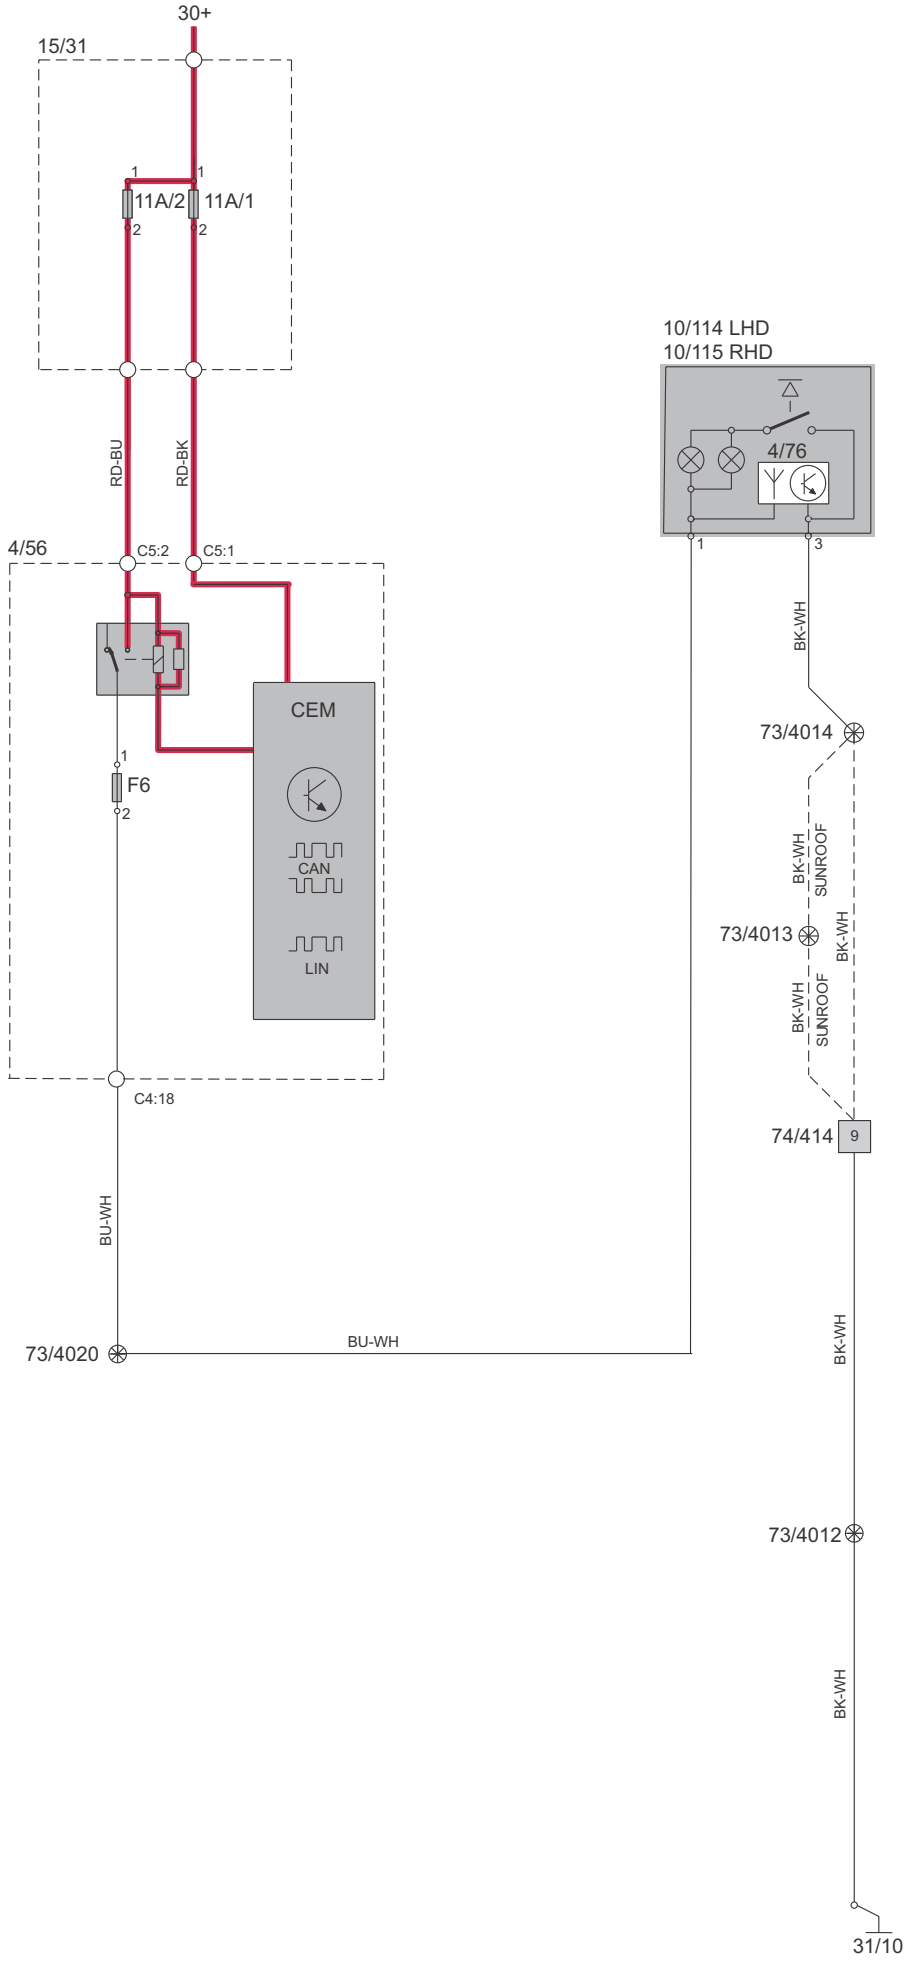

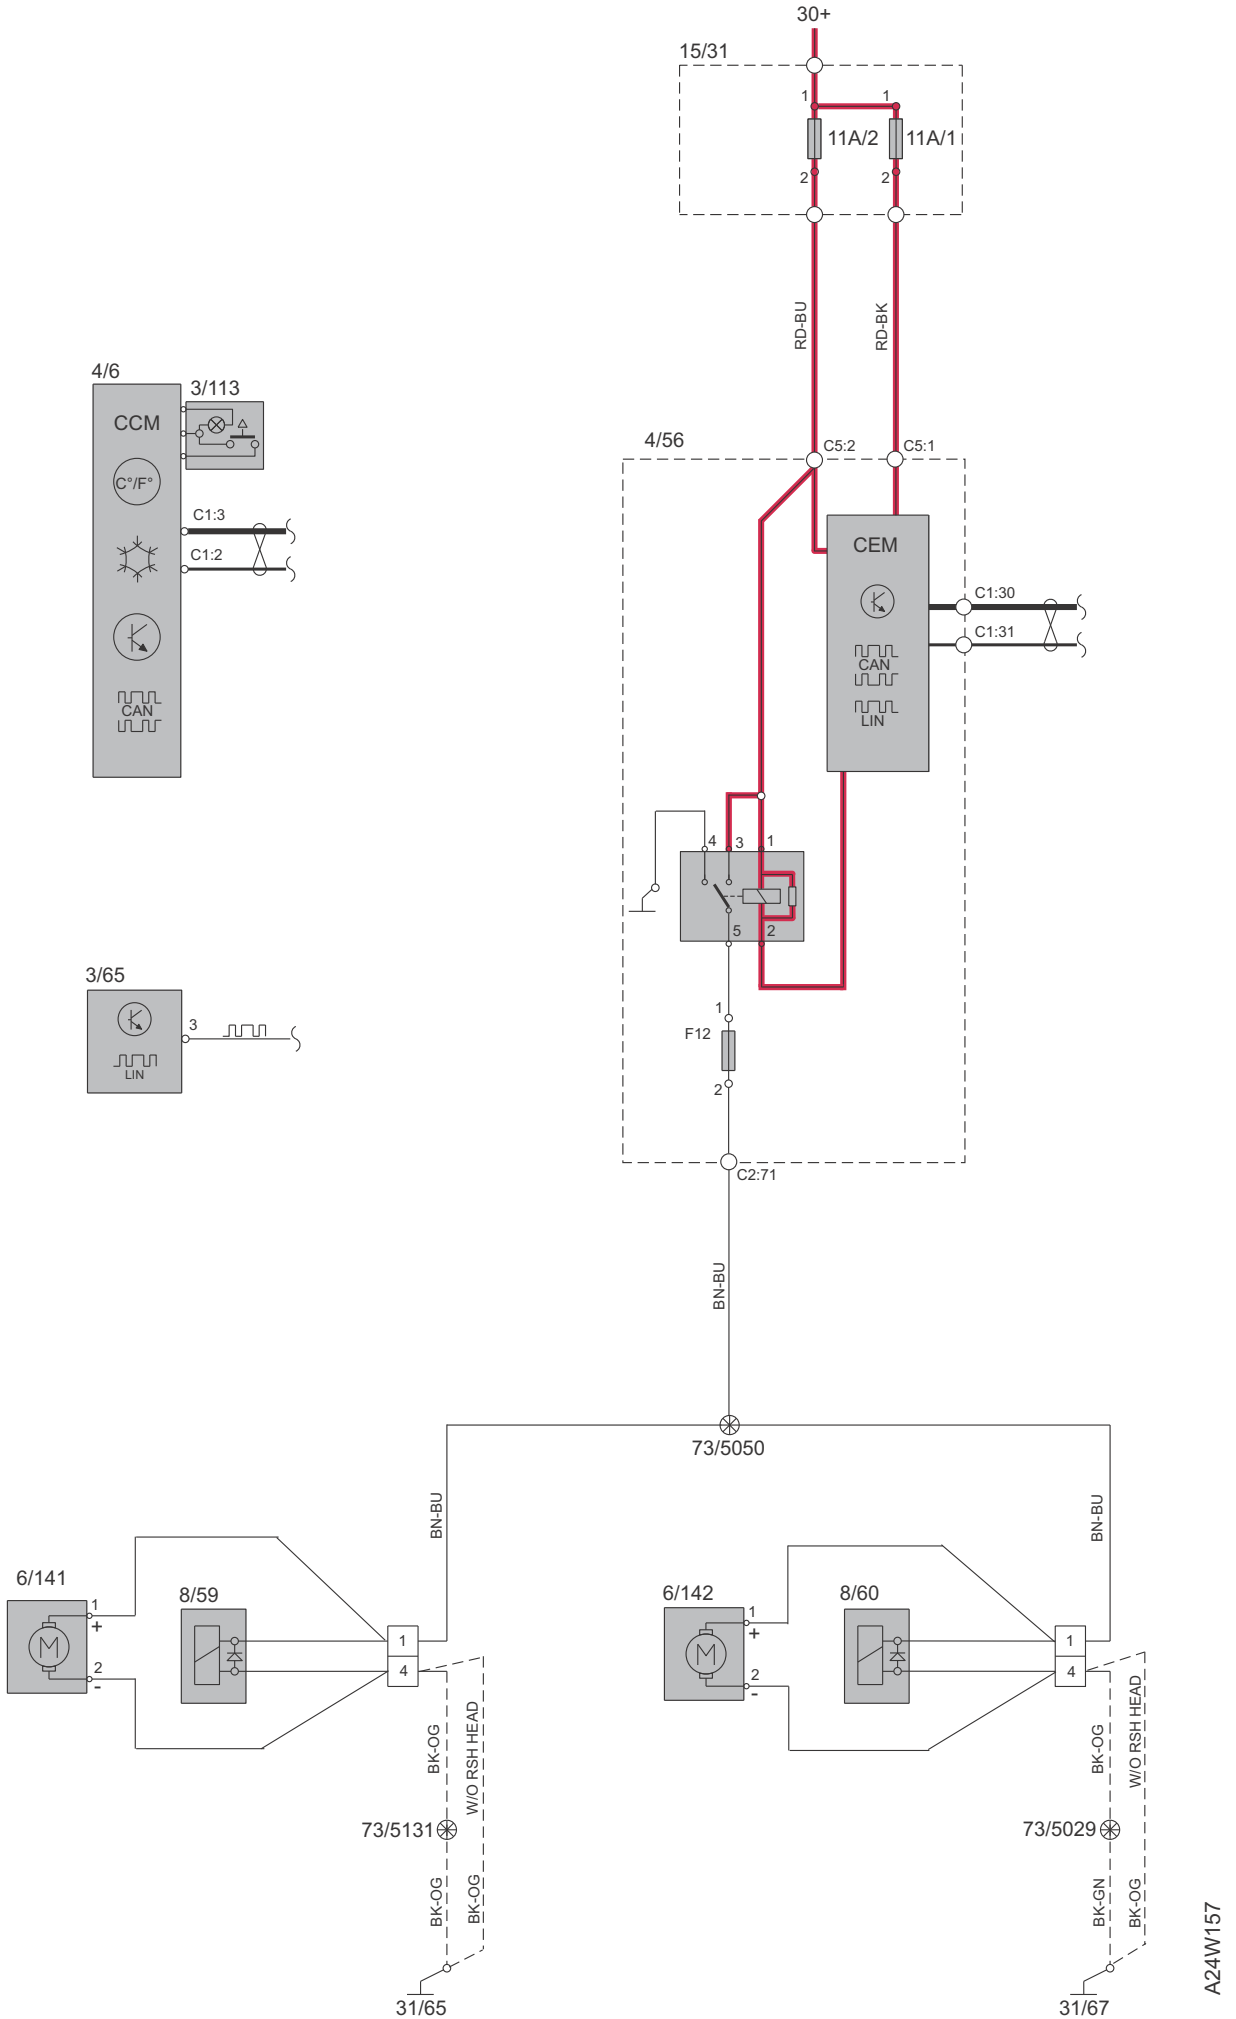
30+
15/31
1
1
11A/2
11A/1
2
2
RD-BU
RD-BK
4/6
3/113
CCM
C°/F°
C1:3
C1:2
CAN
4/56
C5:2
C5:1
CEM
C1:30
C1:31
CAN
LIN
4
3
1
5
2
3/65
3
LIN
1
F12
2
C2:71
BN-BU
73/5050
BN-BU
BN-BU
6/141
8/59
6/142
8/60
1
+
2
-
1
4
BK-OG
W/O RSH HEAD
73/5131
73/5029
BK-OG
BK-OG
BK-GN
BK-OG
31/65
31/67
A24W157

Group 89 Body other
Radiator masking blind

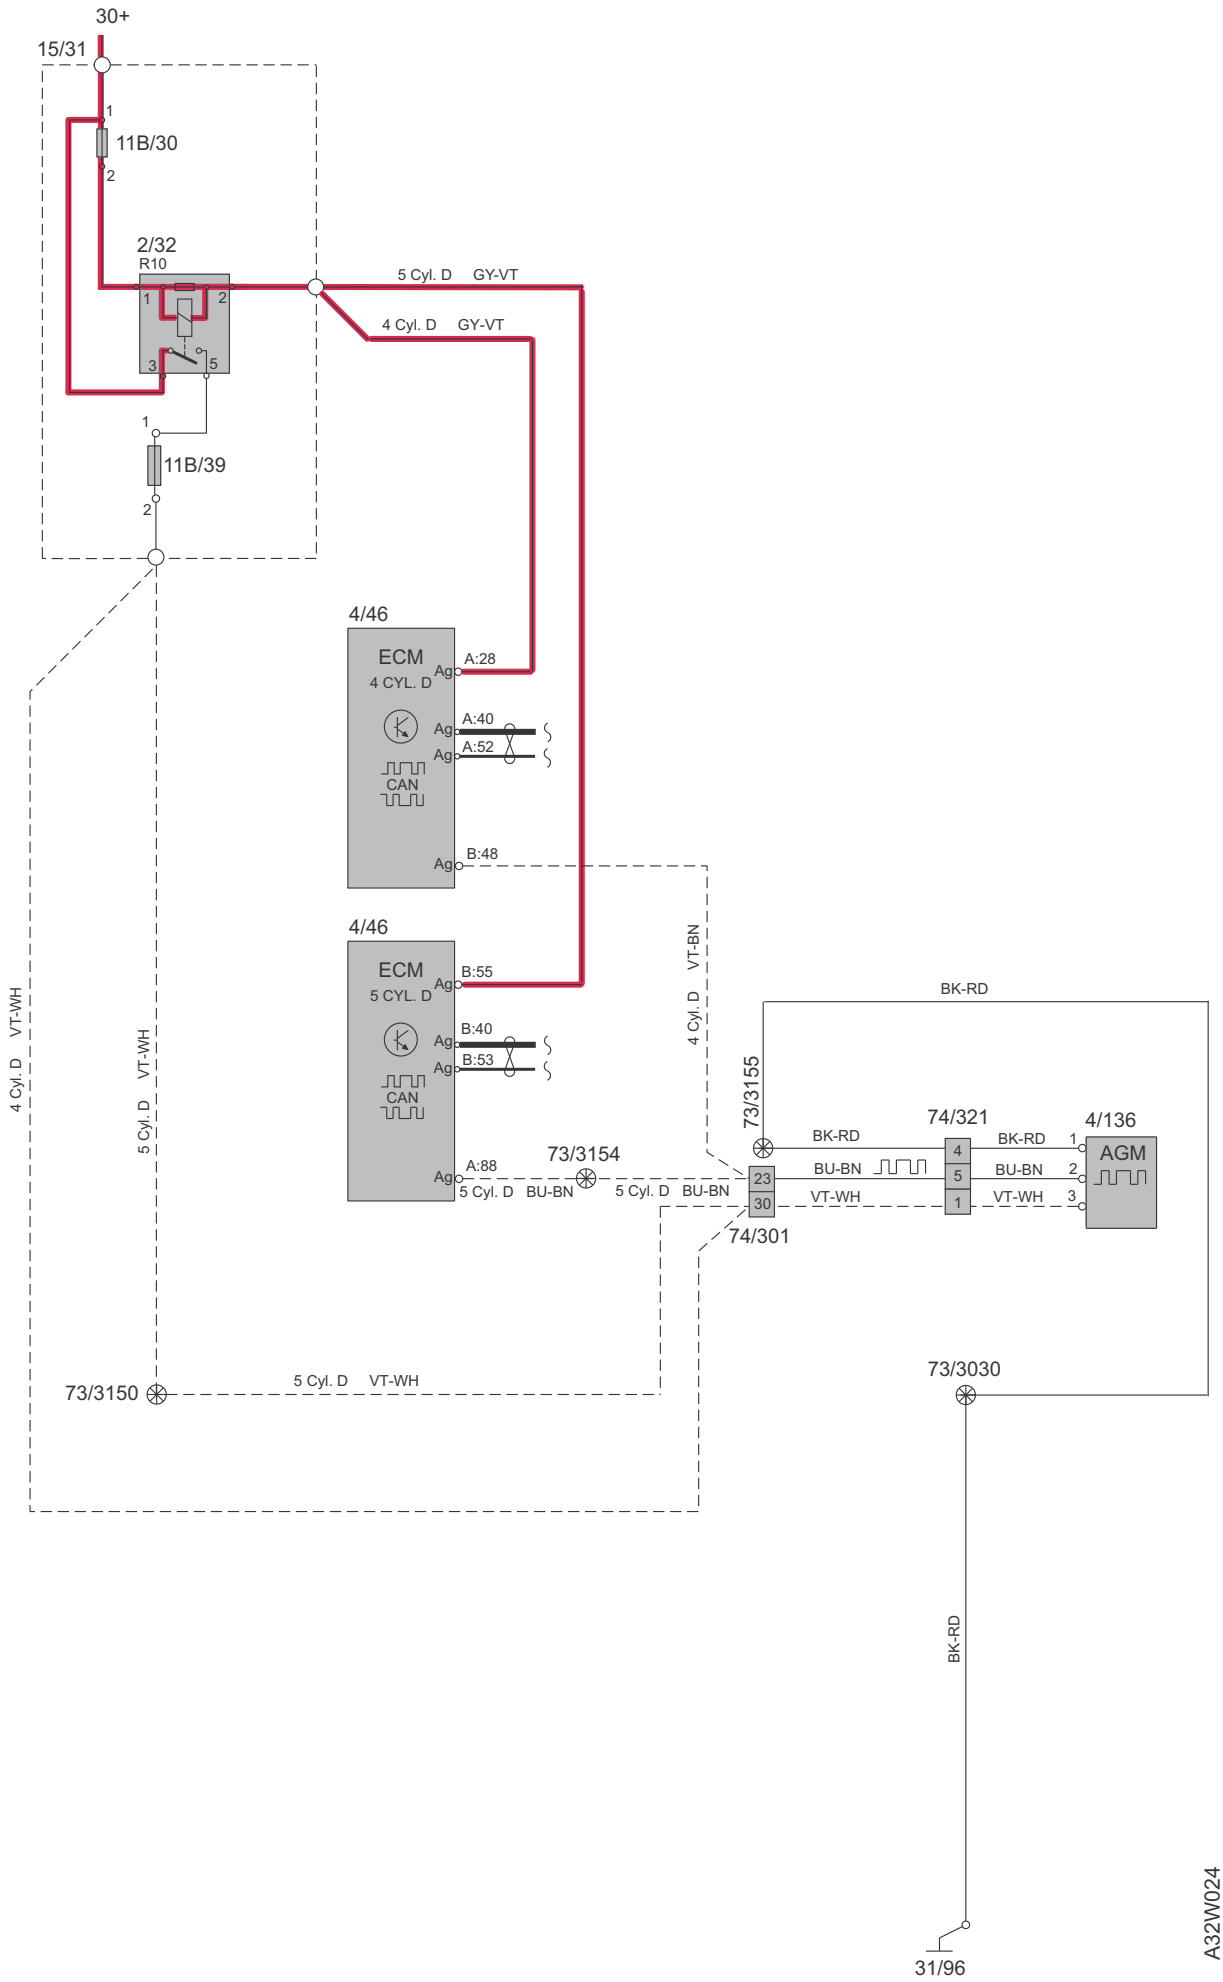

Connectors
74/9 - 74/30:1-8

74/9
12-pin black

No.	Engine compartment harness			Heater harness		
1	-		-	-		-
2	4/106:C	Control module, remote parking heater start	YE	4/7C1:2	Combustion Preheater Module (CPM)	YE
3	11B/10:2	Fuses in engine compartment fuse box	YE-VT	4/7C1:3	Combustion Preheater Module (CPM)	RD
4	73/3203	Branching point	BK-RD	4/7C1:4	Combustion Preheater Module (CPM)	BN
5	-		-	-		-
6	73/3020	Branching point	VT-OG	4/7C1:6	Combustion Preheater Module (CPM)	VT-OG
7	74/504:41	Connector	YE-RD	4/7C1:7	Combustion Preheater Module (CPM)	BU
8	-		-	-		-
9	6/73:2	Coolant pump	GN-OG	4/7C1:9	Combustion Preheater Module (CPM)	BN
10	6/73:1	Coolant pump	WH-VT	4/7C1:10	Combustion Preheater Module (CPM)	RD
11	73/3019	Branching point	GY-OG	4/7C1:11	Combustion Preheater Module (CPM)	GN
12	-		-	-		-

74/30
20-pin black

No.	Floor harness			Harness driver's seat		
1	73/5035 73/5023	Branching point, LHD Branching point, RHD	BK-VT BK-GN	9/12A:1	Seat Heating Module (SHM), driver's side	BK
2	11C/27:2	Fuse, distribution box in passenger compartment	GN-BK	9/12A:4	Seat Heating Module (SHM), driver's side	YE-RD
3	-		-	-		-
4	74/409:15 74/409:16	Connector, LHD Connector, RHD	WH-GN	9/12A:2	Seat Heating Module (SHM), driver's side	WH-GN
5	4/9C1:30	Supplemental Restraint System (SRS)	YE-VT	3/255:1	Position sensor driver's seat USA/CDN	YE
6	4/9C1:29	Supplemental Restraint System (SRS)	BU-GY	3/255:2	Position sensor driver's seat USA/CDN	BN
7	4/9C1:24 4/9C1:74	Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD	OG	8/51:1	Front left side airbag igniter	OG
8	4/9C1:23 4/9C1:75	Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD	GN-OG	8/51:2	Front left side airbag igniter	BN

continues

Connectors
74/30:9-20 - 74/31:1-6

74/30
20-pin black

No.	Floor harness			Harness driver's seat		
9	4/9C1:17	Supplemental Restraint System (SRS)	OG	8/92:1	Lap belt tensioner, driver	GY
10	4/9C1:18	Supplemental Restraint System (SRS)	BN-GN	8/92:2	Lap belt tensioner, driver	BU
11	73/5004	Branching point	VT-OG	4/52C2:3	Power Seat Module (PSM)	GN
12	73/5003	Branching point	GY-OG	4/52C2:4	Power Seat Module (PSM)	WH
13	73/5132	Branching point	BK-GN	8/51:3	Front left side airbag igniter	BK
14	73/5044	Branching point	BU-WH	4/52C2:1	Power Seat Module (PSM)	RD-WH
15	11C/13:2	Fuse, distribution box in passenger compartment	GY-RD	4/52C1:1	Power Seat Module (PSM)	RD
16	73/5035 73/5023	Branching point, LHD Branching point, RHD	BK-VT	73/3	Branching point	BK
17	4/9C1:35	Supplemental Restraint System (SRS)	BU	3/93:1	Belt buckle contact, driver's seat	VT
18	4/9C1:36	Supplemental Restraint System (SRS)	VT-BN	3/93:2	Belt buckle contact, driver's seat	OG-BK
19	-		-	-		-
20	-		-	-		-

74/31
20-pin black

No.	Floor harness			Harness passenger seat		
1	73/5023 73/5035	Branching point, LHD Branching point, RHD	BK-GN BK-VT	9/13A:1	Seat Heating Module (SHM), passenger side	BK
2	11C/26:2	Fuse, distribution box in passenger compartment	BU-WH	9/13A:4	Seat Heating Module (SHM), passenger side	YE-RD
3	-		-	-		-
4	74/409:16 74/409:15	Connector, LHD Connector, RHD	BN-VT	9/13A:2	Seat Heating Module (SHM), passenger side	WH-GN
5	4/9C1:31	Supplemental Restraint System (SRS)	OG	3/256:1	Position sensor passenger seat USA/CDN	OG
6	4/9C1:32	Supplemental Restraint System (SRS)	BN-YE	3/256:2	Position sensor passenger seat USA/CDN	BN-YE

continues

Connectors
74/31:7-20

74/31
20-pin black

No.	Floor harness			Harness passenger seat		
7	4/9C1:24 4/9C1:74	Supplemental restraint system module (SRS), RHD Supplemental restraint system module (SRS), LHD	OG	8/52:1	Front right side airbag igniter	OG
8	4/9C1:23 4/9C1:75	Supplemental restraint system module (SRS), RHD Supplemental restraint system module (SRS), LHD	BU-OG	8/52:2	Front right side airbag igniter	BN
9	4/9C1:16	Supplemental Restraint System (SRS)	OG	8/93:1	Lap belt tensioner, passenger, EU	GY
10	4/9C1:15	Supplemental Restraint System (SRS)	BN-OG	8/93:2	Lap belt tensioner, passenger, EU	BU
11	4/56C2:23 4/56C2:72	Central Electronic Module (CEM) Central Electronic Module (CEM) US/CDN LHD	BN RD-GN	7/175:1 7/93:2	Weight sensor passenger seat, seat belt reminder Occupant Weight Sensor (OWS)	WH RD-GN
12	73/5083	Branching point	BK-GY	7/175:2	Weight sensor passenger seat, seat belt reminder	WH
13	73/5083	Branching point	BK-GY	8/52	Front right side airbag igniter	BK
14	73/5044	Branching point	BU-WH	3/27:7	Switch unit, power passenger seat	RD-WH
15	11C/14:2	Fuse, distribution box in passenger compartment	BN-RD	3/27:5	Switch unit, power passenger seat	RD
16	73/5023	Branching point	BK-GN	3/27:8	Switch unit, power passenger seat	BK
17	4/9C1:34	Supplemental Restraint System (SRS)	GY-VT	3/94:1	Belt buckle contact, passenger seat	VT
18	4/9C1:33	Supplemental Restraint System (SRS)	WH-GN	3/94:2	Belt buckle contact, passenger seat	OG-BK
19	73/5114	Branching point	YE	7/93:1	Occupant Weight Sensor (OWS), US/CDN	YE-BU
20	73/5115	Branching point	VT-WH	7/93:10	Occupant Weight Sensor (OWS), US/CDN	GY-BK

Connectors
74/301:1-13

74/301
34-pin black

No.	Engine harness			Engine compartment harness		
1	4/46B:54 73/3014 73/3139	Engine control module (ECM), MAN Branching point, Auto Branching point	BU-BK	73/3021	Branching point	BU-BK
2	4/46B:41 73/3015 73/3140	Engine control module (ECM), MAN Branching point, Auto Branching point	GN-BK	73/3022	Branching point	GN-BK
3	4/46C:6	Engine Control Module (ECM), 4-Cyl. Diesel	BN-WH	4/56C1:3	Central Electronic Module (CEM)	BN-WH
4	-		-	-		-
5	-		-	-		-
6	4/46B:35 4/46B:24 4/46A:23	Engine control module (ECM),4-Cyl. T, 5-Cyl. T & 6-Cyl. Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Diesel	WH	74/504:1	Connector	WH
7	4/46B:34	Engine control module (ECM),4-Cyl. T & 6-Cyl.	WH-BU	74/504:2	Connector	BK-WH
	4/46B:34 4/46B:15	Engine control module (ECM), 5-Cyl. T. Engine Control Module (ECM), Diesel	BK-WH			
8	-		-	-		-
9	4/28B:1 4/28A:13	Transmission Control Module (TCM), 4-Cyl. AUTO Transmission Control Module (TCM), 5-Cyl. & 6-Cyl. AUTO	GN-OG	74/411:9	Connector	GN-OG
10	4/46B:14 4/46B:49 4/46B:46	Engine control module (ECM), 6-Cyl. & 4-Cyl. T Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Diesel	VT-OG	4/56C1:6	Central Electronic Module (CEM)	VT-OG
11	4/28A:7 4/28A:17	Transmission Control Module (TCM) Transmission control module (TCM), MPS6	BN-VT	74/411:10	Connector	BN-VT
12	3/10:1	Reversing light contact	BU	4/56C1:29	Central Electronic Module (CEM), MAN	BU
13	4/46B:51 4/46B:23 4/46A:33 4/46B:49	Engine control module (ECM), 4-Cyl. T & 6-Cyl. T Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Diesel Engine Control Module (ECM), 5-Cyl. T	GN-BN	7/8:2	Pressure sensor, climate control system	GN-BN

continues

Connectors
74/301:14-24

74/301
34-pin black

No.	Engine harness			Engine compartment harness		
14	4/46B:53 4/46B:37 4/46B:16 4/46A:45	Engine Control Module (ECM), 5-Cyl. T & 6-Cyl. Engine Control Module (ECM), 4-Cyl.T Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Diesel	BN	7/8:1	Pressure sensor, climate control system	BN
15	4/46B:31 4/46B:8 73/3145	Engine control module (ECM), 4-Cyl. T, 5-Cyl T & 6-Cyl. Engine Control Module (ECM), 5-Cyl. Diesel Branching point, 4-Cyl. Diesel	GY-BN	7/8:3	Pressure sensor, climate control system	GY-BN
16	-		-	-		-
17	11B/41:2 73/3131	Fuse, engine compartment electrical center Branching point, Diesel	BU	74/504:21	Connector	BU
18	4/46B:30 4/46B:38 4/46A:22	Engine control module (ECM), 4-Cyl. T, 5-Cyl.T & 6-Cyl. Engine Control Module (ECM), 5-Cyl. Diesel Engine control module (ECM), 4-Cyl. Diesel	VT-BN	4/56C1:5	Central Electronic Module (CEM)	VT-BN
19	4/46B:26 4/46B:34 4/46C:42	Engine control module (ECM), 4-Cyl. T, 5-Cyl. T & 6-Cyl. Engine Control Module (ECM), 5-Cyl. Diesel Engine control module (ECM), 4-Cyl. Diesel	BU-WH	74/504:17	Connector	BU-WH
20	4/46B:48 4/46B:13 4/46C:8	Engine Control Module (ECM), Diesel Engine control module (ECM) 4-Cyl.T, 5-Cyl. T & 6-Cyl. T Engine Control Module (ECM), 4-Cyl. Diesel	GY-BN	74/504:42	Connector	GY-BN
21	4/28A:16 4/28B:13	Transmission Control Module (TCM) 5-Cyl. & 6-Cyl. Transmission Control Module (TCM), 4-Cyl.	BU-GY	74/411:11	Connector	BU-GY
22	4/46B:36 4/46B:17 4/46C:28	Engine Control Module (ECM), 5-Cyl. Diesel Engine control module (ECM), 4-Cyl. T, 5-Cyl.T & 6-Cyl. Engine control module (ECM), 4-Cyl. Diesel	BU-WH	4/56C1:41	Central Electronic Module (CEM)	BU-WH
23	4/46B:56 73/3154	Engine Control Module (ECM), 5-Cyl. T Branching point	BU-BN	74/321:5	Connector	BU-BN
24	4/46B:45	Engine Control Module (ECM), 6-Cyl.	GN-OG	74/504:38	Connector	GN-OG

continues

Connectors
74/301:25-34 - 74/307

74/301
34-pin black

No.	Engine harness			Engine compartment harness		
25	-		-	-		-
26	-		-	-		-
27	73/3162 74/316:4	Branching point, Auto Connector, MAN	RD	74/504:19	Connector	RD
28	11B/19	Fuses in the engine compartment fuse box	BN-WH	6/164C2:1	Electrical power steering module (EHPS)	BN-WH
29	4/46B:21 4/46B:45 4/46B:17	Engine control module (ECM), 5-Cyl. T & 6-Cyl. T Engine control module (ECM), 4-Cyl. T Engine control module (ECM), 5-Cyl. Diesel	YE-OG	74/504:18	Connector	YE-OG
30	73/3150 11B/39:2 11B/41:2	Branching point Fuse, engine compartment electrical center, 4-Cyl. Diesel Fuse, engine compartment electrical center, 5-Cyl. T	VT-WH	74/321:1	Connector	VT-WH
31	4/46B:46	Engine control module (ECM), 6-Cyl. T	BU-GY	74/504:39	Connector	BU-GY
32	4/46B:15 73/3064	Engine control module (ECM), MAN Branching point, Auto	VT-BN	11B/20:2	Fuse, engine compartment fuse box	VT-BN
33	4/46B:23	Engine Control Module (ECM), 6-Cyl.	VT-OG	74/504:37	Connector	VT-OG
34	-		-	-		-

74/302 4-Cyl.
1-pin black

No.	Engine harness			Harness starter motor		
1	2/35:5	Starter motor relay	BU-WH	6/25C2:1	Starter motor	BU-WH

74/304
2-pin black

No.	Engine compartment harness			Harness washer nozzle		
1	11B/21:2	Fuse, engine compartment electrical center	BU-GY	9/58C1:1	Heated windshield washer nozzles	BU-GY
2	73/3033	Branching point	BK-OG	9/58C1:2	Heated windshield washer nozzles	BK-OG

74/307 4-Cyl. Diesel
4-pin black

No.	Engine harness			Glow plug		
1	4/109:2	Glow plug control module	GY-VT	20/22:1	Glow plug	GY-VT
2	4/109:7	Glow plug control module	BU-BN	20/23:1	Glow plug	BU-BN
3	4/109:1	Glow plug control module	VT-WH	20/24:1	Glow plug	VT-WH
4	4/109:6	Glow plug control module	YE-BU	20/25:1	Glow plug	YE-BU

Connectors
74/309 - 74/310

74/309
12-pin gray

No.	Engine compartment harness			Harness bumper, front		
1	74/519:18	Connector	GY-OG	7/266:2	Parking sensor side, left	GY-OG
2	74/519:19	Connector	WH-BN	7/267:2	Parking sensor side, right	WH-BN
3	73/3030	Branching point	BK-RD	73/3104	Branching point	BK-RD
4	74/519:12	Connector	VT-GY	73/3046	Branching point	VT-GY
5	74/519:13	Connector	BU-GN	7/204:2	Parking assistance sensor, front	BU-GN
6	74/519:14	Connector	YE-OG	73/3047	Branching point	YE-OG
7	-		-	-		-
8	73/3096	Branching point	GN-OG	10/11:1	Front left running/parking light	GN-OG
9	73/3097	Branching point	GY-RD	10/12:1	Front right running/parking light	GY-RD
10	74/519:15	Connector	BU-BK	7/205:2	Parking assistance sensor, front	BU-BK
11	74/519:16	Connector	BU-GY	7/206:2	Parking assistance sensor, front	BU-GY
12	74/519:17	Connector	BU-OG	7/207:2	Parking assistance sensor, front	BU-OG

74/310 4-Cyl. Turbo 1,6L
8-pin black

No.	Engine harness			Engine harness		
1	8/6:2	Injectors	YE-BU	4/46A:3	Engine Control Module (ECM)	YE-BU
2	8/6:1	Injectors	GN-BN	4/46A:77	Engine Control Module (ECM)	GN-BN
3	8/7:2	Injectors	BU-OG	4/46A:25	Engine Control Module (ECM)	BU-OG
4	8/7:1	Injectors	GY-YE	4/46A:52	Engine Control Module (ECM)	GY-YE
5	8/8:2	Injectors	GN-VT	4/46A:26	Engine Control Module (ECM)	GN-VT
6	8/8:1	Injectors	VT-GY	4/46A:76	Engine Control Module (ECM)	VT-GY
7	8/9:2	Injectors	BU	4/46A:27	Engine Control Module (ECM)	BU
8	8/9:1	Injectors	YE-OG	4/46A:53	Engine Control Module (ECM)	YE-OG

74/310 4-Cyl. Turbo 2,0L
16-pin black

No.	Engine harness			Engine harness		
1	8/6:1	Injectors	GN-BU	4/46A:77	Engine Control Module (ECM)	GN-BU
2	7/24:1	Rear knock sensor	WH-BN	4/46A:84	Engine Control Module (ECM)	WH-BN
3	7/24:2	Front knock sensor	VT-OG	4/46A:60	Engine Control Module (ECM)	VT-OG
4	8/7:1	Injectors	GY-YE	4/46A:52	Engine Control Module (ECM)	GY-YE
5	8/8:1	Injectors	VT-GY	4/46A:76	Engine Control Module (ECM)	VT-GY
6	8/9:1	Injectors	YE-OG	4/46A:53	Engine Control Module (ECM)	YE-OG
7	7/23:1	Rear knock sensor	BN-GN	4/46A:85	Engine Control Module (ECM)	BN-GN
8	7/23:2	Front knock sensor	BU-BN	4/46A:61	Engine Control Module (ECM)	BU-BN
9	8/6:2	Injectors	YE-BU	4/46A:3	Engine Control Module (ECM)	YE-BU
10	-		-	-		-
11	-		-	-		-
12	8/7:2	Injectors	BU-OG	4/46A:25	Engine Control Module (ECM)	BU-OG
13	8/8:2	Injectors	GN-VT	4/46A:26	Engine Control Module (ECM)	GN-VT
14	8/9:2	Injectors	BU	4/46A:27	Engine Control Module (ECM)	BU
15	-		-	-		-
16	-		-	-		-

Connectors
74/316 - 74/321

74/316
6-pin black

No.	Engine harness			Engine compartment harness		
1	2/35:3	Relay, Starter motor	RD	11A/9:2	Fuse fuse box cold zone engine compartment	RD
2	73/3160	Branching point	RD-BU	73/5157	Branching point	RD-BU
3	4/46A:31 4/46C:3 4/46A:90	Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. 1,6l Turbo	YE-VT	2/246:2	Relay secondary battery	YE-VT
4	74/301:27 73/3162	Connector, MAN Branching point, Auto	RD	11B/12:2	Fuse, fuse box cold zone engine compartment	RD
5	4/46B:43 4/46A:16	Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Diesel	GY-VT	2/166:2	Relay, battery relay	GY-VT
6	-		-	-		-

74/317
3-pin black

No.	Engine harness			Impulse sensor adapter harness		
1	4/46A:56	Engine Control Module (ECM), 5-Cyl. Diesel	GN-BN	7/25:1	Impulse sensor, 5-Cyl. Diesel	GN-BN
2	4/46A:40	Engine Control Module (ECM), 5-Cyl. Diesel	YE-VT	7/25:2	Impulse sensor, 5-Cyl. Diesel	YE-VT
3	4/46A:62	Engine Control Module (ECM), 5-Cyl. Diesel	GY-VT	7/25:3	Impulse sensor, 5-Cyl. Diesel	GY-VT

74/321
8-pin black

No.	Harness forward facing radar			Engine compartment harness		
1	4/136:3	Active Grillshutter Module (AGM)	VT-WH	74/301:30	Connector	VT-WH
2	7/203:18	Forward-aimed radar (FLR)	BU-BN	74/411:4	Connector	BU-BN
3	7/203:9	Forward-aimed radar (FLR)	GY-BU	74/411:5	Connector	GY-BU
4	4/136:1	Active Grillshutter Module (AGM)	BK-RD	73/3155	Branching point	BK-RD
5	4/136:2	Active Grillshutter Module (AGM)	BU-BN	74/301:23	Connector	BU-BN
6	7/203:3	Forward-aimed radar (FLR)	BK-RD	73/3155	Branching point	BK-RD
7	7/203:1	Forward-aimed radar (FLR)	GY-VT	74/411:3	Connector	GY-VT
8	7/203:10	Forward-aimed radar (FLR)	GY-OG	4/56C1:74	Central Electronic Module (CEM)	GY-OG

Connectors
74/330 - 74/401

74/330
4-pin gray

No.	Engine compartment harness			Adapter harness heated windscreen		
1	11B/8:2	Fuse in engine compartment fuse box, RHD	RD-GY	2/81A:3	Relay, heated windscreen passenger side	GN-RD
	11B/12:2	Fuse in engine compartment fuse box, LHD	GN-RD			
2	11B/8:2	Fuse in engine compartment fuse box, LHD	RD-GY	2/81B:3	Relay, heated windscreen driver's side	RD-GY
	11B/12:2	Fuse in engine compartment fuse box, RHD	GN-RD			
3	73/3030	Branching point	BK-RD	2/81B:2	Relay, heated windscreen driver's side	BK-RD
4	9/7C2:1 9/7C3:1	Heated windscreen, LHD Heated windscreen, RHD	VT-BN	2/81B:5	Relay, heated windscreen driver's side	VT-BN

74/331
2-pin gray

No.	Engine compartment harness			Adapter harness heated windscreen		
1	73/3030	Branching point	BK-RD	2/81A:2	Relay, heated windscreen passenger side	BK-RD
2	4/56C1:76	Central Electronic Module (CEM)	RD	2/81B:5	Relay, heated windscreen driver's side	RD

74/401
22-pin gray

No.	Center console harness			Dashboard harness		
1	3/112C1:4	Climate Control Module (CCM)	WH-GN	74/417:3	Connector	WH-GN
2	3/112C1:5	Climate Control Module (CCM)	BN-VT	73/4010	Branching point	BN-VT
3	3/112C1:16	Climate Control Module (CCM)	YE-VT	74/417:6	Connector	YE-VT
4	3/112C1:17	Climate Control Module (CCM)	VT-BN	74/417:5	Connector	BN
5	3/112C1:14	Climate Control Module (CCM)	WH-GN	74/417:7	Connector	BU-GN
6	-		-	-		-
7	3/112C1:1	Climate Control Module (CCM)	RD	4/56C3:73	Central Electronic Module (CEM)	RD
8	3/112C1:12	Climate Control Module (CCM)	VT-BK	4/31:2	Fan control module	VT-BK
9	3/112C1:3	Climate Control Module (CCM)	GY-OG	5/1C1:6 73/4001	Wiper motor module (WMM) Branching point	GY-OG
10	3/112C1:2	Climate Control Module (CCM)	VT-OG	5/1C1:2 73/4002	Wiper motor module (WMM) Branching point	VT-OG
11	-		-	-		-
12	-		-	-		-
13	-		-	-		-
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-
17	-		-	-		-
18	-		-	-		-
19	-		-	-		-
20	-		-	-		-
21	-		-	-		-
22	3/112C1:22	Climate Control Module (CCM)	BK	73/4016	Branching point	BK

Connectors
74/403 - 74/404

74/403
22-pin gray

No.	Dashboard harness			Tunnel harness		
1	16/1C1:5	Integrated Audio Module (IAM)	BN	16/123:4	Auxiliary input (AUX)	BN
2	16/1C1:7	Integrated Audio Module (IAM)	GN	16/123:2	Auxiliary input (AUX)	GN
3	16/1C1:6	Integrated Audio Module (IAM)	WH	16/123:1	Auxiliary input (AUX)	WH
4	16/1C1:8	Integrated Audio Module (IAM)	-	-		-
5	-		-	-		-
6	4/56C3:67	Central Electronic Module (CEM)	BU-RD	3/65:1	Switch, heated rear seat	BU-RD
7	-		-	-		-
8	74/411:9	Connector	GN-RD	3/156A:3	Gear Selector Module (GSM)	GN-OG
9	74/411:11	Connector	BU-GY	3/156A:1	Gear Selector Module (GSM)	BU-GY
10	-		-	-		-
11	-		-	-		-
12	-		-	-		-
13	-		-	-		-
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-
17	-		-	-		-
18	-		-	-		-
19	-		-	-		-
20	4/56C3:38	Central Electronic Module (CEM)	WH-BN	8/134:1	Solenoid, reverse interlock, manual	WH-BN
21	-		-	-		-
22	74/411:10	Connector	BN-VT	3/156A:2	Gear Selector Module (GSM)	BN-VT

74/404
2-pin black

No.	Dashboard harness			Infotainment harness		
1	3/281C2:1 16/1C4:1 16/109C3:1	Infotainment control module (ICM) Integrated Audio Module (IAM) Control module (RSE)	OG	16/105C2:2 16/36C1:2 16/145C3:2	Audio module (AUD) TV receiver Remote Digital Audio Receiver (RDAR)	OG
2	3/281C2:2 16/60C4:2	Infotainment control module (ICM) Phone Module (PHM)	OG	16/105C2:1	Audio module (AUD)	OG

Connectors
74/405 - 74/407

74/405 S60
2-pin white

No.	Dashboard harness			Floor harness		
1	16/1C3:1	Integrated Audio Module (IAM)	WH	16/16C2:1	Amplifier window antenna	WH
1S	16/1C3:1S	Integrated Audio Module (IAM)	-	16/16C2:1S	Amplifier window antenna	-
2	16/1C3:2	Integrated Audio Module (IAM)	WH	16/71C1:1	Amplifier window antenna	WH
2S	16/1C3:2S	Integrated Audio Module (IAM)	-	16/71C1:1S	Amplifier window antenna	-

74/405 V60
2-pin white

No.	Dashboard harness			Floor harness		
1	16/1C3:1	Integrated Audio Module (IAM)	WH	74/607:1	Connector	WH
1S	16/1C3:1S	Integrated Audio Module (IAM)	-	74/607:1S	Connector	-
2	16/1C3:2	Integrated Audio Module (IAM)	WH	16/71C1:1	Amplifier window antenna	WH
2S	16/1C3:2S	Integrated Audio Module (IAM)	-	16/71C1:1S	Amplifier window antenna	-

74/406
1-pin violet

No.	Dashboard harness			Infotainment harness		
1	16/60C2:1	Phone Module (PHM)	WH	16/47C3:1	Antenna GSM/GPS/RDAR	WH
1S	16/60C2:1S	Phone Module (PHM)	-	16/47C3:1S	Antenna GSM/GPS/RDAR	-

74/407 Alternative 1
16-pin green

No.	Dashboard harness			Floor harness		
1	16/1C2:12	Integrated Audio Module (IAM)	GY-BK	74/507:23	Connector	GY-BK
2	-		-	-		-
3	16/1C2:7	Integrated Audio Module (IAM)	YE-BK	74/508:23	Connector	YE-BK
4	16/1C2:9	Integrated Audio Module (IAM)	GY-RD	74/509:4	Connector	GY-RD
5	16/1C2:10	Integrated Audio Module (IAM)	YE-RD	74/510:4	Connector	YE-RD
6	-		-	-		-
7	-		-	-		-
8	-		-	-		-
9	16/1C2:6	Integrated Audio Module (IAM)	GN-BK	74/507:22	Connector	GN-BK
10	-		-	-		-
11	16/1C2:1	Integrated Audio Module (IAM)	VT-BK	74/508:22	Connector	VT-BK
12	16/1C2:3	Integrated Audio Module (IAM)	GN-RD	74/509:3	Connector	GN-RD
13	16/1C2:4	Integrated Audio Module (IAM)	VT-RD	74/510:3	Connector	VT-RD
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-

Connectors
74/407 - 74/407B

74/407 Alternative 2
16-pin green

No.	Infotainment harness		Floor harness	
1	74/407B:1 Connector	-	74/507:23 Connector	GY-BK
2	74/407B:2 Connector	-	74/409:10 Connector	GY
3	74/407B:3 Connector	-	74/508:23 Connector	YE-BK
4	74/407B:4 Connector	-	74/509:4 Connector	GY-RD
5	74/407B:5 Connector	-	74/510:4 Connector	YE-RD
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	74/407B:9 Connector	-	74/507:22 Connector	GN-BK
10	74/407B:10 Connector	-	74/409:9 Connector	GN
11	74/407B:11 Connector	-	74/508:22 Connector	VT-BK
12	74/407B:12 Connector	-	74/509:3 Connector	GN-RD
13	74/407B:13 Connector	-	74/510:3 Connector	VT-RD
14	-	-	-	-
15	-	-	-	-
16	-	-	-	-

74/407B
16-pin green

No.	Infotainment harness		Floor harness	
1	16/105C3:1 Audio module (AUD)	GY-BK	74/407:1 Connector	-
2	16/105C3:2 Audio module (AUD)	GY	74/407:2 Connector	-
3	16/105C3:3 Audio module (AUD)	YE-BK	74/407:3 Connector	-
4	16/105C3:4 Audio module (AUD)	GY-RD	74/407:4 Connector	-
5	16/105C3:5 Audio module (AUD)	YE-RD	74/407:5 Connector	-
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	16/105C3:9 Audio module (AUD)	GN-BK	74/407:9 Connector	-
10	16/105C3:10 Audio module (AUD)	GN	74/407:10 Connector	-
11	16/105C3:11 Audio module (AUD)	VT-BK	74/407:11 Connector	-
12	16/105C3:12 Audio module (AUD)	GN-RD	74/407:12 Connector	-
13	16/105C3:13 Audio module (AUD)	VT-RD	74/407:13 Connector	-
14	-	-	-	-
15	-	-	-	-
16	-	-	-	-

74/409
26-pin green

No.	Dashboard harness			Floor harness		
1	-		-	-		-
2	3/272:3	Switch, parking brake	BU	4/115C1:20	Park Brake Module (PBM)	BU
3	3/272:8	Switch, parking brake	GN-WH	4/115C1:11	Park Brake Module (PBM)	GN-WH
4	3/272:7	Switch, parking brake	WH-BN	4/115C1:18	Park Brake Module (PBM)	WH-BN
5	3/272:4	Switch, parking brake	VT-GN	4/115C1:9	Park Brake Module (PBM)	VT-GN
6	3/272:6	Switch, parking brake	WH-OG	4/115C1:19	Park Brake Module (PBM)	WH-OG
7	3/272:5	Switch, parking brake	BN	4/115C1:10	Park Brake Module (PBM)	BN
8	-		-	-		-
9	16/26:1	Center dashboard speaker	GN	74/407:10	Connector	GN
10	16/26:2	Center dashboard speaker	GY	74/407:2	Connector	GY
11	4/56C2:63	Central Electronic Module (CEM), V60	GY-BN	74/412:22	Connector	GY-BN
12	-		-	-		-
13	16/1C1:2	Integrated Audio Module (IAM)	GN-VT	16/16C1:2 74/602:11	Amplifier window antenna, S60 Connector, V60	GN-VT
14	9/42C1:1	PTC-Element	BU-RD	11C/25:2	Fuses in distribution box in passenger compartment	BU-RD
15	74/417:3	Connector	WH-GN	73/5021 74/30:4 74/31:4	Branching point Connector, LHD Connector, RHD	WH-GN BN-VT
16	73/4010	Branching point	BN-VT	74/30:4 9/15:2 74/31:4	Connector, RHD Control module, rear right seat heater Connector, LHD	WH-GN BN-VT
17	11C/19:2	Fuses in distribution box passenger compartment	BU-RD	16/60C1:5	Phone Module (PHM)	BU-RD
18	11C/21:2	Fuses in distribution box passenger compartment	BU-GY	74/414:3 74/417:1	Connector Connector	BU-GY
19	73/4034	Branching point	GY-OG	73/5005 73/5009	Branching point Branching point	GY-OG
20	73/4035	Branching point	VT-OG	73/5006 73/5010	Branching point Branching point	VT-OG
21	3/281C1:8	Branching point	VT-RD	11C/16:2	Fuses in distribution box in passenger compartment	VT-RD
22	73/4057	Branching point	GN-BK	74/518:2 73/5181	Connector Branching point	GN-BK
23	73/4056	Branching point	BU-BK	74/518:1 73/5180	Connector Branching point	BU-BK
24	73/4046	Branching point	BK-GY	73/5132	Branching point	BK-GY
25	-		-	-		-
26	11C/18:2	Fuses in distribution box in passenger compartment	YE-RD	16/1C1:1	Integrated Audio Module (IAM)	YE-RD

Connectors
74/411

74/411
26-pin gray

No.	Engine compartment harness			Dashboard harness		
1	11B/11:2 11A/6:2	Fuse, engine compartment electrical center Main fuses in engine compartment fuse box, Start/Stop	YE-RD	73/4028	Branching point	YE-RD
2	-		-	-		-
3	4/56C3:63	Central Electronic Module (CEM)	GY-VT	74/321:7	Connector	GY-VT
4	74/321:2	Connector	BN-BU	74/412:18	Connector	BN-BU
5	74/321:3	Connector	GY-BU	74/412:17	Connector	GY-BU
6	10/1:8 10/2:8	Left-hand front lamp housing Right-hand front lamp housing	BK	73/4016 73/4017	Branching point Branching point, LHD	BK
7	-		-	-		-
8	-		-	-		-
9	74/301:9	Connector	GN-OG	74/403:8	Connector	GN-RD
10	74/301:11	Connector	BN-VT	74/403:22	Connector	BN-VT
11	74/301:21	Connector	BU-GY	74/403:9	Connector	BU-GY
12	11B/23:2	Fuse, engine compartment electrical center	RD-BK	3/111:1	Light Switch Module (LSM)	RD-BK
13	10/1:12 10/2:12	Left-hand front lamp housing Right-hand front lamp housing	VT-GN	3/111:4	Light Switch Module (LSM)	VT-GN
14	-		-	-		-
15	4/56C1:56	Central Electronic Module (CEM)	YE-RD	4/148:1	Heated Steering Wheel Module (HSWM)	YE-RD
16	-		-	-		-
17	-		-	-		-
18	-		-	-		-
19	73/3121	Branching point	GY-BU	74/412:2	Connector	GY-BU
20	73/3120	Branching point	GN-OG	74/412:1	Connector	GN-OG
21	-		-	-		-
22	-		-	-		-
23	-		-	-		-
24	-		-	-		-
25	11B/20:2	Fuses in engine compartment fuse box	VT-BN	4/9C2:42	Supplemental Restraint System (SRS)	VT-BN
26	-		-	-		-

Connectors
74/412

74/412
22-pin green

No.	Dashboard harness			Roof harness		
1	74/411:20	Connector	VT-WH	74/901:1	Connector	VT-WH
2	74/411:19	Connector	YE	74/901:2	Connector	YE
3	16/60C1:1	Phone Module (PHM)	BN-GN	3/267:5	Switch unit, telematics	BN-GN
4	16/60C1:2	Phone Module (PHM)	GY-VT	3/267:6	Switch unit, telematics	GY-VT
5	16/60C1:14	Phone Module (PHM)	-	3/267:2	Switch unit, telematics	-
6	16/60C1:15	Phone Module (PHM)	WH	3/267:1	Switch unit, telematics	WH
7	16/60C1:13	Phone Module (PHM)	VT	3/267:7	Switch unit, telematics	VT
8	16/60C1:4	Phone Module (PHM)	YE-VT	3/267:4	Switch unit, telematics	YE-VT
9	16/60C1:3	Phone Module (PHM)	BU-GY	3/267:3	Switch unit, telematics	BU-GY
10	73/4005	Branching point	BU-BK	73/5097 73/5154	Branching point Branching point	BU-BK
11	4/9C2:45	Supplemental Restraint System (SRS)	GN-WH	10/22C1:3	Ceiling light	GN-WH
12	4/9C2:22	Supplemental Restraint System (SRS)	GY-BU	10/22C1:3	Ceiling light	GY-BU
13	16/1C1:4	Integrated Audio Module (IAM)	-	16/98C1:2	Microphone	-
14	16/1C1:3	Integrated Audio Module (IAM)	WH	16/98C1:1	Microphone	WH
15	4/56C3:6	Central Electronic Module (CEM)	BU-BK	73/5097	Branching point	BU-BK
16	4/56C3:7	Central Electronic Module (CEM)	GN-BK	73/5098	Branching point	GN-BK
17	74/411:5	Connector	GY-BU	4/80C1:9	Forward Sensing Module (FSM)	GY-BU
18	74/411:4	Connector	BN-BU	4/80C1:10	Forward Sensing Module (FSM)	BN-BU
19	73/4047	Branching point	BN-VT	73/4010	Branching point	BN-VT
20	73/4006	Branching point	GN-BK	73/5098 73/5155	Branching point Branching point	GN-BK
21	31/83	Ground connection, Left bottom rail	BK	73/5129	Branching point	BK
22	74/409:11	Connector	GY-BN	74/609:1	Connector	GY-BN

Connectors
74/414 - 74/417

74/414
10-pin black

No.	Dashboard harness			Roof harness		
1	4/33:7	Sunroof control module	BU-GY	74/409:18	Connector	BU-GY
2	-		-	-		-
3	4/33:1	Sunroof control module	RD-BN	4/56C3:75	Central Electronic Module (CEM)	RD-BN
4	4/80C1:7	Forward Sensing Module (FSM)	BU-BK	73/4059	Branching point	Bu-BK
5	4/56C3:5	Central Electronic Module (CEM)	GY-OG	73/5189 74/901:5	Branching point, ACC Connector	GY-OG
6	4/80C1:6	Forward Sensing Module (FSM)	GN-BN	27/2C1:2	Indicator, visual collision warning	GN-BN
7	4/80C1:8	Forward Sensing Module (FSM)	GY-VT	4/56C3:63	Central Electronic Module (CEM)	GY-VT
8	4/80C1:13	Forward Sensing Module (FSM)	VT	27/2C1:4	Indicator, visual collision warning	VT
9	73/4013 73/4014	Branching point Branching point	BK-WH	73/4012	Branching point	BK-WH
10	-		-	-		-

74/416
2-pin violet

No.	Dashboard harness			Floor harness		
1	3/281C5:1	Infotainment control module (ICM)	BK	4/120C3:1	Parking Assistance Camera (PAC)	BK
1S	3/281C5:1S	Infotainment control module (ICM)	-	4/120C3:1S	Parking Assistance Camera (PAC)	-

74/417
7-pin green

No.	Dashboard harness			Climate control system harness		
1	74/409:18	Connector	BU-GY	4/6	Climate control system	RD
2	73/4010	Branching point	BN-VT	4/6	Climate control system	YE
3	74/401:1 74/409:15	Connector Connector	WH-GN	4/6	Climate control system	GN
4	73/4012	Branching point	BK-WH	4/6	Climate control system	BU
5	74/401:4	Connector	BN	4/6	Climate control system	PK
6	74/401:3	Connector	YE-VT	4/6	Climate control system	BN
7	74/401:5	Connector	BU-GN	4/6	Climate control system	GN

Connectors
74/419 - 74/421

74/419
2-pin blue

No.	Dashboard harness			Infotainment harness		
1	16/60C8:1 16/60C5:1	Integrated Audio Module (IAM Phone Module (PHM)	WH	16/47C1:1	Antenna GSM/GPS/RDAR	WH
1S	16/1C8:1S 16/60C5:1S	Integrated Audio Module (IAM) Phone Module (PHM)	-	16/47C1:1S	Antenna GSM/GPS/RDAR	-

74/420
5-pin gray

No.	Dashboard harness			Tunnel harness		
1	16/1C5:1	Integrated Audio Module (IAM)	RD	17/42C1:1	USB-port	RD
2	16/1C5:2	Integrated Audio Module (IAM)	BN	17/42C1:2	USB-port	BN
3	16/1C5:3	Integrated Audio Module (IAM)	VT	17/42C1:3	USB-port	VT
4	16/1C5:4	Integrated Audio Module (IAM)	BK	17/42C1:4	USB-port	BK
5	16/1C5:5S	Integrated Audio Module (IAM)	-	17/42C1:5S	USB-port	-

74/421
2-pin grey

No.	Dashboard harness			Infotainment harness		
1	3/281C4:1	Infotainment control module (ICM)	BK	16/36C2:4	TV receiver	BK
1S	3/281C4:1S	Infotainment control module (ICM)	-	16/36C2:5	TV receiver	-

Connectors
74/430 - 74/503

74/430
2-pin grey

No.	Infotainment harness		Dashboard harness	
1	16/36C5:1 TV Receiver	BN	16/105C5:1 Audio module (AUD)	BN
2	16/36C5:2 TV Receiver	VT	16/105C5:2 Audio module (AUD)	VT
3	16/36C5:3S TV Receiver	-	16/105C5:3S Audio module (AUD)	-

74/503
22-pin gray

No.	Infotainment harness		Tunnel harness	
1	-	-	-	-
2	-	-	-	-
3	-	-	-	-
4	-	-	-	-
5	-	-	-	-
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	-	-	-	-
10	-	-	-	-
11	-	-	-	-
12	-	-	-	-
13	-	-	-	-
14	-	-	-	-
15	4/84C1:3 Suspension Module (SUM)	YE-BK	3/225:5 Continuously Controlled Damping (CCD)	YE-BK
16	4/84C1:21 Suspension Module (SUM)	VT-OG	3/225:6 Continuously Controlled Damping (CCD)	VT-OG
17	4/84C1:24 Suspension Module (SUM)	YE-RD	3/225:1 Continuously Controlled Damping (CCD)	YE-RD
18	4/84C1:26 Suspension Module (SUM)	BU	3/225:2 Continuously Controlled Damping (CCD)	BU
19	4/84C1:11 Suspension Module (SUM)	GN-BK	3/225:3 Continuously Controlled Damping (CCD)	GN-BK
20	4/84C1:29 Suspension Module (SUM)	GY-OG	3/225:4 Continuously Controlled Damping (CCD)	GY-OG
21	-	-	-	-
22	-	-	-	-

Connectors
74/504:1-36

74/504
57-pin natural

No.	Engine compartment harness			Floor harness		
1	74/301:6	Connector	WH	74/507:17	Connector	WH
2	74/301:7	Connector	BK-WH	74/507:18	Connector	BK-WH
3	-		-	-		-
4	-		-	-		-
5	4/16C1:43	Brake Control Module (BCM)	YE-BK	74/512:5	Connector	YE-BK
6	4/16C1:42	Brake Control Module (BCM)	BU-RD	74/512:6	Connector	BU-RD
7	73/3121	Branching point	YE	4/9C1:72 73/5114	Supplemental Restraint System (SRS) Branching point	YE
8	73/3120	Branching point	VT-WH	4/9C1:73 73/5115	Supplemental Restraint System (SRS) Branching point	VT-WH
9	-		-	-		-
10	-		-	-		-
11	4/16C1:36	Brake Control Module (BCM)	BU-OG	74/511:7	Connector	BU-OG
12	4/16C1:37	Brake Control Module (BCM)	GN-RD	74/511:6	Connector	GN-RD
13	-		-	-		-
14	4/56C1:9	Central Electronic Module (CEM)	VT-GN	2/193:1	Relay, comfort functions	VT-GN
15	-		-	-		-
16	6/127:2	Washer motor	GY	2/92:3	Relay, washer motor, wind-shield	GY
17	74/301:19	Connector	BU-WH	7/51:5	Accelerator pedal sensor	BU-WH
18	74/301:29	Connector, Gasoline	YE-OG	74/511:17	Connector	YE-OG
19	74/301:27	Connector	RD	4/56C1:17	Central Electronic Module (CEM)	RD
20	-		-	-		-
21	74/301:17	Connector	BU	74/512:7	Connector	BU
22	-		-	-		-
23	-		-	-		-
24	-		-	-		-
25	-		-	-		-
26	-		-	-		-
27	-		-	-		-
28	-		-	-		-
29	-		-	-		-
30	-		-	-		-
31	-		-	-		-
32	-		-	-		-
33	-		-	-		-
34	-		-	-		-
35	-		-	-		-
36	-		-	-		-

continues

Connectors
74/504:37-57 - 74/504B

74/504
57-pin natural

No.	Engine compartment harness			Floor harness		
37	74/301:33	Connector	VT-OG	74/512:2	Connector	VT-OG
38	74/301:24	Connector	GN-OG	74/512:3	Connector	GN-OG
39	74/301:31	Connector	BU-GY	74/512:4	Connector	BU-GY
40	6/127:1	Washer motor	VT-BN	2/93:3 73/5178	Relay, washer motor, rear window, V60 Branching point	VT-GN
41	74/9:7	Connector	YE-RD	74/512:14	Connector	YE-RD
42	74/301:20	Connector, MAN	GY-BN	4/56C2:41	Central Electronic Module (CEM), MAN	GY-BN
43	-		-	-		-
44	73/3021	Branching point	BU-BK	73/5015 74/511:3	Branching point, 2WD Connector, AWD	BU-BK
45	73/3022	Branching point	GN-BK	73/5016 74/511:3	Branching point, 2WD Connector, AWD	GN-BK
46	-		-	-		-
47	-		-	-		-
48	-		-	-		-
49	-		-	-		-
50	-		-	-		-
51	-		-	-		-
52	-		-	-		-
53	-		-	-		-
54	-		-	-		-
55	-		-	-		-
56	73/3019 4/56C1:30	Branching point Central Electronic Module (CEM)	GY-OG	73/5005 73/5009	Branching point Branching point	GY-OG
57	73/3020 4/56C1:31	Branching point Central Electronic Module (CEM)	VT-OG	73/5006 73/5010	Branching point Branching point	VT-OG

74/504B
2-pin red

No.	Engine compartment harness			Floor harness		
1	-		-	-		-
2	11A/3:2 11A/5:2	Fuse, engine compartment electrical center Fuse, engine compartment electrical center, STOSTA	RD-GN	73/5075	Branching point	RD-GN

Connectors
74/507:1-22

74/507
26-pin black

No.	Harness front door, left			Floor harness		
1	3/126C2:1 3/127C2:1	Driver door module (DDM) Passenger door module (PDM)	GY-OG	73/5005	Branching point	GY-OG
2	3/126C2:13 3/127C2:13	Driver door module (DDM) Passenger door module (PDM)	VT-OG	73/5006	Branching point	VT-OG
3	6/36:3	Lock motor, central locking, LH front door	GN-VT	4/56C2:11	Central Electronic Module (CEM)	GN-VT
4	3/127C1:8 73/5019	Passenger Door Module (PDM), RHD Branching point, LHD	GN-WH	74/509:7	Connector	GN-WH
5	6/62:4	Left-hand power door mirror	OG	74/537:4	Connector	OG
6	6/62:5	Left-hand power door mirror	GN	74/537:5	Connector	GN
7	73/5166	Branching point	BU-WH	73/5044	Branching point, LHD	BU-WH
8	6/62C2:2	Left-hand power door mirror	OG	74/537:2	Connector	OG
9	6/62C2:4	Left-hand power door mirror	GN	74/537:4	Connector	GN
10	6/62C2:5	Left-hand power door mirror	BU	74/537:5	Connector	BU
11	3/273:3	Lock contact, LH front door	BU-GN	4/93C5:11	Keyless vehicle module (KVM)	BU-GN
12	3/273:4	Lock contact, LH front door	YE-VT	4/93C5:21	Keyless vehicle module (KVM)	YE-VT
13	3/273:1	Lock contact, LH front door	BK-GN	73/5062	Branching point	BK-GN
14	-		-	-		-
15	-		-	-		-
16	3/273:6 6/62C1:1	Lock contact, LH front door Left-hand power door mirror	BN-RD BN	73/5061 74/537:1	Branching point, LHD Connector, RHD	BN-RD BN
17	6/62C1:2	Left-hand power door mirror	WH	74/504:1	Connector	WH
18	6/62C1:3	Left-hand power door mirror	BK-WH	74/504:2	Connector	BK-WH
19	-		-	-		-
20	3/126C1:13 3/127C1:13	Driver Door Module (DDM), LHD Passenger Door Module (PDM), RHD	BK-VT	73/5035	Branching point	BK-VT
21	3/126C1:2 3/127C1:2	Driver Door Module (DDM), LHD Passenger Door Module (PDM), RHD	VT-RD RD	11C/8:2 11C/9:2	Fuses in distribution box passenger compartment, LHD Fuses in distribution box passenger compartment, RHD	VT-RD RD
22	16/4:1 73/5078	Left-hand front door speaker Branching point	VT-BK GN-BK	74/407:9	Connector	GN-BK

continues

Connectors
74/507:23-26 - 74/508:1-16

74/507
26-pin black

No.	Harness front door, left			Floor harness		
23	16/4:2 73/5079	Left-hand front door speaker Branching point	YE-BK GY-BK	74/407:1	Connector	GY-BK
24	-		-	-		-
25	7/208:2	Pressure sensor front door left	YE-RD	4/9C1:57	Supplemental Restraint System (SRS)	YE-RD
26	7/208:1	Pressure sensor front door left	VT-OG	4/9C1:58	Supplemental Restraint System (SRS)	VT-OG

74/508
26-pin black

No.	Harness front door, right			Floor harness		
1	3/126C2:1 3/127C2:1	Driver door module (DDM) Passenger door module (PDM)	GY-OG	73/5009	Branching point	GY-OG
2	3/126C2:13 3/127C2:13	Driver door module (DDM) Passenger door module (PDM)	VT-OG	73/5010	Branching point	VT-OG
3	6/55:3 6/55:6	Lock motor, central locking, RH front door Lock motor, central locking, RH front door	BK-GN	4/56C2:29	Central Electronic Module (CEM)	BK-GN
4	3/127C1:8 73/5019	Passenger Door Module (PDM), LHD Branching point, RHD	GN-WH	74/510:7	Connector	GN-WH
5	-		-	-		-
6	-		-	-		-
7	-		-	-		-
8	-		-	-		-
9	-		-	-		-
10	-		-	-		-
11	3/274:3	Lock contact, RH front door	GN-RD	4/93C5:2	Keyless vehicle module (KVM)	GN-RD
12	3/274:4	Lock contact, RH front door	BU-GY	4/93C5:22	Keyless vehicle module (KVM)	BU-GY
13	3/274:1	Lock contact, RH front door	BK-GN	73/5062	Branching point	BK-GN
14	-		-	-		-
15	-		-	-		-
16	3/274:6	Lock contact, RH front door	BN-RD	73/5061	Branching point	BN-RD

continues

Connectors
74/508:17-26 - 74/509:1-8

74/508
26-pin black

No.	Harness front door, right			Floor harness		
17	-		-	-		-
18	-		-	-		-
19	-		-	-		-
20	3/126C1:13 3/127C1:13	Driver Door Module (DDM), RHD Passenger Door Module (PDM), LHD	BK-GN	73/5023	Branching point	BK-GN
21	3/126C1:2 3/127C1:2	Driver Door Module (DDM), RHD Passenger Door Module (PDM), LHD	VT-RD RD	11C/8:2 11C/9:2	Fuses in distribution box passenger compartment, RHD Fuses in distribution box passenger compartment, LHD	VT-RD RD
22	16/3:1 73/5076	Right-hand front door speaker Branching point	VT-BK	74/407:11	Connector	VT-BK
23	16/3:2 73/5077	Right-hand front door speaker Branching point	YE-BK	74/407:3	Connector	YE-BK
24	-		-	-		-
25	7/209:2	Pressure sensor front door right	YE-RD	4/9C1:56	Supplemental Restraint System (SRS)	YE-RD
26	7/209:1	Pressure sensor front door right	VT-OG	4/9C1:55	Supplemental Restraint System (SRS)	VT-OG

74/509
16-pin black

No.	Left-hand rear door harness			Floor harness		
1	3/128:2	Left rear door module (LDM)	RD-BU	11C/11:2	Fuses in distribution box in passenger compartment	RD-BU
2	3/128:13	Left rear door module (LDM)	BK-VT	73/5035	Branching point	BK-VT
3	16/6:1	Left-hand rear door speaker	GN-RD	74/407:12	Connector	GN-RD
4	16/6:2	Left-hand rear door speaker	GY-RD	74/407:4	Connector	GY-RD
5	6/57:3	Lock motor, central locking, LH rear door	GN	4/56C2:10	Central Electronic Module (CEM)	GN
6	-		-	-		-
7	3/128:21	Left rear door module (LDM)	GN-WH	74/507:4	Connector	GN-WH
8	3/275:1	Lock contact, left rear door	BK-GN	73/5062	Branching point	BK-GN

continues

Connectors
74/509:9-16 - 74/510

74/509
16-pin black

No.	Left-hand rear door harness			Floor harness		
9	-		-	-		-
10	3/275:6	Lock contact, left rear door	BN-RD	73/5061	Branching point	BN-RD
11	3/275:5	Lock contact, left rear door	YE	4/93C1:15	Keyless vehicle module (KVM)	YE
12	3/275:2	Lock contact, left rear door	GN-BN	4/93C1:3	Keyless vehicle module (KVM)	GN-BN
13	3/275:3	Lock contact, left rear door	GY-OG	4/93C5:17	Keyless vehicle module (KVM)	GY-OG
14	3/275:4	Lock contact, left rear door	GN-OG	4/93C5:4	Keyless vehicle module (KVM)	GN-OG
15	-		-	-		-
16	-		-	-		-

74/510
16-pin black

No.	Right-hand rear door harness			Floor harness		
1	3/129:2	Right rear door module (RDM)	RD-GN	11C/10:2	Fuse, distribution box in passenger compartment	YE-RD
2	3/129:13	Right rear door module (RDM)	BK-GN	73/5023	Branching point	BK-GN
3	16/5:1	Right-hand rear door speaker	VT-RD	74/407:13	Connector	VT-RD
4	16/5:2	Right-hand rear door speaker	YE-RD	74/407:5	Connector	YE-RD
5	6/56:6	Lock motor, central locking, RH rear door	YE	4/56C2:28	Central Electronic Module (CEM)	YE
6	-		-	-		-
7	3/129:21	Right rear door module (RDM)	GN-WH	74/508:4	Connector	GN-WH
8	3/276:1	Lock contact, RH rear door	BK-GN	73/5062	Branching point	BK-GN
9	-		-	-		-
10	3/276:6	Lock contact, RH rear door	BN-RD	73/5061	Branching point	BN-RD
11	3/276:5	Lock contact, RH rear door	BU-OG	4/93C1:14	Keyless vehicle module (KVM)	BU-OG
12	3/276:2	Lock contact, RH rear door	VT-GY	4/93C1:23	Keyless vehicle module (KVM)	VT-GY
13	3/276:3	Lock contact, RH rear door	VT-RD	4/93C5:5	Keyless vehicle module (KVM)	VT-RD
14	3/276:4	Lock contact, RH rear door	GY-RD	4/93C5:20	Keyless vehicle module (KVM)	GY-RD
15	-		-	-		-
16	-		-	-		-

Connectors
74/511

74/511
22-pin gray

No.	Floor harness			Left rear axle harness		
1	11C/29:2	Fuse, distribution box in passenger compartment	WH-VT	74/520:6	Connector	WH-VT
2	-		-	-		-
3	73/5015 74/504:44	Branching point Connector	BU-BK	74/520:1	Connector	BU-BK
4	73/5016 74/504:45	Branching point Connector	GN-BK	74/520:2	Connector	GN-BK
5	-		-	-		-
6	74/504:12	Connector	GN-RD	7/56:2	Left-hand rear ABS sensor	BN
7	74/504:11	Connector	BU-OG	7/56:1	Left-hand rear ABS sensor	WH
8	-		-	-		-
9	-		-	-		-
10	-		-	-		-
11	-		-	-		-
12	74/518:6	Connector	GN-BU	8/22:1	Shock absorber, Four-C, rear left	GN-BU
13	74/518:7	Connector	YE-BU	8/22:2	Shock absorber, Four-C, rear left	YE-BU
14	74/518:3	Connector	YE-GN	7/120:5	Height sensor, suspension, rear left	YE-GN
15	74/518:4	Connector	GN-BN	7/120:1	Height sensor, suspension, rear left	GN-BN
16	74/518:5	Connector	VT-WH	7/120:4	Height sensor, suspension, rear left	VT-WH
17	74/504:18	Connector	YE-OG	4/83:5	Fuel pump control module	YE-OG
18	4/56C2:51	Central Electronic Module (CEM)	GN-BU	6/33:1	Fuel pump	GN-BU
19	4/56C2:33	Central Electronic Module (CEM)	YE-VT	6/33:2	Fuel pump	YE-VT
20	4/56C2:15	Central Electronic Module (CEM)	GN-OG	6/33:6	Fuel pump	GN-OG
21	-		-	-		-
22	-		-	-		-

Connectors
74/512 - 74/513

74/512
14-pin gray

No.	Floor harness			Harness rear axle right		
1	-		-	-		-
2	74/504:37	Connector	VT-OG	6/67:1	Pump, fuel leakage control	VT-OG
3	74/504:38	Connector	GN-OG	6/67:2	Pump, fuel leakage control	GN-OG
4	74/504:39	Connector	BU-GY	6/67:3	Pump, fuel leakage control	BU-GY
5	74/504:5	Connector	YE-BK	7/57:1	Right-hand rear ABS sensor	WH
6	74/504:6	Connector	BU-RD	7/57:2	Right-hand rear ABS sensor	BN
7	74/504:21	Connector	BU	6/67:4 9/38:1	Pump, fuel leakage control Electrically heated fuel filter	BU
8	31/68	Ground connection	BK-OG	6/35:2 9/38:2	Fuel pump, auxiliary heater Electrically heated fuel filter	BK-OG
9	4/56C2:36	Central Electronic Module (CEM)	YE-GN	7/121:5	Height sensor, suspension, rear right	YE-GN
10	4/56C2:53	Central Electronic Module (CEM)	GN-BN	7/121:1	Height sensor, suspension, rear right	GN-BN
11	4/56C2:35	Central Electronic Module (CEM)	GN-VT	7/121:4	Height sensor, suspension, rear right	GN-VT
12	-		-	-		-
13	-		-	-		-
14	74/504:41	Connector	YE-RD	6/35:1	Fuel pump, auxiliary heater	YE-RD

74/513
5-pin green

No.	Infotainment harness			Harness rear axle right		
1	4/84C1:5	Suspension Module (SUM)	VT-GY	8/23:1	Shock absorber, Four-C, rear right	VT-GY
2	4/84C1:4	Suspension Module (SUM)	BU-BN	8/23:2	Shock absorber, Four-C, rear right	BU-BN
3	73/5066	Branching point	YE-GN	7/121:5	Shock absorber, Four-C, rear right	YE-GN
4	73/5053	Branching point	YE-GN	7/121:1	Shock absorber, Four-C, rear right	GN-BN
5	4/84C1:14	Suspension Module (SUM)	GN-VT	7/121:4	Shock absorber, Four-C, rear right	GN-VT

Connectors
74/514 - 74/518

74/514
4-pin gray

No.	Floor harness			Left rear axle harness		
1	4/115C1:29	Park Brake Module (PBM)	BU-GN	6/146:2	Lock motor, rear left brake disc	BU-GN
2	4/115C1:14	Park Brake Module (PBM)	VT-BK	6/146:1	Lock motor, rear left brake disc	VT-BK
3	4/56C2:76	Central Electronic Module (CEM)	YE-OG	4/83:4 6/33:4	Fuel pump control module Fuel pump	YE-OG
4	31/65	Ground connection	BK-YE	74/520:5	Connector	BK-YE

74/518
7-pin gray

No.	Infotainment harness			Floor harness		
1	4/84C1:16	Suspension Module (SUM)	BU-BK	73/5080 74/409:23	Branching point Connector	BU-BK
2	4/84C1:15	Suspension Module (SUM)	GN-BK	73/5081 74/409:22	Branching point Connector	GN-BK
3	73/5052	Branching point	YE-GN	74/511:14	Connector	YE-GN
4	73/5023	Branching point	GN-BN	74/511:15	Connector	GN-BN
5	4/84C1:28	Suspension Module (SUM)	VT-WH	74/511:16	Connector	VT-WH
6	4/84C1:2	Suspension Module (SUM)	GN-BU	74/511:12	Connector	GN-BU
7	4/84C1:1	Suspension Module (SUM)	YE-BU	74/511:13	Connector	YE-BU

74/519
22-pin gray

No.	Infotainment harness			Engine compartment harness		
1	4/84C1:6	Suspension Module (SUM)	BU-BK	8/20:1	Shock absorber, Four-C, front left	BU-BK
2	4/84C1:7	Suspension Module (SUM)	VT-BN	8/20:2	Shock absorber, Four-C, front left	VT-BN
3	4/84C1:9	Suspension Module (SUM)	GY-YE	8/21:1	Shock absorber, Four-C, front right	GY-YE
4	4/84C1:8	Suspension Module (SUM)	BU-OG	8/21:2	Shock absorber, Four-C, front right	BU-OG
5	73/5052	Branching point	YE-GN	7/118:5	Height sensor, suspension, front left	YE-GN
6	4/84C1:12	Suspension Module (SUM)	BU-RD	7/118:4	Height sensor, suspension, front left	BU-RD
7	73/5066	Branching point	YE-GN	73/3077	Branching point	YE-GN
8	4/84C1:27	Suspension Module (SUM)	GY-VT	7/119:4	Height sensor, suspension, front right	GY-VT
9	4/84C1:22	Suspension Module (SUM)	BU-GY	7/88:1	Acceleration sensor, Four-C, front right	BU-GY
10	4/84C1:10	Suspension Module (SUM)	VT-RD	7/87:1	Acceleration sensor, Four-C, front left	VT-RD
11	4/84C1:19	Suspension Module (SUM)	GN-BN	73/3078	Branching point	GN-BN
12	4/86C2:2	Parking Assistance Module (PAM)	VT-GY	74/309:4	Connector	VT-GY
13	4/86C2:5	Parking Assistance Module (PAM)	BU-GN	74/309:5	Connector	BU-GN
14	4/86C2:1	Parking Assistance Module (PAM)	YE-OG	74/309:6	Connector	YE-OG
15	-		-	-		-
16	-		-	-		-
17	-		-	-		-
18	4/86C2:9	Parking Assistance Module (PAM)	GY-OG	74/309:1	Connector	GY-OG
19	4/86C2:10	Parking Assistance Module (PAM)	WH-BN	74/309:2	Connector	WH-BN
20	-		-	-		-
21	-		-	-		-
22	-		-	-		-

Connectors
74/520 - 74/526

74/520
6-pin gray

No.	Left rear axle harness			All wheel drive harness		
1	74/511:3	Connector	BU-BK	4/82C1:4	Differential Electronic Module (DEM)	BU-BK
2	74/511:4	Connector	GN-BK	4/82C1:2	Differential Electronic Module (DEM)	GN-BK
3	-		-	-		-
4	-		-	-		-
5	74/514:4	Connector	BK-YE	4/82C1:7	Differential Electronic Module (DEM)	BK-YE
6	74/511:1	Connector	WH-VT	4/82C1:3	Differential Electronic Module (DEM)	GN-RD

74/524
2-pin gray

No.	Harness rear axle right			Floor harness		
1	4/115C1:12	Park Brake Module (PBM)	YE-GY	6/147:1	Lock motor, rear right brake disc	YE-GY
2	4/115C1:27	Park Brake Module (PBM)	GN-BN	6/147:2	Lock motor, rear right brake disc	GN-BN

74/526
12-pin black

No.	Floor harness			Adapter harness bumper rear		
1	4/93C1:21	Keyless Vehicle Module (KVM)	GN-OG	74/540:4	Connector	GN-OG
2	4/93C1:22	Keyless Vehicle Module (KVM)	VT	74/540:8	Connector	VT
3	73/5033	Branching point	BK-BU	735171	Branching point	BK-BU
4	-		-	-		-
5	-		-	-		-
6	-		-	-		-
7	4/56C2:14	Central Electronic Module (CEM)	VT-GN	73/5174	Branching point	VT-GN
8	4/56C2:13	Central Electronic Module (CEM)	GY-VT	73/5175	Branching point	GY-VT
9	4/56C2:32	Central Electronic Module (CEM)	VT-GN	73/5172	Branching point	VT-GN
10	4/56C2:31	Central Electronic Module (CEM)	GY-VT	73/5173	Branching point	GY-VT
11	73/5091	Branching point	YE-BU	73/5170	Branching point	YE-BU

Connectors
74/530 - 74/531

74/530
14-pin gray

No.	Tunnel harness			Floor harness		
1	3/65:3	Switch, heated rear seat	BN-VT	73/5021	Branching point	BN-VT
2	-		-	-		-
3	16/135:1	Antenna, door lock, passenger compartment 3	GY-VT	4/93C2:14	Keyless vehicle module (KVM)	GY-VT
4	16/135:2	Antenna, door lock, passenger compartment 3	BU-WH	4/93C2:17	Keyless vehicle module (KVM)	BU-WH
5	-		-	-		-
6	-		-	-		-
7	73/5042	Branching point	GN-OG	11C/22:2	Fuses in distribution box passenger compartment	GN-OG
8	73/5026	Branching point	BK-GN	73/5023	Branching point	BK-GN
9	-		-	-		-
10	16/134:1	Antenna, door lock, passenger compartment 2	GN-RD	4/93C1:4	Keyless vehicle module (KVM)	GN-RD
11	16/134:2	Antenna, door lock, passenger compartment 2	YE-OG	4/93C1:16	Keyless vehicle module (KVM)	YE-OG
12	-		-	-		-
13	-		-	-		-
14	-		-	-		-

74/531
2-pin gray

No.	Infotainment harness			DAB Adapter harness		
1	16/47C2:1	Antenna GSM/GPS/RDAR	WH	16/162C2:1	Digital Audio Broadcast Module (DABM)	WH
1S	16/47C2:1S	Antenna GSM/GPS/RDAR	-	16/162C2:1S	Digital Audio Broadcast Module (DABM)	-

Connectors
74/532 - 74/537

74/532
2-pin gray

No.	Infotainment harness			DAB Adapter harness		
1	16/71C2:1 16/73C3:1	Window antenna amplifier 1, S60 Window antenna amplifier 1, V60	WH	16/162C2:2	Digital Audio Broadcast Module (DABM)	WH
1S	16/71C2:1S 16/73C2:1S	Window antenna amplifier 1, S60 Window antenna amplifier 1, V60	-	16/162C2:2S	Digital Audio Broadcast Module (DABM)	-

74/534
4-pin gray

No.	Floor harness			Infotainment harness		
1	73/5117	Branching point	RD	16/105C1:1	Audio module (AUD)	RD
2	11C/17:2	Fuses in distribution box passenger compartment	RD	16/105C31:16 73/5051	Audio module (AUD) Branching point	RD
3	-		-	-		-
4	73/5132	Branching point	BK-GY	73/5123 16/36C2:2 16/162C1:2 16/145C1:2	Branching point TV receiver Digital Audio Broadcast Module (DABM) Remote Digital Audio Receiver (RDAR)	BK-GY

74/537
5-pin green

No.	Adapter harness camera			Floor harness		
1	73/5118	Branching point	BN	74/507:16	Connector	BN
2	73/5119	Branching point	OG	74/507:10	Connector	OG
3	-		-	-		-
4	73/5120	Branching point	GN	74/507:5	Connector	GN
5	73/5121	Branching point	BU	74/507:6	Connector	BU

Connectors
74/540 - 74/601

74/540
8-pin gray

No.	Parking assistance harness adapter			Harness bumper rear		
1	4/86C3:11	Parking Assistance Module (PAM)	BU-WH	73/5064	Branching point	BU-WH
2	4/86C3:2	Parking Assistance Module (PAM)	YE-GY	7/133:2	Rear parking assistance sensor	YE-GY
3	4/86C3:3	Parking Assistance Module (PAM)	YE-BK	7/132:2	Rear parking assistance sensor	YE-BK
4	74/539:1	Connector	GN-OG	16/132:1	Antenna door lock tailgate	GN-OG
5	4/86C3:8	Parking Assistance Module (PAM)	GN-WH	73/5067	Branching point	GN-WH
6	4/86C3:4	Parking Assistance Module (PAM)	YE-OG	7/134:2	Rear parking assistance sensor	YE-OG
7	4/86C3:5	Parking Assistance Module (PAM)	YE-GN	7/131:2	Rear parking assistance sensor	YE-GN
8	74/539:2	Connector	VT	16/132:2	Antenna door lock tailgate	VT

74/561
2-pin gray

No.	Floor harness			Infotainment harness		
1	73/5011 73/5180	Branching point Branching point	BU-BK	16/105C5:10	Audio module (AUD)	BU-BK
2	73/5012 73/5181	Branching point Branching point	GN-BK	16/105C5:22	Audio module (AUD)	GN-BK

74/601 S60
10-pin gray

No.	Floor harness			Tailgate harness		
1	4/56C2:48	Central Electronic Module (CEM)	YE-VT	10/3:1 10/3B:1	License plate lighting License plate lighting	BK
2	4/56C2:30	Central Electronic Module (CEM)	YE-OG	6/8:3	Central locking motor, trunk lid	BK
3	4/56C2:24 73/5032	Central Electronic Module (CEM) Branching point	GY-YE	10/3:3 10/3B:3	License plate lighting License plate lighting	BK
4	73/5030	Branching point	BK-OG	73/6001	Branching point	BK
5	4/56C2:63	Central Electronic Module (CEM)	GY-BN	6/8:1	Central locking motor, trunk lid	BK
6	10/127:4	Lighting, cargo compartment, left-hand side	BU-WH	6/8:4	Central locking motor, trunk lid	BK
7	4/56C2:73	Central Electronic Module (CEM)	GN-BN	73/5096	Branching point	GN-BN
8	73/5112	Branching point	VT-GN	10/18C2:2	Lamp housing, rear left	BK
9	73/5113	Branching point	YE-BK	10/17C2:2	Lamp housing, rear right	BK
10	4/93C4:8	Keyless vehicle module (KVM)	GY-OG	10/3B:4	License plate lighting	BK

Connectors
74/602 - 74/606

74/602 V60
14-pin gray

No.	Floor harness			Tailgate harness		
1	4/56C2:19	Central Electronic Module (CEM)	WH	10/173:3	Load space illumination lamp, tailgate	WH
2	4/56C2:24 73/5032	Central Electronic Module (CEM) Branching point	GY-YE	10/3:3 10/3B:3	License plate lighting License plate lighting	BK
3	4/56C2:30	Central Electronic Module (CEM)	YE-OG	6/8:3	Central locking motor, trunk lid	BK
4	4/93C4:8	Keyless vehicle module (KVM)	GY-OG	10/3B:4	License plate lighting	BK
5	73/5030	Branching point	BK-OG	73/6001	Branching point	BK-OG
6	73/5044	Branching point	BU-WH	10/173:1	Load space illumination lamp, tailgate	BK
7	2/16:3	Relay, rear window wiper	GY-BU	6/32:2	Rear window wiper motor	BK
8	2/82:5	Relay, heated rear window	GY-RD	9/2A:1	Heated rear window	GY-RD
9	4/56C2:48	Central Electronic Module (CEM)	YE-VT	10/3:1 10/3B:1	License plate lighting License plate lighting	BK
10	4/56C2:9	Central Electronic Module (CEM)	YE-GY	10/19:1	Auxiliary brake light	BK
11	74/409:13	Connector	GN-VT	16/16C1:1	Window antenna amplifier	GN-VT
12	-		-	-		-
13	4/56C2:37 73/5213	Central Electronic Module (CEM) Branching point	WH	10/173:13	Load space illumination lamp, tailgate	WH
14	73/5136	Branching point	RD-GY	6/32:1	Rear window wiper motor	BK

74/606
5-pin blue

No.	Floor harness			Tailgate harness		
1	4/120C2:4	Parking Assistance Camera (PAC)	BU	27/6:1	Camera	BU
2	4/120C2:3	Parking Assistance Camera (PAC)	OG	27/6:2	Camera	OG
3	4/120C2:2	Parking Assistance Camera (PAC)	GN	27/6:3	Camera	GN
4	4/120C2:1	Parking Assistance Camera (PAC)	BN	27/6:4	Camera	BN
5S	4/120C2:5S	Parking Assistance Camera (PAC)	-	27/6:5S	Camera	-

Connectors
74/607 - 74/901

74/607 V60
2-pin black

No.	Floor harness			Tailgate harness		
1	74/405:1	Connector	WH	16/16C2:1	Amplifier window antenna, V60	WH
1S	74/405:1S	Connector	-	16/16C2:1S	Amplifier window antenna, V60	-

74/608 V60
2-pin white

No.	Floor harness			Tailgate harness		
1	74/405:2	Connector	WH	16/71C1:1	Amplifier window antenna 1, V60	WH
1S	74/405:2S	Connector	-	16/71C1:1S	Amplifier window antenna 1, V60	-

74/609 V60
2-pin grey

No.	Roof harness			Tailgate harness		
1	74/414:2	Connector	BK	6/8:1	Lock motor central locking, trunk lid/tailgate, V60	BK
2	-		-	-		-

74/901
12-pin black

No.	Roof harness			Harness windshield module		
1	74/412:1	Connector	GN-OG	4/125C1:2	Closing velocity module (CVM)	GN-OG
2	74/412:2	Connector	GY-BU	4/125C1:1	Closing velocity module (CVM)	GY-BU
3	73/5097	Branching point	BU-BK	4/125C1:4	Closing velocity module (CVM)	BU-BK
4	73/5098	Branching point	GN-BK	4/125C1:3	Closing velocity module (CVM)	GN-BK
5	74/414:5 73/5189	Connector Branching point	RD-GN GY-OG	4/125C1:5	Closing velocity module (CVM)	GY-OG
6	73/4020	Branching point	BU-WH	7/149:1	Rain Sensor Module (RSM)	BU-WH
7	4/56C4:10	Central Electronic Module (CEM)	GY-RD	7/149:3	Rain Sensor Module (RSM)	GY-RD
8	4/80C1:15	Forward Sensing Module (FSM)	GY-BK	9/39:1	Heating element camera	GY-BK
9	73/4014	Branching point	BK-WH	4/125C1:7 73/4049	Closing velocity module (CVM) Branching point	BK-WH
10	4/80C1:14	Forward Sensing Module (FSM)	BK	9/39:2	Heating element camera	BK
11	73/4047	Branching point	BN-VT	7/90:2	Moisture sensor	BN-VT
12	73/4048	Branching point	BU	7/90:3	Moisture sensor	BU

Branching points
73/3004 - 73/3012

73/3004 4-Cyl. Turbo 1,6

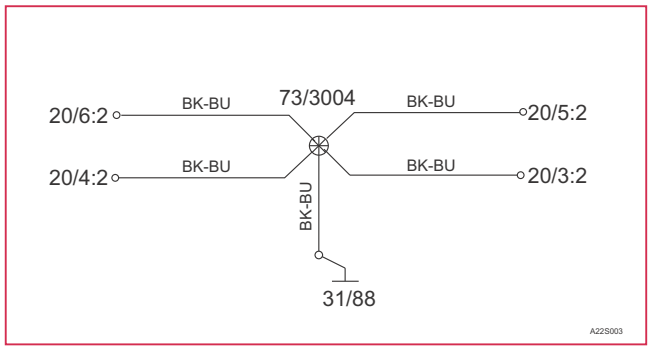

73/3004 5-Cyl. Turbo

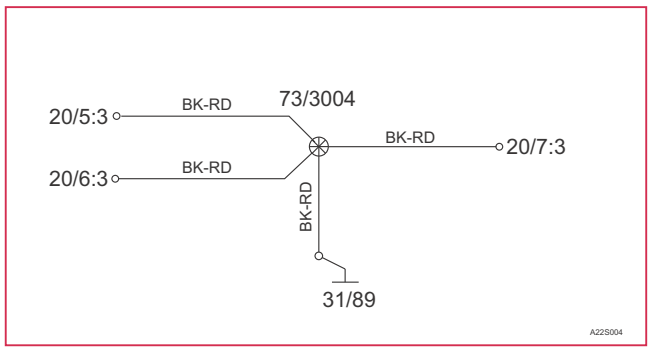

73/3004 6-Cyl. Turbo

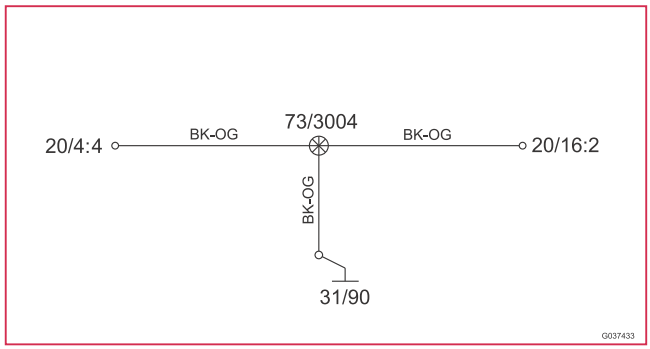

73/3005 4-Cyl. Turbo 1,6L

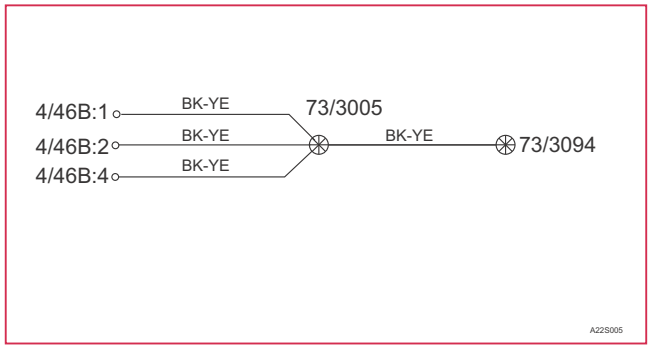

73/3005 4-Cyl. 2,0L

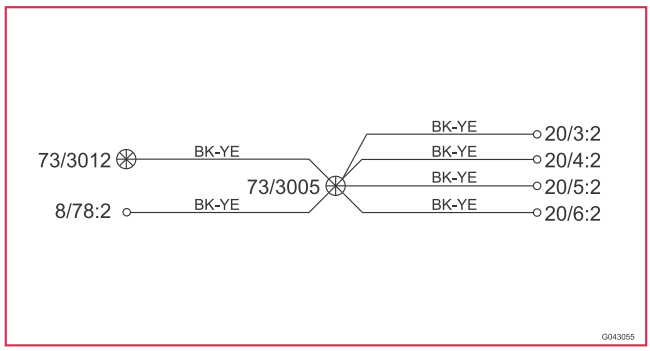

73/3006

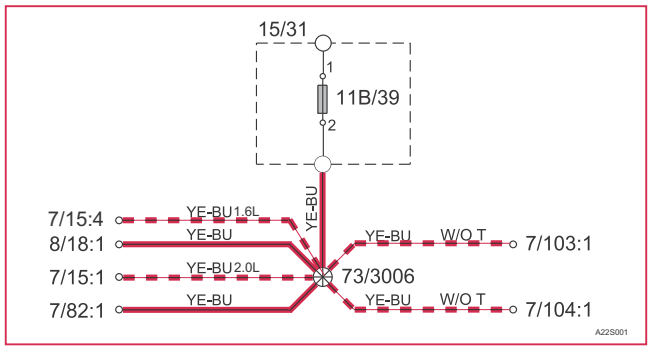

73/3009

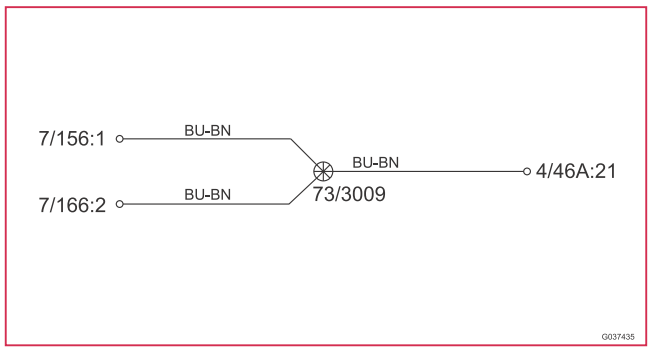

73/3010

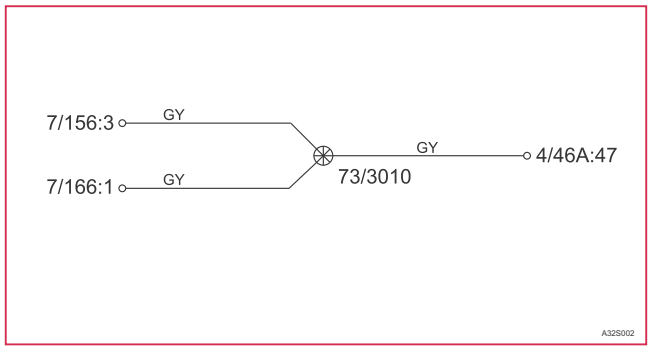

73/3012 4-Cyl. Turbo

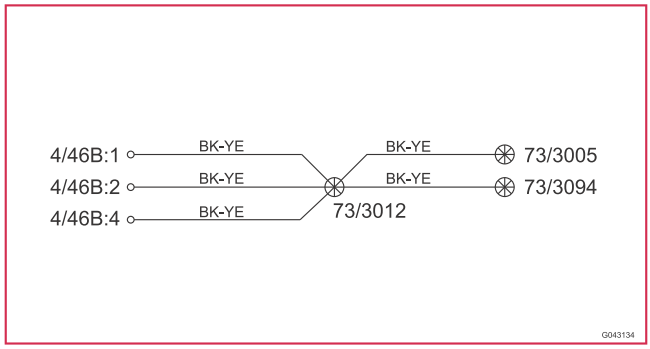

73/3012 4-Cyl. Diesel

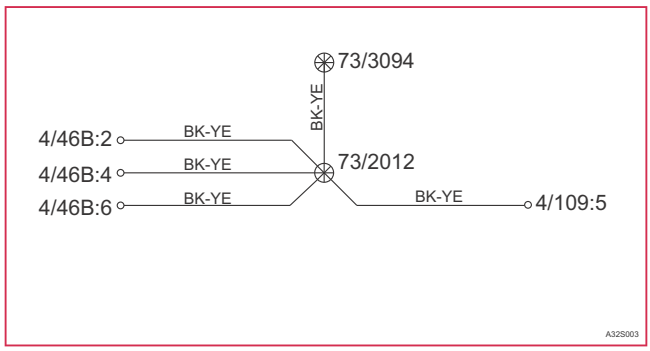

Branching points
73/3012 - 73/3030

73/3012 5-Cyl. Turbo

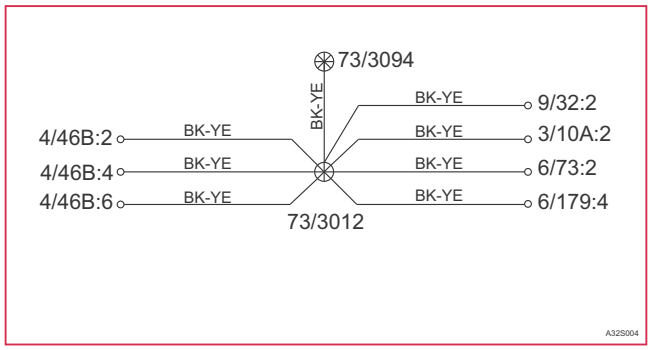

73/3012 5-Cyl. Diesel

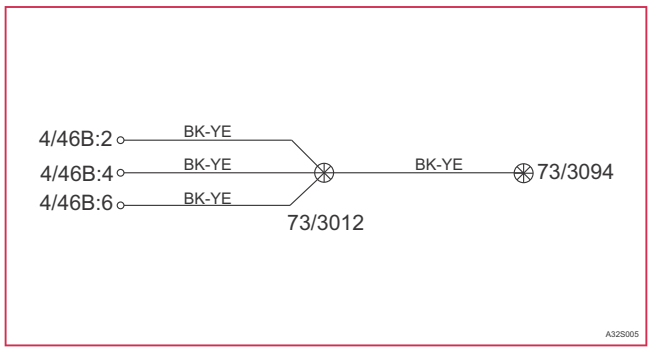

73/3012 6-Cyl.

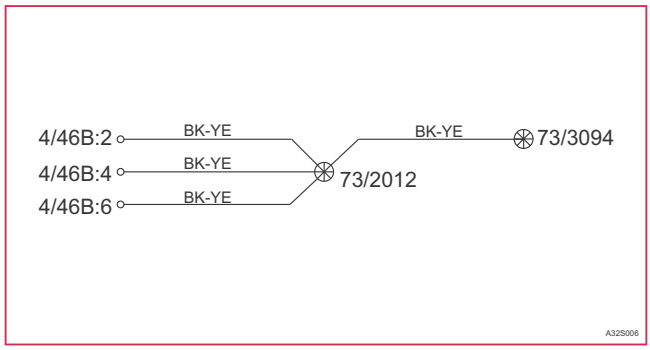

73/3014

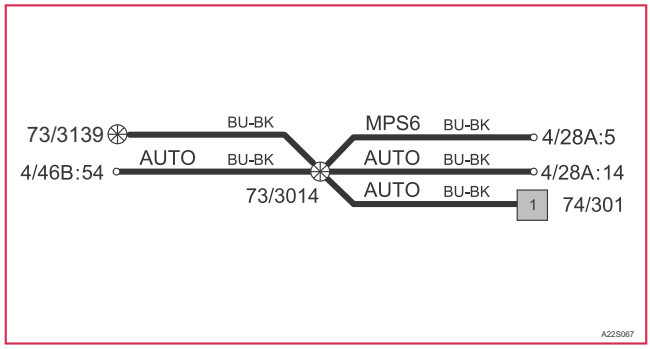

73/3015

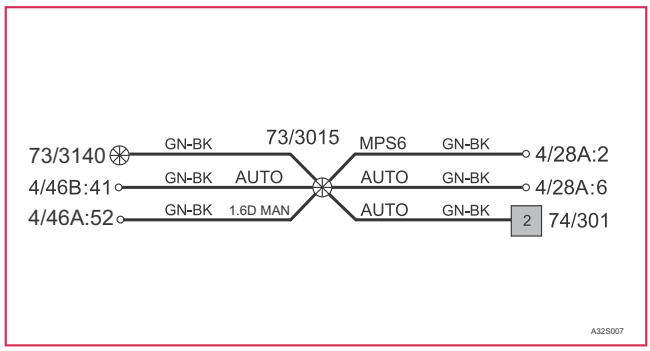

73/3019

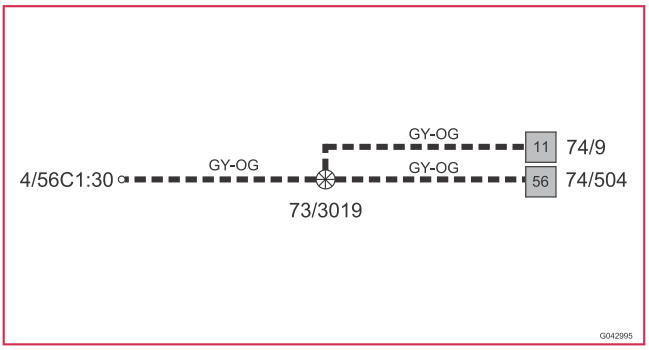

73/3020

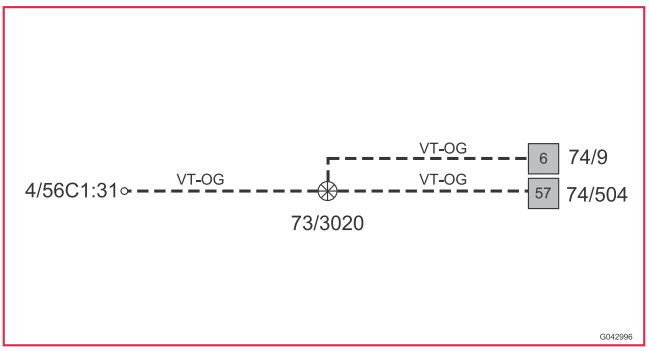

73/3021

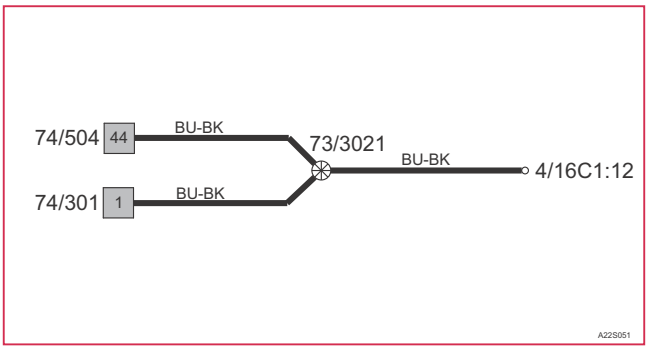

73/3022

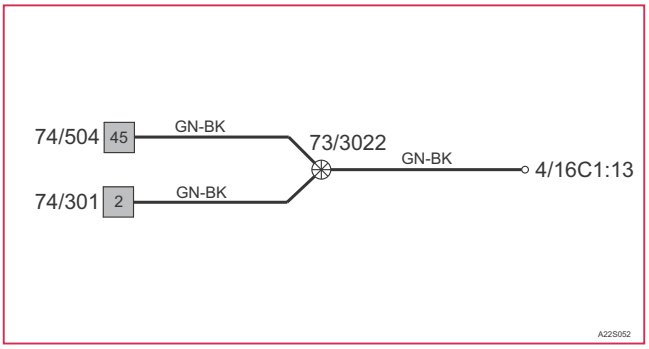

73/3030

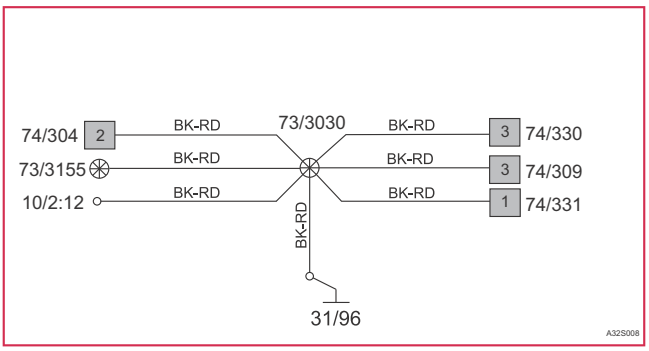

Branching points
73/3033 - 73/3047

73/3033

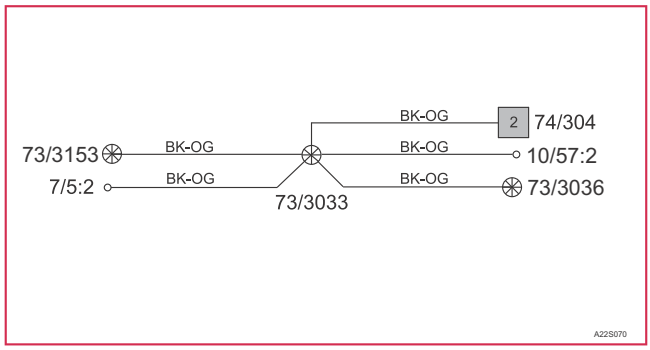

73/3039 5-Cyl. Diesel

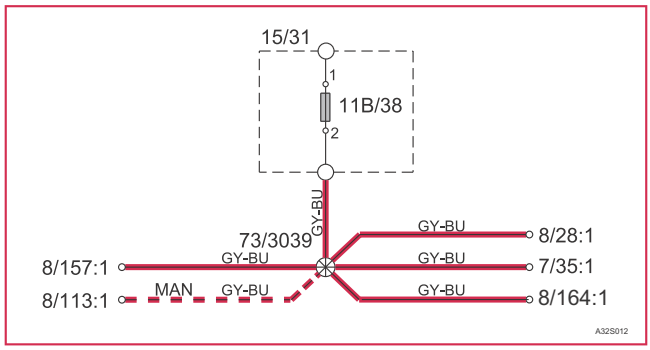

73/3034

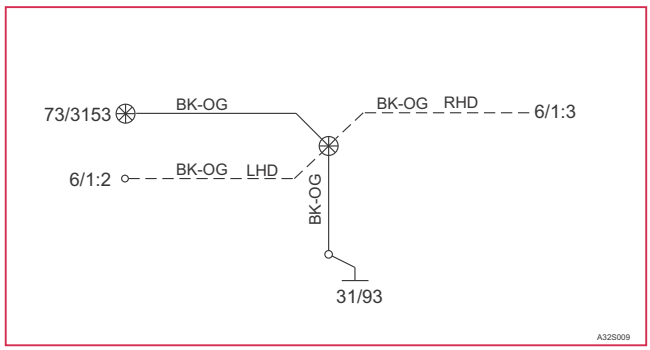

73/3039 6-Cyl.

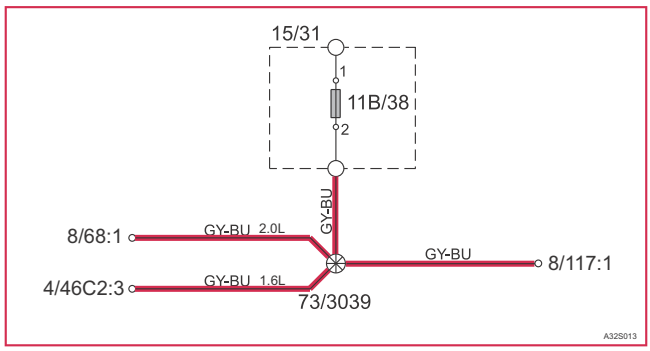

73/3036

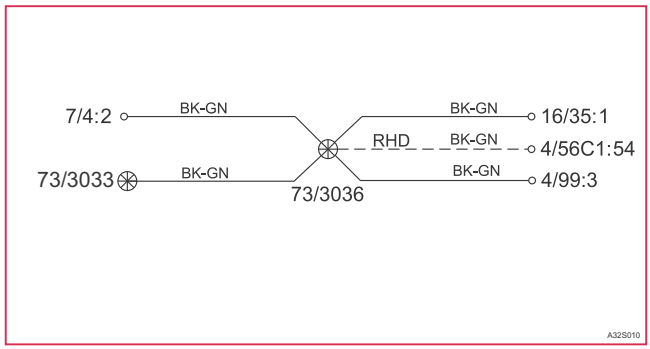

73/3042

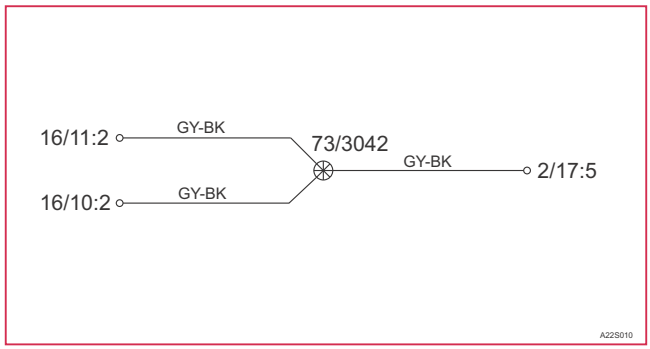

73/3039 4-Cyl. Turbo

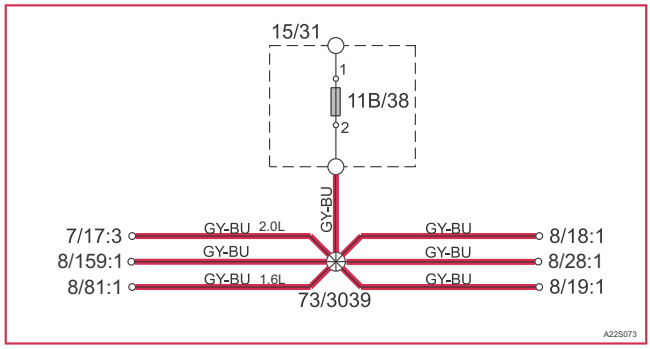

73/3046

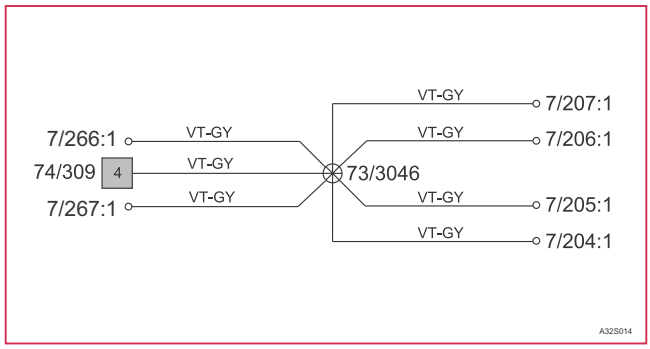

73/3039 5-Cyl. Turbo

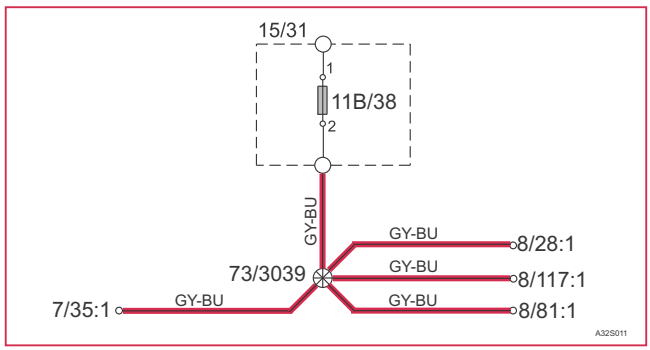

73/3047

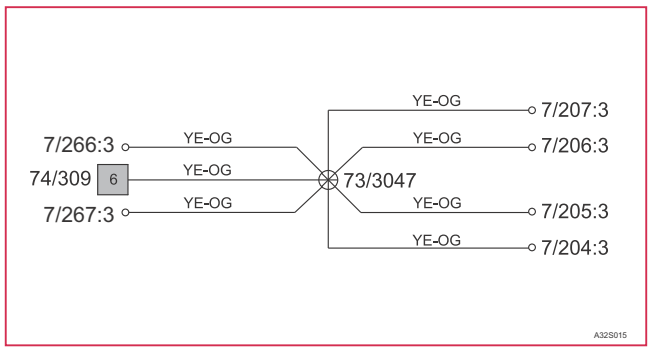

Branching points
73/3050 - 73/3072

73/3050

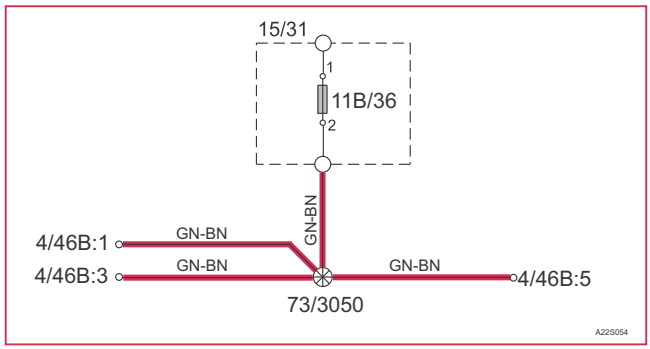

73/3058 6-Cyl.

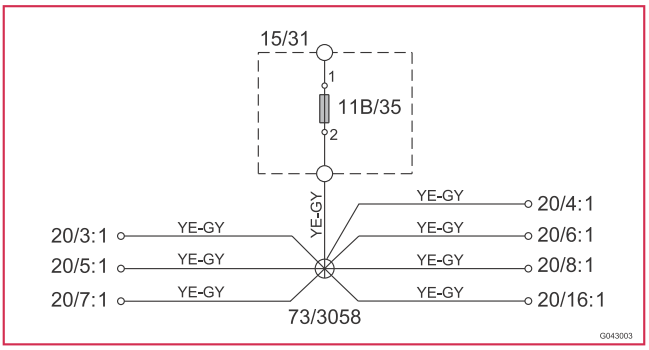

73/3051

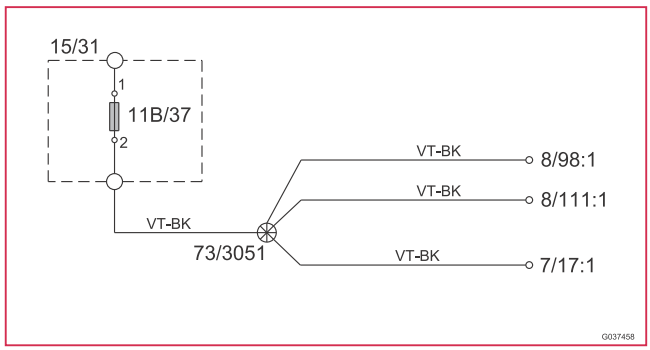

73/3064

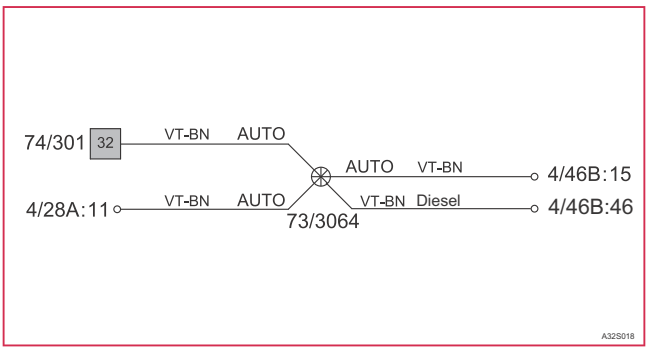

73/3053

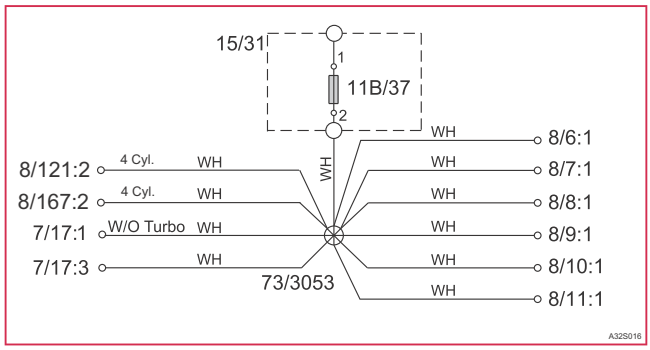

73/3068

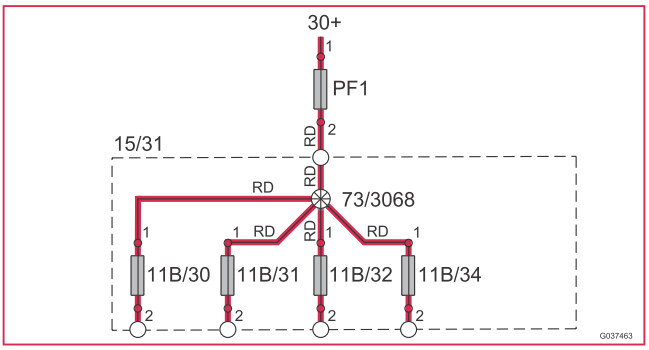

73/3058 4-Cyl. Turbo

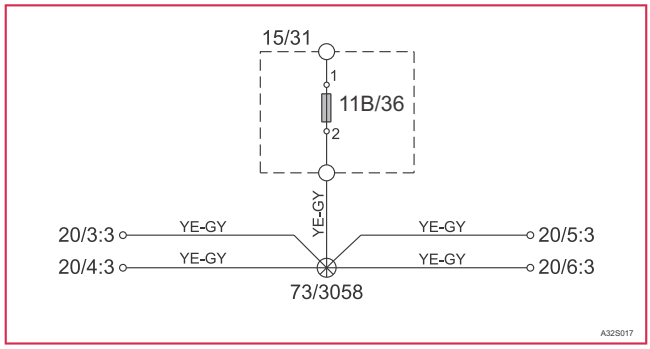

73/3070

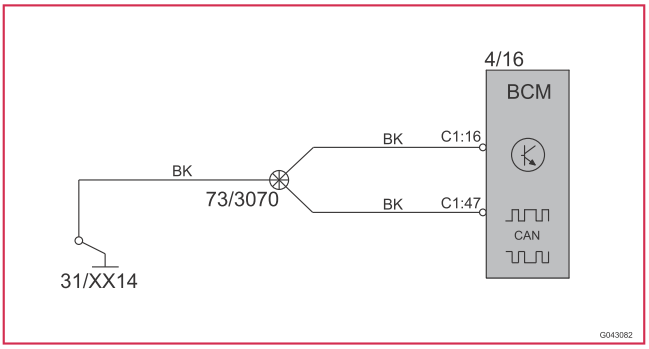

73/3058 5-Cyl. Turbo

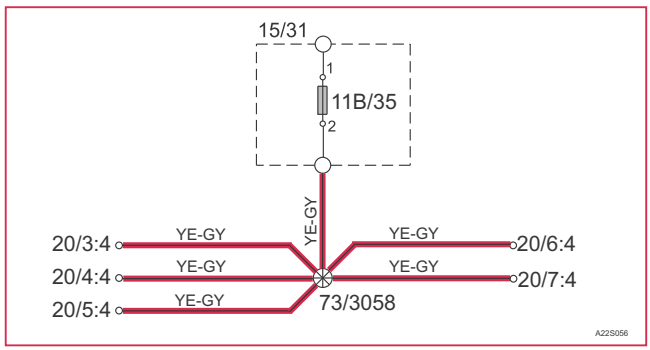

73/3072

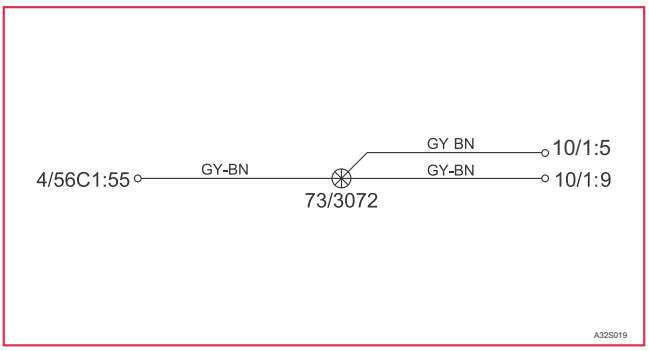

Branching points
73/3073 - 73/3094

73/3073

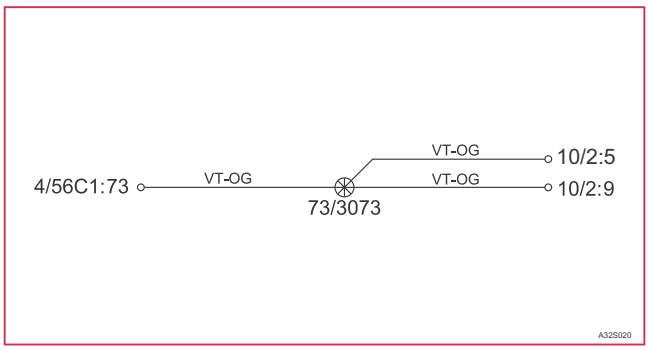

73/3091

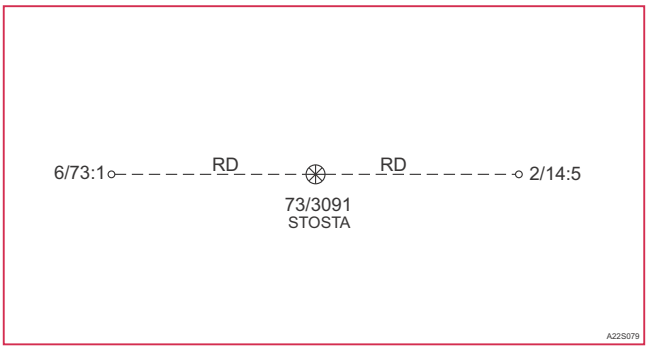

73/3076

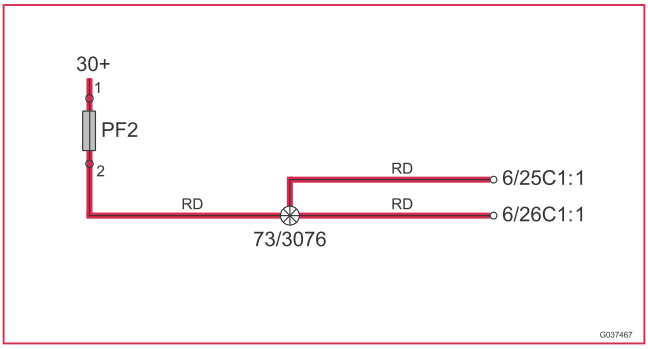

73/3094 4-Cyl. Turbo 1,6L

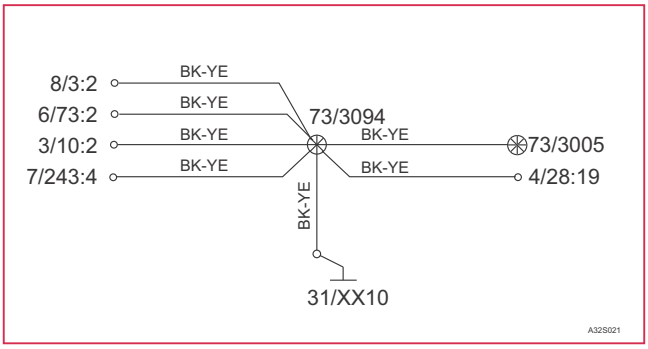

73/3077

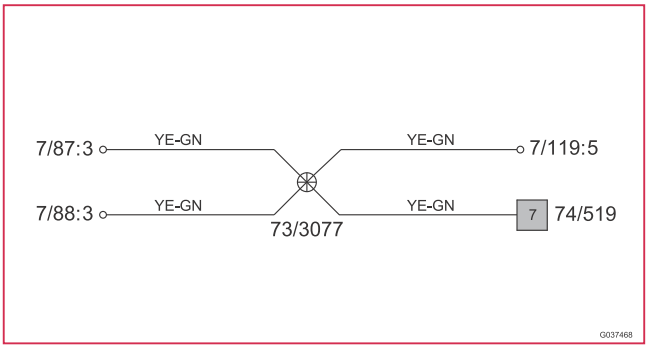

73/3094 4-Cyl. Turbo 2,0L

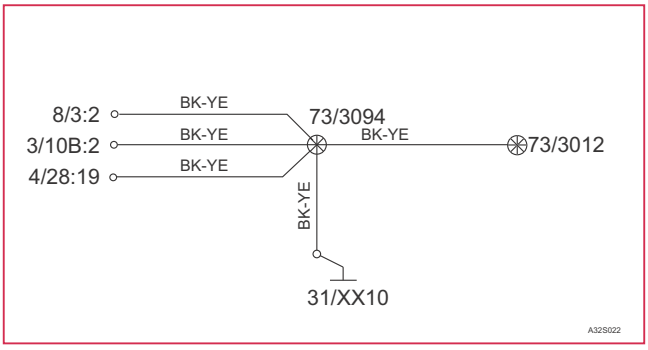

73/3078

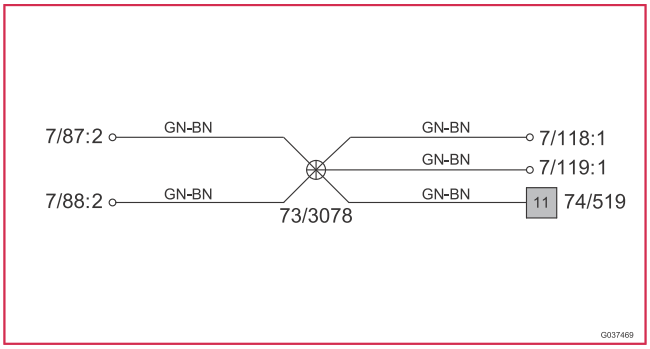

73/3094 5-Cyl. Turbo

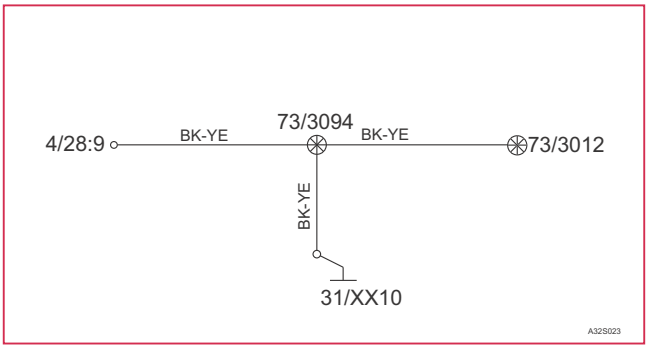

73/3085

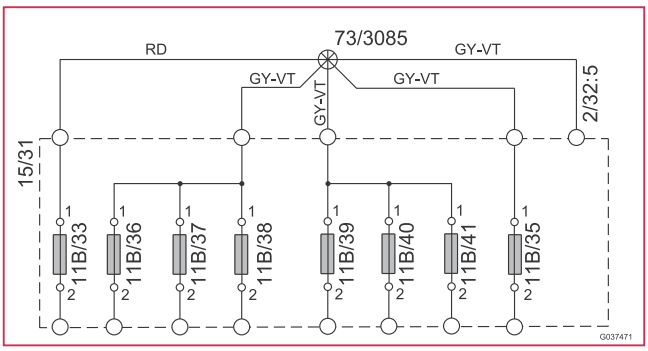

73/3094 4-Cyl. Diesel

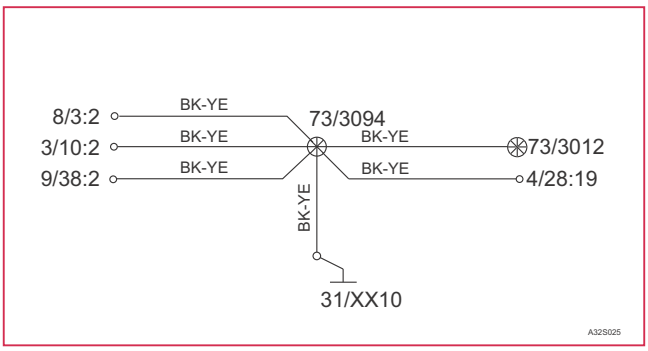

Branching points
73/3094 - 73/3121

73/3094 5-Cyl. Diesel

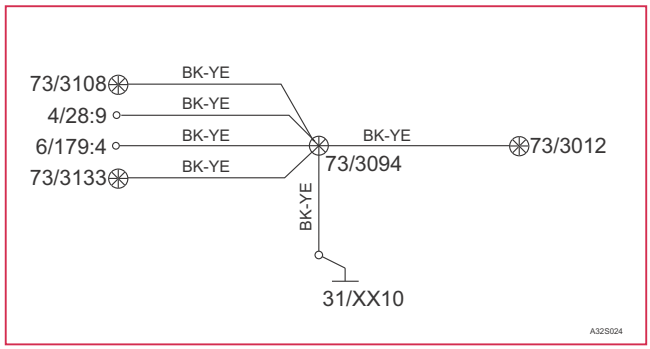

73/3103

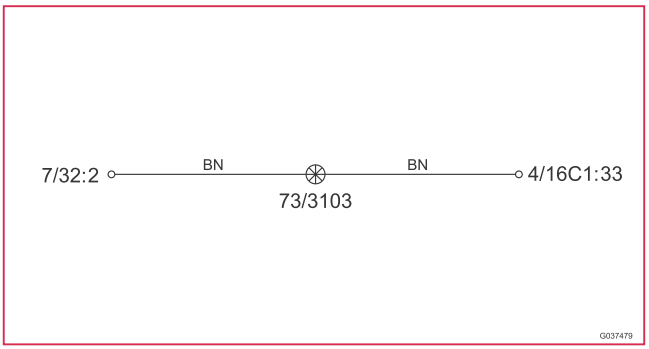

73/3094 6-Cyl.

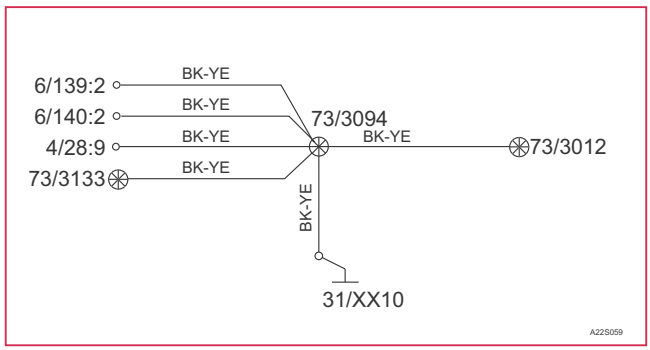

73/3104

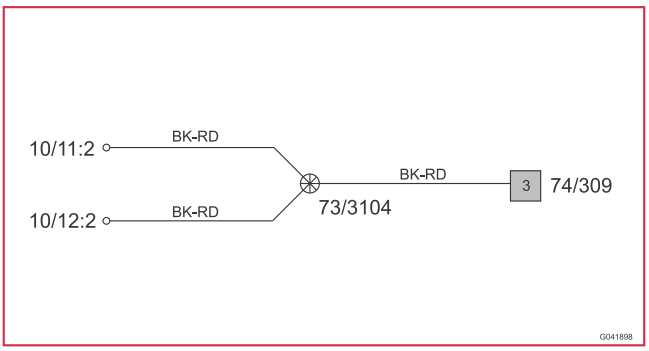

73/3100

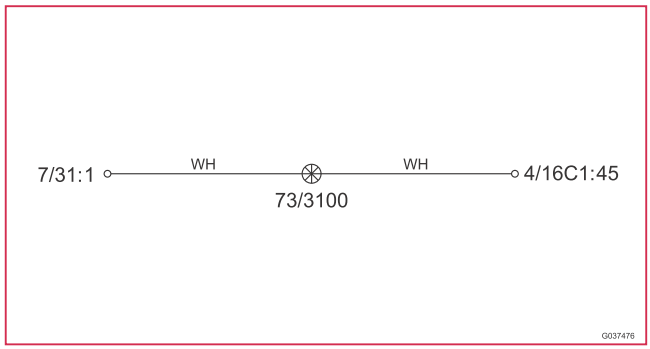

73/3108

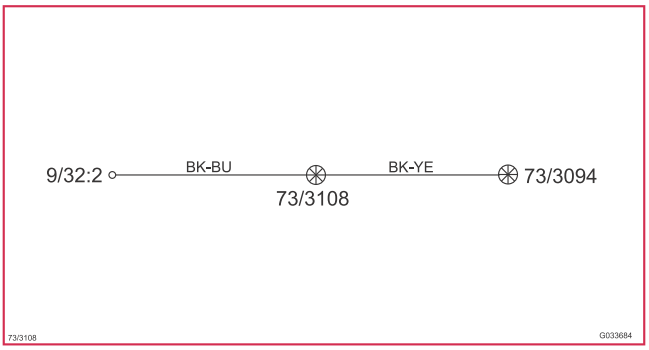

73/3101

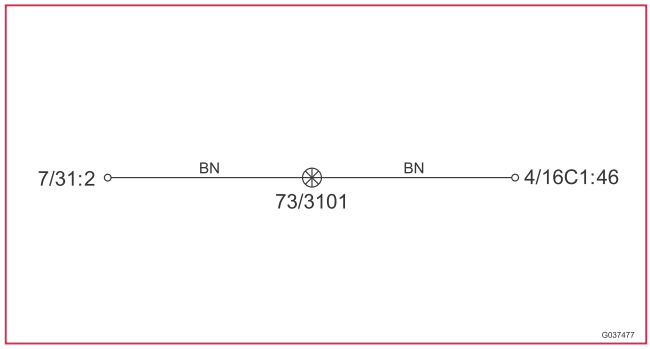

73/3120

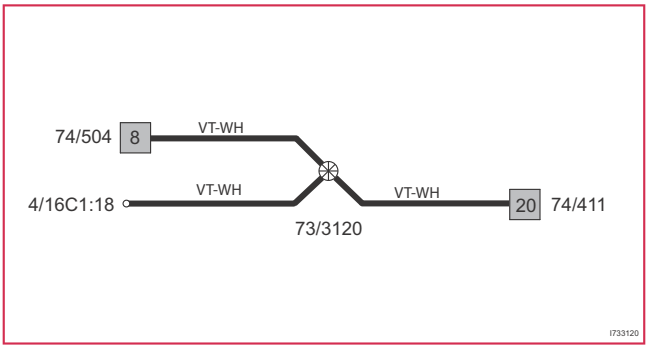

73/3102

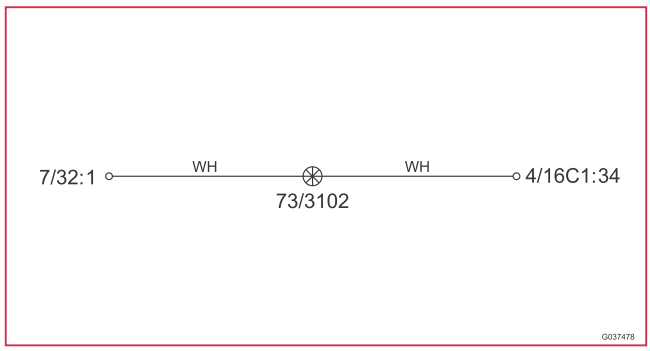

73/3121

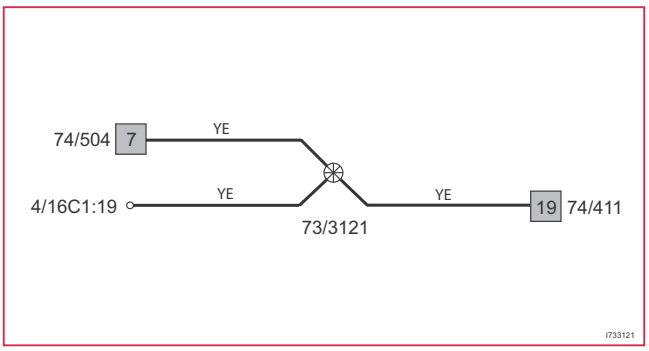

Branching points
73/3125 - 73/3153

73/3125 4-Cyl. Diesel

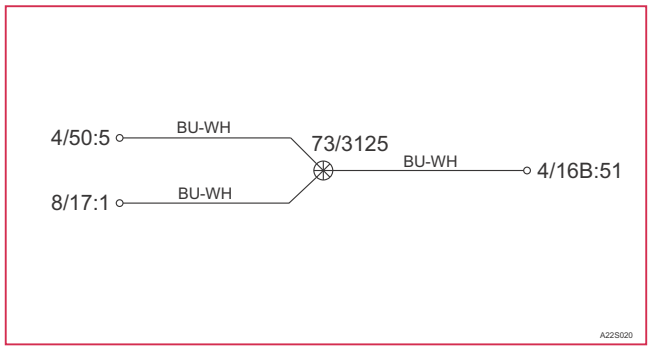

73/3131

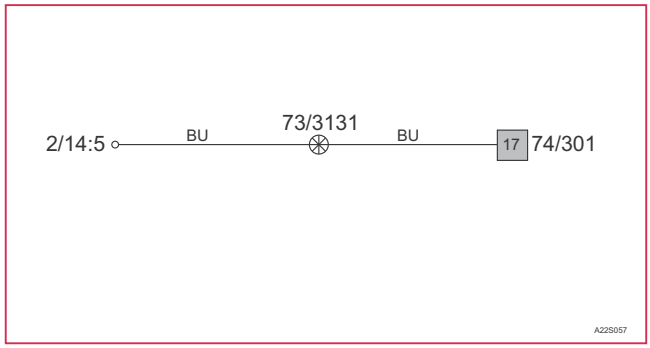

73/3133

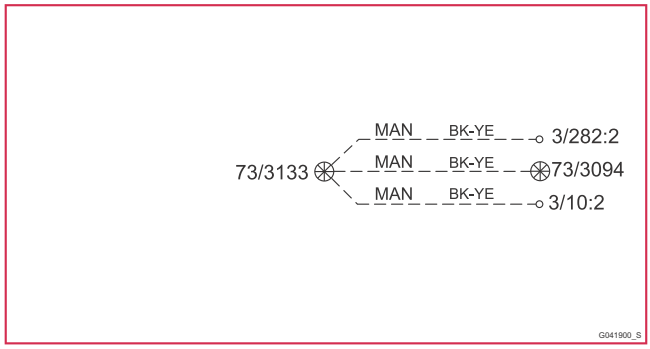

73/3136

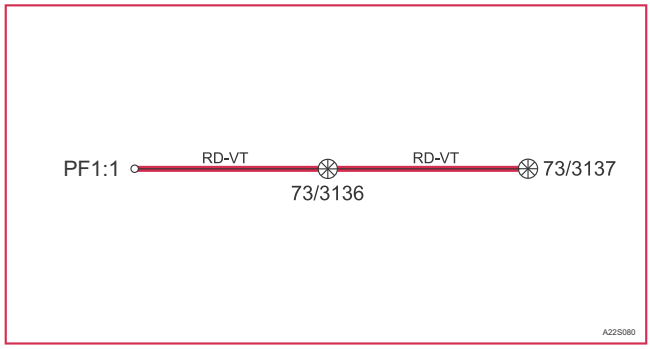

73/3137

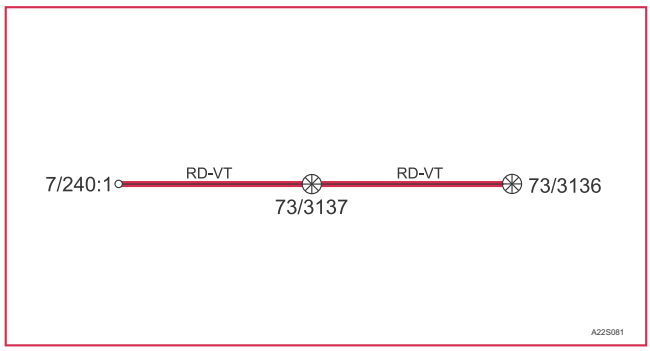

73/3139

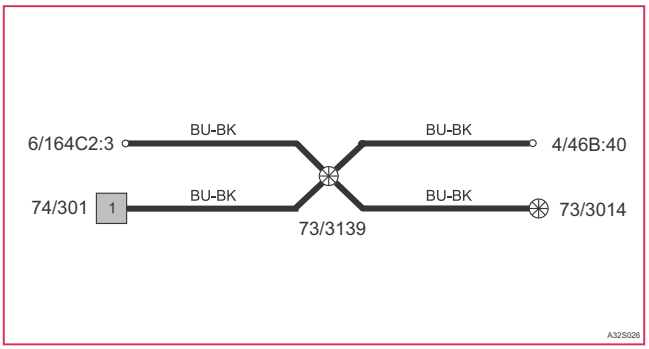

73/3140

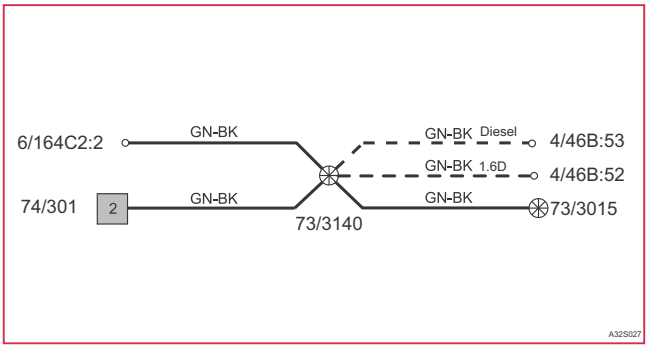

73/3145

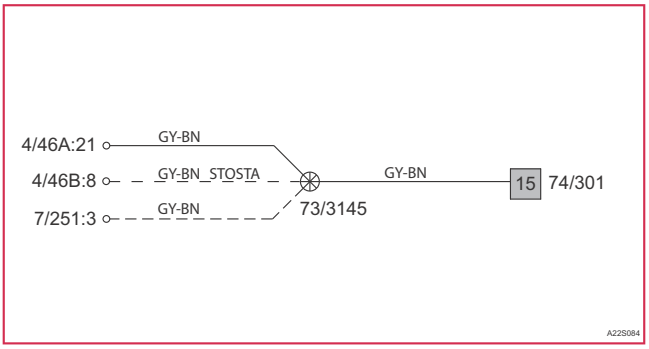

73/3150 5-Cyl. Diesel

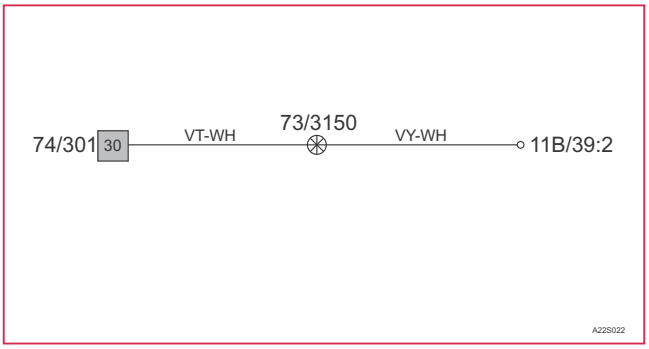

73/3153

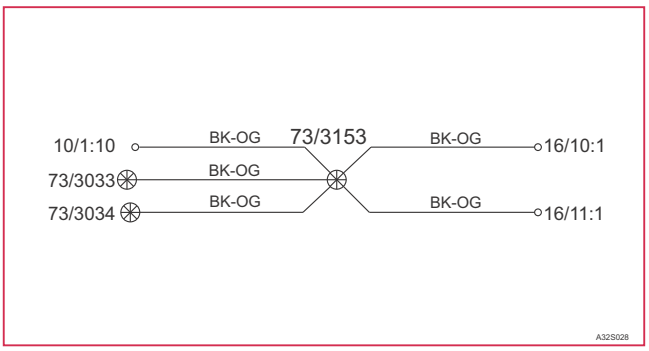

Branching points
73/3154 - 73/3180

73/3154

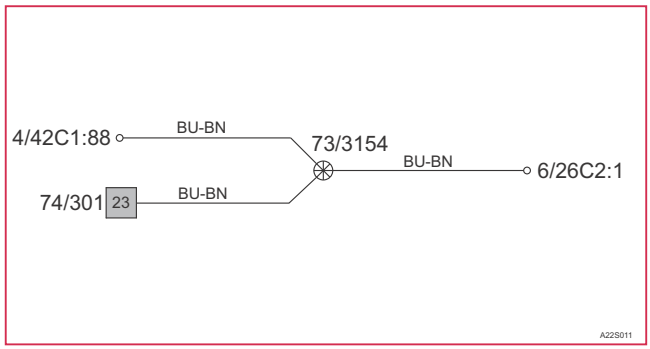

73/3155

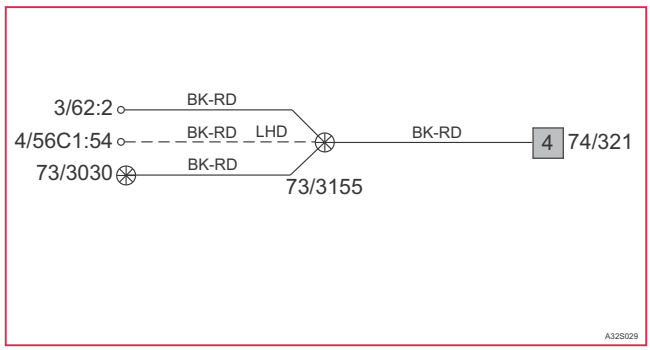

73/3156 5-Cyl. Turbo

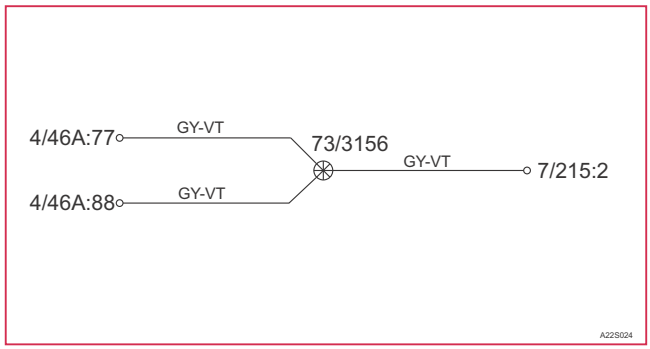

73/3157

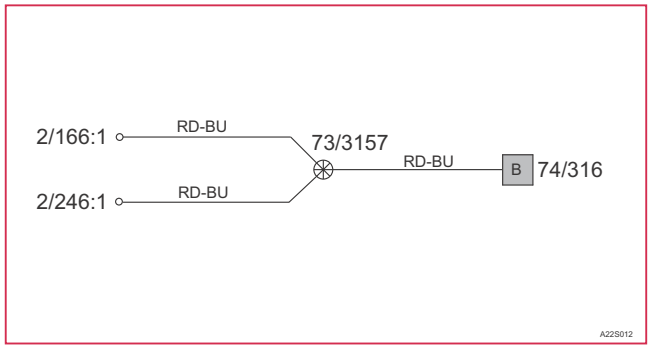

73/3160

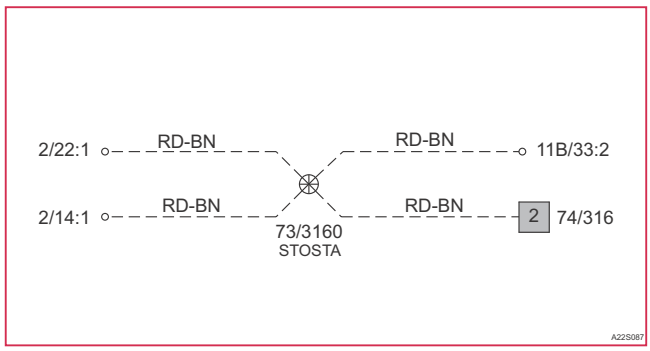

73/3161

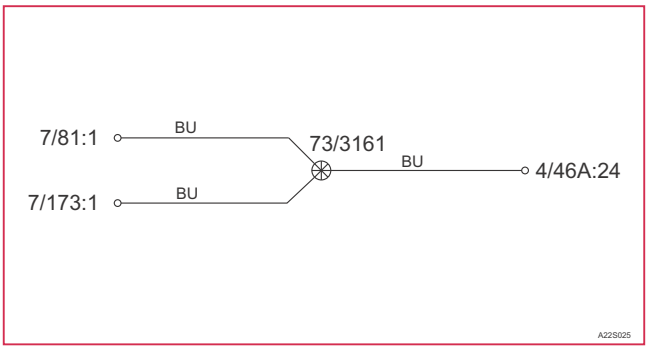

73/3163 4-Cyl. Diesel

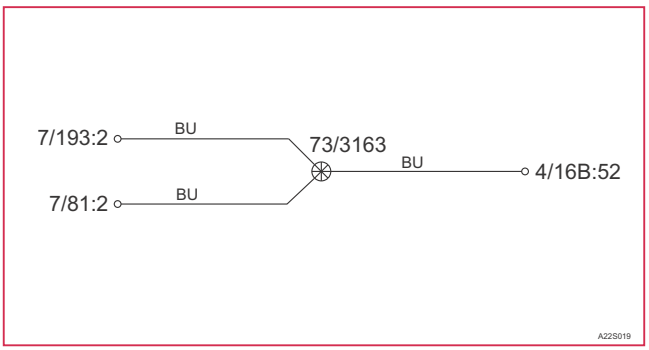

73/3165

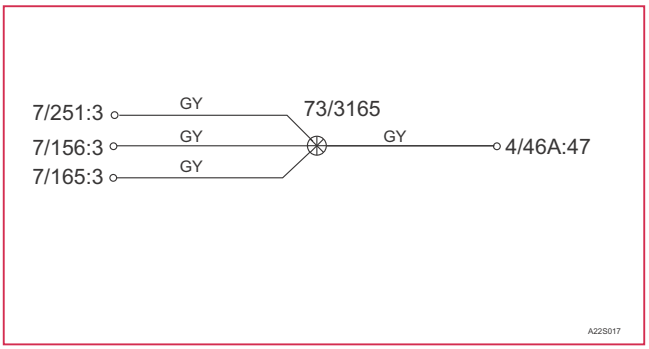

73/3166

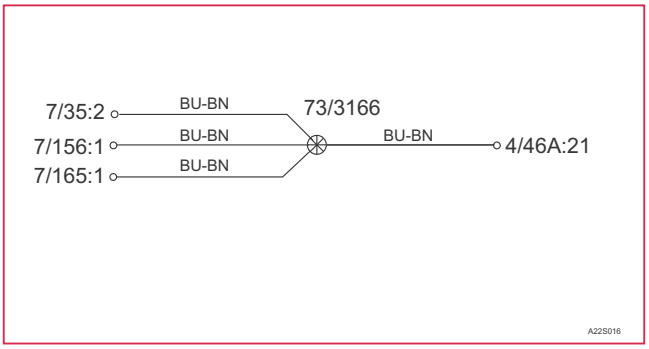

73/3180

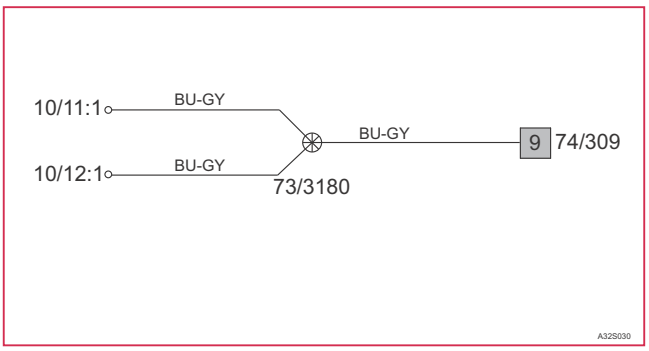

Branching points
73/3181 - 73/4010

73/3181

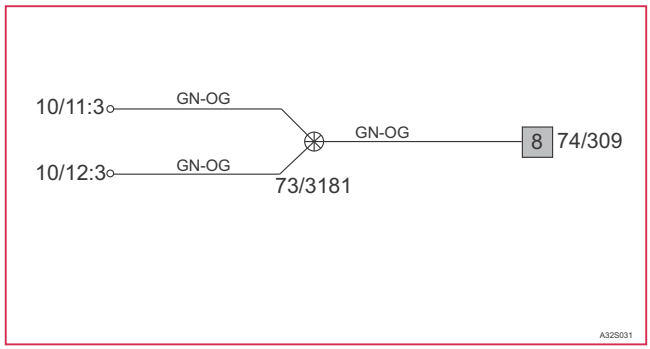

73/4001

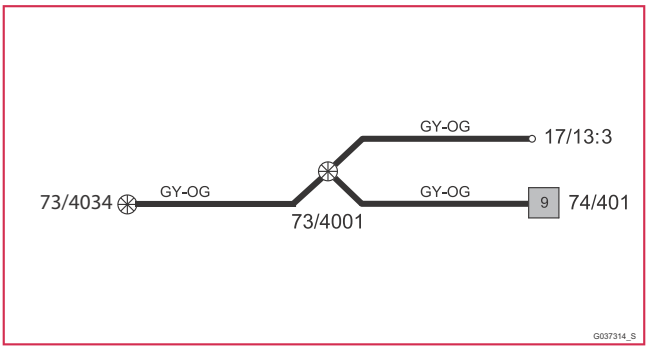

73/3182

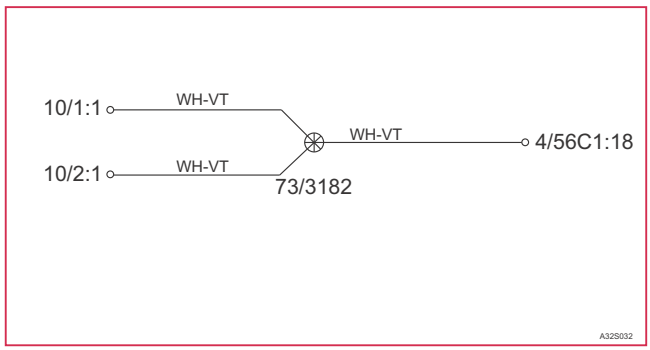

73/4002

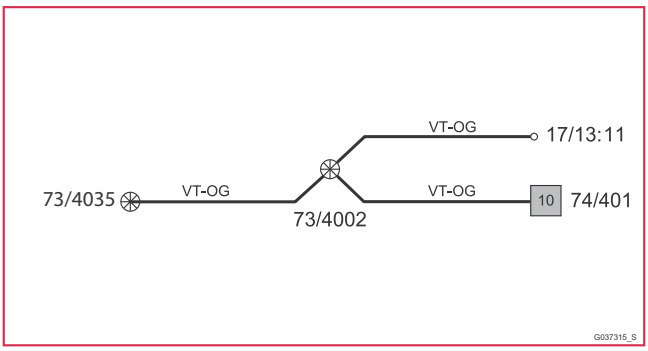

73/3199

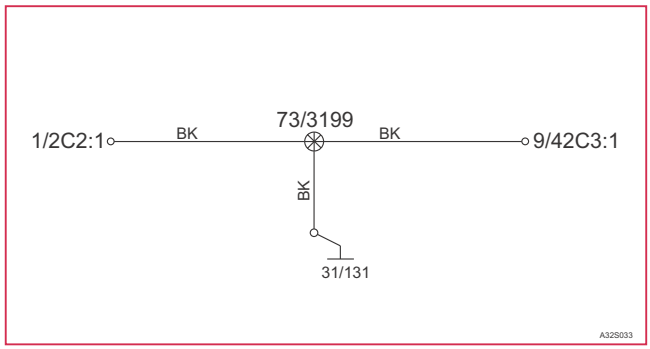

73/4005

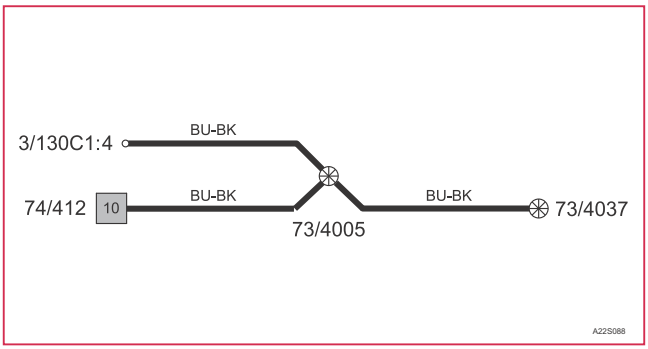

73/3200

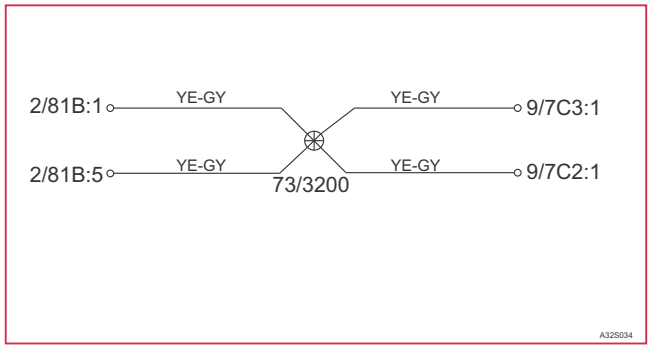

73/4006

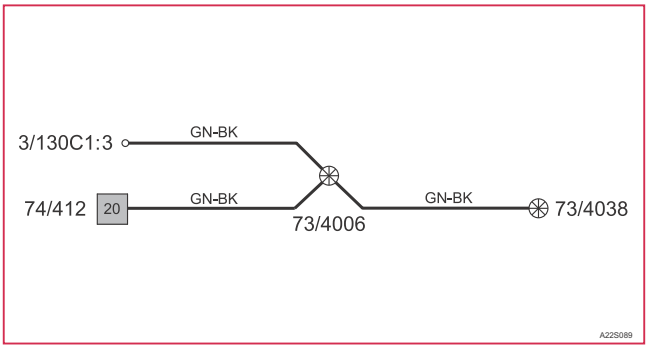

73/3203

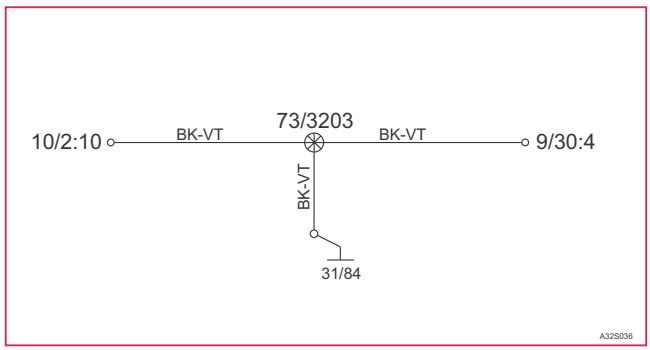

73/4010

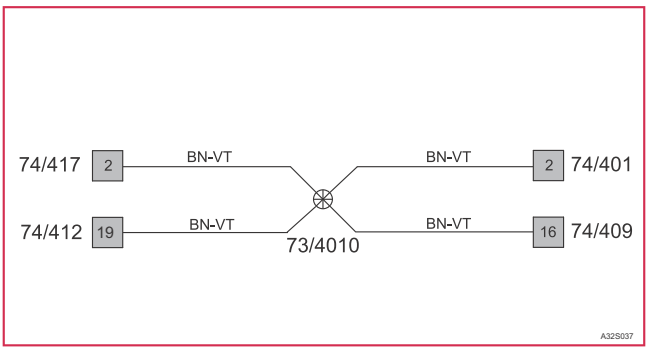

Branching points
73/4012 - 73/4028

73/4012

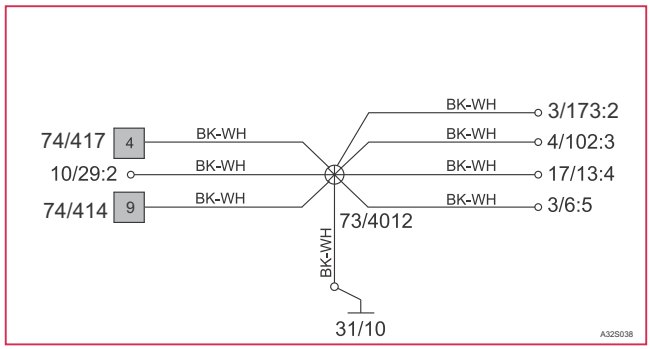

73/4013

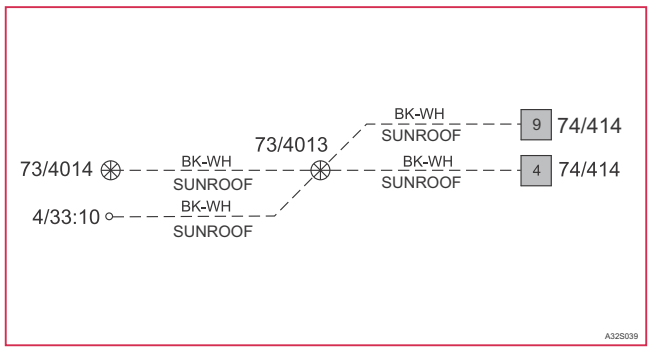

73/4014

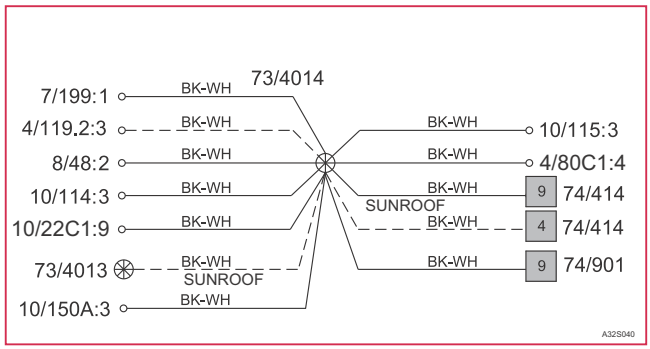

73/4016 LHD

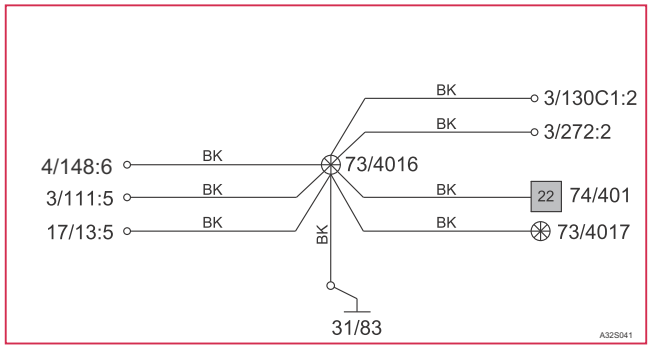

73/4016 RHD

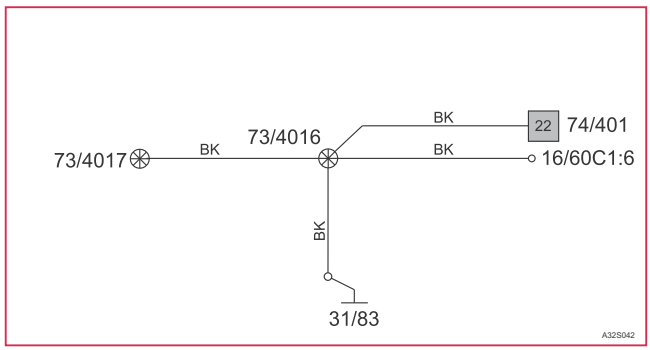

73/4017 LHD

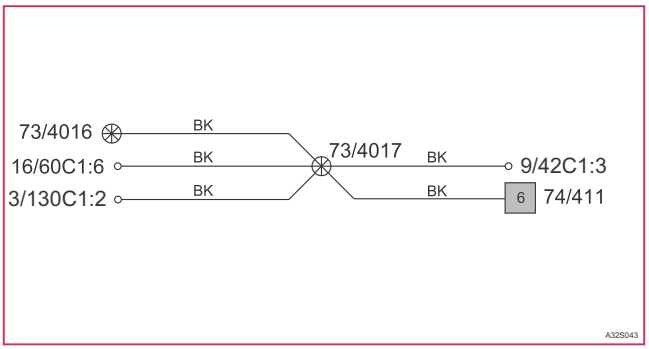

73/4017 RHD

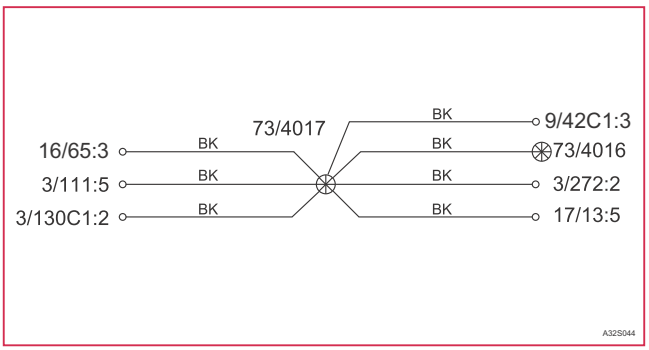

73/4019

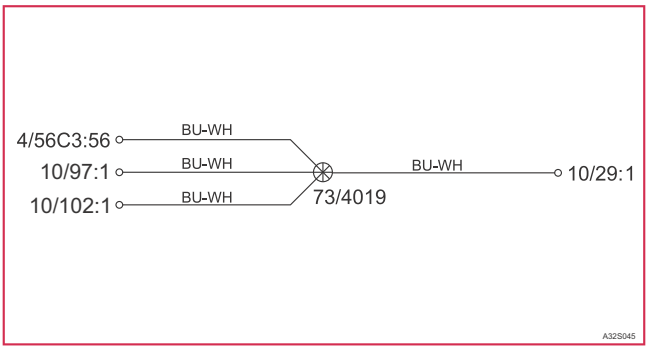

73/4020

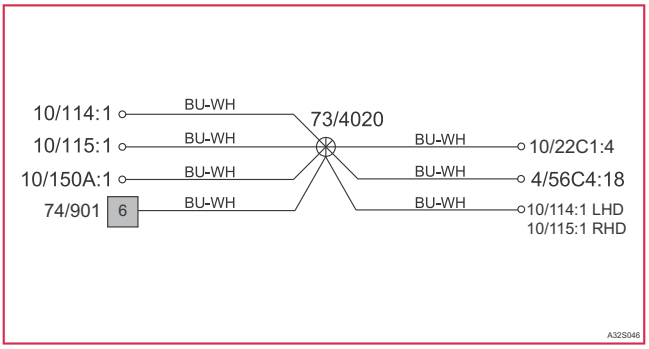

73/4028

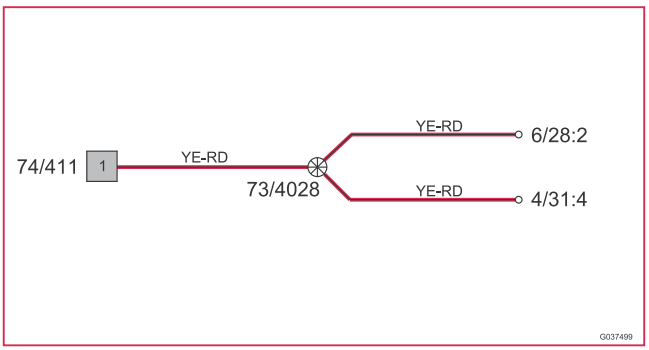

Branching points
73/4029 - 73/4049

73/4029

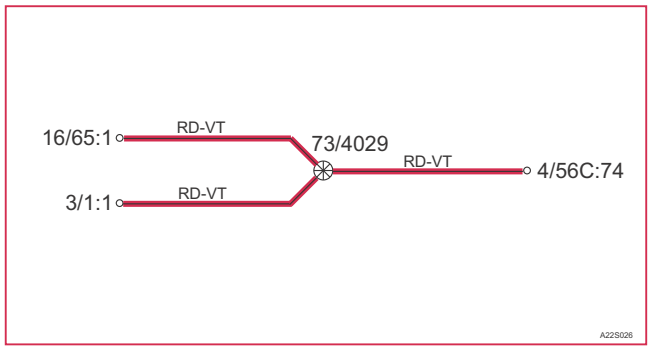

73/4038

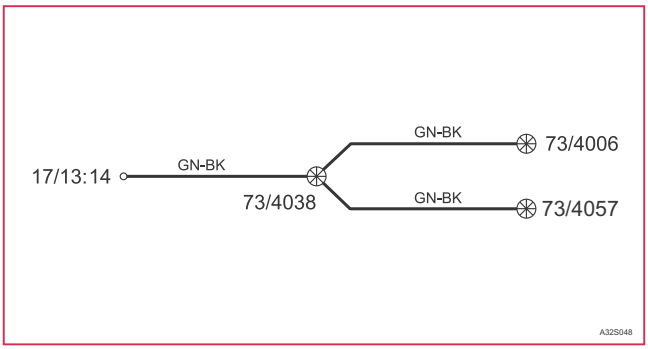

73/4033

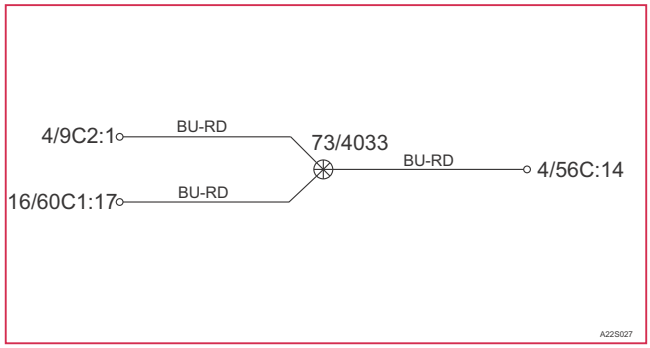

73/4046

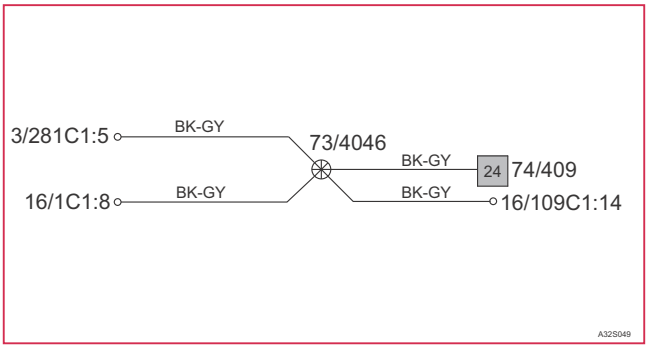

73/4034

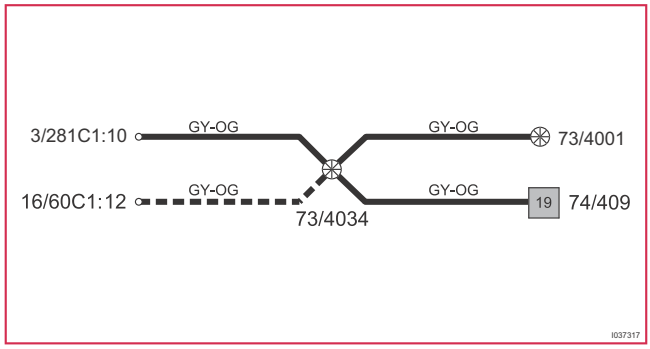

73/4047

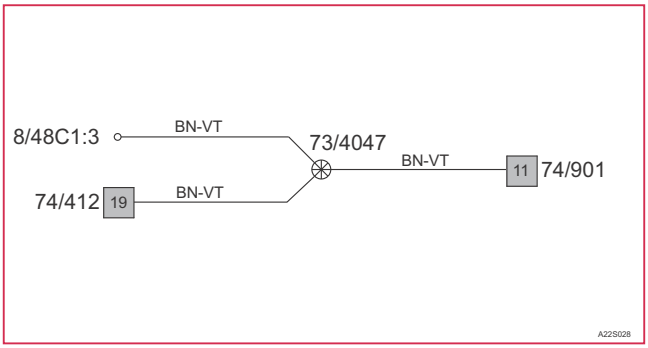

73/4035

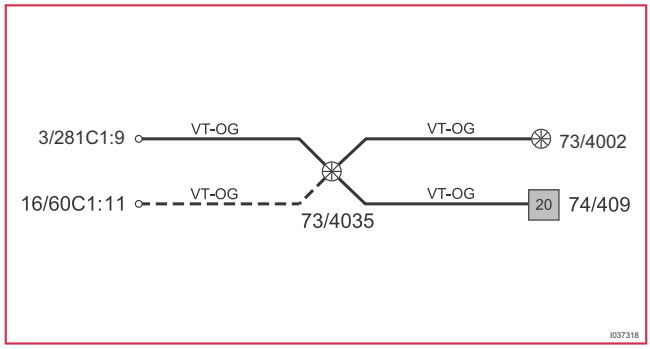

73/4048

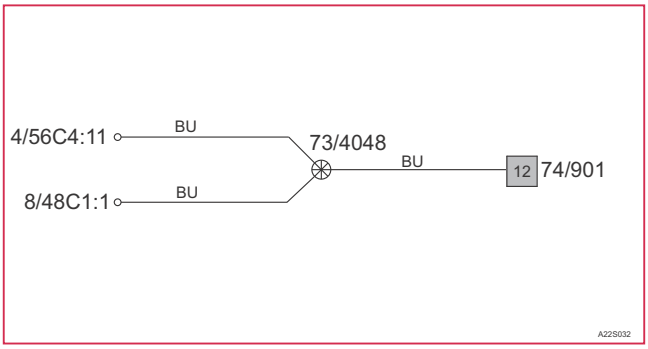

73/4037

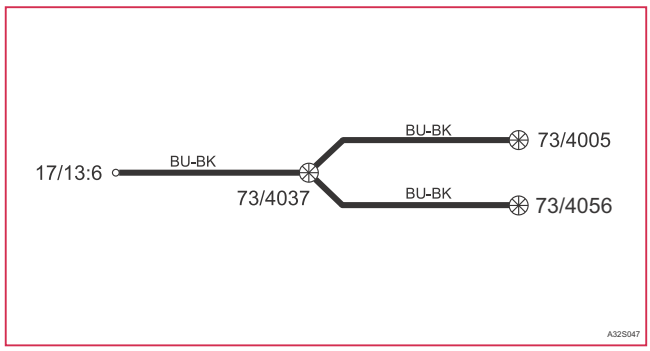

73/4049

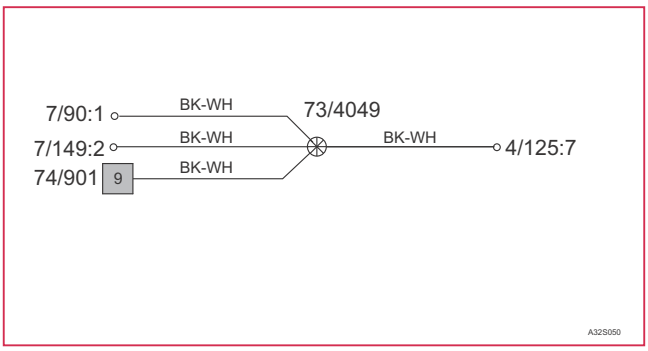

Branching points
73/4056 - 73/5003

73/4056

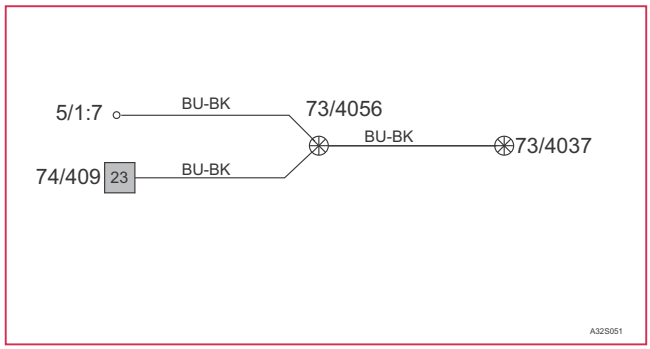

73/4057

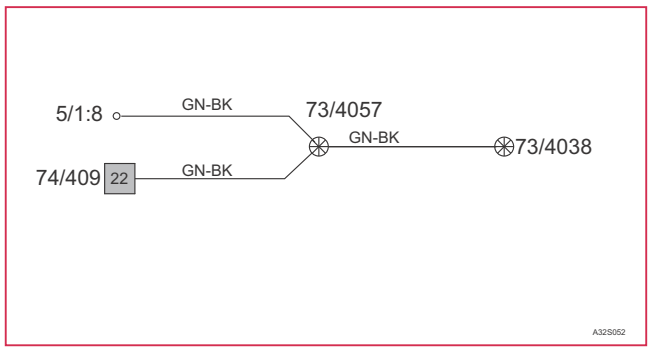

73/4059

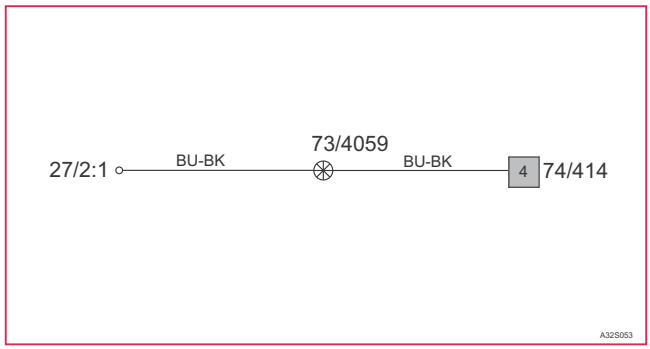

73/4060

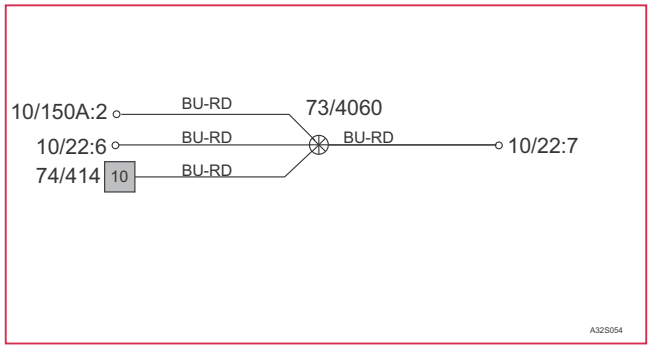

73/4061

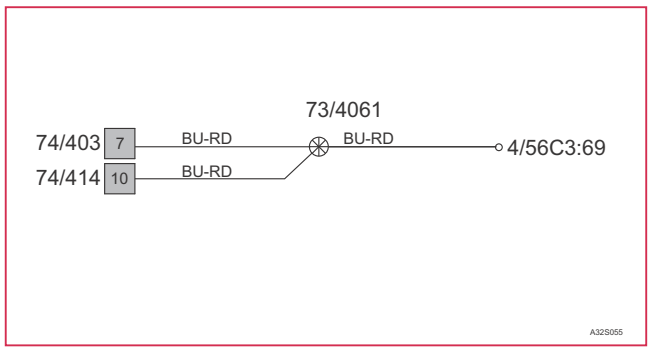

73/5001 LHD

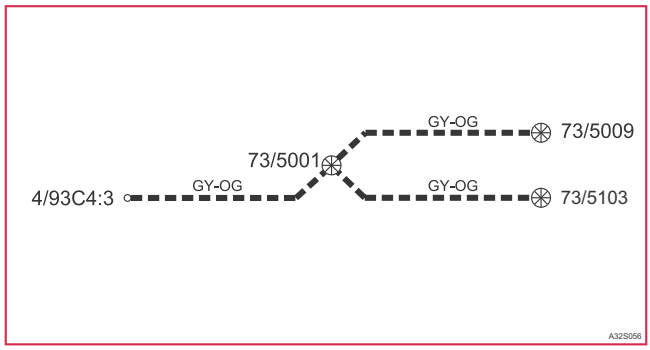

73/5001 RHD

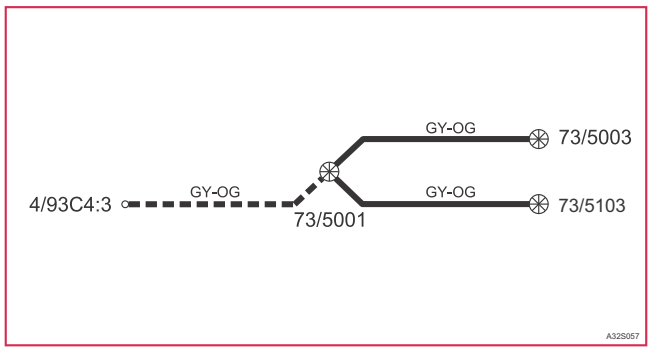

73/5002 LHD

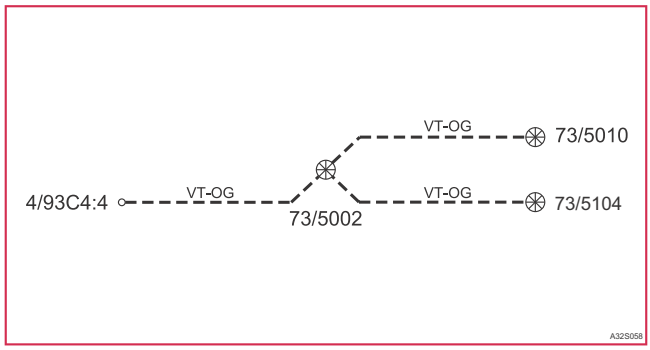

73/5002 RHD

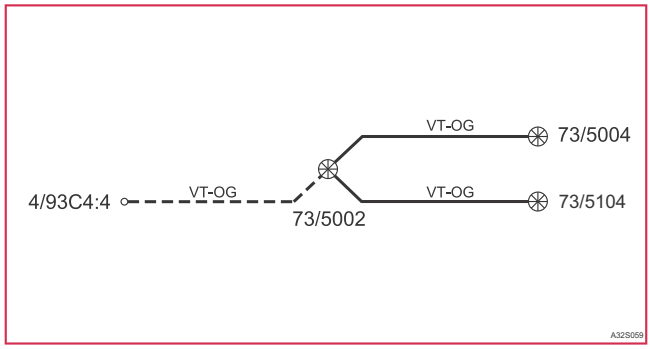

73/5003 LHD

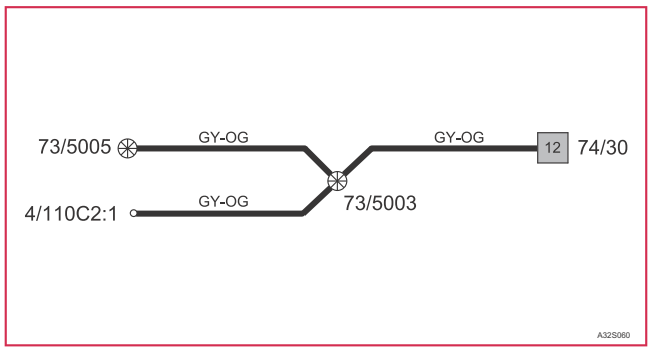

Branching points
73/5003 - 73/5010

73/5003 RHD

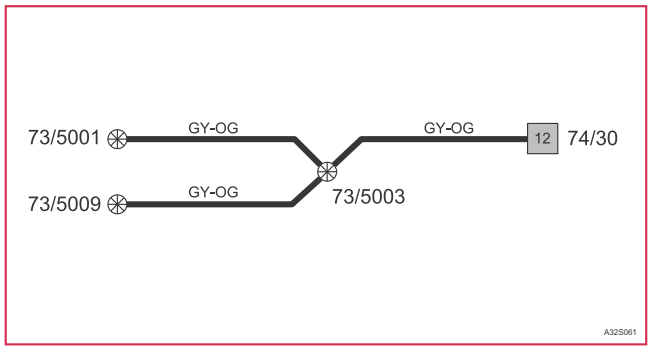

73/5006 LHD

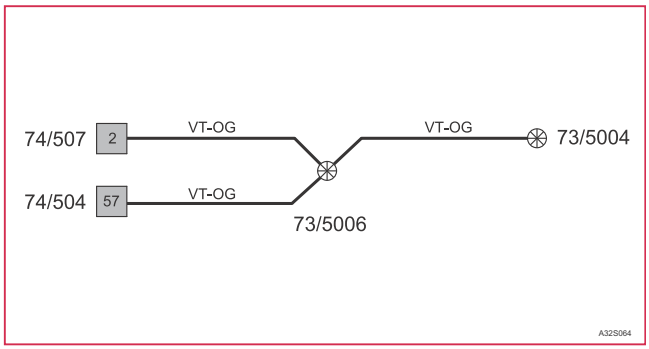

73/5004 LHD

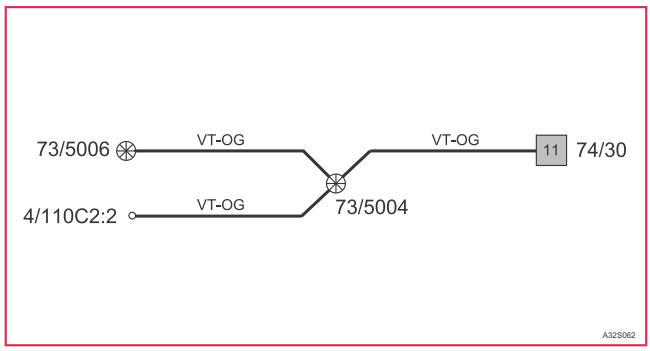

73/5006 RHD

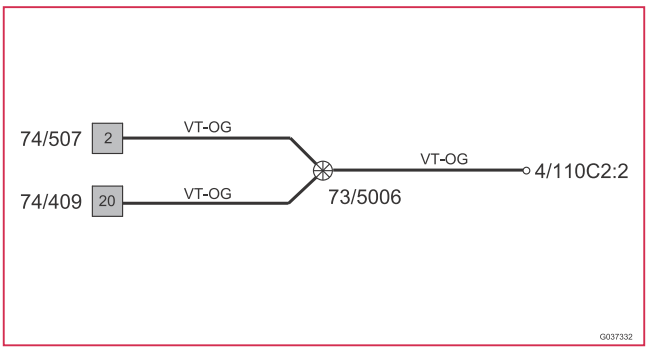

73/5004 RHD

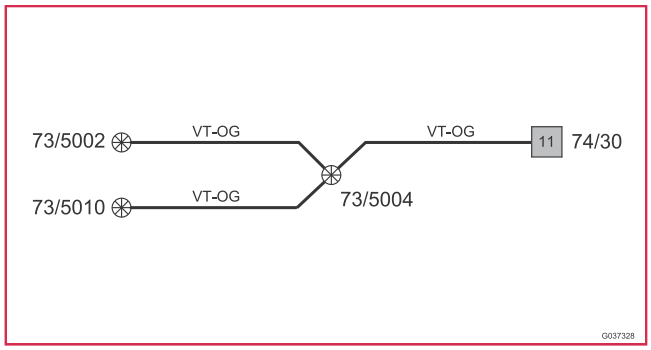

73/5009 LHD

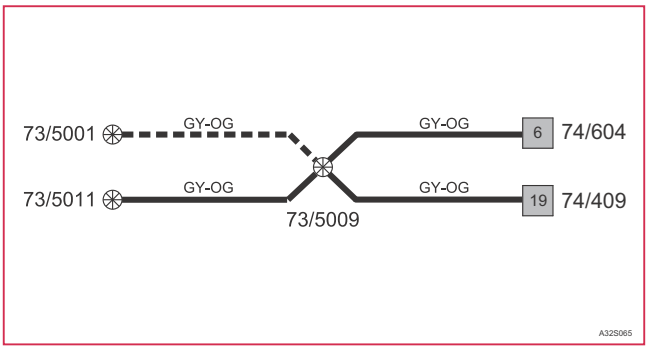

73/5005 LHD

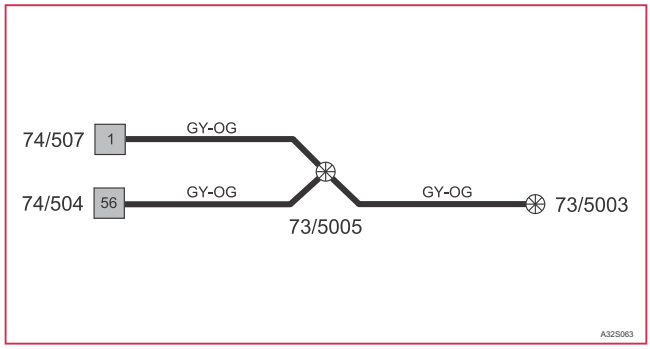

73/5009 RHD

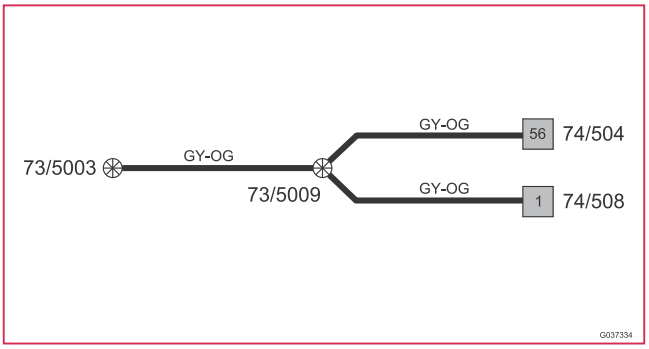

73/5005 RHD

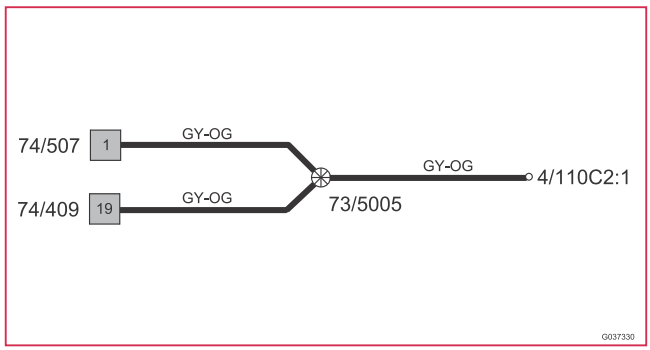

73/5010 LHD

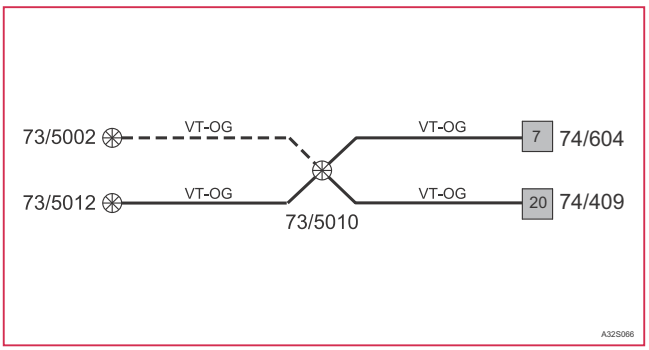

Branching points
73/5010 - 73/5026

73/5010 RHD

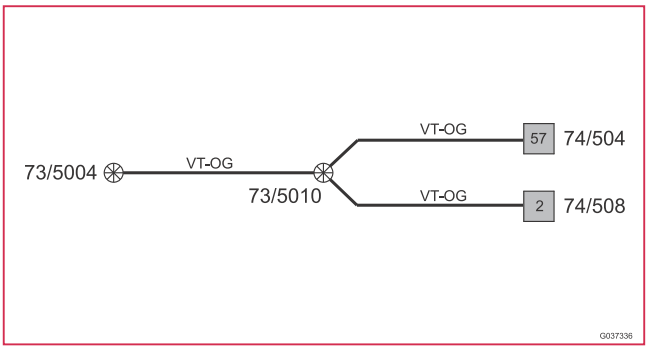

73/5011

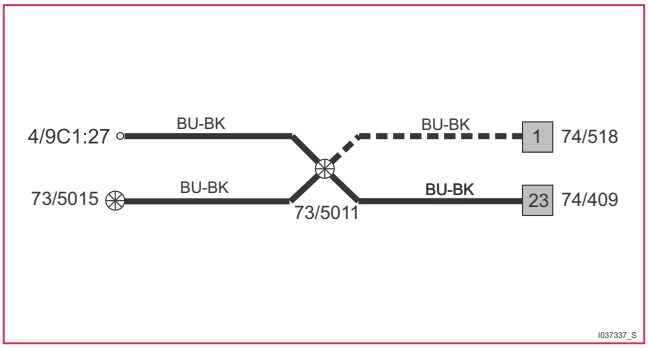

73/5012

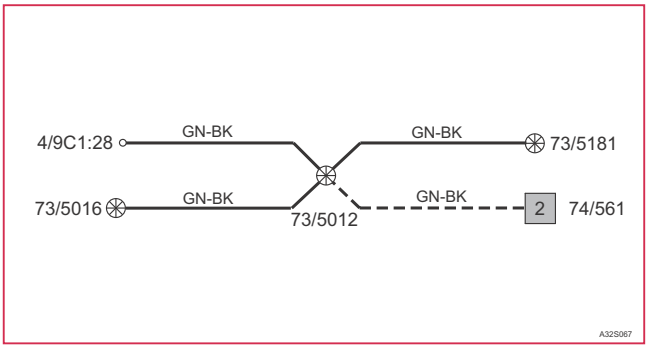

73/5015

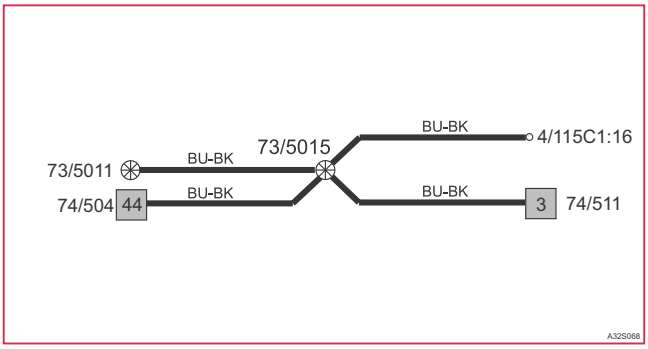

73/5016

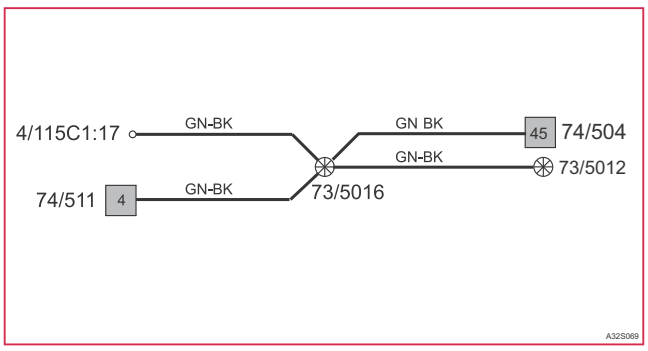

73/5019

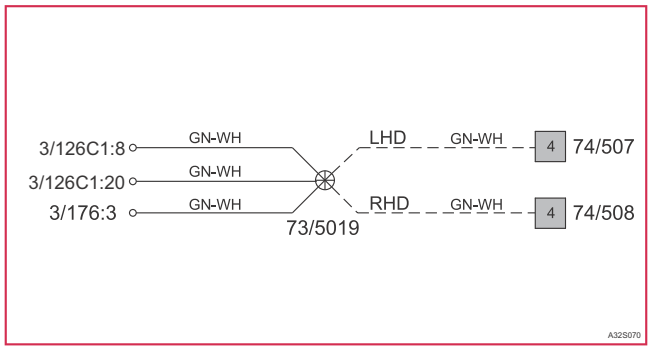

73/5021

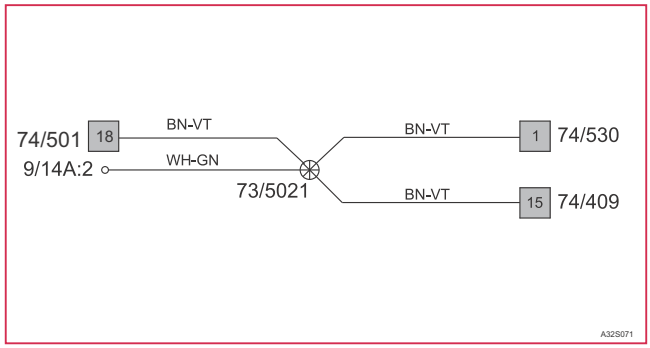

73/5023

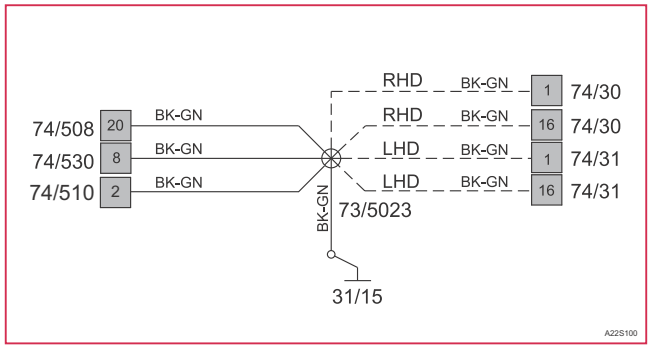

73/5025

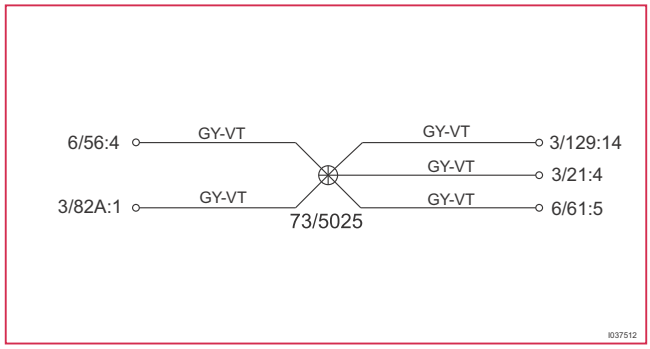

73/5026

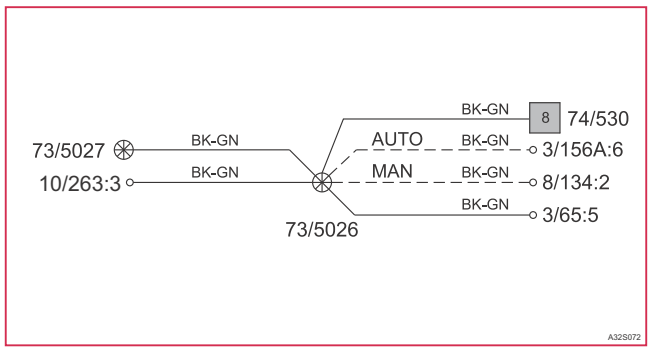

Branching points
73/5027 - 73/5050

73/5027

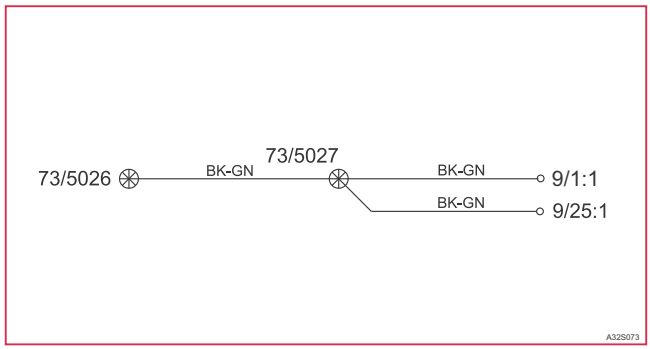

73/5035

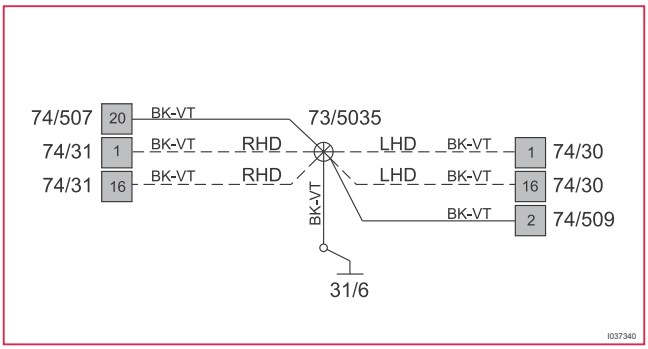

73/5029

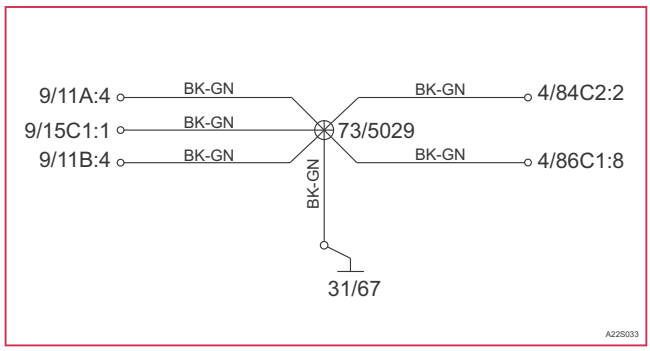

73/5036

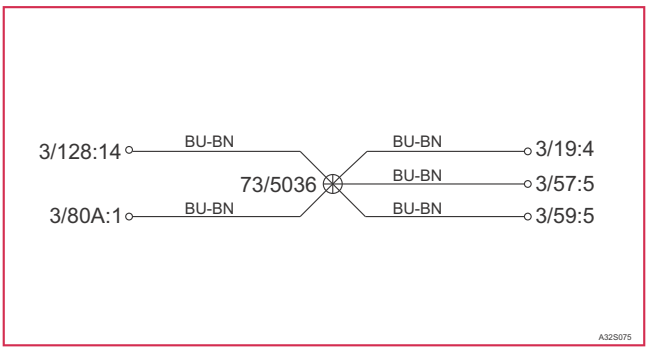

73/5030

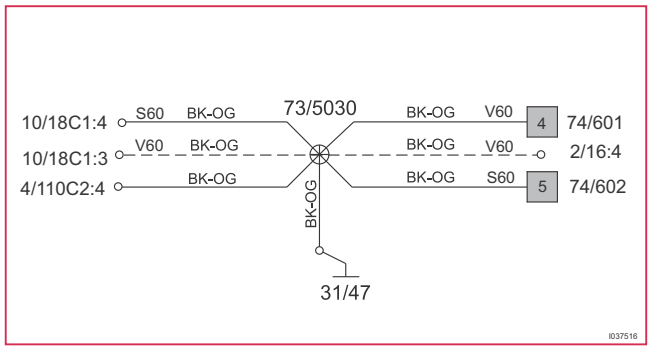

73/5042

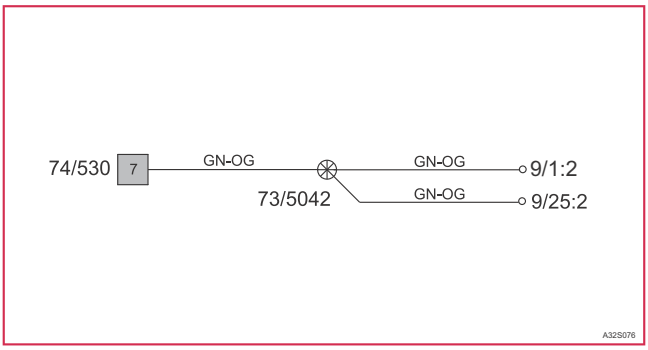

73/5032

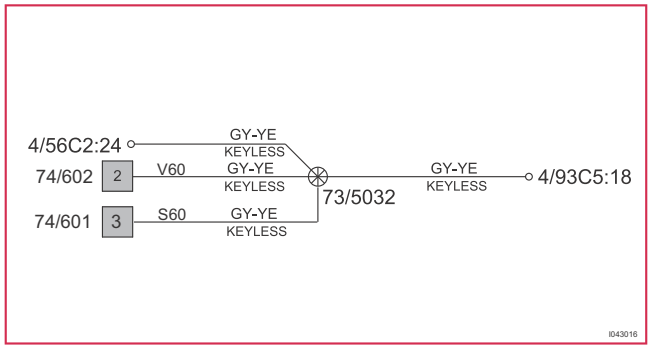

73/5044

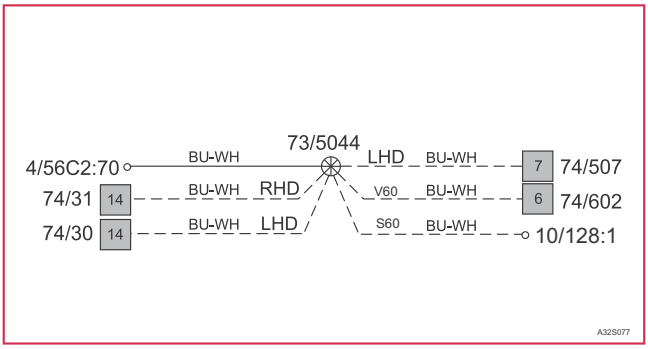

73/5033

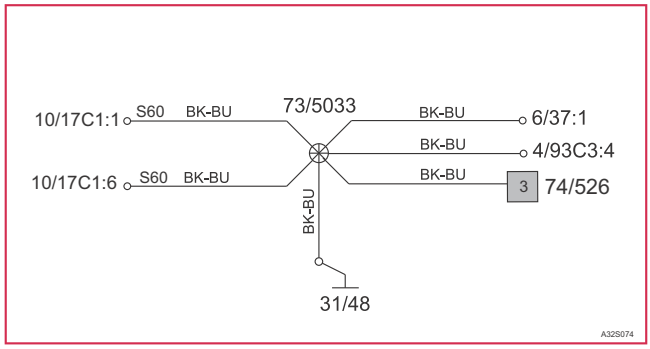

73/5050

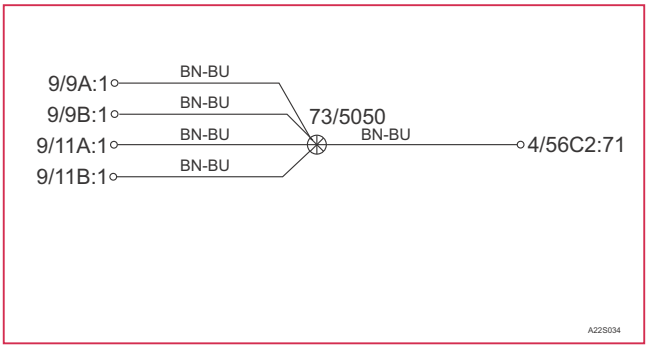

Branching points
73/5051 - 73/5070

73/5051

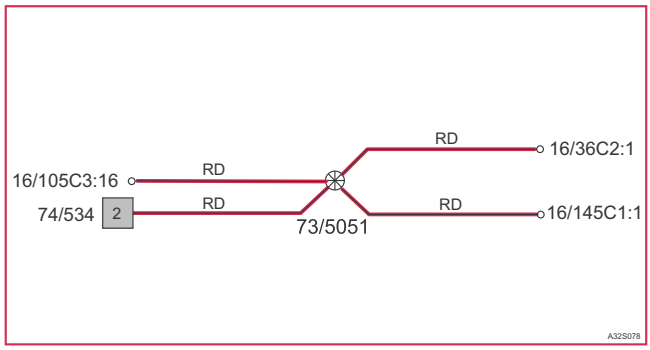

73/5062

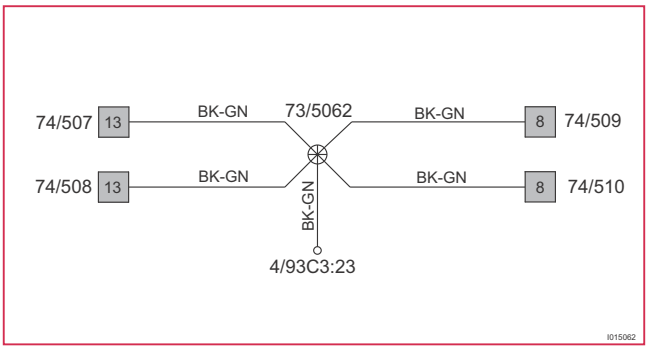

73/5052

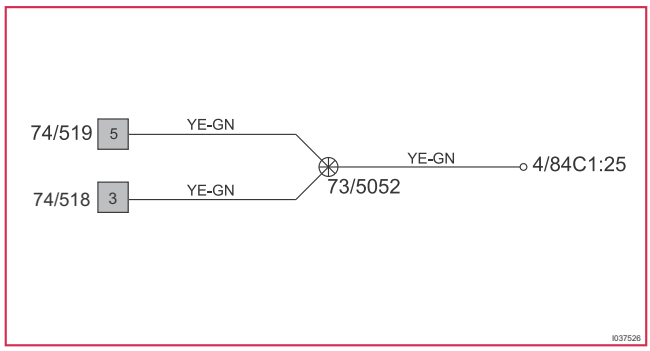

73/5064

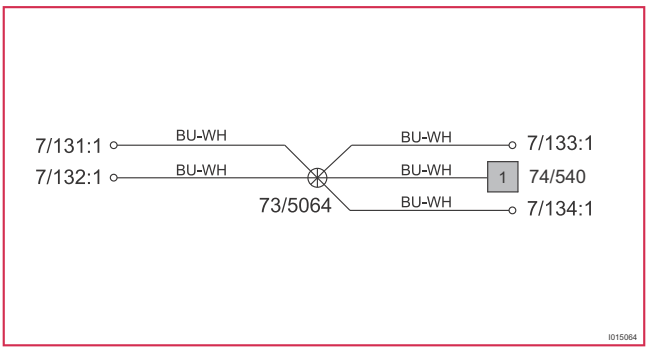

73/5053

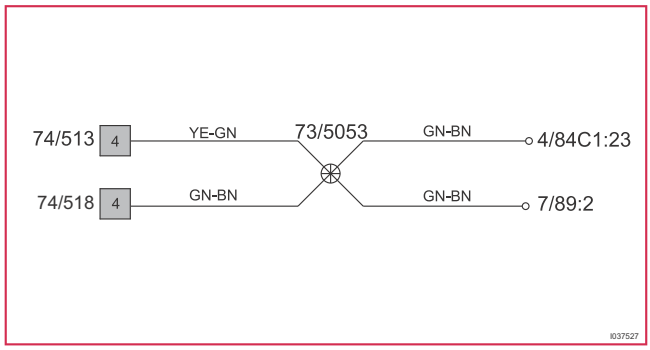

73/5066

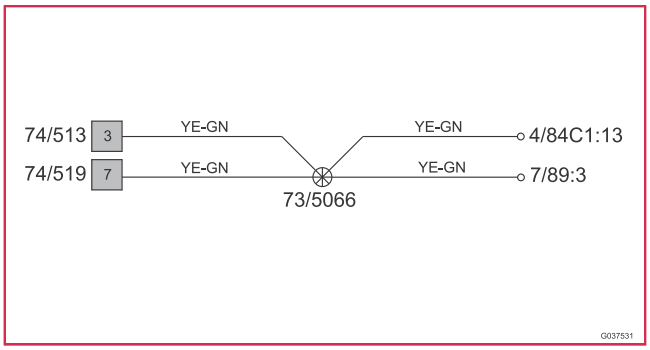

73/5054

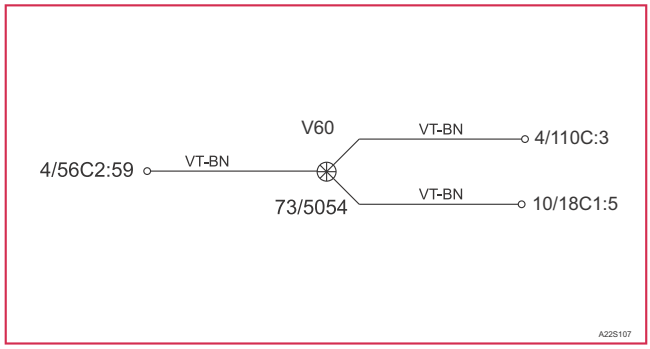

73/5067

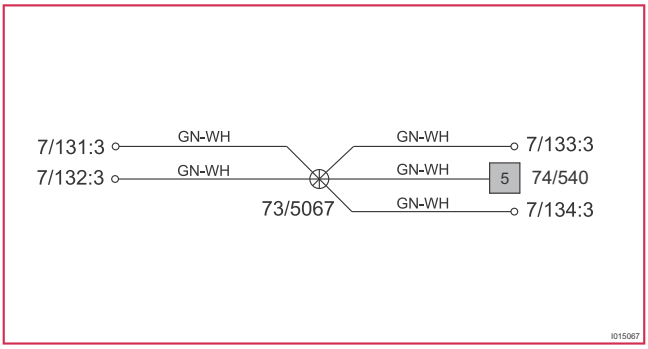

73/5061

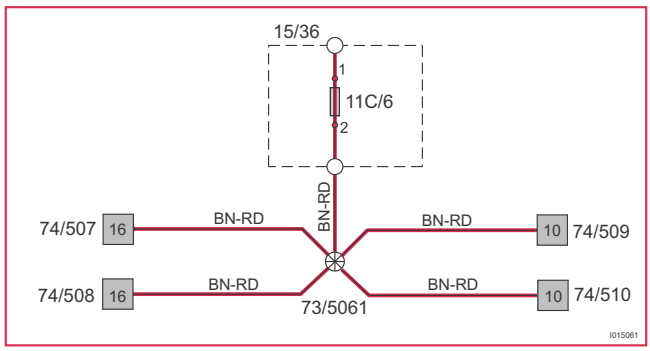

73/5070

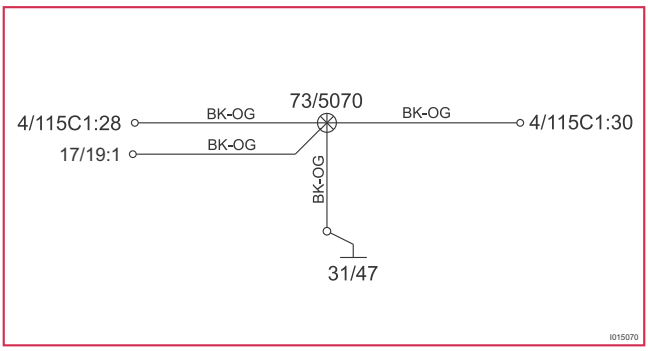

Branching points
73/5071 - 73/5096

73/5071 LHD

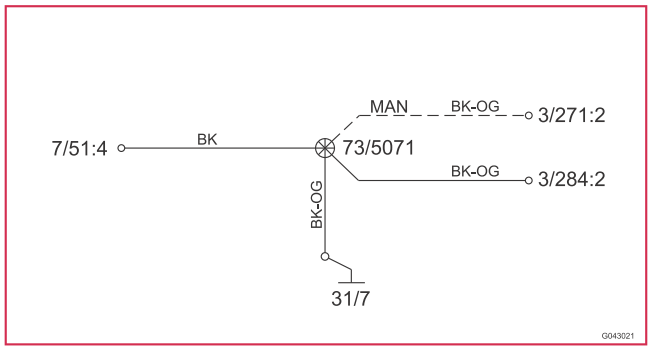

73/5072 RHD

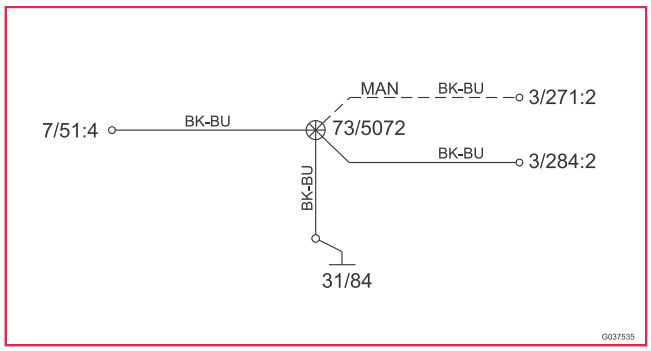

73/5075

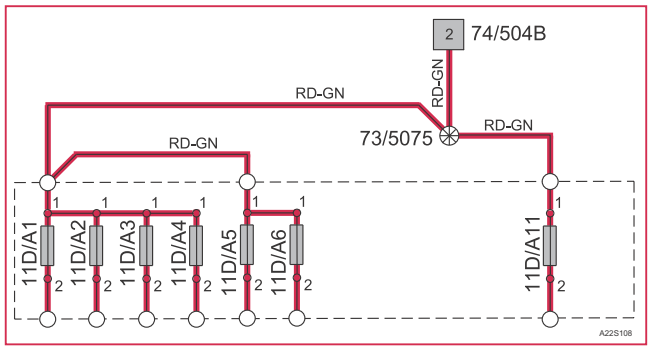

73/5076

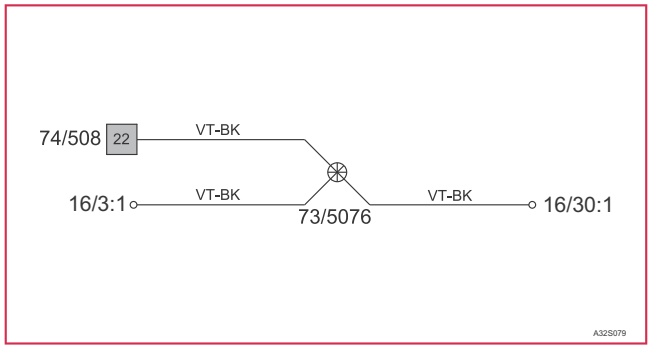

73/5077

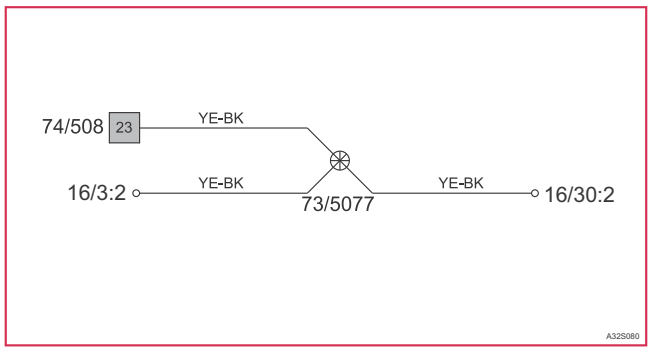

73/5078

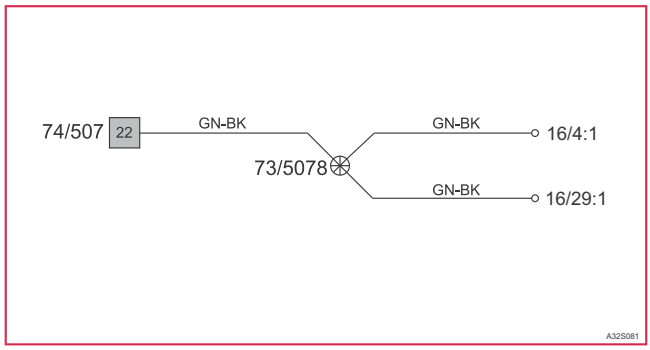

73/5079

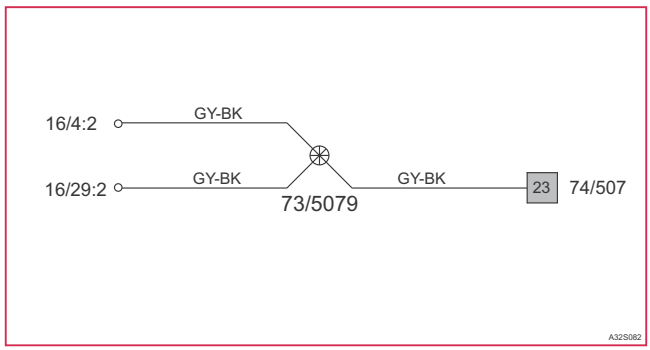

73/5083

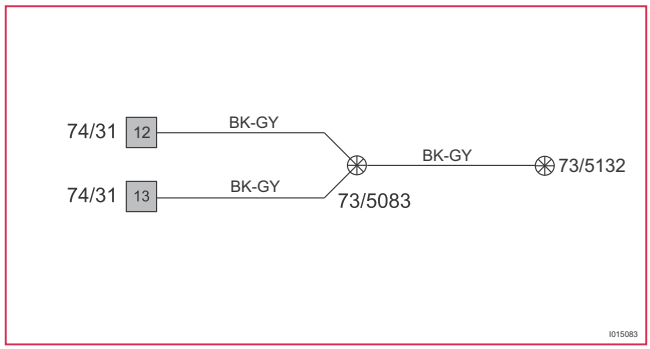

73/5091

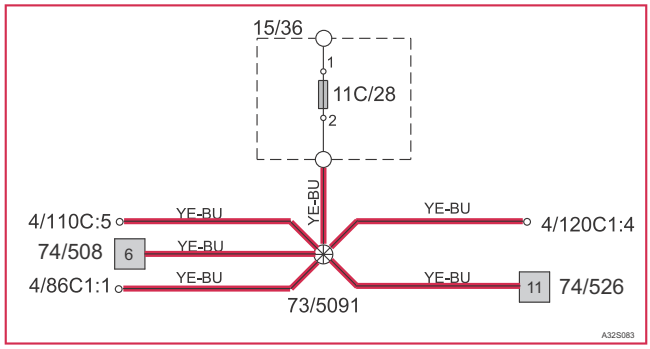

73/5096 S60

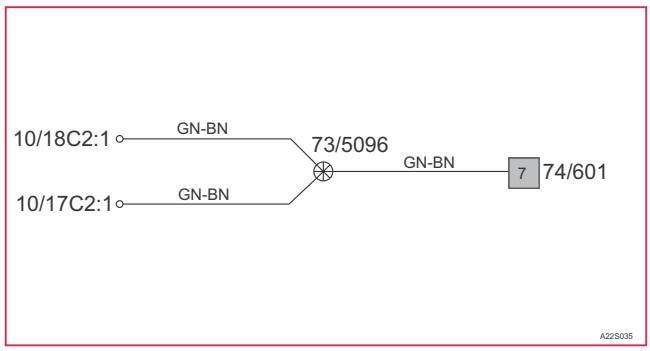

Branching points
73/5097 - 73/5118

73/5097

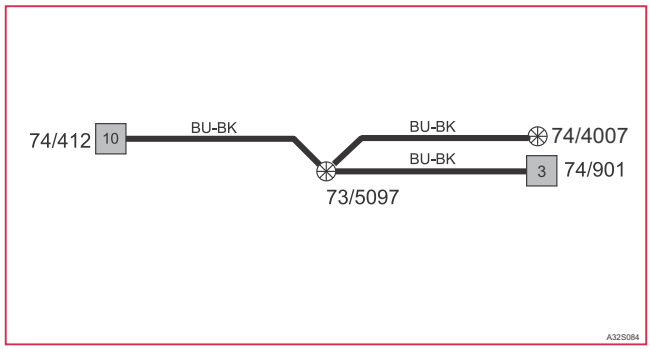

73/5113

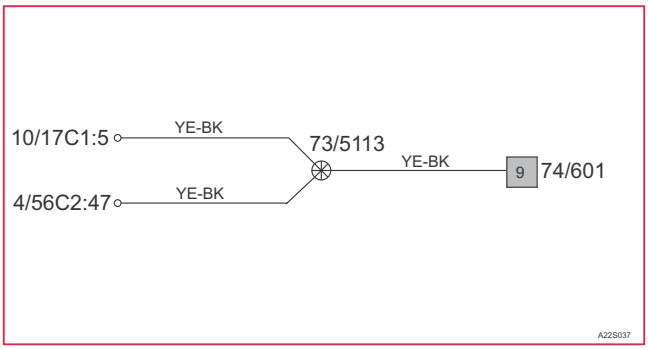

73/5098

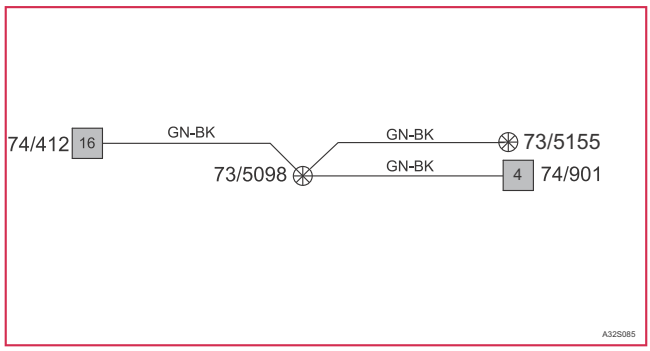

73/5114

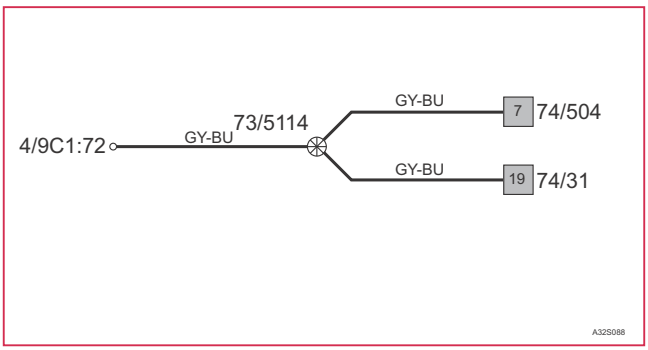

73/5103

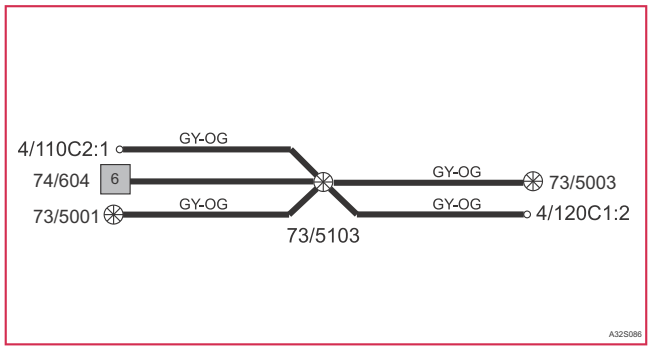

73/5115

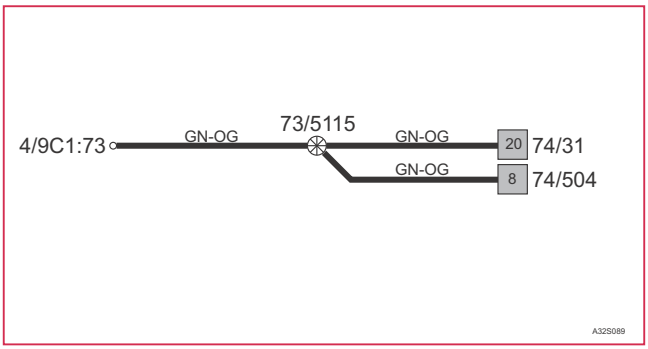

73/5104

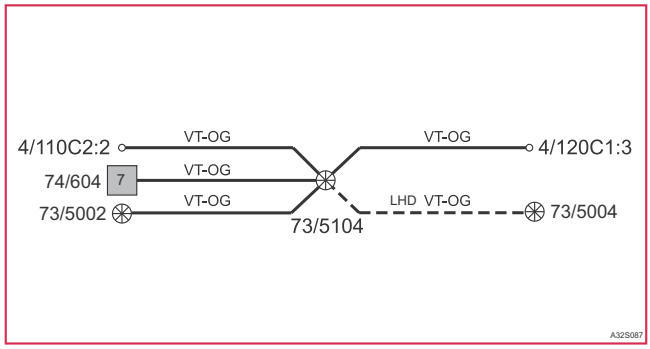

73/5117

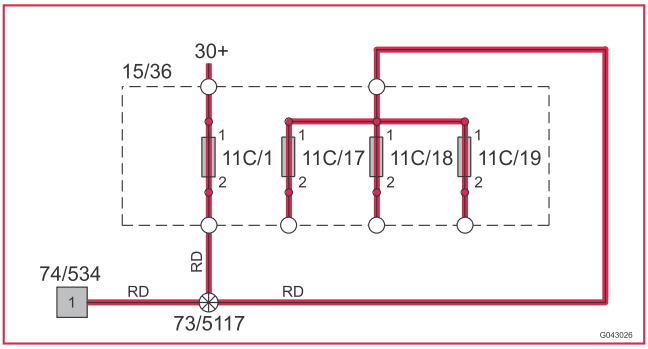

73/5112

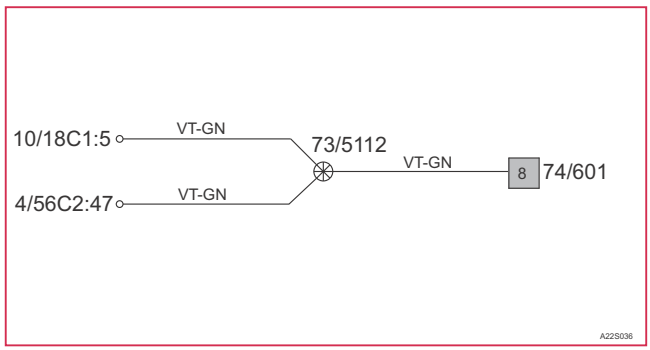

73/5118

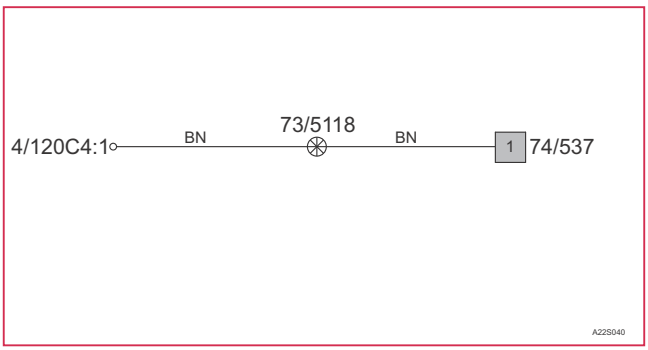

Branching points
73/5119 - 73/5135

73/5119

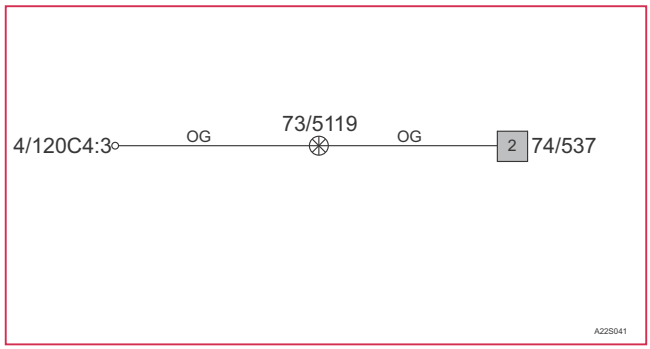

73/5120

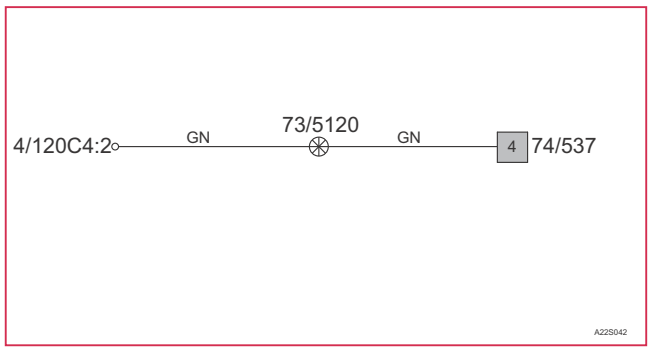

73/5121

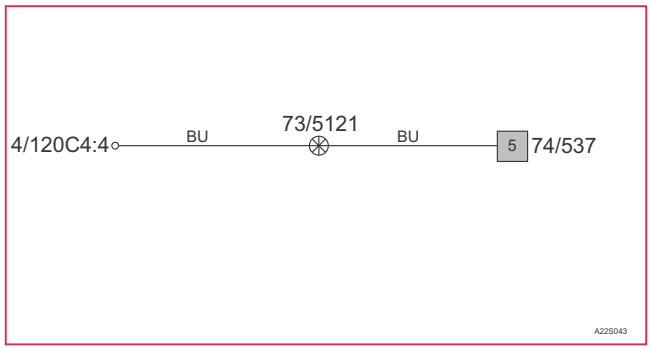

73/5123

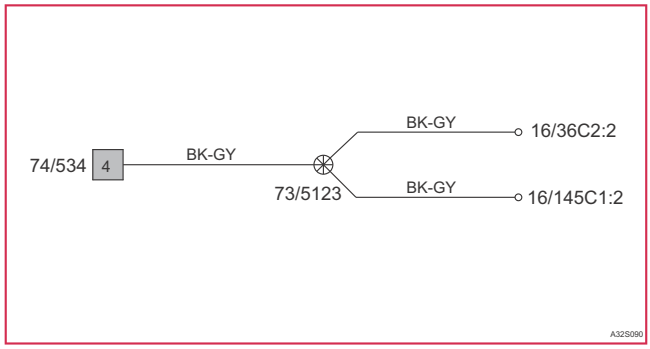

73/5129

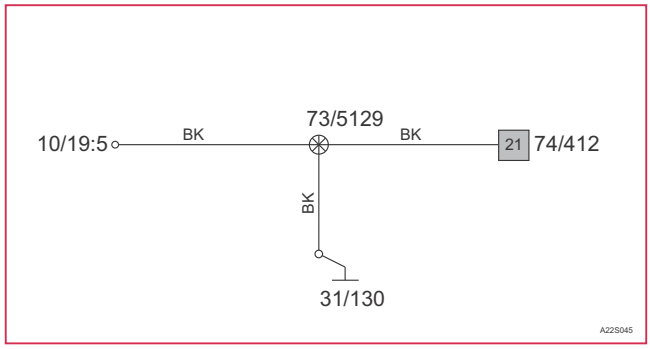

73/5131

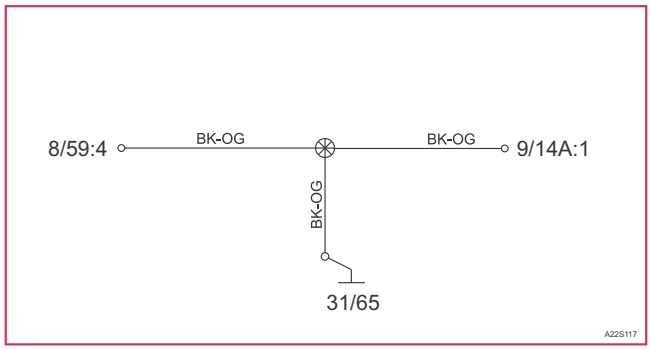

73/5132

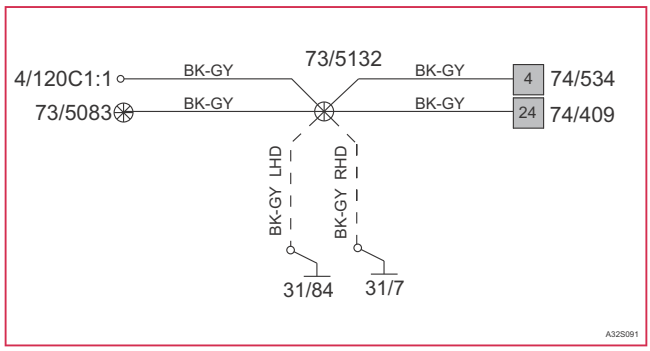

73/5133

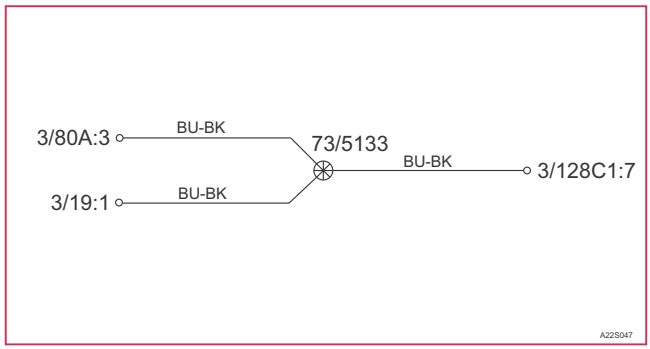

73/5134

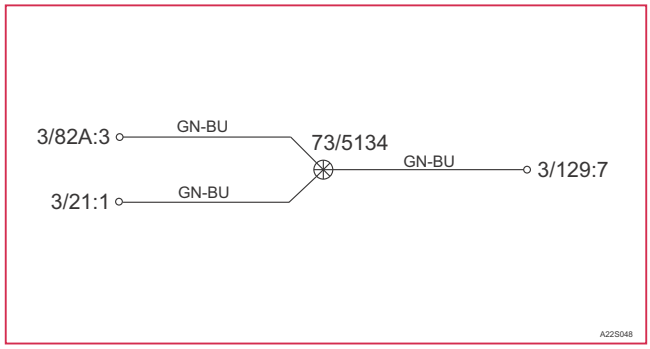

73/5135

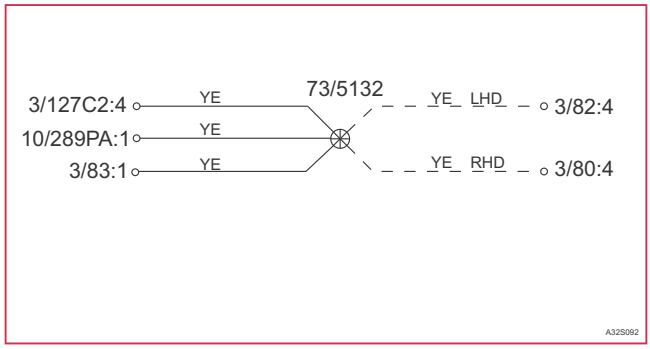

Branching points
73/5136 - 73/5176

73/5136 V60

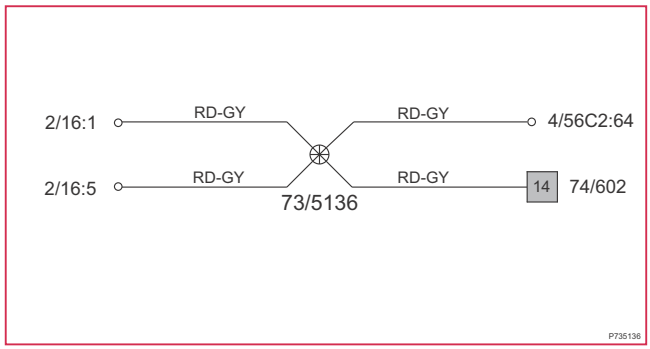

73/5172

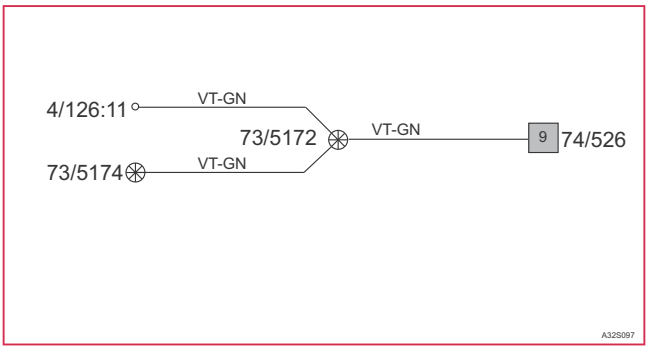

73/5154

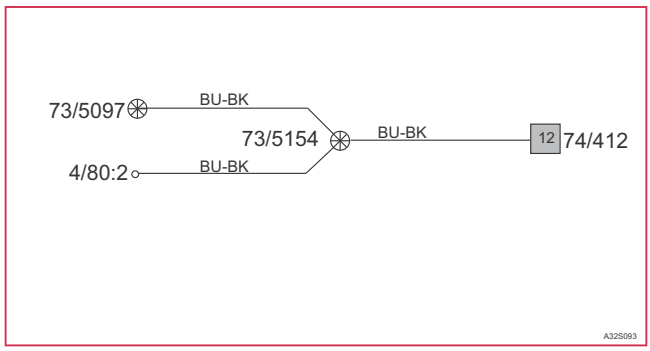

73/5173

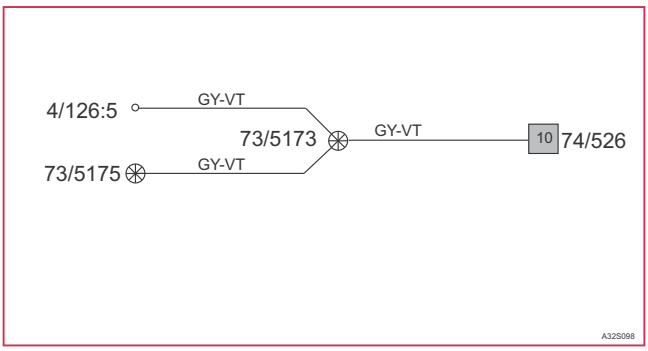

73/5155

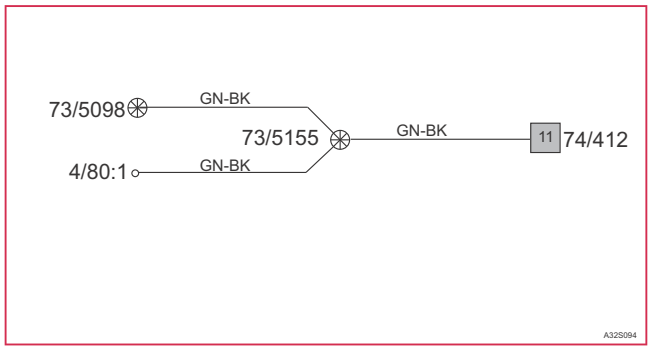

73/5174

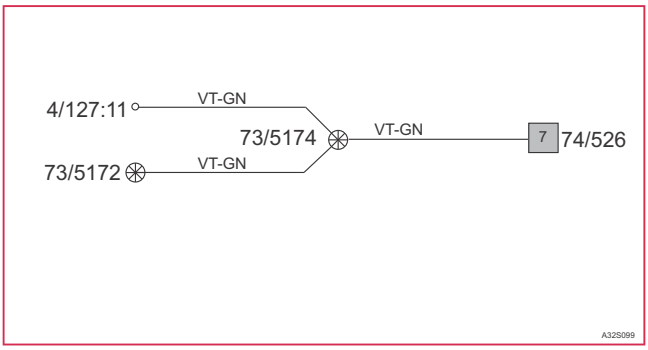

73/5170

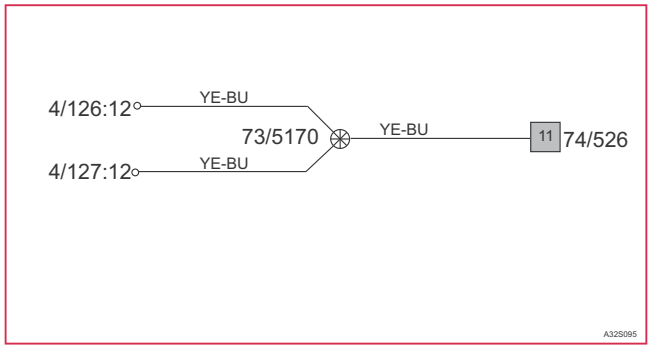

73/5175

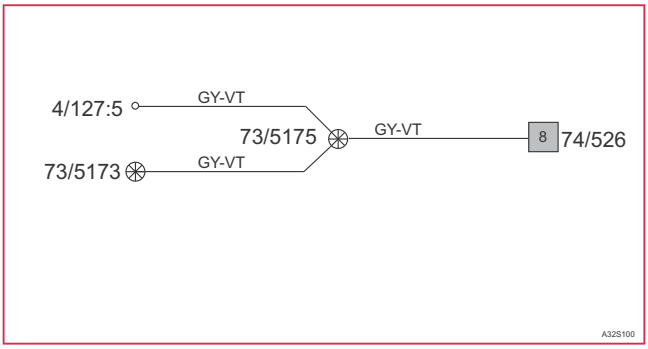

73/5171

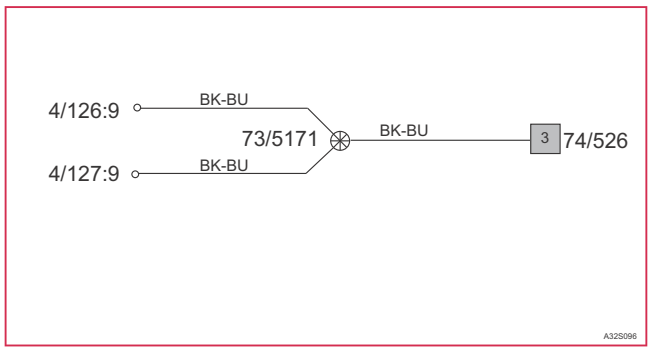

73/5176

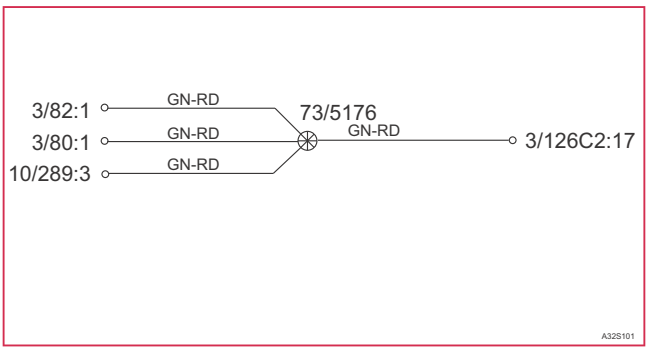

Branching points
73/5177 - 73/6001

73/5177

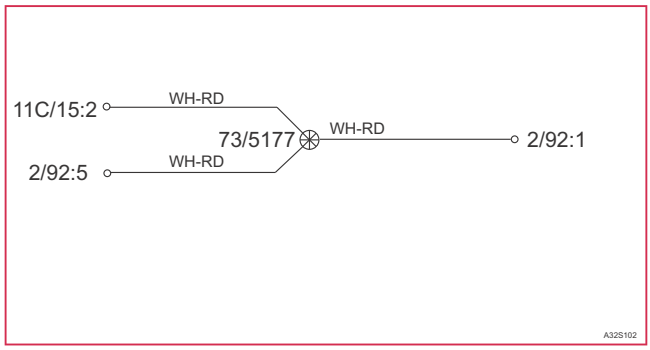

73/5178

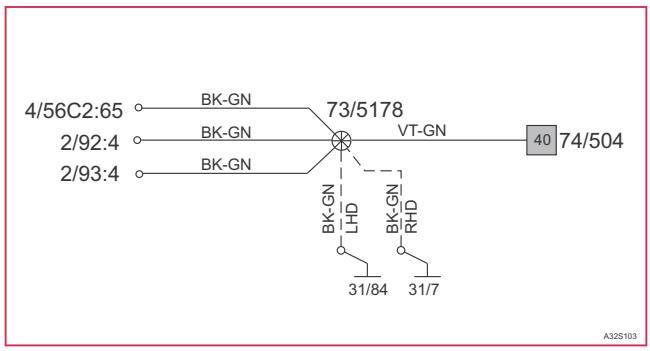

73/5180

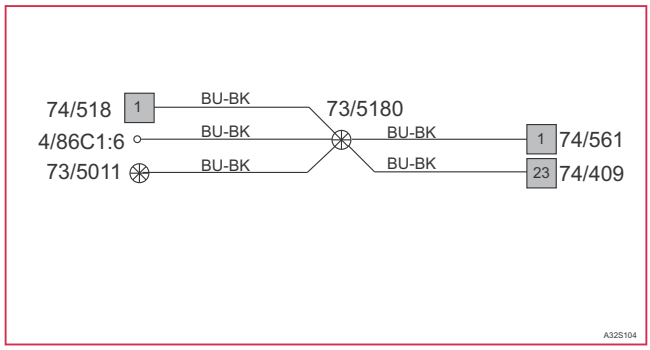

73/5181

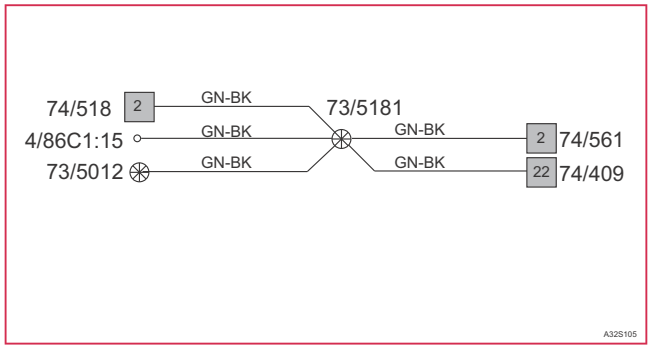

73/5189

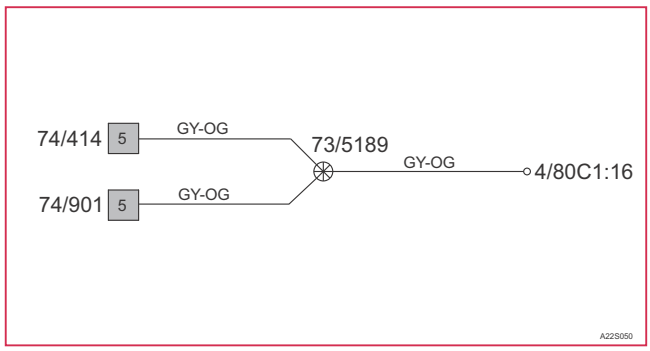

73/5200

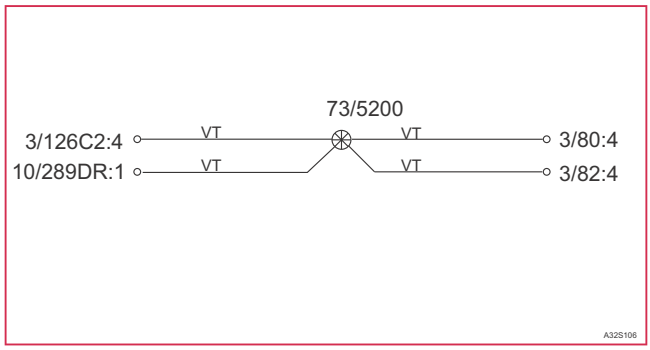

73/5213 V60

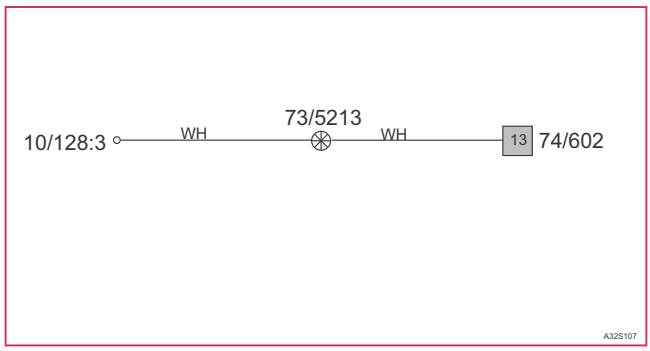

73/6001 S60

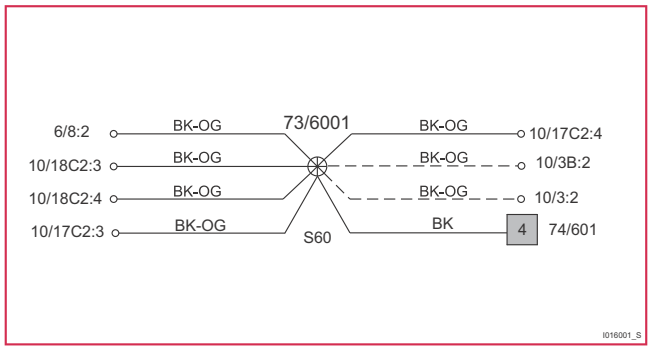

73/6001 V60

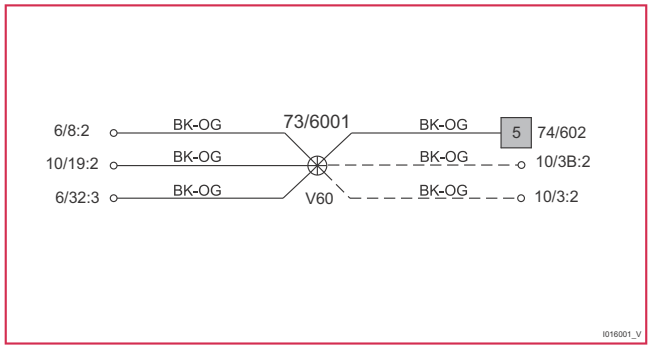

Cable harness routing in vehicle
Harness engine 4-Cyl. Turbo

Cable harness routing in vehicle
Harness engine, 6-Cyl. Turbo

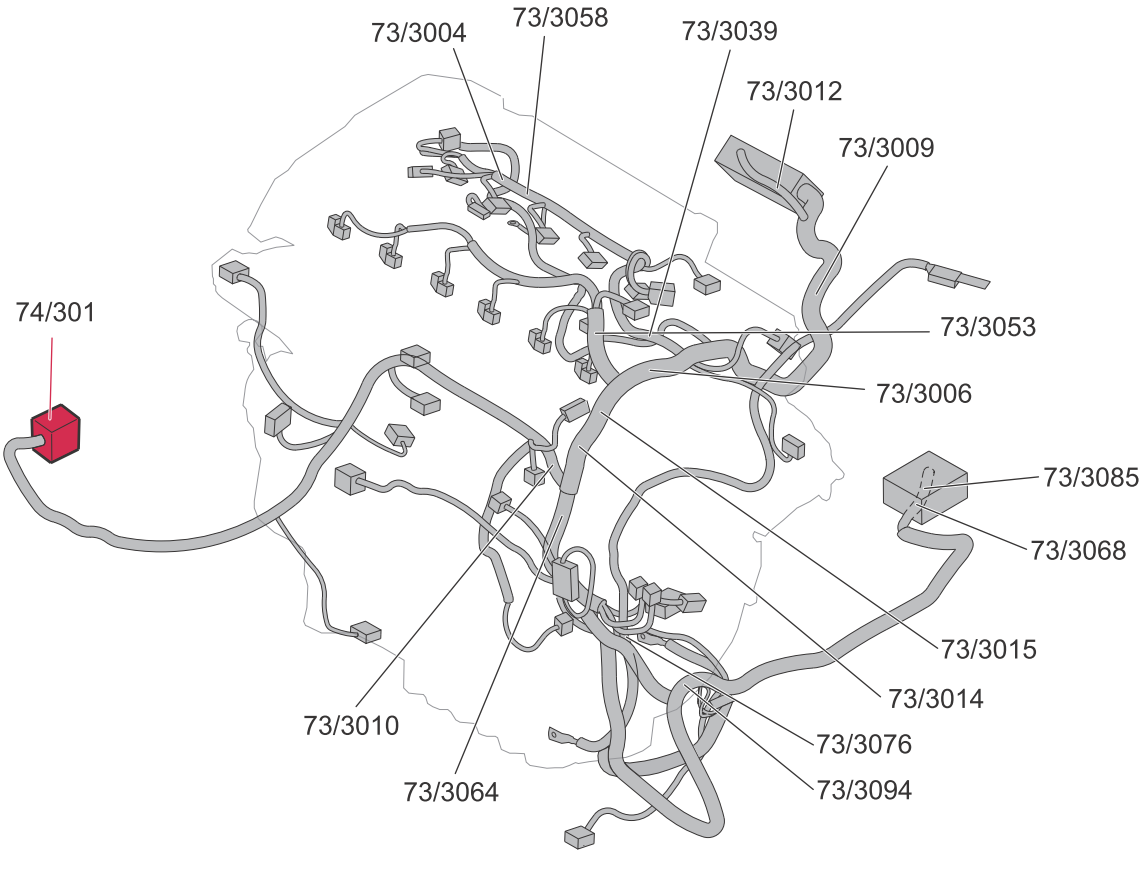

Cable harness routing in vehicle
Harness engine, 2.0L Diesel

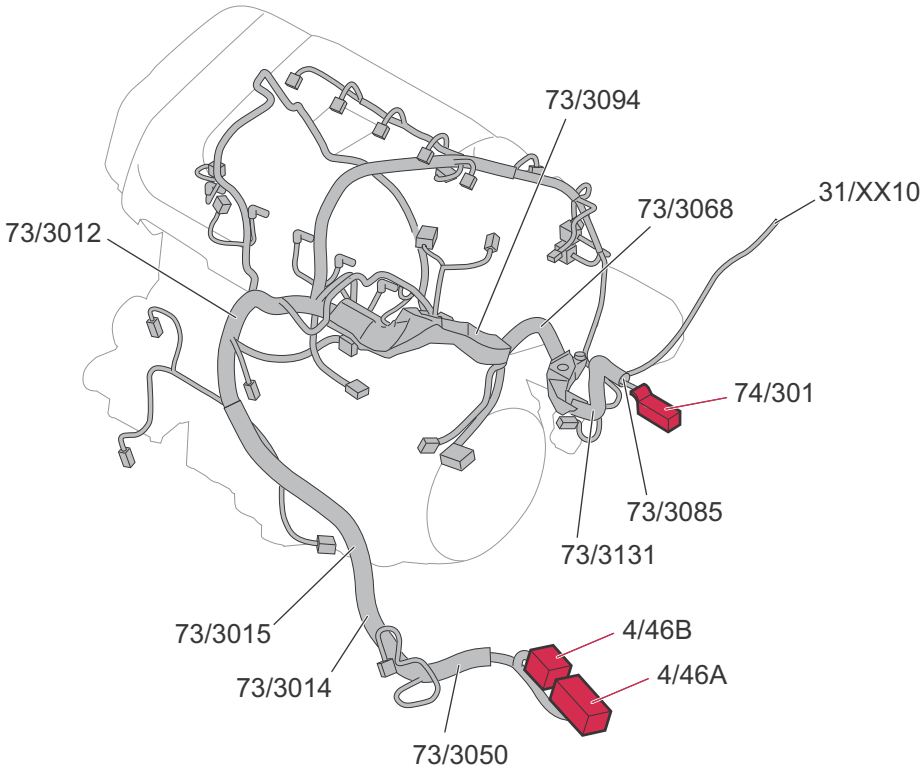

I05209

Cable harness routing in vehicle
Harness engine, 2.4L Diesel

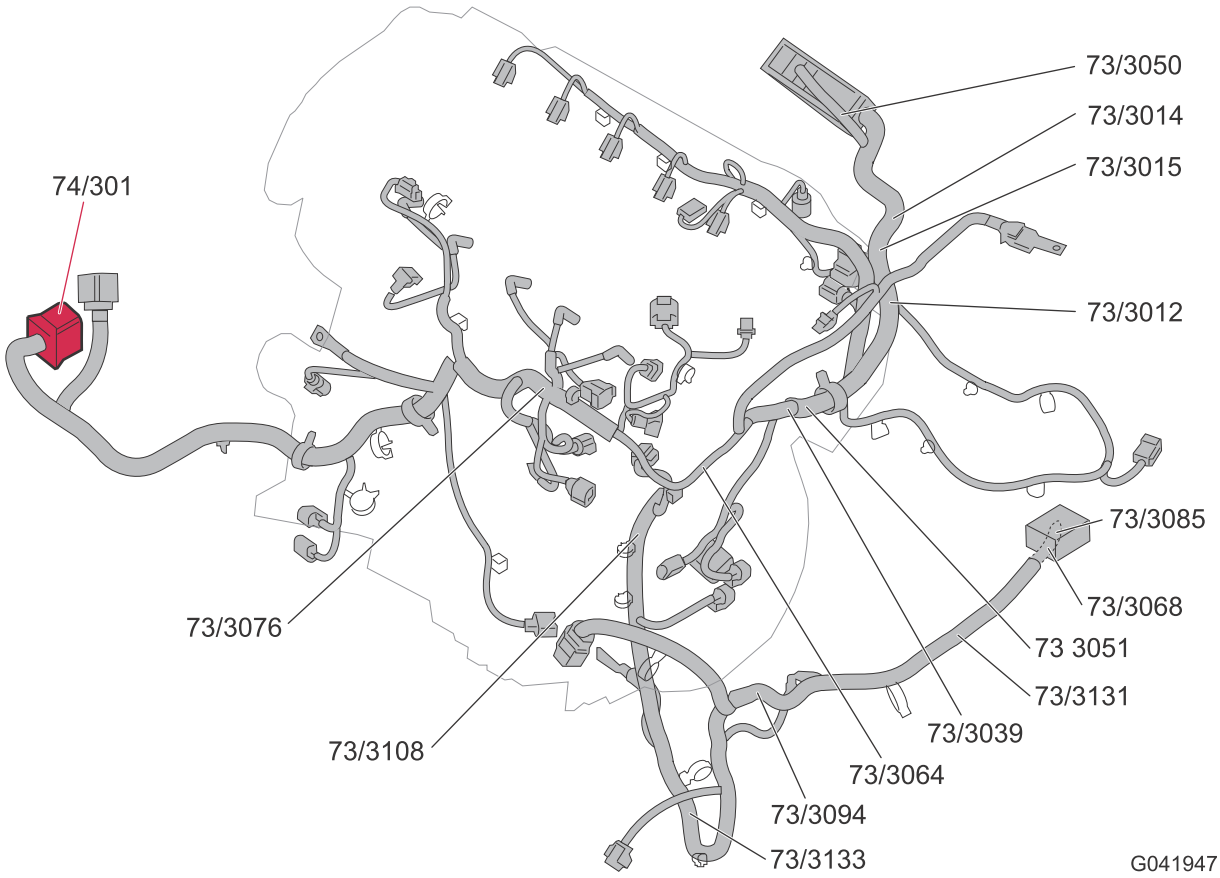

G041947

Cable harness routing in vehicle
Engine compartment harness LHD

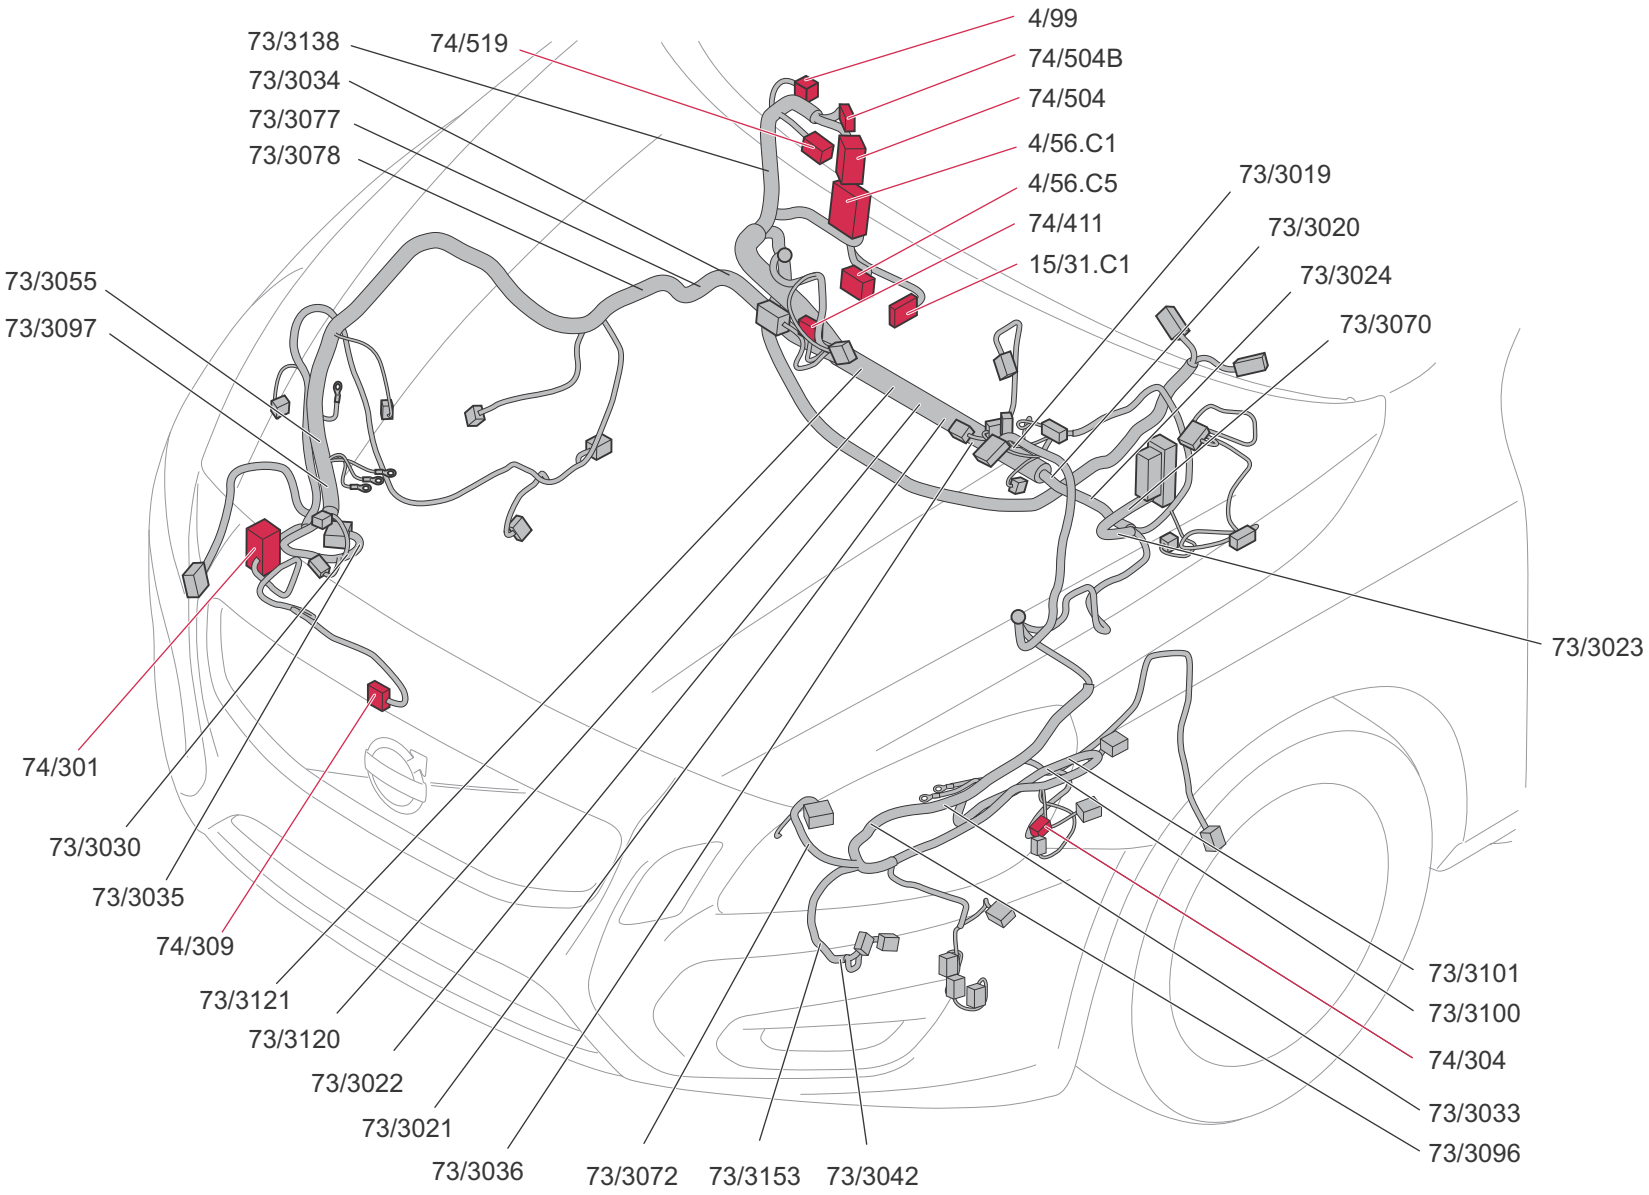

Cable harness routing in vehicle
Engine compartment harness RHD

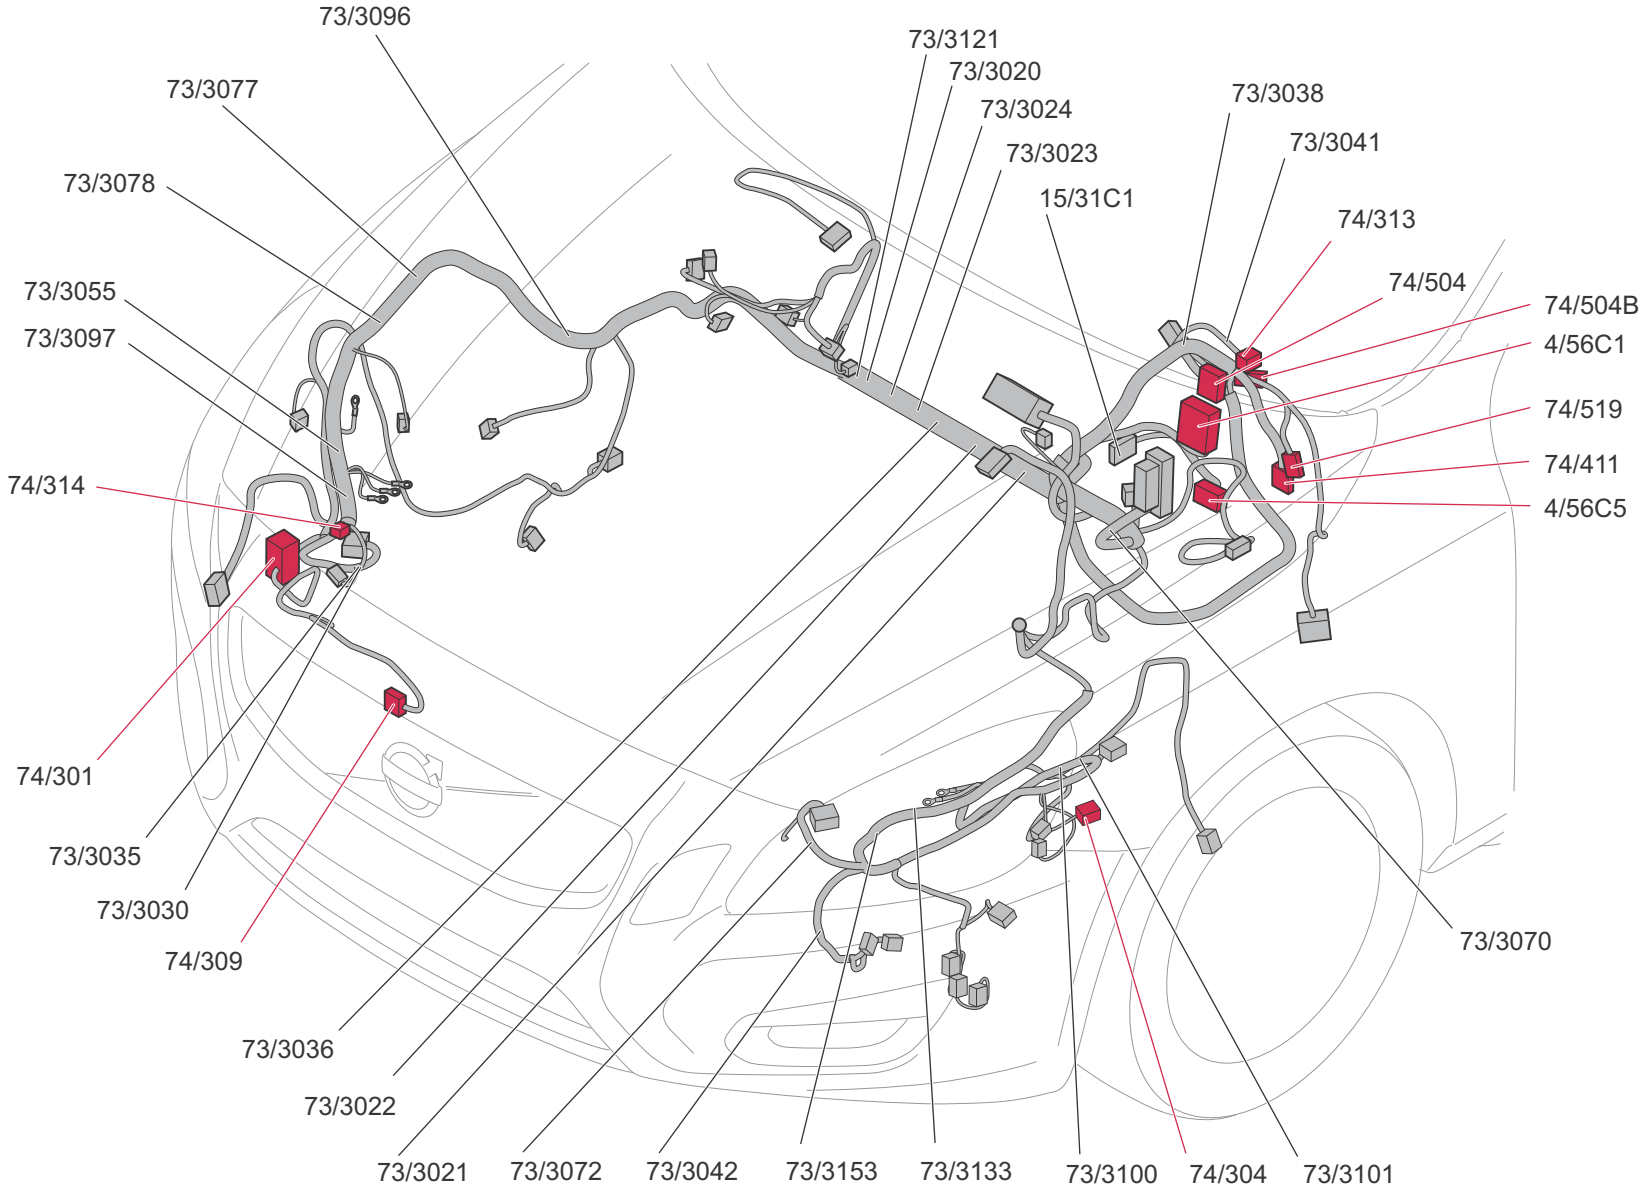

I01426

Cable harness routing in vehicle
Harness dashboard, LHD

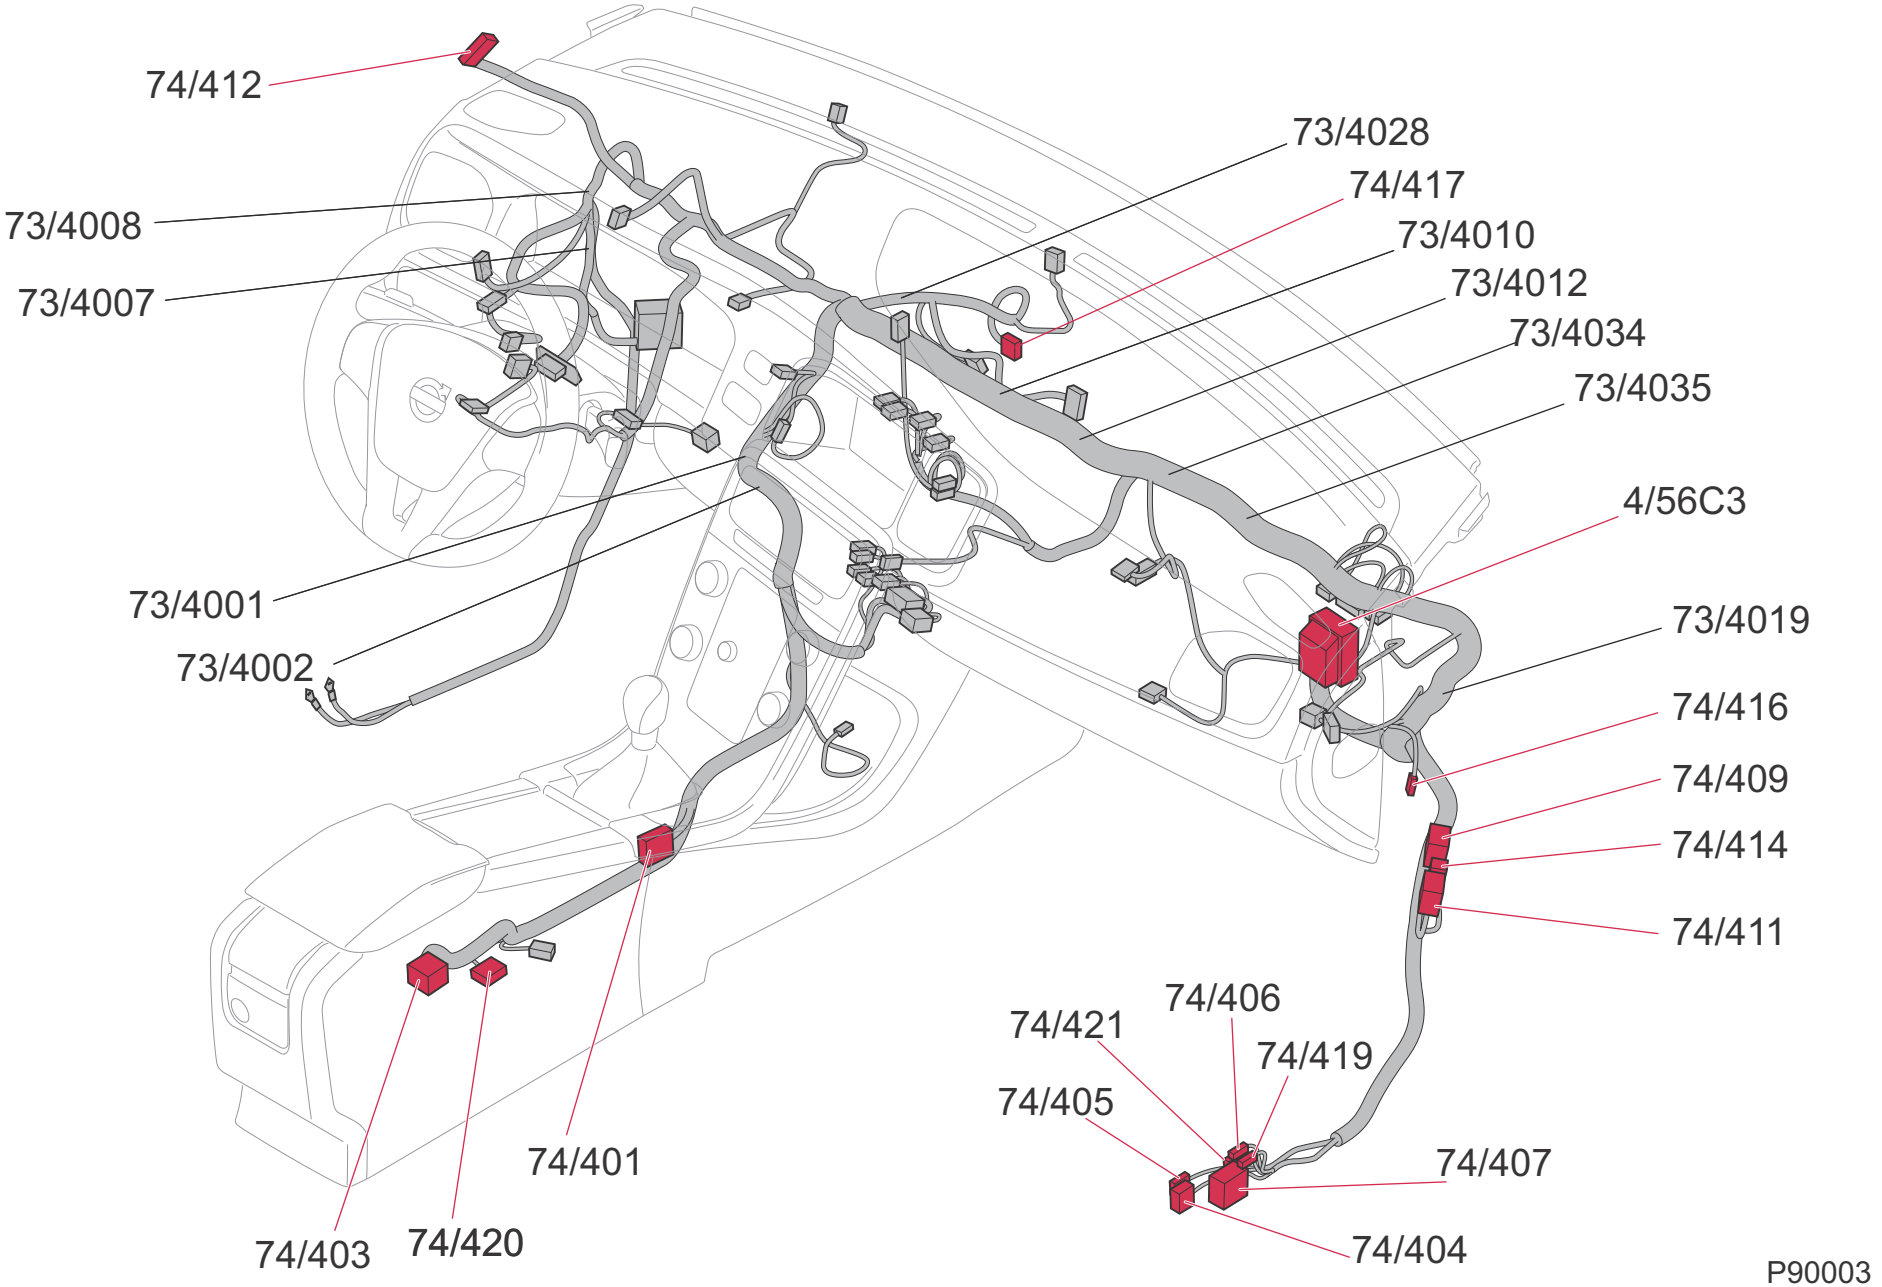

Cable harness routing in vehicle
Harness Dashboard, RHD

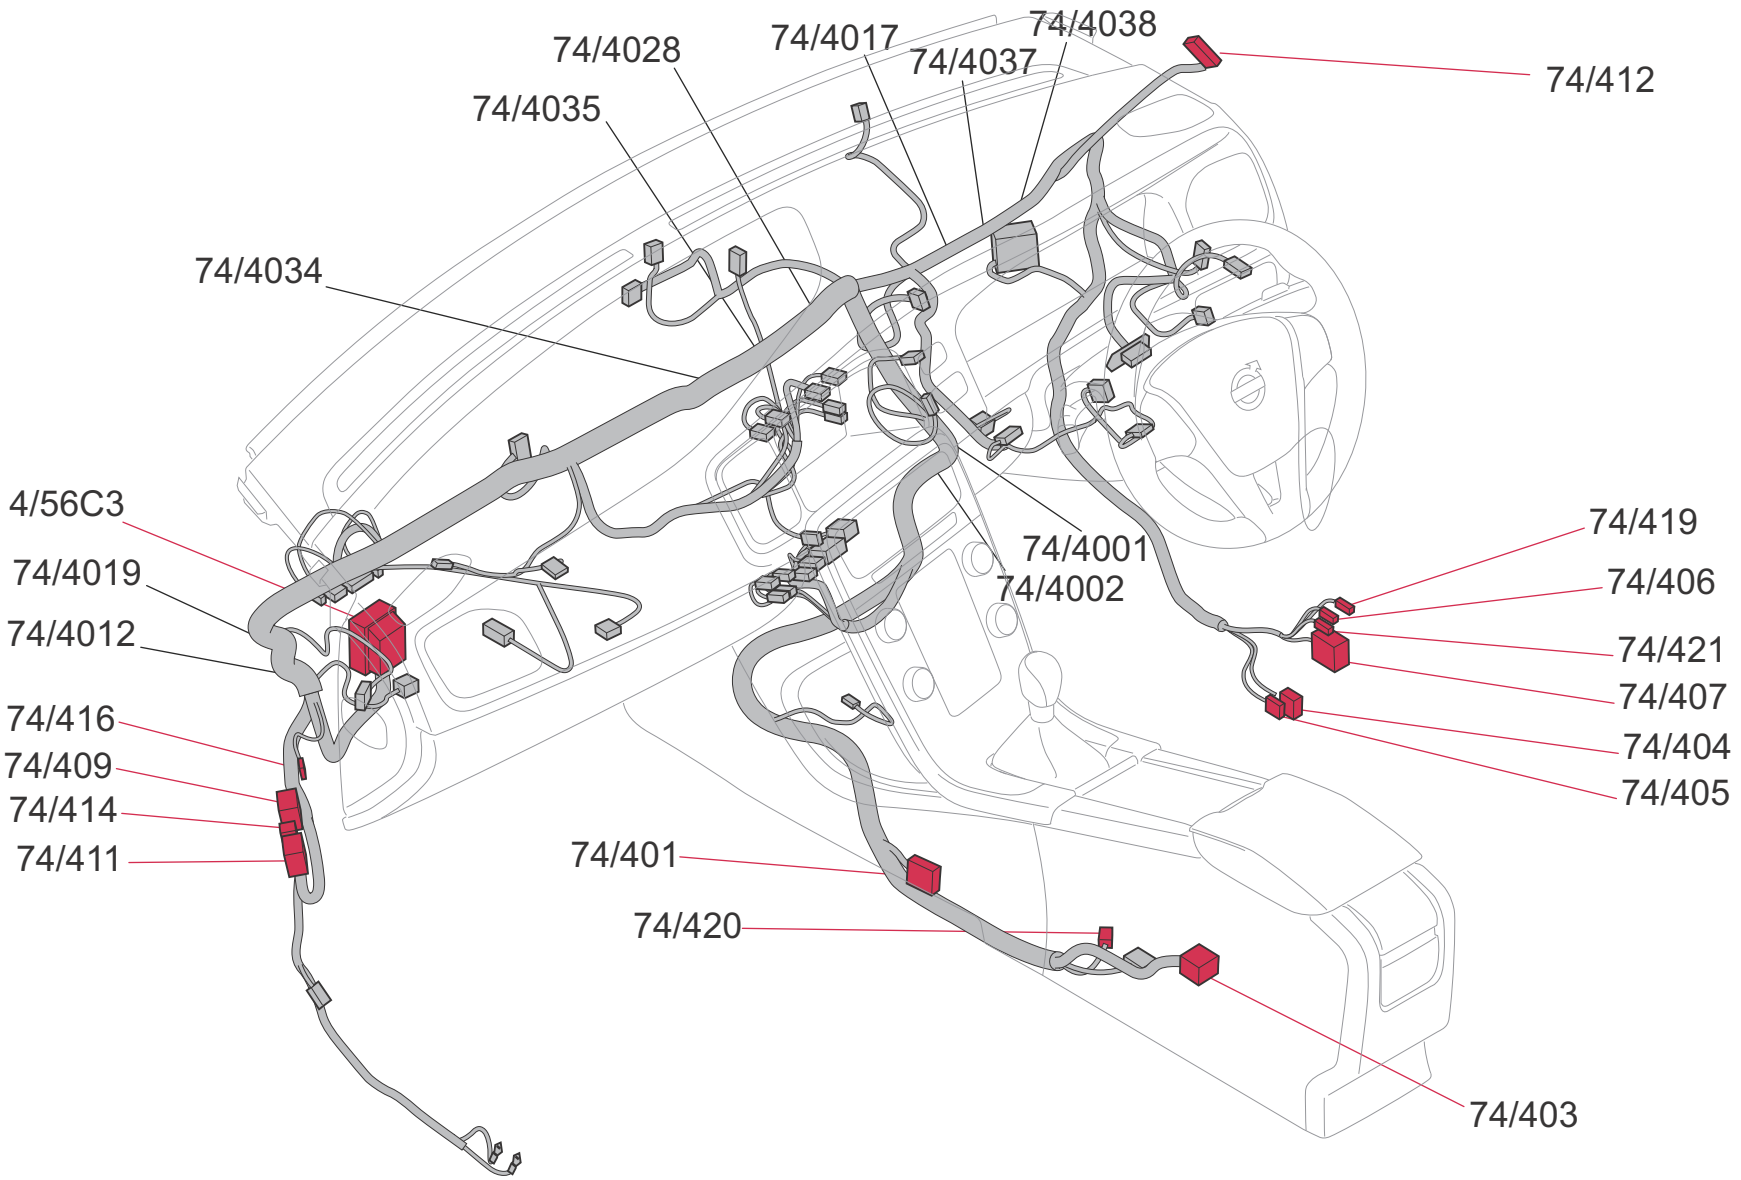

P90004

Cable harness routing in vehicle
Harness Floor, LHD S60

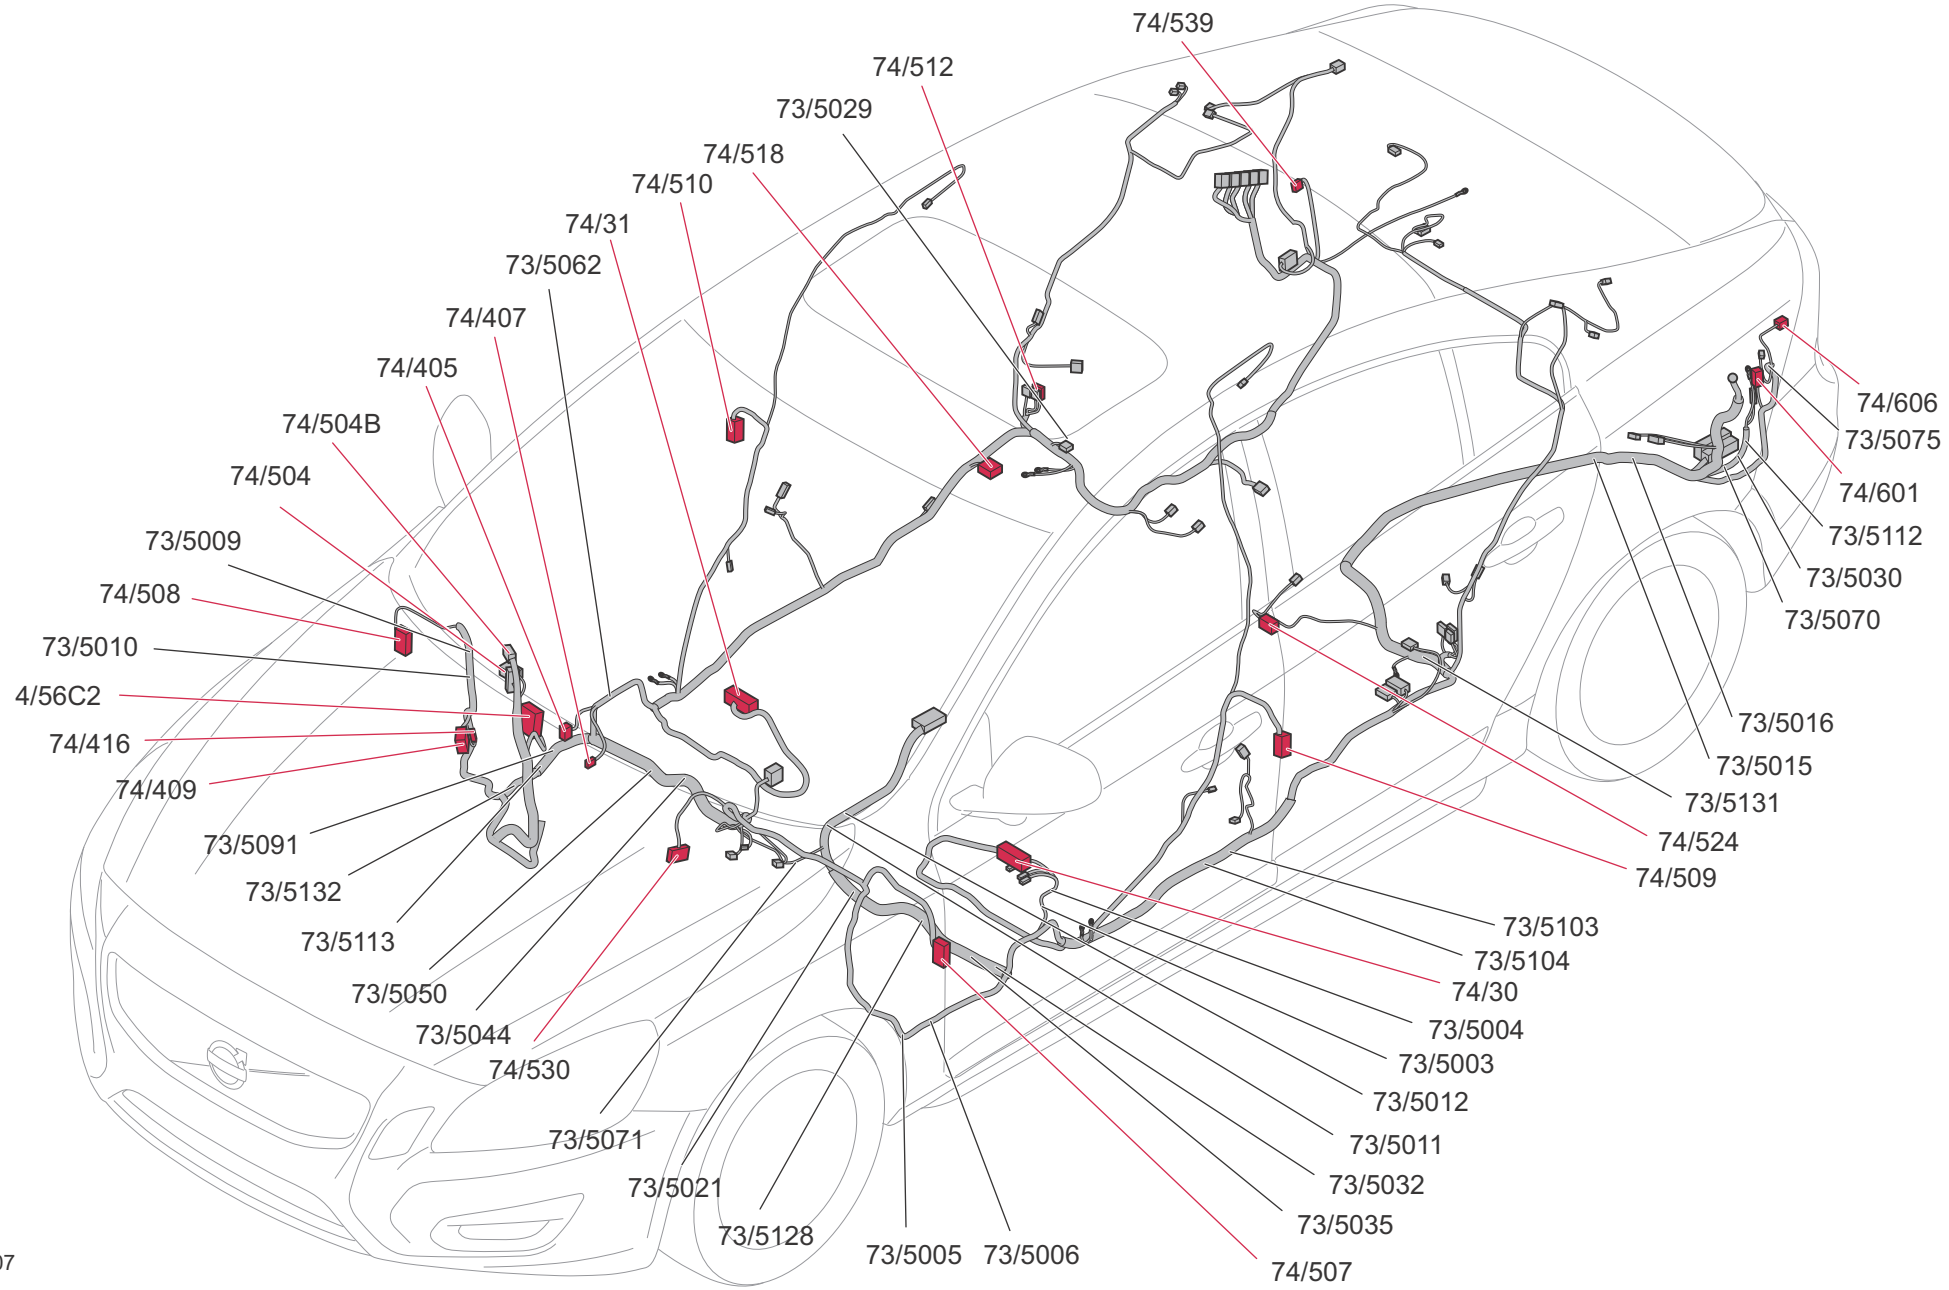

Cable harness routing in vehicle
Harness Floor, RHD S60

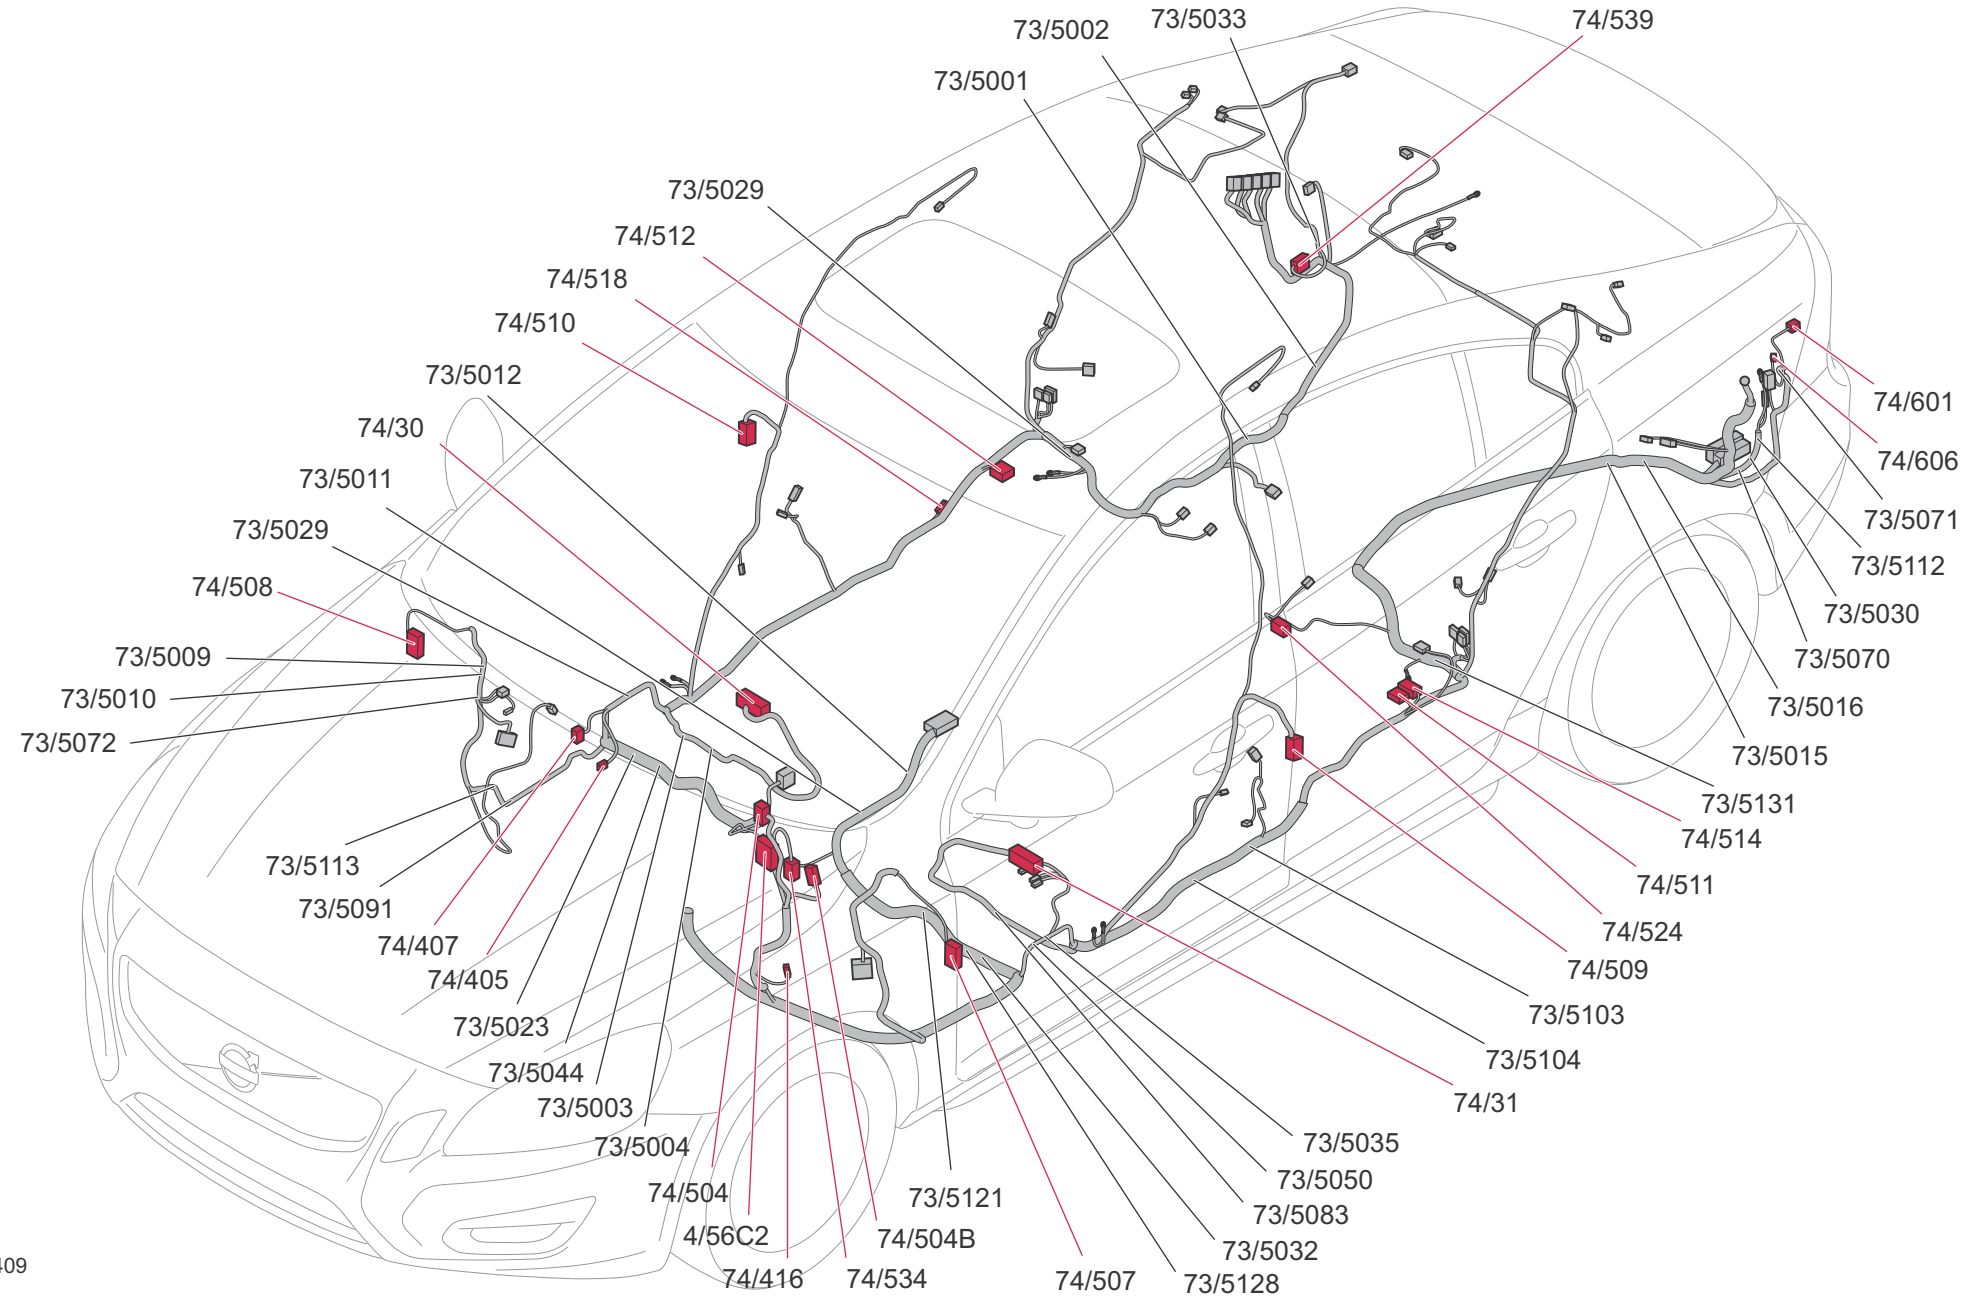

Cable harness routing in vehicle
Floor Harness, LHD V60

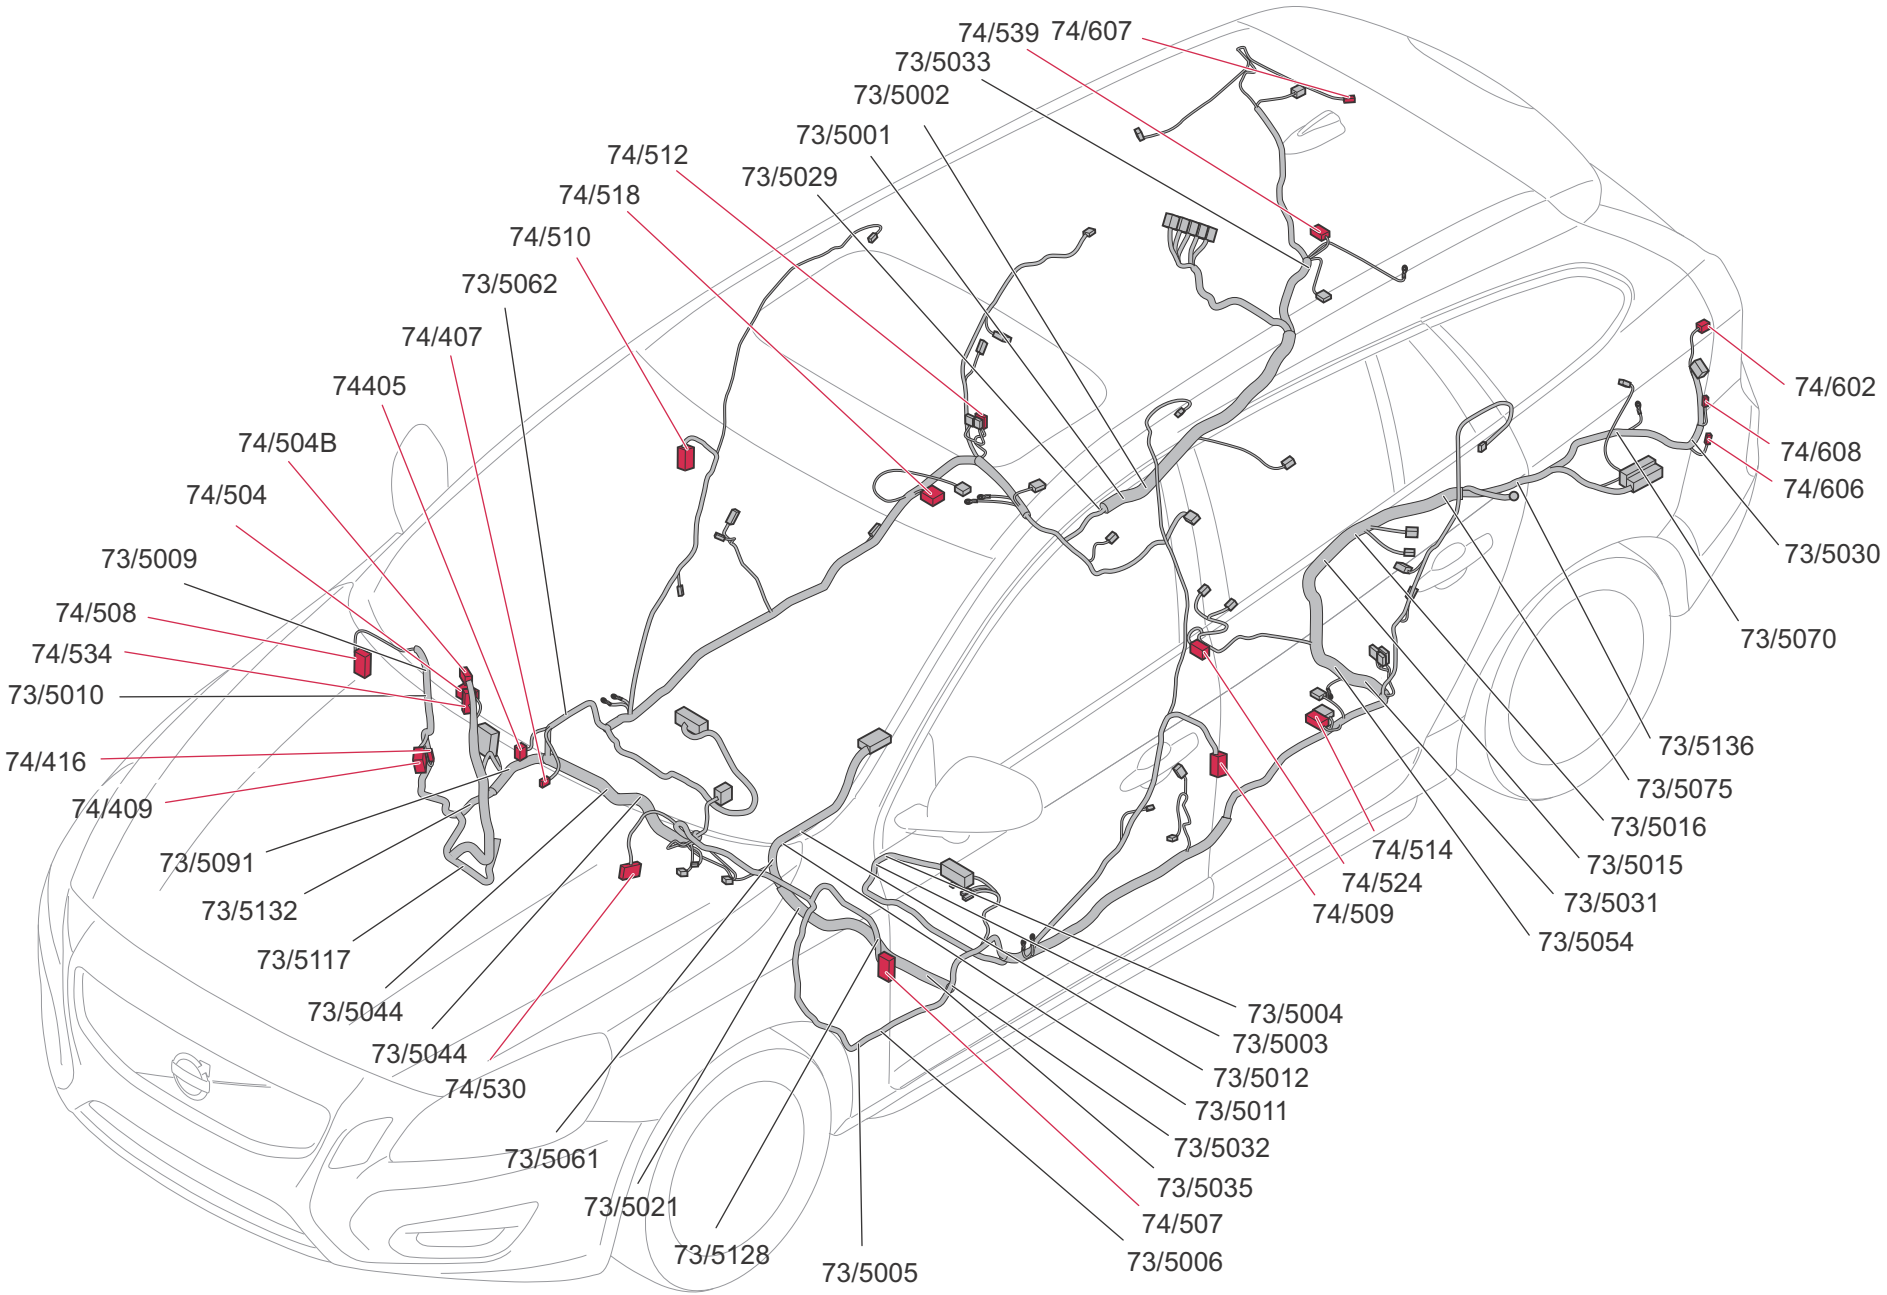

I01408

Cable harness routing in vehicle
Harness Floor, RHD V60

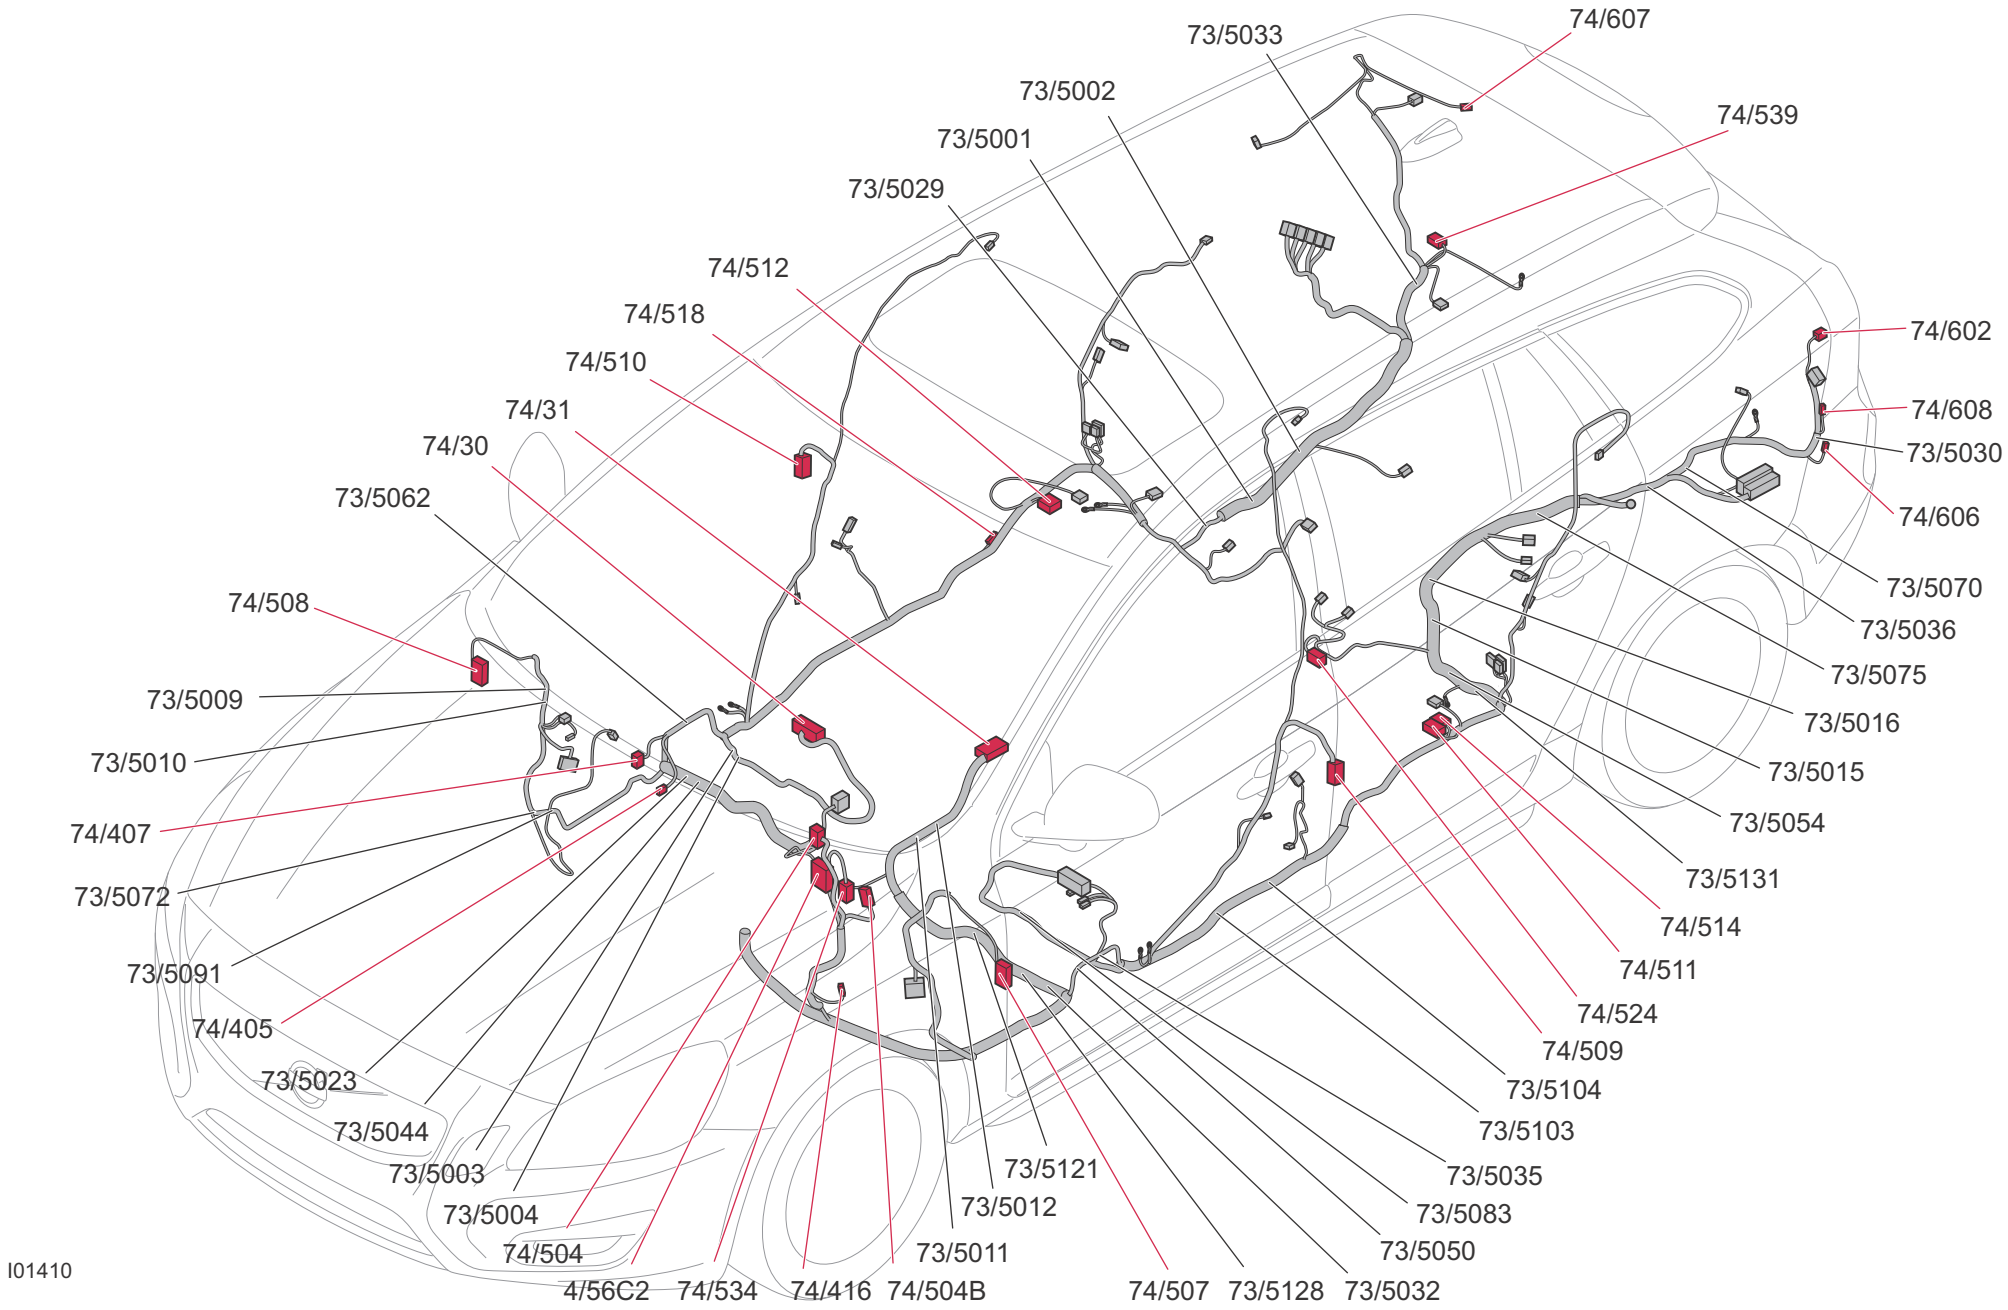

Cable harness routing in vehicle
Harness infotainment, LHD S60

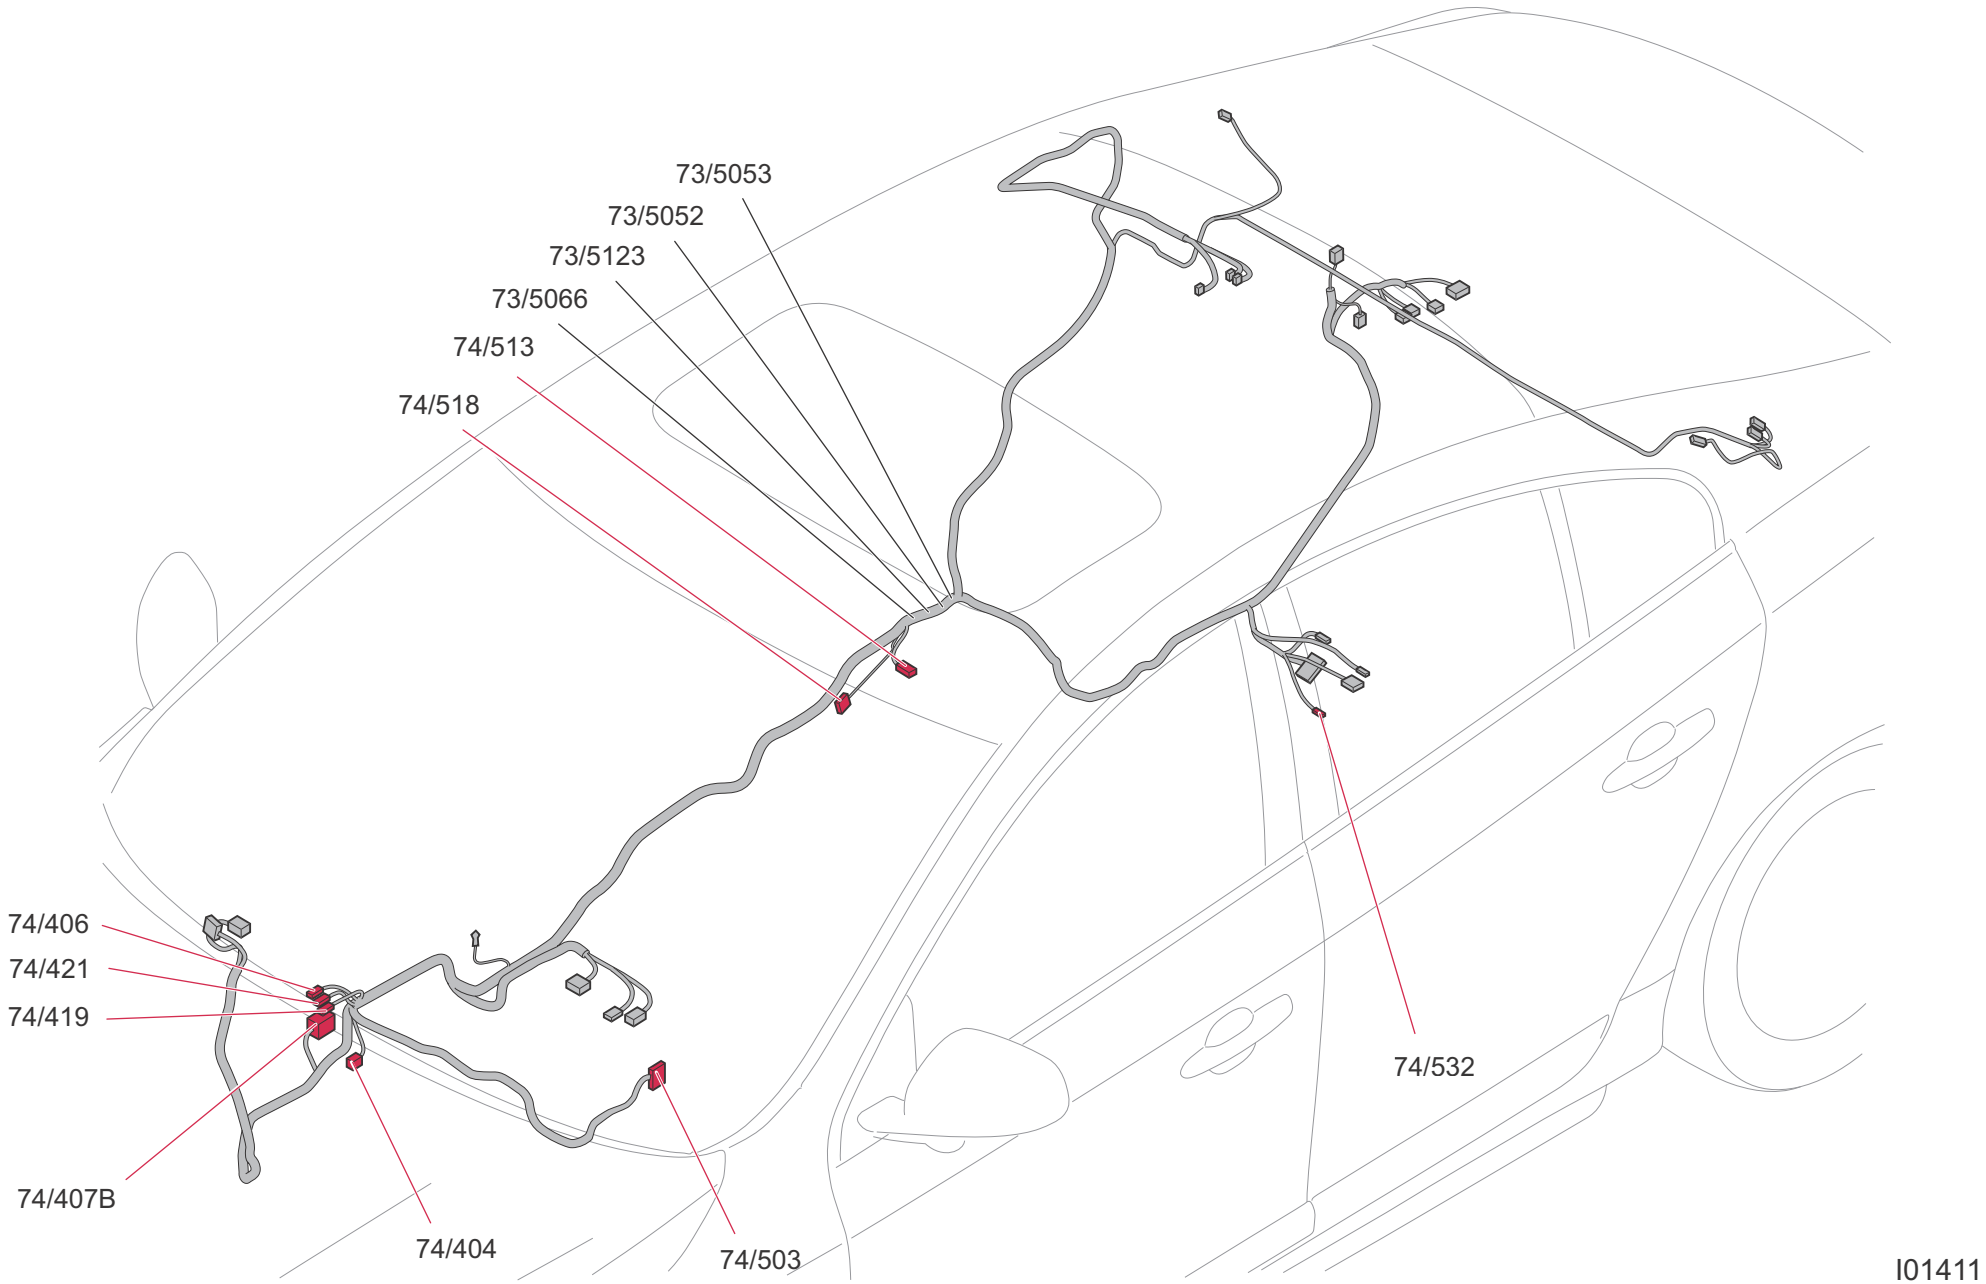

Cable harness routing in vehicle
Harness infotainment, RHD S60

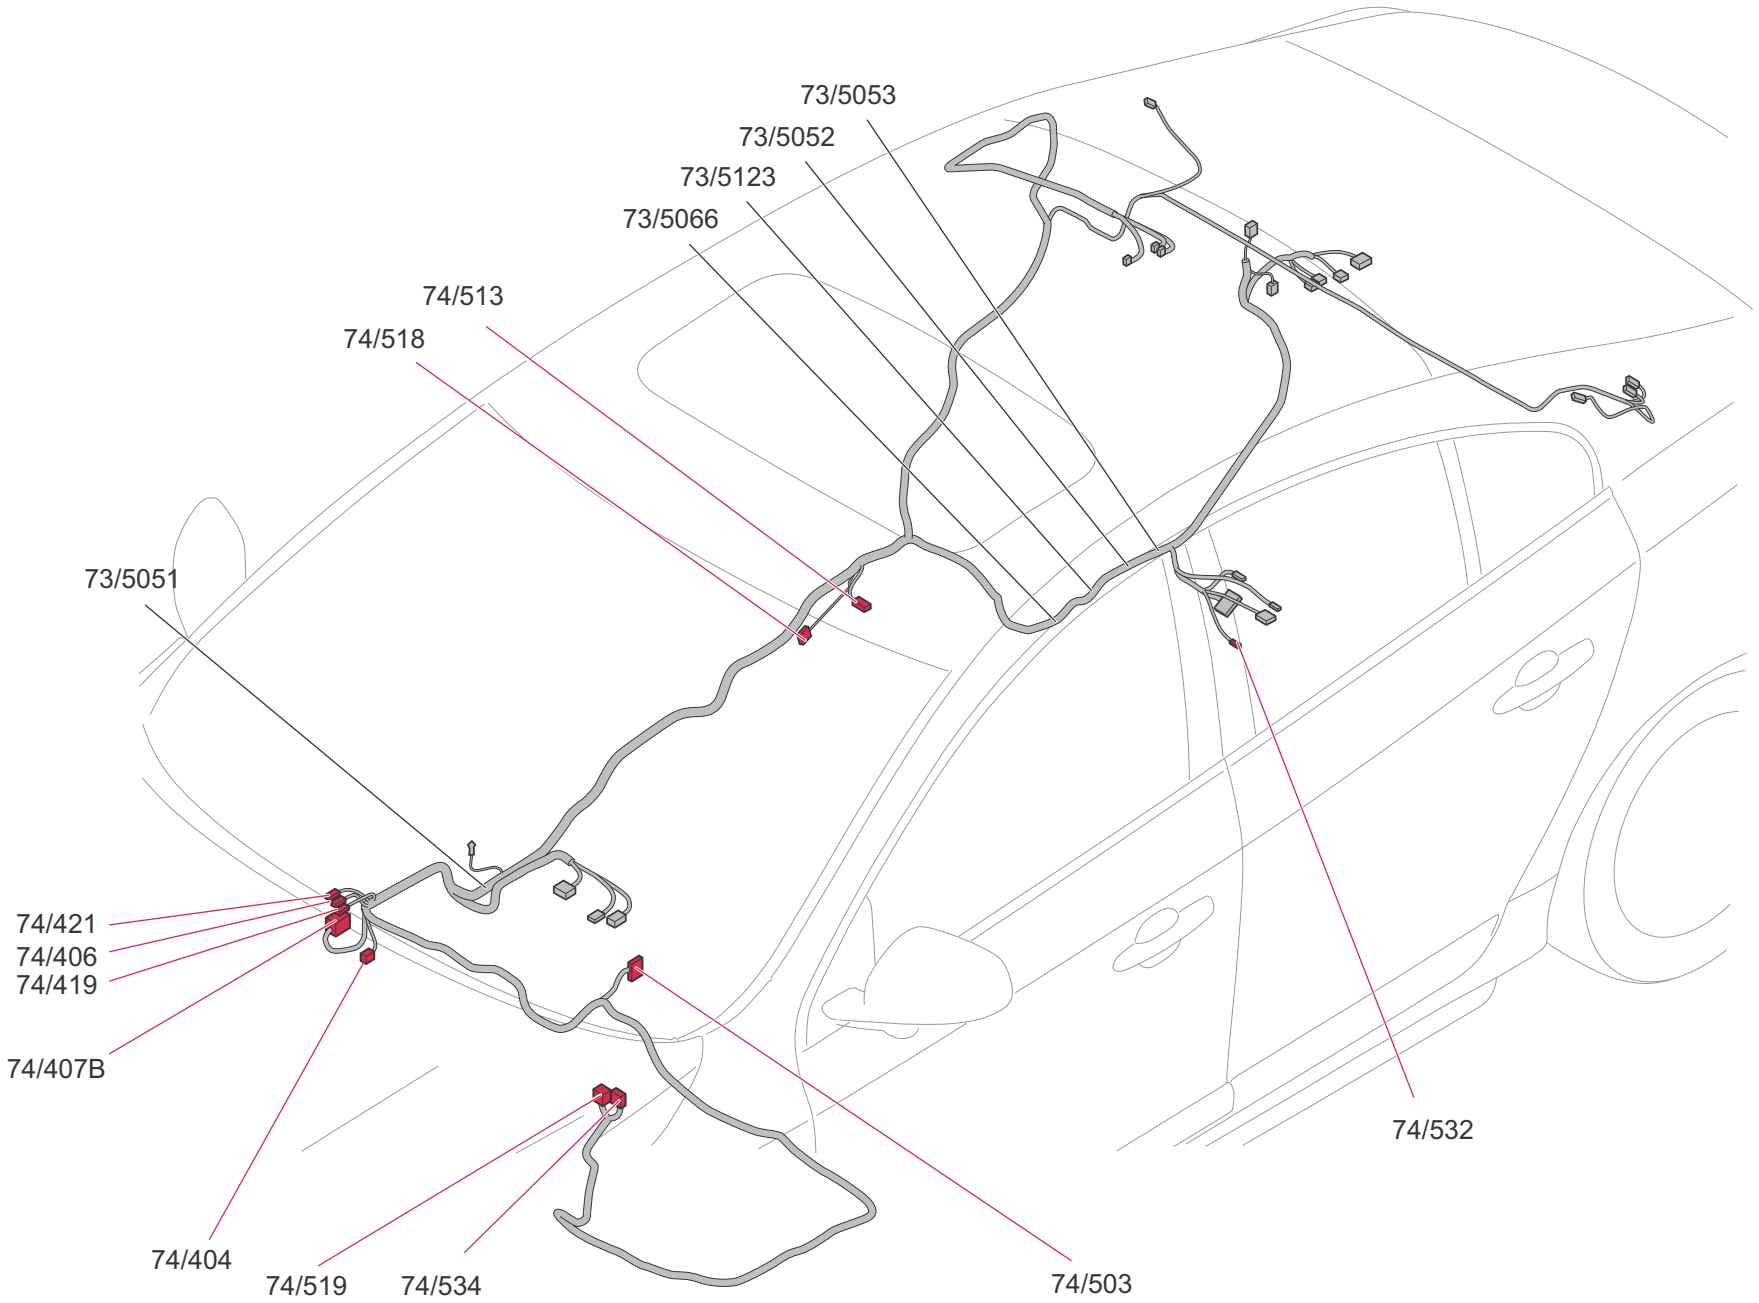

Cable harness routing in vehicle
Harness infotainment, LHD V60

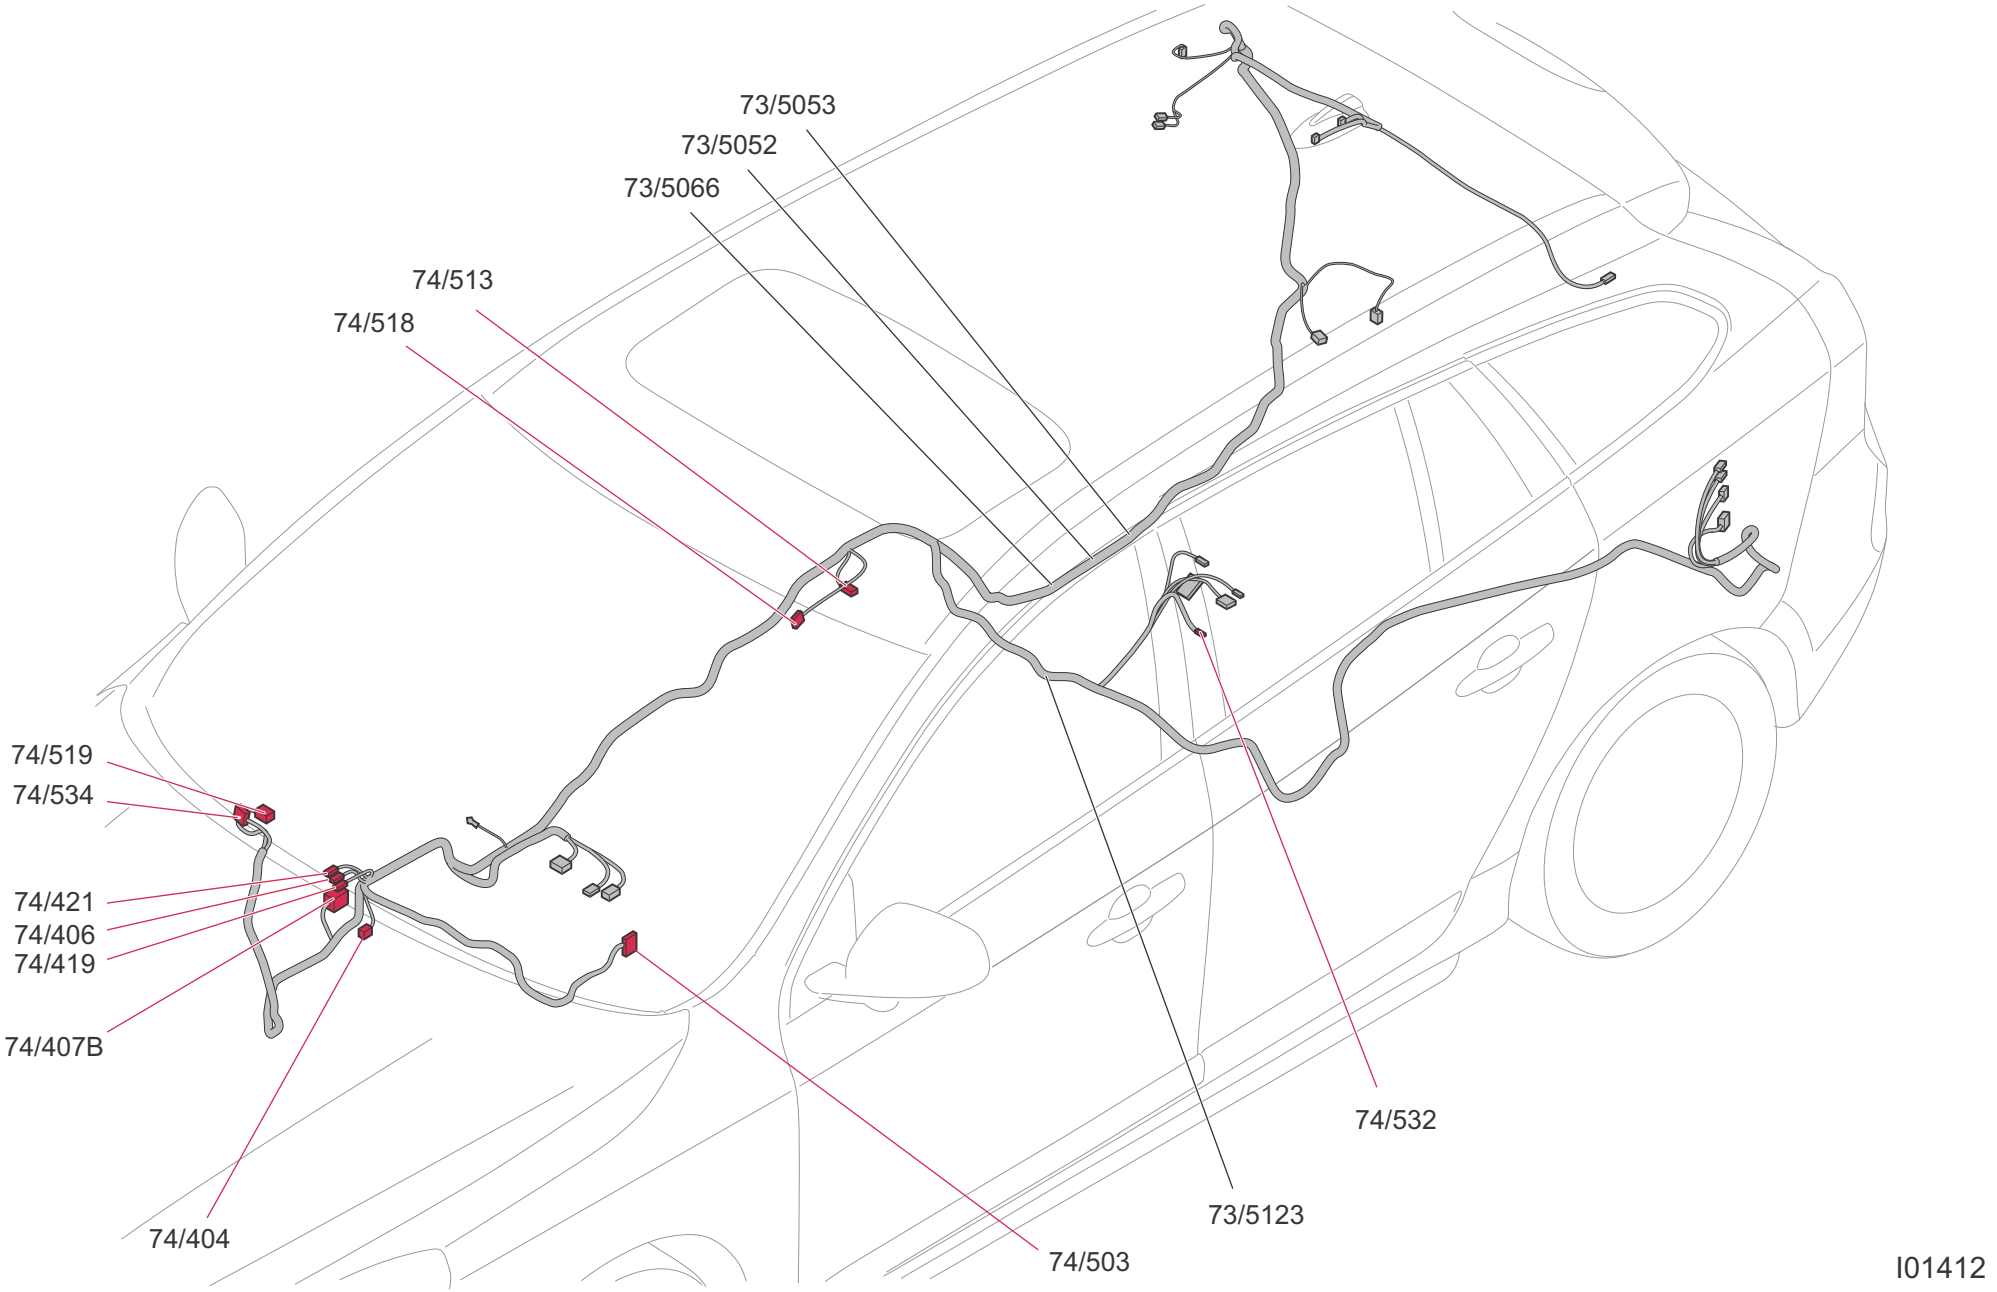

Cable harness routing in vehicle
Harness infotainment, RHD V60

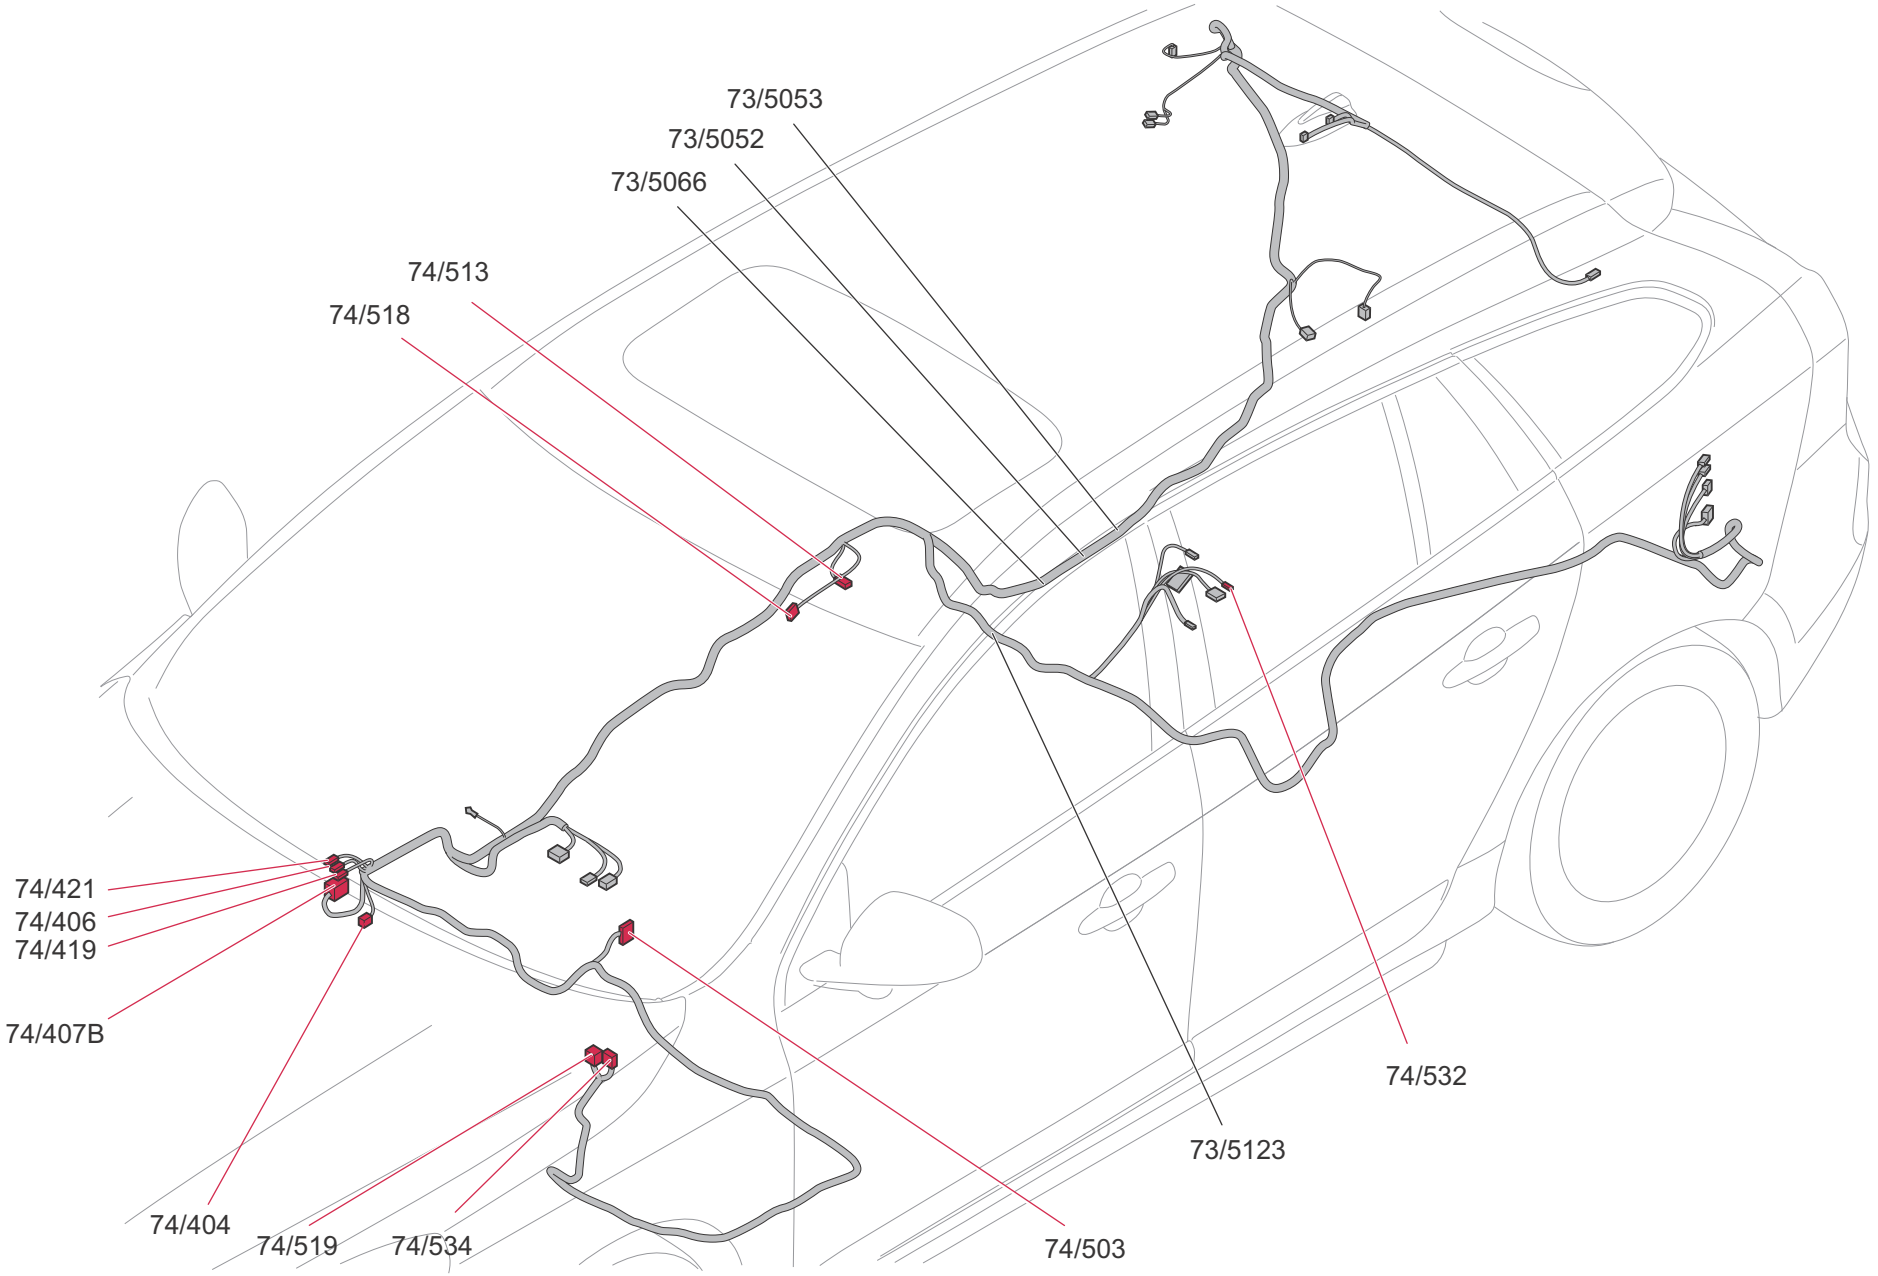

Cable harness routing in vehicle
Roof harness, S60

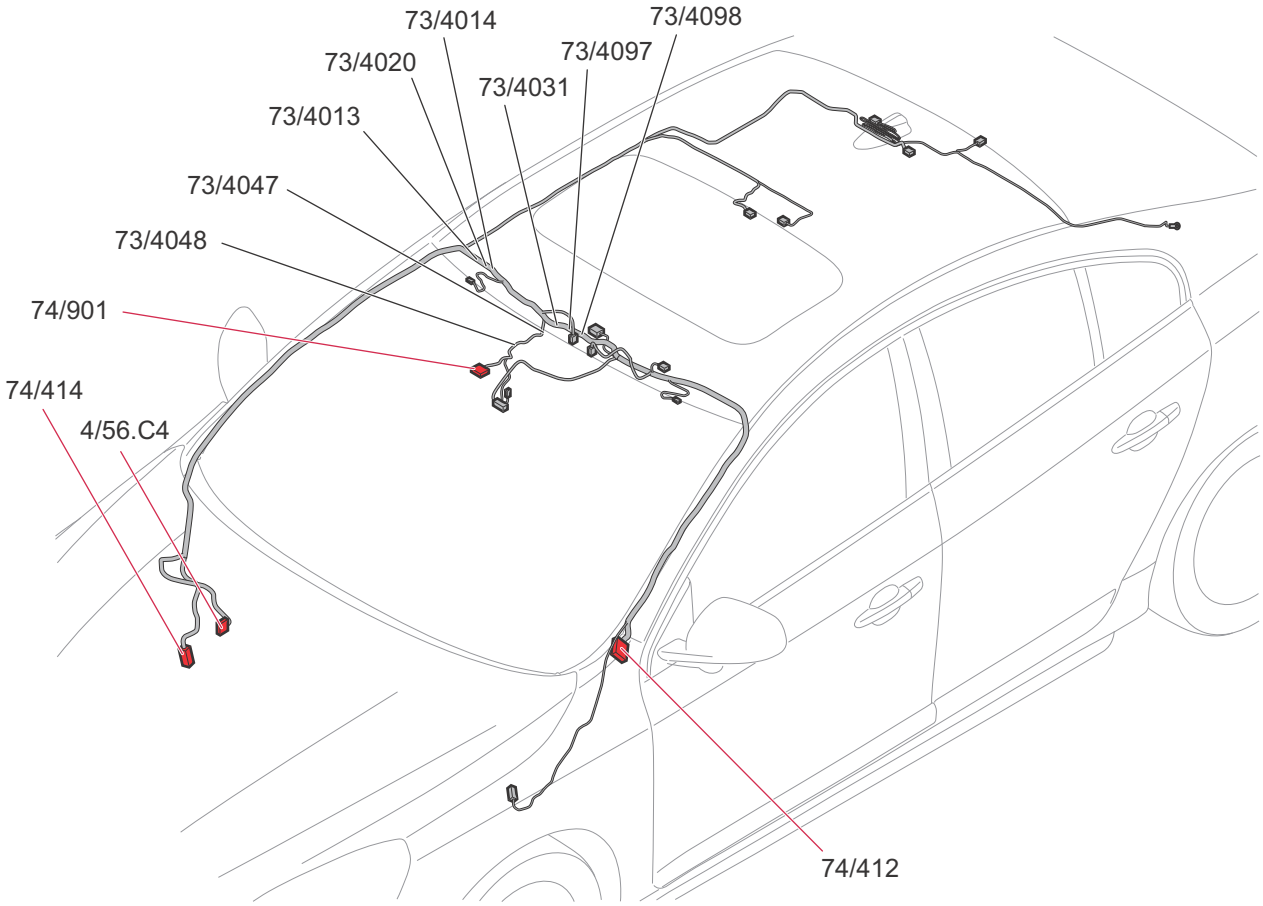

I01415

Cable harness routing in vehicle
Roof harness V60

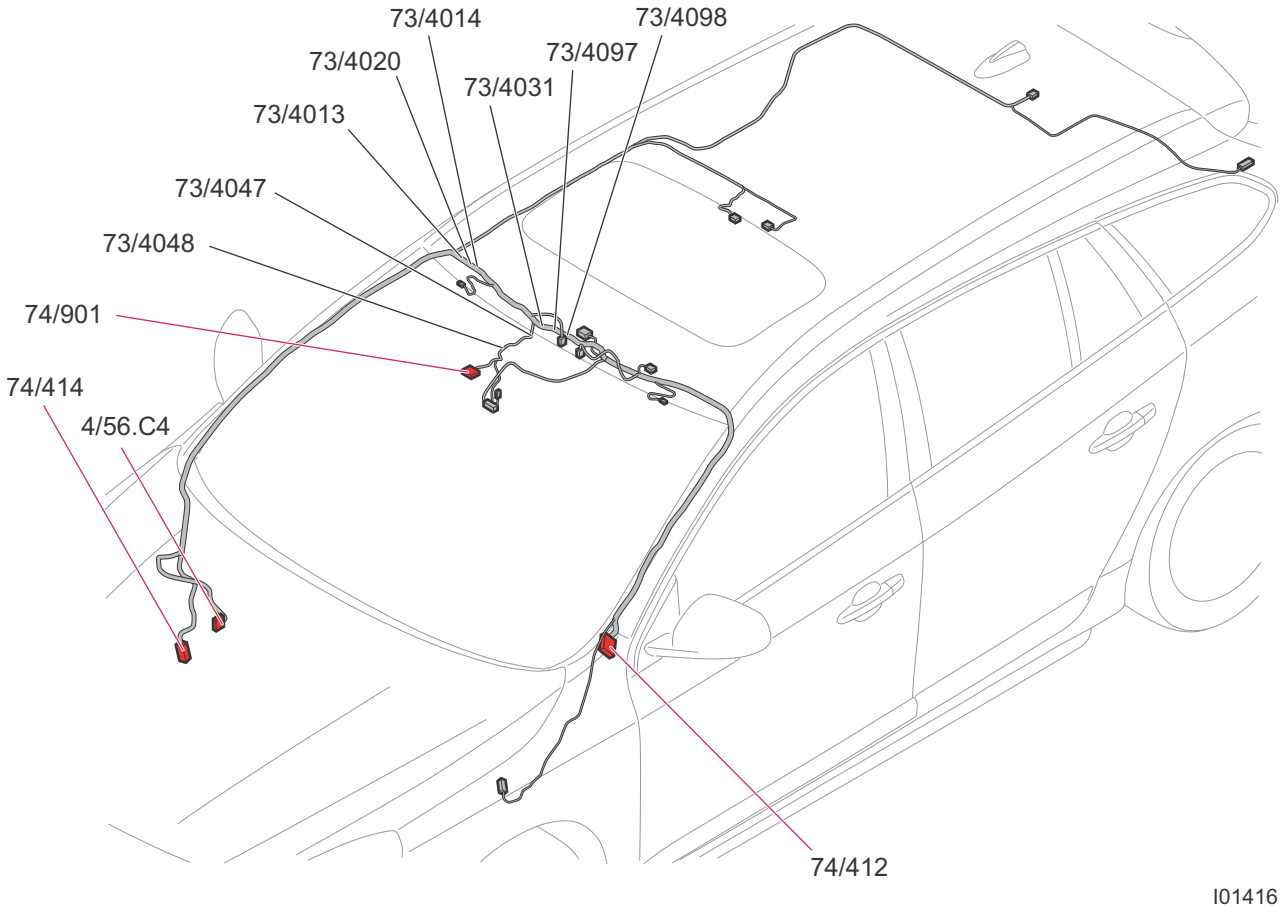

I01416

Cable harness routing in vehicle
Center console harness

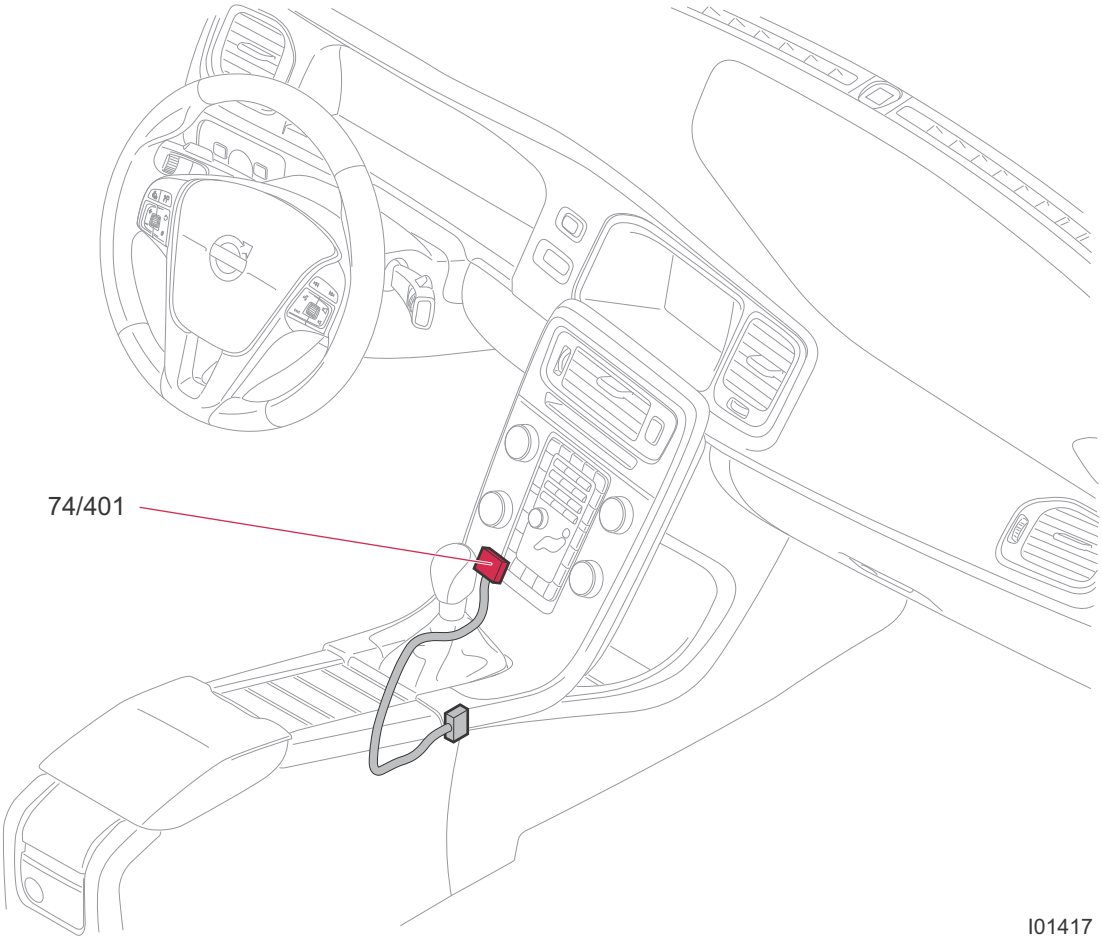

I01417

Cable harness routing in vehicle
Tunnel harness

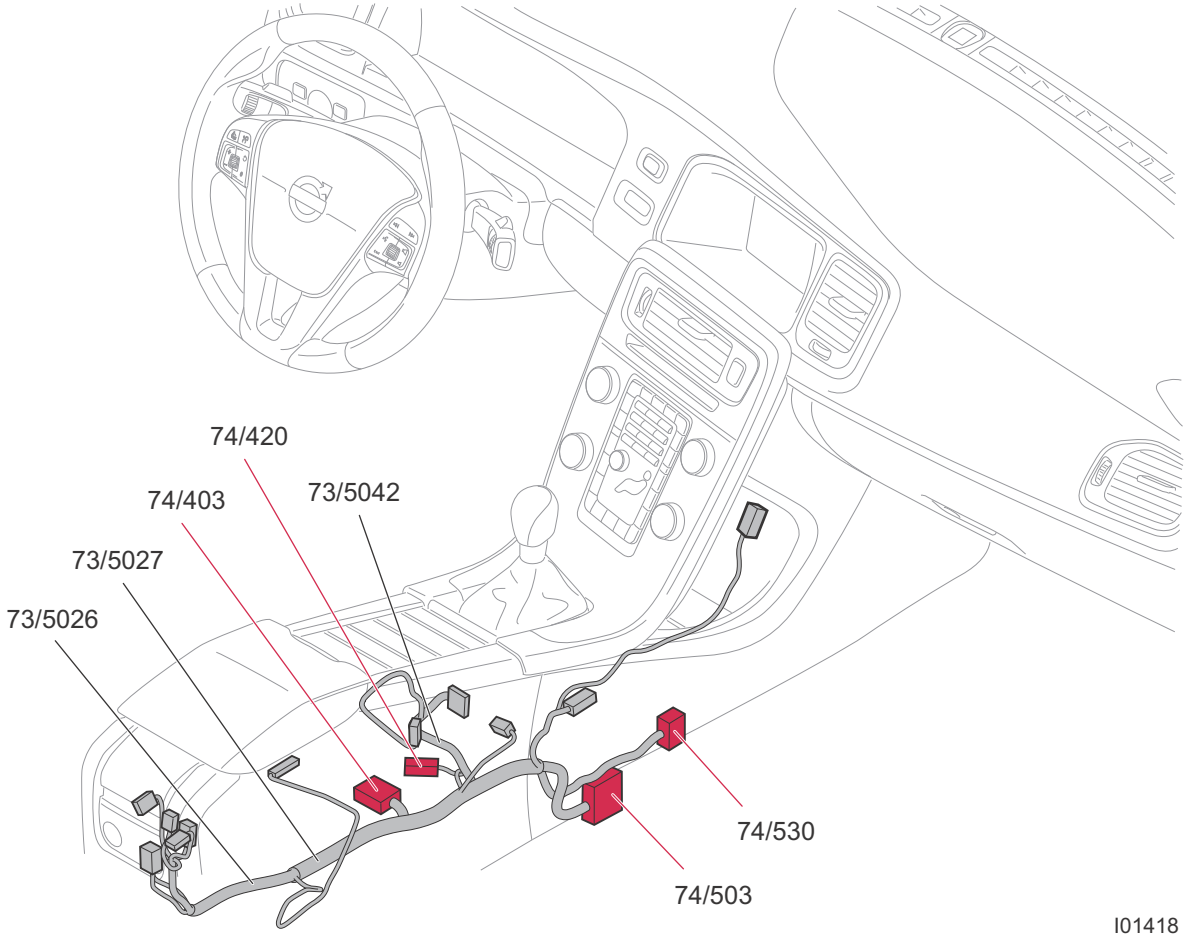

I01418

Cable harness routing in vehicle
Harness front door, left

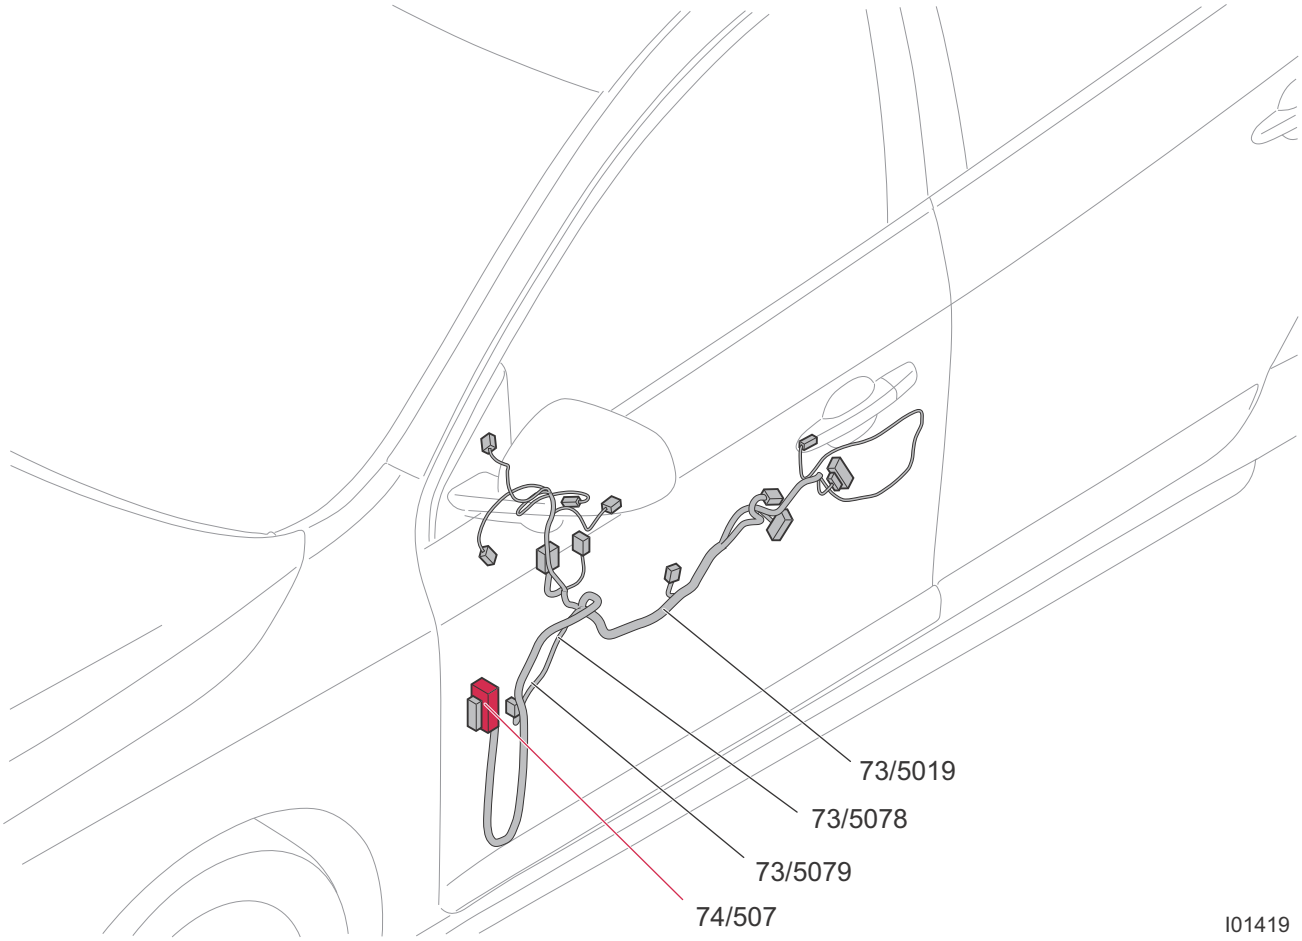

Cable harness routing in vehicle
Harness front door, right

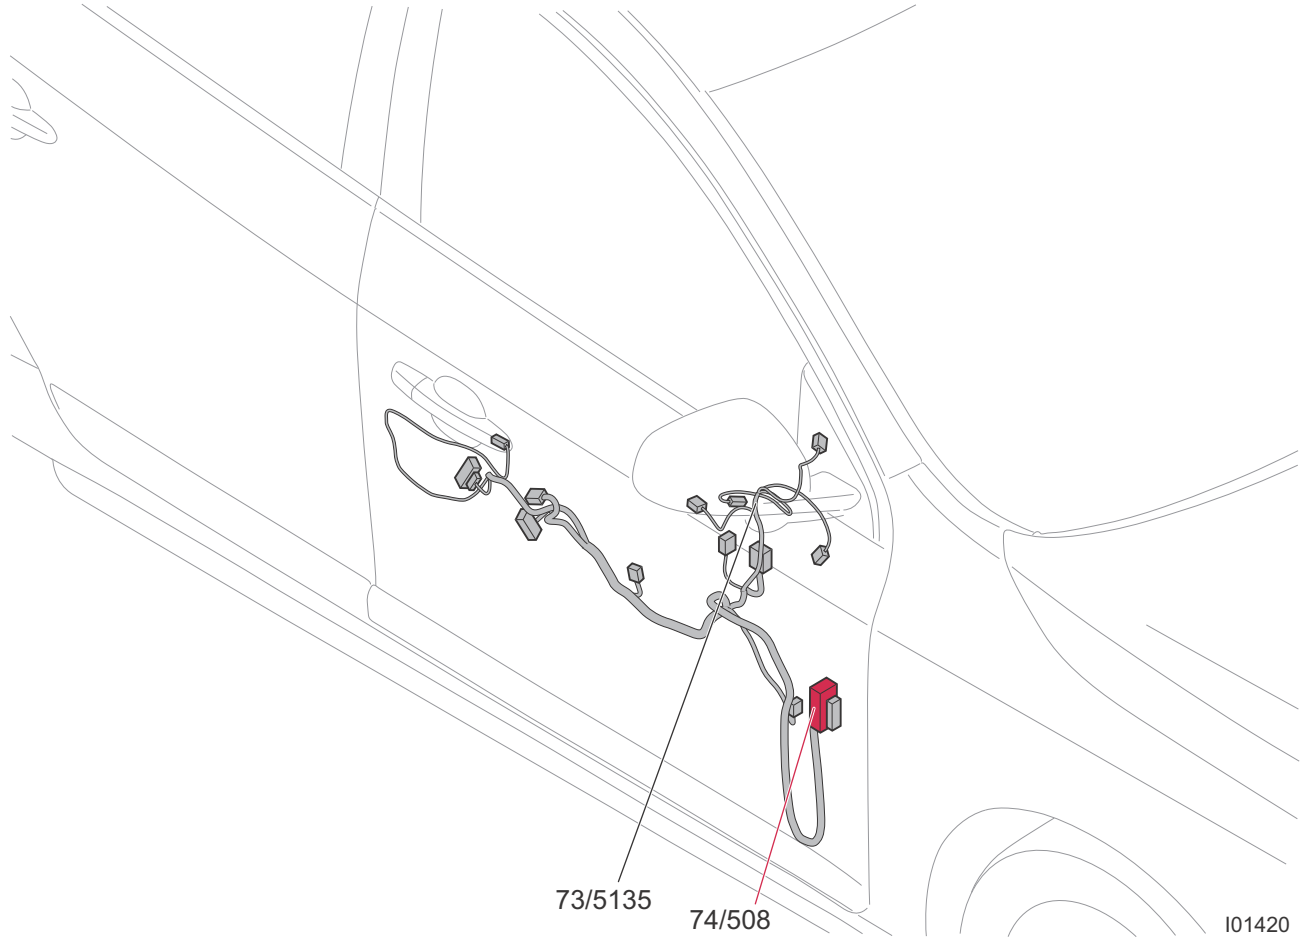

Cable harness routing in vehicle
Harness rear door, left

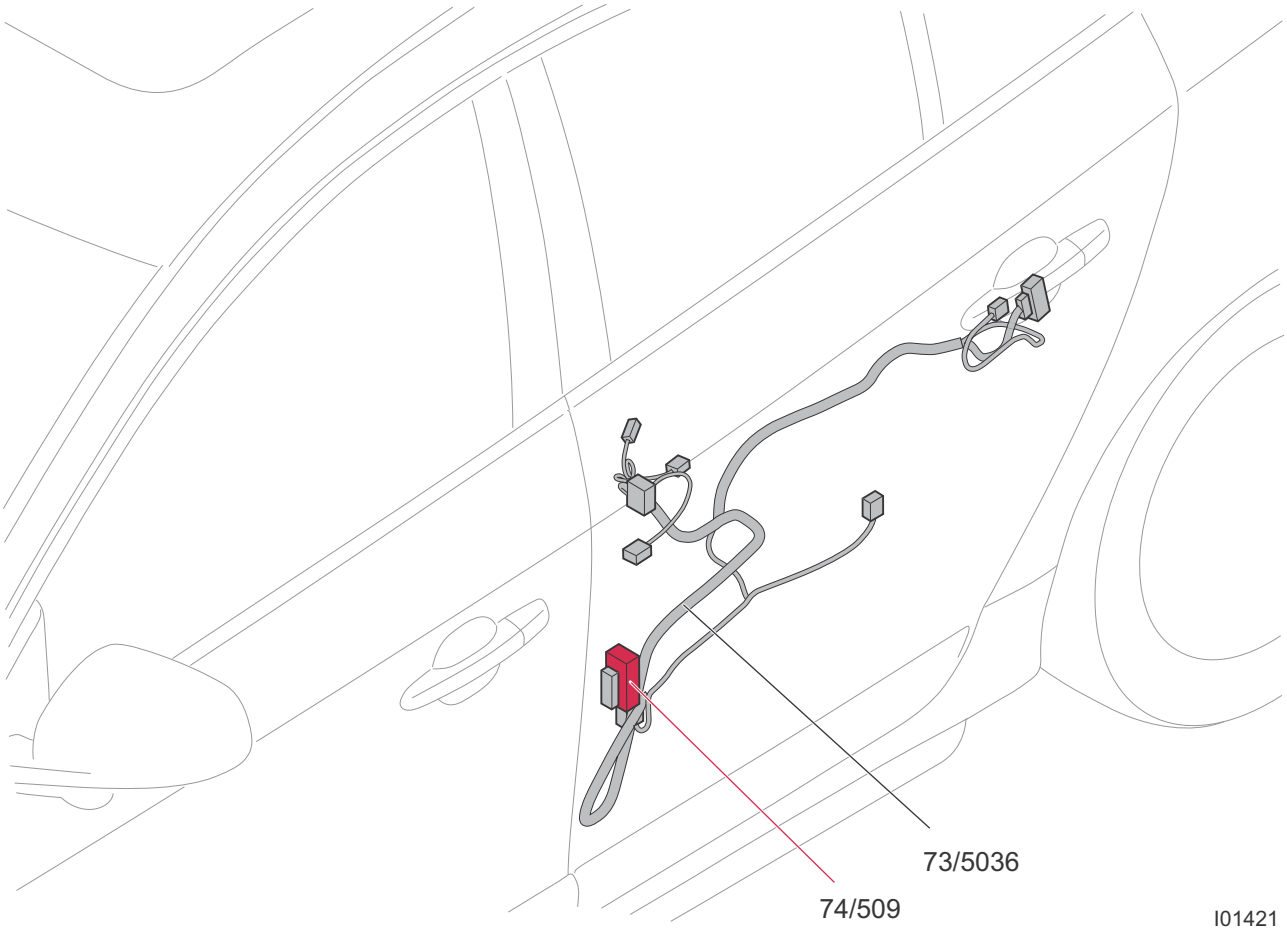

Cable harness routing in vehicle
Harness rear door, right

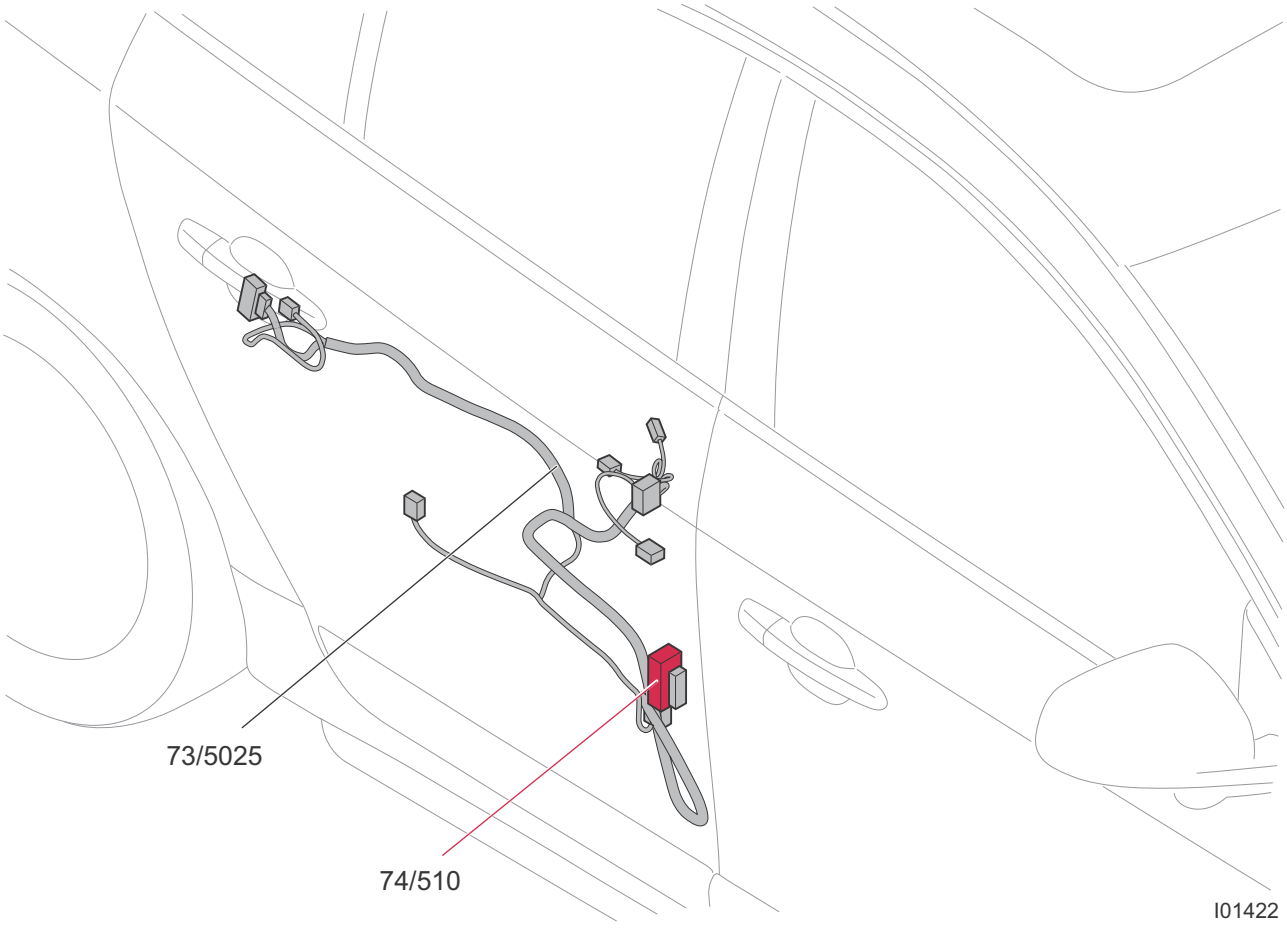

Cable harness routing in vehicle
Trunk lid/tailgate harness, S60

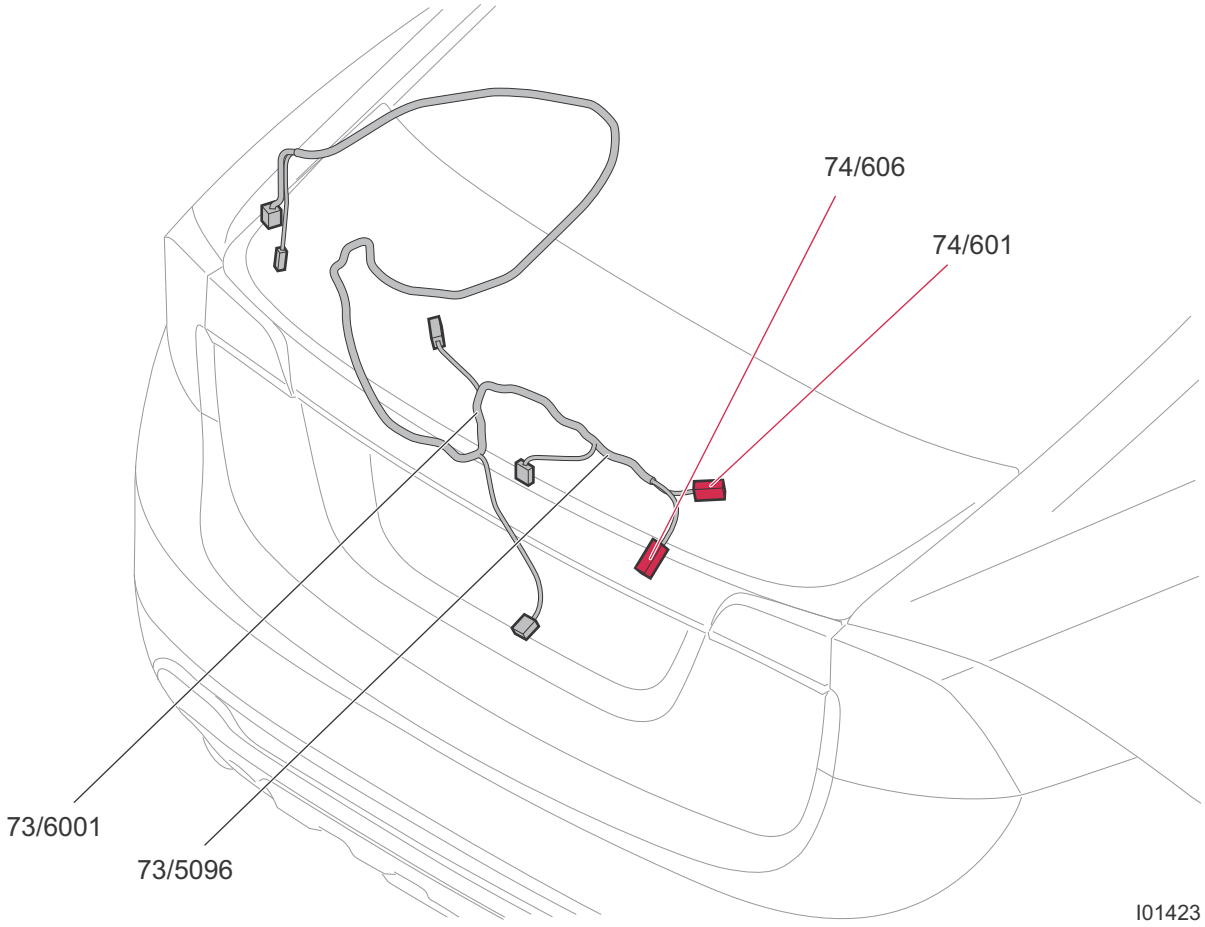

Cable harness routing in vehicle
Trunk lid/tailgate harness, V60

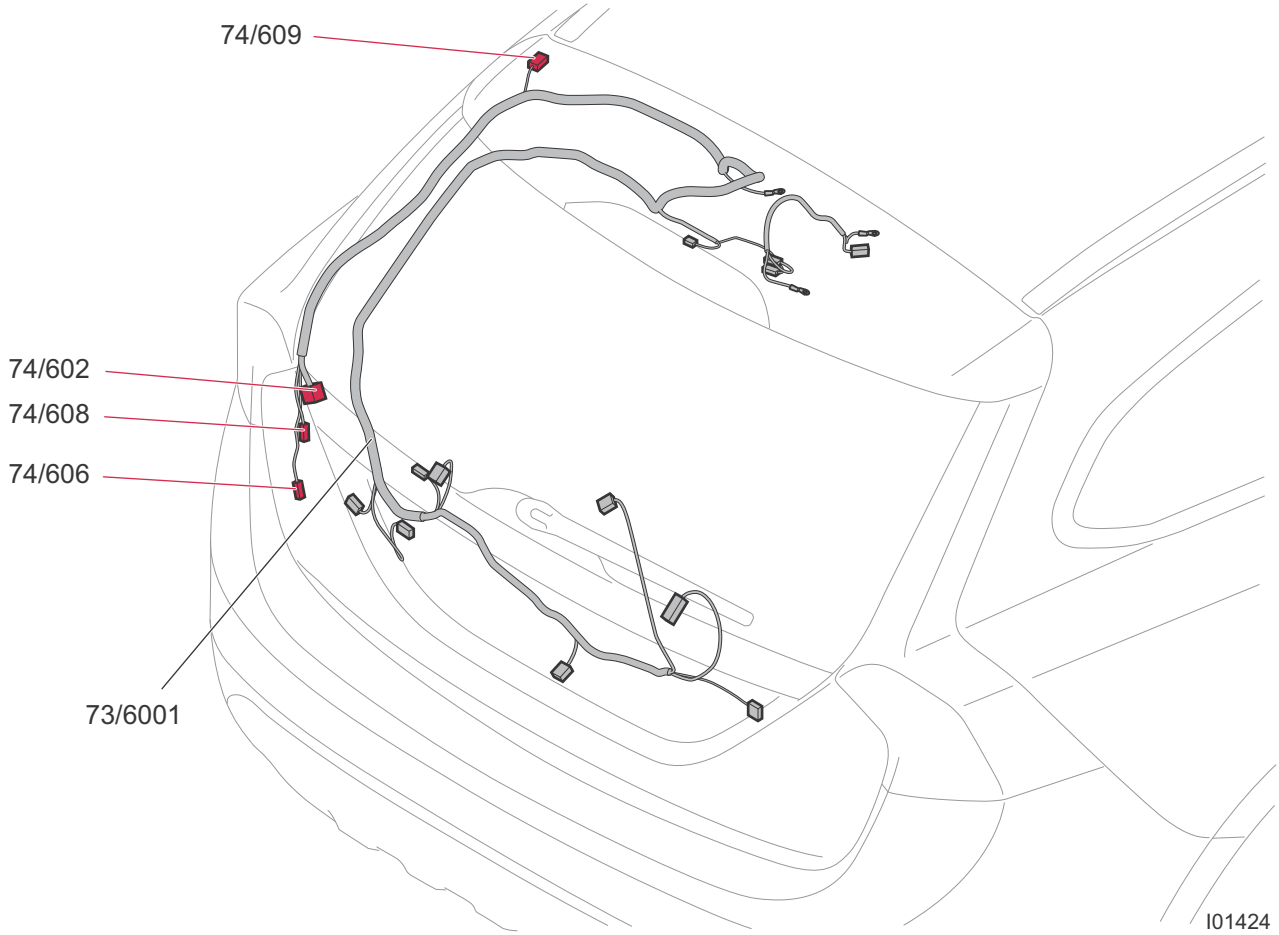

Cable harness routing in vehicle
Harnesses rear axle

Component illustrations
1/1 - 2/64

1/1 Battery

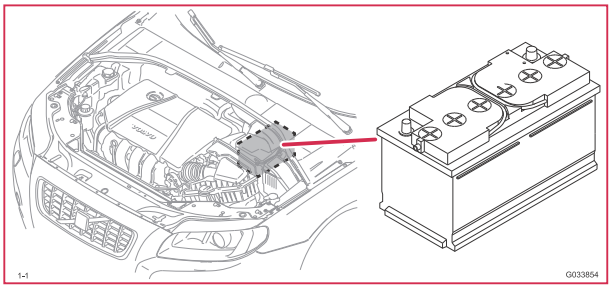

1/2 Secondary battery

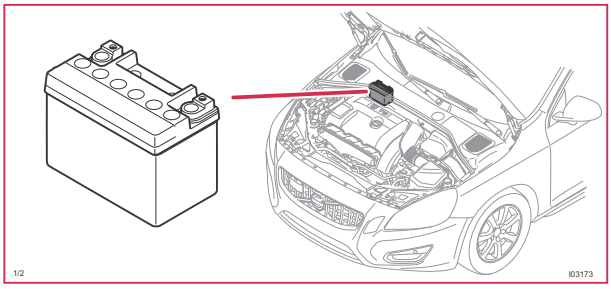

2/14 Relay, glow plug system

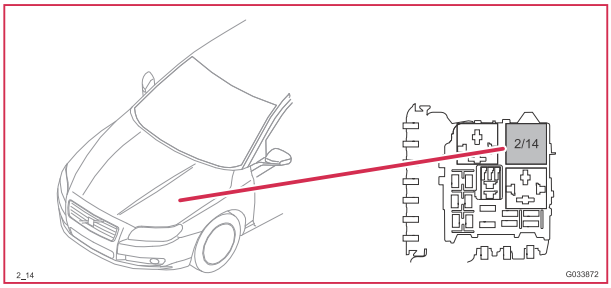

2/16 Relay, rear window wiper

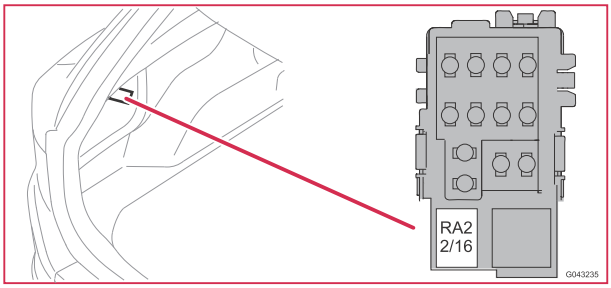

2/17 Relay, horn

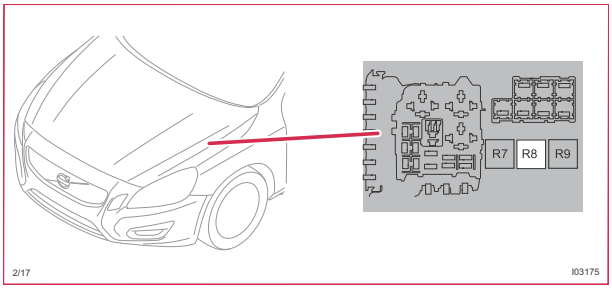

2/22 Relay, climate control system

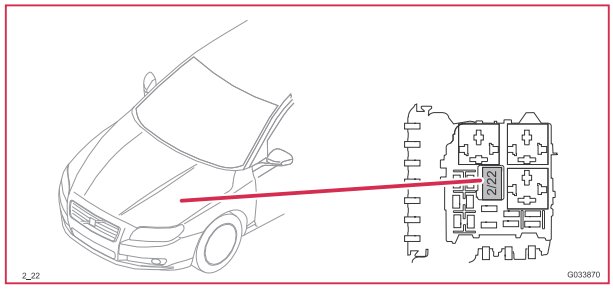

2/31 Relay, 15-feed

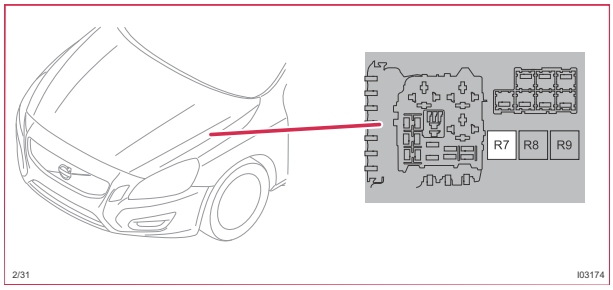

2/32 Main relay, engine management system

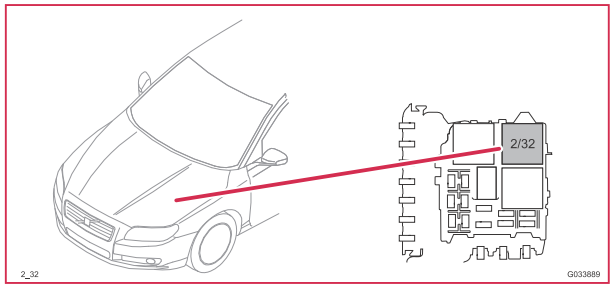

2/35 Starter motor relay

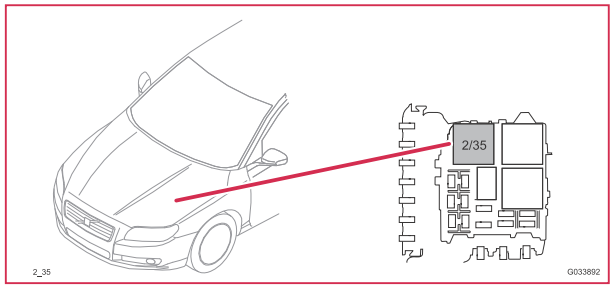

2/64 Relay auxiliary lights

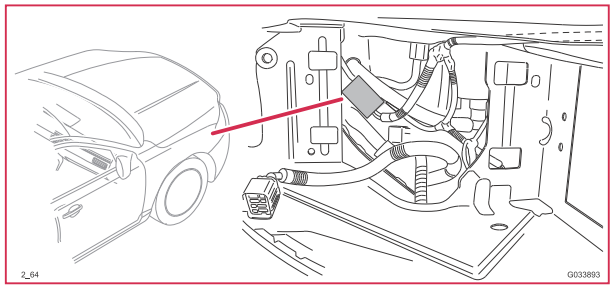

Component illustrations
2/81- 2/246

2/81A Relay, heated windshield passenger side

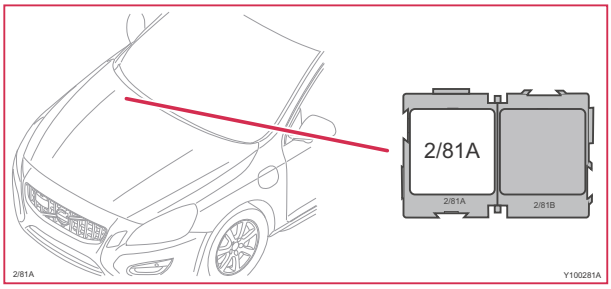

2/81B Relay, heated windscreen driver's side

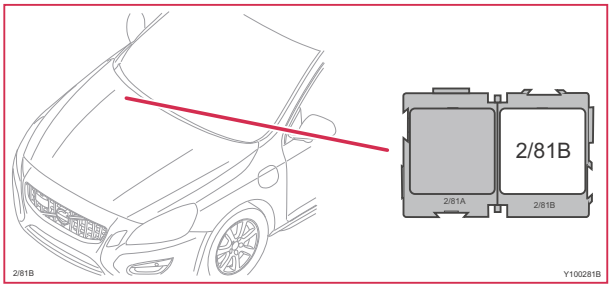

2/82 Relay, heated rear window

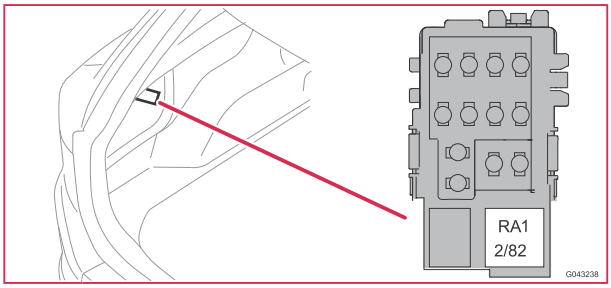

2/88 Relay, 15-feed rear

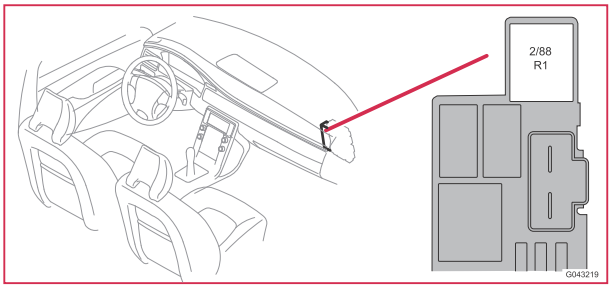

2/92 Relay, washer motor windshield

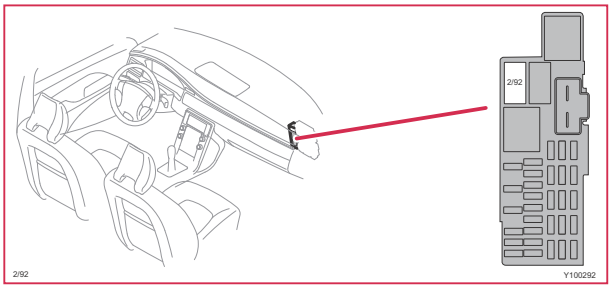

2/93 Relay, washer motor rear window, V60

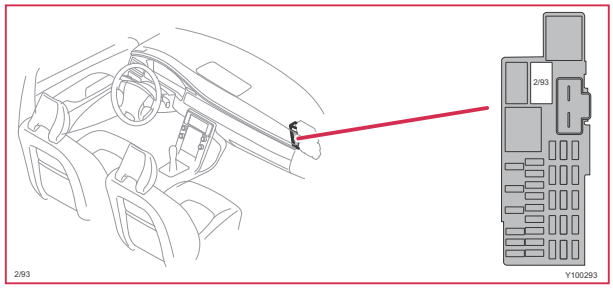

2/166 Battery relay

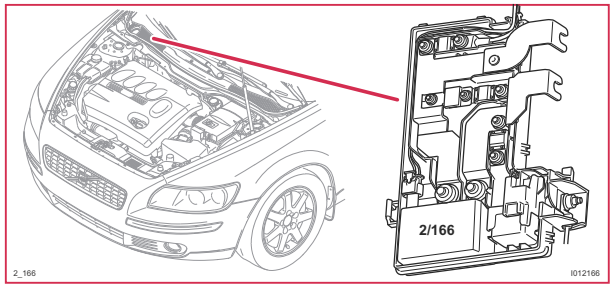

2/182 Relay, headlight washer motor

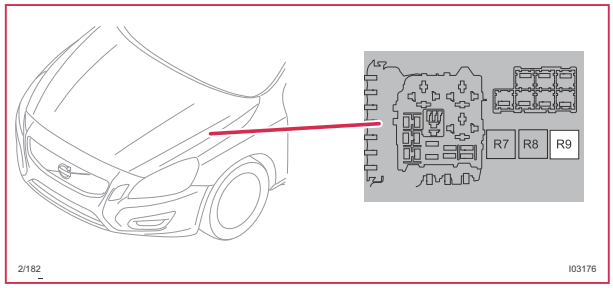

2/193 Relay, comfort functions

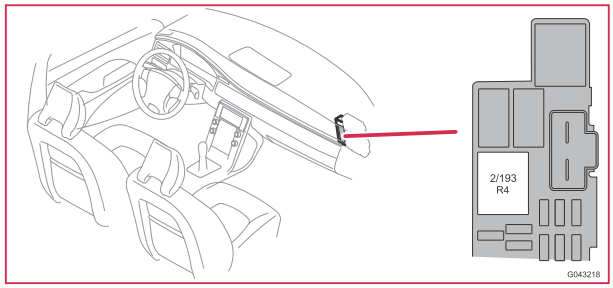

2/246 Secondary battery relay

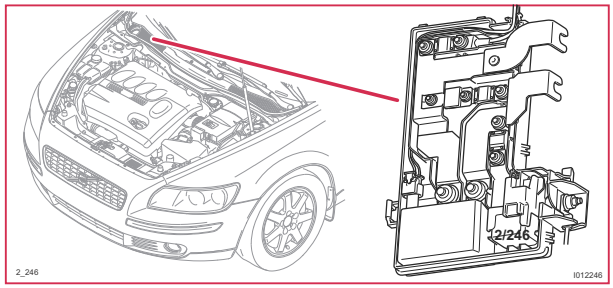

Component illustrations
3/1 - 3/27

3/1 Ignition switch

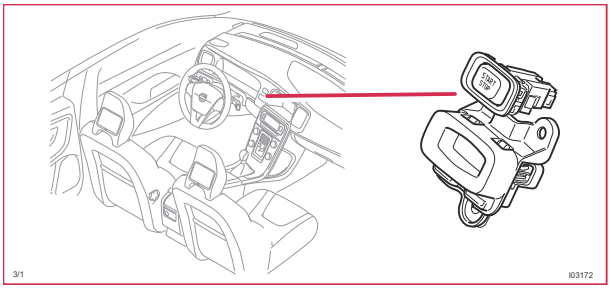

3/4 Steering wheel switch left (SWSL)

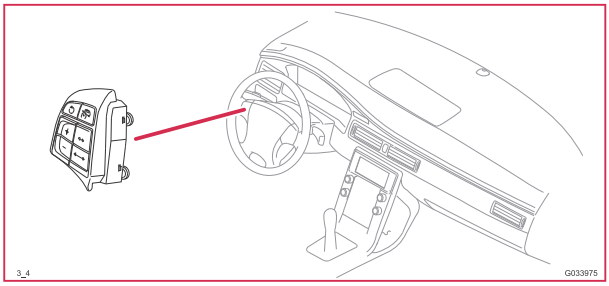

3/6 Hazard warning flasher switch

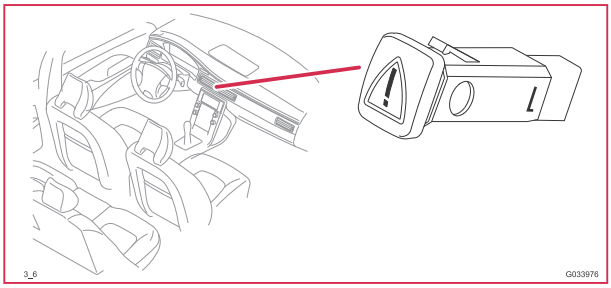

3/9 Brake light contact

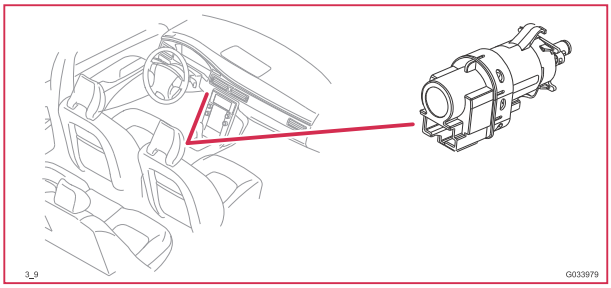

3/10 Reversing light contact

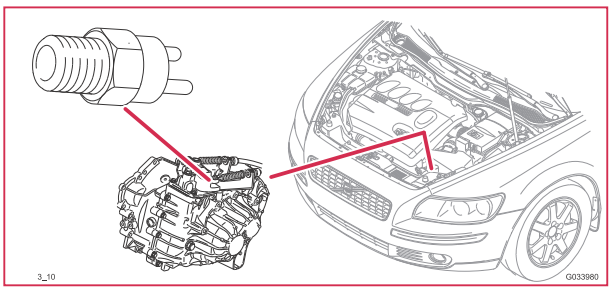

3/19 Rear left door power window switch

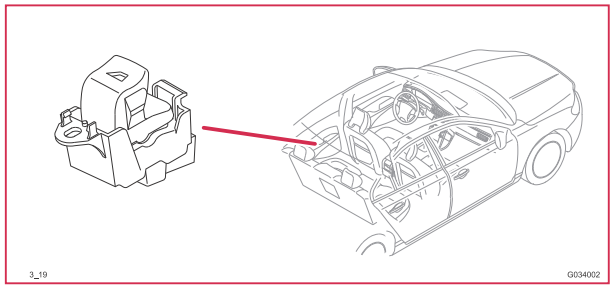

3/21 Rear right door power window switch

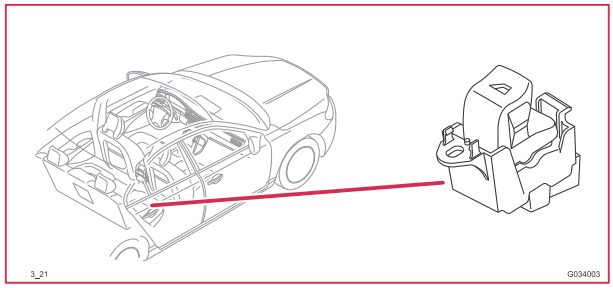

3/25 Power sunroof switch

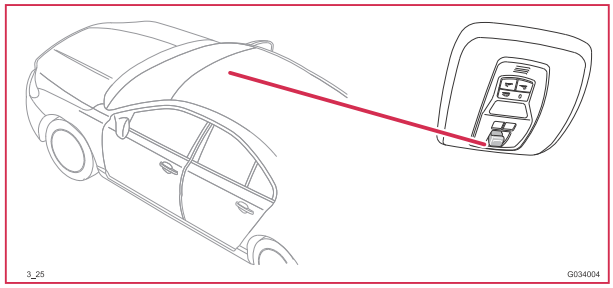

3/26 Switch unit, power driver's seat

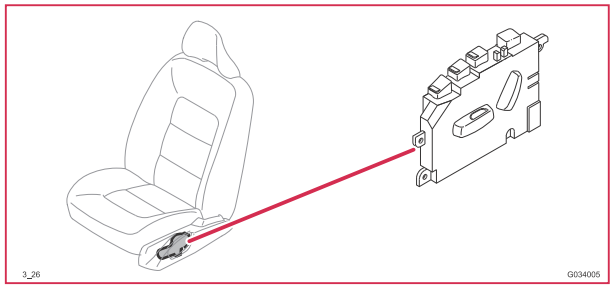

3/27 Switch unit, power passenger seat

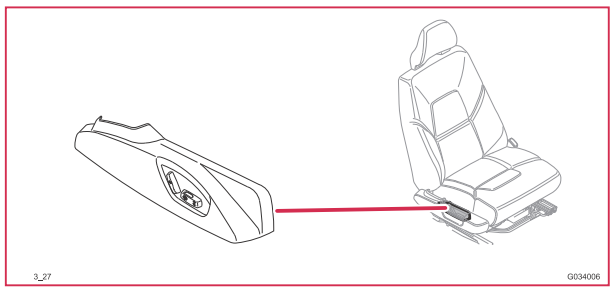

Component illustrations
3/35 - 3/94

3/35 Trunk handle switch, S60

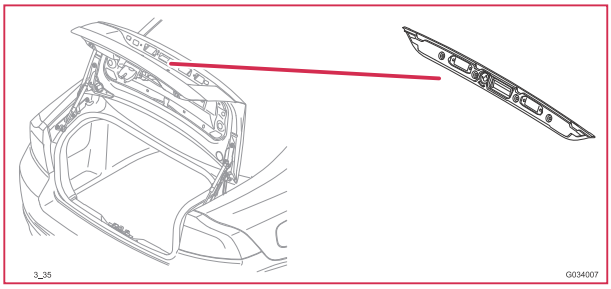

3/35 Trunk handle switch, V60

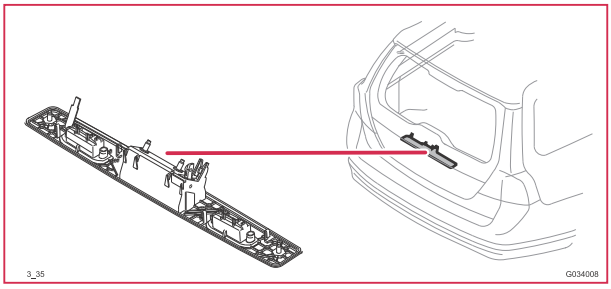

3/37 Horn contact

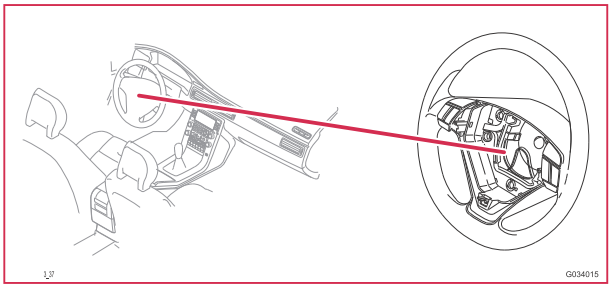

3/62 Hood alarm contact

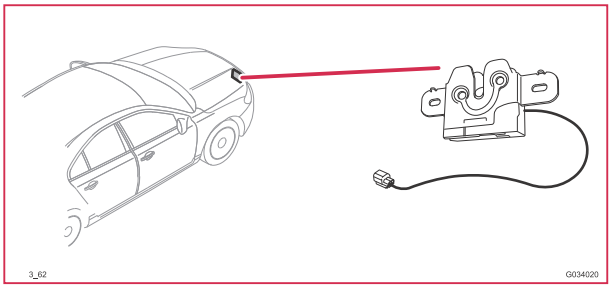

3/65 Switch, heated rear seat

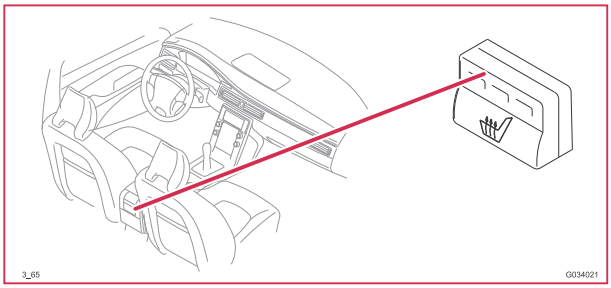

3/80 Switch, central locking system, driver's door

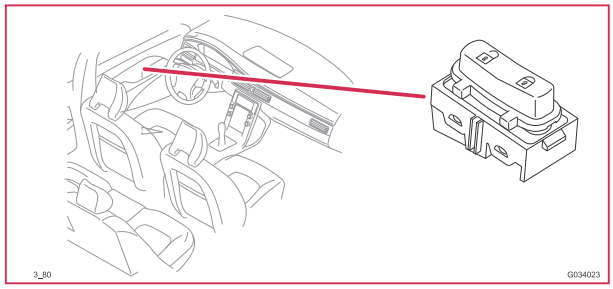

3/82 Switch, central locking system, passenger door

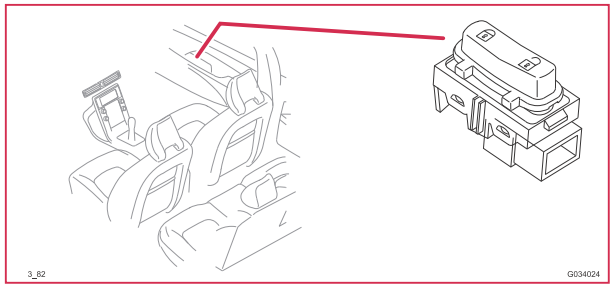

3/83 Switch, passenger door power window

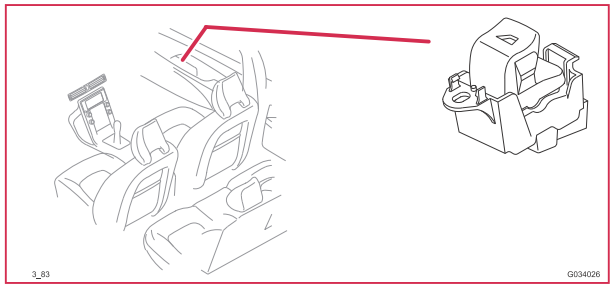

3/93 Belt buckle contact, driver's seat

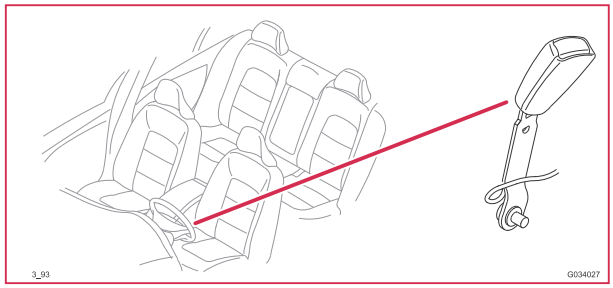

3/94 Belt buckle contact, passenger seat

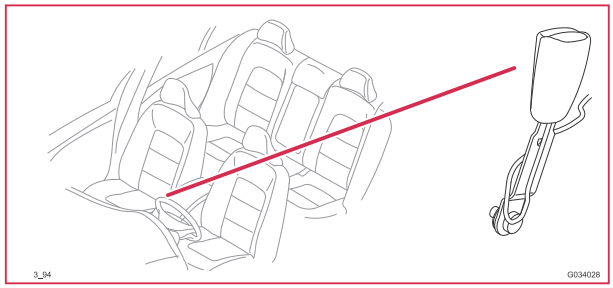

Component illustrations
3/111 - 3/131

3/111 Light Switch Module (LSM)

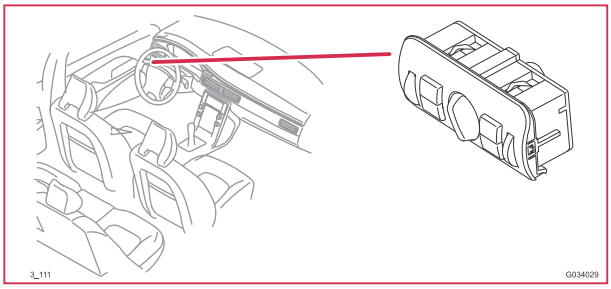

3/112 Climate Control Module (CCM)

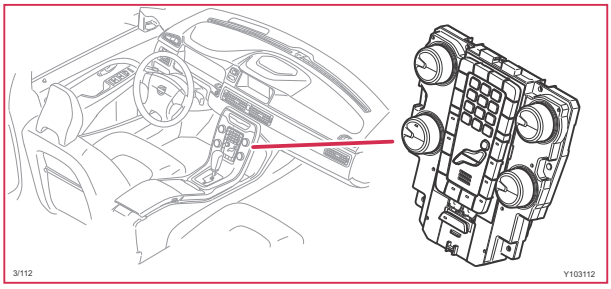

3/113 Rear adjustable head restraint relay

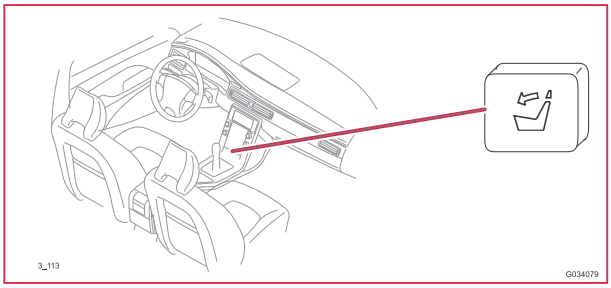

3/117 Switch unit, dome light

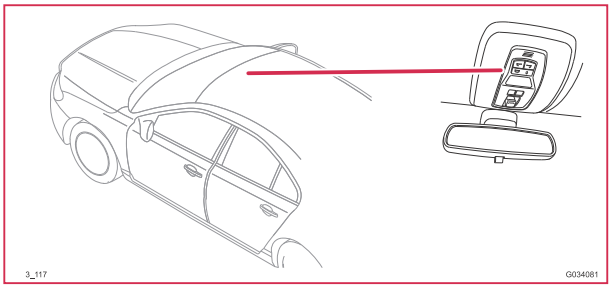

3/126 Driver door module (DDM)

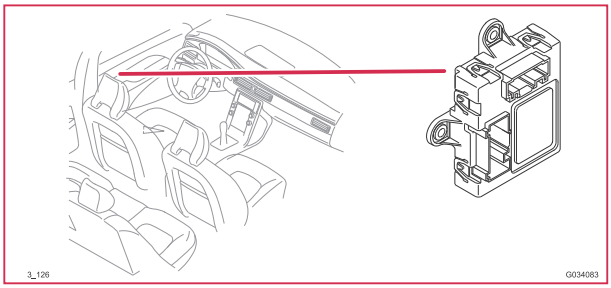

3/127 Passenger door module (PDM)

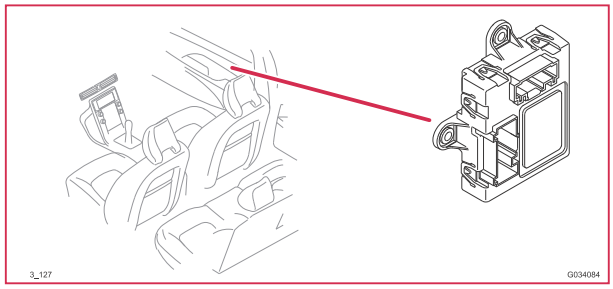

3/128 Left rear door module (LDM)

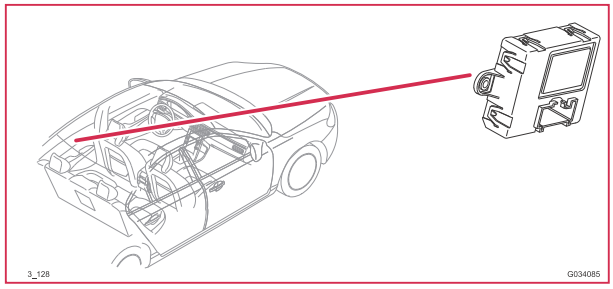

3/129 Right rear door module (RDM)

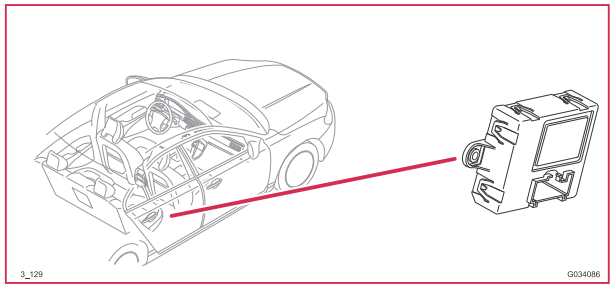

3/130 Steering Wheel Module (SWM)

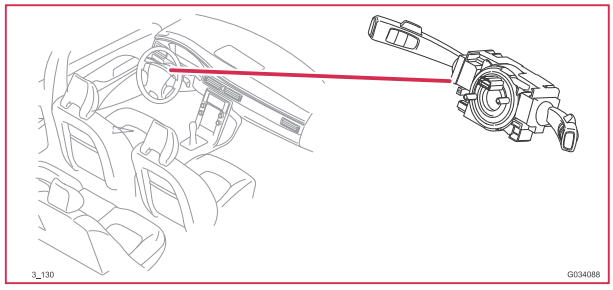

3/131 Steering wheel switch right (SWSR)

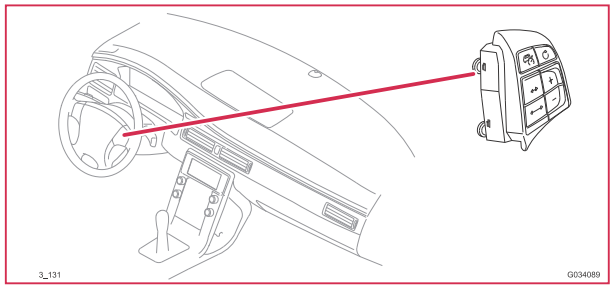

Component illustrations
3/135 - 3/255

3/135 RTI switch

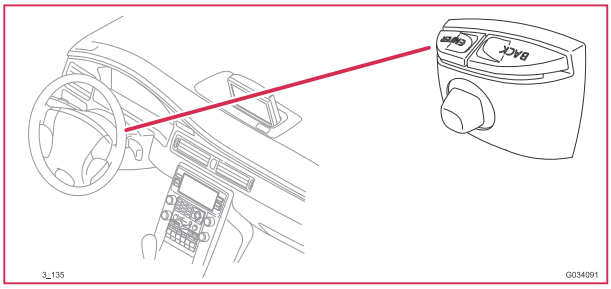

3/156 Gear Selector Module (GSM)

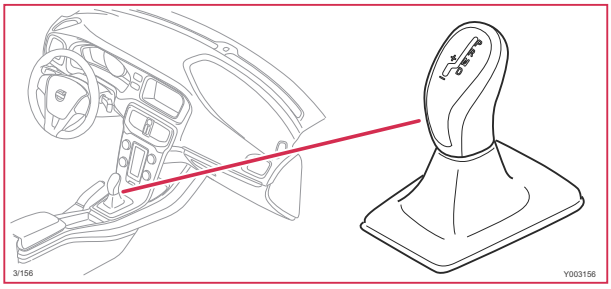

3/157 Switch, passenger side airbag

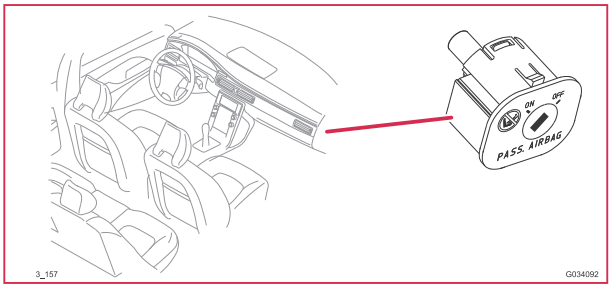

3/173 Switch, trunk lid private lock

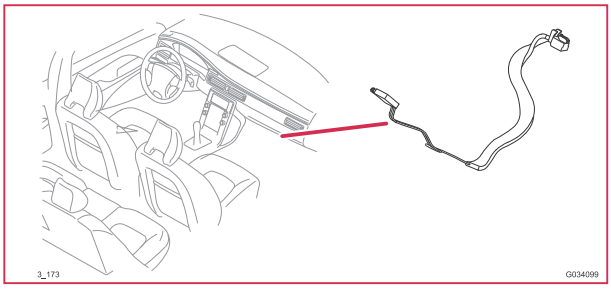

3/176 Power window switches, driver's door

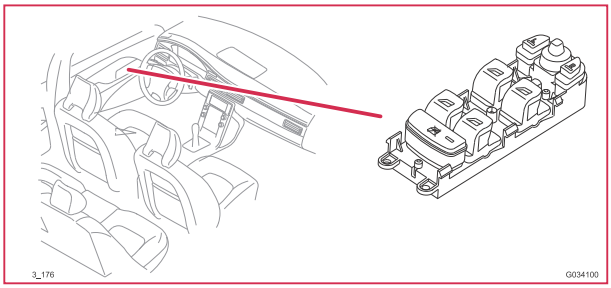

3/217 Belt buckle contact, rear left

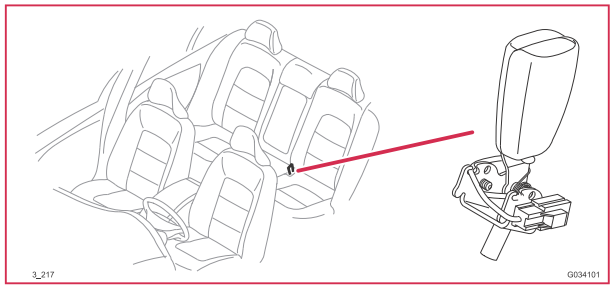

3/218 Belt buckle contact, center rear

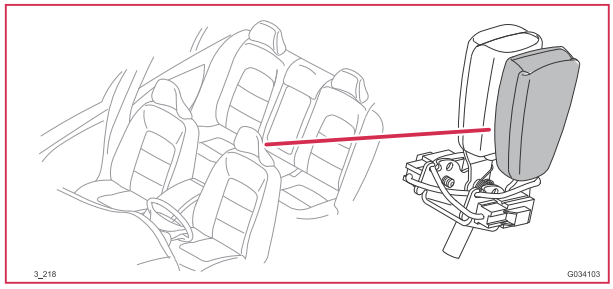

3/219 Belt buckle contact, rear right

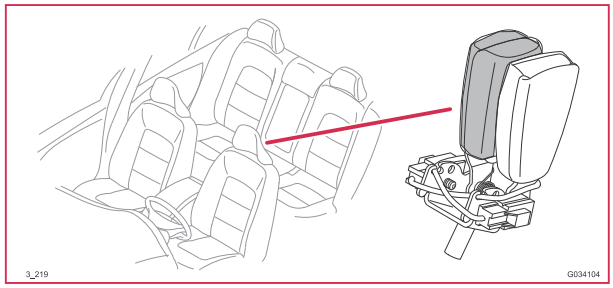

3/225 Continuously Controlled Damping (CCD)

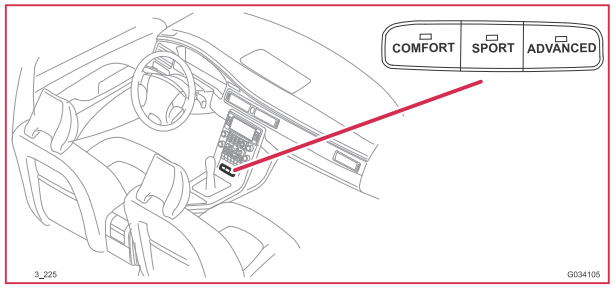

3/255 Position sensor, driver's seat

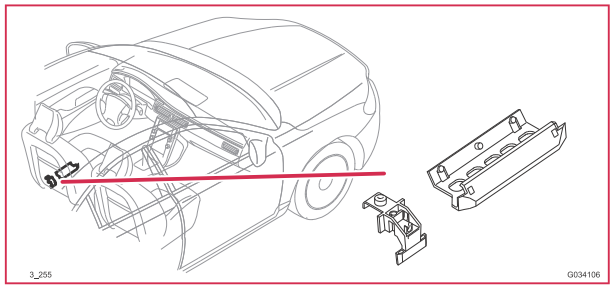

Component illustrations
3/256 - 3/282

3/256 Position sensor, passenger seat

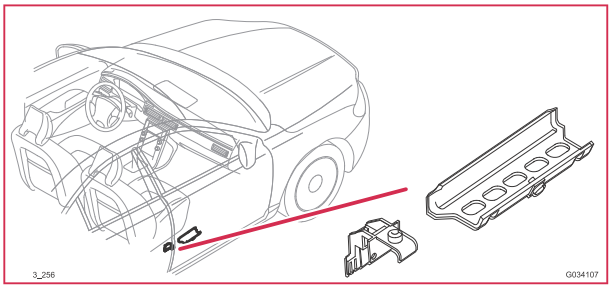

3/267 Switch unit, telematics

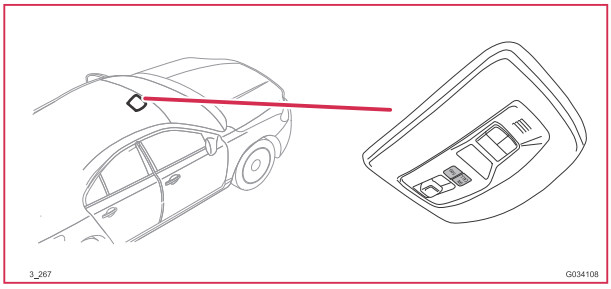

3/271 Contact, immobilizer, clutch pedal

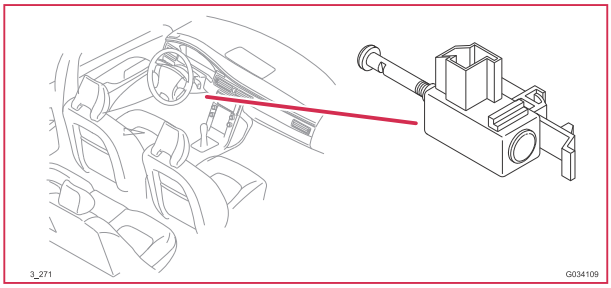

3/272 Switch, parking brake

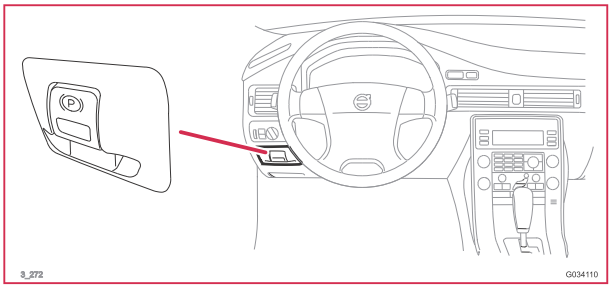

3/273 Lock contact, LH front door

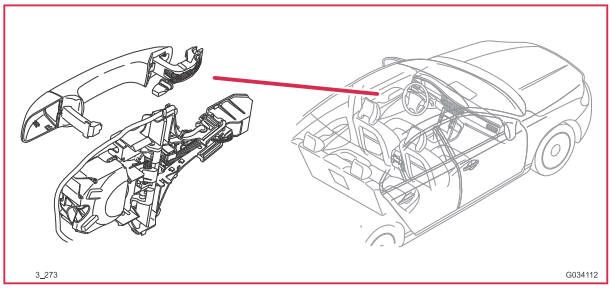

3/274 Lock contact, RH front door

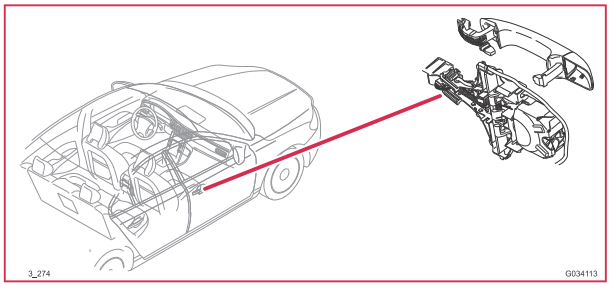

3/275 Lock contact, left rear door

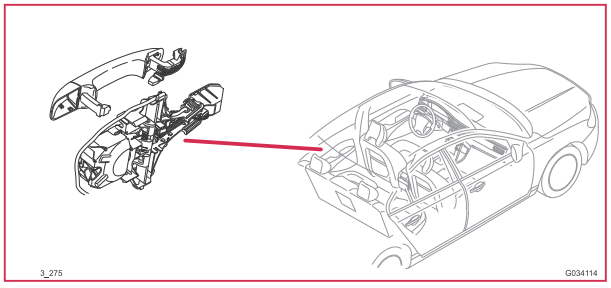

3/276 Lock contact, RH rear door

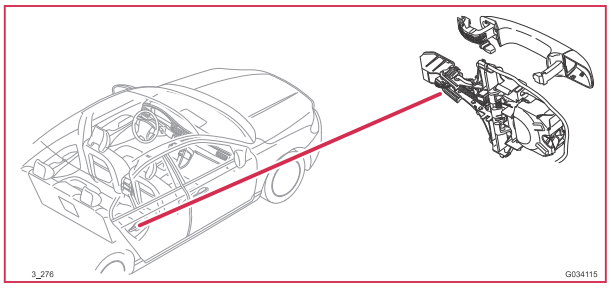

3/281 Infotainment control module (ICM)

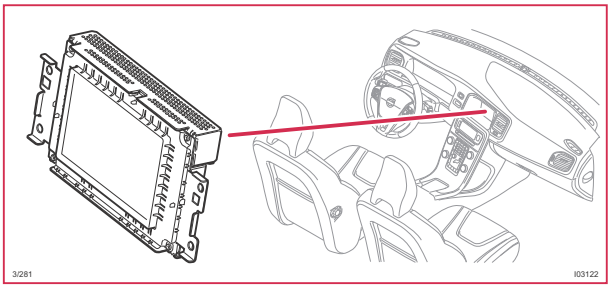

3/282 Switch indicator 1st gear

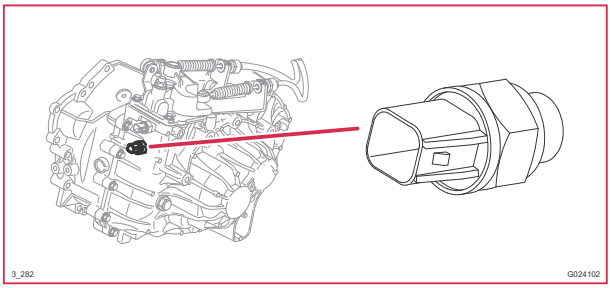

Component illustrations
3/284 - 4/33

3/284 Diagnostic contact, brake light

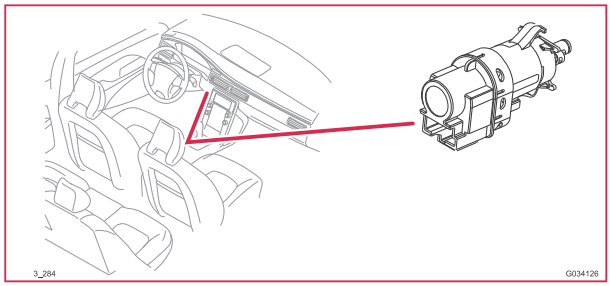

3/293 Handsfree control panel cellular phone

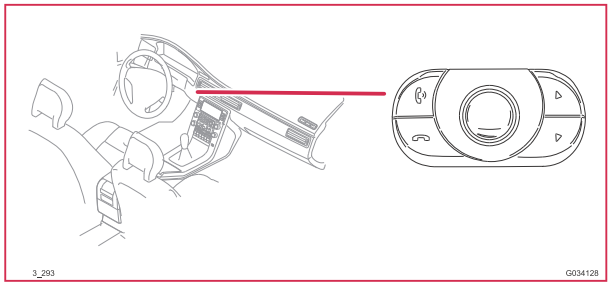

4/6 Climate control system

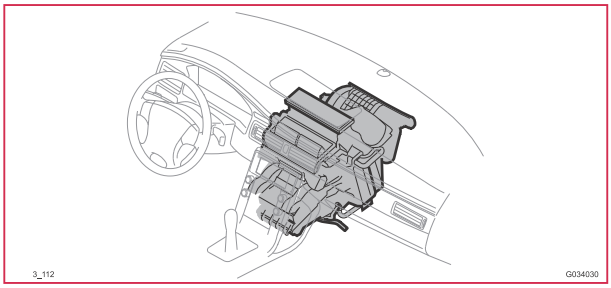

4/7 Combustion Preheater Module (CPM)

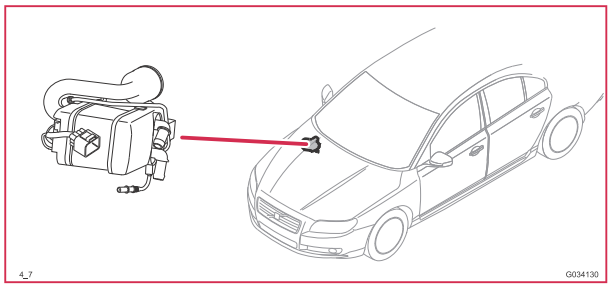

4/9 Supplemental Restraint System (SRS)

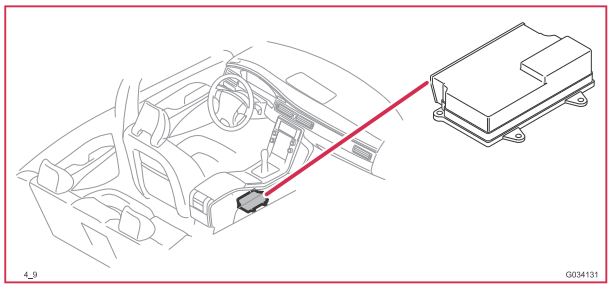

4/16 Brake Control Module (BCM)

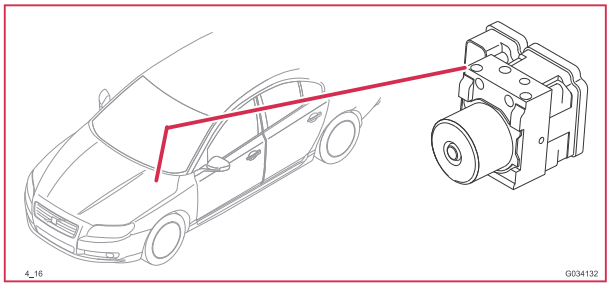

4/28 Transmission Control Module (TCM), TF-80SC

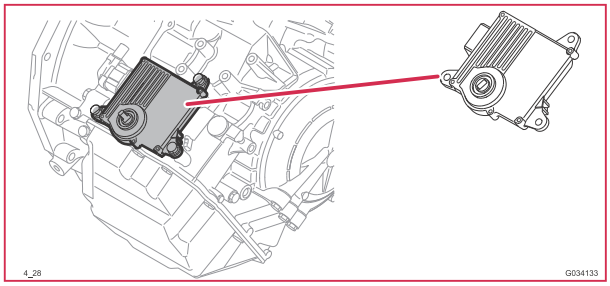

4/28 Transmission Control Module (TCM), MPS6

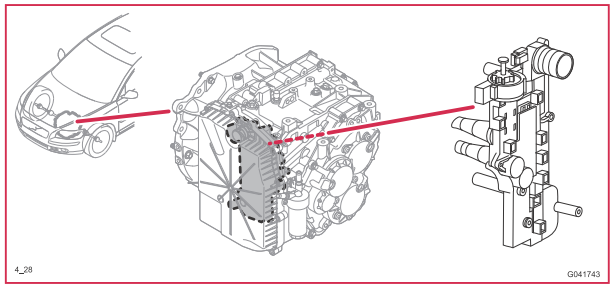

4/31 Fan control module

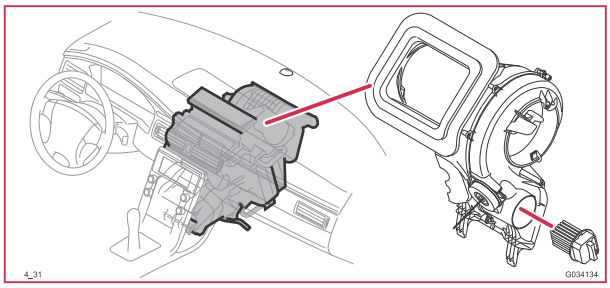

4/33 Sunroof control module

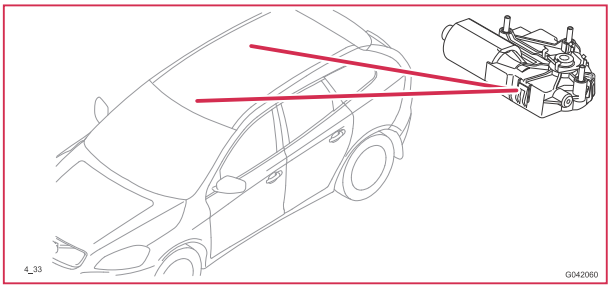

Component illustrations
4/46 - 4/52

4/46 Engine Control Module (ECM), 4-Cyl. Turbo 1,6L

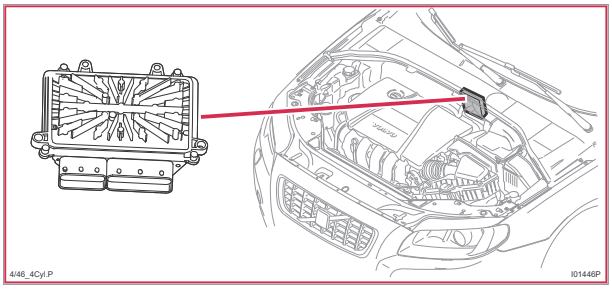

4/46 Engine Control Module (ECM), 4-Cyl. Turbo 2,0L

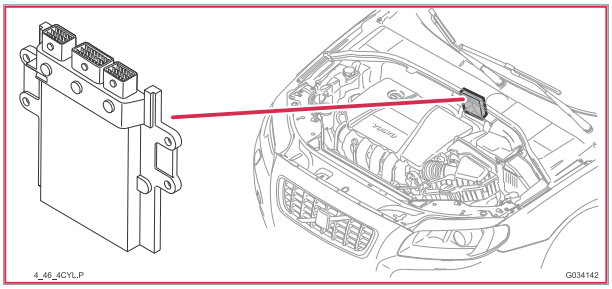

4/46 Engine Control Module (ECM), 4-Cyl. Diesel

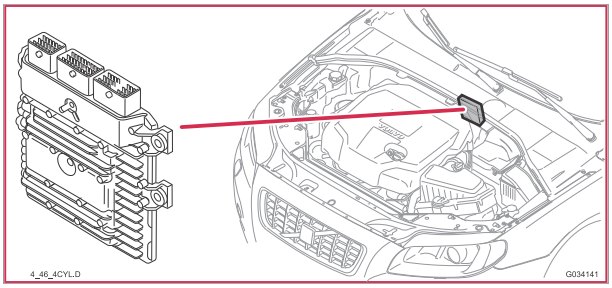

4/46 Engine Control Module (ECM), 5-Cyl. Turbo

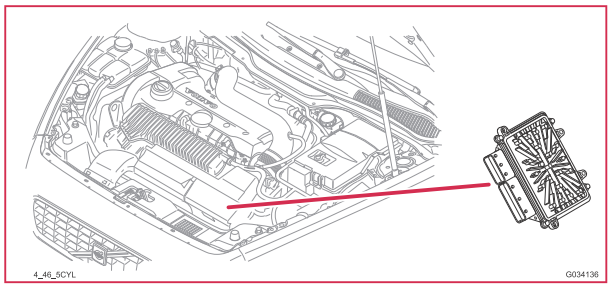

4/46 Engine Control Module (ECM), 5-Cyl. Diesel

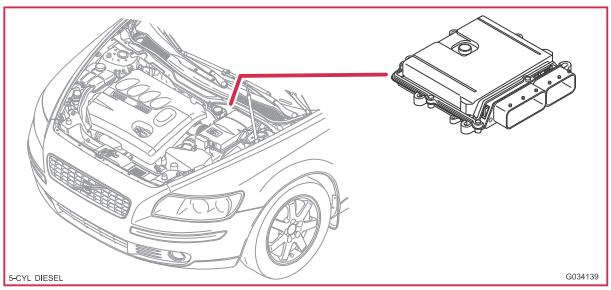

4/46 Engine Control Module (ECM), 6-Cyl.

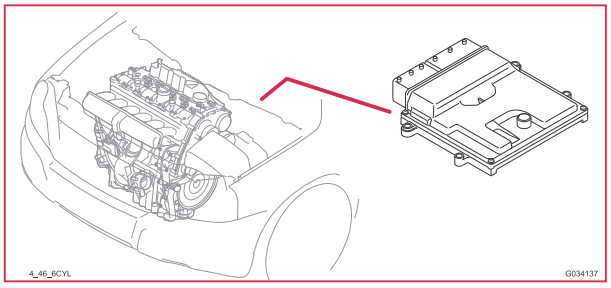

4/50 Throttle unit, 4-Cyl. Turbo

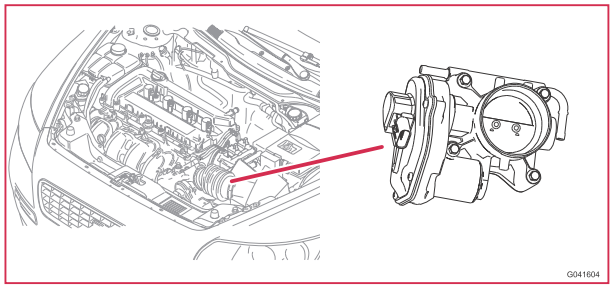

4/50 Throttle unit, 5-Cyl.

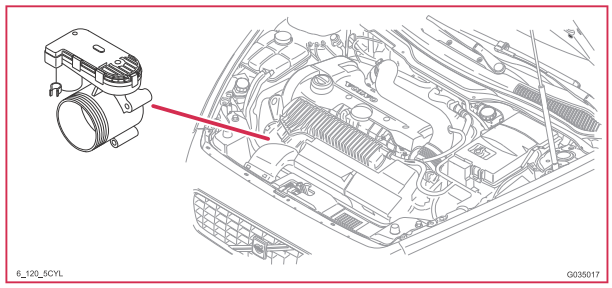

4/50 Throttle unit, Diesel

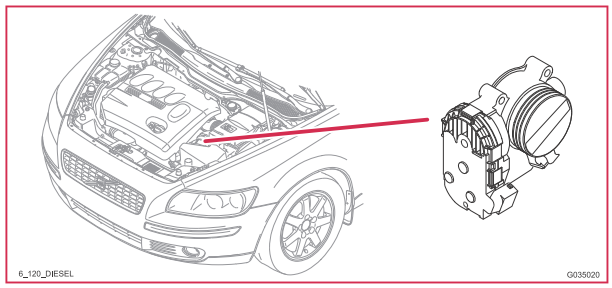

4/52 Power Seat Module (PSM)

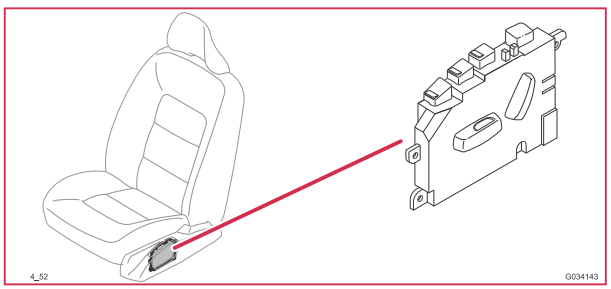

Component illustrations
4/56 - 4/82

4/56 Central Electronic Module (CEM)

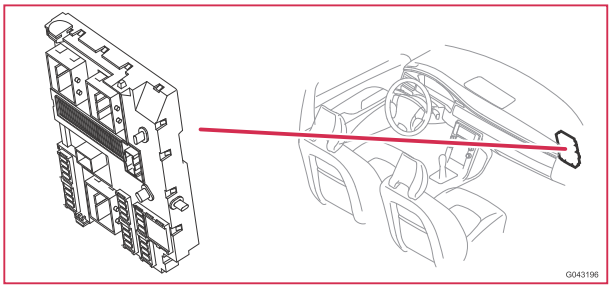

4/56:C1 Central Electronic Module (CEM)

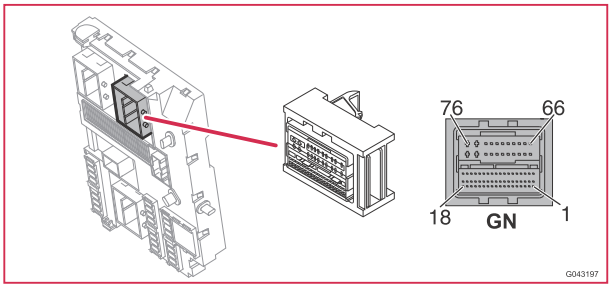

4/56:C2 Central Electronic Module (CEM)

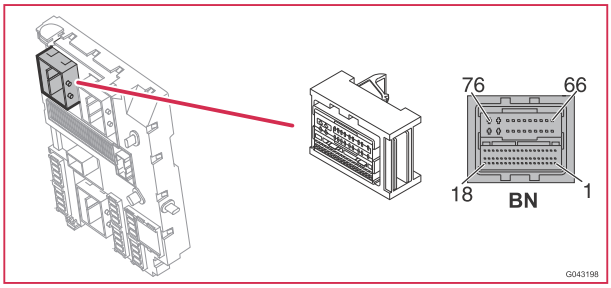

4/56:C3 Central Electronic Module (CEM)

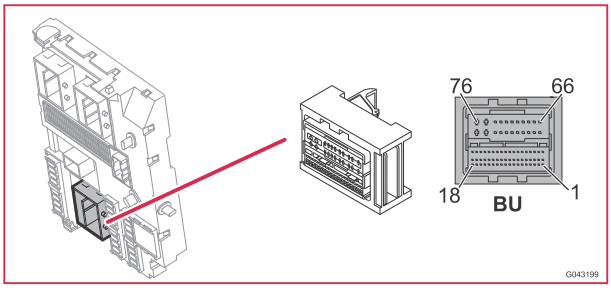

4/56:C4 Central Electronic Module (CEM)

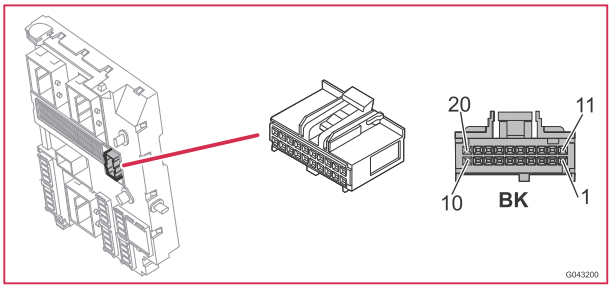

4/56:C5 Central Electronic Module (CEM)

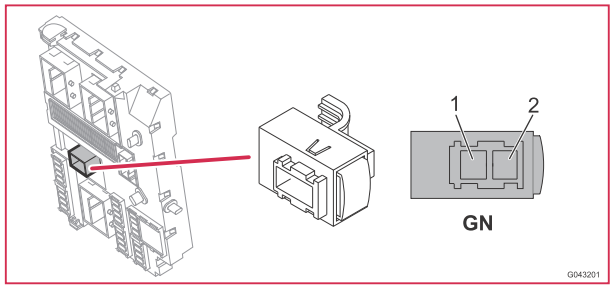

4/68 Steering Wheel Angle Sensor Module (SAS)

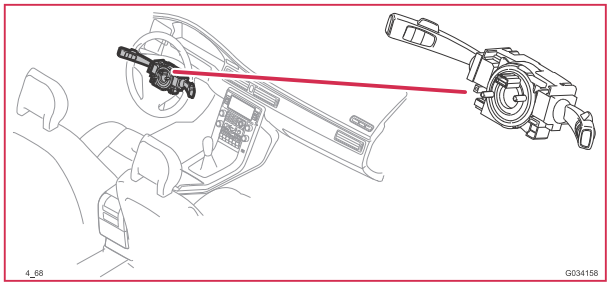

4/71 Cooling fan control module

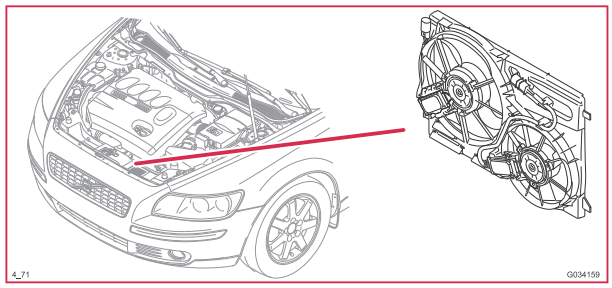

4/80 Forward Sensing Module (FSM)

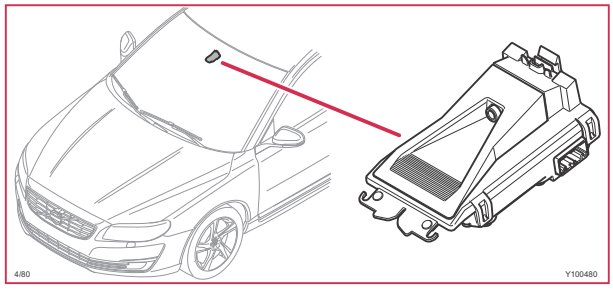

4/82 Differential Electronic Module (DEM)

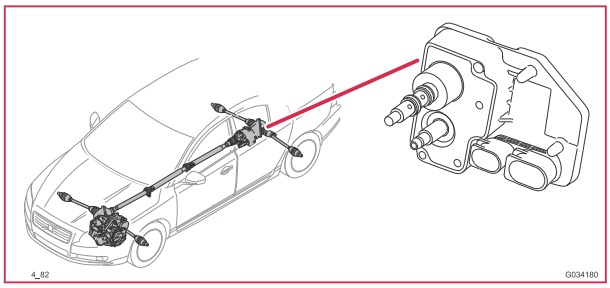

Component illustrations
4/83 - 4/115

4/83 Fuel pump control module

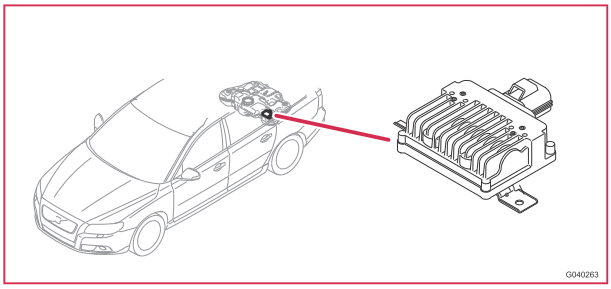

4/84 Suspension Module (SUM)

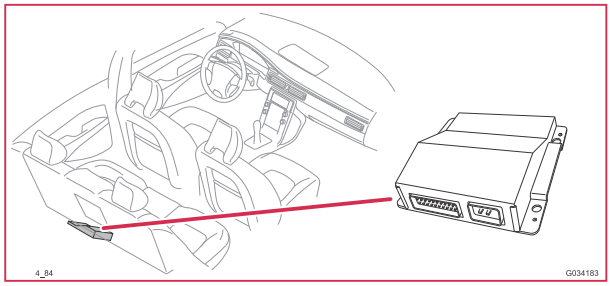

4/86 Parking Assistance Module (PAM)

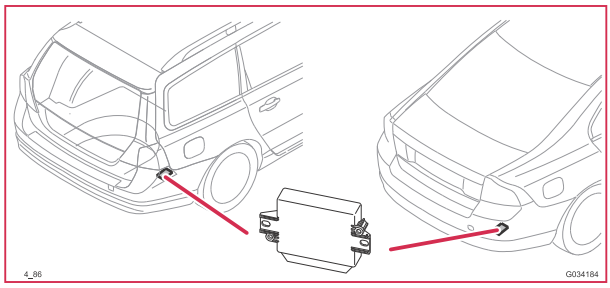

4/93 Keyless vehicle module (KVM)

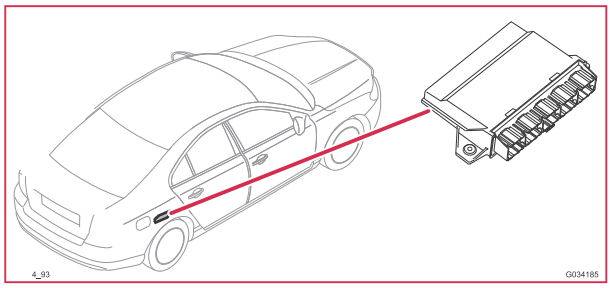

4/99 Control module speed dependent power steering

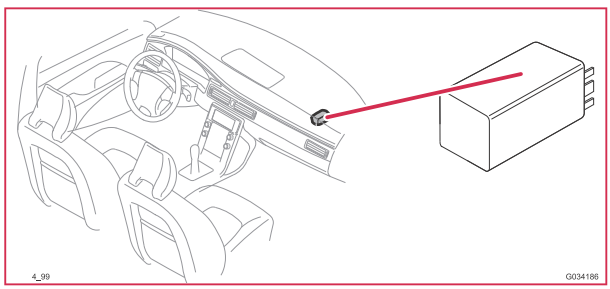

4/102 Steering column lock module (SCL)

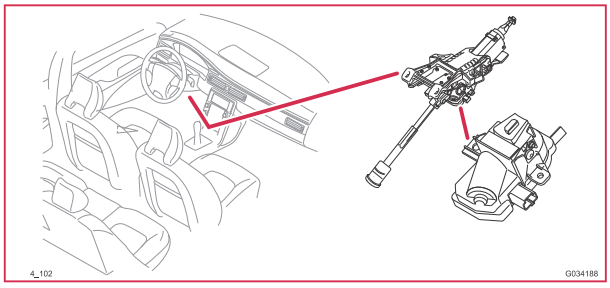

4/106 Control module, parking heater remote start

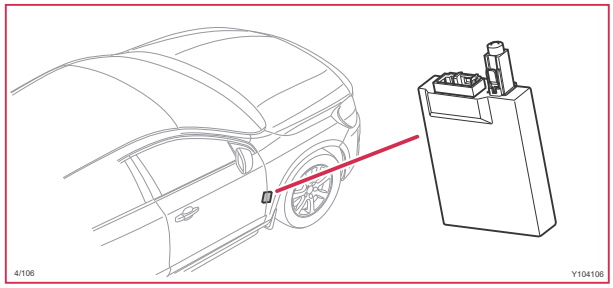

4/109 Glow plug control module

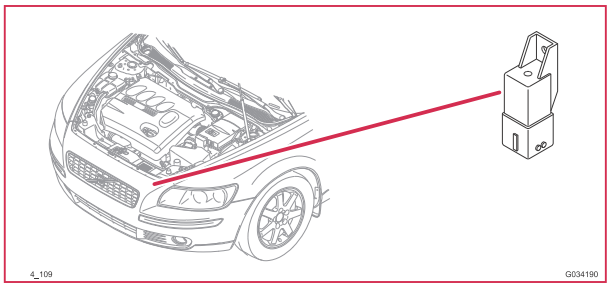

4/110 Trailer Module (TRM)

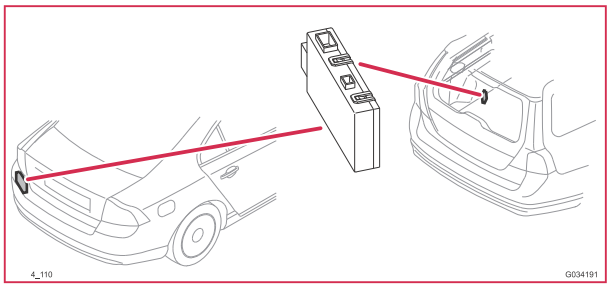

4/115 Park Brake Module (PBM)

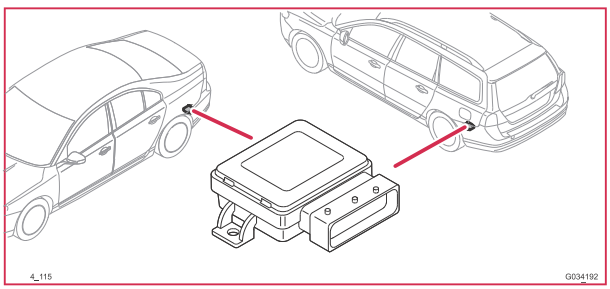

Component illustrations
4/119 - 6/1

4/119 Remote Keyless Entry (RKE)

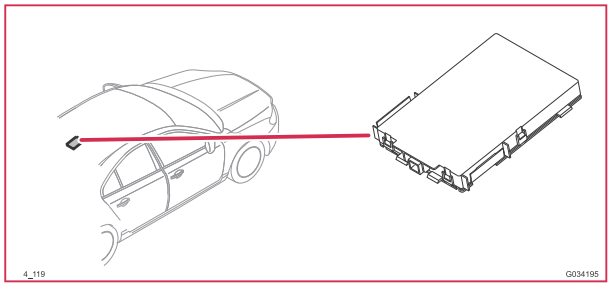

4/119.2 Remote Receiver Module (RRX)

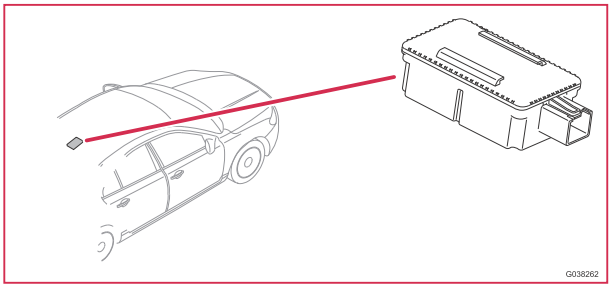

4/120 Parking Assistance Camera (PAC)

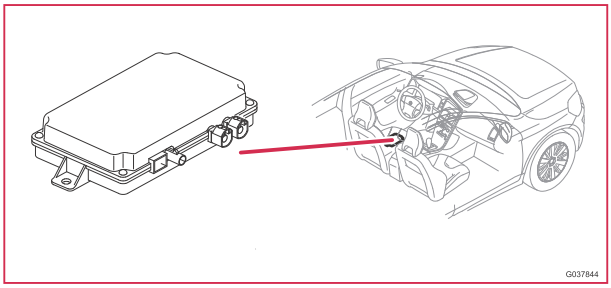

4/125 Closing velocity module (CVM)

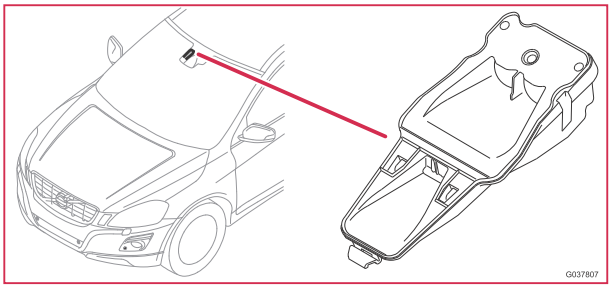

4/126 Side Obstacle Detection Control Module left (SODL)

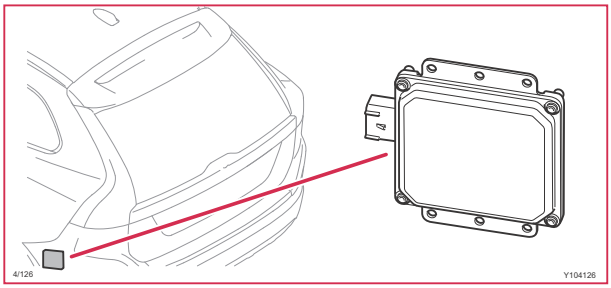

4/127 Side Obstacle Detection Control Module right (SODR)

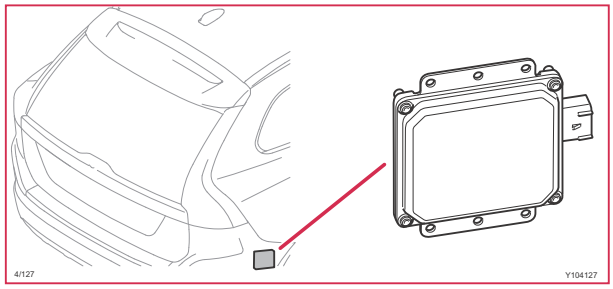

4/136 Active Grillshutter Module (AGM)

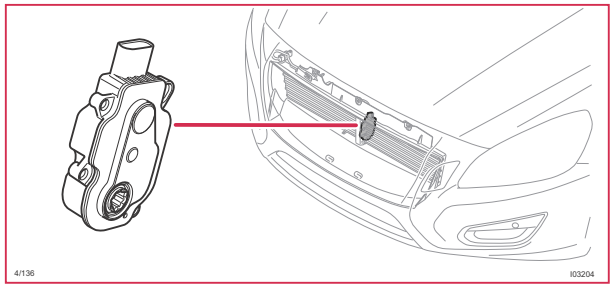

4/148 Heated Steering Wheel Module (HSWM)

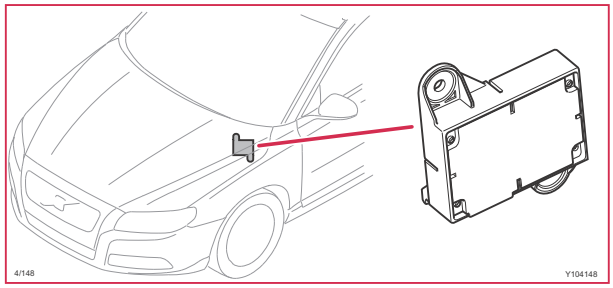

5/1 Driver Information Module (DIM)

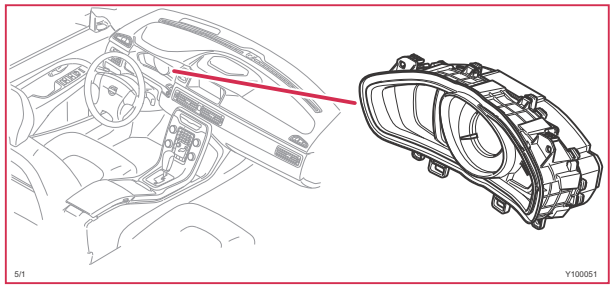

6/1 Wiper motor module (WMM)

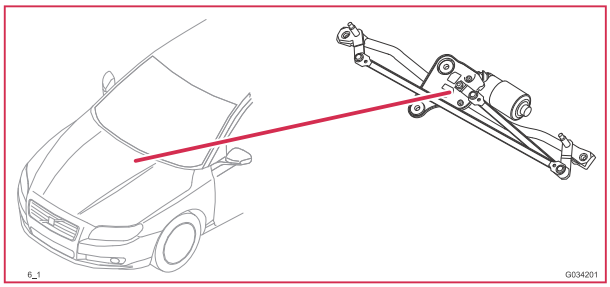

Component illustrations
6/8 - 6/23

6/8 Lock motor central locking, trunk lid/tailgate, S60

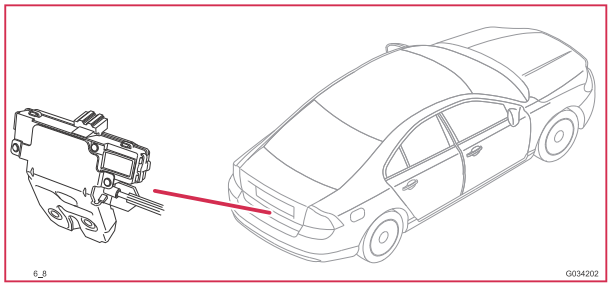

6/8 Lock motor central locking, trunk lid/tailgate, V60

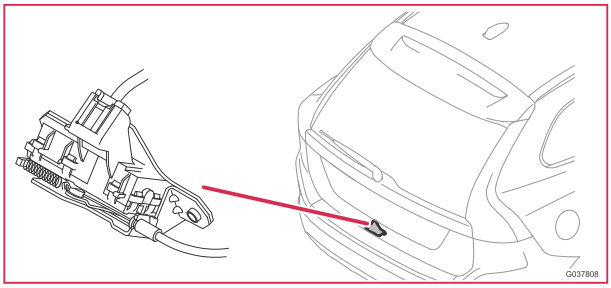

6/16 Driver seat motor, backrest angle

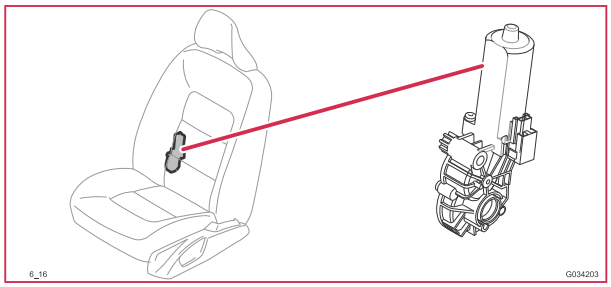

6/17 Driver seat motor, up/down front edge

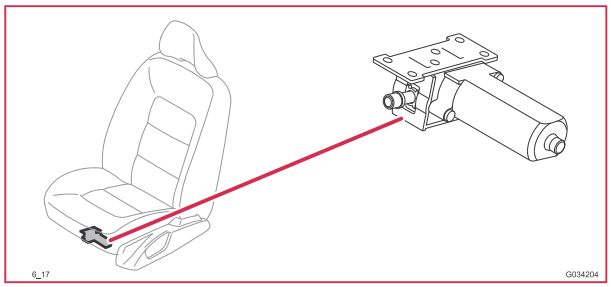

6/18 Driver seat motor, up/down rear edge

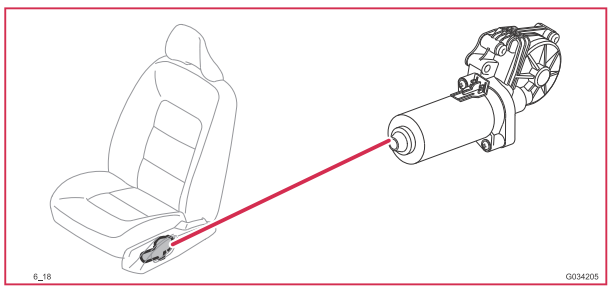

6/19 Driver seat motor, forward/backward

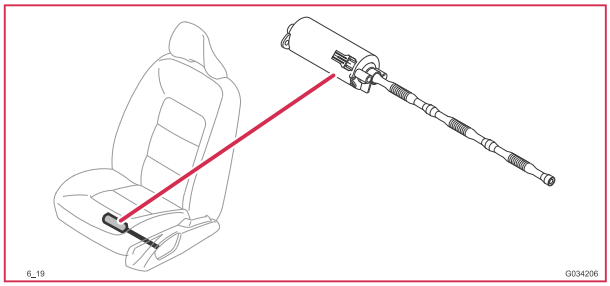

6/20 Passenger seat motor, forward/backward

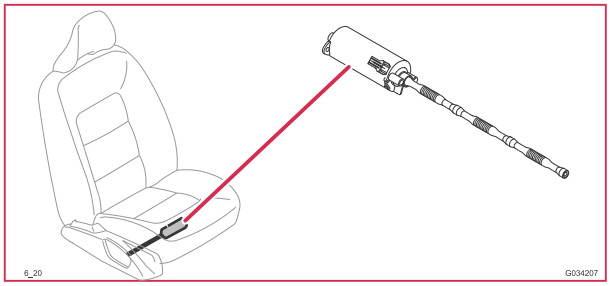

6/21 Passenger seat motor, up/down front edge

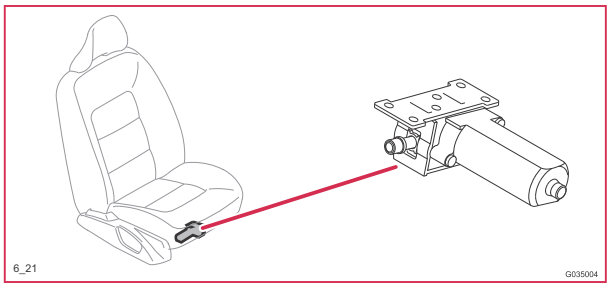

6/22 Passenger seat motor, up/down rear edge

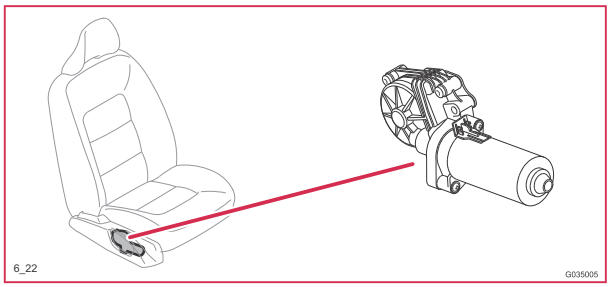

6/23 Passenger seat motor, backrest angle

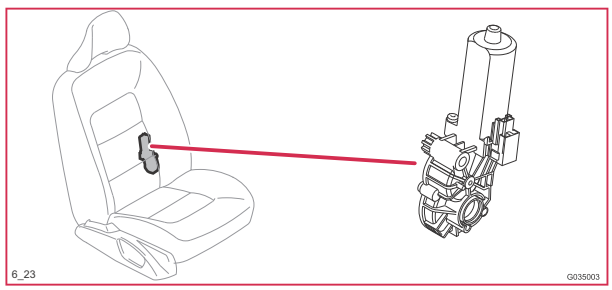

Component illustrations
6/25 - 6/39

6/25 Starter motor

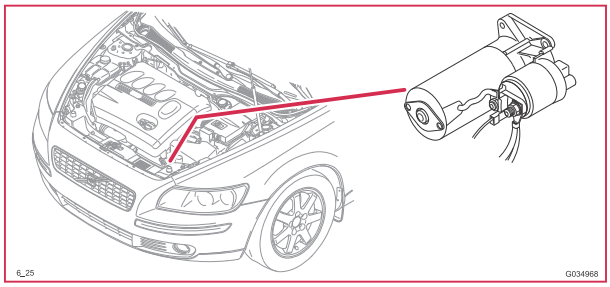

6/26 Alternator Control Module (ACM)

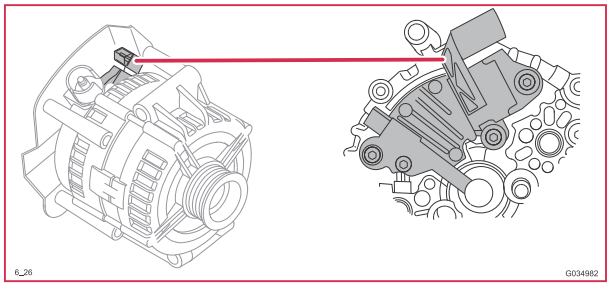

6/28 Motor, passenger compartment fan

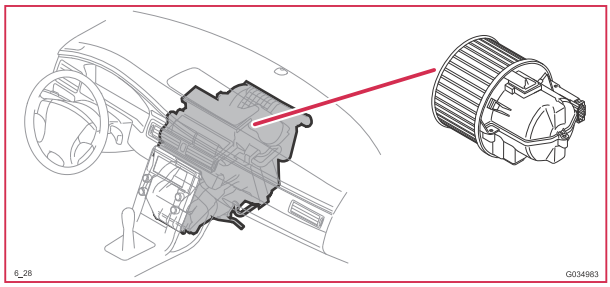

6/32 Rear window wiper motor, V60

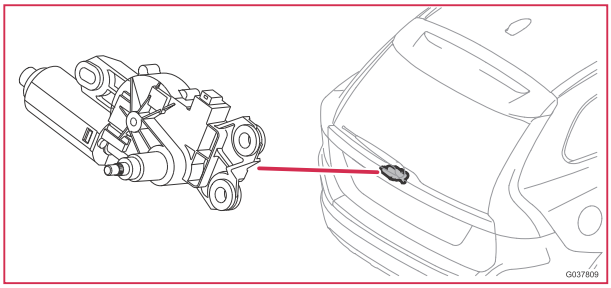

6/33 Fuel pump

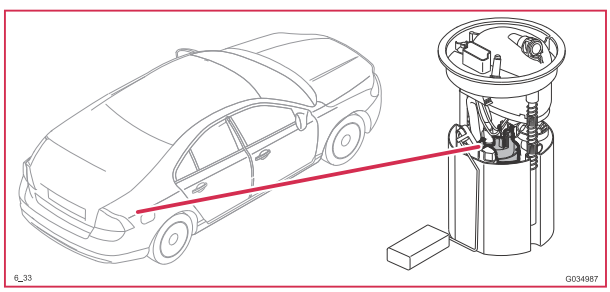

6/35 Fuel pump, auxiliary heater

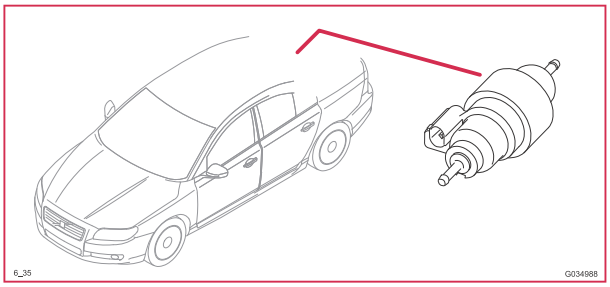

6/36 Lock motor, central locking, LH front door

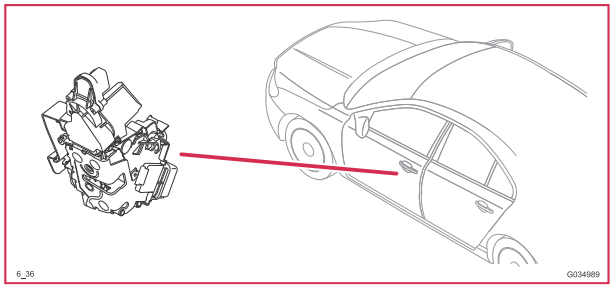

6/37 Lock motor, fuel filler cover

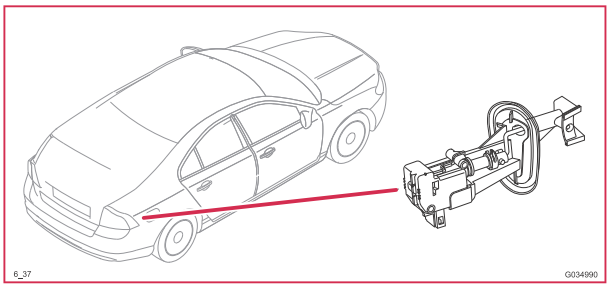

6/38 Left-hand headlight level adjustment motor

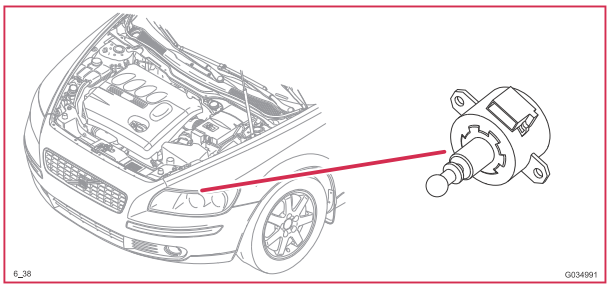

6/39 Right-hand headlight level adjustment motor

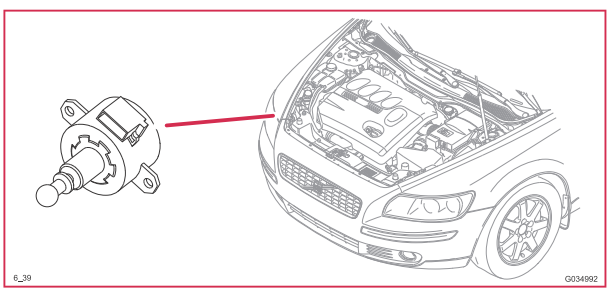

Component illustrations
6/48 - 6/63

6/48 Damper Motor Module (DMM), recirculation

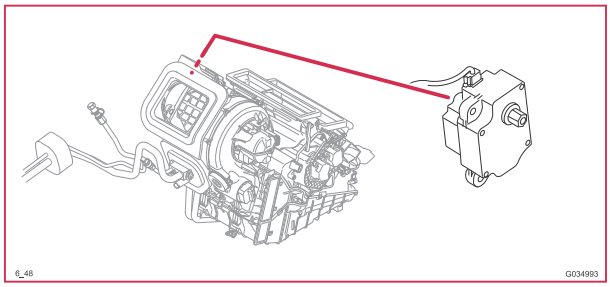

6/55 Lock motor, central locking, RH front door

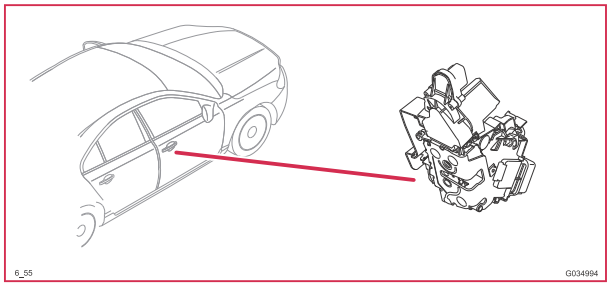

6/56 Lock motor, central locking, RH rear door

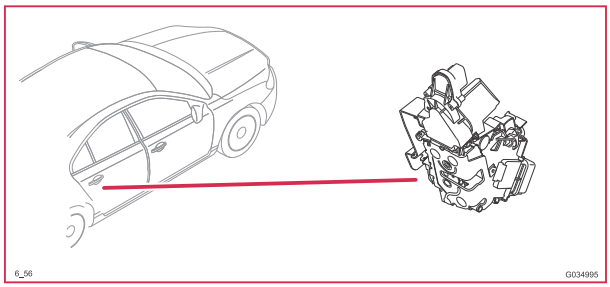

6/57 Lock motor, central locking, LH rear door

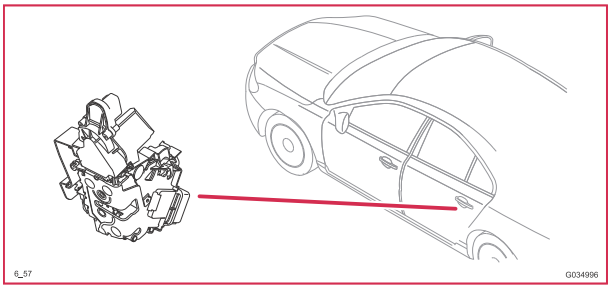

6/58 Motor, front driver's door power window

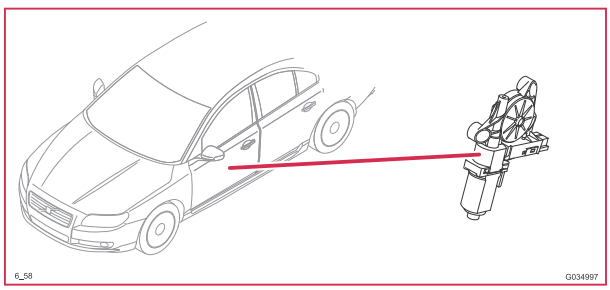

6/59 Motor, rear left power window

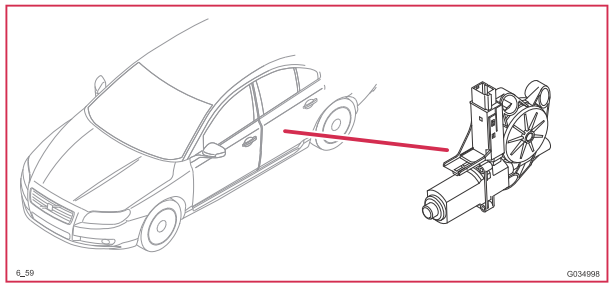

6/60 Motor, front passenger door power window

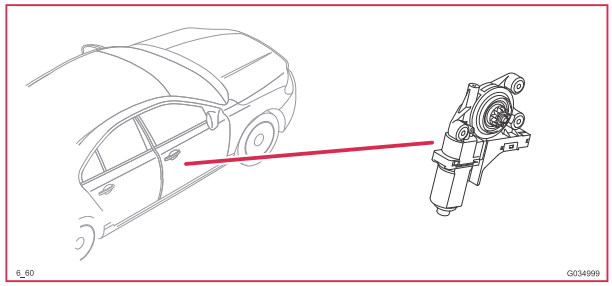

6/61 Motor, rear right power window

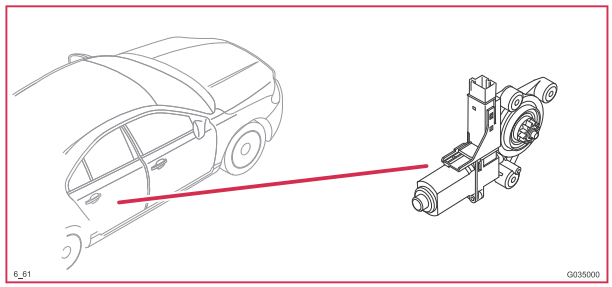

6/62 Left-hand power door mirror

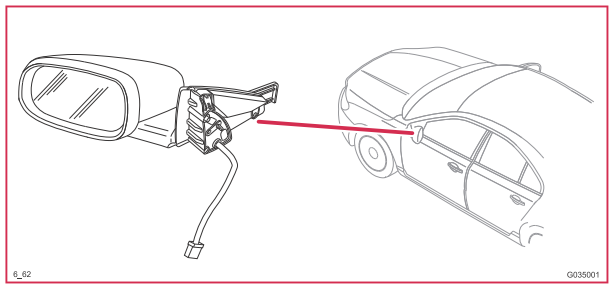

6/63 Right-hand power door mirror

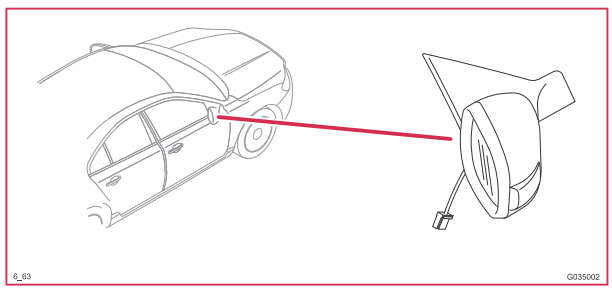

Component illustrations
6/67 - 6/127

6/67 Pump, fuel leakage control

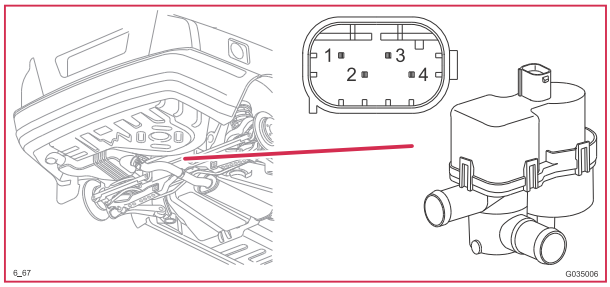

6/71 Valve, speed-dependent power steering

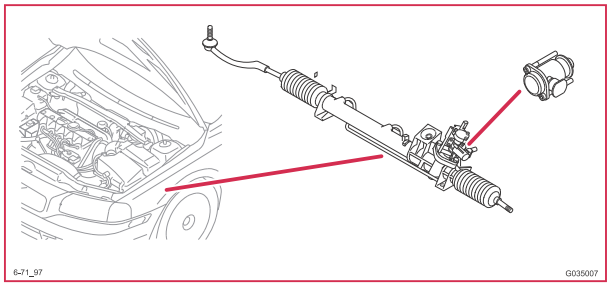

6/73 Coolant pump

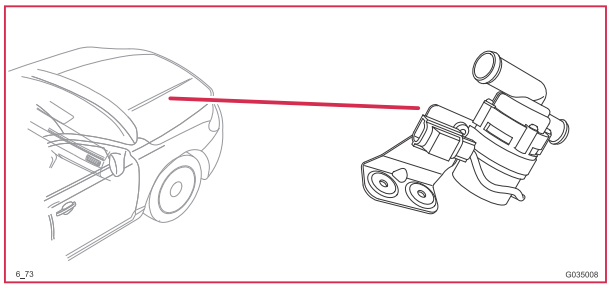

6/95 Damper Motor Module (DMM), temperature, left side

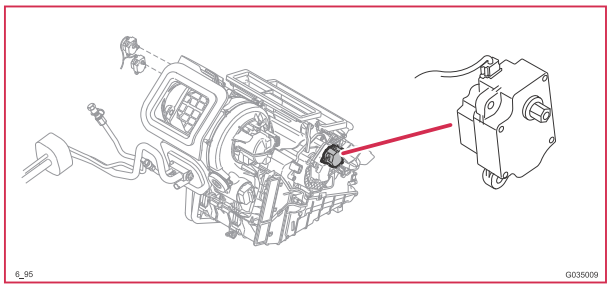

6/96 Damper Motor Module (DMM), temperature, right side

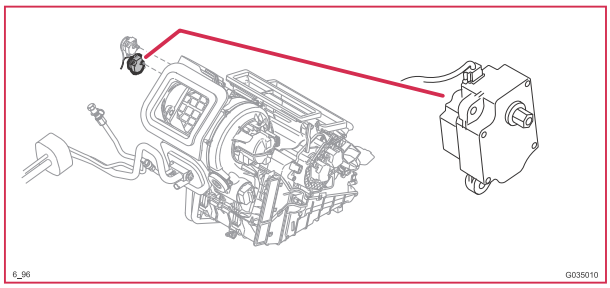

6/102 Damper Motor Module (DMM), defroster

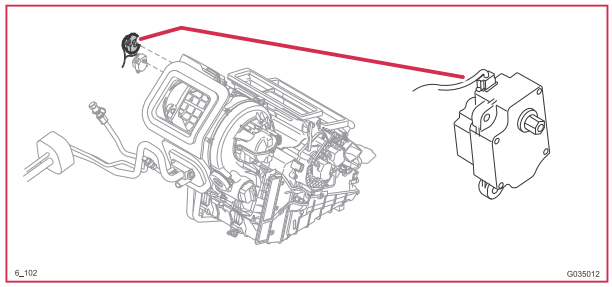

6/103 Damper Motor Module (DMM), floor/ventilation

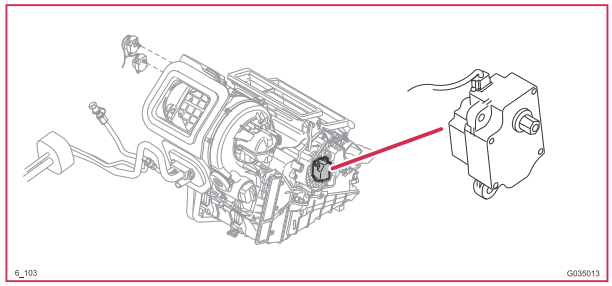

6/104 High pressure headlight washer motor

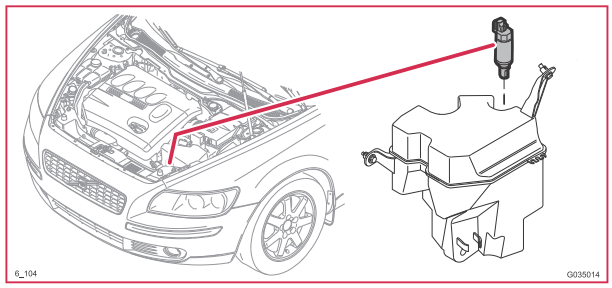

6/120 Throttle unit, 6-Cyl.

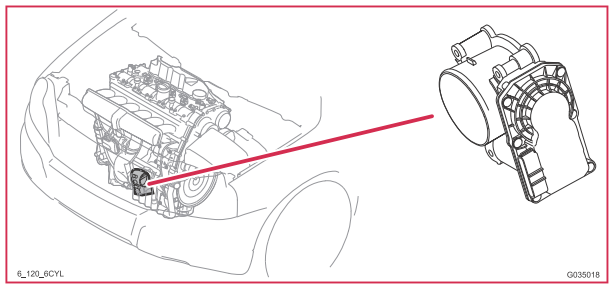

6/127 Washer motor

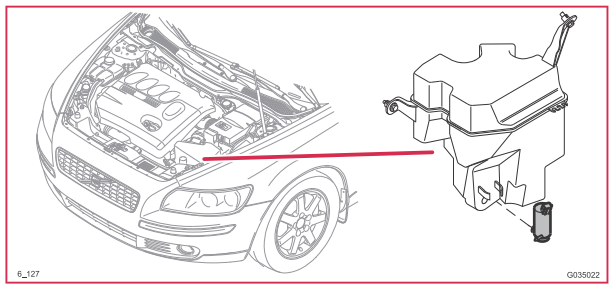

Component illustrations
6/141 - 7/8

6/141 Motor folding head restraint left

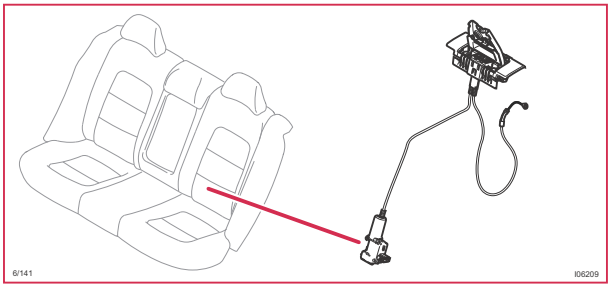

6/142 Motor folding head restraint right

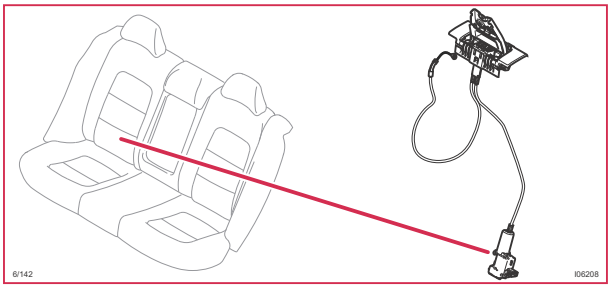

6/146 Lock motor, rear left brake disc

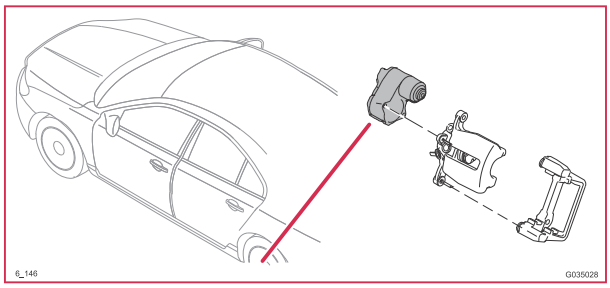

6/147 Lock motor, rear right brake disc

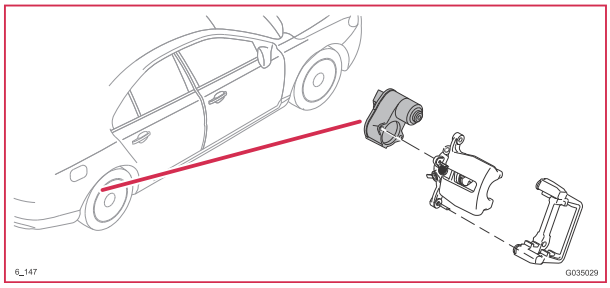

6/164 Electrical power steering module (EHPS)

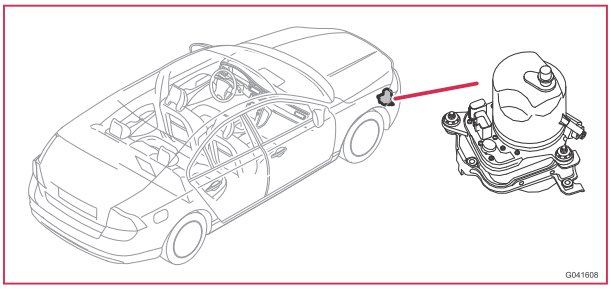

6/179 Electric oil pump

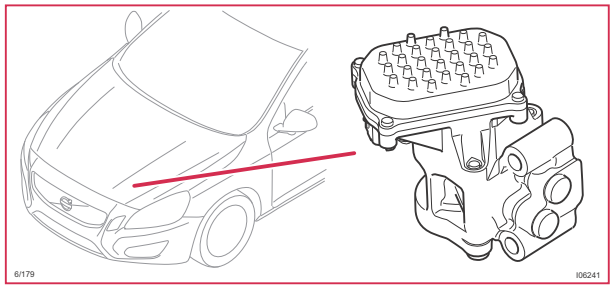

7/4 Brake fluid level sensor

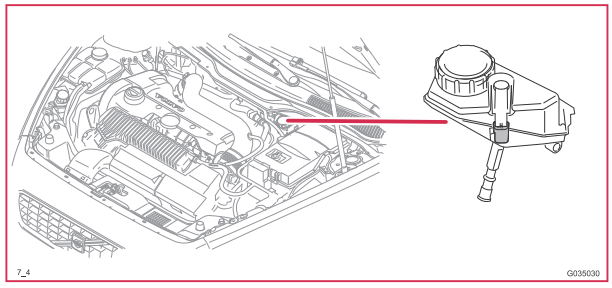

7/5 Washer fluid level sensor

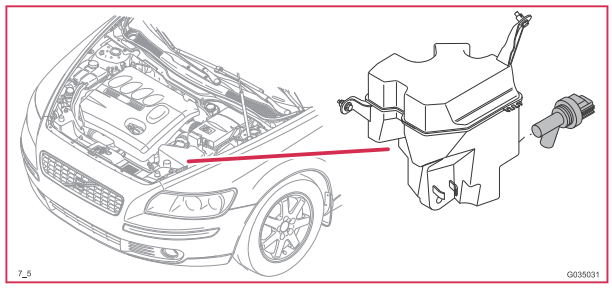

7/6 Oil pressure sensor

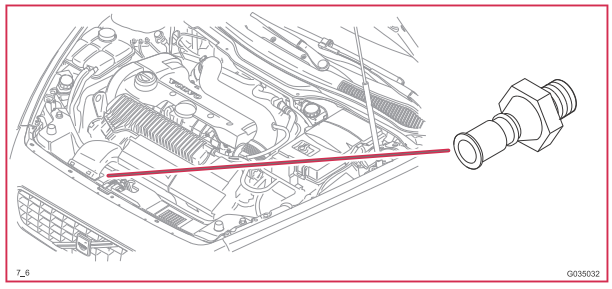

7/8 Pressure sensor, climate control system

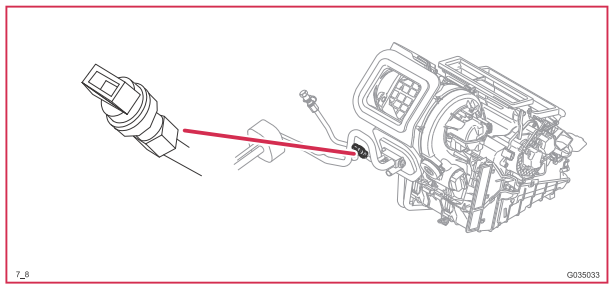

Component illustrations
7/12 - 7/25

7/12 Solar sensor, twilight sensor and indicator alarm

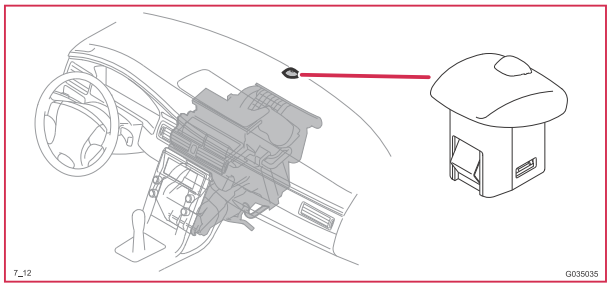

7/15 Front heated oxygen sensor, 4-Cyl. Turbo

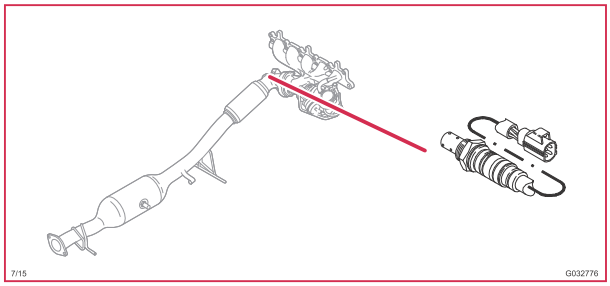

7/15 Front heated oxygen sensor, 5-Cyl.

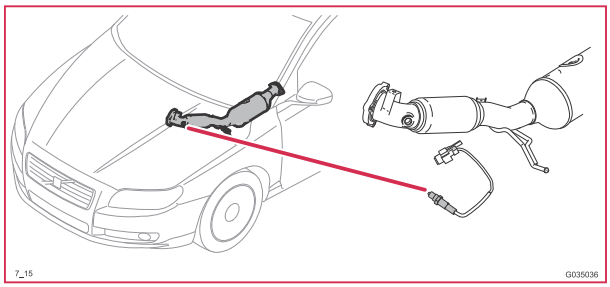

7/15 Front oxygen sensor, bank 1, 6-Cyl.

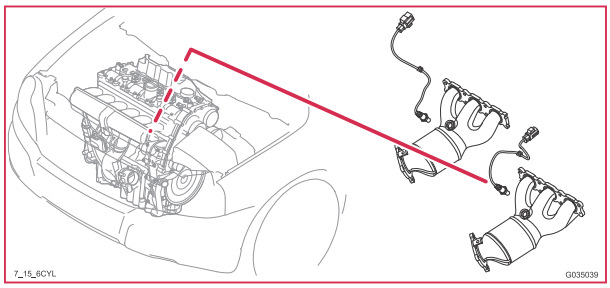

7/15 Front heated oxygen sensor, Diesel

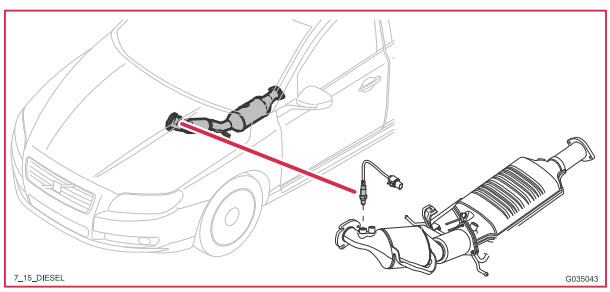

7/16 Coolant temperature sensor

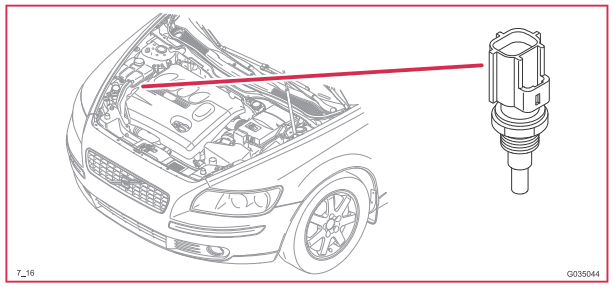

7/17 Mass airflow sensor (MAF)

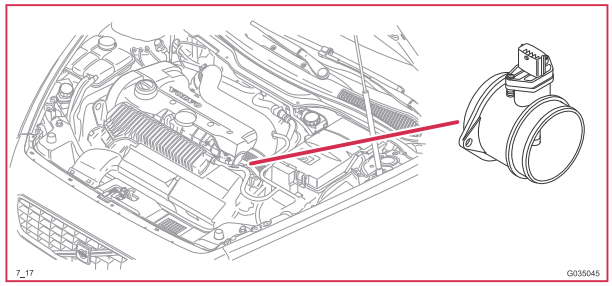

7/23 Rear knock sensor

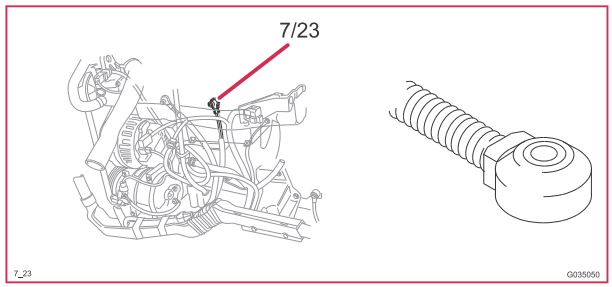

7/24 Front knock sensor

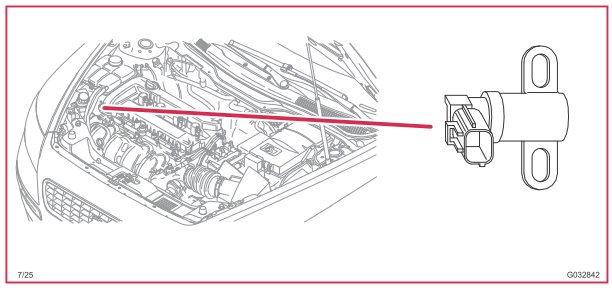

7/25 Impulse sensor, Diesel

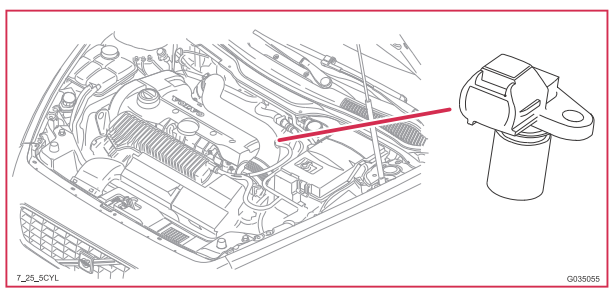

Component illustrations
7/25 - 7/73

7/25 Impulse sensor

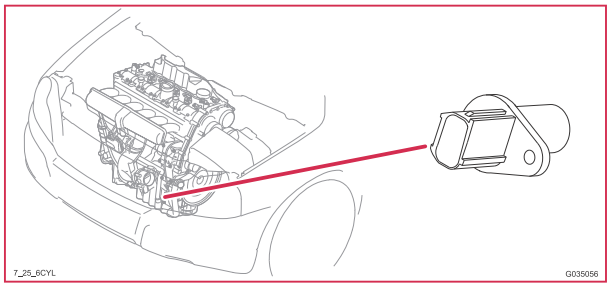

7/51 Accelerator pedal sensor

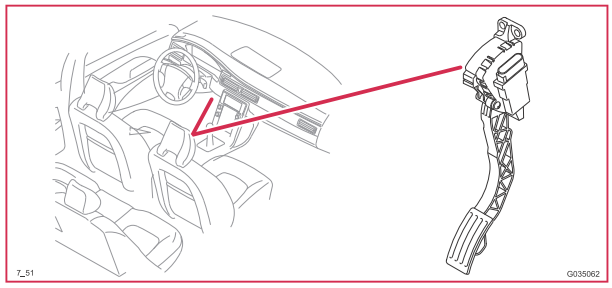

7/31 Left-hand front ABS sensor

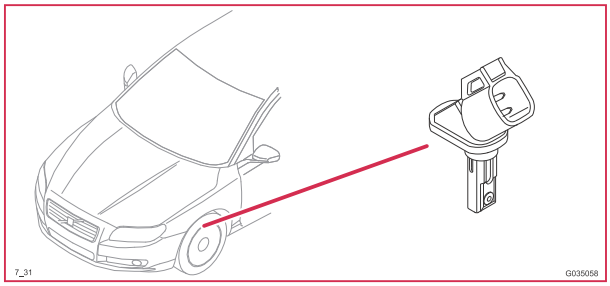

7/56 Left-hand rear ABS sensor

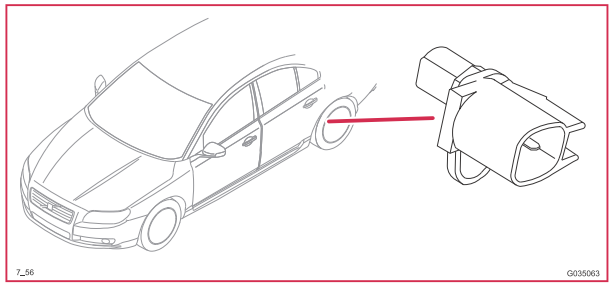

7/32 Right-hand front ABS sensor

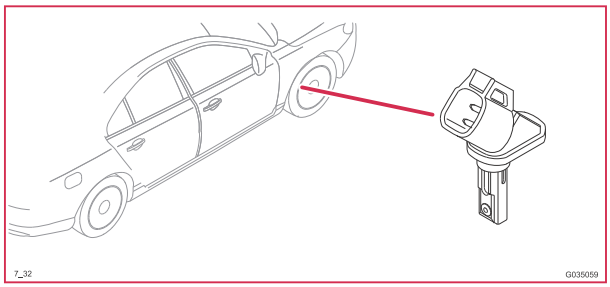

7/57 Right-hand rear ABS sensor

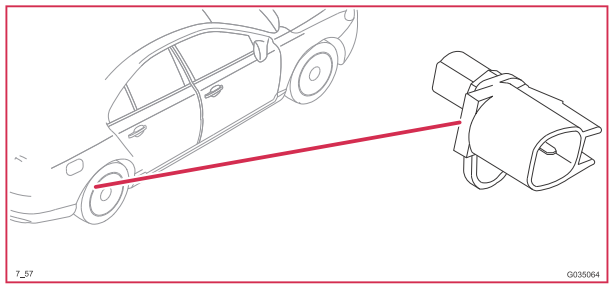

7/35 Oil level sensor

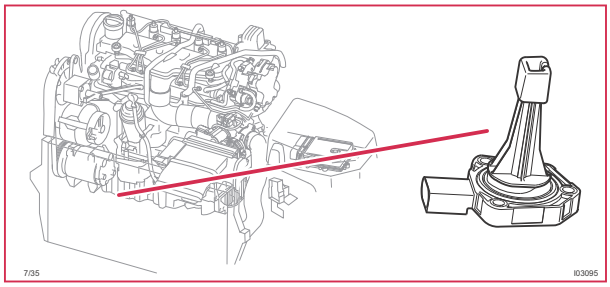

7/69 Outside temperature sensor

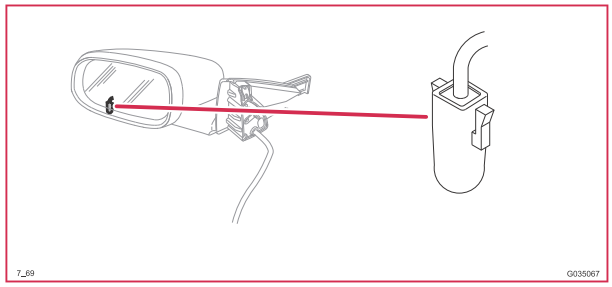

7/41 Temperature sensor, evaporator

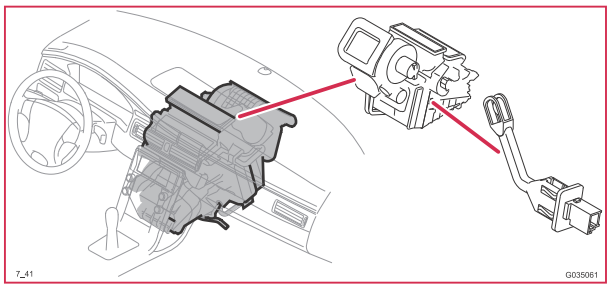

7/73 Coolant level sensor

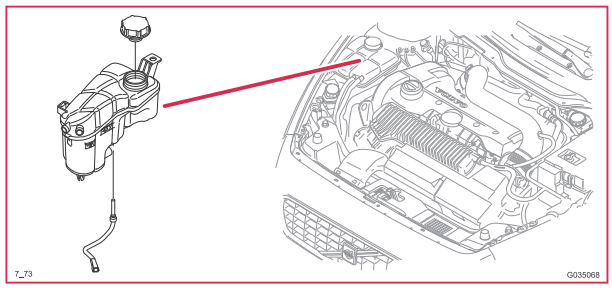

Component illustrations
7/81 - 7/90

7/81 Pressure sensor, intake manifold, 4-Cyl. Turbo

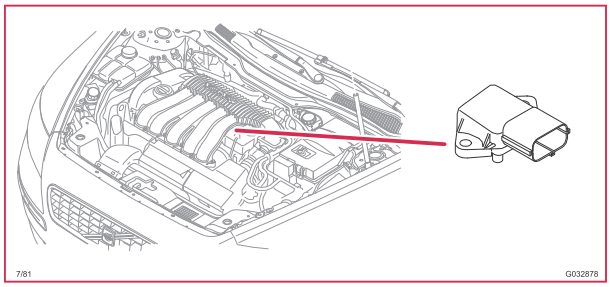

7/81 Pressure sensor, intake manifold, 5-Cyl. Turbo

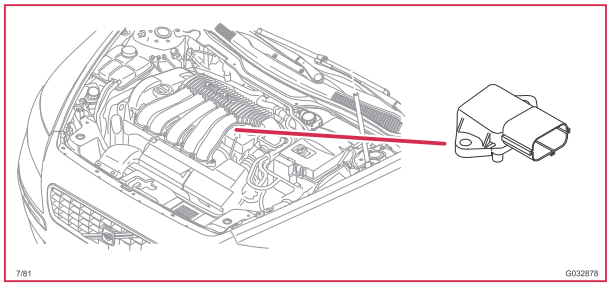

7/81 Pressure sensor intake manifold, Diesel

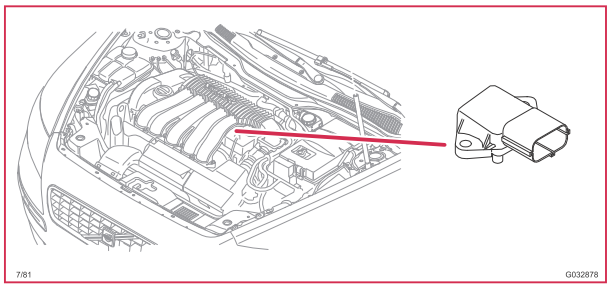

7/81 Pressure sensor, intake manifold, 6-Cyl.

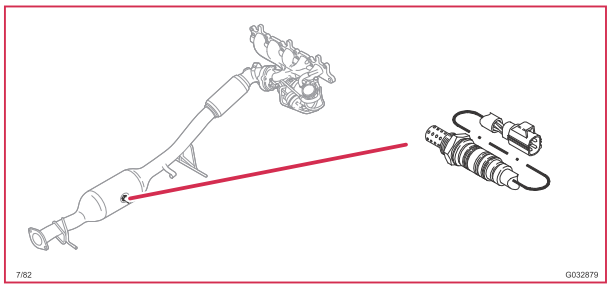

7/82 Rear oxygen sensor, 4-Cyl.

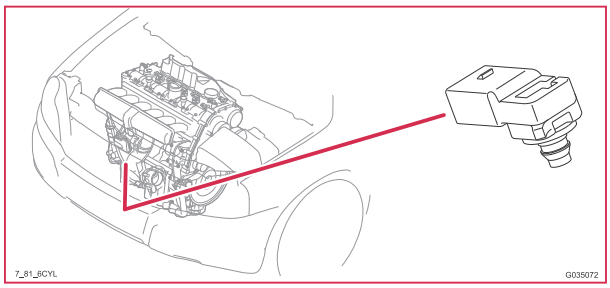

7/82 Rear oxygen sensor, bank 1, 6-Cyl.

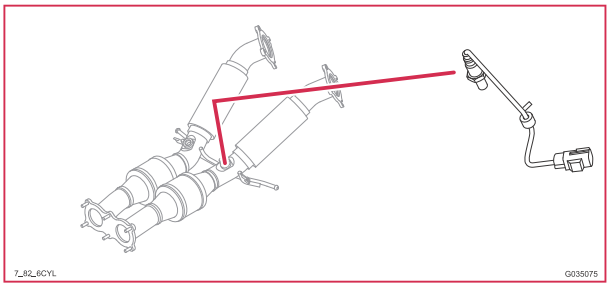

7/87 Acceleration sensor, Four-C, front left

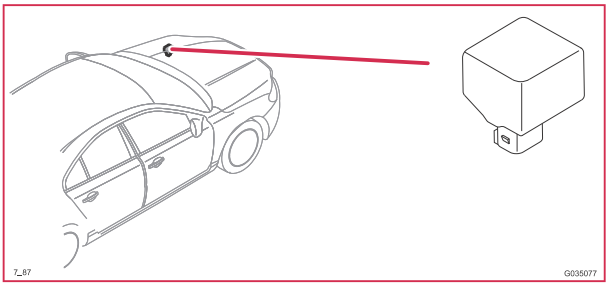

7/88 Acceleration sensor, Four-C, front right

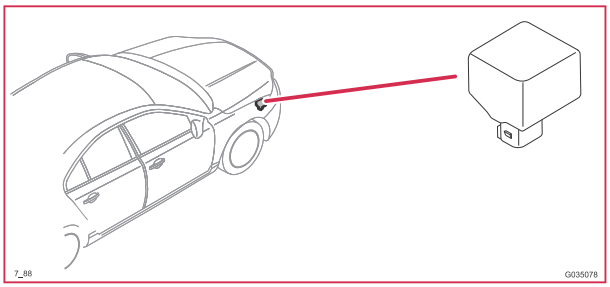

7/89 Acceleration sensor, Four-C, rear left

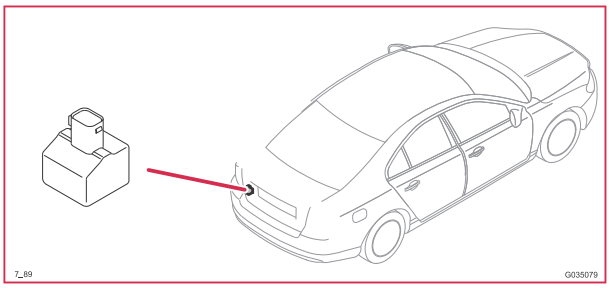

7/90 Moisture sensor

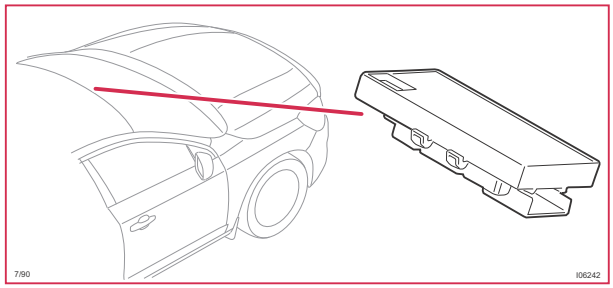

Component illustrations
7/91 - 7/115

7/91 Steering angle sensor

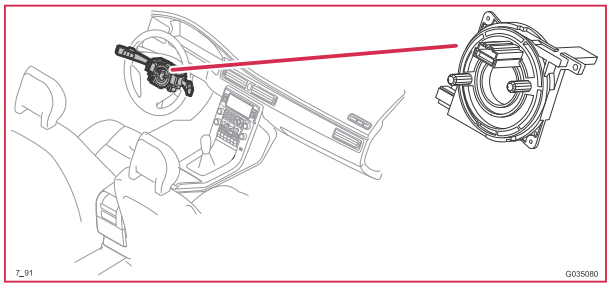

7/93 Occupant Weight Sensor (OWS)

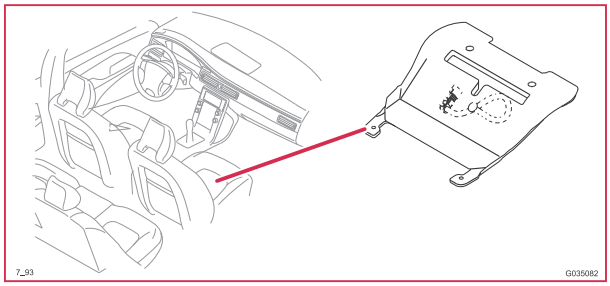

7/100 Inclination Sensor Module (ISM)

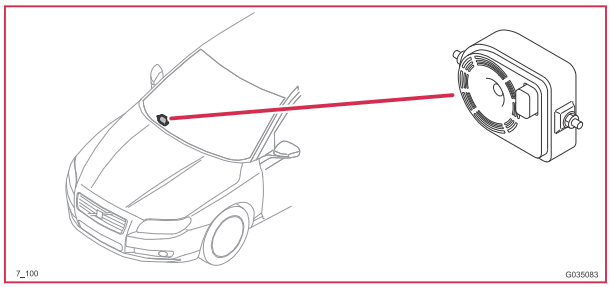

7/108 Left-hand rear side impact sensor

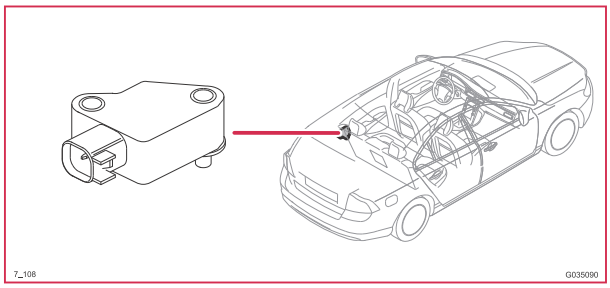

7/109 Right-hand rear side impact sensor

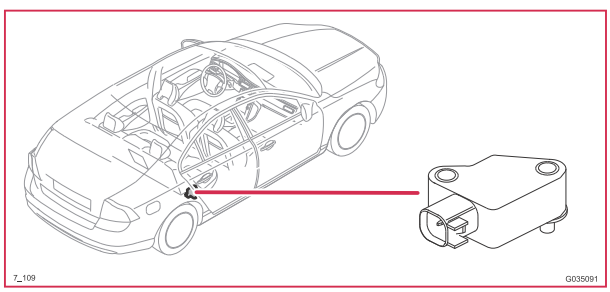

7/110 Sensor temperature driver's seat

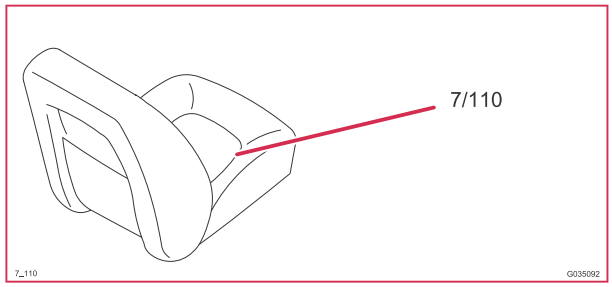

7/111 Sensor temperature passenger seat

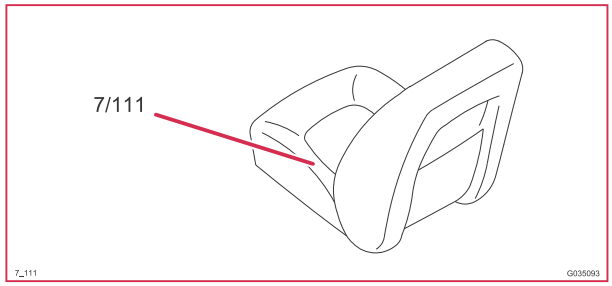

7/112 Seat temperature sensor, LH rear

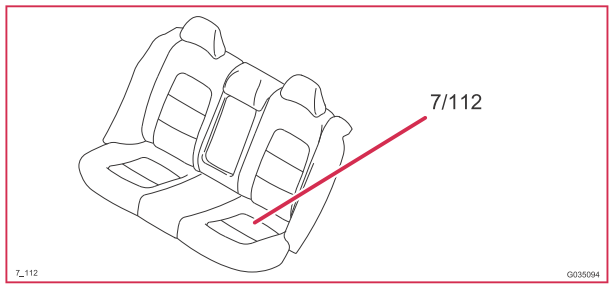

7/113 Seat temperature sensor, RH rear

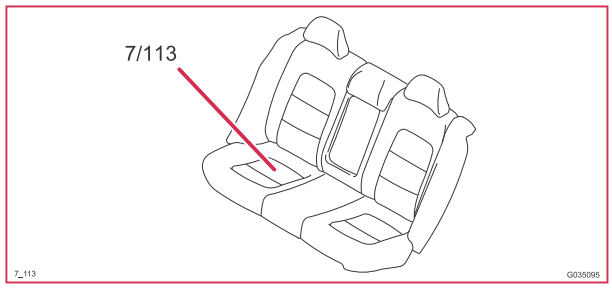

7/115 Side impact sensor, left B-post

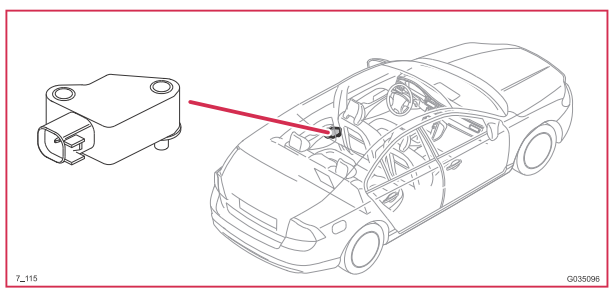

Component illustrations
7/116 - 7/140

7/116 Side impact sensor, right B-post

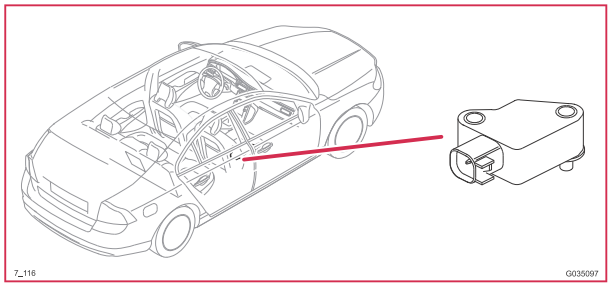

7/118 Height sensor, suspension, front left

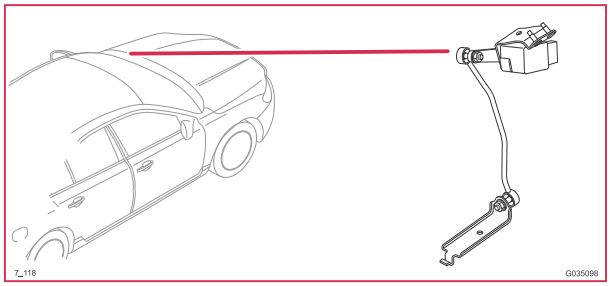

7/119 Height sensor, suspension, front right

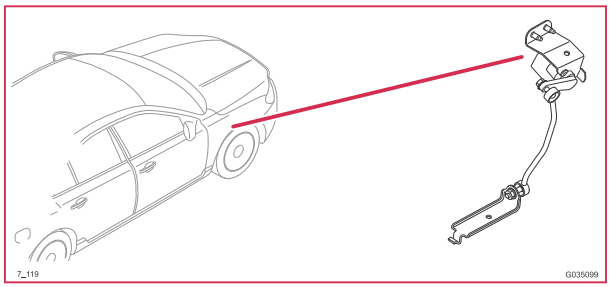

7/120 Height sensor, suspension, rear left

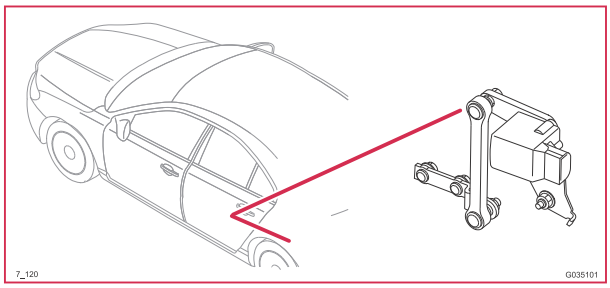

7/121 Height sensor, suspension, rear right

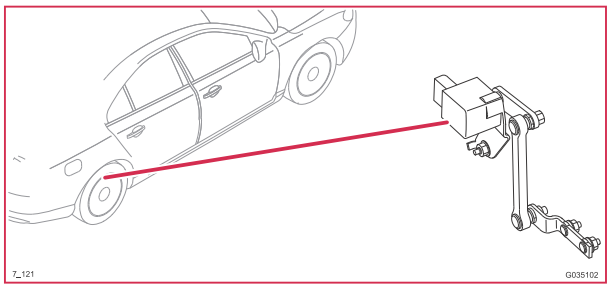

7/123 Clutch pedal sensor

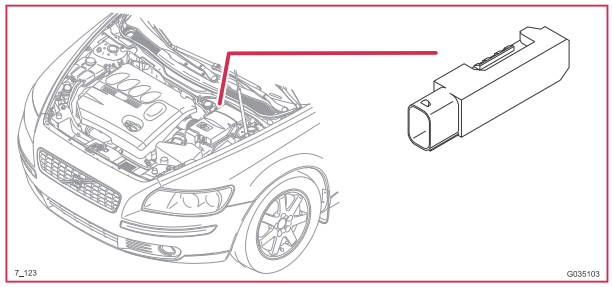

7/124 Brake pedal sensor

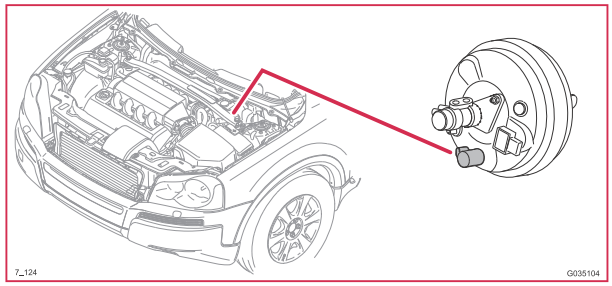

7/130 Fuel level sensor, ejector side

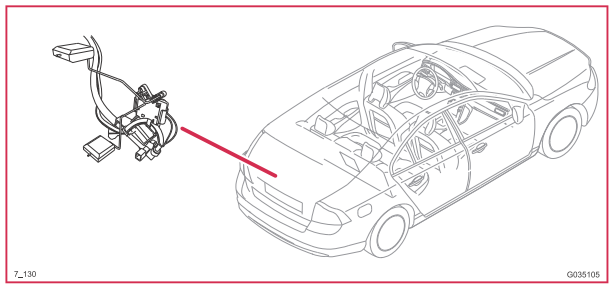

7/131- 7/134 Rear parking assistance sensor

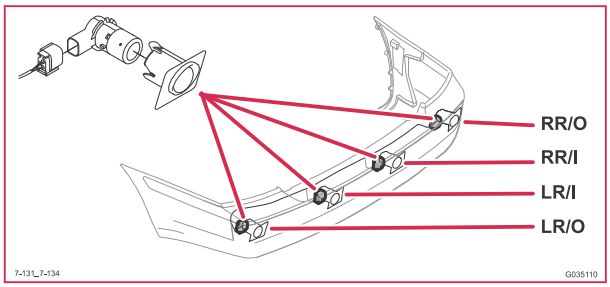

7/140 Fuel pressure sensor, low

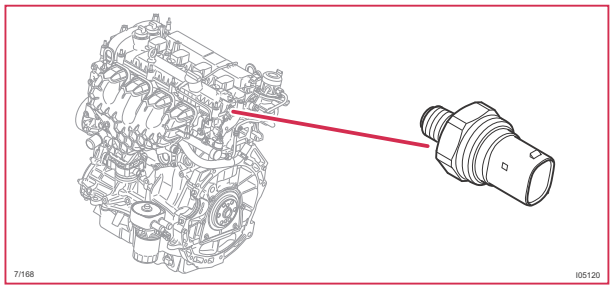

Component illustrations
7/143 - 7/165

7/143 Fuel level sensor, pump side

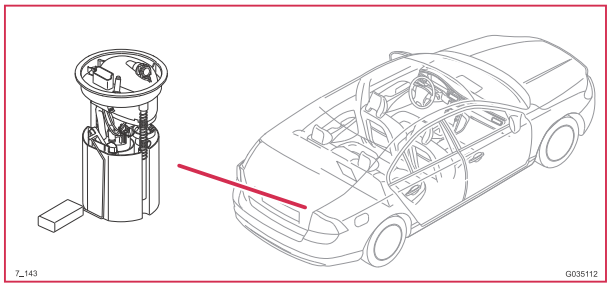

7/149 Rain Sensor Module (RSM)

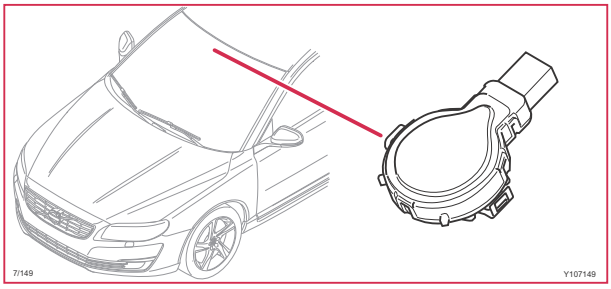

7/154 Sensor fuel temperature

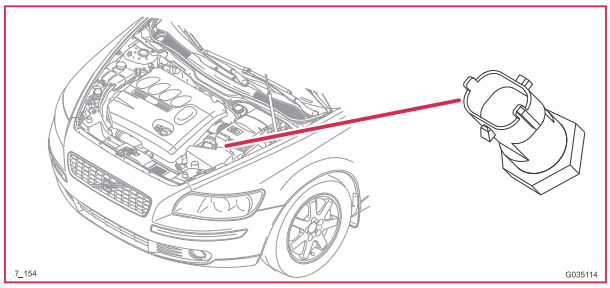

7/156 Pressure and temperature sensor, fuel

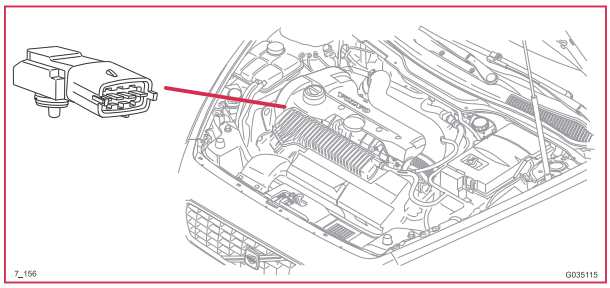

7/159 Air Quality Sensor (AQS)

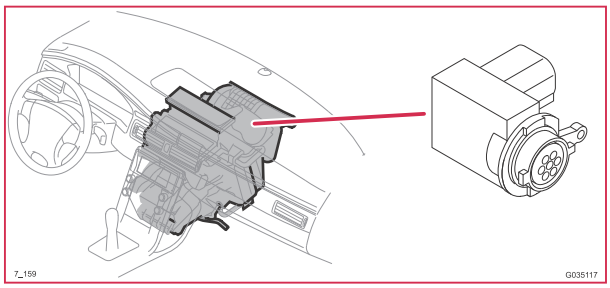

7/162 Pressure sensor, fuel line

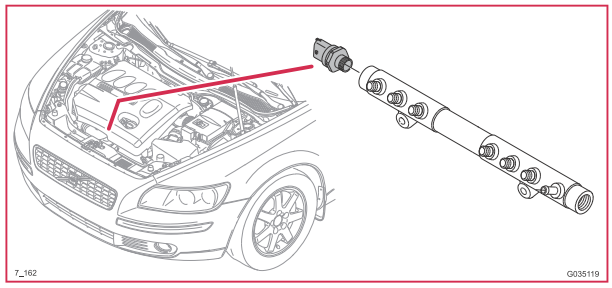

7/165 Pressure and temperature sensor, intake manifold

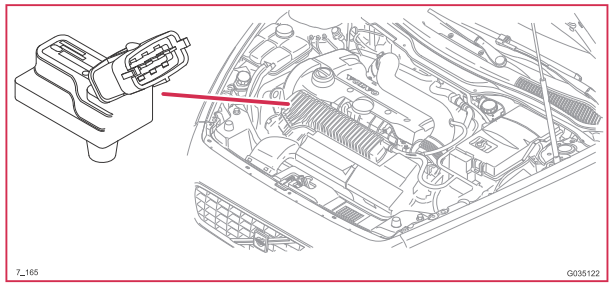

7/165 Pressure and temperature sensor, intake manifold, 4-Cyl.

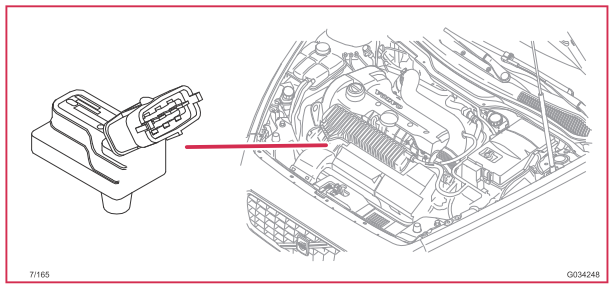

7/165 Pressure and temperature sensor, intake manifold, Diesel

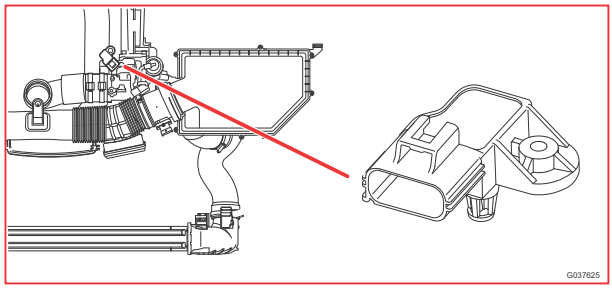

7/165 Pressure and temperature sensor, intake manifold, 6-Cyl.

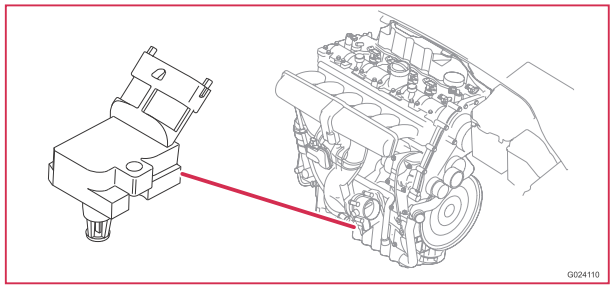

Component illustrations
7/166 - 7/191

7/166 Oil level sensor, 6-Cyl.

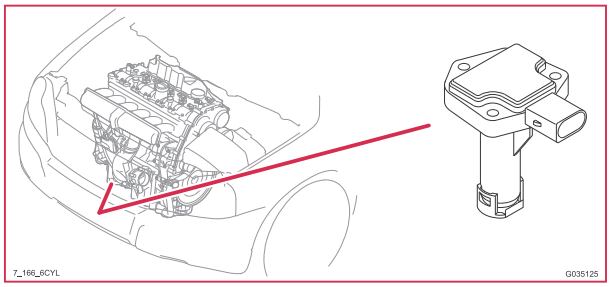

7/172 Position sensor camshaft, intake side, 4-Cyl.

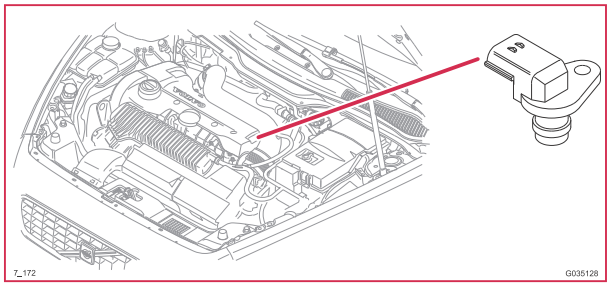

7/172 Camshaft position sensor, intake side, 6-Cyl.

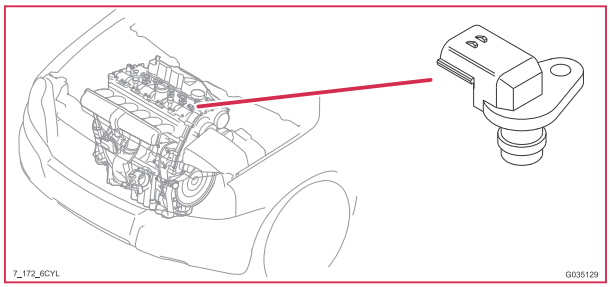

7/173 Position sensor camshaft, outlet side, 4-Cyl.

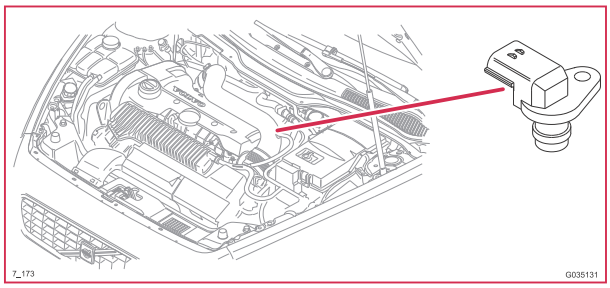

7/173 Camshaft position sensor, exhaust side, 6-Cyl.

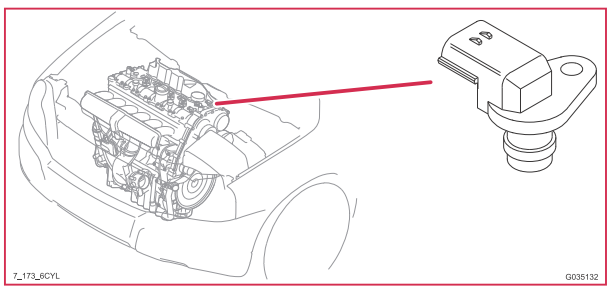

7/173 Camshaft position sensor, exhaust side, Diesel

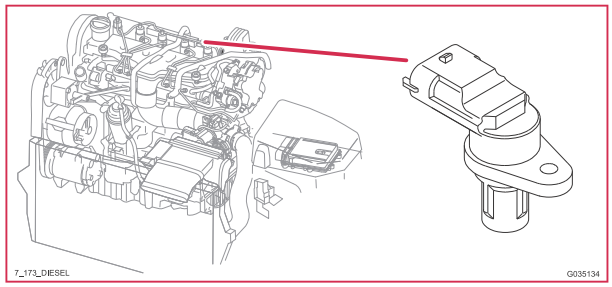

7/174 Differential pressure sensor particulate filter

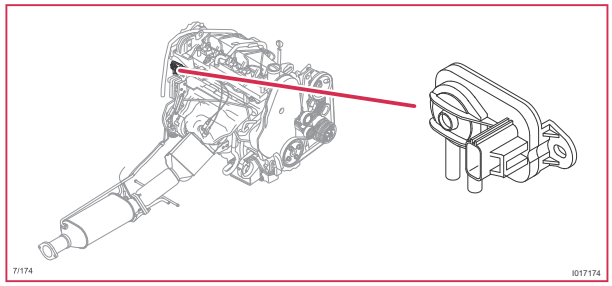

7/175 Weight sensor passenger seat, seat belt reminder

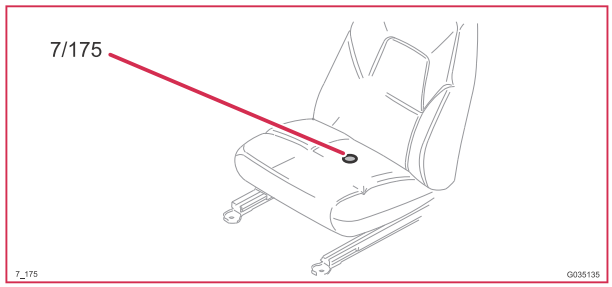

7/190 Temperature sensor, catalytic converter

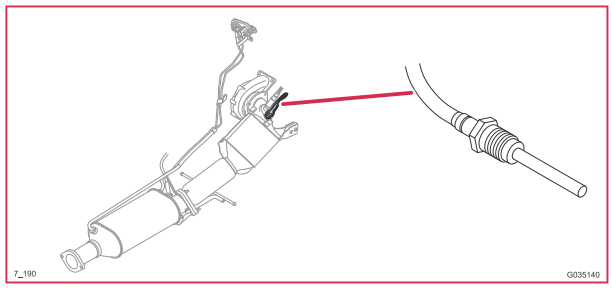

7/191 Temperature sensor, particle filter

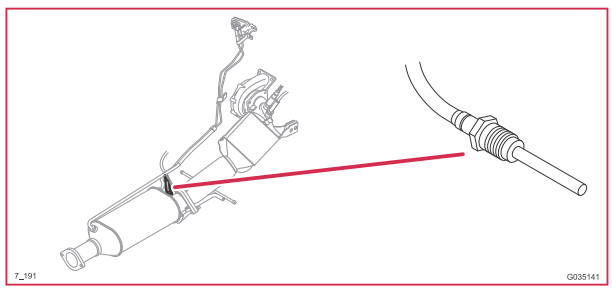

Component illustrations
7/193 - 7/215

7/193 Position sensor turbo

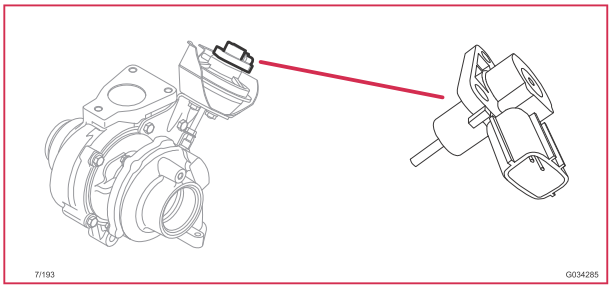

7/199 Ultrasonic sensor (IMS)

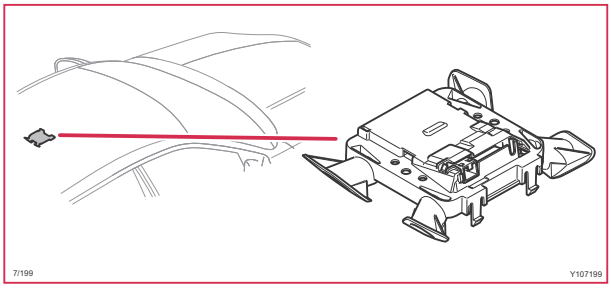

7/200 Sensor, coolant temperature

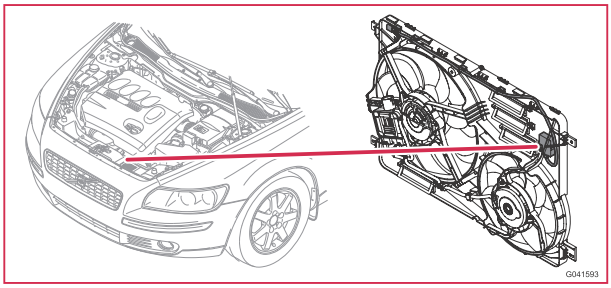

7/202 EGR Bypass position sensor

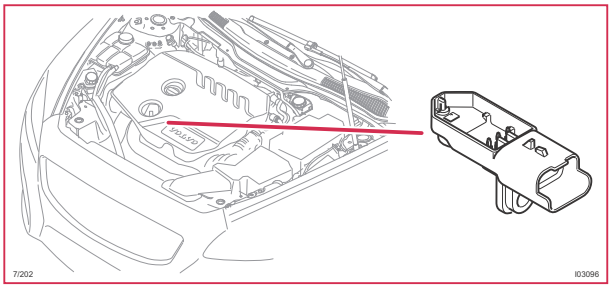

7/203 Forward-aimed radar (FLR)

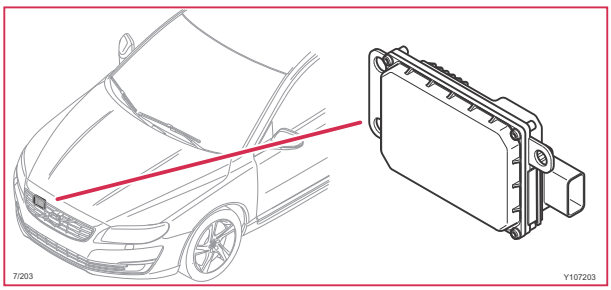

7/204- 7/207 Front parking assistance sensor

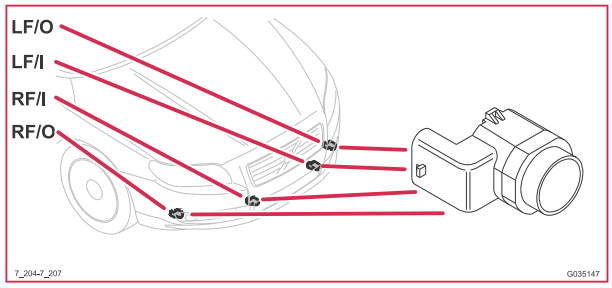

7/208 Side impact sensor, left front door

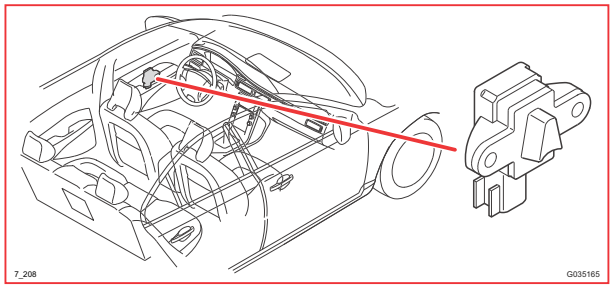

7/209 Side impact sensor, right front door

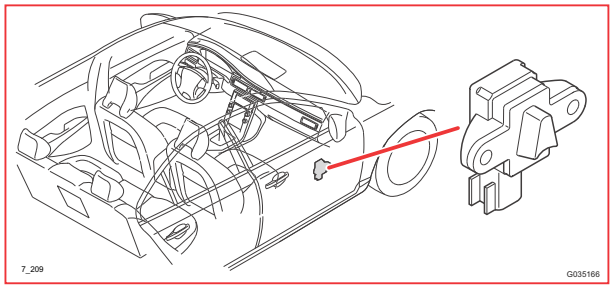

7/210- 7/213 Tire pressure sensor

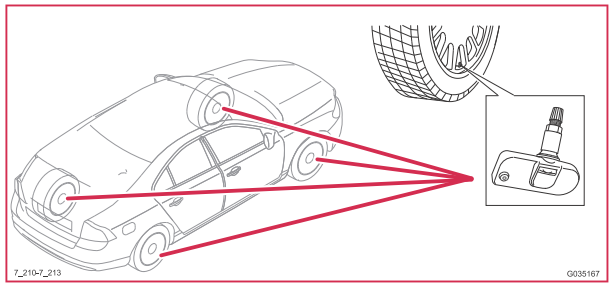

7/215 Rear heated oxygen sensor, 5-Cyl. Diesel

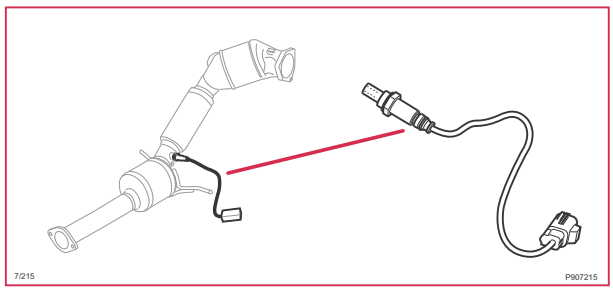

Component illustrations
7/238 - 8/17

7/238 Alcohol lock sensor

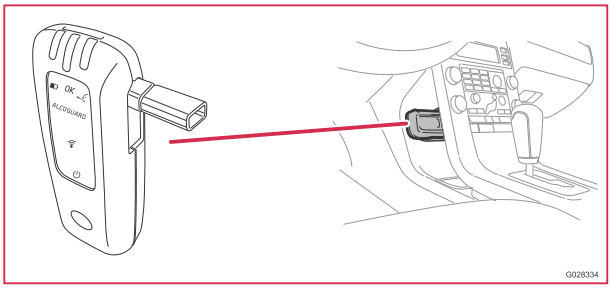

7/240 Battery monitoring sensor (BMS)

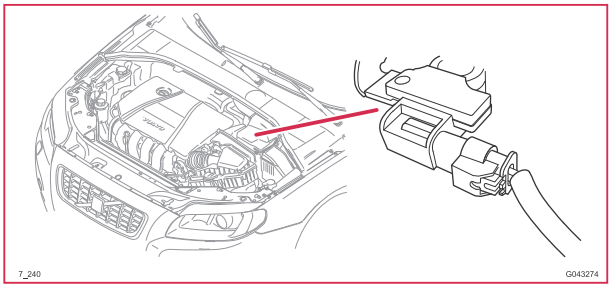

7/243 Gear position sensor neutral position

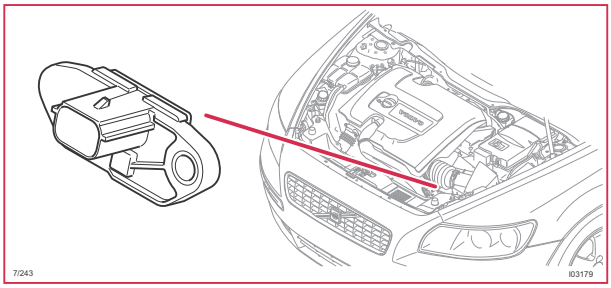

7/248 Oil pressure and temperature sensor

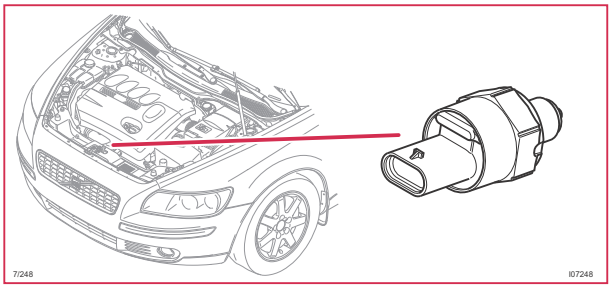

7/251 Brake vacuum sensor

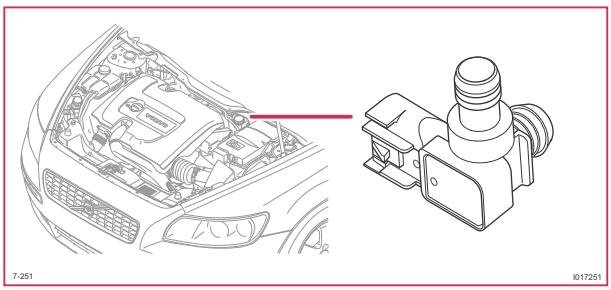

7/266 Parking sensor side, left

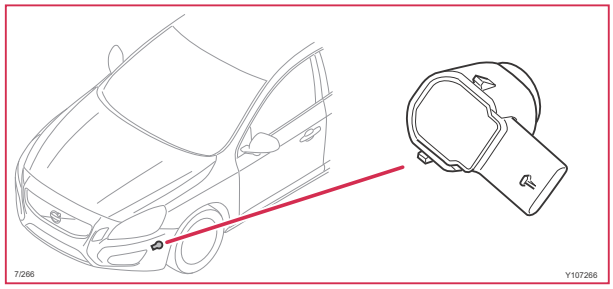

7/267 Parking sensor side, right

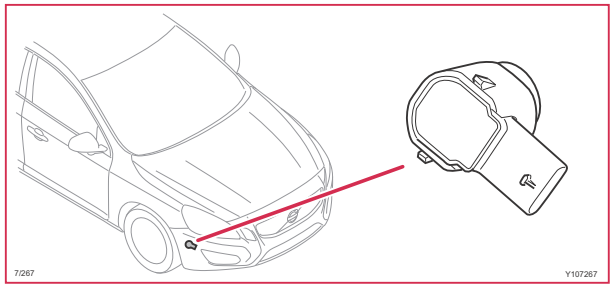

8/3 Electromagnetic clutch, climate control system

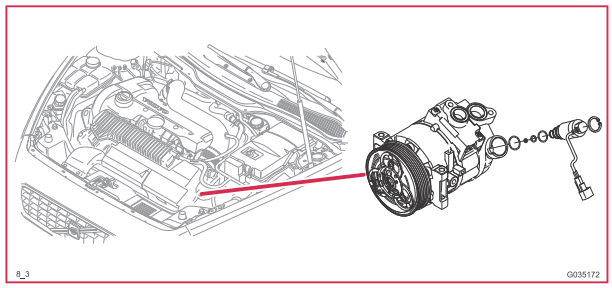

8/6-11 Injectors

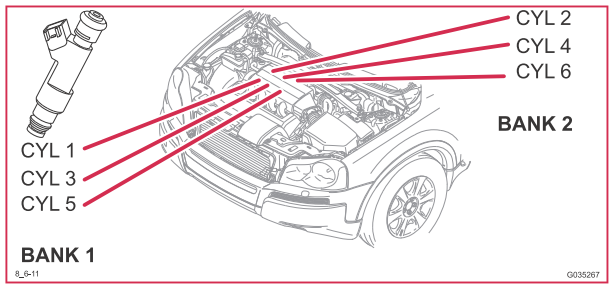

8/17 EGR valve 4-Cyl. Diesel

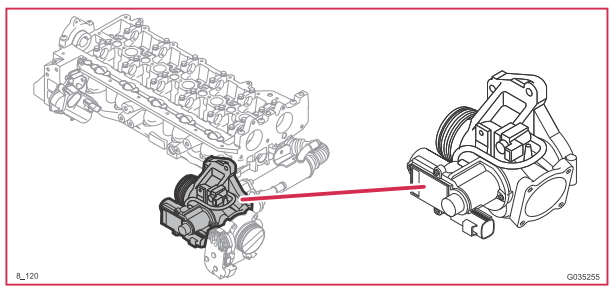

Component illustrations
8/18 - 8/30

8/18 EVAP valve, 4-Cyl.

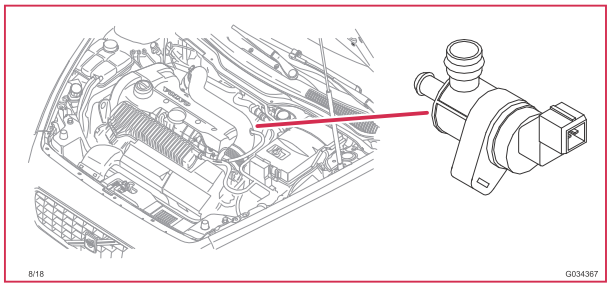

8/18 EVAP valve, 5-Cyl.

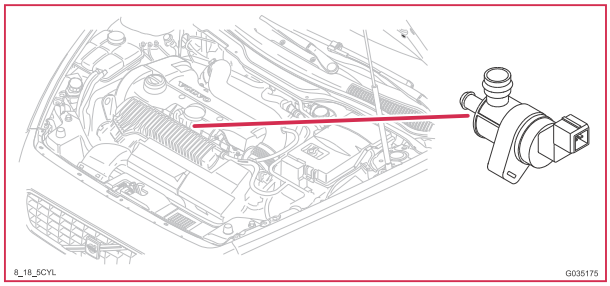

8/18 EVAP valve, 6-Cyl.

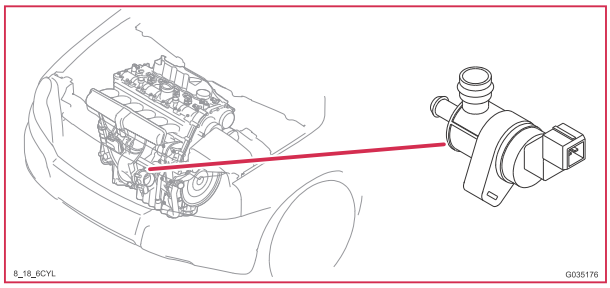

8/19 Reset valve, camshaft intake

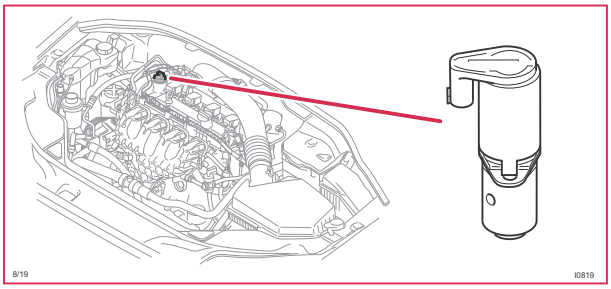

8/20 Shock absorber, Four-C, front left

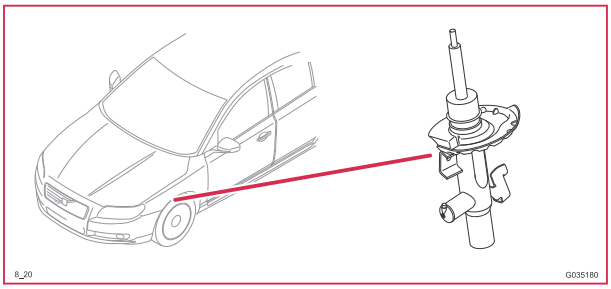

8/21 Shock absorber, Four-C, front right

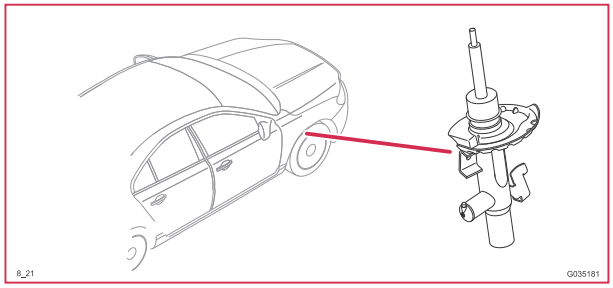

8/22 Shock absorber, Four-C, rear left

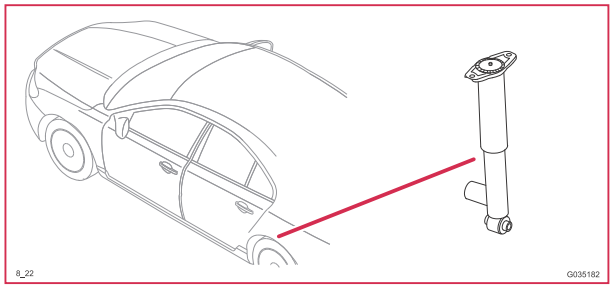

8/23 Shock absorber, Four-C, rear right

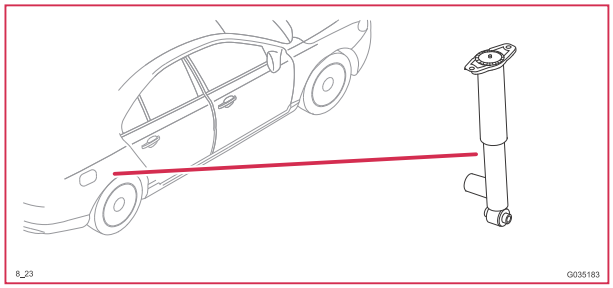

8/28 Turbo control valve

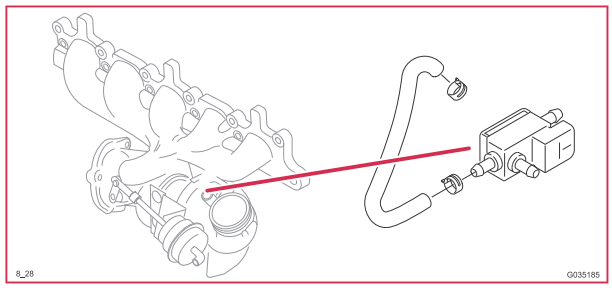

8/30 Driver's side airbag igniter, stage 1

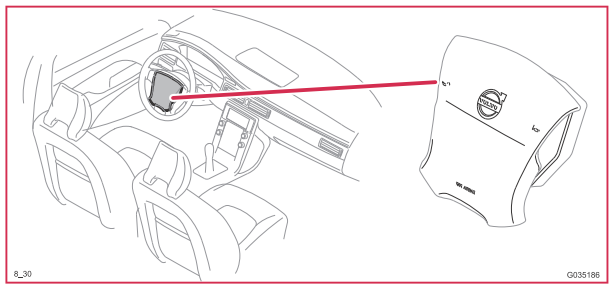

Component illustrations
8/33 - 8/56

8/33 Igniter, belt tensioner, driver's side

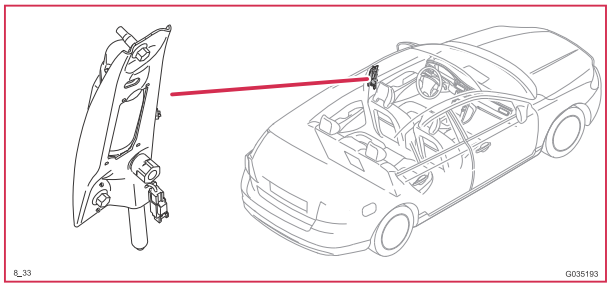

8/34 Igniter, belt tensioner, passenger side

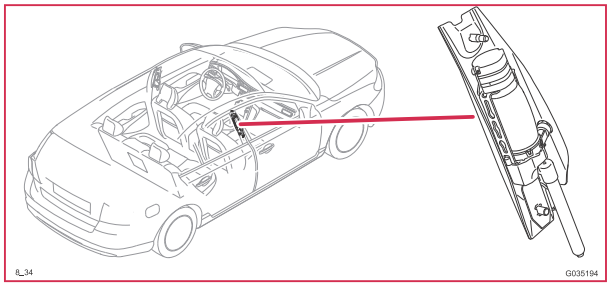

8/36 Shift lock solenoid

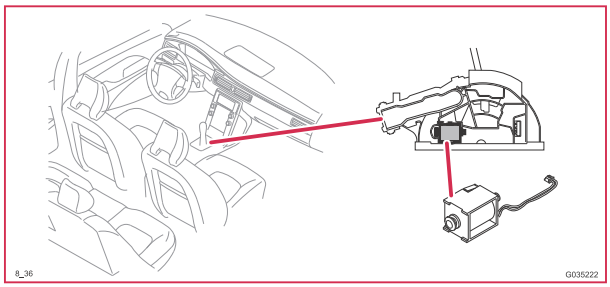

8/37 Automatic transmission

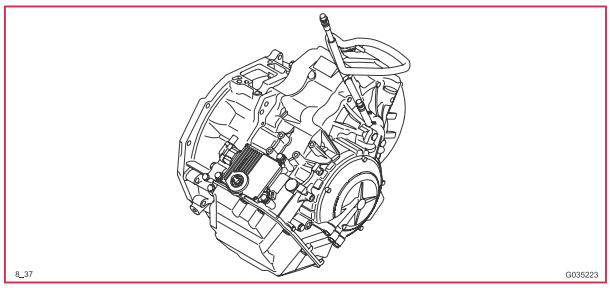

8/46 Activation unit, DSTC

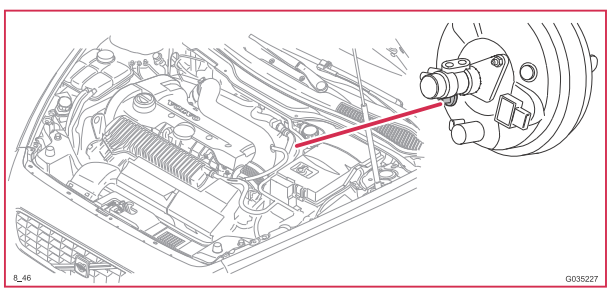

8/48 Auto-dimming rearview mirror

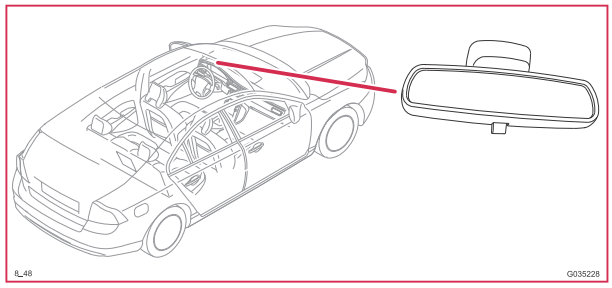

8/51 Igniter side airbag front driver's seat

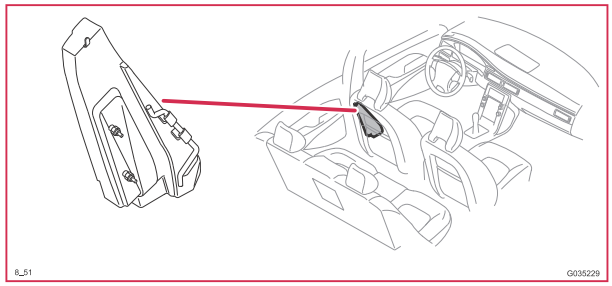

8/52 Igniter side airbag front passenger seat

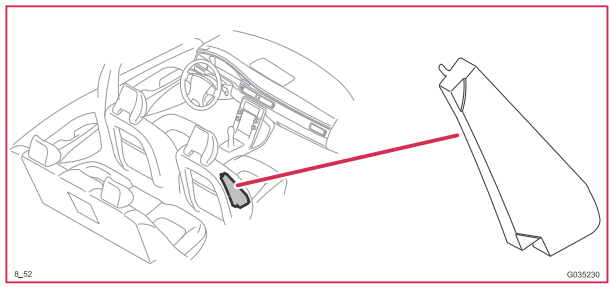

8/55 Rear left belt tensioner igniter

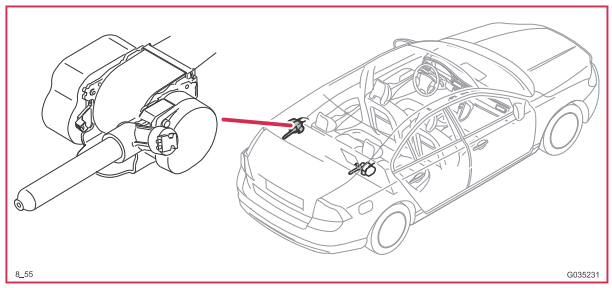

8/56 Rear right belt tensioner igniter

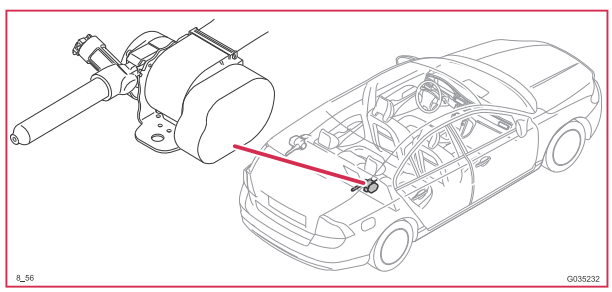

Component illustrations
8/59 - 8/81

8/59 Rear left head restraint solenoid

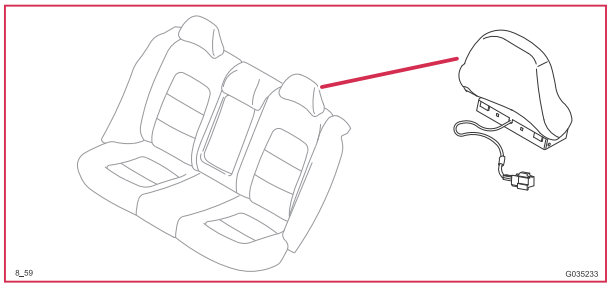

8/60 Rear right head restraint solenoid

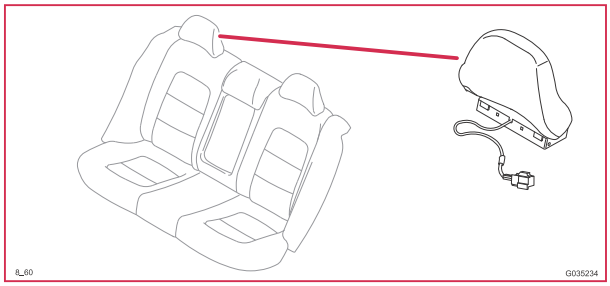

8/61 Driver's side airbag igniter, stage 2

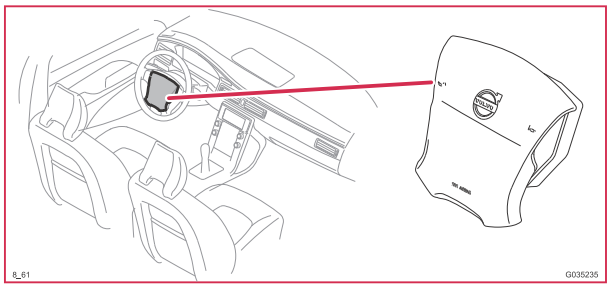

8/62 Belt tensioner igniter, center rear seat

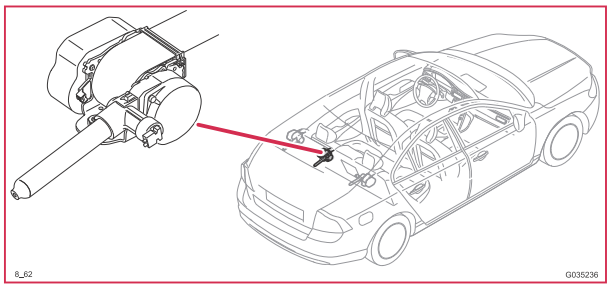

8/66 Left-hand inflatable curtain igniter

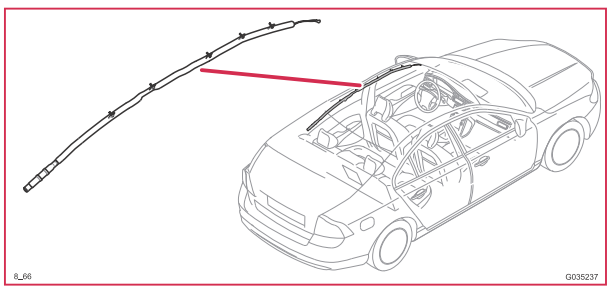

8/67 Right-hand inflatable curtain igniter

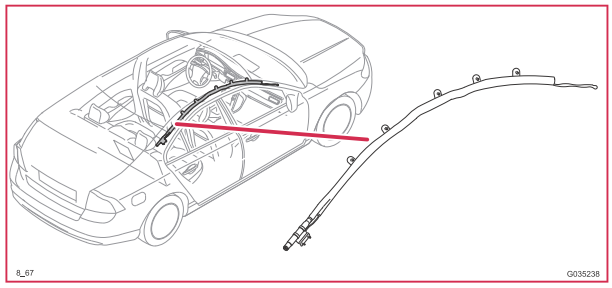

8/68 Relief valve

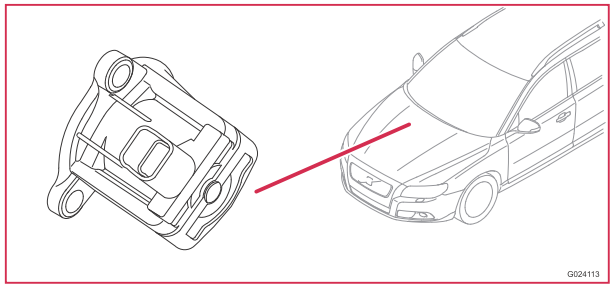

8/77 Control valve, fuel volume

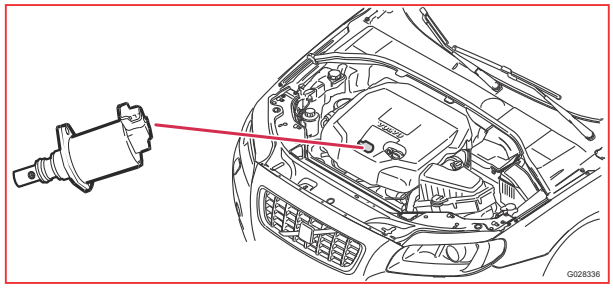

8/78 Power steering pressure monitor

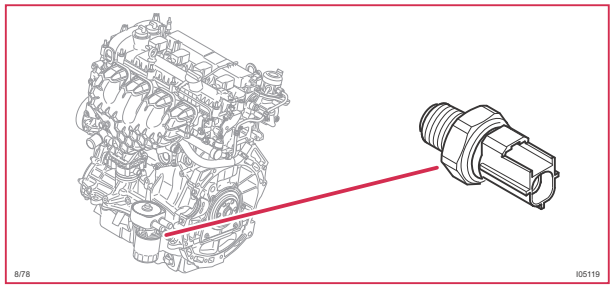

8/81 Reset valve, camshaft exhaust, 4-Cyl

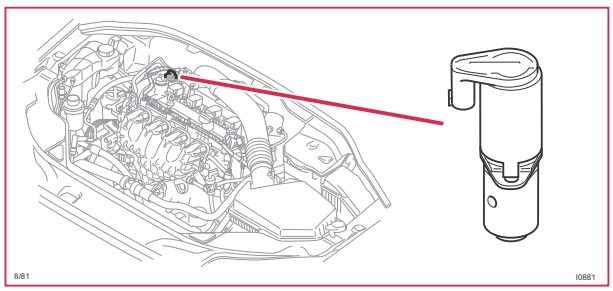

Component illustrations
8/81 - 8/117

8/81 Reset valve, camshaft exhaust, 5-Cyl

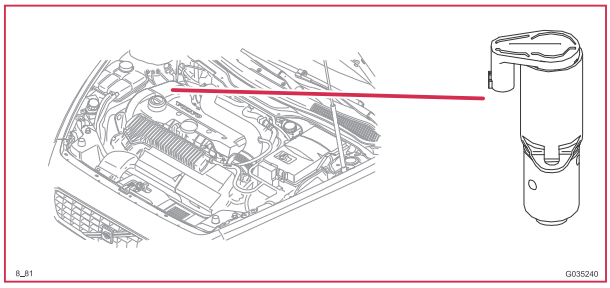

8/84 Switch, vacuum pump

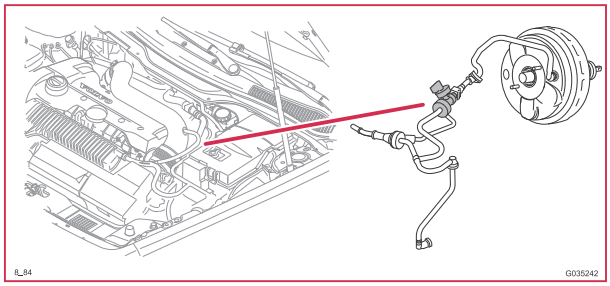

8/92 Lap belt tensioner, driver

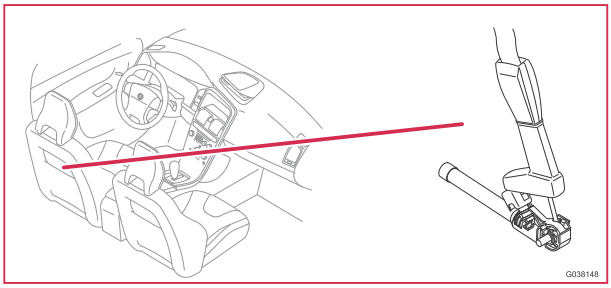

8/93 Lap belt tensioner passenger

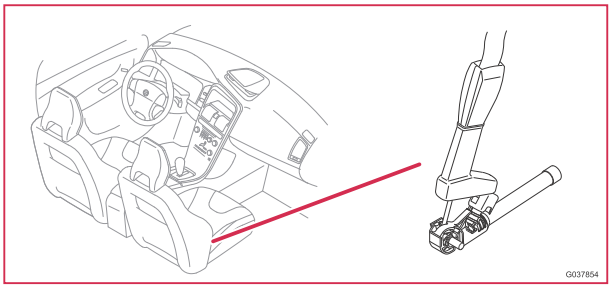

8/98 Control valve fuel pressure

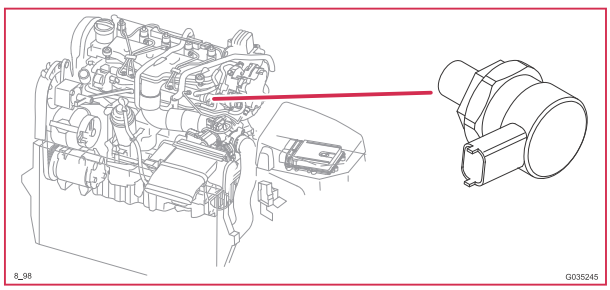

8/99 Igniter, steering column

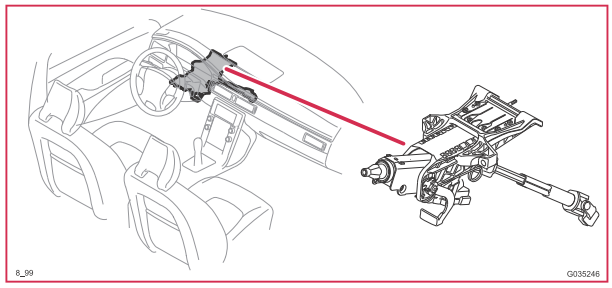

8/111 Fuel flow control valve

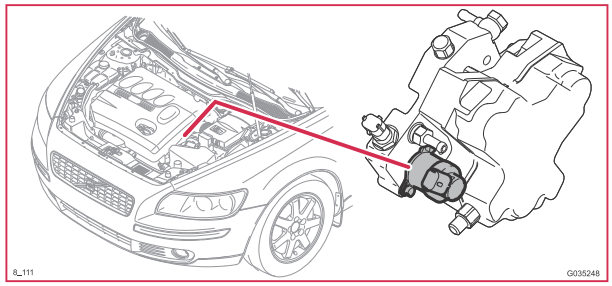

8/113 Bypass valve, EGR cooling

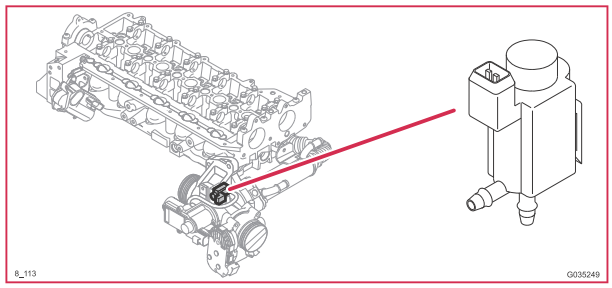

8/113 Bypass valve, EGR cooling, EURO5

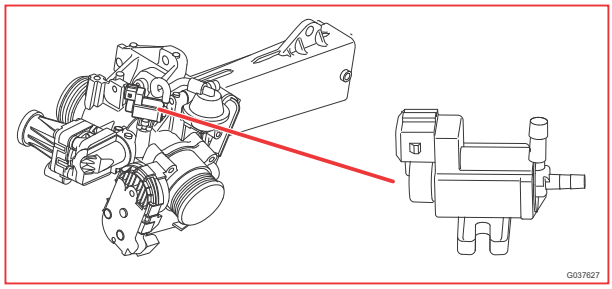

8/117 Solenoid, variable valve timing, intake, 6-Cyl.

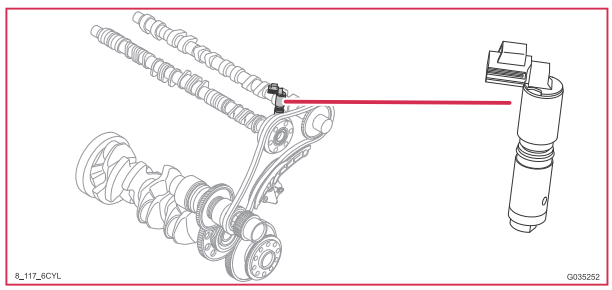

Component illustrations
8/120 - 8/167

8/120 EGR valve, 5-Cyl. Diesel

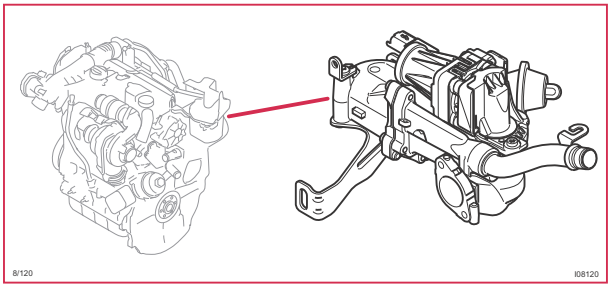

8/121 Radiator valve

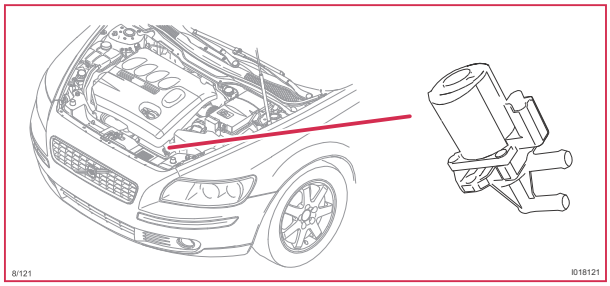

8/124 Igniter, airbag stage 3, passenger side

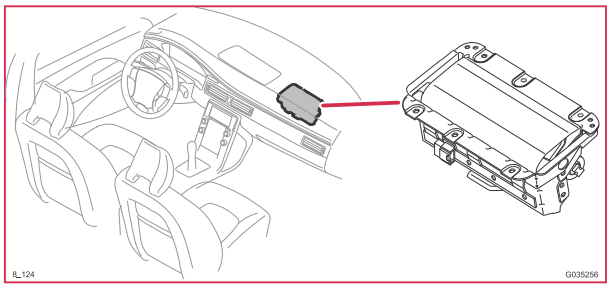

8/128 Driver's belt force limiter

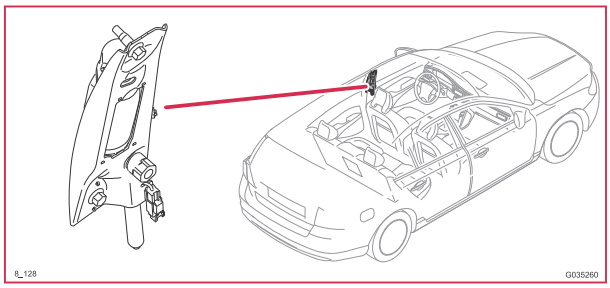

8/129 Passenger belt force limiter

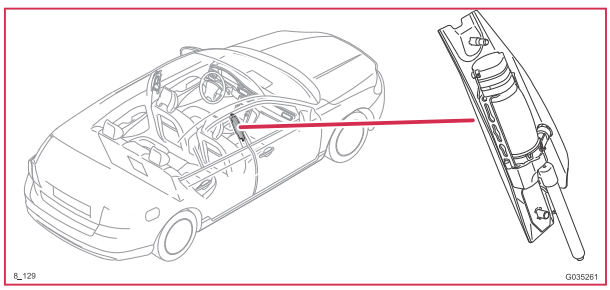

8/134 Solenoid, reverse interlock, manual

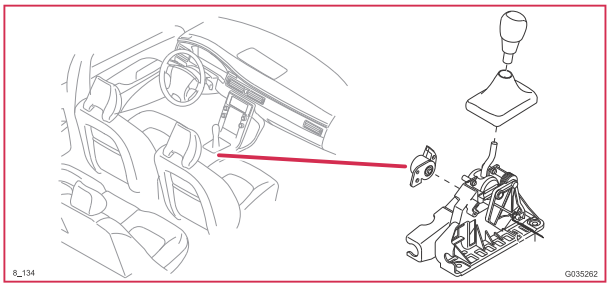

8/157 Turbocharger control valve, 5-Cyl. Diesel 2.4l

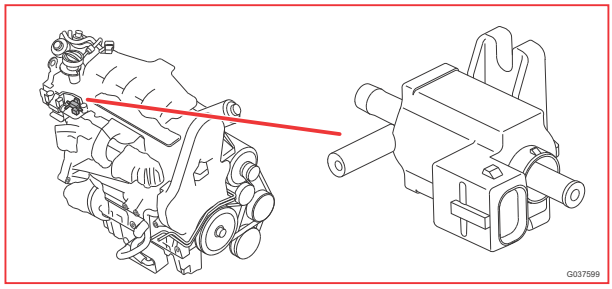

8/159 Bypass valve

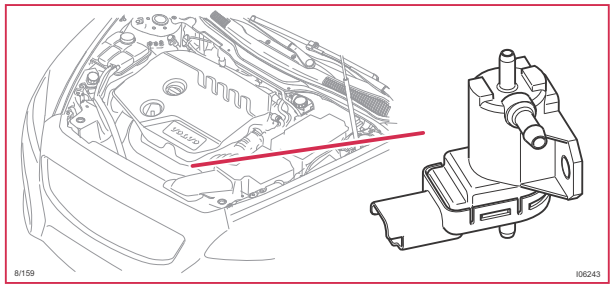

8/164 Electric piston cooling valve

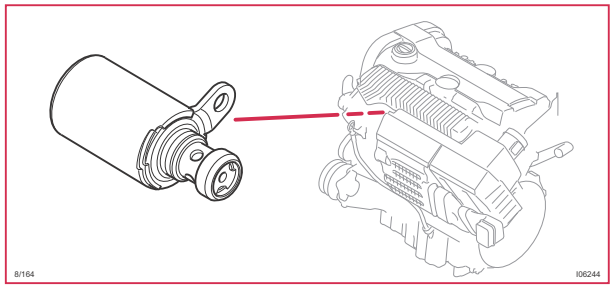

8/167 Bypass solenoid

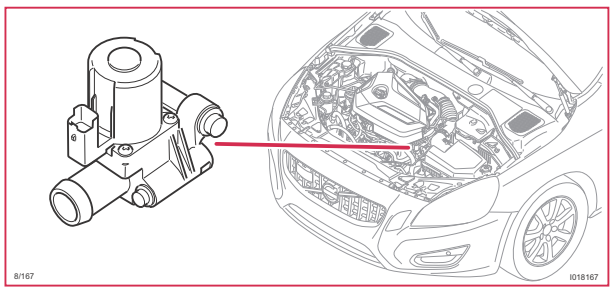

Component illustrations
9/1 - 9/14

9/1 Outlet 12V front

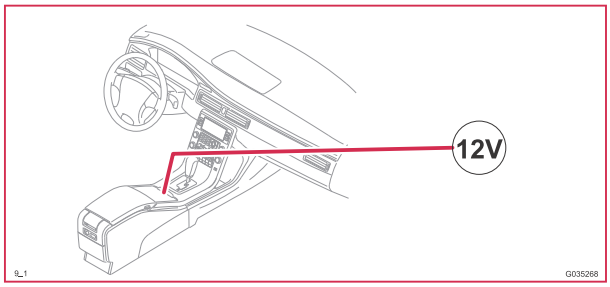

9/2 Heated rear window

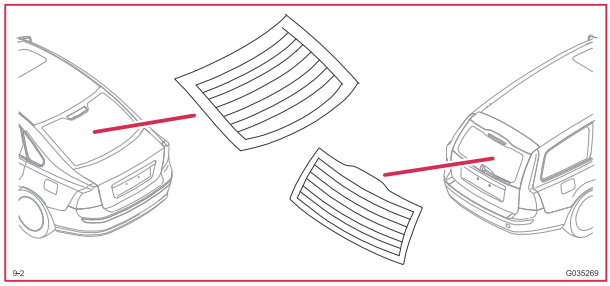

9/7 Heated windscreen

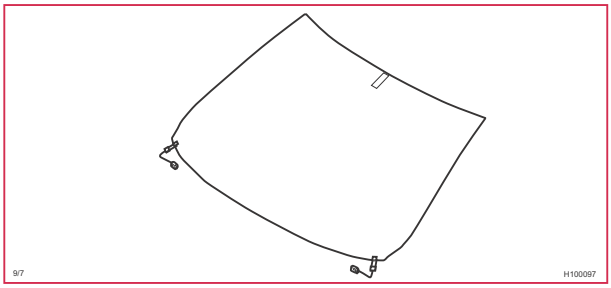

9/8 Heating element, LH rear seat cushion

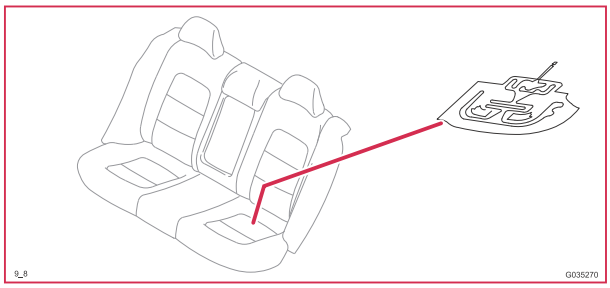

9/9 Heating element, LH rear seat backrest

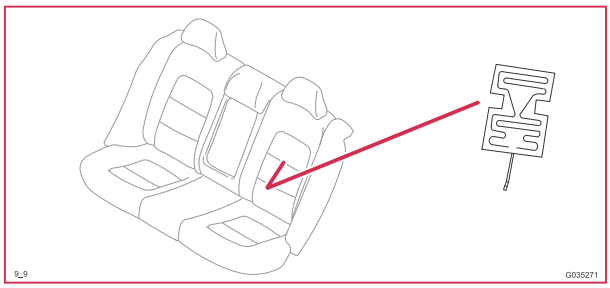

9/10 Heating element, RH rear seat cushion

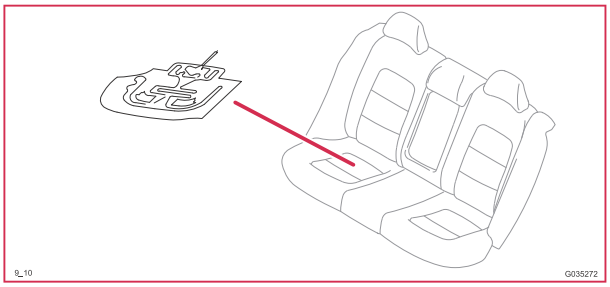

9/11 Heating element, RH rear seat backrest

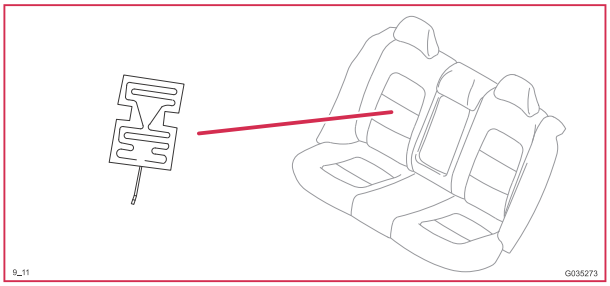

9/12 Seat Heating Module (SHM), driver's side

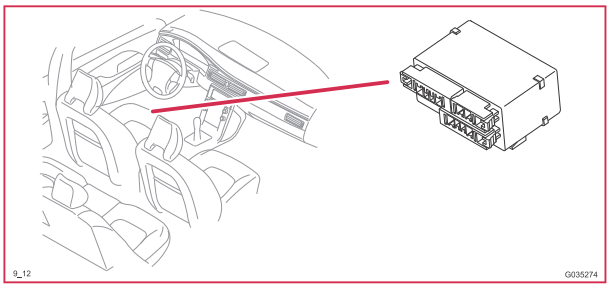

9/13 Seat Heating Module (SHM), passenger side

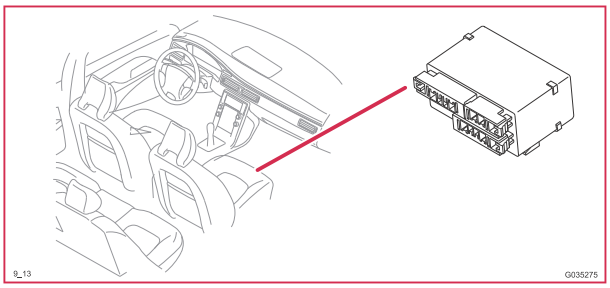

9/14 Control module, rear left seat heater

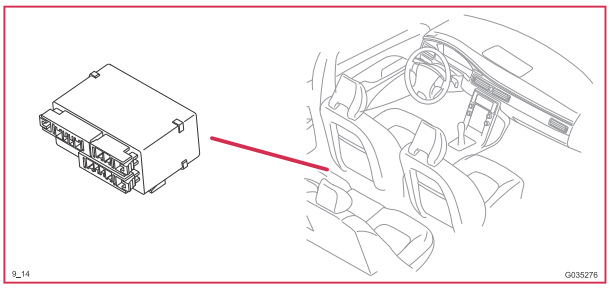

Component illustrations
9/15 - 9/39

9/15 Control module, rear right seat heater

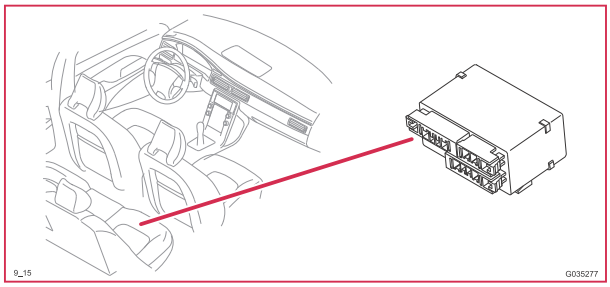

9/16 Heating element, driver's seat backrest

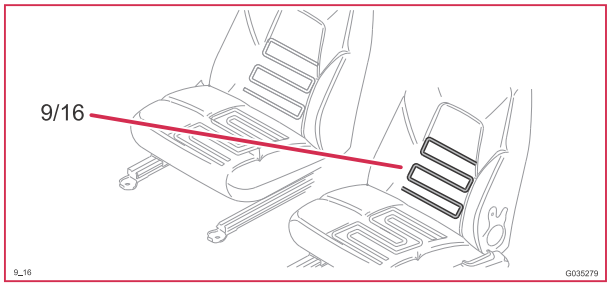

9/17 Heating element, passenger seat backrest

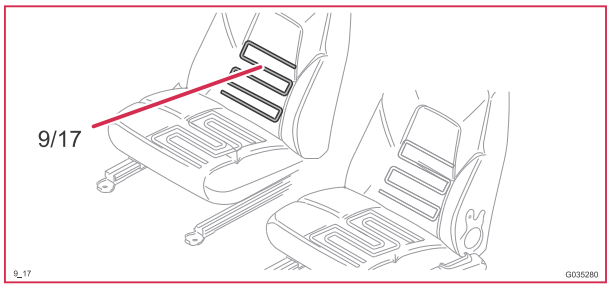

9/18 Heating element, driver's seat cushion

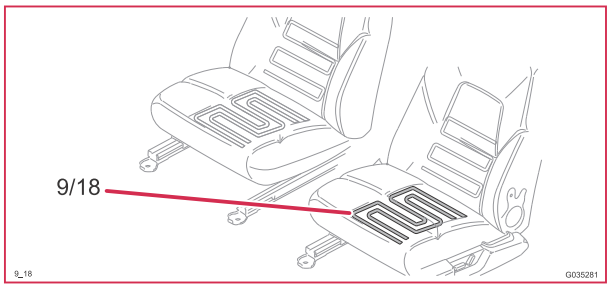

9/19 Heating element, passenger seat cushion

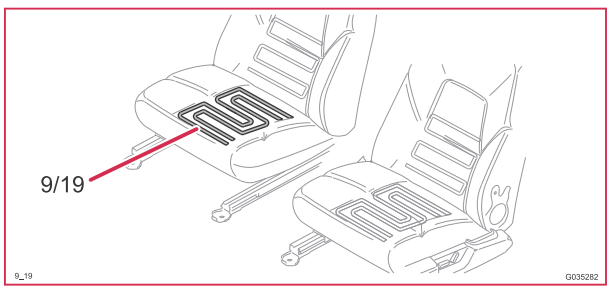

9/25 Outlet 12V rear

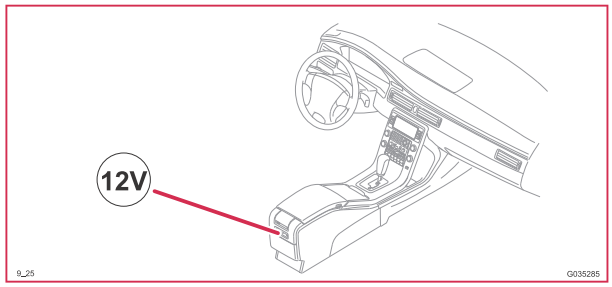

9/30 Auxiliary heater

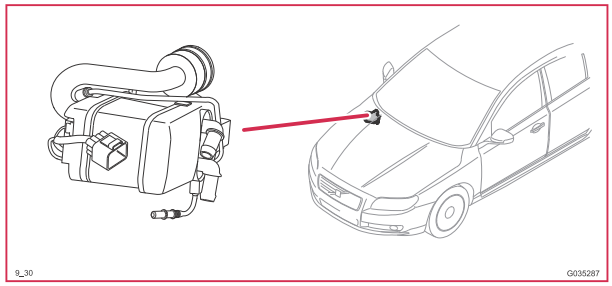

9/32 PTC resistor, crankcase ventilation

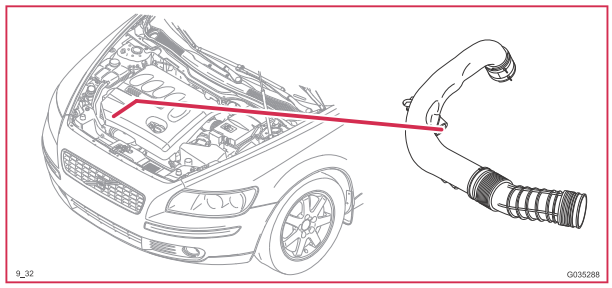

9/38 Electrically heated fuel filter

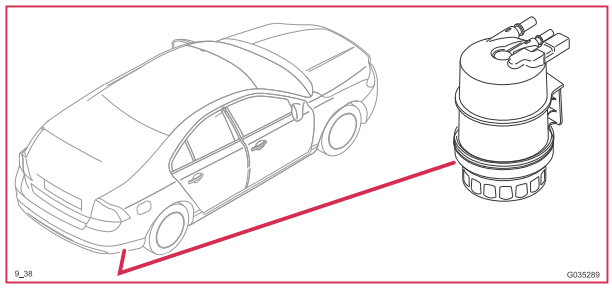

9/39 Heating element camera

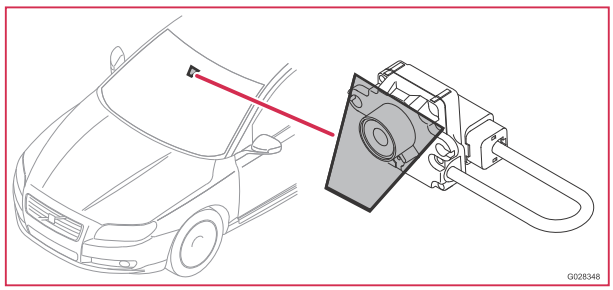

Component illustrations
9/42 - 10/15

9/42 PTC-element

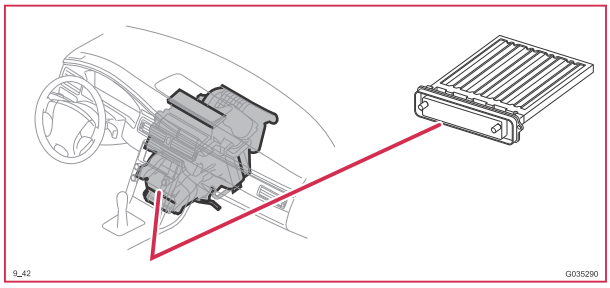

9/58 Heated windshield washer nozzles

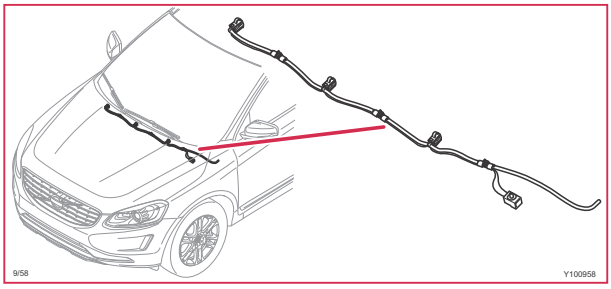

10/1 Left-hand front lamp housing

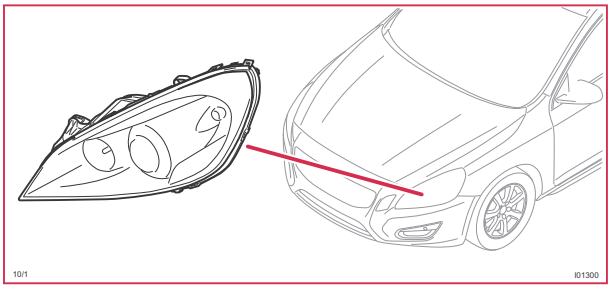

10/2 Right-hand front lamp housing

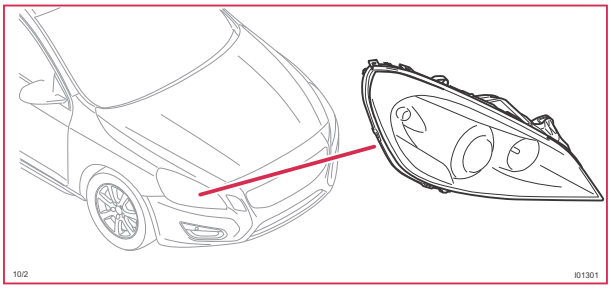

10/3 License plate lighting

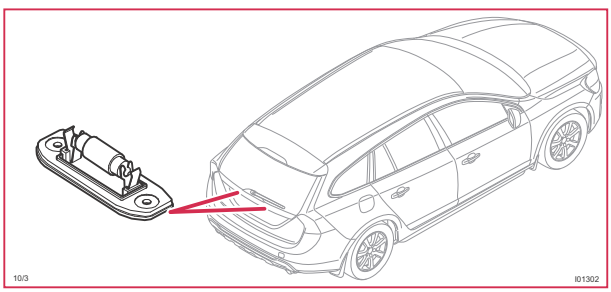

10/11 Front left running/parking light

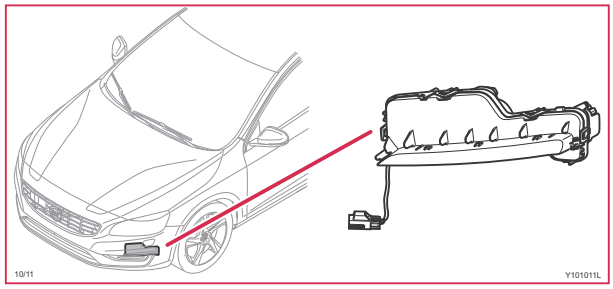

10/12 Front right running/parking light

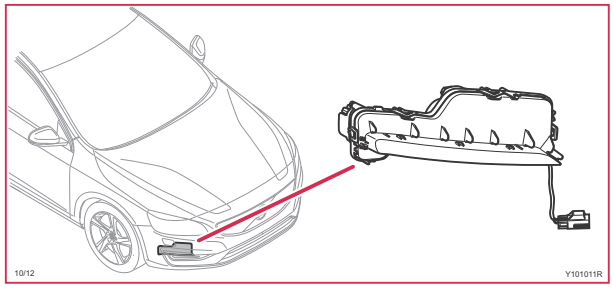

10/13 Front left direction indicator

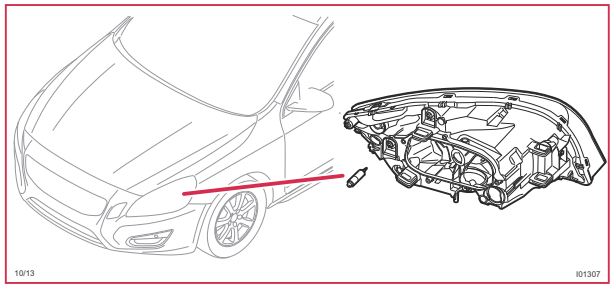

10/14 Front right direction indicator

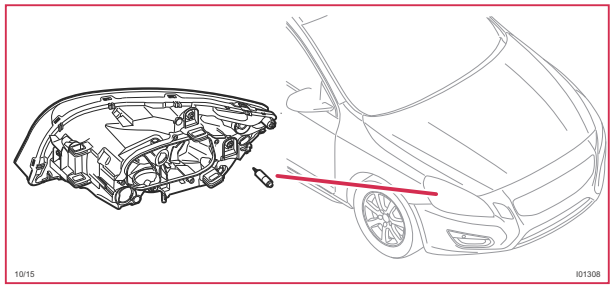

10/15 Direction indicator, left door mirror

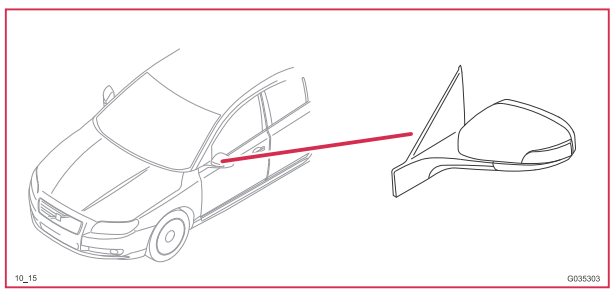

Component illustrations
10/16 - 10/25

10/16 Direction indicator, right door mirror

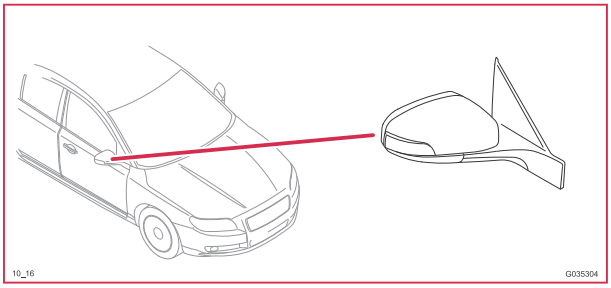

10/17 Lamp housing, rear right, S60

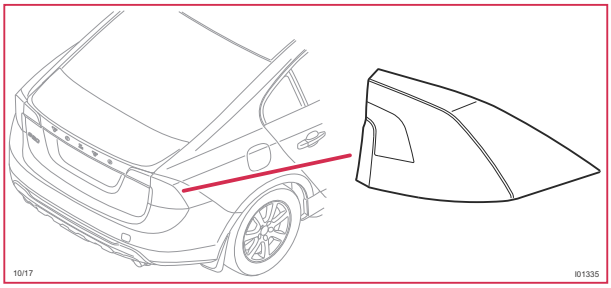

10/17 Lamp housing, rear right V60

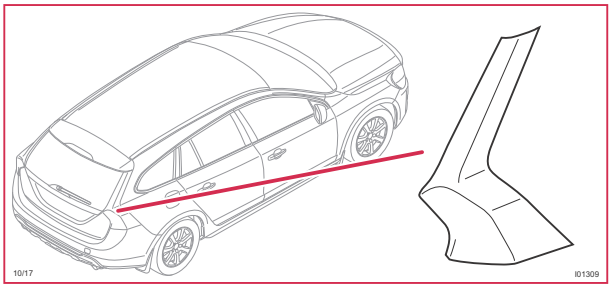

10/18 Lamp housing, rear left, S60

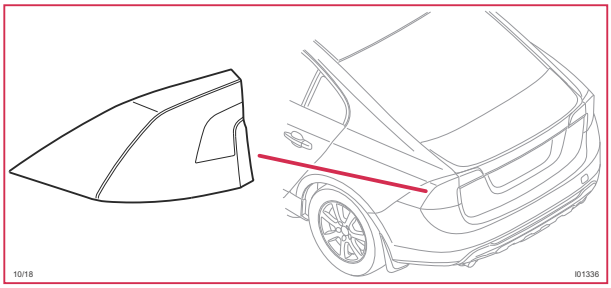

10/18 Lamp housing, rear left, V60

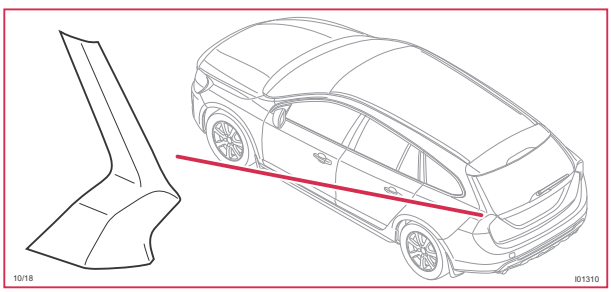

10/19 Auxiliary brake lights, S60

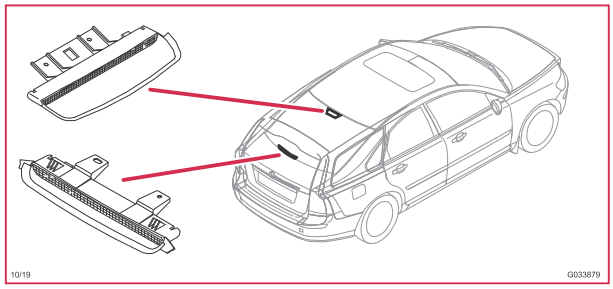

10/19 Auxiliary brake lights V60

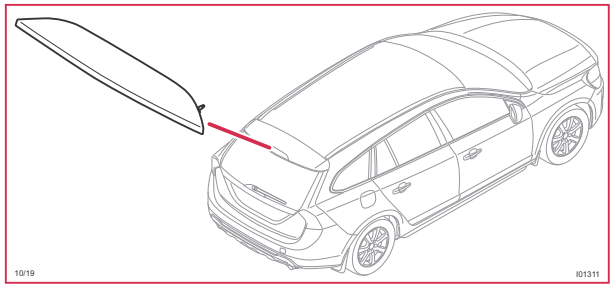

10/22 Ceiling light

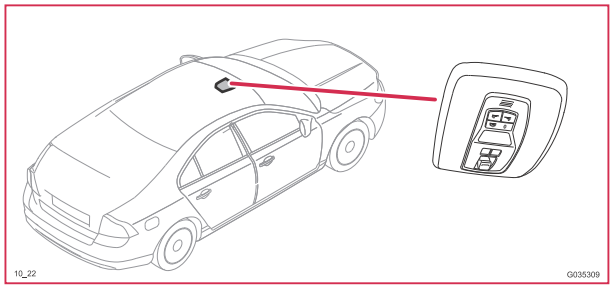

10/25 Ceiling light, cargo compartment, S60

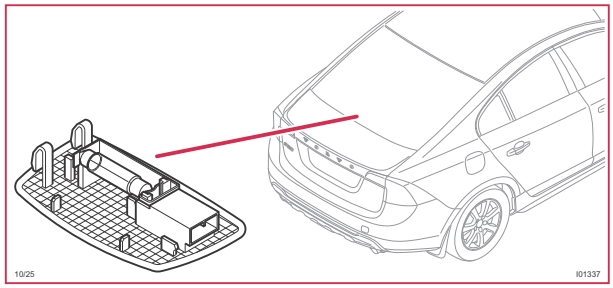

10/25 Ceiling light, cargo compartment, V60

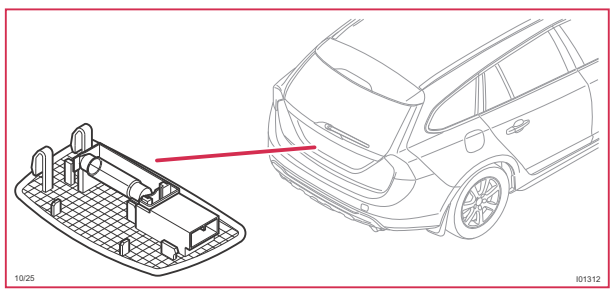

Component illustrations
10/29 - 10/48

10/29 Glove compartment lighting

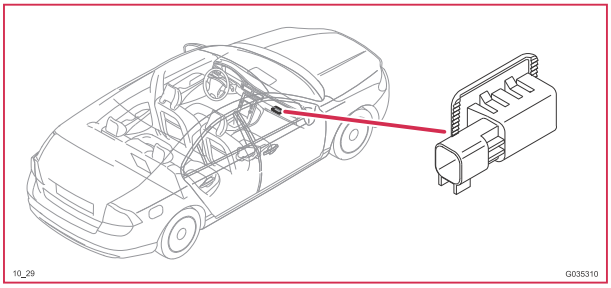

10/43 Right brake light, S60

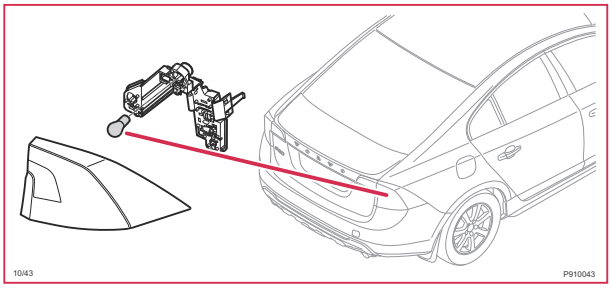

10/43 Right brake light, V60

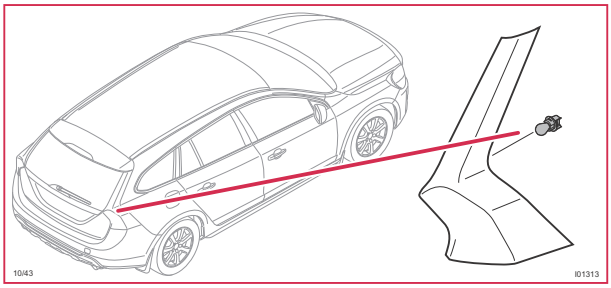

10/44 Tail lamp 1 right, S60

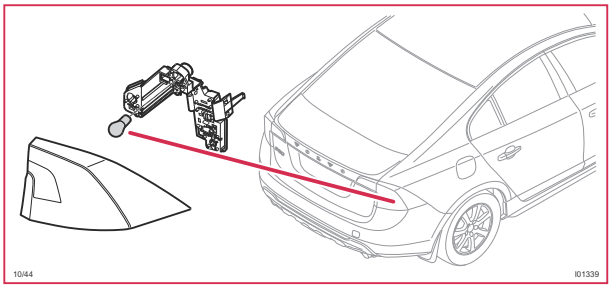

10/44 Tail lamp 1 right, V60

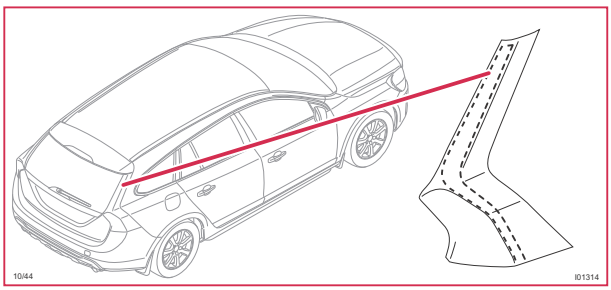

10/46 Fog lights, right rear, S60

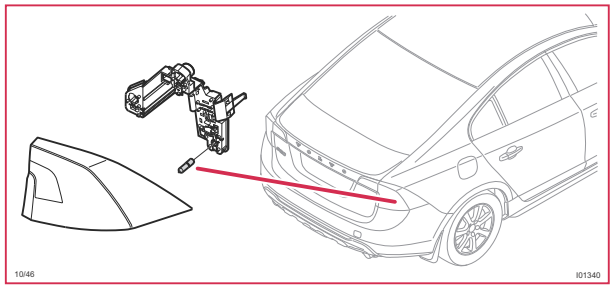

10/46 Fog lights, rear right, V60

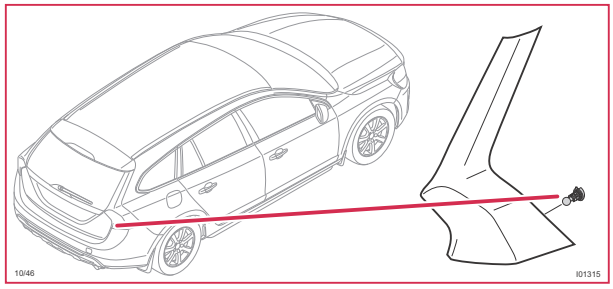

10/47 Direction indicator, right rear, S60

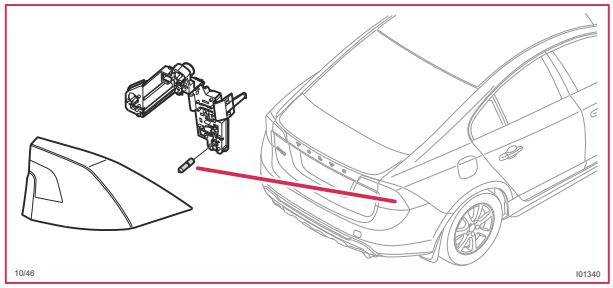

10/47 Direction indicator, right rear, V60

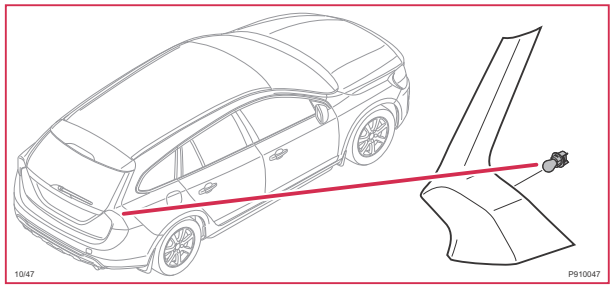

10/48 Reversing lights right, S60

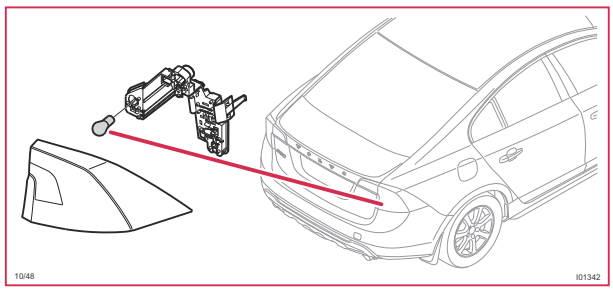

Component illustrations
10/48 - 10/55

10/48 Reversing lights, right, V60

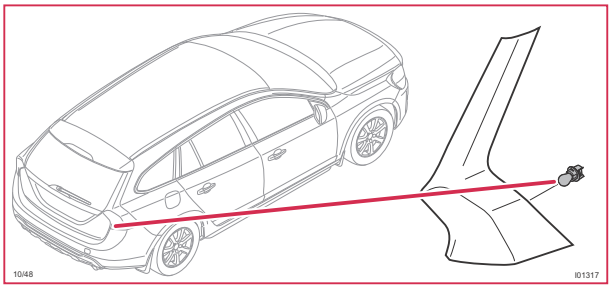

10/50 Brake lights left, S60

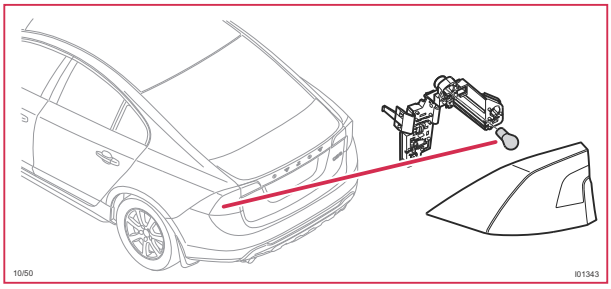

10/50 Brake lights, left, V60

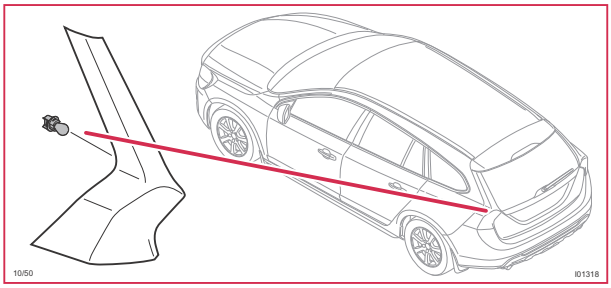

10/51 Tail lamp 1 left, S60

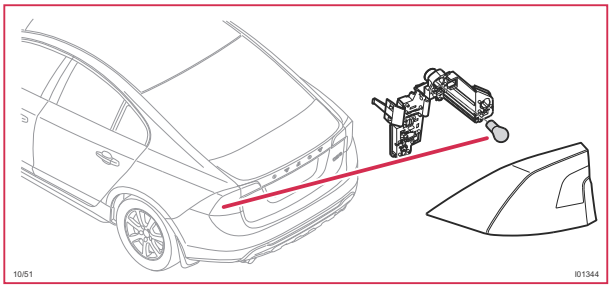

10/51 Tail lamp 1 left, V60

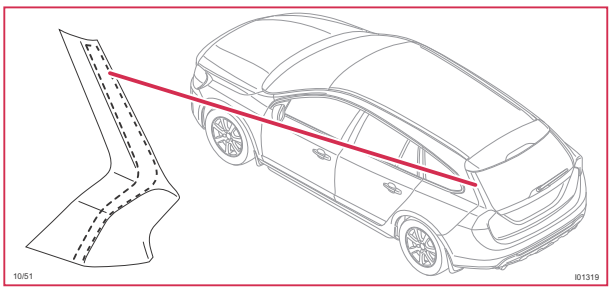

10/53 Fog lights, rear left, S60

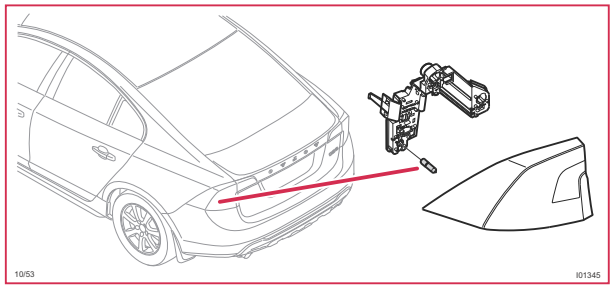

10/53 Fog lights, left rear, V60

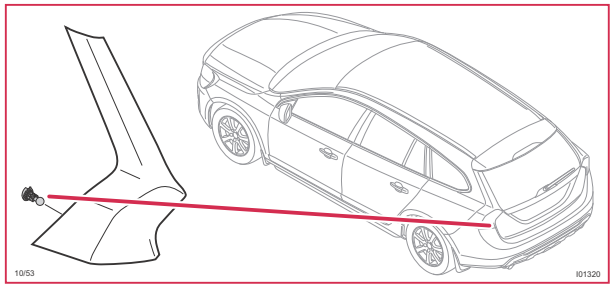

10/54 Direction indicator, rear left, S60

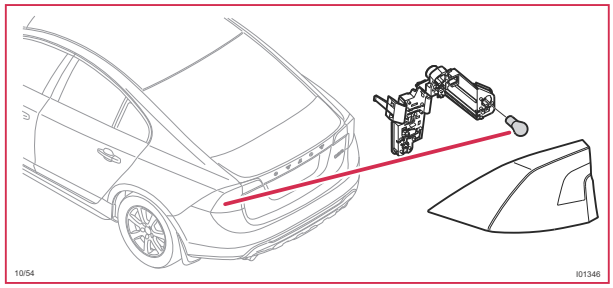

10/54 Direction indicator, left rear, V60

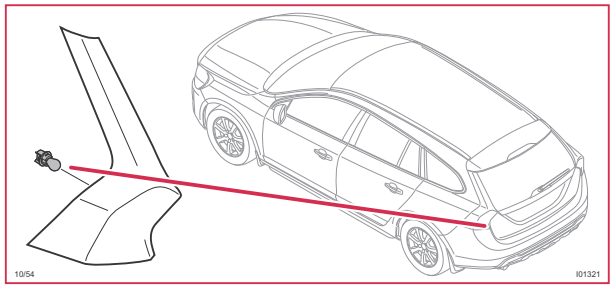

10/55 Reversing lights left, S60

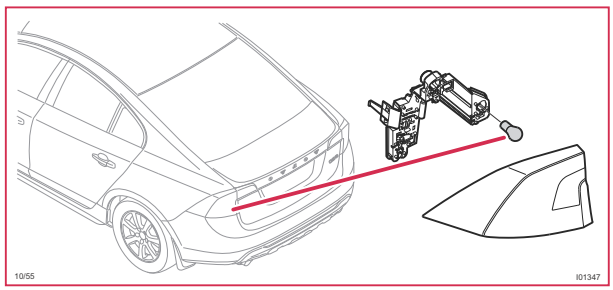

Component illustrations
10/55 - 10/102

10/55 Reversing lights left, V60

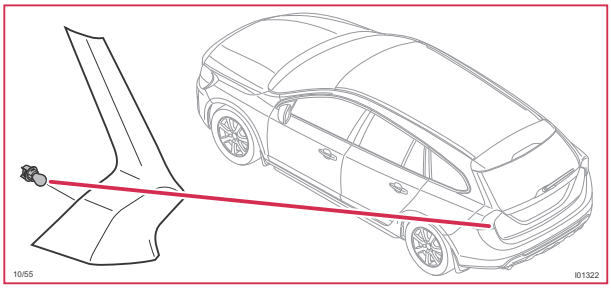

10/64 Right-hand high beam

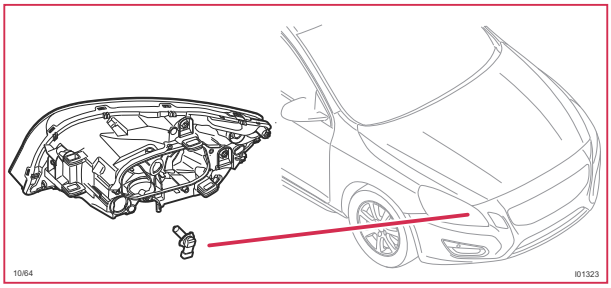

10/65 Auxiliary light, front right

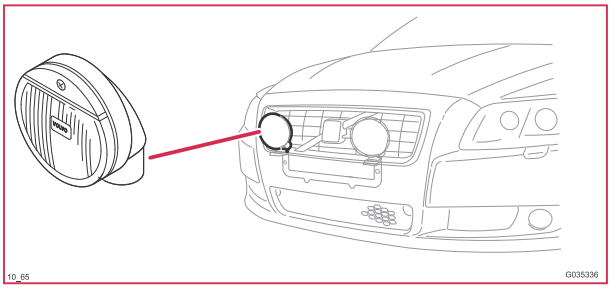

10/66 Right-hand low beam

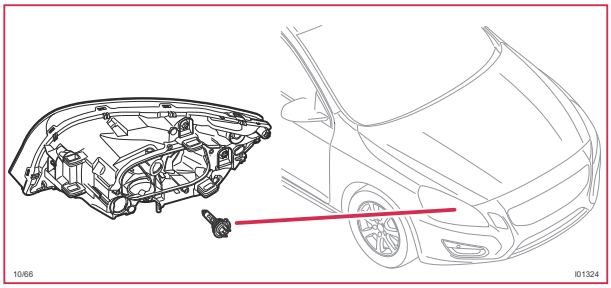

10/68 Left-hand high beam

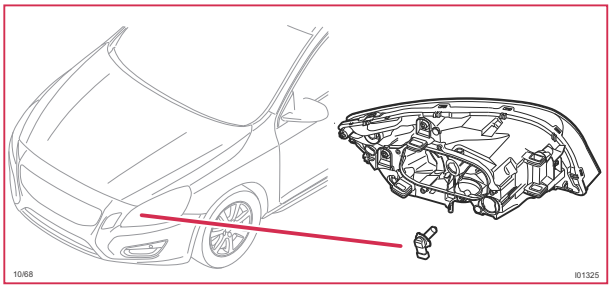

10/69 Auxiliary light, front left

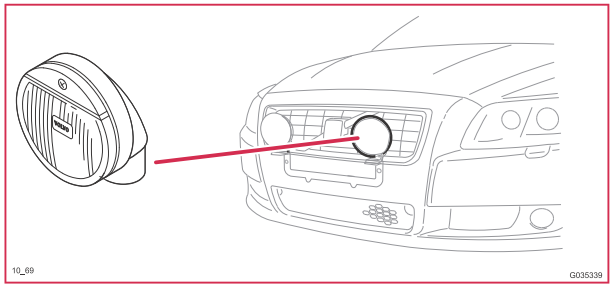

10/70 Left-hand low beam

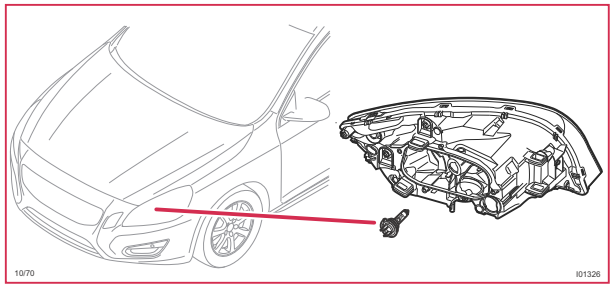

10/72 Front ashtray lighting

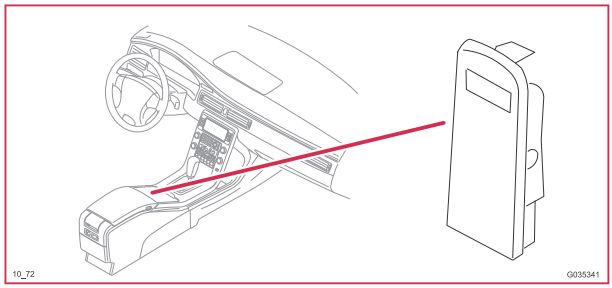

10/97 Front courtesy lighting, driver's side

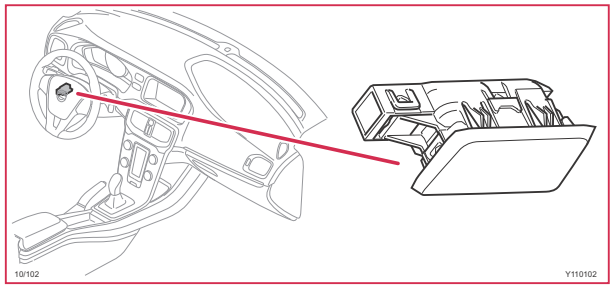

10/102 Front courtesy lighting, passenger side

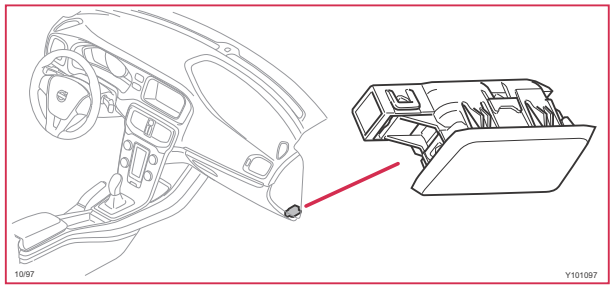

Component illustrations
10/114 - 11D/A

10/114 Left-hand vanity mirror lighting

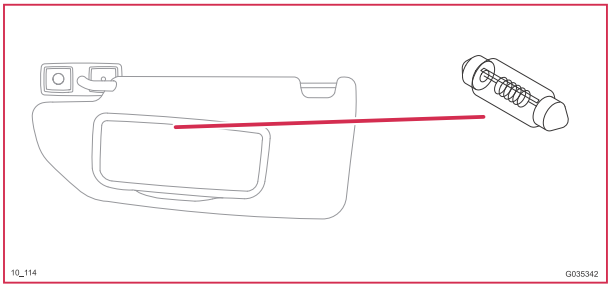

10/115 Right-hand vanity mirror lighting

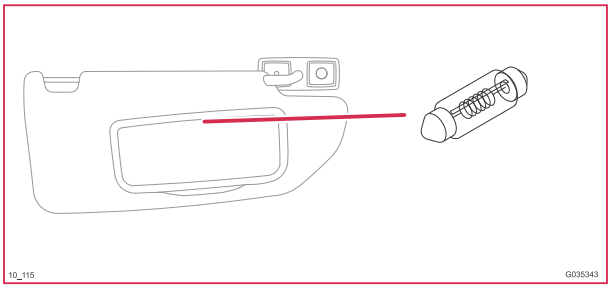

10/127 Lighting, cargo compartment, left-hand side, S60

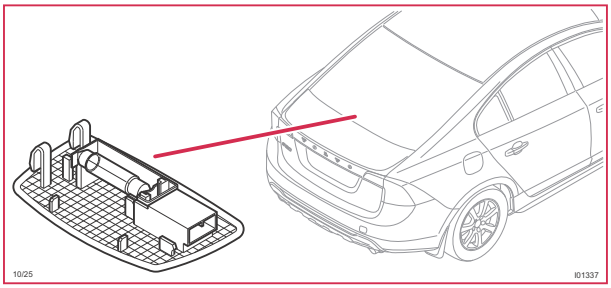

10/148 Lighting, left front door mirror

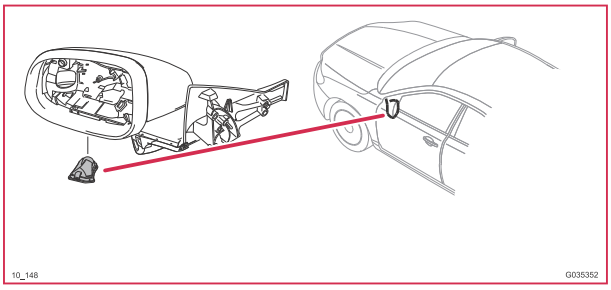

10/149 Lighting, right front door mirror

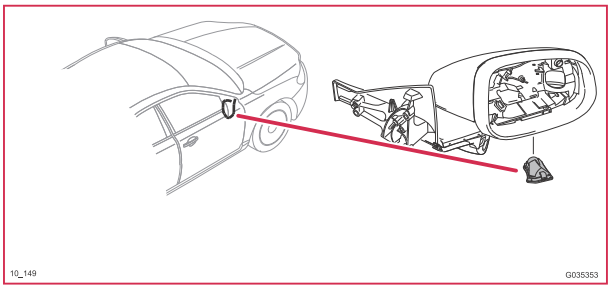

10/150A Rear reading light

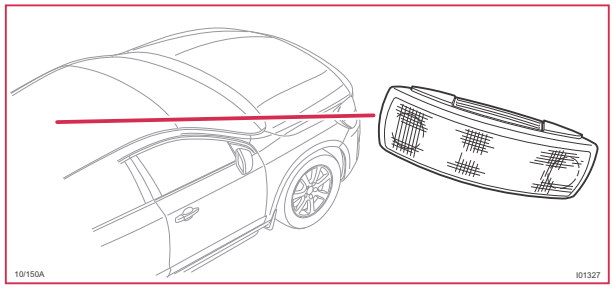

11A/no. Main fuses in engine compartment fuse box

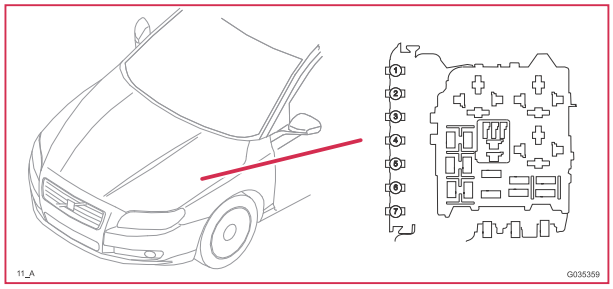

11B/no. Fuses in engine compartment fuse box

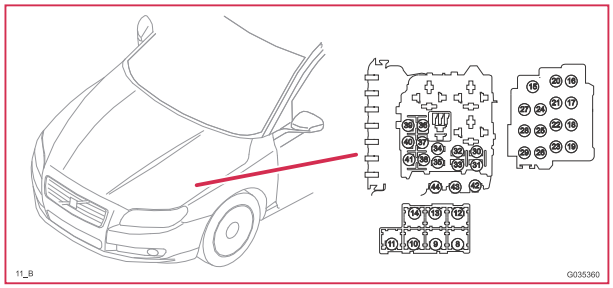

11C/no Fuses in distribution box passenger compartment

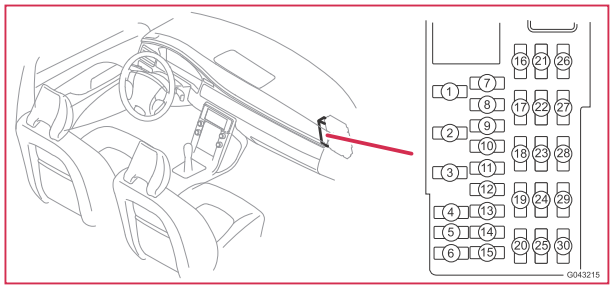

11D/A Fuses in cargo compartment fuse box

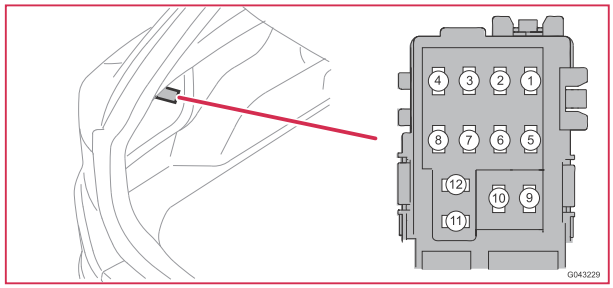

Component illustrations
15/31 - 16/4.1

15/31 Distribution box in engine compartment

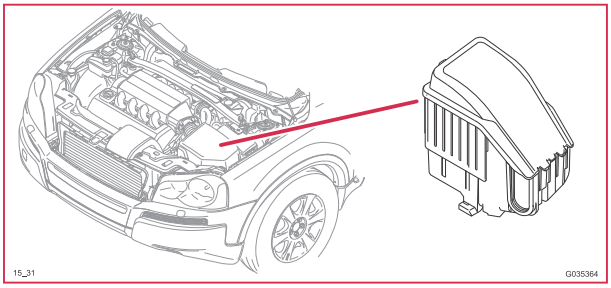

15/32 Distribution box in cargo compartment, S60

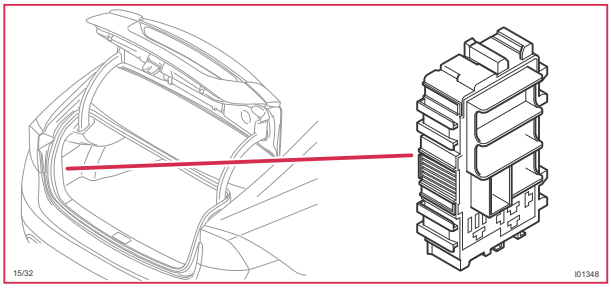

15/32 Distribution box in cargo compartment, V60

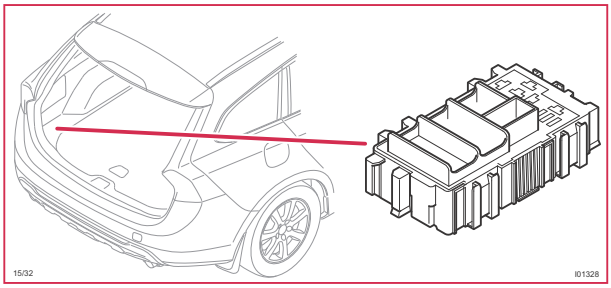

15/36 Distribution box in passenger compartment

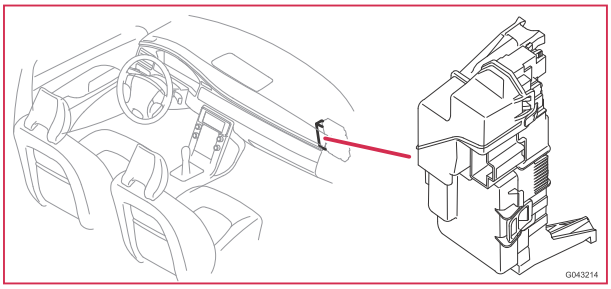

15/37 Engine compartment cold zone

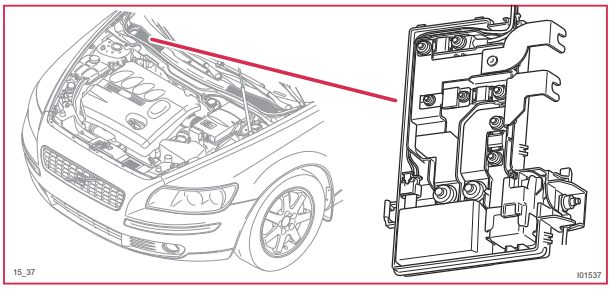

15/46 Relay box engine compartment

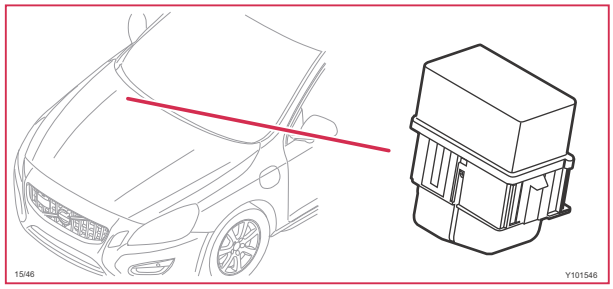

16/1 Integrated Audio Module (IAM)

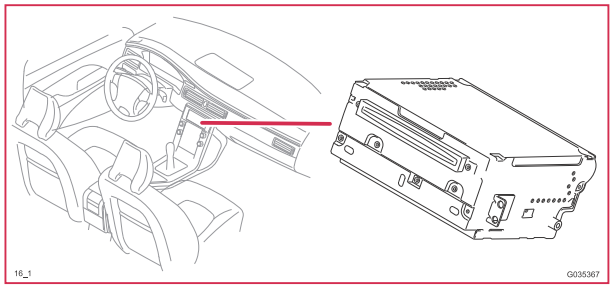

16/3.1 Right-hand front door speaker

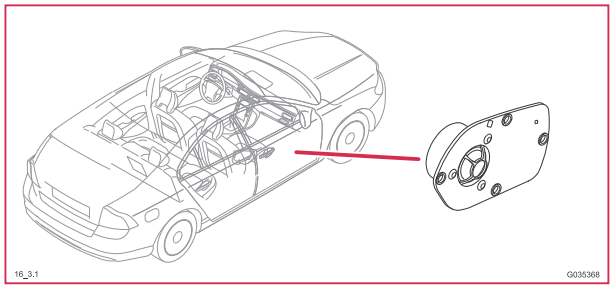

16/3.2 Right-hand front door speaker

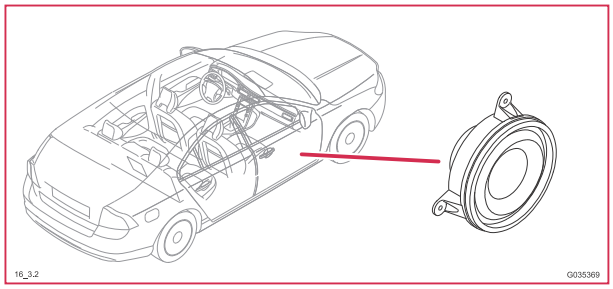

16/4.1 Left-hand front door speaker

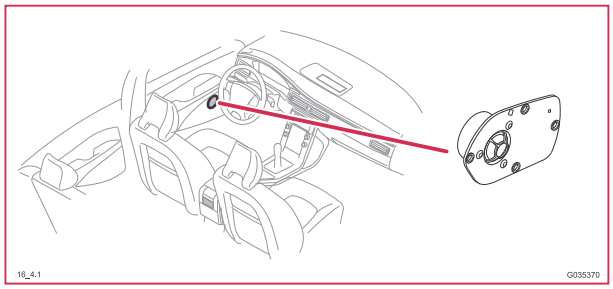

Component illustrations
16/4.2 - 16/30

16/4.2 Left-hand front door speaker

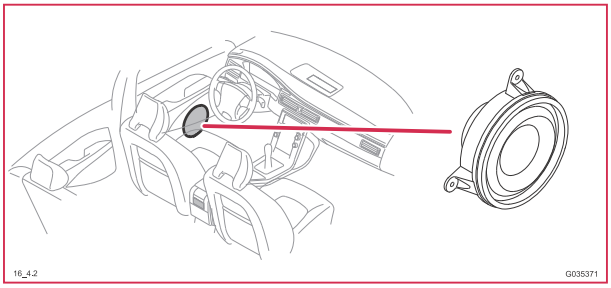

16/5 Right-hand rear door speaker

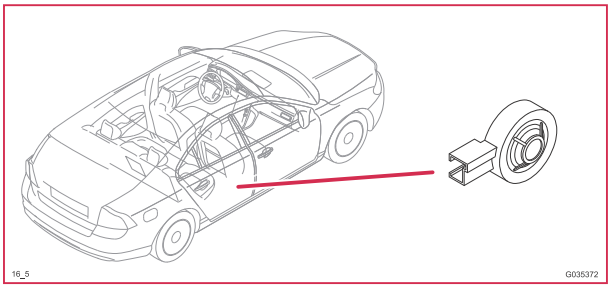

16/6 Left-hand rear door speaker

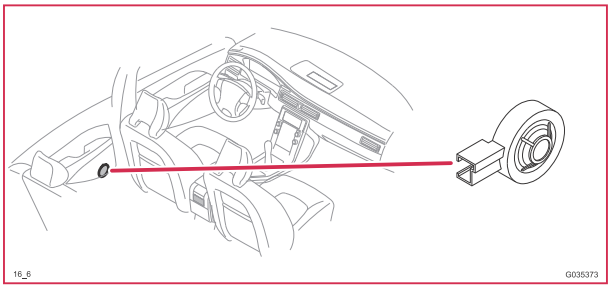

16/10 Horn 1

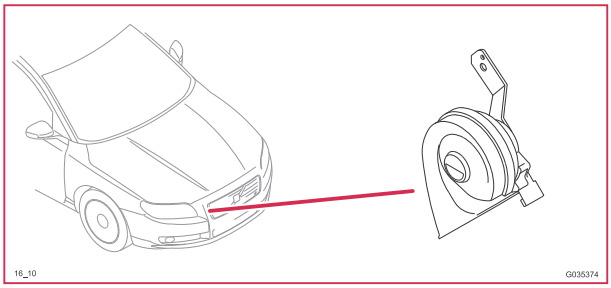

16/11 Horn 2

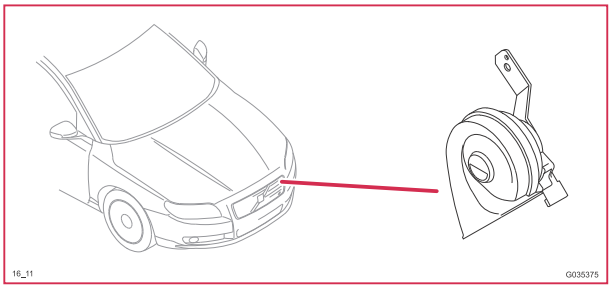

16/16 Amplifier window antenna, S60

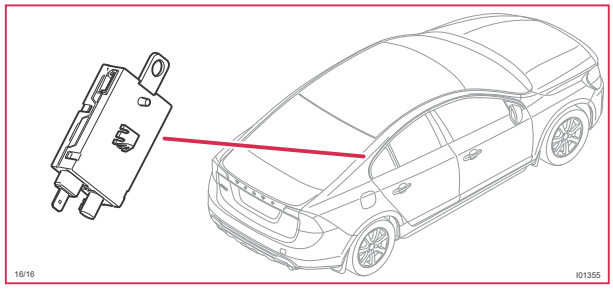

16/16 Amplifier window antenna, V60

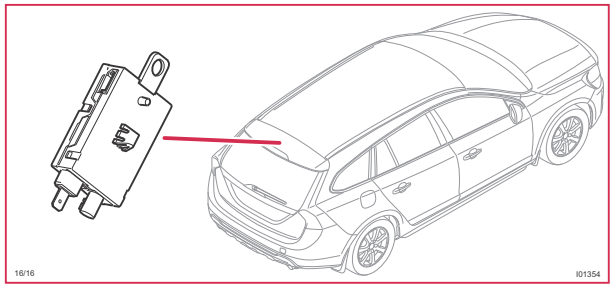

16/26 Center dashboard speaker

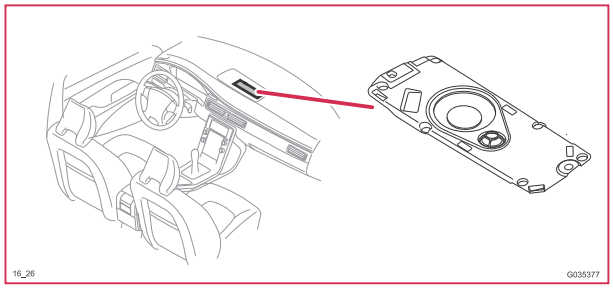

16/29 Loudspeaker mid-range left front

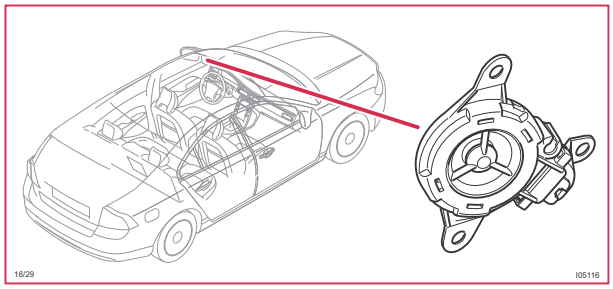

16/30 Loudspeaker mid-range right front

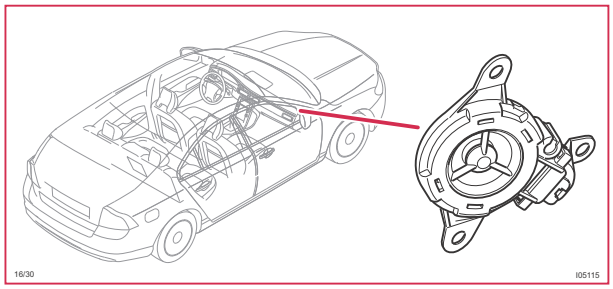

Component illustrations
16/35 - 16/65

16/35 Siren Control Module (SCM)

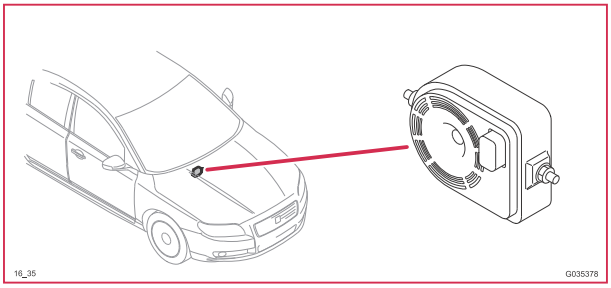

16/36 TV receiver

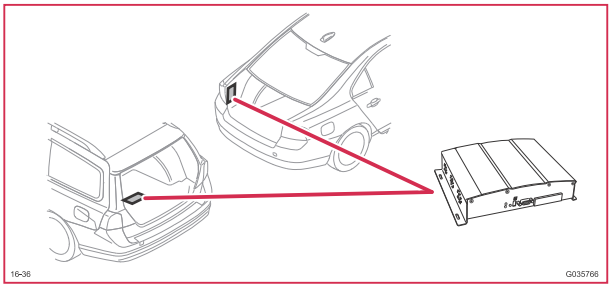

16/45 Portable navigation system

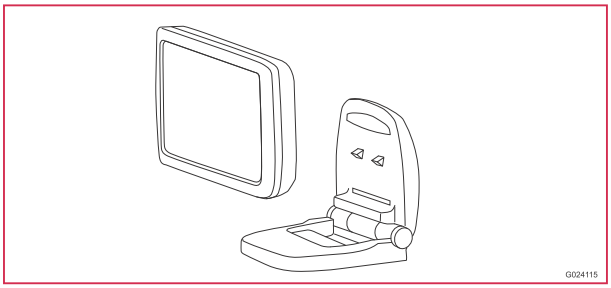

16/47 Antenna GSM/GPS/RDAR

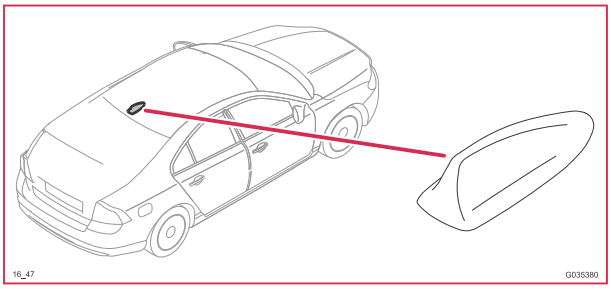

16/49 Traffic message channel module (TMC)

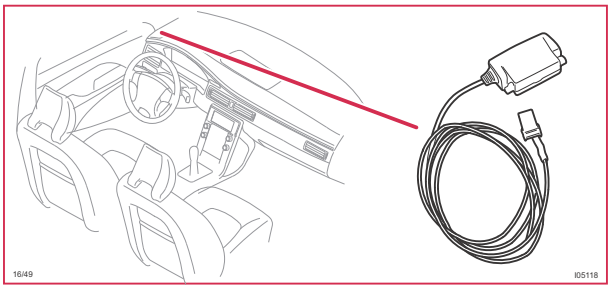

16/55 Left-hand front tweeter

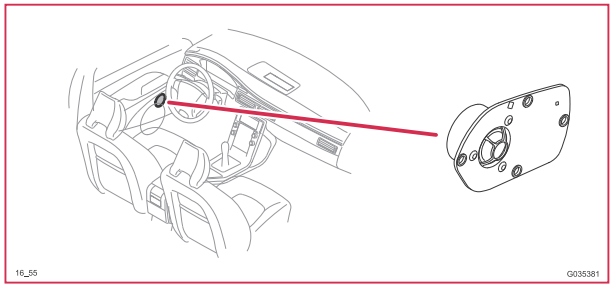

16/56 Right-hand front tweeter

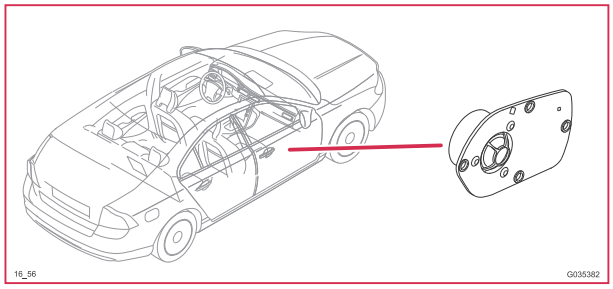

16/60 Phone Module (PHM)

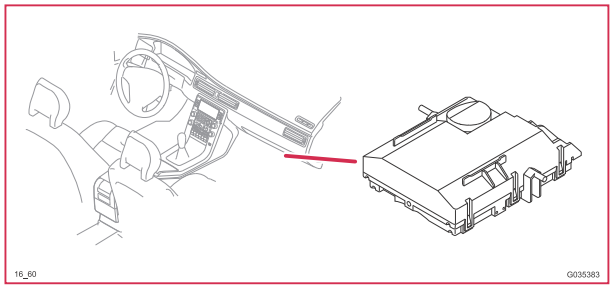

16/63 GPS antenna, cellular phone

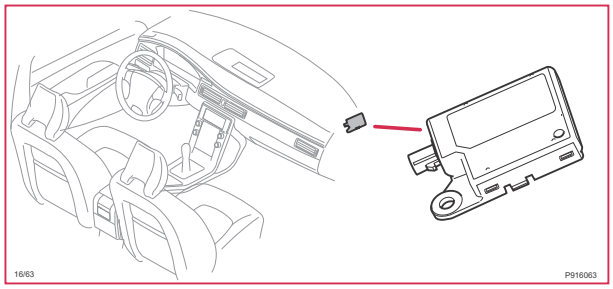

16/65 Immobilizer Antenna Unit (IAU)

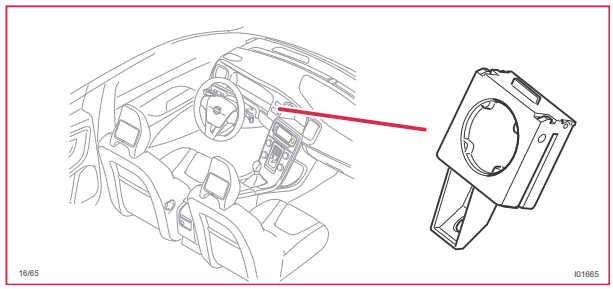

Component illustrations
16/71 - 16/127

16/71 Amplifier window antenna 1, S60

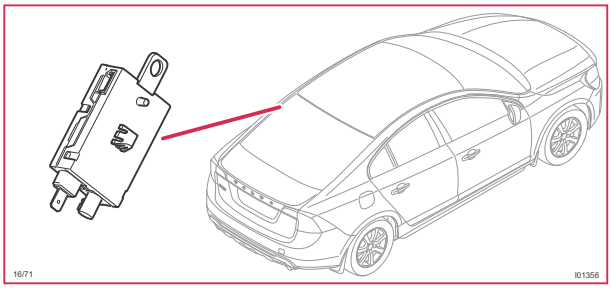

16/71 Amplifier window antenna 1, V60

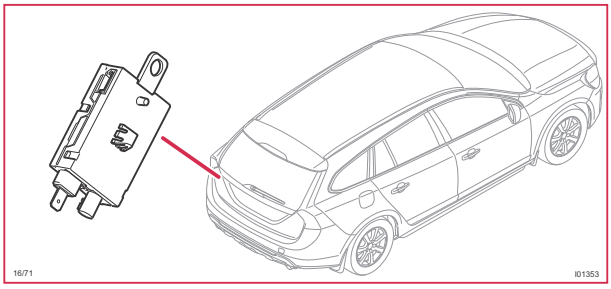

16/73 Amplifier window antenna 2, V60 (TV/DAB)

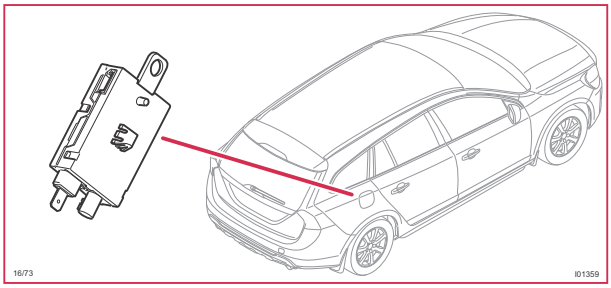

16/79 Subwoofer Module (SUB)

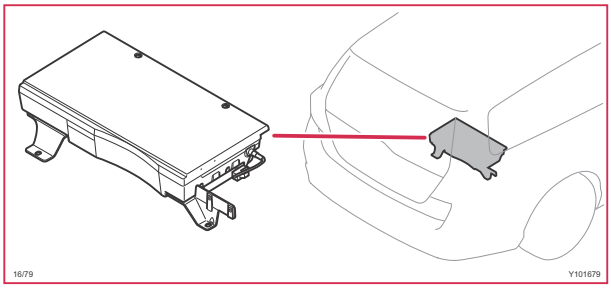

16/98 Microphone

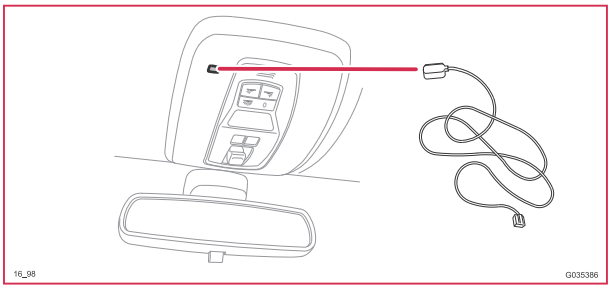

16/105 Audio module (AUD)

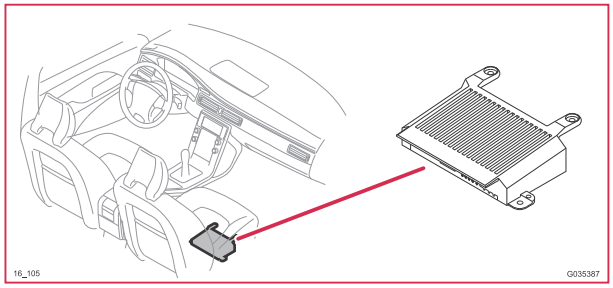

16/109 Control module (RSE)

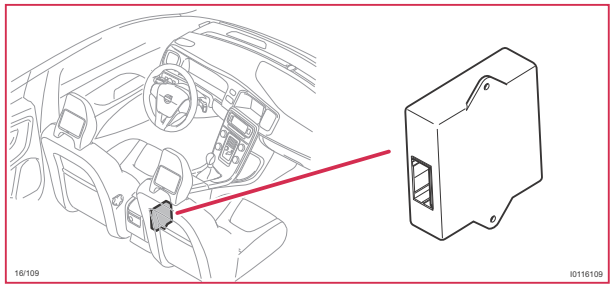

16/121 VICS-antenna

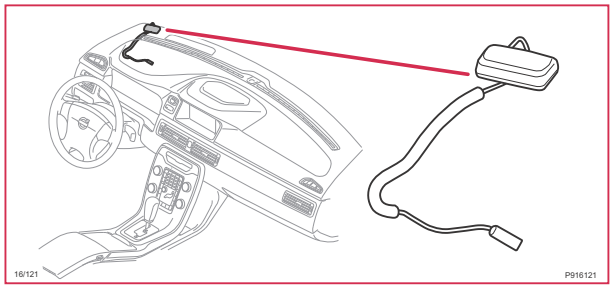

16/123 Auxiliary input (AUX)

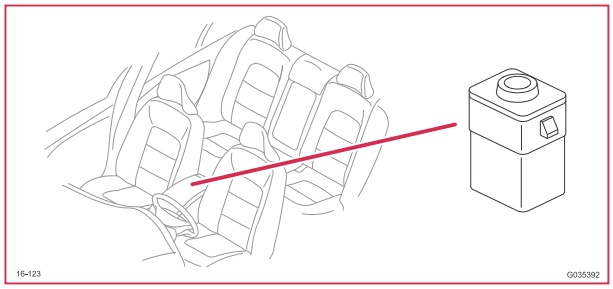

16/127 Microphone, mobile phone handsfree

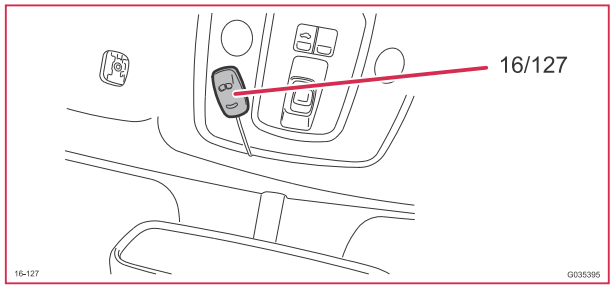

Component illustrations
16/132 - 16/159

16/132 Antenna door lock trunk lid/tailgate, V60

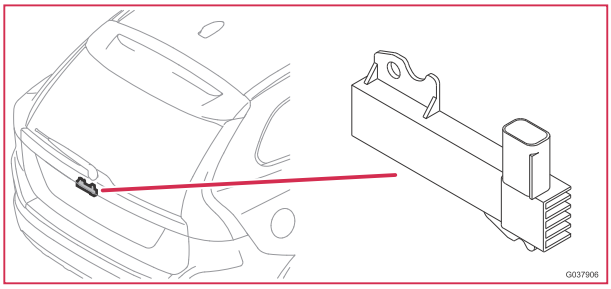

16/133 Antenna, door lock, cargo compartment, S60

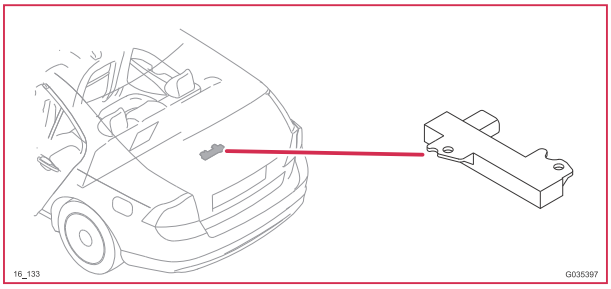

16/134 Antenna, door lock, passenger compartment 2

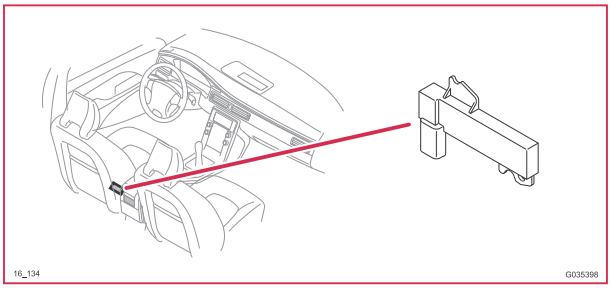

16/135 Antenna, door lock, passenger compartment 3

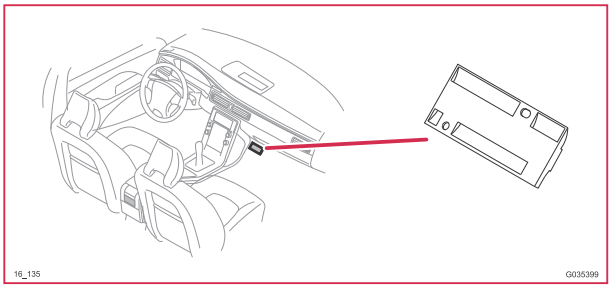

16/136 LH rear door tweeter

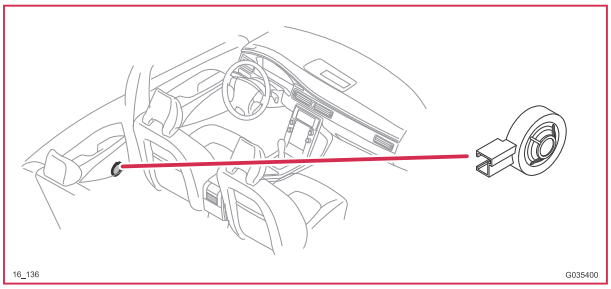

16/137 RH rear door tweeter

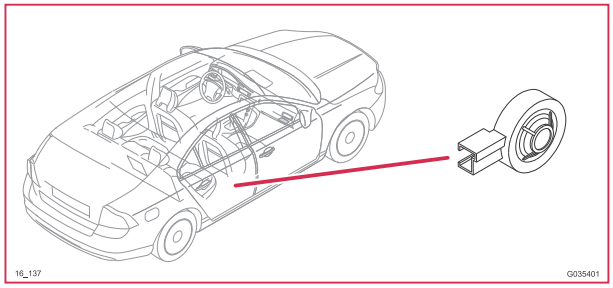

16/140 SIM card reader

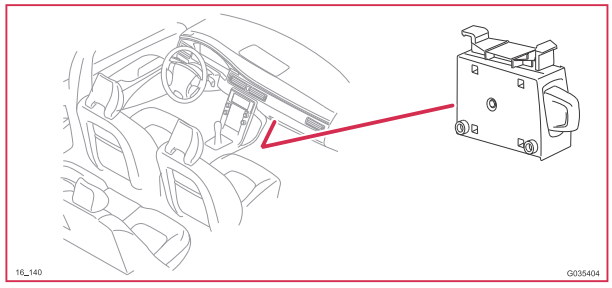

16/141 Interference filter, rear window, left

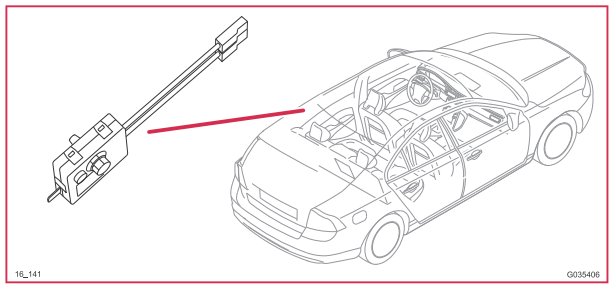

16/145 Remote Digital Audio Receiver (RDAR)

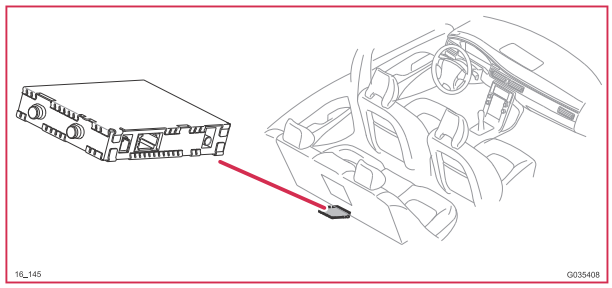

16/159 Control module, mobile phone handsfree

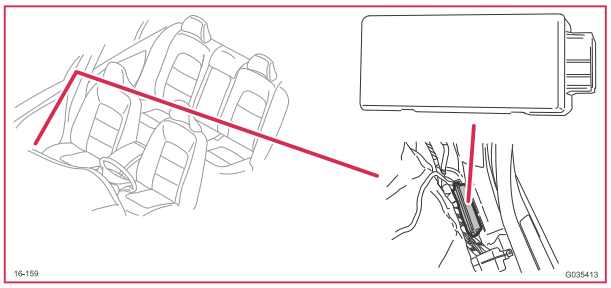

Component illustrations
16/162 - 17/39

16/162 Digital Audio Broadcast Module (DABM)

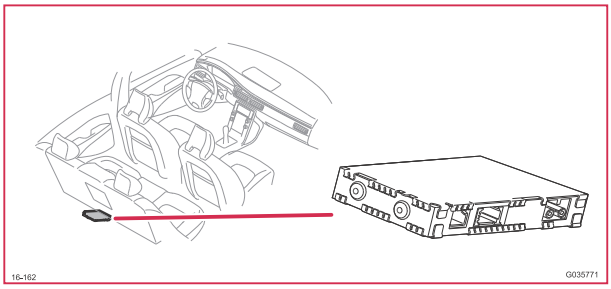

16/164 Display/DVD headrest left (RSE)

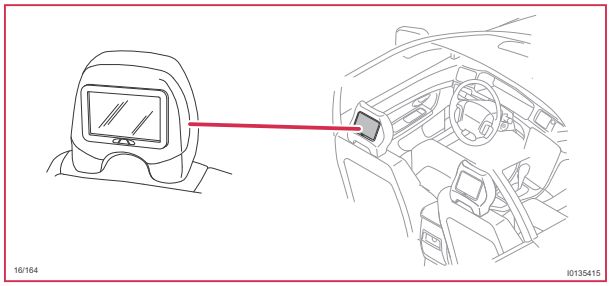

16/165 Display/DVD headrest right (RSE)

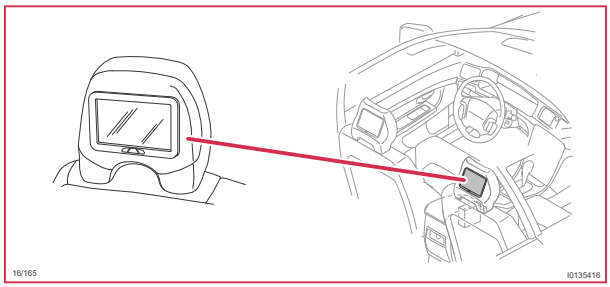

16/181 Rear headphone sockets

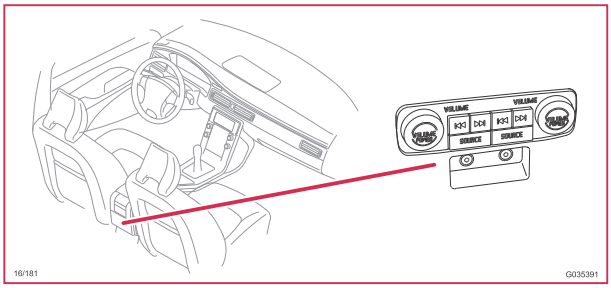

16/185 TV Antenna

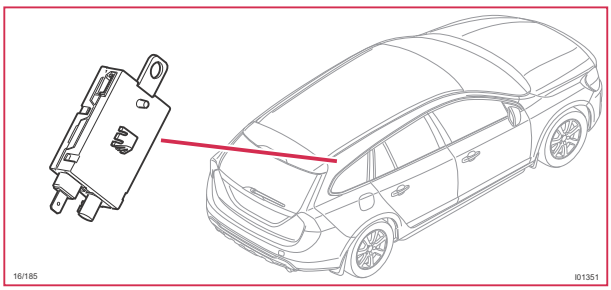

16/186 TV-Antenna, V60

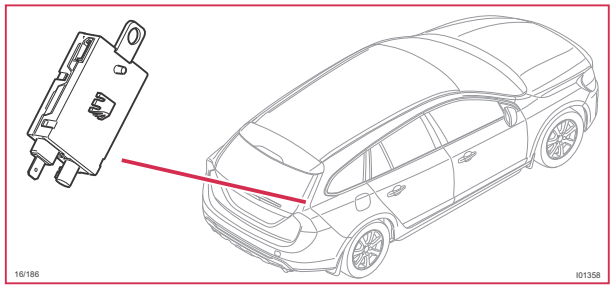

16/188 TV Antenna

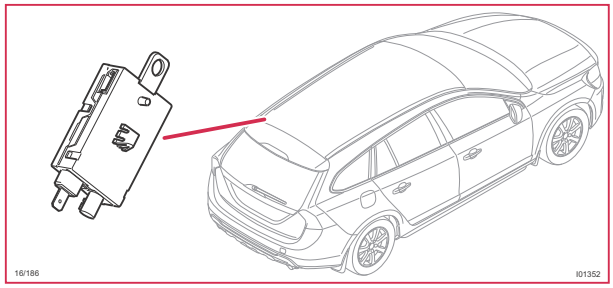

17/13 Data link connector

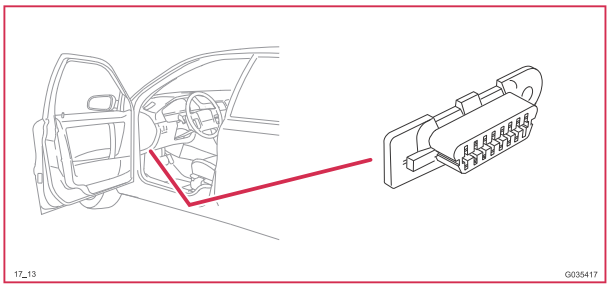

17/19 12 V outlet, cargo compartment

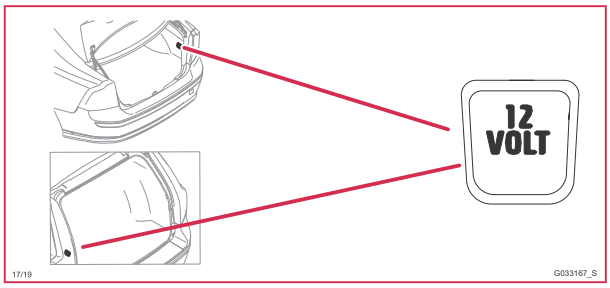

17/39 13-pin outlet, tow hitch cable harness

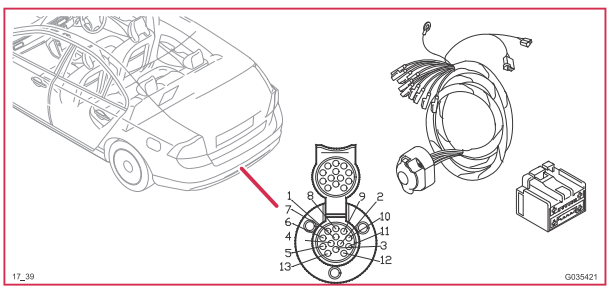

Component illustrations
17/42 - 27/6

17/42 USB-port

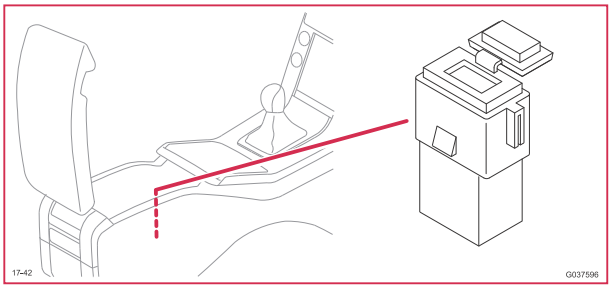

20/16 Capacitor

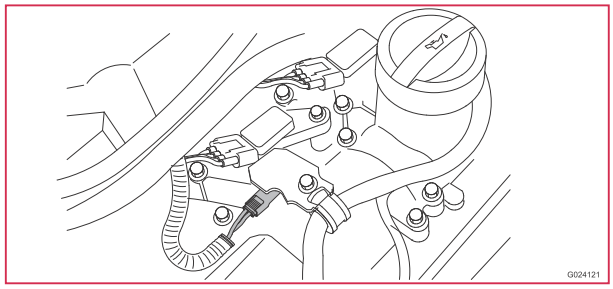

17/42 USB port, accessories

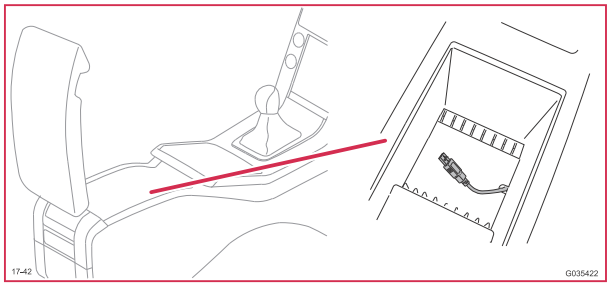

20/22-26 Glow plug

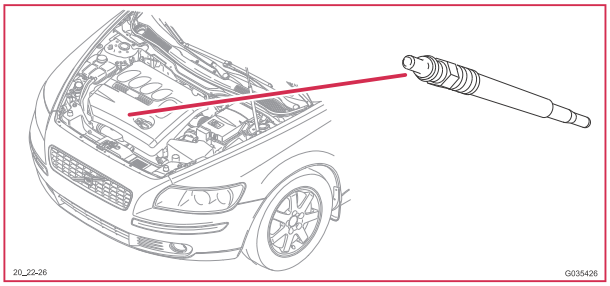

17/45 Alcohol lock outlet

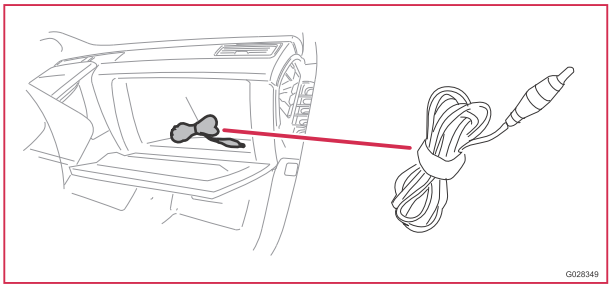

26/8 Alcohol lock charging cradle

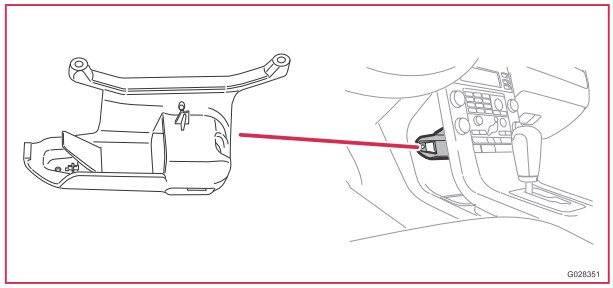

18/4 Contact reel

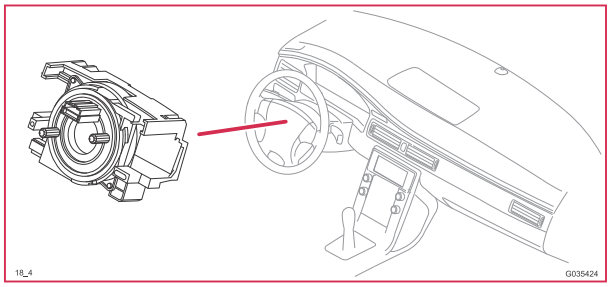

27/2 Indicator, visual collision warning

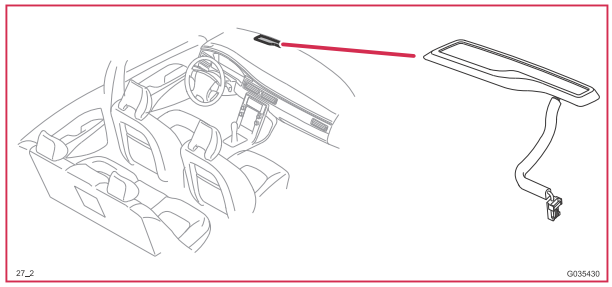

20/3-8 Spark plug and ignition coil

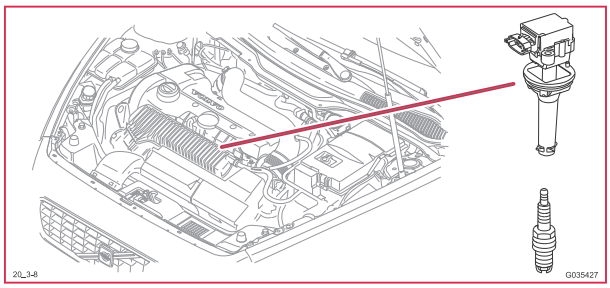

27/6 Camera

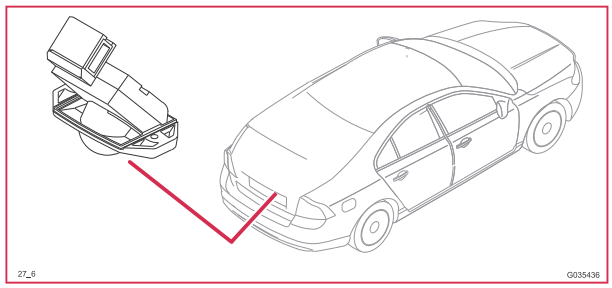

Component illustrations
27/8 - 31/15

27/8 Camera, wide angle front

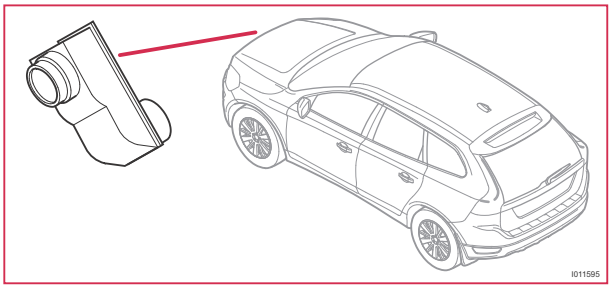

31/1 Ground connection, PTC

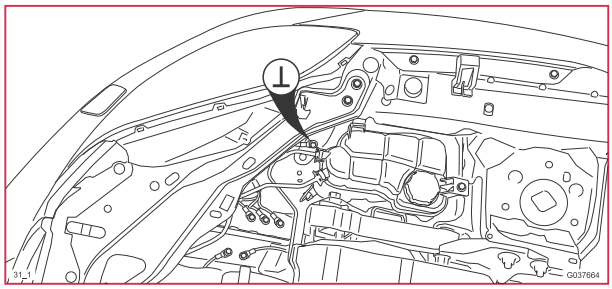

31/2 Ground connection, Left wheel housing

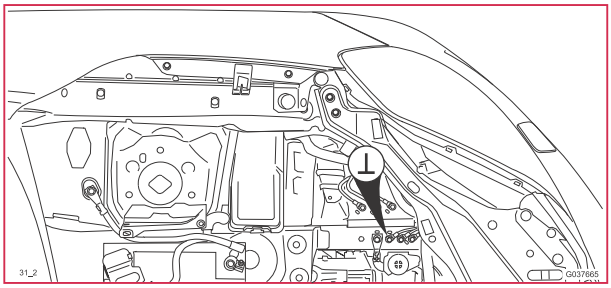

31/3 Ground connection, Body battery

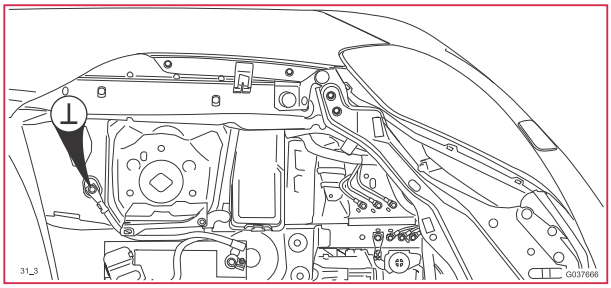

31/4 Ground connection, engine

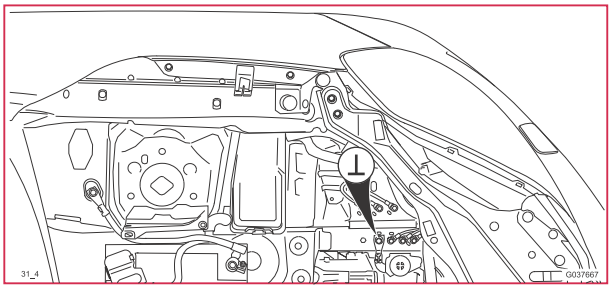

31/5 Ground connection, rear edge roof

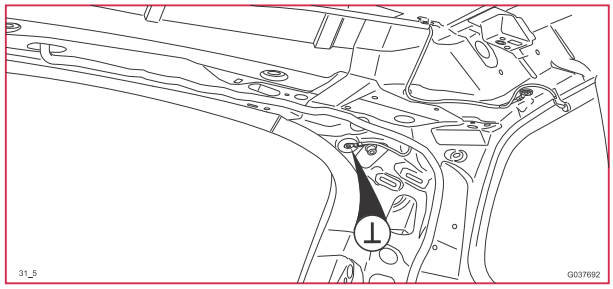

31/6 Ground connection, Left bottom rail

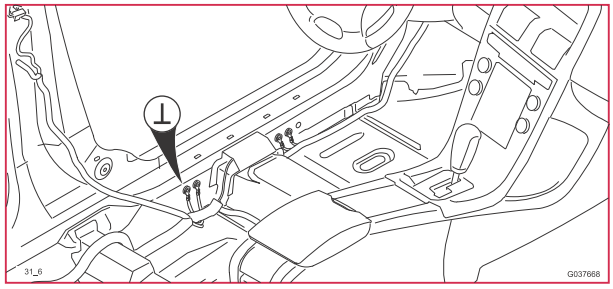

31/7 Ground connection, Left bottom rail

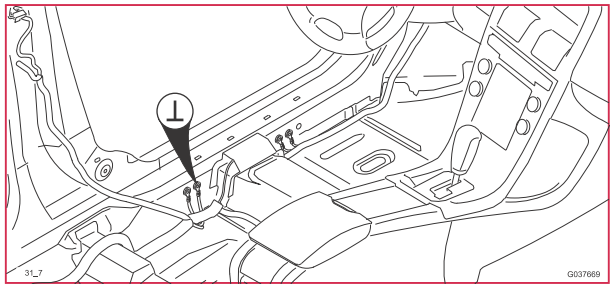

31/10 Ground connection, Left bottom rail

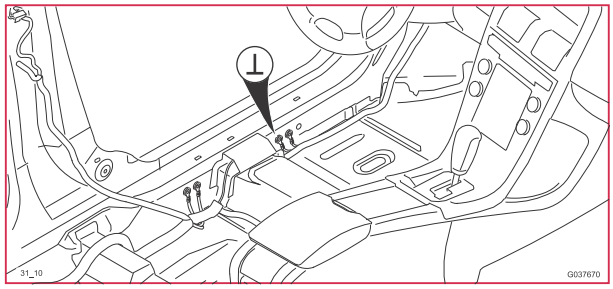

31/15 Ground connection, Right bottom rail

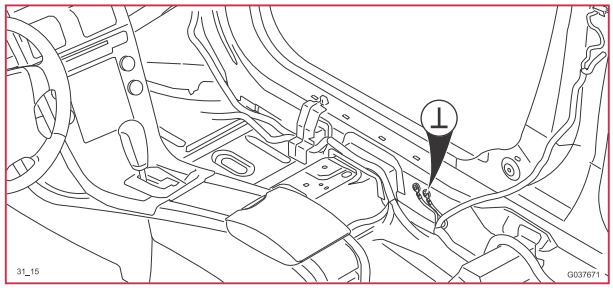

Component illustrations
31/47 - 31/88

31/47 Ground connection, Left rear bumper abutment

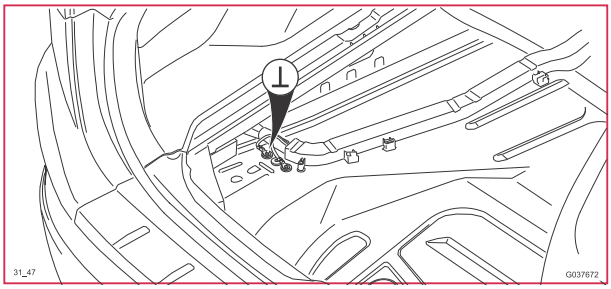

31/48 Ground connection, Right rear bumper abutment

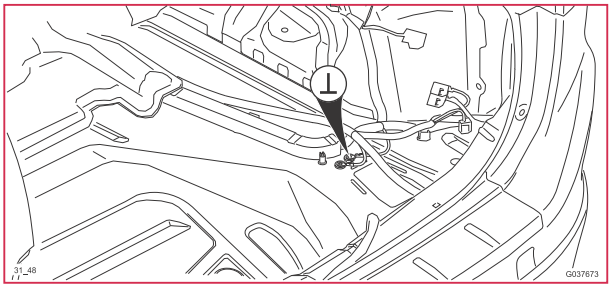

31/65 Ground connection, Rear seat riser, left side 1

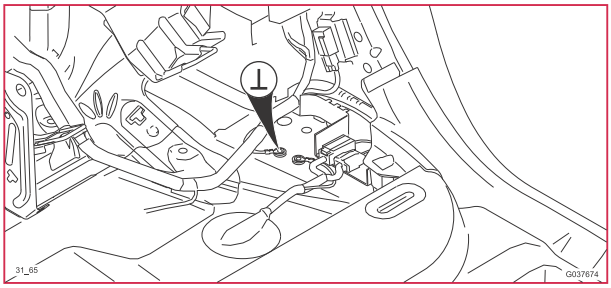

31/66 Ground connection, Rear seat riser, left side 2

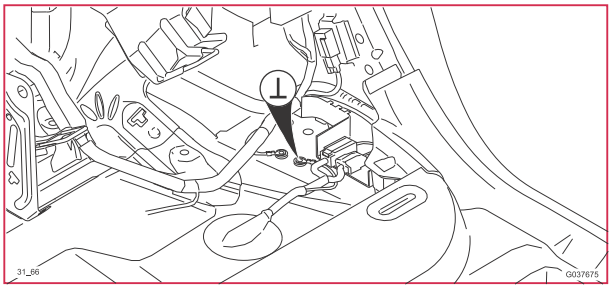

31/67 Ground connection, Rear seat riser, right side 1

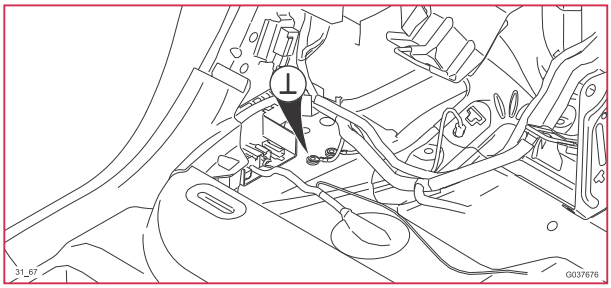

31/68 Ground connection, Rear seat riser, right side 2

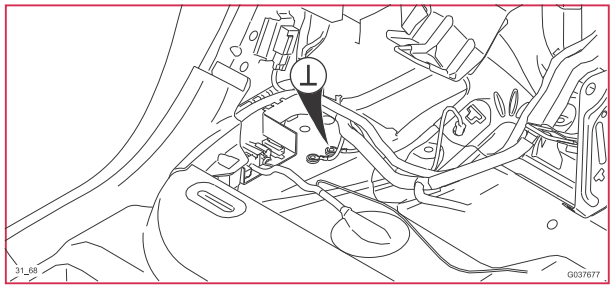

31/83 Ground connection, Left bottom rail

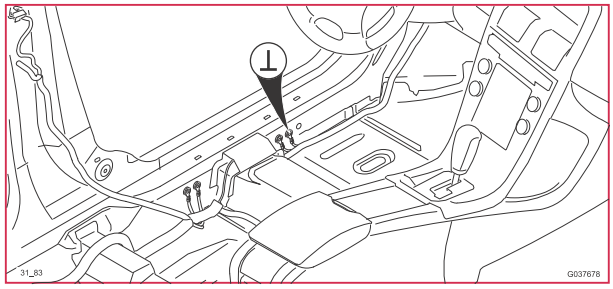

31/84 Ground connection, Right bottom rail

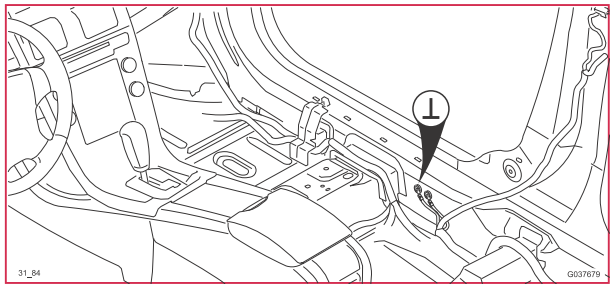

31/88 Ground connection, Engine ignition coils, 4-Cyl.

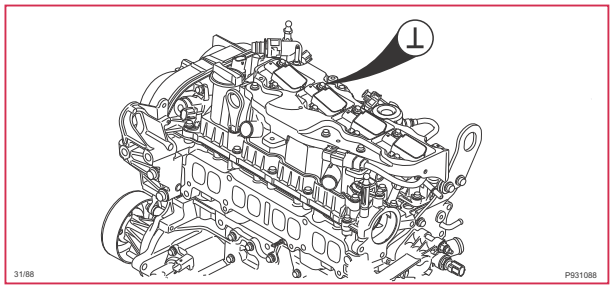

31/88 Ground connection, Engine ignition coils, 5-Cyl.

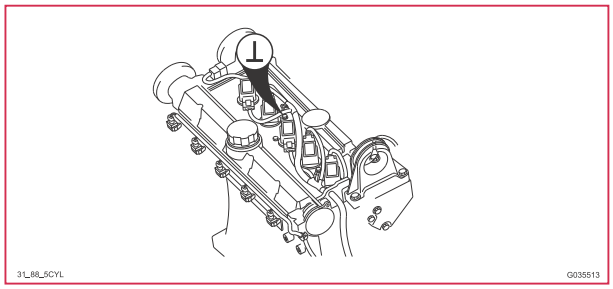

Component illustrations
31/88 - 31/107

31/88 Ground connection, Engine ignition coils, 6-Cyl.

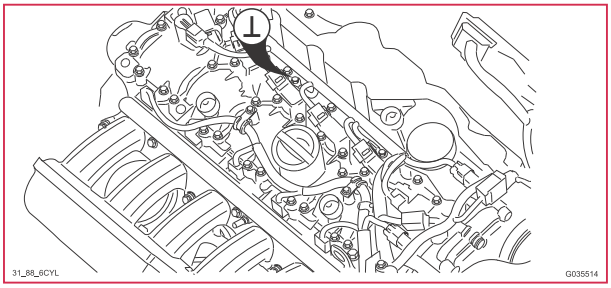

31/89 Ground connection, Engine ignition coils, 4-Cyl.

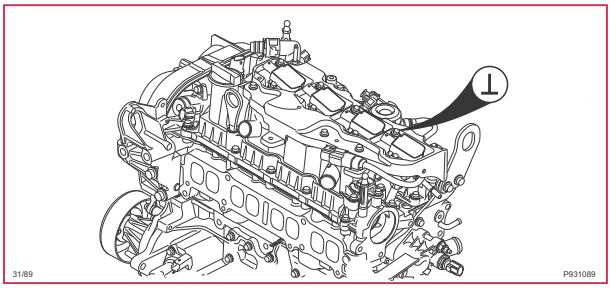

31/89 Ground connection, Engine ignition coils, 5-Cyl.

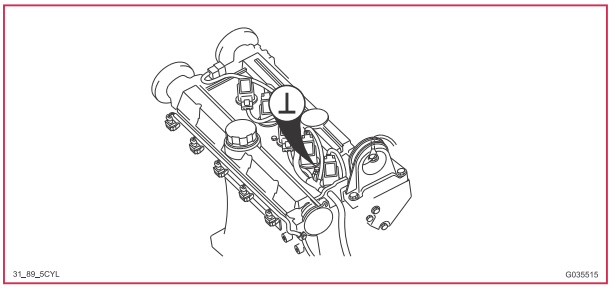

31/89 Ground connection, Engine ignition coils, 6-Cyl.

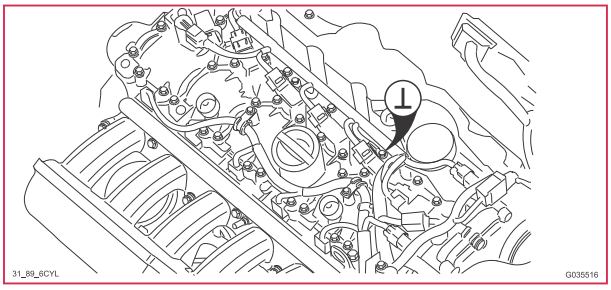

31/90 Ground connection, Engine ignition coils, 6-Cyl.

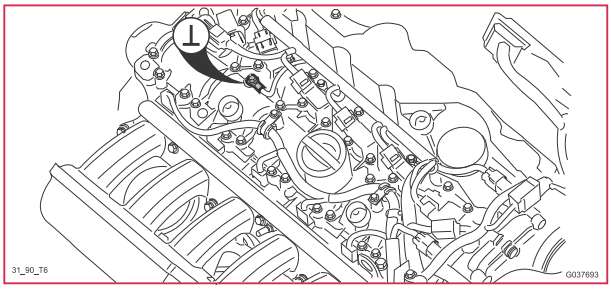

31/93 Ground connection, Left wheel housing 2

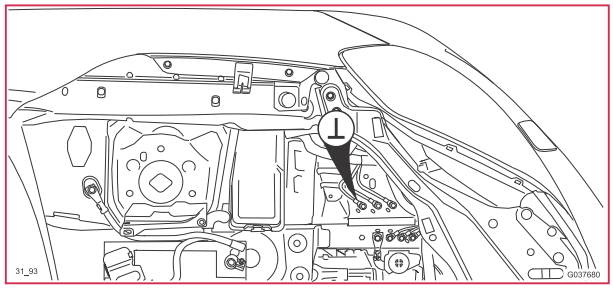

31/94 Ground connection, Right wheel housing 2

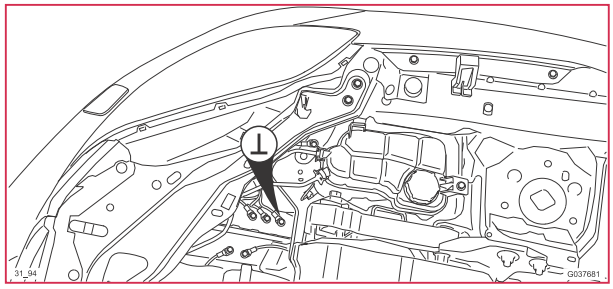

31/95 Ground connection, Left wheel housing 3

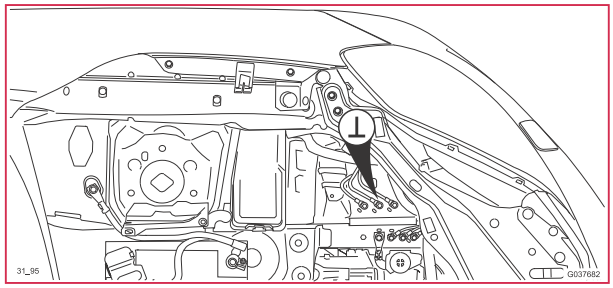

31/96 Ground connection, Right wheel housing 3

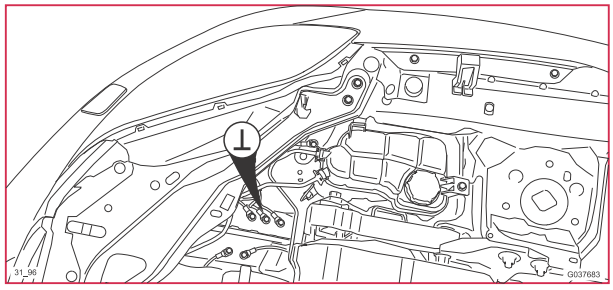

31/107 Ground connection, roof rear

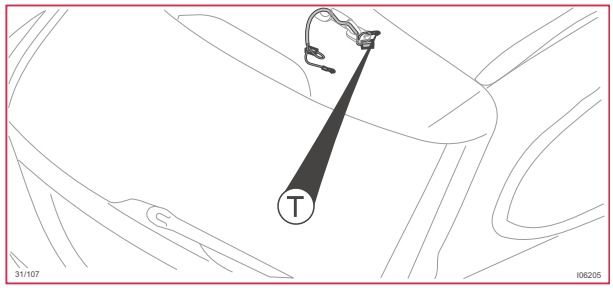

Component illustrations
31/115 - 31/TRM

31/115 Ground connection, left roof, A-pillar

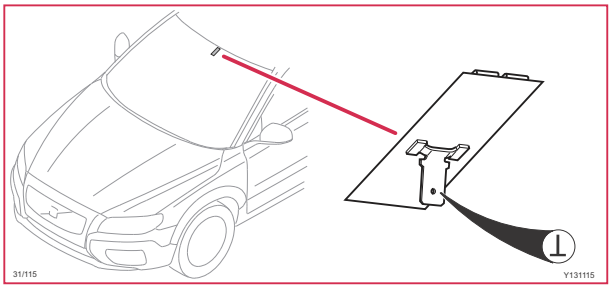

31/117 Ground connection, tailgate upper V60

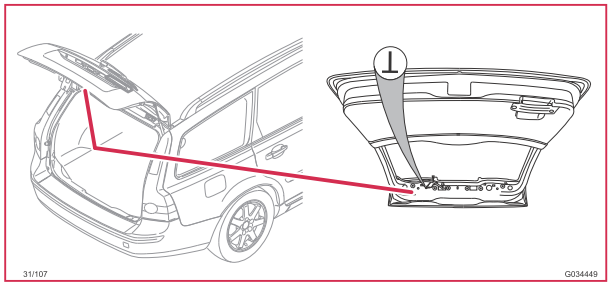

31/130 Ground connection, left roof, C-pillar

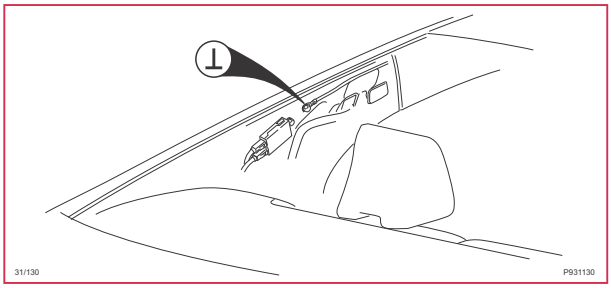

31/131 Ground connection, support battery

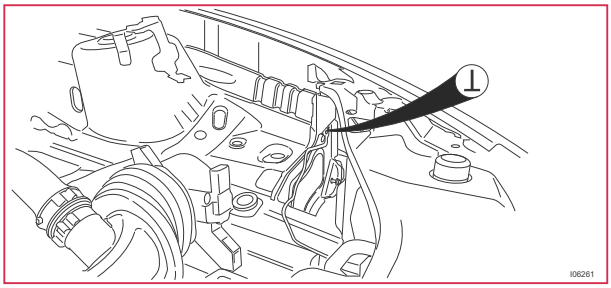

31/XX4 Ground connection, Engine-Body

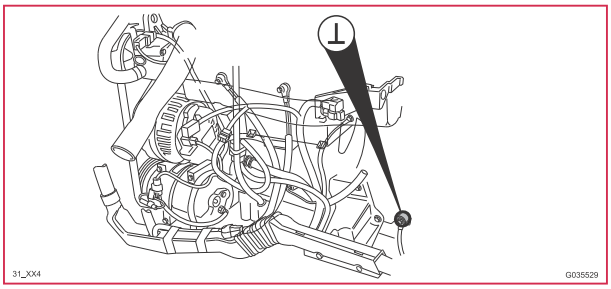

31/XX10 Ground connection, Left wheel housing 1

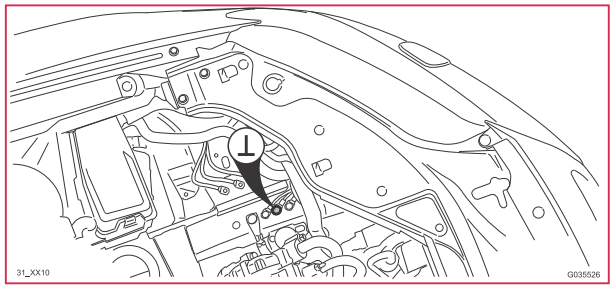

31/XX14 Ground connection, Left wheel housing 3 (ABS)

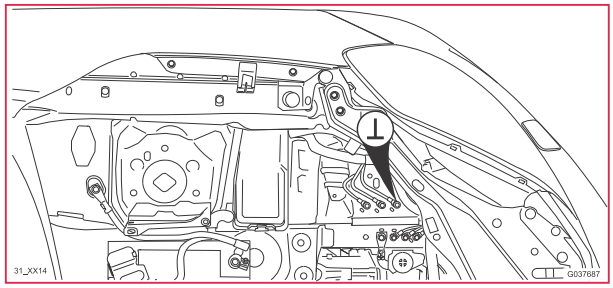

31/AL Ground connection, Auxiliary lights

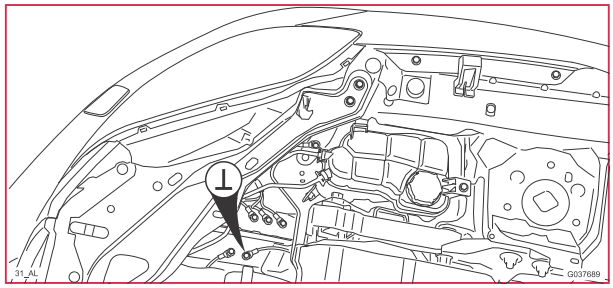

31/INFOT Ground connection, Infotainment

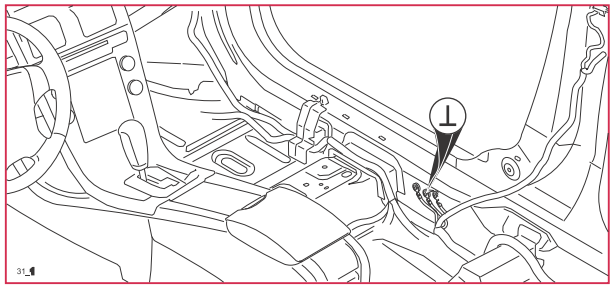

31/TRM Ground connection, Accessories

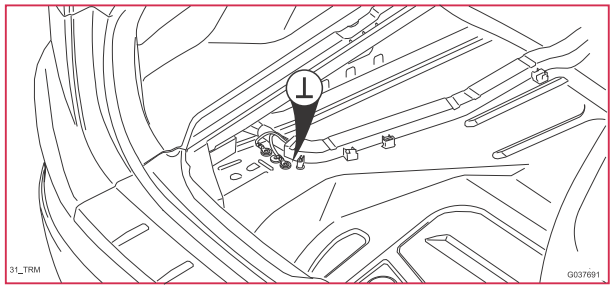

Component illustrations
74/9 - 74/310

74/9 Connector

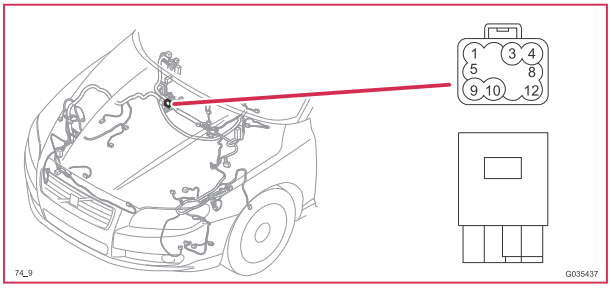

74/30 Connector

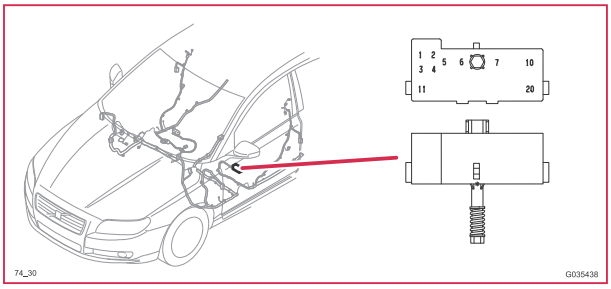

74/31 Connector

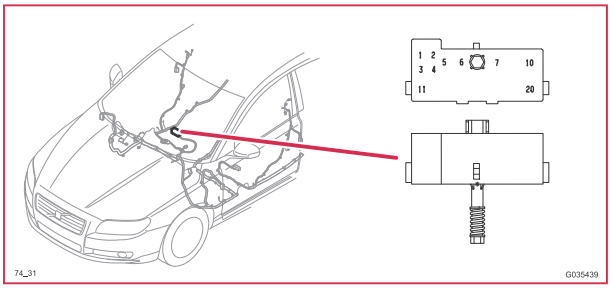

74/301 Connector

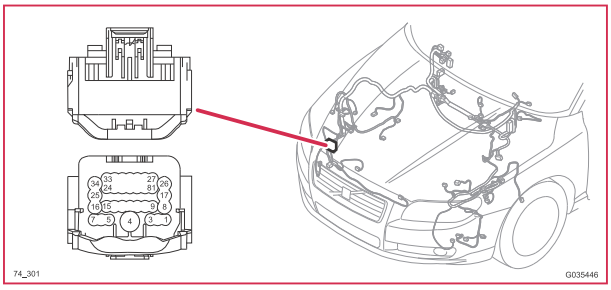

74/302 Connector

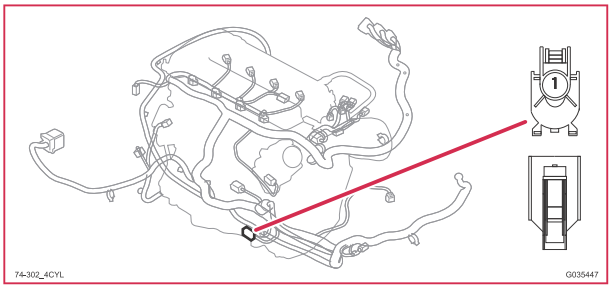

74/304 Connector

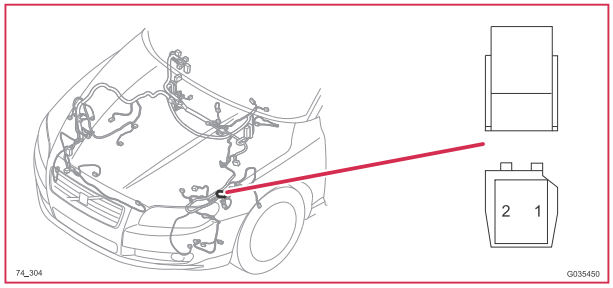

74/307 Connector

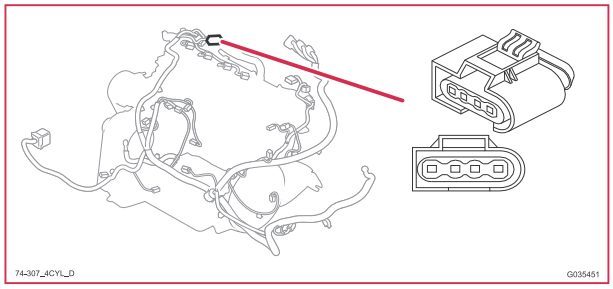

74/309 Connector

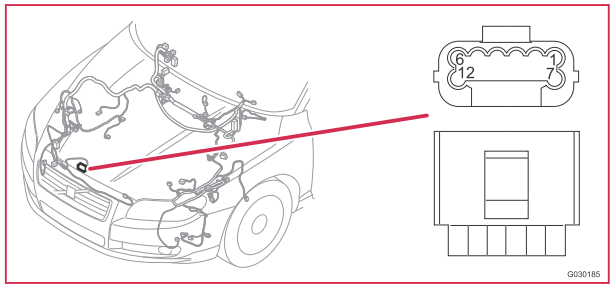

74/310 Connector not 1,6L

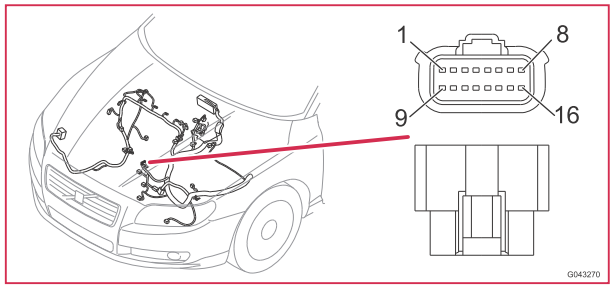

74/310 Connector only 1,6L

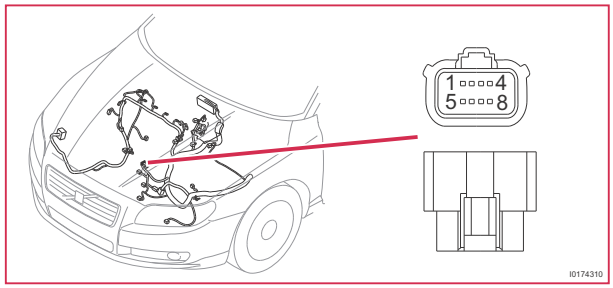

Component illustrations
74/316 - 74/409

74/316 Connector

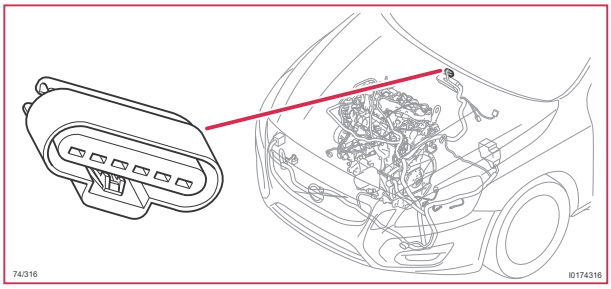

74/405 Connector

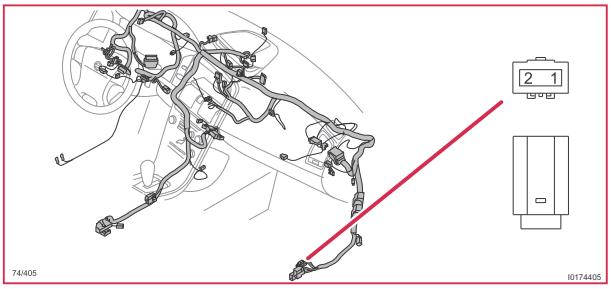

74/321 Connector

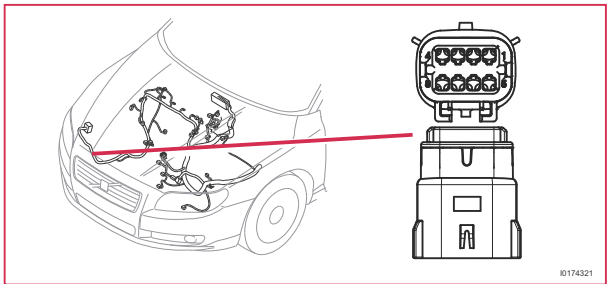

74/406 Connector

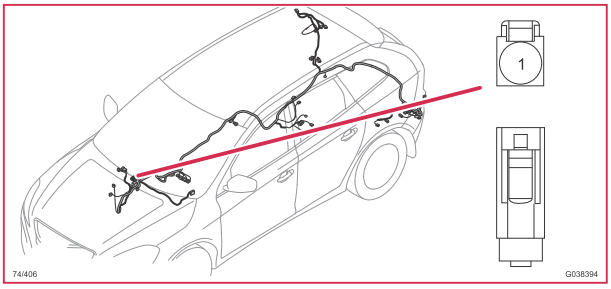

74/401 Connector

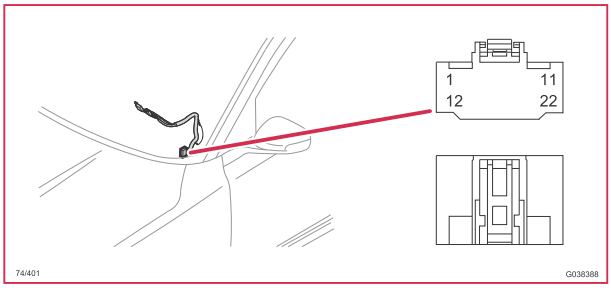

74/407 Connector

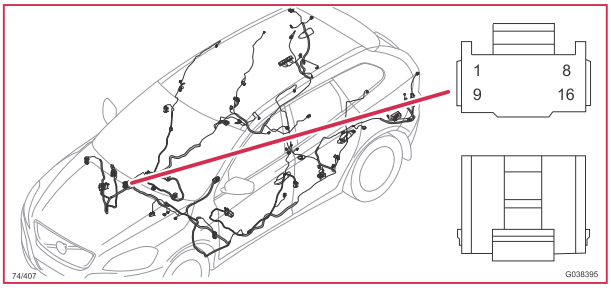

74/403 Connector

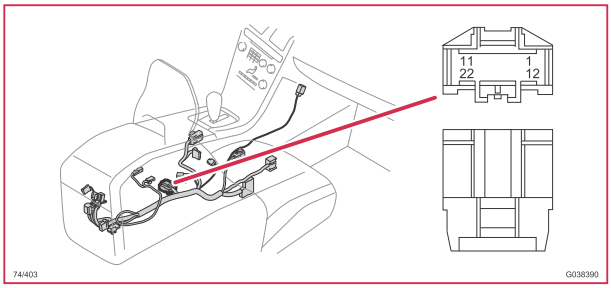

74/407B Connector

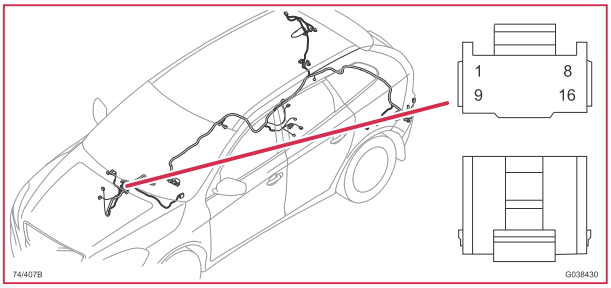

74/404 Connector

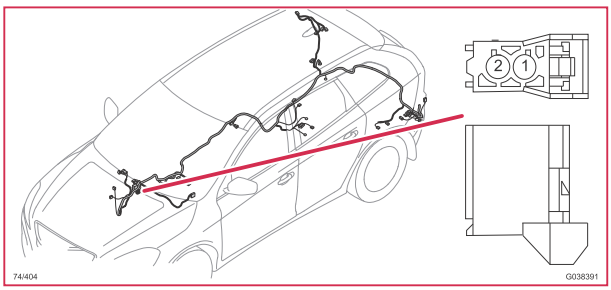

74/409 Connector

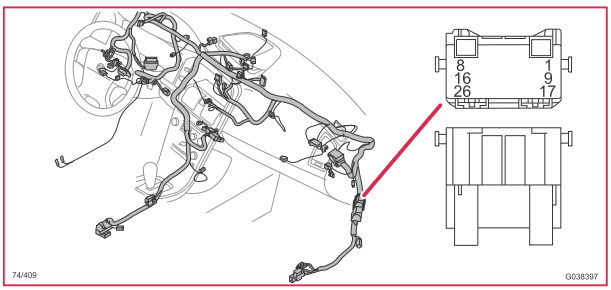

Component illustrations
74/411 - 74/504

74/411 Connector

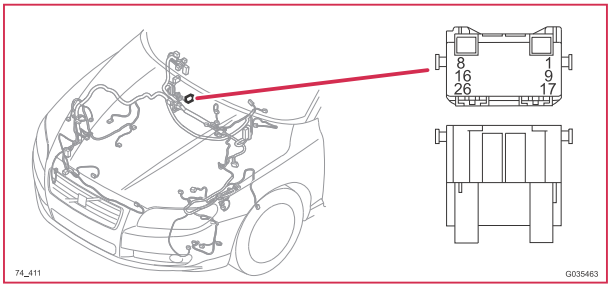

74/412 Connector

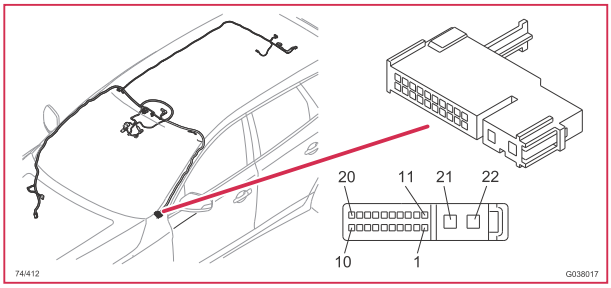

74/414 Connector

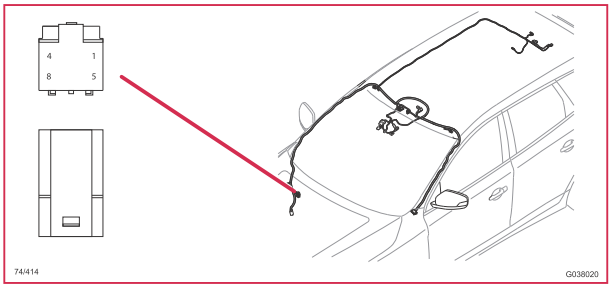

74/416 Connector

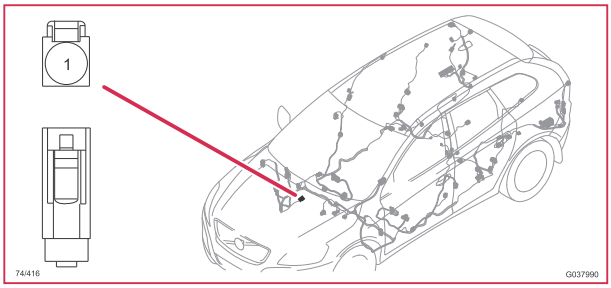

74/417 Connector

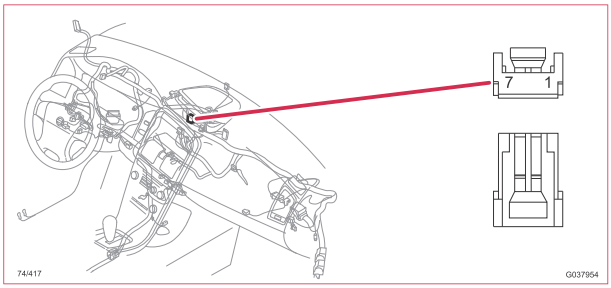

74/419 Connector

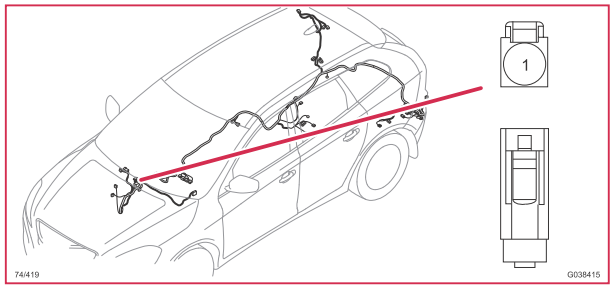

74/420 Connector

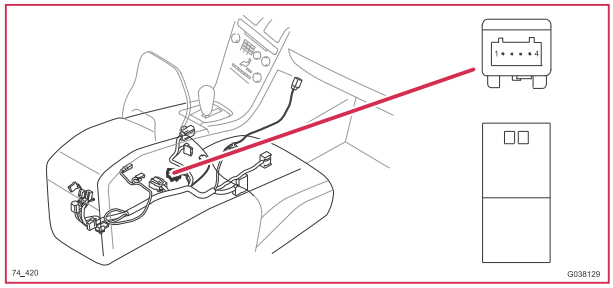

74/421 Connector

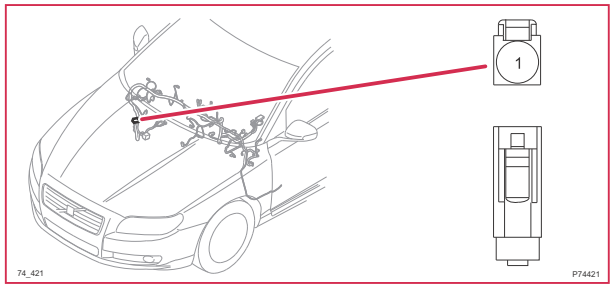

74/503 Connector

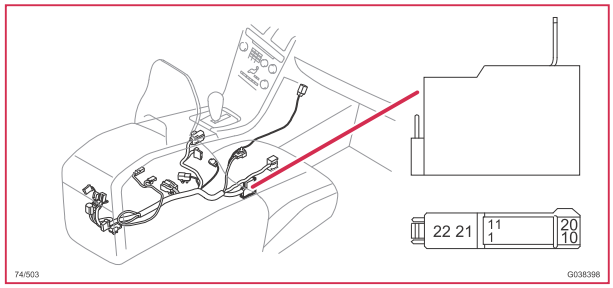

74/504 Connector

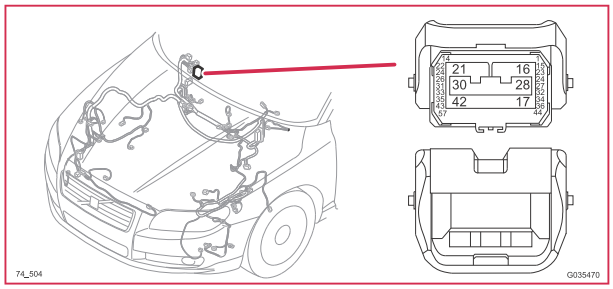

Component illustrations
74/504B - 74/518

74/504B Connector

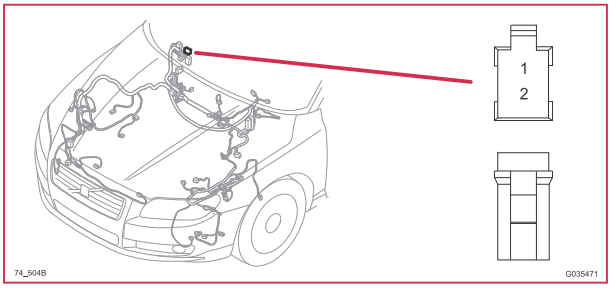

74/511 Connector

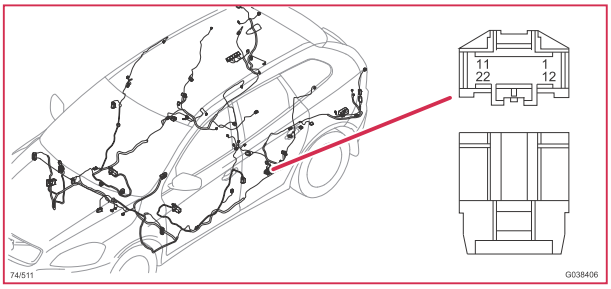

74/507 Connector

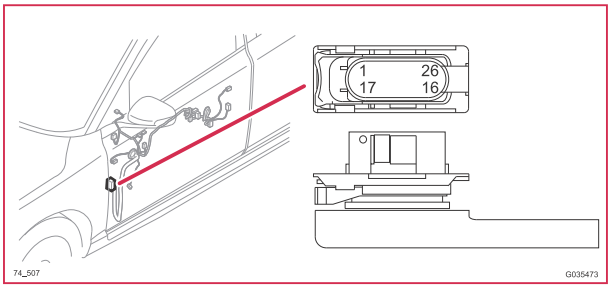

74/512 Connector

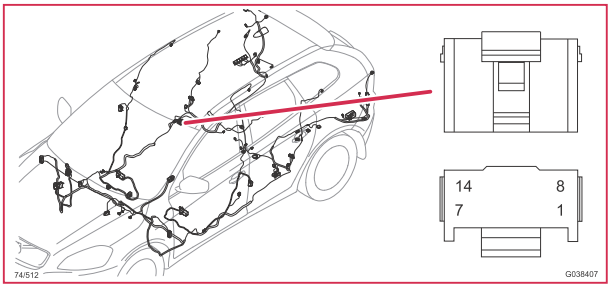

74/508 Connector

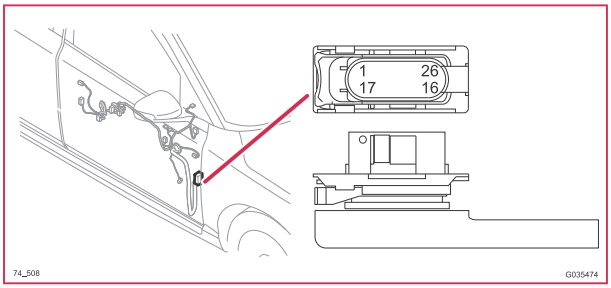

74/513 Connector

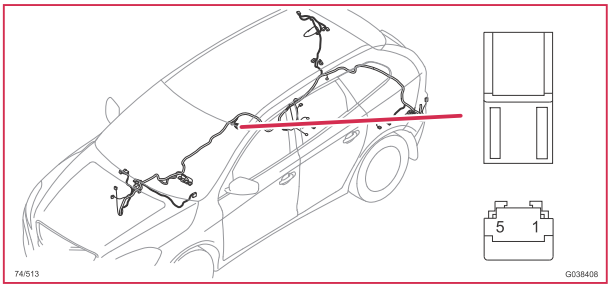

74/509 Connector

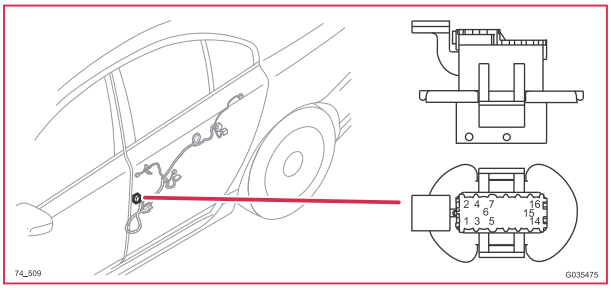

74/514 Connector

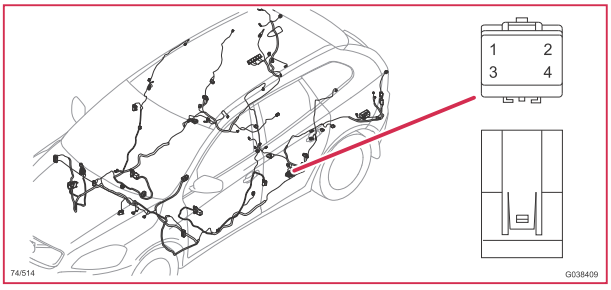

74/510 Connector

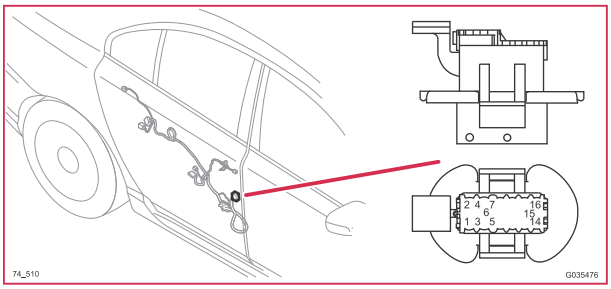

74/518 Connector

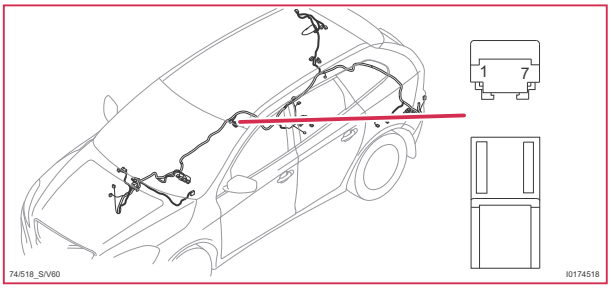

Component illustrations
74/519 - 74/601

74/519 Connector

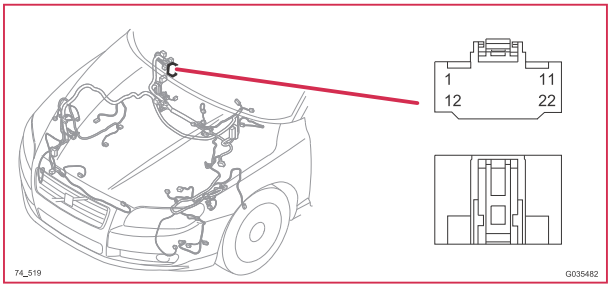

74/532 Connector

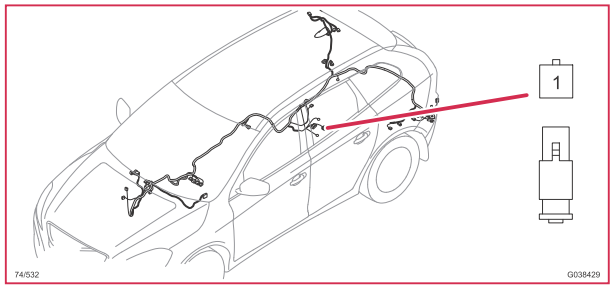

74/520 Connector

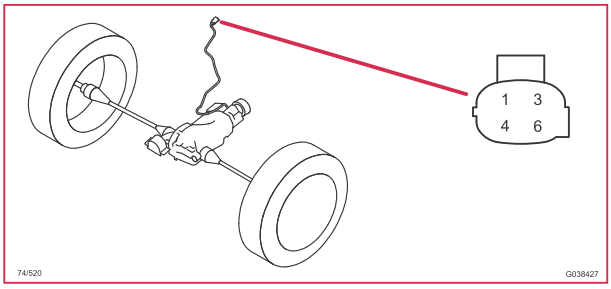

74/534 Connector

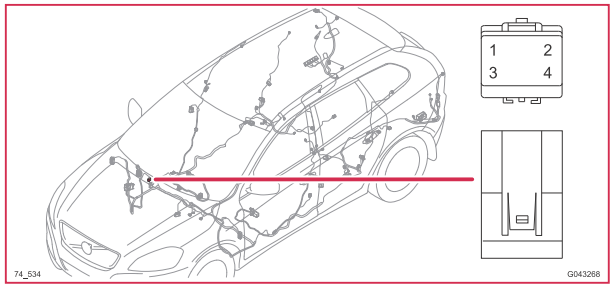

74/524 Connector

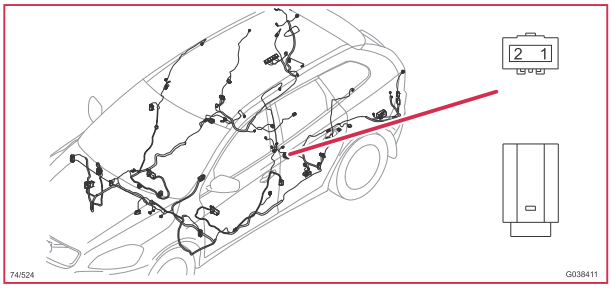

74/537 Connector

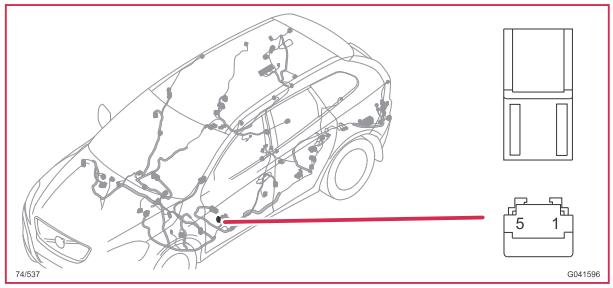

74/530 Connector

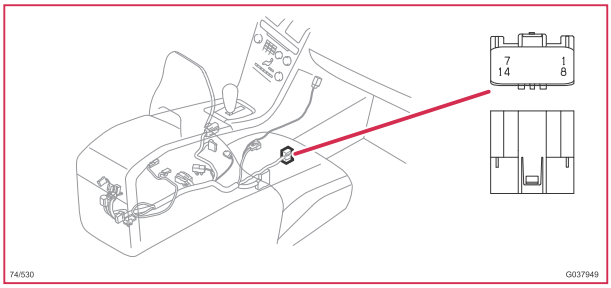

74/540 Connector

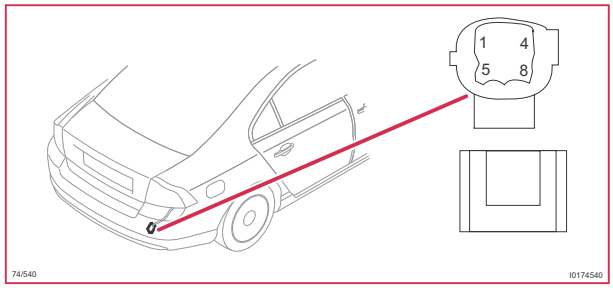

74/531 Connector

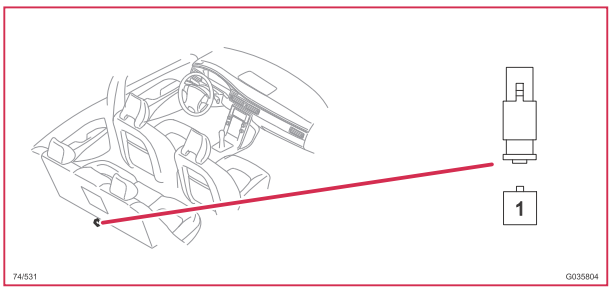

74/601 Connector, S60

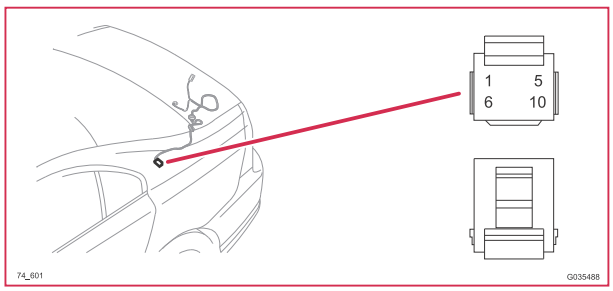

Component illustrations
74/602 - PF/no.

74/602 Connector, V60

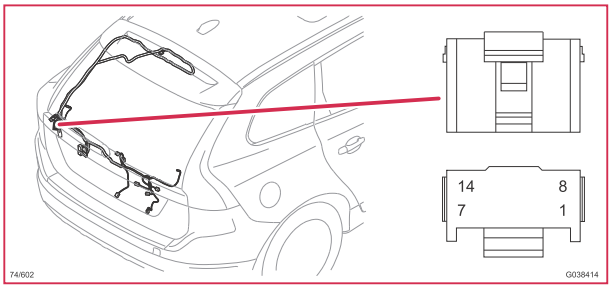

74/901 Connector

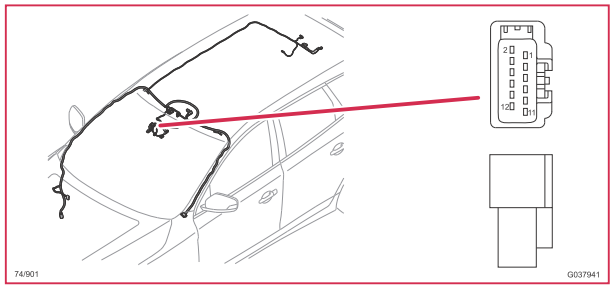

74/606 Connector

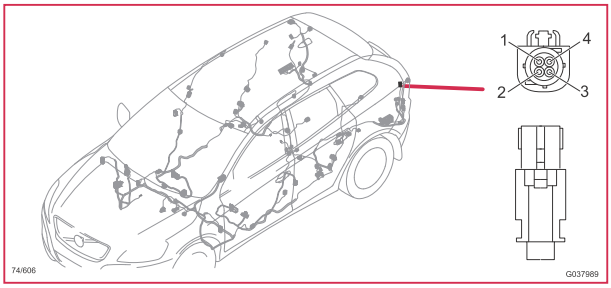

F/no. Fuses

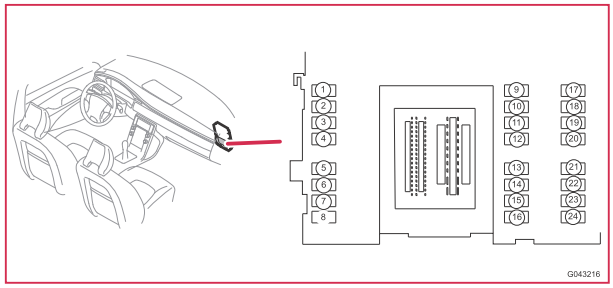

74/607 Connector

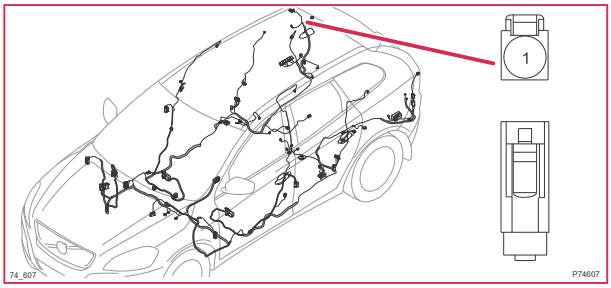

PF/no. Main fuse by battery

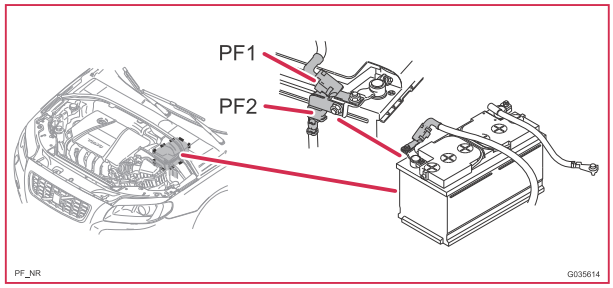

74/608 Connector

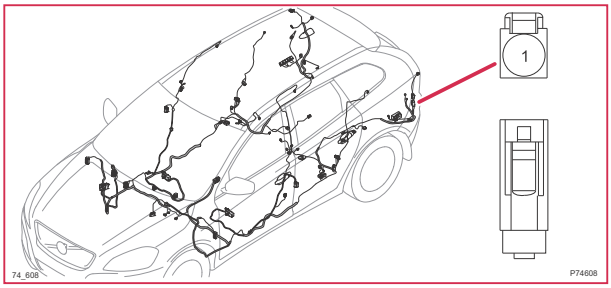

10X/29 Connector interface, original car
10X/125 Connector interface, original car
10X/126 Connector interface, original car
16X/1 Connector interface, original car
74X/9 Connector interface, original car
74X/414 Connector interface, original car

74/609 Connector

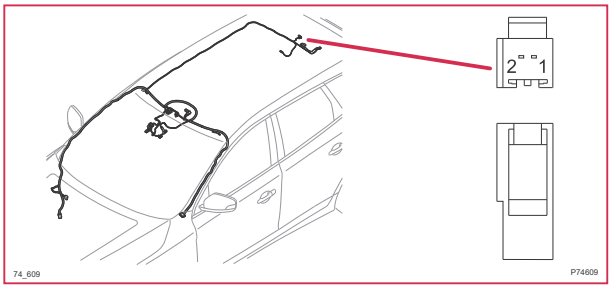

Index 1:2

A

Abbreviations ... 6
Accessory Connectivity Unit ... 149
Active headlight ... 107
Additional electrical equipment, Group 36 ... 109
Alcolock ... 124
Alternator and voltage regulator, Group 32 ... 84
Anti-theft alarm ... 120
Audio ... 135
Audio Premium ... 132
Automatic transmission AWF21 ... 151
Automatic transmission MPS6 ... 152
Auxiliary lights ... 108

B

Beam length adjustment, manual ... 92
Blind spot information system ... 173, 174, 175, 176
Bluetooth Handsfree ... 143
Bodywork other, Group 89 ... 202
Brake control system & DSTC ... 155
Brake lights ... 97
Brake system, Group 59 ... 155
Branching points ... 238

C

Cable harness towbar/tow hitch 13-pin ... 128
Cellular phone ... 137
Center console harness ... 274
Central Electronic Module (CEM) ... 39
Central locking front doors LHD ... 158
Central locking front doors RHD ... 159
Central locking fuel filler flap ... 162
Central locking rear doors ... 160
Central locking tailgate ... 161
Climate control system PTC-elements ... 194
Climate control system, 4-Cyl. ... 188
Climate control system, 5-Cyl. ... 192
Climate control system, 6-Cyl. ... 192
Climate control system, Group 87 ... 194
Collision warning with power brake booster ... 122
Color, abbreviations ... 6
Component illustrations ... 279
Connectors ... 203
Control modules ... 37
Control modules overview designations ... 38
Control modules overview locations ... 37
Cooling fan 4-Cyl. Turbo ... 52
Cooling fan 6-Cyl. ... 55, 56
Cooling fan, 5-Cyl. Diesel ... 54
Cooling system, Group 26 ... 52
Countries/Markets, abbreviations ... 6
Cruise control 4-Cyl. Turbo 1.6l ... 57
Cruise control 4-Cyl. Turbo 2.0l ... 58
Cruise control 5-Cyl. Diesel ... 60
Cruise control 5-Cyl. Turbo ... 61
Cruise control 6-Cyl. ... 61
Cruise control, 4-Cyl. Diesel DV6C ... 59

D

DAB Radio ... 139
Dashboard harness ... 264
Data communication intermediate speed CAN, LHD ... 44
Data communication intermediate speed CAN, RHD ... 45
Data communication LIN ... 48
Data communication Local CAN ... 46, 47
Data communication MOST ... 50
Data communication, High speed CAN ... 42, 43
Designations ignition switch ... 6
Diagnostics system ... 125
Diesel engine harness ... 260
Differential Electronic Module (DEM) ... 153
Direction indicator LHD ... 110, 112
Doors and openings, Group 83 ... 158
Driver Information Module ... 131

E

Electric parking brake ... 154
Electrical distribution, overview cargo compartment ... 13
Electrical distribution, overview engine compartment ... 11
Electrical distribution, overview passenger compartment 12
Electrical distribution, overview with Start/stop function 10
Electrical distribution, overview without Start/stop function 9
Emission control 4-Cyl. ... 80
Emission control 5-Cyl. Turbo ... 82
Emission control 6-Cyl. ... 83
Engine compartment harness ... 261, 262, 263
Engine controls, Group 27 ... 57
Engine harness 6-Cyl. ... 259
Engine management system, 4-Cyl. ... 66
Engine management system, 4-Cyl. Diesel ... 74
Engine management system, 4-Cyl. Turbo ... 68
Engine management system, 5-Cyl. Diesel ... 77
Engine management system, 5-Cyl. Turbo ... 70
Engine management system, 6-Cyl. Turbo ... 72
Explanation of symbols ... 8
Exterior decorative elements, etc, Group 84 ... 169

F

Fog lights ... 95
Follow-me-home lighting LHD ... 101
Follow-me-home lighting RHD ... 102
Four-C ... 157
Fuses ... 14
Fuses at Battery ... 26
Fuses in Cold zone engine compartment ... 24
Fuses in distribution box cargo compartment ... 25
Fuses in Distribution box passenger compartment 22, 23
Fuses in the Central Electronic Module (CEM) 19, 20, 21
Fuses in the engine compartment distribution box 14, 15, 16, ... 17, 18

G

Ground connections ... 30
Ground connections overview ... 30
Group number, abbreviations ... 6

H

Harness engine 6-Cyl. Turbo ... 259
Harness floor, LHD ... 265, 266, 267
Harness floor, RHD ... 268
Harness front door ... 275
Harness rear door ... 276
Harnesses rear axle ... 277, 278
Hazard warning flashers LHD ... 110
Hazard warning flashers RHD ... 112
Heated door mirrors LHD ... 171
Heated door mirrors RHD ... 172
Heated front seats ... 186
Heated front seats, with fans ... 185
Heated rear seat ... 187
Heated rear window ... 179
Heated steering wheel ... 184

Index 2:2

Heated windscreen LHD ... 177
Heated windscreen RHD ... 178
High and low beam ... 90
High and low beam (Dual Xenon) ... 91
Horn ... 117
How to use the wiring diagrams ... 7

I

Ignition and control system, Group 28 ... 66
Infotainment harness ... 269, 270, 271, 272
Instruments, Group 38 ... 130
Interior equipment, Group 85 ... 180
Interior lighting, LHD ... 103
Interior lighting, RHD ... 105
Internal equipment, Group 88 ... 197

K

Keyless vehicle ... 118

L

Lighting, Group 35 ... 90

M

Manual headlamp range adjustment ... 92
Memory function driver's seat RHD ... 181
MOST ... 50
Multimedia monitor with DVD, Dual Screen ... 140

O

Other, abbreviations ... 6
Other, Group 39 ... 132
Outlet 12 V ... 126
Outlet 12V, V60 Accessories ... 127

P

Parking assistance ... 121
Parking brake, Group 55 ... 154
Parking camera front ... 148
Parking camera rear ... 146
Parking heater, auxiliary heater ... 195
Parking heater, remote start ... 196
Parking lights ... 93
Power door mirrors LHD ... 169
Power door mirrors RHD ... 170
Power driver's seat with memory function ... 180
Power driver's seat with memory function, LHD ... 180
Power driver's seat with memory function, RHD ... 181
Power folding headrest ... 201
Power passenger seat, LHD ... 182
Power passenger seat, RHD ... 183
Power sunroof ... 168
Power supply 4-Cyl. without Start/Stop ... 84
Power supply 5-Cyl. without start/stop ... 85
Power windows front doors LHD ... 165
Power windows front doors RHD ... 166
Power windows rear doors ... 167

R

Radiator masking blind ... 202
Rain sensor ... 109
Rear-view mirror with automatic dimming ... 199
Relays ... 27
Relays in Distribution box cargo compartment ... 29
Relays in the engine compartment distribution box ... 27
Remote control opener garage door ... 200
Reversing lights ... 99
Roof harness ... 273
Running lights ... 93

S

Satellite radio ... 145
Seat belt reminder ... 130
Shock absorbers, Group 76 ... 157
Signal receiver central locking ... 163
Speed dependent power steering ... 156
Start-/Stop function 4-Cyl. 1.6l ... 62
Start-/Stop function 4-Cyl. 1.6L. Diesel ... 63
Start-/Stop function 5-Cyl. Diesel ... 64
Start-/Stop function 5-Cyl. Turbo ... 65
Starting system ... 88, 89
Starting system 4-Cyl. ... 87
Starting system, Group 33 ... 87
Steering Wheel Module (SWM) ... 51
Steering, Group 64 ... 156
Supplemental restraint system ... 197

T

Table of Contents ... 3
Tail lights ... 93
Tailgate harness ... 277
Telephone system Bluetooth ... 142
Tire pressure monitoring system (TPMS) ... 123
Transmission, Group 43 ... 150
Tunnel harness ... 274
TV ... 141

W

Window washer and windshield wiper ... 114
Wiper rear window ... 116
Wiring and fuses, Group 37 ... 125

List of components 1:6

1/1	Battery
1/2	Secondary battery
2/14	Relay, glow plug system
2/16	Relay, rear window wiper
2/17	Relay, horn
2/22	Relay, climate control system
2/31	Relay, 15-feed
2/32	Main relay, engine management system
2/35	Starter motor relay
2/64	Relay auxiliary lights
2/81A	Relay, heated windshield passenger side
2/81B	Relay, heated windscreen driver's side
2/82	Relay, heated rear window
2/88	Relay, 15-feed rear
2/92	Relay, washer motor windshield
2/93	Relay, washer motor rear window, V60
2/166	Battery relay
2/182	Relay, headlight washer motor
2/193	Relay, comfort functions
2/246	Secondary battery relay
3/1	Ignition switch
3/4	Steering wheel switch left (SWSL)
3/6	Hazard warning flasher switch
3/9	Brake light contact
3/10	Reversing light contact
3/19	Rear left door power window switch
3/21	Rear right door power window switch
3/25	Power sunroof switch
3/26	Switch unit, power driver's seat
3/27	Switch unit, power passenger seat
3/35	Trunk handle switch, S60
3/35	Trunk handle switch, V60
3/37	Horn contact
3/62	Hood alarm contact
3/65	Switch, heated rear seat
3/80	Switch, central locking system, driver's door
3/82	Switch, central locking system, passenger door
3/83	Switch, passenger door power window
3/93	Belt buckle contact, driver's seat
3/94	Belt buckle contact, passenger seat
3/111	Light Switch Module (LSM)
3/112	Climate Control Module (CCM)
3/113	Rear adjustable head restraint relay
3/117	Switch unit, dome light
3/126	Driver door module (DDM)
3/127	Passenger door module (PDM)
3/128	Left rear door module (LDM)
3/129	Right rear door module (RDM)
3/130	Steering Wheel Module (SWM)
3/131	Steering wheel switch right (SWSR)
3/135	RTI switch
3/156	Gear Selector Module (GSM)
3/157	Switch, passenger side airbag
3/173	Switch, trunk lid private lock
3/176	Power window switches, driver's door
3/217	Belt buckle contact, rear left
3/218	Belt buckle contact, center rear
3/219	Belt buckle contact, rear right
3/225	Continuously Controlled Damping (CCD)
3/255	Position sensor, driver's seat
3/256	Position sensor, passenger seat
3/267	Switch unit, telematics
3/271	Contact, immobilizer, clutch pedal
3/272	Switch, parking brake
3/273	Lock contact, LH front door
3/274	Lock contact, RH front door
3/275	Lock contact, left rear door
3/276	Lock contact, RH rear door
3/281	Infotainment control module (ICM)
3/282	Switch indicator 1st gear
3/284	Diagnostic contact, brake light
3/293	Handsfree control panel cellular phone
4/6	Climate control system
4/7	Combustion Preheater Module (CPM)
4/9	Supplemental Restraint System (SRS)
4/16	Brake Control Module (BCM)
4/28	Transmission Control Module (TCM), TF-80SC
4/28	Transmission Control Module (TCM), MPS6
4/31	Fan control module
4/33	Sunroof control module
4/46	Engine Control Module (ECM), 4-Cyl. Turbo 1,6L
4/46	Engine Control Module (ECM), 4-Cyl. Turbo 2,0L
4/46	Engine Control Module (ECM), 4-Cyl. Diesel
4/46	Engine Control Module (ECM), 5-Cyl. Turbo
4/46	Engine Control Module (ECM), 5-Cyl. Diesel
4/46	Engine Control Module (ECM), 6-Cyl.
4/50	Throttle unit, 4-Cyl. Turbo
4/50	Throttle unit, 5-Cyl.
4/50	Throttle unit, Diesel
4/52	Power Seat Module (PSM)
4/56	Central Electronic Module (CEM)
4/56:C1	Central Electronic Module (CEM)
4/56:C2	Central Electronic Module (CEM)
4/56:C3	Central Electronic Module (CEM)
4/56:C4	Central Electronic Module (CEM)
4/56:C5	Central Electronic Module (CEM)
4/68	Steering Wheel Angle Sensor Module (SAS)
4/71	Cooling fan control module
4/80	Forward Sensing Module (FSM)
4/82	Differential Electronic Module (DEM)
4/83	Fuel pump control module
4/84	Suspension Module (SUM)
4/86	Parking Assistance Module (PAM)
4/93	Keyless vehicle module (KVM)
4/99	Control module speed dependent power steering
4/102	Steering column lock module (SCL)
4/106	Control module, parking heater remote start
4/109	Glow plug control module
4/110	Trailer Module (TRM)
4/115	Park Brake Module (PBM)
4/119	Remote Keyless Entry (RKE)
4/119.2	Remote Receiver Module (RRX)
4/120	Parking Assistance Camera (PAC)
4/125	Closing velocity module (CVM)
4/126	Side Obstacle Detection Control Module left (SODL)
4/127	Side Obstacle Detection Control Module right (SODR)
4/136	Active Grillshutter Module (AGM)
4/148	Heated Steering Wheel Module (HSWM)

List of components 2:6

5/1	Driver Information Module (DIM)
6/1	Wiper motor module (WMM)
6/8	Lock motor central locking, trunk lid/tailgate, S60
6/8	Lock motor central locking, trunk lid/tailgate, V60
6/16	Driver seat motor, backrest angle
6/17	Driver seat motor, up/down front edge
6/18	Driver seat motor, up/down rear edge
6/19	Driver seat motor, forward/backward
6/20	Passenger seat motor, forward/backward
6/21	Passenger seat motor, up/down front edge
6/22	Passenger seat motor, up/down rear edge
6/23	Passenger seat motor, backrest angle
6/25	Starter motor
6/26	Alternator Control Module (ACM)
6/28	Motor, passenger compartment fan
6/32	Rear window wiper motor, V60
6/33	Fuel pump
6/35	Fuel pump, auxiliary heater
6/36	Lock motor, central locking, LH front door
6/37	Lock motor, fuel filler cover
6/38	Left-hand headlight level adjustment motor
6/39	Right-hand headlight level adjustment motor
6/48	Damper Motor Module (DMM), recirculation
6/55	Lock motor, central locking, RH front door
6/56	Lock motor, central locking, RH rear door
6/57	Lock motor, central locking, LH rear door
6/58	Motor, front driver's door power window
6/59	Motor, rear left power window
6/60	Motor, front passenger door power window
6/61	Motor, rear right power window
6/62	Left-hand power door mirror
6/63	Right-hand power door mirror
6/67	Pump, fuel leakage control
6/71	Valve, speed-dependent power steering
6/73	Coolant pump
6/95	Damper Motor Module (DMM), temperature, left side
6/96	Damper Motor Module (DMM), temperature, right side
6/102	Damper Motor Module (DMM), defroster
6/103	Damper Motor Module (DMM), floor/ventilation
6/104	High pressure headlight washer motor
6/120	Throttle unit, 6-Cyl.
6/127	Washer motor
6/141	Motor folding head restraint left
6/142	Motor folding head restraint right
6/146	Lock motor, rear left brake disc
6/147	Lock motor, rear right brake disc
6/164	Electrical power steering module (EHPS)
6/179	Electric oil pump
7/4	Brake fluid level sensor
7/5	Washer fluid level sensor
7/6	Oil pressure sensor
7/8	Pressure sensor, climate control system
7/12	Solar sensor, twilight sensor and indicator alarm
7/15	Front heated oxygen sensor, 4-Cyl. Turbo
7/15	Front heated oxygen sensor, 5-Cyl.
7/15	Front oxygen sensor, bank 1, 6-Cyl.
7/15	Front heated oxygen sensor, Diesel
7/16	Coolant temperature sensor
7/17	Mass airflow sensor (MAF)
7/23	Rear knock sensor
7/24	Front knock sensor
7/25	Impulse sensor, Diesel
7/25	Impulse sensor
7/31	Left-hand front ABS sensor
7/32	Right-hand front ABS sensor
7/35	Oil level sensor
7/41	Temperature sensor, evaporator
7/51	Accelerator pedal sensor
7/56	Left-hand rear ABS sensor
7/57	Right-hand rear ABS sensor
7/69	Outside temperature sensor
7/73	Coolant level sensor
7/81	Pressure sensor, intake manifold, 4-Cyl. Turbo
7/81	Pressure sensor, intake manifold, 5-Cyl. Turbo
7/81	Pressure sensor intake manifold, Diesel
7/81	Pressure sensor, intake manifold, 6-Cyl.
7/82	Rear oxygen sensor, 4-Cyl.
7/82	Rear oxygen sensor, bank 1, 6-Cyl.
7/87	Acceleration sensor, Four-C, front left
7/88	Acceleration sensor, Four-C, front right
7/89	Acceleration sensor, Four-C, rear left
7/90	Moisture sensor
7/91	Steering angle sensor
7/93	Occupant Weight Sensor (OWS)
7/100	Inclination Sensor Module (ISM)
7/108	Left-hand rear side impact sensor
7/109	Right-hand rear side impact sensor
7/110	Sensor temperature driver's seat
7/111	Sensor temperature passenger seat
7/112	Seat temperature sensor, LH rear
7/113	Seat temperature sensor, RH rear
7/115	Side impact sensor, left B-post
7/116	Side impact sensor, right B-post
7/118	Height sensor, suspension, front left
7/119	Height sensor, suspension, front right

List of components 3:6

7/120	Height sensor, suspension, rear left
7/121	Height sensor, suspension, rear right
7/123	Clutch pedal sensor
7/124	Brake pedal sensor
7/130	Fuel level sensor, ejector side
7/131-	
7/134	Rear parking assistance sensor
7/140	Fuel pressure sensor, low
7/143	Fuel level sensor, pump side
7/149	Rain Sensor Module (RSM)
7/154	Sensor fuel temperature
7/156	Pressure and temperature sensor, fuel
7/159	Air Quality Sensor (AQS)
7/162	Pressure sensor, fuel line
7/165	Pressure and temperature sensor, intake manifold
7/165	Pressure and temperature sensor, intake manifold, 4-Cyl.
7/165	Pressure and temperature sensor, intake manifold, Diesel
7/165	Pressure and temperature sensor, intake manifold, 6-Cyl.
7/166	Oil level sensor, 6-Cyl.
7/172	Position sensor camshaft, intake side, 4-Cyl.
7/172	Camshaft position sensor, intake side, 6-Cyl.
7/173	Position sensor camshaft, outlet side, 4-Cyl.
7/173	Camshaft position sensor, exhaust side, 6-Cyl.
7/173	Camshaft position sensor, exhaust side, Diesel
7/174	Differential pressure sensor particulate filter
7/175	Weight sensor passenger seat, seat belt reminder
7/190	Temperature sensor, catalytic converter
7/191	Temperature sensor, particle filter
7/193	Position sensor turbo
7/199	Ultrasonic sensor (IMS)
7/200	Sensor, coolant temperature
7/202	EGR Bypass position sensor
7/203	Forward-aimed radar (FLR)
7/204-	
7/207	Front parking assistance sensor
7/208	Side impact sensor, left front door
7/209	Side impact sensor, right front door
7/210-	
7/213	Tire pressure sensor
7/215	Rear heated oxygen sensor, 5-Cyl. Diesel
7/238	Alcohol lock sensor
7/240	Battery monitoring sensor (BMS)
7/243	Gear position sensor neutral position
7/248	Oil pressure and temperature sensor
7/251	Brake vacuum sensor
7/266	Parking sensor side, left
7/267	Parking sensor side, right
8/3	Electromagnetic clutch, climate control system
8/6-11	Injectors
8/17	EGR valve 4-Cyl. Diesel
8/18	EVAP valve, 4-Cyl.
8/18	EVAP valve, 5-Cyl.
8/18	EVAP valve, 6-Cyl.
8/19	Reset valve, camshaft intake
8/20	Shock absorber, Four-C, front left
8/21	Shock absorber, Four-C, front right
8/22	Shock absorber, Four-C, rear left
8/23	Shock absorber, Four-C, rear right
8/28	Turbo control valve
8/30	Driver’s side airbag igniter, stage 1
8/33	Igniter, belt tensioner, driver’s side
8/34	Igniter, belt tensioner, passenger side
8/36	Shift lock solenoid
8/37	Automatic transmission
8/46	Activation unit, DSTC
8/48	Auto-dimming rearview mirror
8/51	Igniter side airbag front driver’s seat
8/52	Igniter side airbag front passenger seat
8/55	Rear left belt tensioner igniter
8/56	Rear right belt tensioner igniter
8/59	Rear left head restraint solenoid
8/60	Rear right head restraint solenoid
8/61	Driver’s side airbag igniter, stage 2
8/62	Belt tensioner igniter, center rear seat
8/66	Left-hand inflatable curtain igniter
8/67	Right-hand inflatable curtain igniter
8/68	Relief valve
8/77	Control valve, fuel volume
8/78	Power steering pressure monitor
8/81	Reset valve, camshaft exhaust, 4-Cyl
8/81	Reset valve, camshaft exhaust, 5-Cyl
8/84	Switch, vacuum pump
8/92	Lap belt tensioner, driver
8/93	Lap belt tensioner passenger
8/98	Control valve fuel pressure
8/99	Igniter, steering column
8/111	Fuel flow control valve
8/113	Bypass valve, EGR cooling
8/113	Bypass valve, EGR cooling, EURO5
8/117	Solenoid, variable valve timing, intake, 6-Cyl.
8/120	EGR valve, 5-Cyl. Diesel
8/121	Radiator valve
8/124	Igniter, airbag stage 3, passenger side
8/128	Driver’s belt force limiter
8/129	Passenger belt force limiter
8/134	Solenoid, reverse interlock, manual
8/157	Turbocharger control valve, 5-Cyl. Diesel 2.4l
8/159	Bypass valve
8/164	Electric piston cooling valve
8/167	Bypass solenoid

List of components 4:6

9/1	Outlet 12V front
9/2	Heated rear window
9/7	Heated windscreen
9/8	Heating element, LH rear seat cushion
9/9	Heating element, LH rear seat backrest
9/10	Heating element, RH rear seat cushion
9/11	Heating element, RH rear seat backrest
9/12	Seat Heating Module (SHM), driver's side
9/13	Seat Heating Module (SHM), passenger side
9/14	Control module, rear left seat heater
9/15	Control module, rear right seat heater
9/16	Heating element, driver's seat backrest
9/17	Heating element, passenger seat backrest
9/18	Heating element, driver's seat cushion
9/19	Heating element, passenger seat cushion
9/25	Outlet 12V rear
9/30	Auxiliary heater
9/32	PTC resistor, crankcase ventilation
9/38	Electrically heated fuel filter
9/39	Heating element camera
9/42	PTC-element
9/58	Heated windshield washer nozzles
10/1	Left-hand front lamp housing
10/2	Right-hand front lamp housing
10/3	License plate lighting
10/11	Front left running/parking light
10/12	Front right running/parking light
10/13	Front left direction indicator
10/14	Front right direction indicator
10/15	Direction indicator, left door mirror
10/16	Direction indicator, right door mirror
10/17	Lamp housing, rear right, S60
10/17	Lamp housing, rear right V60
10/18	Lamp housing, rear left, S60
10/18	Lamp housing, rear left, V60
10/19	Auxiliary brake lights, S60
10/19	Auxiliary brake lights V60
10/22	Ceiling light
10/25	Ceiling light, cargo compartment, S60
10/25	Ceiling light, cargo compartment, V60
10/29	Glove compartment lighting
10/43	Right brake light, S60
10/43	Right brake light, V60
10/44	Tail lamp 1 right, S60
10/44	Tail lamp 1 right, V60
10/46	Fog lights, right rear, S60
10/46	Fog lights, rear right, V60
10/47	Direction indicator, right rear, S60
10/47	Direction indicator, right rear, V60
10/48	Reversing lights right, S60
10/48	Reversing lights, right, V60
10/50	Brake lights left, S60
10/50	Brake lights, left, V60
10/51	Tail lamp 1 left, S60
10/51	Tail lamp 1 left, V60
10/53	Fog lights, rear left, S60
10/53	Fog lights, left rear, V60
10/54	Direction indicator, rear left, S60
10/54	Direction indicator, left rear, V60
10/55	Reversing lights left, S60
10/55	Reversing lights left, V60
10/64	Right-hand high beam
10/65	Auxiliary light, front right
10/66	Right-hand low beam
10/68	Left-hand high beam
10/69	Auxiliary light, front left
10/70	Left-hand low beam
10/72	Front ashtray lighting
10/97	Front courtesy lighting, driver's side
10/102	Front courtesy lighting, passenger side
10/114	Left-hand vanity mirror lighting
10/115	Right-hand vanity mirror lighting
10/127	Lighting, cargo compartment, left-hand side, S60
10/148	Lighting, left front door mirror
10/149	Lighting, right front door mirror
10/150A	Rear reading light
11A/no.	Main fuses in engine compartment fuse box
11B/no.	Fuses in engine compartment fuse box
11C/no	Fuses in distribution box passenger compartment
11D/A	Fuses in cargo compartment fuse box
15/31	Distribution box in engine compartment
15/32	Distribution box in cargo compartment, S60
15/32	Distribution box in cargo compartment, V60
15/36	Distribution box in passenger compartment
15/37	Engine compartment cold zone
15/46	Relay box engine compartment

List of components 5:6

16/1	Integrated Audio Module (IAM)
16/3.1	Right-hand front door speaker
16/3.2	Right-hand front door speaker
16/4.1	Left-hand front door speaker
16/4.2	Left-hand front door speaker
16/5	Right-hand rear door speaker
16/6	Left-hand rear door speaker
16/10	Horn 1
16/11	Horn 2
16/16	Amplifier window antenna, S60
16/16	Amplifier window antenna, V60
16/26	Center dashboard speaker
16/29	Loudspeaker mid-range left front
16/30	Loudspeaker mid-range right front
16/35	Siren Control Module (SCM)
16/36	TV receiver
16/45	Portable navigation system
16/47	Antenna GSM/GPS/RDAR
16/49	Traffic message channel module (TMC)
16/55	Left-hand front tweeter
16/56	Right-hand front tweeter
16/60	Phone Module (PHM)
16/63	GPS antenna, cellular phone
16/65	Immobilizer Antenna Unit (IAU)
16/71	Amplifier window antenna 1, S60
16/71	Amplifier window antenna 1, V60
16/73	Amplifier window antenna 2, V60 (TV/DAB)
16/79	Subwoofer Module (SUB)
16/98	Microphone
16/105	Audio module (AUD)
16/109	Control module (RSE)
16/121	VICS-antenna
16/123	Auxiliary input (AUX)
16/127	Microphone, mobile phone handsfree
16/132	Antenna door lock trunk lid/tailgate, V60
16/133	Antenna, door lock, cargo compartment, S60
16/134	Antenna, door lock, passenger compartment 2
16/135	Antenna, door lock, passenger compartment 3
16/136	LH rear door tweeter
16/137	RH rear door tweeter
16/140	SIM card reader
16/141	Interference filter, rear window, left
16/145	Remote Digital Audio Receiver (RDAR)
16/159	Control module, mobile phone handsfree
16/162	Digital Audio Broadcast Module (DABM)
16/164	Display/DVD headrest left (RSE)
16/165	Display/DVD headrest right (RSE)
16/181	Rear headphone sockets
16/185	TV Antenna
16/186	TV-Antenna, V60
16/188	TV Antenna
17/13	Data link connector
17/19	12 V outlet, cargo compartment
17/39	13-pin outlet, tow hitch cable harness
17/42	USB-port
17/42	USB port, accessories
17/45	Alcohol lock outlet
18/4	Contact reel
20/3-8	Spark plug and ignition coil
20/16	Capacitor
20/22-26	Glow plug
26/8	Alcohol lock charging cradle
27/2	Indicator, visual collision warning
27/6	Camera
27/8	Camera, wide angle front
31/1	Ground connection, PTC
31/2	Ground connection, Left wheel housing
31/3	Ground connection, Body battery
31/4	Ground connection, engine
31/5	Ground connection, rear edge roof
31/6	Ground connection, Left bottom rail
31/7	Ground connection, Left bottom rail
31/10	Ground connection, Left bottom rail
31/15	Ground connection, Right bottom rail
31/47	Ground connection, Left rear bumper abutment
31/48	Ground connection, Right rear bumper abutment
31/65	Ground connection, Rear seat riser, left side 1
31/66	Ground connection, Rear seat riser, left side 2
31/67	Ground connection, Rear seat riser, right side 1
31/68	Ground connection, Rear seat riser, right side 2
31/83	Ground connection, Left bottom rail
31/84	Ground connection, Right bottom rail
31/88	Ground connection, Engine ignition coils, 4-Cyl.
31/88	Ground connection, Engine ignition coils, 5-Cyl.
31/88	Ground connection, Engine ignition coils, 6-Cyl.
31/89	Ground connection, Engine ignition coils, 4-Cyl.
31/89	Ground connection, Engine ignition coils, 5-Cyl.
31/89	Ground connection, Engine ignition coils, 6-Cyl.
31/90	Ground connection, Engine ignition coils, 6-Cyl.
31/93	Ground connection, Left wheel housing 2
31/94	Ground connection, Right wheel housing 2
31/95	Ground connection, Left wheel housing 3
31/96	Ground connection, Right wheel housing 3
31/107	Ground connection, roof rear
31/115	Ground connection, left roof, A-pillar
31/117	Ground connection, tailgate upper V60
31/130	Ground connection, left roof, C-pillar
31/131	Ground connection, support battery
31/XX4	Ground connection, Engine-Body
31/XX10	Ground connection, Left wheel housing 1
31/XX14	Ground connection, Left wheel housing 3 (ABS)
31/AL	Ground connection, Auxiliary lights
31/INFOT	Ground connection, Infotainment
31/TRM	Ground connection, Accessories

List of components 6:6

74/9	Connector
74/30	Connector
74/31	Connector
74/301	Connector
74/302	Connector
74/304	Connector
74/307	Connector
74/309	Connector
74/310	Connector not 1,6L
74/310	Connector only 1,6L
74/316	Connector
74/321	Connector
74/401	Connector
74/403	Connector
74/404	Connector
74/405	Connector
74/406	Connector
74/407	Connector
74/407B	Connector
74/409	Connector
74/411	Connector
74/412	Connector
74/414	Connector
74/416	Connector
74/417	Connector
74/419	Connector
74/420	Connector
74/421	Connector
74/503	Connector
74/504	Connector
74/504B	Connector
74/507	Connector
74/508	Connector
74/509	Connector
74/510	Connector
74/511	Connector
74/512	Connector
74/513	Connector
74/514	Connector
74/518	Connector
74/519	Connector
74/520	Connector
74/524	Connector
74/530	Connector
74/531	Connector
74/532	Connector
74/534	Connector
74/537	Connector
74/540	Connector
74/601	Connector, S60
74/602	Connector, V60
74/606	Connector
74/607	Connector
74/608	Connector
74/609	Connector
74/901	Connector
F/no.	Fuses
PF/no.	Main fuse by battery
10X/29	Connector interface, original car
10X/125	Connector interface, original car
10X/126	Connector interface, original car
16X/1	Connector interface, original car
74X/9	Connector interface, original car
74X/414	Connector interface, original car