VOLVO V70 (08-), XC70 (08-) & S80 (07-)

WIRING DIAGRAM 2014/2015A

TP 39272202 Structure week 13w46

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable curtain)

Warning!

Extra caution must be exercised when working on vehicles equipped with SRS/SIPS bag/IC in order to avoid:
1. Personal injuries when performing repair work.
2. Damage or malfunction of the SRS/SIPS bag/IC system.

Work involving the SRS/SIPS bag/IC systems or other components in the vehicle that may affect the SRS/SIPS bag/IC systems must always be performed by an authorized Volvo workshop.
In case of doubt, consult the SRS and SIPS bag/IC service manual.

Is the vehicle equipped with SRS/SIPS bag/IC?

Vehicles with SRS are most easily recognized by the letters SRS in the center of the steering wheel. If the vehicle also has a passenger side airbag, the letters SRS are stamped on the dashboard above the glove compartment. SRS vehicles from 1993 and onward also have explosive seat belt tensioners. SIPS bags are only installed on SRS vehicles from 1995 and onward. SIPS bag decals are located on the windshield and seat compartment. Vehicles with IC can be recognized by the letters IC on the C/D panel (4 door) or the B panel (5 door).

General recommendations

- Be especially careful when working on or around SRS, SIPS, and IC components.
- Make sure that no wires are pinched, frayed, or pierced.
- Never fit accessories by the sensors.
- Where applicable, work on the steering wheel, steering shaft, or steering gear must be done in accordance with the methods in the SRS section of VIDA.
- Certain components of the aforementioned systems must be grounded while working. Read the appropriate sections in VIDA.
- Install no accessories in the areas between the A and B-posts, the B and C-posts, and the C and D-posts.

Test terminal

Data link connector in the passenger compartment

Changes introduced up to and including structure week 13w46
Any changes made to the vehicle after this date are not included in the manual. If necessary, refer to service bulletins.

Volvo models are sold in versions adapted for different markets. These adaptations depend on factors such as legal requirements, taxation, and market demands.
This manual may therefore include illustrations and text that do not apply to the vehicles in your country.

Ordering:
Electronic Wiring Diagrams (EWD) can be ordered from the Technical Information Shop (TIS) at tis.volvocars.biz/tis/
We retain the right to make modifications

© Volvo Car Corporation

Table of Contents 1:4

Explanations 7
How to use the wiring diagrams 1:2 8

Electrical distribution

Overview without Start/Stop function 10
Overview with Start/Stop function 11
Overview, Distribution box in engine compartment, exc. 4-Cyl. 2.0L 12
Overview, Distribution box in engine compartment, 4-Cyl. 2.0L 13
Overview, Distribution box in passenger compartment 14
Overview, Distribution box in cargo compartment 15

Fuses

Distribution box in engine compartment F1-F7 16
Distribution box in engine compartment F8-F21 17
Distribution box in engine compartment F22-F31 18
Distribution box in engine compartment F32-F37 19
Distribution box in engine compartment F38 20
Distribution box in engine compartment F38-F39 21
Distribution box in engine compartment F39-F44 22
Central electronic module (CEM) F1-F3 23
Central electronic module (CEM) F4-F14 24
Central electronic module (CEM) F15-F24 25
Passenger compartment 26
Distribution box in passenger compartment F1-F17 27
Distribution box in passenger compartment F18-F24 ... 28
Distribution box in passenger compartment F25-F30 ... 29
Distribution box in cargo compartment FA1-FA11 30
Distribution box in engine compartment, cold zone F1-MF2 31
Battery PF1-PF2 32

Relays

Relays in the engine compartment 33
Relays in the engine compartment 34
Relays in passenger compartment 35
Relays in cargo compartment 36

Ground connections

Overview 37
31/1 - 31/6 38
31/7 - 31/10 39
31/10 - 31/15 40
31/47 - 31/65 41
31/66 - 31/83 42
31/84 - 31/90 43
31/93 - 31/XX4 44
31/XX10 - 31/AL 45

Control modules

Overview locations 46
Overview designations 47
Central Electronic Module (CEM) 1:3 48
Data communication high speed CAN exc. 4-Cyl. 51
Data communication high speed CAN, 4-Cyl. 1.6L 52
Data communication high speed CAN, 4-Cyl. 2.0L 1:2 53
Data communication intermediate speed CAN, LHD ... 55
Data communication intermediate speed CAN, RHD .. 56
Data communication MOST 57
Data communication, LIN 1:3 58
Steering Wheel Module (SWM) 61

Group 26 Cooling system

Cooling fan, 4-Cyl. 1.6L Turbo 62
Cooling fan, 4-Cyl. 2.0L Turbo 63
Cooling fan, 5-Cyl. Turbo 64
Cooling fan, 6-Cyl. 65
Cooling fan, 4-Cyl. 1.6L Diesel 66
Cooling fan, 4-Cyl. 2.0L Diesel 67
Cooling fan, 5-Cyl. Diesel 68

Group 27 Engine controls

Cruise control 4-Cyl. 1.6L Turbo 69
Cruise control 4-Cyl. 2.0L Turbo 70
Cruise control 4-Cyl. 1.6L Diesel 71
Cruise control 4-Cyl. 2.0L Diesel 72
Cruise control 5-Cyl. Turbo 73
Cruise control 6-Cyl. 74
Cruise control 5-Cyl. Diesel 75
Start-/Stop function 4-Cyl. 1.6L Turbo 76
Start-/Stop function 4-Cyl. 2.0L Turbo 77
Start-/Stop function 4-Cyl. 1.6L Diesel 78
Start-/Stop function 4-Cyl. 2.0L Diesel 79
Start-/Stop function 5-Cyl. Diesel 80

Group 28 Ignition and control system

Engine management system, 4-Cyl. 1.6L Turbo 1:2 81
Engine management system, 4-Cyl. 2.0L Turbo 1:3 83
Engine management system, 5-Cyl. Turbo 1:2 86
Engine management system, 6-Cyl. 3.2L PZEV 1:2 88
Engine management system, 6-Cyl. 1:2 90
Engine management system, 6-Cyl. Turbo 1:2 92
Engine management system, 4-Cyl. 1.6L Diesel 1:3 ... 94
Engine management system, 4-Cyl. 2.0L Diesel 1:3 ... 97
Engine management system, 5-Cyl. Diesel 1:3 100
Emission control 4-Cyl. 1.6L Turbo 103
Emission control 4-Cyl. 2.0L Turbo 104
Emission control 5-Cyl. Turbo 105
Emission control 6-Cyl. 3.2L PZEV 106
Emission control 6-Cyl. 3.2L 107
Emission control 6-Cyl. Turbo 108

Table of Contents 2:4

Group 32 Alternator and voltage regulator

Power supply 4-Cyl. without Start/Stop 109
Power supply 4-Cyl. with Start/Stop 110
Power supply 5-Cyl. without Start/Stop 111
Power supply, 5-Cyl. with Start/Stop 112
Power supply 6-Cyl. 113

Group 33 Starting system

Starting system 4-Cyl. 1.6L Turbo without Start/Stop 114
Starting system 4-Cyl. 1.6L Turbo with Start/Stop 1:2 115
Starting system 4-Cyl. 2.0L Turbo 1:2 117
Starting system 5-Cyl. Turbo 119
Starting system 6-Cyl. 120
Starting system 4-Cyl. 1.6L Diesel 1:2 121
Starting system 4-Cyl. 2.0L Diesel 1:2 123
Starting system 5-Cyl. Diesel without Start/Stop 125
Starting system 5-Cyl. Diesel with Start/Stop 1:2 126

Group 35 Lighting

High and low beam, Halogen 128
High and low beam, Dual Xenon 129
Beam length adjustment, manual 130
Running/Parking light, Tail lights V70 131
Running/Parking light, Tail lights S80 132
Fog/Daytime running lights V70 & XC70 133
Fog/Daytime running lights S80 134
Brake lights V70 135
Brake lights S80 136
Reversing lights V70 137
Reversing lights S80 138
Follow-me-home lighting LHD 139
Follow-me-home lighting RHD 140
Interior lighting, LHD 1:2 141
Interior lighting, RHD 1:2 143
Active headlight 145
Lighting in door sill trims 146
Auxiliary lights 147
Lighting mug holder and floor 148

Group 36 Additional electrical equipment

Rain sensor 149
Direction indicator and hazard warning flashers LHD V70 150
Direction indicator and hazard warning flashers LHD S80 151
Direction indicator and hazard warning flashers RHD V70 152
Direction indicator and hazard warning flashers RHD S80 153
Wiper/washer windshield 154
High pressure headlight washer 155
Wiper/Washer rear window 156
Keyless vehicle 1:2 157
Horn 159
Anti-theft alarm 160
Parking assistance 161
Collision warning with power brake booster 162
Tire pressure monitoring system (TPMS) 163
Alcohol lock 164

Group 37 Wiring and fuses

Diagnostics system 165
Outlet 12 V 166
Outlet 12 V, S80 167
Cable harness towbar/tow hitch 4-pin V70 168
Cable harness towbar/tow hitch 4-pin S80 169
Cable harness towbar/tow hitch 7-pin V70 170
Cable harness towbar/tow hitch 7-pin S80 171
Cable harness towbar/tow hitch 13-pin V70 172
Cable harness towbar/tow hitch 13-pin S80 173
Accessory USB unit (AUU) 174

Group 38 Instruments

Seat belt reminder 175
Driver information module 176
Analog clock 177

Group 39 Other, Accessories

TV 178
Cellular phone 1:2 179
Audio 1:2 181
Audio Premium 1:3 183
DAB Radio 186
Bluetooth Handsfree 187
Multimedia monitor with DVD, Dual Screen (RSE), V70 188
Multimedia monitor with DVD, Dual Screen (RSE), S80 189
Satellite radio 190
Parking camera 191
Parking camera wide-angle, front 192
Navigation system, portable 193
Sensus Connected Touch 194

Table of Contents 3:4

Group 43 Transmission
Transmission M66 195
Automatic transmission MPS6 196
Automatic transmission AWF21 197
Automatic transmission AWF22 198
Differential Electronic Module (DEM) 199

Group 55 Parking brake
Electric parking brake 200

Group 59 Brake system
Brake control system & DSTC 201

Group 64 Steering
Power steering EHPAS 202
Power steering EPAS 203

Group 76 Shock absorbers
Four-C 204

Group 83 Doors and openings
Central locking front doors LHD 205
Central locking front doors RHD 206
Central locking rear doors 207
Central locking trunk lid/tailgate V70 208
Central locking trunk lid/tailgate S80 209
Central locking fuel filler flap 210
Signal receiver central locking 211
Power windows front doors LHD 212
Power windows front doors RHD 213
Power windows rear doors 214
Power sunroof 215

Group 84 Exterior decorative elements, etc.
Power door mirrors LHD 216
Power door mirrors RHD 217
Heated door mirrors LHD 218
Heated door mirrors RHD 219
Blind spot information system LHD 220
Blind spot information system RHD 221
Heated windshield LHD 222
Heated windshield RHD 223
Heated rear window 224

Group 85 Interior equipment
Power driver's seat with memory function LHD 225
Power driver's seat with memory function RHD 226
Power passenger seat LHD 227
Power passenger seat RHD 228
Heated steering wheel 229
Heated front seats with fans 230
Heated front seats without fans 231
Heated rear seat 232
Executive functions 1:2 233

Group 87 Climate control system
Climate control system 4-Cyl. 1.6L Turbo 1:2 235
Climate control system 4-Cyl. 2.0L Turbo 1:2 237
Climate control system 4-Cyl. 1.6L Diesel 1:2 239
Climate control system 4-Cyl. 2.0L Diesel 1:2 241
Climate control system 6-Cyl. 1:2 243
Climate control system 5-Cyl. Turbo 1:2 245
Climate control system 5-Cyl. Diesel 1:2 247
Climate control system PTC-elements 249
Parking heater, auxiliary heater 250
Parking heater, remote start 251
Refrigeration box rear seat 252

Group 88 Internal equipment
Supplemental restraint system 1:2 253
Power folding headrest 255
Remote control garage opening 256
Rear-view mirror with automatic dimming 257

Connectors 258

Branching points 306

Table of Contents 4:4

Cable harness routing in vehicle

Engine harness, 4-Cyl. 1.6L Turbo 329
Engine harness, 4-Cyl. 2.0L Turbo 329
Engine harness, 4-Cyl. Diesel 1.6 MAN 330
Engine harness, 4-Cyl. Diesel 1.6 AUTO 330
Engine harness, 4-Cyl. Diesel 2.0 331
Engine harness, 5-Cyl. Turbo 331
Engine harness, 5-Cyl. Diesel 332
Engine harness, 6-Cyl. 3.0L Turbo 332
Engine harness, 6-Cyl. 3.2L 333
Engine harness, 6-Cyl. 3.2L PZEV 333
Engine compartment harness, LHD 334
Engine compartment harness, RHD 334
Dashboard harness, LHD 335
Dashboard harness, RHD 336
Floor harness, S80 LHD 337
Floor harness, S80 RHD 338
Floor harness, V70 LHD 339
Floor harness, V70 RHD 340
Infotainment harness, S80 LHD 341
Infotainment harness, S80 RHD 342
Infotainment harness, V70 LHD 343
Infotainment harness, V70 RHD 344
Roof harness, LHD 345
Roof harness, RHD 346
Heated windscreen adapter harness 347
Tunnel harness 347
Harness driver door, LHD 348
Harness driver door, RHD 348
Harness passenger door, LHD 349
Harness passenger door, RHD 349
Harness rear door, S80 LHD 350
Harness rear door, S80 RHD 350
Harness rear door, V70 LHD 351
Harness rear door, V70 RHD 351
Tailgate harness 352
Harness bumper, front 352
Harness bumper,V70, rear 353
Harness bumper,S80, rear 353
Executive harnesses 354

Component illustrations 355

Index 1:2 415

List of components 1:7 418

Explanations
Abbreviations

Groups

Group 26	= Cooling system
Group 27	= Engine controls
Group 28	= Ignition and control system
Group 32	= Alternator and voltage regulator
Group 33	= Starting system
Group 35	= Lighting
Group 36	= Additional electrical equipment
Group 37	= Wiring and fuses
Group 38	= Instruments
Group 39	= Other
Group 43	= Transmission
Group 55	= Parking brake
Group 59	= Brake system
Group 64	= Steering
Group 76	= Shock absorbers
Group 83	= Doors and openings
Group 84	= Exterior decorative elements, etc.
Group 85	= Interior equipment
Group 87	= Climate control system
Group 88	= Internal equipment
Group 89	= Body other

Ignition switch symbols

X	= Accessories (audio position)
S	= Powered upon insertion of key
15	= Contact remains connected during start
15l	= Contact is broken while starting
30	= Constant power from the battery
50	= Start

Countries/Markets

A	= Austria
AUS	= Australia
B	= Belgium
CDN	= Canada
CH	= Switzerland
D	= Germany
DK	= Denmark
E	= Spain
EU/OS	= Markets outside USA and Canada
FIN	= Finland
GB	= Great Britain
ISR	= Israel
J	= Japan
KOR	= Korea
N	= Norway
NL	= Netherlands
S	= Sweden
USA	= United States of America
WEU	= Western Europe

Other

ACC	= Adaptive Cruise Control
Ag	= Silver plated
Au	= Gold plated
AUTO	= Automatic transmission
AWF21	= TF-80SC & TF-80SD
AWF22	= TG-81SC
BLIS	= Blind spot information system
CAN	= CAN communication
DPY	= Display
Du-X	= Dual Xenon
ECC	= Electronic climate control system
ETA	= Throttle unit
EXC	= Exclusive
GDL	= Gas discharge lamp
HISPEED	= High speed data bus
HS	= High speed data bus
IR	= Infrared sensor
KEYLESS	= Keyless vehicle
LIN	= LIN communication
LH	= Left-hand side
LHD	= Left-hand drive
MAN	= Manual transmission
MEMORY	= Memory driver’s seat
MIDSPEED	= Midspeed data bus
MIRCAM	= Parking camera in rear-view mirror
MMS	= Mass Movement Sensor
MS	= Midspeed data bus
PANROOF	= Panoramic roof
PETROL	= Gasoline
RH	= Right-hand side
RHD	= Right-hand drive
RTI	= Road Traffic Information
SCR	= Screened
SRS	= Airbag
T	= Turbocharged engine
W/O	= Without
2WD	= Two-wheel drive
4CYL, I4	= 4-cylinder engine
5CYL, I5	= 5-cylinder engine
6CYL, I6	= 6-cylinder engine

Colors

BK, SB	= Black
BN	= Brown
BU, BL	= Blue
GN	= Green
GY, GR	= Gray
LGN	= Light Green
NL	= Natural
OG, OR	= Orange
PK, P	= Pink
RD, R	= Red
VT, VO	= Violet
WH, W	= White
YE, Y	= Yellow

How to use the wiring diagrams 1:2

The descriptions below apply in general to all wiring diagram manuals, although not all sections are necessarily contained in this manual.

The systems are shown in non active status, i.e. with “key removed” and when doors, hatches and hood are closed.

A. Component designation

Every component has a component designation that consists of two parts.

The first part is a type number that describes the type of component in question, for example 3/xx.

The second part of the designation is a serial number, e.g. x/2.

Together, this constitutes a component designation, e.g. 3/2.

At the end of the manual is a list of components, where, with the help of the component designation, you can read off the name of the component, for example, 3/2 = light switch.

List of type numbers

The list shows which type of component that respective type numbers refer to, for example, 3/x = switch, 6/x = electric motor, etc.

1	Battery
2	Relay
3	Switch
4	Control module
5	Driver information module
6	Electric motor
7	Sensor
8	Actuator
9	Heating element
10	Light
11	Fuse
15	Electrical distribution rail/box
16	Audio
17	Service/diagnostics
18	Contact reel
19	Meter
20	Ignition component/shunt
27	Optics
31	Ground connection
73	Branching point
74	Connector

B. Branching points

The wiring diagrams contain numbered branching points, for example 73/5035.

This manual contains a section with a list of branching points. This list shows all the components that are connected to each branching point.

The location of the branching points is shown in the "Cable harness routing in vehicle" section.

C. Connectors

Connectors provide a bridge between two cable harnesses and are described in the "Connectors" section.

D. Electrical distribution

Operation of the fuses and relays is shown in the "Electrical distribution" section.

E. Data communication

Today’s cars contain CAN, LIN and MOST networks that transfer information. Connections to these networks are not shown in their entirety in the respective wiring diagram. Complete information on CAN, LIN and MOST communication is found in the section "Control modules".

F. Abbreviations

A number of different abbreviations are used in the manual. These are explained in the section "Abbreviations".

G. Component location

There is a section at the end of the manual in which the appearance and location of components is described in numerical order.

How to use the wiring diagrams 2:2

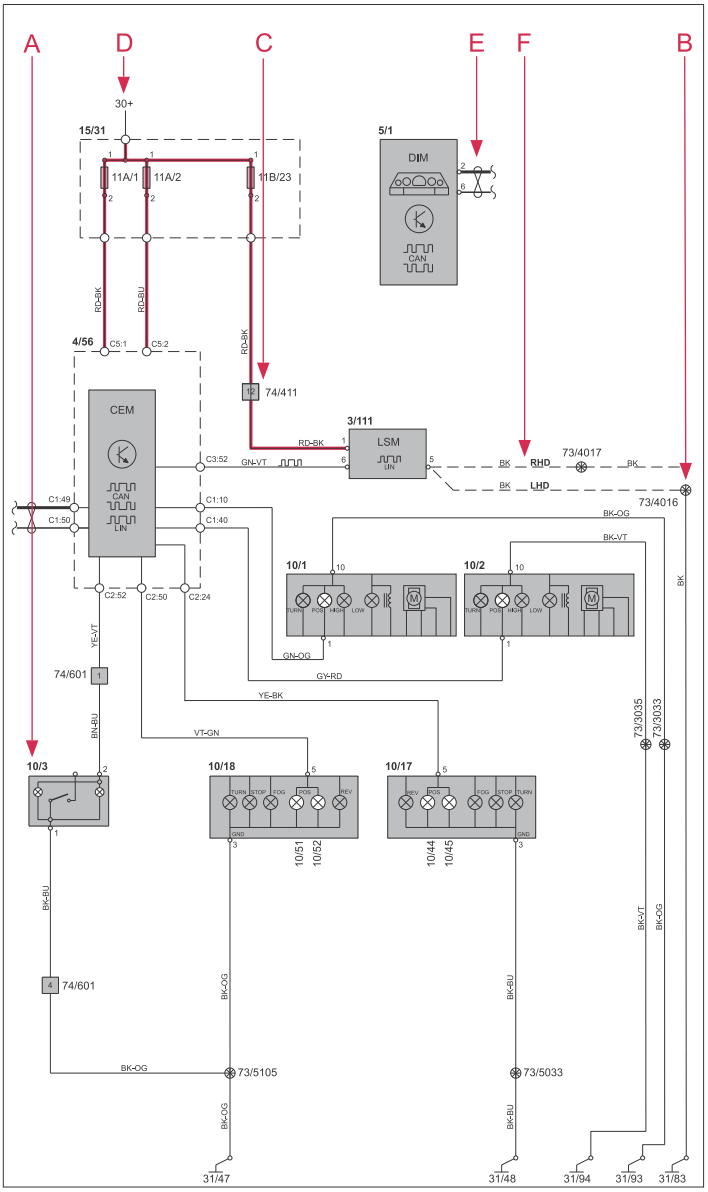

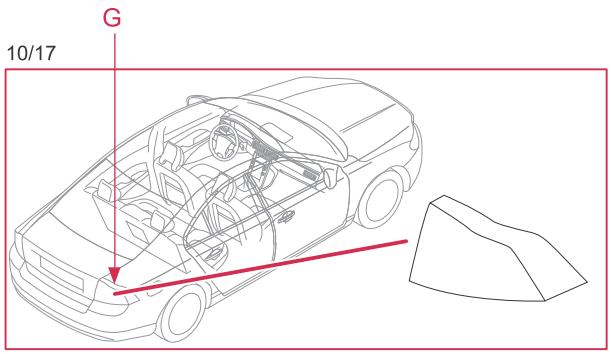

List of symbols

= System voltage

= Ground connection via wiring

= Ground connection in component/chassis

= Screened wire

= Junction point

= Twisted cable

= Electrical connection

= Variant

= CAN communication

= CAN high data signal (CAN H)

= CAN low data signal (CAN L)

= LIN communication

= LIN communication

= DIN cable, coaxial cable, etc.

= Data communication

= CAN communication

= MOST communication

= MOST communication

= Connection with distribution box

= Further connection to...

= Connector between cable harnesses

= Connector connected in component

G029147

Electrical distribution
Overview without Start/Stop function

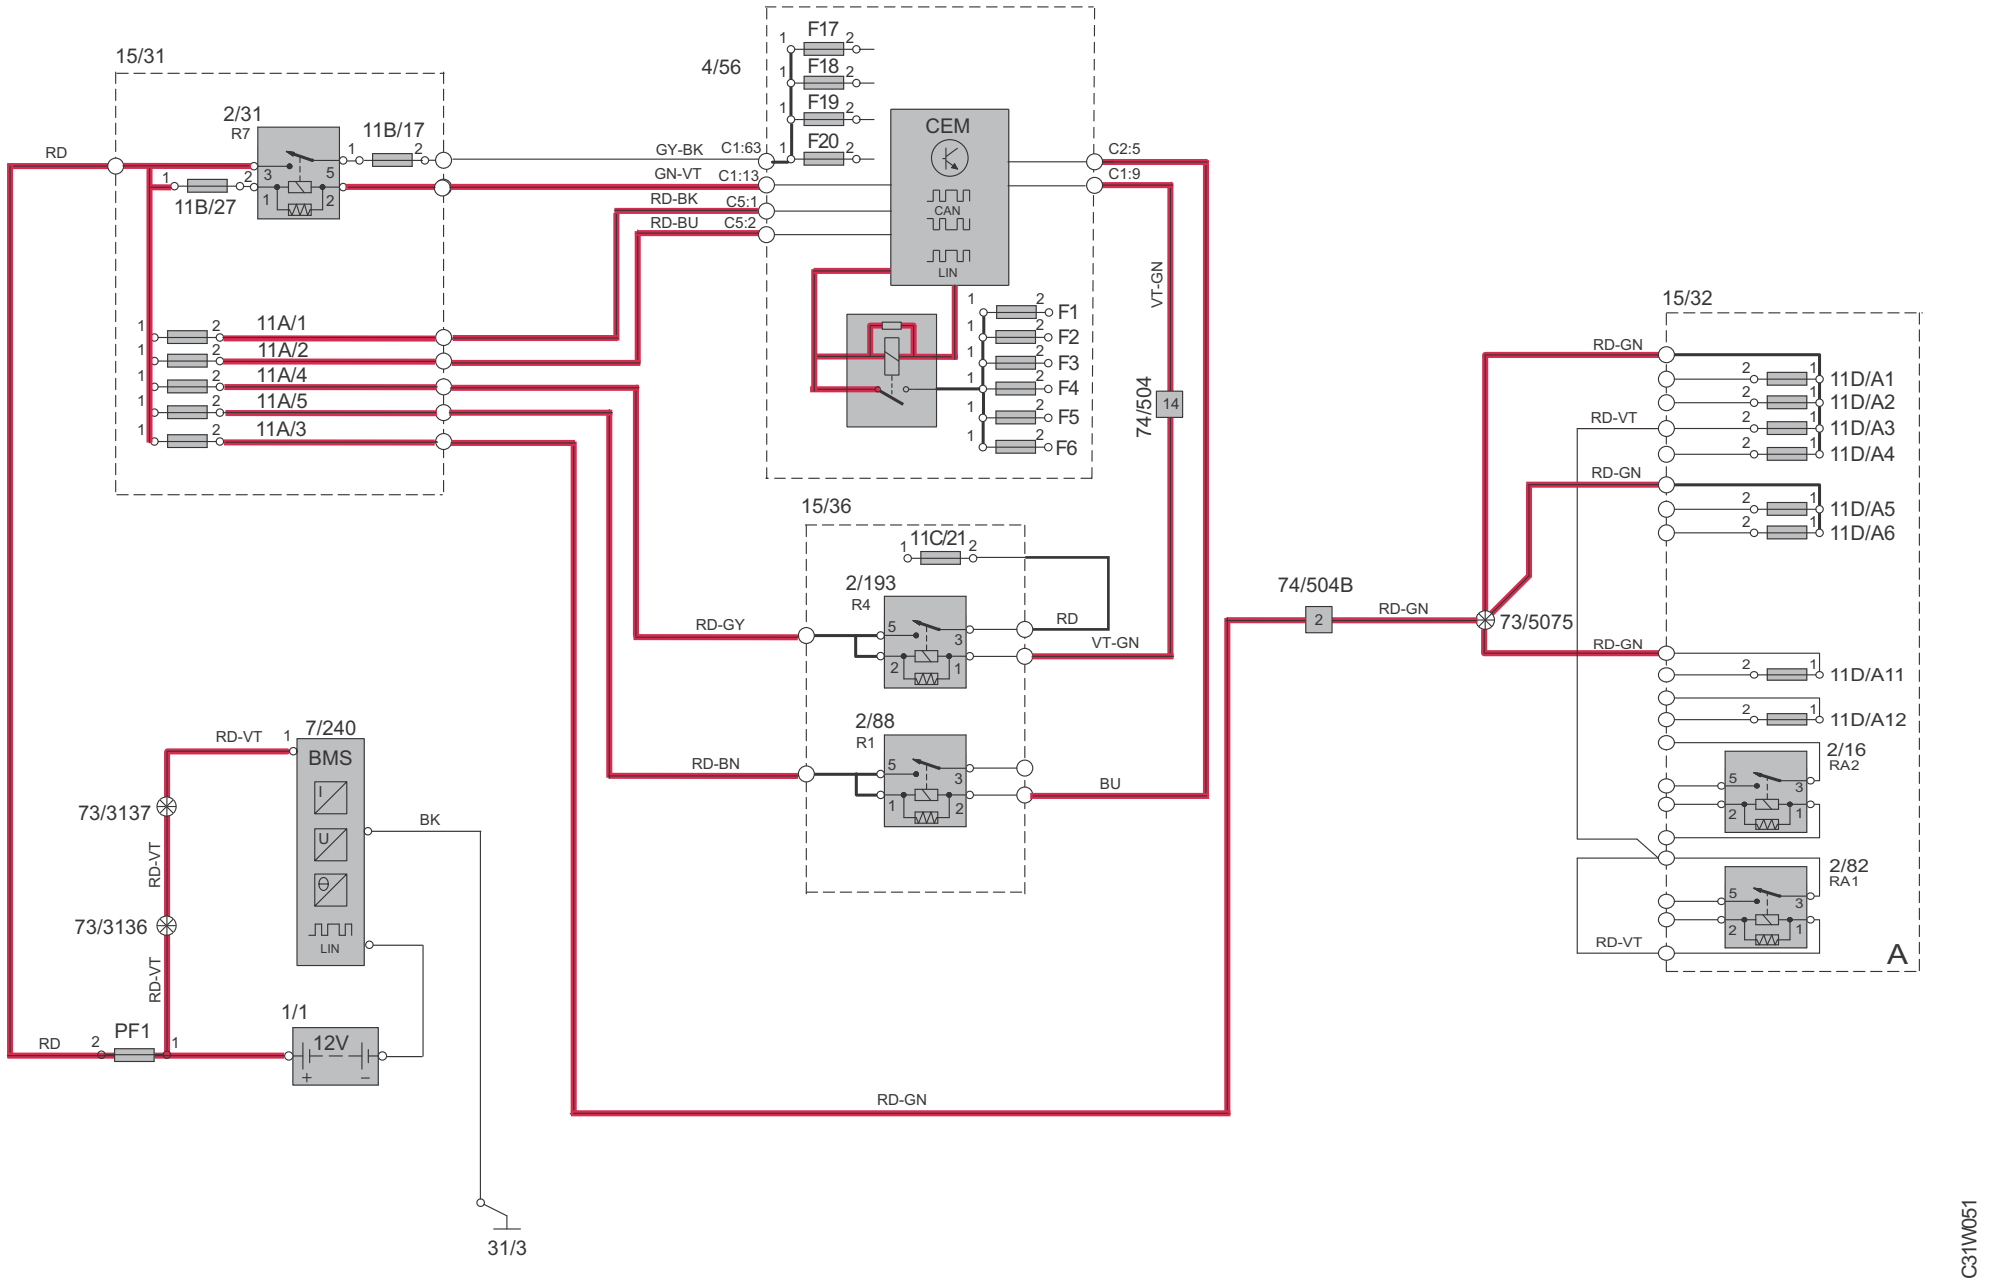

C31W051

Electrical distribution
Overview with Start/Stop function

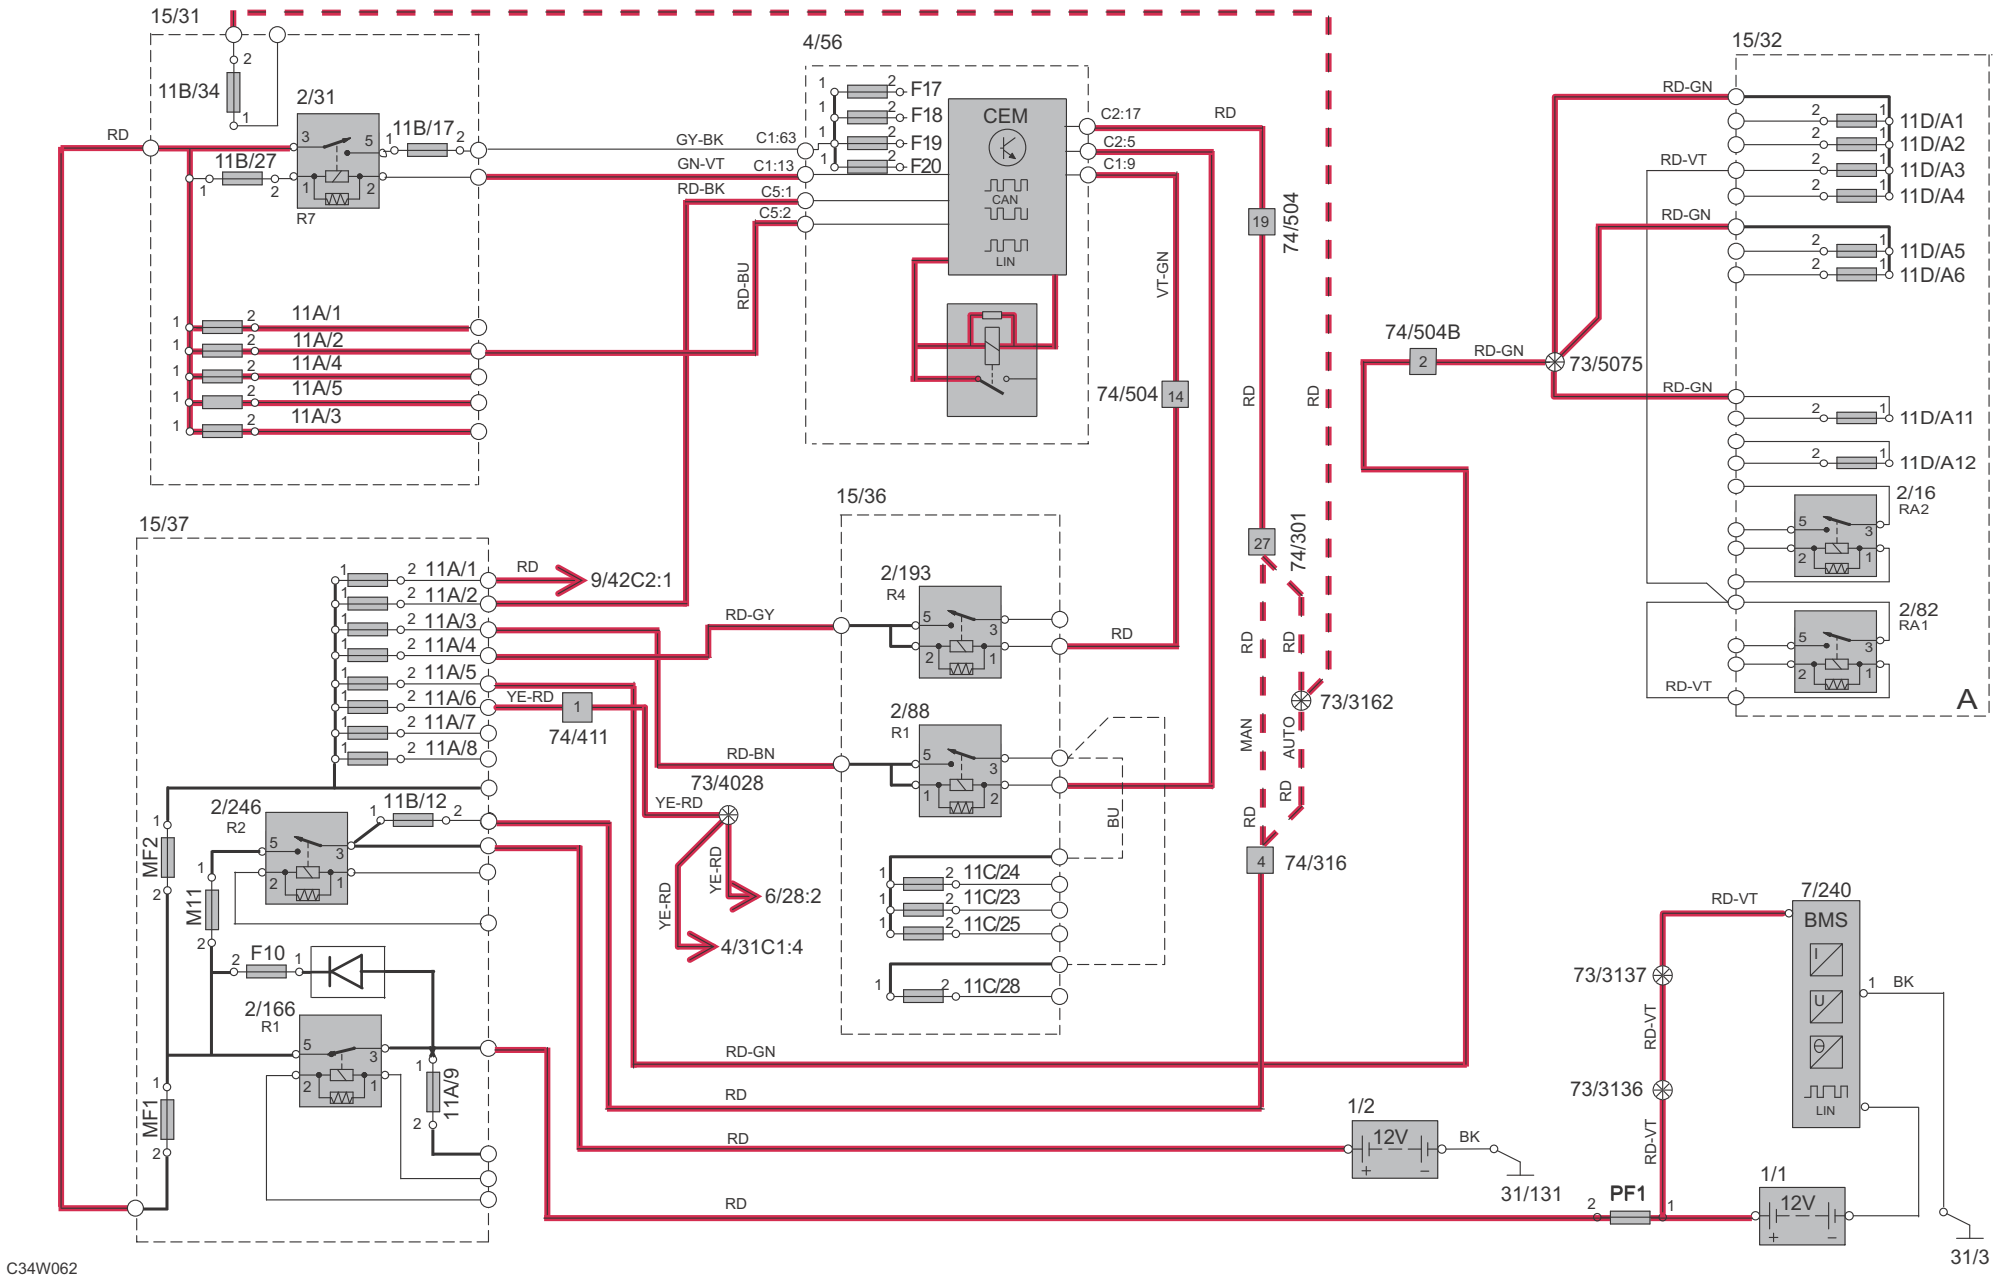

Electrical distribution
Overview, Distribution box in engine compartment, exc. 4-Cyl. 2.0L

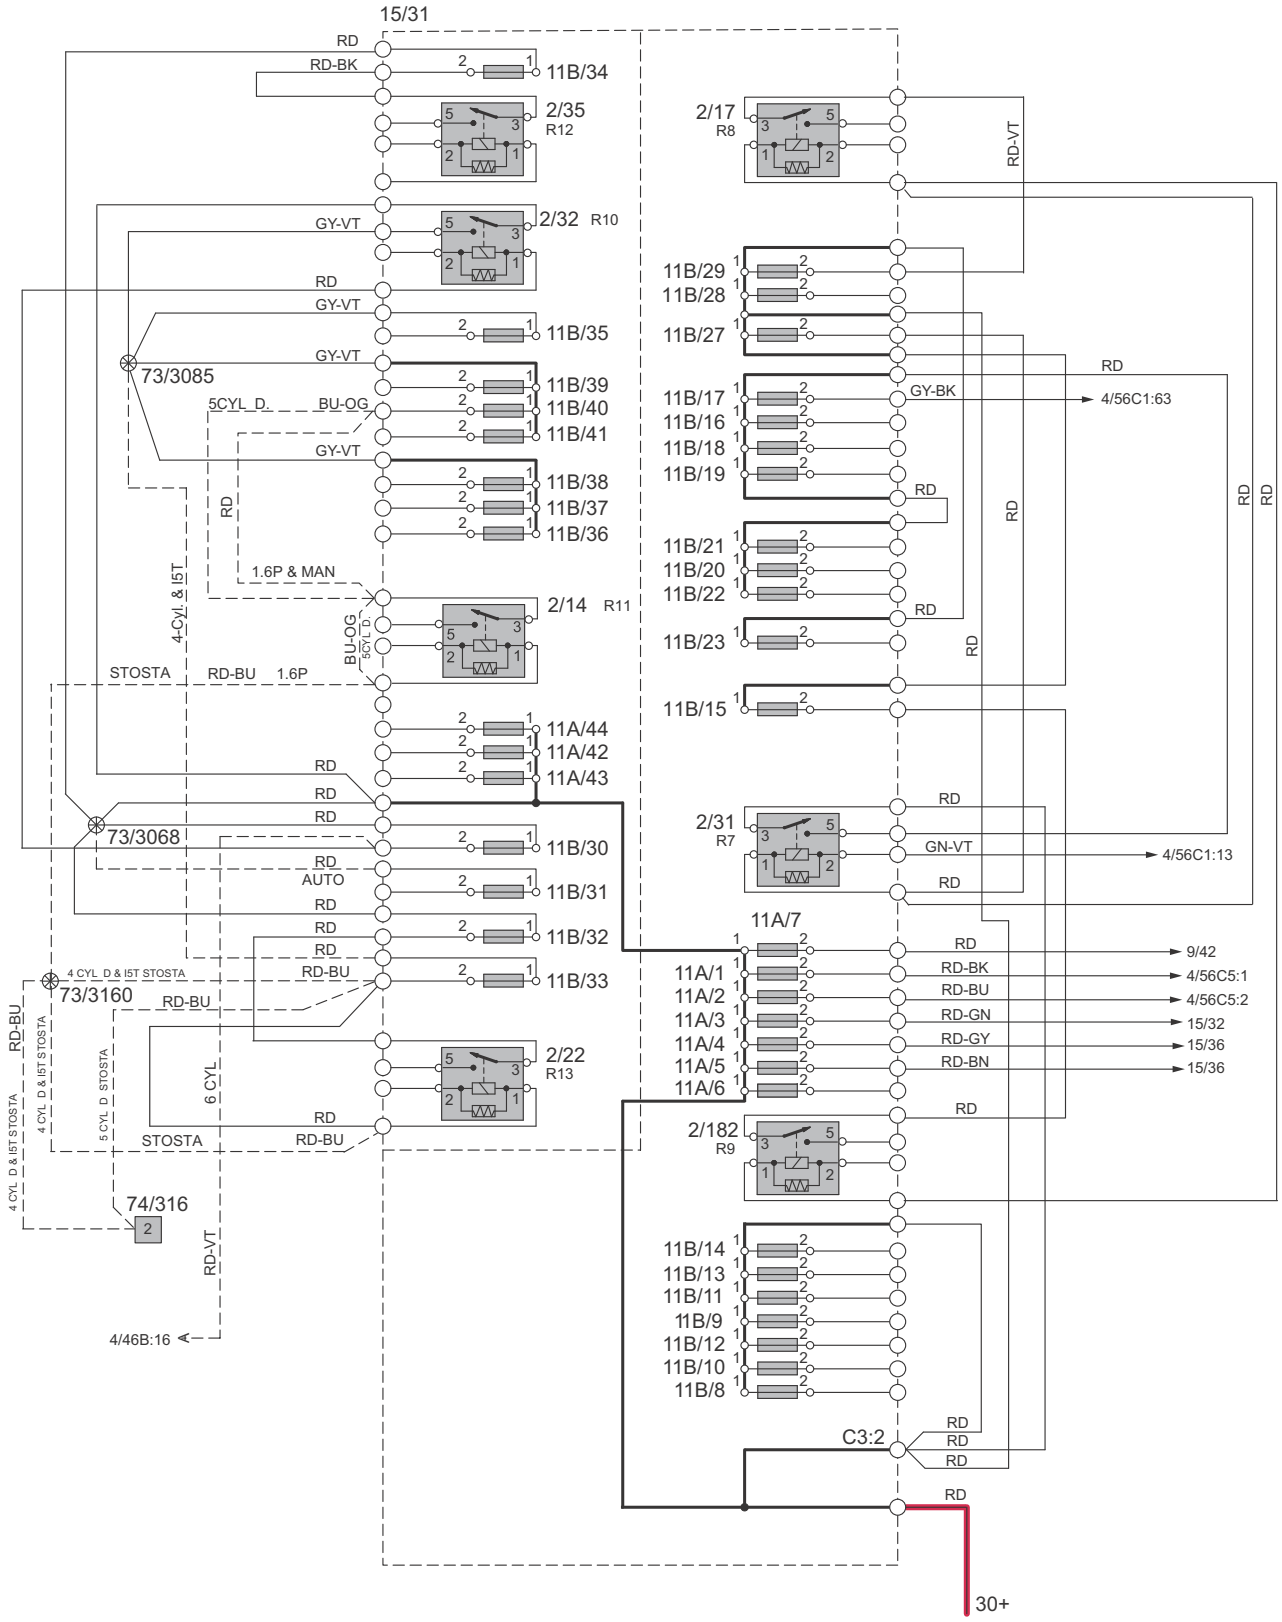

C33W002

Electrical distribution
Overview, Distribution box in engine compartment, 4-Cyl. 2.0L

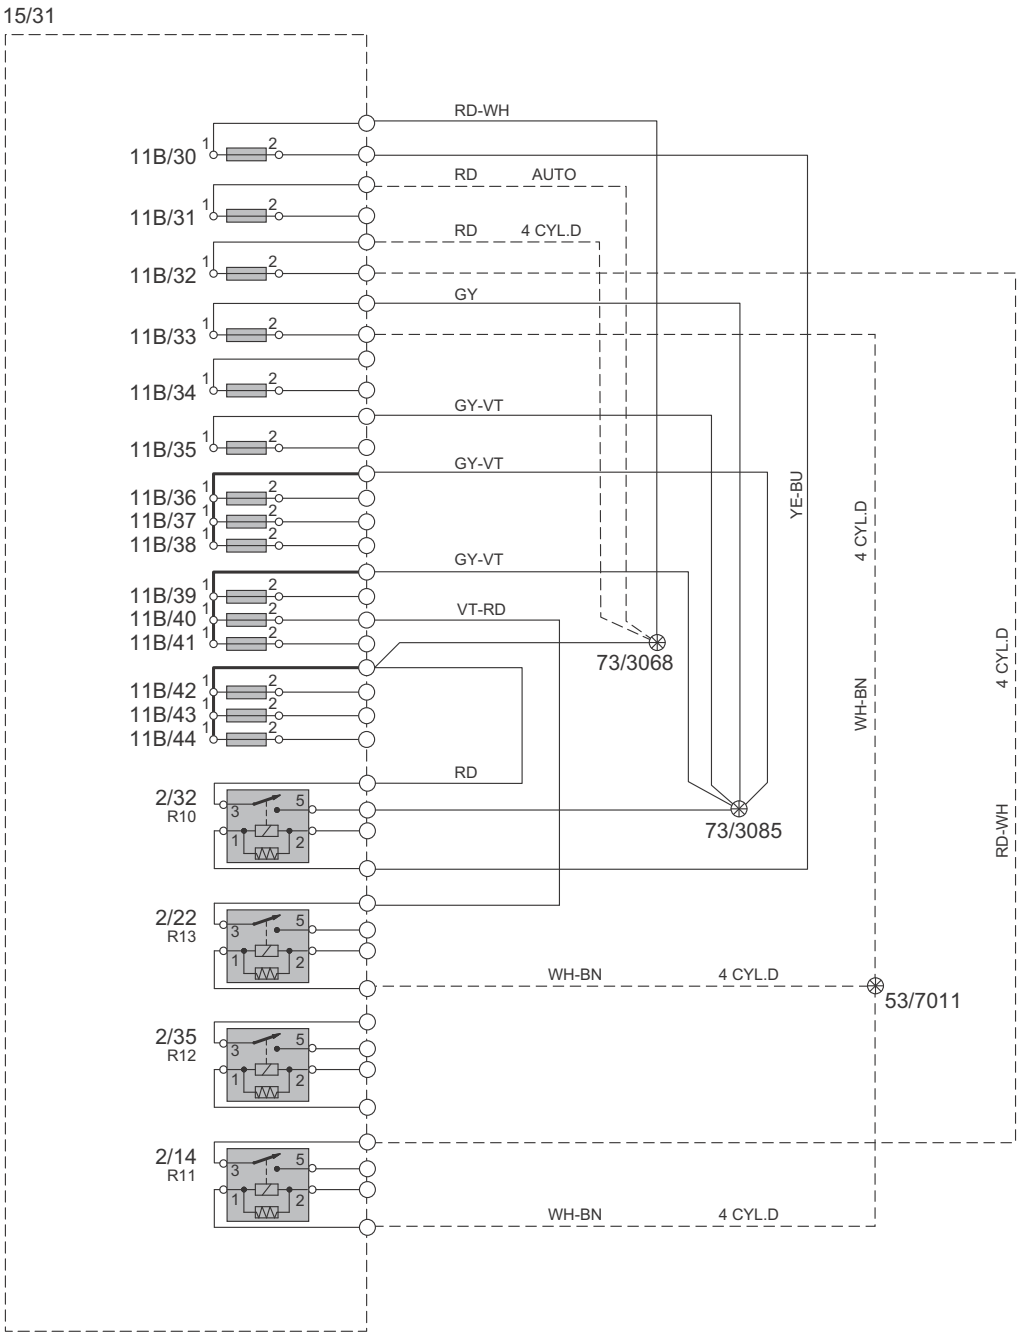

C33W003

Electrical distribution
Overview, Distribution box in passenger compartment

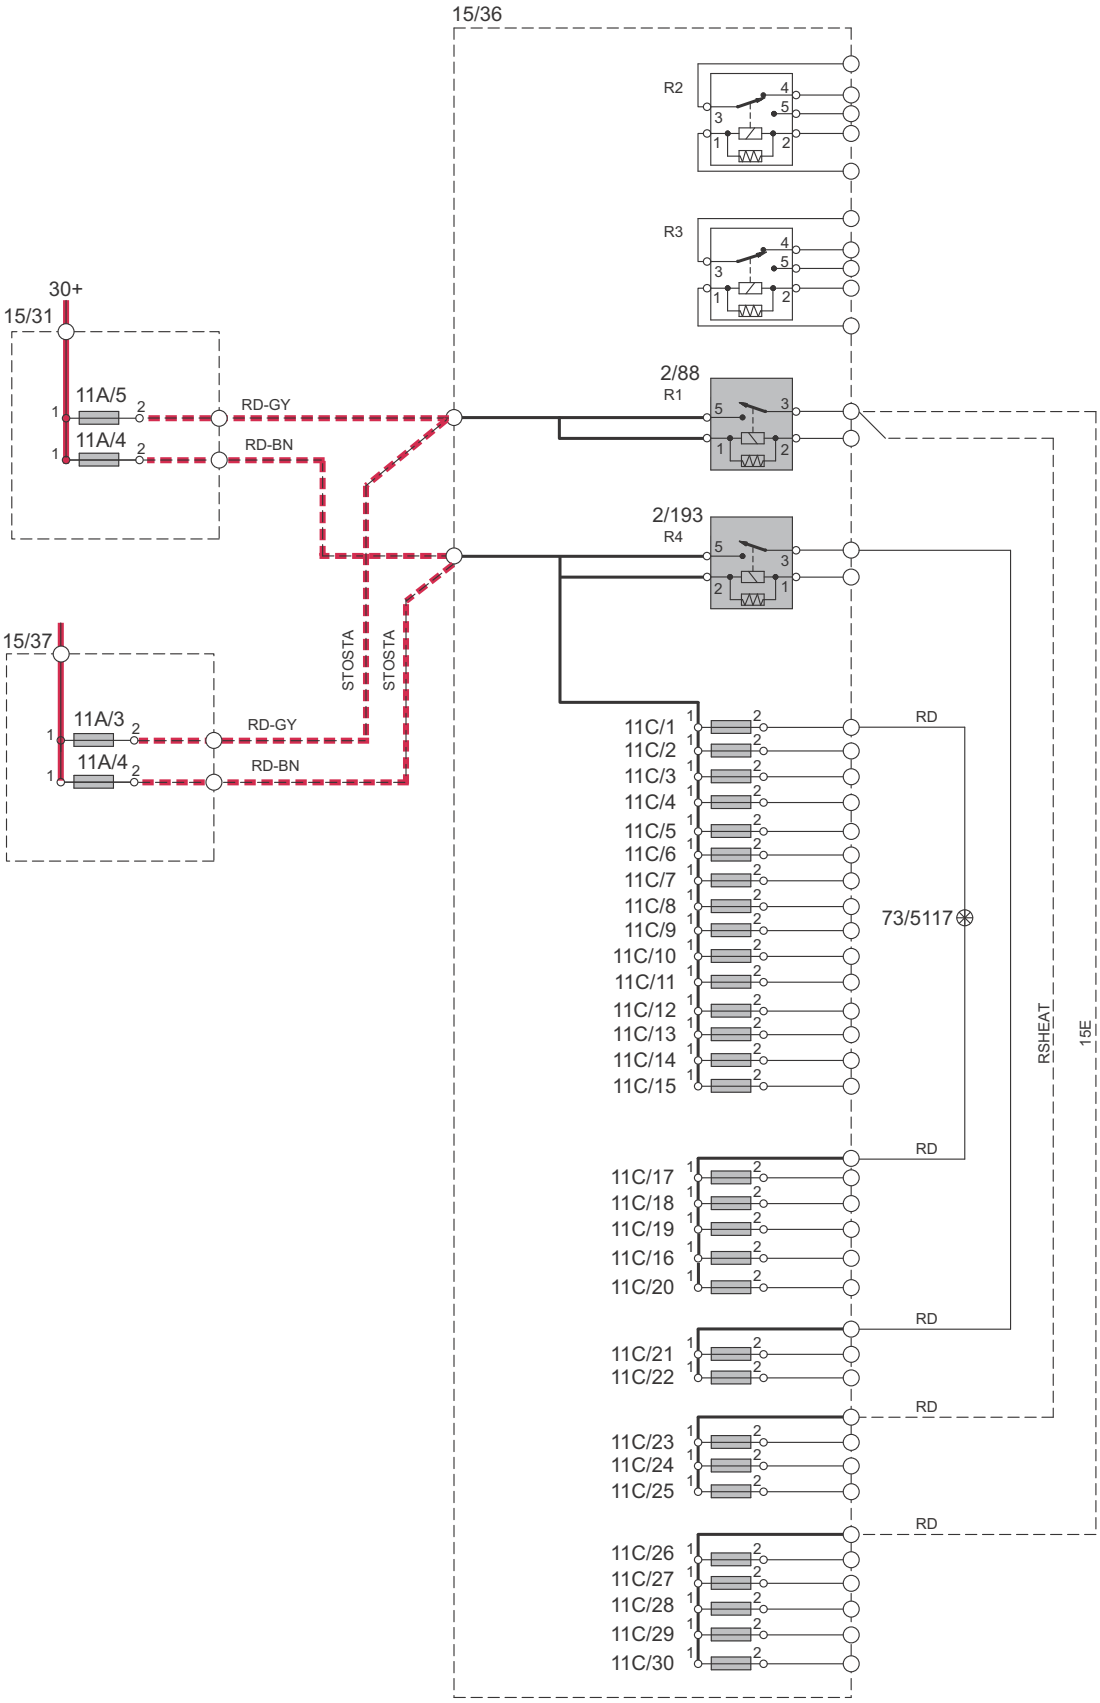

C33W004

Electrical distribution
Overview, Distribution box in cargo compartment

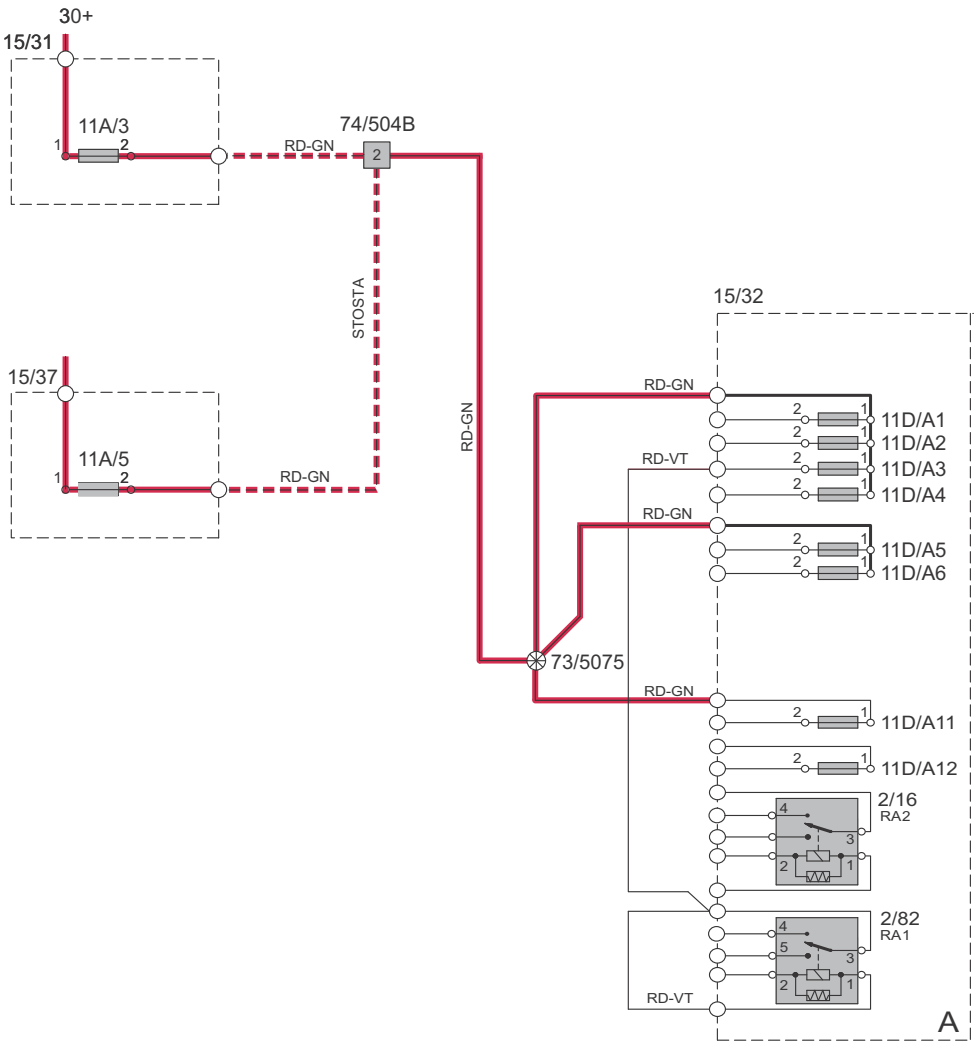

C33W005

Fuses
Distribution box in engine compartment F1-F7

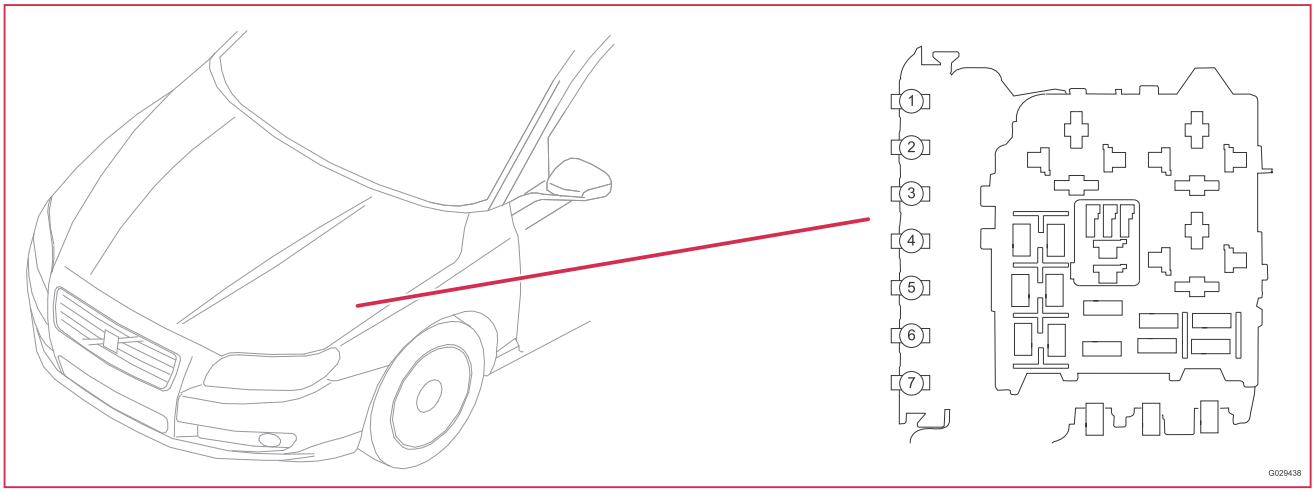

15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F1	11A/1	4/56 F7 F9-F11 F23	Central Electronic Module (CEM) Fuse in the Central Electronic Module (CEM) Fuses in the Central Electronic Module (CEM) Fuse in the Central Electronic Module (CEM)	- - relay in CEM -	50
F2	11A/2	4/56 F3-F6 F8 F12-F16 F22 F24	Central Electronic Module (CEM) Fuses in the Central Electronic Module (CEM) Fuse in the Central Electronic Module (CEM) Fuses in the Central Electronic Module (CEM) Fuse in the Central Electronic Module (CEM) Fuse in the Central Electronic Module (CEM)	- relay in CEM relay in CEM - - -	50
F3	11A/3	11D/A1-11D/A11	Fuses in distribution box cargo compartment	-	60
F4	11A/4	2/193 4/56 11C/1-11C/15 11C/21-11C/22	Relay, comfort functions Central Electronic Module (CEM) Fuses in distribution box passenger compartment Fuses in distribution box passenger compartment	- 2/193 - 2/193	60
F5	11A/5	2/88 4/56 11C/23-11C/25 11C/26-11C/30	Relay, 15-feed Central Electronic Module (CEM) Fuses in distribution box passenger compartment Fuses in distribution box passenger compartment	- 2/88 2/88 2/88	60
F7	11A/7	9/42	PTC-element	-	100

continues

Fuses
Distribution box in engine compartment F8-F21

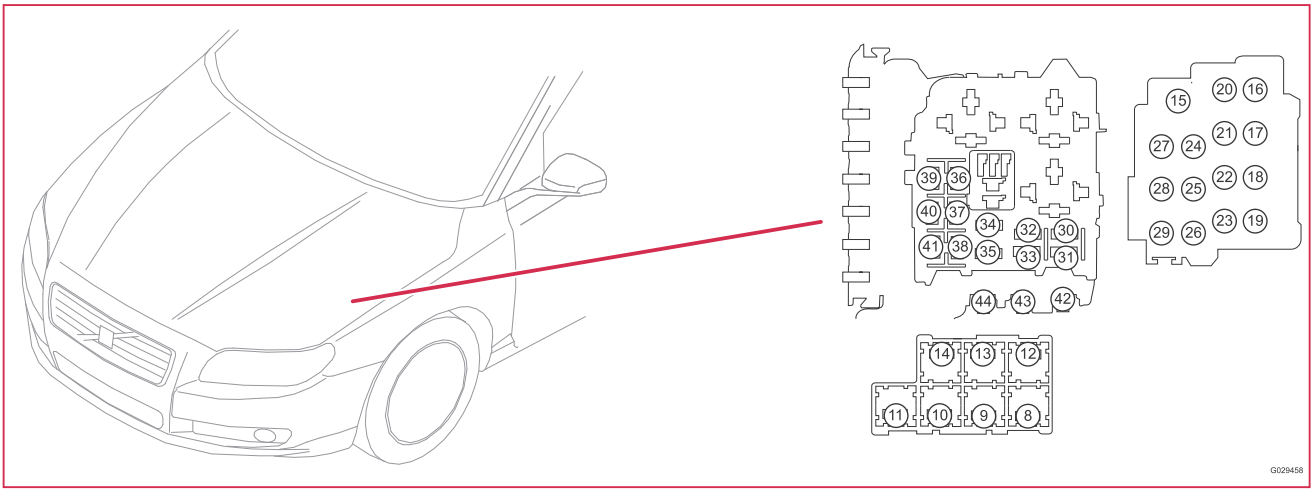

15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F8	11B/8	9/7	Heated windshield	2/81A	40
F9	11B/9	6/1	Wiper Motor Module (WMM)	-	30
F10	11B/10	4/7 4/106	Combustion Preheater Module (CPM) Control module, remote parking heater start	- -	25
F11	11B/11	4/31 6/28	Passenger compartment fan control module Motor, passenger compartment fan	- -	40
F12	11B/12	2/81B 9/7	Relay, heated windshield, driver's side Heated windshield	2/81A 2/81B	40
F13	11B/13	4/16	Brake Control Module (BCM), pump	-	40
F14	11B/14	4/16	Brake Control Module (BCM), valves	-	20
F15	11B/15	6/104	Washer motor headlights	2/182	20
F16	11B/16	10/1 10/2	Lamp housing, front left Lamp housing, front right	- -	10
F17	11B/17	4/56 F17-F20	Central Electronic Module (CEM) Fuses in the Central Electronic Module (CEM)	- -	20
F18	11B/18	4/16	Brake Control Module (BCM)	-	5
F19	11B/19	4/99 6/163 6/164	Speed dependent power steering control module Electric power steering module (EPAS) Electrohydraulic power steering module (EHPAS)	- - -	5
F20	11B/20	4/28 4/28 4/28B 4/46 4/9	Transmission Control Module (TCM), AWF21 Transmission Control Module (TCM), AWF22 Transmission Control Module (TCM) MPS6 Engine Control Module (ECM) Supplemental restraint system module (SRS)	- - - - -	10
F21	11B/21	9/43 9/44	Heated windshield washer nozzle, left Heated windshield washer nozzle, right	- -	10

continues

Fuses
Distribution box in engine compartment F22-F31

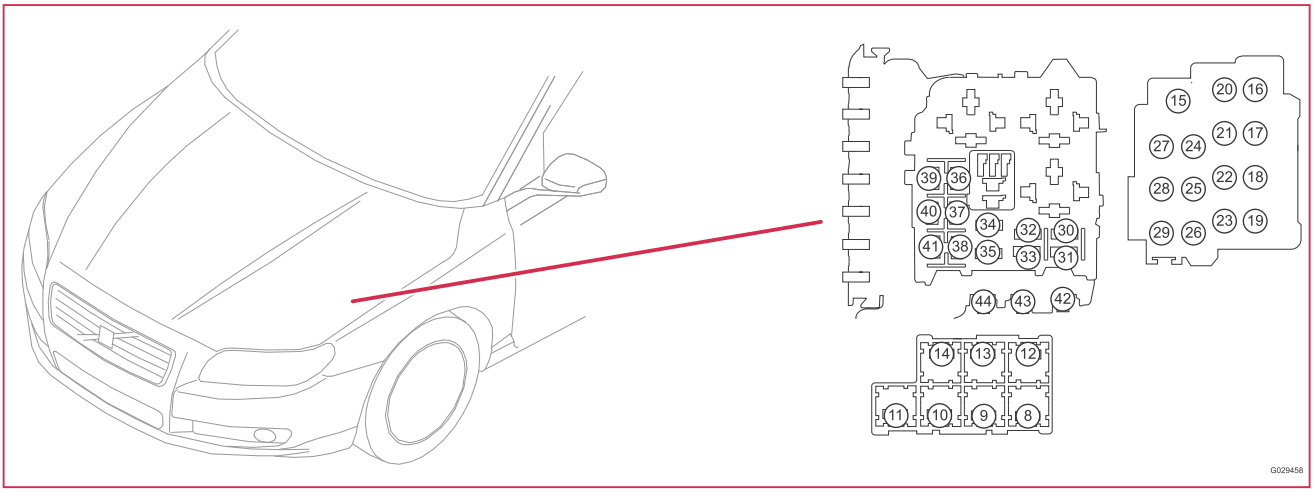

15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F22	11B/22	-		-	-
F23	11B/23	3/111	Light Switch Module (LSM)	-	5
F27	11B/27	2/17	Relay, horn	-	5
		2/31	Relay, 15-feed	-	
		2/81A	Relay, heated windshield, passenger side	-	
		2/182	Relay, headlight washer motor	-	
		4/56	Central Electronic Module (CEM)	2/17, 2/31, 2/182, 2/81A	
		6/104	Washer motor headlights	-	
F28	11B/28	2/64	Relay, auxiliary lights	-	20
		4/56	Central Electronic Module	2/64	
		10/65	Auxiliary light, front right	2/64	
		10/69	Auxiliary light, front left	2/64	
F29	11B/29	2/17	Relay, horn	-	15
		16/10	Horn 1	2/17	
		16/11	Horn 2	2/17	
F30	11B/30	2/32	Main relay, engine management system	-	10
		4/46	Engine Control Module (ECM)	-	
F31	11B/31	4/28	Transmission Control Module (TCM)	-	15

continues

Fuses
Distribution box in engine compartment F32-F37

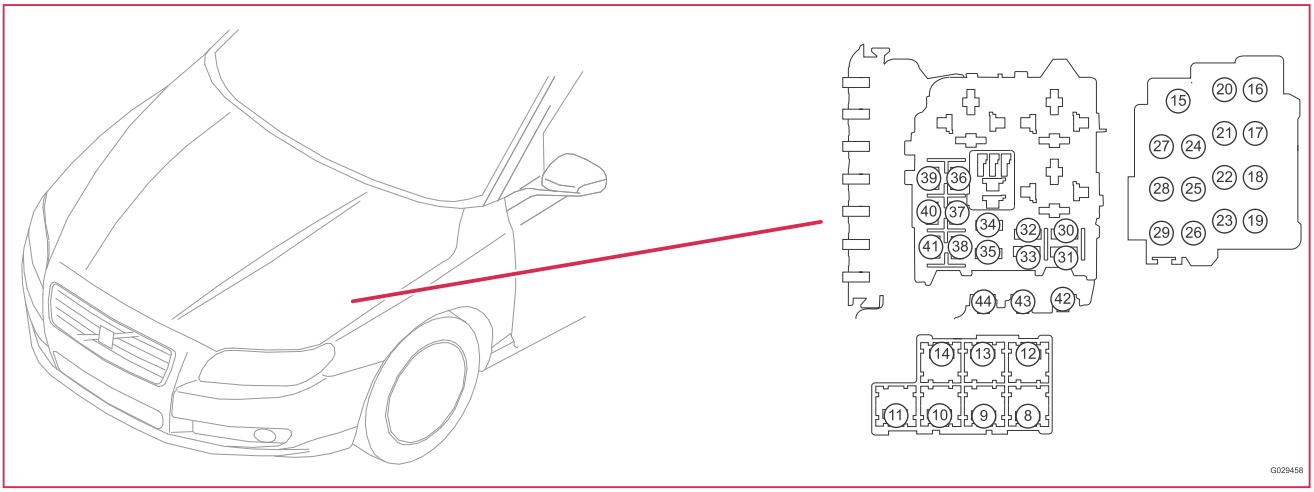

15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F32	11B/32	8/3 6/73	Electromagnetic clutch, climate control system Coolant pump, Start/Stop, 4-Cyl. 2.0L Diesel	2/22 2/14	15
F33	11B/33	2/14 2/22 4/46	Relay, glow plug system Relay, climate control system Engine Control Module (ECM)	- - 2/22	5
F34	11B/34	2/35 6/25	Relay, starter motor Starter motor	- 2/35	30
F35	11B/35	4/109 20/3-6 4/46 20/3-8 20/16	Control module glow plug, 5-Cyl. Diesel Spark plug with ignition coil, 4-Cyl. Engine Control Module (ECM), 4-Cyl. 2.0L Diesel Spark plug with ignition coil, 5- & 6-Cyl. Capacitor 6-Cyl.	- - - - -	10 20
F36	11B/36	4/46 4/46 4/46	Engine Control Module (ECM), 4-, 5-, 6-Cyl. Engine Control Module (ECM), 4-Cyl. 2.0L Diesel Engine Control Module (ECM), 5-Cyl. Diesel	- - -	10 20 15
F37	11B/37	7/17 8/111 8/121 8/167	Mass airflow sensor (MAF), 4-Cyl. Turbo Control valve fuel flow, 4-Cyl. 1.6L Diesel Radiator valve, 4-Cyl. Turbo Bypass solenoid, 4-Cyl. Turbo	- - - -	10
		6/197 7/17 8/197	Bypass solenoid, 4-Cyl. 2.0L Diesel Mass airflow sensor (MAF), 4-Cyl. 2.0L Diesel Radiator valve, 4-Cyl. 2.0L Diesel	- - -	10
		8/6-10 8/98 8/111 7/17	Injection valves, 5-Cyl. Turbo Control valve fuel pressure, 5-Cyl. Diesel Control valve fuel flow, 5-Cyl. Diesel Mass airflow sensor (MAF), 5-Cyl.Diesel	- - - -	15
		4/46 8/6-11 7/17	Engine Control Module (ECM), 6-Cyl. Injection valves, 6-Cyl. Mass airflow sensor (MAF), 6-Cyl.	- - -	15

continues

Fuses
Distribution box in engine compartment F38

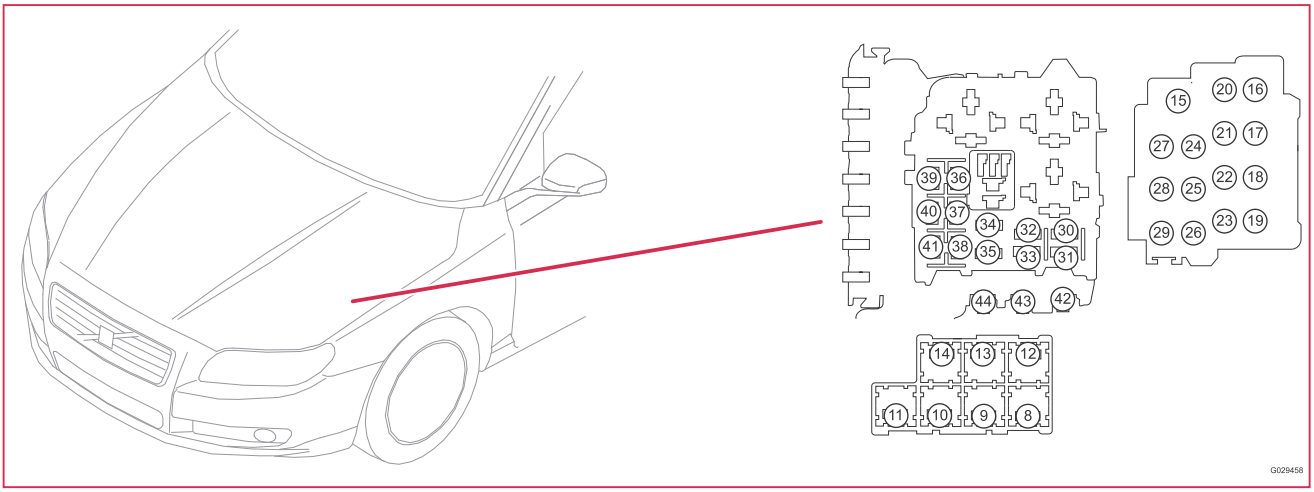

15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F38	11B/38	8/18	EVAP valve, 4-Cyl. 1.6L	-	10
		8/28	Turbocharger control valve, 4-Cyl. 1.6L	-	
		8/19	Solenoid, variable valve timing, intake, 4-Cyl. 1.6L Turbo	-	
		8/81	Solenoid, variable valve timing, exhaust, 4-Cyl. 1.6L Turbo	-	
		8/159	Bypass valve, 4-Cyl. 1.6L Turbo	-	
		7/17	Mass air flow sensor MAF, 5-Cyl. Turbo	-	
		7/35	Oil level sensor, 5-Cyl. Turbo	-	
		8/3	Electromagnetic clutch climate control system, 5-Cyl. Turbo	-	
		8/28	Turbocharger control valve, 5-Cyl. Turbo	-	
		8/81	Solenoid, variable valve timing, exhaust, 5-Cyl. Turbo	-	
		8/117	Solenoid, variable valve timing, intake, 5-Cyl. Turbo	-	
		8/159	Bypass valve, 5-Cyl. Turbo	-	
		7/35	Oil level sensor, 5-Cyl. Diesel	-	
		8/3	Electromagnetic clutch, climate control system, 5-Cyl. Diesel	-	
		8/28	Turbo control valve, 5-Cyl. Diesel	-	
		8/113	Bypass valve, EGR cooling, 5-Cyl. Diesel	-	
		8/157	Turbocharger control valve, 5-Cyl. Diesel	-	
		8/164	Electric piston cooling valve, 5-Cyl. Diesel	-	
		4/46	Engine Control Module (ECM), 6-Cyl.	-	
		6/139	Upper actuator motor, intake manifold, 6-Cyl.	-	
		6/140	Lower actuator motor, intake manifold, 6-Cyl.	-	
		8/3	Electromagnetic clutch, climate control system, 6-Cyl.	-	
		8/28	Turbo control valve, 6-Cyl.	-	
		8/68	Relief valve, 6-Cyl. Turbo	-	
		8/117	Solenoid, variable valve timing, intake, 6-Cyl.	-	
		8/125	Solenoid cam profile front, 6-Cyl. W/O Turbo	-	
		8/126	Solenoid cam profile rear, 6-Cyl. W/O Turbo	-	
11B/ 38 continues					

Fuses
Distribution box in engine compartment F38-F39

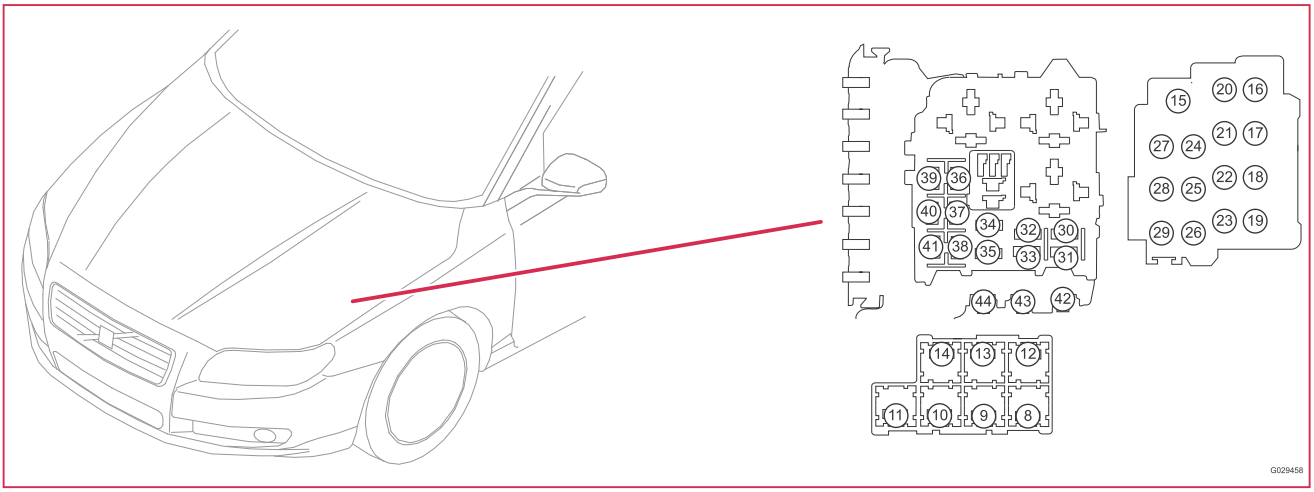

15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F38	11B/38	7/82	Rear oxygen sensor, 4-Cyl. 2.0L Turbo	-	15
		8/117	Solenoid, variable valve timing, intake, 4-Cyl. 2.0L Turbo	-	
		8/118	Solenoid, variable valve timing, exhaust, 4-Cyl. 2.0L Turbo	-	
		8/159A	Bypass valve, 4-Cyl. 2.0L Turbo	-	
		8/180	Engine oil pump solenoid, 4-Cyl. 2.0L Turbo	-	
		8/200	Vacuum regulator, turbo wastegate control, 4-Cyl. 2.0L Turbo	-	
		7/82	Rear oxygen sensor, 4-Cyl. 2.0L Diesel	-	
		8/113	Bypass valve, EGR cooling, 4-Cyl. 2.0L Diesel	-	
		8/199	Vacuum regulator, turbo bypass control, 4-Cyl. 2.0L Diesel	-	
		8/200	Vacuum regulator, turbo wastegate control, 4-Cyl. 2.0L Diesel	-	
F39	11B/39	7/15	Front heated oxygen sensor, 4-Cyl. 1.6L Turbo	-	10
		7/82	Rear heated oxygen sensor, 4-Cyl. 1.6L Turbo	-	
		7/15	Front heated oxygen sensor, 5-Cyl. Diesel	-	
		7/15	Front heated oxygen sensor, 4-Cyl. 2.0L Turbo	-	15
		7/104	Rear oxygen sensor, 4-Cyl. 2.0L Turbo	-	
		7/15	Front heated oxygen sensor, 5-Cyl. Turbo	-	
		7/215	Rear heated oxygen sensor, 5-Cyl. Turbo	-	
		8/18	EVAP valve, 5-Cyl. Turbo	-	
		7/15	Front oxygen sensor, bank 1, 6-Cyl.	-	
		7/82	Rear oxygen sensor, bank 1, 6-Cyl.	-	
		7/104	Rear heated oxygen sensor bank 2, 6-Cyl. 3.2L	-	
		8/18	EVAP valve, 6-Cyl.	-	

continues

Fuses
Distribution box in engine compartment F40-F44

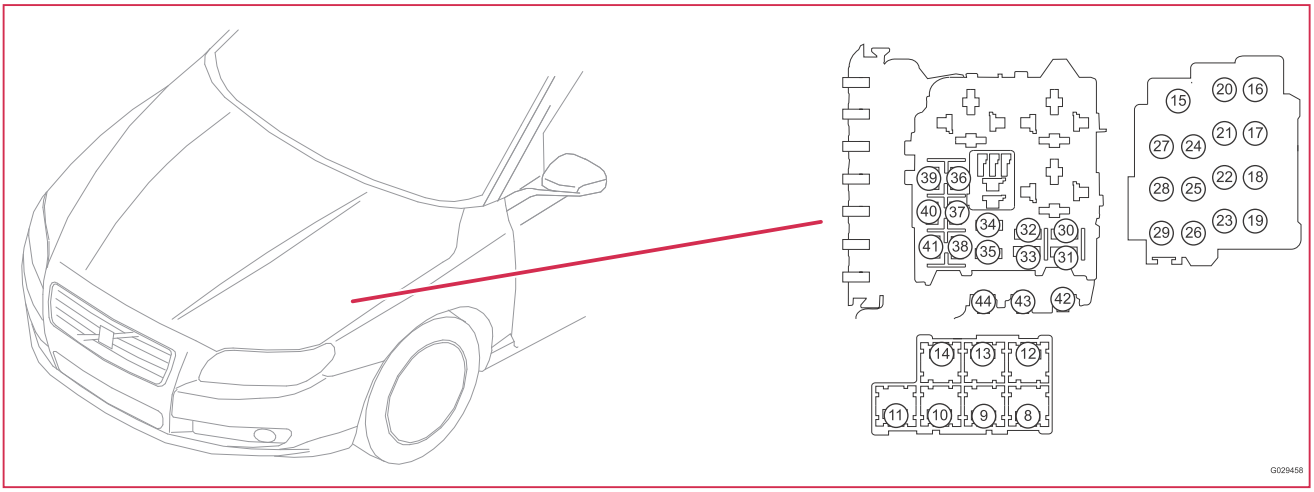

15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F40	11B/40	6/73 6/179 9/32 9/38	Coolant pump, Start/Stop, 5-Cyl. Turbo Electric oil pump PTC resistor crankcase ventilation, 5-Cyl. Turbo Heated fuel filter, Diesel	2/32 - - -	20
		20/3-6	Spark plug and ignition coil, 4-Cyl. 2.0L Turbo	-	15
		6/73	Coolant pump, Start/Stop, 4-Cyl. Turbo	2/14	10
F41	11B/41	6/67 6/179 7/200 9/32	Pump fuel leakage control 6-Cyl. Electric oil pump Sensor, coolant temperature PTC-resistor, crankcase ventilation 5 Cyl. Diesel	- - - -	5/10
		4/109 8/3 8/180	Glow plug control module, 4-Cyl. 2.0L Diesel Electromagnetic clutch, climate control system, 4-Cyl. 2.0L Diesel Engine oil pump solenoid, 4-Cyl. 2.0L Diesel	- - -	15
F42	11A/42	4/109	Glow plug control module	-	70
		6/113	Coolant water pump, 4-Cyl. 2.0L	-	50
F43	11A/43	4/71	Control module cooling fan 4-Cyl. Turbo	-	60
		4/71	Cooling fan control module, 4-Cyl. Diesel, 5-Cyl. Diesel, 6-Cyl.	-	80
F44	11A/44	6/163 6/164	Electric power steering module (EPAS) Electrohydraulic power steering module (EHPAS)	- -	100

Fuses
Central electronic module (CEM) F1-F3

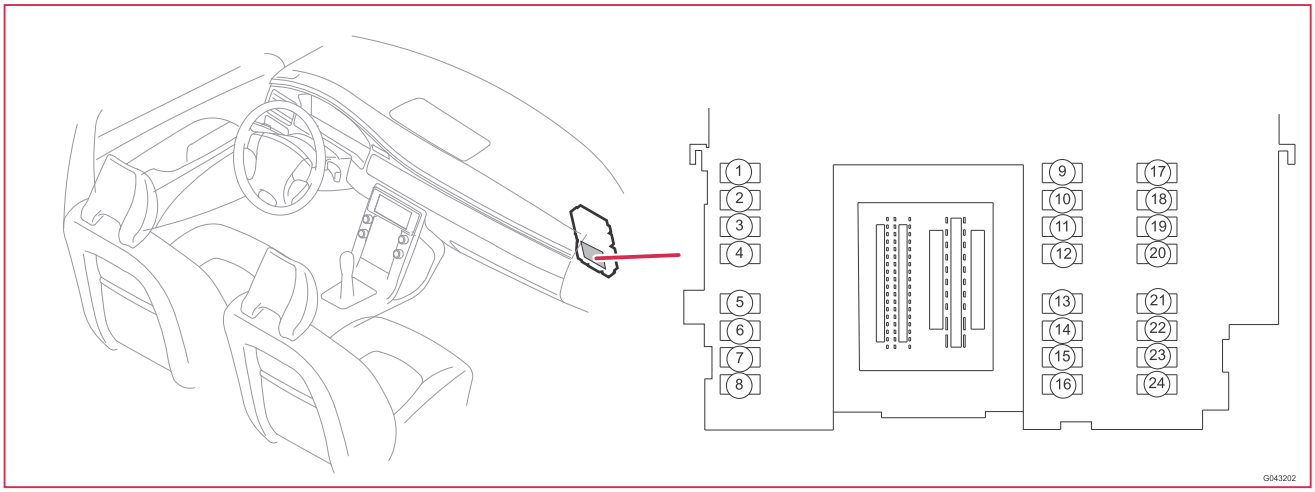

4/56 Central Electronic Module (CEM)

No.	Fuse function		via	A
F1	2/16	Relay, rear window wiper	-	15
	6/32	Rear window wiper motor	2/16	
F3	3/27	Switch unit, power passenger seat	-	7.5
	3/176	Power window switches, driver's door	-	
	3/291	Tailgate closing switch, V70	-	
	4/52	Power Seat Module (PSM)	-	
	10/25	Ceiling light, cargo compartment, V70	-	
	10/29	Glove compartment lighting	-	
	10/97	Left-hand front courtesy lighting	-	
	10/102	Right-hand front courtesy lighting	-	
	10/122	Left-hand rear courtesy lighting	-	
	10/123	Right-hand rear courtesy lighting	-	
	10/127	Lighting, cargo compartment, left-hand side, S80	-	
	10/128	Lighting, cargo compartment, right-hand side, S80	-	
	10/261	Ground illumination lighting, driver's side	-	
	10/294	Ground illumination lighting, left rear	-	
	10/295	Ground illumination lighting, right rear	-	
	17/45	Alcolock outlet	-	
	26/6	Converter/control module, sill moldings, driver's side	-	
	26/7	Converter/control module, sill moldings, passenger side	-	
	26/8	Alcolock charging cradle	-	

continues

Fuses
Central electronic module (CEM) F4-F14

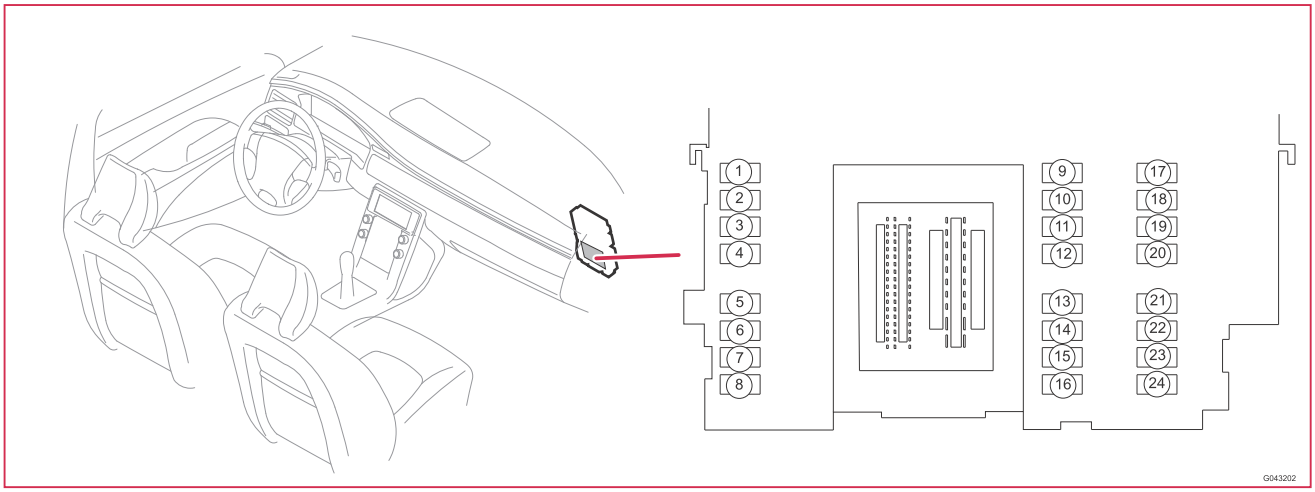

4/56 Central Electronic Module (CEM)

No.	Fuse function		via	A
F4	5/1	Driver Information Module (DIM)	-	5
F5	4/80	Forward Sensing Module (FSM)	-	10
	7/203	Forward-aimed radar (FLR)	-	
	19/4	Analog clock	-	
F6	4/76	Remote control unit for garage door opener	-	7.5
	7/149	Rain Sensor Module (RSM)	-	
	10/22	Ceiling light	-	
	10/114	Left-hand front vanity mirror lighting	-	
	10/115	Right-hand front vanity mirror lighting	-	
	10/150	Rear reading light	-	
F7	3/4	Steering wheel switch left (SWSL)	3/130	7.5
	3/130	Steering Wheel Module (SWM)	-	
	3/131	Steering wheel switch right (SWSR)	3/130	
F8	6/37	Lock motor, fuel filler cover	-	10
F9	4/148	Heated Steering Wheel Module (HSWM)	-	15
	6/127	Washer motor	-	
F10	6/127	Washer motor	-	15
F11	6/8	Central locking motor, trunk lid	-	10
F12	6/141	Motor folding head restraint left	-	10
	6/142	Motor folding head restraint right	-	
	8/59	Rear left head restraint solenoid	-	
	8/60	Rear right head restraint solenoid	-	
F13	4/83	Fuel pump control module	relay in CEM	20
	6/33	Fuel pump	relay in CEM	
F14	3/112	Climate Control Module (CCM)	-	5

continues

Fuses
Central electronic module (CEM) F15-F24

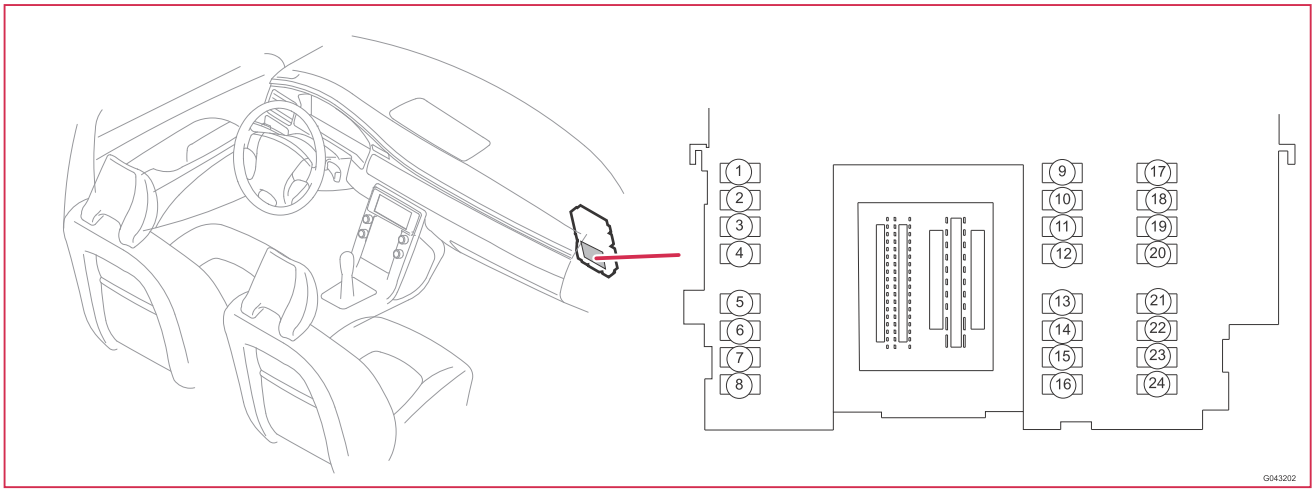

4/56 Central Electronic Module (CEM)

No.	Fuse function		via	A
F15	4/102	Steering Column Lock Module (SCL)	relay in CEM	15
F16	16/35 17/13	Siren Control Module (SCM) Data link connector	- -	5
F18	4/9 7/93	Supplemental restraint system module (SRS) Occupant Weight Sensor (OWS)	- -	10
F19	4/80 4/125 7/203	Forward Sensing Module (FSM) Closing velocity module (CVM) Forward-aimed radar (FLR)	- - -	5
F20	3/65 7/51 8/48 9/42	Switch, heated rear seat Accelerator pedal sensor Auto-dimming rearview mirror PTC-element	- - - -	7.5
F21	3/281 4/124 16/1	Infotainment Control Module (ICM) Accessory USB unit (AUU) Integrated Audio Module (IAM)	- - -	15
F22	3/9	Contact brake light	-	5
F23	4/33	Sunroof Module (SRM)	-	20
F24	3/1 16/65	Ignition switch Immobilizer antenna unit (IAU)	- -	5

Fuses
Passenger compartment

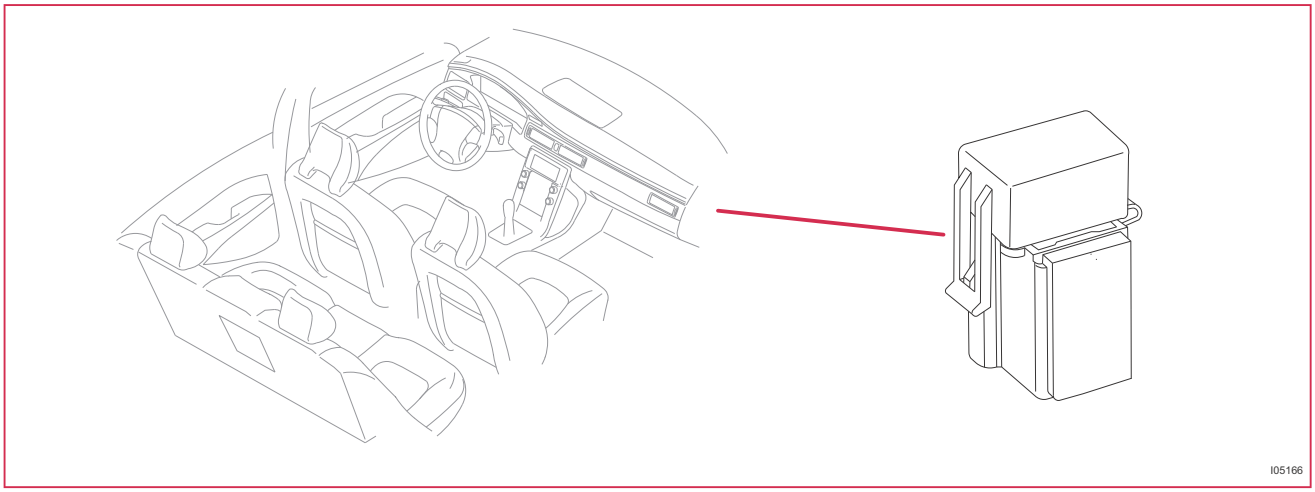

11 Fuse in extra fuse holder, passenger compartment

No.	Fuse function	via	A
1	19/4 Analog clock	-	5

Fuses
Distribution box in passenger compartment F1-F17

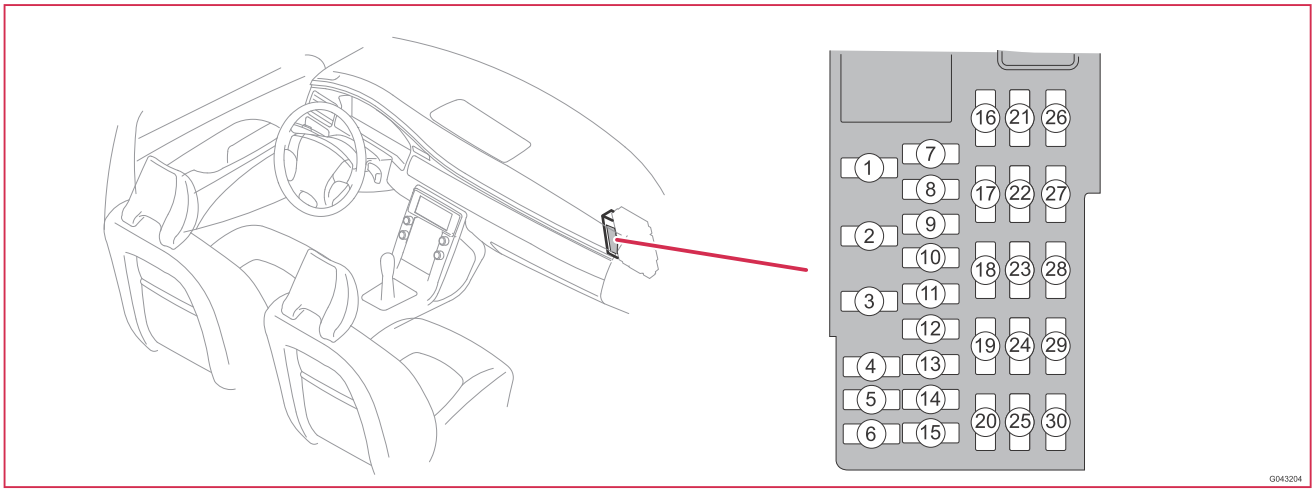

15/36 Distribution box in passenger compartment

No.	No.	Fuse function		via	A
F1	11C/1	11C/16-20 16/105	Fuses in distribution box passenger compartment Audio module (AUD)	- -	40
F4	11C/4	2/249 4/148	Relay heated steering wheel Heated Steering Wheel Module (HSWM)	- 2/249	
F7	11C/7	17/19	12 V outlet, cargo compartment	-	15
F8	11C/8	3/126	Driver Door Module (DDM)	-	20
F9	11C/9	3/127	Passenger Door Module (PDM)	-	20
F10	11C/10	3/129	Right rear door module (RDM)	-	20
F11	11C/11	3/128	Left rear door module (LDM)	-	20
F12	11C/12	4/93	Keyless Vehicle Module (KVM)	-	20
F13	11C/13	4/52	Power Seat Module (PSM)	-	20
F14	11C/14	3/27	Switch unit, power passenger seat	-	20
F15	11C/15	Spare		-	-
F16	11C/16	3/281 4/156	Infotainment Control Module (ICM) Accessory Connectivity Unit (ACU)	- -	5
F17	11C/17	16/36 16/105 16/145 16/162	TV receiver Audio module (AUD) Remote Digital Audio Receiver (RDAR) Digital Audio Broadcast Module (DABM)	- - - -	10

continues

Fuses
Distribution box in passenger compartment F18-F24

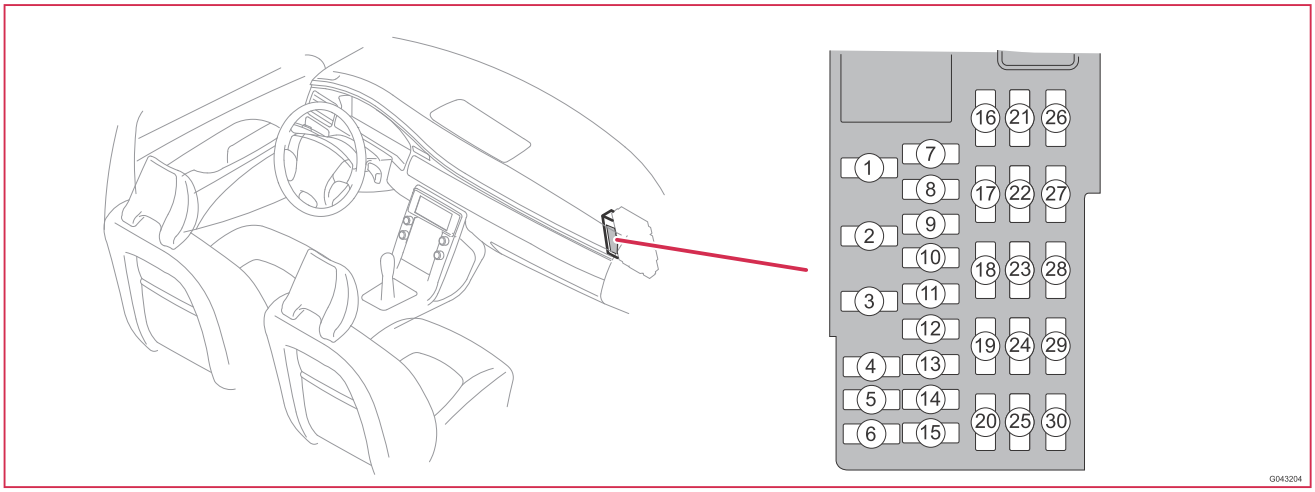

15/36 Distribution box in passenger compartment

No.	No.	Fuse function		via	A
F18	11C/18	3/281 4/124 16/1 16/159	Infotainment Control Module (ICM) Accessory USB unit (AUU) Integrated Audio Module (IAM) Control module, cellular phone handsfree (accessory)	- - - -	15
F19	11C/19	16/60	Phone Module (PHM)	-	5
F20	11C/20	16/109	DVD Player/control module	-	7,5
F21	11C/21	4/33 6/48 6/95 6/96 6/102 6/103 7/159	Sunroof Module (SRM) Damper Motor Module (DMM), recirculation Damper Motor Module (DMM), temperature, left side Damper Motor Module (DMM), temperature, right side Damper Motor Module (DMM), defroster Damper Motor Module (DMM), floor/ventilation Air Quality Sensor (AQS)	- - - - - - -	5
F22	11C/22	9/1 9/25 16/45 27/8	Outlet 12V front Outlet 12V rear Portable navigation system Camera, wide angle front	- - - -	15
F23	11C/23	9/15 4/131 4/147	Control module, right rear seat heater Control module back massage left Rear Seat Module (RSX)	- - -	15
F24	11C/24	9/14 4/133	Control module, left rear seat heater Control module back massage right	- -	15

continues

Fuses
Distribution box in passenger compartment F25-F30

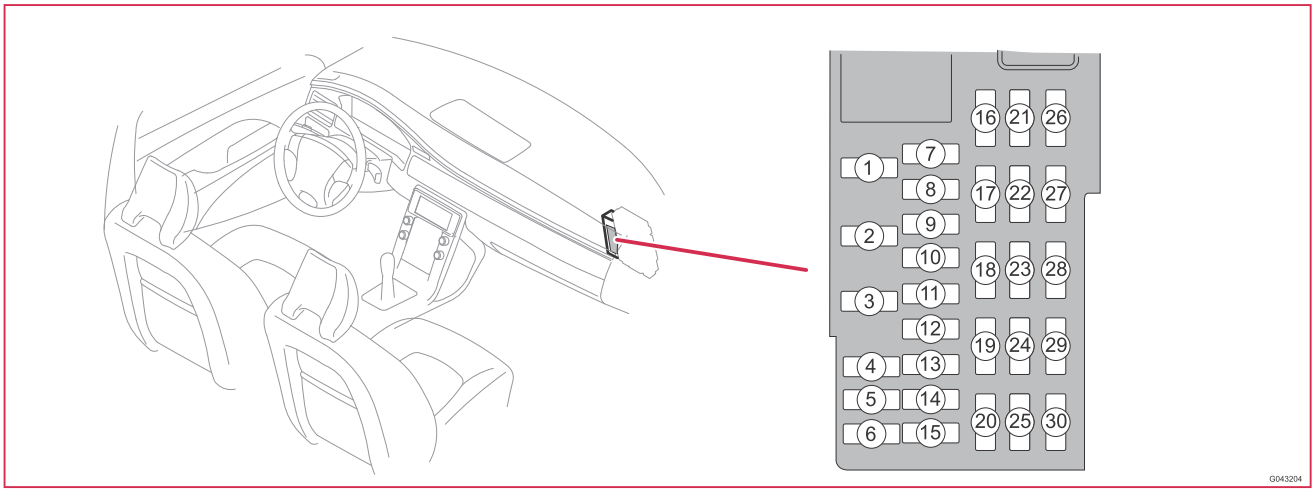

15/36 Distribution box in passenger compartment

No.	No.	Fuse function		via	A
F25	11C/25	2/141 4/131 4/133	Refrigeration box relay Control module back massage left Control module back massage right	- - -	15
F26	11C/26	9/13	Seat Heating Module (SHM), passenger side	-	15
F27	11C/27	9/12	Seat Heating Module (SHM), driver's side	-	15
F28	11C/28	4/86 4/110 4/120	Parking Assistance Module (PAM) Trailer Module (TRM) Parking Assistance Camera module (PAC)	- - -	5
F29	11C/29	4/82	Differential Electronic Module (DEM)	-	15
F30	11C/30	4/84 9/24	Suspension Module (SUM) Refrigeration box	-	10

Fuses
Distribution box in cargo compartment FA1-FA11

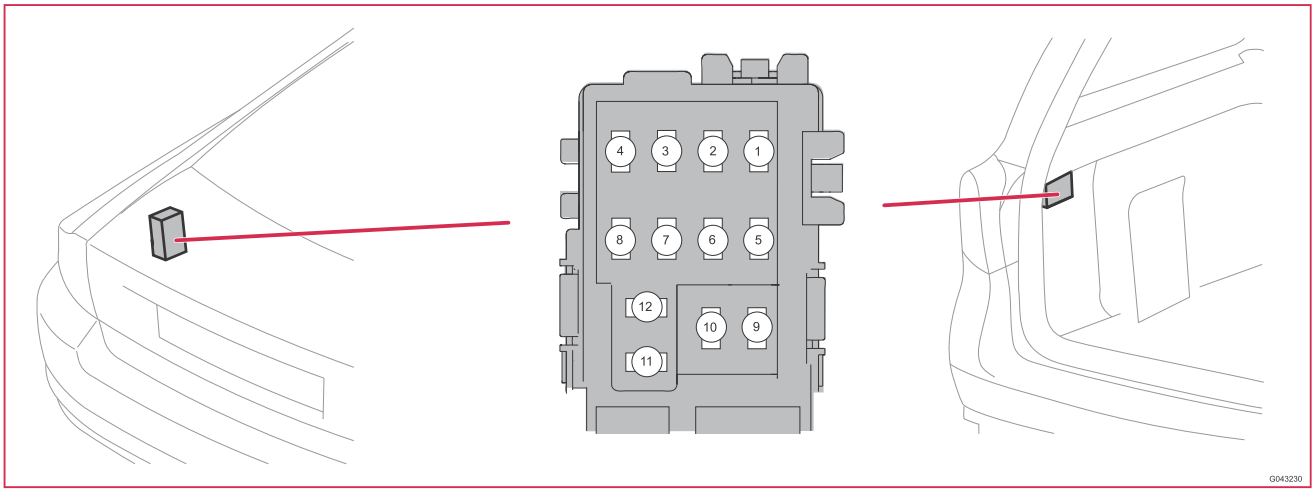

15/32 Distribution box in cargo compartment

No.	No.	Fuse function		via	A
FA1	11D/A1	4/115	Park Brake Module (PBM)	-	30
FA2	11D/A2	4/115	Park Brake Module (PBM)	-	30
FA3	11D/A3	2/82 4/56 9/2 16/141	Relay, heated rear window Central Electronic Module (CEM) Heated rear window, V70 Interference filter, rear window, left, S80	- 2/82 2/82 2/82	30
FA4	11D/A4	17/39	13-pin outlet, tow hitch cable harness	-	15
FA5	11D/A5	4/116 4/147	Power Operated Tailgate Module (POT) Rear Seat Module (RSX)	- -	30
FA6	11D/A6	4/147	Rear Seat Module (RSX)	-	20
FA11	11D/A11	4/110 17/19	Trailer Module (TRM) 12 V outlet, cargo compartment	-	40

Fuses
Distribution box in engine compartment, cold zone F1-MF2

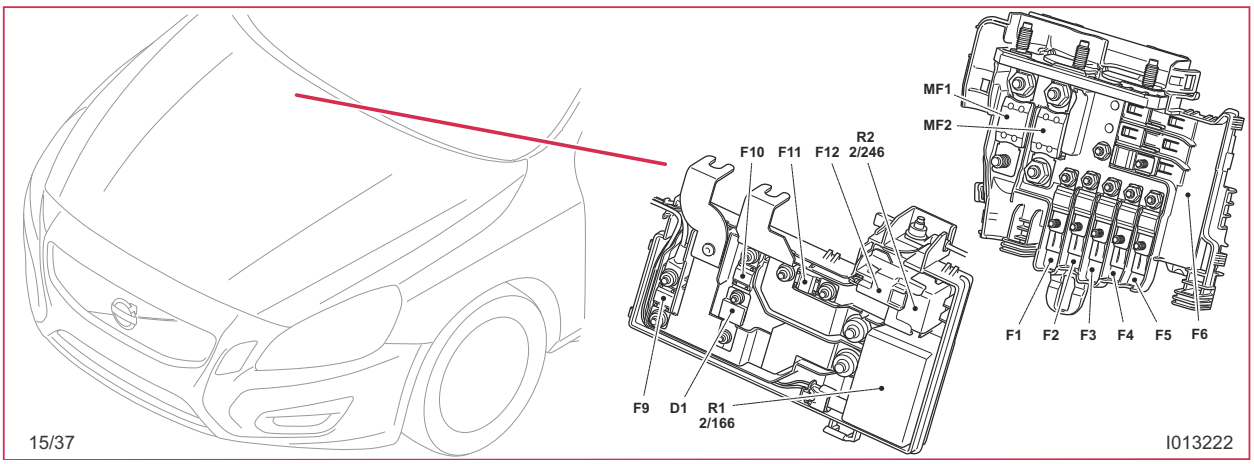

15/37 Distribution box cold zone in engine compartment, Start/Stop function

No.	No.	Fuse function		via	A
F1	11A/1	9/42	PTC-element	-	100
F2	11A/2	4/56	Central Electronic Module (CEM)	-	50
F3	11A/3	2/88 11C/21-11C/22	Relay, 15-feed rear Fuses in distribution box passenger compartment	- 2/193	60
F4	11A/4	2/193 11C/23-11C/30	Relay, comfort functions Fuses in distribution box passenger compartment	- 2/88	60
F5	11A/5	15/32	Distribution box in cargo compartment	-	60
F6	11A/6	4/31 6/28	Passenger compartment fan control module Motor, passenger compartment fan	- -	40
F7	11A/7	Spare		-	-
F8	11A/8	Spare		-	-
F9	11A/9	6/25	Starter motor	2/35	30
F10	11A/10	Diode D1		-	50
F11	M11	Secondary battery		2/246	70
F12	11B/12	4/56	Central Electronic Module (CEM)	-	15
MF1	MF1	11A/1-11A/8	Main fuses in distribution box in engine compartment (15/31)	-	175
MF2	MF2	11A/1-11A/8	Fuses in distribution box in cold zone engine compartment (15/37)	-	175

Fuses
Battery PF1-PF2

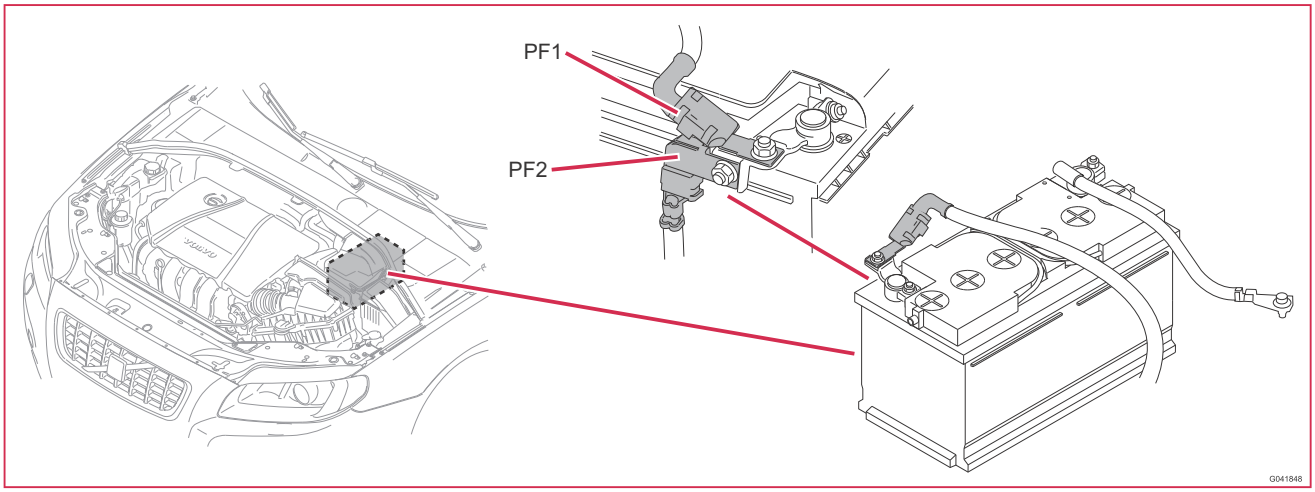

1/1 Battery

No.	Fuse function		via	A
PF1	11A/1-11A/7	Fuses in the engine compartment distribution box	-	150
	11B/8-11B/14	Fuses in the engine compartment distribution box	-	
	11B/16-11B/22	Fuses in the engine compartment distribution box	2/31	
	11B/23	Fuses in the engine compartment distribution box	-	
	11B/27-11B/32	Fuses in the engine compartment distribution box	-	
	11B/33	Fuses in the engine compartment distribution box	2/32	
	11B/34	Fuses in the engine compartment distribution box	-	
	11B/35-11B/41	Fuses in the engine compartment distribution box	2/32	
	11A/42-11A/44	Fuses in the engine compartment distribution box	-	
	15/37	Distribution box cold zone in engine compartment, Start/Stop function	-	
PF2	6/25	Starter motor	-	150
	6/26	Alternator Control Module (ACM)	-	

Relays
Relays in the engine compartment

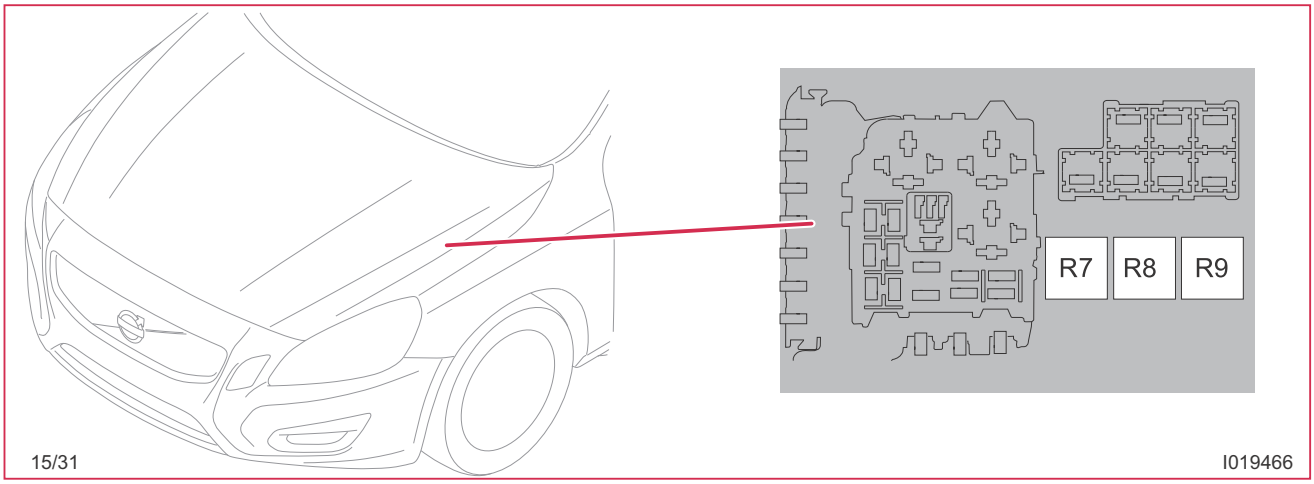

15/31 Distribution box engine compartment

Pos	Relay function	
R7	2/31	Relay, 15-feed
R8	2/17	Relay, horn
R9	2/182	Relay, headlight washer motor

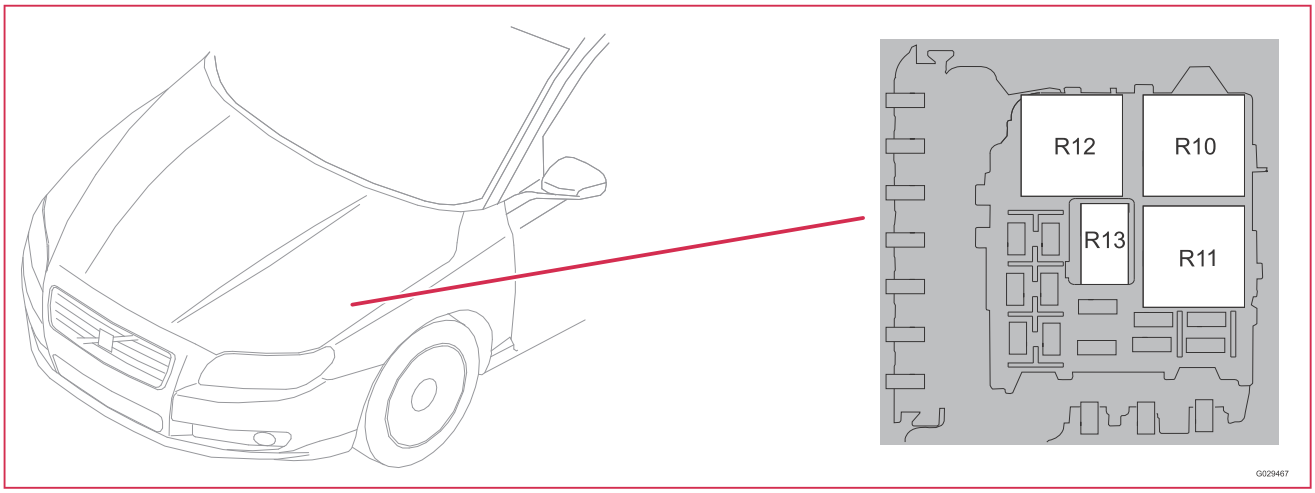

15/31 Distribution box engine compartment

Pos	Relay function	
R10	2/32	Main relay, engine management system
R11	2/14	Relay, diesel filter heater, 5-Cyl. Diesel
	2/14	Relay, coolant pump, 4-Cyl. 1.6L Turbo MAN
R12	2/35	Relay, starter motor
R13	2/22	Relay, climate control system

Relays
Relays in the engine compartment

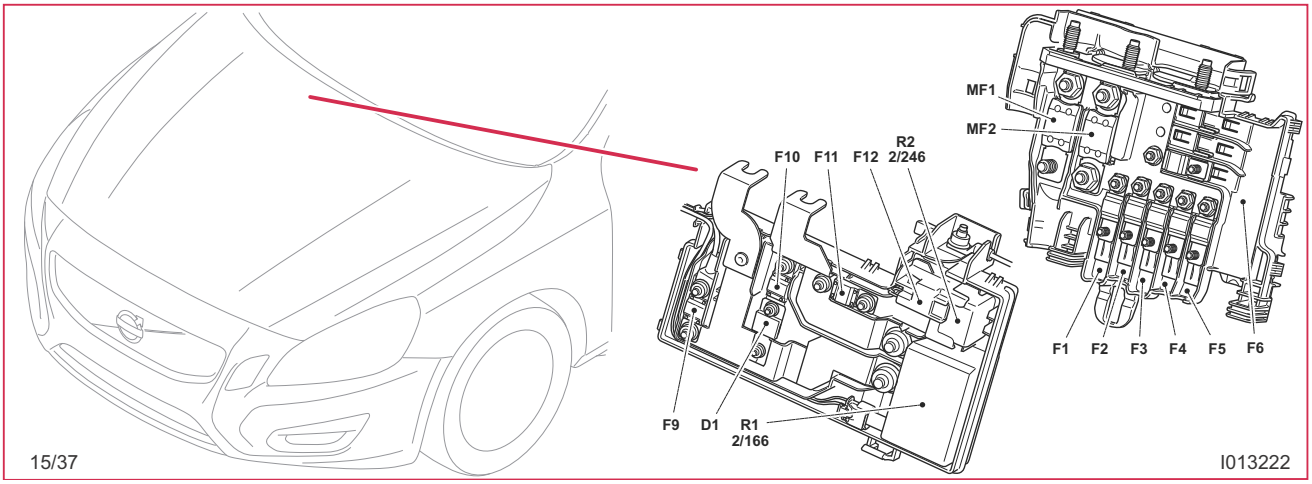

15/37 Distribution box engine compartment

Pos	Relay function	
R1	2/166	Battery relay
R2	2/246	Secondary battery relay

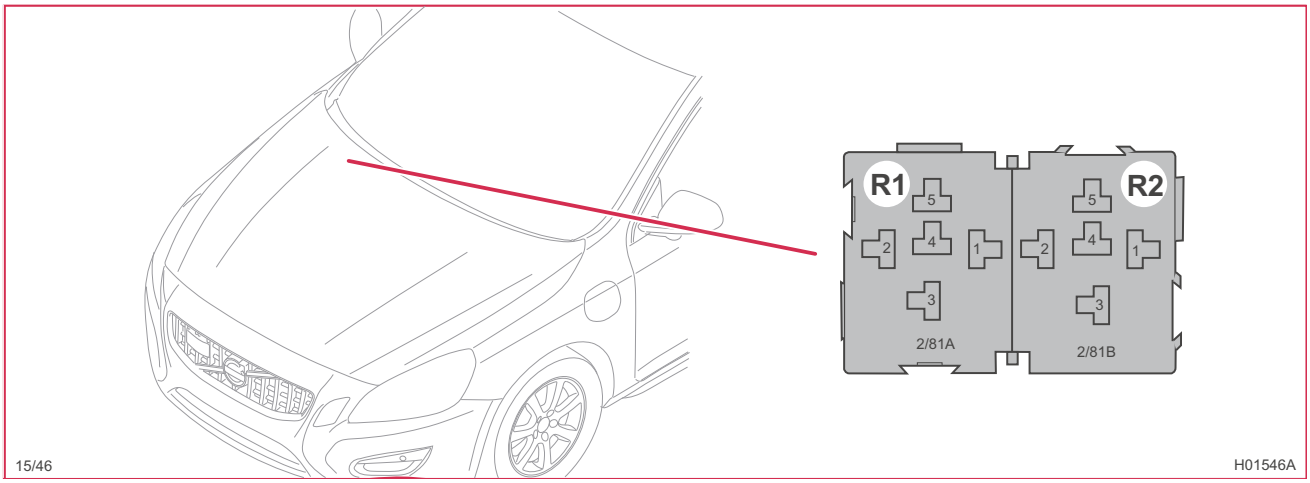

15/46 Relay box engine compartment

Pos	Relay function	
R1	2/81A	Relay, heated windshield passenger side
R2	2/81B	Relay, heated windshield driver's side

Relays
Relays in passenger compartment

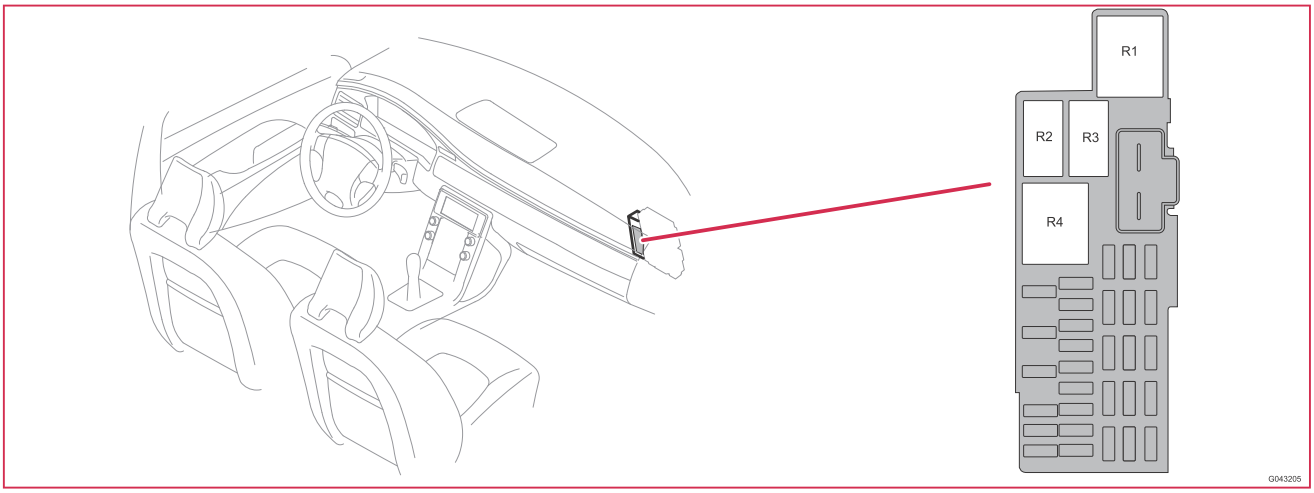

15/36 Distribution box in passenger compartment

Pos	Relay function	
R1	2/88	Relay, 15-feed
R2	2/249	Relay, heated steering wheel
R4	2/193	Relay, comfort functions

Relays
Relays in cargo compartment

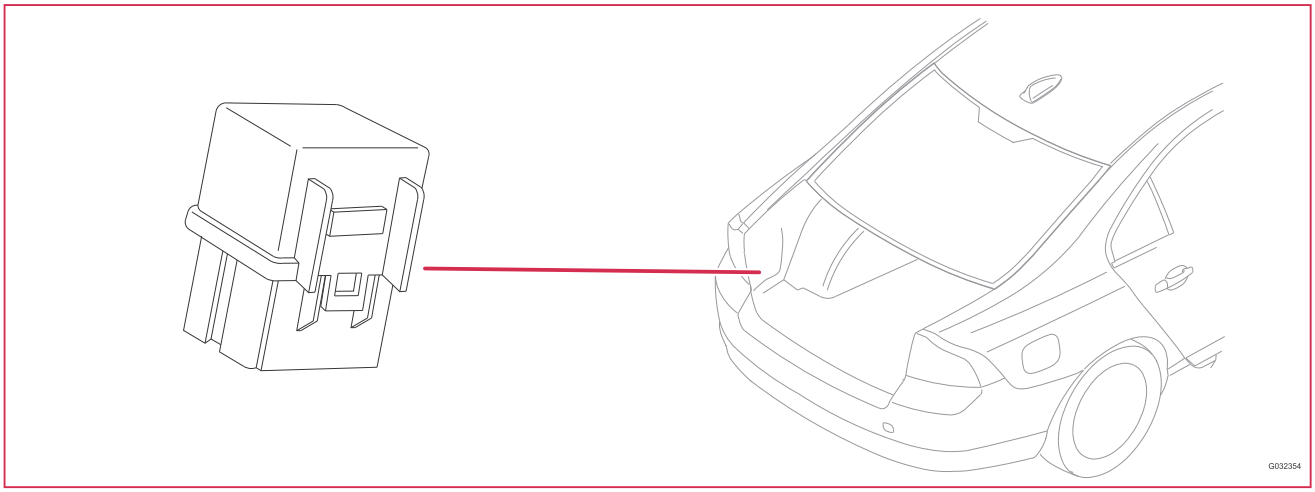

Relay in extra holder cargo compartment

Relay function	
2/141	Refrigeration box relay

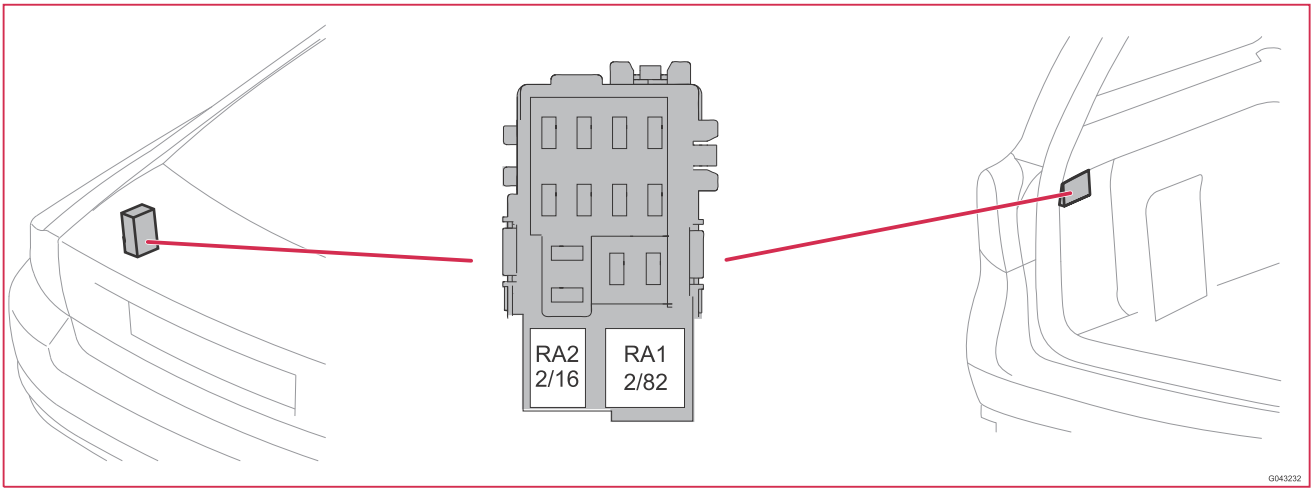

15/32 Distribution box in cargo compartment

Pos	Relay function	
RA1	2/82	Relay, heated rear window
RA2	2/16	Relay, rear window wiper
	2/64	Relay, auxiliary lights

Ground connections
Overview

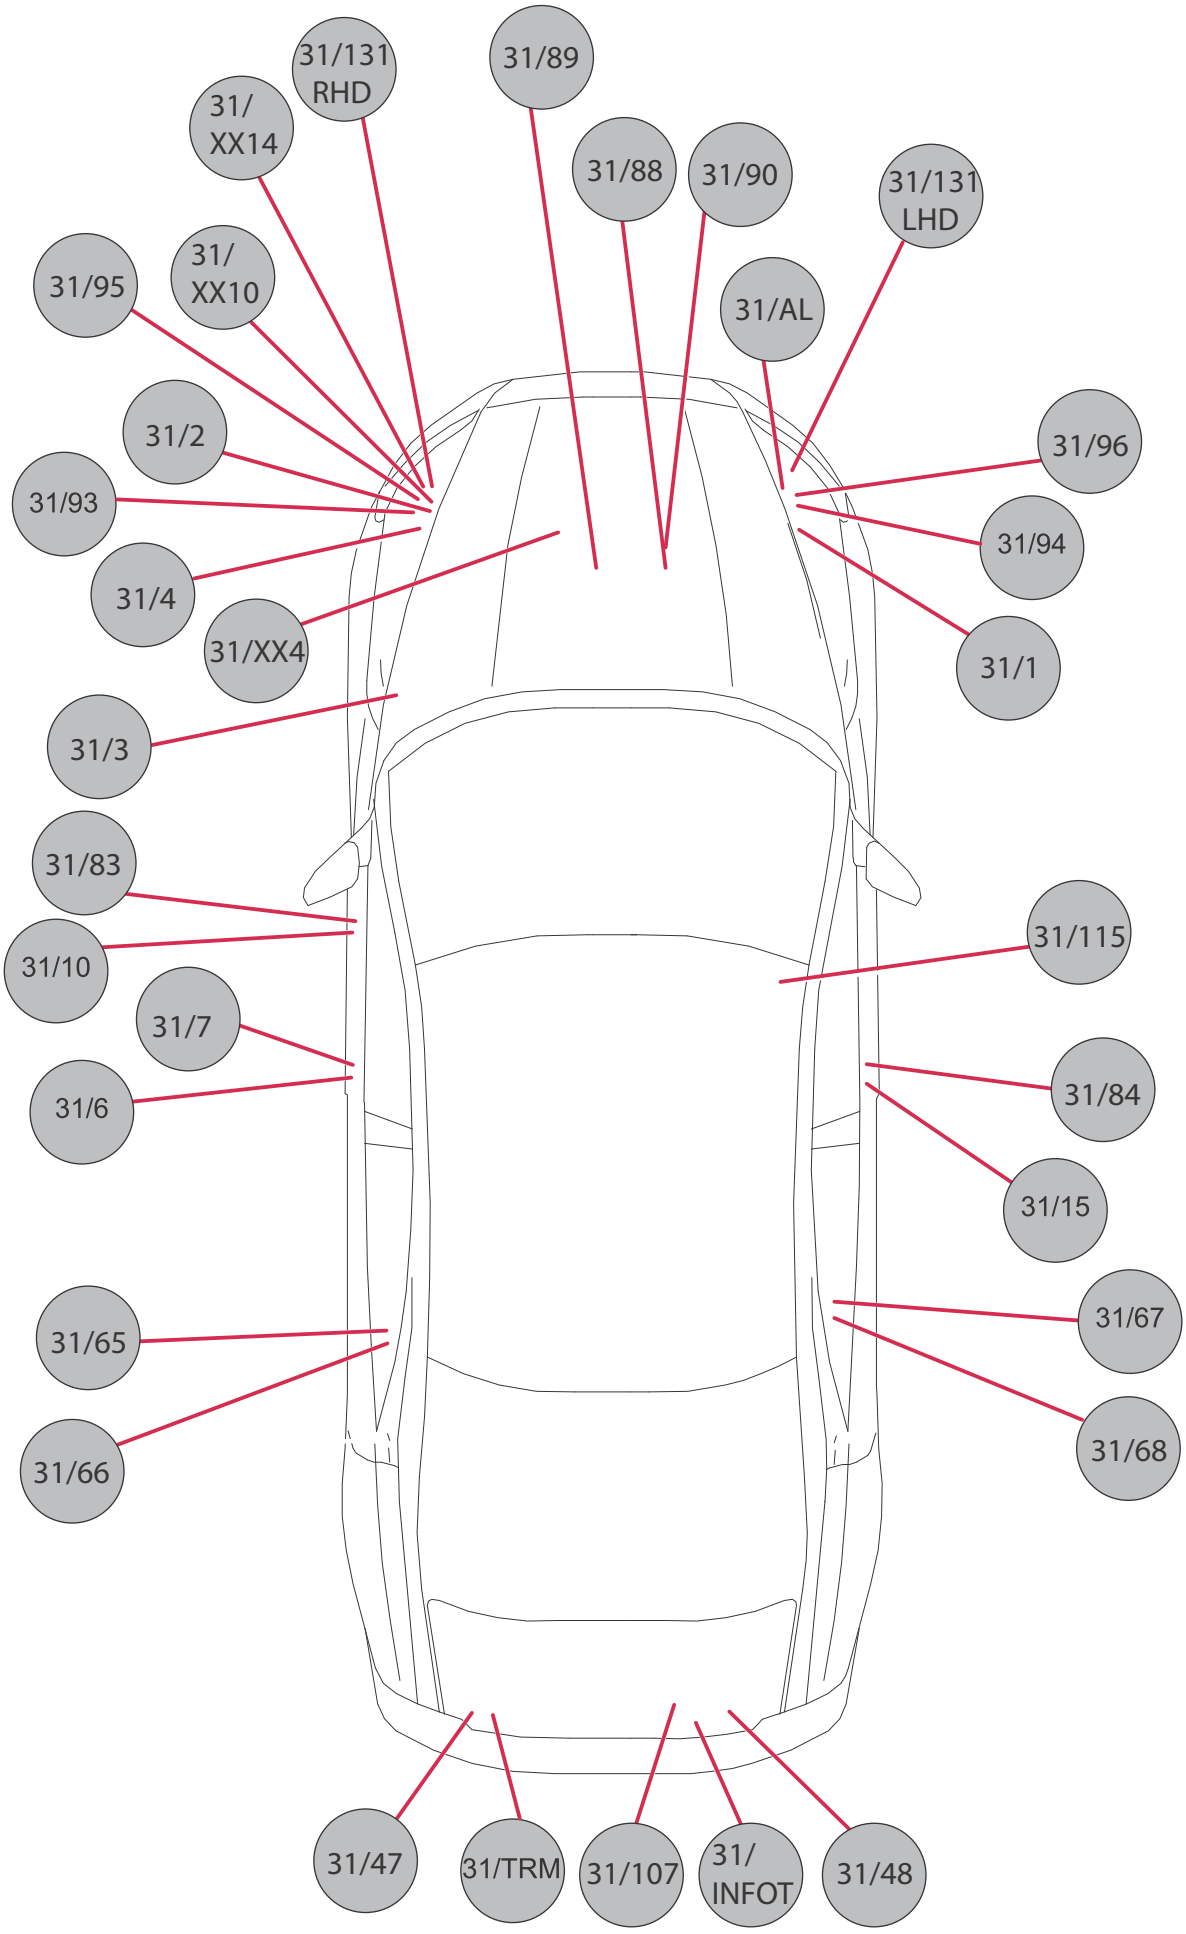

Ground connections
31/1 - 31/6

31/1	Ground connection, PTC
9/42	PTC-Element

31/2	Left wheel housing
4/71	Cooling fan control module

31/3	Body, battery
1/1	Battery
7/240	Battery monitoring sensor (BMS)

31/4	Engine
31/XX4	Ground connection

31/6	Bottom rail, left
3/27	Switch unit, power passenger seat, RHD
3/74	Left-hand front door lock unit
3/76	Lock unit, rear left door
3/126	Driver Door Module (DDM), LHD
3/127	Passenger Door Module (PDM), RHD
3/128	Left rear door module (LDM)
3/176	Switch, driver’s door power window, LHD
3/273	Lock contact, left front door
3/275	Lock contact, left rear door
4/52	Power Seat Module (PSM), LHD
9/12	Seat Heating Module (SHM), driver’s side, LHD
9/13	Seat Heating Module (SHM), passenger side, RHD
10/72	Front ashtray lighting, LHD
10/161	Lighting, mug holder, LHD
10/286	Lighting, floor driver’s side, LHD
10/287	Lighting, floor passenger side, LHD
16/1	Integrated Audio Module (IAM), RHD
16/159	Control module, cellular phone handsfree, RHD
19/4	Analog clock, LHD

Ground connections
31/7 - 31/10

31/7	Bottom rail, left
3/271	Contact, immobilizer, clutch pedal, LHD
3/284	Diagnostic contact, brake light, LHD
3/281	Infotainment Control Module (ICM), RHD
4/56	Central Electronic Module (CEM), RHD
4/156	Accessory Connectivity Unit (ACU), RHD
7/51	Accelerator pedal sensor, LHD
7/93	Occupant Weight Sensor (OWS), RHD
7/175	Occupant weight sensor, seat belt reminder, RHD
8/51	Igniter side airbag front driver's seat, LHD
8/52	Igniter side airbag front passenger seat, RHD
9/13	Seat Heating Module (SHM), passenger side, RHD
16/1	Integrated Audio Module (IAM), RHD
16/36	Television module (TVM), RHD
16/109	DVD player/control module. RHD
16/123	Auxiliary equipment input (AUX), LHD
16/145	Remote Digital Audio Receiver (RDAR), RHD
16/162	Digital Audio Broadcast Module (DABM), RHD

31/10	Bottom rail, left
3/6	Switch, hazard warning flashers
3/173	Switch, trunk lid/tailgate private lock
4/31	Passenger compartment fan control module
4/33	Sunroof control module
4/80	Forward Sensing Module (FSM)
4/102	Steering Column Lock Module (SCL)
4/119	Remote Keyless Entry (RKE)
4/119.2	Remote Receiver Module (RRX)
4/125	Closing velocity module (CVM)
6/48	Damper Motor Module (DMM), recirculation
6/95	Damper Motor Module (DMM), temperature, left side
6/96	Damper Motor Module (DMM), temperature, right side
6/102	Damper Motor Module (DMM), defroster
6/103	Damper Motor Module (DMM), floor/ventilation
7/149	Rain Sensor Module (RSM)
7/159	Air Quality Sensor (AQS)
7/199	Ultrasonic sensor
8/48	Auto-dimming rearview mirror
10/22	Ceiling light
10/29	Glove compartment lighting

Continues

Ground connections
31/10 - 31/15

31/10	Bottom rail, left (continued)
10/114	Left-hand front vanity mirror lighting
10/115	Right-hand front vanity mirror lighting
17/13	Data link connector
17/45	Alcolock outlet
26/8	Alcolock charging cradle

31/15	Bottom rail, right
3/27	Switch unit, power passenger seat, LHD
3/65	Switch, heated rear seat, RHD
3/75	Right-hand front door lock unit
3/77	Lock unit, rear right door
3/126	Driver Door Module (DDM), RHD
3/127	Passenger Door Module (PDM), LHD
3/129	Right rear door module (RDM)
3/156	Gear Selector Module (GSM), RHD
3/176	Switch, driver’s door power window, RHD
3/274	Lock contact, right front door
3/276	Lock contact, right rear door
4/52	Power Seat Module (PSM), RHD
8/134	Solenoid, reverse interlock, manual
9/1	Front 12 V outlet
9/12	Seat Heating Module (SHM), driver’s side, RHD
9/13	Seat Heating Module (SHM), passenger side, LHD
9/25	Rear 12 V outlet, RHD
10/72	Front ashtray lighting, RHD
10/161	Lighting, mug holder, RHD
10/286	Lighting floor driver’s side, RHD
10/287	Lighting floor passenger side, RHD
16/45	Navigation system portable, RHD
19/4	Analog clock, RHD
27/8	Camera, wide angle front

Ground connections
31/47 - 31/65

31/47	Rear bumper abutment, left
2/16	Rear window wiper relay, V70
3/35	Switch, handle, trunk lid/tailgate
4/110	Trailer Module (TRM), S80
4/115	Park Brake Module (PBM)
4/116	Power Operated Tailgate Module (POT), V70
6/8	Lock unit, trunk lid/tailgate
6/32	Rear window wiper motor, V70
6/149	Tailgate closing motor, V70
9/2	Heated rear window, V70
10/3	License plate lighting
10/17	Lamp housing, rear right V70
10/18	Lamp housing, rear left
10/19	Auxiliary brake light V70

31/48	Rear bumper abutment, right
2/141	Refrigeration box relay
4/93	Keyless Vehicle Module (KVM)
6/37	Lock motor, fuel filler cover
9/24	Refrigeration box
17/19	12V outlet, cargo compartment

31/65	Rear seat riser, left-hand side 1
3/35	Switch, handle, trunk lid/tailgate
4/82	Differential Electronic Module (DEM)
4/110	Trailer Module (TRM), V70
6/8	Lock unit, trunk lid/tailgate
6/141	Motor folding head restraint left
8/59	Rear left head restraint solenoid, S80
9/14	Control module, rear left seat heater
10/3	License plate lighting

Ground connections
31/66 - 31/83

31/66	Rear seat riser, left-hand side 2
4/83	Fuel pump control module
6/33	Fuel pump

31/67	Rear seat riser, right side 1
4/84	Suspension Module (SUM)
4/86	Parking Assistance Module (PAM)
6/142	Motor folding head restraint right
8/60	Rear right head restraint solenoid, S80
9/15	Control module, rear right seat heater

31/68	Rear seat riser, right side 2
6/35	Fuel pump, auxiliary heater
9/38	Electrically heated fuel filter

31/83	Bottom rail, left
3/111	Light Switch Module (LSM)
3/112	Climate Control Module (CCM)
3/130	Steering Wheel Module (SWM)
3/131	Steering wheel switch right (SWSR)
3/272	Parking brake contact
3/281	Infotainment Control Module (ICM)
4/124	Accessory USB unit (AUU)
4/148	Heated Steering Wheel Module (HSWM)
5/1	Driver Information Module (DIM)
9/42	PTC-element
16/60	Phone Module (PHM)
16/65	Immobilizer Antenna Unit (IAU)
17/13	Data link connector

Ground connections
31/84 - 31/90

31/84	Bottom rail, right
3/271	Contact, immobilizer, clutch pedal, RHD
3/281	Infotainment control module (ICM), LHD
3/284	Diagnostic contact, brake light, RHD
4/56	Central Electronic Module (CEM), LHD
4/156	Accessory Connectivity Unit (ACU), LHD
7/51	Accelerator pedal sensor, RHD
7/93	Occupant Weight Sensor (OWS), LHD
7/175	Weight sensor passenger seat, seat belt reminder, LHD
8/51	Igniter side airbag front driver's seat, RHD
9/13	Seat Heating Module (SHM), passenger side, LHD
16/1	Integrated Audio Module (IAM), LHD
16/36	Television module (TVM), LHD
16/109	DVD player/control module, LHD
16/123	Auxiliary equipment input (AUX), LHD
16/145	Remote Digital Audio Receiver (RDAR), LHD
16/162	Digital Audio Broadcast Module (DABM), LHD

31/88	Engine ignition coils
20/3	Spark plug with ignition coil, 4-Cyl. Turbo Spark plug with ignition coil, 5-Cyl. Turbo Spark plug with ignition coil, 6-Cyl.
20/4	Spark plug with ignition coil, 4-Cyl. Turbo Spark plug with ignition coil, 5-Cyl. Turbo Spark plug with ignition coil, 6-Cyl.
20/5	Spark plug with ignition coil, 4-Cyl. Turbo Spark plug with ignition coil, 6-Cyl. Turbo
20/6	Spark plug with ignition coil, 4-Cyl. Turbo Spark plug with ignition coil, 6-Cyl. Turbo

31/89	Engine ignition coils
20/5	Spark plug with ignition coil, 5-Cyl. Turbo Spark plug with ignition coil, 6-Cyl.
20/6	Spark plug with ignition coil, 5-Cyl. Turbo Spark plug with ignition coil, 6-Cyl.
20/7	Spark plug with ignition coil, 5-Cyl. Turbo Spark plug with ignition coil, 6-Cyl. Spark plug with ignition coil, 6-Cyl. Turbo
20/8	Spark plug with ignition coil, 6-Cyl. Spark plug with ignition coil, 6-Cyl. Turbo
20/16	Capacitor, 6-Cyl.

31/90	Engine ignition coils
20/3	Spark plug with ignition coil, 6-Cyl. Turbo
20/4	Spark plug with ignition coil, 6-Cyl. Turbo
20/16	Capacitor, 6-Cyl. Turbo

Ground connections
31/93 - 31/XX4

31/93	Left wheel housing 2
4/99	Speed dependent power steering control module
6/1	Wiper Motor Module (WMM)
6/104	Washer motor headlights
7/4	Brake fluid level sensor
7/5	Washer fluid level sensor
9/43	Heated windshield washer nozzle, left
9/44	Heated windshield washer nozzle, right
10/1	Lamp housing, front left
16/35	Siren Control Module (SCM)

31/94	Right wheel housing 2
4/7	Combustion Preheater Module (CPM)
4/106	Control module, remote parking heater start
10/2	Lamp housing, front right
16/10	Horn 1
16/11	Horn 2

31/95	Left wheel housing 3
4/56	Central Electronic Module (CEM), RHD
6/163	Electric power steering module (EPAS)
6/164	Electrohydraulic power steering module (EHPAS)

31/96	Right wheel housing 3
3/62	Hood alarm contact
4/56	Central Electronic Module (CEM), LHD
7/73	Coolant level sensor
7/203	Forward-aimed radar (FLR)
15/46	Relay box in engine compartment

31/107	Roof, rear
4/120	Parking Assistance Camera module (PAC)

31/115	Roof, left, A-Pillar
9/7	Heated windshield

31/131	Start/stop function
1/2	Secondary battery
9/42	PTC-Element

31/XX4	Engine - Body
31/4	Ground connection

Ground connections
31/XX10 - 31/AL

31/XX10	Left wheel housing 1
3/10	Reversing light contact
3/282	Switch indicator 1st gear, I5D
4/28	Transmission Control Module (TCM), AWF21 & AWF22
4/28B	Transmission Control Module (TCM), MPS6
4/46	Engine Control Module (ECM)
4/109	Glow plug control module
6/73	Coolant pump
6/139	Upper actuating motor, intake manifold
6/140	Lower actuating motor, intake manifold
6/179	Electric oil pump
7/200	Sensor, coolant temperature
7/243	Gear position sensor neutral position
8/3	Electromagnetic clutch, climate control system, 4-Cyl.
8/78	Pressure monitor power steering, 4-Cyl. Turbo
9/32	PTC resistor, crankcase ventilation
9/38	Electrically heated fuel filter, 4-Cyl. Diesel
20/3-6	Spark plug with ignition coil, 4-Cyl. Turbo

31/XX14	Left wheel housing 3 (ABS)
4/16	Brake Control Module (BCM)

31/TRM	Accessories
2/141	Refrigeration box relay
3/65	Switch, heated rear seat
3/104	Switch, sun curtain rear
3/324	Switch, rear seat adjustment, left-hand side
3/325	Switch, rear seat adjustment, right-hand side
3/299	Switch, passenger seat adjustment, rear seat
3/330	Switch, rear seat massage and ventilation, left
3/331	Switch, rear seat massage and ventilation, right
4/131	Control module back massage left
4/110	Trailer Module (TRM), Accessory
4/133	Control module back massage right
4/147	Rear Seat Module (RSX)
9/24	Refrigeration box
17/19	12 V outlet, cargo compartment
10/288	Lighting, overhead console
17/37	4-pin outlet, tow hitch cable harness
17/38	7-pin outlet, tow hitch cable harness
17/39	13-pin outlet, tow hitch cable harness

31/INFOT	Infotainment
16/1	Integrated Audio Module (IAM), LHD
16/105	Audio module (AUD)
16/159	Control module, cellular phone handsfree, LHD

31/AL	Auxiliary lights
10/65	Auxiliary light, front right
10/69	Auxiliary light, front left

Control modules
Overview locations

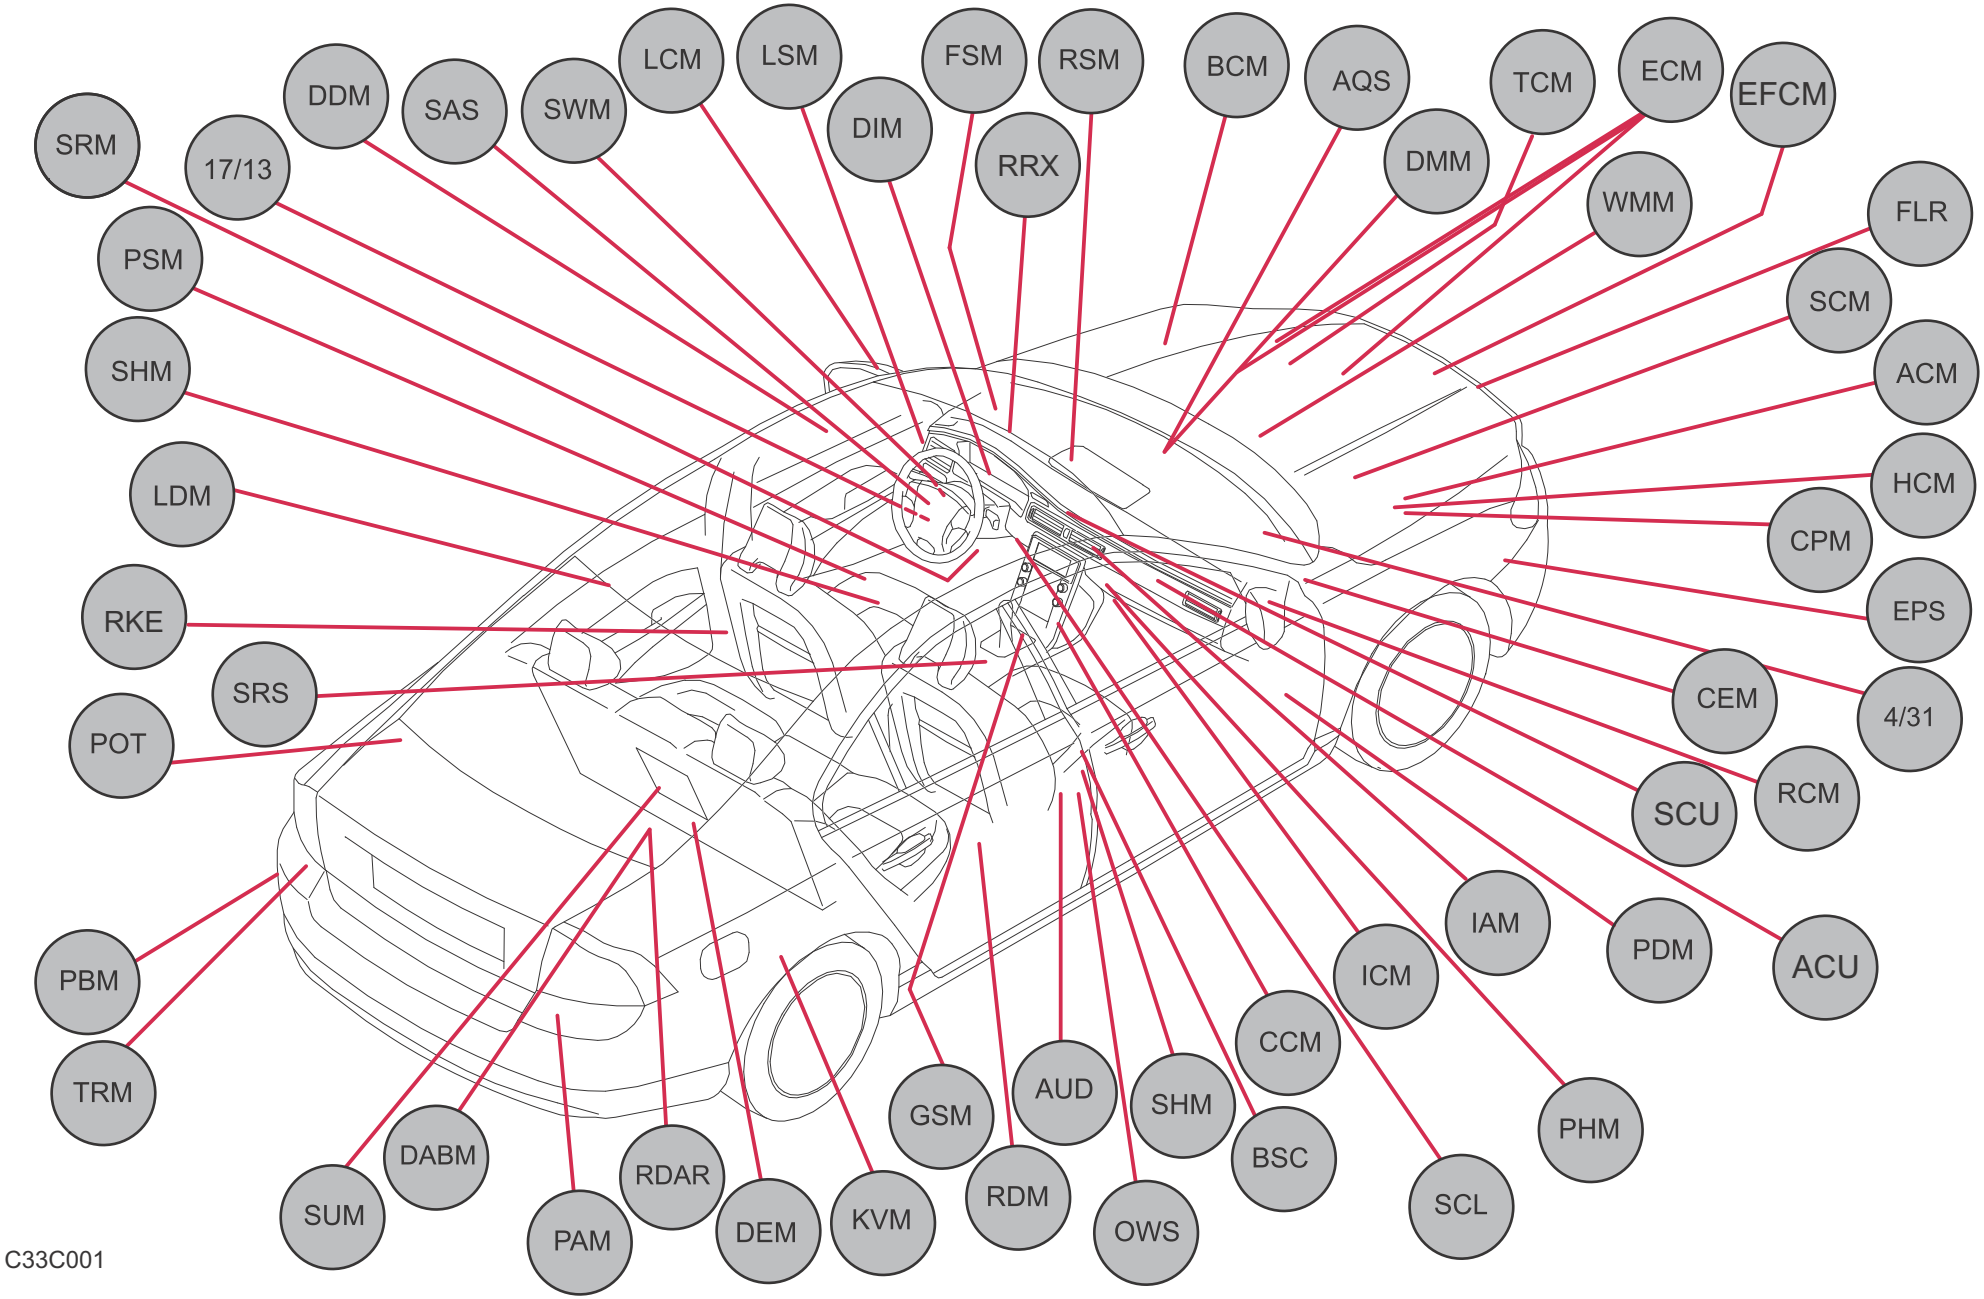

Control modules
Overview designations

Unit	Designation		Unit	Designation	
ACM	6/26	Alternator Control Module (ACM)	**PBM**	4/115	Park Brake Module (PBM)
AQS	7/159	Air Quality Sensor (AQS)	**PDM**	3/127	Passenger Door Module (PDM)
AUD	16/105	Audio module (AUD)	**PHM**	16/60	Phone Module (PHM)
BCM	4/16	Brake Control Module (BCM)	**PSM**	4/52	Power Seat Module (PSM)
CCM	3/112	Climate control module (CCM)	**RCM**	27/4	Right Camera Module (RCM)
CEM	4/56	Central Electronic Module (CEM)	**RDAR**	16/145	Remote Digital Audio Receiver (RDAR)
CPM	4/7	Combustion Preheater Module (CPM)	**RDM**	3/129	Right rear door module (RDM)
CVM	4/125	Closing velocity module (CVM)	**RKE**	4/119	Remote Keyless Entry (RKE)
DABM	16/162	Digital Audio Broadcast Module (DABM)	**RRX**	4/119.2	Remote Receiver Module (RRX)
DDM	3/126	Driver Door Module (DDM)	**RSM**	7/149	Rain Sensor Module (RSM)
DEM	4/82	Differential Electronic Module (DEM)	**SAS**	4/68	Steering Wheel Angle Sensor Module (SAS)
DIM	5/1	Driver Information Module (DIM)	**SCL**	4/102	Steering Column Lock Module (SCL)
DMM		Damper Motor Module (DMM)	**SCM**	16/35	Siren Control Module (SCM)
ECM	4/46	Engine Control Module (ECM)	**SHM**	9/12	Seat Heating Module (SHM) driver's side
EFCM	4/71	Cooling fan control module		9/13	Seat Heating Module (SHM) passenger side
FLR	7/203	Forward-aimed radar (FLR)	**SRM**	4/33	Sunroof control module
FSM	4/80	Forward Sensing Module (FSM)	**SRS**	4/9	Supplemental restraint system module (SRS)
GSM	3/156	Gear Selector Module (GSM)	**SUM**	4/84	Suspension Module (SUM)
IAM	16/1	Integrated Audio Module (IAM)	**SWM**	3/130	Steering Wheel Module (SWM)
ICM	3/281	Infotainment Control Module (ICM)	**TCM**	4/28	Transmission Control Module (TCM)
KVM	4/93	Keyless Vehicle Module (KVM)	**TRM**	4/110	Trailer Module (TRM)
LCM	27/3	Left Camera Module (LCM)	**WMM**	6/1	Wiper Motor Module (WMM)
LDM	3/128	Left rear door module (LDM)	**4/31**	4/31	Passenger compartment fan control module
LSM	3/111	Light Switch Module (LSM)	**4/33**	4/33	Sunroof control module
OWS	7/93	Occupant Weight Sensor (OWS)	**4/71**	4/71	Cooling fan control module
PAM	4/86	Parking Assistance Module (PAM)	**17/13**	17/13	Data link connector

Control modules
Central Electronic Module (CEM) 1:3

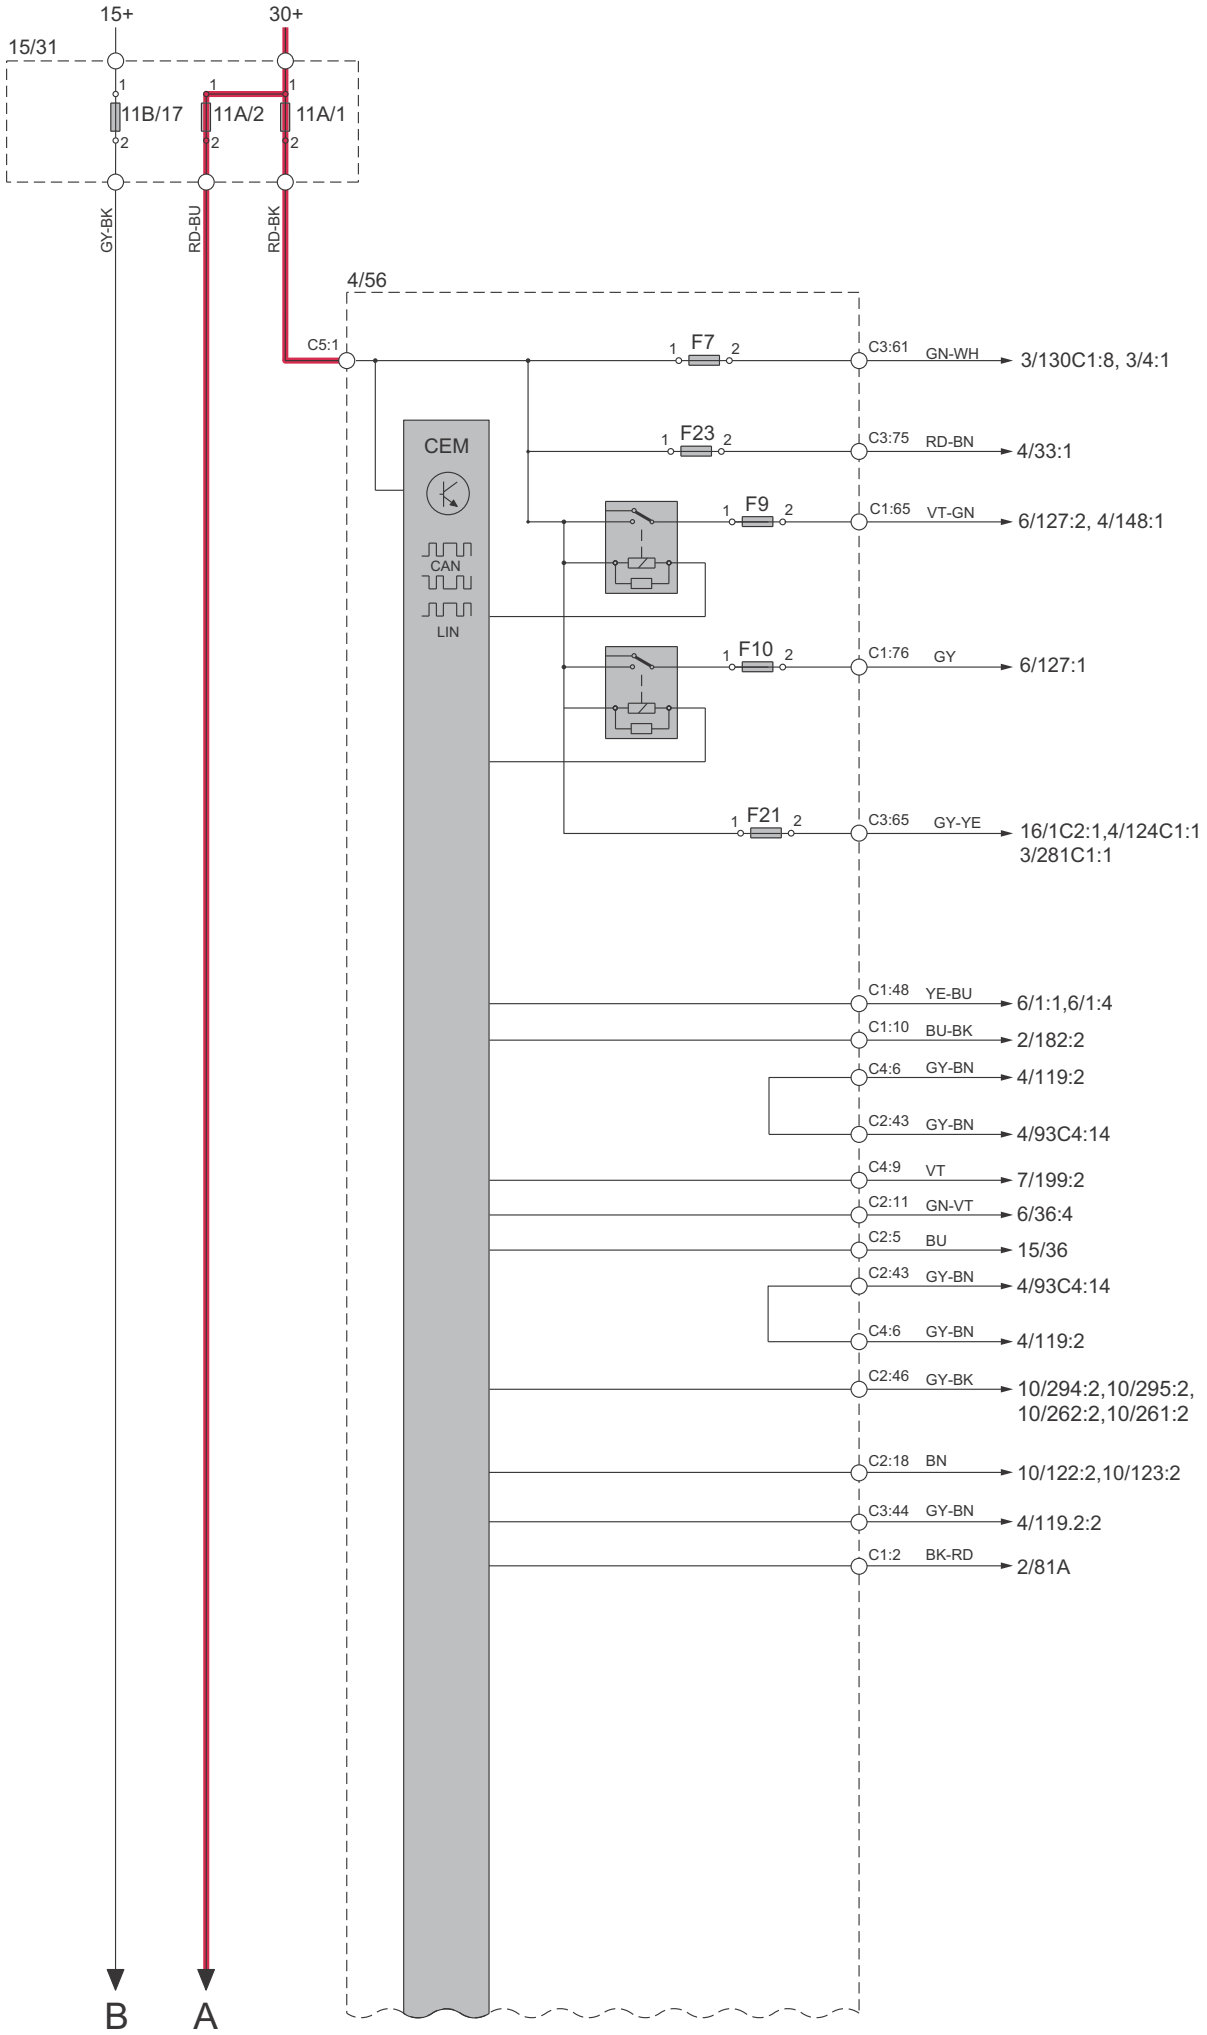

Control modules
Central Electronic Module (CEM) 2:3

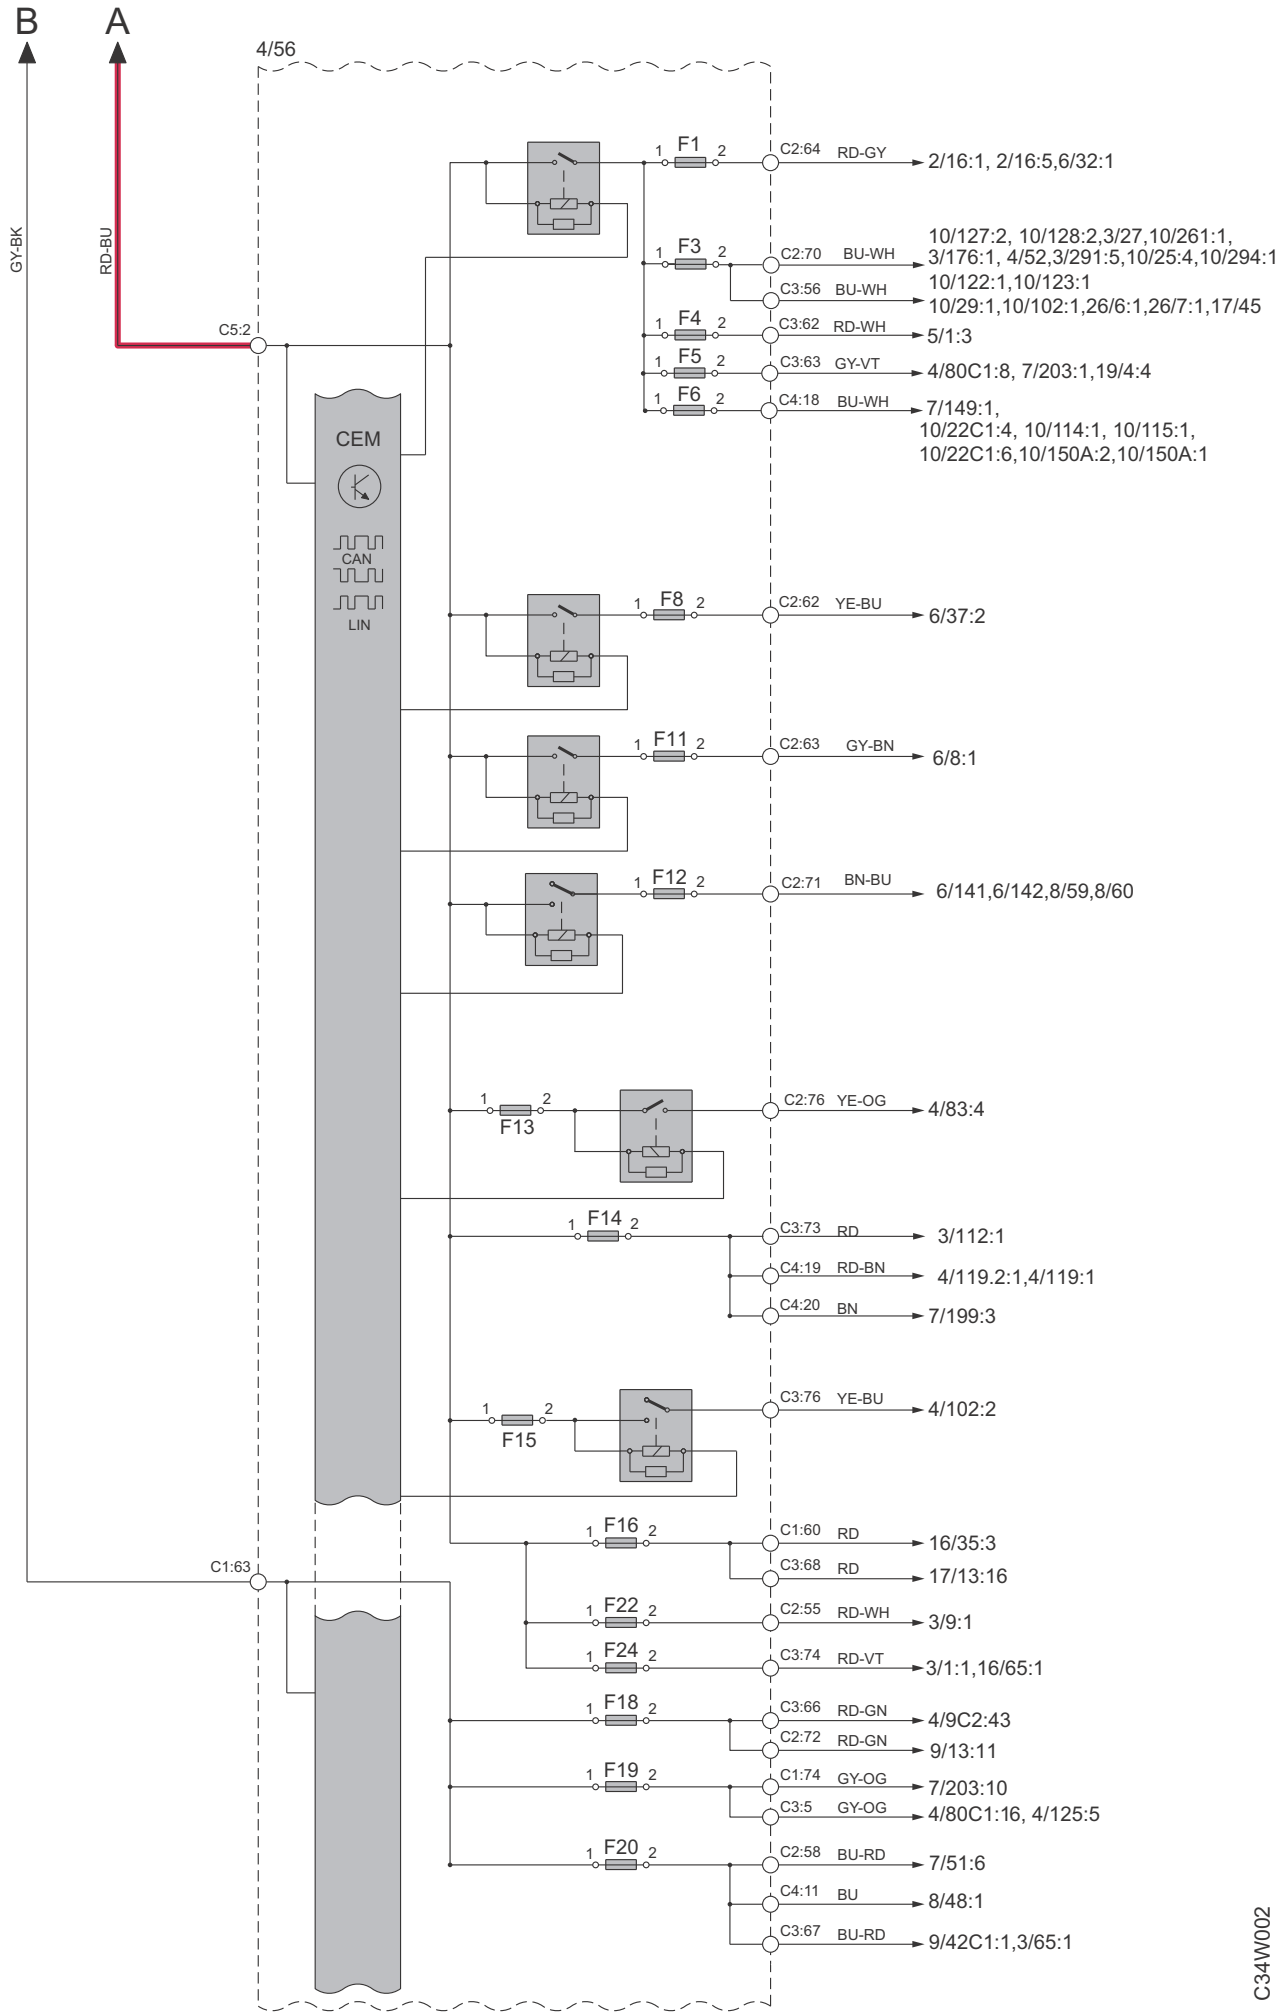

Control modules
Central Electronic Module (CEM) 3:3

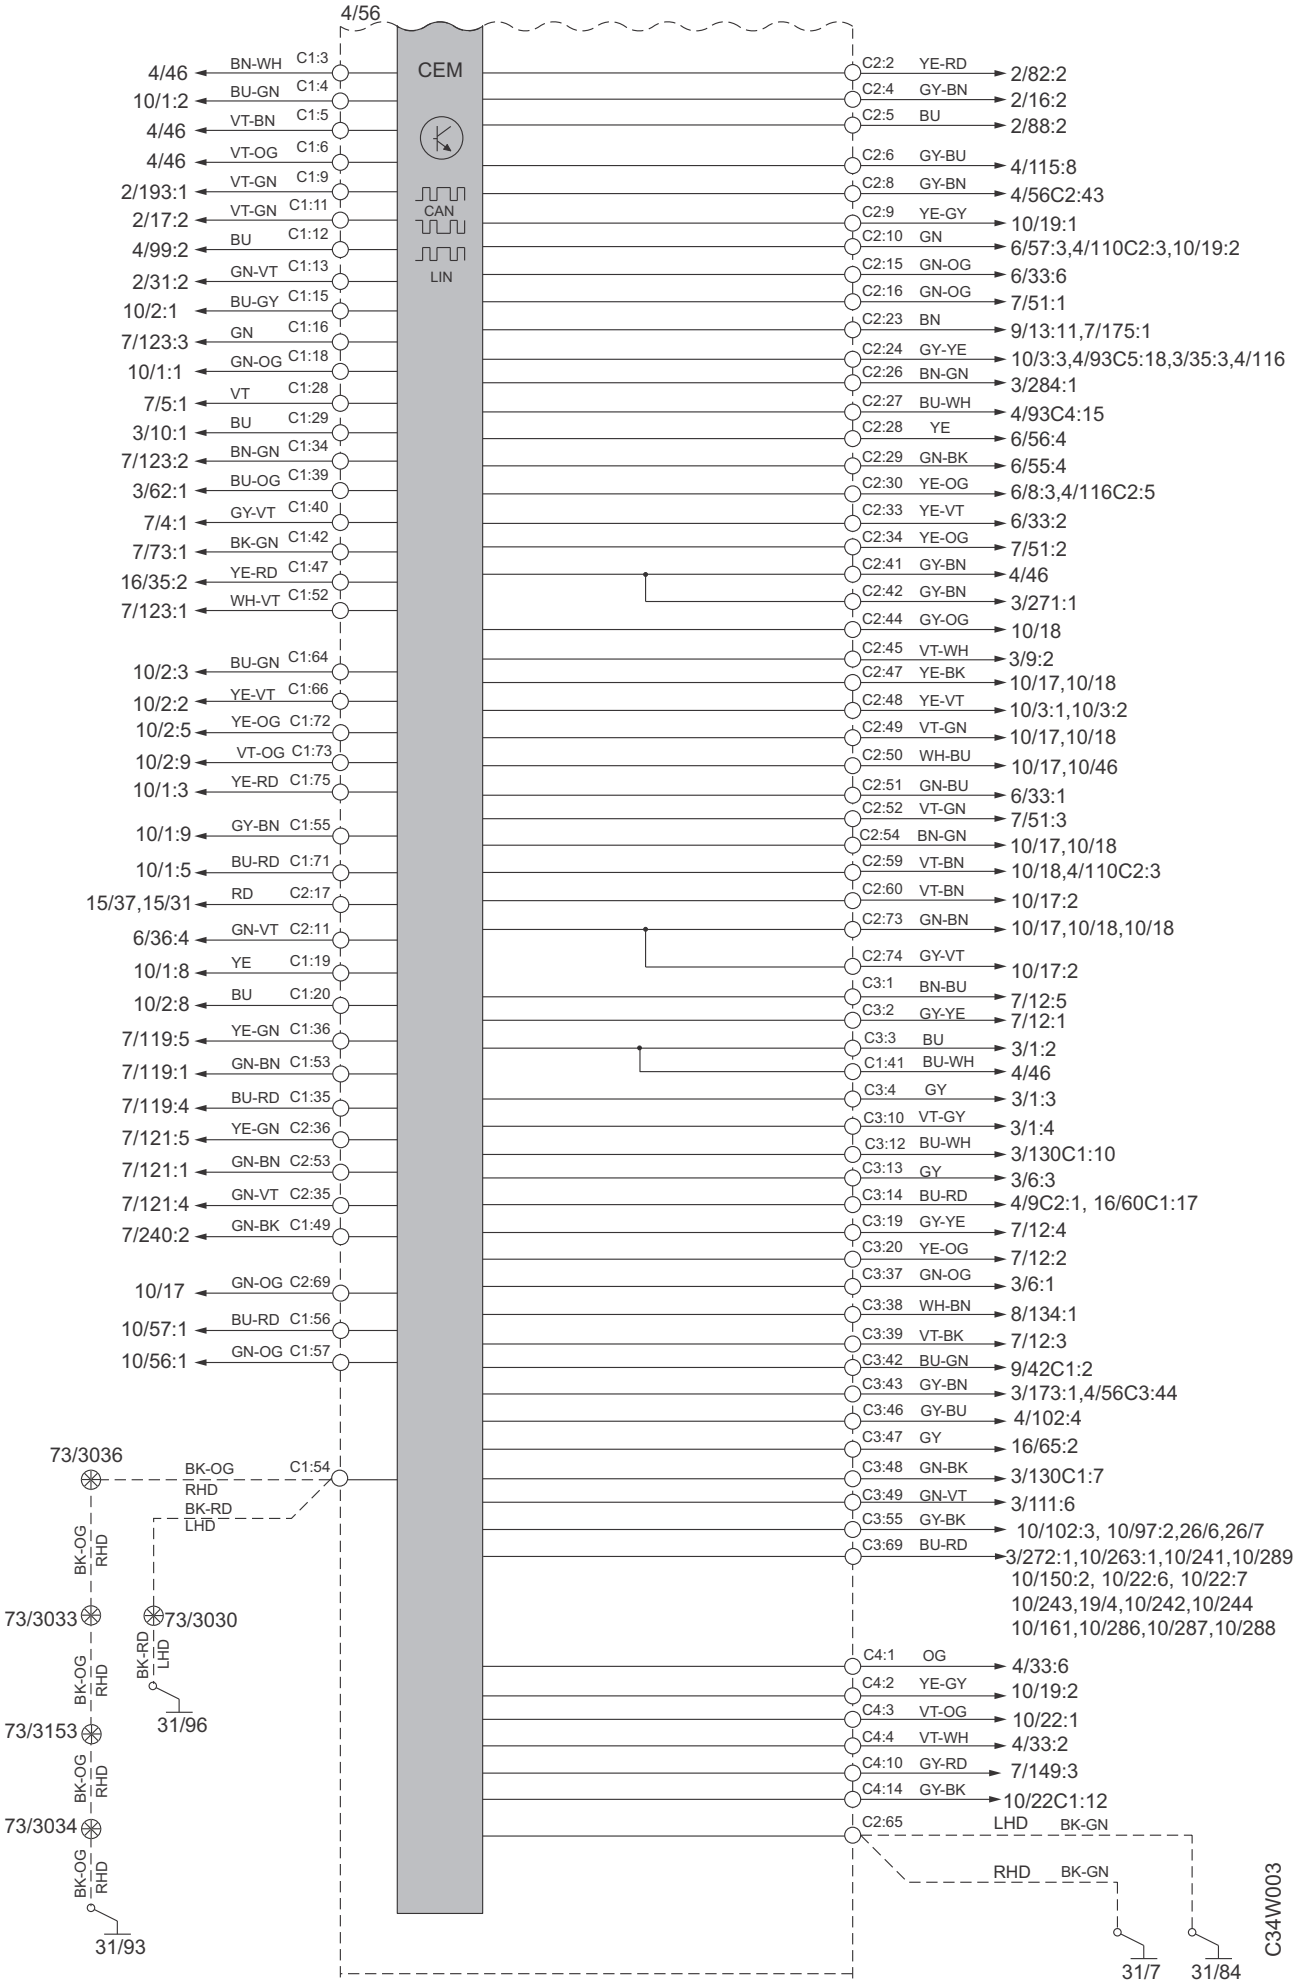

Control modules
Data communication high speed CAN exc. 4-Cyl.

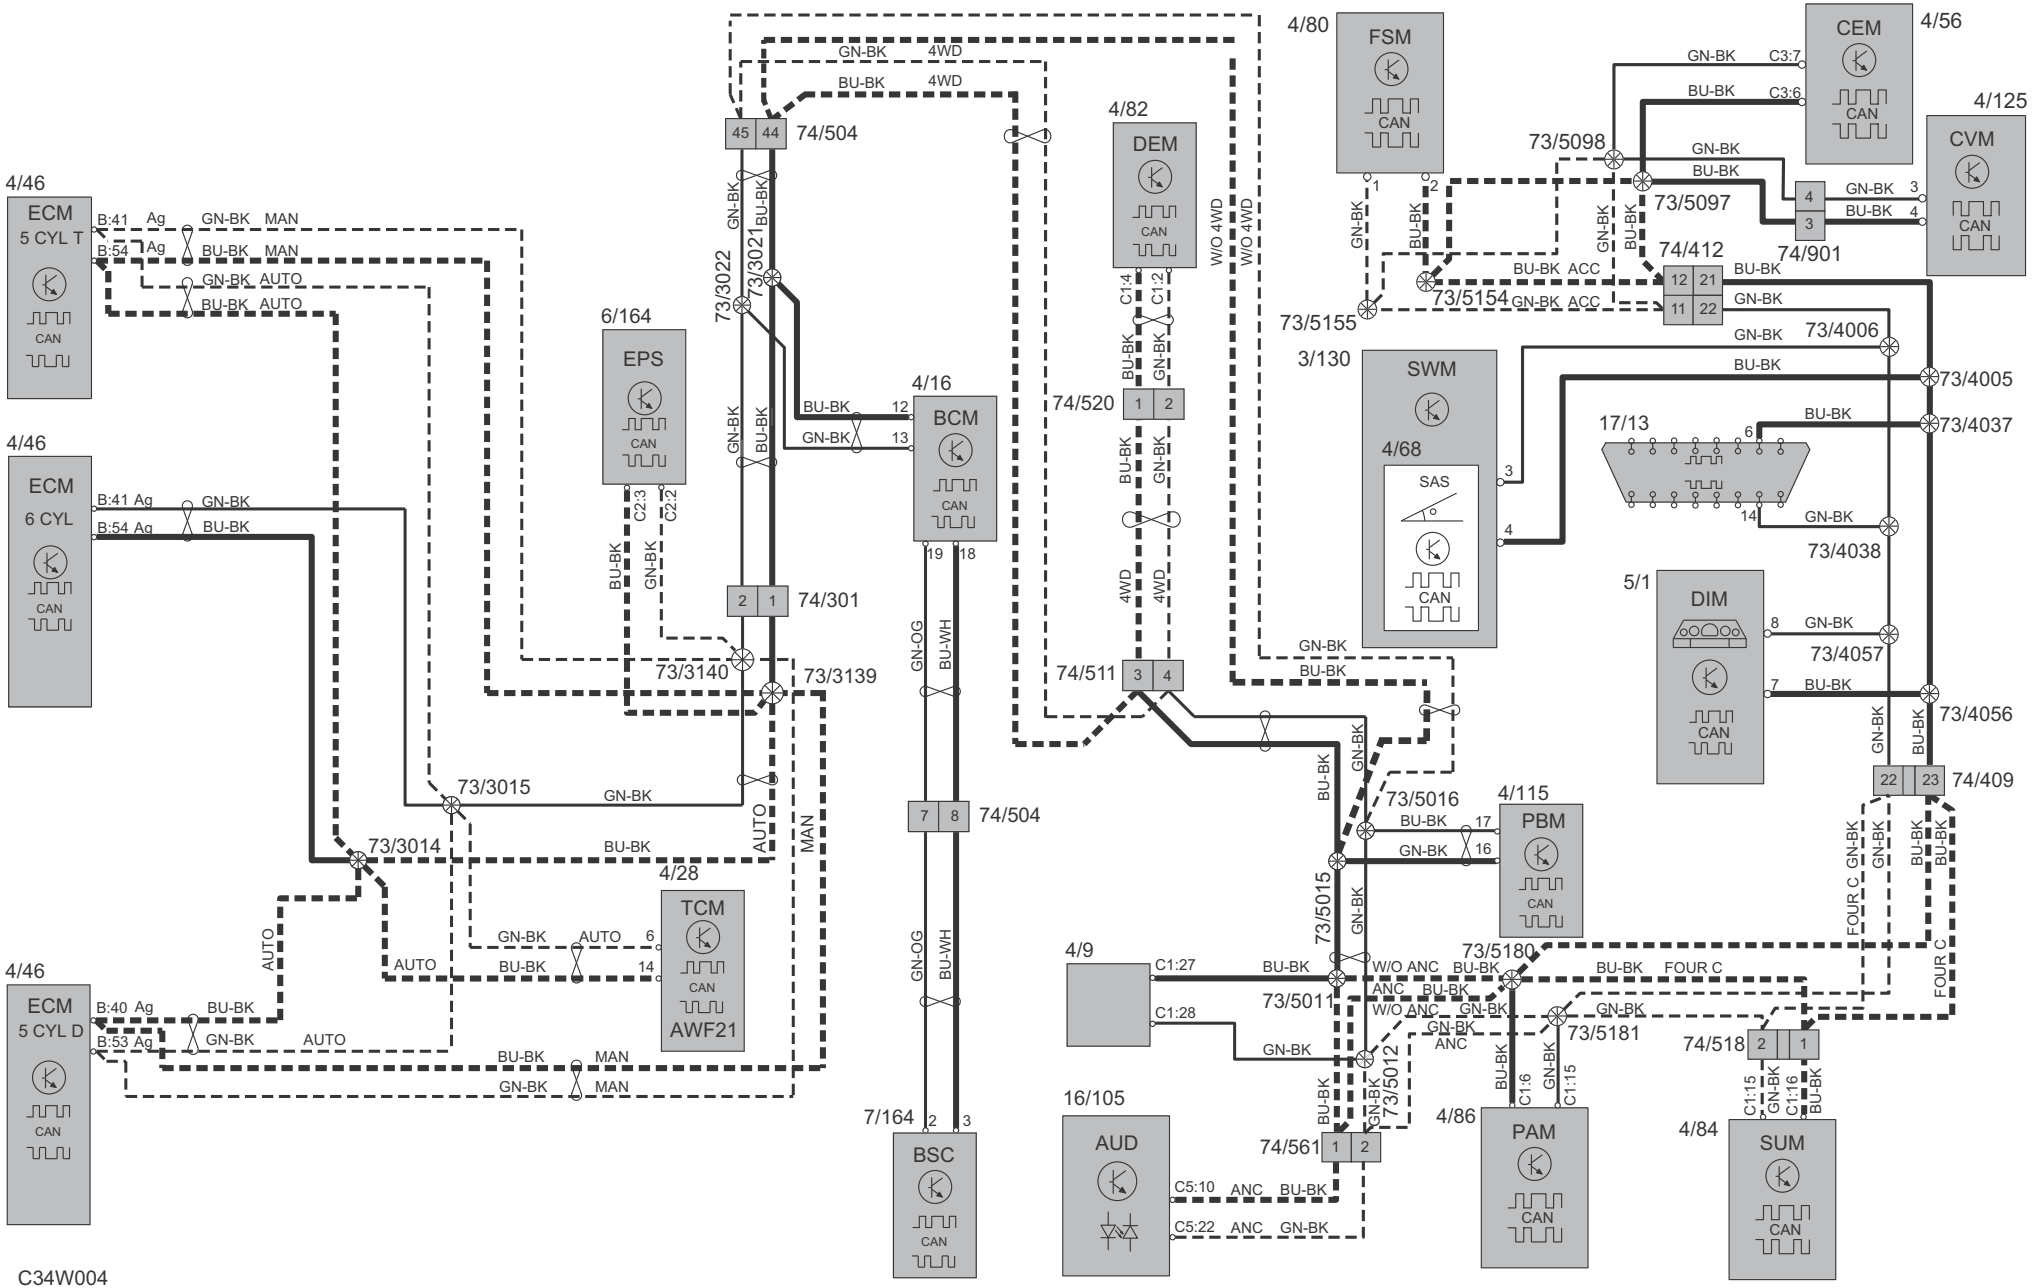

C34W004

Control modules
Data communication high speed CAN, 4-Cyl. 1.6L

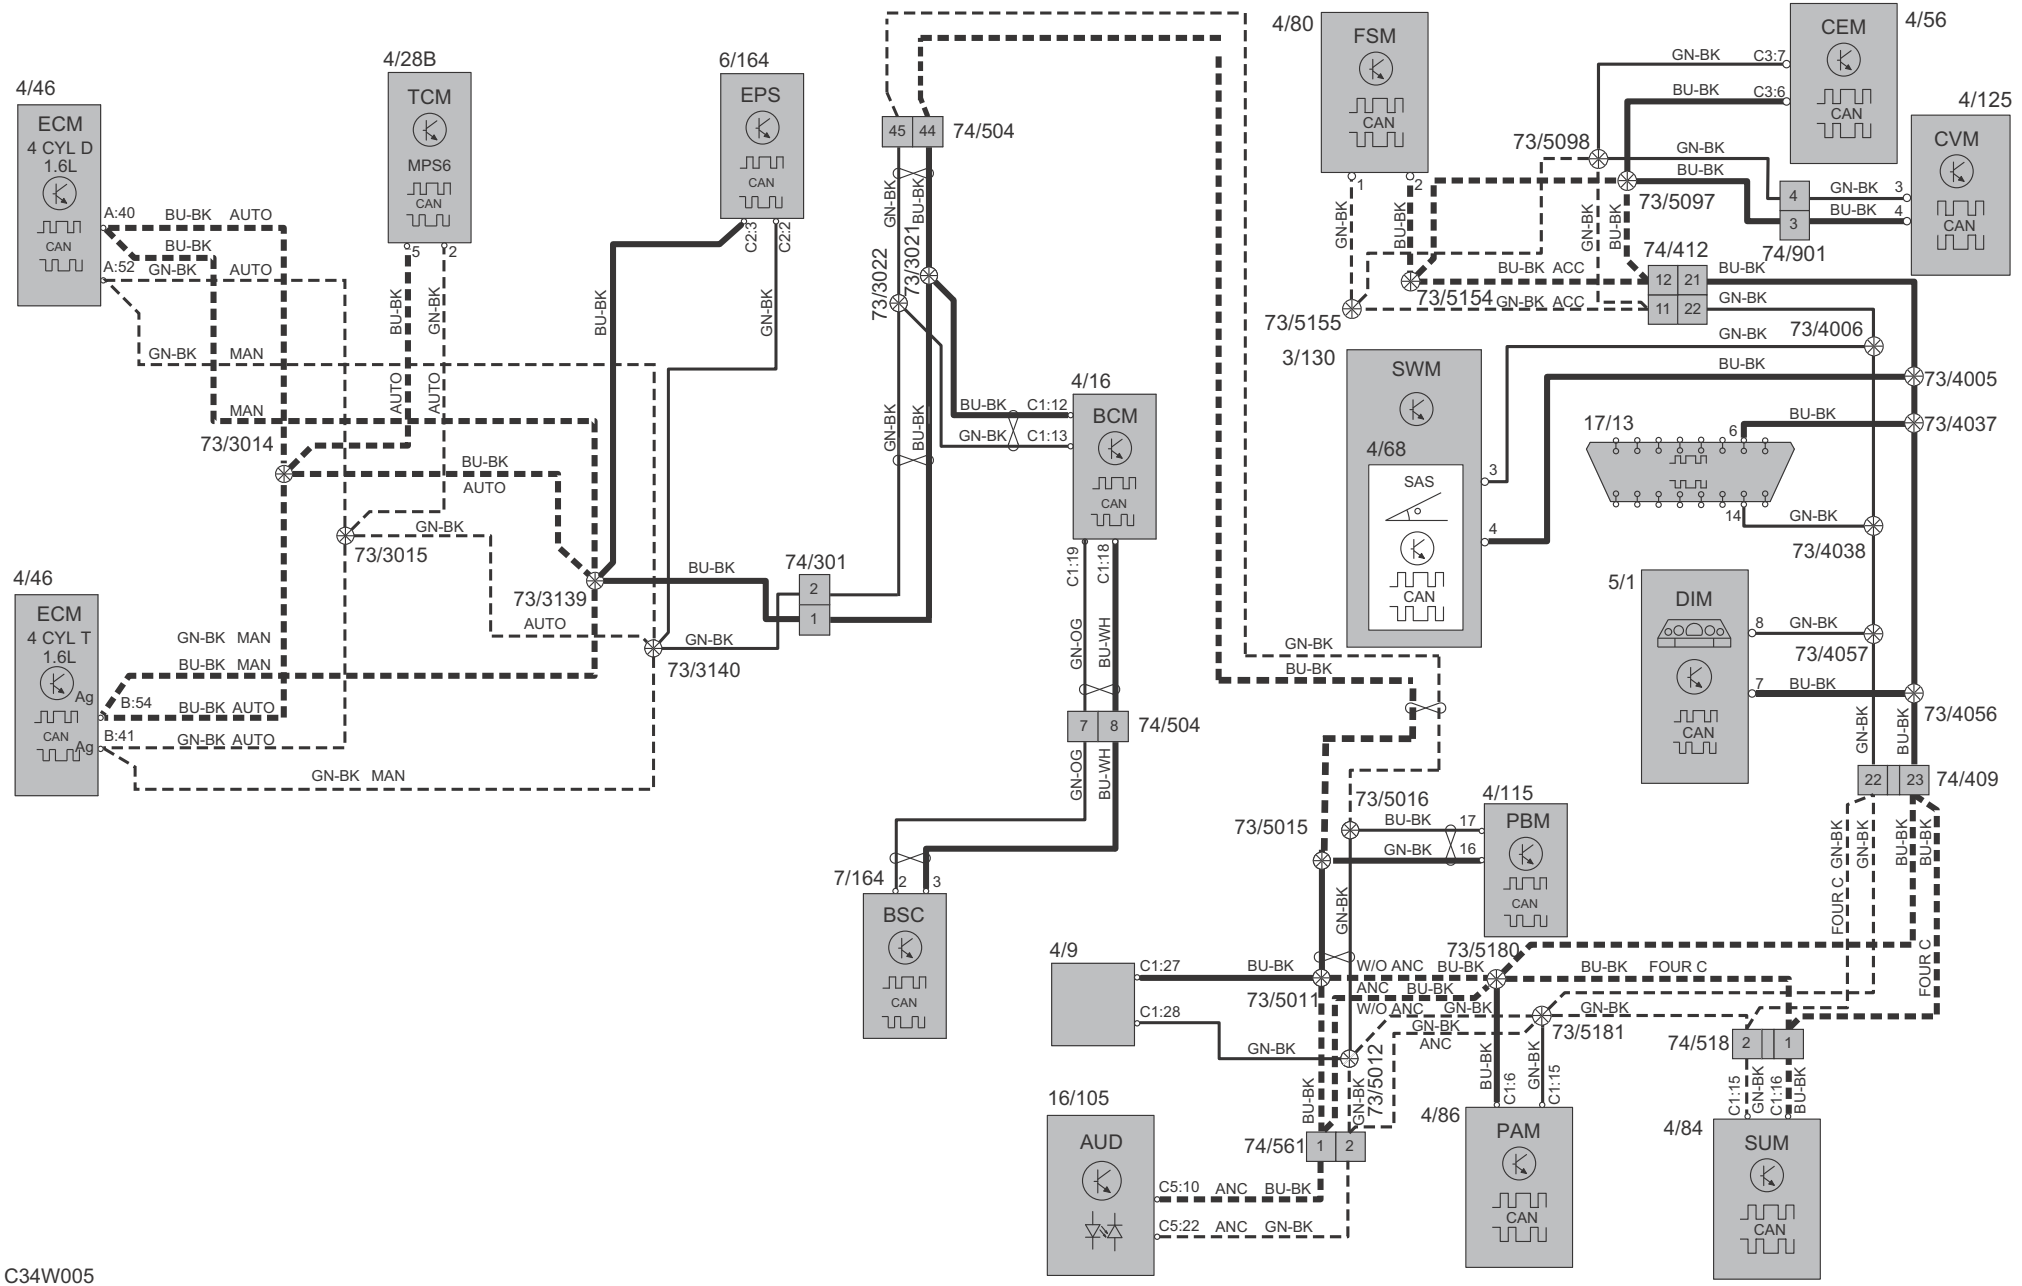

C34W005

Control modules
Data communication high speed CAN, 4-Cyl. 2.0L 1:2

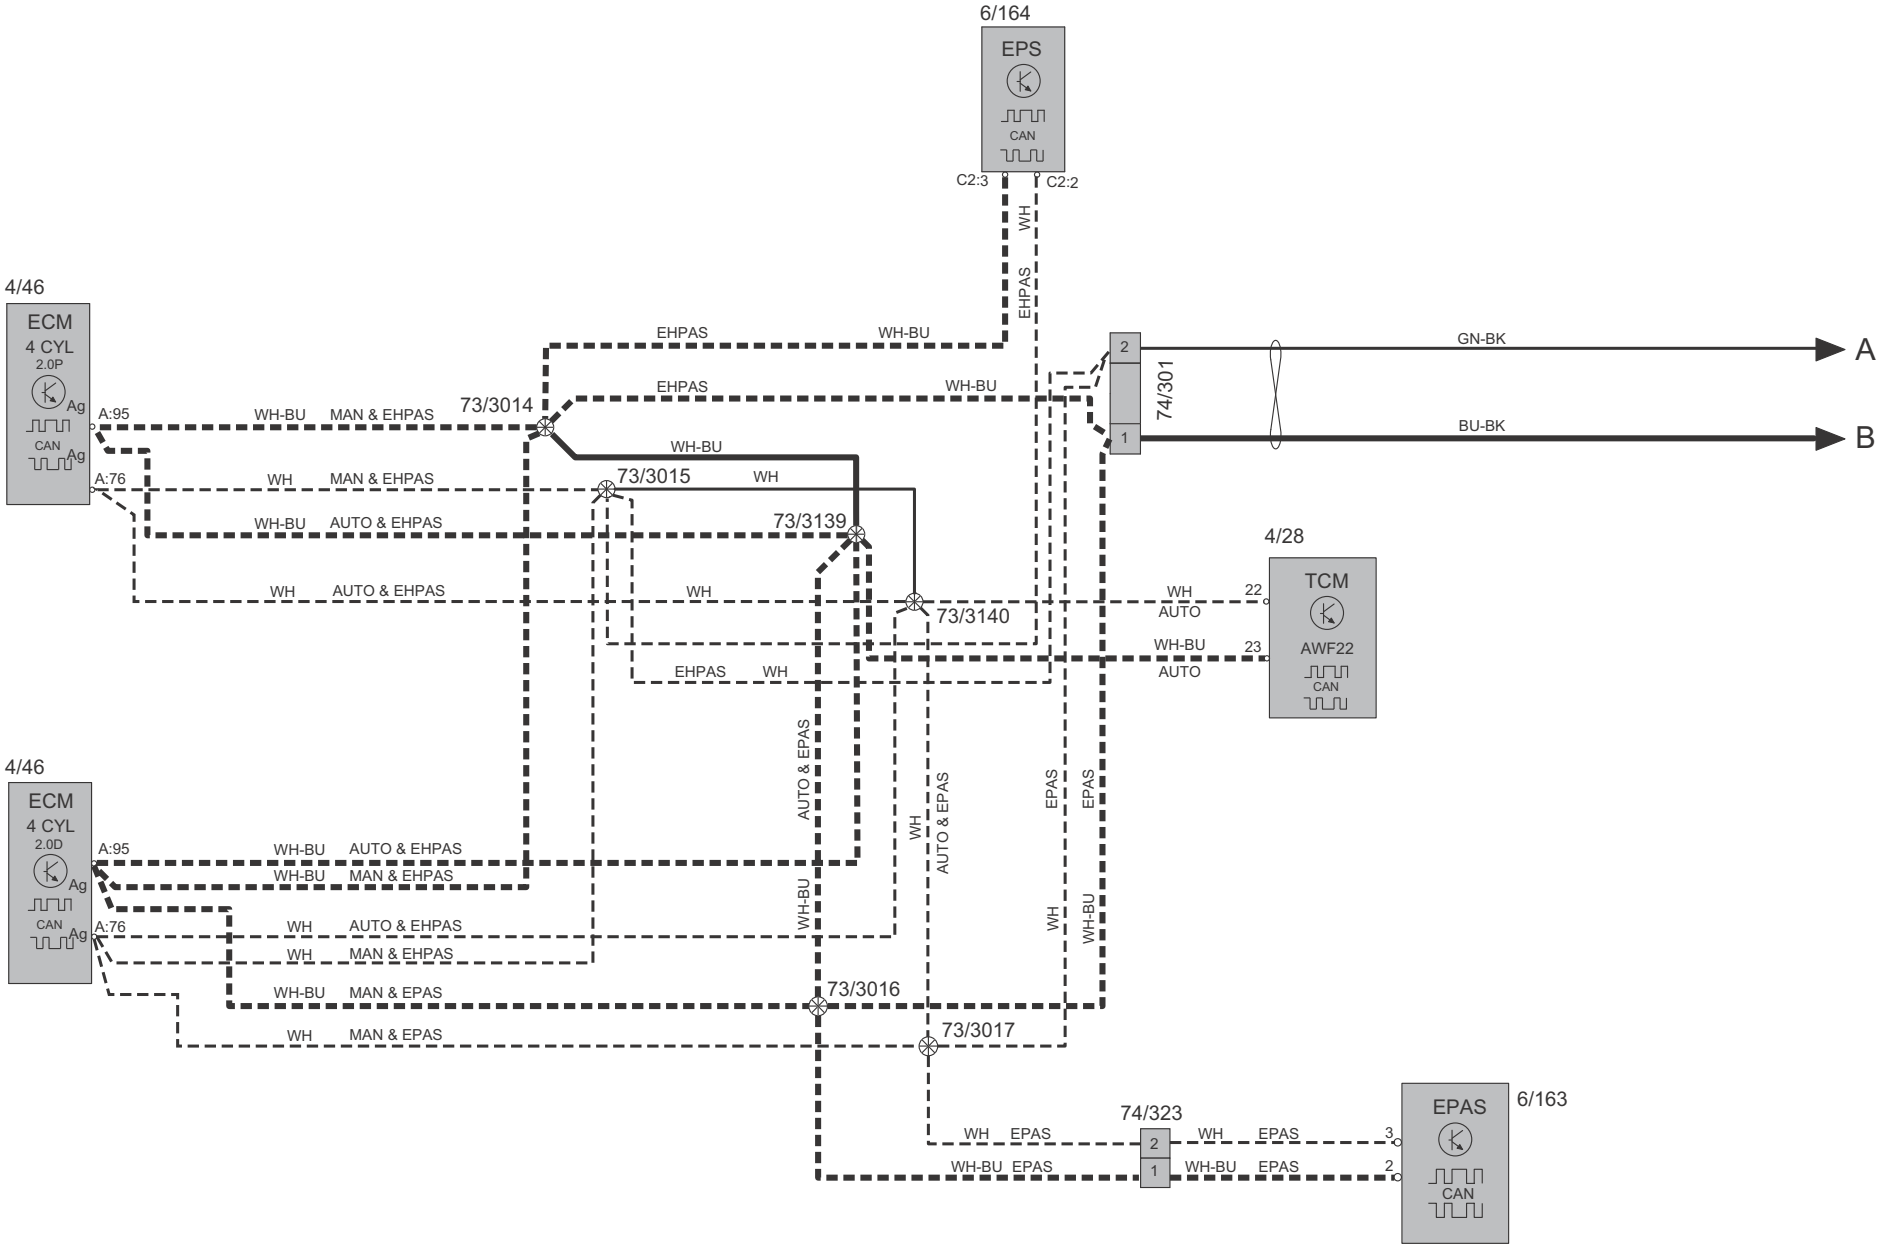

C33W011

Control modules
Data communication high speed CAN, 4-Cyl. 2.0L 2:2

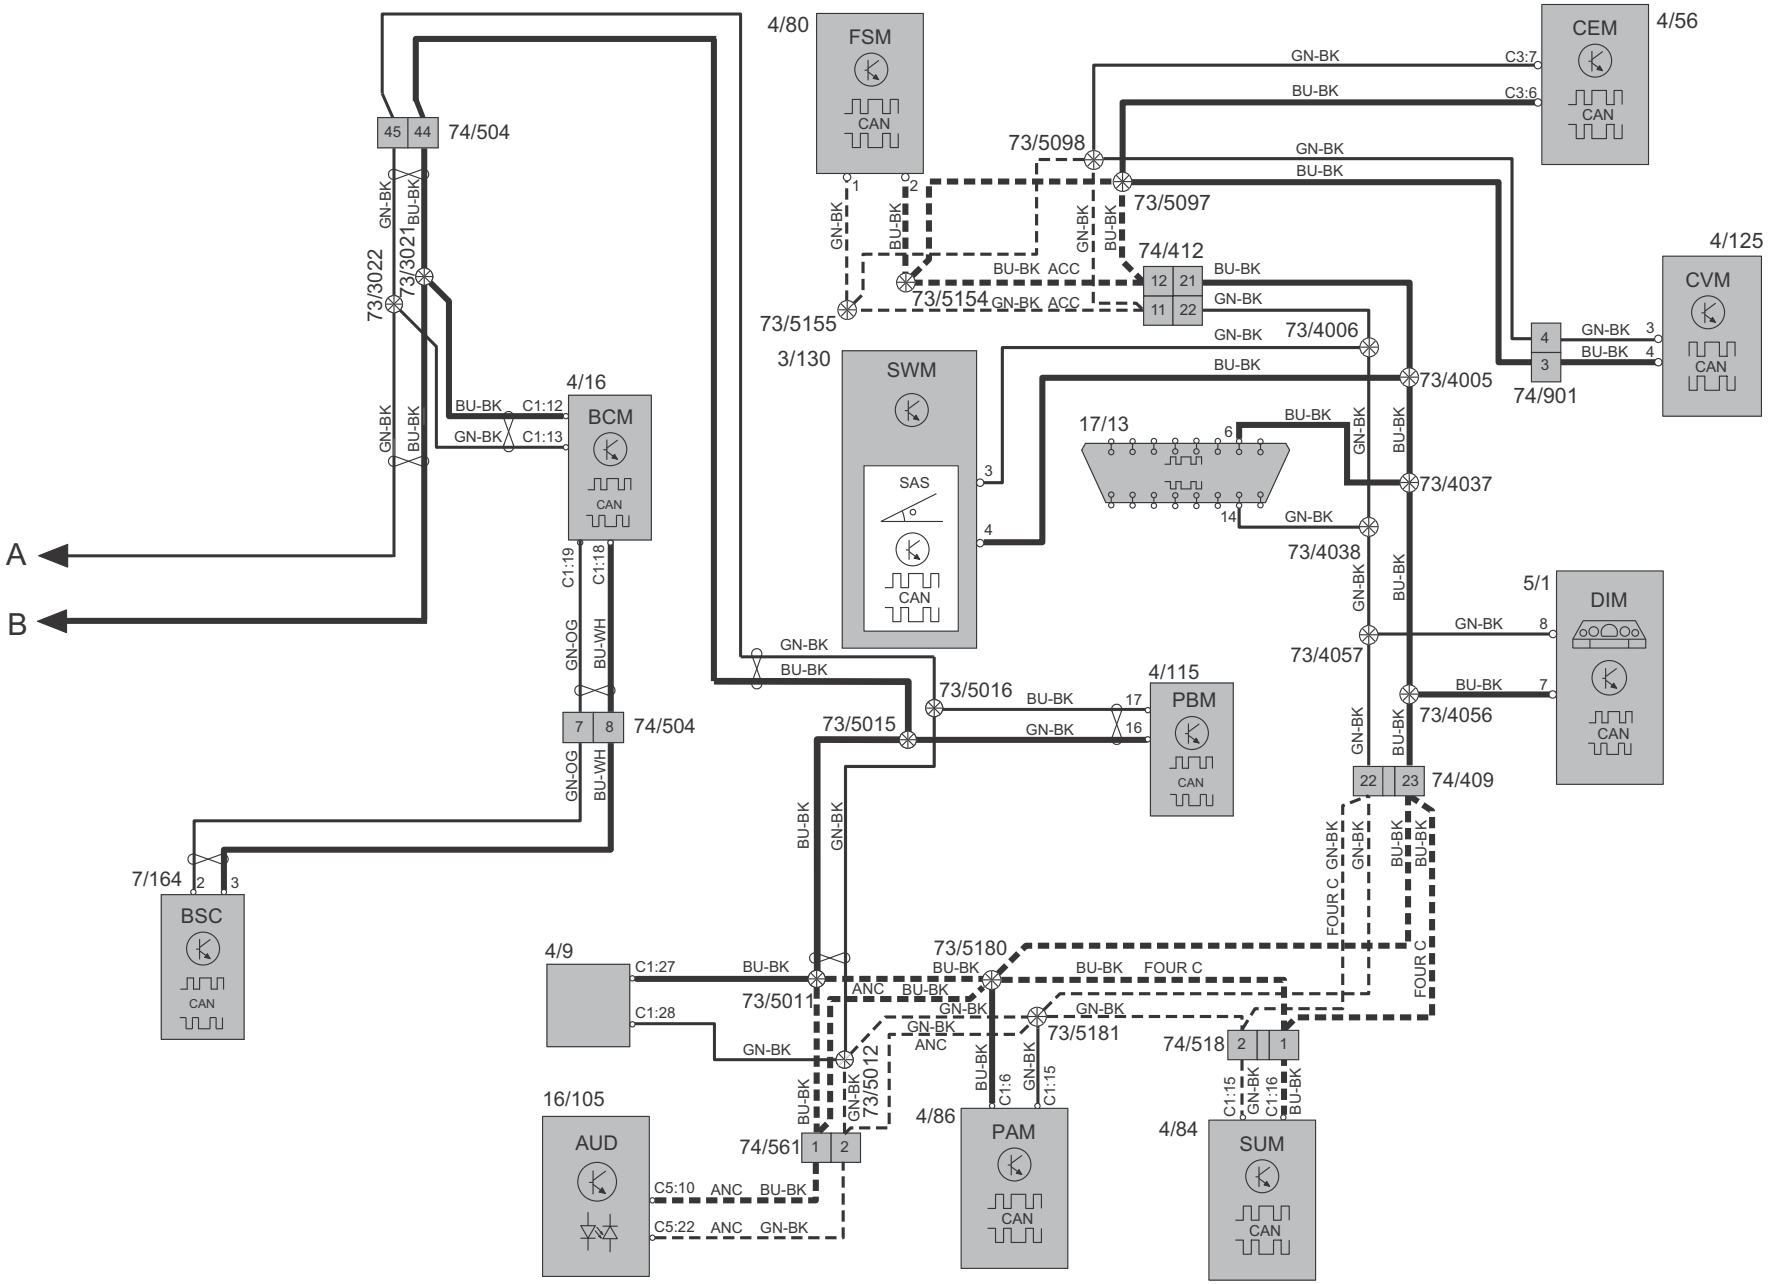

C33W012

Control modules
Data communication intermediate speed CAN, LHD

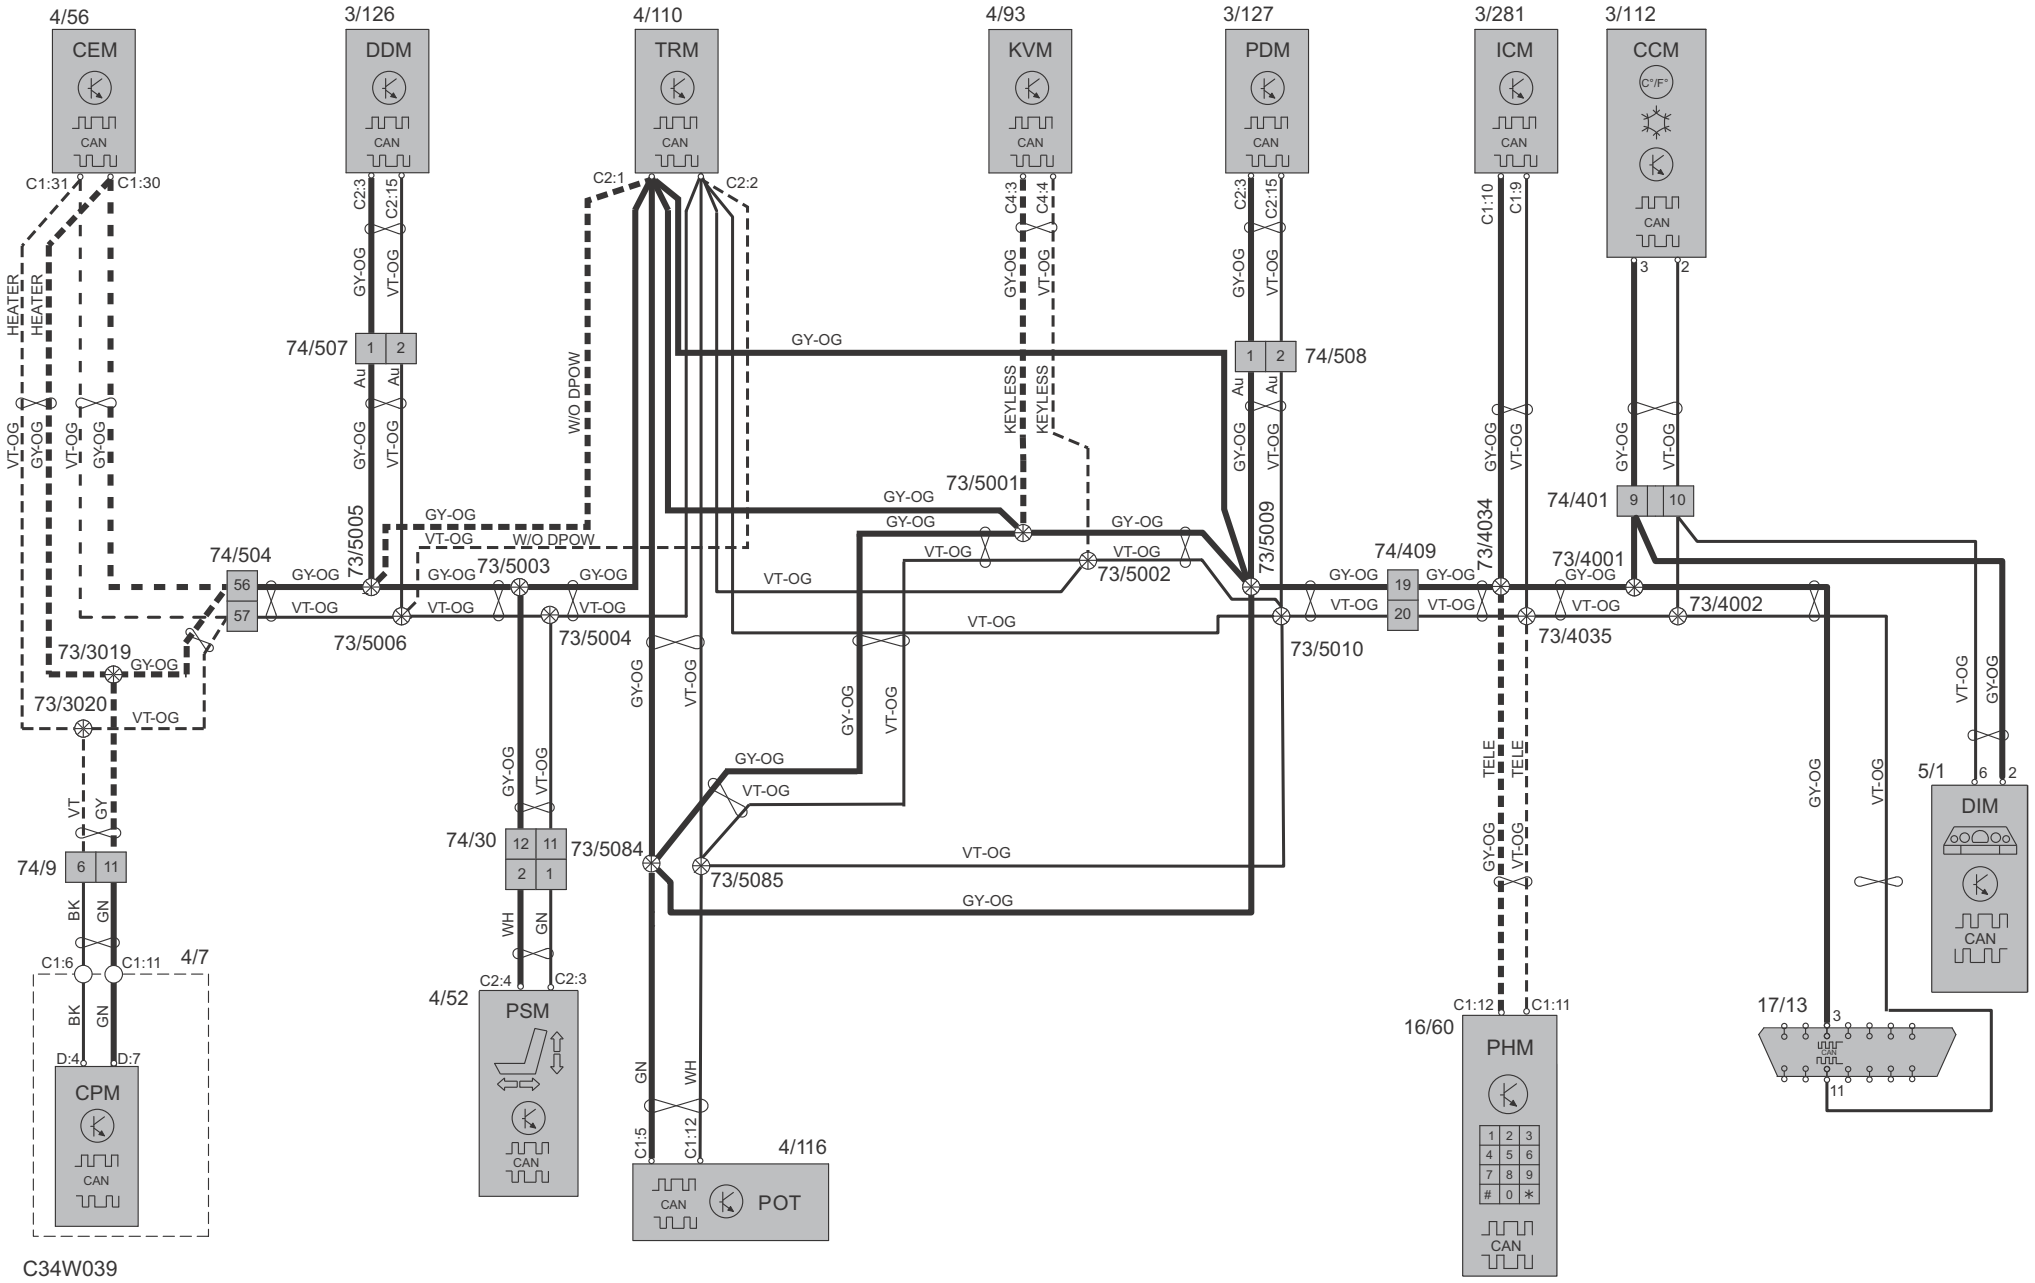

Control modules
Data communication intermediate speed CAN, RHD

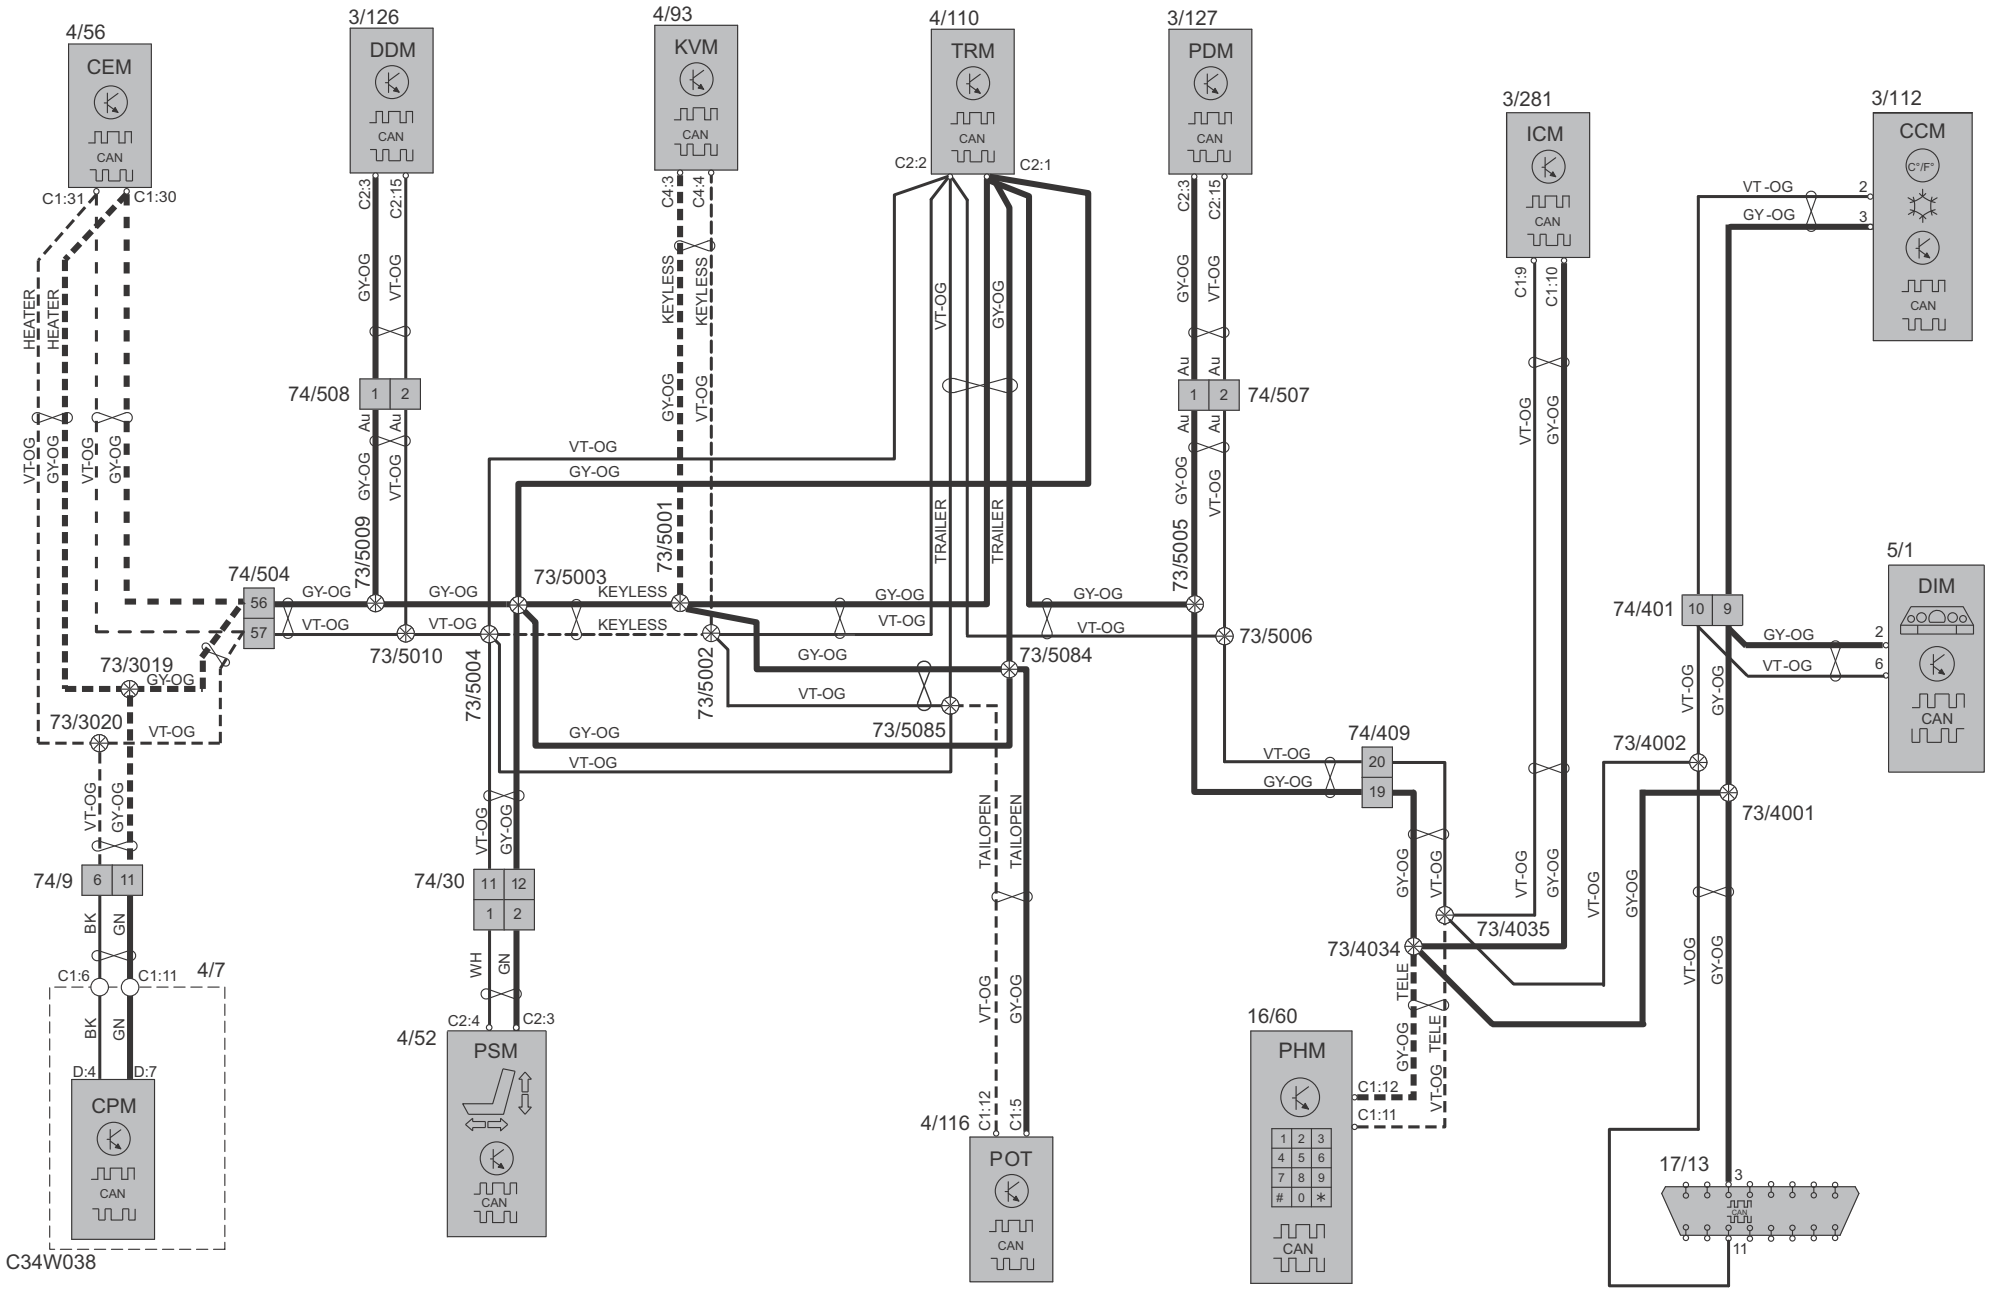

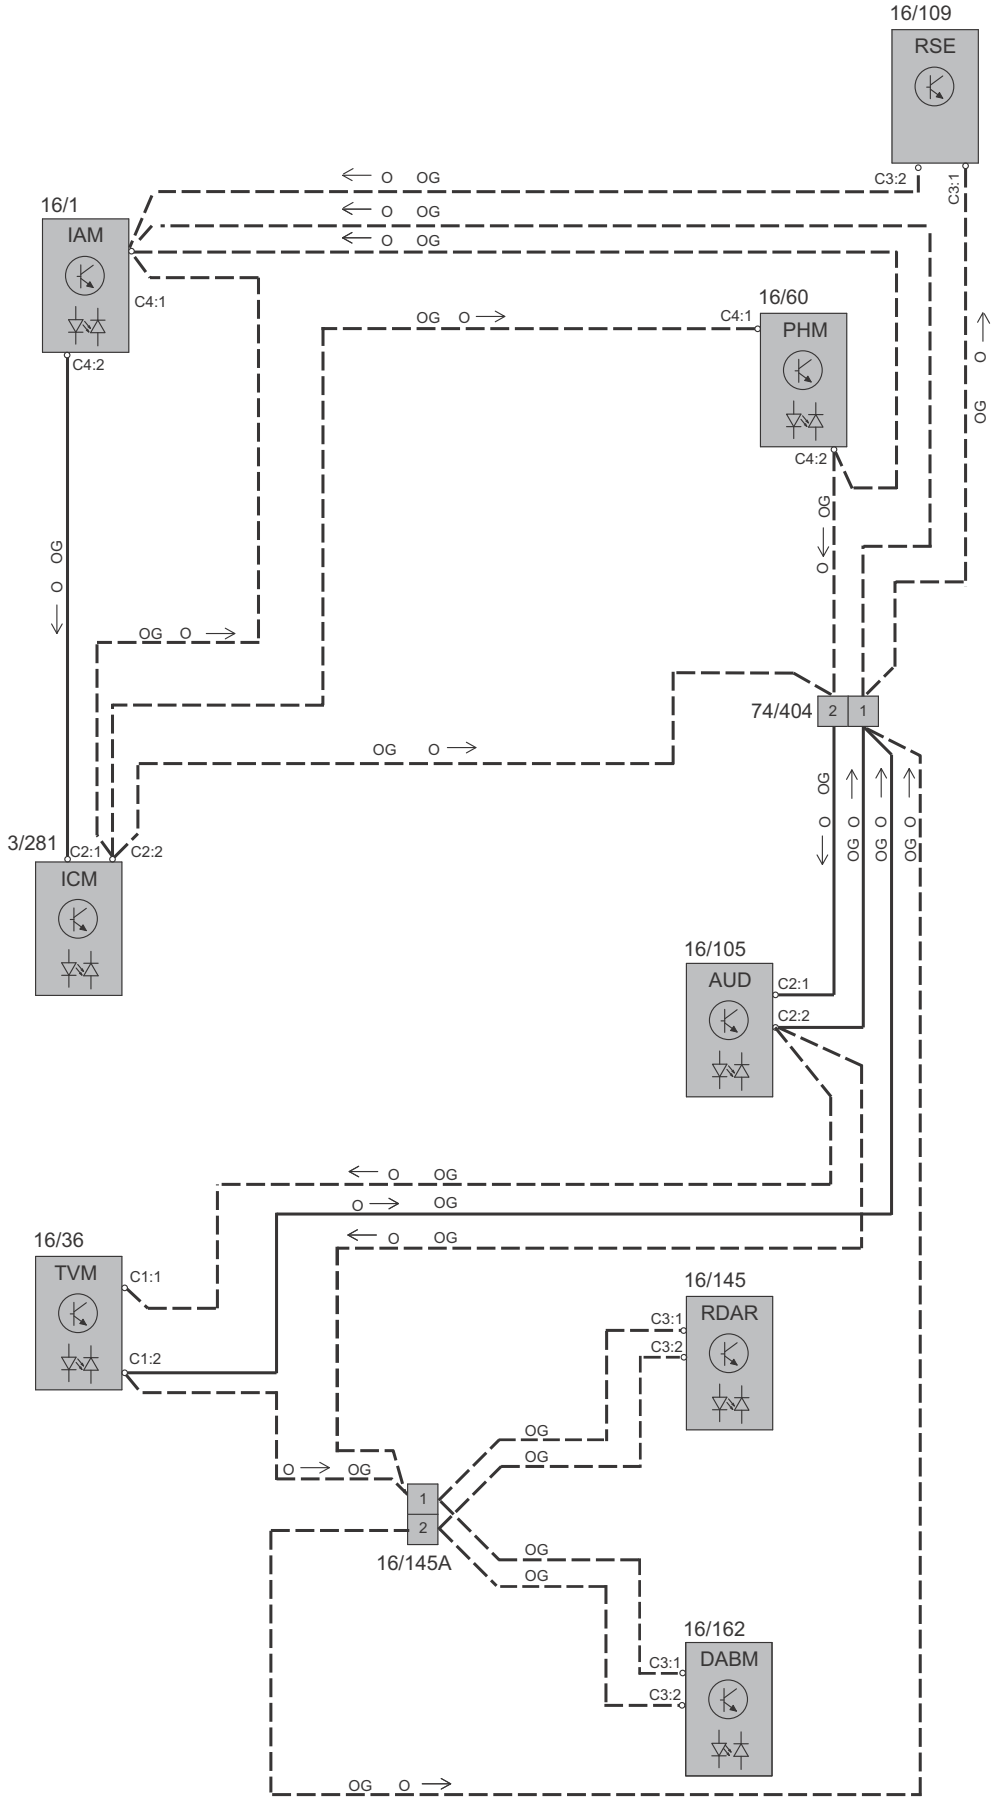
16/109
RSE
C3:2
C3:1
16/1
IAM
C4:1
C4:2
16/60
PHM
C4:1
C4:2
74/404
2
1
3/281
C2:1
C2:2
ICM
16/105
AUD
C2:1
C2:2
16/36
TVM
C1:1
C1:2
16/145
RDAR
C3:1
C3:2
16/145A
1
2
16/162
DABM
C3:1
C3:2
O
OG
C31W063

Control modules
Data communication, LIN 1:3

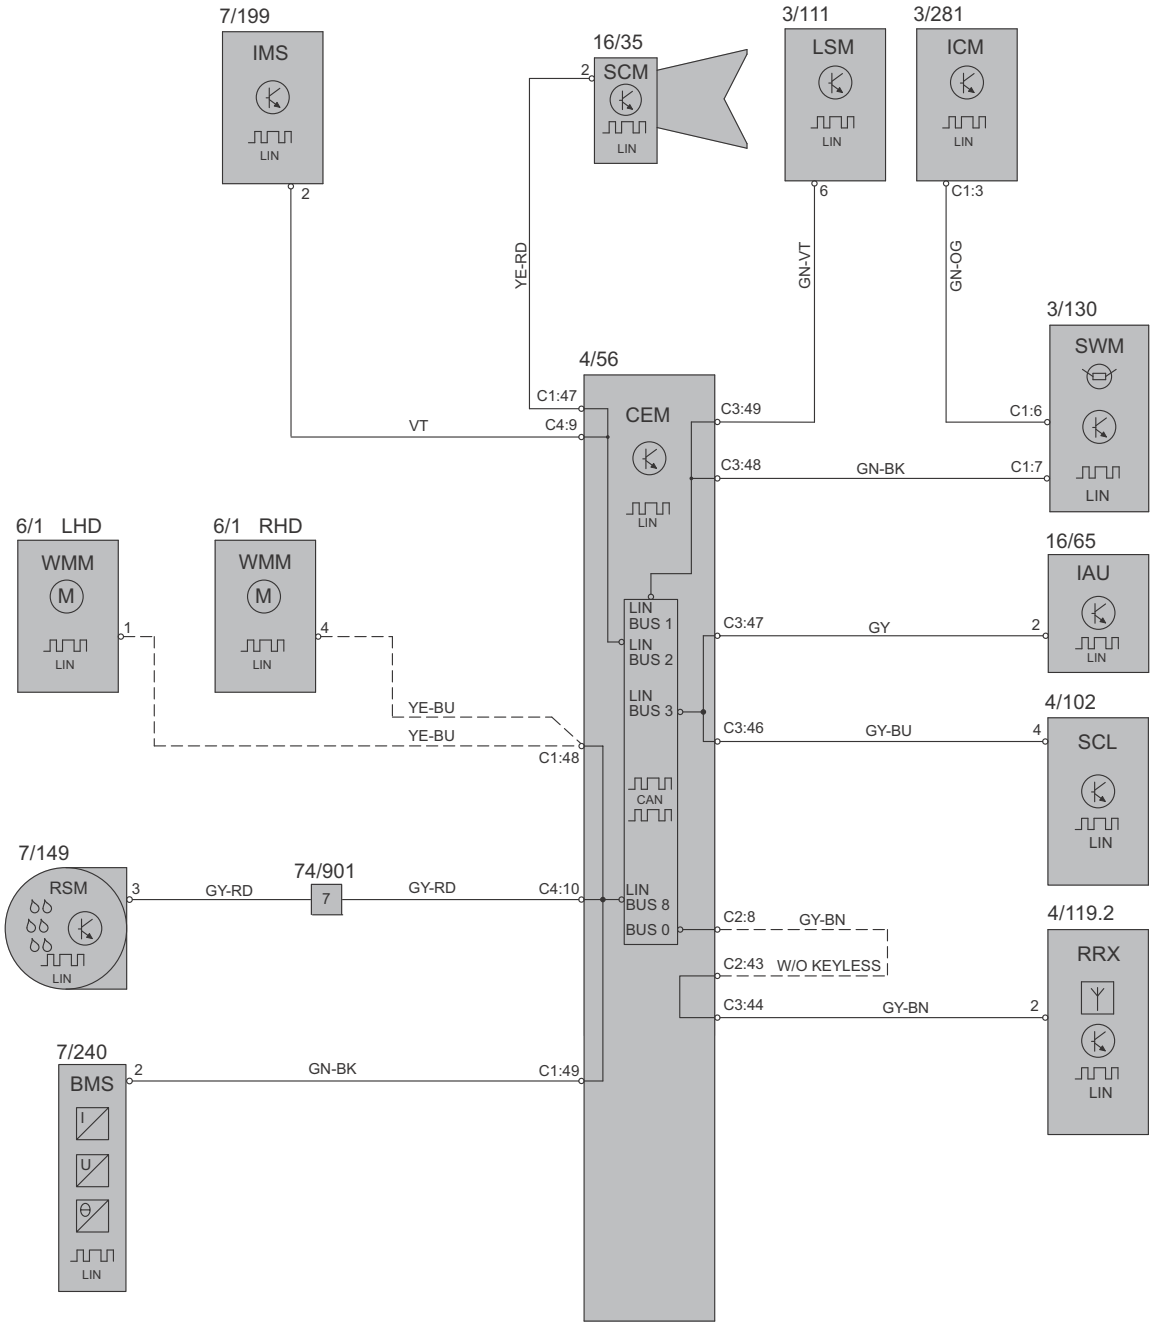

C33W015

Control modules
Data communication, LIN 2:3

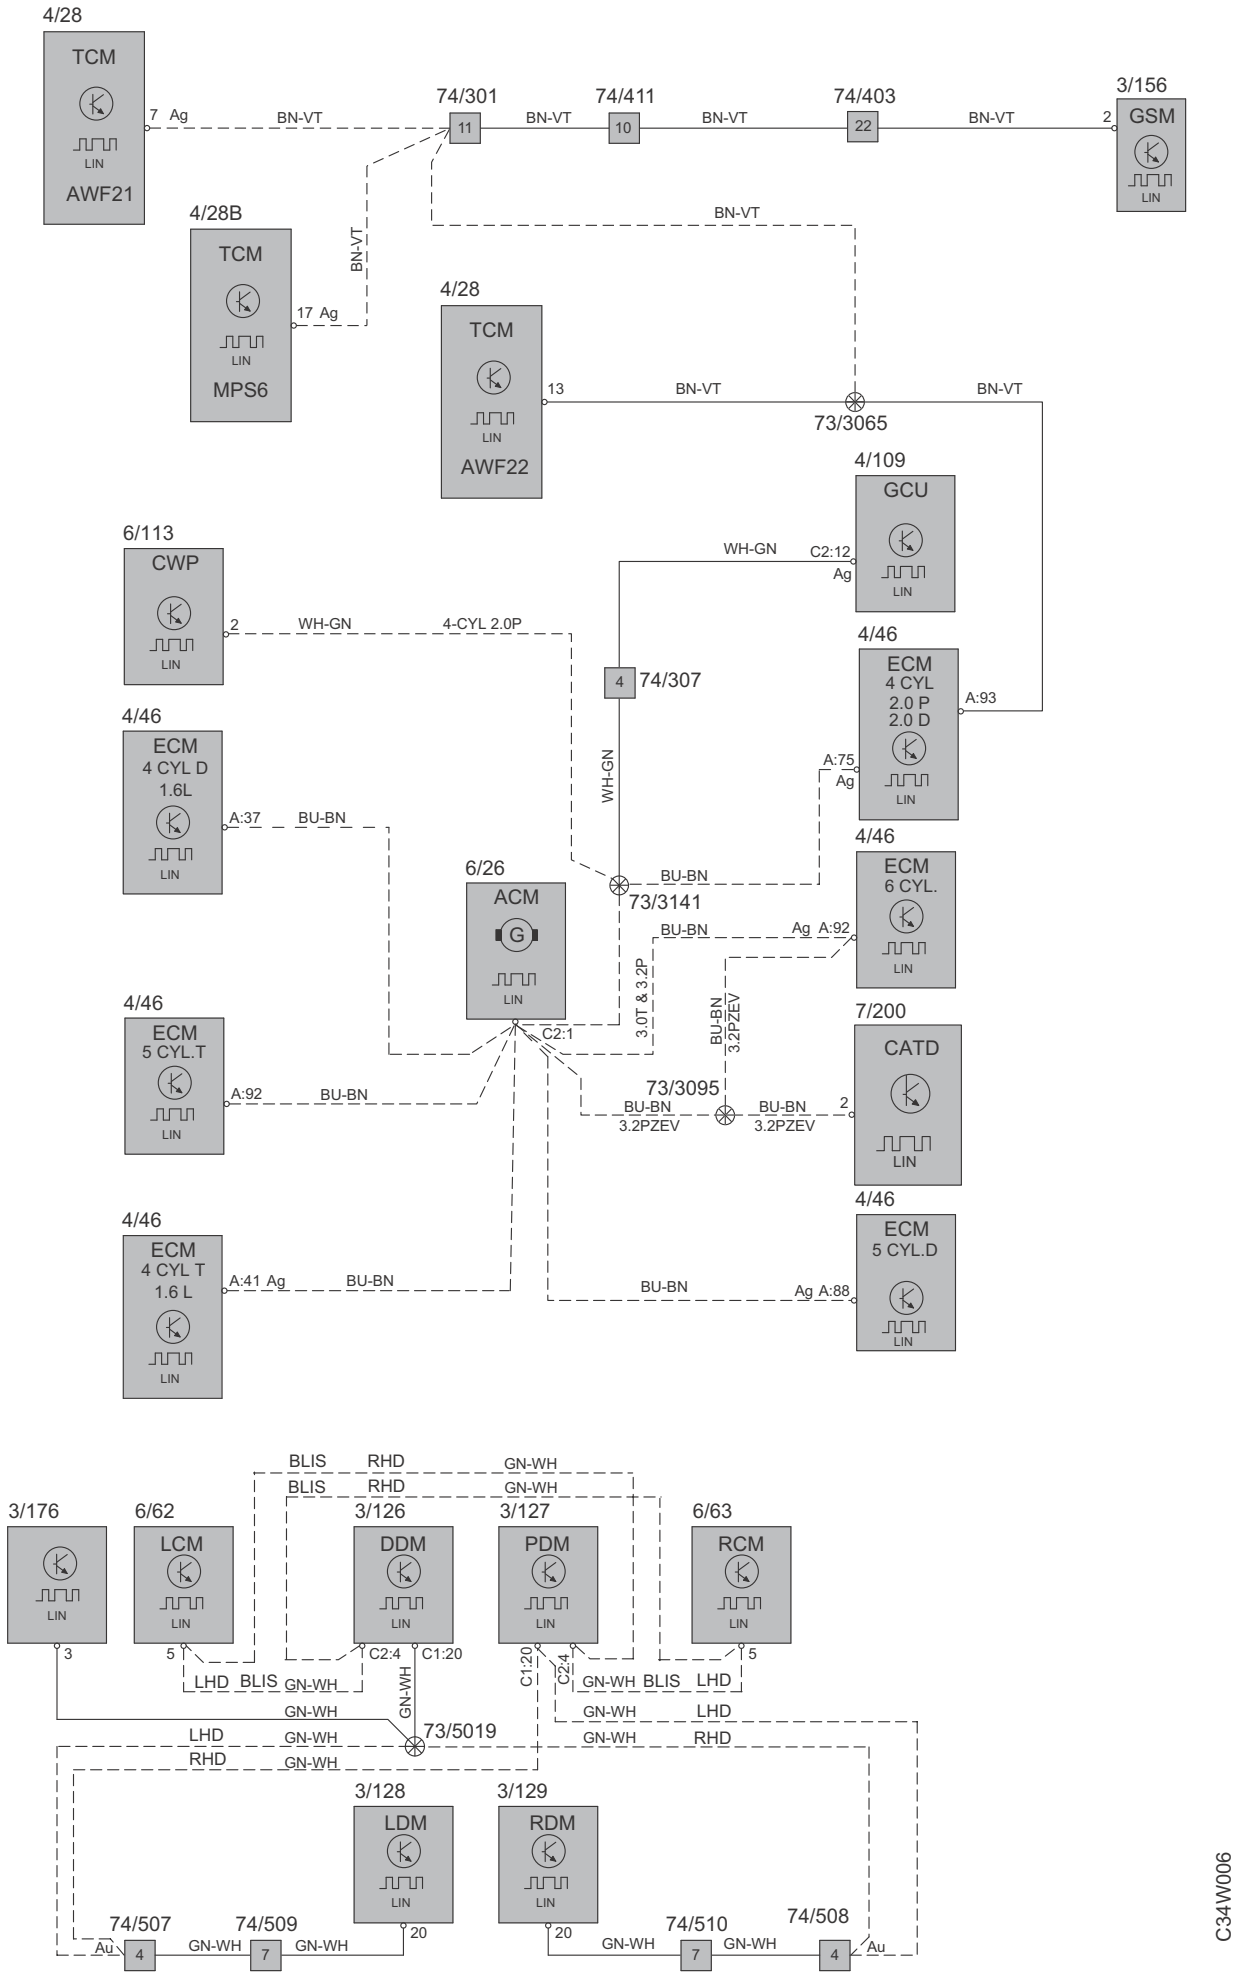

C34W006

Control modules
Data communication, LIN 3:3

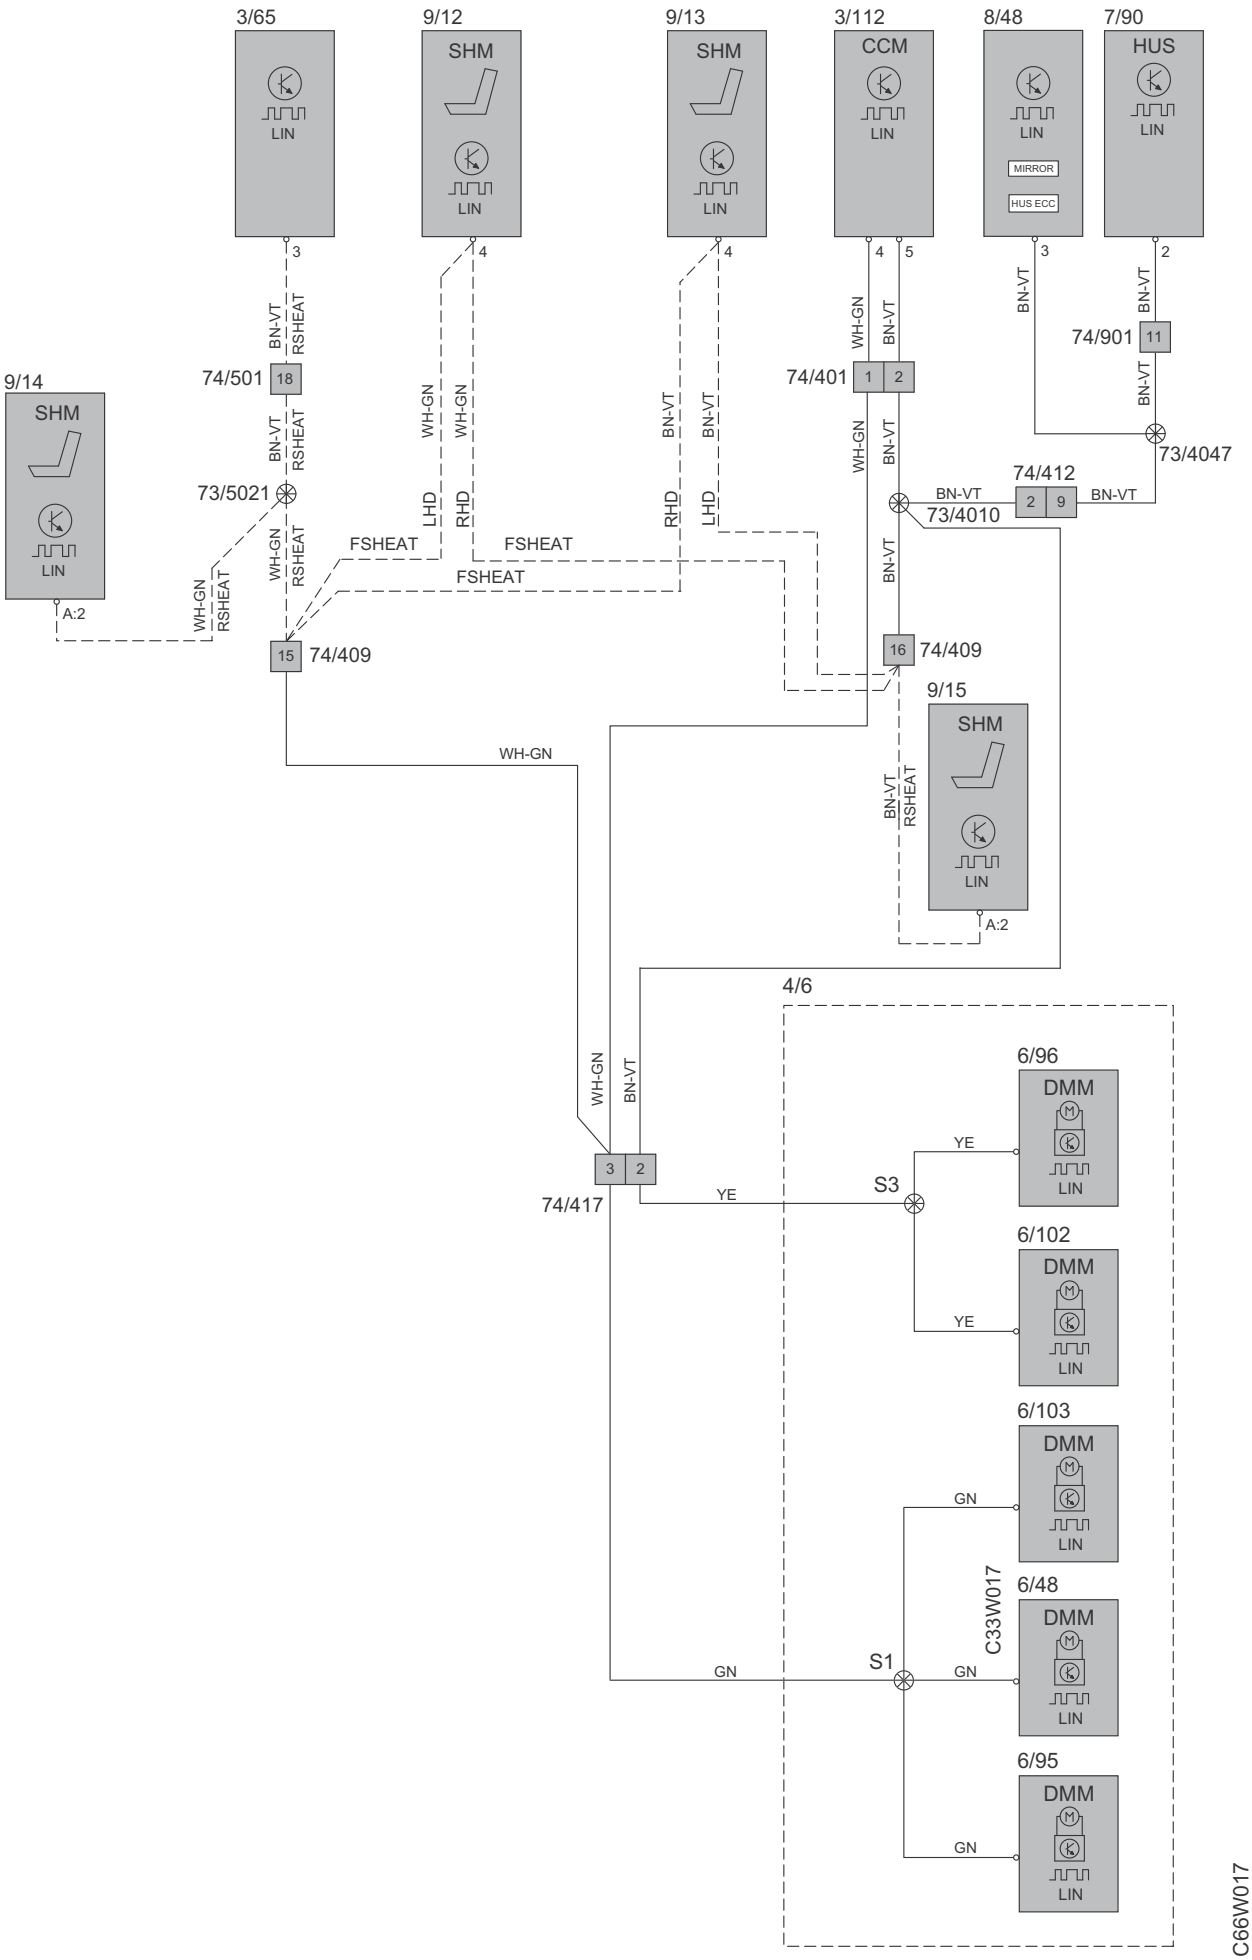

Control modules
Steering Wheel Module (SWM)

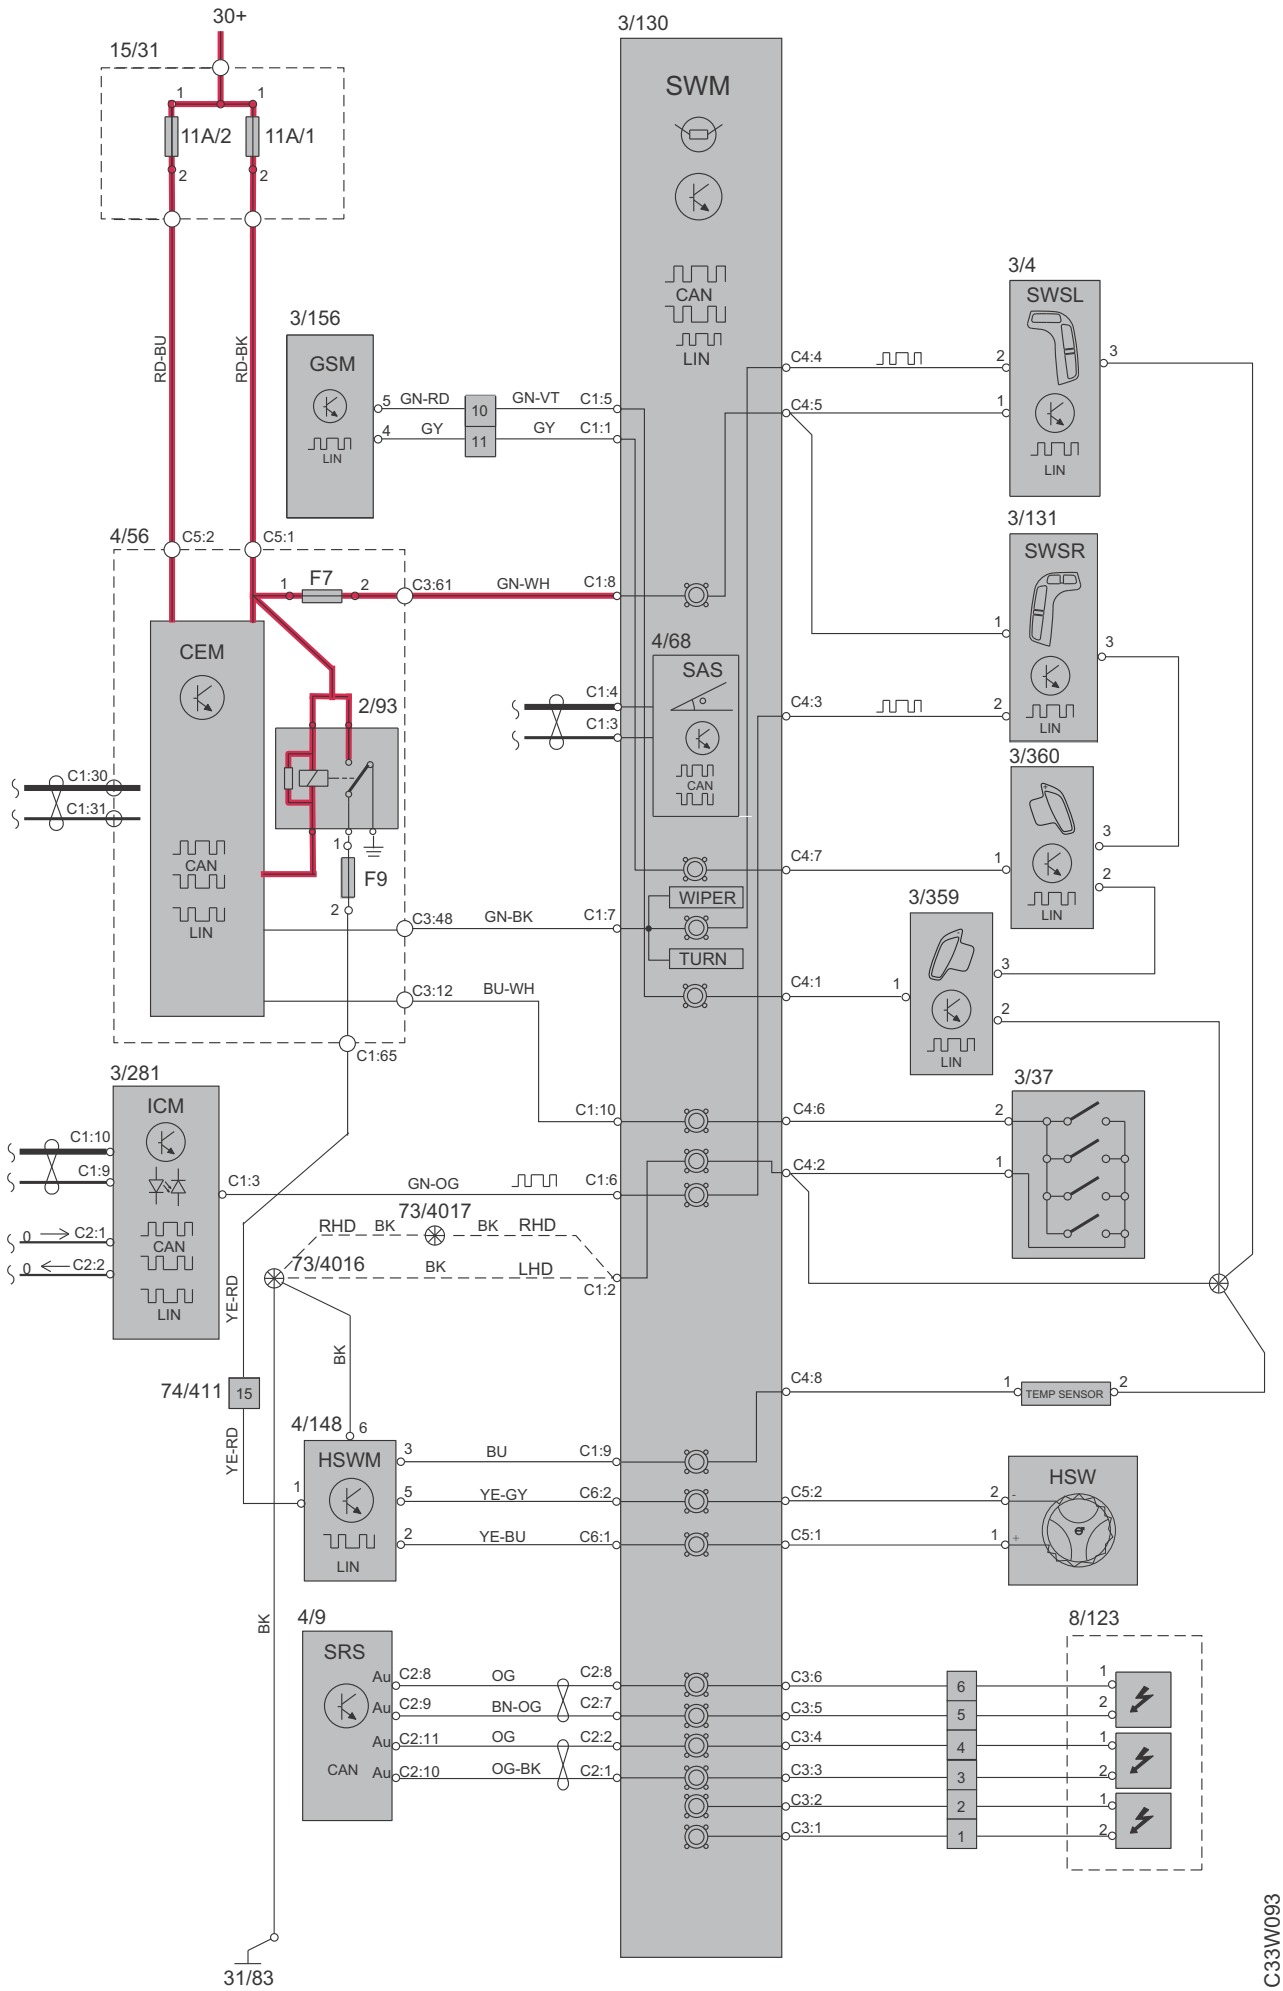

Group 26 Cooling system
Cooling fan, 4-Cyl. 1.6L Turbo

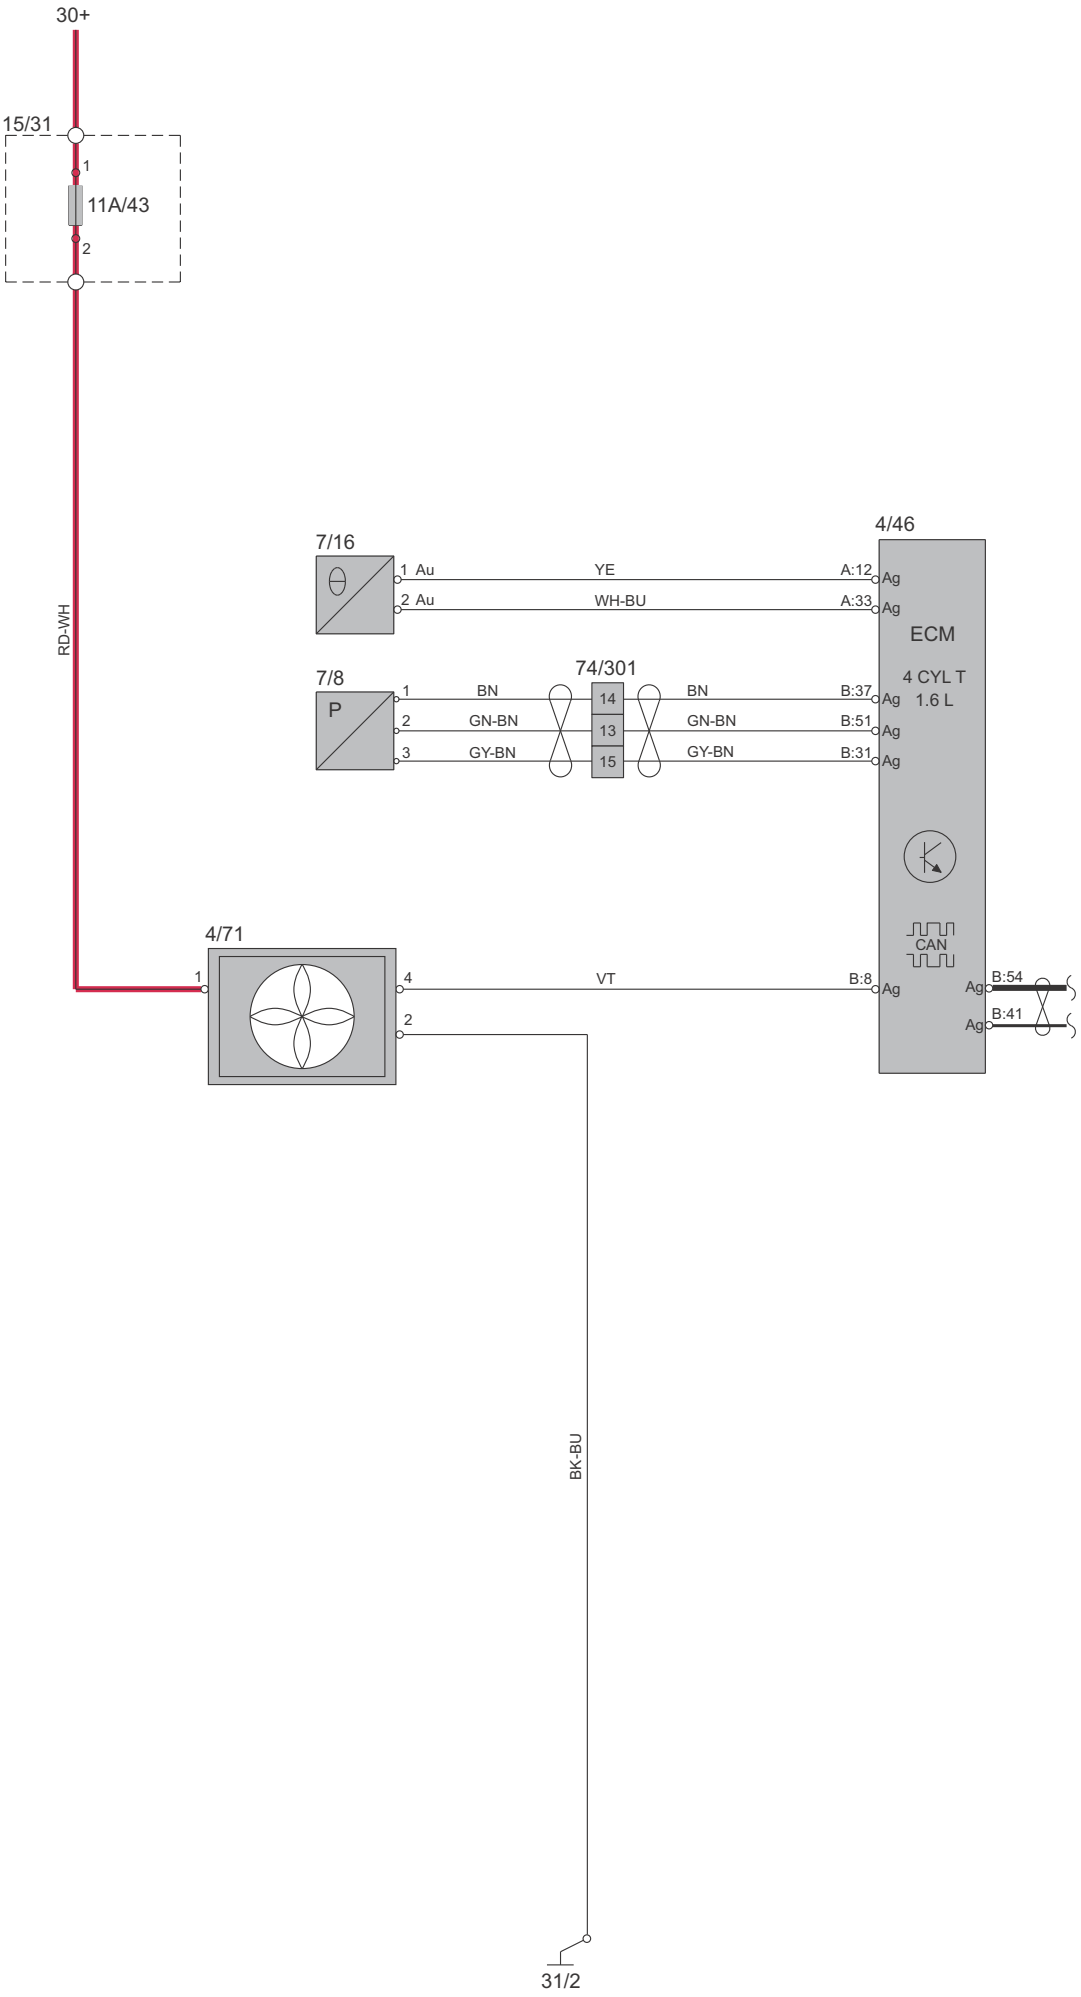

Group 26 Cooling system
Cooling fan, 4-Cyl. 2.0L Turbo

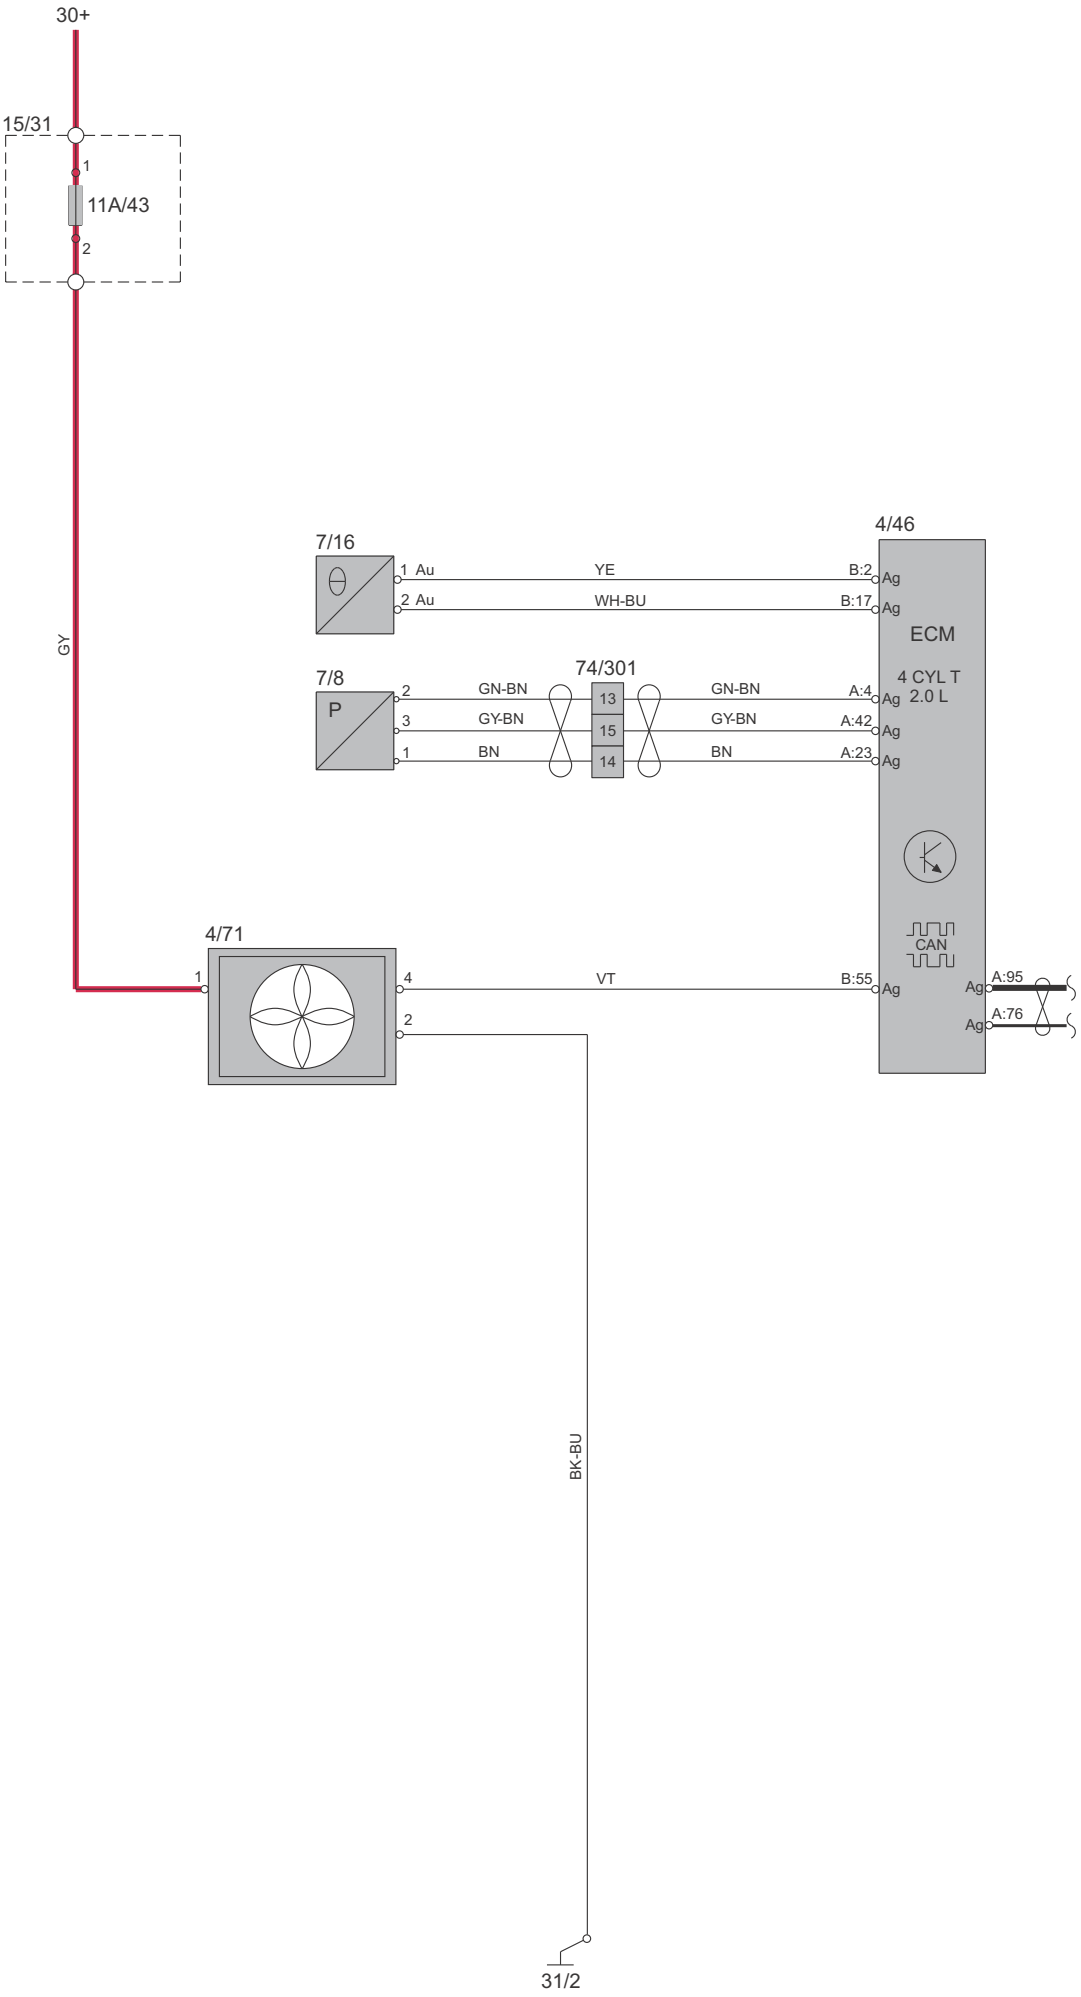

Group 26 Cooling system
Cooling fan, 5-Cyl. Turbo

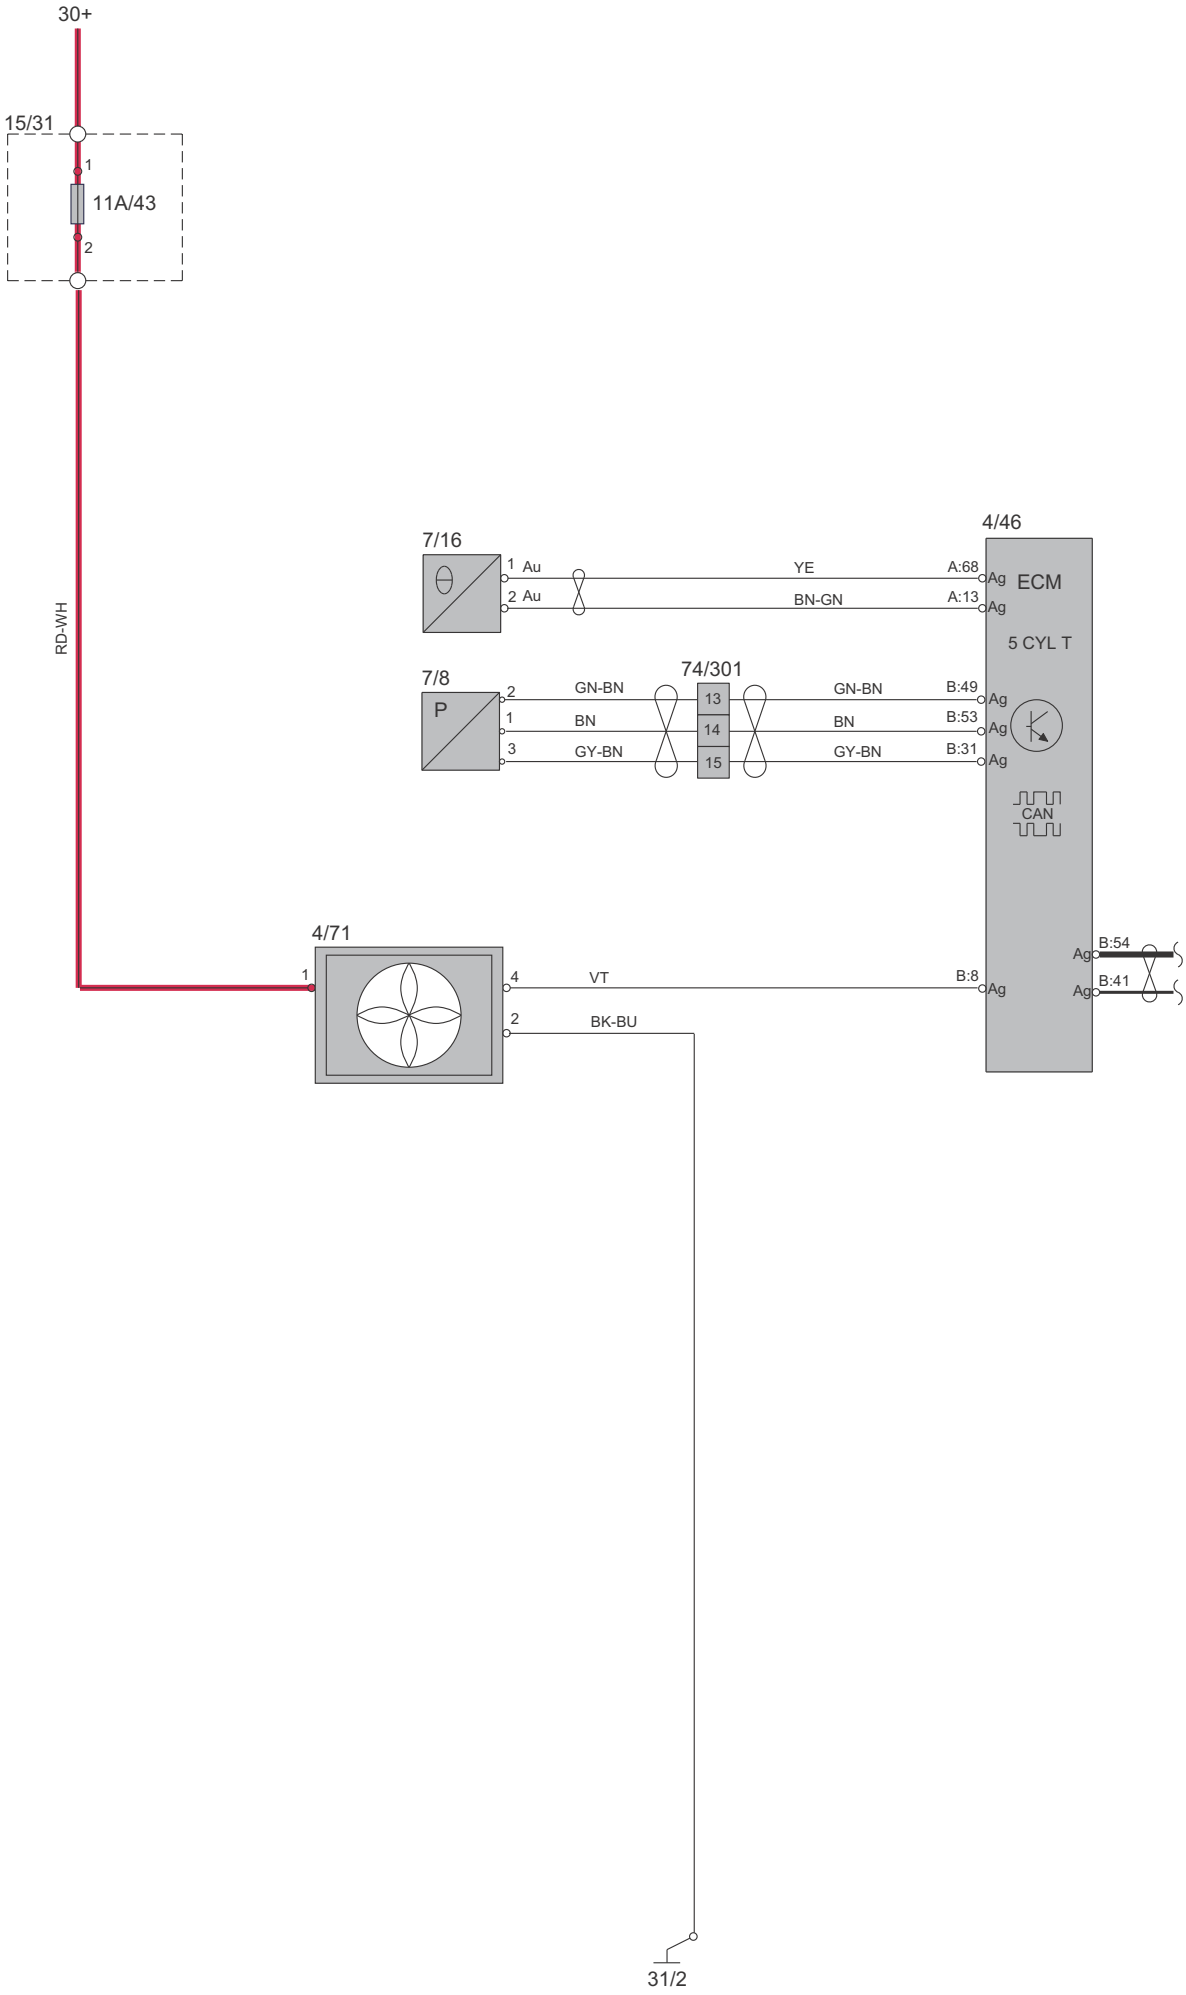

Group 26 Cooling system
Cooling fan, 6-Cyl.

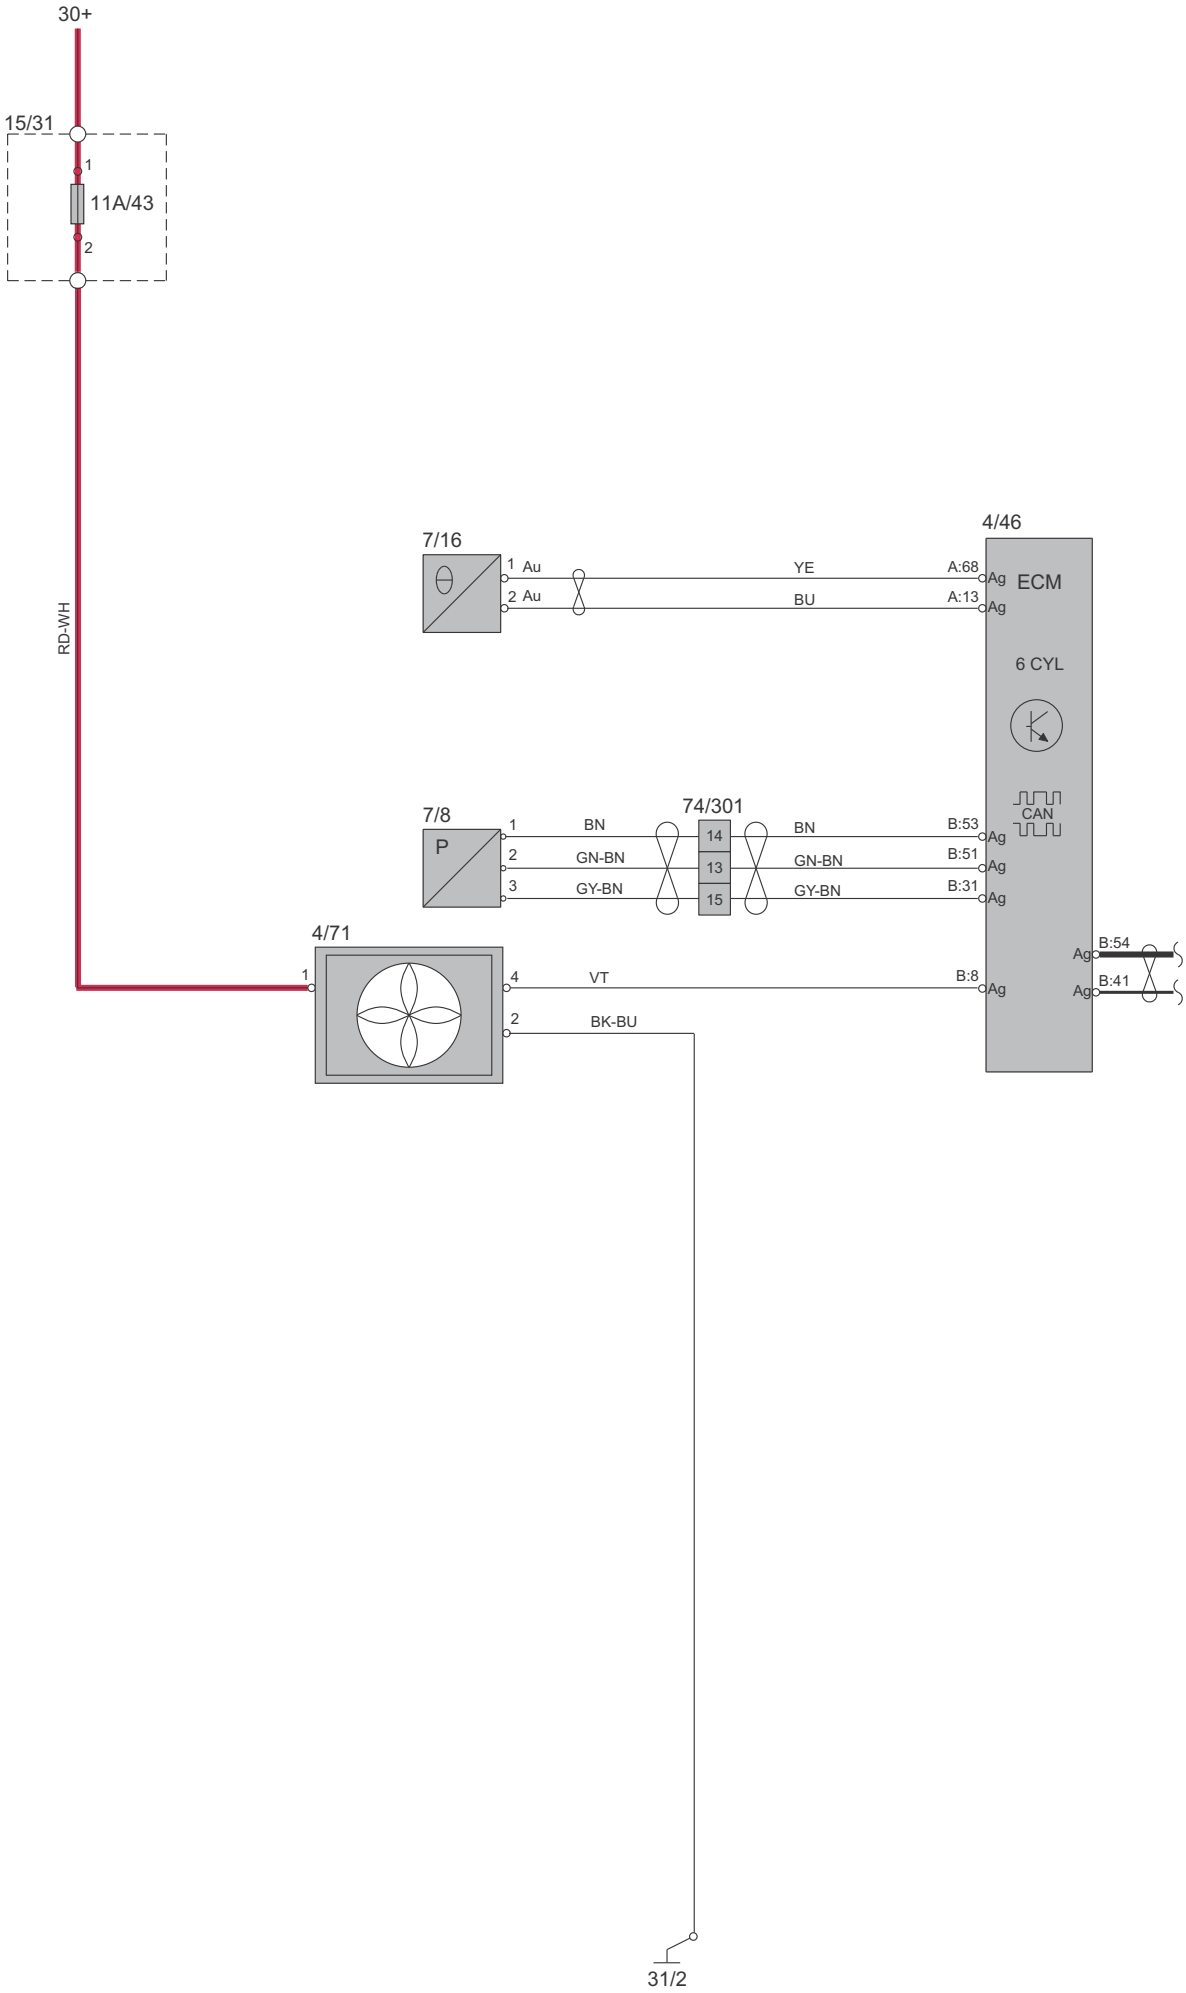

Group 26 Cooling system
Cooling fan, 4-Cyl. 1.6L Diesel

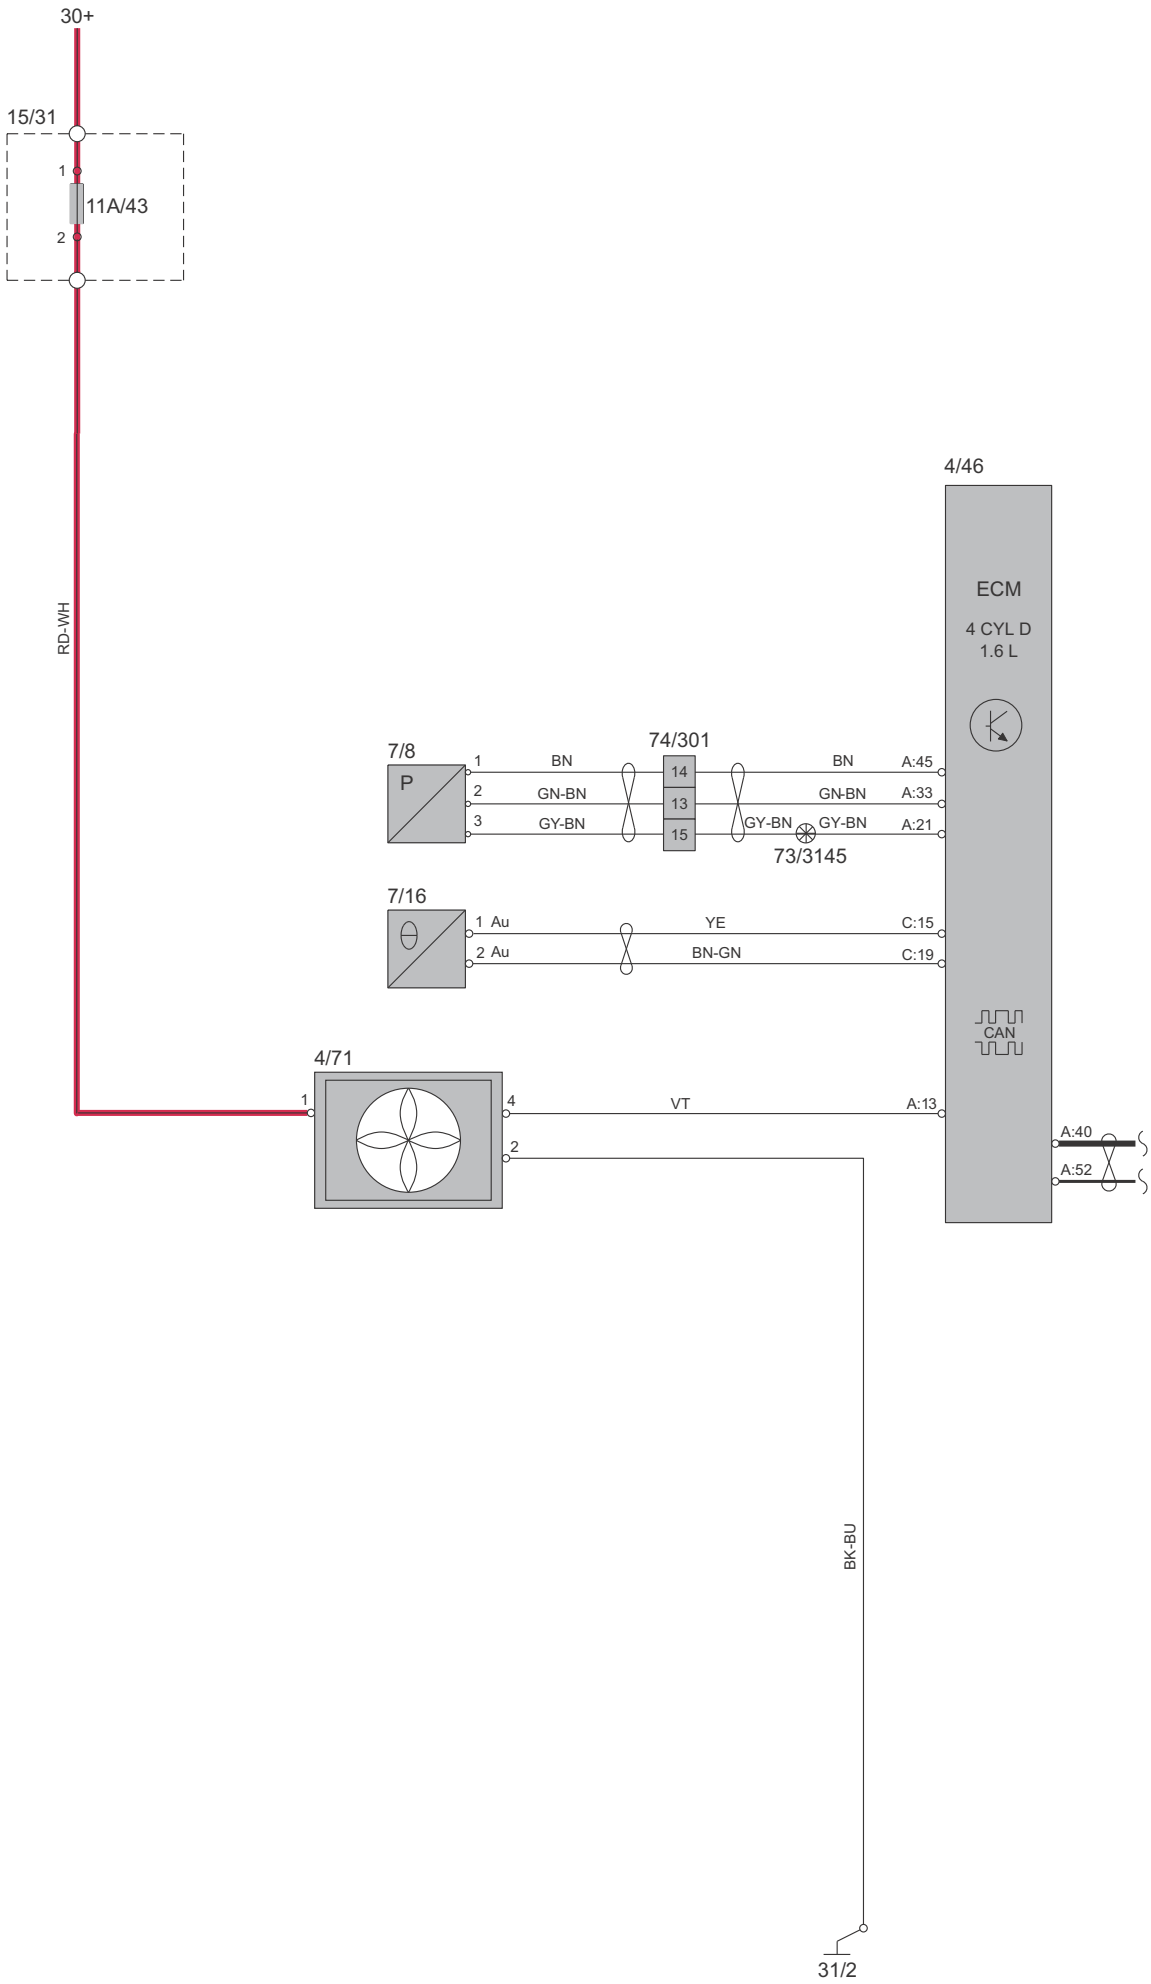

Cooling fan, 4-Cyl. 2.0L Diesel

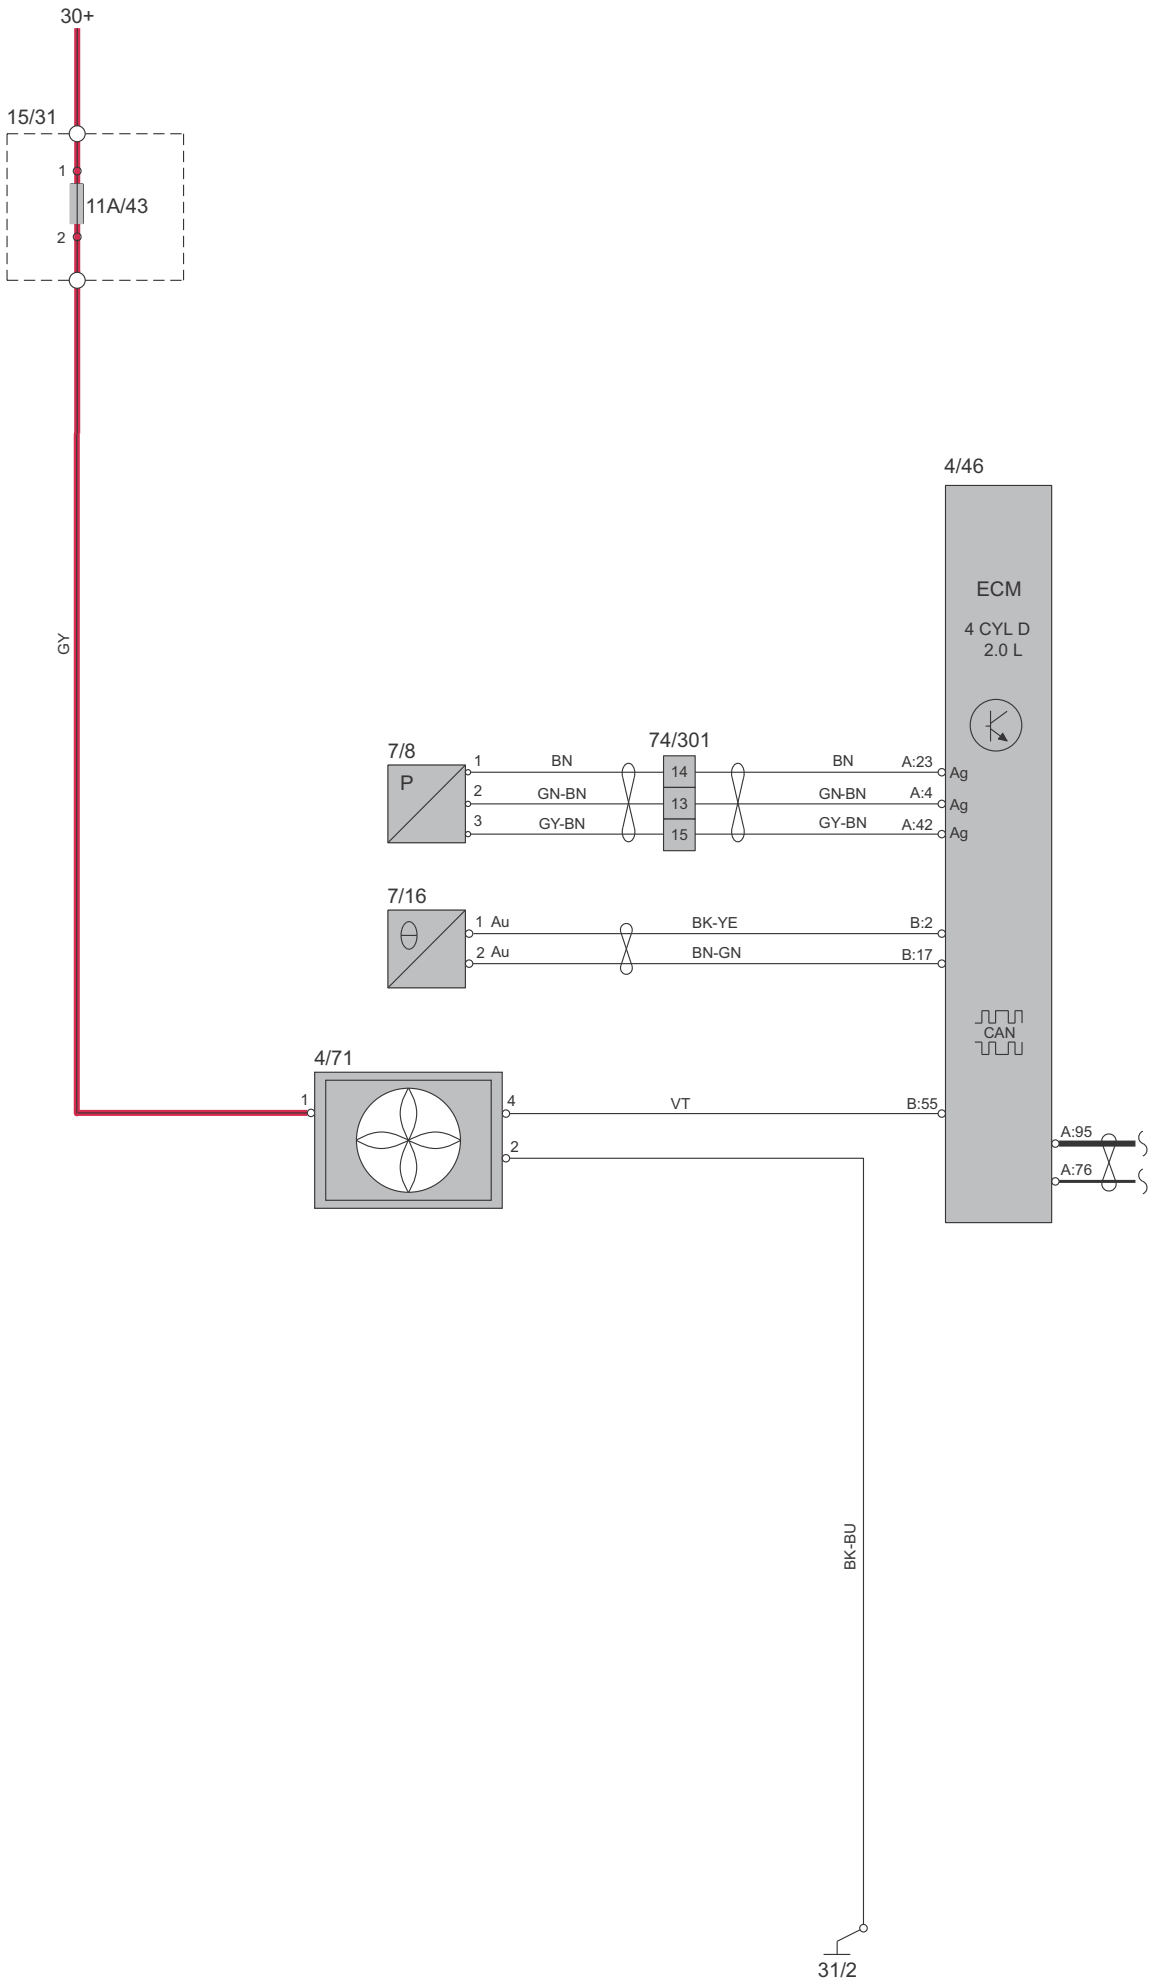

Group 26 Cooling system
Cooling fan, 5-Cyl. Diesel

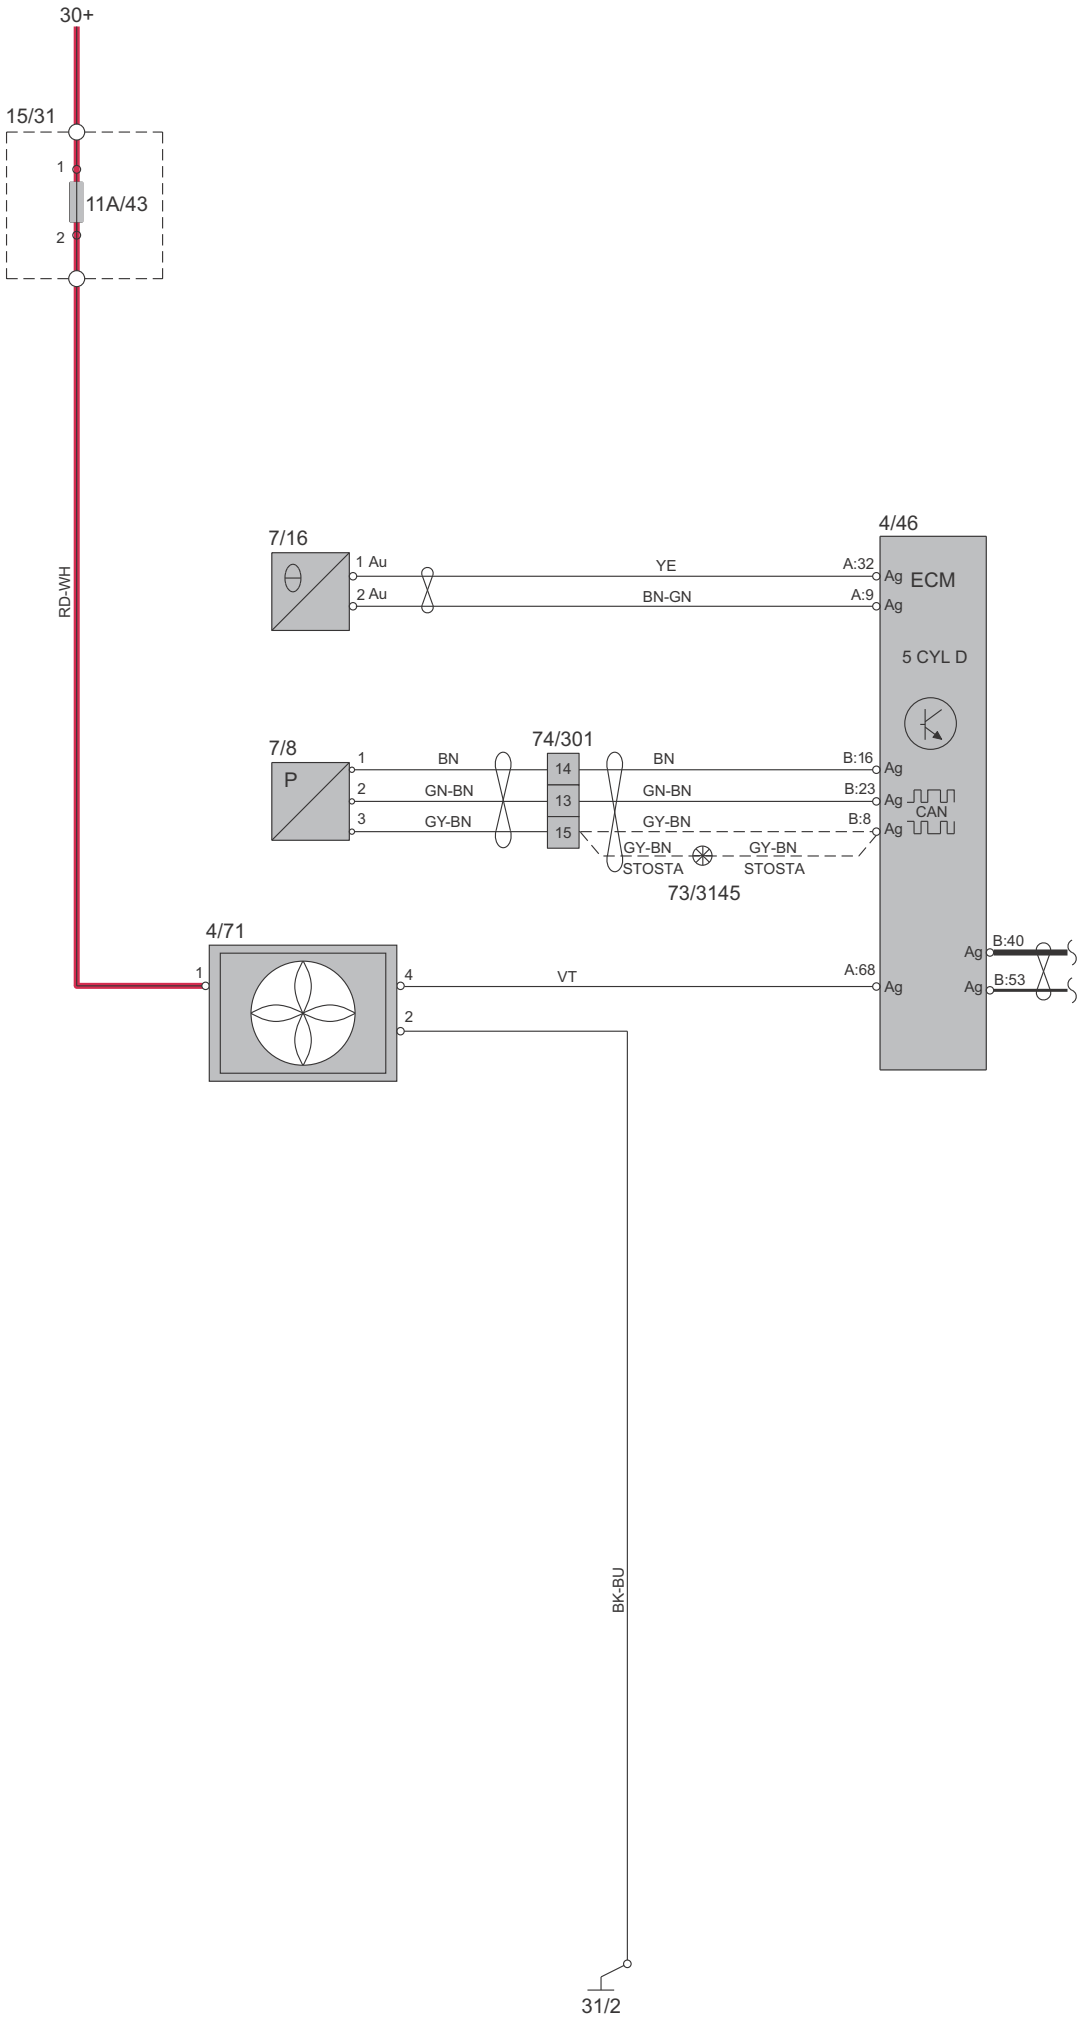

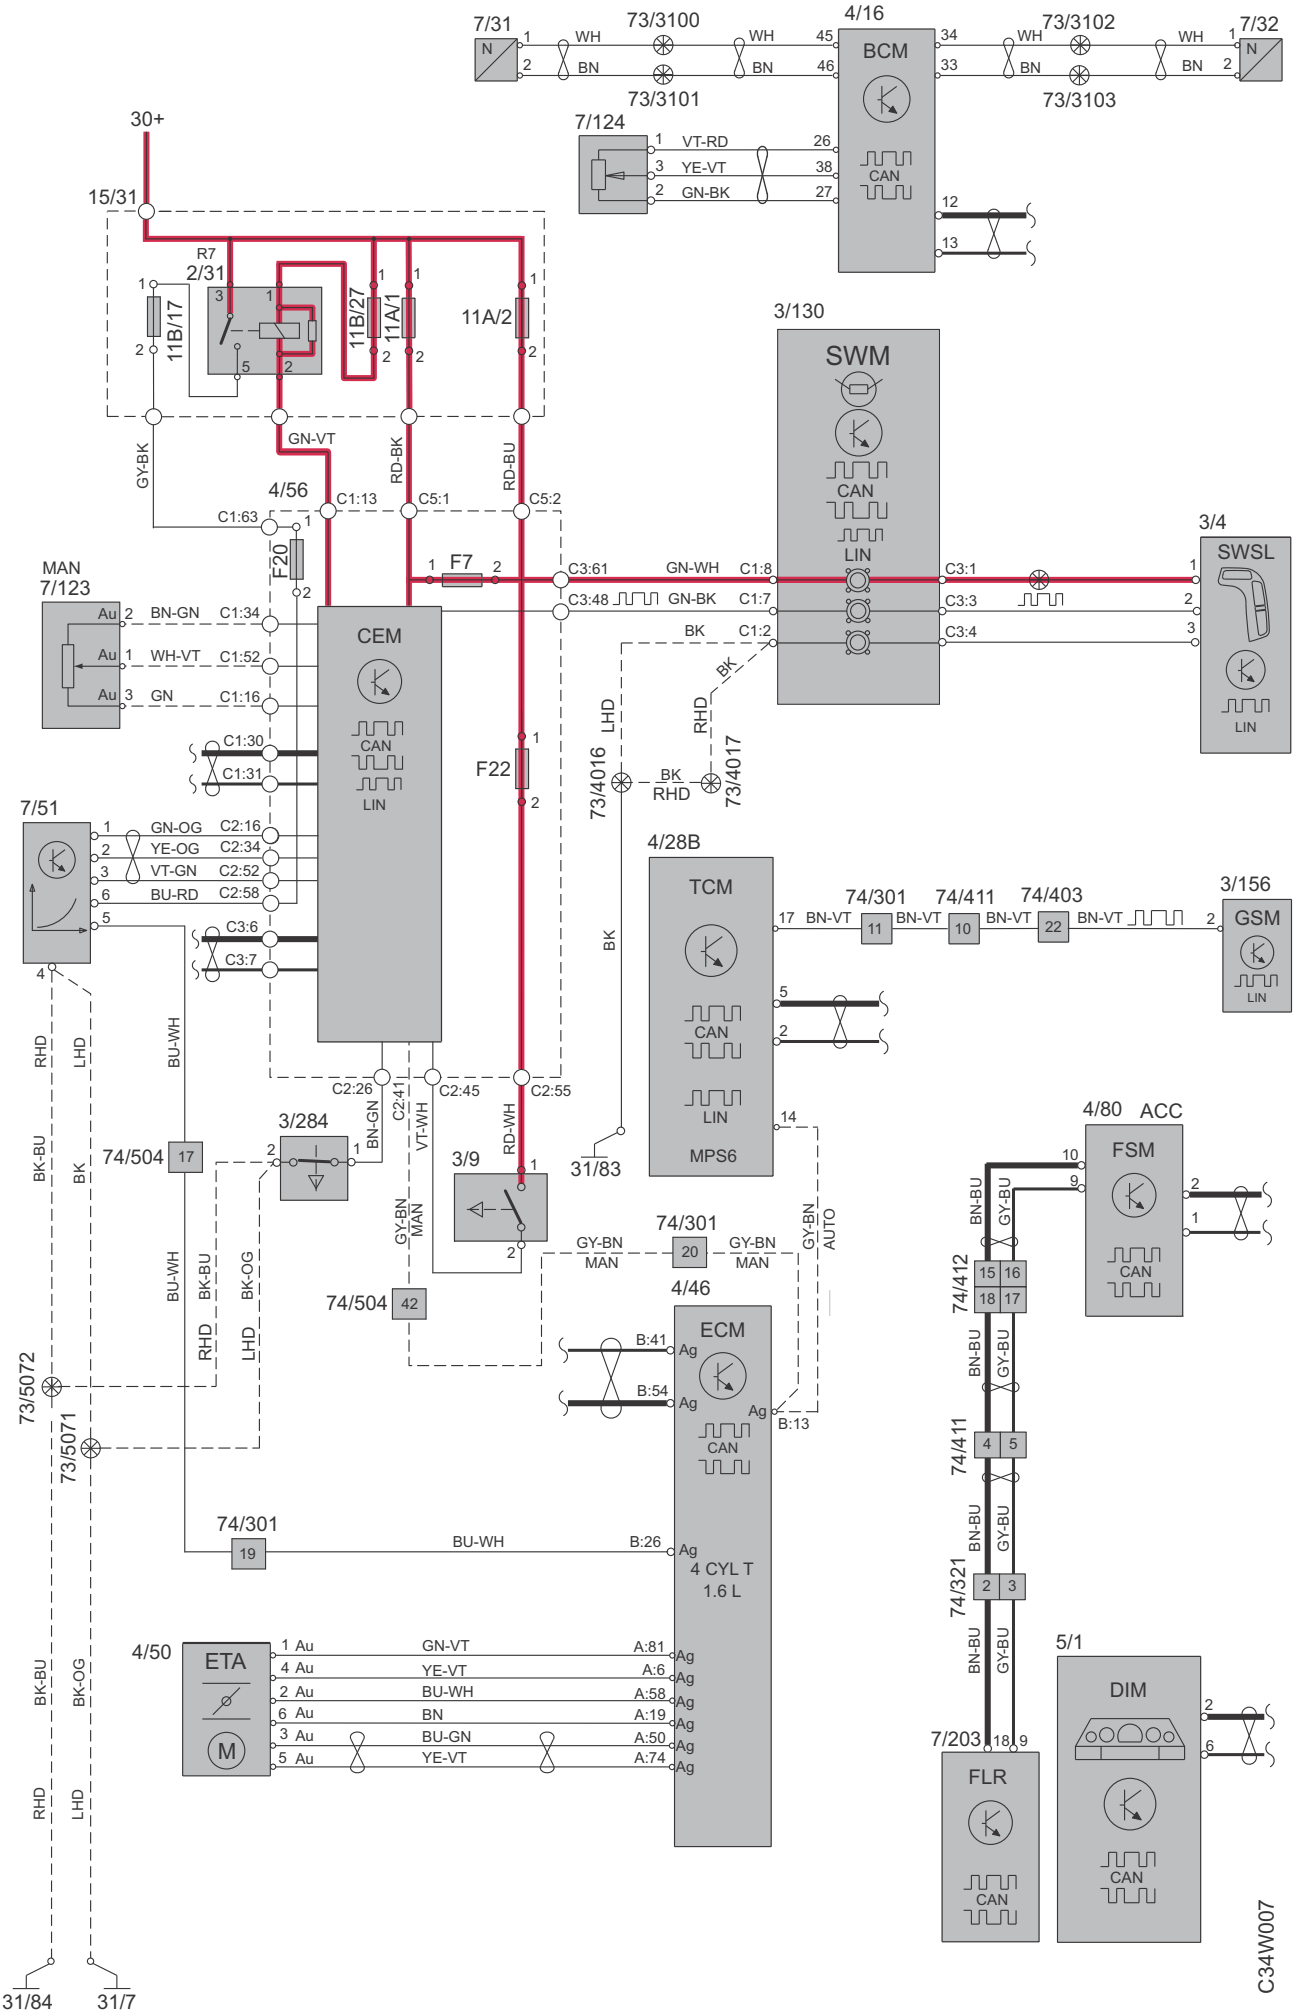
7/31
73/3100
4/16
BCM
73/3102
7/32
73/3101
73/3103
7/124
30+
15/31
R7
2/31
11B/17
11B/27
11A/1
11A/2
3/130
SWM
CAN
LIN
GN-VT
GY-BK
RD-BK
RD-BU
4/56
C1:63
C1:13
C5:1
C5:2
F20
F7
C3:61
GN-WH
C1:8
C3:48
GN-BK
C1:7
C1:2
C3:1
C3:3
C3:4
3/4
SWSL
MAN
7/123
BN-GN
C1:34
WH-VT
C1:52
GN
C1:16
CEM
C1:30
C1:31
F22
73/4016
73/4017
LHD
RHD
BK
7/51
GN-OG
C2:16
YE-OG
C2:34
VT-GN
C2:52
BU-RD
C2:58
C3:6
C3:7
4/28B
TCM
MPS6
74/301
74/411
74/403
3/156
GSM
C2:26
C2:41
C2:45
C2:55
3/284
3/9
74/504
31/83
BN-GN
VT-WH
RD-WH
GY-BN
MAN
AUTO
4/80
ACC
FSM
74/412
74/411
74/321
4/46
ECM
B:41
B:54
B:13
73/5072
73/5071
BU-WH
BK-BU
BK-OG
4 CYL T
1.6 L
4/50
ETA
GN-VT
YE-VT
BU-WH
BN
BU-GN
A:81
A:6
A:58
A:19
A:50
A:74
5/1
DIM
7/203
FLR
31/84
31/7
C34W007

Group 27 Engine controls
Cruise control 4-Cyl. 2.0L Turbo

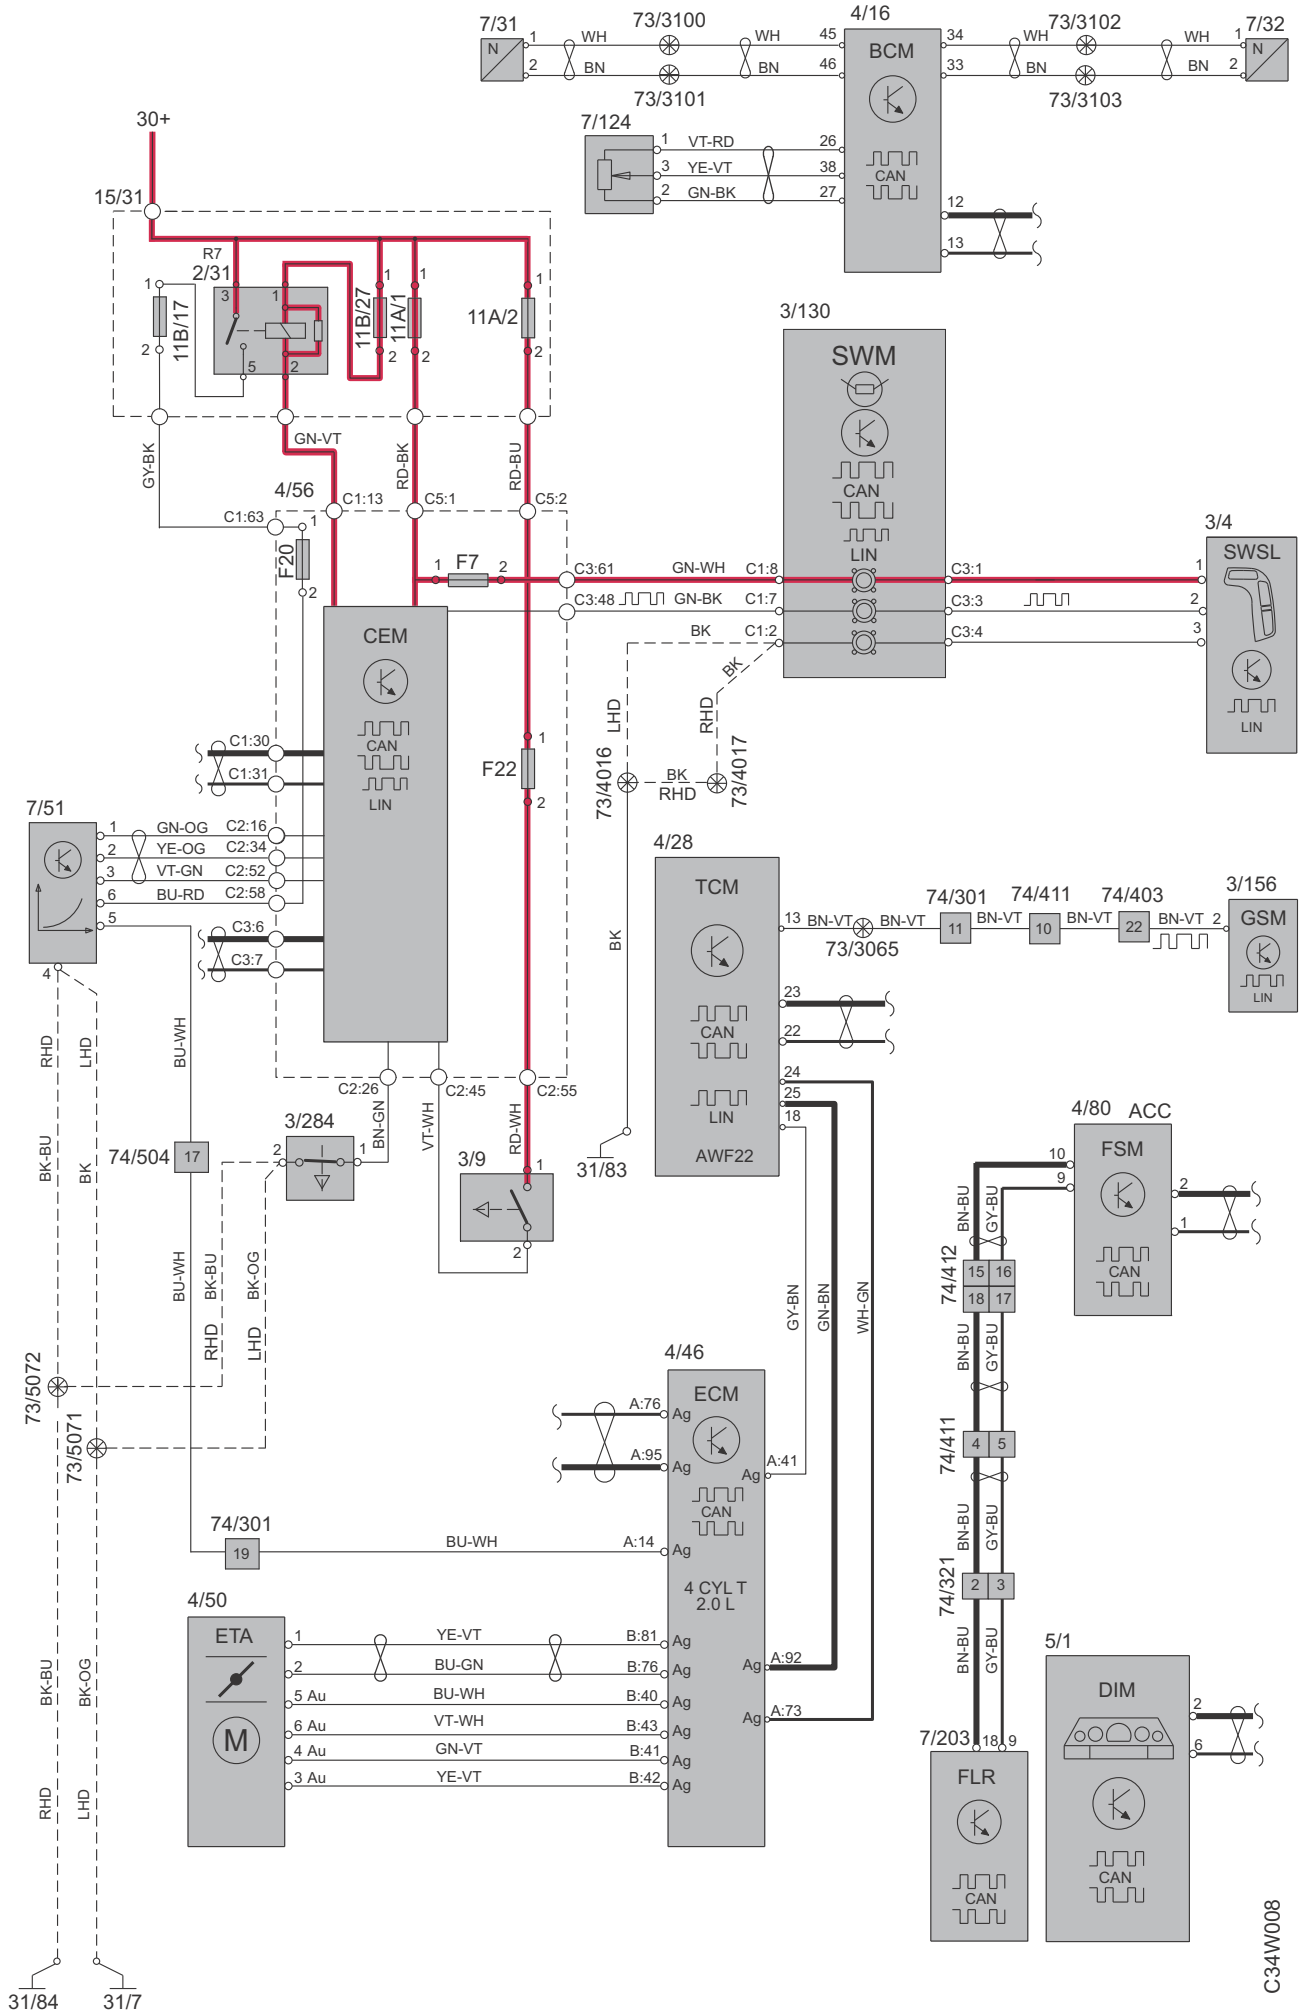

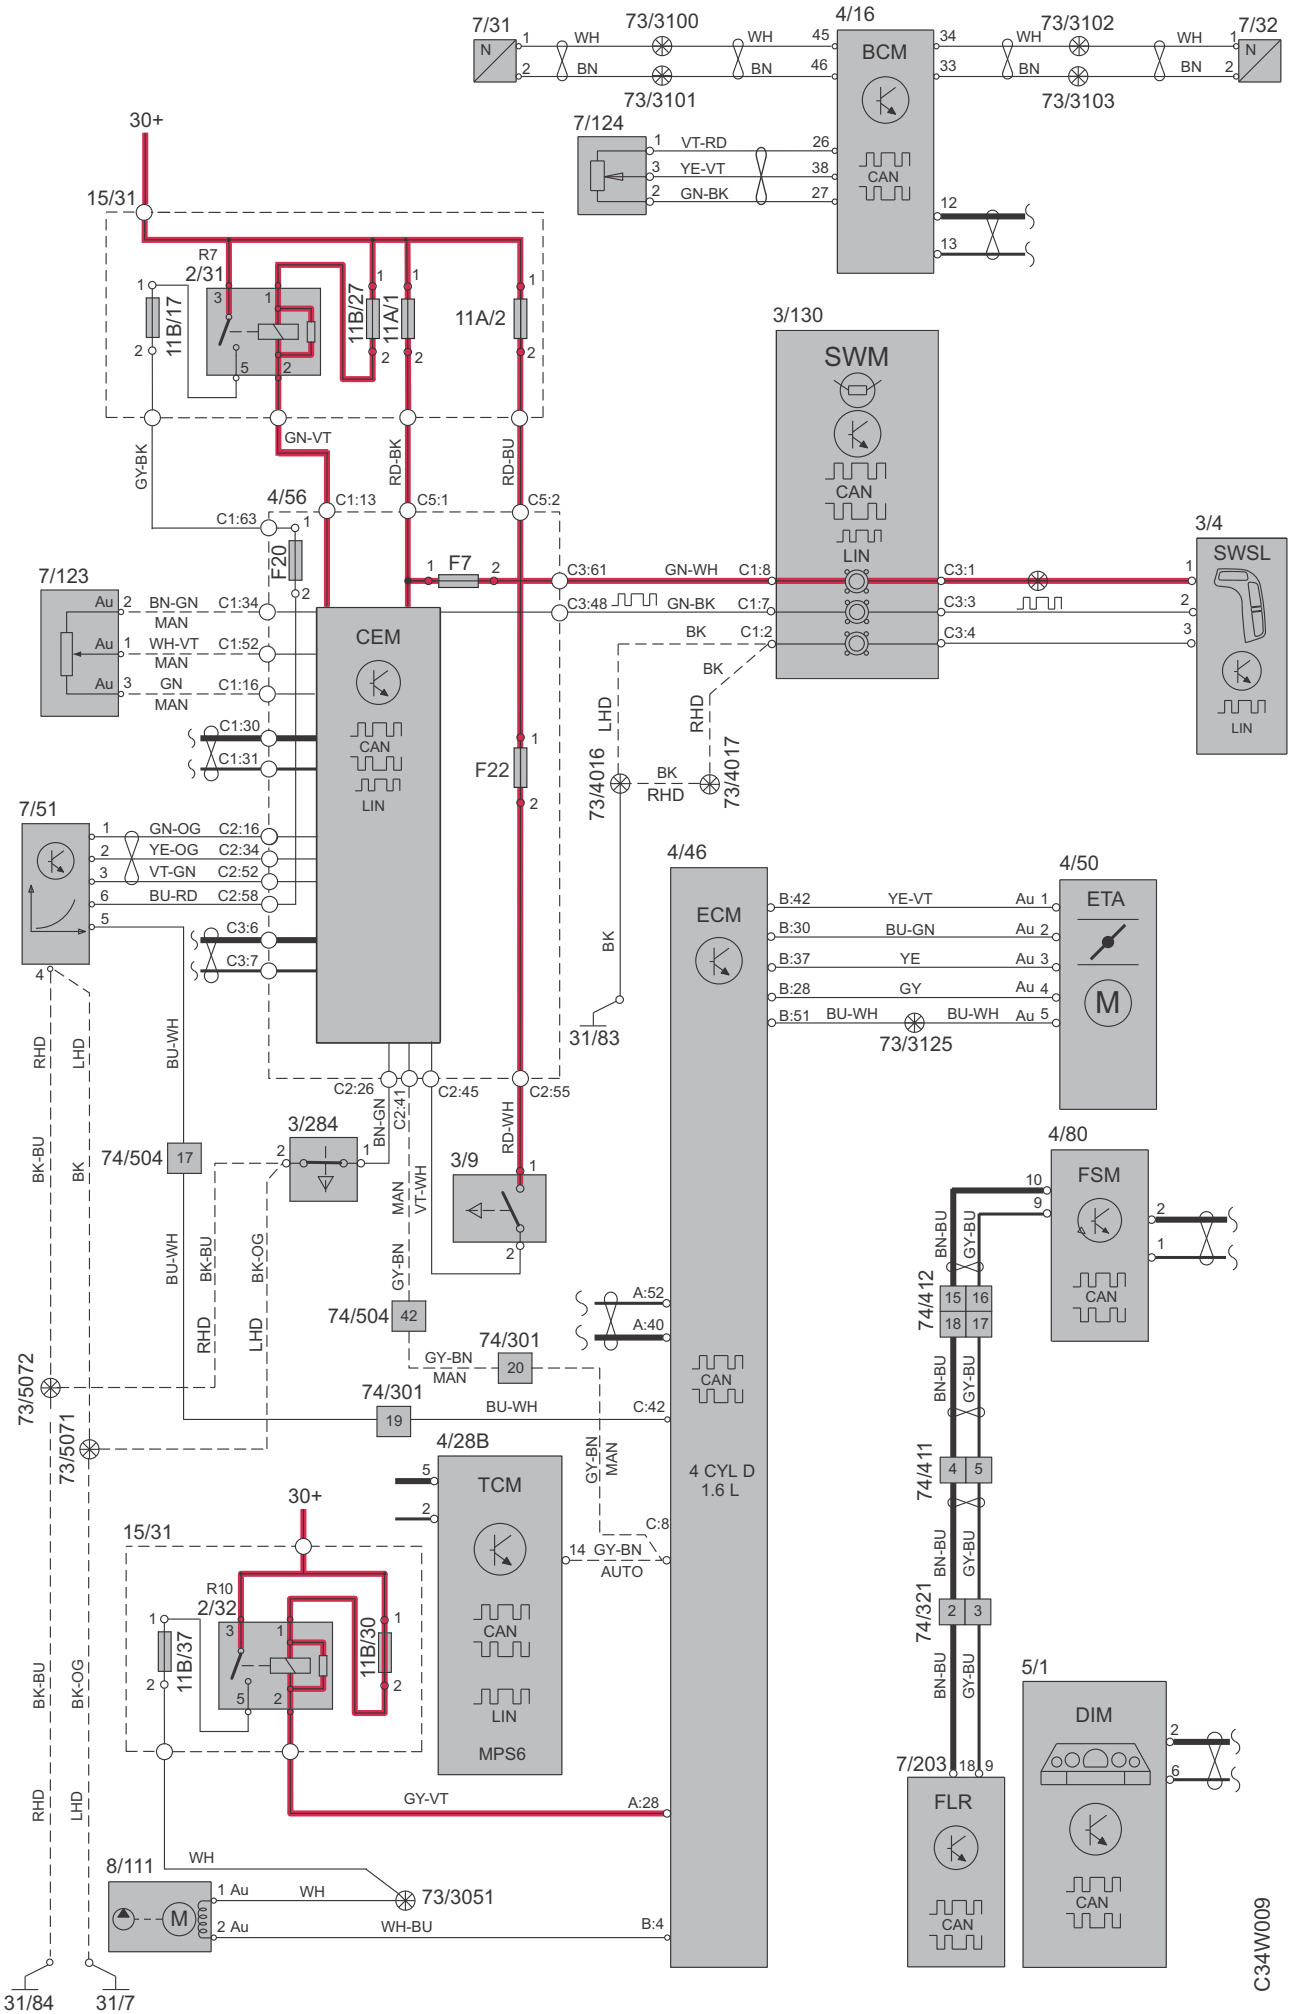
7/31
73/3100
4/16
BCM
73/3102
7/32
73/3101
73/3103
7/124
VT-RD
YE-VT
GN-BK
CAN
30+
15/31
R7
2/31
11B/17
11B/27
11A/1
11A/2
3/130
SWM
CAN
LIN
GN-VT
GY-BK
RD-BK
RD-BU
4/56
C1:63
C1:13
C5:1
C5:2
F20
F7
3/4
SWSL
7/123
BN-GN
WH-VT
GN
MAN
CEM
C1:30
C1:31
C3:61
GN-WH
C1:8
C3:48
GN-BK
C1:7
C3:1
C3:3
C3:4
BK
C1:2
LHD
RHD
73/4016
73/4017
F22
7/51
GN-OG
YE-OG
VT-GN
BU-RD
C2:16
C2:34
C2:52
C2:58
C3:6
C3:7
4/46
ECM
4/50
ETA
B:42
B:30
B:37
B:28
B:51
YE-VT
BU-GN
YE
GY
BU-WH
Au 1
Au 2
Au 3
Au 4
Au 5
73/3125
31/83
C2:26
C2:45
C2:55
3/284
74/504
3/9
4/80
FSM
BK-BU
BU-WH
BK-OG
RD-WH
GY-BN
A:52
A:40
74/301
74/412
74/411
74/321
73/5072
73/5071
4/28B
TCM
4 CYL D
1.6 L
C:42
C:8
14 GY-BN
AUTO
11B/37
11B/30
R10
2/32
MPS6
GY-VT
A:28
5/1
DIM
7/203
FLR
8/111
73/3051
WH-BU
B:4
31/84
31/7
C34W009

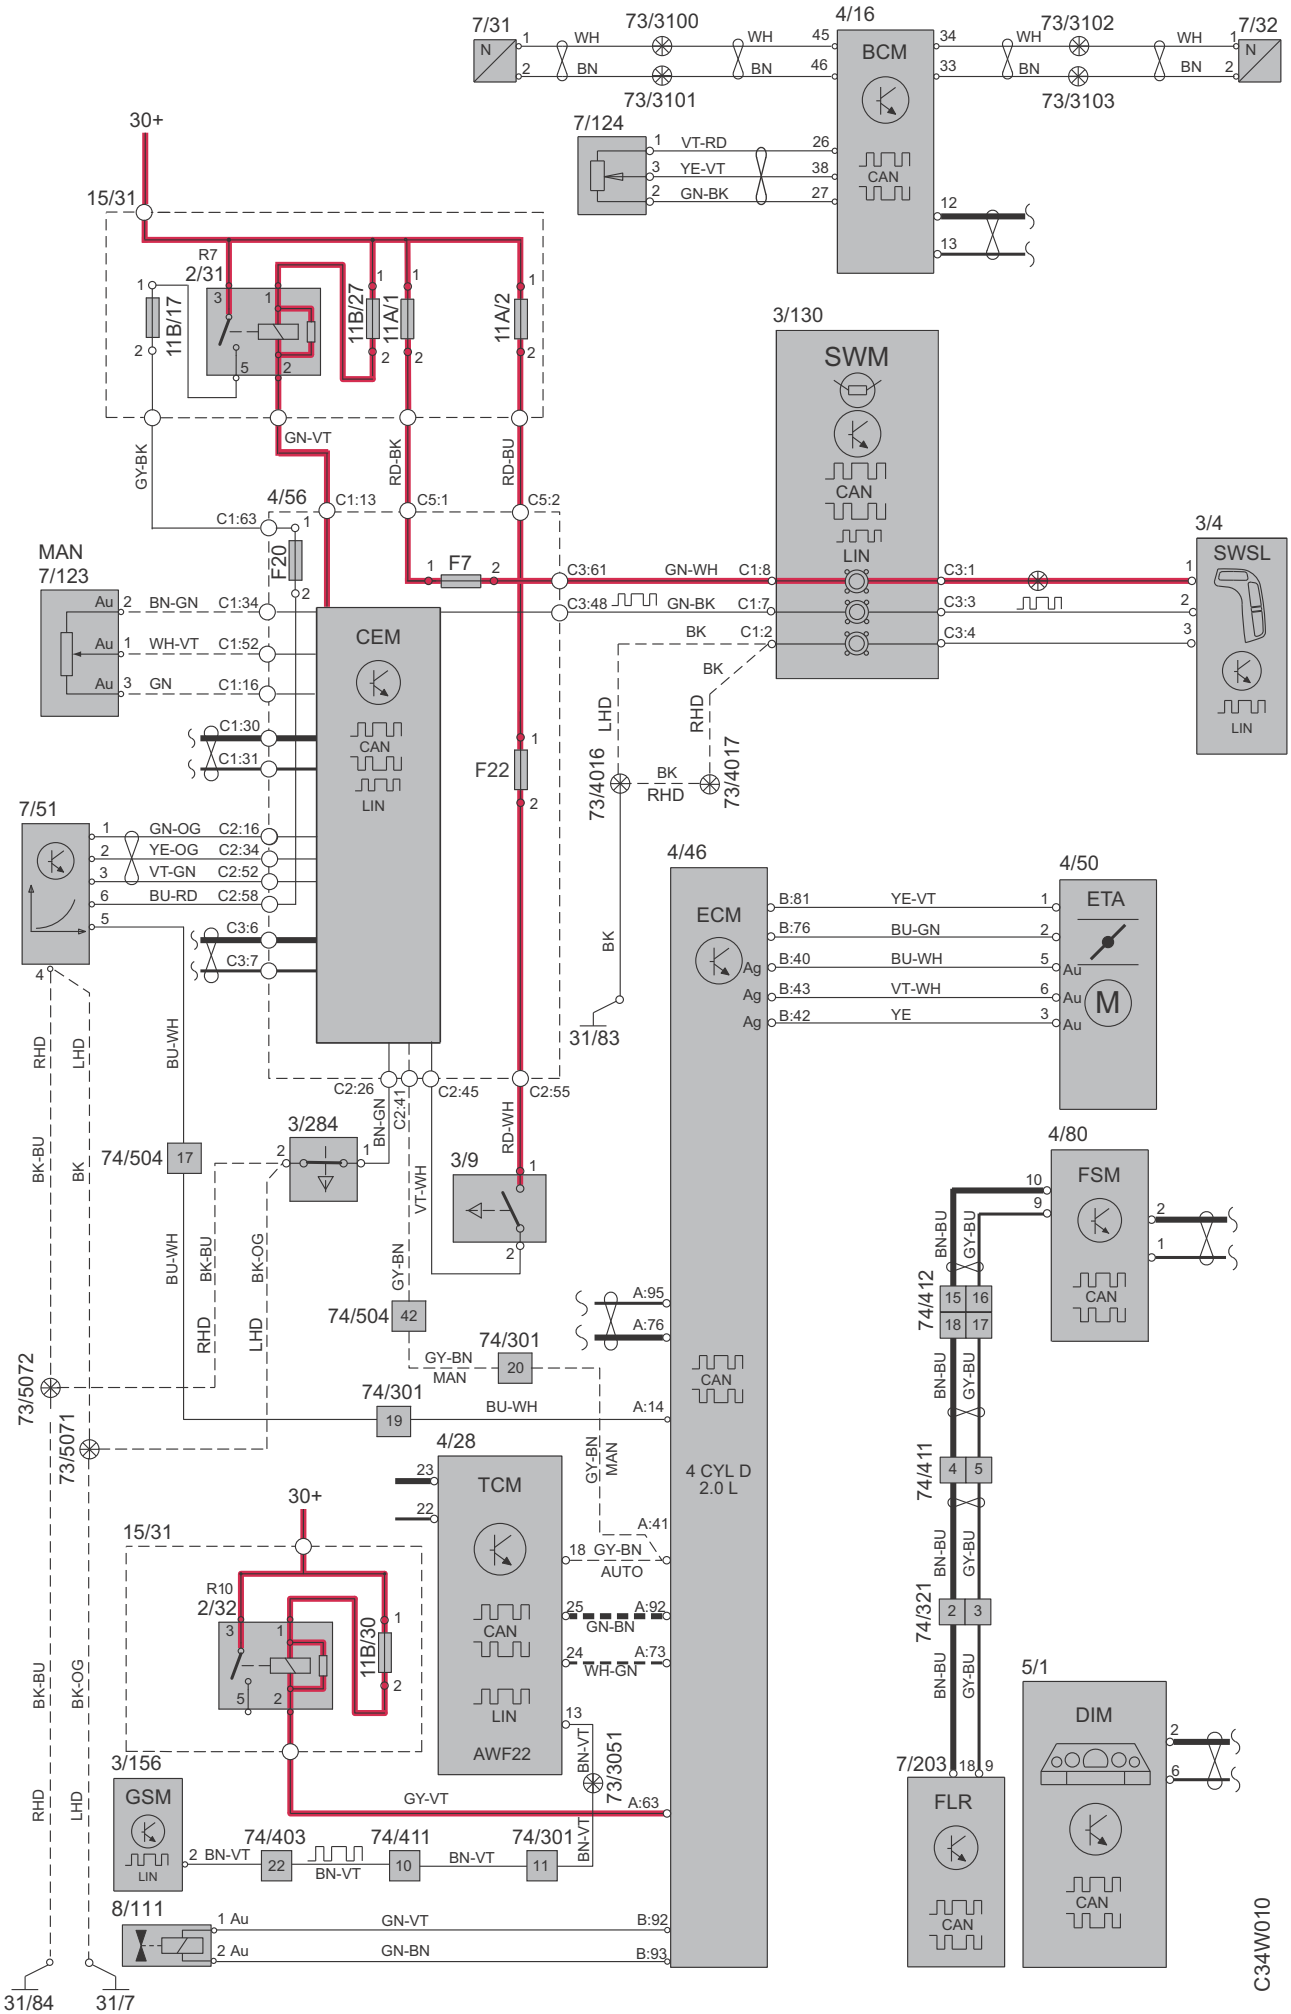
7/31
73/3100
4/16
BCM
73/3102
7/32
73/3101
73/3103
7/124
30+
15/31
R7
2/31
11B/17
11B/27
11A/1
11A/2
3/130
SWM
CAN
LIN
GN-VT
GY-BK
RD-BK
RD-BU
4/56
C1:63
C1:13
C5:1
C5:2
F20
F7
C3:61
GN-WH
C1:8
C3:48
GN-BK
C1:7
C3:1
C3:3
C3:4
3/4
SWSL
MAN
7/123
BN-GN
C1:34
WH-VT
C1:52
GN
C1:16
CEM
BK
C1:2
C1:30
C1:31
F22
LHD
RHD
73/4016
73/4017
7/51
GN-OG
C2:16
YE-OG
C2:34
VT-GN
C2:52
BU-RD
C2:58
C3:6
C3:7
4/46
ECM
B:81
YE-VT
B:76
BU-GN
B:40
BU-WH
B:43
VT-WH
B:42
YE
4/50
ETA
31/83
C2:26
C2:45
C2:55
C2:41
BN-GN
RD-WH
3/284
3/9
74/504
17
42
VT-WH
GY-BN
BU-WH
BK-BU
BK-OG
4/80
FSM
74/412
74/411
74/321
BN-BU
GY-BU
A:95
A:76
74/301
20
19
MAN
BU-WH
A:14
73/5072
73/5071
4/28
TCM
AWF22
4 CYL D
2.0 L
A:41
GY-BN
AUTO
A:92
GN-BN
A:73
WH-GN
R10
2/32
11B/30
3/156
GSM
73/3051
A:63
GY-VT
74/403
74/411
74/301
22
10
11
BN-VT
8/111
1 Au
2 Au
GN-VT
GN-BN
B:92
B:93
5/1
DIM
7/203
FLR
31/84
31/7
C34W010

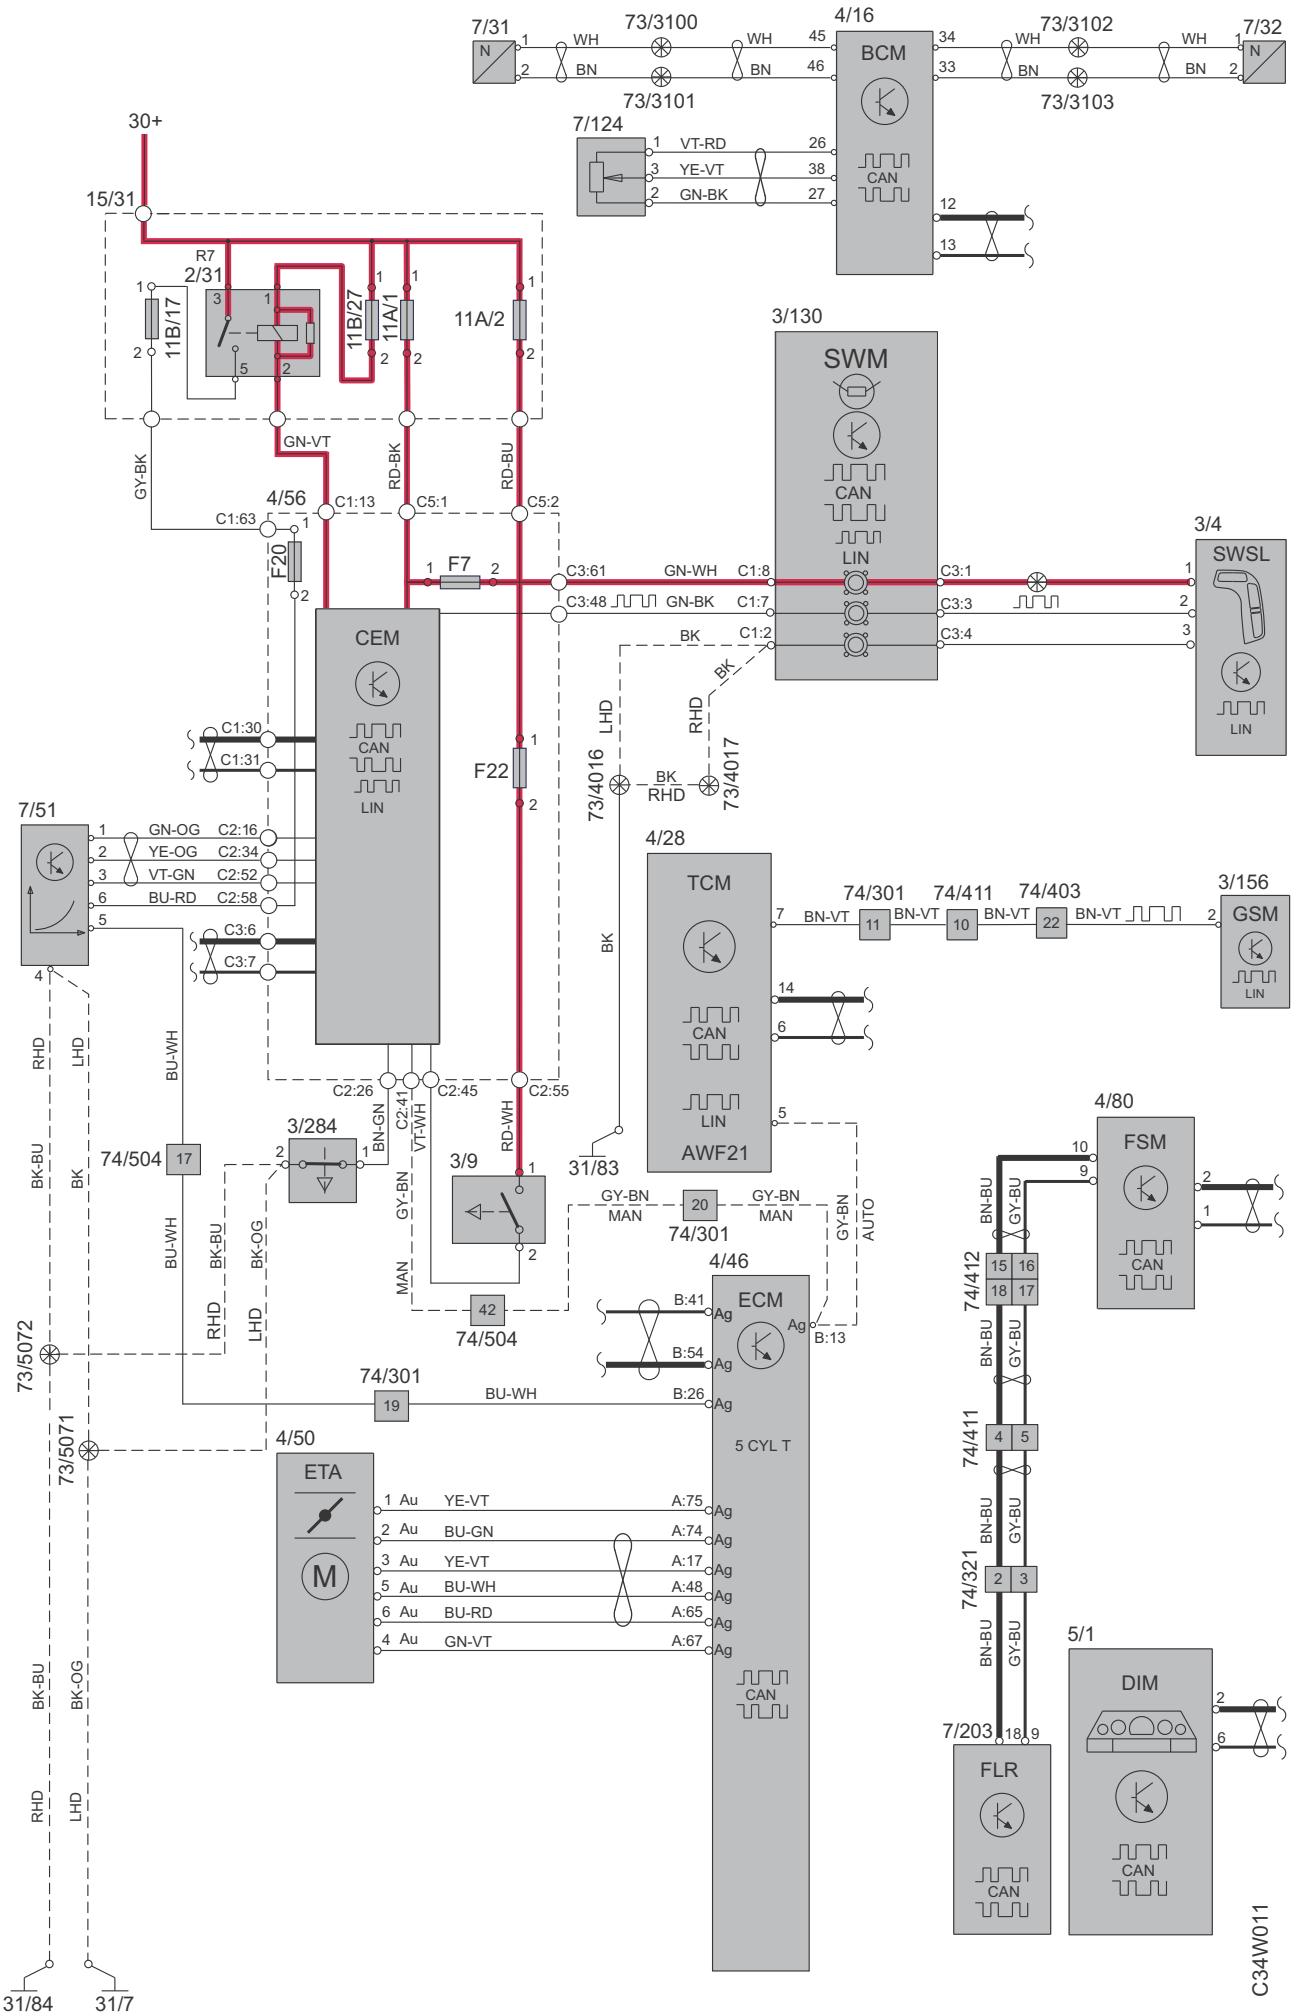
7/31
73/3100
4/16
BCM
73/3102
7/32
73/3101
73/3103
7/124
30+
15/31
R7
2/31
11B/17
11B/27
11A/1
11A/2
3/130
SWM
CAN
LIN
3/4
SWSL
GN-VT
GY-BK
RD-BK
RD-BU
4/56
C1:63
C1:13
C5:1
C5:2
F20
F7
C3:61
GN-WH
C1:8
C3:1
C3:48
GN-BK
C1:7
C3:3
C3:4
BK
C1:2
CEM
C1:30
C1:31
F22
LHD
RHD
73/4016
73/4017
7/51
GN-OG
YE-OG
VT-GN
BU-RD
C2:16
C2:34
C2:52
C2:58
C3:6
C3:7
4/28
TCM
74/301
74/411
74/403
3/156
GSM
BN-VT
AWF21
C2:26
C2:45
C2:55
3/284
3/9
74/504
31/83
GY-BN
MAN
AUTO
20
42
4/46
ECM
B:41
B:54
B:26
B:13
5 CYL T
4/80
FSM
74/412
74/411
74/321
BN-BU
GY-BU
5/1
DIM
7/203
FLR
73/5072
73/5071
74/301
19
BU-WH
4/50
ETA
M
YE-VT
BU-GN
BU-RD
GN-VT
A:75
A:74
A:17
A:48
A:65
A:67
BK-BU
BK-OG
31/84
31/7
C34W011

Group 27 Engine controls
Cruise control 6-Cyl.

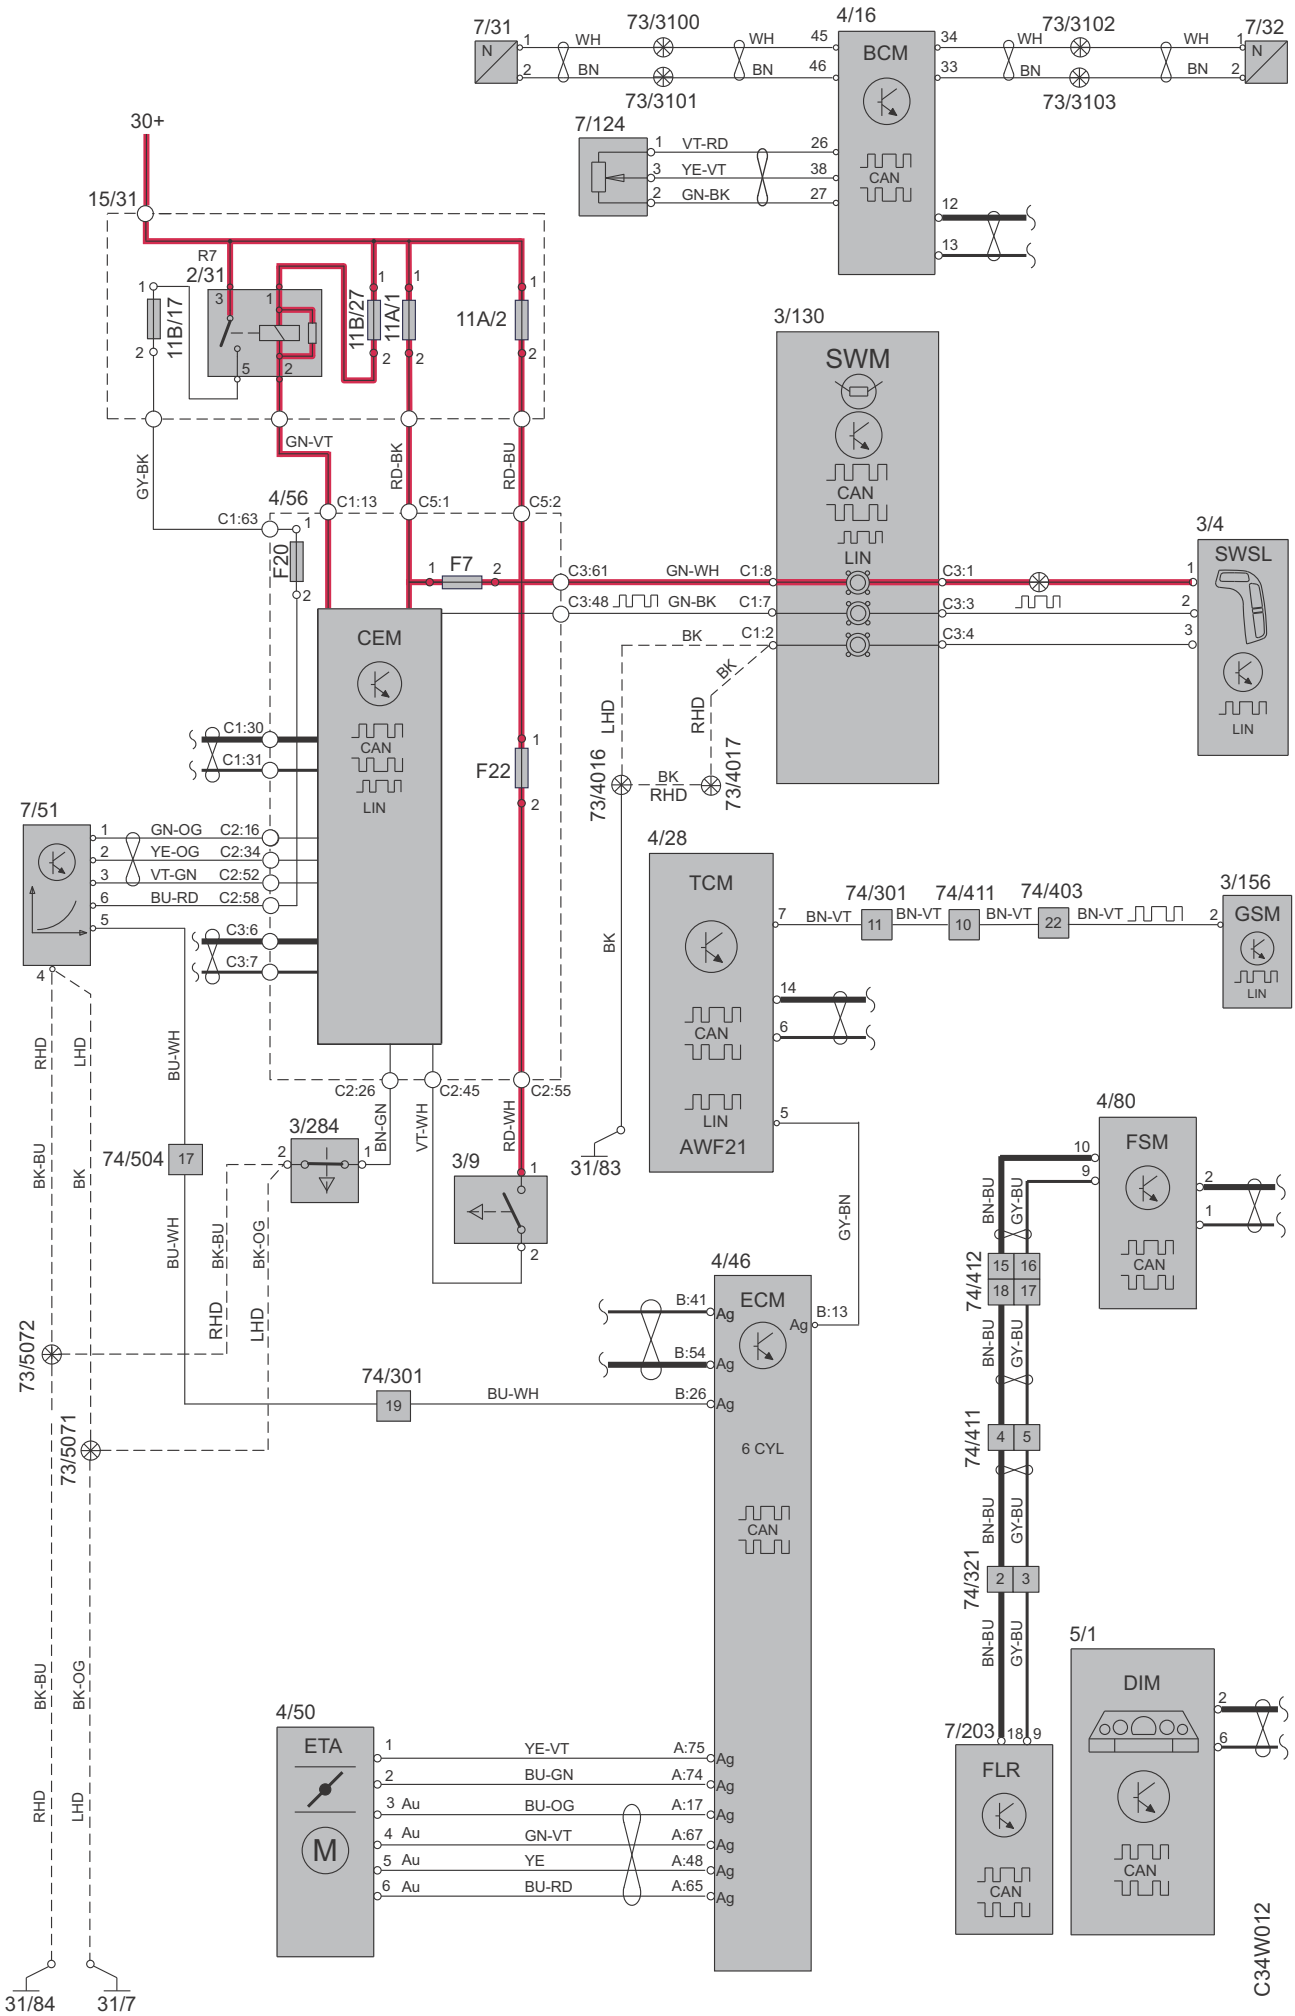

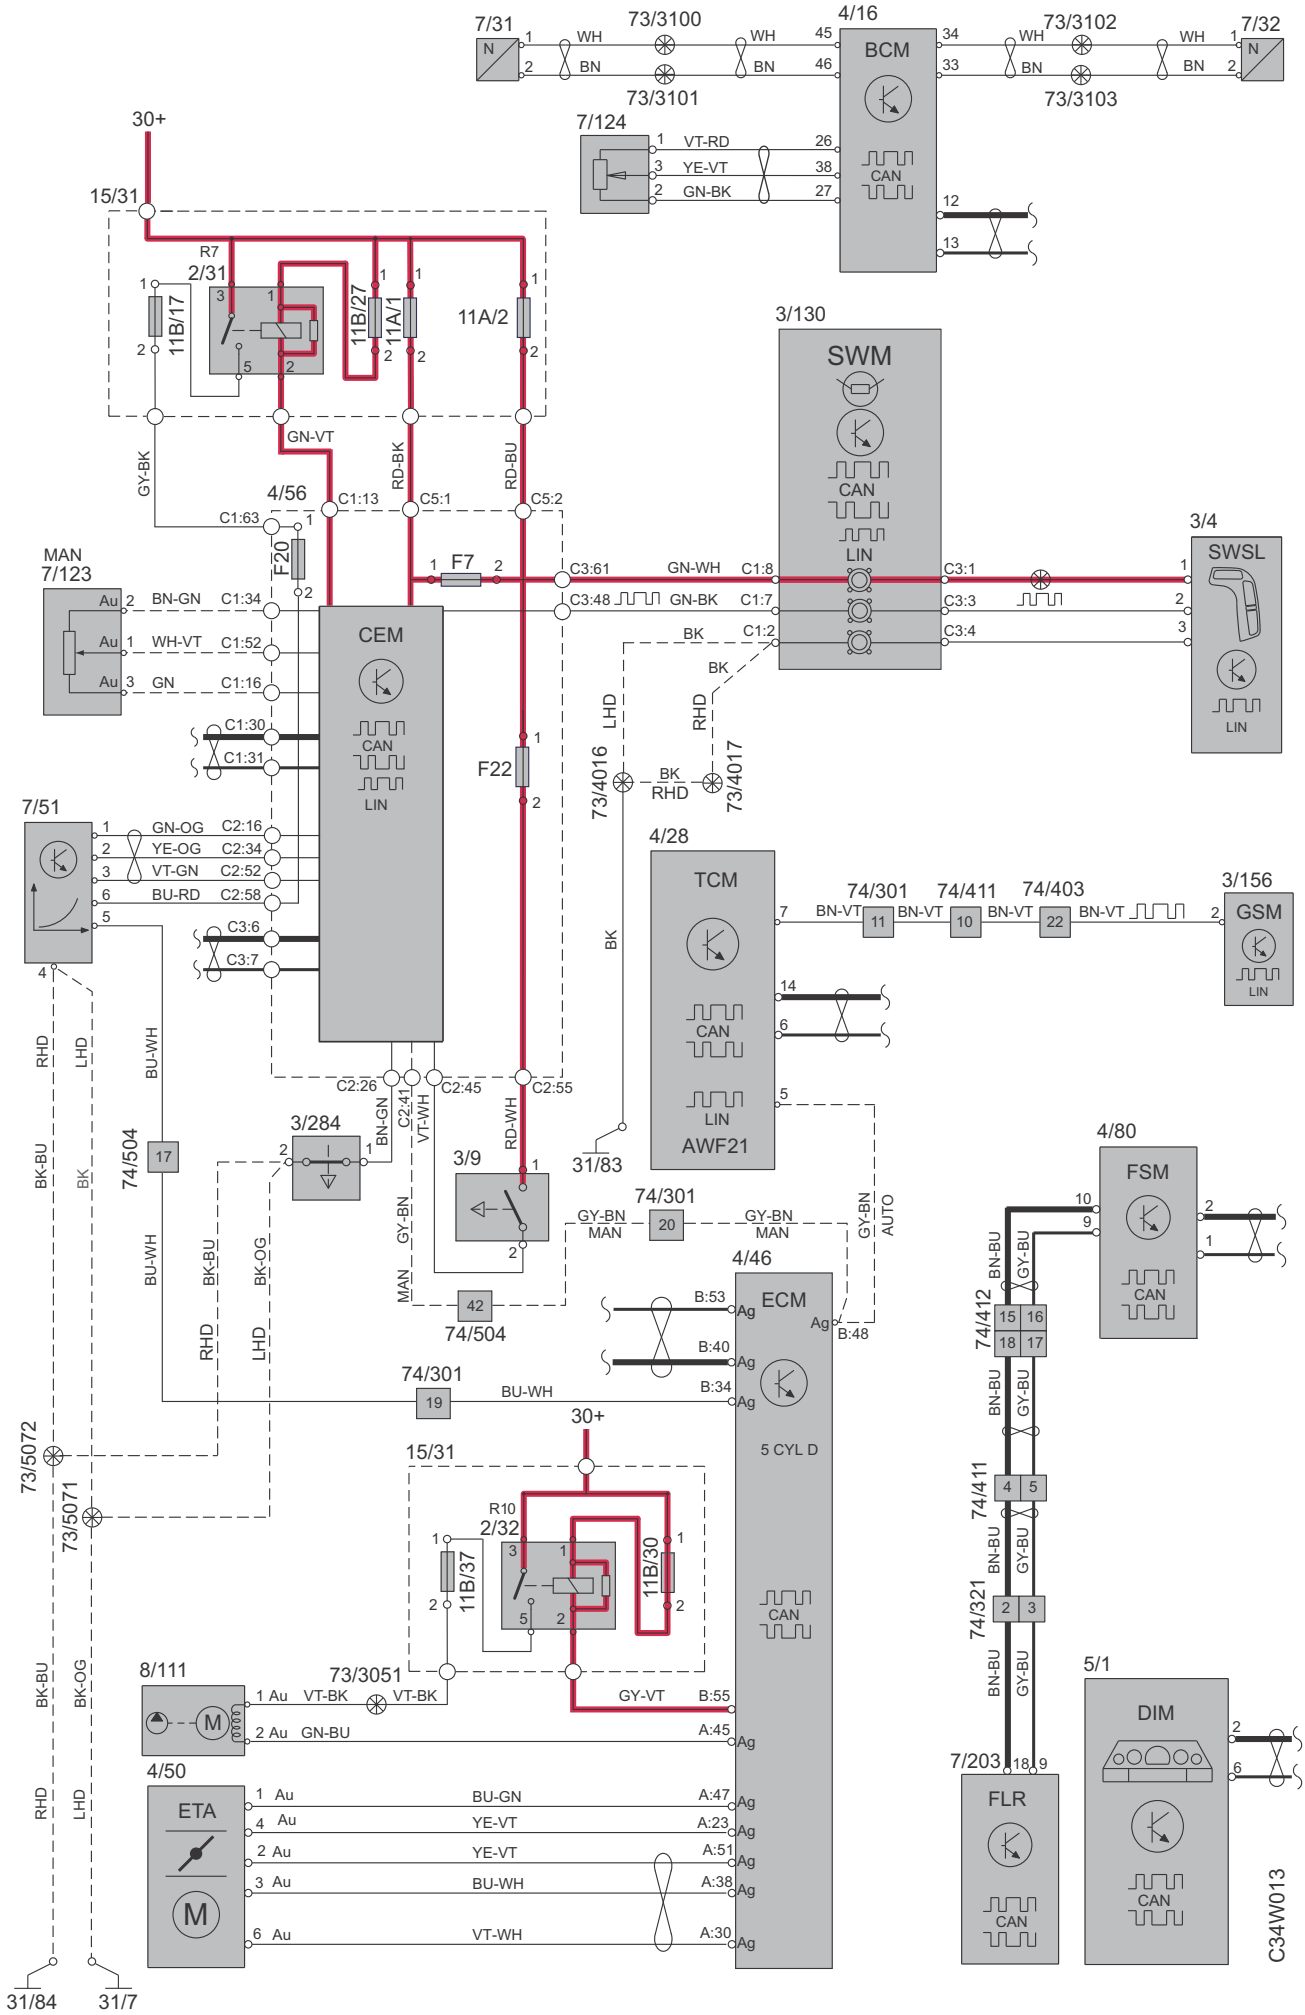
7/31
73/3100
4/16
BCM
73/3102
7/32
73/3101
73/3103
7/124
30+
15/31
R7
2/31
11B/17
11B/27
11A/1
11A/2
3/130
SWM
CAN
LIN
GN-VT
GY-BK
RD-BK
RD-BU
4/56
C1:63
C1:13
C5:1
C5:2
F20
F7
C3:61
GN-WH
C1:8
C3:1
3/4
SWSL
MAN
7/123
BN-GN
C1:34
WH-VT
C1:52
GN
C1:16
C3:48
GN-BK
C1:7
C3:3
C1:2
C3:4
BK
LHD
RHD
73/4016
73/4017
CEM
C1:30
C1:31
F22
7/51
GN-OG
C2:16
YE-OG
C2:34
VT-GN
C2:52
BU-RD
C2:58
C3:6
C3:7
4/28
TCM
AWF21
74/301
74/411
74/403
3/156
GSM
BN-VT
C2:26
C2:45
C2:55
C2:41
BN-GN
VT-WH
RD-WH
3/284
3/9
31/83
74/504
74/301
GY-BN
MAN
AUTO
4/46
ECM
5 CYL D
B:53
B:40
B:34
B:48
Ag
BU-WH
BK-BU
BK-OG
RHD
LHD
73/5072
73/5071
30+
15/31
R10
2/32
11B/37
11B/30
CAN
8/111
73/3051
VT-BK
GY-VT
B:55
A:45
GN-BU
4/50
ETA
BU-GN
A:47
YE-VT
A:23
A:51
BU-WH
A:38
VT-WH
A:30
4/80
FSM
74/412
74/411
74/321
5/1
DIM
7/203
FLR
31/84
31/7
C34W013

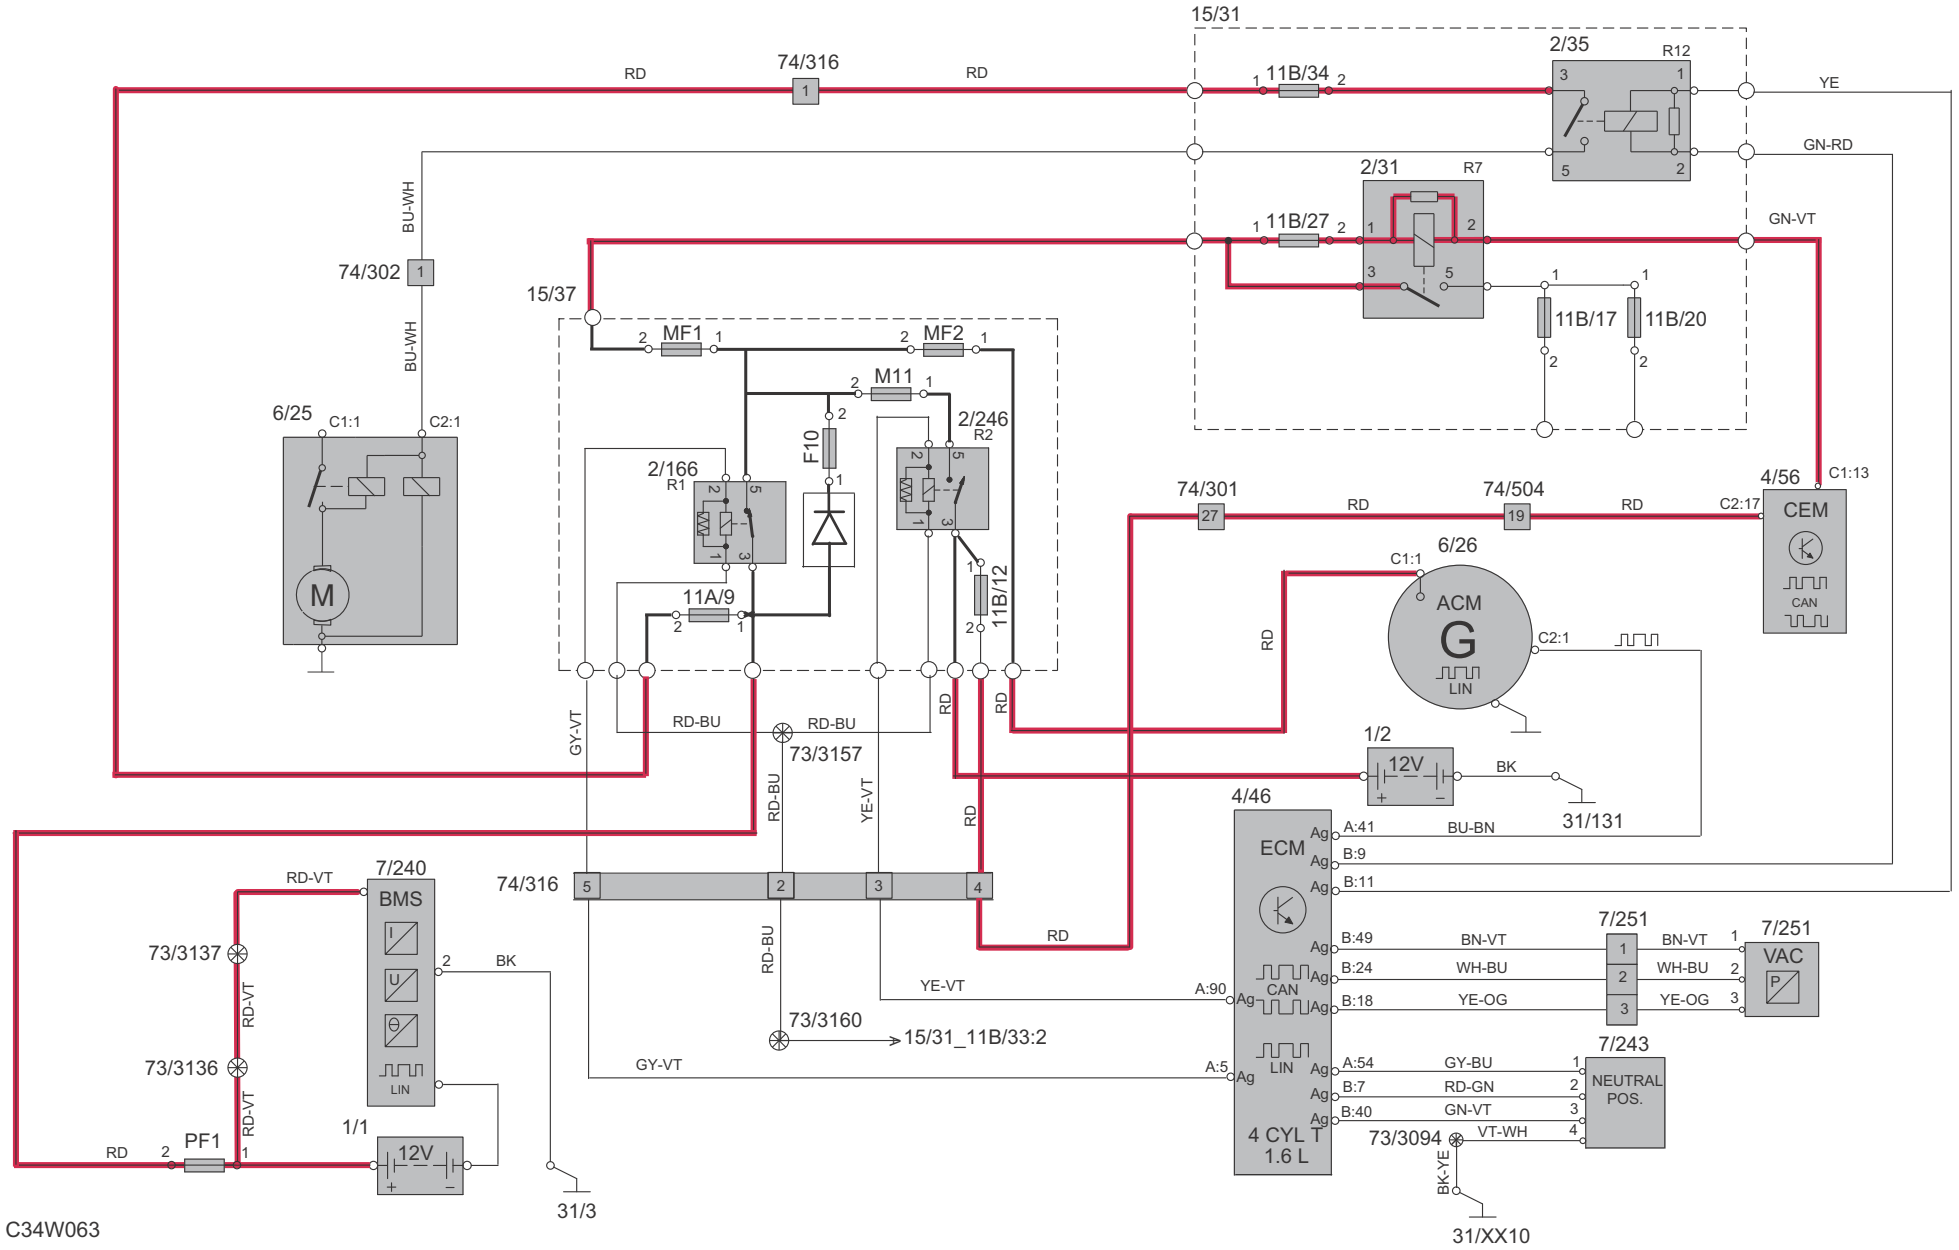
15/31
74/316
RD
11B/34
2/35
R12
YE
GN-RD
2/31
R7
11B/27
GN-VT
11B/17
11B/20
74/302
BU-WH
15/37
MF1
MF2
M11
2/246
R2
F10
2/166
R1
11A/9
11B/12
6/25
C1:1
C2:1
M
74/301
27
74/504
19
4/56
C1:13
C2:17
CEM
CAN
6/26
ACM
G
LIN
1/2
12V
BK
31/131
GY-VT
RD-BU
73/3157
YE-VT
4/46
ECM
A:41
BU-BN
B:9
B:11
B:49
BN-VT
B:24
WH-BU
B:18
YE-OG
A:90
CAN
7/251
VAC
A:5
LIN
A:54
GY-BU
B:7
RD-GN
B:40
GN-VT
7/243
NEUTRAL POS.
4 CYL T
1.6 L
73/3094
VT-WH
BK-YE
31/XX10
74/316
73/3160
15/31_11B/33:2
7/240
BMS
RD-VT
73/3137
73/3136
PF1
1/1
12V
31/3
C34W063

Group 27 Engine controls
Start-/Stop function 4-Cyl. 2.0L Turbo

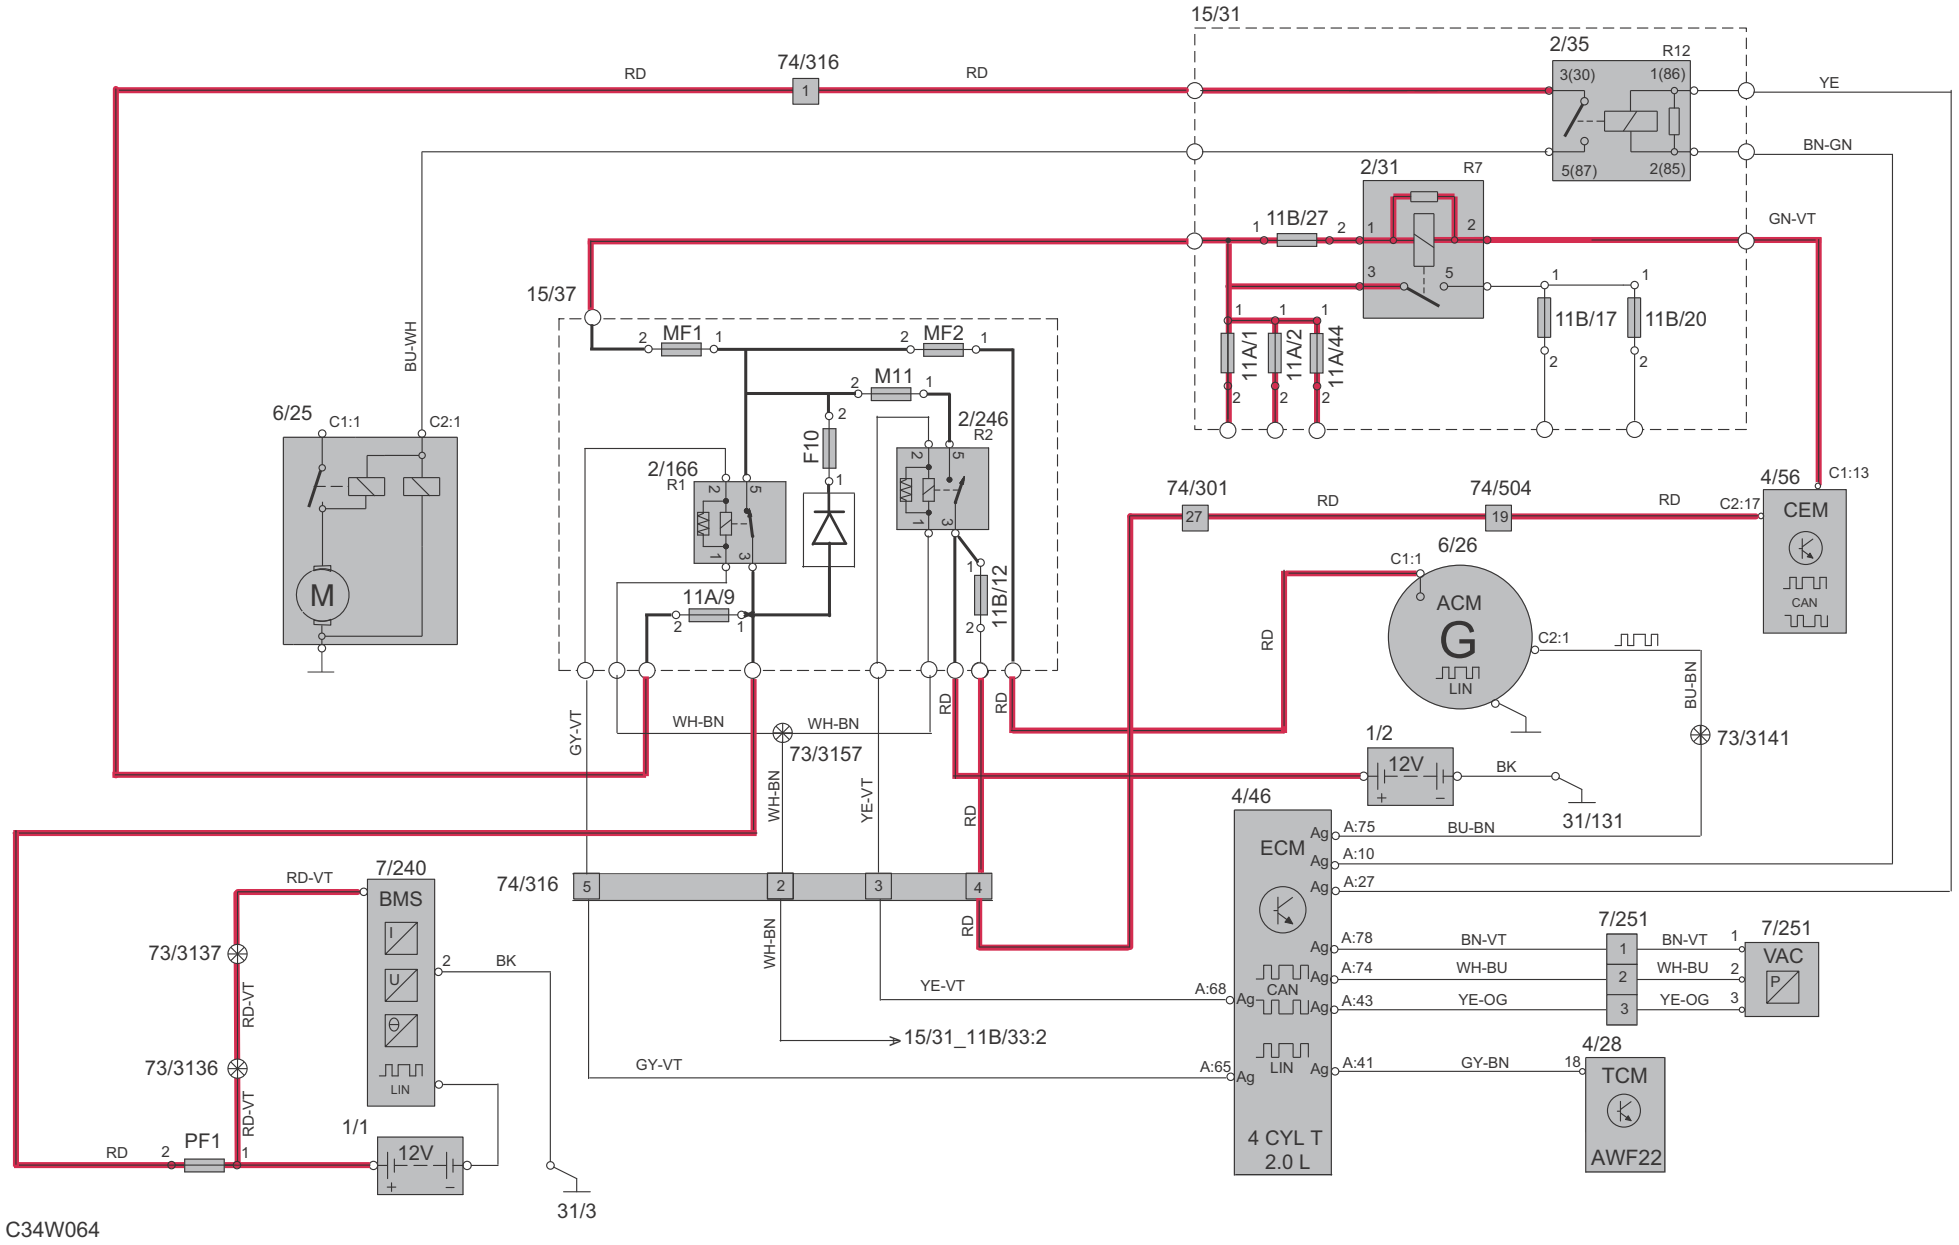

Group 27 Engine controls
Start-/Stop function 4-Cyl. 1.6L Diesel

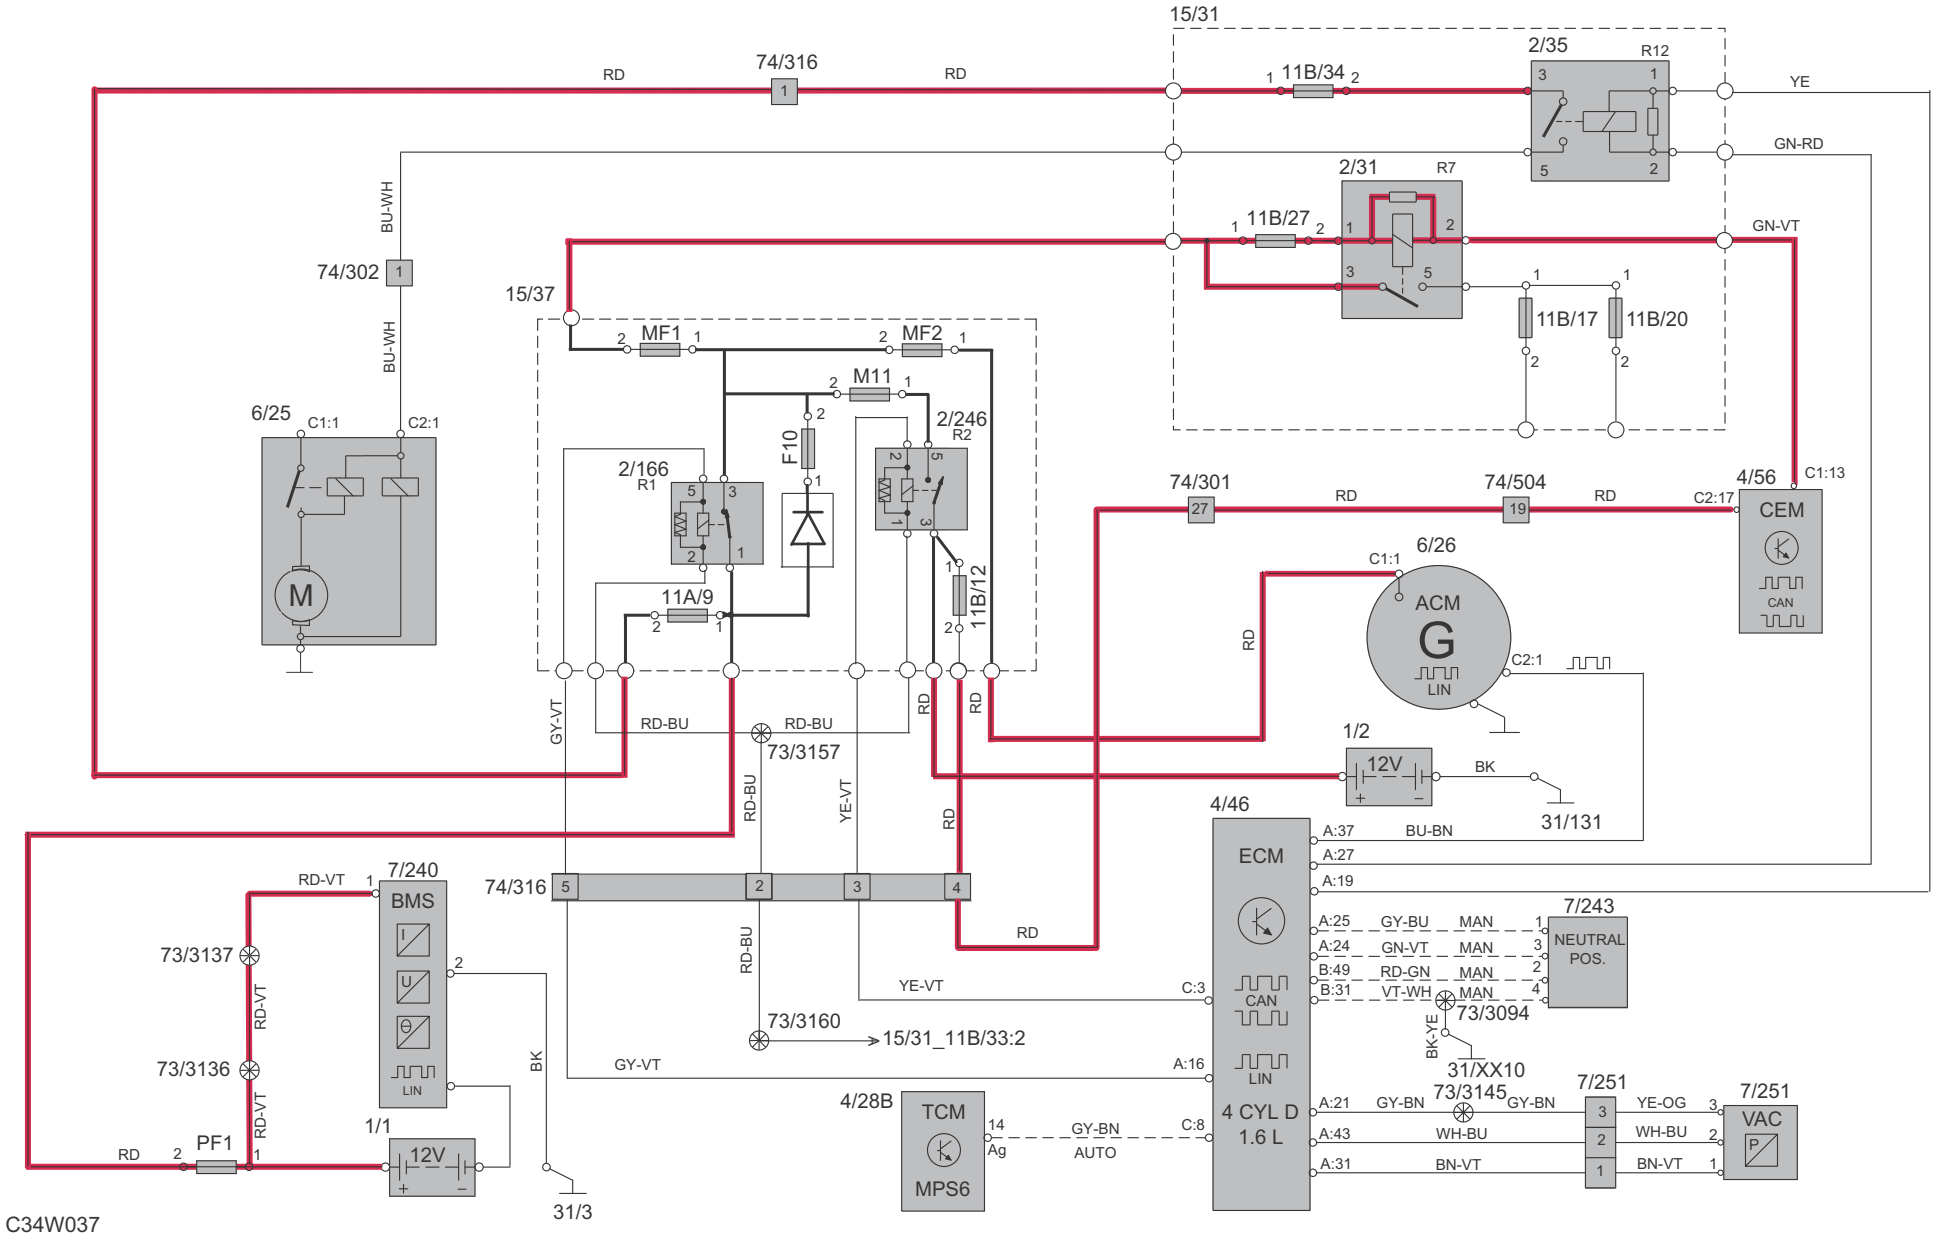

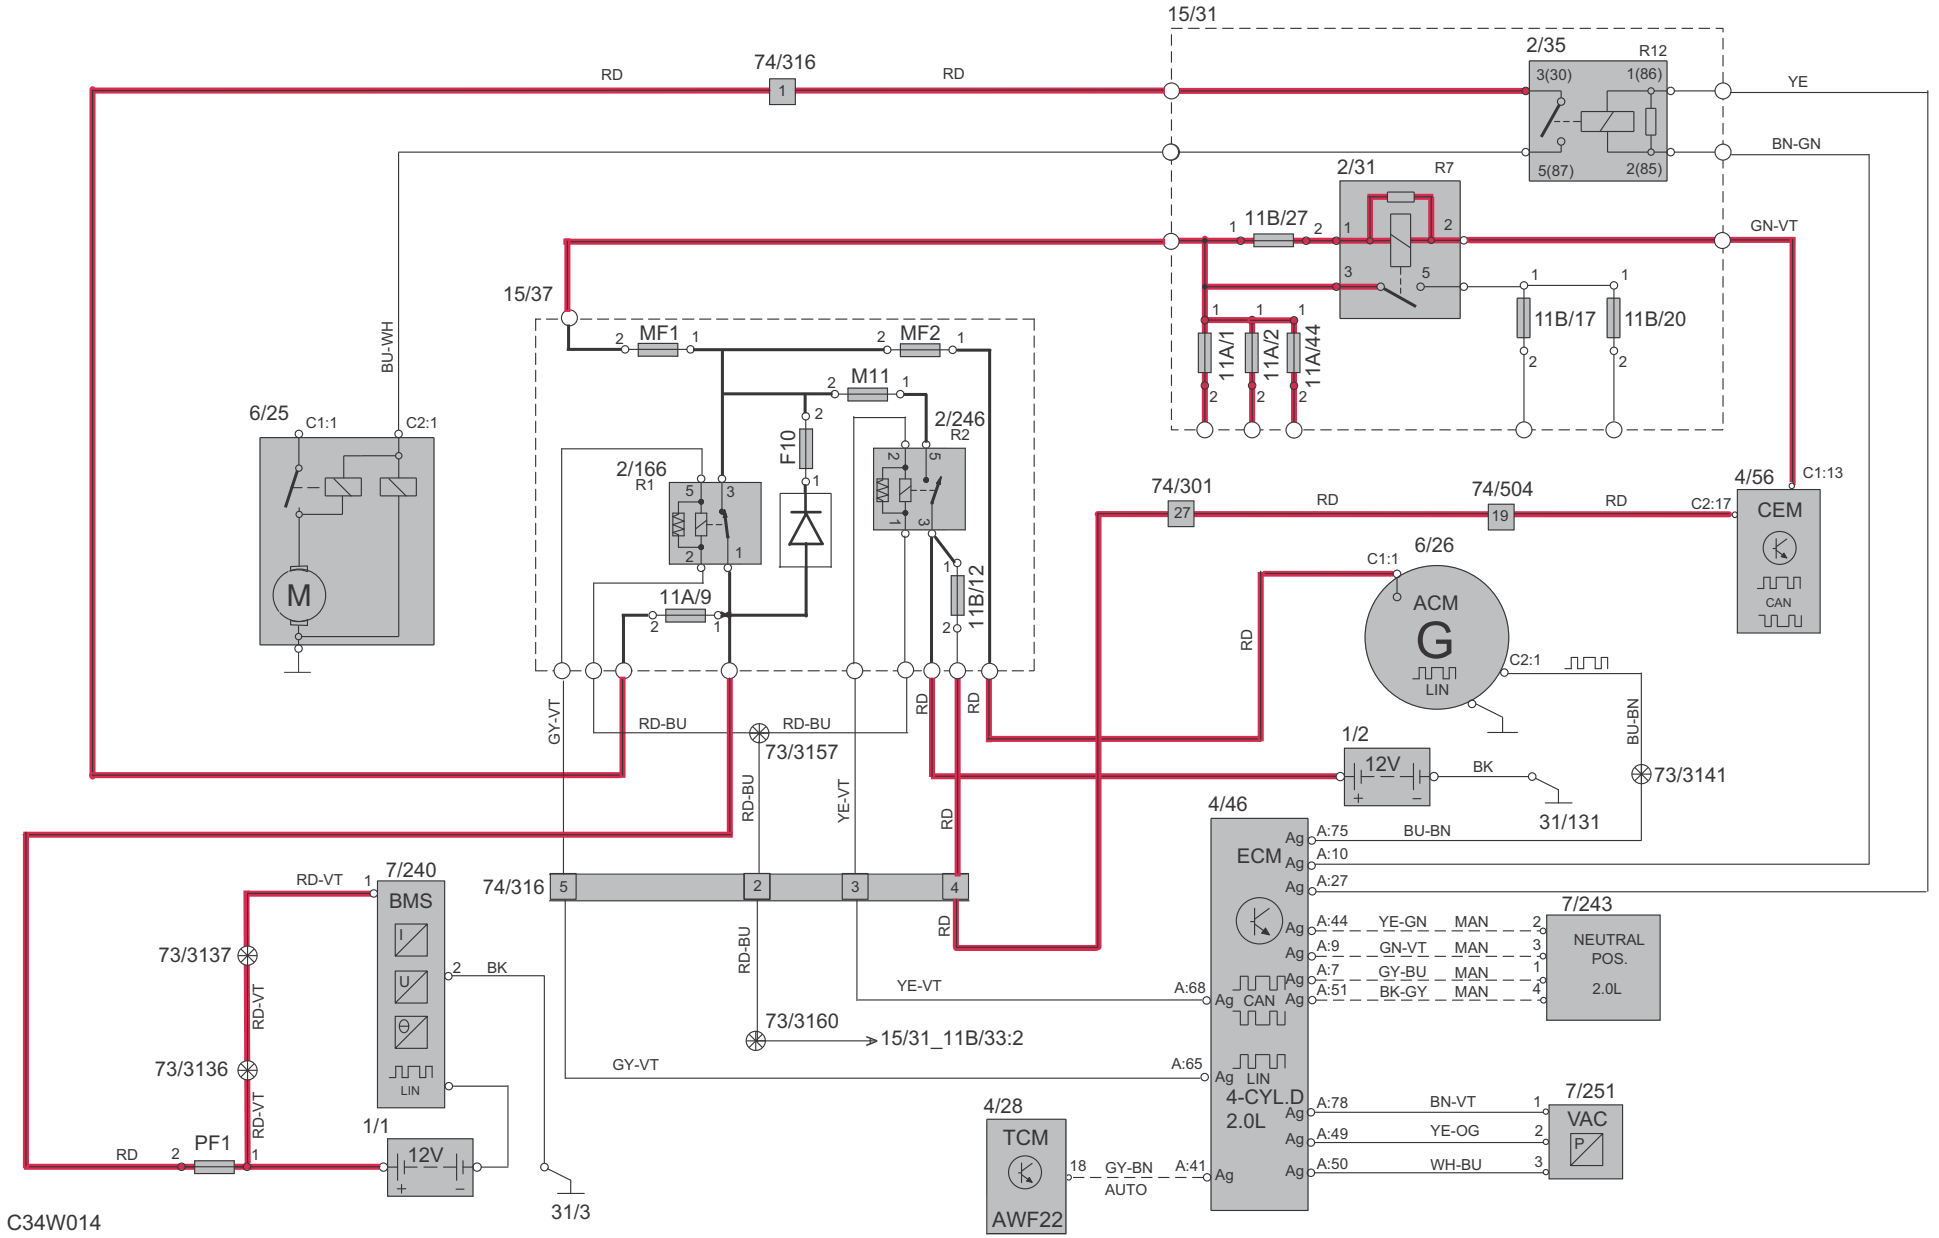
15/31
2/35
R12
3(30)
1(86)
5(87)
2(85)
YE
BN-GN
2/31
R7
11B/27
GN-VT
11B/17
11B/20
11A/1
11A/2
11A/44
15/37
MF1
MF2
M11
F10
2/246
R2
2/166
R1
11A/9
11B/12
6/25
C1:1
C2:1
M
BU-WH
74/316
RD
74/301
74/504
27
19
C2:17
4/56
C1:13
CEM
CAN
6/26
ACM
G
LIN
C2:1
1/2
12V
BK
73/3141
31/131
BU-BN
GY-VT
RD-BU
73/3157
YE-VT
4/46
ECM
A:75
A:10
A:27
A:44
YE-GN
MAN
A:9
GN-VT
A:7
GY-BU
A:51
BK-GY
7/243
NEUTRAL POS. 2.0L
A:68
CAN
73/3160
15/31_11B/33:2
A:65
LIN
4-CYL.D 2.0L
7/240
BMS
RD-VT
73/3137
73/3136
PF1
1/1
31/3
4/28
TCM
AWF22
18
GY-BN
AUTO
A:41
A:78
BN-VT
A:49
YE-OG
A:50
WH-BU
7/251
VAC
C34W014

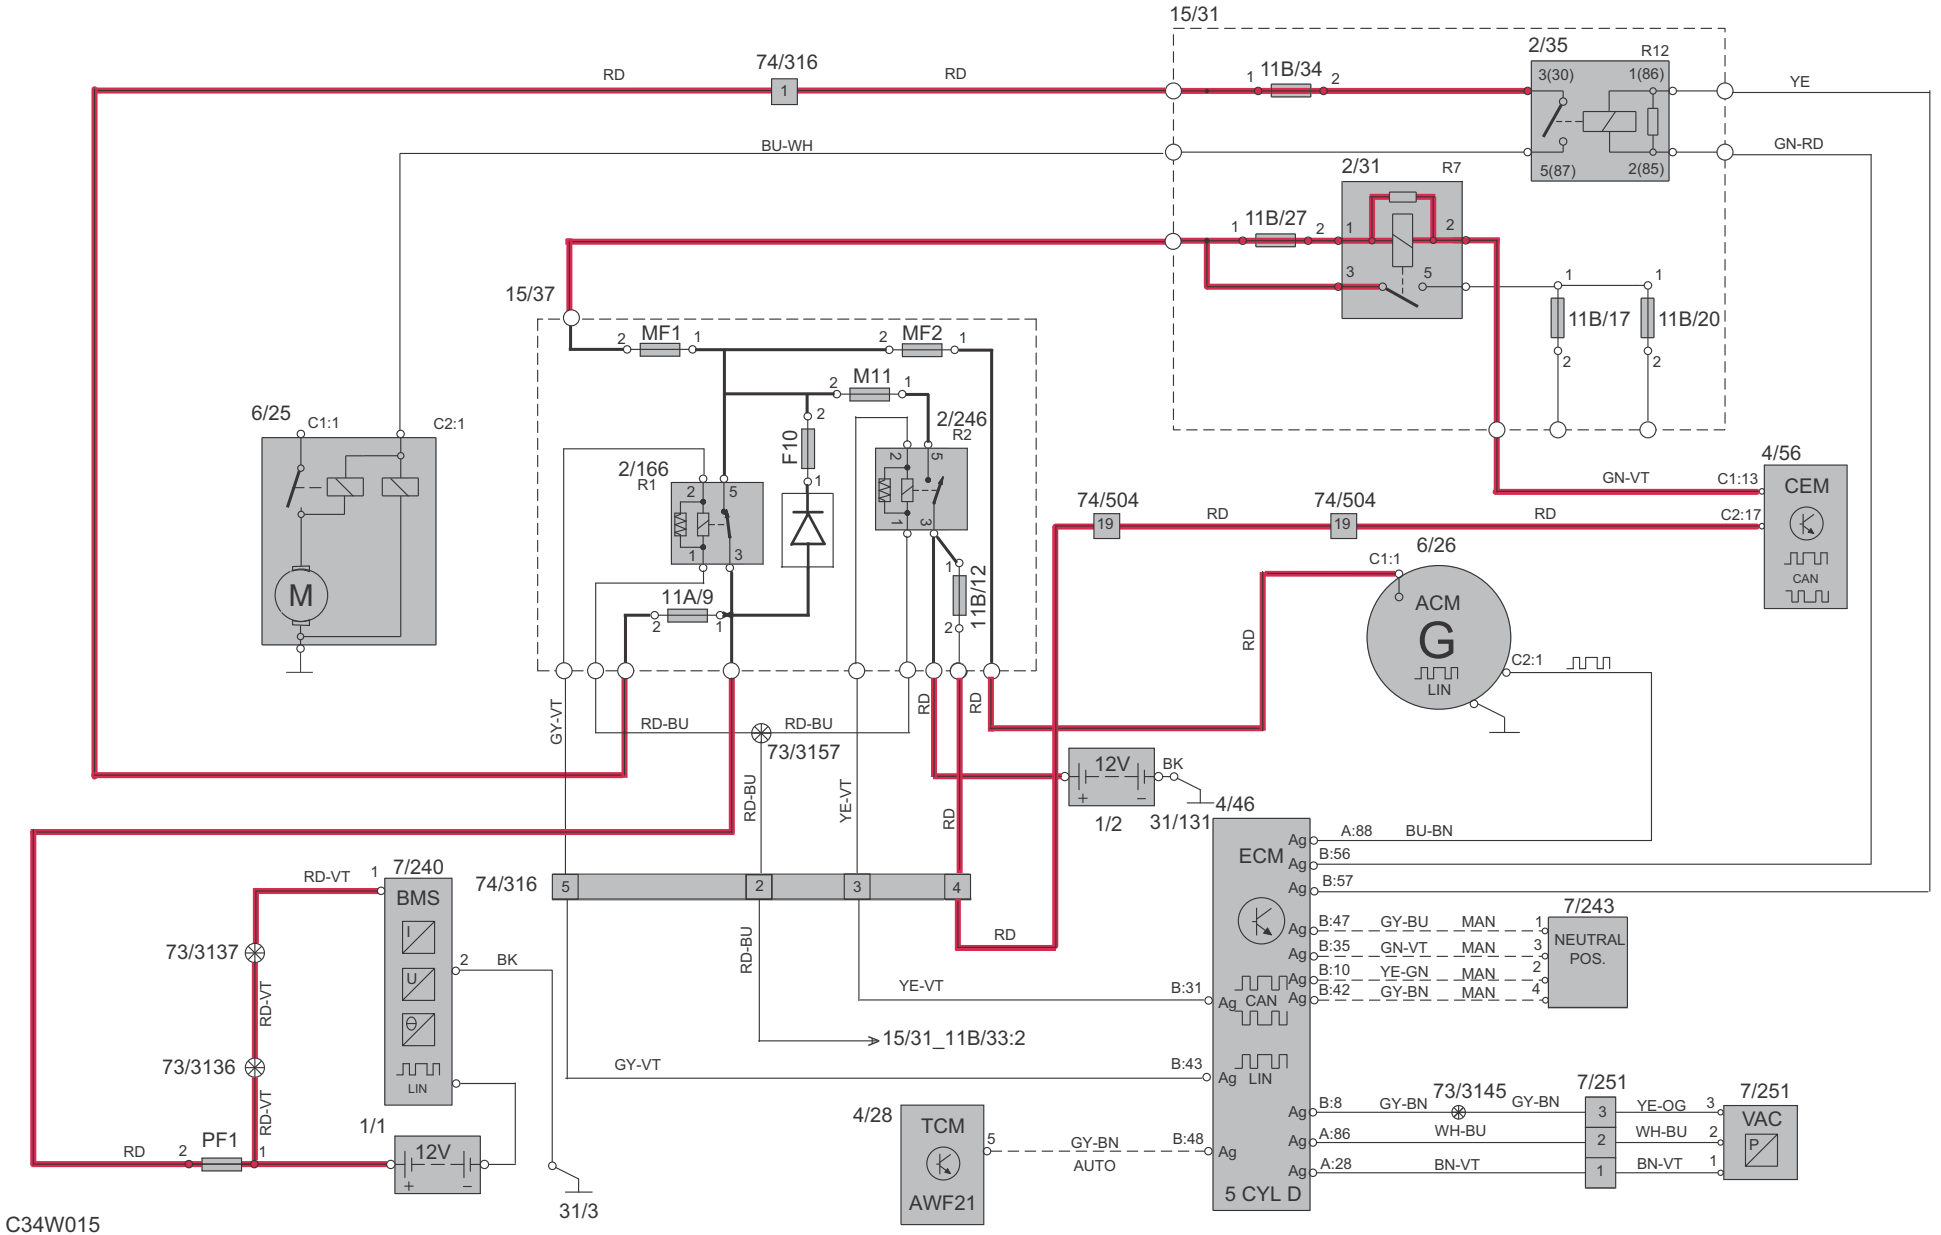
15/31
2/35
R12
3(30)
1(86)
5(87)
2(85)
11B/34
YE
GN-RD
BU-WH
2/31
R7
11B/27
11B/17
11B/20
15/37
MF1
MF2
M11
F10
2/246
R2
2/166
R1
11A/9
11B/12
6/25
C1:1
C2:1
M
74/316
RD
74/504
19
4/56
CEM
GN-VT
C1:13
C2:17
CAN
6/26
ACM
G
LIN
C2:1
GY-VT
RD-BU
73/3157
YE-VT
12V
BK
1/2
31/131
4/46
ECM
A:88
BU-BN
B:56
B:57
7/243
NEUTRAL POS.
B:47
GY-BU
MAN
B:35
GN-VT
B:10
YE-GN
B:42
GY-BN
B:31
CAN
15/31_11B/33:2
B:43
LIN
7/240
BMS
RD-VT
73/3137
73/3136
PF1
1/1
31/3
73/3145
7/251
VAC
B:8
A:86
A:28
WH-BU
BN-VT
YE-OG
4/28
TCM
AWF21
GY-BN
AUTO
B:48
5 CYL D
C34W015

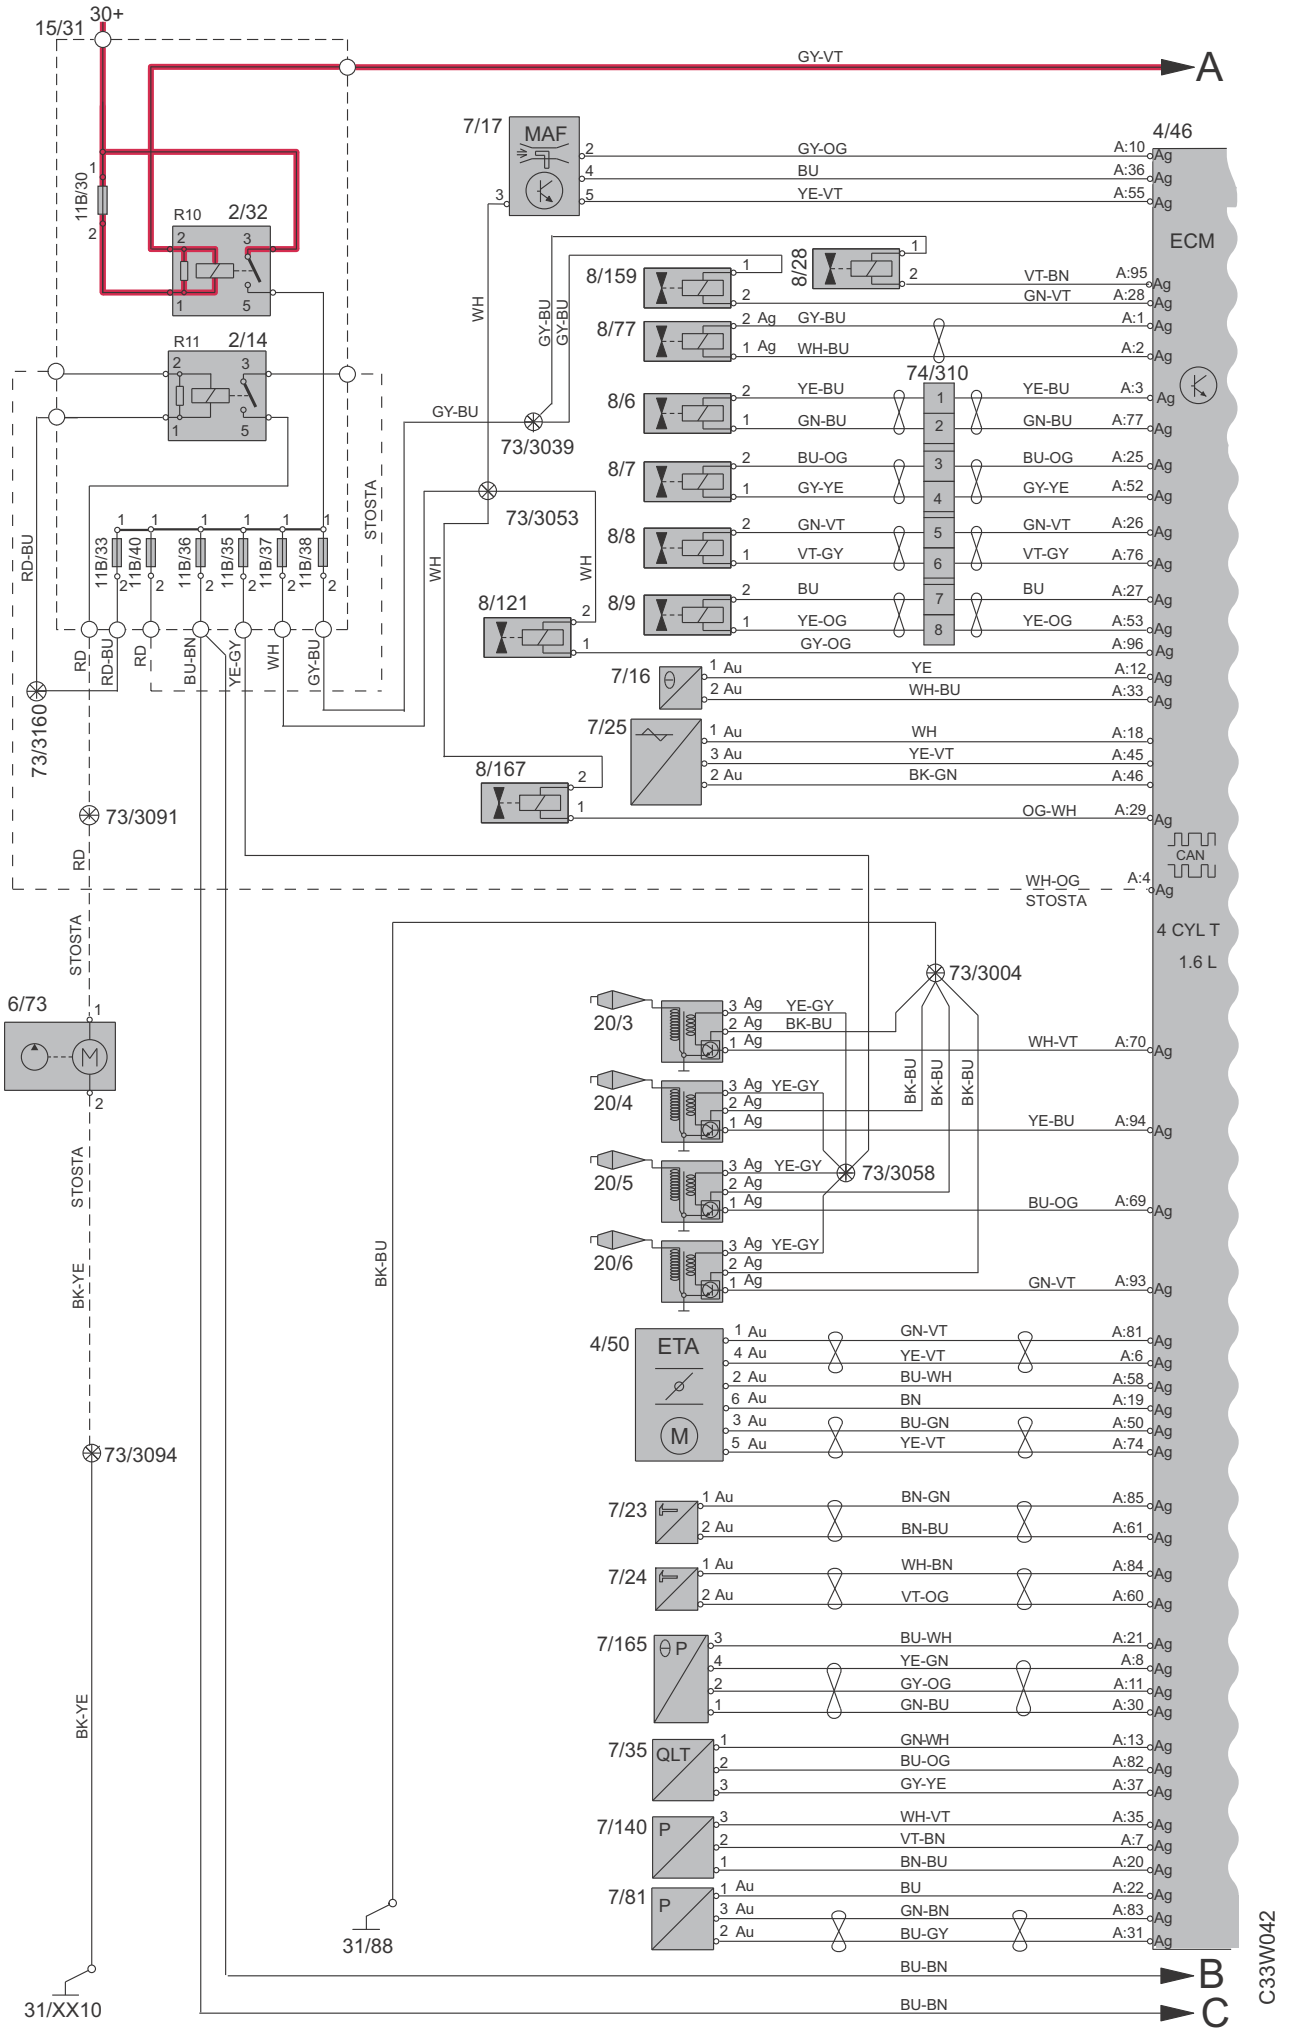
15/31
30+
11B/30
R10
2/32
R11
2/14
GY-VT
A
7/17
MAF
GY-OG
BU
YE-VT
4/46
ECM
A:10
A:36
A:55
8/159
8/28
8/77
VT-BN
GN-VT
GY-BU
WH-BU
A:95
A:28
A:1
A:2
74/310
8/6
8/7
8/8
8/9
YE-BU
GN-BU
BU-OG
GY-YE
GN-VT
VT-GY
BU
YE-OG
GY-OG
A:3
A:77
A:25
A:52
A:26
A:76
A:27
A:53
A:96
73/3039
73/3053
8/121
7/16
7/25
8/167
YE
WH-BU
WH
YE-VT
BK-GN
OG-WH
A:12
A:33
A:18
A:45
A:46
A:29
73/3160
73/3091
CAN
WH-OG
STOSTA
A:4
4 CYL T
1.6 L
6/73
73/3004
20/3
20/4
20/5
20/6
YE-GY
BK-BU
WH-VT
YE-BU
BU-OG
GN-VT
A:70
A:94
A:69
A:93
73/3058
4/50
ETA
GN-VT
YE-VT
BU-WH
BN
BU-GN
YE-VT
A:81
A:6
A:58
A:19
A:50
A:74
7/23
7/24
BN-GN
BN-BU
WH-BN
VT-OG
A:85
A:61
A:84
A:60
7/165
BU-WH
YE-GN
GY-OG
GN-BU
A:21
A:8
A:11
A:30
7/35
QLT
GN-WH
BU-OG
GY-YE
A:13
A:82
A:37
7/140
VT-BN
BN-BU
A:35
A:7
A:20
7/81
BU
GN-BN
BU-GY
A:22
A:83
A:31
73/3094
31/88
31/XX10
BU-BN
B
C
C33W042

Group 28 Ignition and control system
Engine management system, 4-Cyl. 1.6L Turbo 2:2

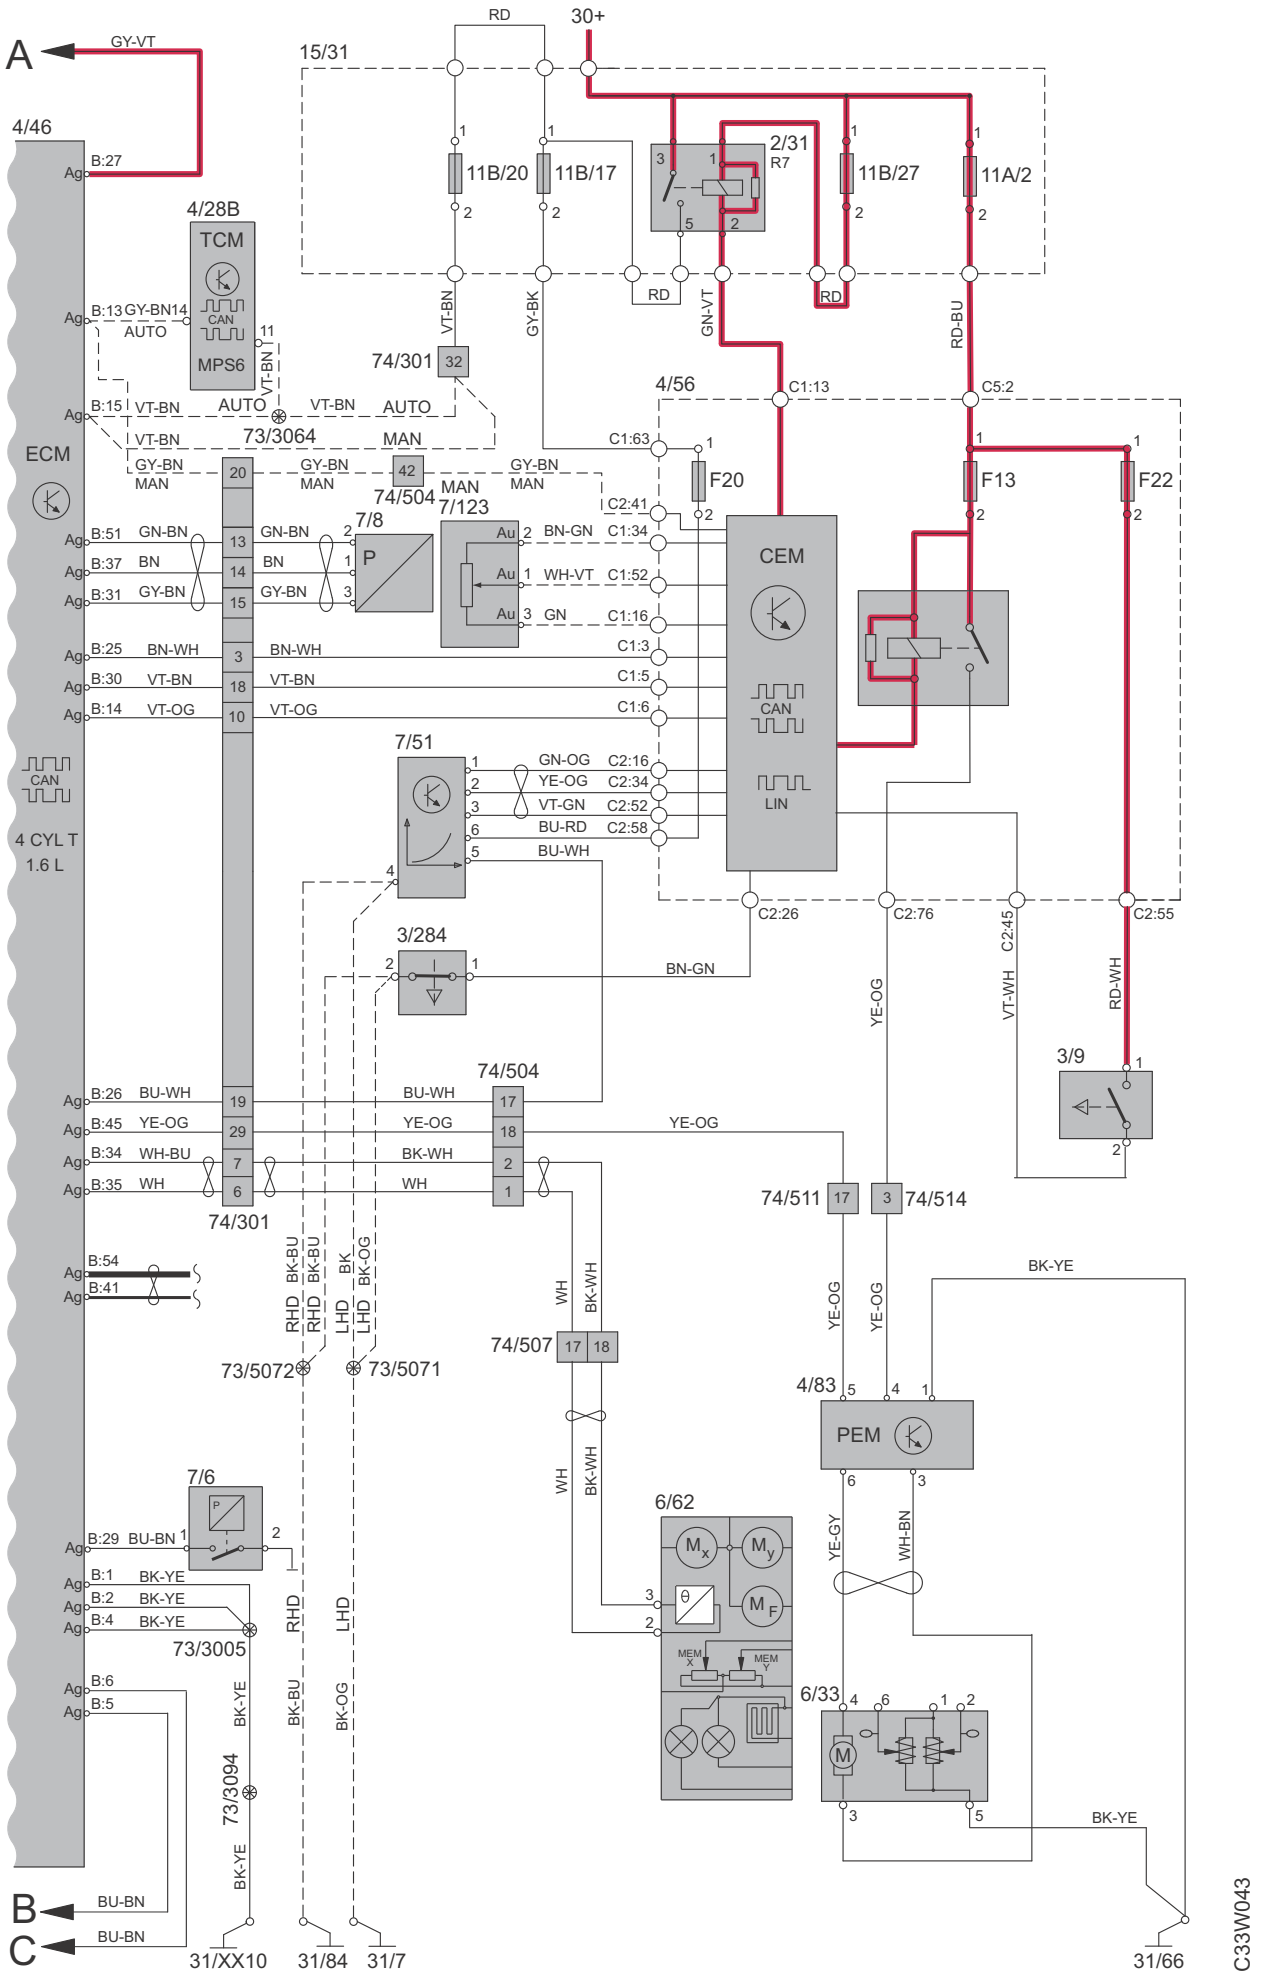

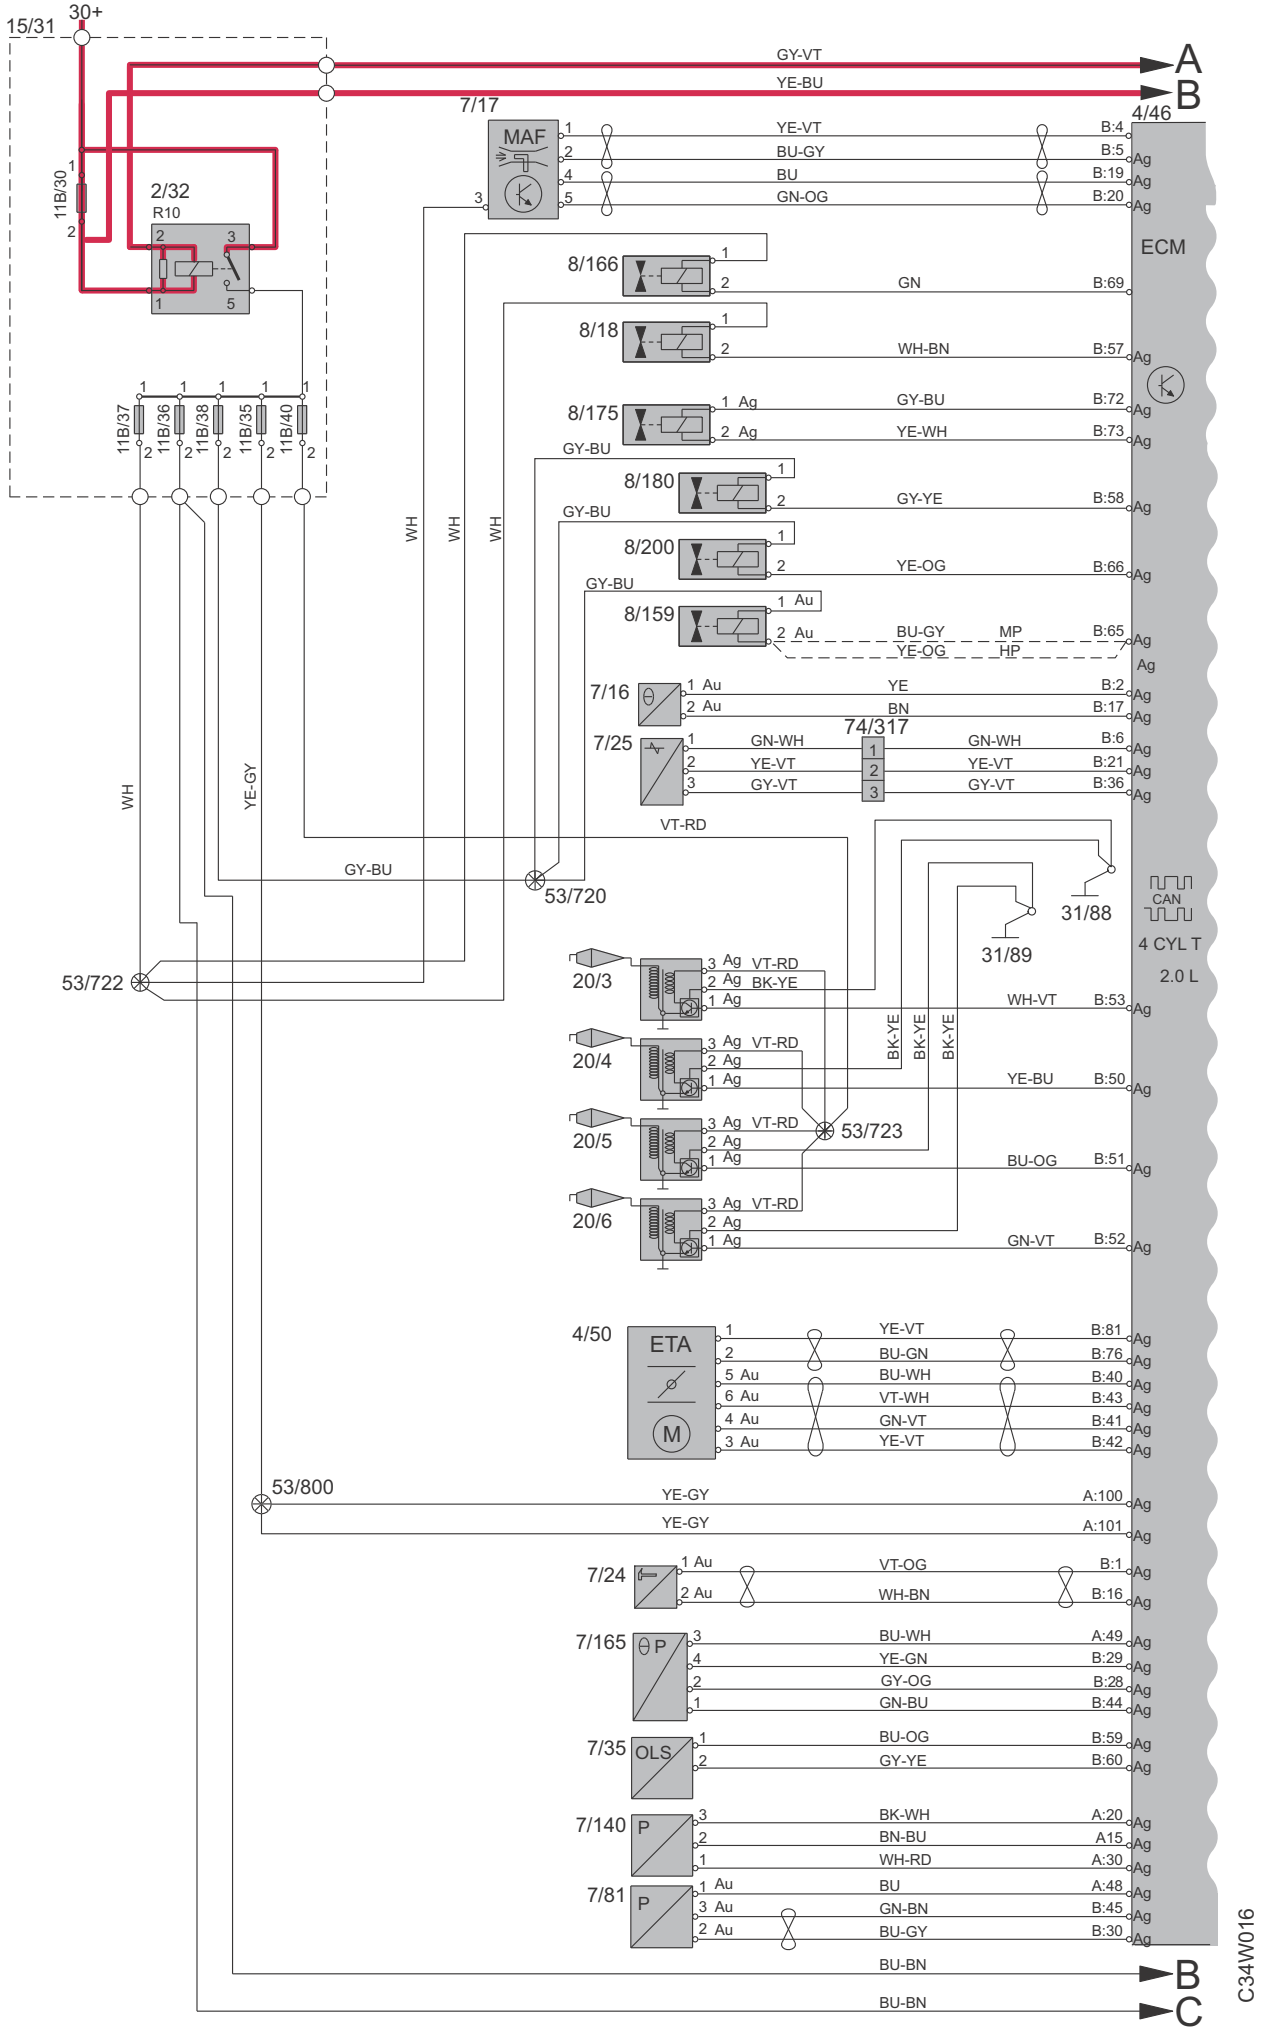
15/31
30+
11B/30
2/32
R10
11B/37
11B/36
11B/38
11B/35
11B/40
GY-VT
YE-BU
A
B
7/17
MAF
YE-VT
BU-GY
BU
GN-OG
4/46
B:4
B:5
B:19
B:20
ECM
8/166
GN
B:69
8/18
WH-BN
B:57
8/175
GY-BU
YE-WH
B:72
B:73
8/180
GY-YE
B:58
8/200
YE-OG
B:66
8/159
BU-GY
YE-OG
MP
HP
B:65
7/16
YE
BN
B:2
B:17
7/25
74/317
GN-WH
YE-VT
GY-VT
B:6
B:21
B:36
WH
YE-GY
VT-RD
GY-BU
53/720
53/722
31/88
31/89
CAN
4 CYL T
2.0 L
20/3
20/4
20/5
20/6
BK-YE
WH-VT
YE-BU
BU-OG
GN-VT
B:53
B:50
B:51
B:52
53/723
4/50
ETA
YE-VT
BU-GN
BU-WH
VT-WH
GN-VT
YE-VT
B:81
B:76
B:40
B:43
B:41
B:42
53/800
A:100
A:101
7/24
VT-OG
WH-BN
B:1
B:16
7/165
BU-WH
YE-GN
GY-OG
GN-BU
A:49
B:29
B:28
B:44
7/35
OLS
BU-OG
GY-YE
B:59
B:60
7/140
BK-WH
BN-BU
WH-RD
A:20
A15
A:30
7/81
BU
GN-BN
BU-GY
A:48
B:45
B:30
BU-BN
C
C34W016

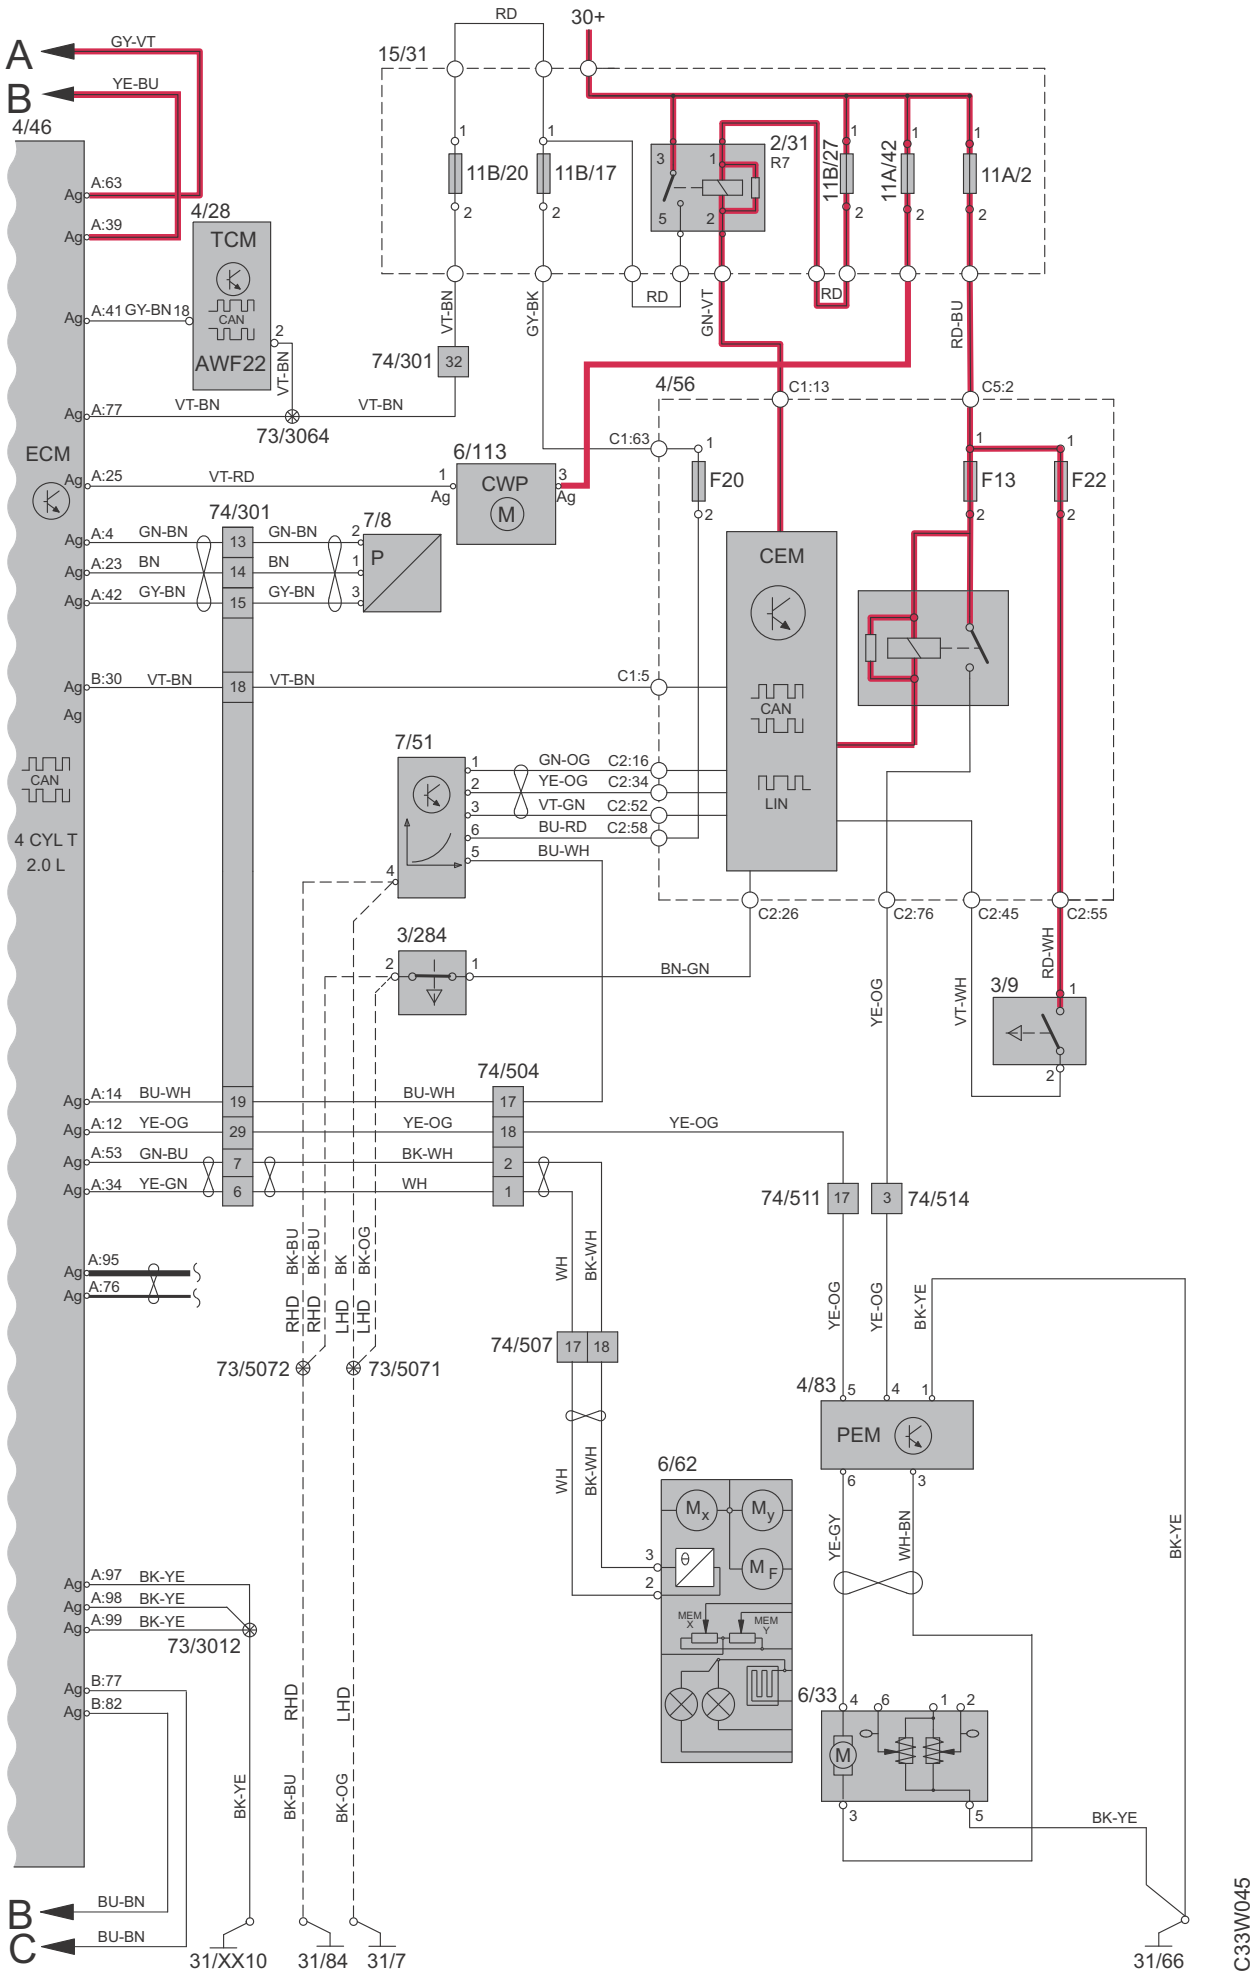
A
B
GY-VT
YE-BU
4/46
A:63
A:39
A:41 GY-BN
A:77
4/28
TCM
CAN
AWF22
18
2
VT-BN
73/3064
15/31
RD
30+
11B/20
11B/17
2/31
R7
11B/27
11A/42
11A/2
VT-BN
GY-BK
GN-VT
RD-BU
74/301
32
4/56
C1:13
C5:2
C1:63
F20
F13
F22
ECM
A:25
VT-RD
6/113
CWP
7/8
P
74/301
A:4 GN-BN
A:23 BN
A:42 GY-BN
B:30 VT-BN
C1:5
CEM
CAN
LIN
4 CYL T
2.0 L
7/51
GN-OG C2:16
YE-OG C2:34
VT-GN C2:52
BU-RD C2:58
BU-WH
C2:26
C2:76
C2:45
C2:55
3/284
BN-GN
YE-OG
VT-WH
RD-WH
3/9
74/504
A:14 BU-WH
A:12 YE-OG
A:53 GN-BU
A:34 YE-GN
A:95
A:76
BK-BU
BK
BK-OG
RHD
LHD
73/5072
73/5071
74/507
WH
BK-WH
74/511
74/514
4/83
PEM
6/62
6/33
A:97 BK-YE
A:98 BK-YE
A:99 BK-YE
73/3012
B:77
B:82
BU-BN
31/XX10
31/84
31/7
31/66
C33W045

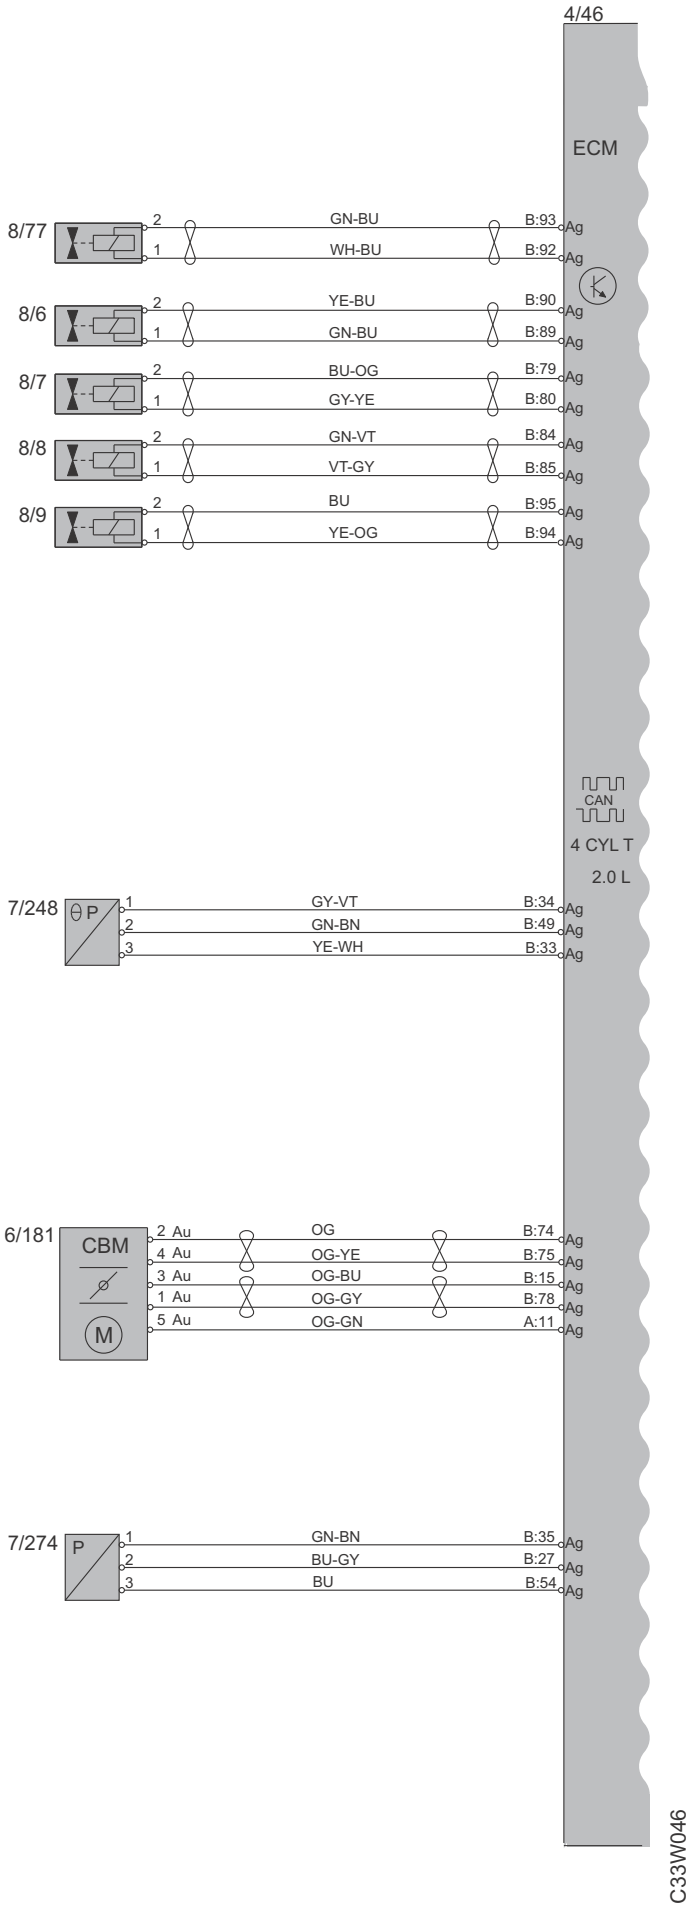
4/46
ECM
8/77
2
1
GN-BU
WH-BU
B:93
B:92
8/6
YE-BU
GN-BU
B:90
B:89
8/7
BU-OG
GY-YE
B:79
B:80
8/8
GN-VT
VT-GY
B:84
B:85
8/9
BU
YE-OG
B:95
B:94
Ag
CAN
4 CYL T
2.0 L
7/248
P
GY-VT
GN-BN
YE-WH
B:34
B:49
B:33
6/181
CBM
M
2 Au
4 Au
3 Au
1 Au
5 Au
OG
OG-YE
OG-BU
OG-GY
OG-GN
B:74
B:75
B:15
B:78
A:11
7/274
GN-BN
BU-GY
BU
B:35
B:27
B:54
C33W046

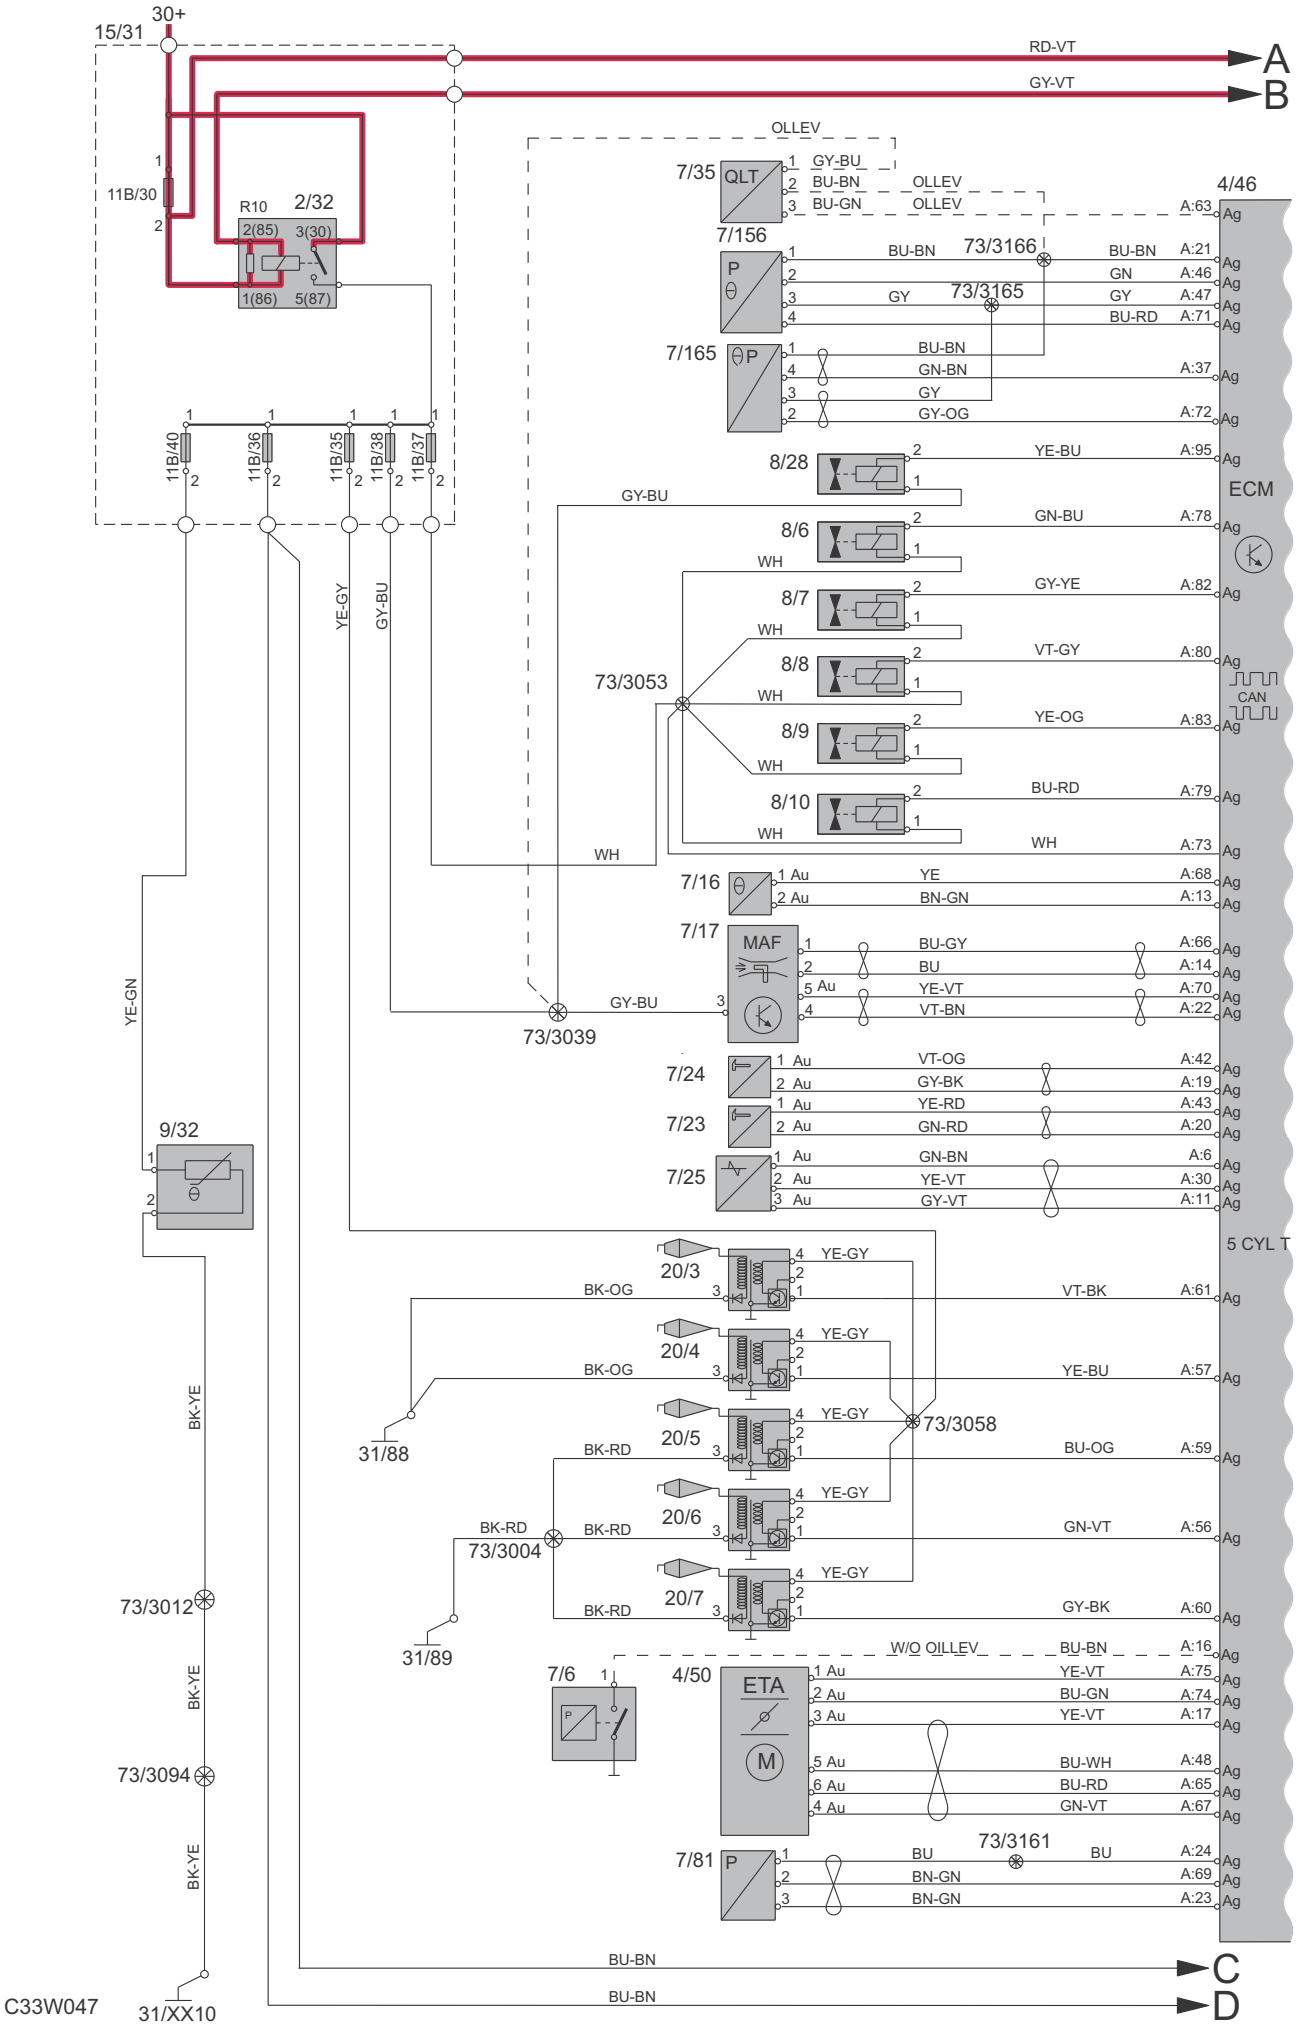
30+
15/31
11B/30
R10
2/32
2(85)
3(30)
1(86)
5(87)
11B/40
11B/36
11B/35
11B/38
11B/37
RD-VT
GY-VT
A
B
OLLEV
7/35
QLT
GY-BU
BU-BN
BU-GN
7/156
7/165
73/3166
73/3165
4/46
ECM
CAN
5 CYL T
8/28
8/6
8/7
8/8
8/9
8/10
73/3053
73/3039
7/16
7/17
MAF
7/24
7/23
7/25
9/32
20/3
20/4
20/5
20/6
20/7
73/3058
31/88
31/89
73/3004
73/3012
73/3094
31/XX10
W/O OILLEV
7/6
4/50
ETA
7/81
73/3161
BU-BN
C
D
C33W047

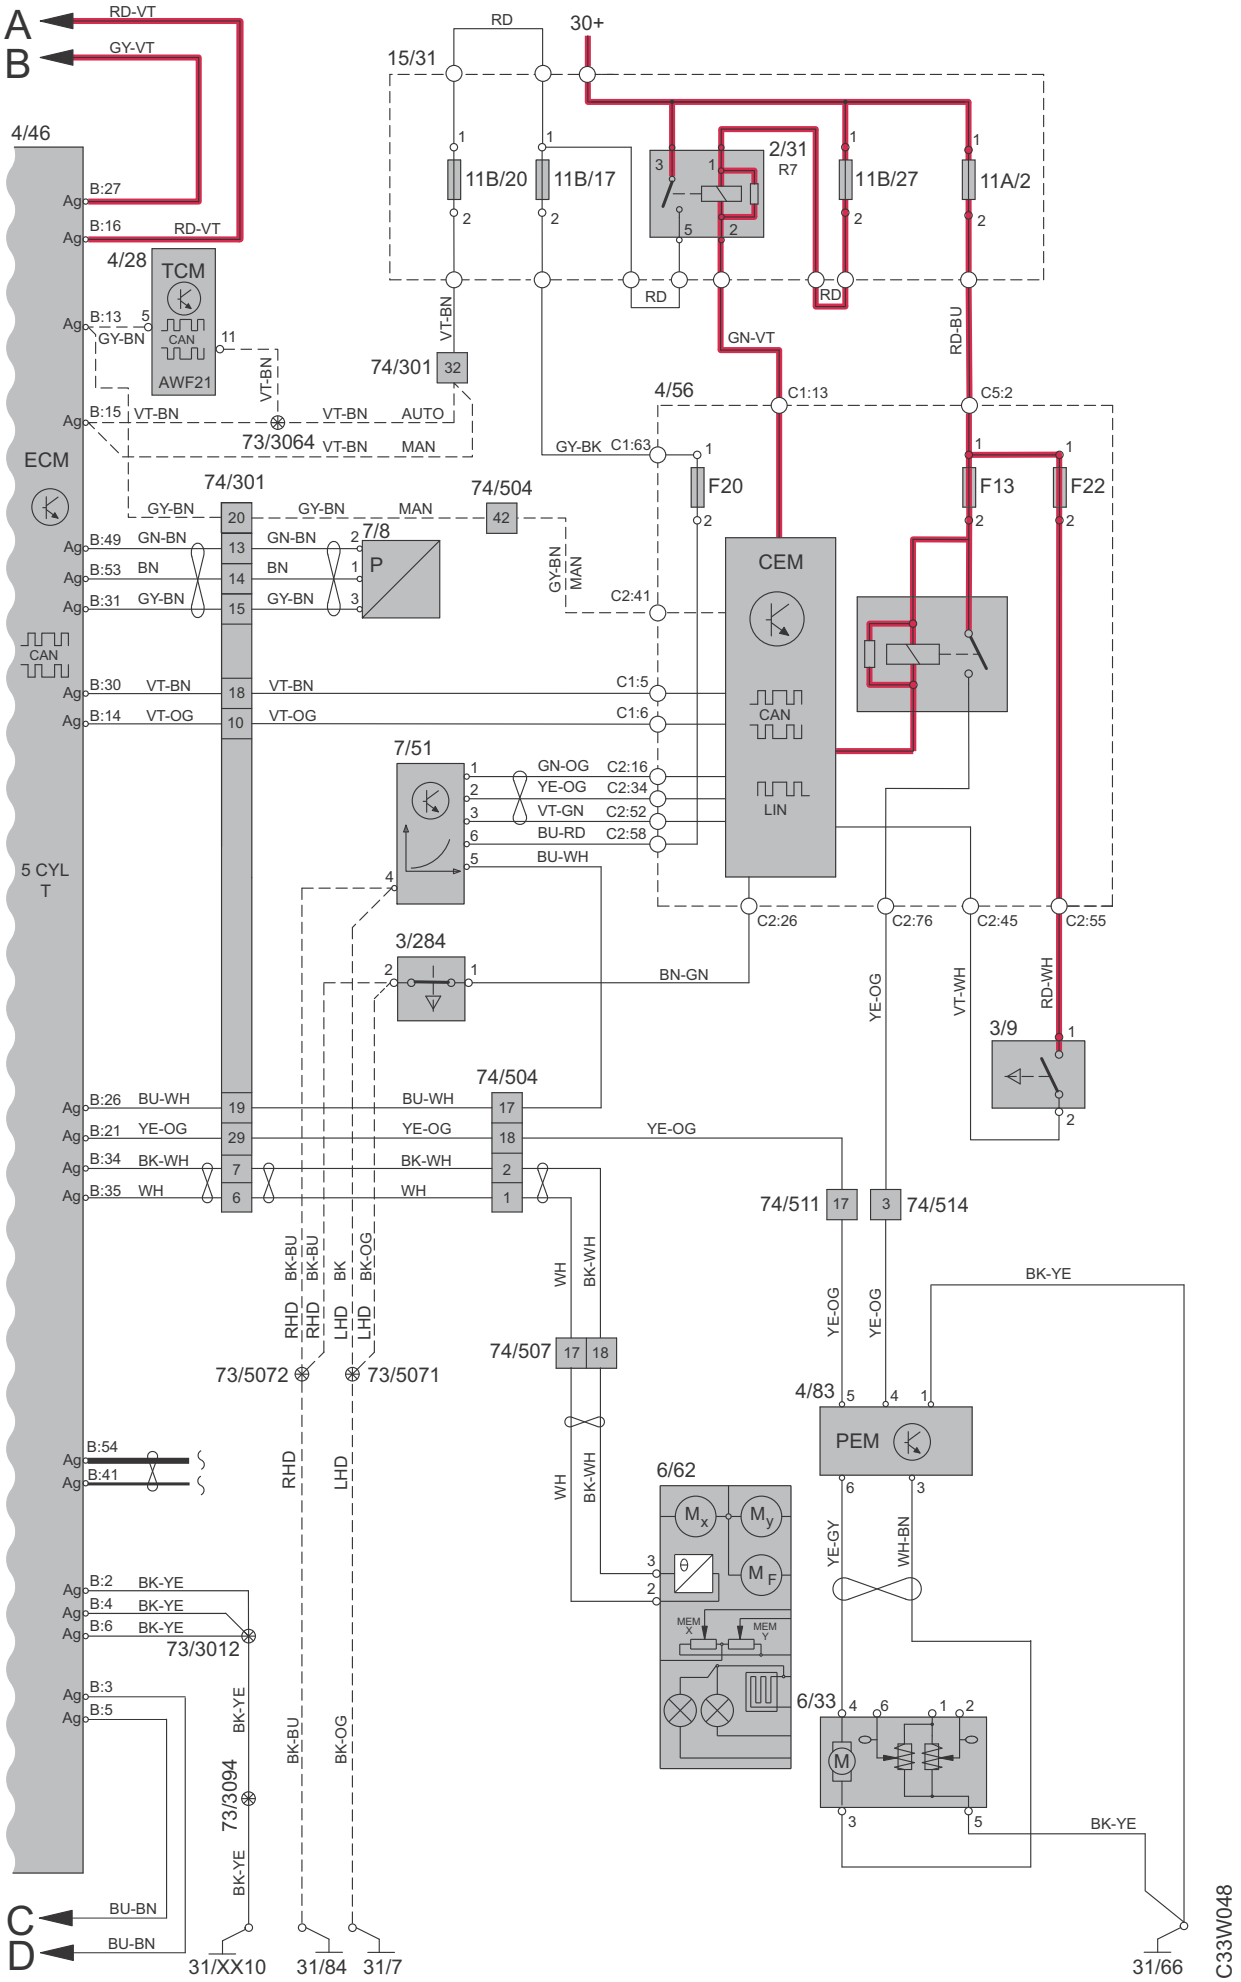
A
B
RD-VT
GY-VT
4/46
B:27
B:16
RD-VT
4/28
TCM
B:13
GY-BN
CAN
AWF21
B:15
VT-BN
ECM
15/31
RD
30+
11B/20
11B/17
2/31
R7
11B/27
11A/2
VT-BN
74/301
32
73/3064
VT-BN
AUTO
MAN
4/56
C1:13
C5:2
GN-VT
RD-BU
GY-BK C1:63
F20
F13
F22
74/301
GY-BN
20
GY-BN
MAN
74/504
42
7/8
P
B:49
GN-BN
13
GN-BN
2
B:53
BN
14
BN
1
B:31
GY-BN
15
GY-BN
3
GY-BN
MAN
C2:41
CEM
CAN
LIN
B:30
VT-BN
18
VT-BN
C1:5
B:14
VT-OG
10
VT-OG
C1:6
7/51
GN-OG
C2:16
YE-OG
C2:34
VT-GN
C2:52
BU-RD
C2:58
BU-WH
5 CYL
T
C2:26
C2:76
C2:45
C2:55
3/284
BN-GN
YE-OG
VT-WH
RD-WH
3/9
B:26
BU-WH
19
BU-WH
17
74/504
B:21
YE-OG
29
YE-OG
18
YE-OG
B:34
BK-WH
7
BK-WH
2
B:35
WH
6
WH
1
74/511
17
3
74/514
BK-BU
BK-BU
BK
BK-OG
RHD
RHD
LHD
LHD
WH
BK-WH
74/507
17
18
73/5072
73/5071
BK-YE
4/83
PEM
YE-OG
YE-OG
B:54
B:41
RHD
LHD
6/62
YE-GY
WH-BN
B:2
BK-YE
B:4
BK-YE
B:6
BK-YE
73/3012
6/33
B:3
B:5
BK-YE
73/3094
BK-BU
BK-OG
BK-YE
C
D
BU-BN
BU-BN
31/XX10
31/84
31/7
31/66
C33W048

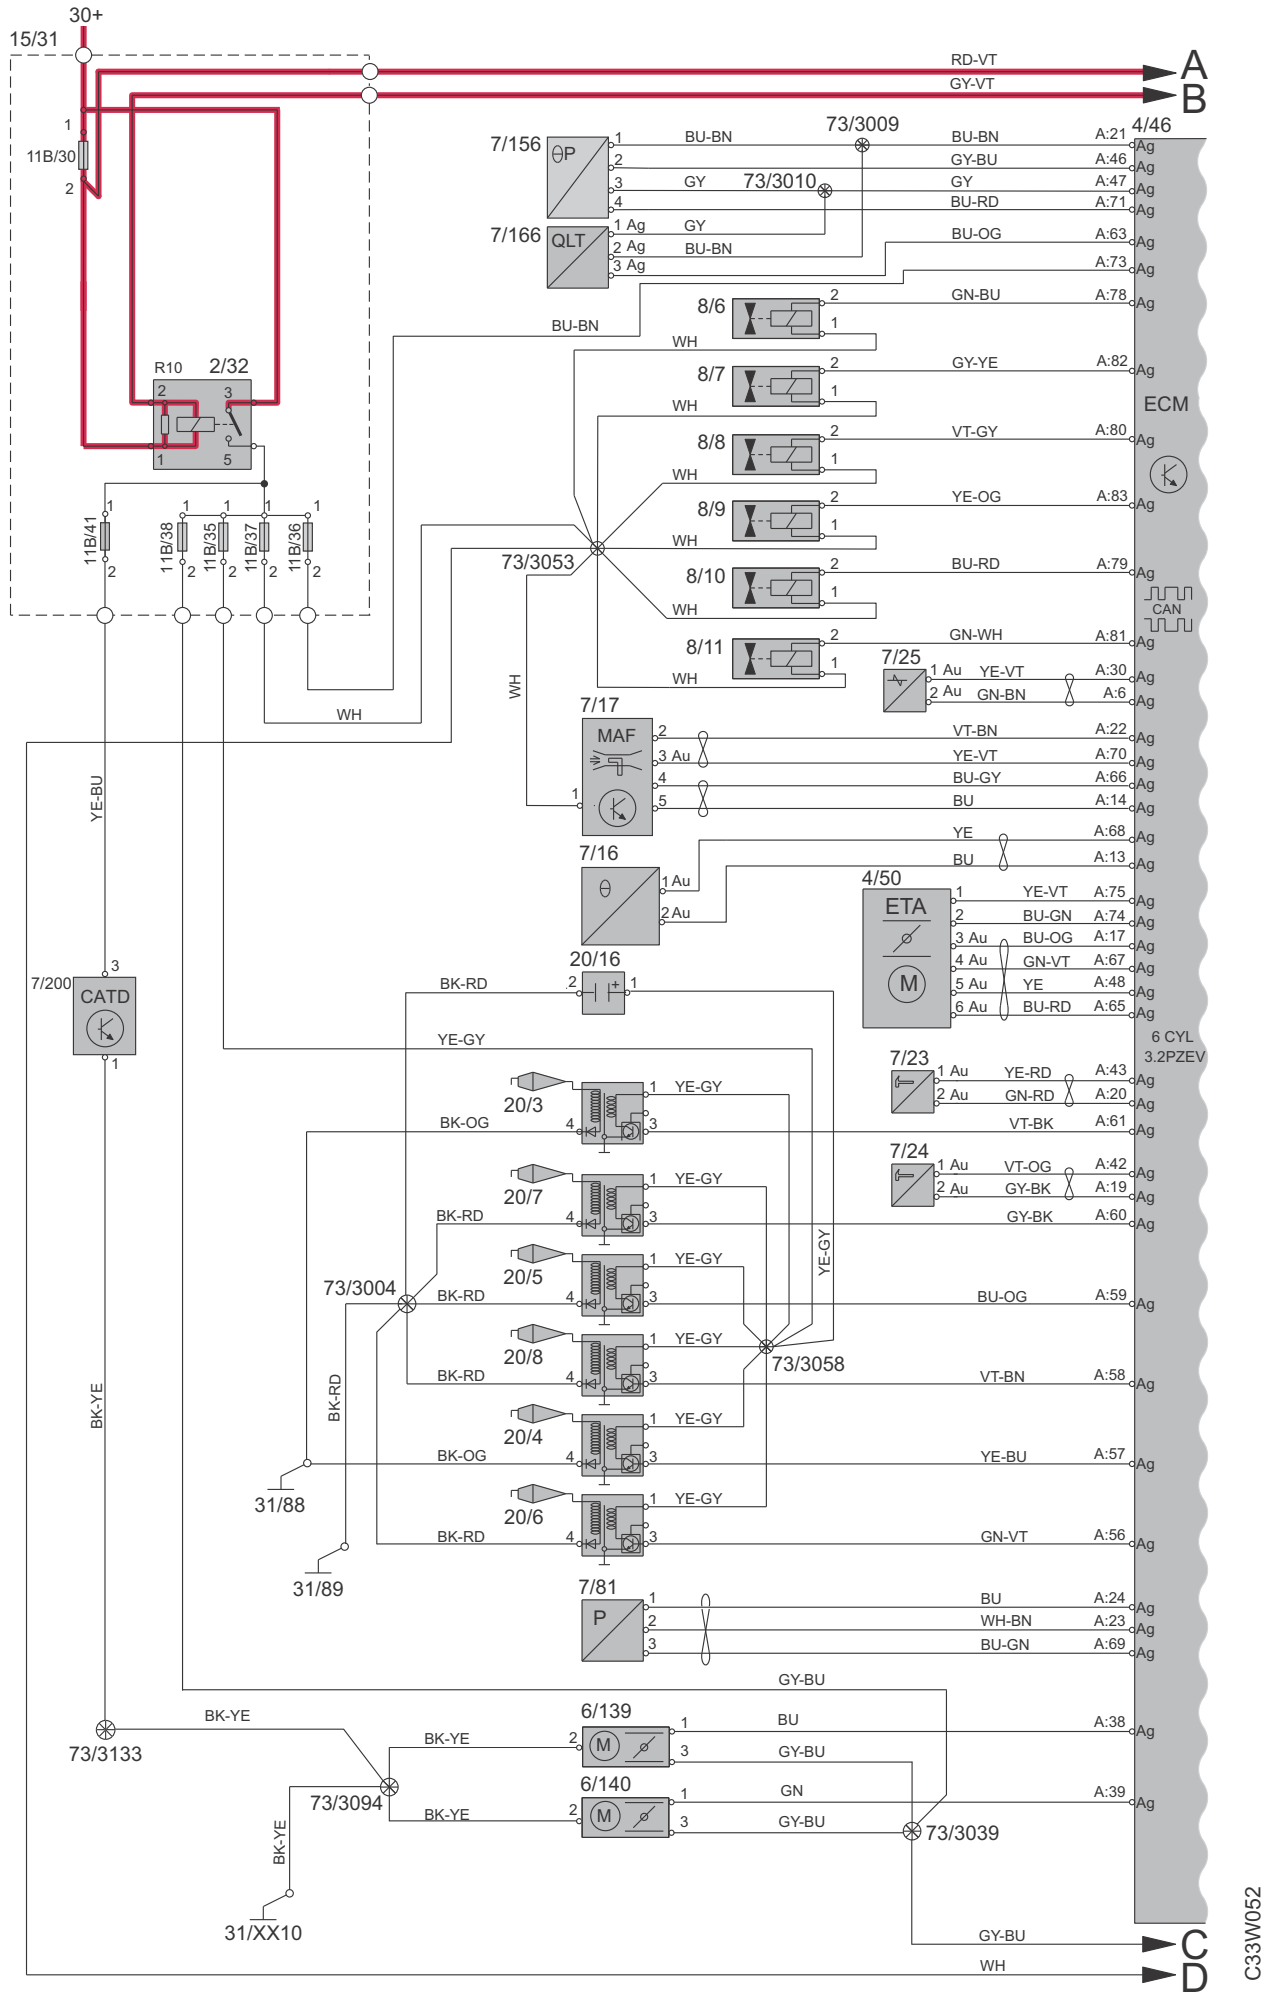
30+
15/31
11B/30
R10
2/32
11B/41
11B/38
11B/35
11B/37
11B/36
7/156
7/166
73/3009
73/3010
73/3053
8/6
8/7
8/8
8/9
8/10
8/11
7/25
7/17
MAF
7/16
4/50
ETA
20/16
7/200
CATD
20/3
20/7
20/5
20/8
20/4
20/6
73/3004
73/3058
31/88
31/89
7/81
6/139
6/140
73/3133
73/3094
73/3039
31/XX10
ECM
CAN
6 CYL
3.2PZEV
RD-VT
GY-VT
BU-BN
GY-BU
GY
BU-RD
BU-OG
GN-BU
GY-YE
VT-GY
YE-OG
GN-WH
YE-VT
GN-BN
VT-BN
BU-GY
BU
YE
BU-GN
GN-VT
YE-RD
GN-RD
VT-BK
VT-OG
GY-BK
WH-BN
GN
WH
BK-RD
YE-GY
BK-OG
BK-YE
YE-BU
A
B
C
D
C33W052

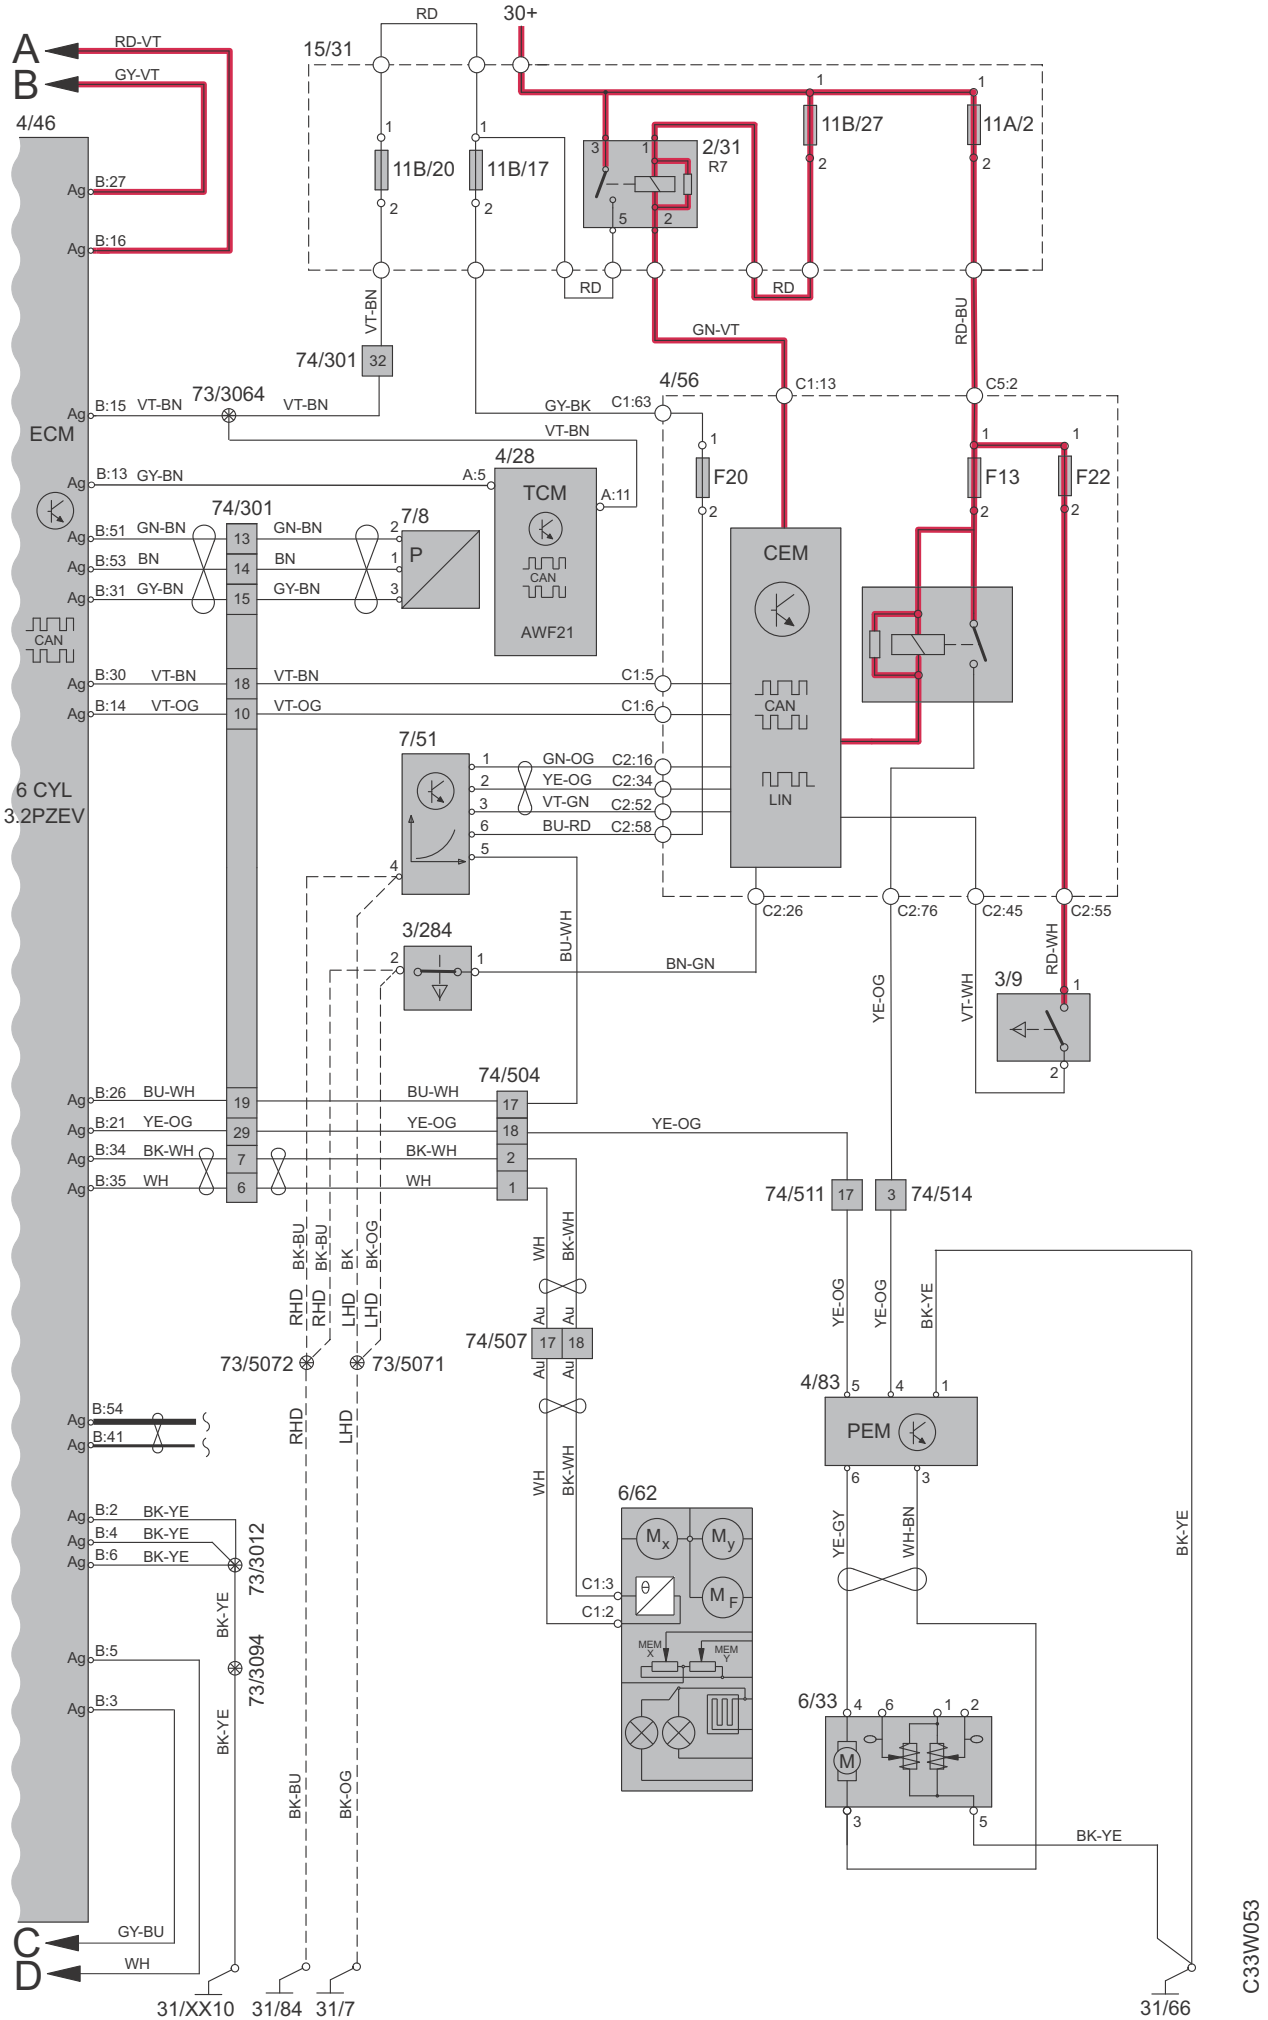
A
B
C
D
RD-VT
GY-VT
4/46
B:27
B:16
15/31
RD
30+
11B/20
11B/17
2/31
R7
11B/27
11A/2
VT-BN
74/301
32
RD
GN-VT
RD-BU
73/3064
B:15 VT-BN
VT-BN
GY-BK
C1:63
4/56
C1:13
C5:2
ECM
B:13 GY-BN
4/28
A:5
TCM
A:11
AWF21
F20
F13
F22
CEM
74/301
7/8
B:51 GN-BN
B:53 BN
B:31 GY-BN
GN-BN
BN
GY-BN
P
CAN
B:30 VT-BN
B:14 VT-OG
VT-BN
VT-OG
C1:5
C1:6
LIN
7/51
GN-OG C2:16
YE-OG C2:34
VT-GN C2:52
BU-RD C2:58
6 CYL
3.2PZEV
C2:26
C2:76
C2:45
C2:55
3/284
BU-WH
BN-GN
YE-OG
VT-WH
RD-WH
3/9
74/504
B:26 BU-WH
B:21 YE-OG
B:34 BK-WH
B:35 WH
BU-WH
YE-OG
BK-WH
WH
74/511
74/514
BK-BU
BK-BU
BK
BK-OG
RHD
RHD
LHD
LHD
WH
BK-WH
74/507
Au
73/5072
73/5071
4/83
PEM
YE-OG
YE-OG
BK-YE
B:54
B:41
RHD
LHD
6/62
C1:3
C1:2
YE-GY
WH-BN
B:2 BK-YE
B:4 BK-YE
B:6 BK-YE
73/3012
BK-YE
B:5
B:3
73/3094
BK-YE
6/33
BK-BU
BK-OG
BK-YE
GY-BU
WH
31/XX10
31/84
31/7
31/66
C33W053

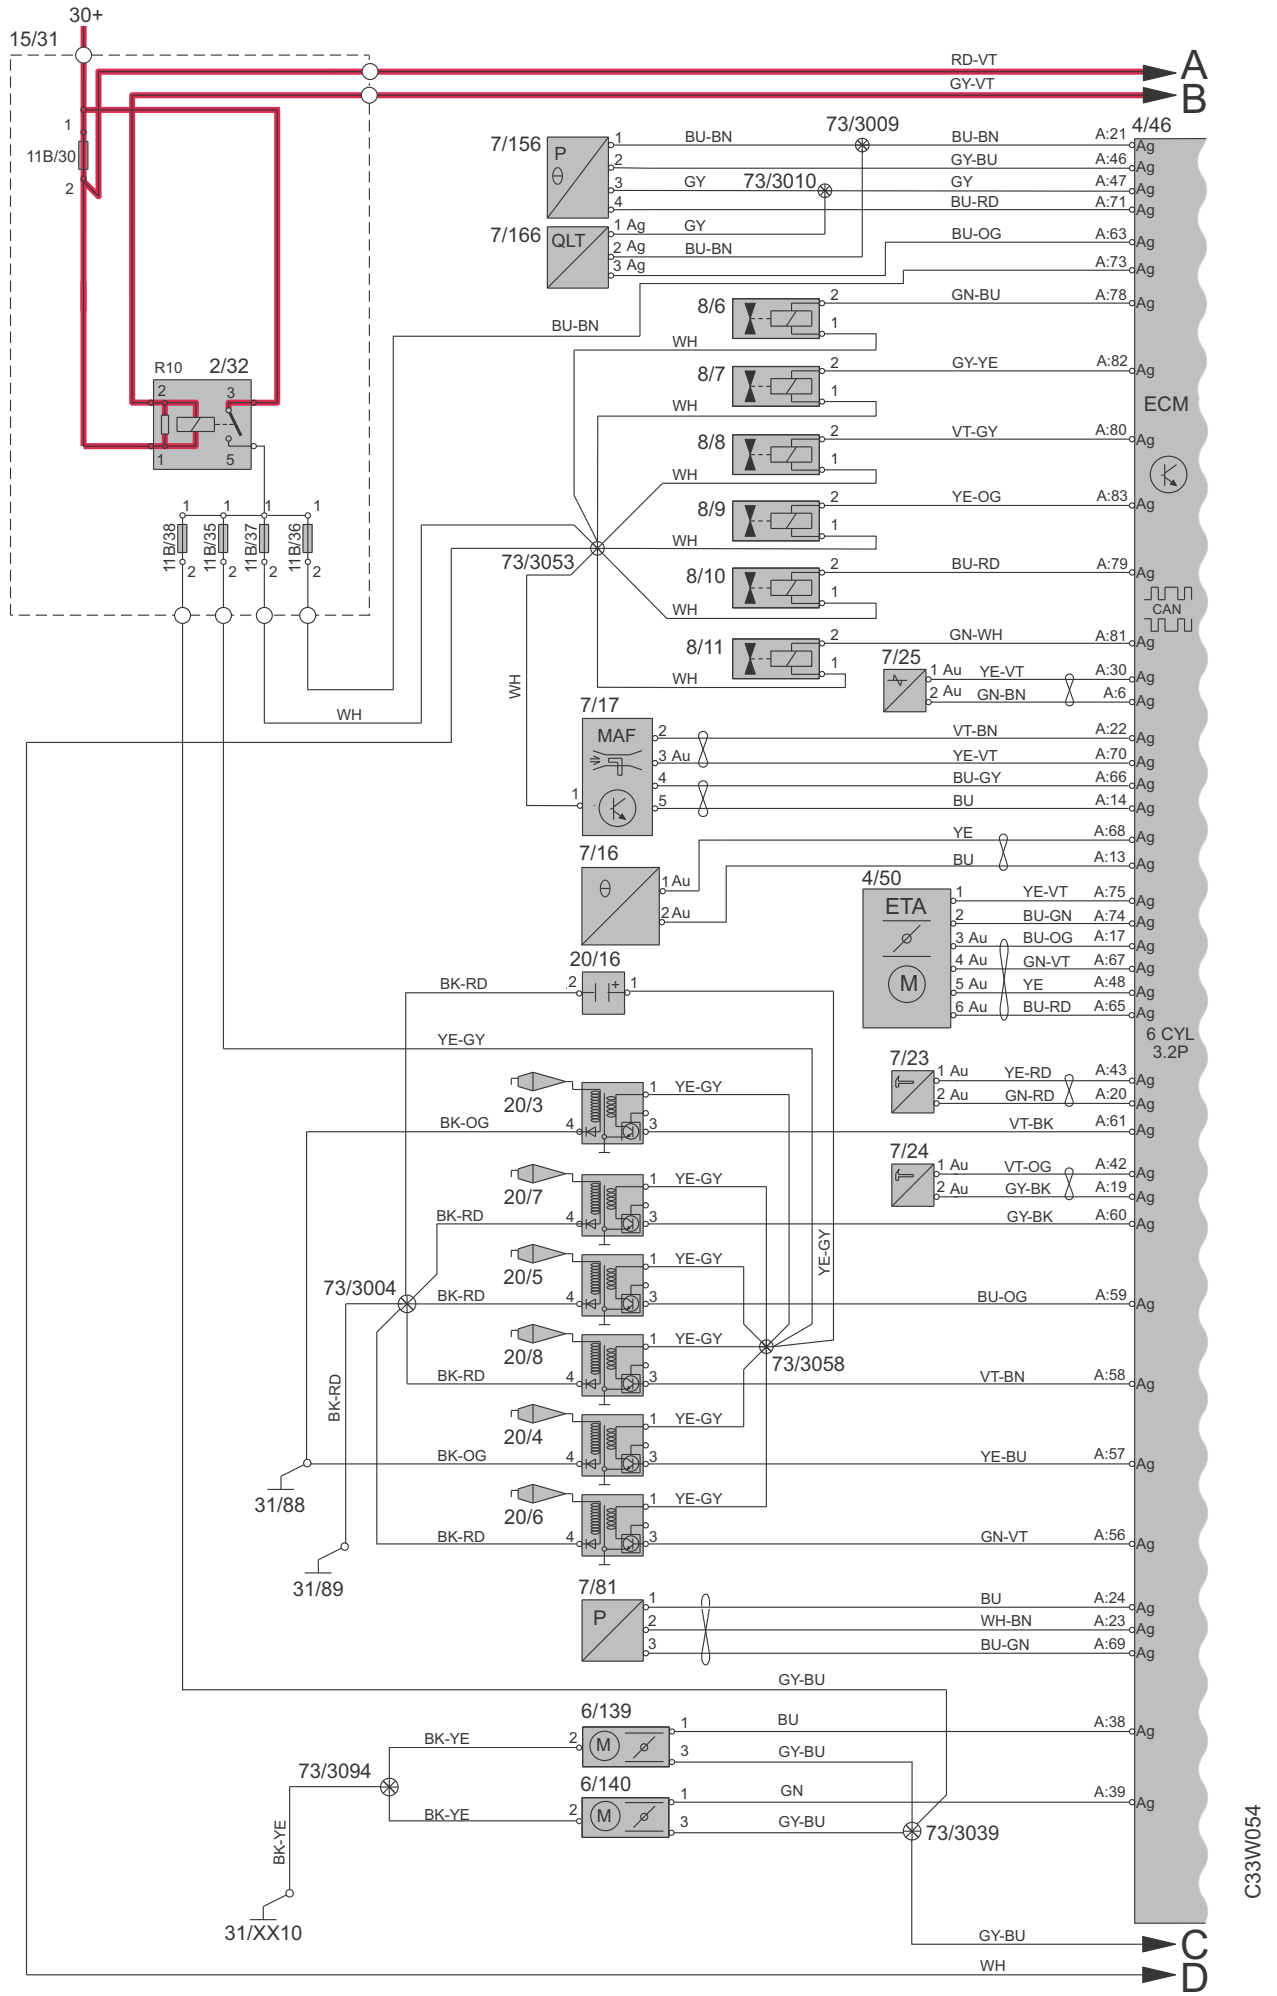
30+
15/31
11B/30
R10
2/32
11B/38
11B/35
11B/37
11B/36
RD-VT
GY-VT
A
B
73/3009
73/3010
7/156
7/166
QLT
BU-BN
GY
BU-RD
BU-OG
GN-BU
GY-YE
VT-GY
YE-OG
BU-RD
GN-WH
8/6
8/7
8/8
8/9
8/10
8/11
WH
73/3053
7/25
YE-VT
GN-BN
7/17
MAF
VT-BN
BU-GY
BU
7/16
YE
4/50
ETA
BU-GN
GN-VT
20/16
BK-RD
YE-GY
20/3
20/7
20/5
20/8
20/4
20/6
BK-OG
73/3004
73/3058
31/88
31/89
7/23
YE-RD
GN-RD
VT-BK
7/24
VT-OG
GY-BK
BU-OG
VT-BN
YE-BU
GN-VT
7/81
WH-BN
BU-GN
4/46
ECM
CAN
6 CYL
3.2P
A:21
A:46
A:47
A:71
A:63
A:73
A:78
A:82
A:80
A:83
A:79
A:81
A:30
A:6
A:22
A:70
A:66
A:14
A:68
A:13
A:75
A:74
A:17
A:67
A:48
A:65
A:43
A:20
A:61
A:42
A:19
A:60
A:59
A:58
A:57
A:56
A:24
A:23
A:69
6/139
6/140
73/3094
73/3039
BK-YE
GN
A:38
A:39
31/XX10
GY-BU
C
D
C33W054

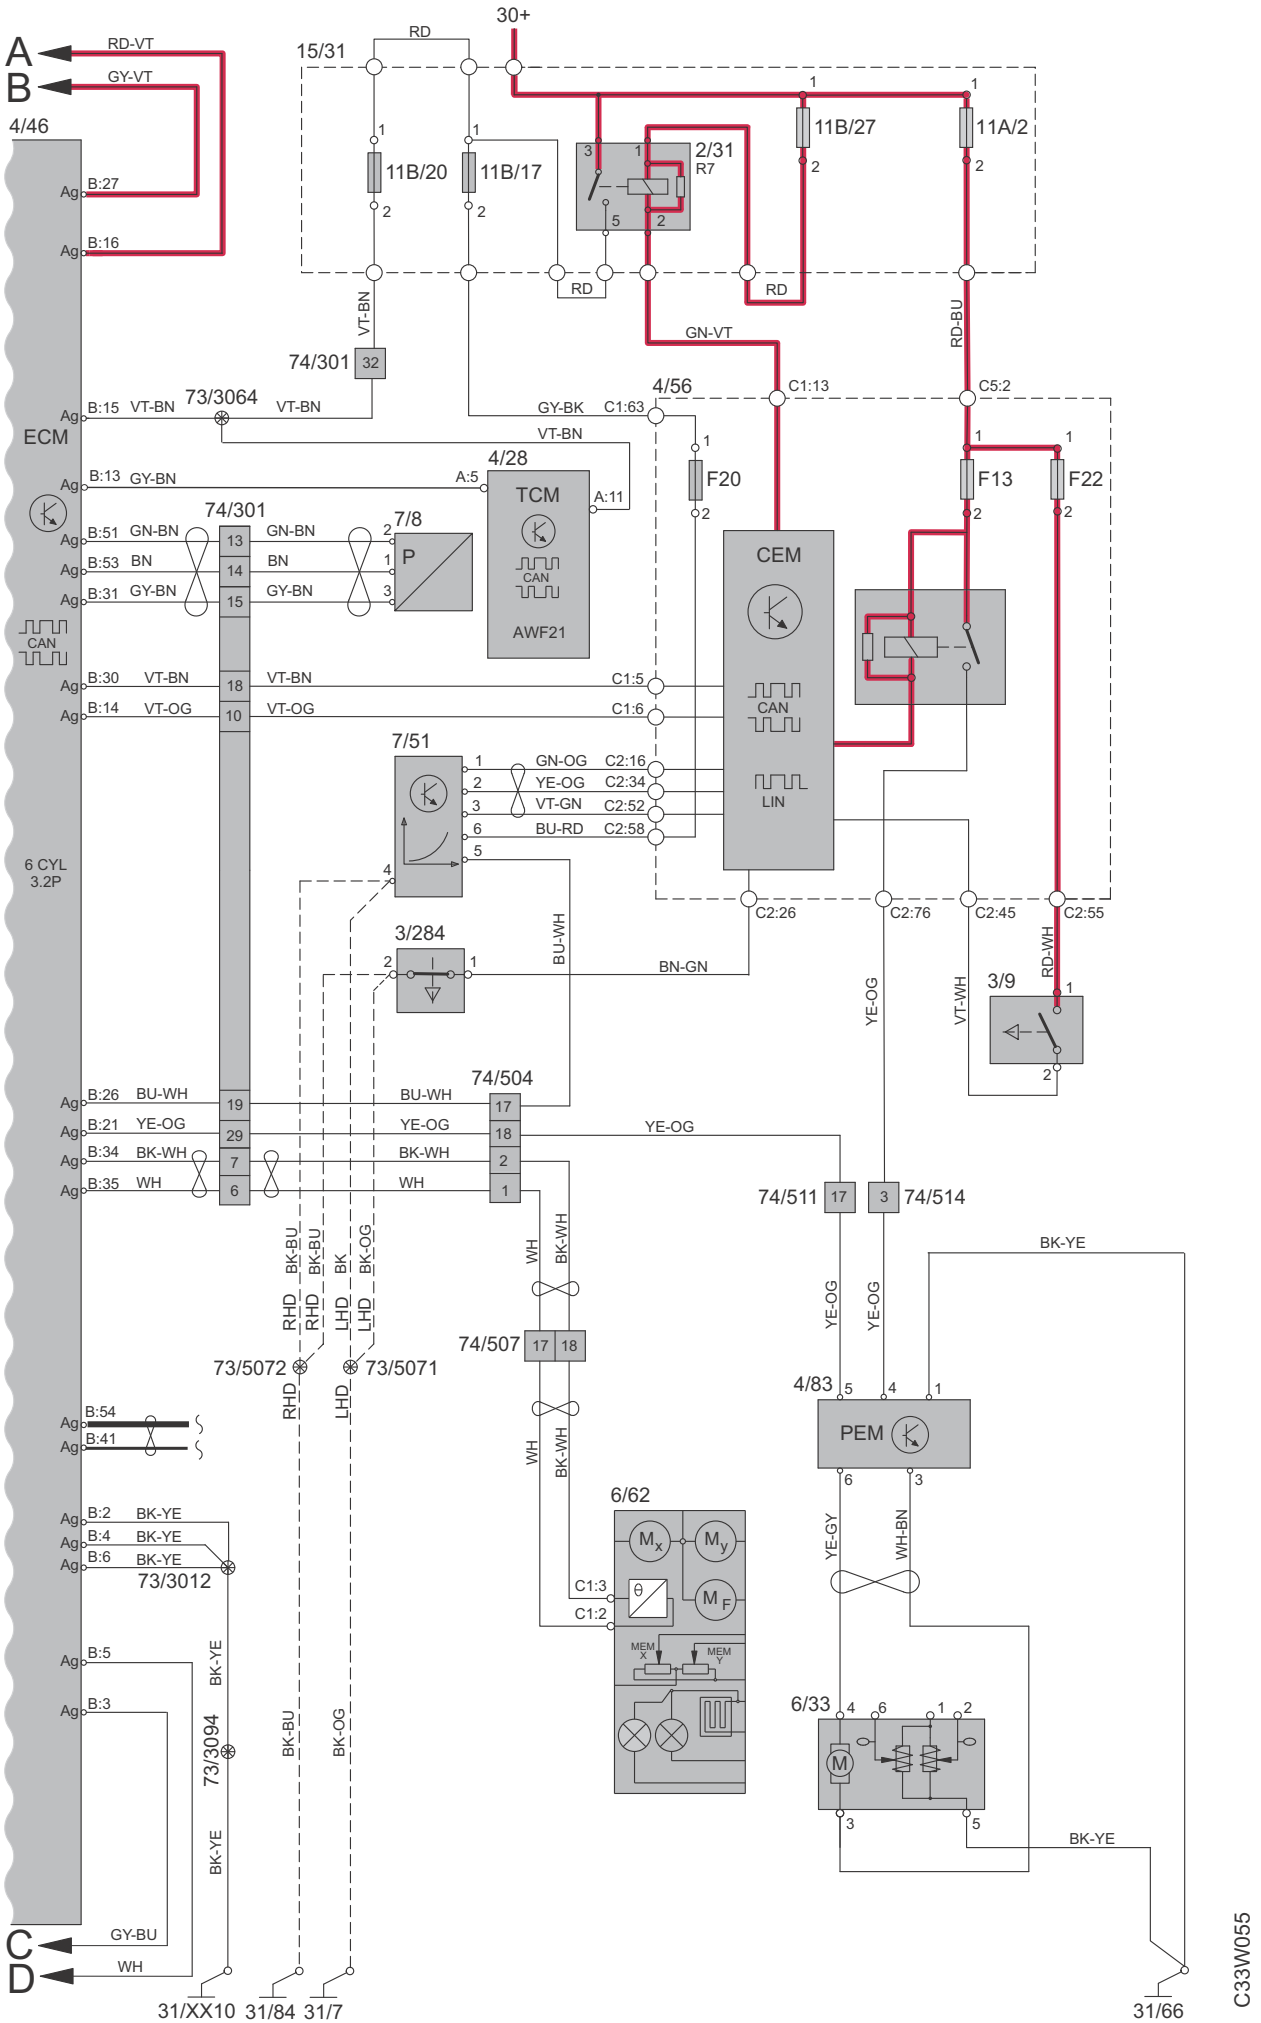
30+
15/31
RD
11B/20
11B/17
2/31
R7
11B/27
11A/2
4/46
RD-VT
GY-VT
B:27
B:16
VT-BN
74/301
32
73/3064
ECM
B:15
B:13
GY-BN
4/28
TCM
AWF21
A:5
A:11
CAN
7/8
P
74/301
B:51
GN-BN
B:53
BN
B:31
GY-BN
B:30
VT-BN
B:14
VT-OG
6 CYL
3.2P
4/56
C1:13
C5:2
GY-BK
C1:63
F20
F13
F22
CEM
LIN
C1:5
C1:6
7/51
GN-OG
YE-OG
VT-GN
BU-RD
C2:16
C2:34
C2:52
C2:58
C2:26
C2:76
C2:45
C2:55
3/284
BU-WH
BN-GN
3/9
RD-WH
YE-OG
VT-WH
74/504
B:26
BU-WH
B:21
YE-OG
B:34
BK-WH
B:35
WH
74/511
74/514
BK-YE
74/507
73/5072
73/5071
RHD
LHD
BK-BU
BK
BK-OG
WH
BK-WH
4/83
PEM
YE-GY
WH-BN
6/62
C1:3
C1:2
6/33
B:54
B:41
B:2
B:4
B:6
73/3012
B:5
B:3
73/3094
GY-BU
WH
C
D
31/XX10
31/84
31/7
31/66
C33W055

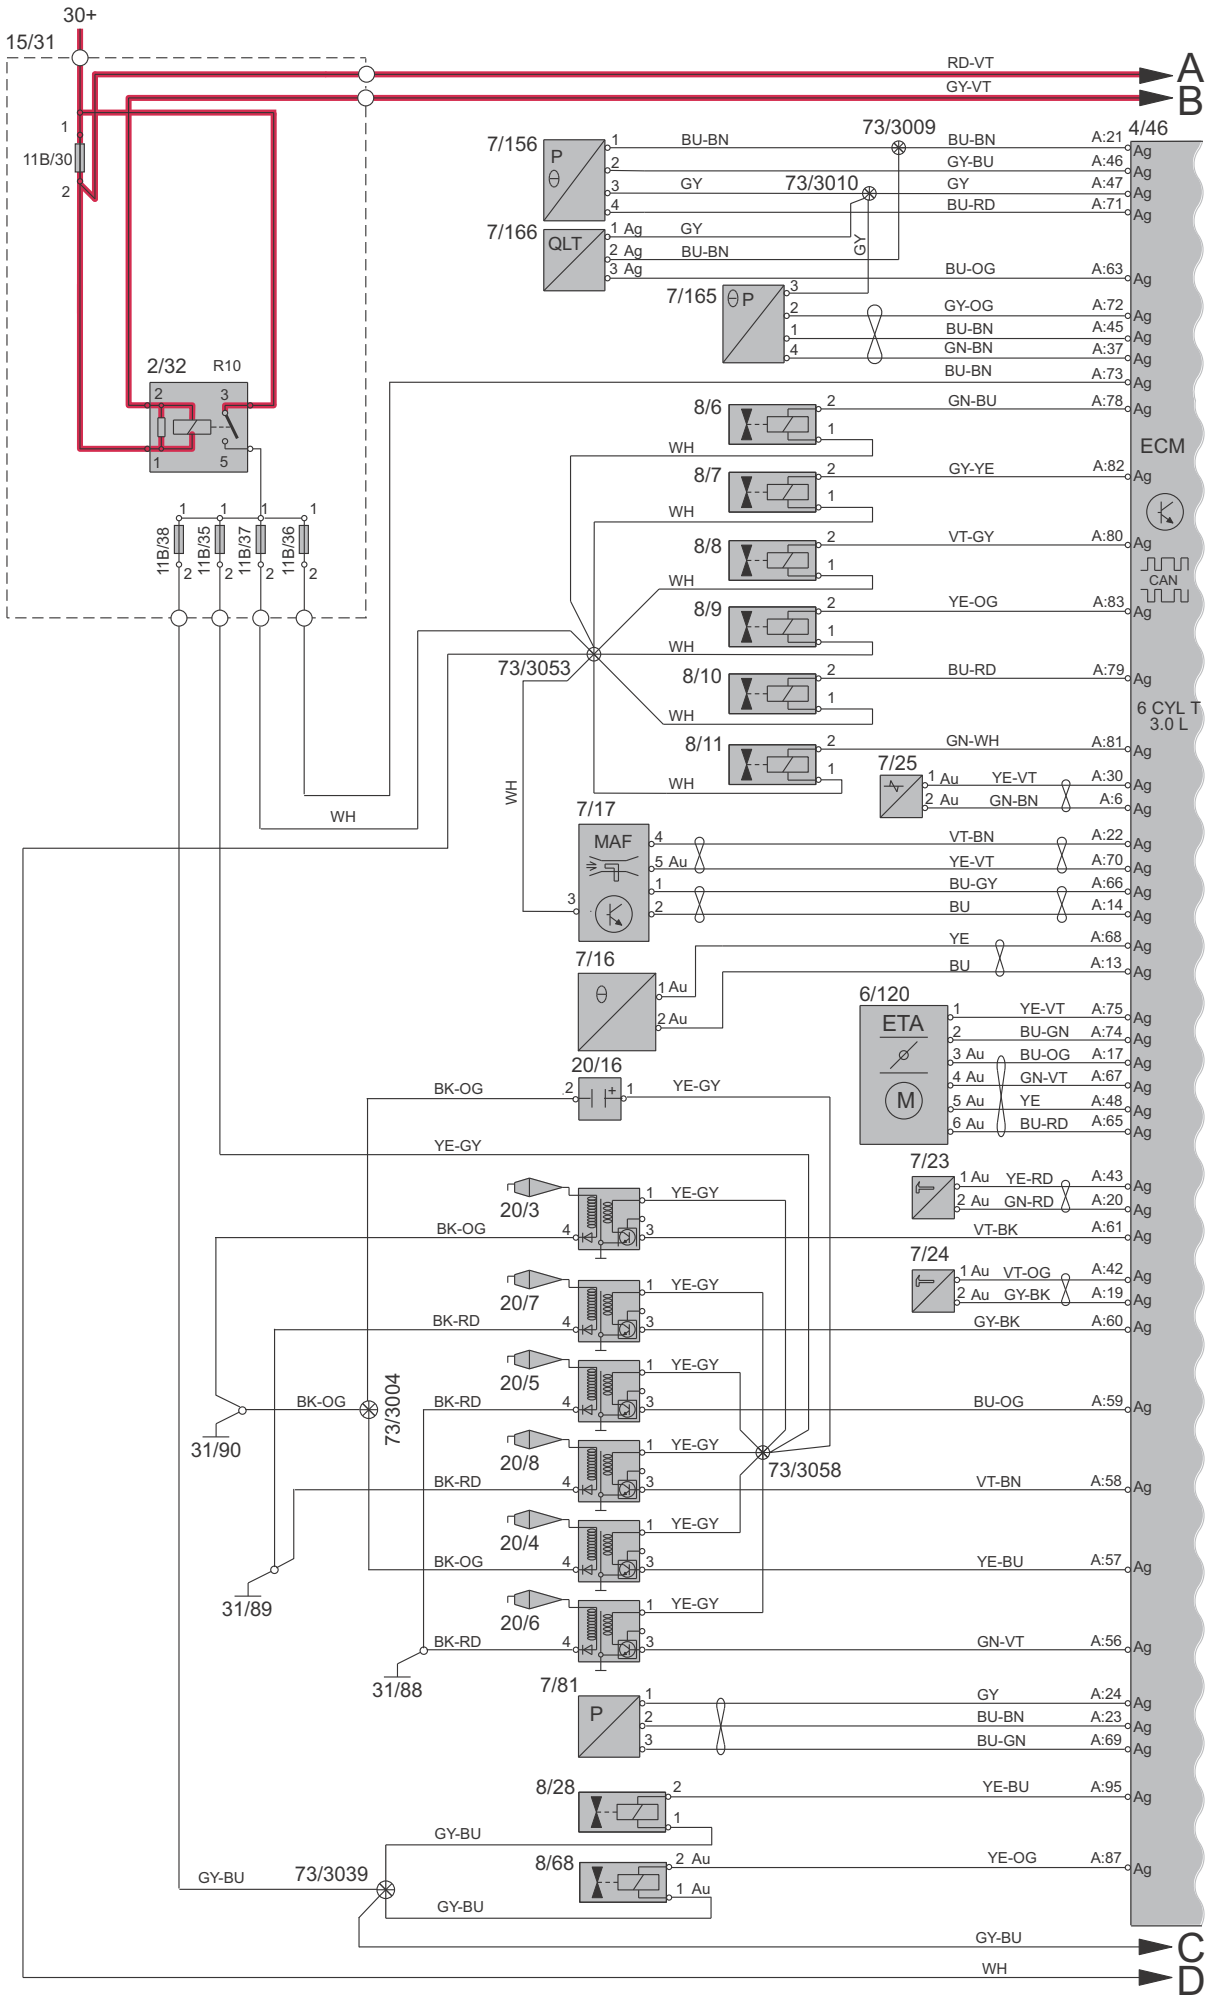
30+
15/31
11B/30
2/32
R10
11B/38
11B/35
11B/37
11B/36
WH
73/3053
7/156
7/166
QLT
7/165
73/3009
73/3010
BU-BN
GY
BU-RD
GY-OG
GN-BN
BU-OG
GN-BU
8/6
8/7
8/8
8/9
8/10
8/11
GY-YE
VT-GY
YE-OG
BU-RD
GN-WH
7/25
YE-VT
GN-BN
7/17
MAF
VT-BN
BU-GY
BU
7/16
YE
6/120
ETA
BU-GN
BU-OG
GN-VT
BU-RD
20/16
BK-OG
YE-GY
7/23
YE-RD
GN-RD
VT-BK
7/24
VT-OG
GY-BK
20/3
20/7
20/5
20/8
20/4
20/6
BK-RD
73/3004
31/90
31/89
31/88
73/3058
7/81
P
GY
BU-GN
8/28
YE-BU
8/68
YE-OG
GY-BU
73/3039
4/46
ECM
6 CYL T
3.0 L
CAN
A
B
C
D
C33W056

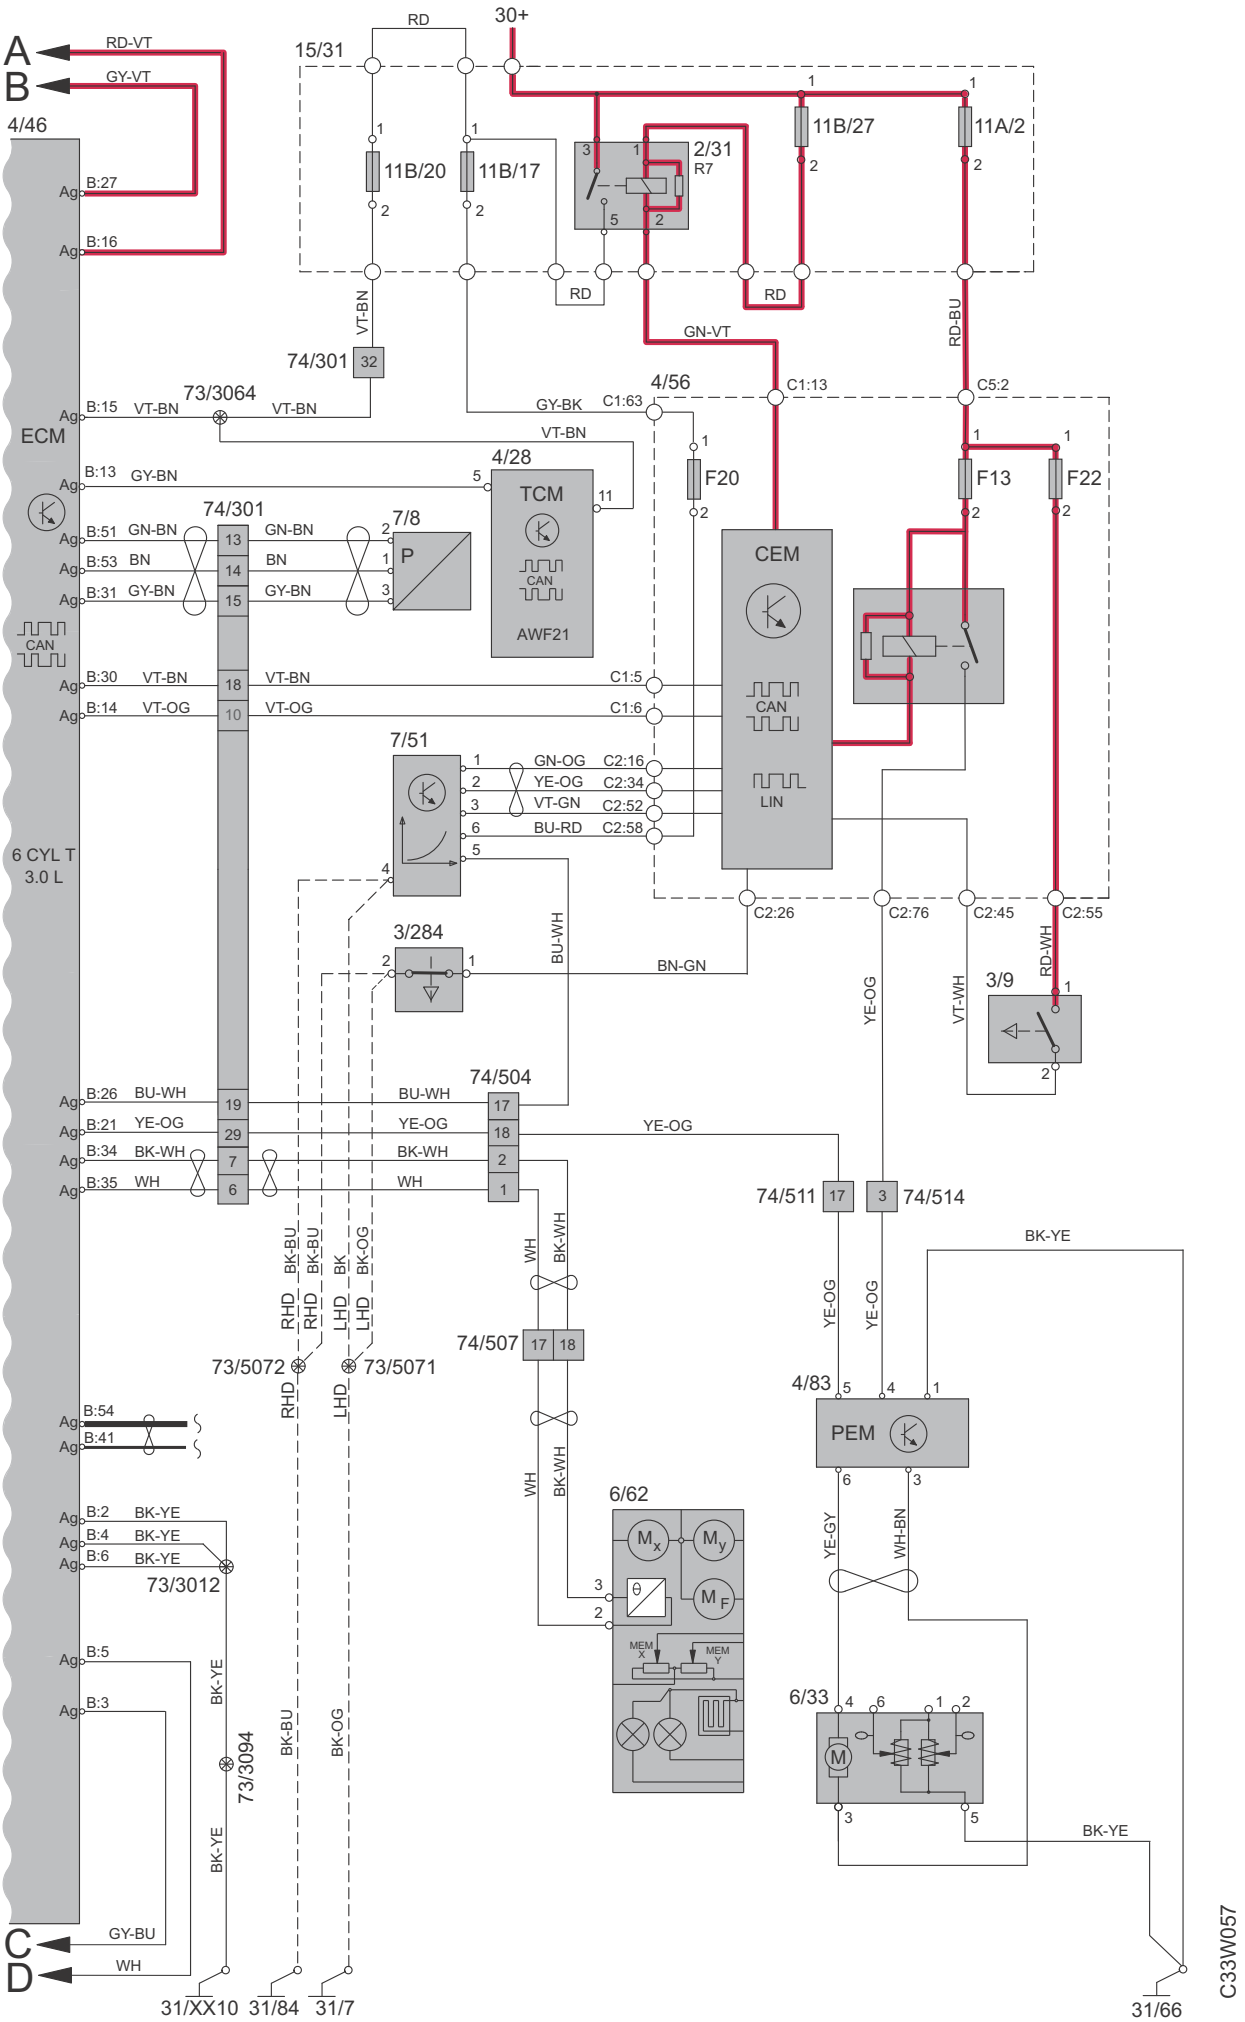
A
B
RD-VT
GY-VT
4/46
B:27
B:16
15/31
RD
30+
11B/20
11B/17
2/31
R7
11B/27
11A/2
VT-BN
74/301
32
73/3064
B:15
VT-BN
ECM
GY-BK
C1:63
4/56
C1:13
C5:2
GN-VT
RD-BU
F20
F13
F22
B:13
GY-BN
4/28
TCM
AWF21
11
74/301
7/8
P
B:51
GN-BN
B:53
BN
B:31
GY-BN
CAN
CEM
LIN
B:30
VT-BN
B:14
VT-OG
C1:5
C1:6
7/51
GN-OG
YE-OG
VT-GN
BU-RD
C2:16
C2:34
C2:52
C2:58
6 CYL T
3.0 L
C2:26
C2:76
C2:45
C2:55
3/284
BU-WH
BN-GN
YE-OG
VT-WH
RD-WH
3/9
74/504
B:26
BU-WH
B:21
YE-OG
B:34
BK-WH
B:35
WH
74/511
74/514
BK-YE
RHD
LHD
BK-BU
BK
BK-OG
74/507
73/5072
73/5071
4/83
PEM
B:54
B:41
6/62
B:2
B:4
B:6
BK-YE
73/3012
YE-GY
WH-BN
6/33
B:5
B:3
73/3094
GY-BU
WH
C
D
31/XX10
31/84
31/7
31/66
C33W057

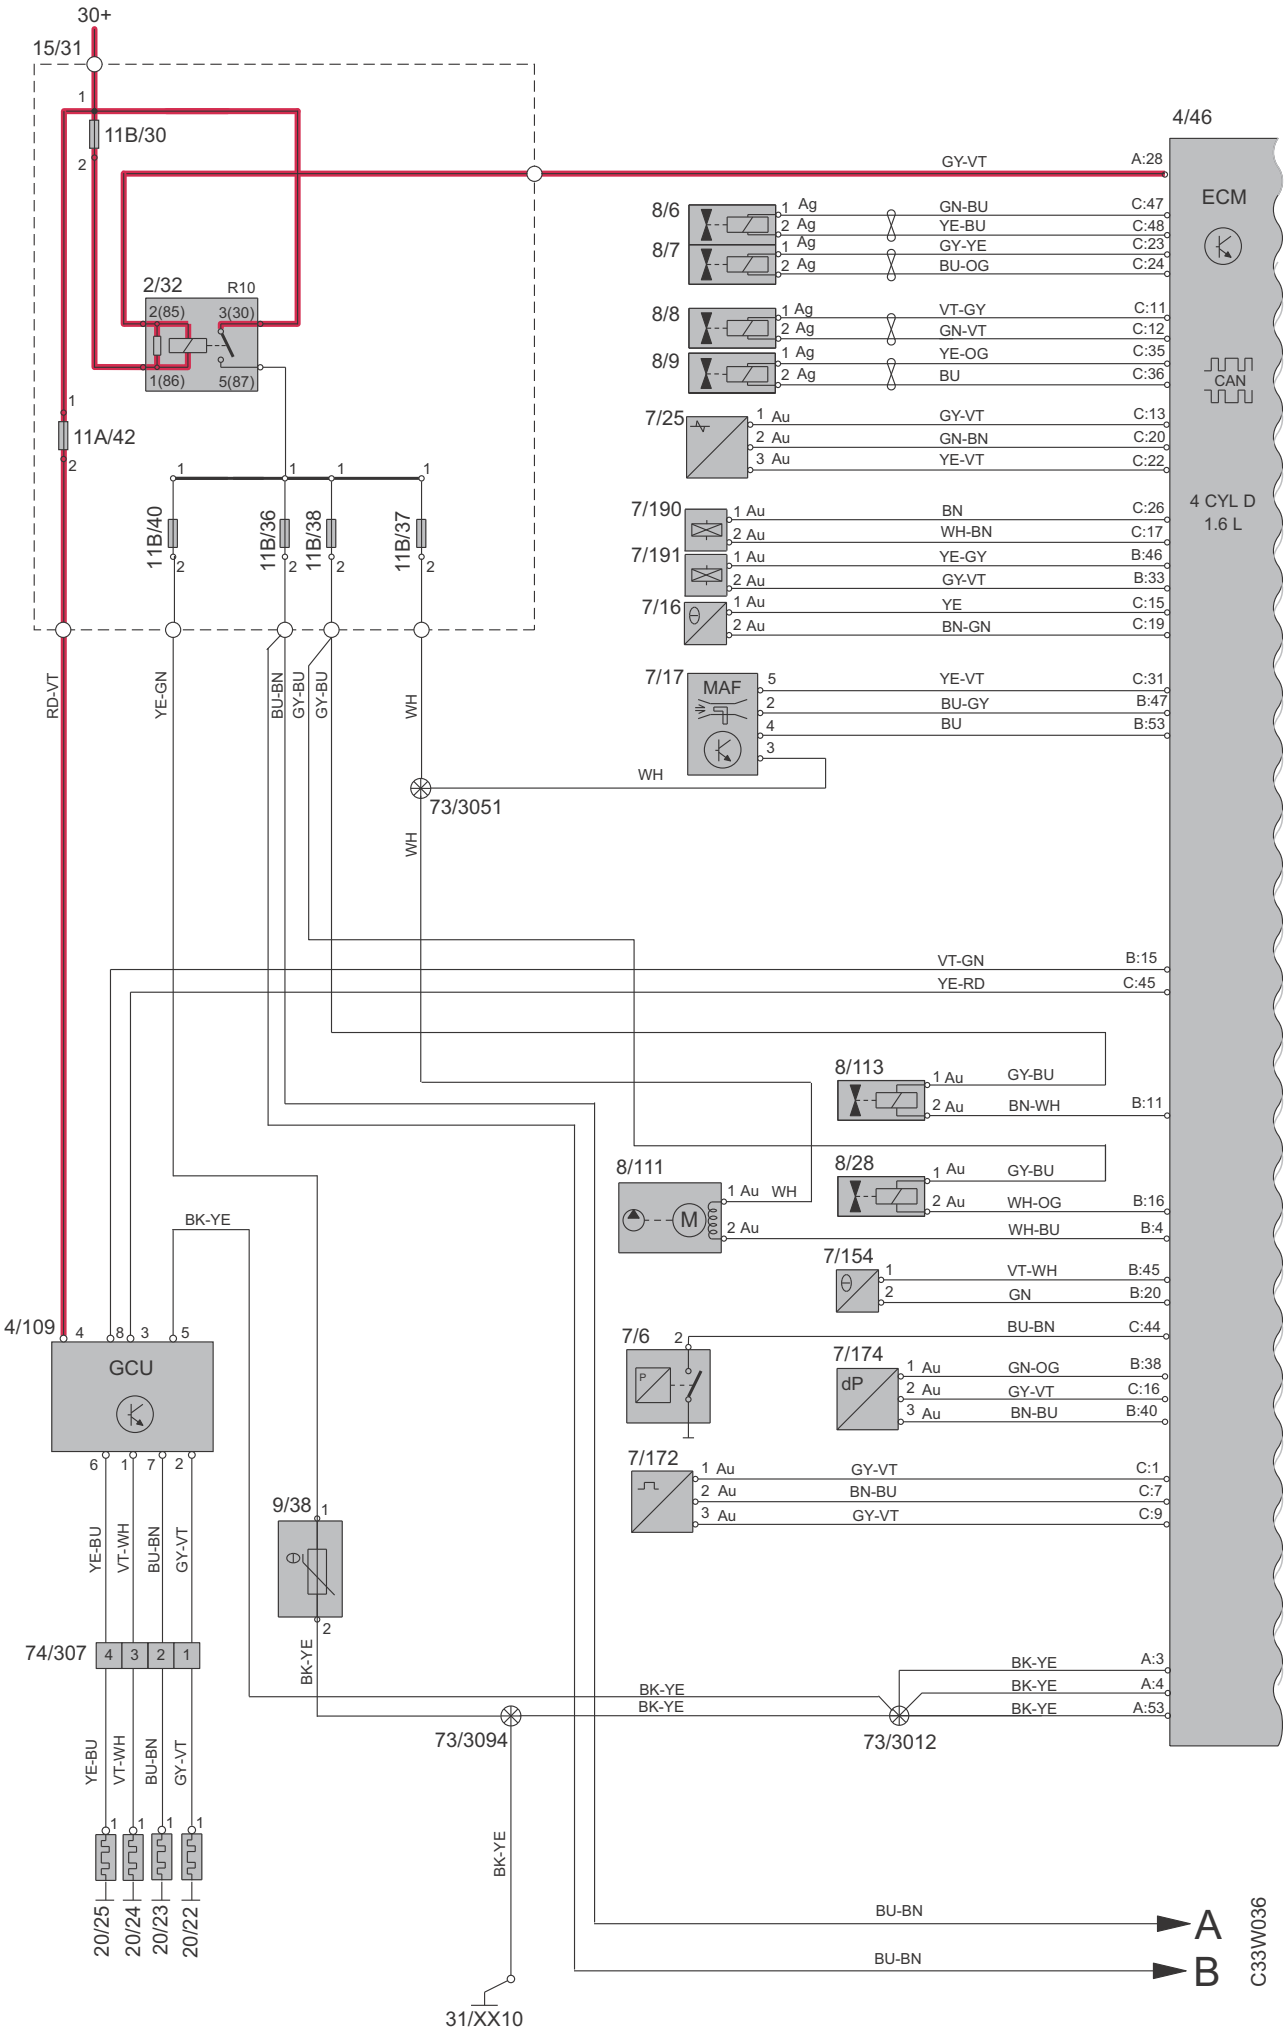
30+
15/31
11B/30
2/32
R10
2(85)
3(30)
1(86)
5(87)
11A/42
11B/40
11B/36
11B/38
11B/37
4/46
ECM
CAN
4 CYL D
1.6 L
GY-VT
A:28
8/6
8/7
8/8
8/9
GN-BU
C:47
YE-BU
C:48
GY-YE
C:23
BU-OG
C:24
VT-GY
C:11
GN-VT
C:12
YE-OG
C:35
BU
C:36
7/25
GY-VT
C:13
GN-BN
C:20
YE-VT
C:22
7/190
7/191
7/16
BN
C:26
WH-BN
C:17
YE-GY
B:46
GY-VT
B:33
YE
C:15
BN-GN
C:19
7/17
MAF
YE-VT
C:31
BU-GY
B:47
BU
B:53
WH
73/3051
RD-VT
YE-GN
BU-BN
GY-BU
GY-BU
WH
VT-GN
B:15
YE-RD
C:45
8/113
GY-BU
BN-WH
B:11
8/111
8/28
WH-OG
B:16
WH-BU
B:4
7/154
VT-WH
B:45
GN
B:20
BU-BN
C:44
7/6
7/174
dP
GN-OG
B:38
GY-VT
C:16
BN-BU
B:40
7/172
GY-VT
C:1
BN-BU
C:7
GY-VT
C:9
BK-YE
4/109
GCU
9/38
74/307
YE-BU
VT-WH
BU-BN
GY-VT
BK-YE
BK-YE
A:3
BK-YE
A:4
BK-YE
A:53
73/3094
73/3012
20/25
20/24
20/23
20/22
BU-BN
BU-BN
A
B
31/XX10
C33W036

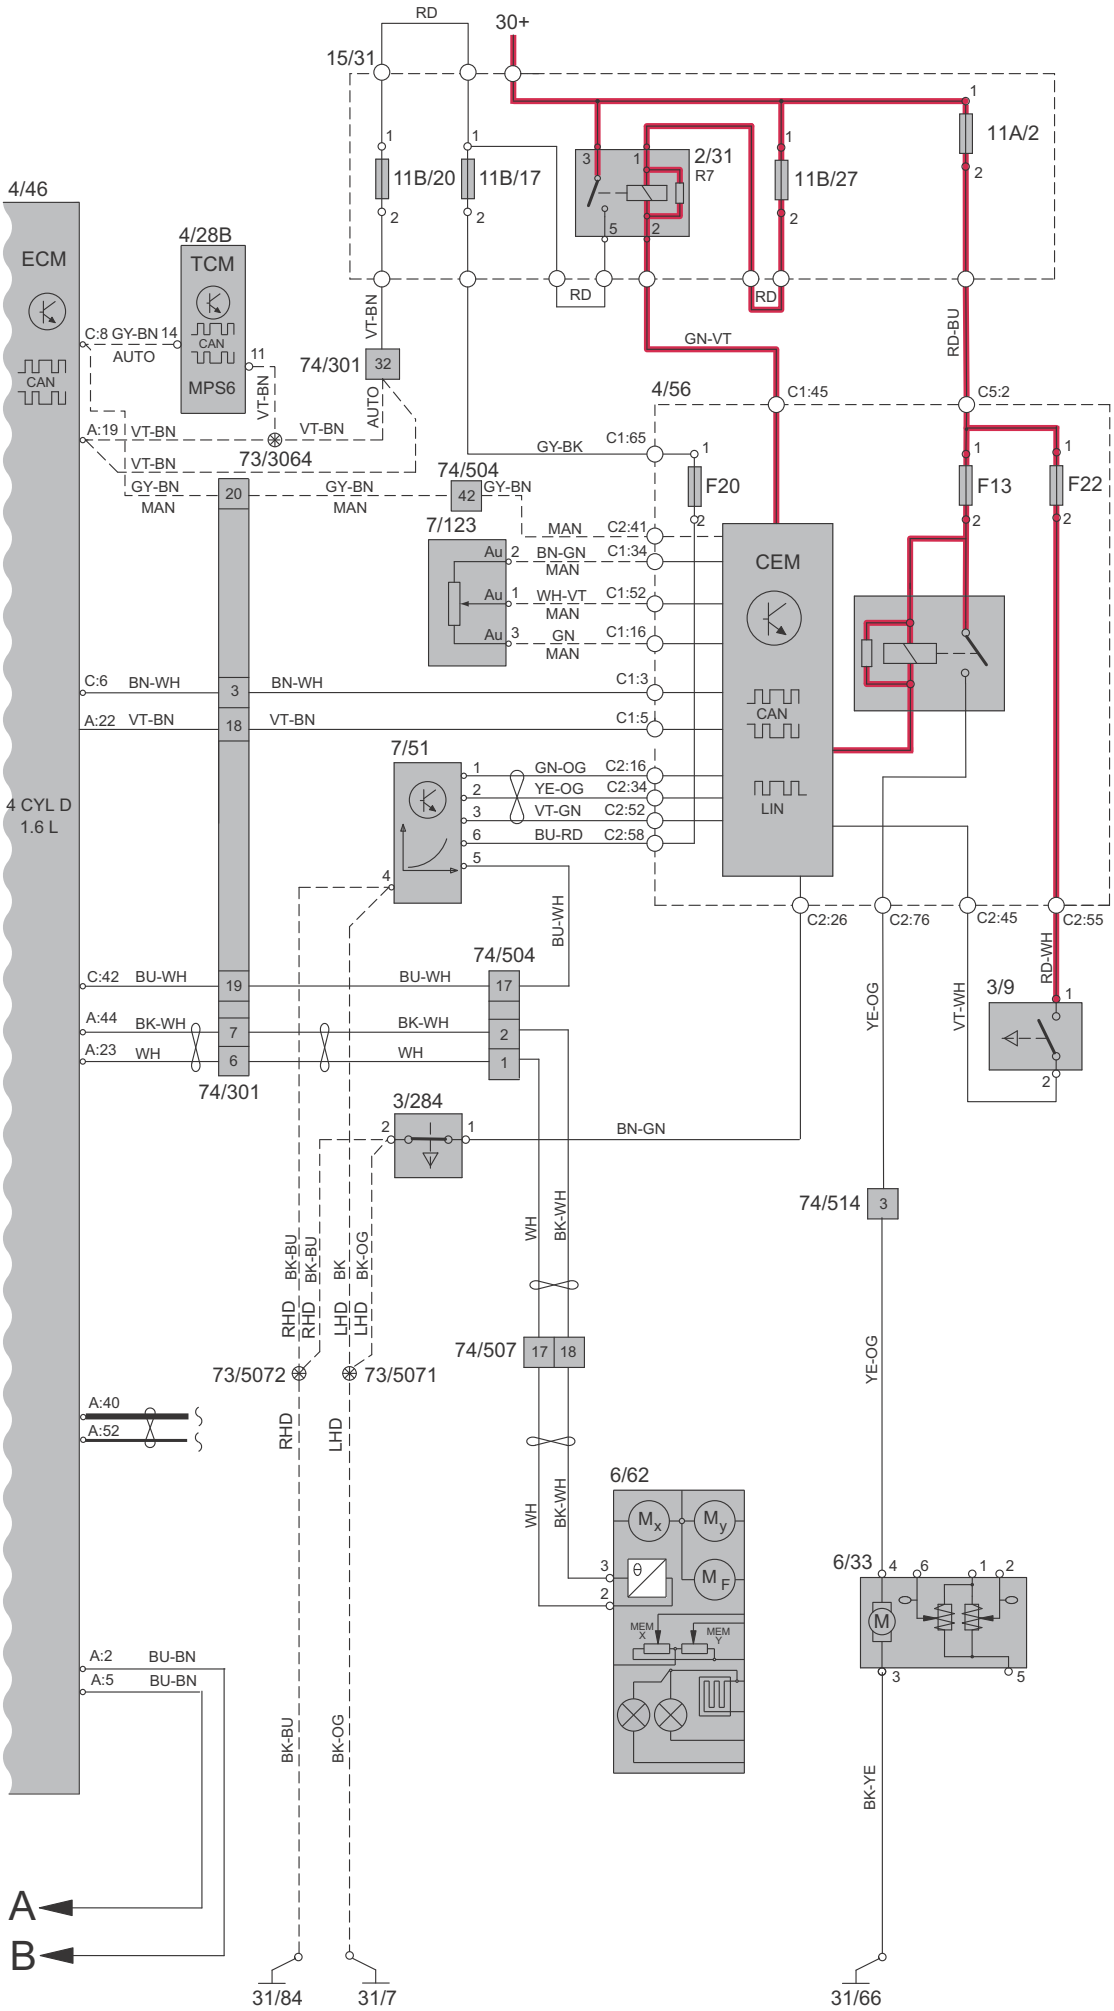
RD
30+
15/31
11B/20
11B/17
2/31
R7
11B/27
11A/2
4/46
ECM
CAN
4 CYL D
1.6 L
4/28B
TCM
CAN
MPS6
C:8 GY-BN 14
AUTO
11
VT-BN
74/301
32
AUTO
A:19 VT-BN
VT-BN
73/3064
VT-BN
GY-BN
MAN
20
GY-BN
MAN
74/504
42
GY-BN
GN-VT
RD-BU
4/56
C1:45
C5:2
GY-BK
C1:65
F20
F13
F22
7/123
MAN
C2:41
Au
2
BN-GN
MAN
C1:34
Au
1
WH-VT
MAN
C1:52
Au
3
GN
MAN
C1:16
CEM
CAN
LIN
C:6 BN-WH
3
BN-WH
C1:3
A:22 VT-BN
18
VT-BN
C1:5
7/51
1
GN-OG
C2:16
2
YE-OG
C2:34
3
VT-GN
C2:52
6
BU-RD
C2:58
5
4
BU-WH
C2:26
C2:76
C2:45
C2:55
RD-WH
3/9
VT-WH
YE-OG
C:42 BU-WH
19
BU-WH
17
74/504
A:44 BK-WH
7
BK-WH
2
A:23 WH
6
WH
1
74/301
3/284
2
1
BN-GN
74/514
3
WH
BK-WH
BK-BU
BK-BU
BK
BK-OG
RHD
RHD
LHD
LHD
74/507
17
18
73/5072
73/5071
A:40
A:52
RHD
LHD
6/62
Mx
My
MF
θ
3
2
MEM X
MEM Y
6/33
4
6
1
2
M
3
5
A:2 BU-BN
A:5 BU-BN
BK-BU
BK-OG
BK-YE
A
B
31/84
31/7
31/66

C34W043

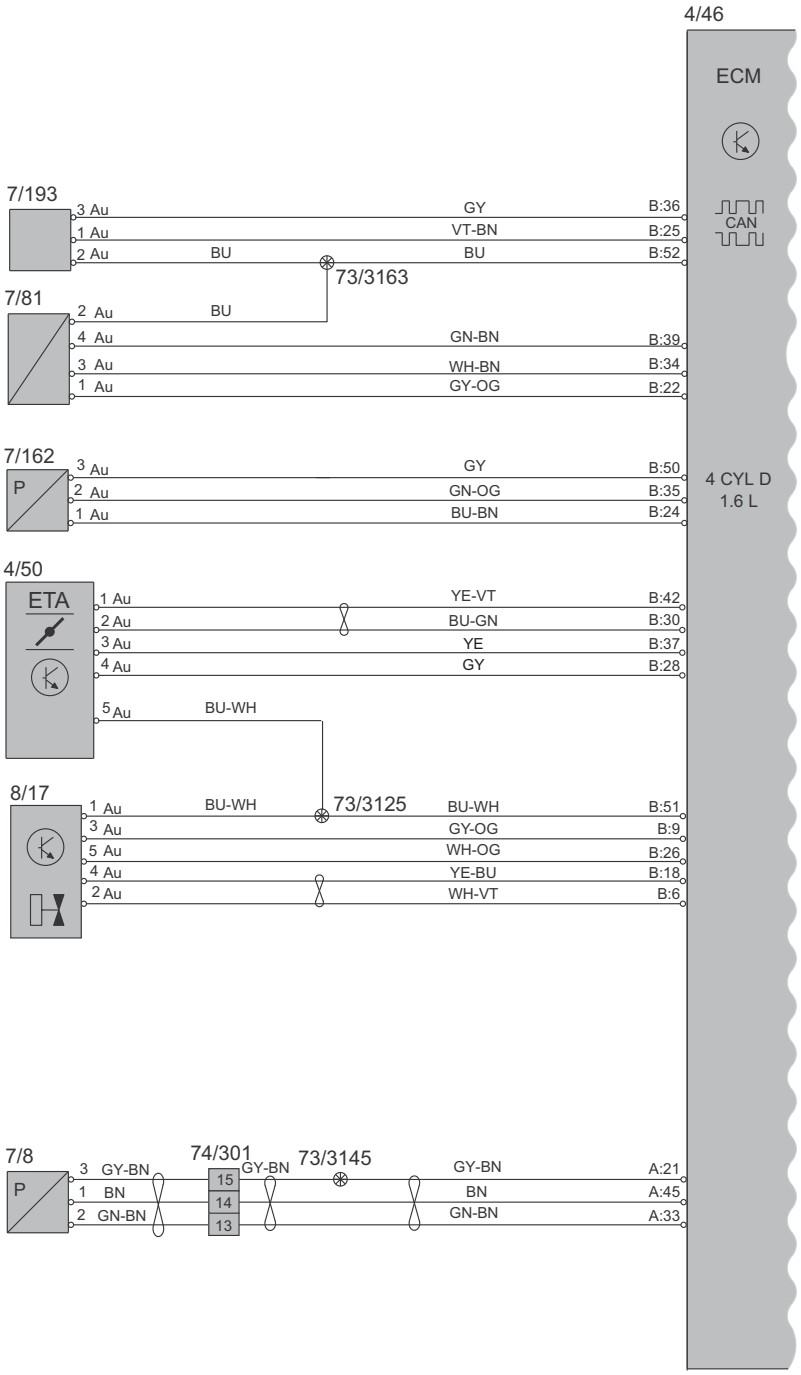
4/46
ECM
CAN
4 CYL D
1.6 L
7/193
3 Au
1 Au
2 Au
GY
VT-BN
BU
B:36
B:25
B:52
73/3163
7/81
2 Au
4 Au
3 Au
1 Au
GN-BN
WH-BN
GY-OG
B:39
B:34
B:22
7/162
P
3 Au
2 Au
1 Au
GY
GN-OG
BU-BN
B:50
B:35
B:24
4/50
ETA
1 Au
2 Au
3 Au
4 Au
5 Au
YE-VT
BU-GN
YE
GY
BU-WH
B:42
B:30
B:37
B:28
8/17
1 Au
3 Au
5 Au
4 Au
2 Au
BU-WH
73/3125
BU-WH
GY-OG
WH-OG
YE-BU
WH-VT
B:51
B:9
B:26
B:18
B:6
7/8
P
3 GY-BN
1 BN
2 GN-BN
74/301
15
14
13
GY-BN
73/3145
GY-BN
BN
GN-BN
A:21
A:45
A:33

C33W038

Group 28 Ignition and control system
Engine management system, 4-Cyl. 2.0L Diesel 1:3

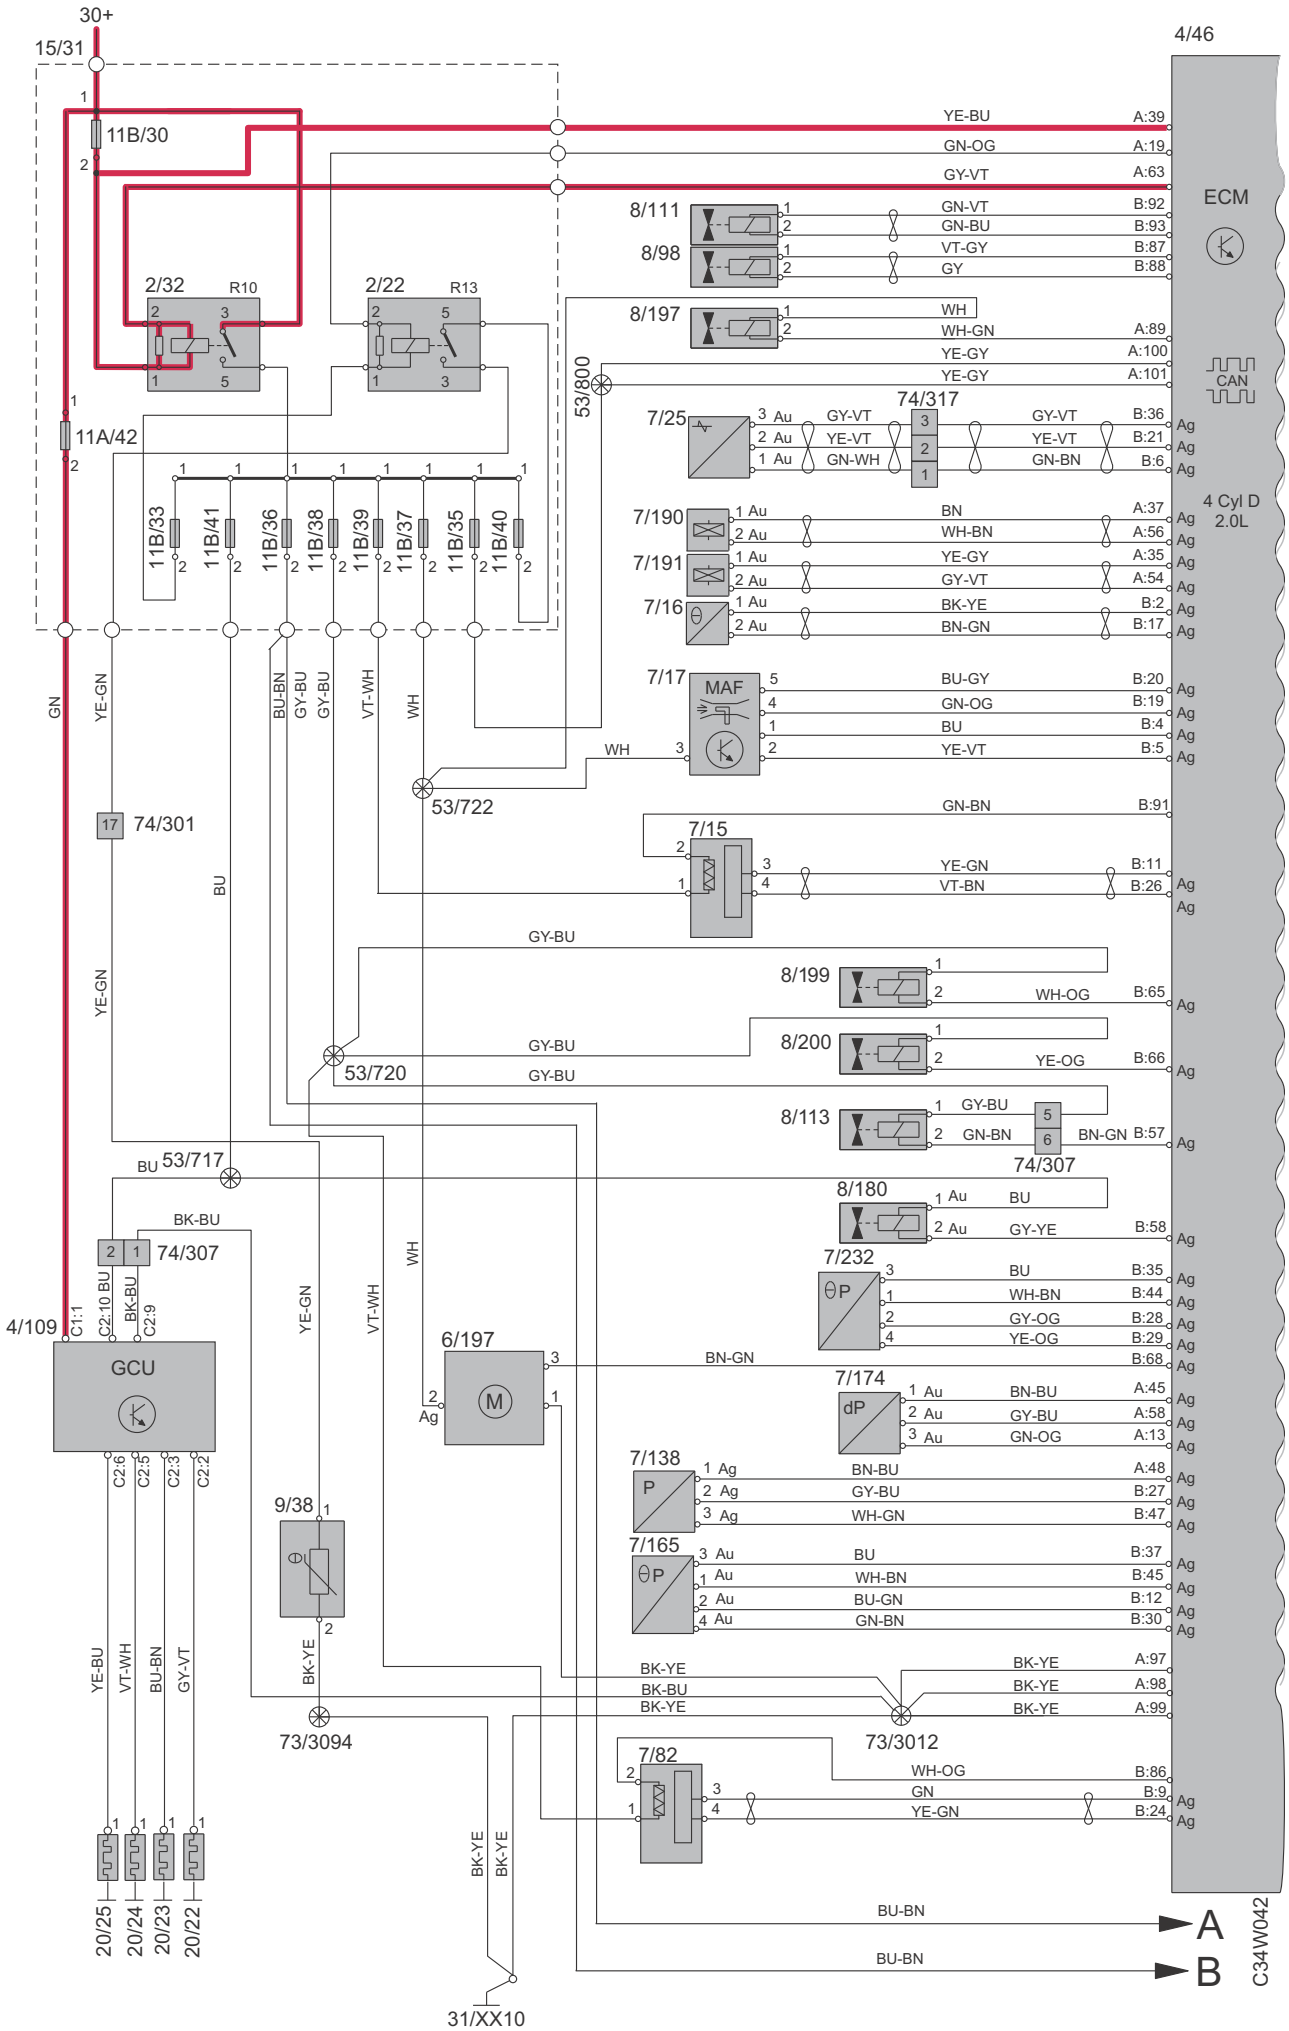

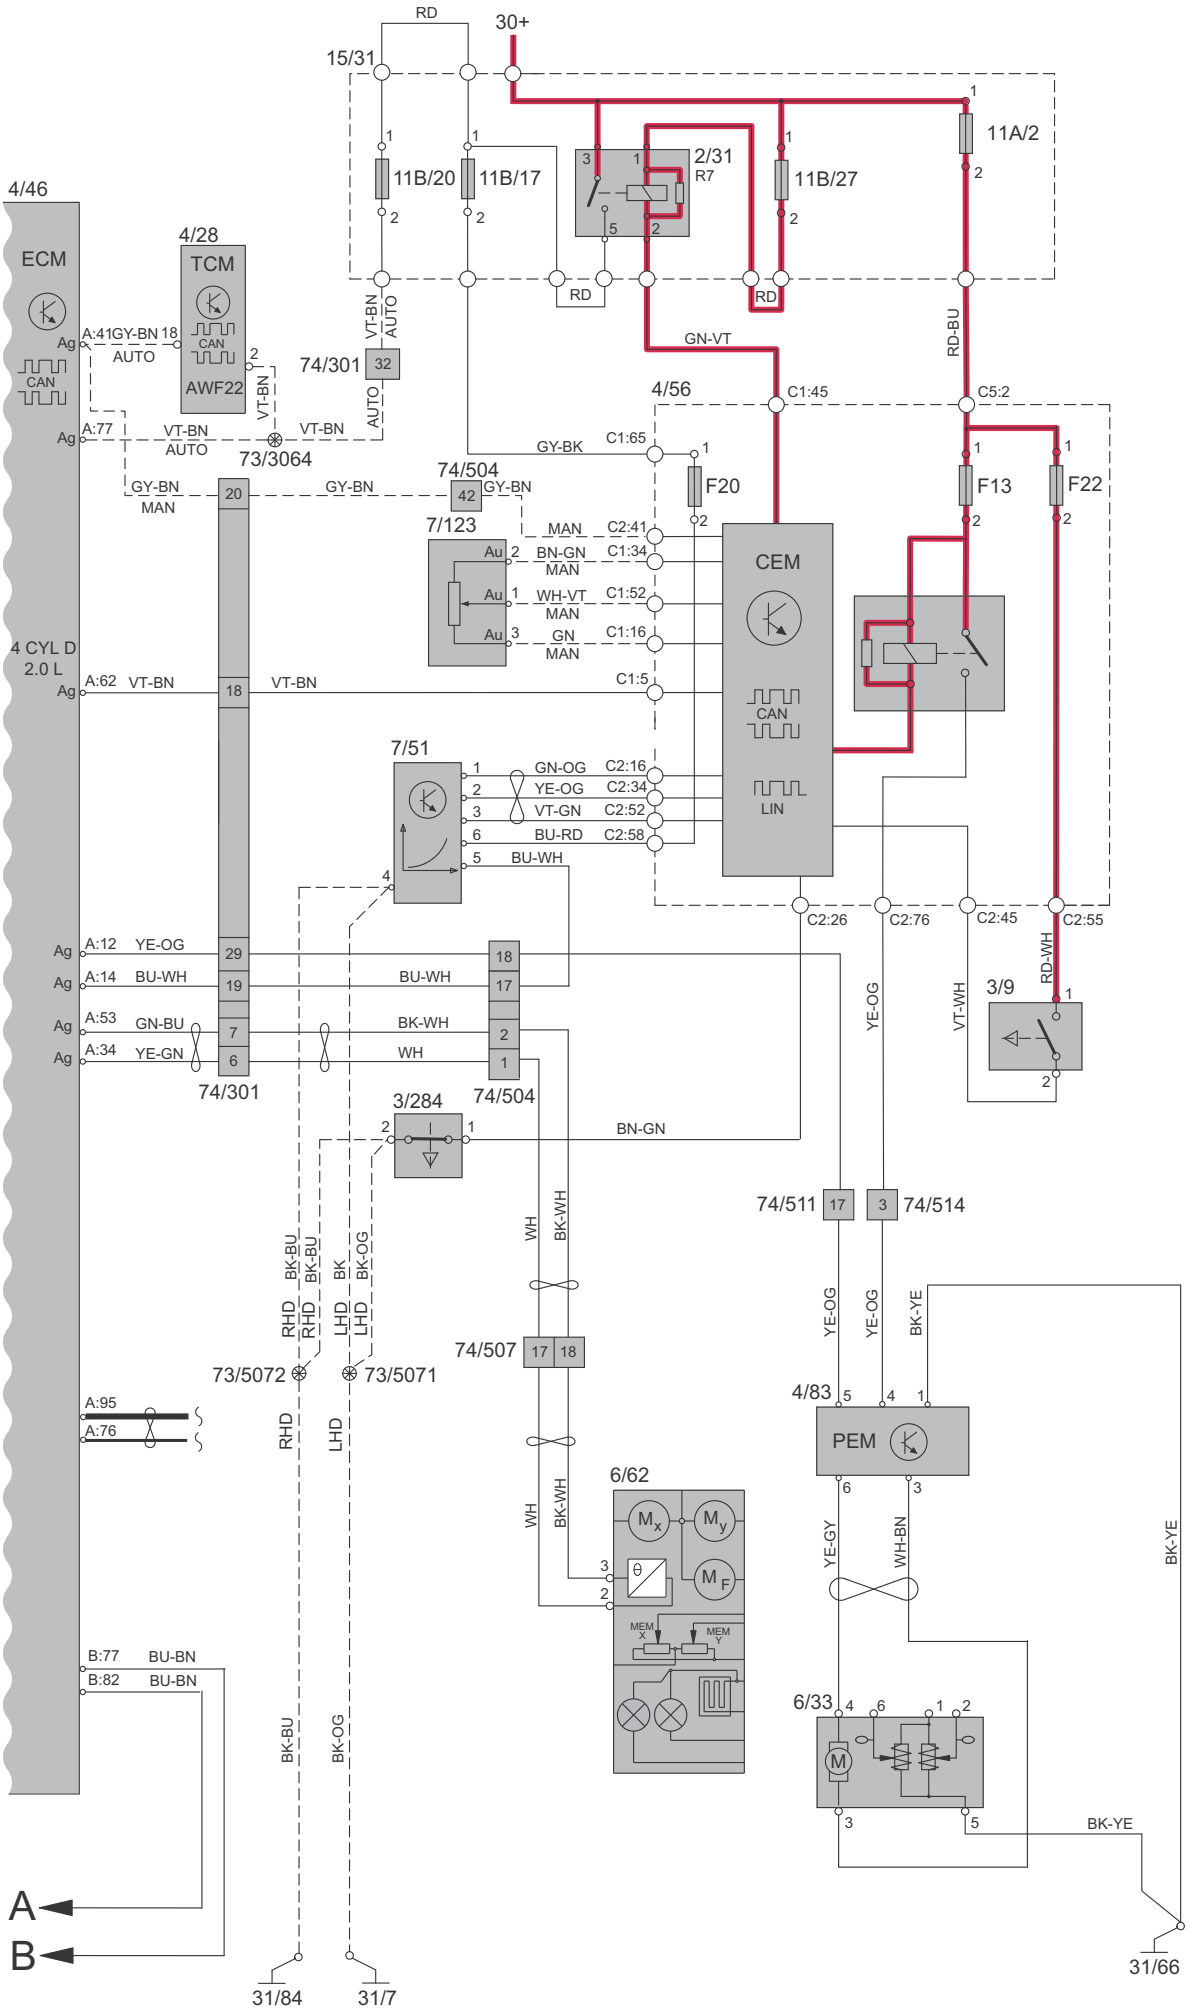
RD
30+
15/31
11B/20
11B/17
2/31
R7
11B/27
11A/2
4/46
ECM
4/28
TCM
AWF22
CAN
A:41 GY-BN 18
AUTO
VT-BN
74/301
32
AUTO
A:77
73/3064
GY-BN
MAN
20
74/504
42
GY-BN
4/56
C1:45
C5:2
GY-BK
C1:65
F20
F13
F22
7/123
MAN
C2:41
BN-GN
C1:34
WH-VT
C1:52
GN
C1:16
CEM
4 CYL D
2.0 L
A:62 VT-BN
18
C1:5
LIN
7/51
GN-OG
C2:16
YE-OG
C2:34
VT-GN
C2:52
BU-RD
C2:58
BU-WH
C2:26
C2:76
C2:45
C2:55
A:12 YE-OG
29
A:14 BU-WH
19
A:53 GN-BU
7
A:34 YE-GN
6
74/301
18
17
2
1
74/504
3/284
BN-GN
3/9
RD-WH
YE-OG
VT-WH
74/511
17
3
74/514
BK-BU
BK-OG
BK
WH
BK-WH
RHD
LHD
74/507
17
18
73/5072
73/5071
A:95
A:76
4/83
PEM
6/62
YE-GY
WH-BN
BK-YE
6/33
B:77 BU-BN
B:82 BU-BN
A
B
31/84
31/7
31/66
C33W040

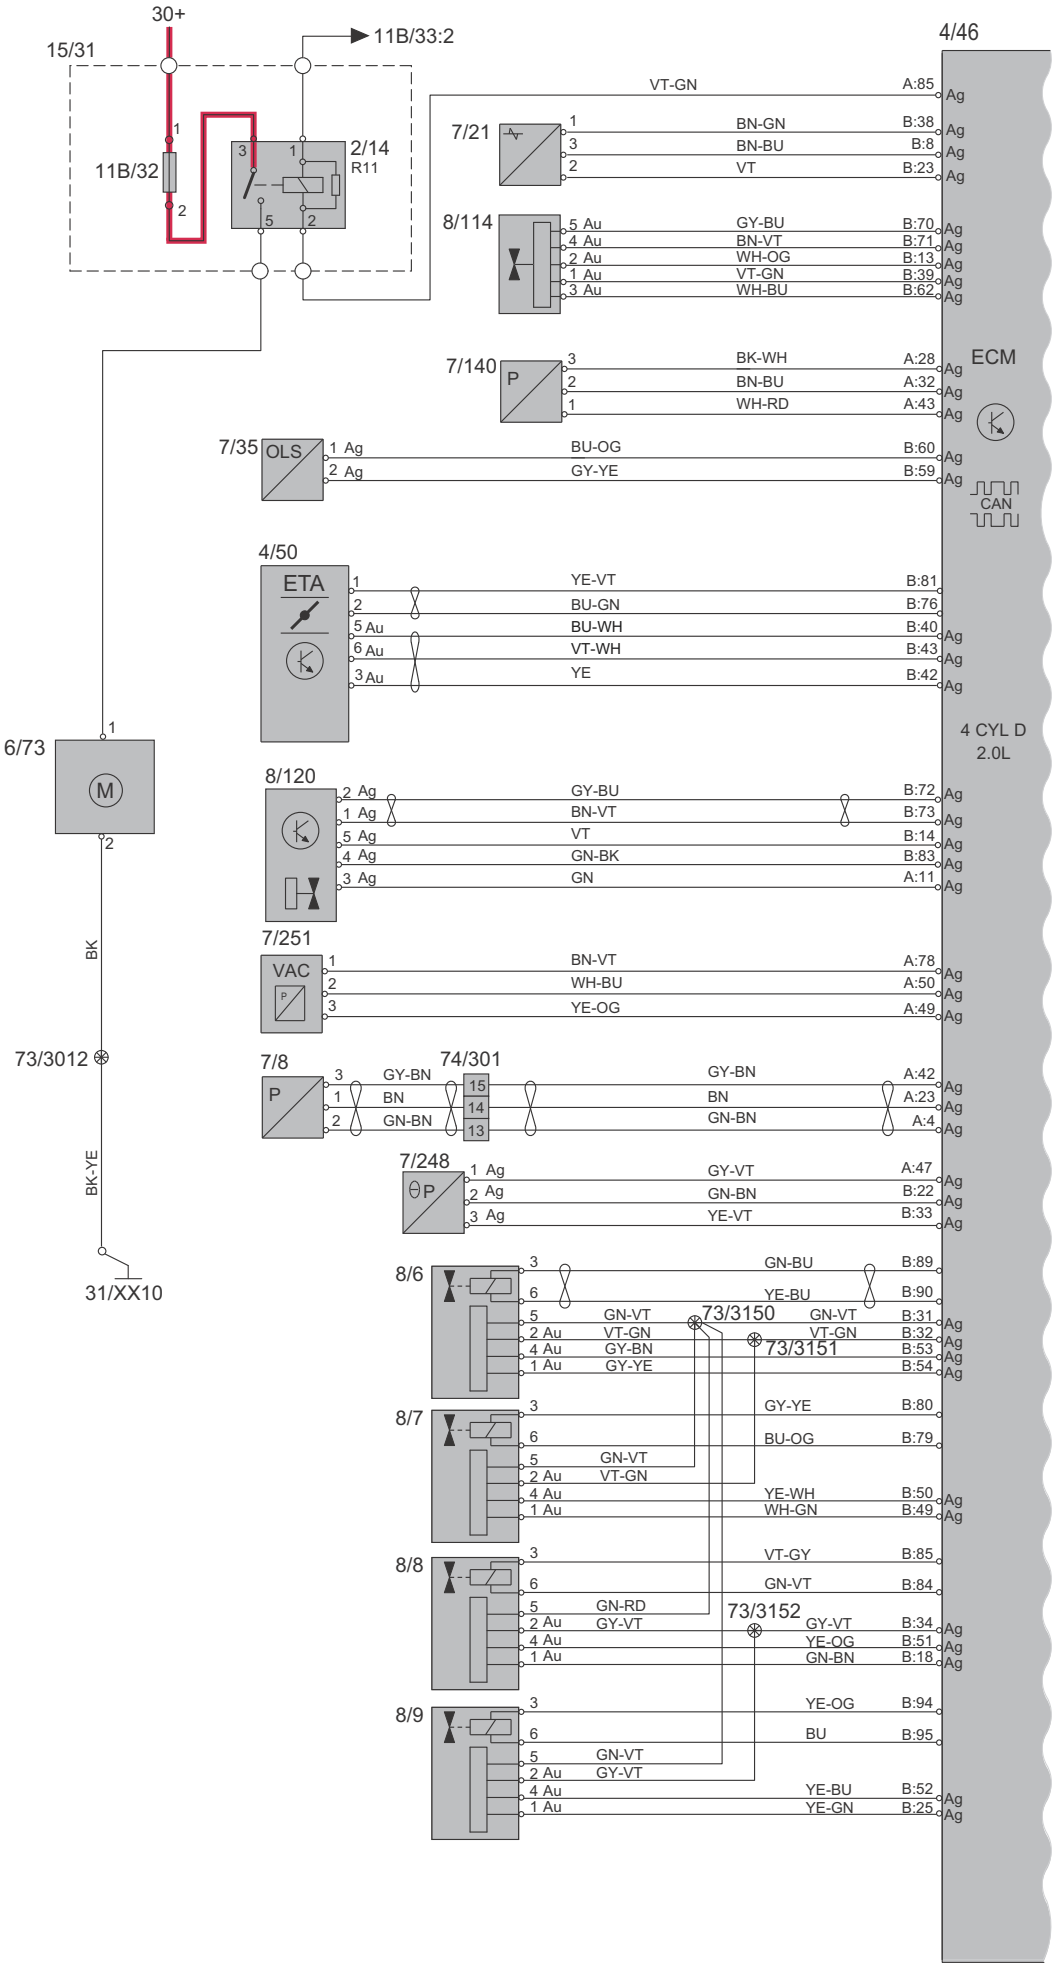
30+
15/31
11B/33:2
11B/32
2/14
R11
4/46
ECM
CAN
4 CYL D
2.0L
7/21
8/114
7/140
7/35
OLS
4/50
ETA
6/73
8/120
7/251
VAC
73/3012
7/8
74/301
7/248
8/6
8/7
8/8
8/9
73/3150
73/3151
73/3152
BK
BK-YE
31/XX10
VT-GN
BN-GN
BN-BU
VT
GY-BU
BN-VT
WH-OG
VT-GN
WH-BU
BK-WH
BN-BU
WH-RD
BU-OG
GY-YE
YE-VT
BU-GN
BU-WH
VT-WH
YE
GY-BU
BN-VT
VT
GN-BK
GN
BN-VT
WH-BU
YE-OG
GY-BN
BN
GN-BN
GY-VT
GN-BN
YE-VT
GN-BU
YE-BU
GN-VT
VT-GN
GY-BN
GY-YE
GY-YE
BU-OG
GN-VT
VT-GN
YE-WH
WH-GN
VT-GY
GN-VT
GN-RD
GY-VT
GY-VT
YE-OG
GN-BN
YE-OG
BU
GN-VT
GY-VT
YE-BU
YE-GN
C34W036

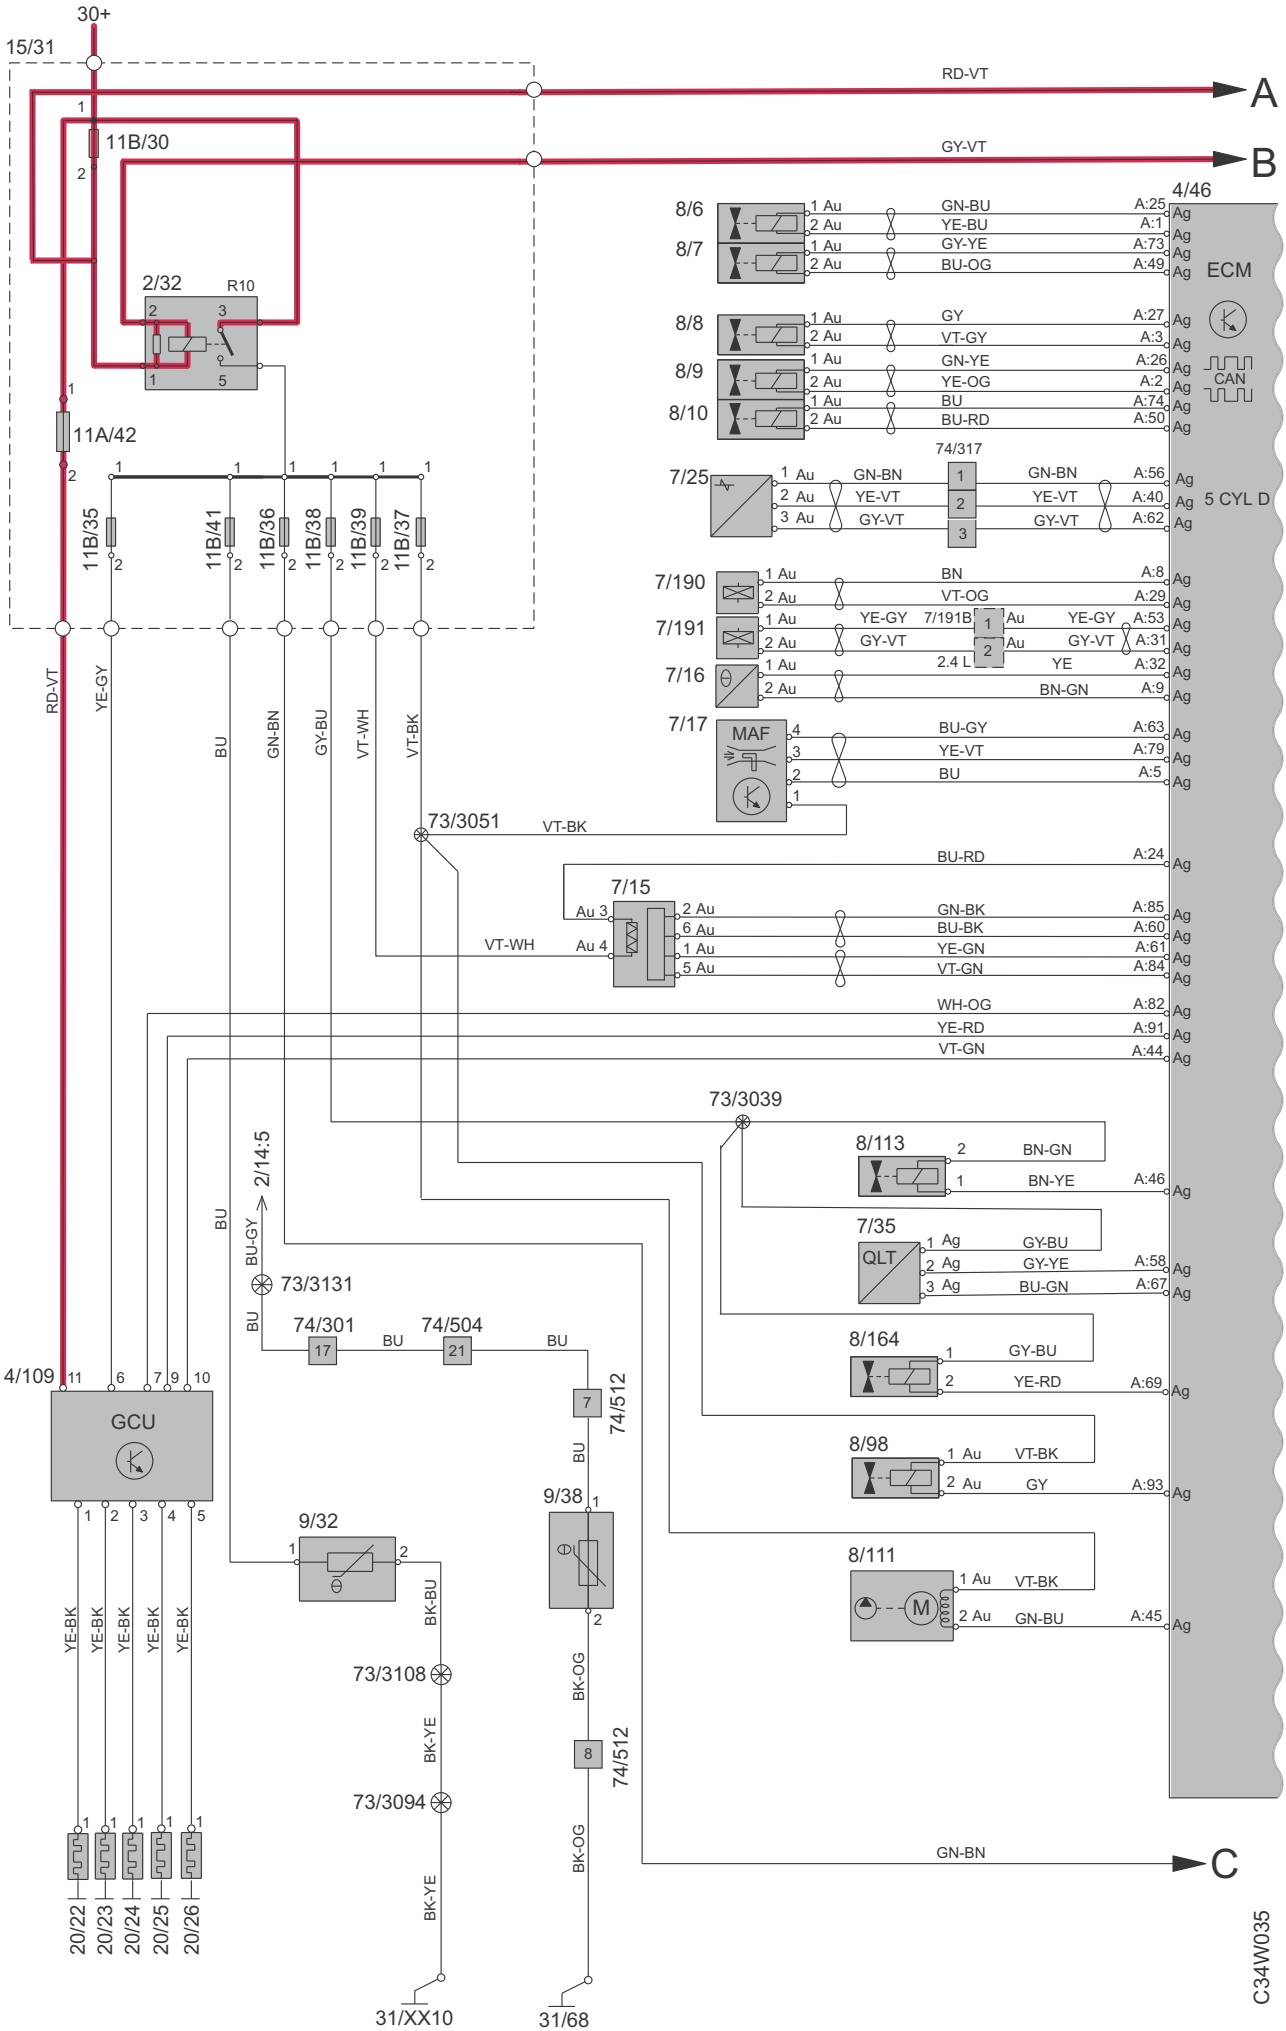
30+
15/31
11B/30
2/32
R10
11A/42
11B/35
11B/41
11B/36
11B/38
11B/39
11B/37
RD-VT
YE-GY
BU
GN-BN
GY-BU
VT-WH
VT-BK
GY-VT
A
B
C
4/46
ECM
CAN
5 CYL D
8/6
8/7
8/8
8/9
8/10
7/25
7/190
7/191
7/16
7/17
MAF
74/317
7/191B
2.4 L
73/3051
7/15
VT-WH
WH-OG
YE-RD
VT-GN
73/3039
8/113
7/35
QLT
8/164
8/98
8/111
2/14:5
73/3131
74/301
74/504
74/512
4/109
GCU
9/32
9/38
73/3108
73/3094
BK-BU
BK-YE
BK-OG
YE-BK
20/22
20/23
20/24
20/25
20/26
31/XX10
31/68
C34W035

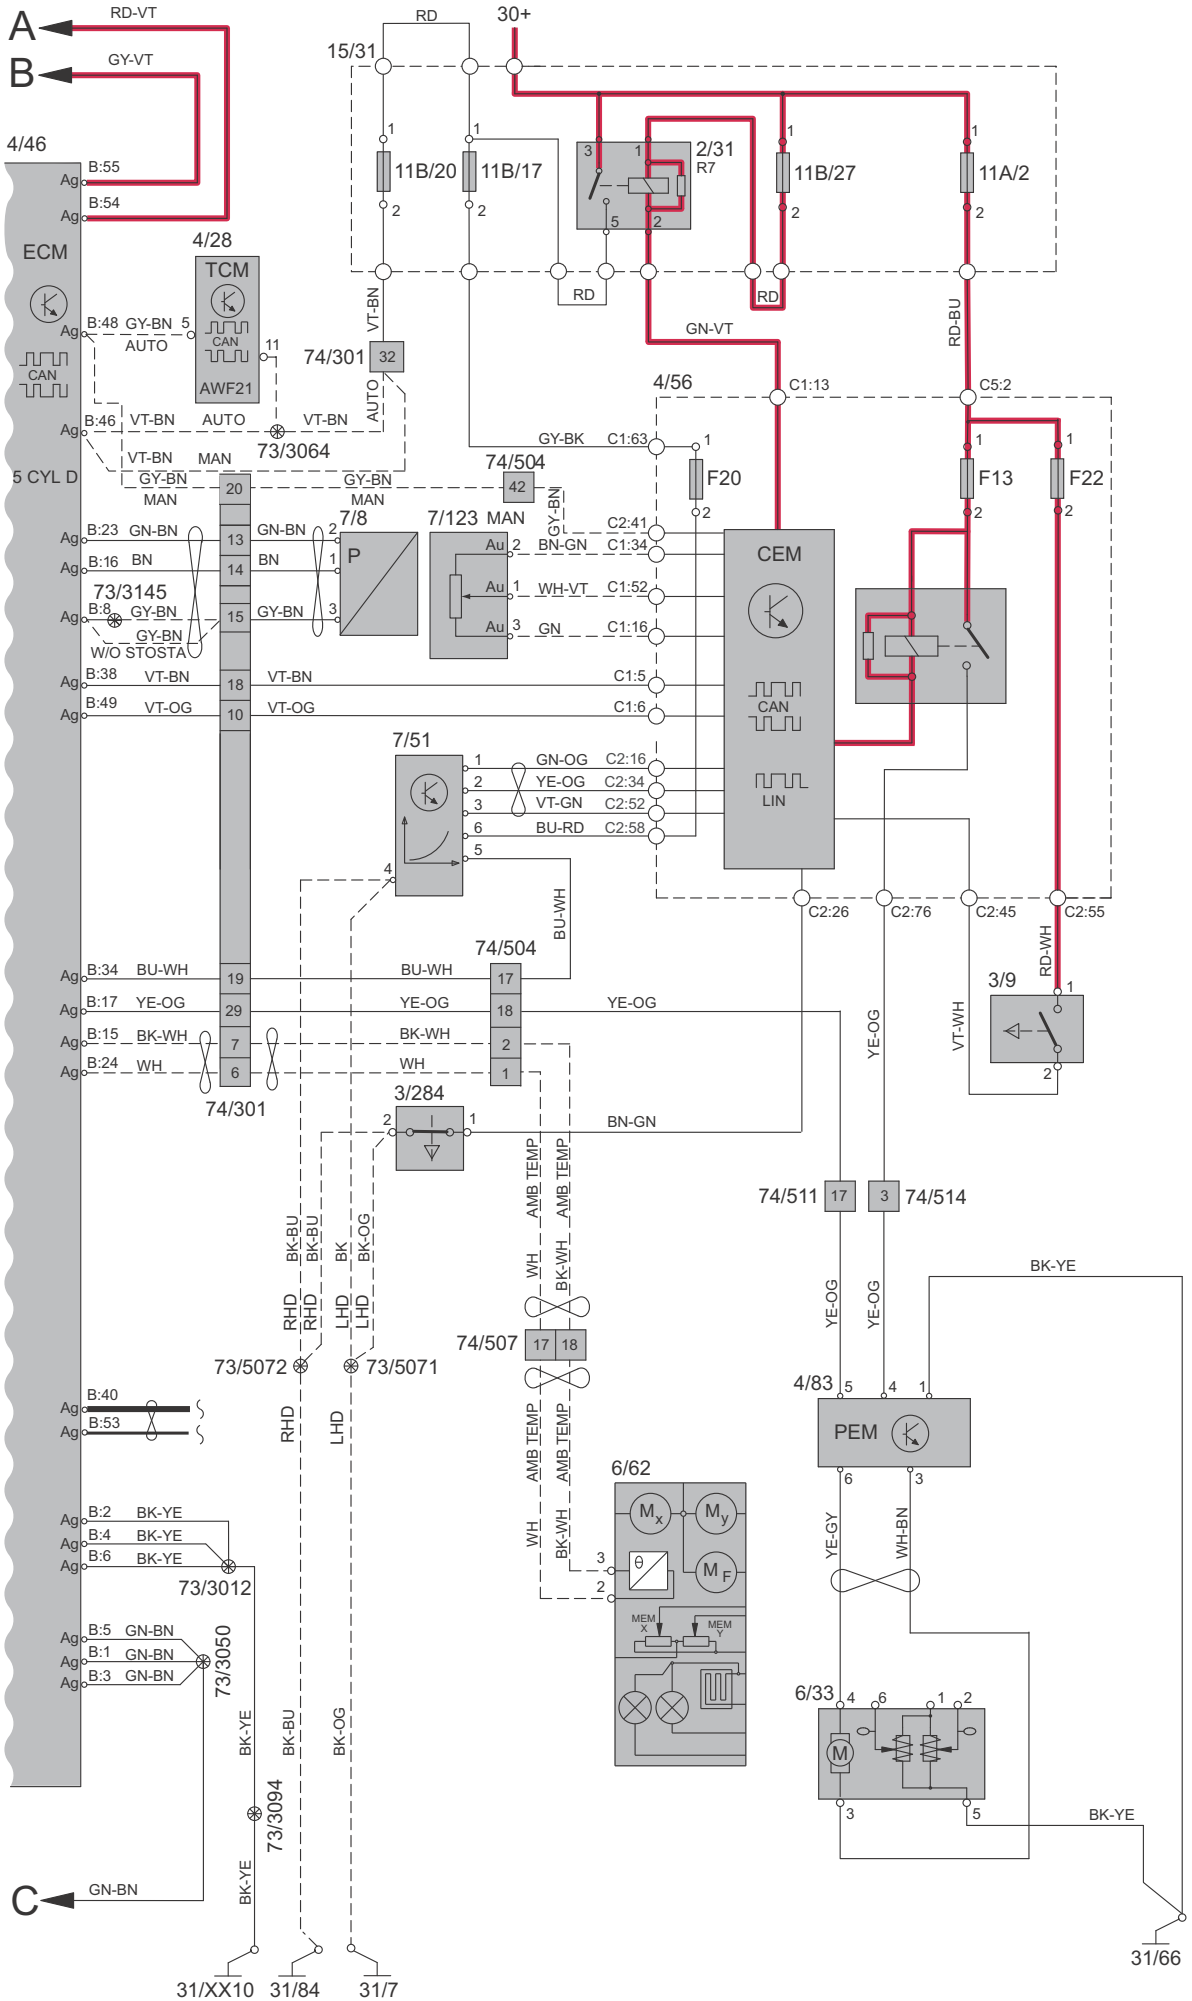
A
B
C
RD-VT
GY-VT
GN-BN
4/46
ECM
5 CYL D
4/28
TCM
AWF21
CAN
15/31
30+
RD
11B/20
11B/17
2/31
R7
11B/27
11A/2
VT-BN
AUTO
MAN
74/301
73/3064
74/504
GY-BK
C1:63
F20
F13
F22
4/56
C1:13
C5:2
RD-BU
GN-VT
CEM
LIN
7/8
P
7/123
7/51
73/3145
W/O STOSTA
GN-BN
BN
GY-BN
VT-OG
BU-WH
YE-OG
BK-WH
WH
3/284
BN-GN
C2:26
C2:76
C2:45
C2:55
3/9
RD-WH
VT-WH
74/511
74/514
BK-YE
4/83
PEM
YE-GY
WH-BN
6/62
6/33
73/5072
73/5071
74/507
RHD
LHD
BK-BU
BK-OG
BK
AMB TEMP
73/3012
73/3050
73/3094
31/XX10
31/84
31/7
31/66
C34W044

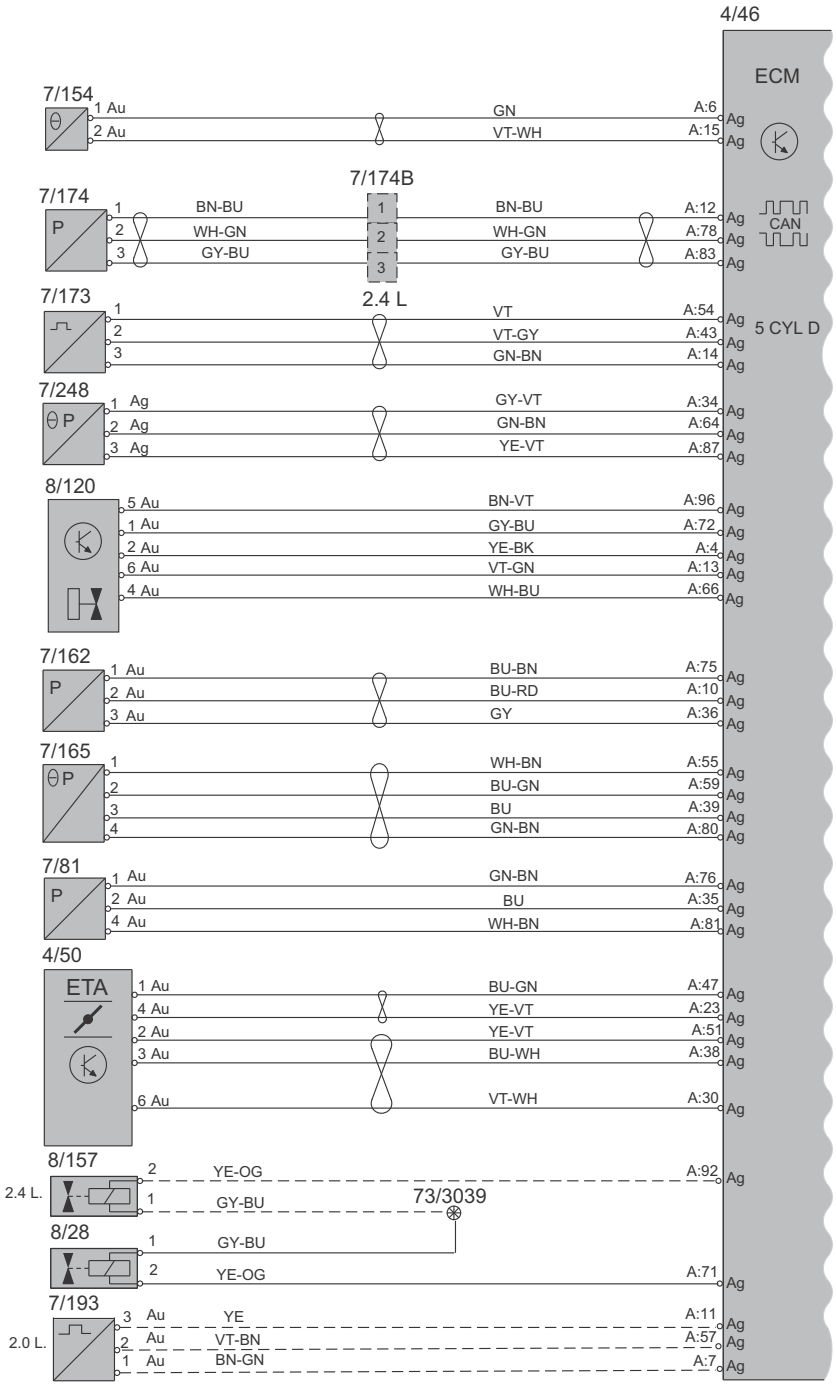
4/46
ECM
7/154
1 Au
2 Au
GN
VT-WH
A:6
A:15
Ag
7/174B
7/174
P
1
2
3
BN-BU
WH-GN
GY-BU
BN-BU
WH-GN
GY-BU
A:12
A:78
A:83
CAN
7/173
2.4 L
VT
VT-GY
GN-BN
A:54
A:43
A:14
5 CYL D
7/248
P
GY-VT
GN-BN
YE-VT
A:34
A:64
A:87
8/120
5 Au
1 Au
2 Au
6 Au
4 Au
BN-VT
GY-BU
YE-BK
VT-GN
WH-BU
A:96
A:72
A:4
A:13
A:66
7/162
P
BU-BN
BU-RD
GY
A:75
A:10
A:36
7/165
P
WH-BN
BU-GN
BU
GN-BN
A:55
A:59
A:39
A:80
7/81
P
GN-BN
BU
WH-BN
A:76
A:35
A:81
4/50
ETA
BU-GN
YE-VT
YE-VT
BU-WH
VT-WH
A:47
A:23
A:51
A:38
A:30
8/157
2.4 L.
YE-OG
GY-BU
73/3039
A:92
8/28
GY-BU
YE-OG
A:71
7/193
2.0 L.
YE
VT-BN
BN-GN
A:11
A:57
A:7

C33W051

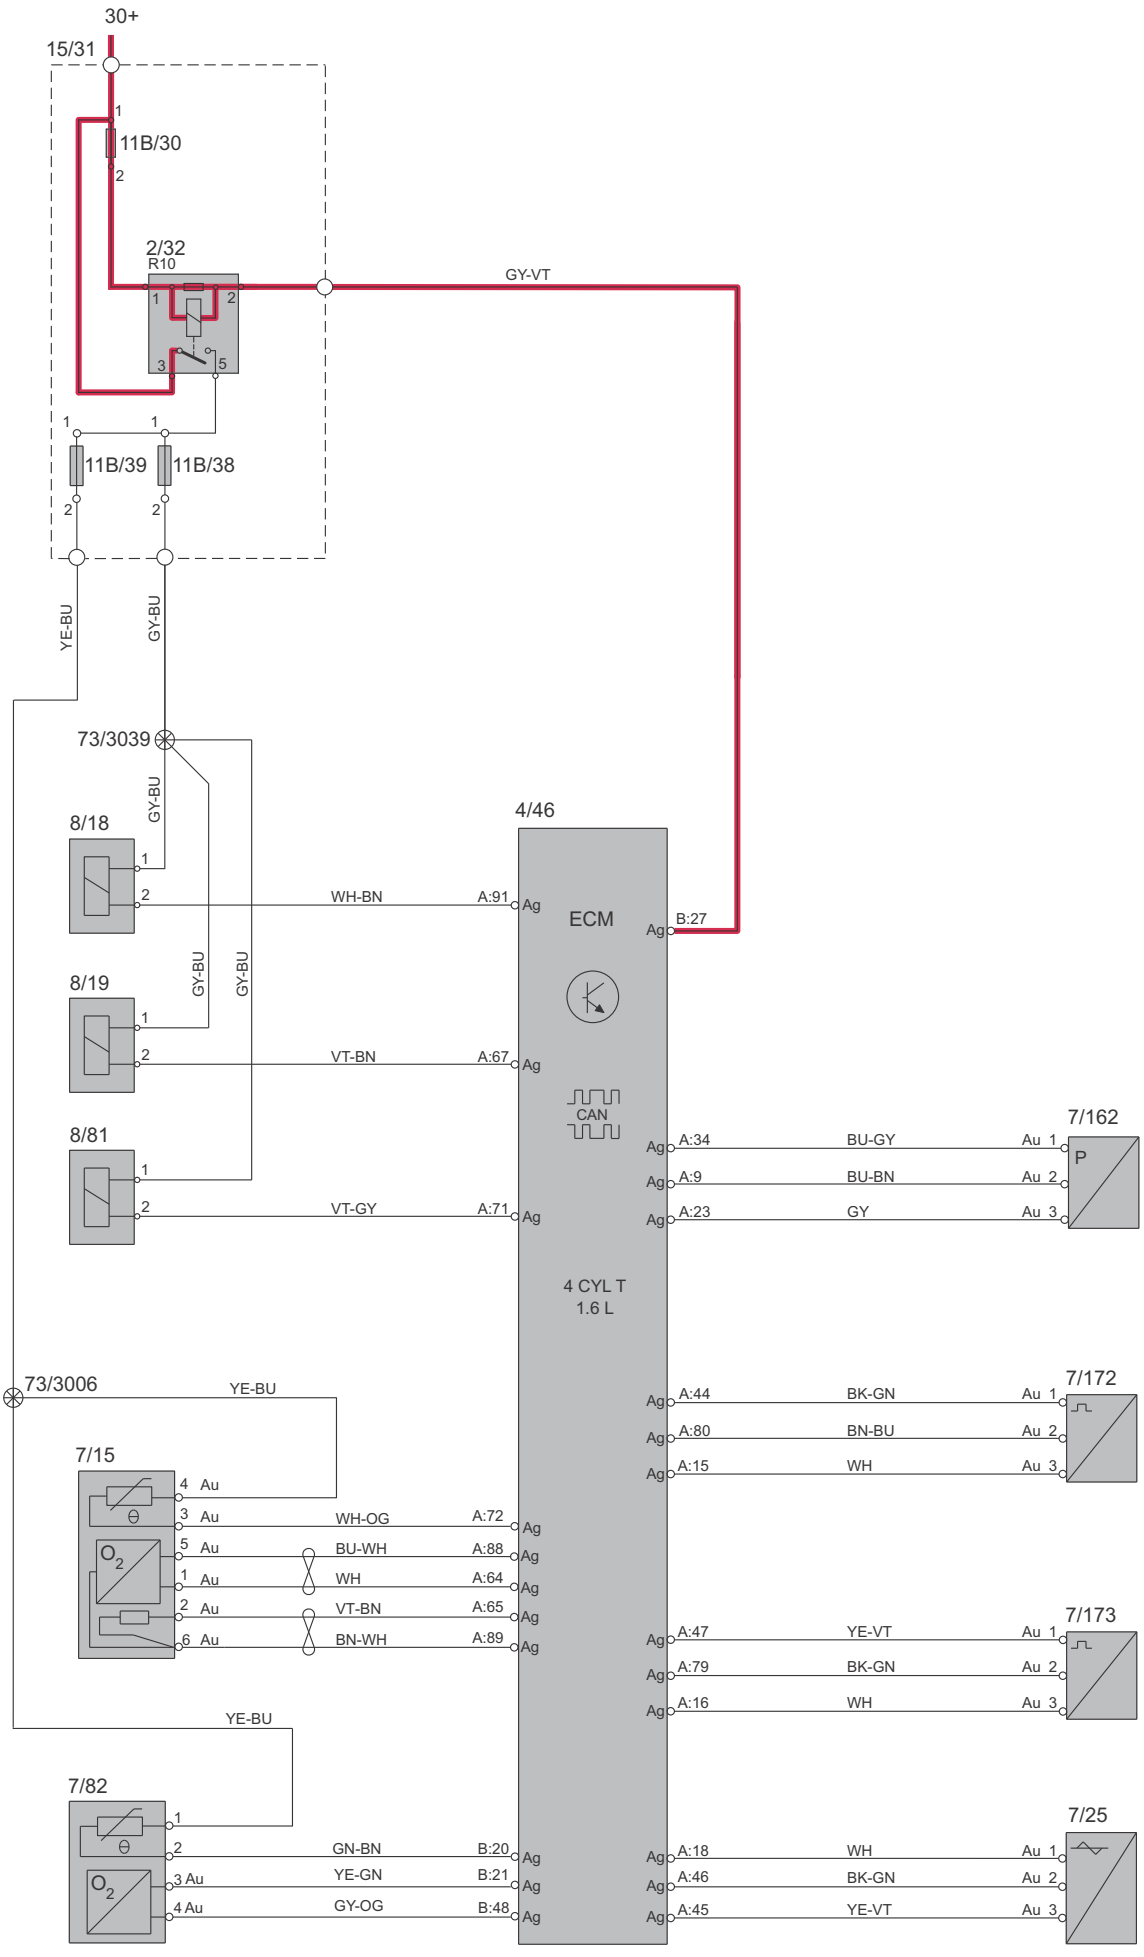
30+
15/31
11B/30
2/32
R10
GY-VT
11B/39
11B/38
YE-BU
GY-BU
73/3039
8/18
8/19
8/81
WH-BN
VT-BN
VT-GY
4/46
ECM
B:27
CAN
4 CYL T
1.6 L
7/162
BU-GY
BU-BN
GY
7/172
BK-GN
BN-BU
WH
7/173
YE-VT
BK-GN
WH
7/25
WH
BK-GN
YE-VT
73/3006
7/15
WH-OG
BU-WH
WH
VT-BN
BN-WH
7/82
GN-BN
YE-GN
GY-OG
C33W058

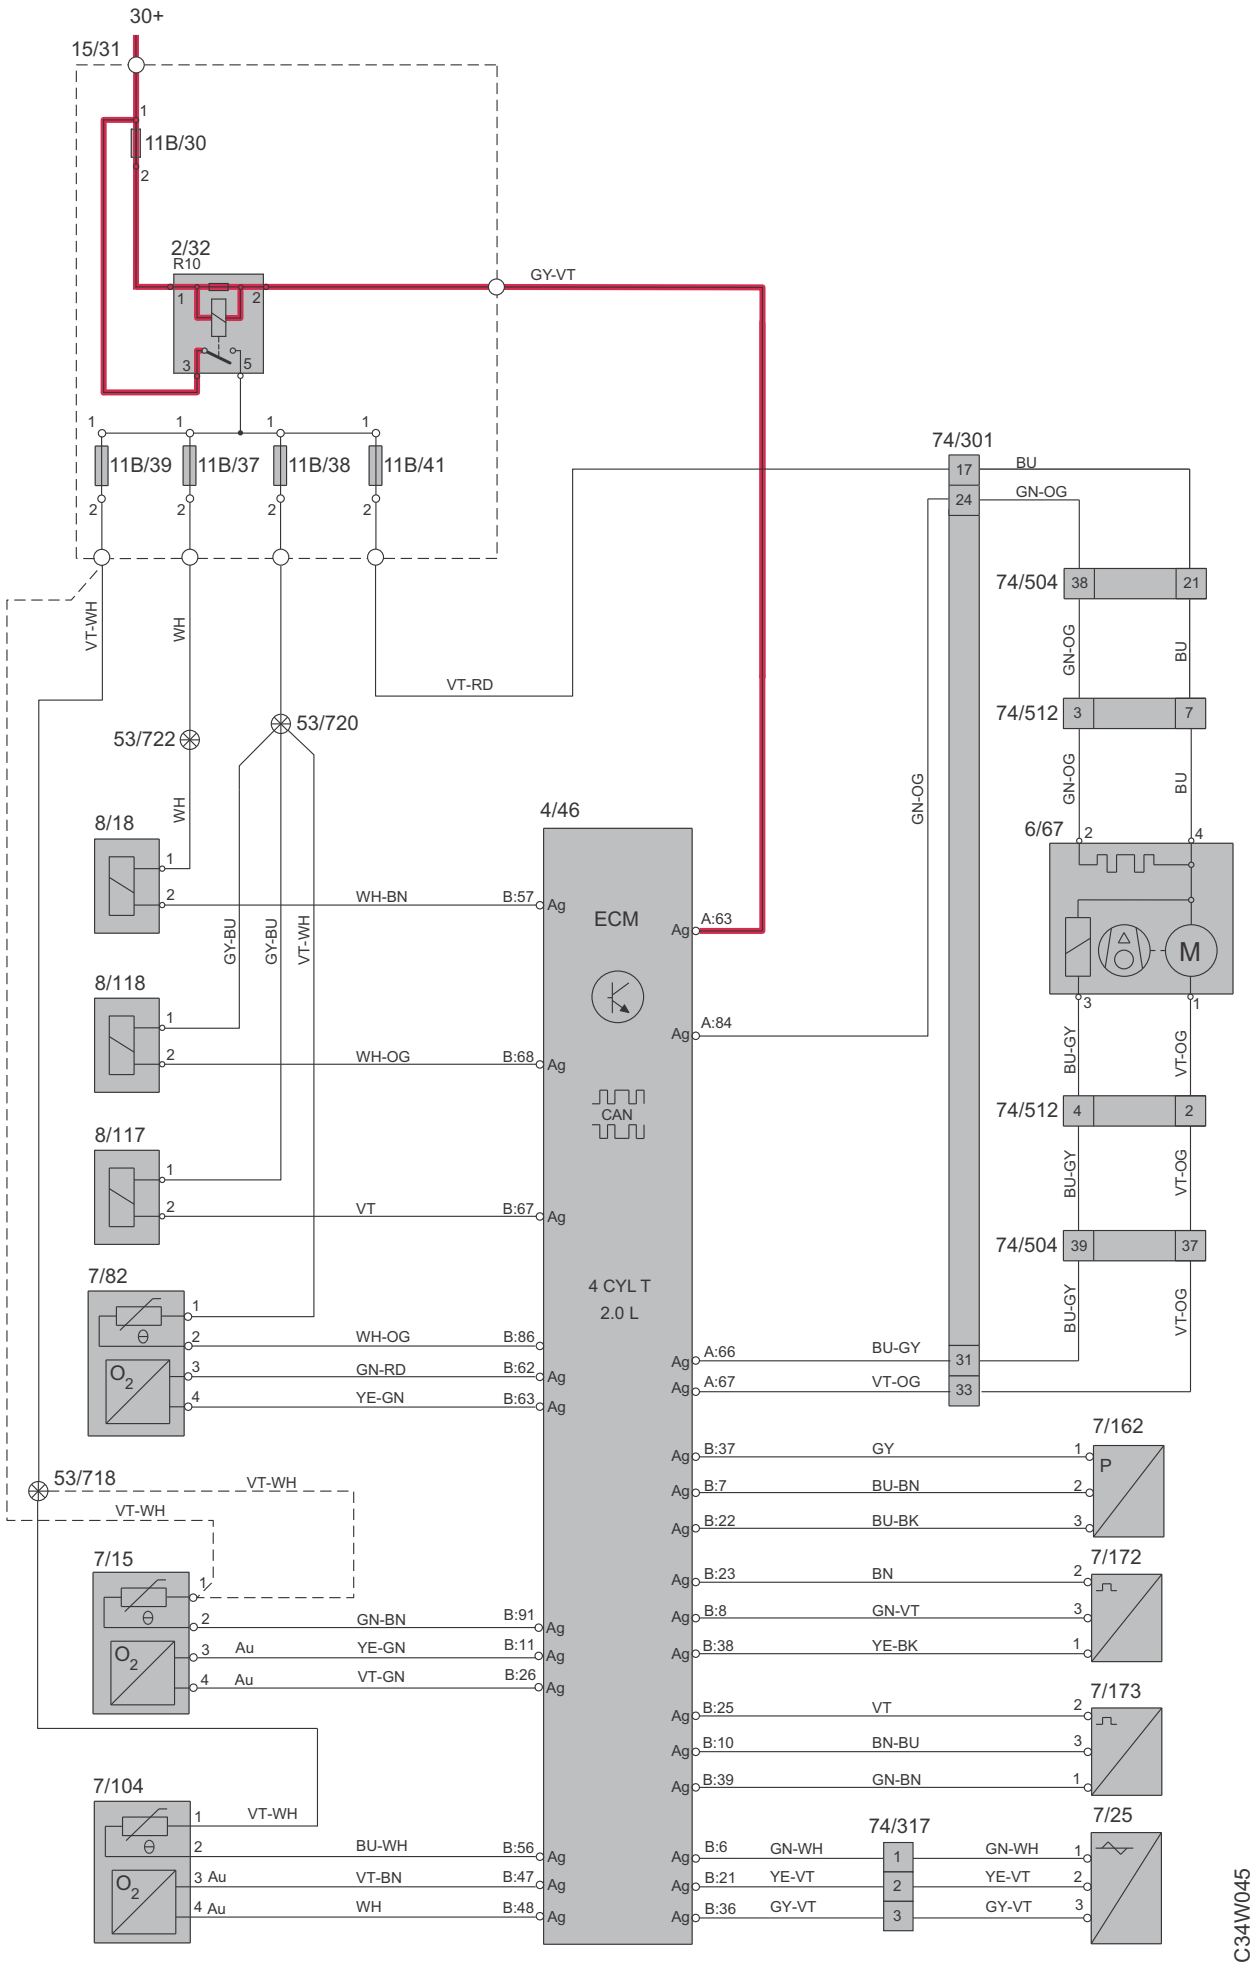
30+
15/31
11B/30
2/32
R10
GY-VT
11B/39
11B/37
11B/38
11B/41
74/301
BU
GN-OG
74/504
74/512
74/504
6/67
VT-WH
WH
VT-RD
53/722
53/720
4/46
ECM
8/18
8/118
8/117
7/82
WH-BN
WH-OG
VT
GY-BU
VT-WH
CAN
4 CYL T
2.0 L
A:63
A:84
A:66
A:67
BU-GY
VT-OG
GN-OG
BU
53/718
7/15
GN-BN
YE-GN
VT-GN
7/104
BU-WH
VT-BN
WH
7/162
7/172
7/173
7/25
74/317
GY
BU-BN
BU-BK
BN
GN-VT
YE-BK
VT
BN-BU
GN-BN
GN-WH
YE-VT
GY-VT
C34W045

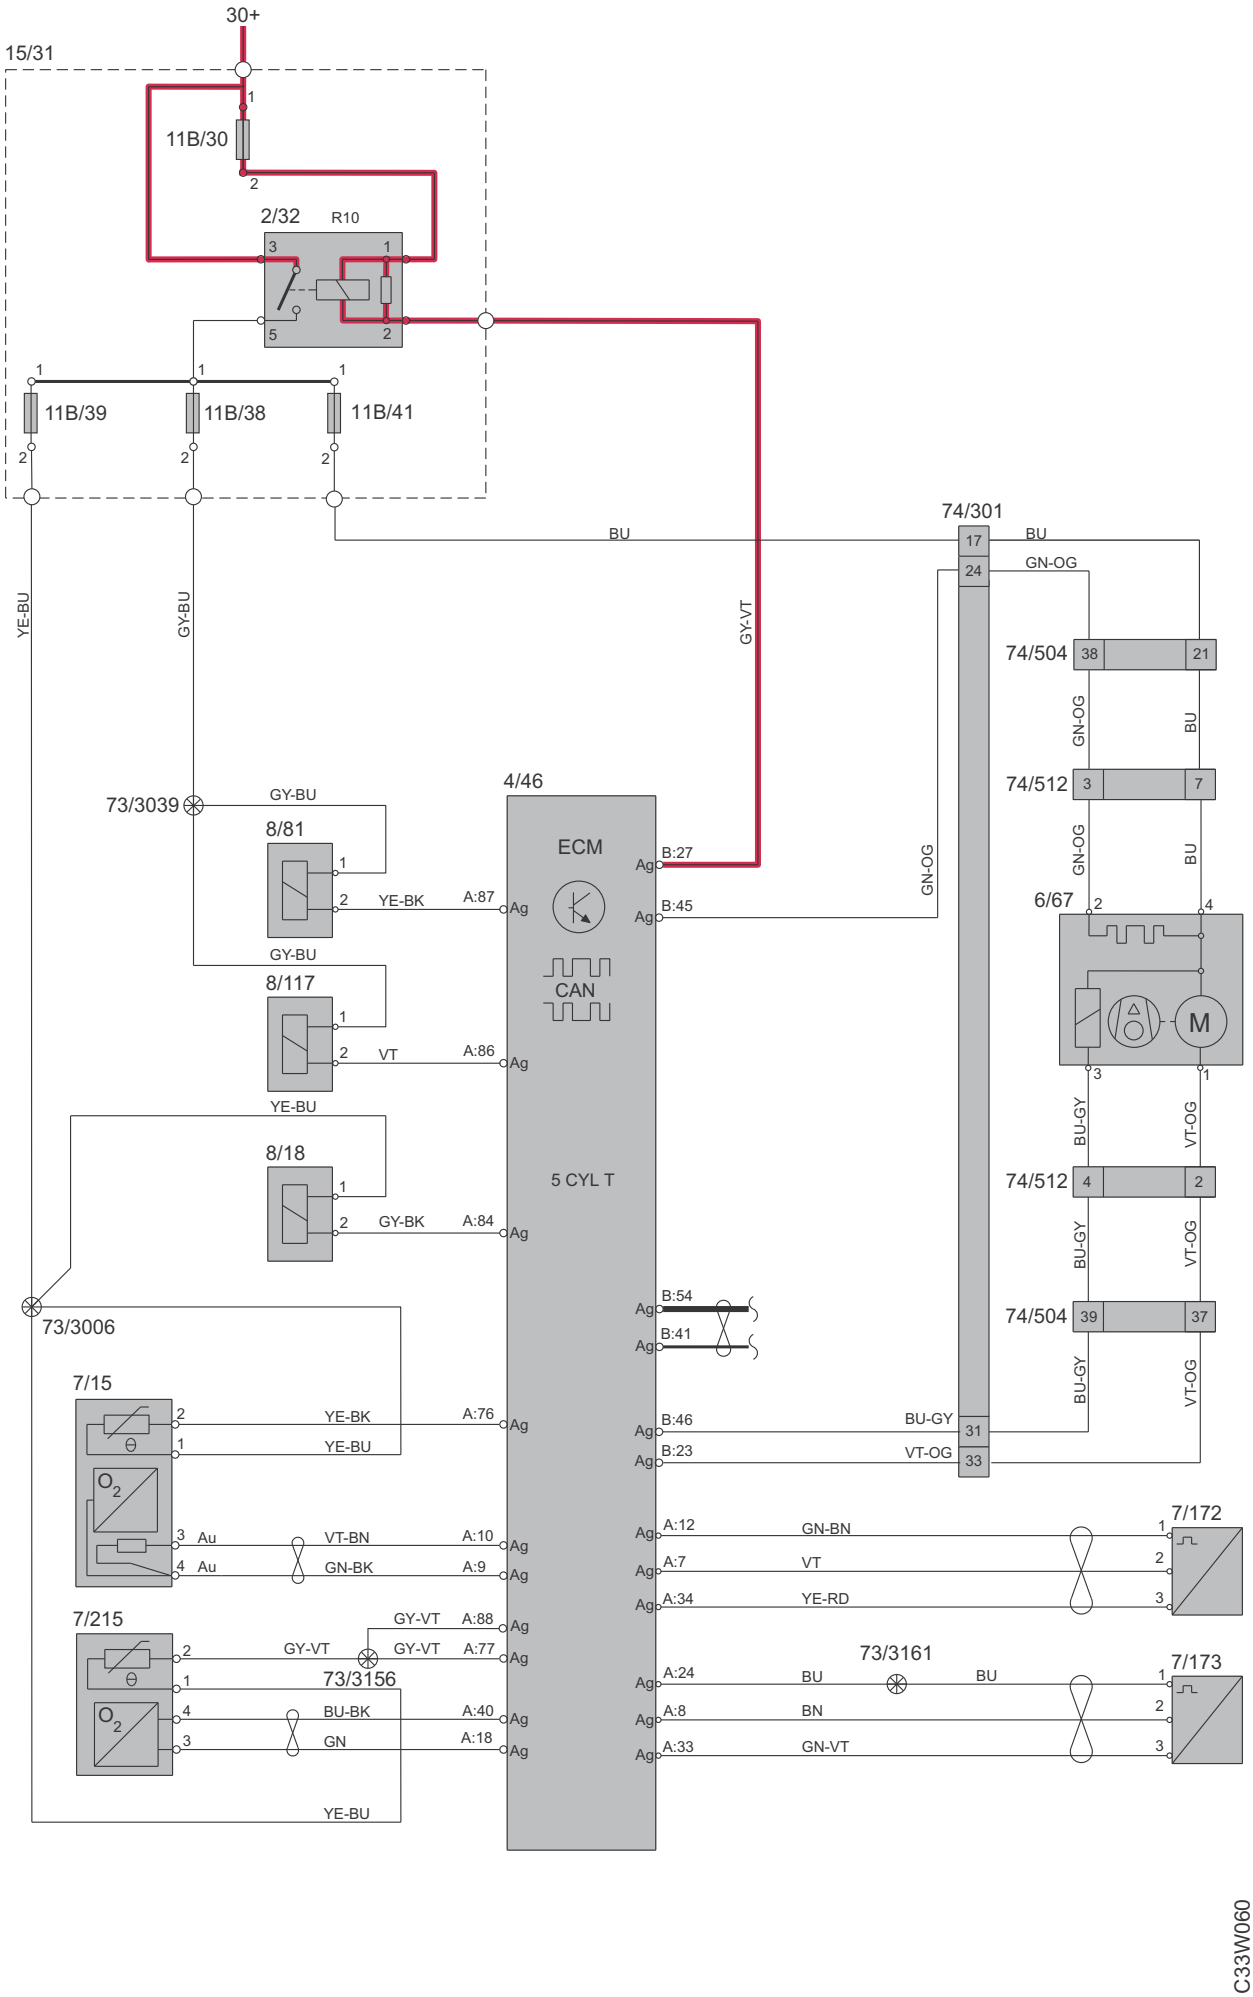
30+
15/31
11B/30
2/32
R10
11B/39
11B/38
11B/41
74/301
BU
GN-OG
GY-VT
YE-BU
GY-BU
74/504
74/512
6/67
M
BU-GY
VT-OG
4/46
ECM
CAN
5 CYL T
73/3039
8/81
YE-BK
A:87
8/117
VT
A:86
8/18
GY-BK
A:84
73/3006
7/15
YE-BK
A:76
Au
VT-BN
A:10
GN-BK
A:9
7/215
GY-VT
A:88
A:77
73/3156
BU-BK
A:40
GN
A:18
B:27
B:45
B:54
B:41
B:46
B:23
BU-GY
VT-OG
7/172
A:12
GN-BN
A:7
VT
A:34
YE-RD
73/3161
7/173
A:24
A:8
BN
A:33
GN-VT
C33W060

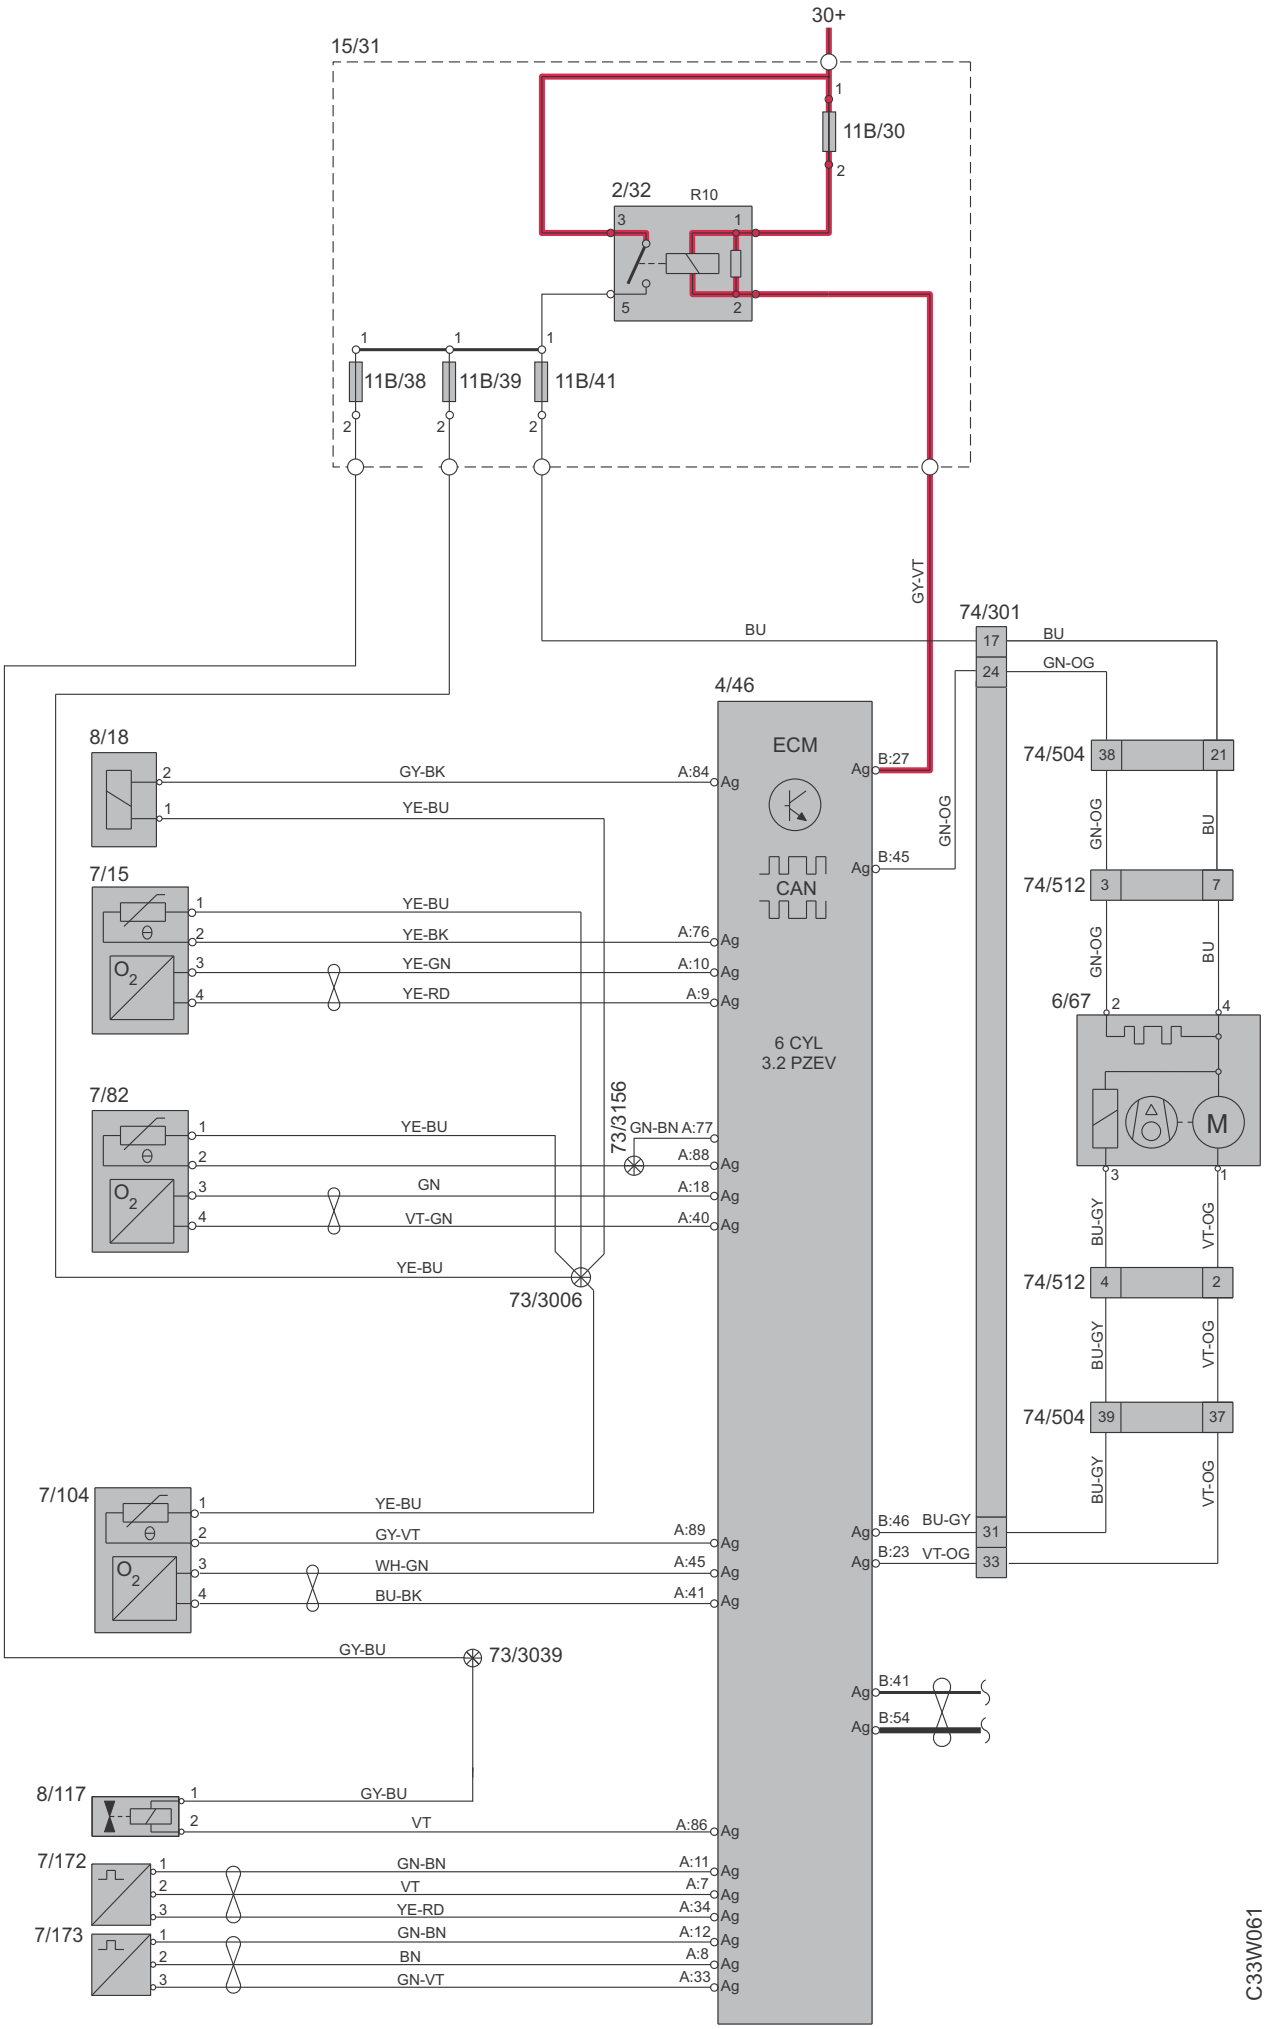
30+
15/31
11B/30
2/32
R10
11B/38
11B/39
11B/41
GY-VT
74/301
BU
GN-OG
4/46
ECM
CAN
6 CYL
3.2 PZEV
8/18
GY-BK
YE-BU
7/15
YE-BU
YE-BK
YE-GN
YE-RD
7/82
GN
VT-GN
73/3156
GN-BN
73/3006
7/104
GY-VT
WH-GN
BU-BK
73/3039
GY-BU
8/117
VT
7/172
7/173
GN-BN
BN
GN-VT
B:27
B:45
B:46
B:23
B:41
B:54
74/504
74/512
6/67
BU-GY
VT-OG
C33W061

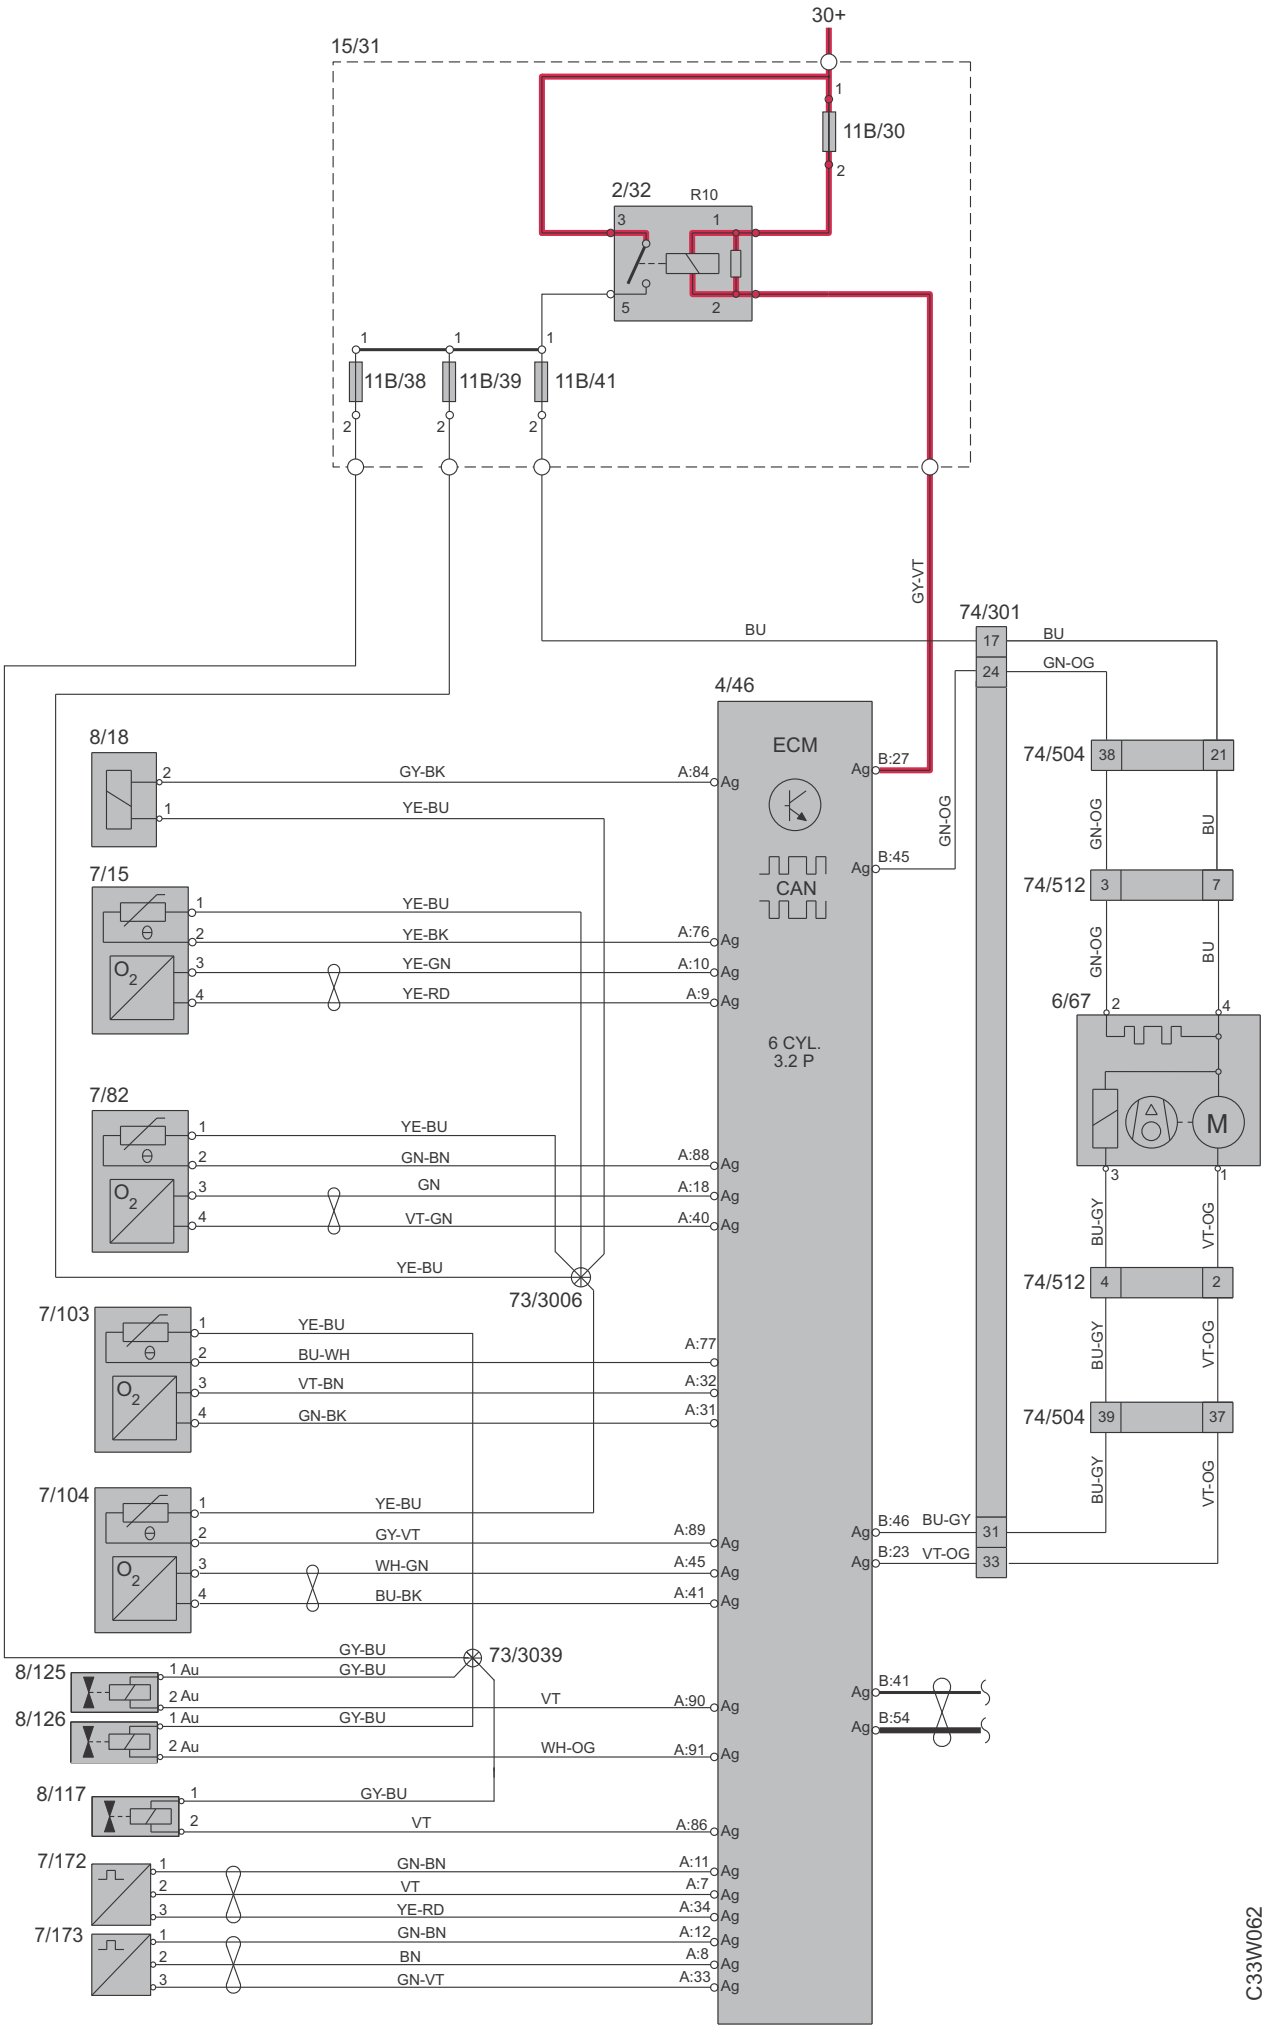
30+
15/31
11B/30
2/32
R10
11B/38
11B/39
11B/41
GY-VT
BU
74/301
GN-OG
4/46
ECM
CAN
6 CYL.
3.2 P
8/18
GY-BK
YE-BU
7/15
YE-BK
YE-GN
YE-RD
7/82
GN-BN
GN
VT-GN
73/3006
7/103
BU-WH
VT-BN
GN-BK
7/104
GY-VT
WH-GN
BU-BK
73/3039
8/125
8/126
8/117
VT
WH-OG
7/172
7/173
BN
GN-VT
74/504
74/512
6/67
BU-GY
VT-OG
B:27
B:45
B:46
B:23
B:41
B:54
A:84
A:76
A:10
A:9
A:88
A:18
A:40
A:77
A:32
A:31
A:89
A:45
A:41
A:90
A:91
A:86
A:11
A:7
A:34
A:12
A:8
A:33
C33W062

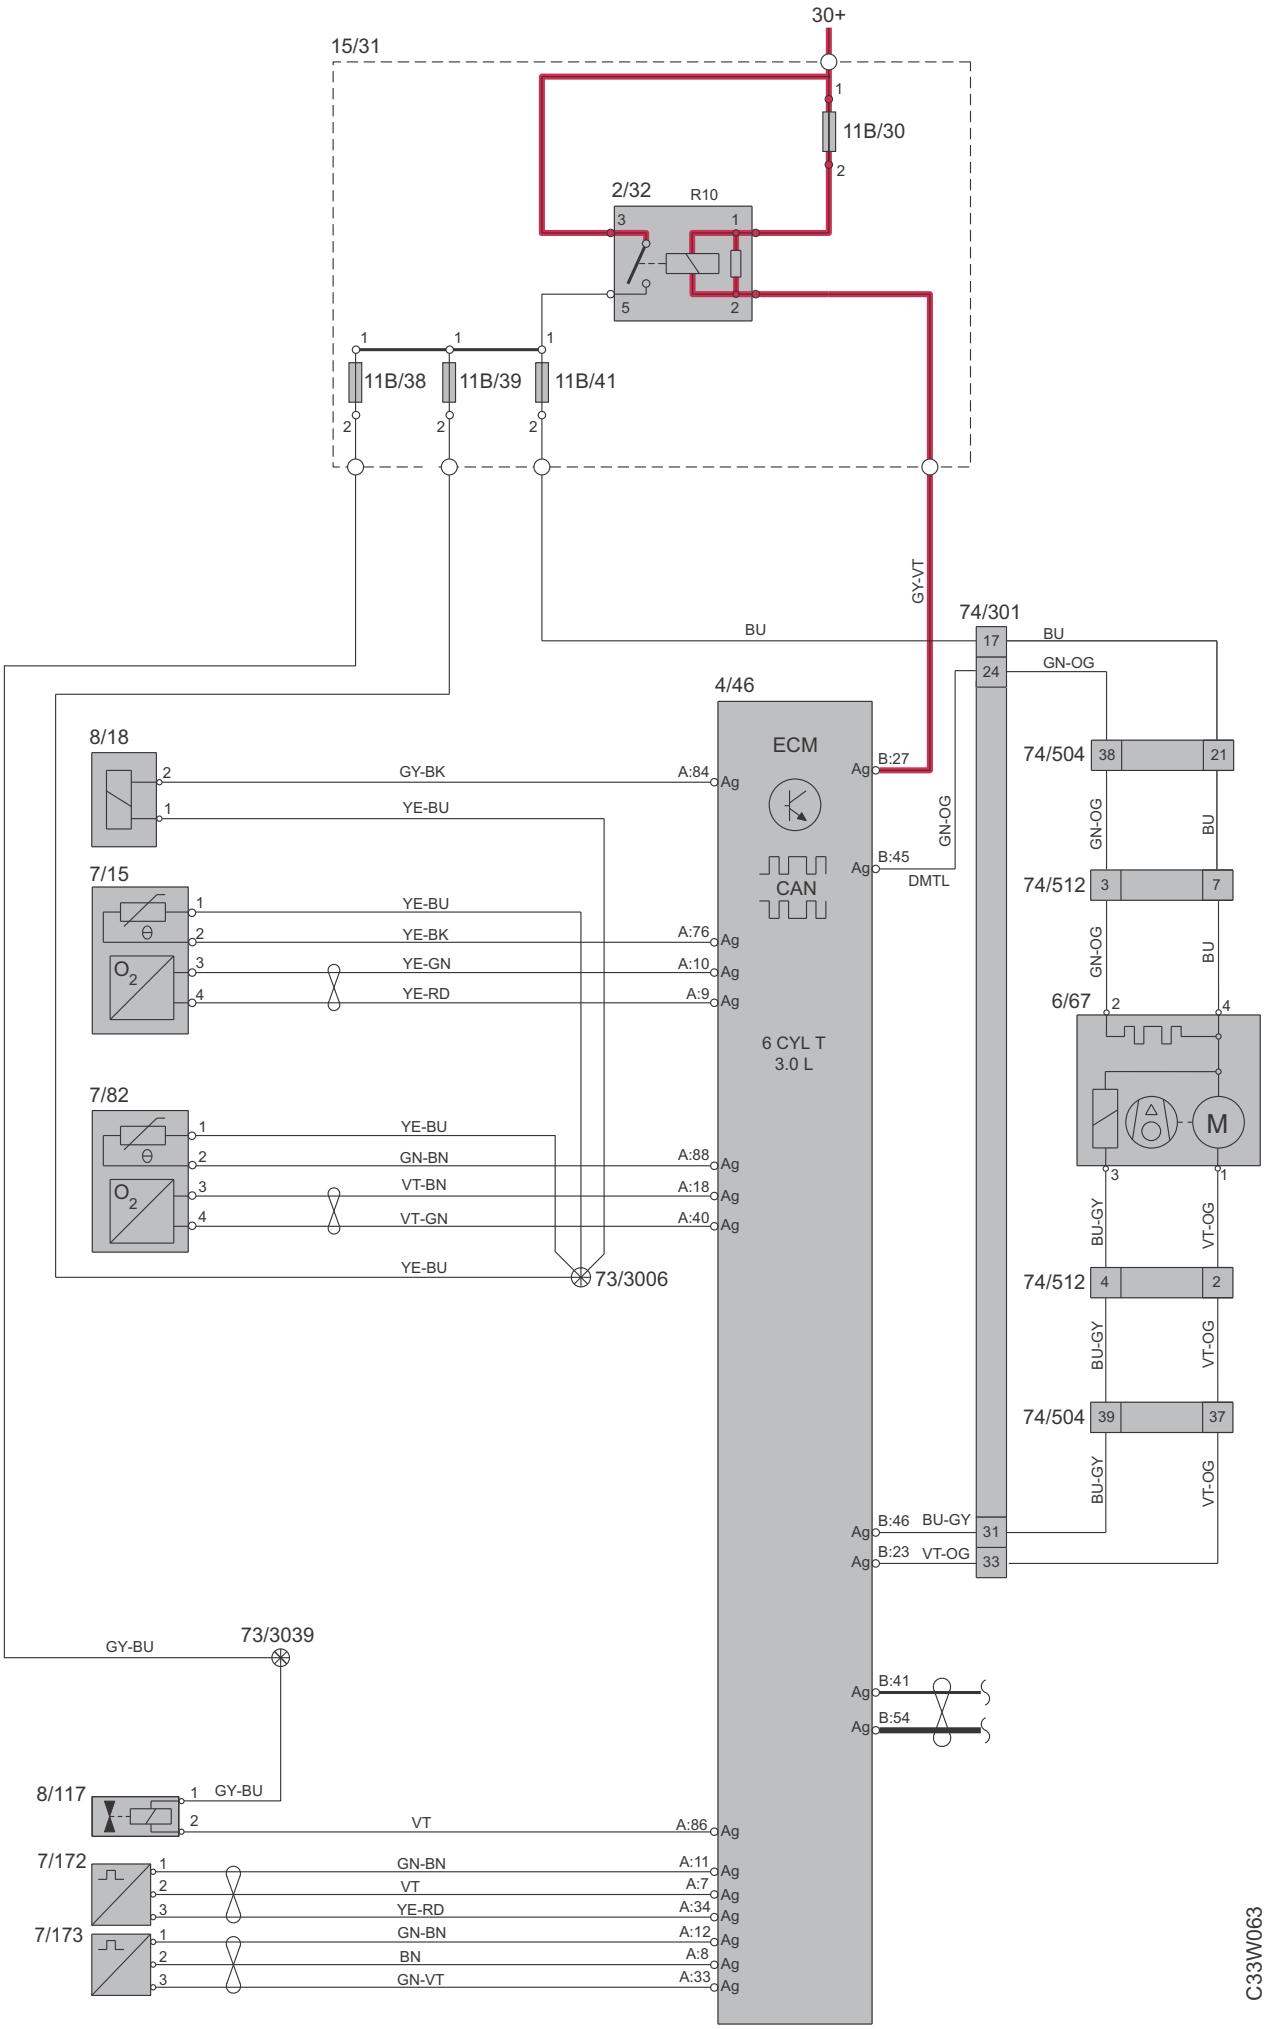
30+
15/31
11B/30
2/32
R10
11B/38
11B/39
11B/41
GY-VT
BU
74/301
17
24
BU
GN-OG
4/46
ECM
CAN
6 CYL T
3.0 L
8/18
GY-BK
YE-BU
A:84
B:27
B:45
DMTL
GN-OG
7/15
YE-BU
YE-BK
YE-GN
YE-RD
A:76
A:10
A:9
7/82
GN-BN
VT-BN
VT-GN
A:88
A:18
A:40
73/3006
74/504
74/512
6/67
M
BU-GY
VT-OG
B:46
B:23
31
33
73/3039
GY-BU
8/117
VT
A:86
7/172
7/173
GN-BN
BN
GN-VT
A:11
A:7
A:34
A:12
A:8
A:33
B:41
B:54
C33W063

Group 32 Alternator and voltage regulator
Power supply 4-Cyl. without Start/Stop

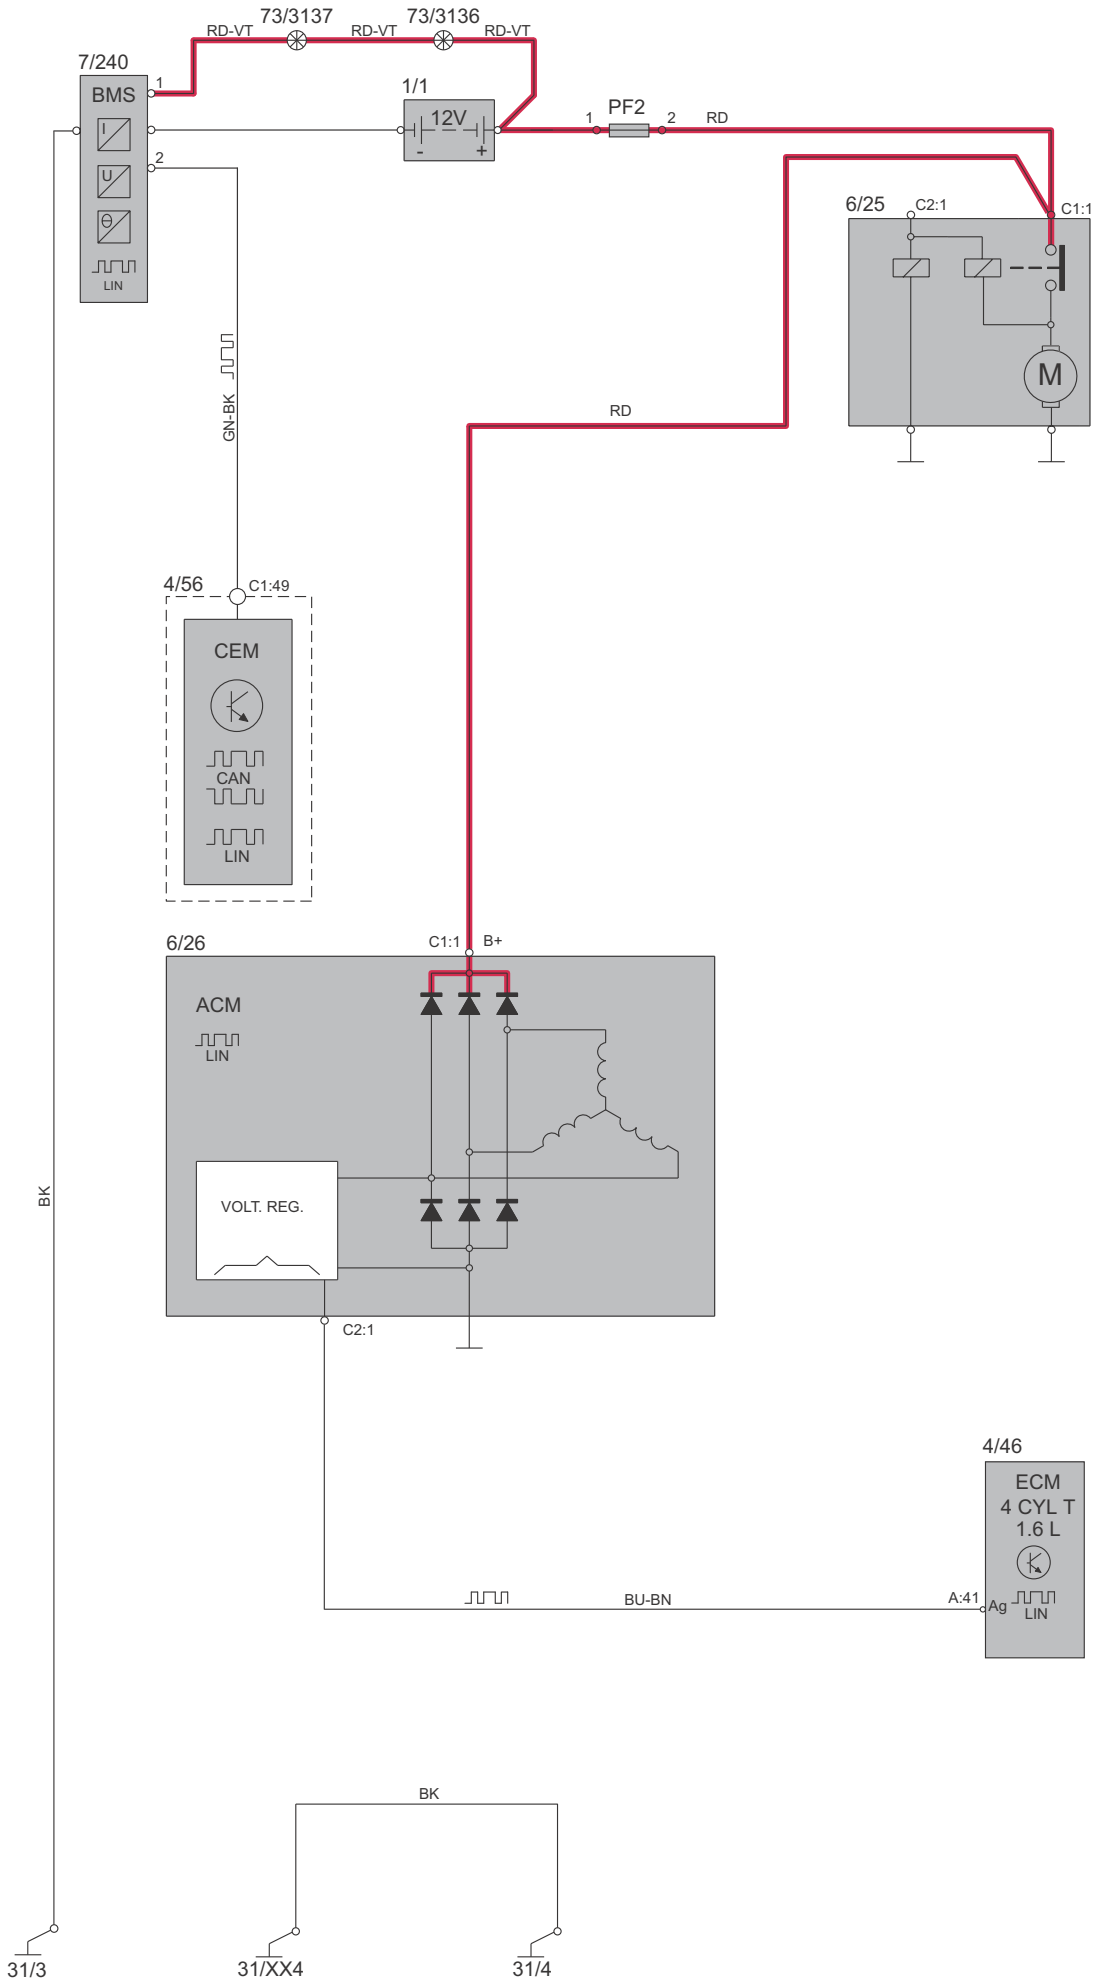

Group 32 Alternator and voltage regulator
Power supply 4-Cyl. with Start/Stop

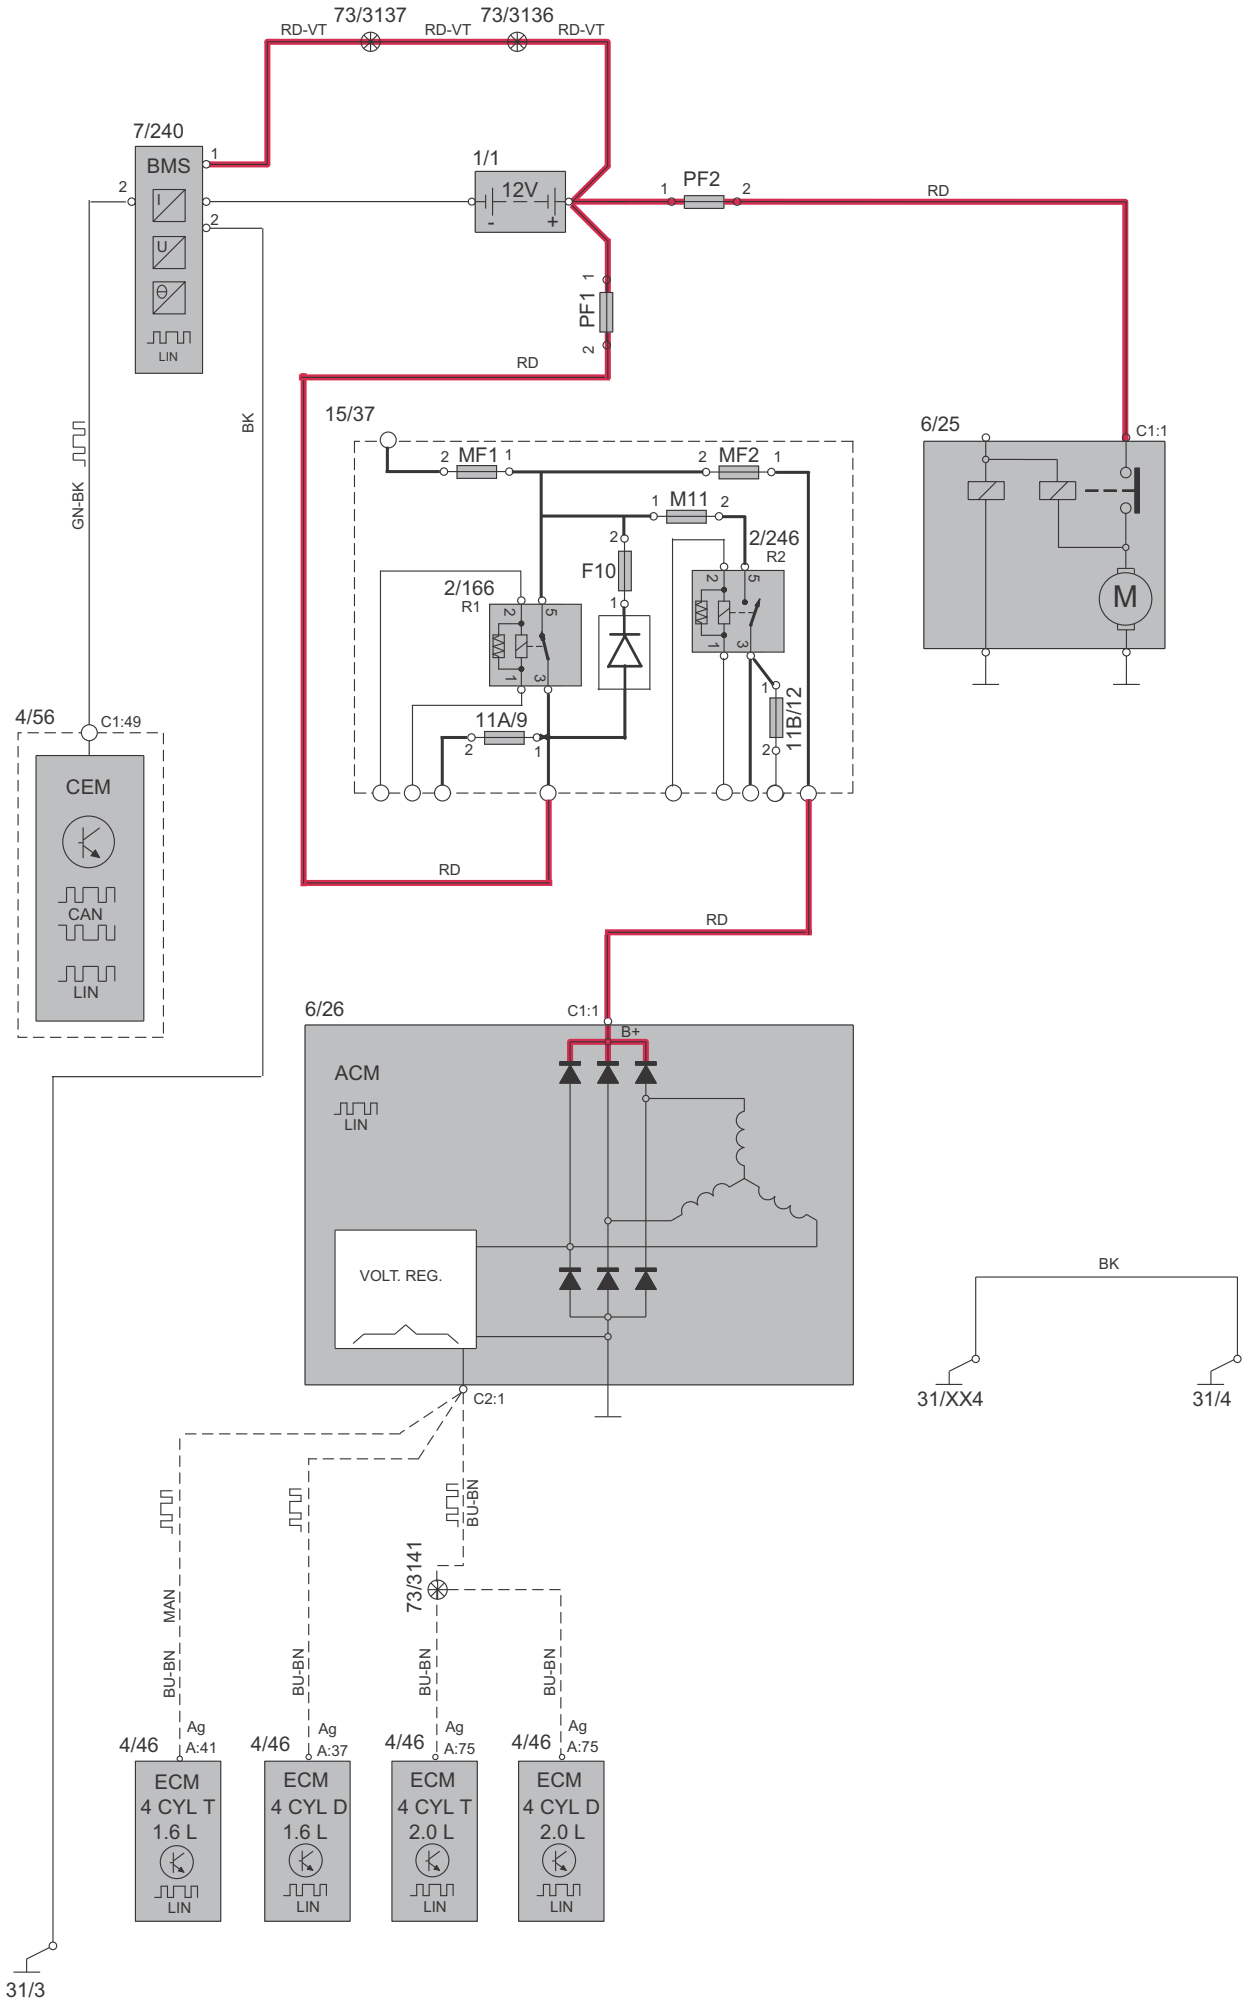

Group 32 Alternator and voltage regulator
Power supply 5-Cyl. without Start/Stop

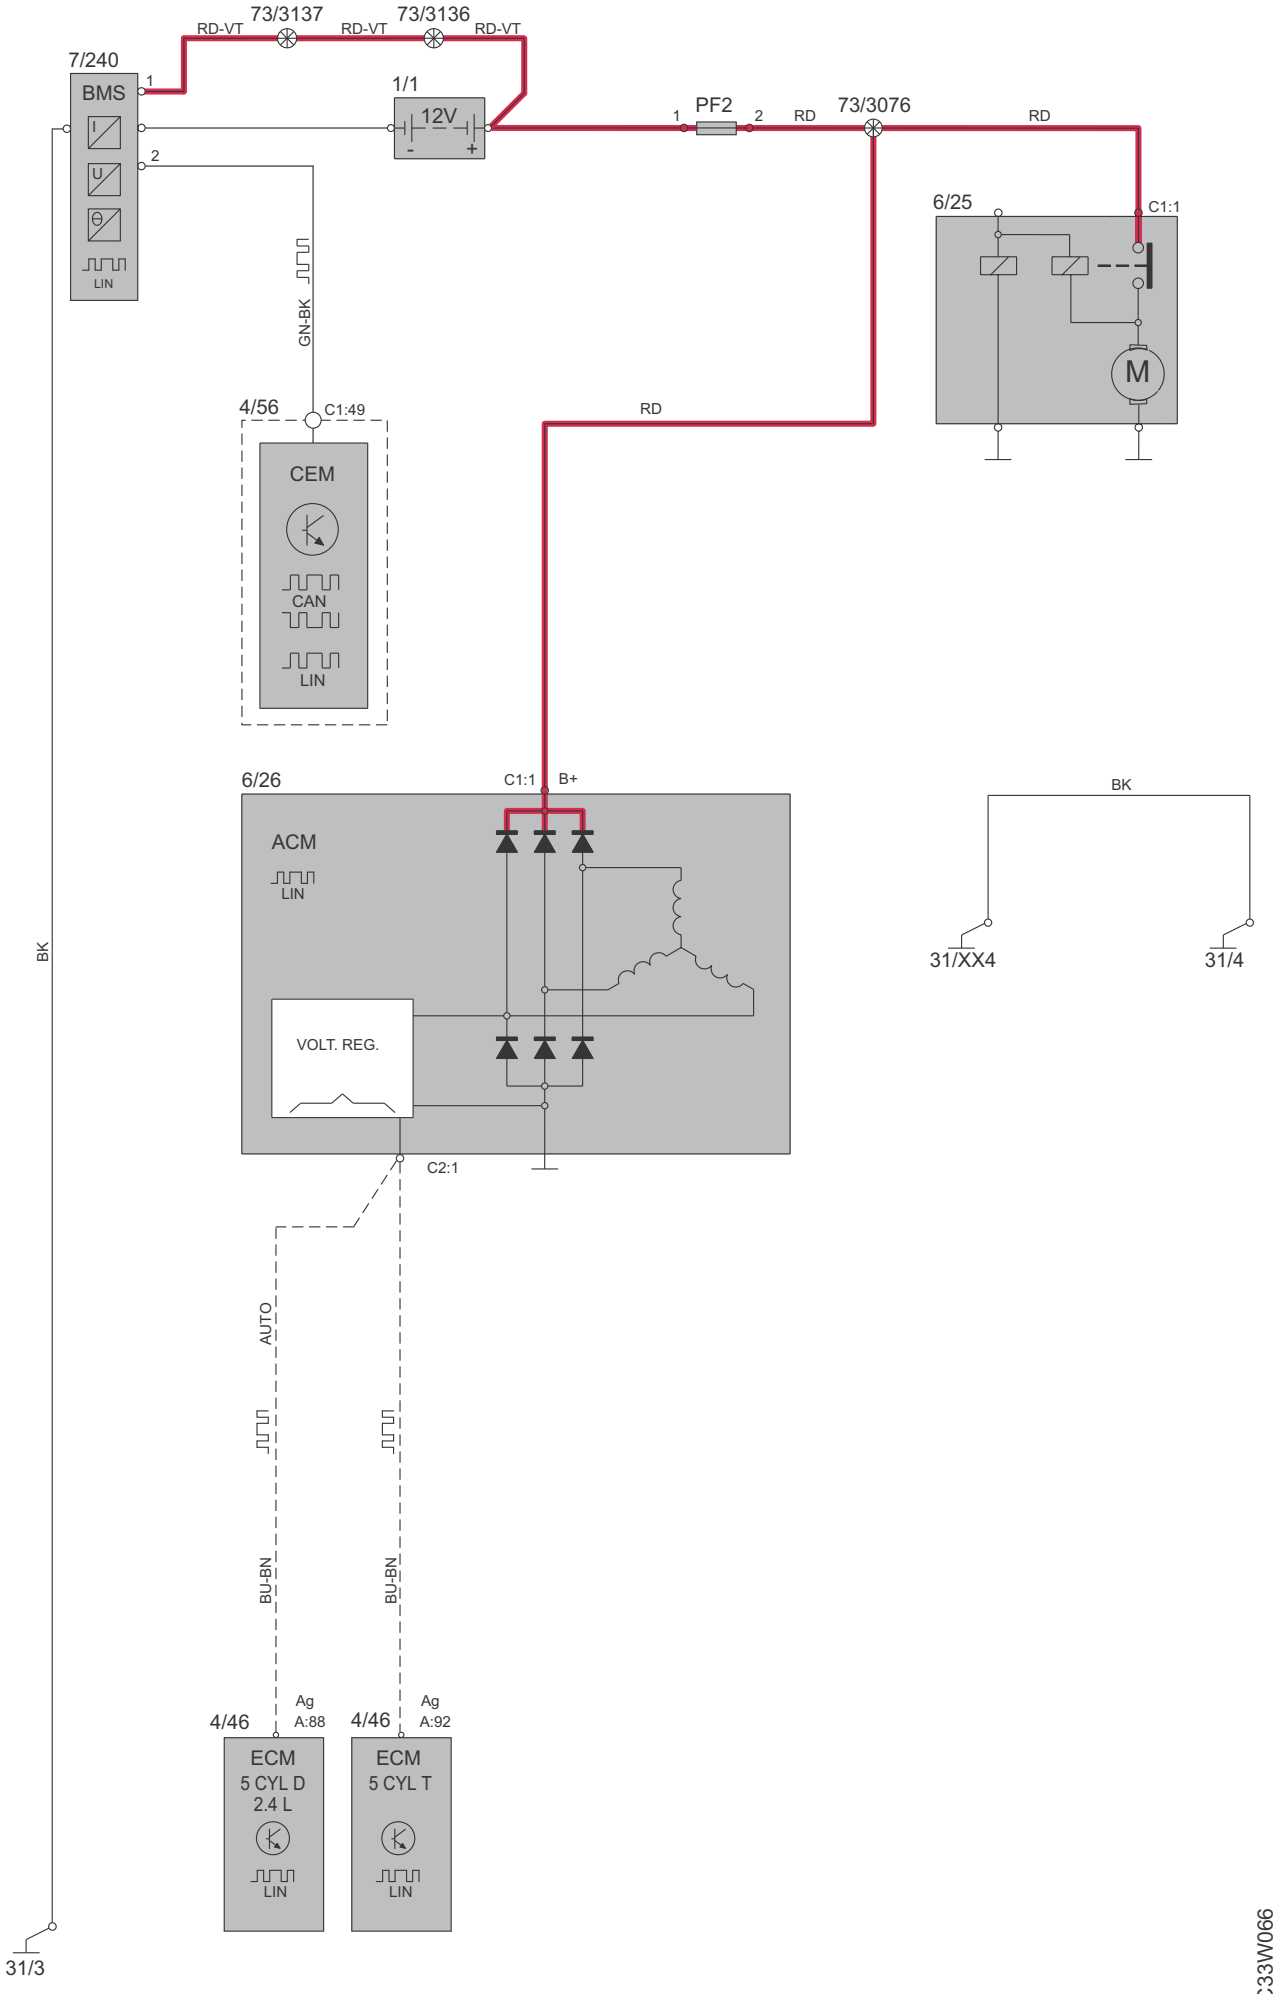

Group 32 Alternator and voltage regulator
Power supply, 5-Cyl. with Start/Stop

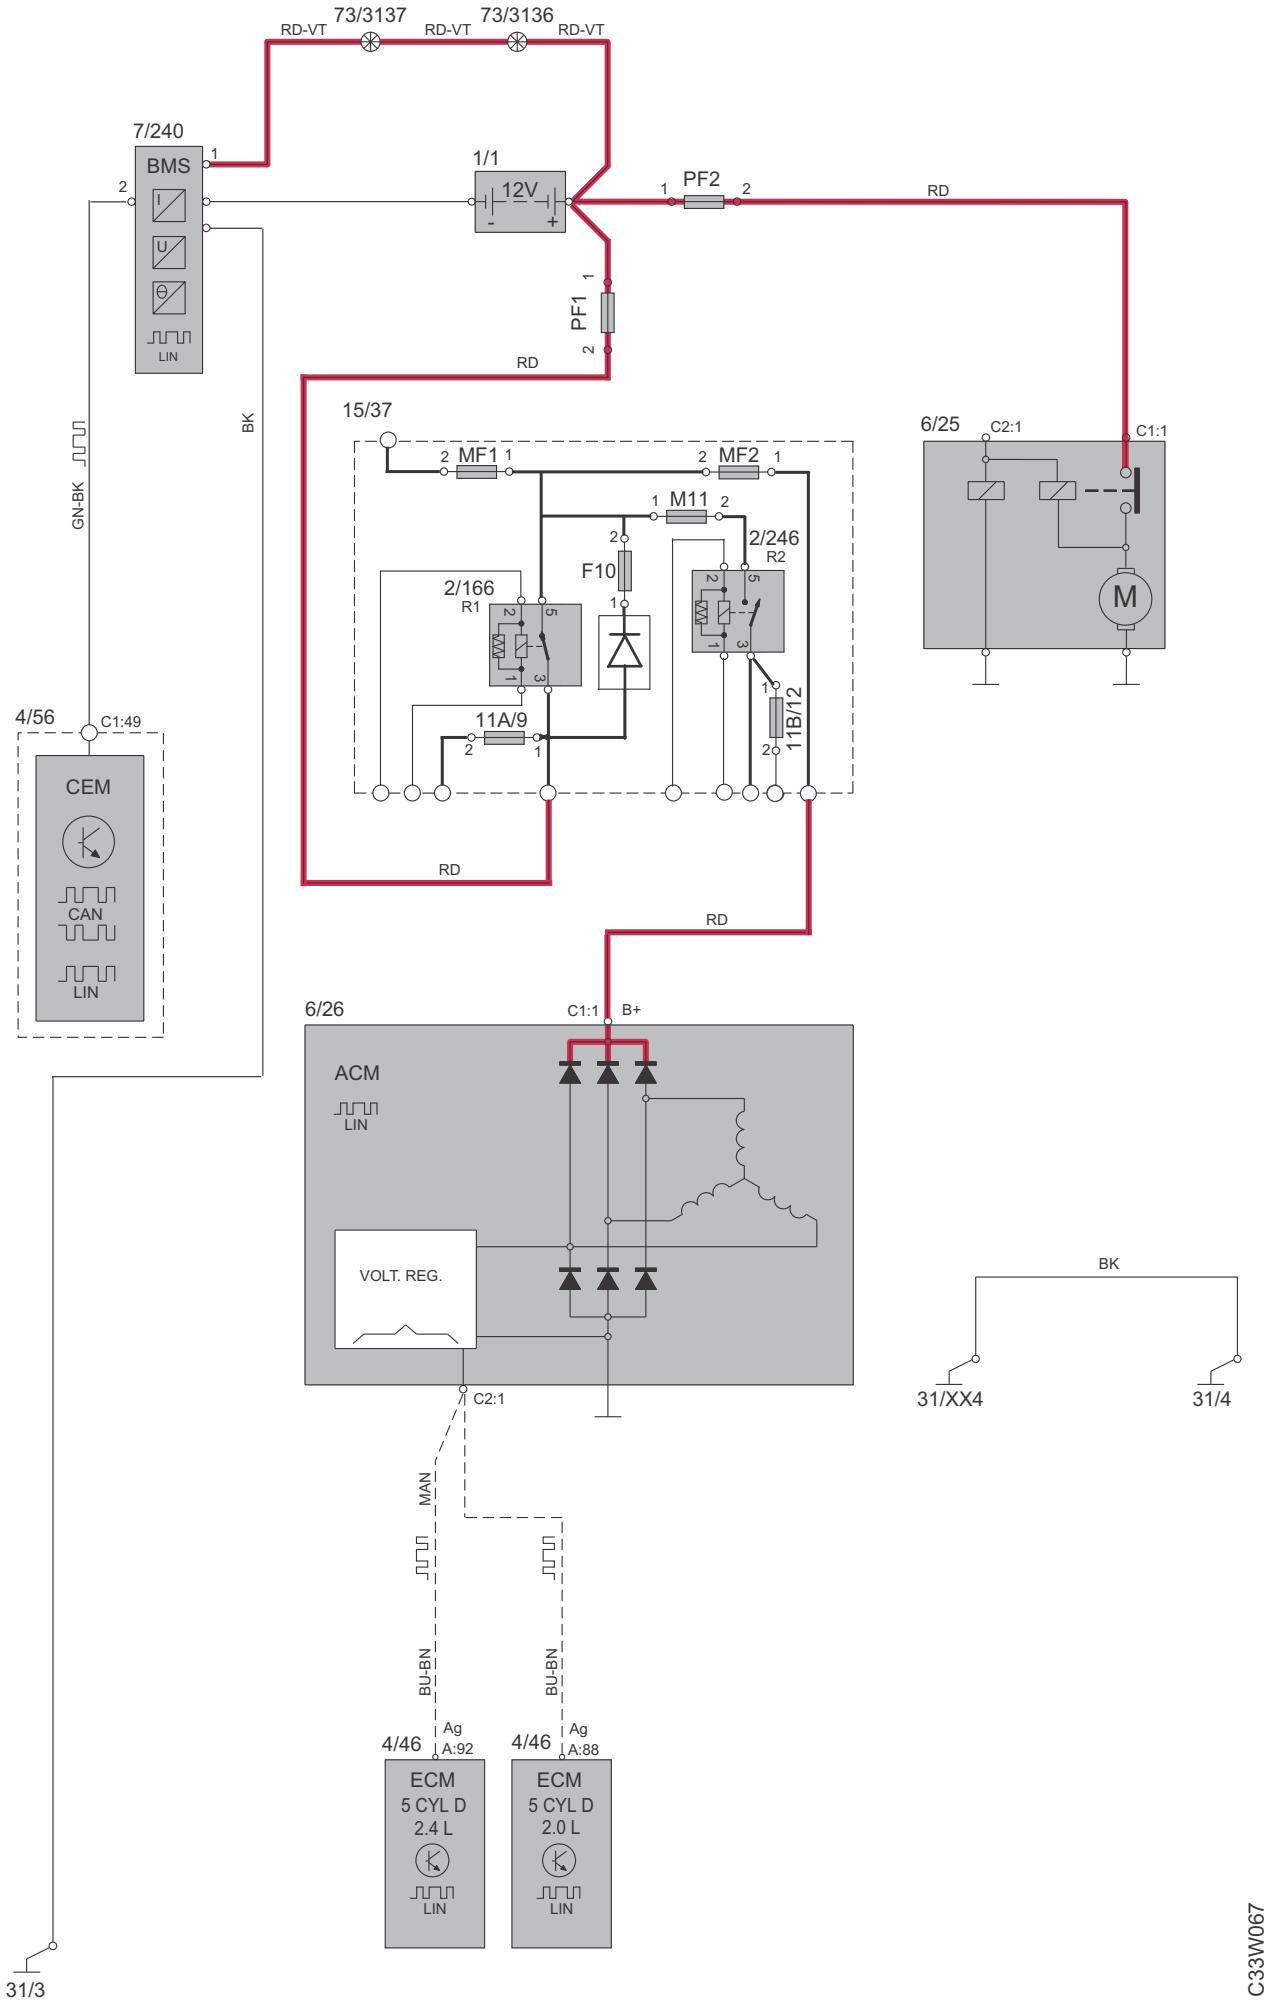

Group 32 Alternator and voltage regulator
Power supply 6-Cyl.

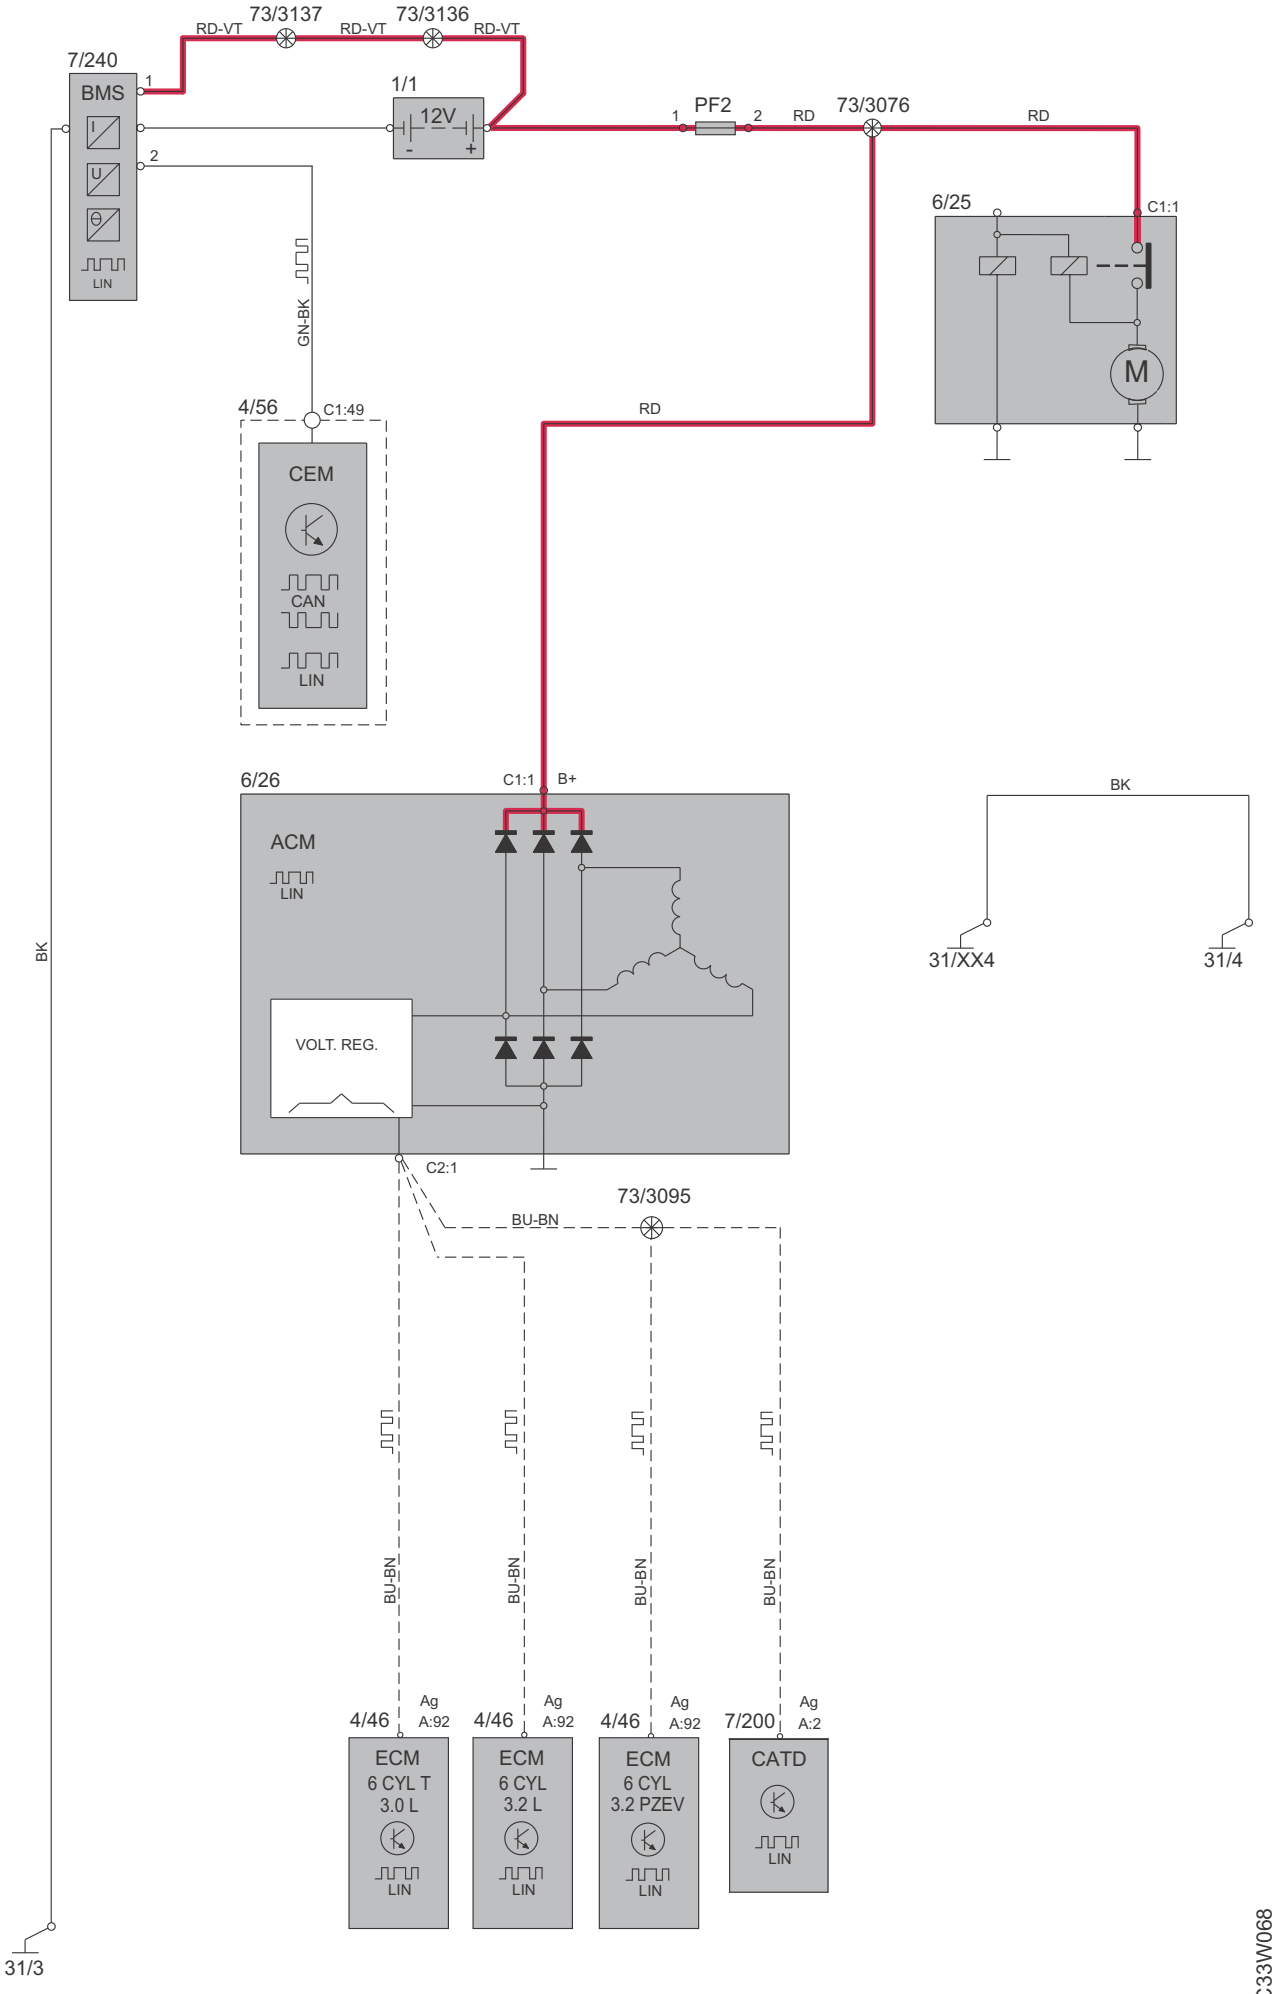

Group 33 Starting system
Starting system 4-Cyl. 1.6L Turbo without Start/Stop

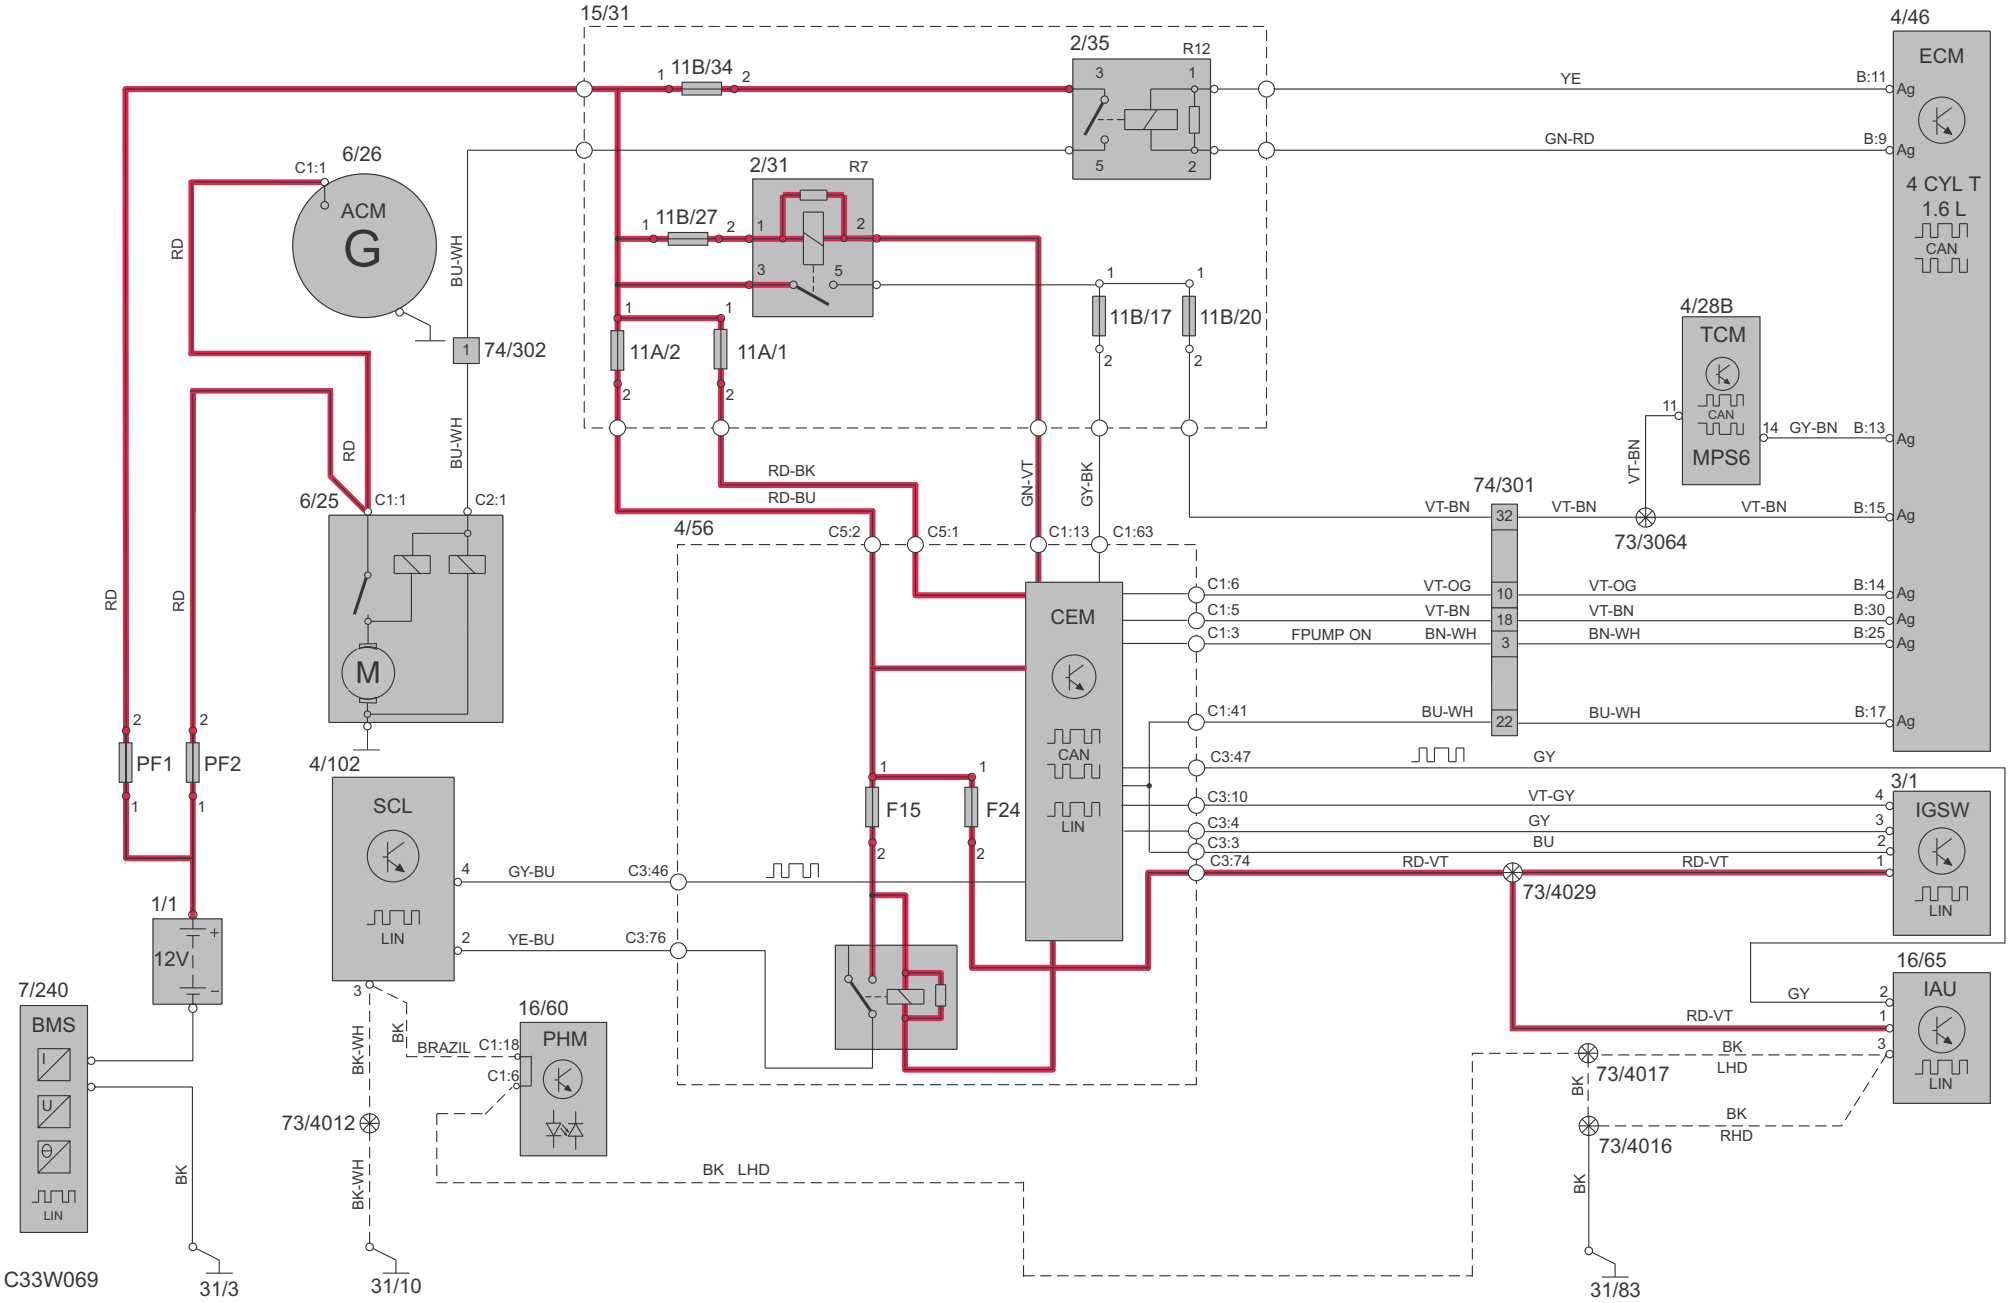

Starting system 4-Cyl. 1.6L Turbo with Start/Stop 1:2

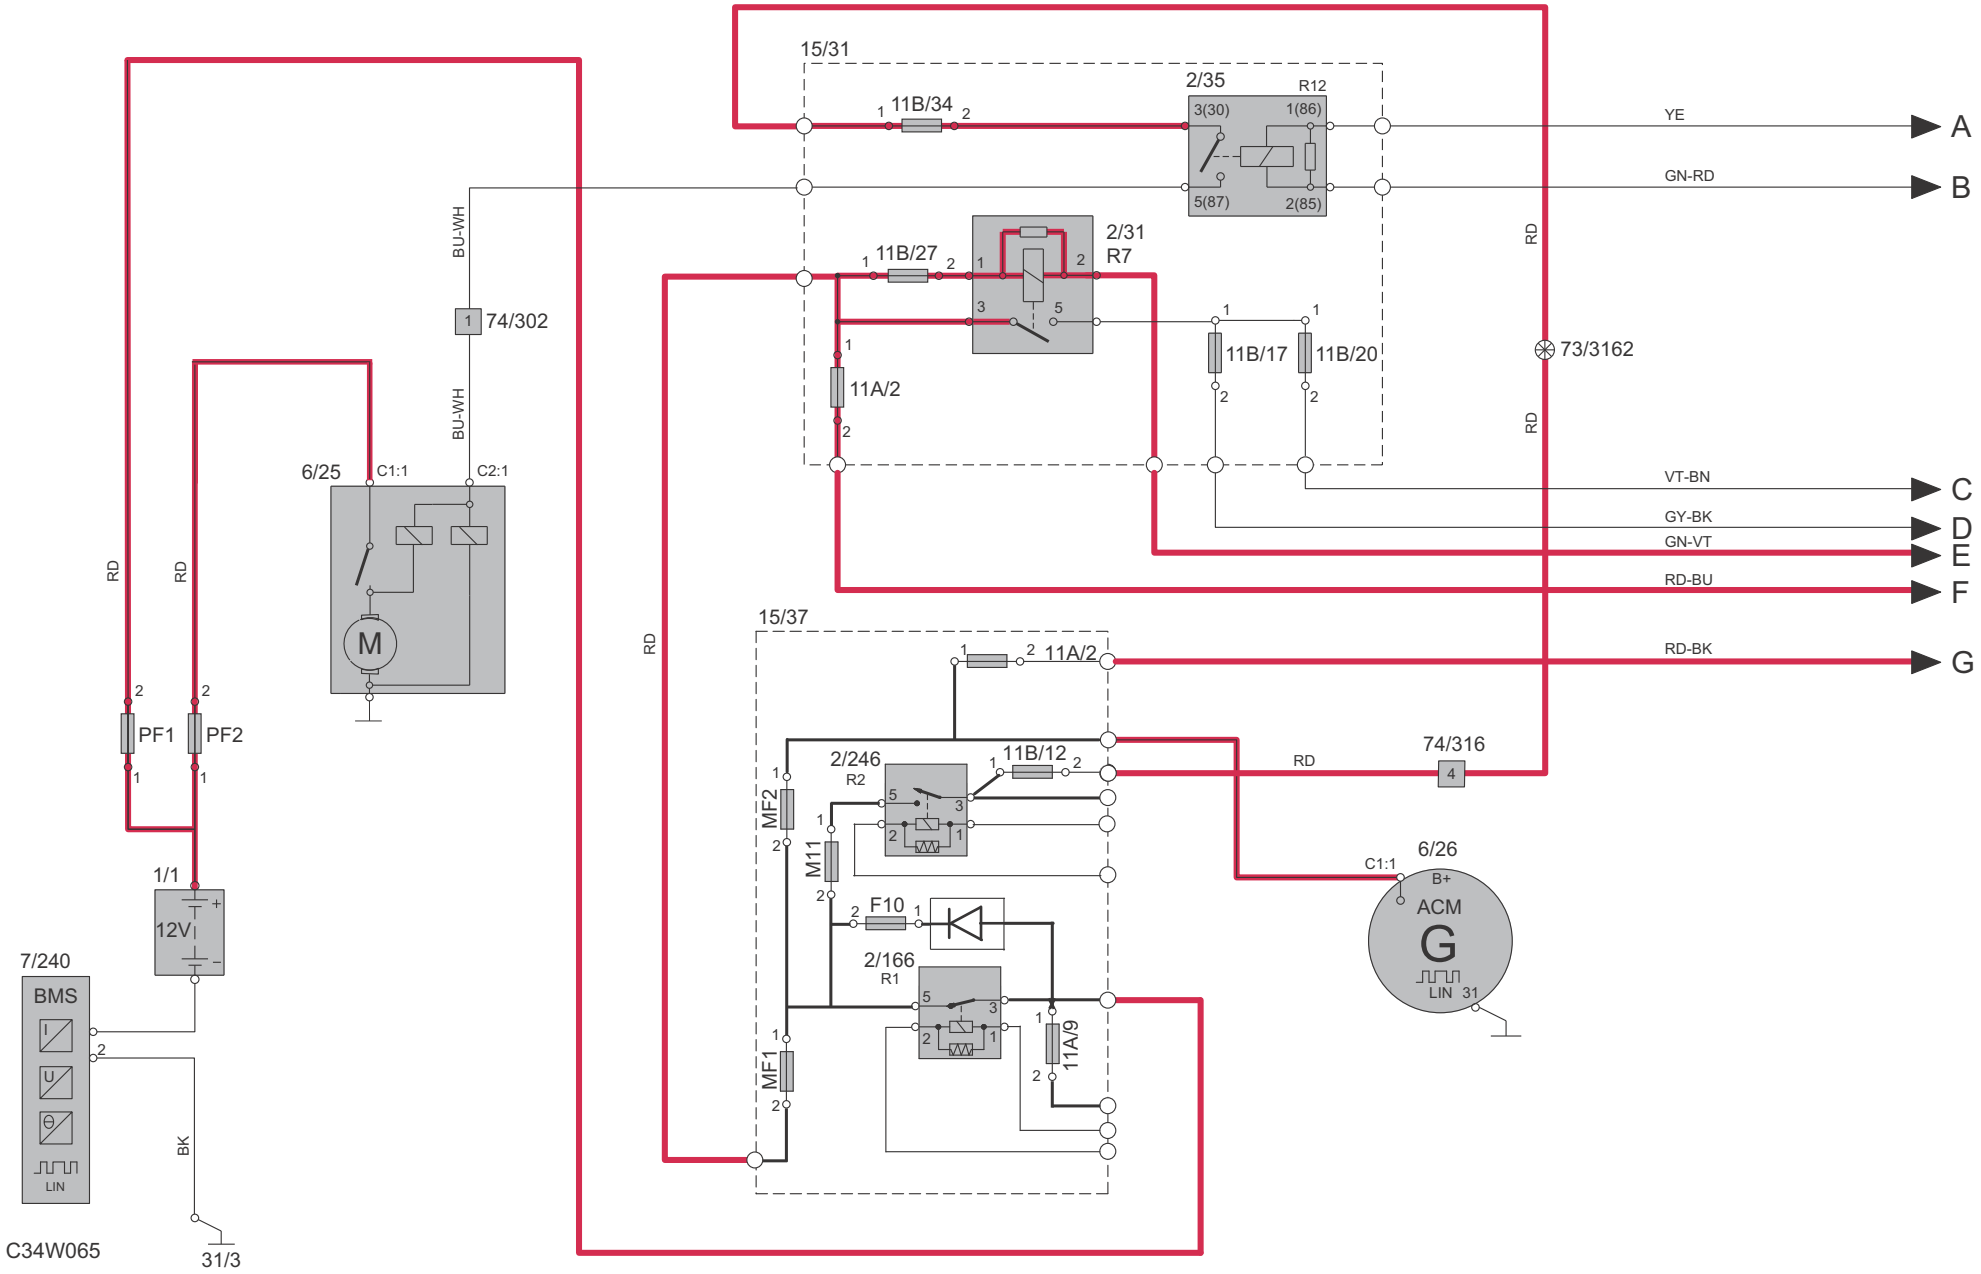

Starting system 4-Cyl. 1.6L Turbo with Start/Stop 2:2

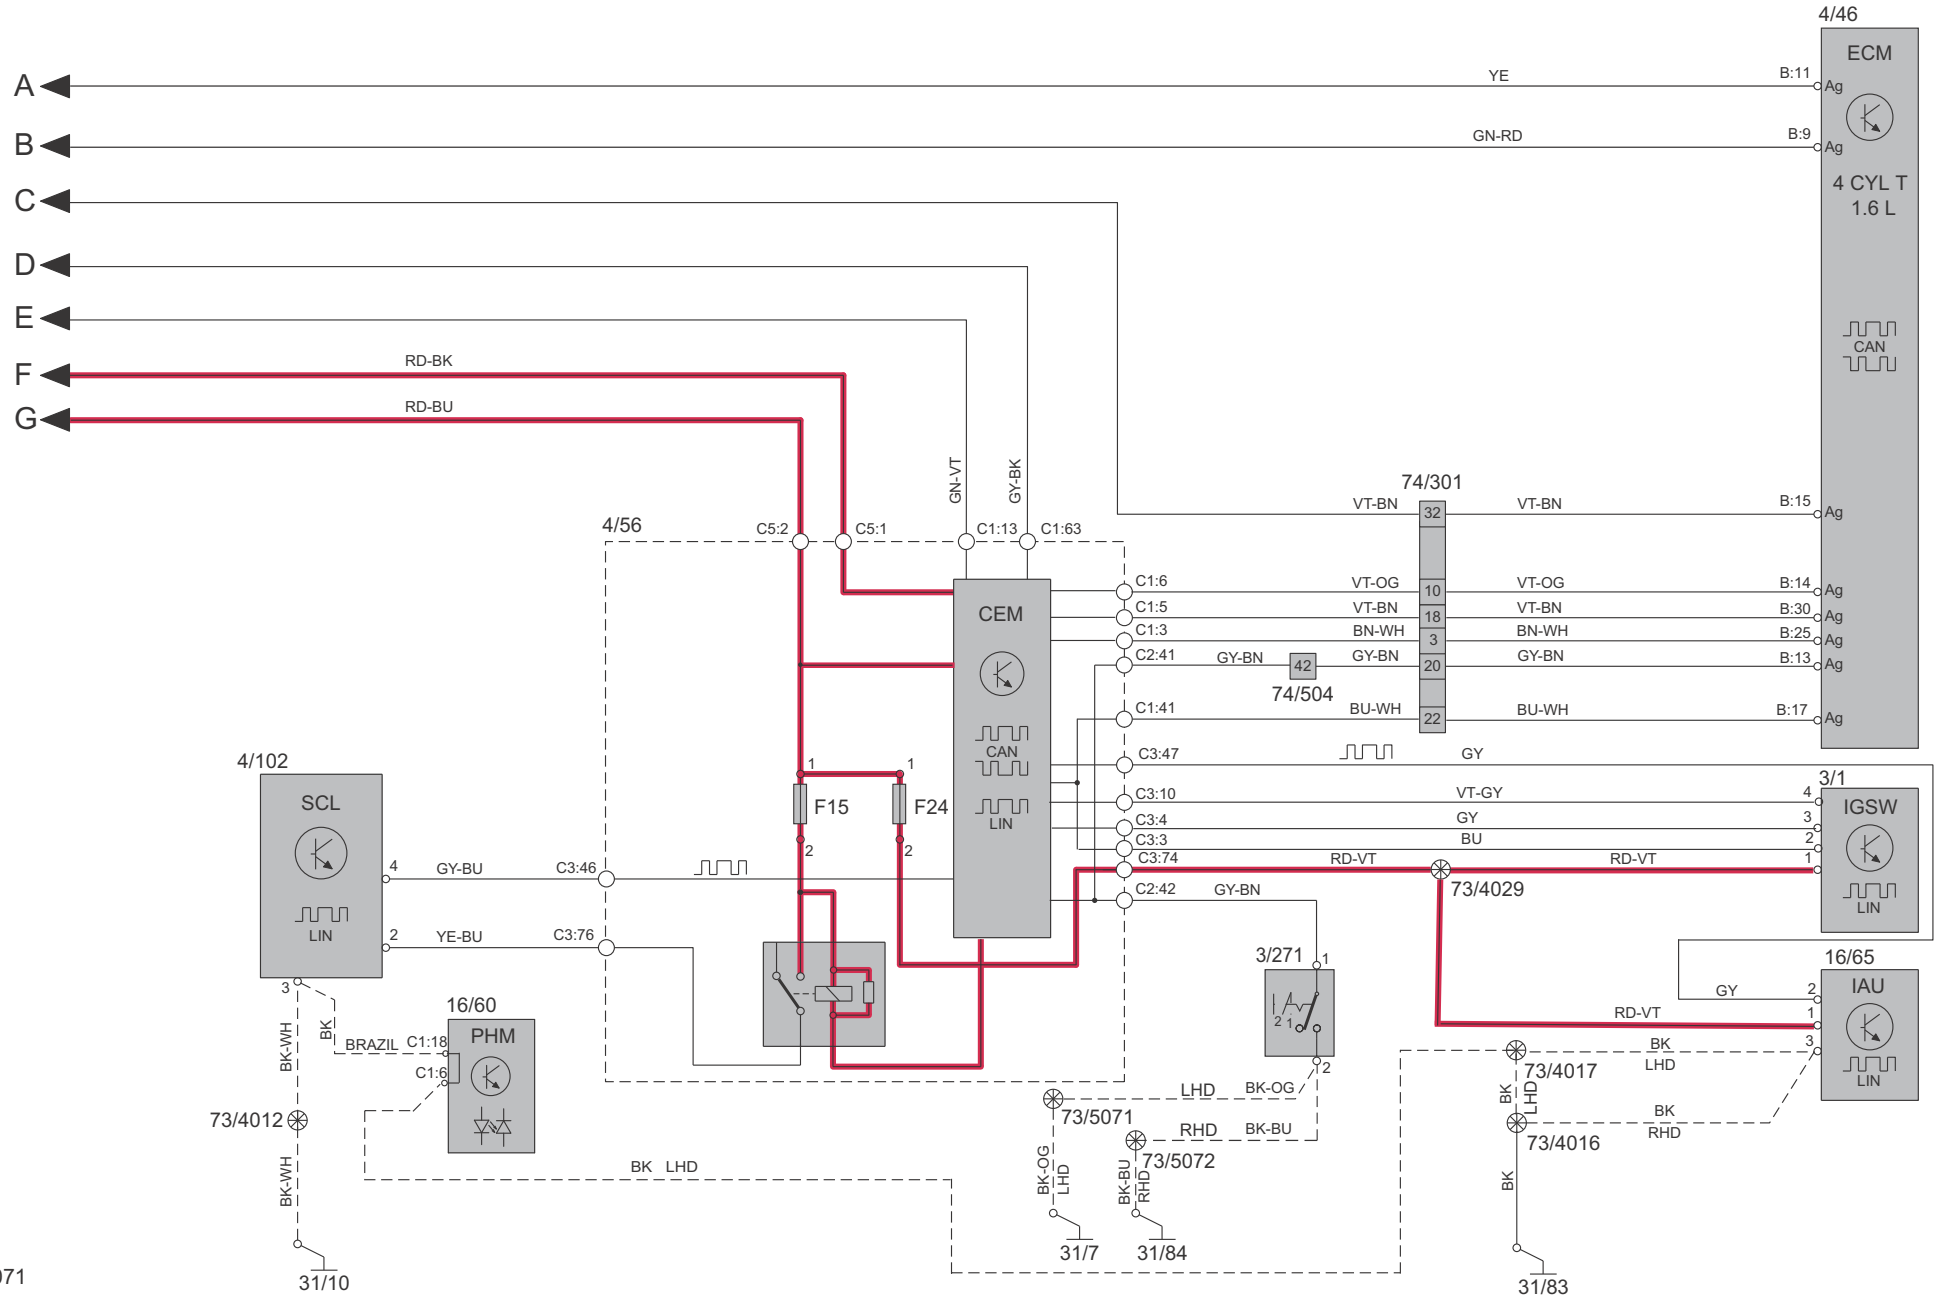

Starting system 4-Cyl. 2.0L Turbo 1:2

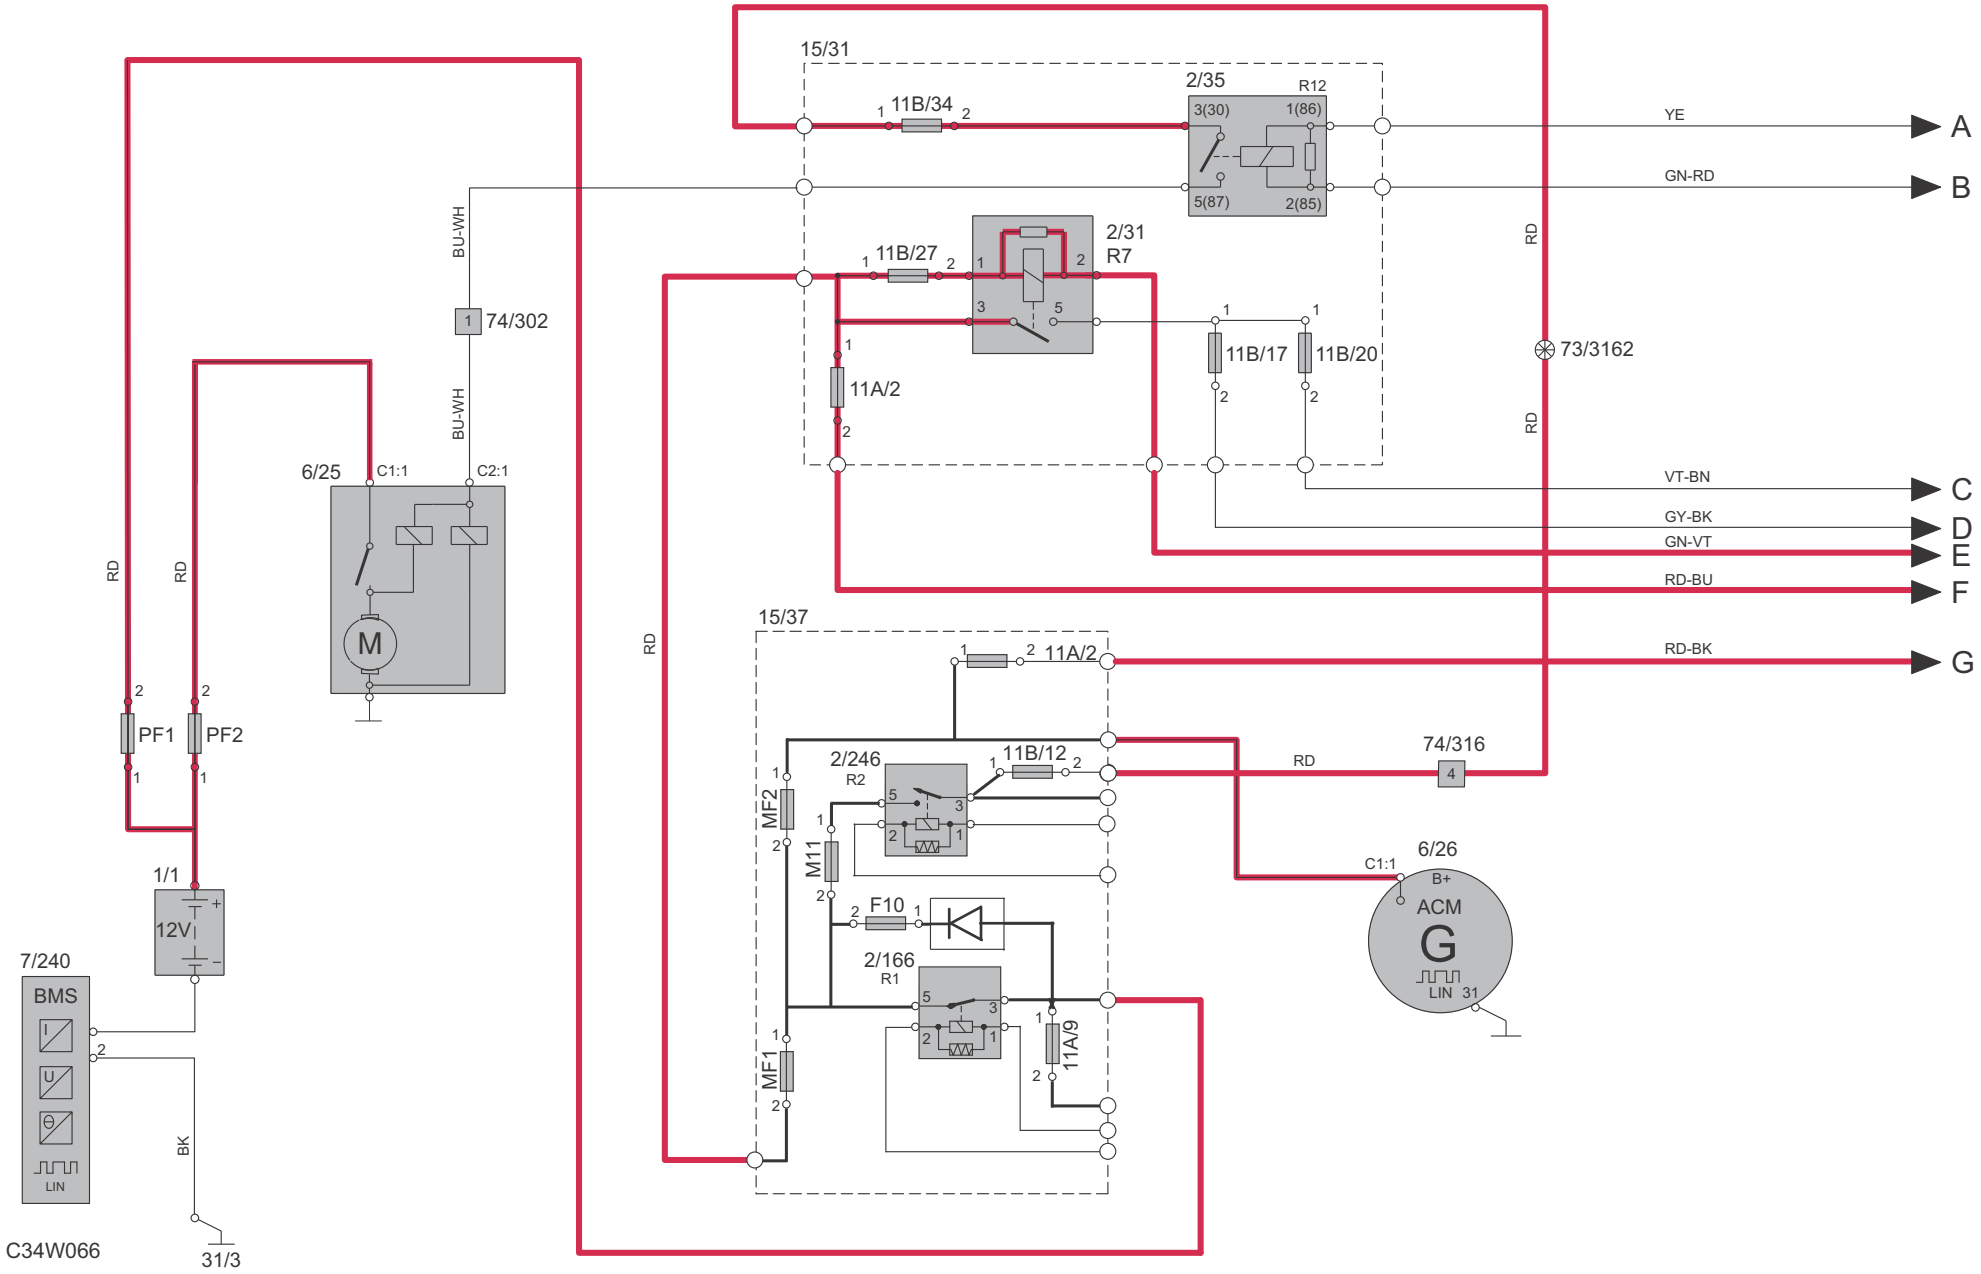

Starting system 4-Cyl. 2.0L Turbo 2:2

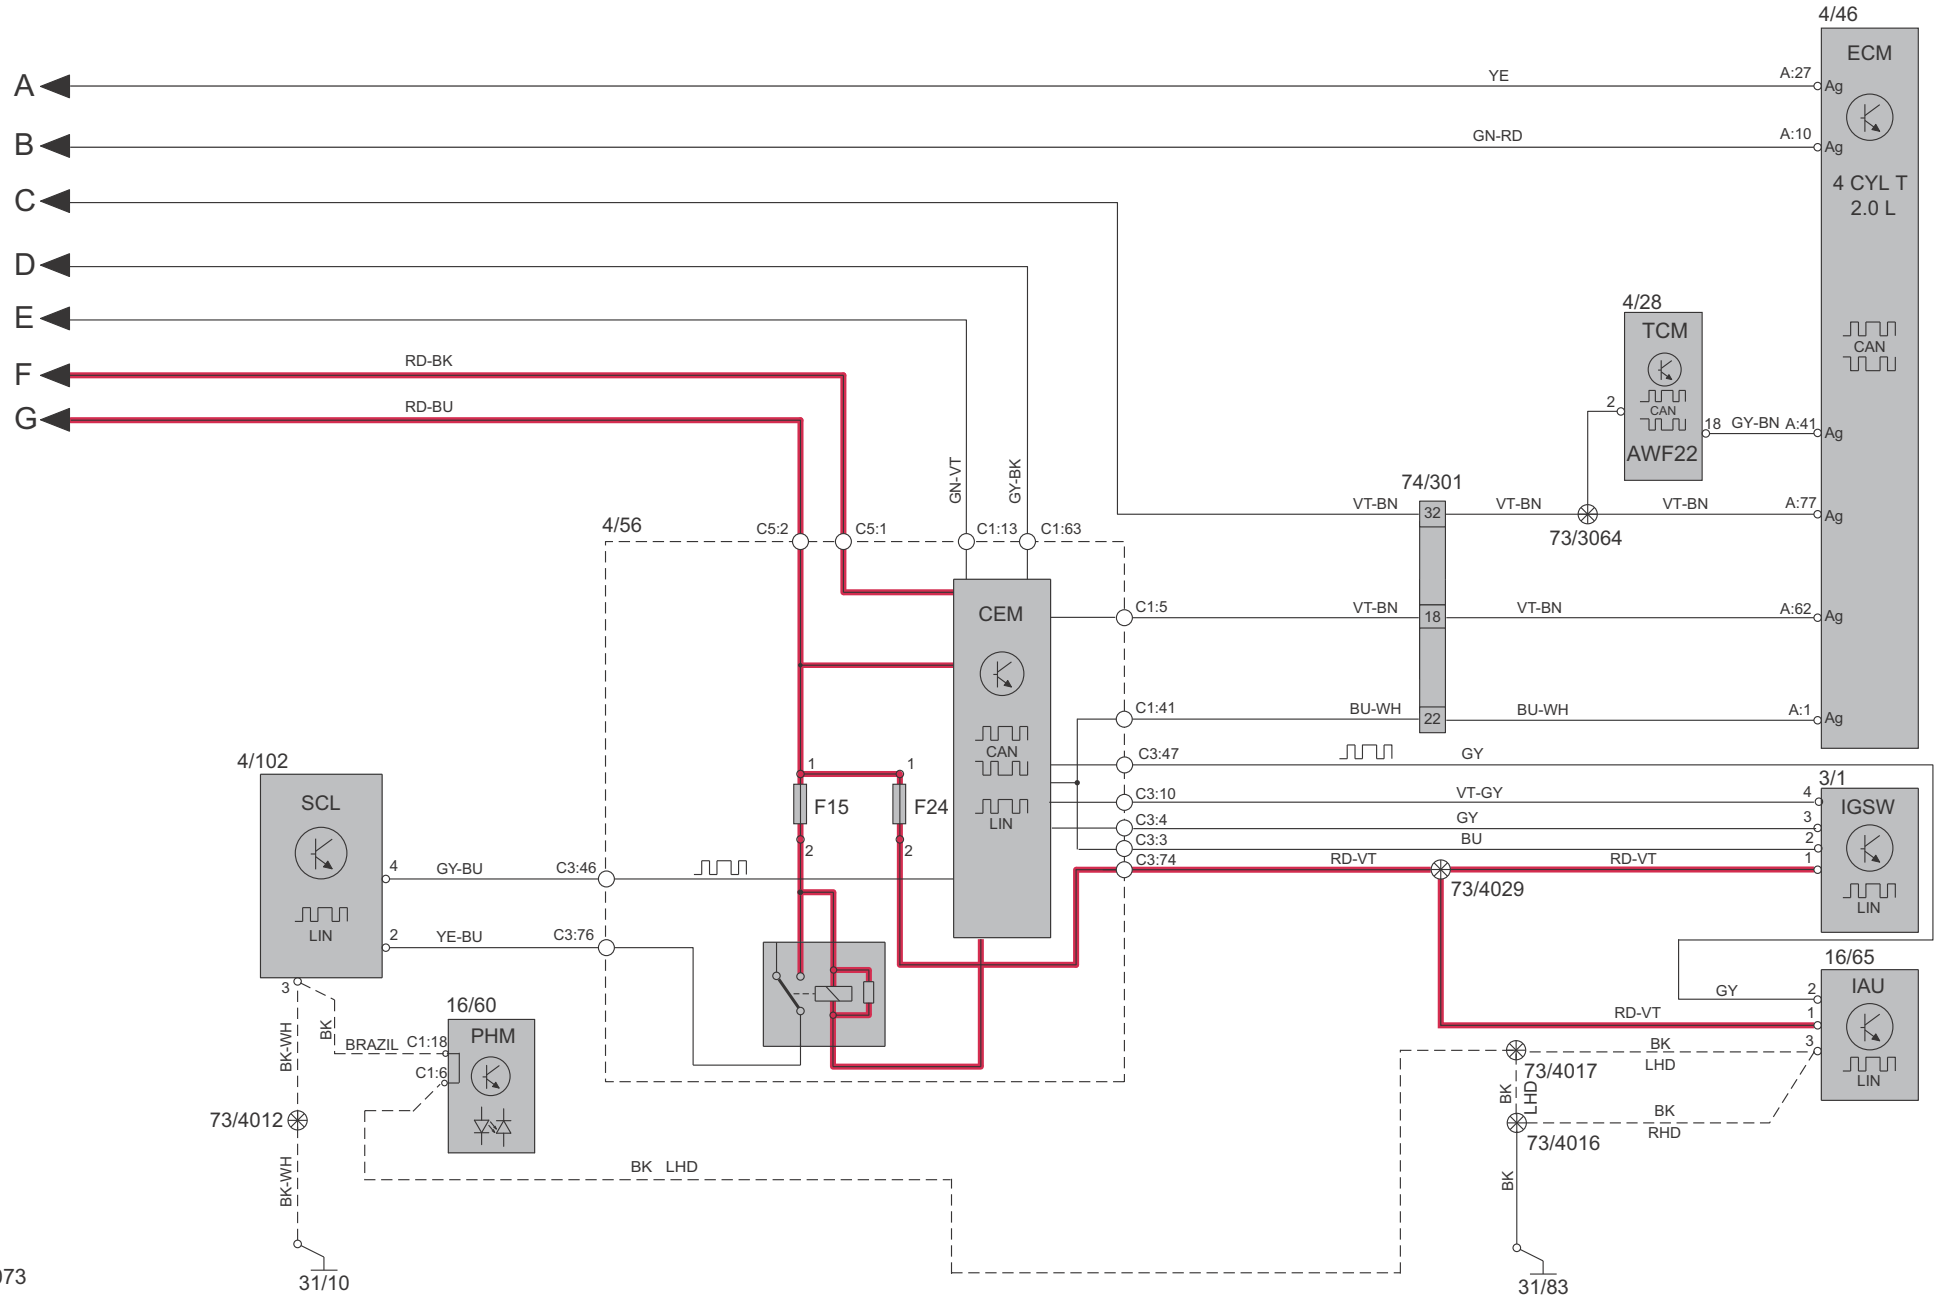

Starting system 5-Cyl. Turbo

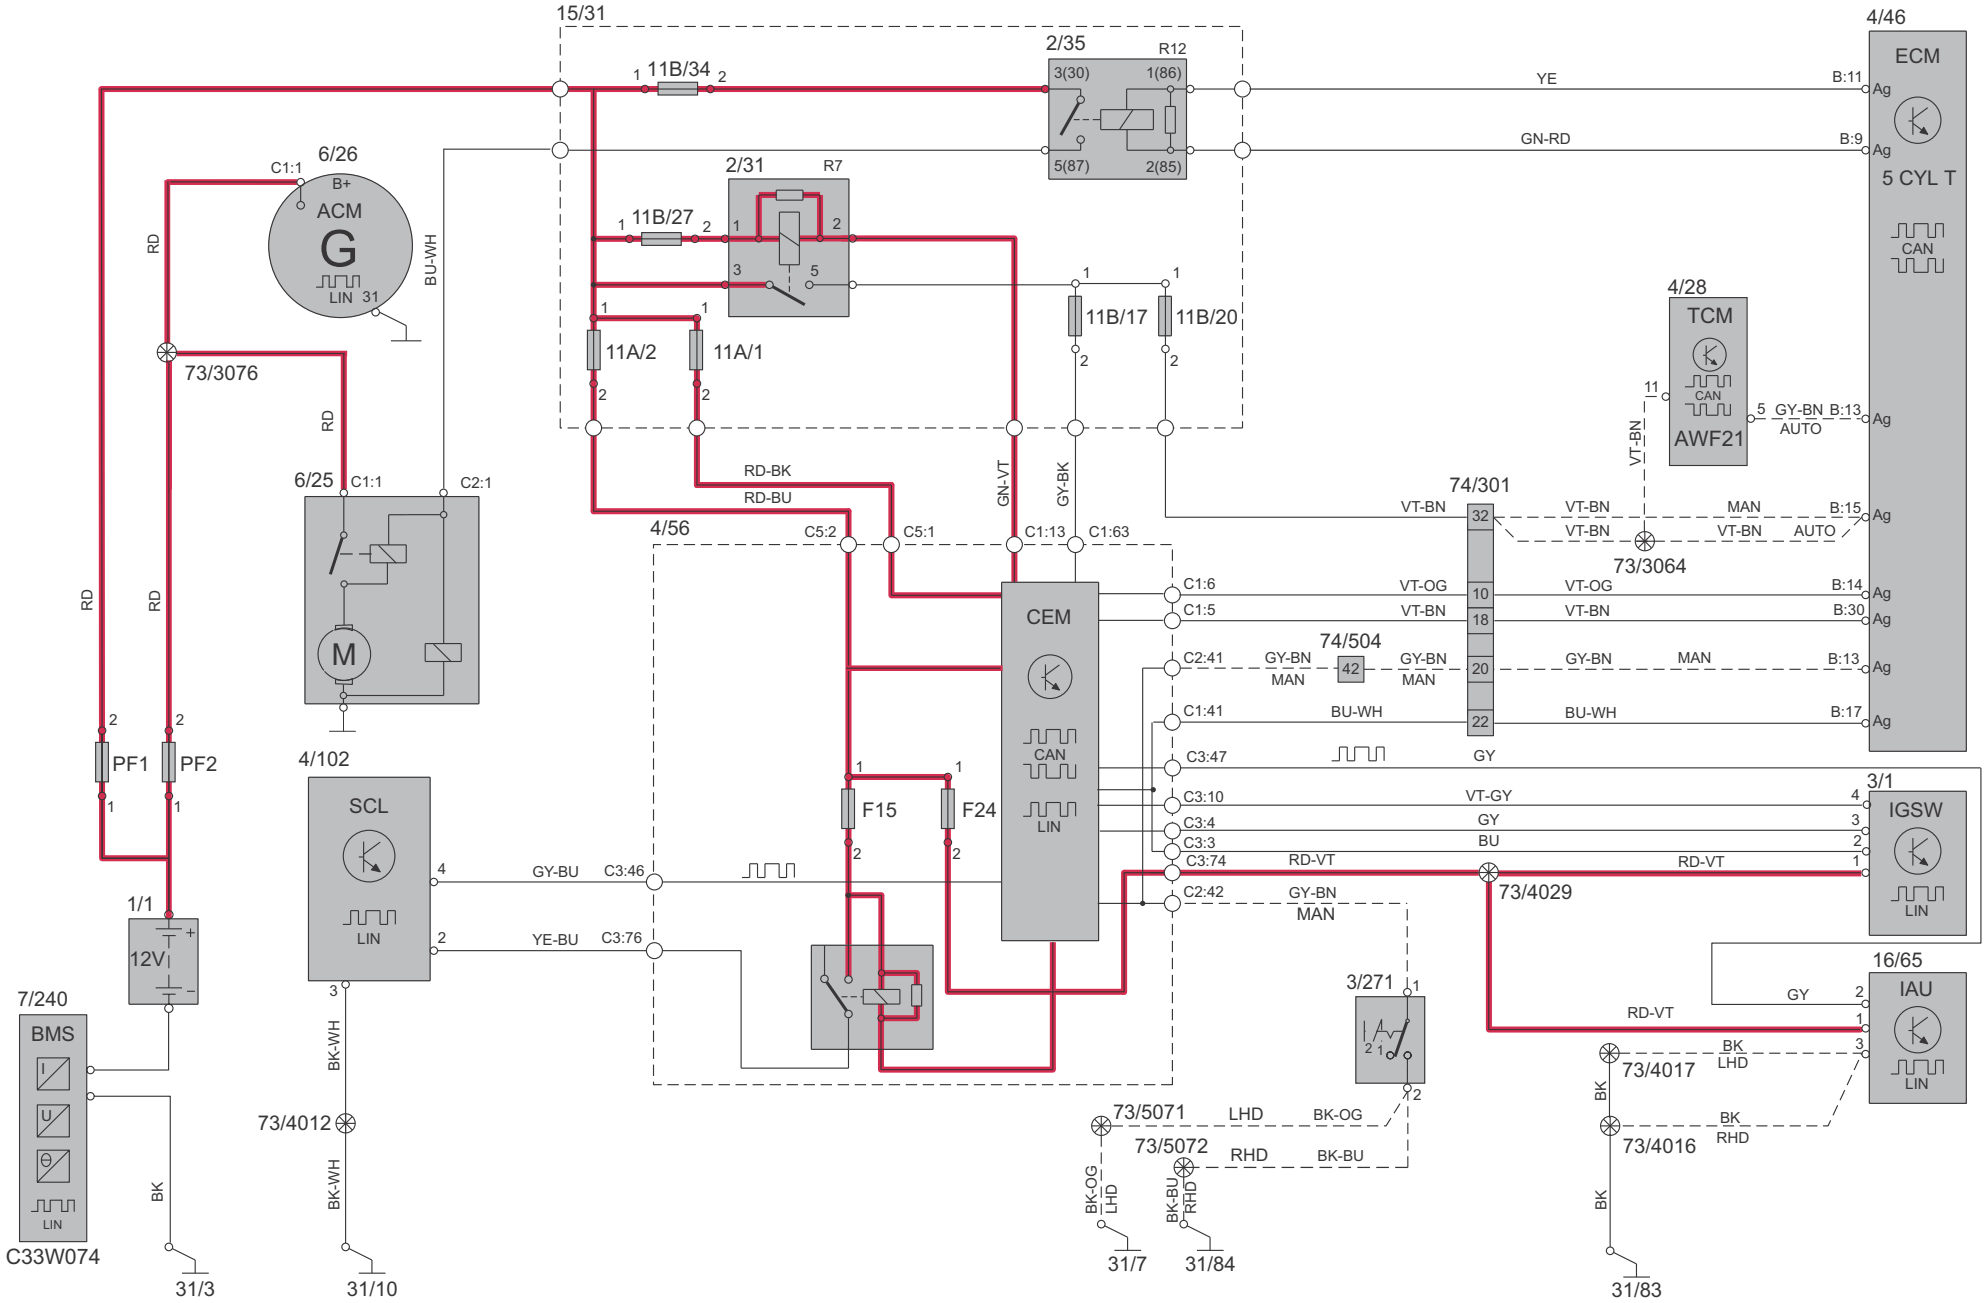

Starting system 6-Cyl.

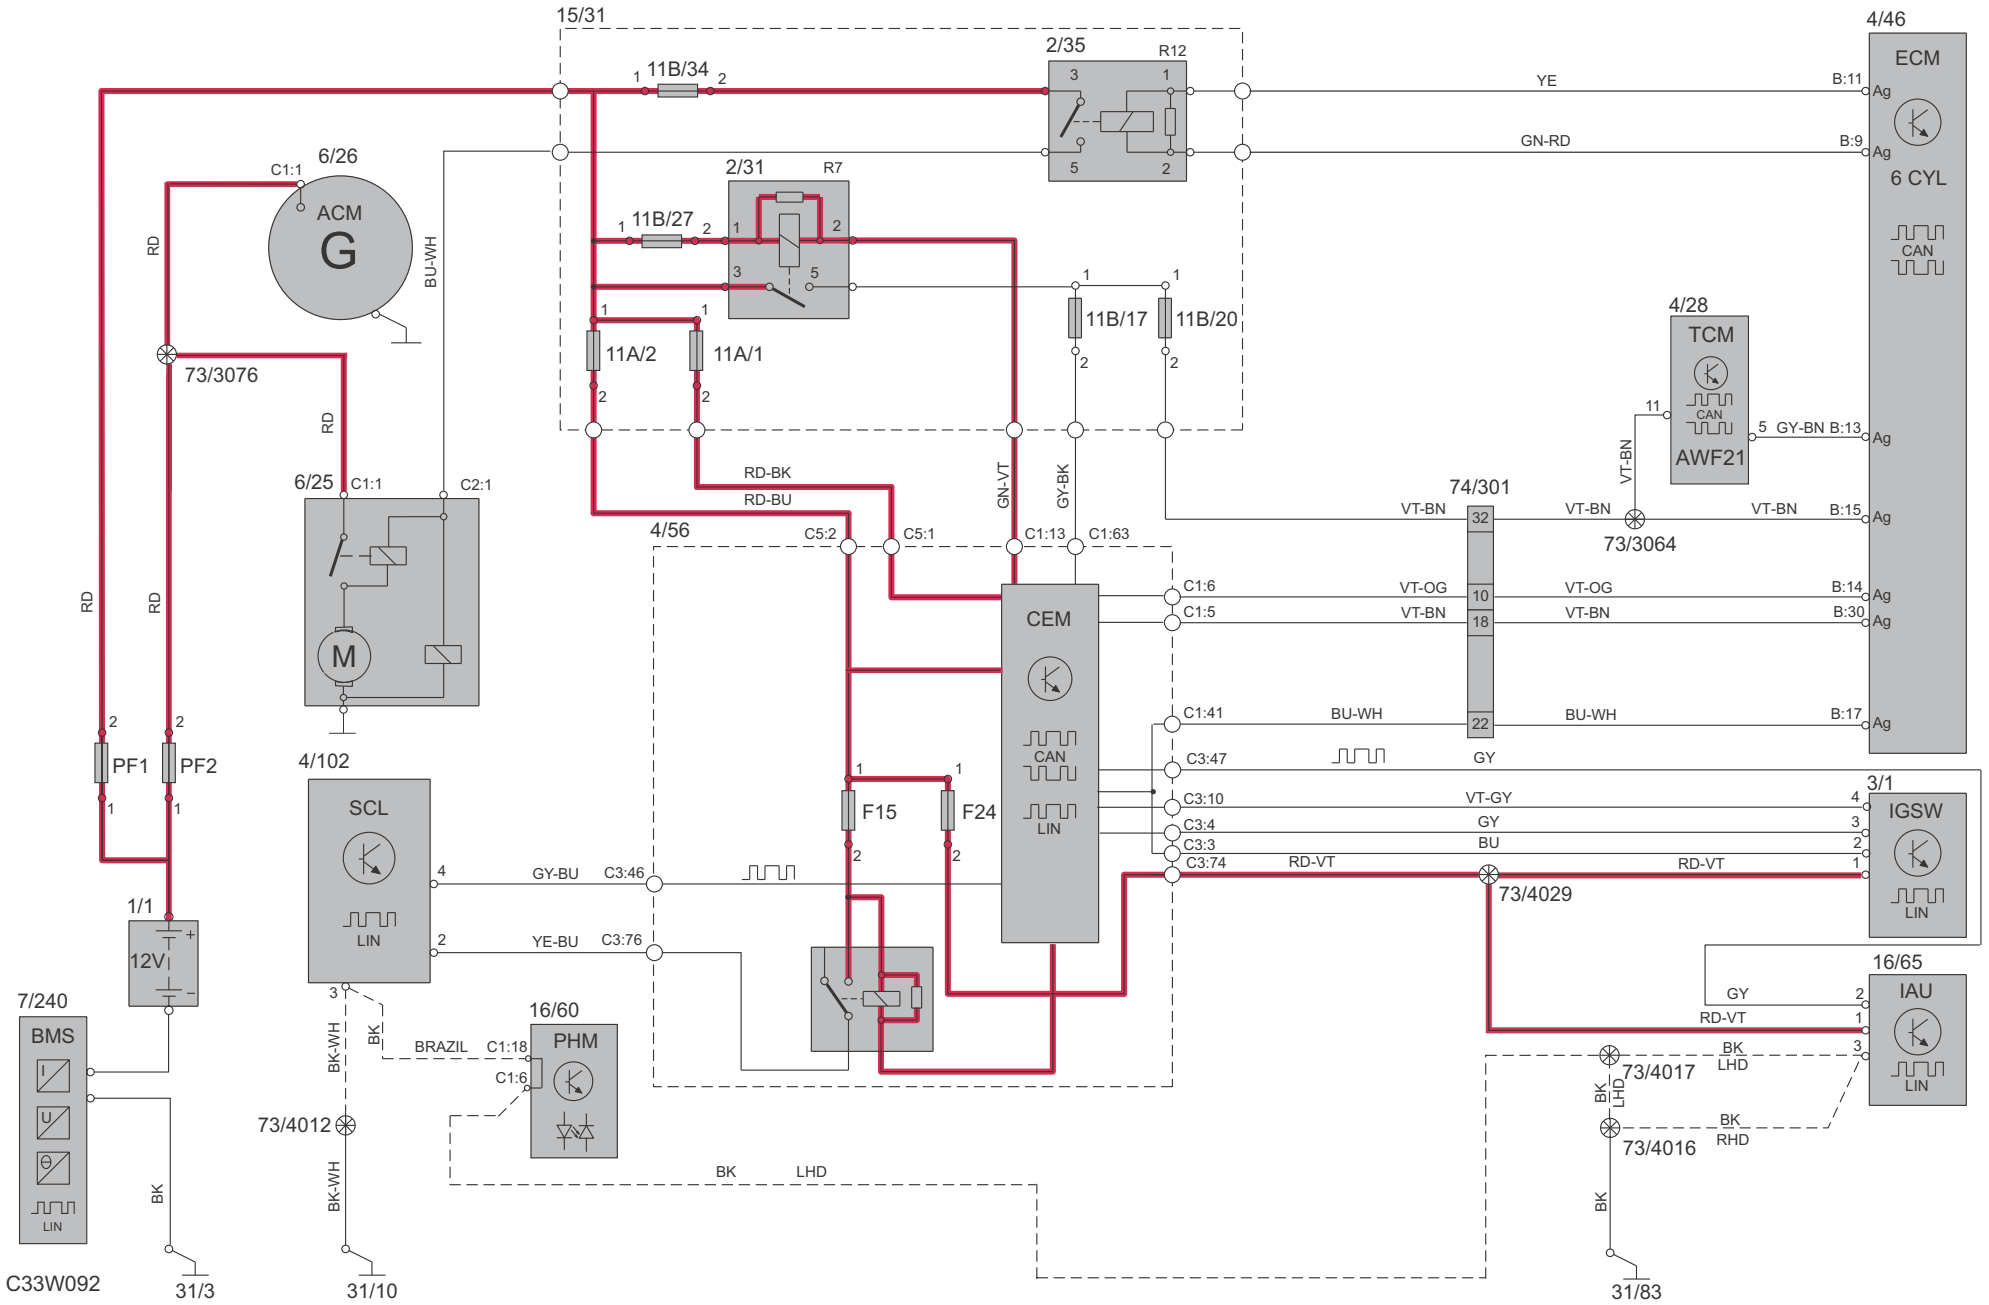

Starting system 4-Cyl. 1.6L Diesel 1:2

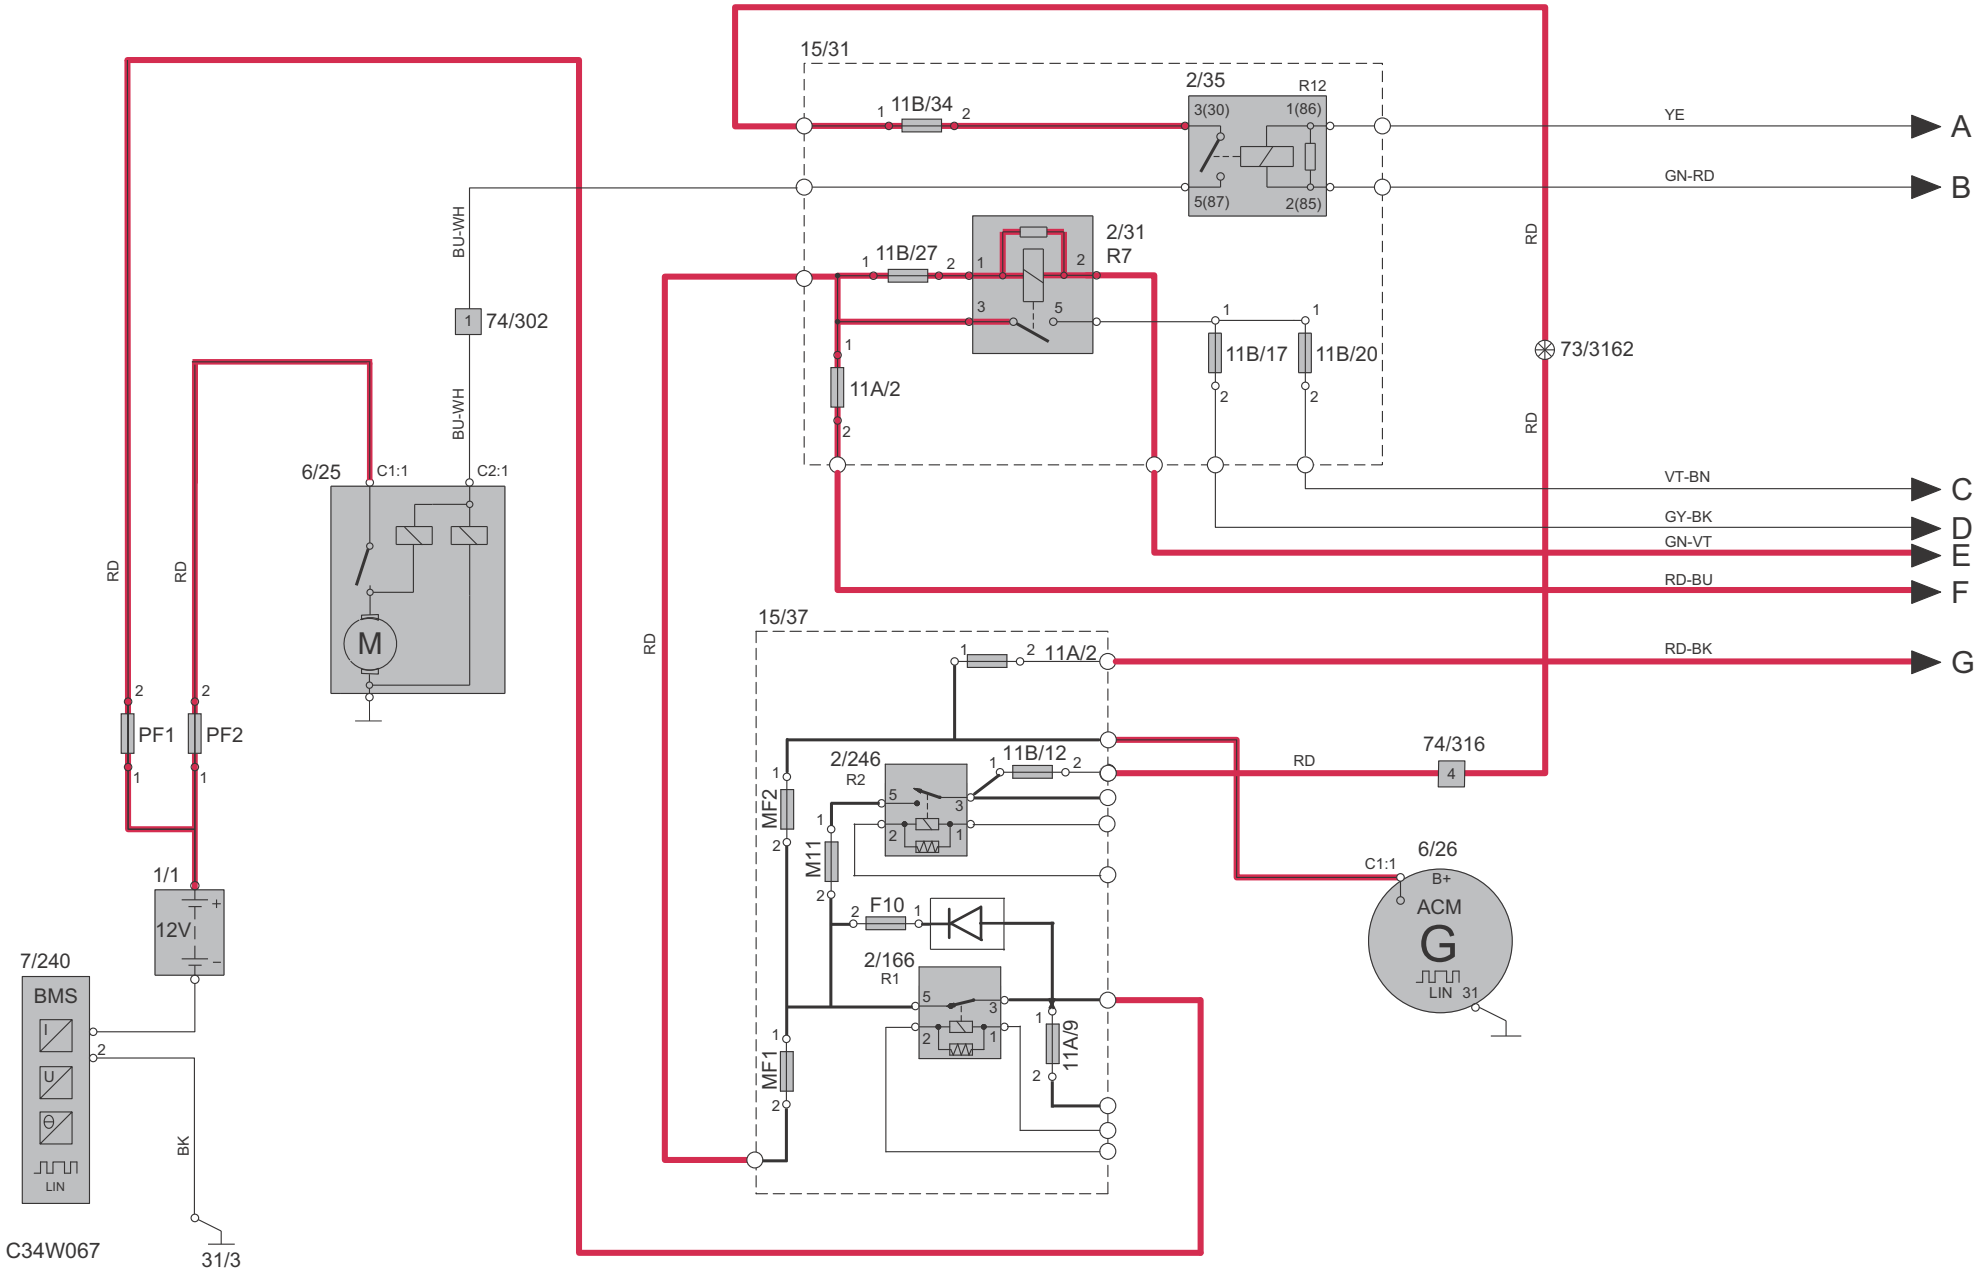

Starting system 4-Cyl. 1.6L Diesel 2:2

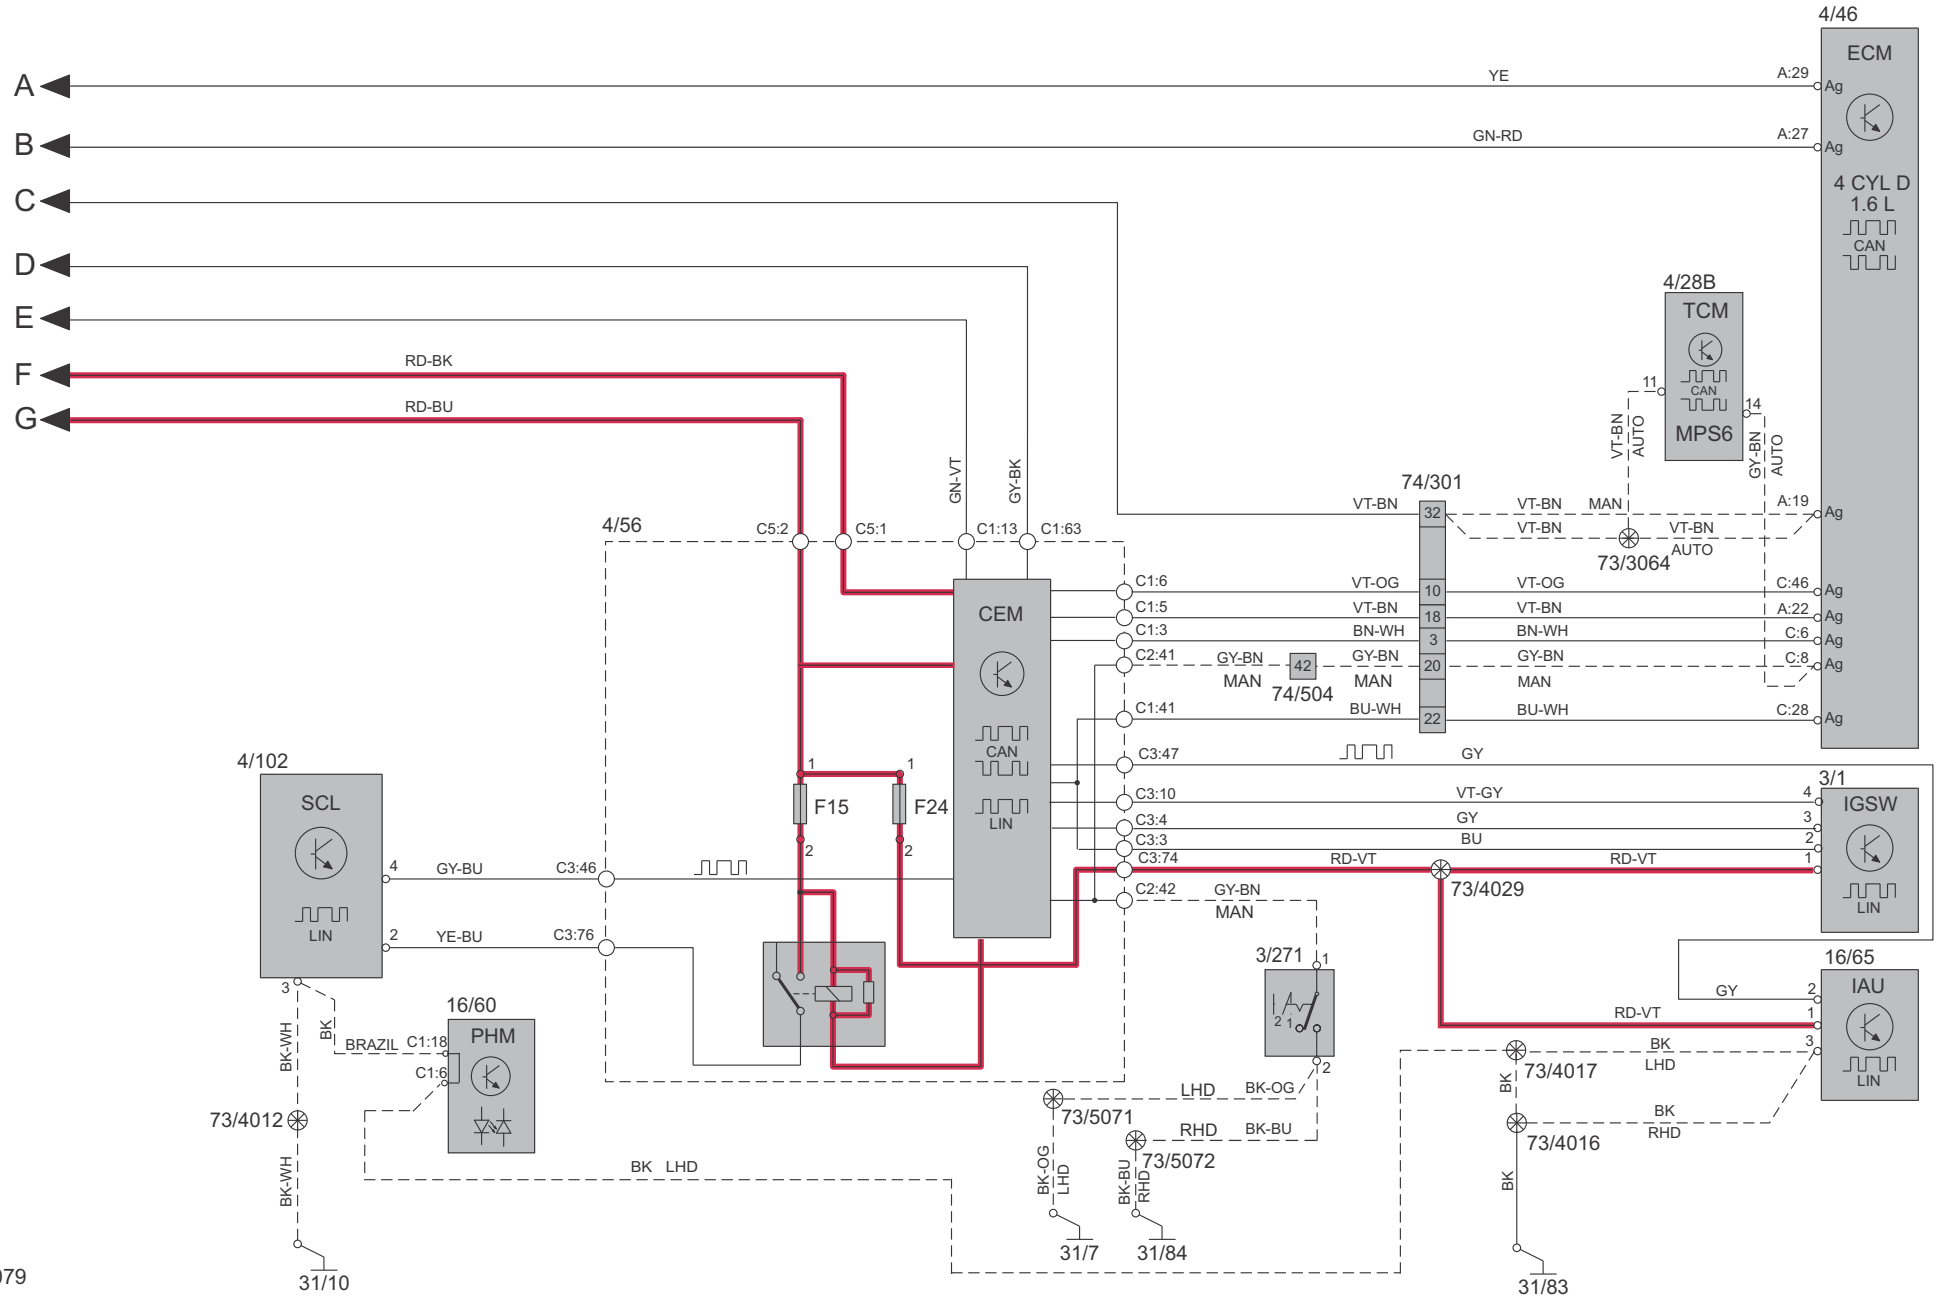

Starting system 4-Cyl. 2.0L Diesel 1:2

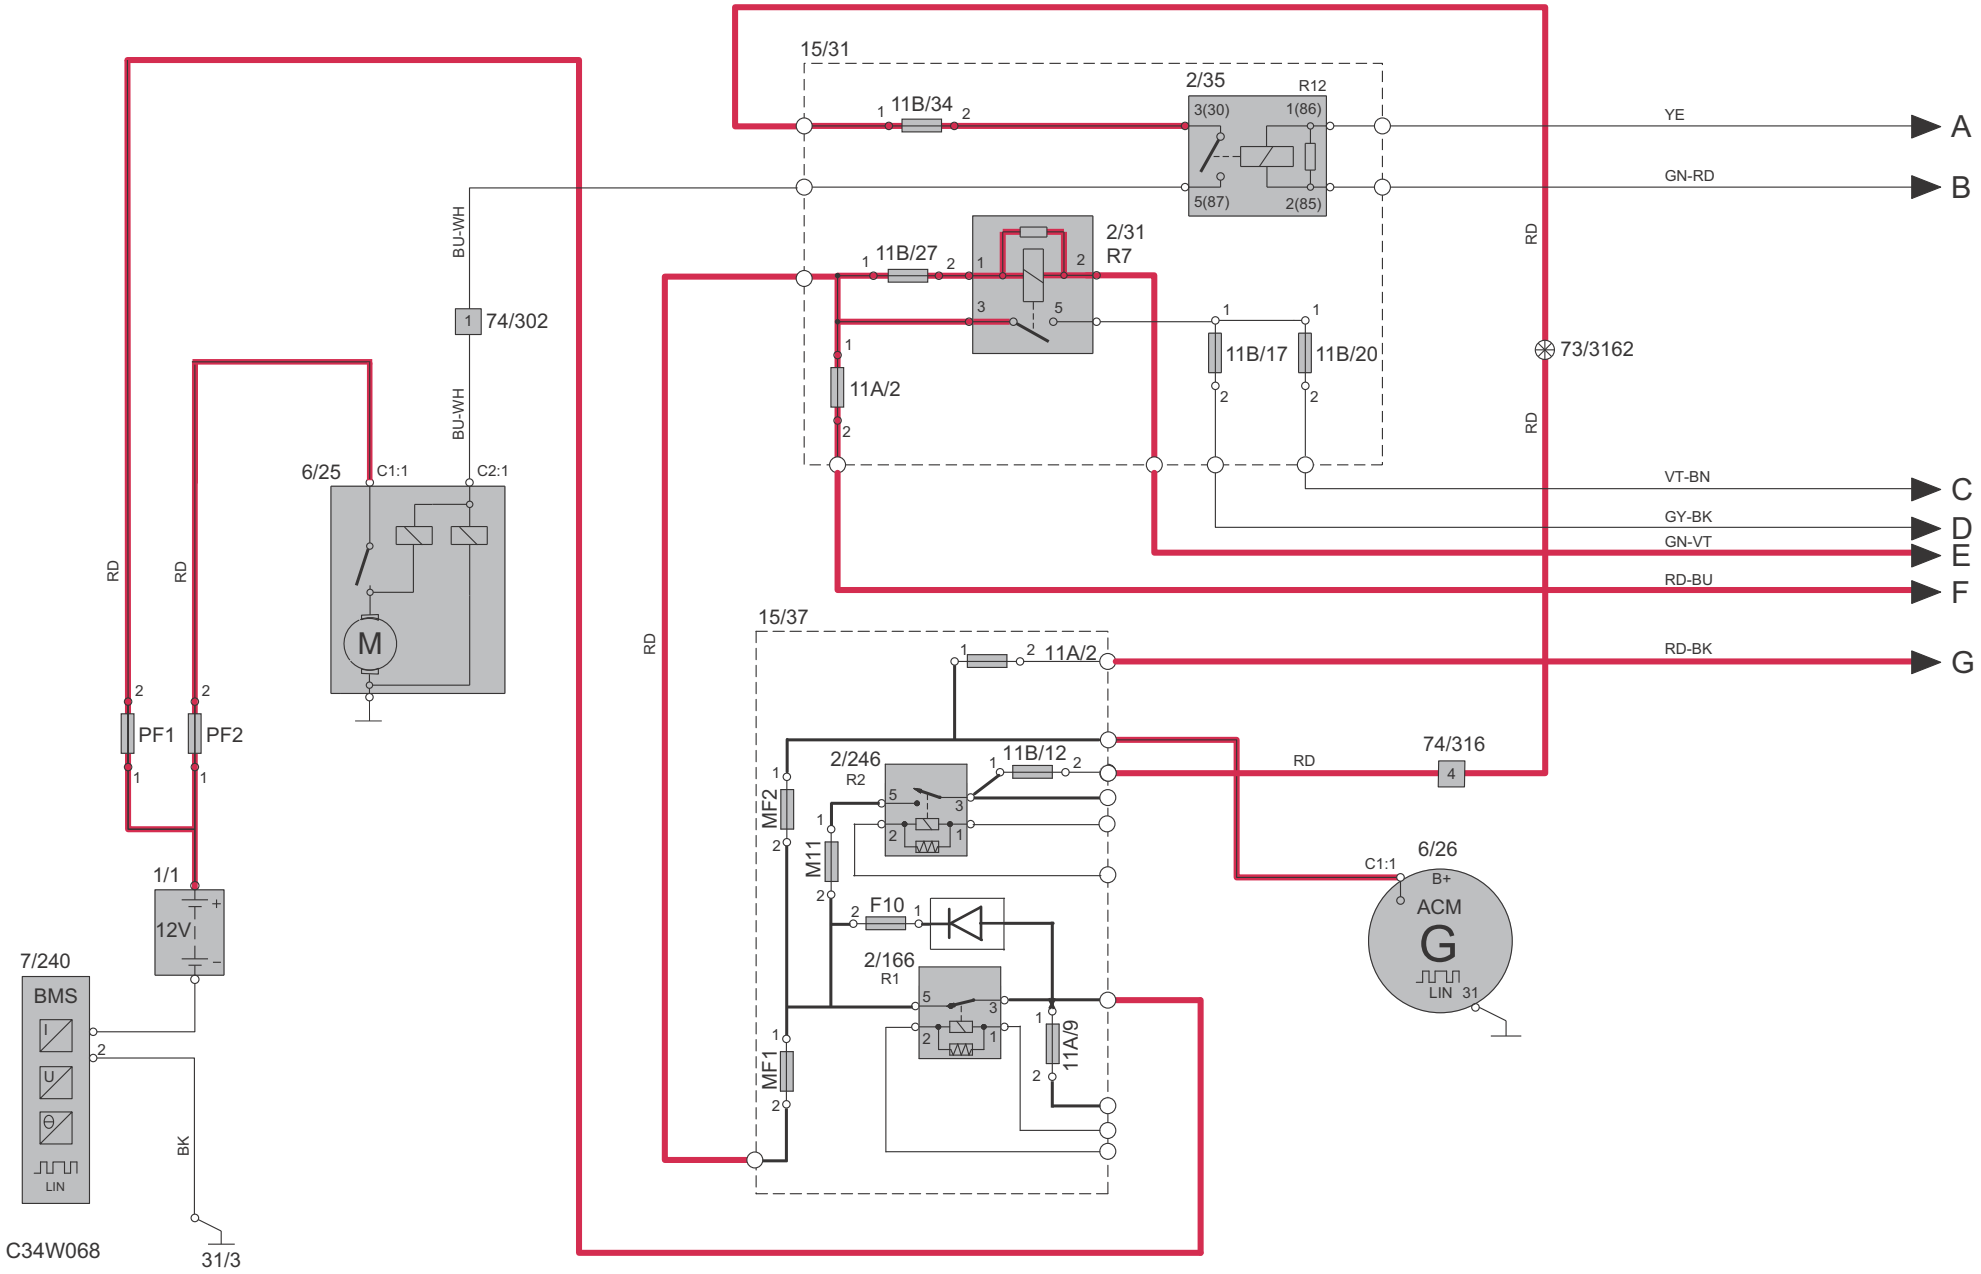

Starting system 4-Cyl. 2.0L Diesel 2:2

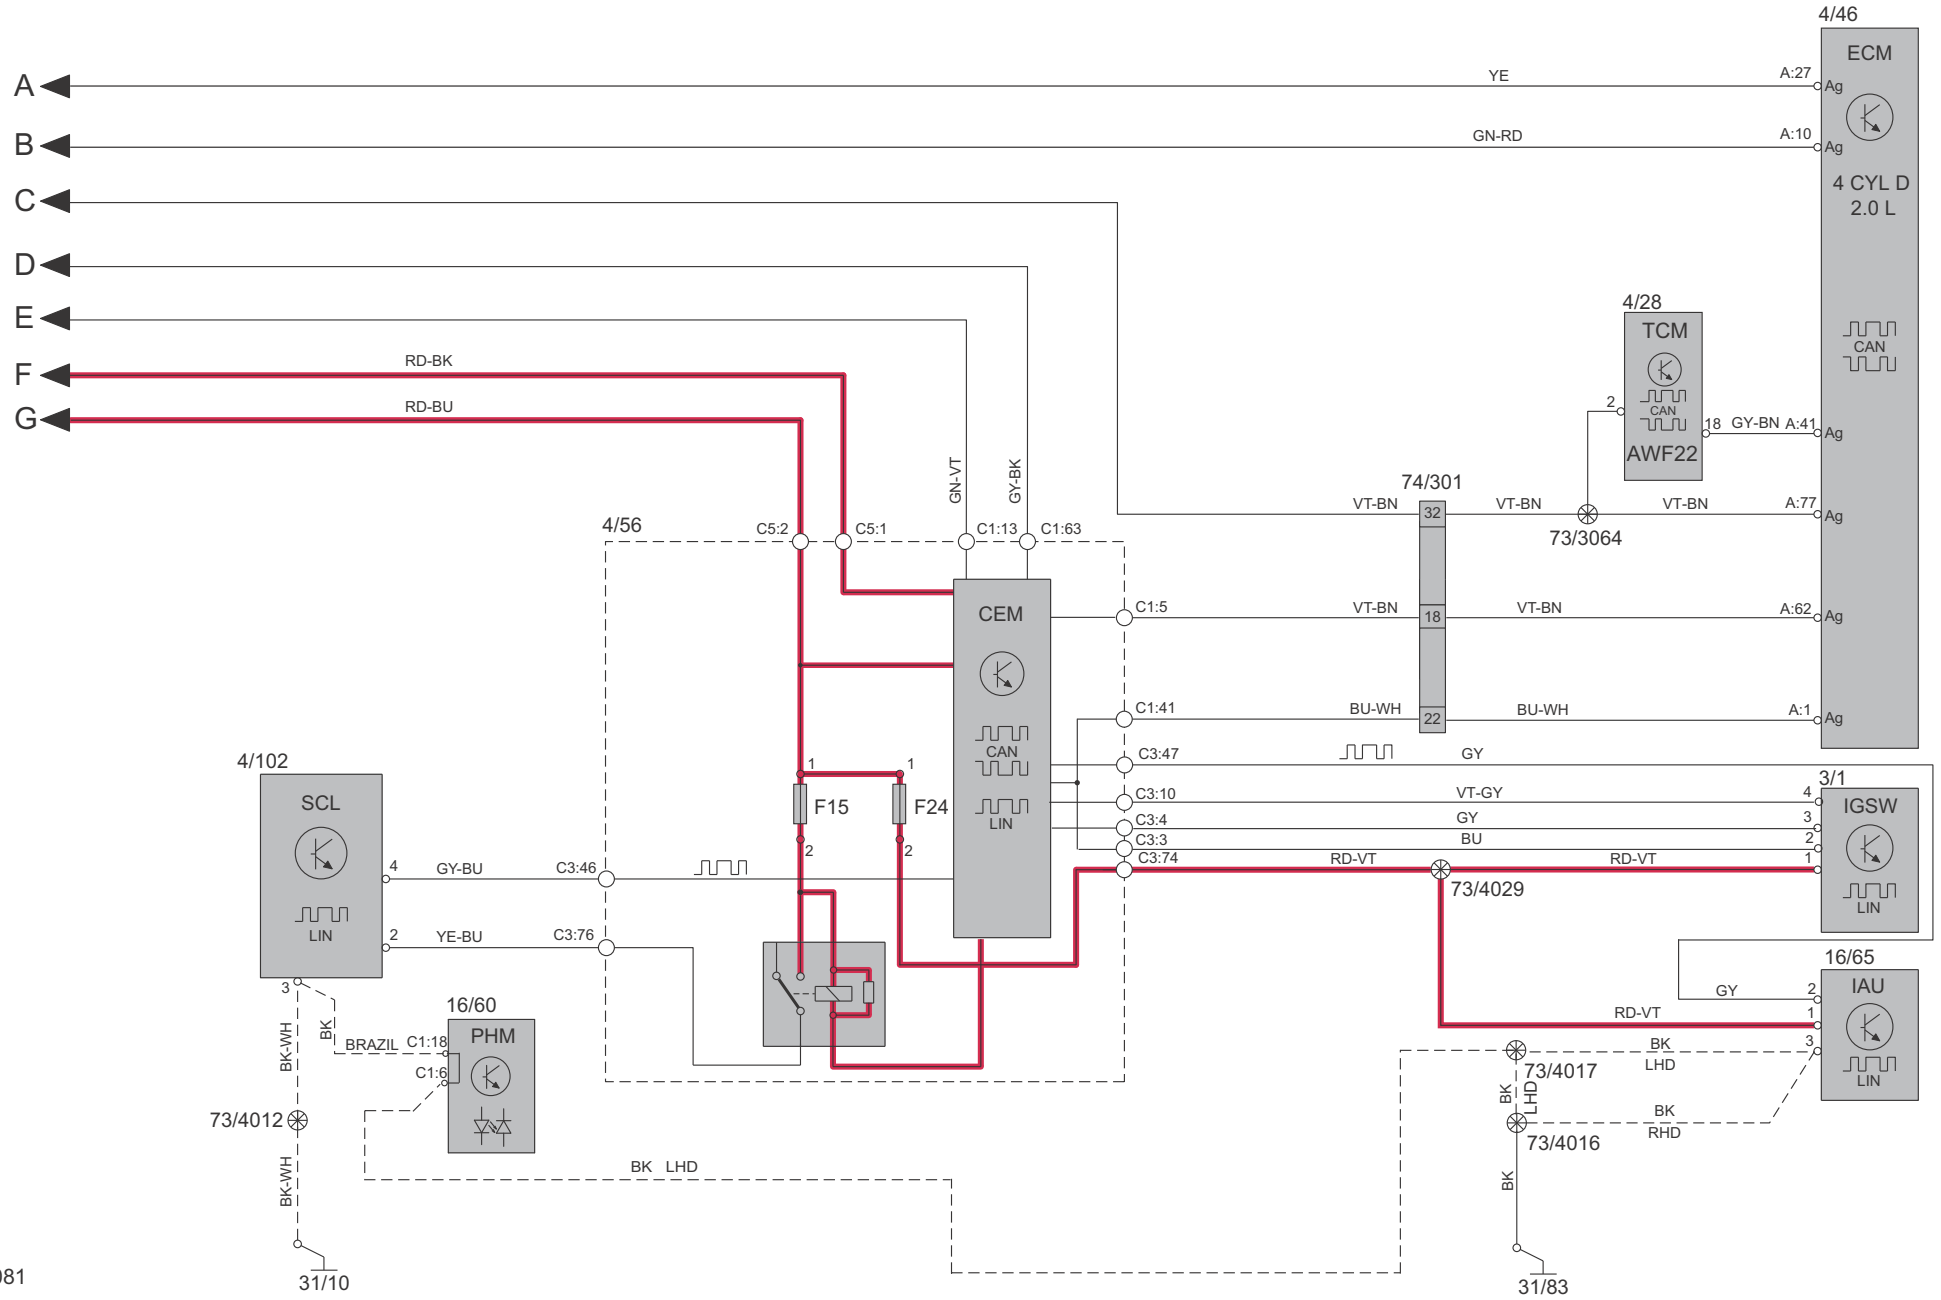

Group 33 Starting system
Starting system 5-Cyl. Diesel without Start/Stop

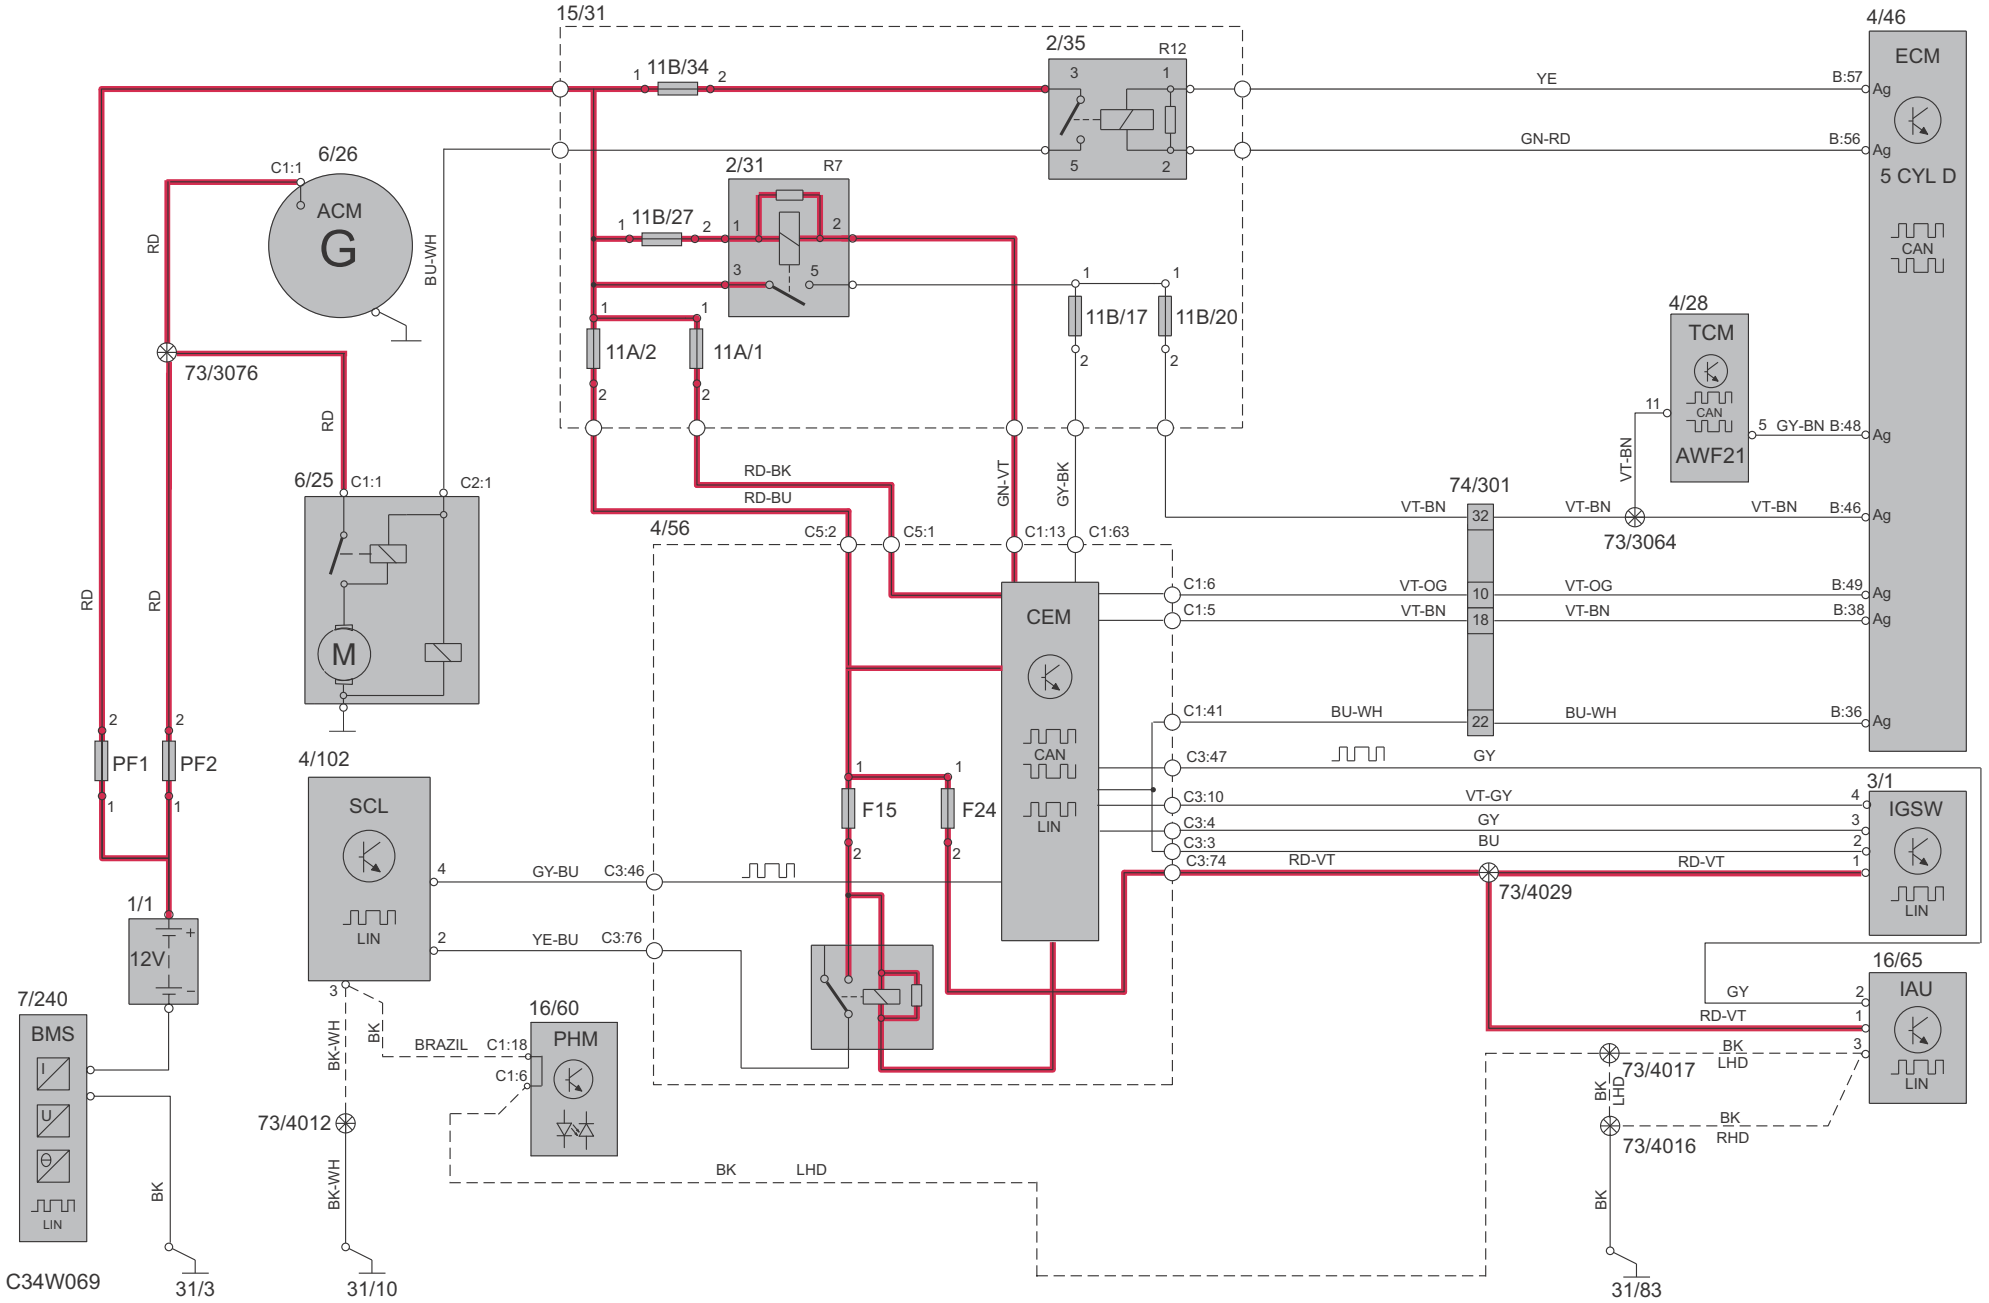

Starting system 5-Cyl. Diesel with Start/Stop 1:2

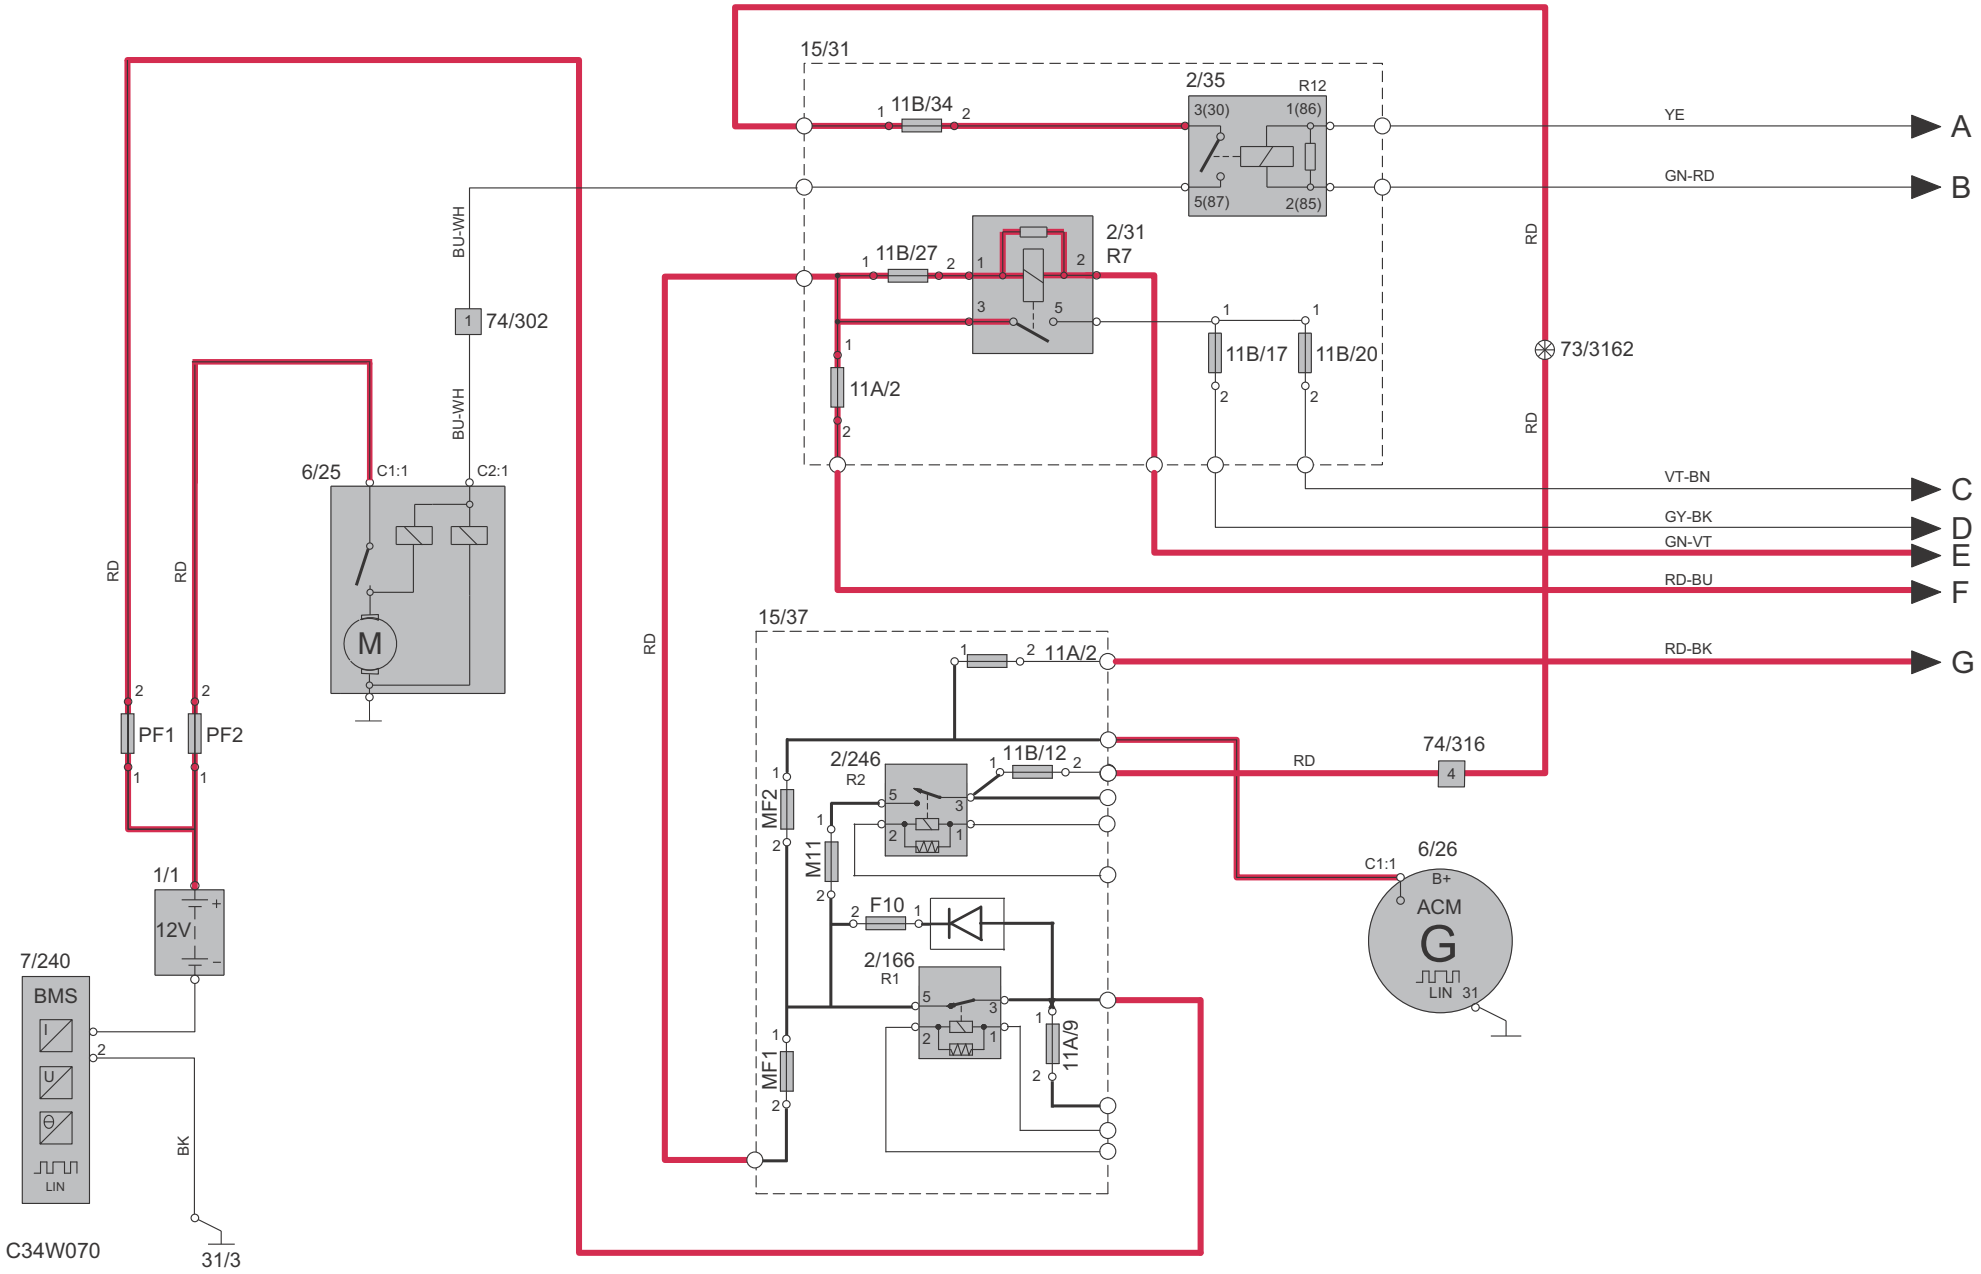

Starting system 5-Cyl. Diesel with Start/Stop 2:2

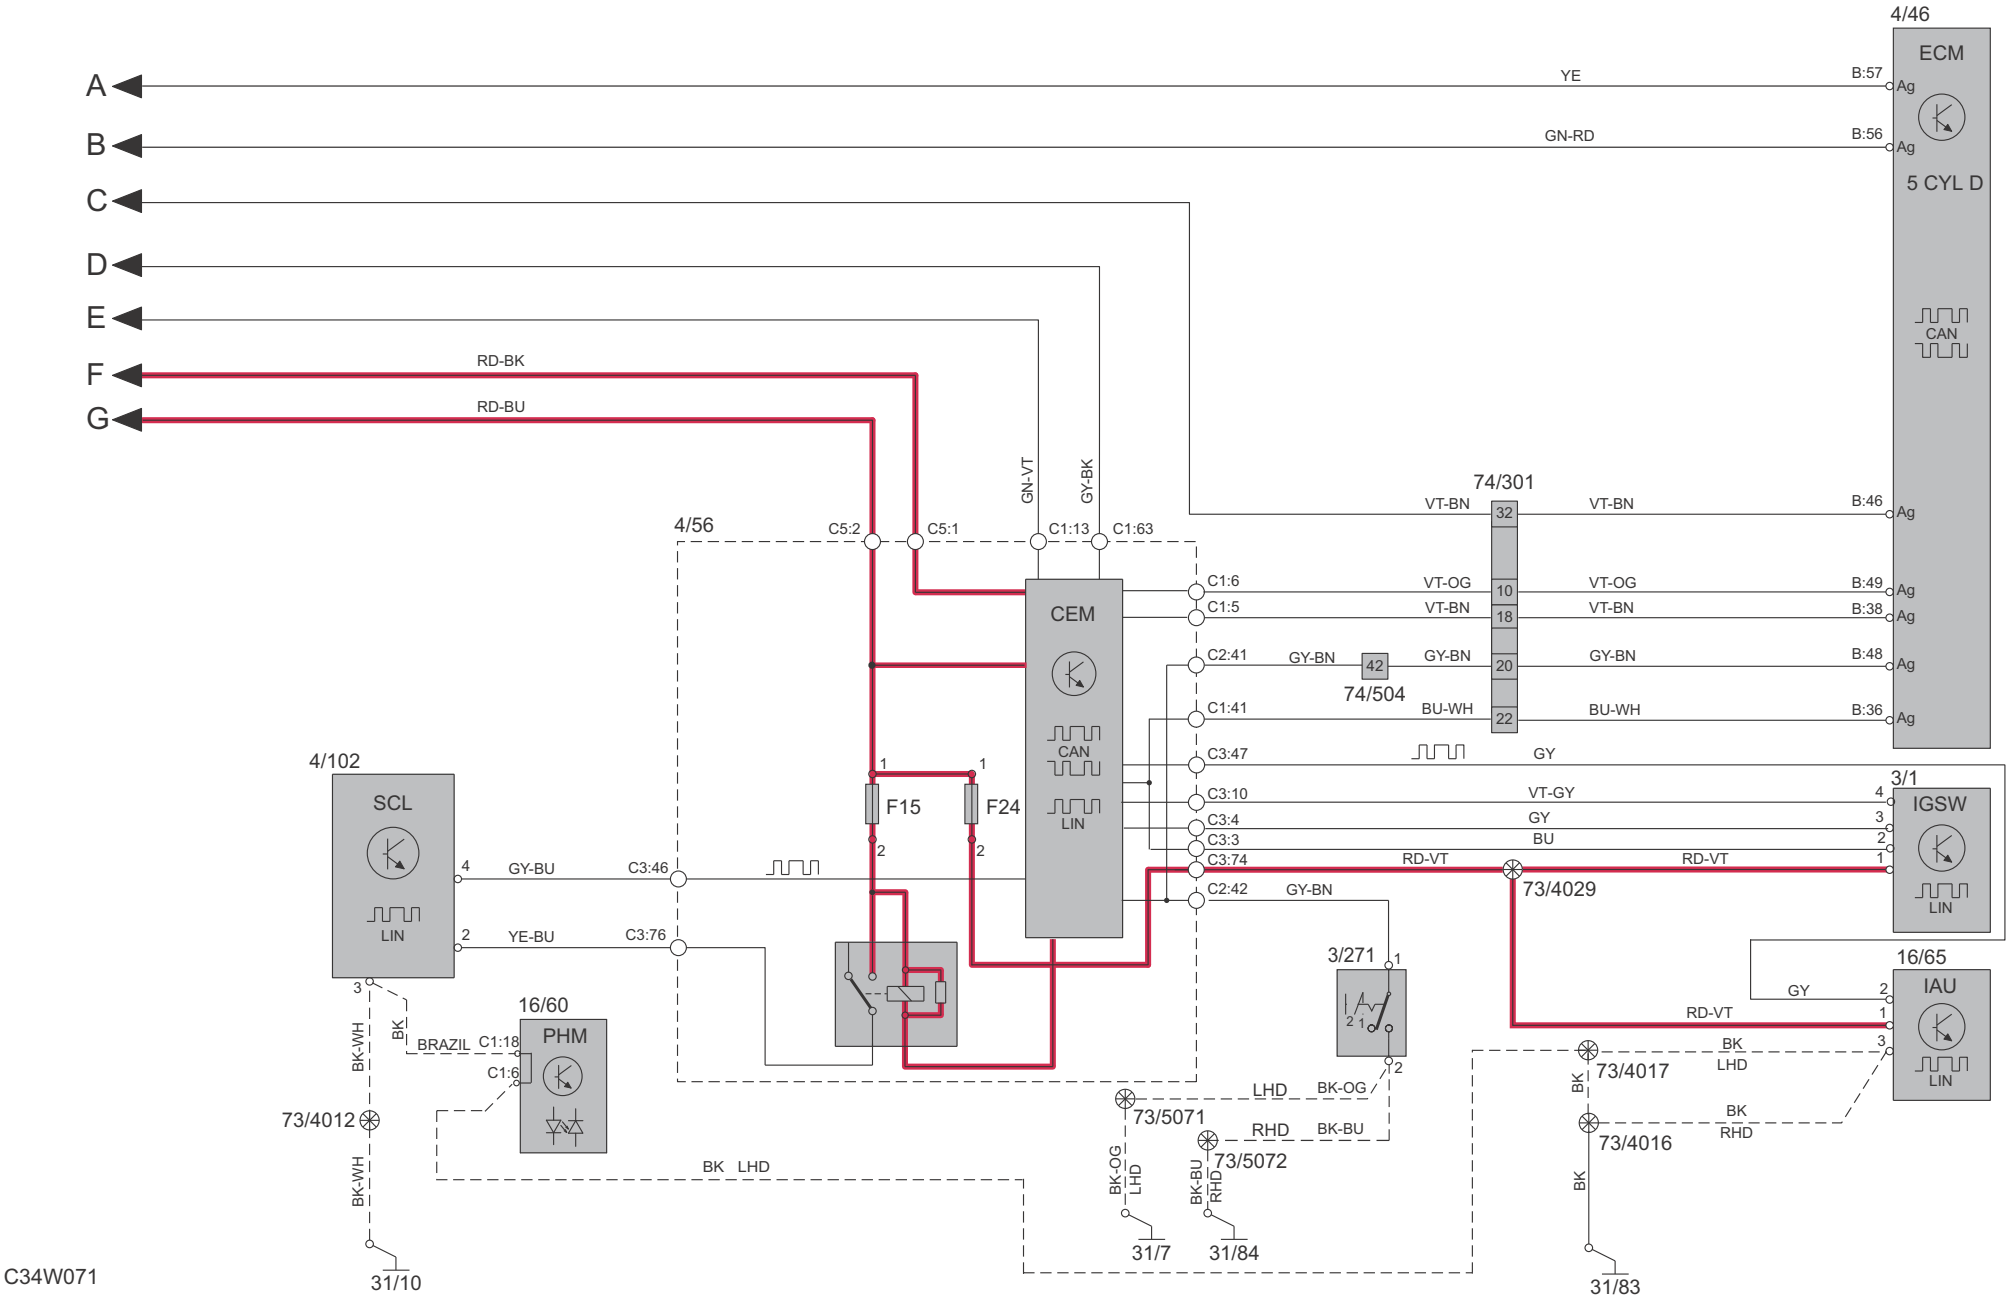

Group 35 Lighting
High and low beam, Halogen

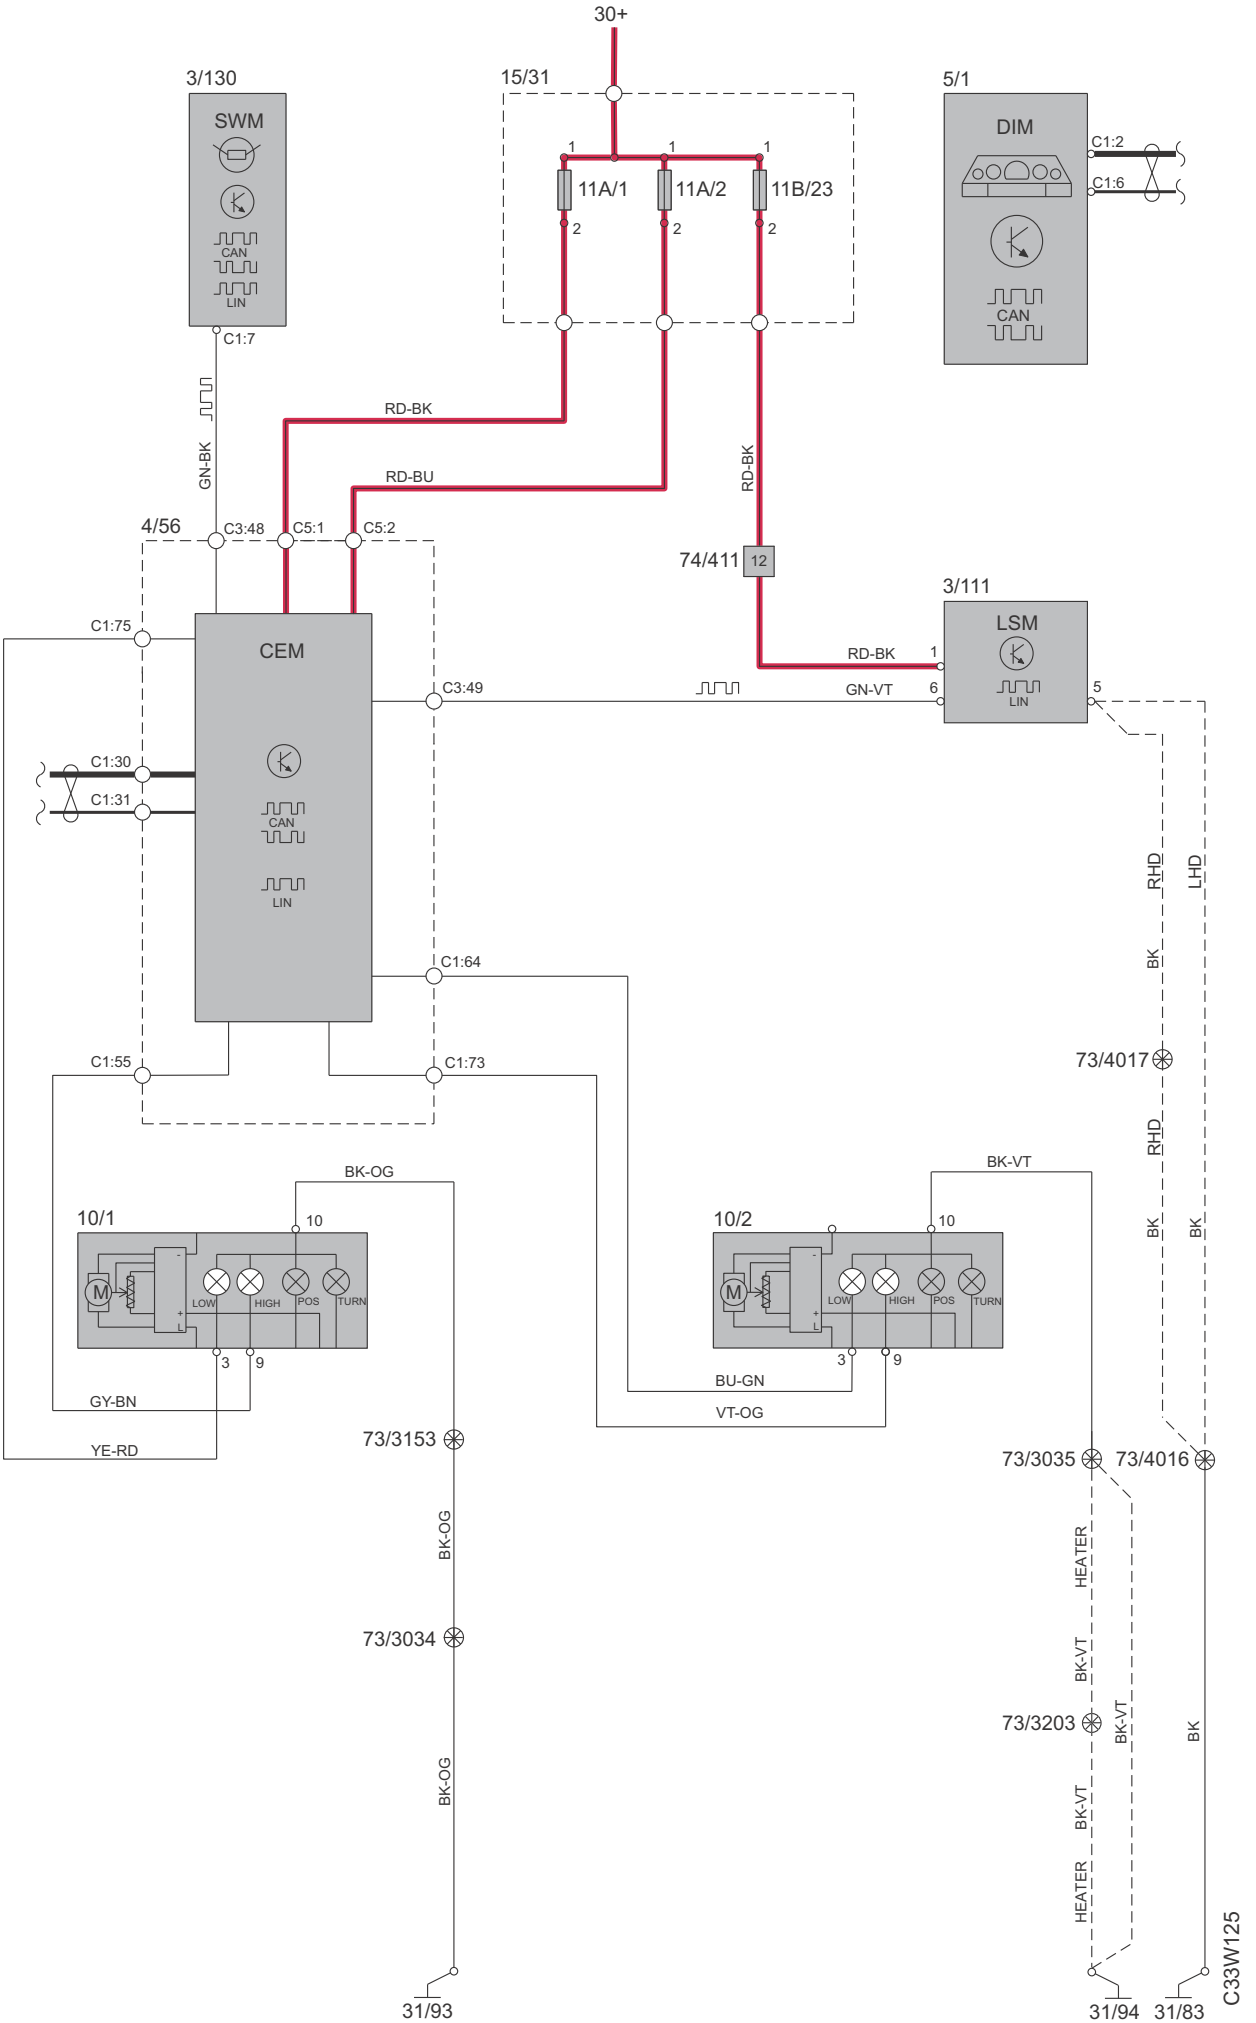

Group 35 Lighting
High and low beam, Dual Xenon

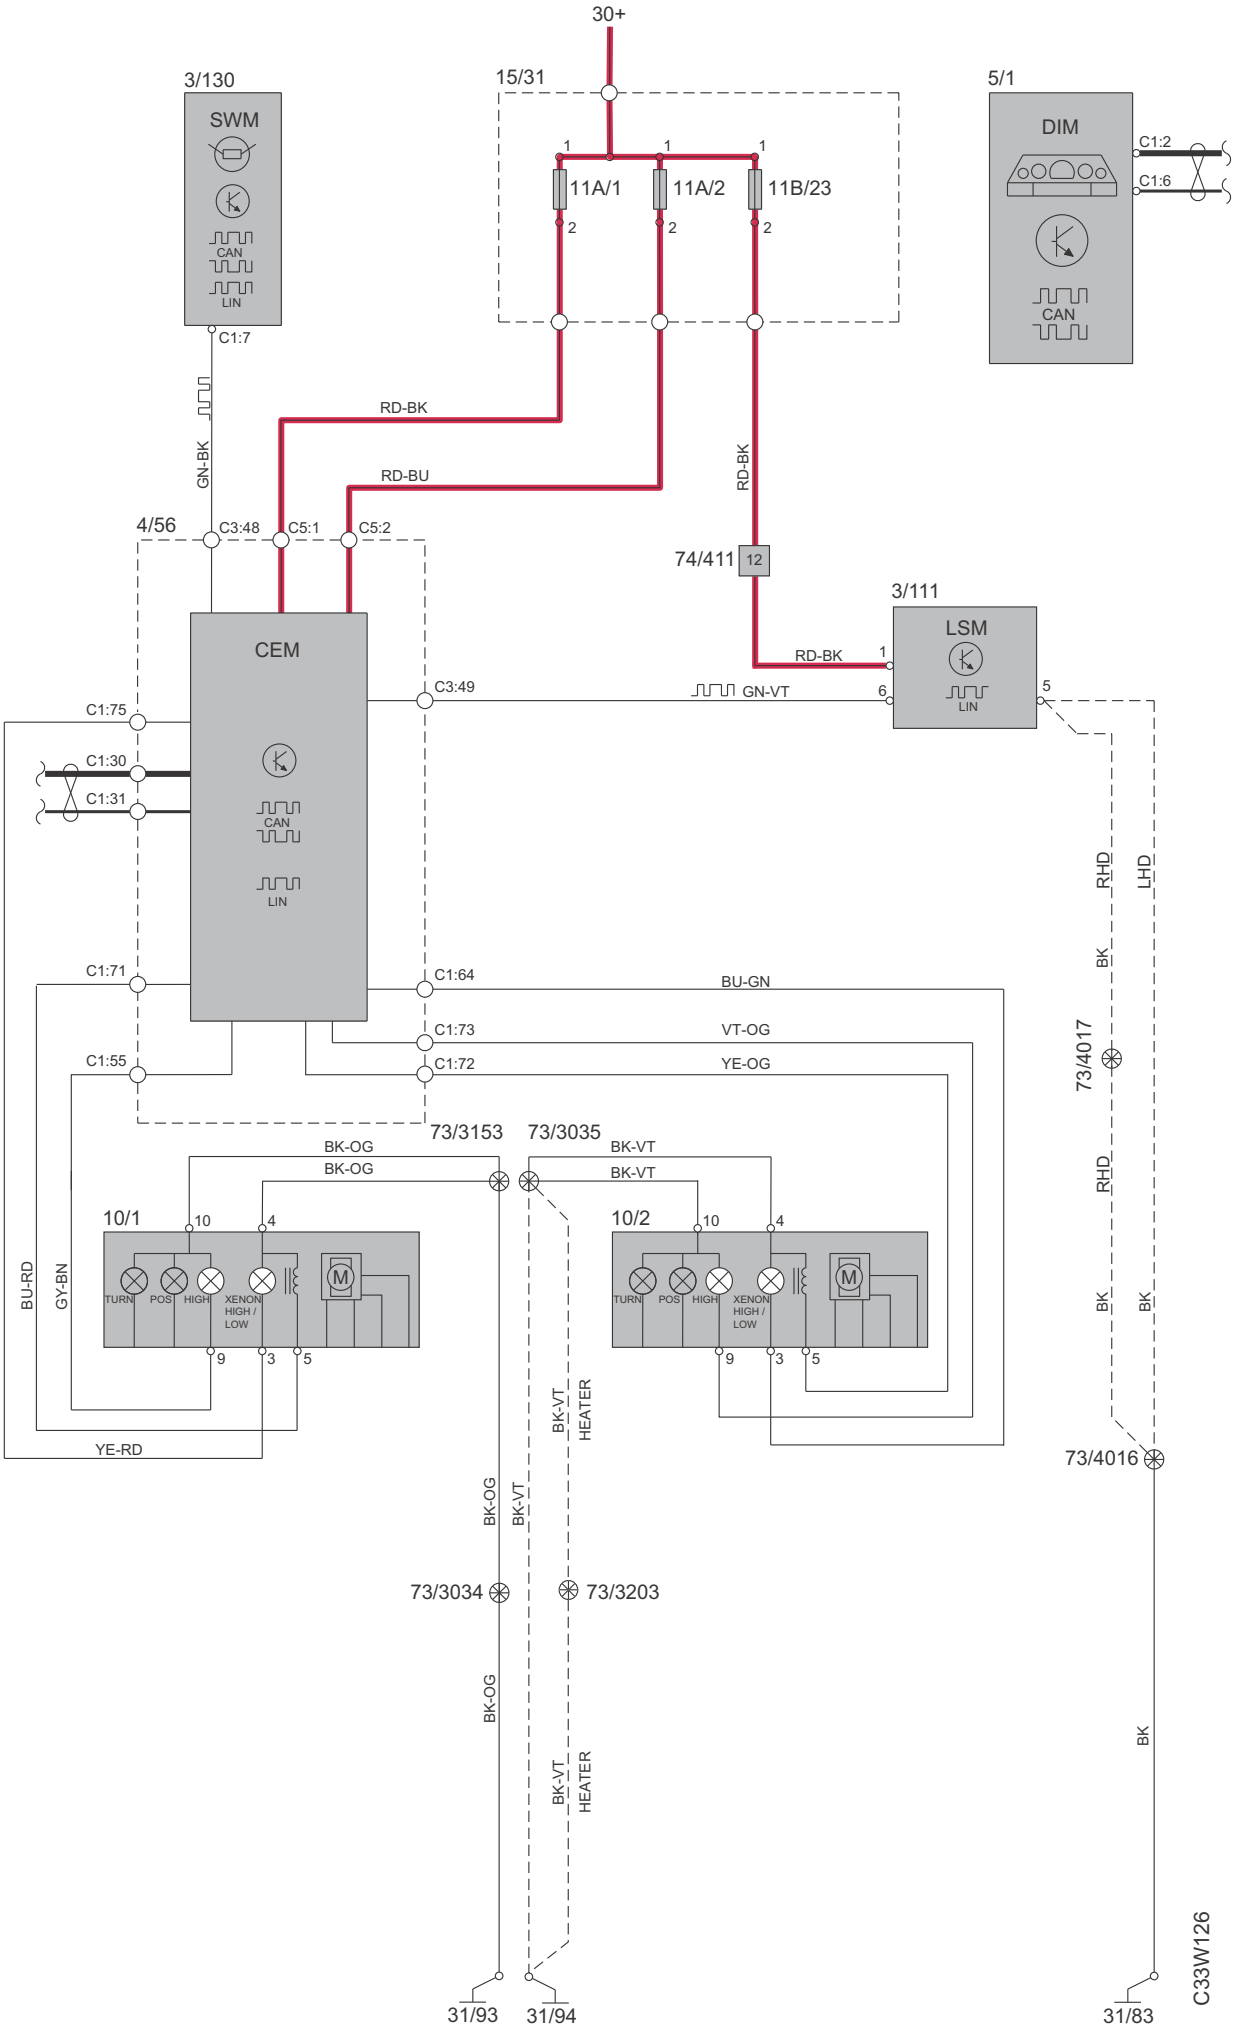

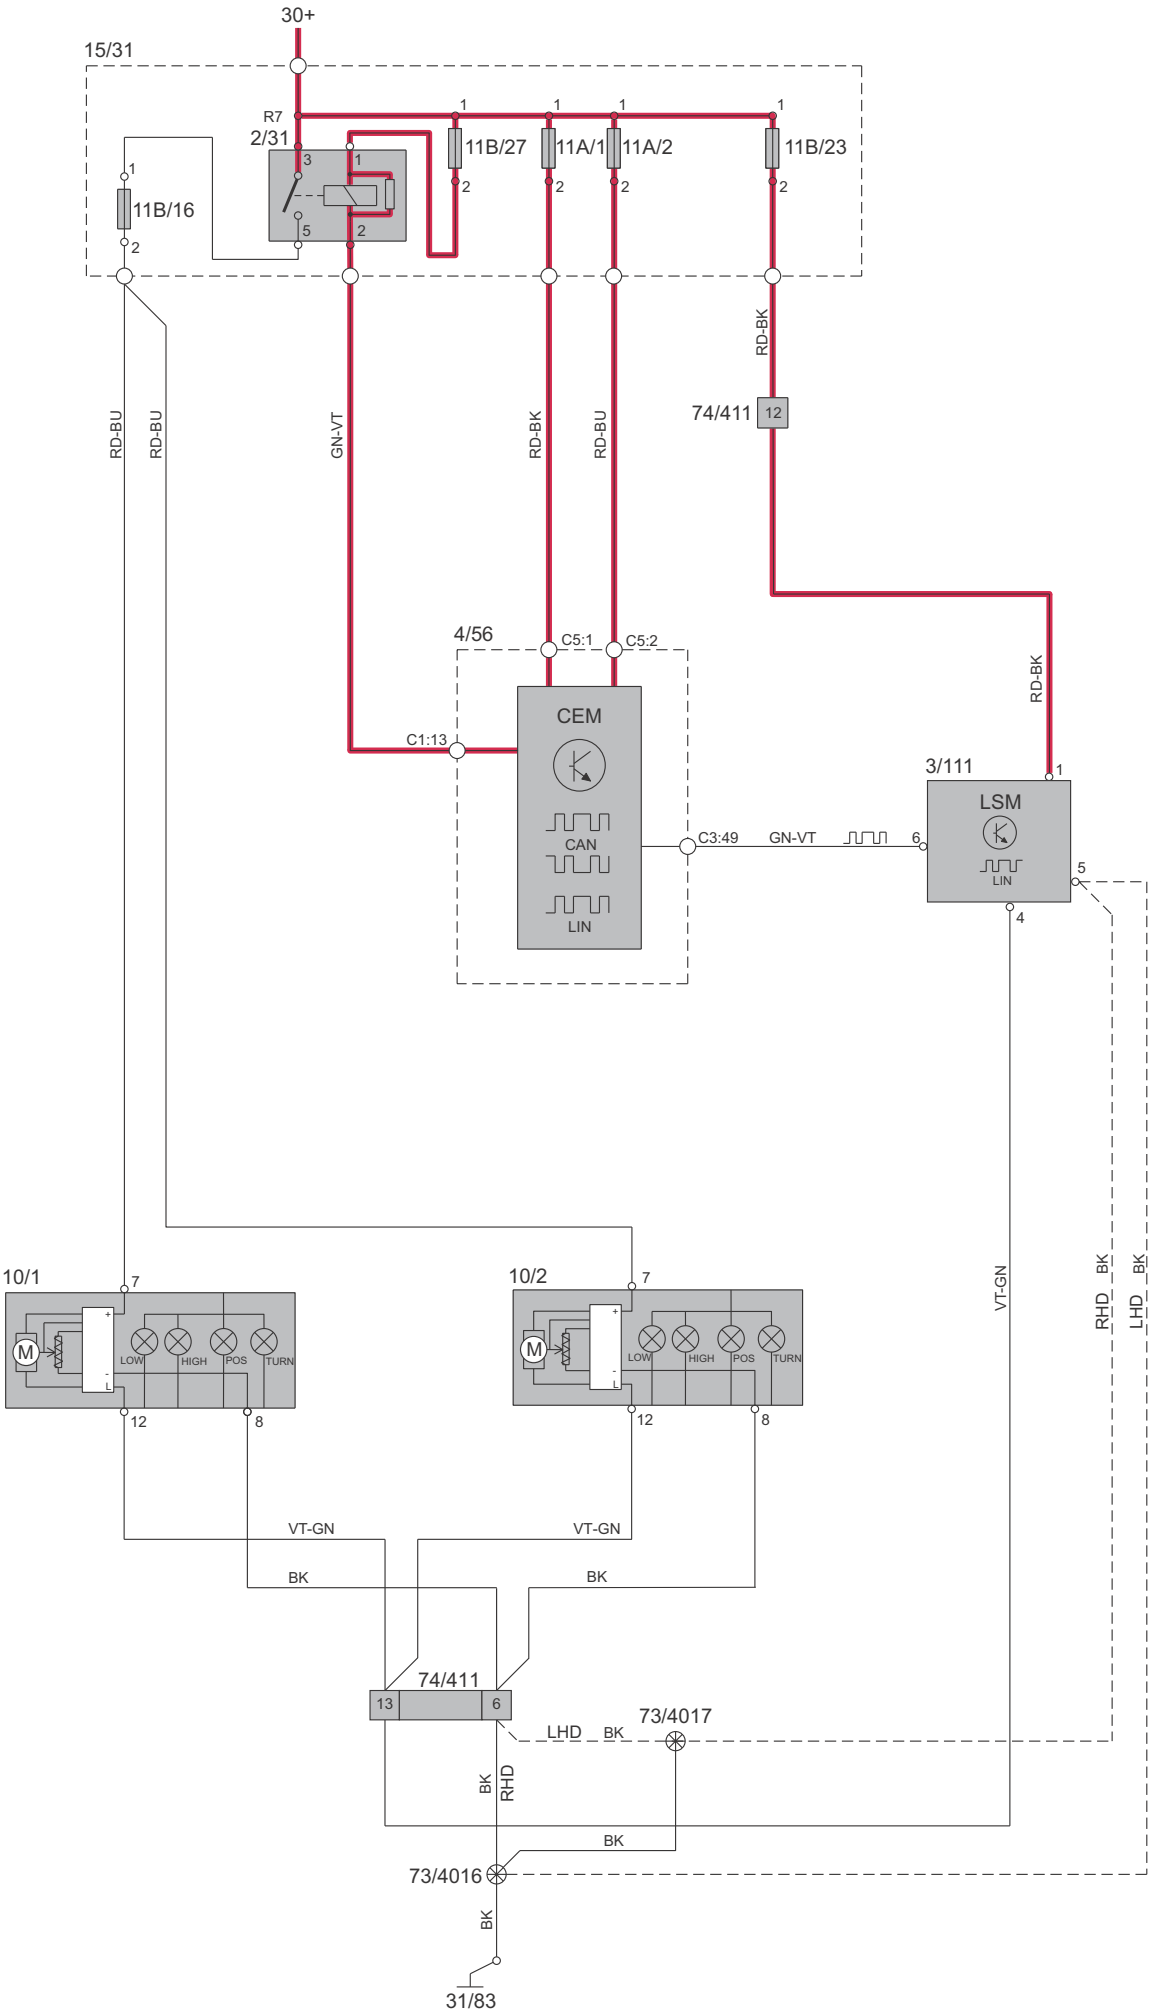
30+
15/31
R7
2/31
11B/16
11B/27
11A/1
11A/2
11B/23
RD-BU
RD-BU
GN-VT
RD-BK
RD-BU
RD-BK
74/411
12
4/56
C5:1
C5:2
CEM
C1:13
CAN
LIN
C3:49
GN-VT
3/111
LSM
LIN
RD-BK
10/1
10/2
LOW
HIGH
POS
TURN
VT-GN
VT-GN
BK
BK
74/411
13
6
73/4017
LHD
BK
BK
RHD
BK
73/4016
BK
31/83
VT-GN
RHD
BK
LHD
BK
C33W127

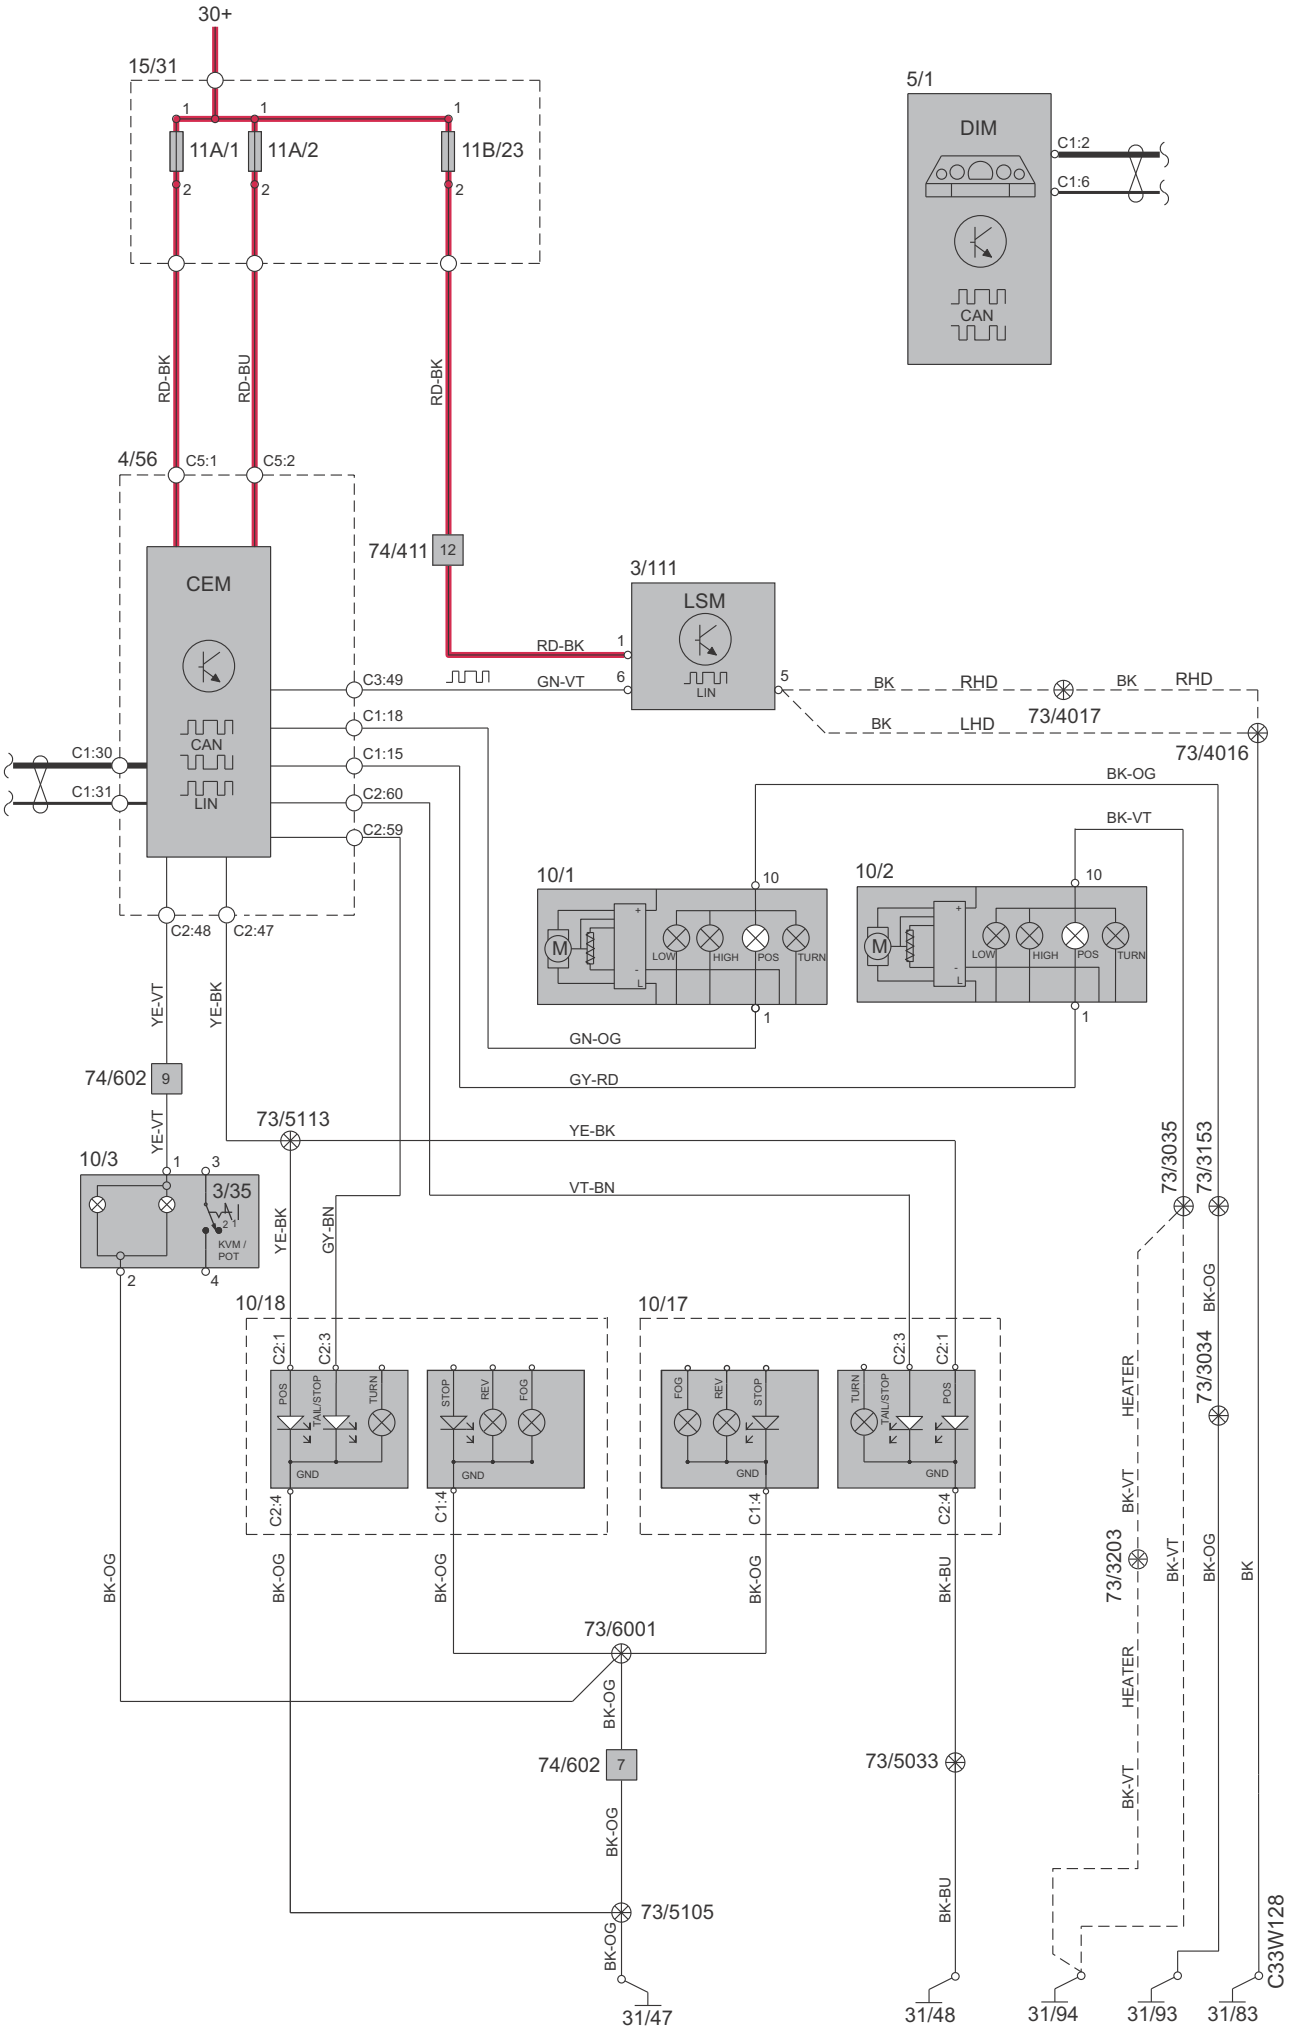
30+
15/31
11A/1
11A/2
11B/23
5/1
DIM
C1:2
C1:6
CAN
RD-BK
RD-BU
RD-BK
4/56
C5:1
C5:2
74/411
12
3/111
LSM
LIN
CEM
CAN
LIN
C1:30
C1:31
C3:49
C1:18
C1:15
C2:60
C2:59
RD-BK
GN-VT
BK
RHD
BK
RHD
BK
LHD
73/4017
73/4016
BK-OG
BK-VT
10/1
10/2
LOW
HIGH
POS
TURN
GN-OG
GY-RD
C2:48
C2:47
YE-VT
YE-BK
74/602
9
73/5113
YE-BK
VT-BN
10/3
3/35
KVM / POT
GY-BN
73/3035
73/3153
73/3034
HEATER
10/18
10/17
C2:1
C2:3
POS
TAIL/STOP
TURN
STOP
REV
FOG
GND
C2:4
C1:4
BK-OG
BK-BU
73/6001
74/602
7
73/5033
73/3203
BK-VT
BK-OG
BK
73/5105
31/47
31/48
31/94
31/93
31/83
C33W128

Group 35 Lighting
Running/Parking light, Tail lights S80

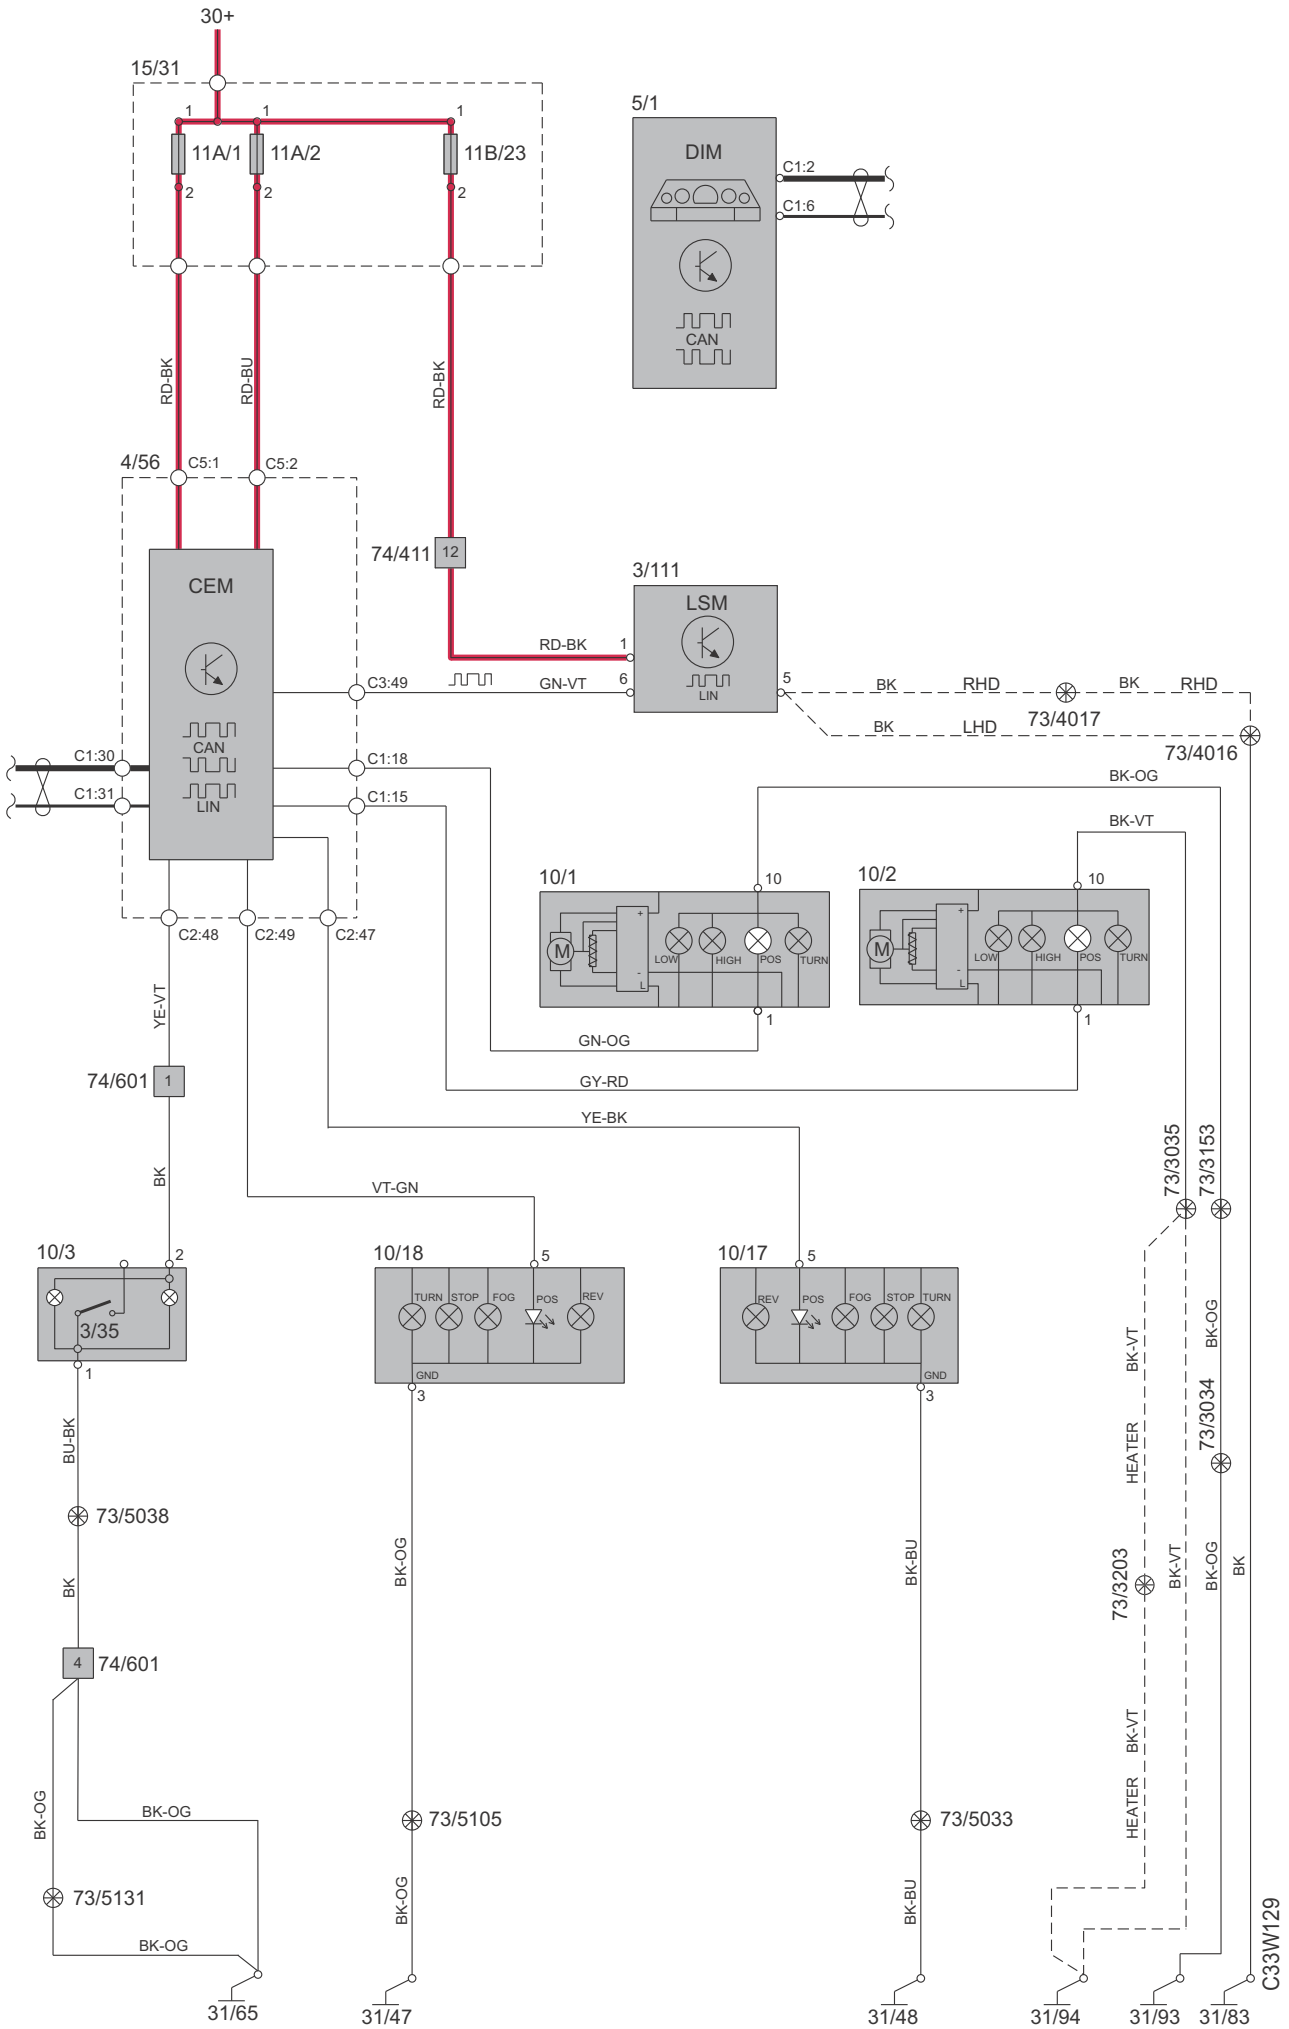

Fog/Daytime running lights V70 & XC70

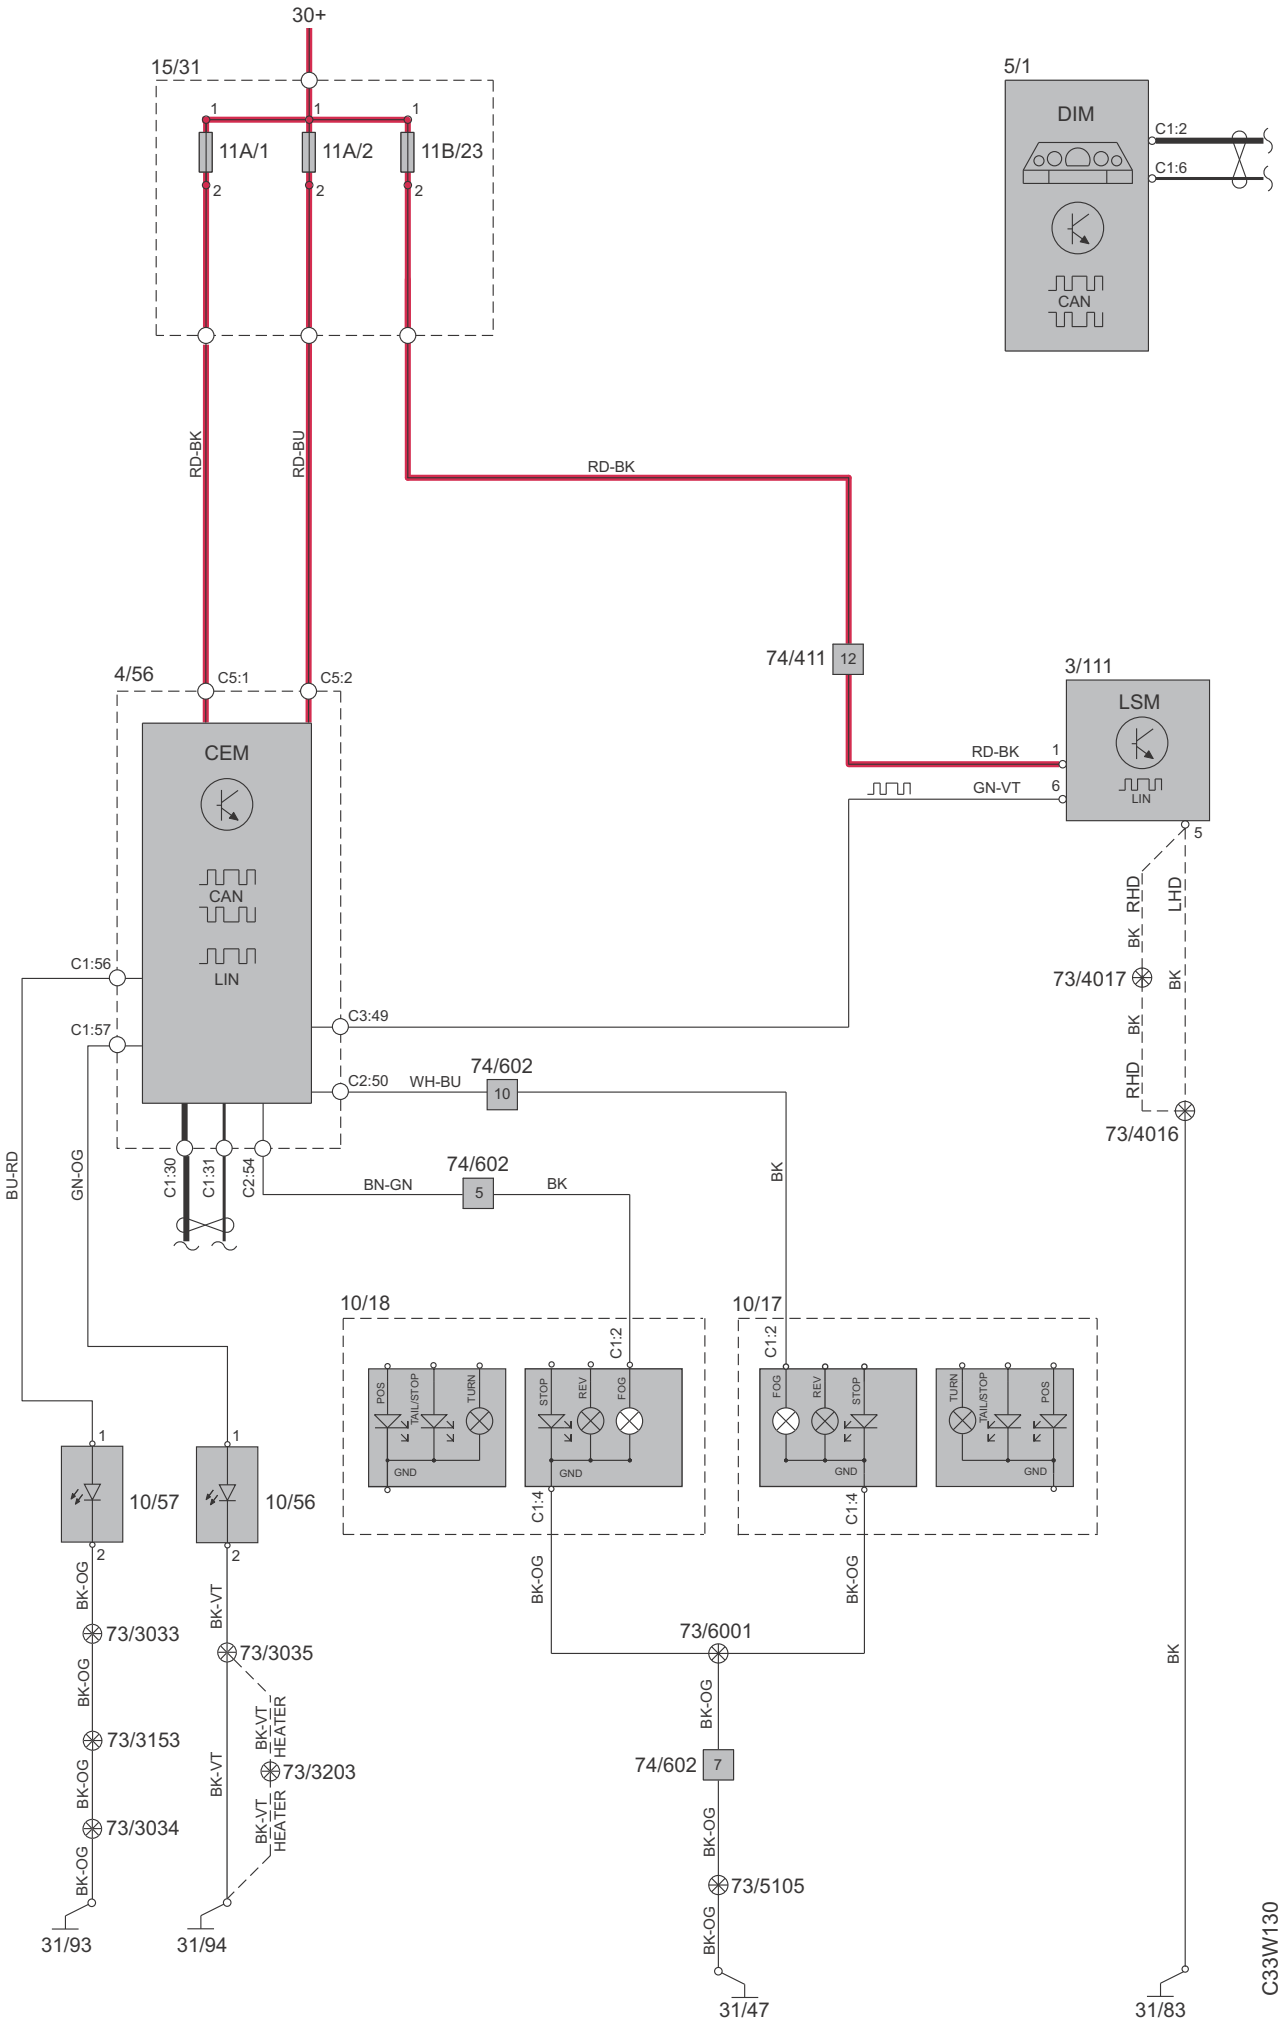

Group 35 Lighting
Fog/Daytime running lights S80

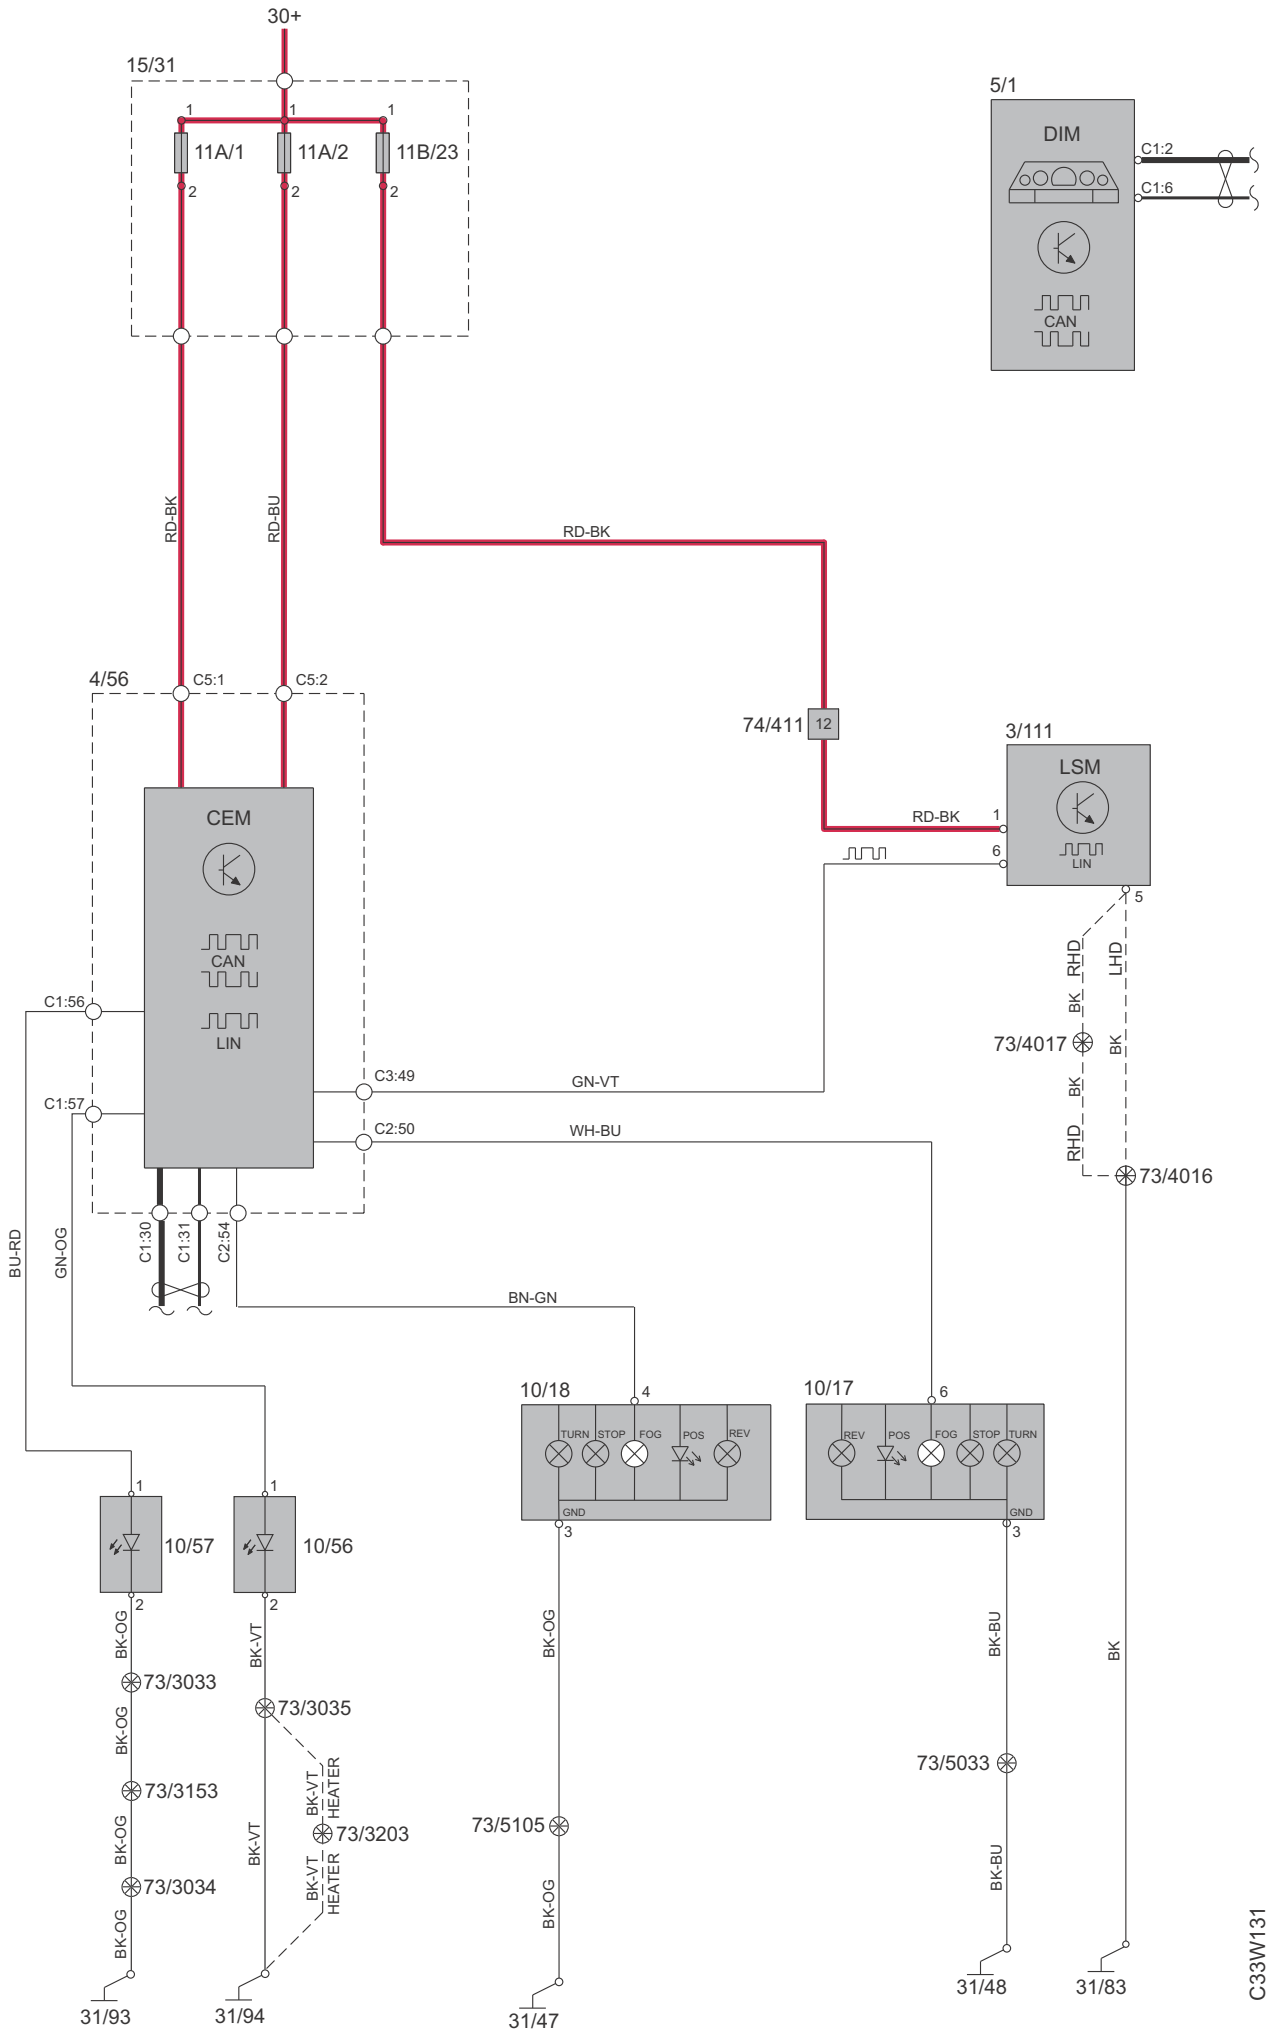

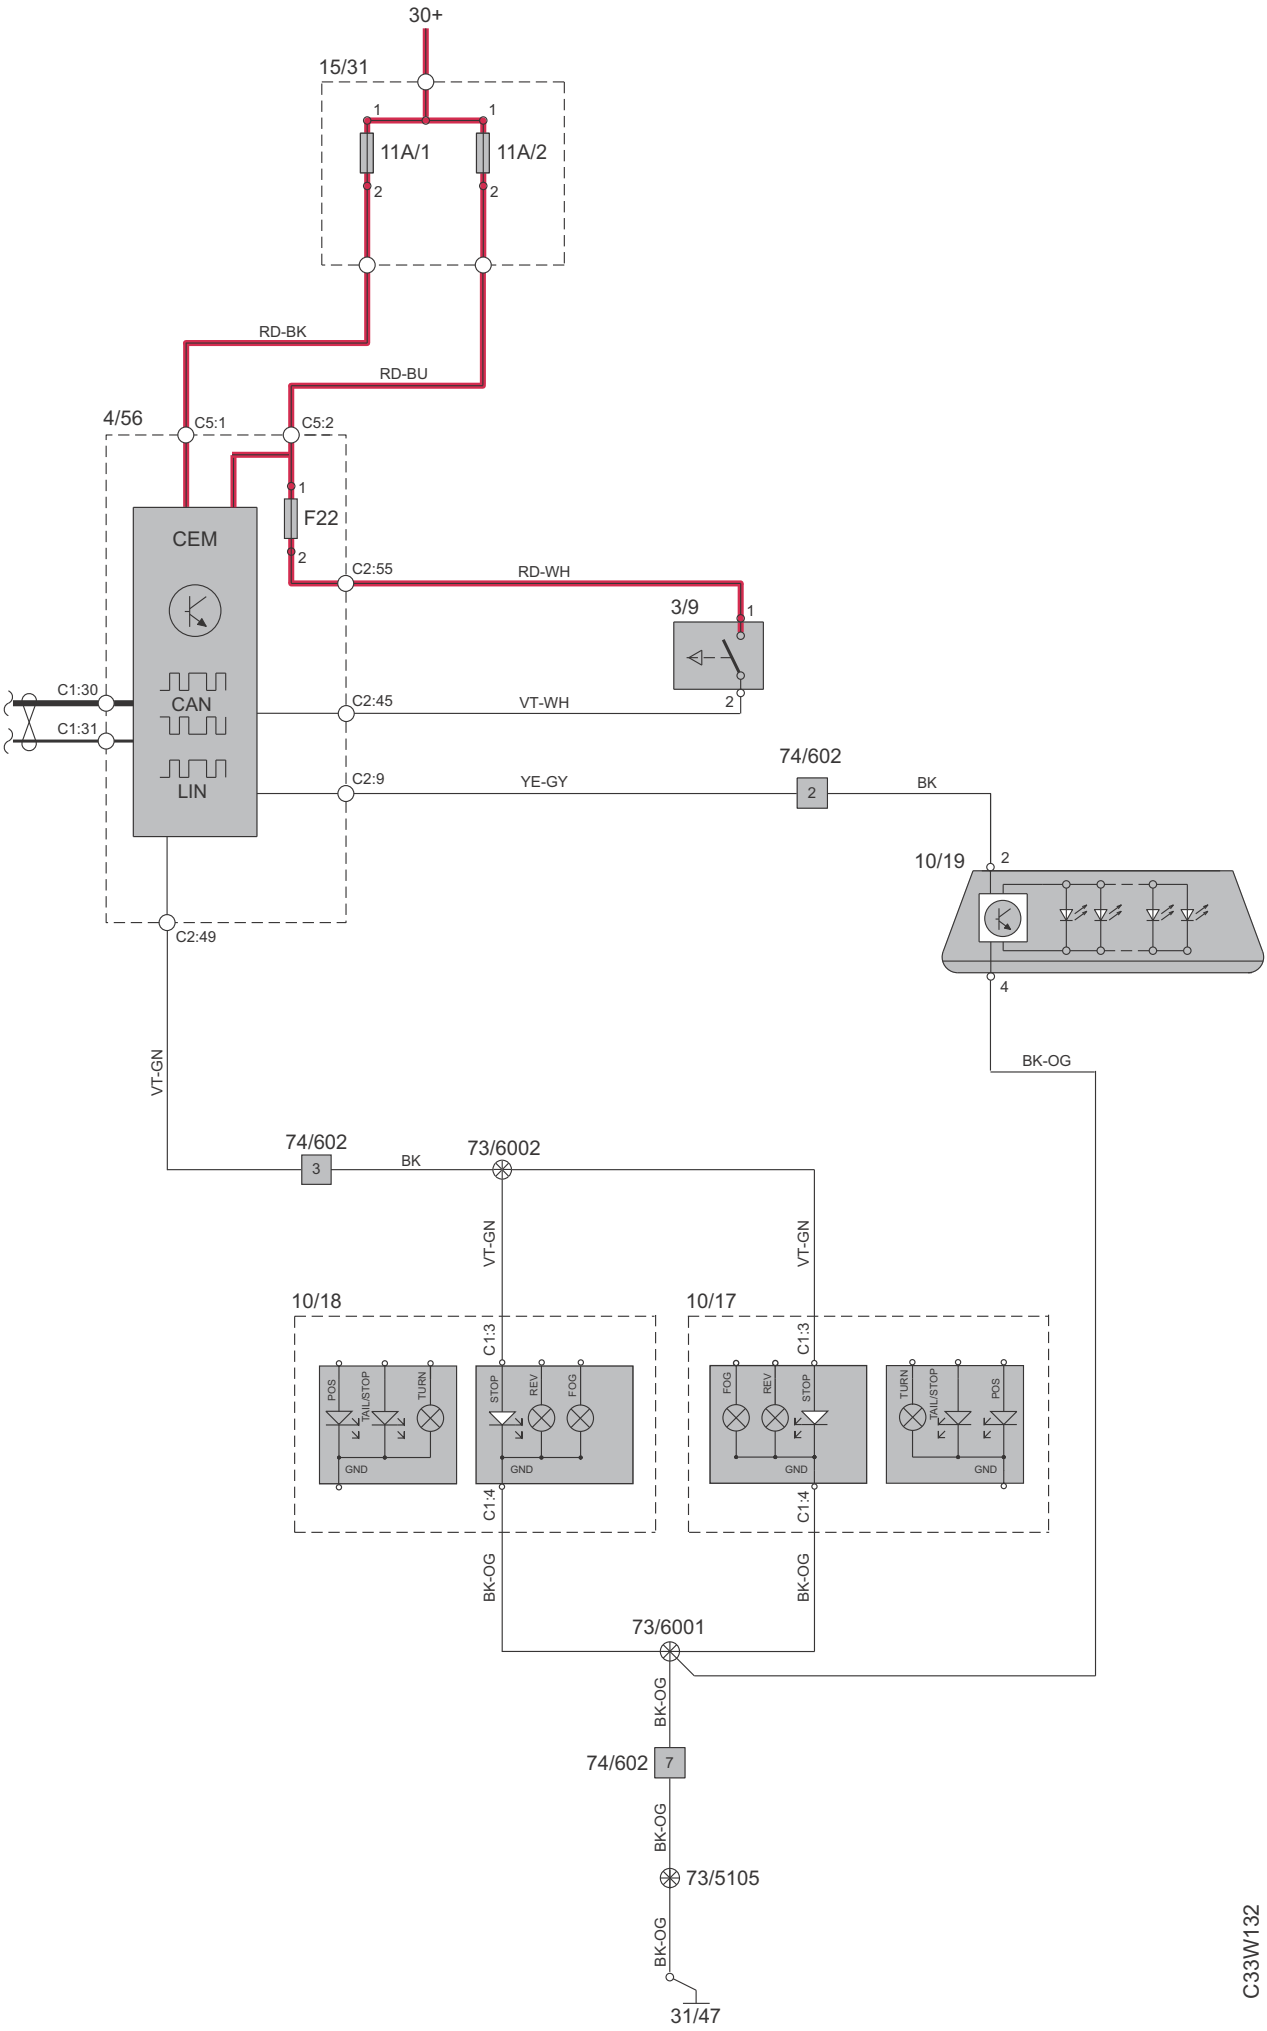
30+
15/31
1
1
11A/1
11A/2
2
2
RD-BK
RD-BU
4/56
C5:1
C5:2
1
F22
2
CEM
C2:55
RD-WH
3/9
1
2
C1:30
CAN
C1:31
C2:45
VT-WH
74/602
C2:9
YE-GY
2
BK
10/19
2
LIN
4
C2:49
BK-OG
VT-GN
74/602
3
BK
73/6002
VT-GN
VT-GN
10/18
10/17
C1:3
C1:3
POS
TAIL/STOP
TURN
STOP
REV
FOG
FOG
REV
STOP
TURN
TAIL/STOP
POS
GND
GND
GND
GND
C1:4
C1:4
BK-OG
BK-OG
73/6001
BK-OG
74/602
7
BK-OG
73/5105
BK-OG
31/47

C33W132

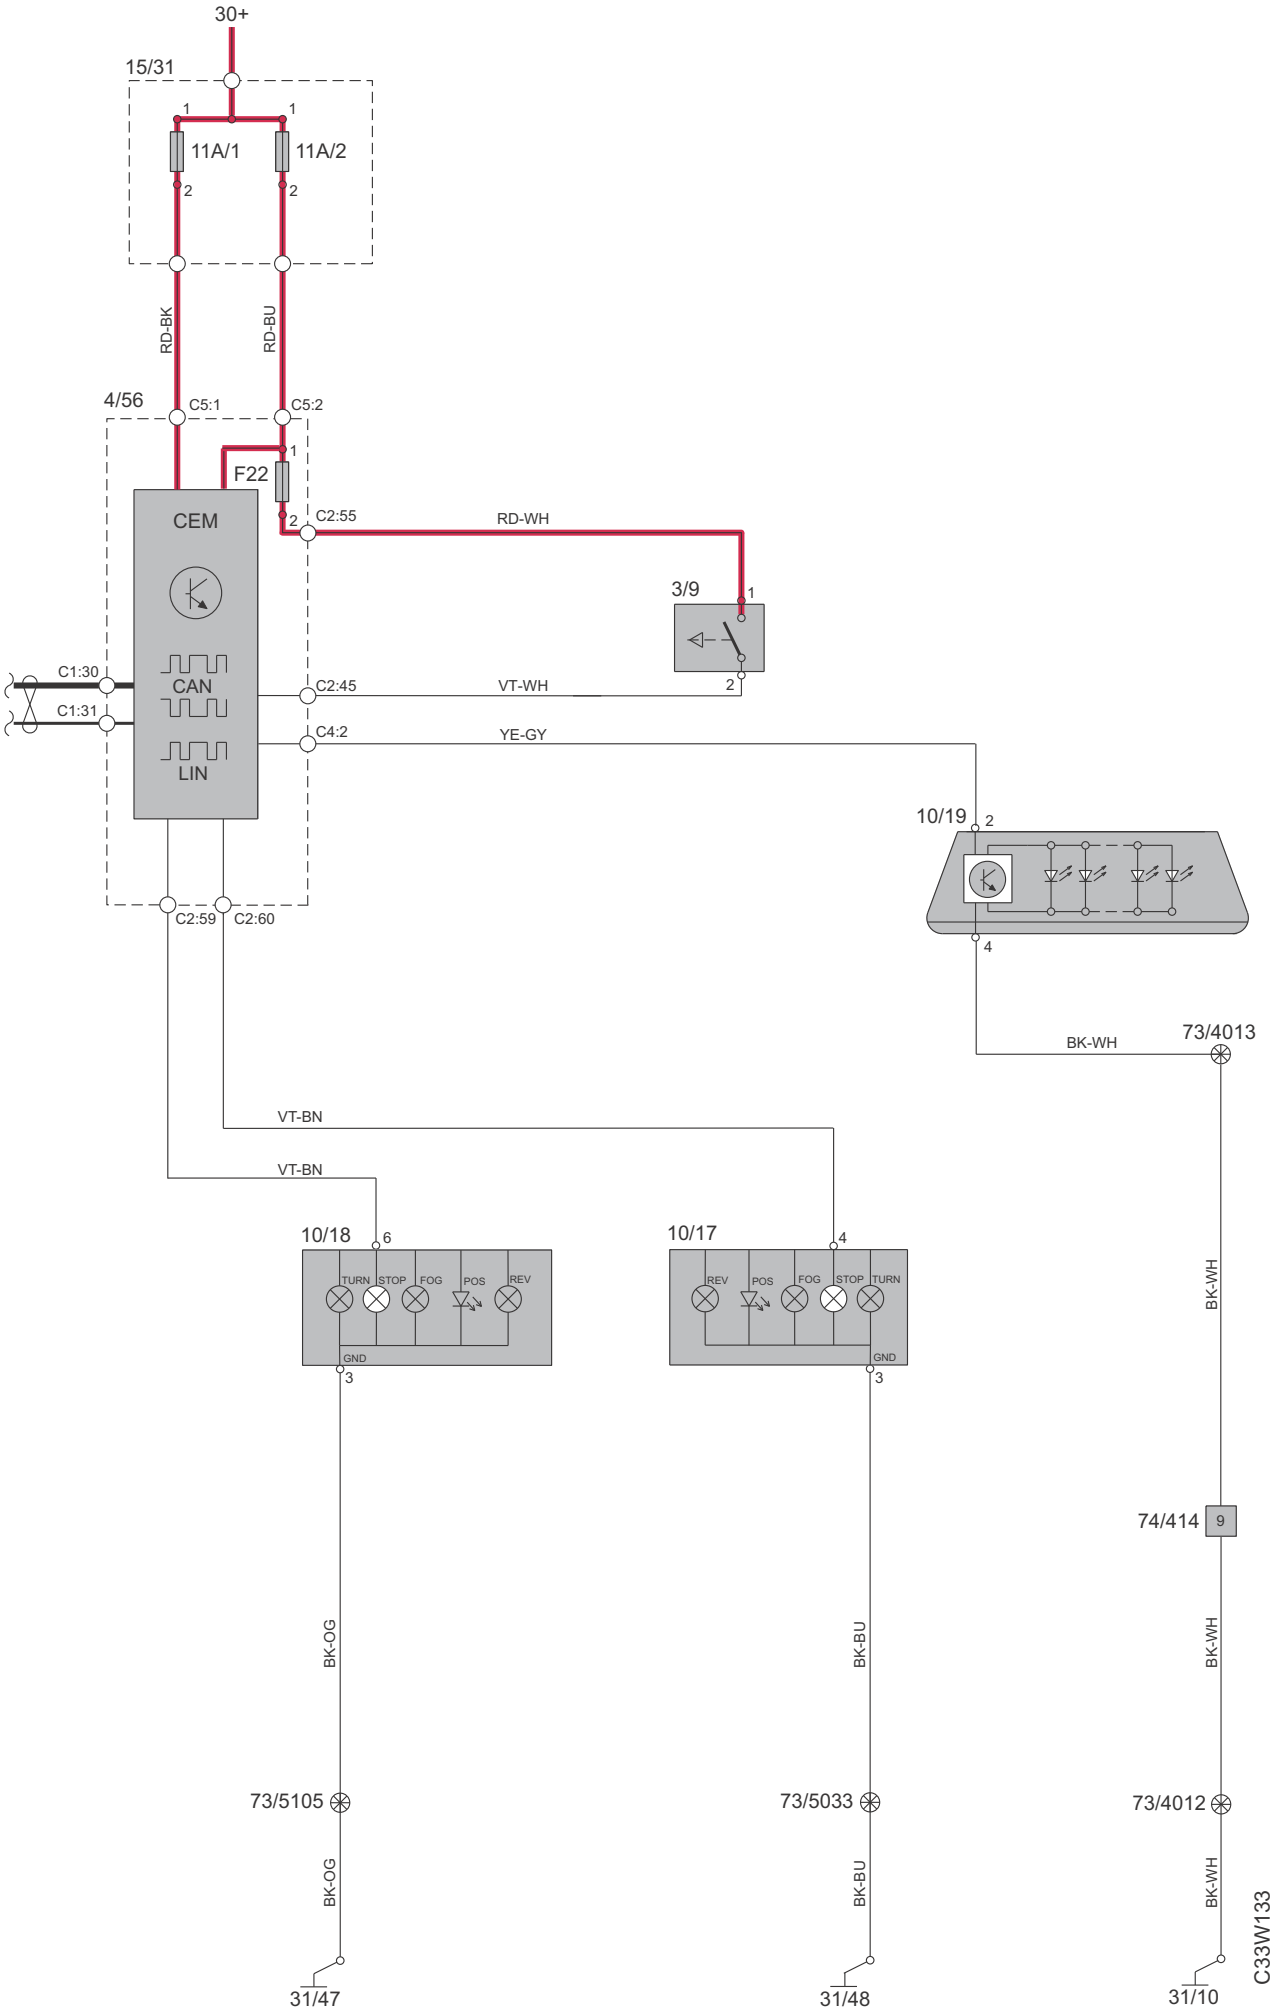
30+
15/31
1
1
11A/1
11A/2
2
2
RD-BK
RD-BU
4/56
C5:1
C5:2
1
F22
2
CEM
C2:55
RD-WH
3/9
1
2
C1:30
C1:31
CAN
LIN
C2:45
VT-WH
C4:2
YE-GY
10/19
2
4
C2:59
C2:60
BK-WH
73/4013
VT-BN
VT-BN
10/18
6
TURN
STOP
FOG
POS
REV
GND
3
10/17
4
REV
POS
FOG
STOP
TURN
GND
3
BK-WH
74/414
9
BK-WH
BK-OG
BK-BU
73/5105
73/5033
73/4012
BK-OG
BK-BU
BK-WH
31/47
31/48
31/10
C33W133

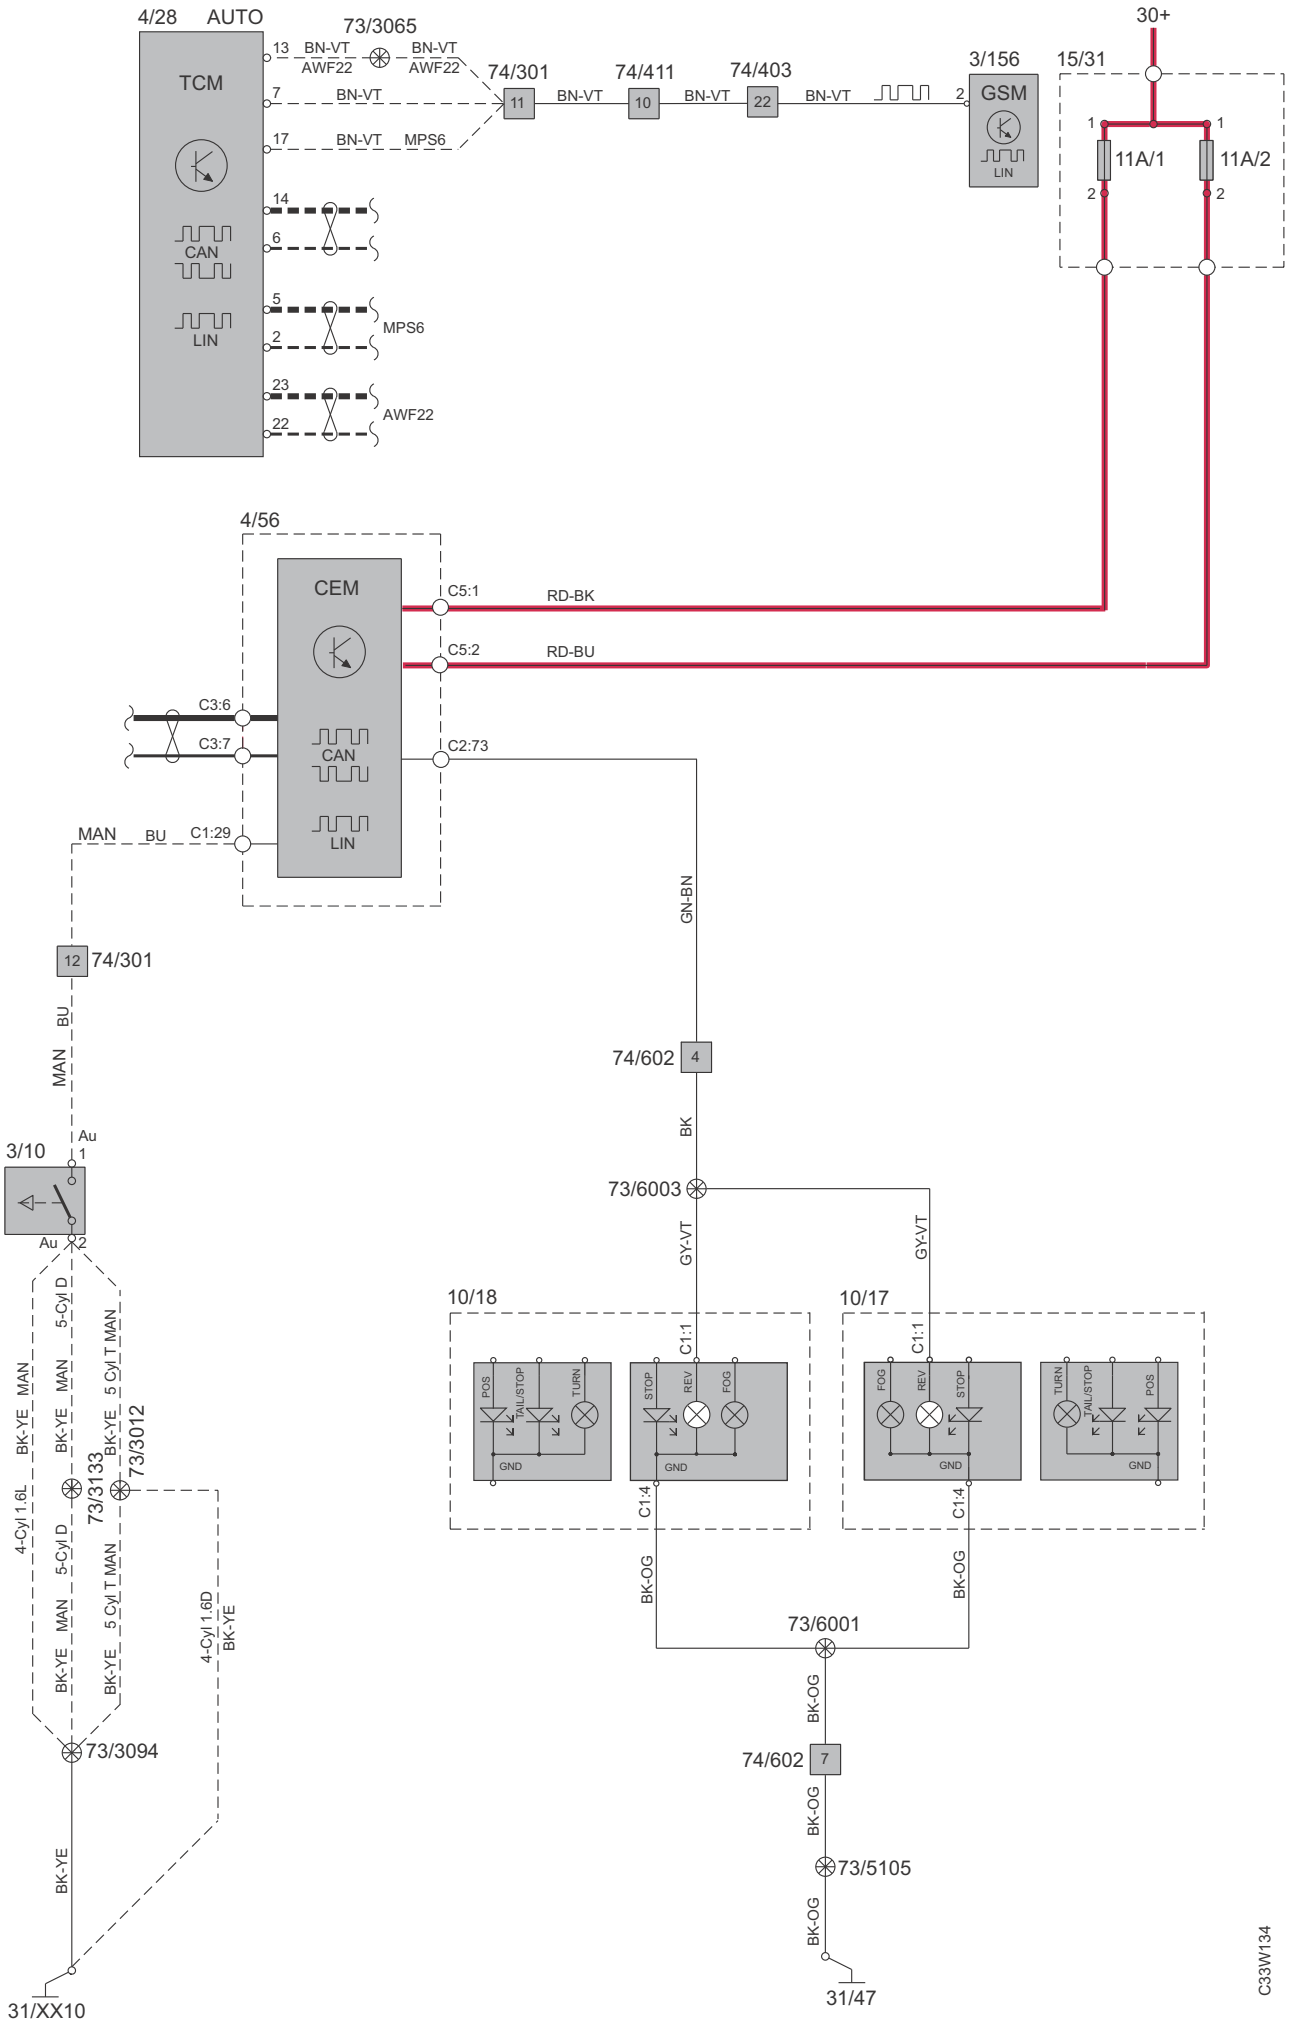
4/28 AUTO
TCM
CAN
LIN
73/3065
13 BN-VT AWF22
7 BN-VT
17 BN-VT MPS6
14
6
5
2
MPS6
23
22
AWF22
74/301
11 BN-VT
74/411
10 BN-VT
74/403
22 BN-VT
3/156
GSM
LIN
2
30+
15/31
1
11A/1
2
1
11A/2
2
4/56
CEM
CAN
LIN
C5:1 RD-BK
C5:2 RD-BU
C3:6
C3:7
C2:73
MAN BU C1:29
GN-BN
12 74/301
BU
MAN
3/10
Au
1
Au
2
74/602 4
BK
73/6003
GY-VT
GY-VT
10/18
10/17
C1:1
C1:1
POS
TAIL/STOP
TURN
STOP
REV
FOG
GND
C1:4
C1:4
BK-OG
BK-OG
73/6001
BK-OG
74/602 7
BK-OG
73/5105
BK-OG
31/47
5-Cyl D
MAN
BK-YE
5 Cyl T MAN
BK-YE
73/3012
73/3133
4-Cyl 1.6L
4-Cyl 1.6D
73/3094
BK-YE
31/XX10
C33W134

Reversing lights S80

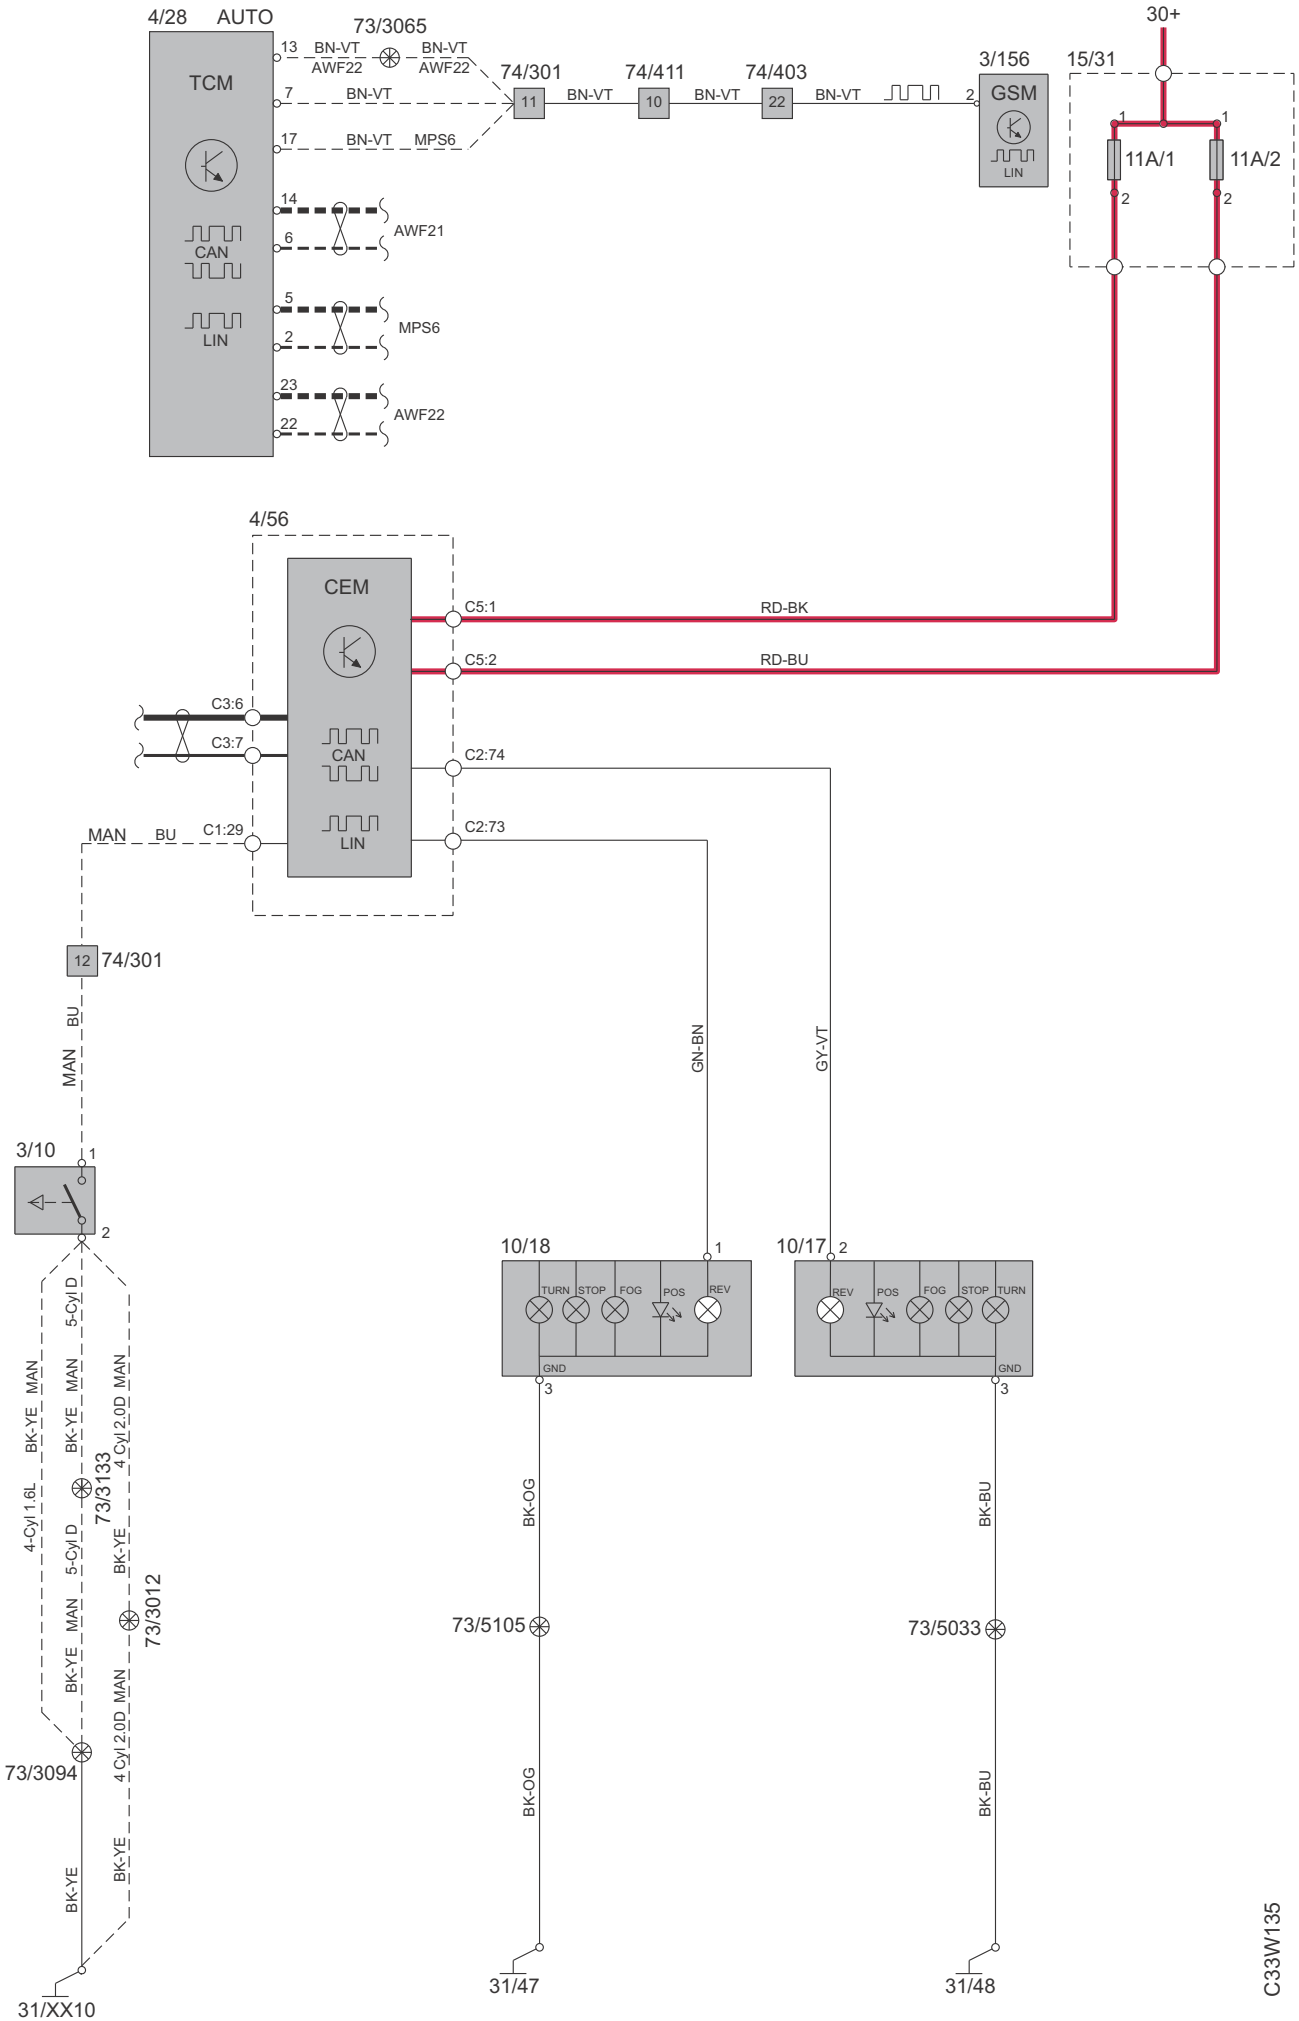

Follow-me-home lighting LHD

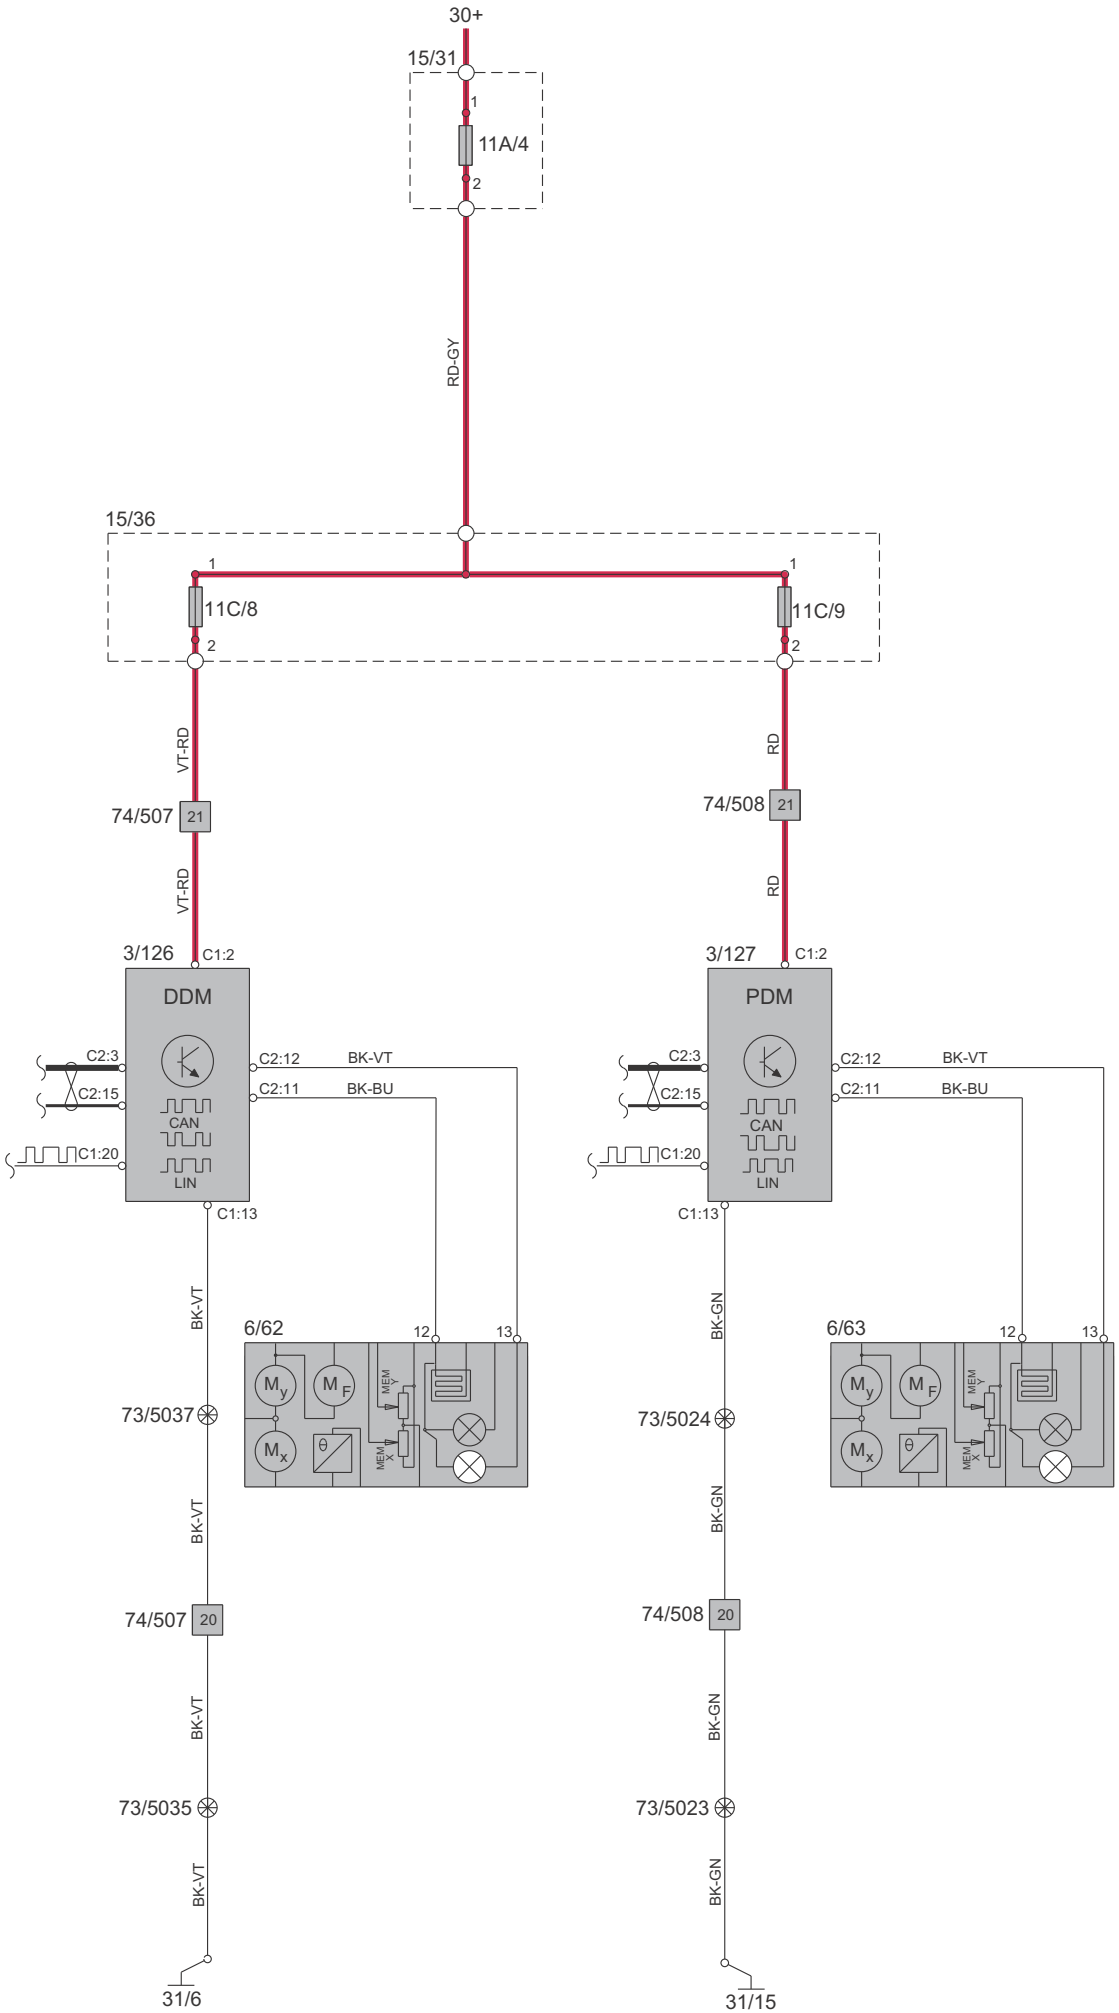

Follow-me-home lighting RHD

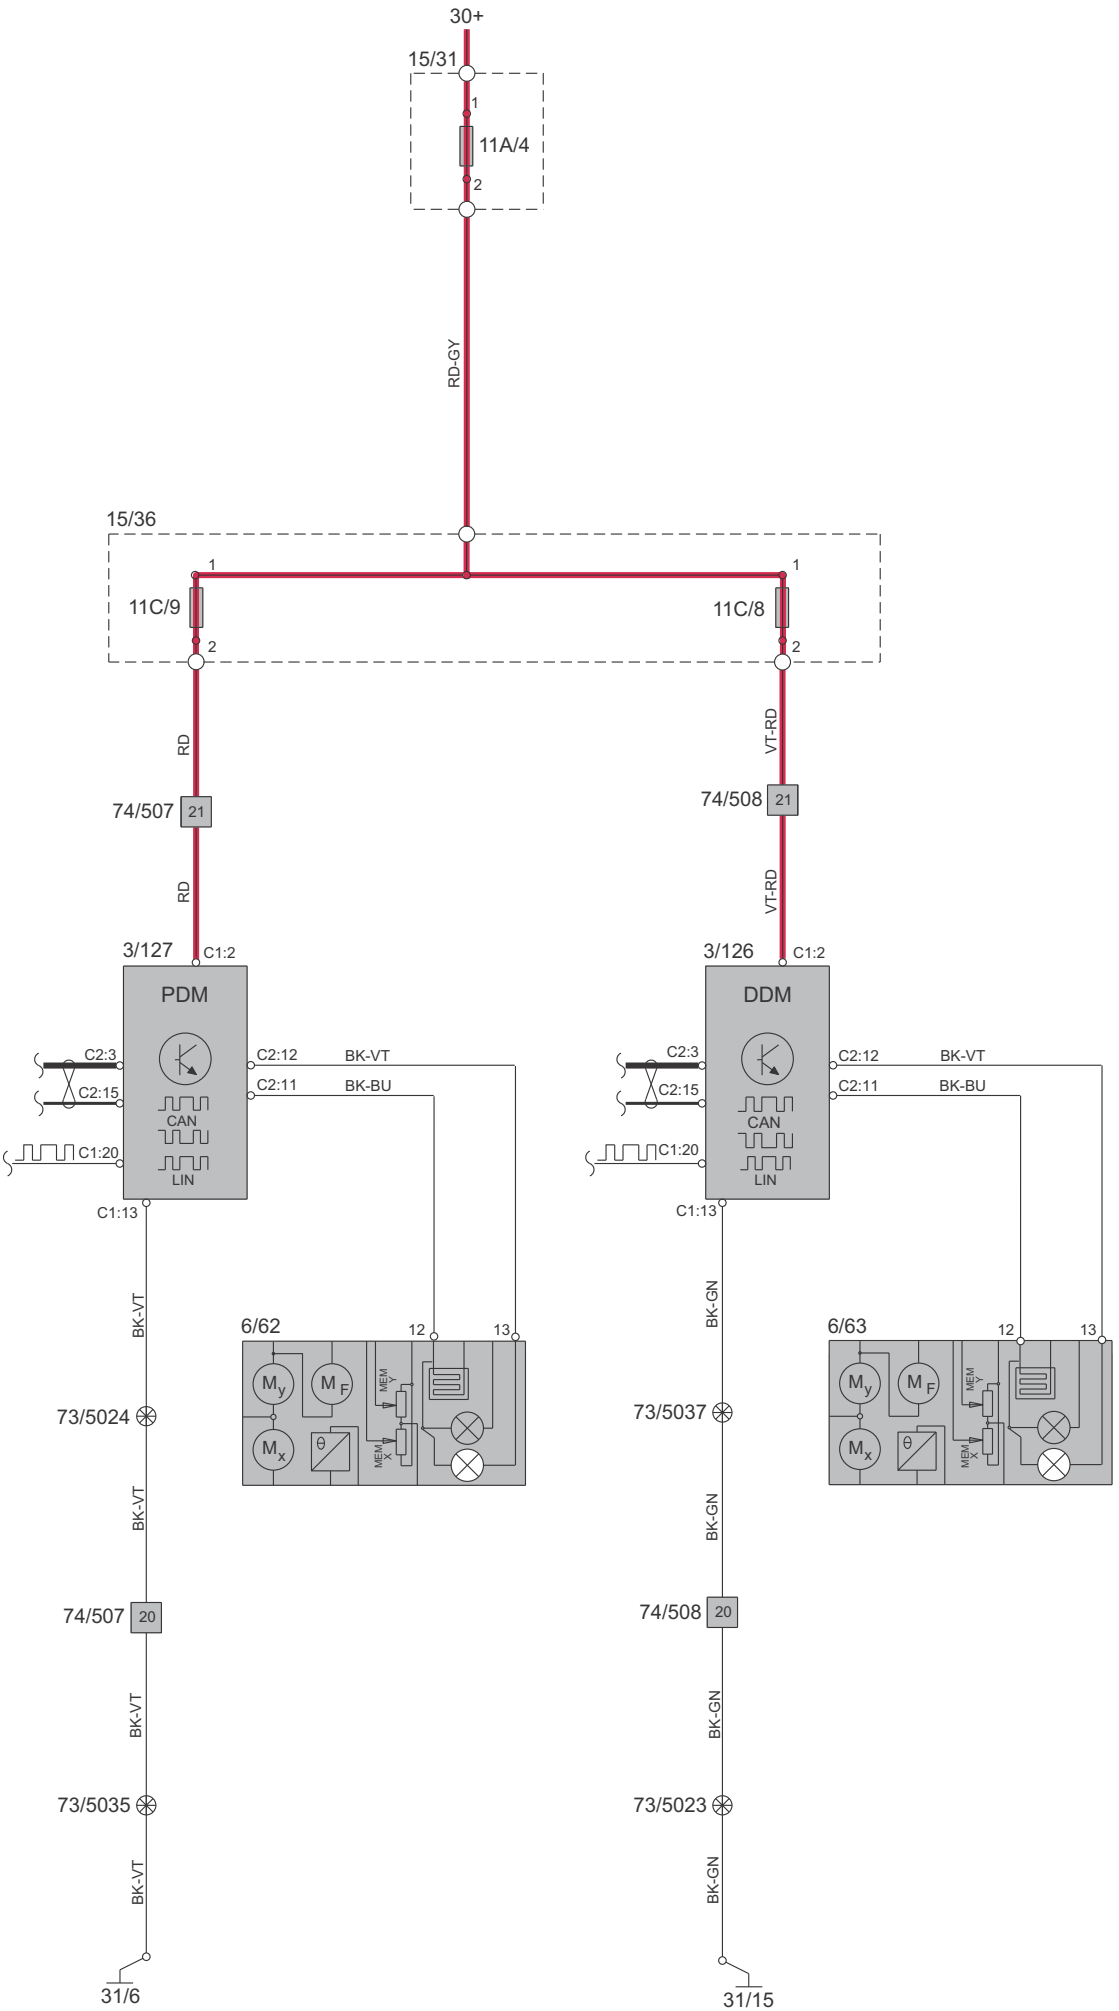

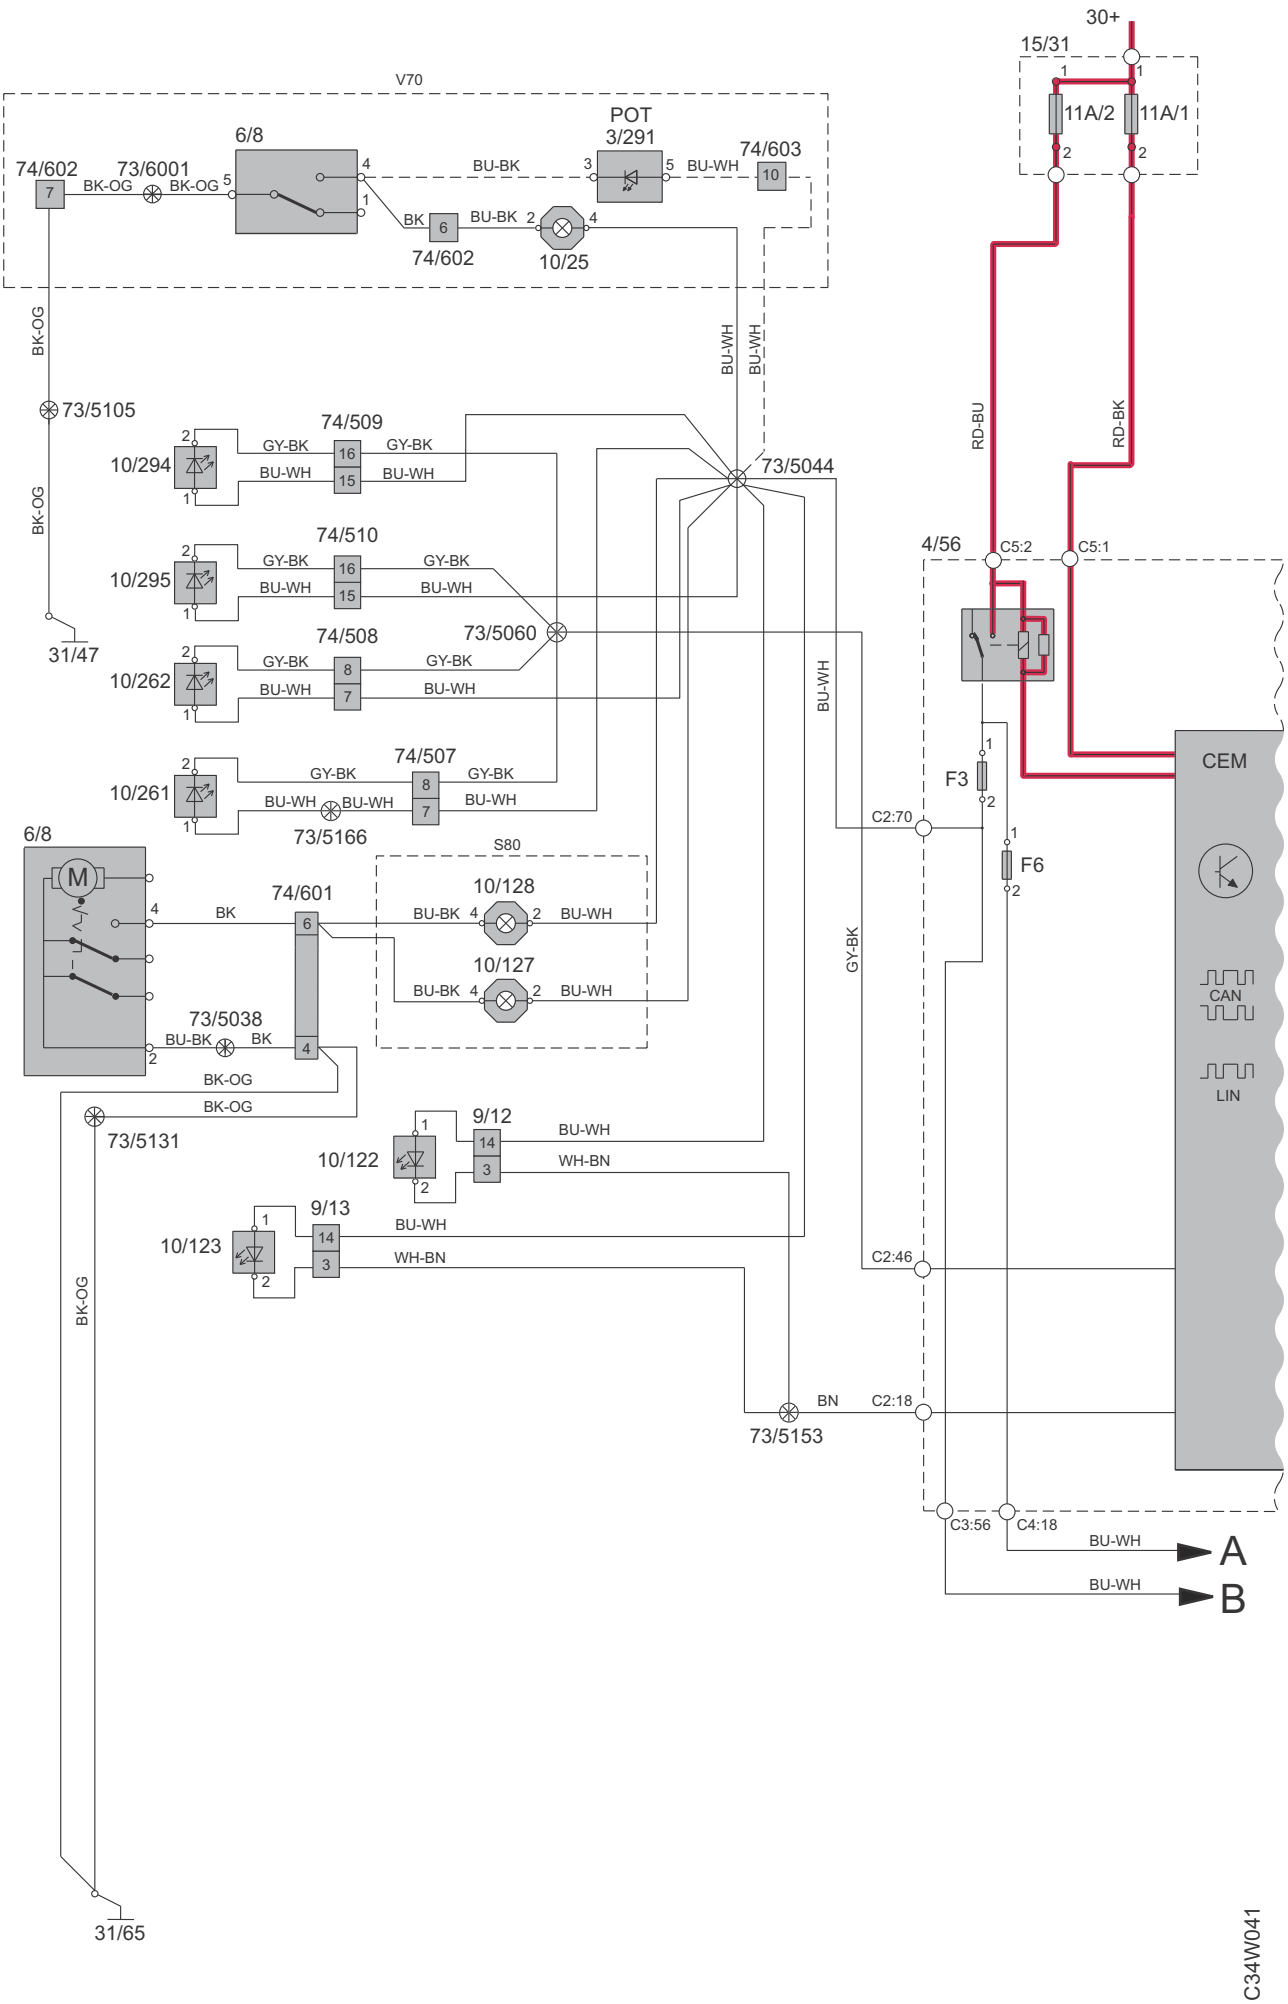
30+
15/31
11A/2
11A/1
V70
POT
3/291
6/8
74/602
73/6001
BK-OG
BU-BK
BU-WH
74/603
BK
74/602
10/25
BK-OG
73/5105
BK-OG
31/47
BU-WH
BU-WH
RD-BU
RD-BK
73/5044
74/509
10/294
GY-BK
BU-WH
74/510
10/295
74/508
73/5060
10/262
74/507
10/261
73/5166
4/56
C5:2
C5:1
CEM
F3
F6
C2:70
BU-WH
GY-BK
6/8
M
74/601
BK
S80
10/128
10/127
73/5038
BU-BK
BK
BK-OG
BK-OG
73/5131
9/12
10/122
WH-BN
9/13
10/123
BU-WH
WH-BN
BK-OG
31/65
C2:46
BN
C2:18
73/5153
CAN
LIN
C3:56
C4:18
BU-WH
A
BU-WH
B
C34W041

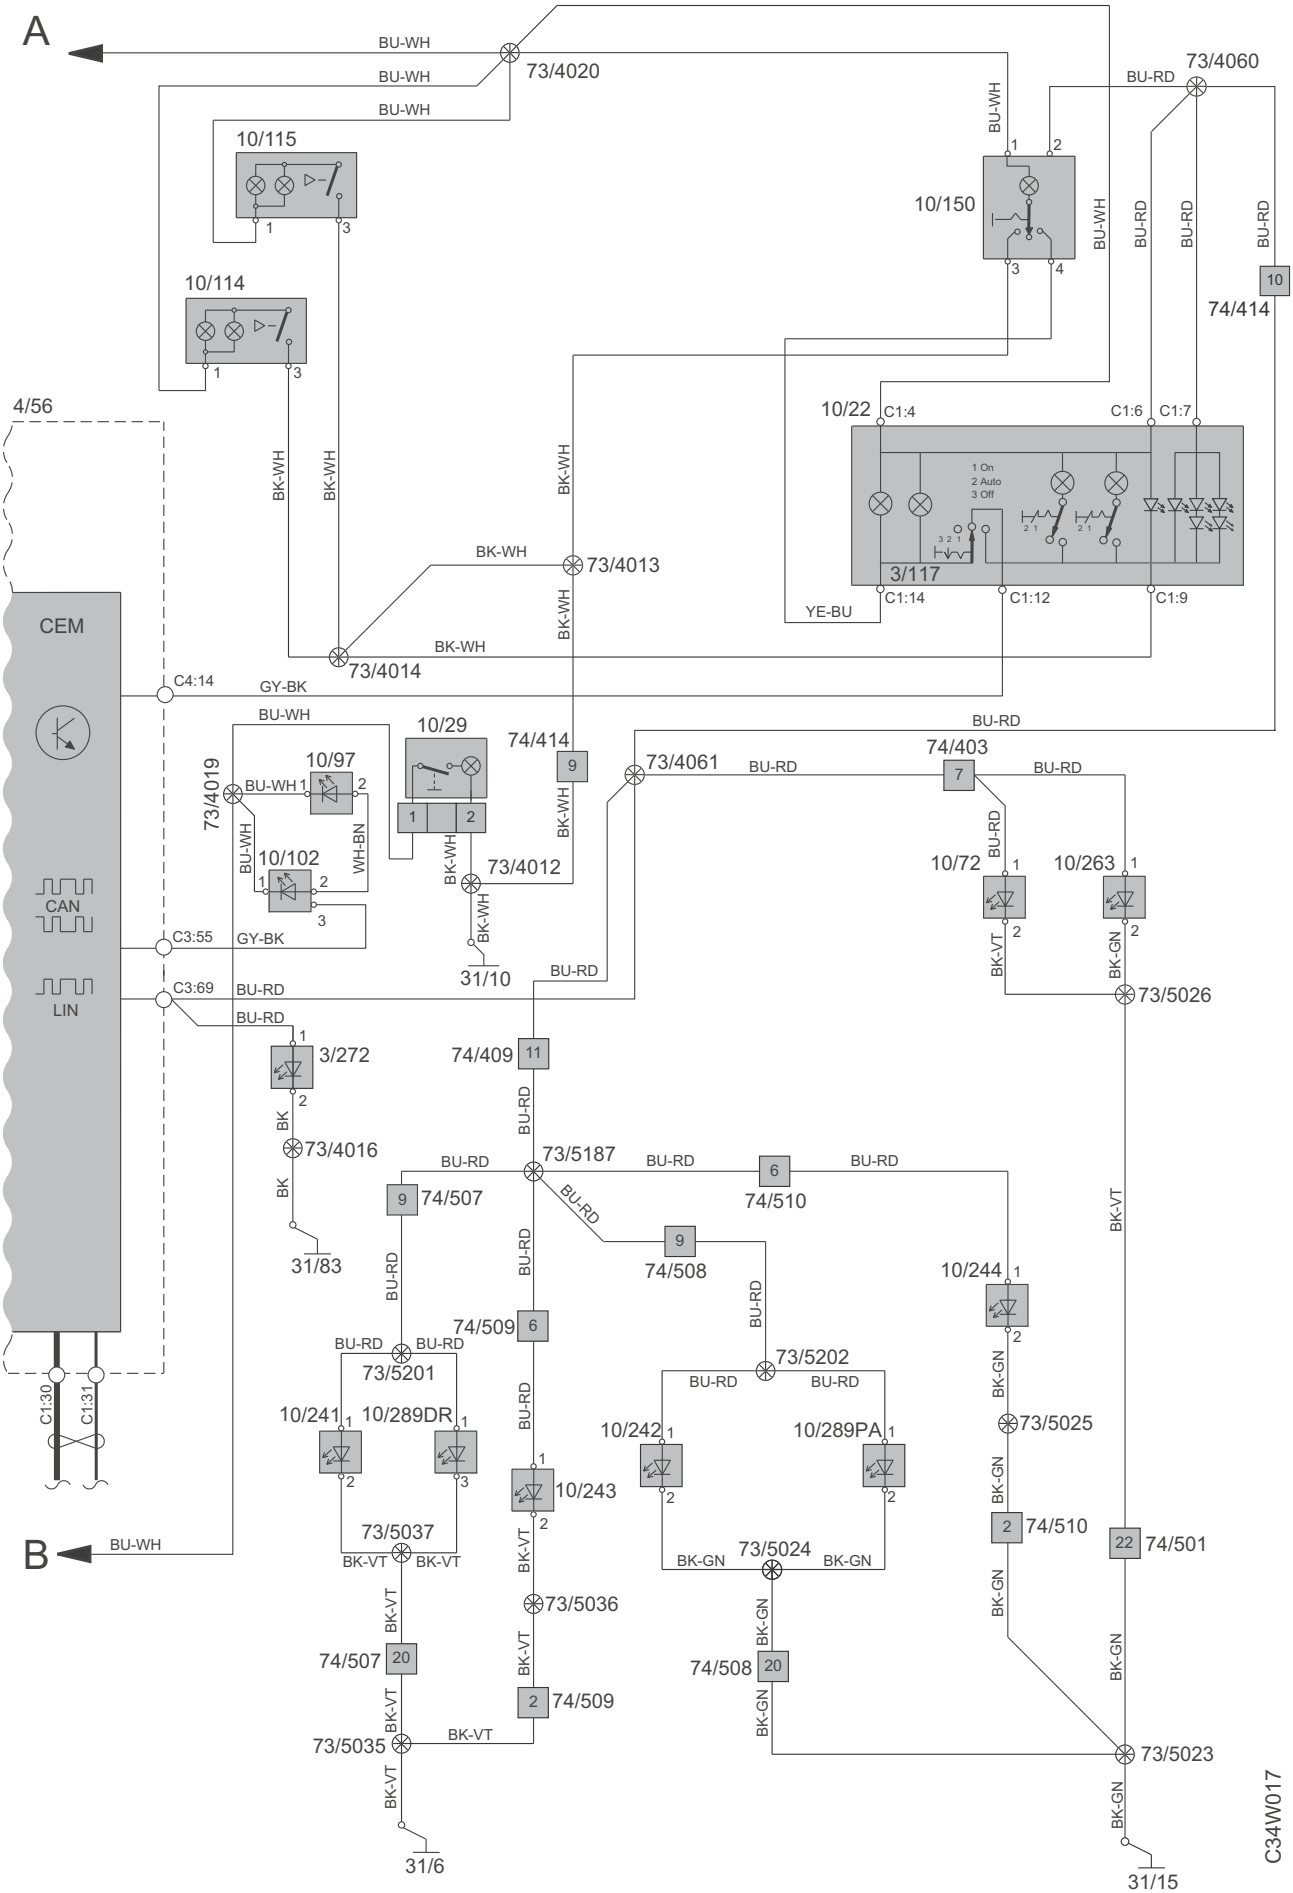
A
B
BU-WH
BU-RD
BK-WH
BK-GN
BK-VT
BK
GY-BK
WH-BN
73/4020
73/4060
73/4061
73/4013
73/4014
73/4012
73/4019
73/4016
73/5187
73/5201
73/5202
73/5037
73/5036
73/5035
73/5024
73/5026
73/5025
73/5023
10/115
10/114
10/150
10/22
10/29
10/97
10/102
10/72
10/263
10/241
10/289DR
10/242
10/289PA
10/243
10/244
3/117
3/272
74/414
74/403
74/409
74/507
74/508
74/509
74/510
74/501
1 On
2 Auto
3 Off
C1:4
C1:6
C1:7
C1:14
C1:12
C1:9
4/56
CEM
CAN
LIN
C4:14
C3:55
C3:69
C1:30
C1:31
31/10
31/83
31/6
31/15
C34W017

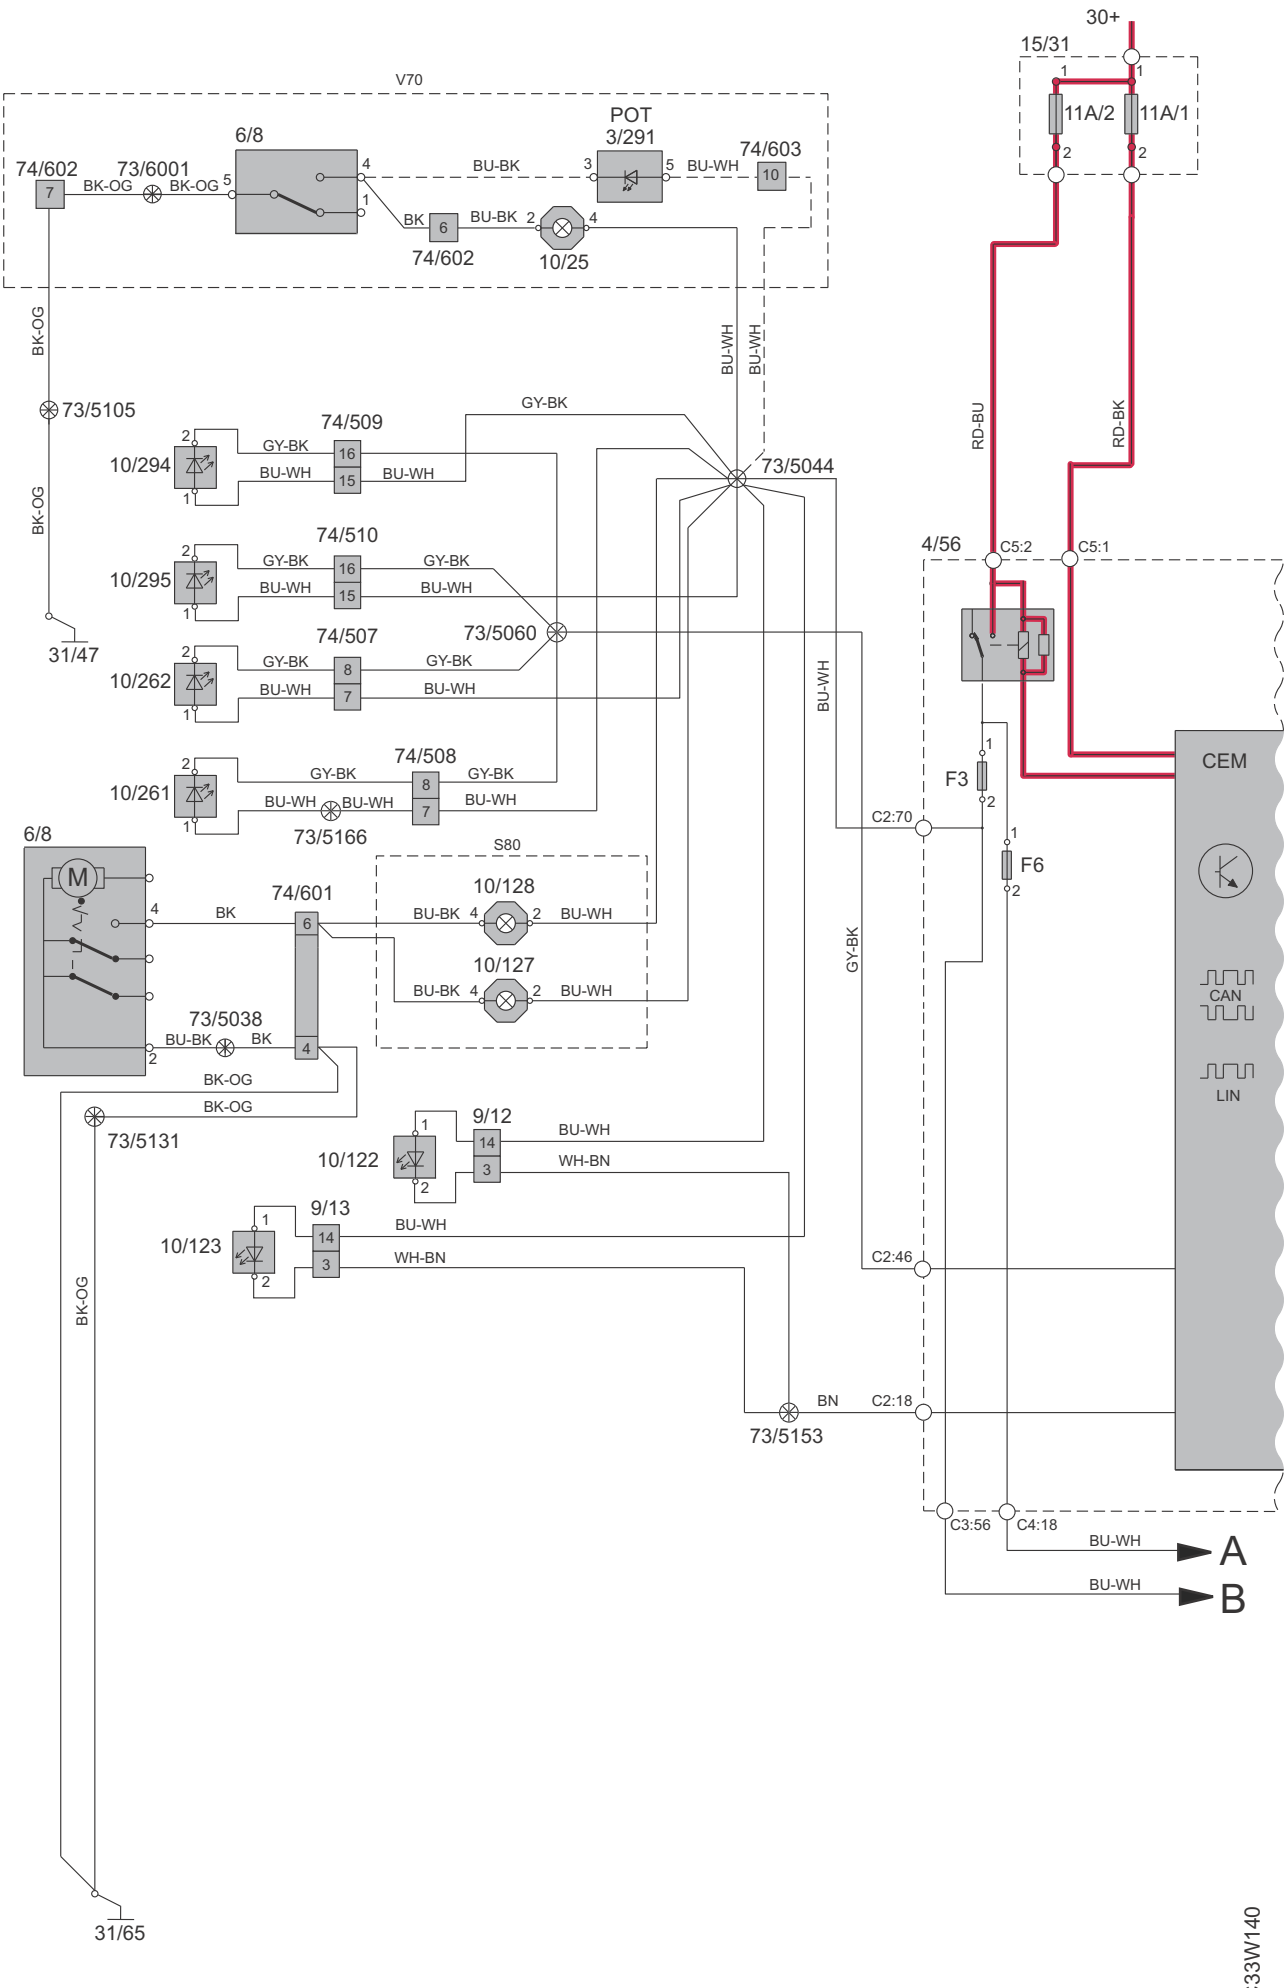
30+
15/31
11A/2
11A/1
V70
POT
3/291
6/8
74/602
73/6001
BK-OG
BU-BK
BU-WH
74/603
BK
74/602
10/25
BK-OG
73/5105
BK-OG
31/47
BU-WH
BU-WH
GY-BK
74/509
10/294
GY-BK
BU-WH
BU-WH
73/5044
74/510
10/295
GY-BK
BU-WH
GY-BK
BU-WH
74/507
73/5060
10/262
GY-BK
BU-WH
GY-BK
BU-WH
74/508
10/261
GY-BK
BU-WH
BU-WH
GY-BK
BU-WH
73/5166
6/8
M
S80
74/601
BK
10/128
BU-BK
BU-WH
10/127
BU-BK
BU-WH
73/5038
BU-BK
BK
BK-OG
BK-OG
73/5131
9/12
10/122
BU-WH
WH-BN
9/13
10/123
BU-WH
WH-BN
BK-OG
31/65
RD-BU
RD-BK
4/56
C5:2
C5:1
BU-WH
F3
F6
CEM
CAN
LIN
C2:70
GY-BK
C2:46
BN
C2:18
73/5153
C3:56
C4:18
BU-WH
A
BU-WH
B
C33W140

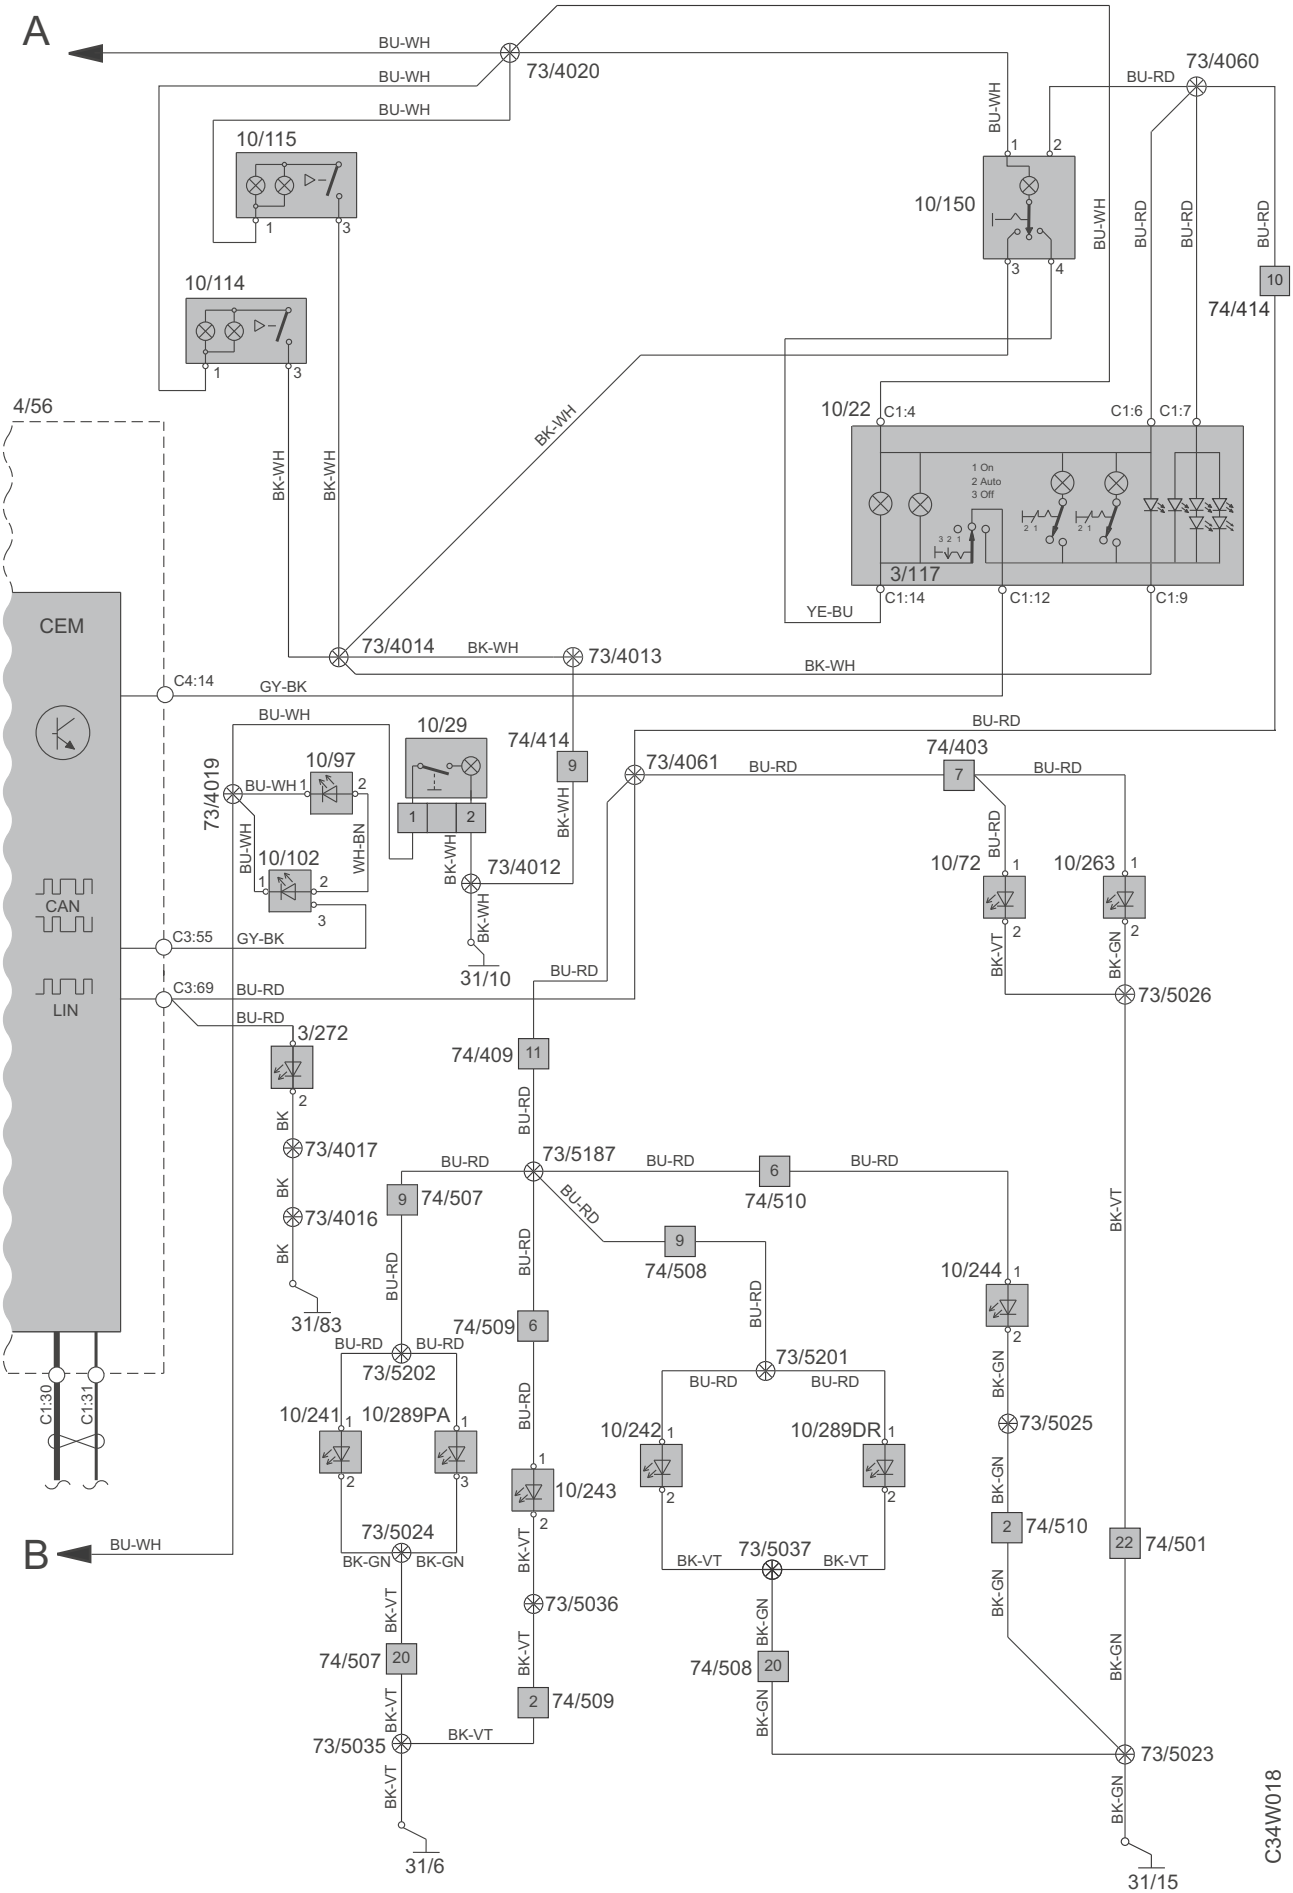
A
B
BU-WH
BU-RD
BK-WH
BK-VT
BK-GN
BK
GY-BK
WH-BN
YE-BU
73/4020
73/4060
73/4014
73/4013
73/4012
73/4019
73/4061
73/4017
73/4016
73/5187
73/5202
73/5201
73/5024
73/5036
73/5037
73/5035
73/5026
73/5025
73/5023
10/115
10/114
10/150
10/22
10/29
10/97
10/102
10/72
10/263
10/244
10/241
10/289PA
10/242
10/289DR
10/243
3/117
3/272
74/414
74/403
74/409
74/507
74/508
74/509
74/510
74/501
4/56
CEM
CAN
LIN
C4:14
C3:55
C3:69
C1:30
C1:31
C1:4
C1:6
C1:7
C1:14
C1:12
C1:9
1 On
2 Auto
3 Off
31/10
31/83
31/6
31/15
C34W018

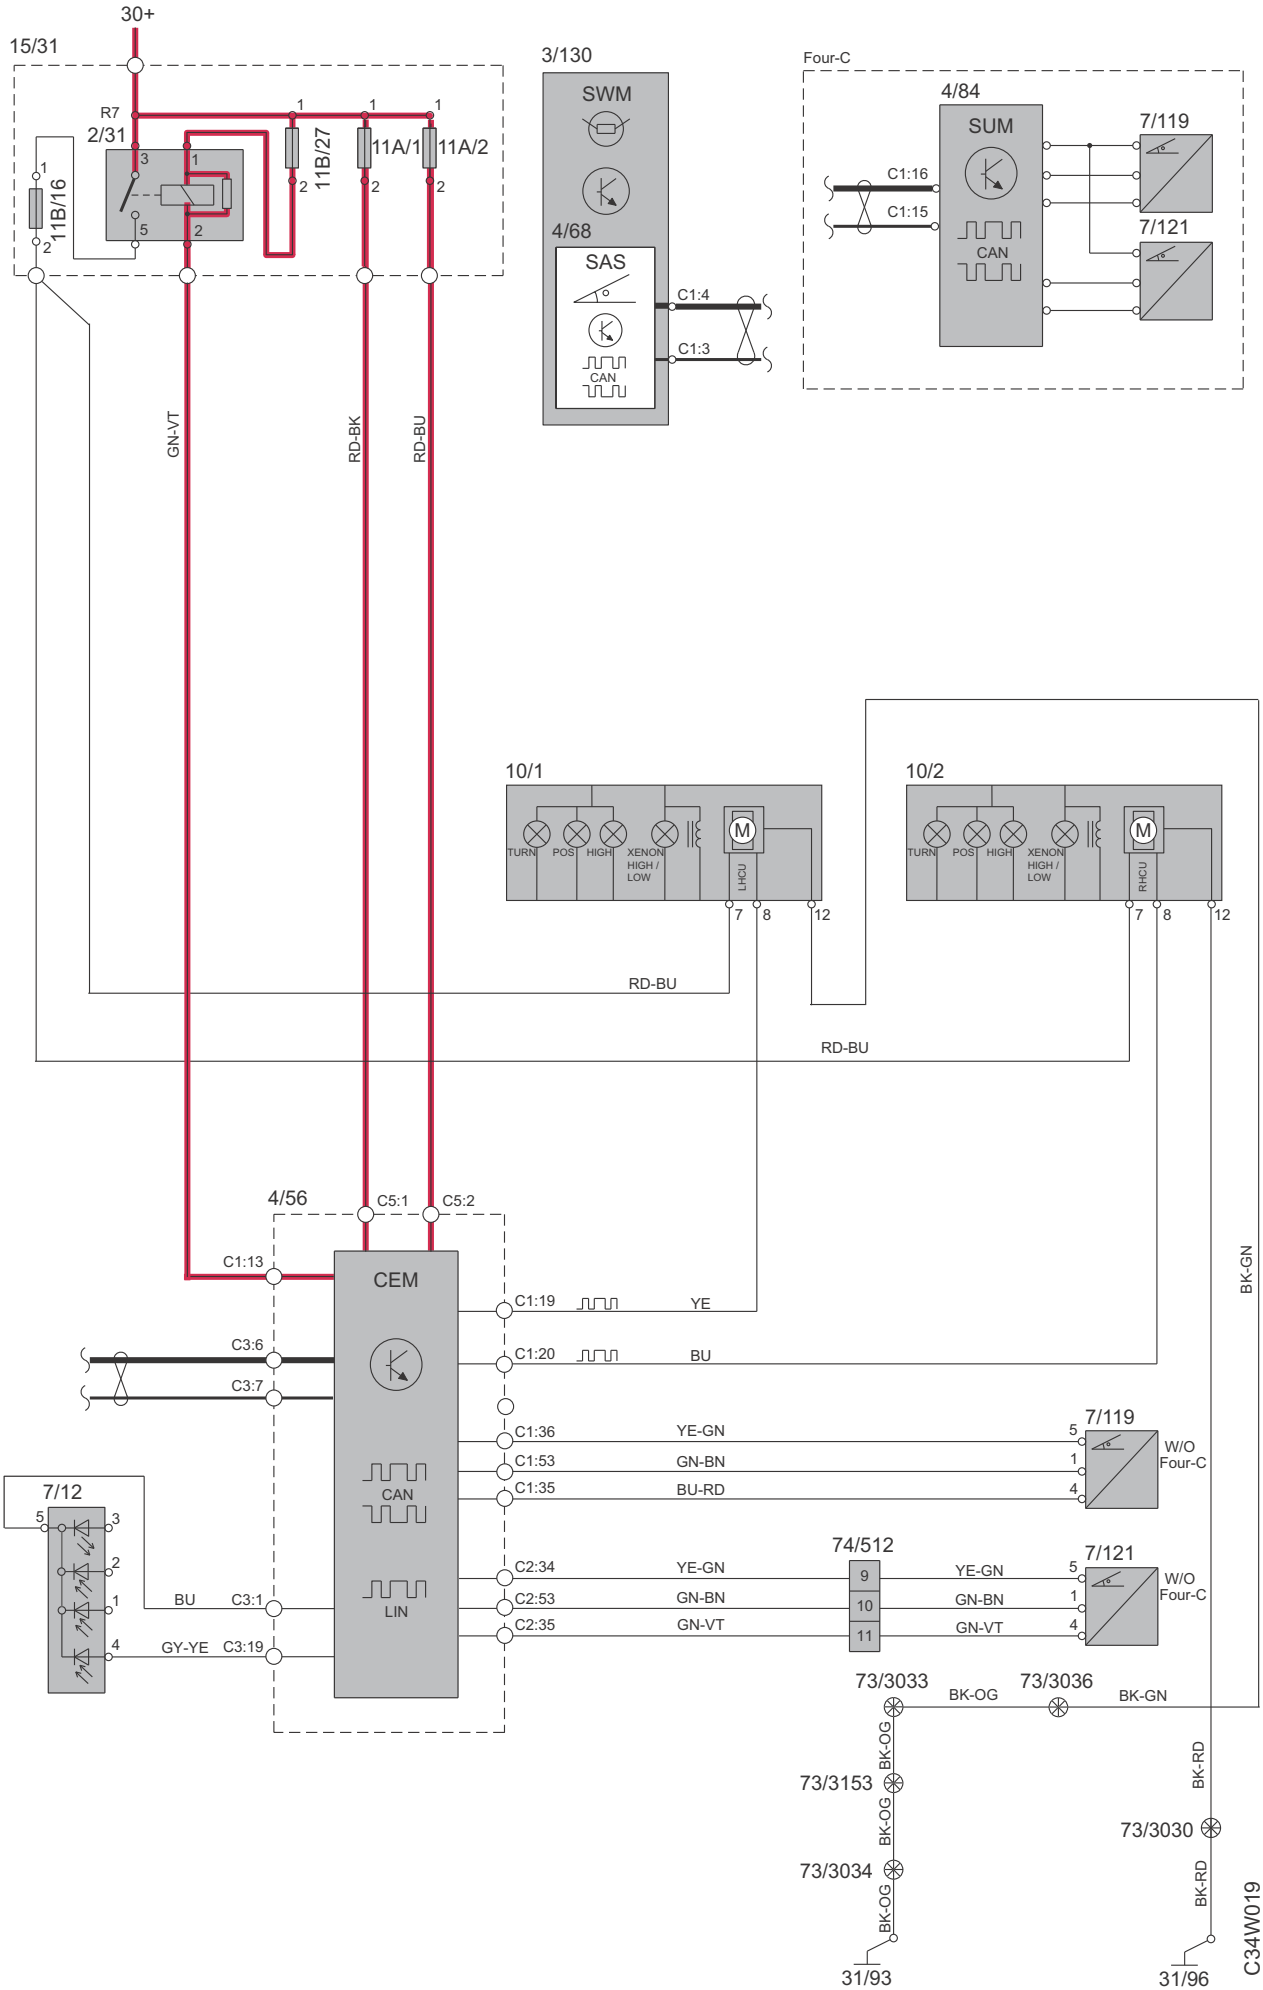
30+
15/31
R7
2/31
11B/16
11B/27
11A/1
11A/2
3/130
SWM
4/68
SAS
CAN
C1:4
C1:3
Four-C
4/84
SUM
C1:16
C1:15
7/119
7/121
GN-VT
RD-BK
RD-BU
10/1
10/2
TURN
POS
HIGH
XENON HIGH / LOW
LHCU
RHCU
RD-BU
RD-BU
4/56
C5:1
C5:2
CEM
C1:13
C3:6
C3:7
C1:19
YE
C1:20
BU
C1:36
YE-GN
C1:53
GN-BN
C1:35
BU-RD
W/O Four-C
7/12
CAN
LIN
BU
C3:1
GY-YE
C3:19
74/512
C2:34
C2:53
C2:35
73/3033
73/3036
BK-OG
BK-GN
73/3153
73/3030
73/3034
BK-RD
31/93
31/96
C34W019

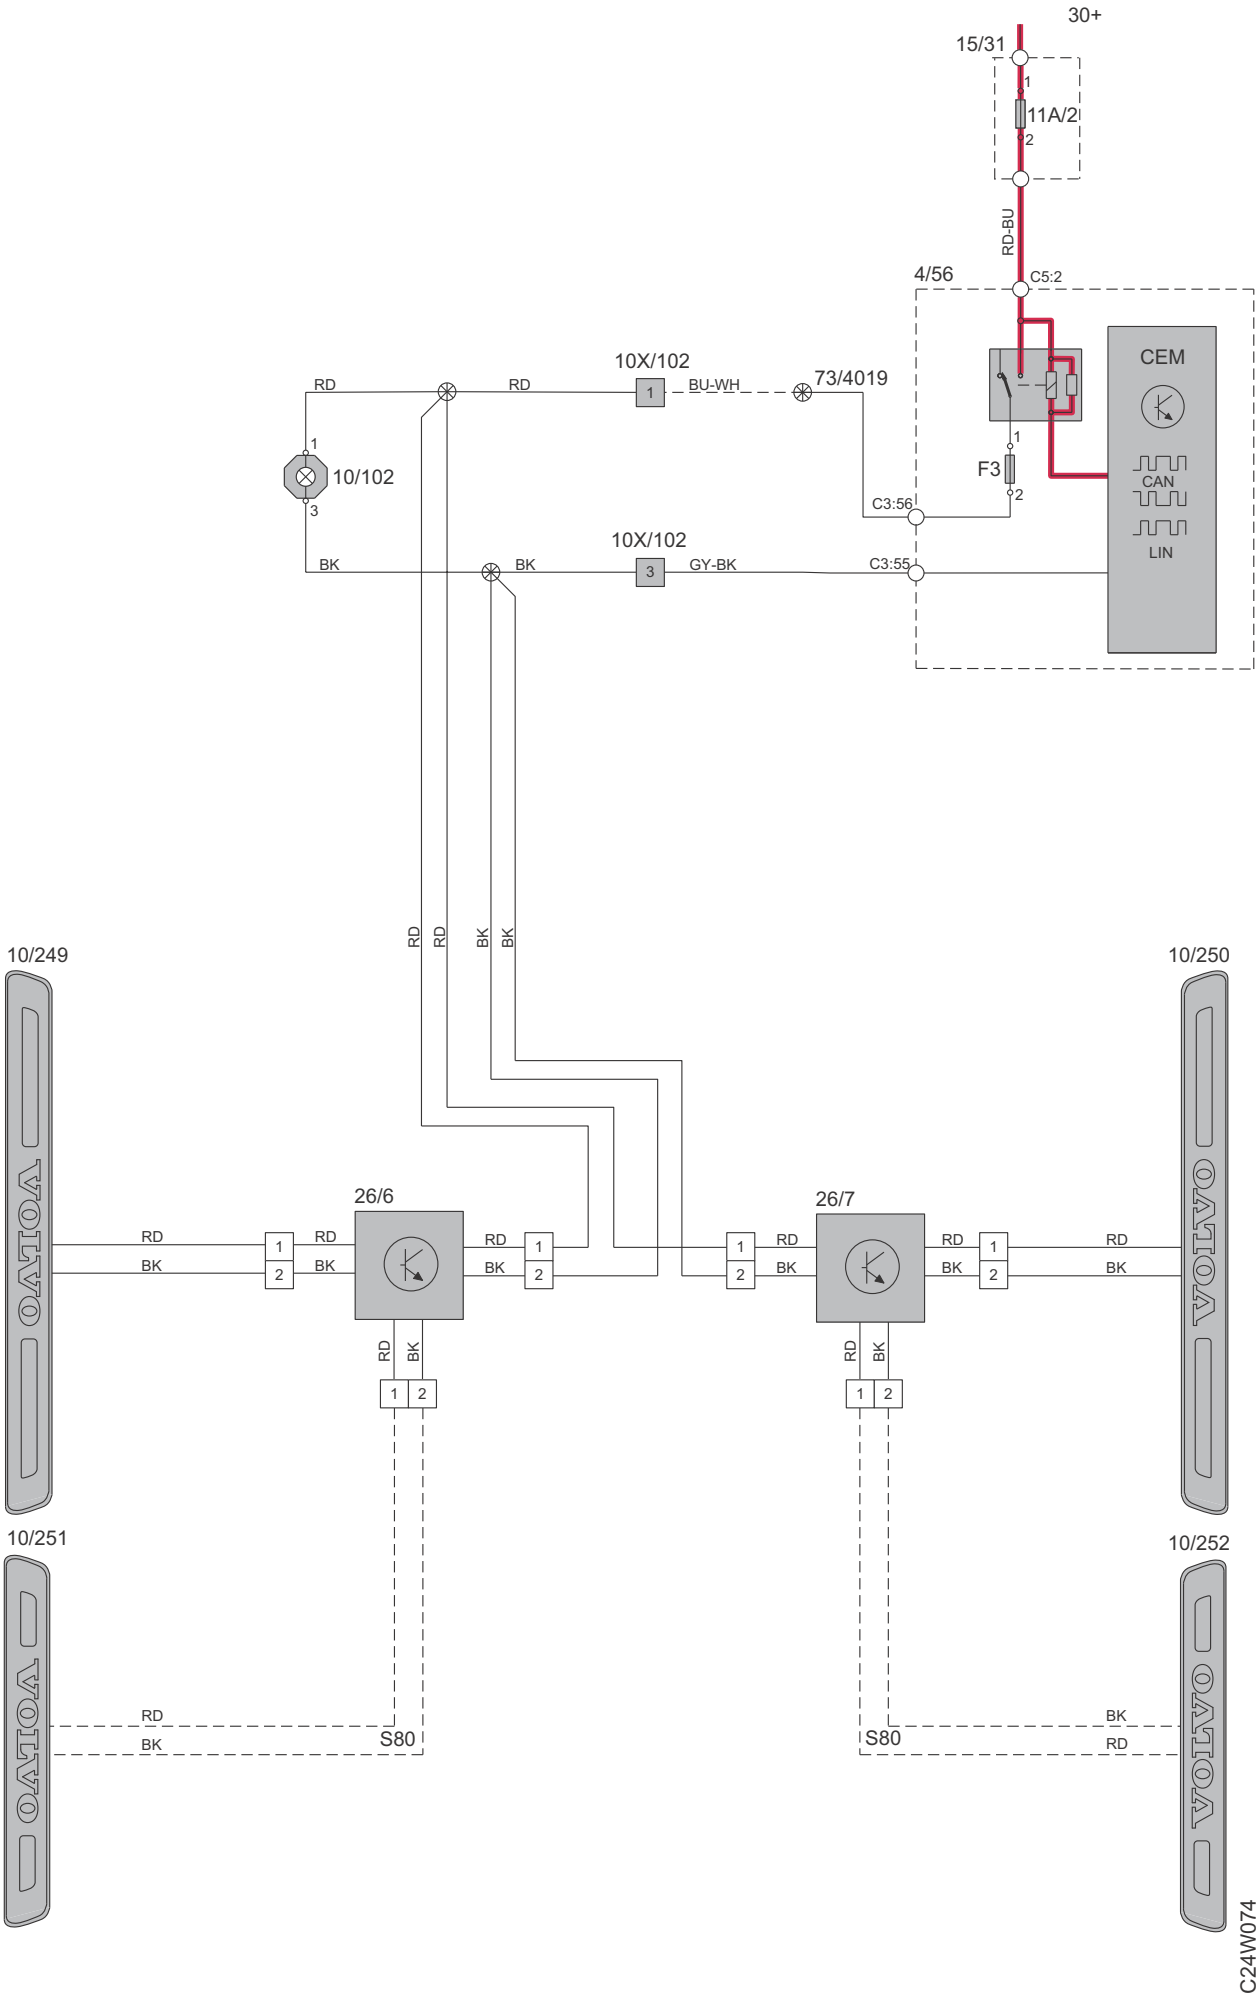
30+
15/31
1
11A/2
2
RD-BU
4/56
C5:2
CEM
CAN
LIN
F3
1
2
C3:56
C3:55
10X/102
1
BU-WH
73/4019
RD
RD
1
10/102
3
BK
BK
10X/102
3
GY-BK
RD
RD
BK
BK
10/249
10/250
10/251
10/252
26/6
26/7
RD
BK
1
2
S80
S80
C24W074

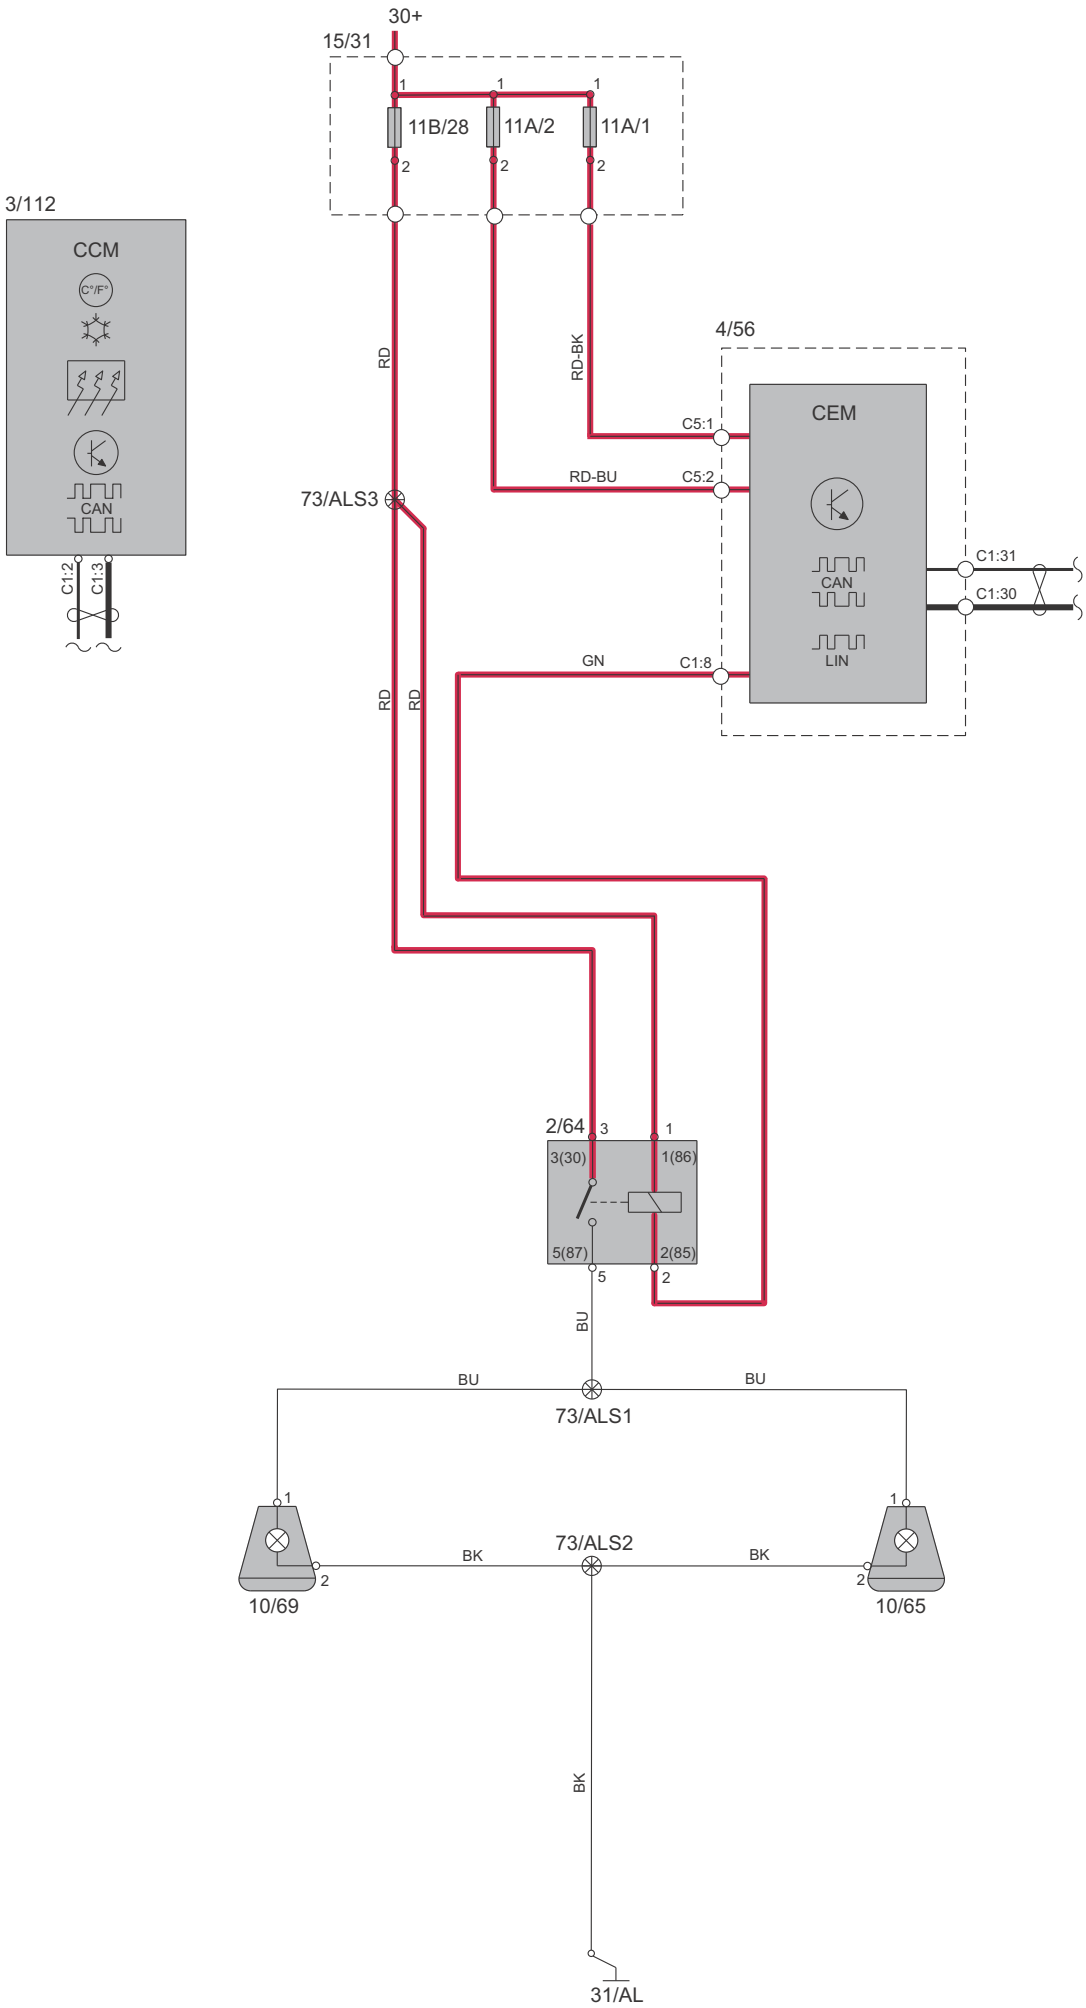
30+
15/31
11B/28
11A/2
11A/1
3/112
CCM
C°/F°
CAN
C1:2
C1:3
RD
RD-BK
4/56
CEM
C5:1
C5:2
RD-BU
73/ALS3
CAN
LIN
C1:31
C1:30
GN
C1:8
RD
RD
2/64
3(30)
1(86)
5(87)
2(85)
BU
BU
BU
73/ALS1
73/ALS2
BK
BK
10/69
10/65
BK
31/AL
C33W143

Lighting mug holder and floor

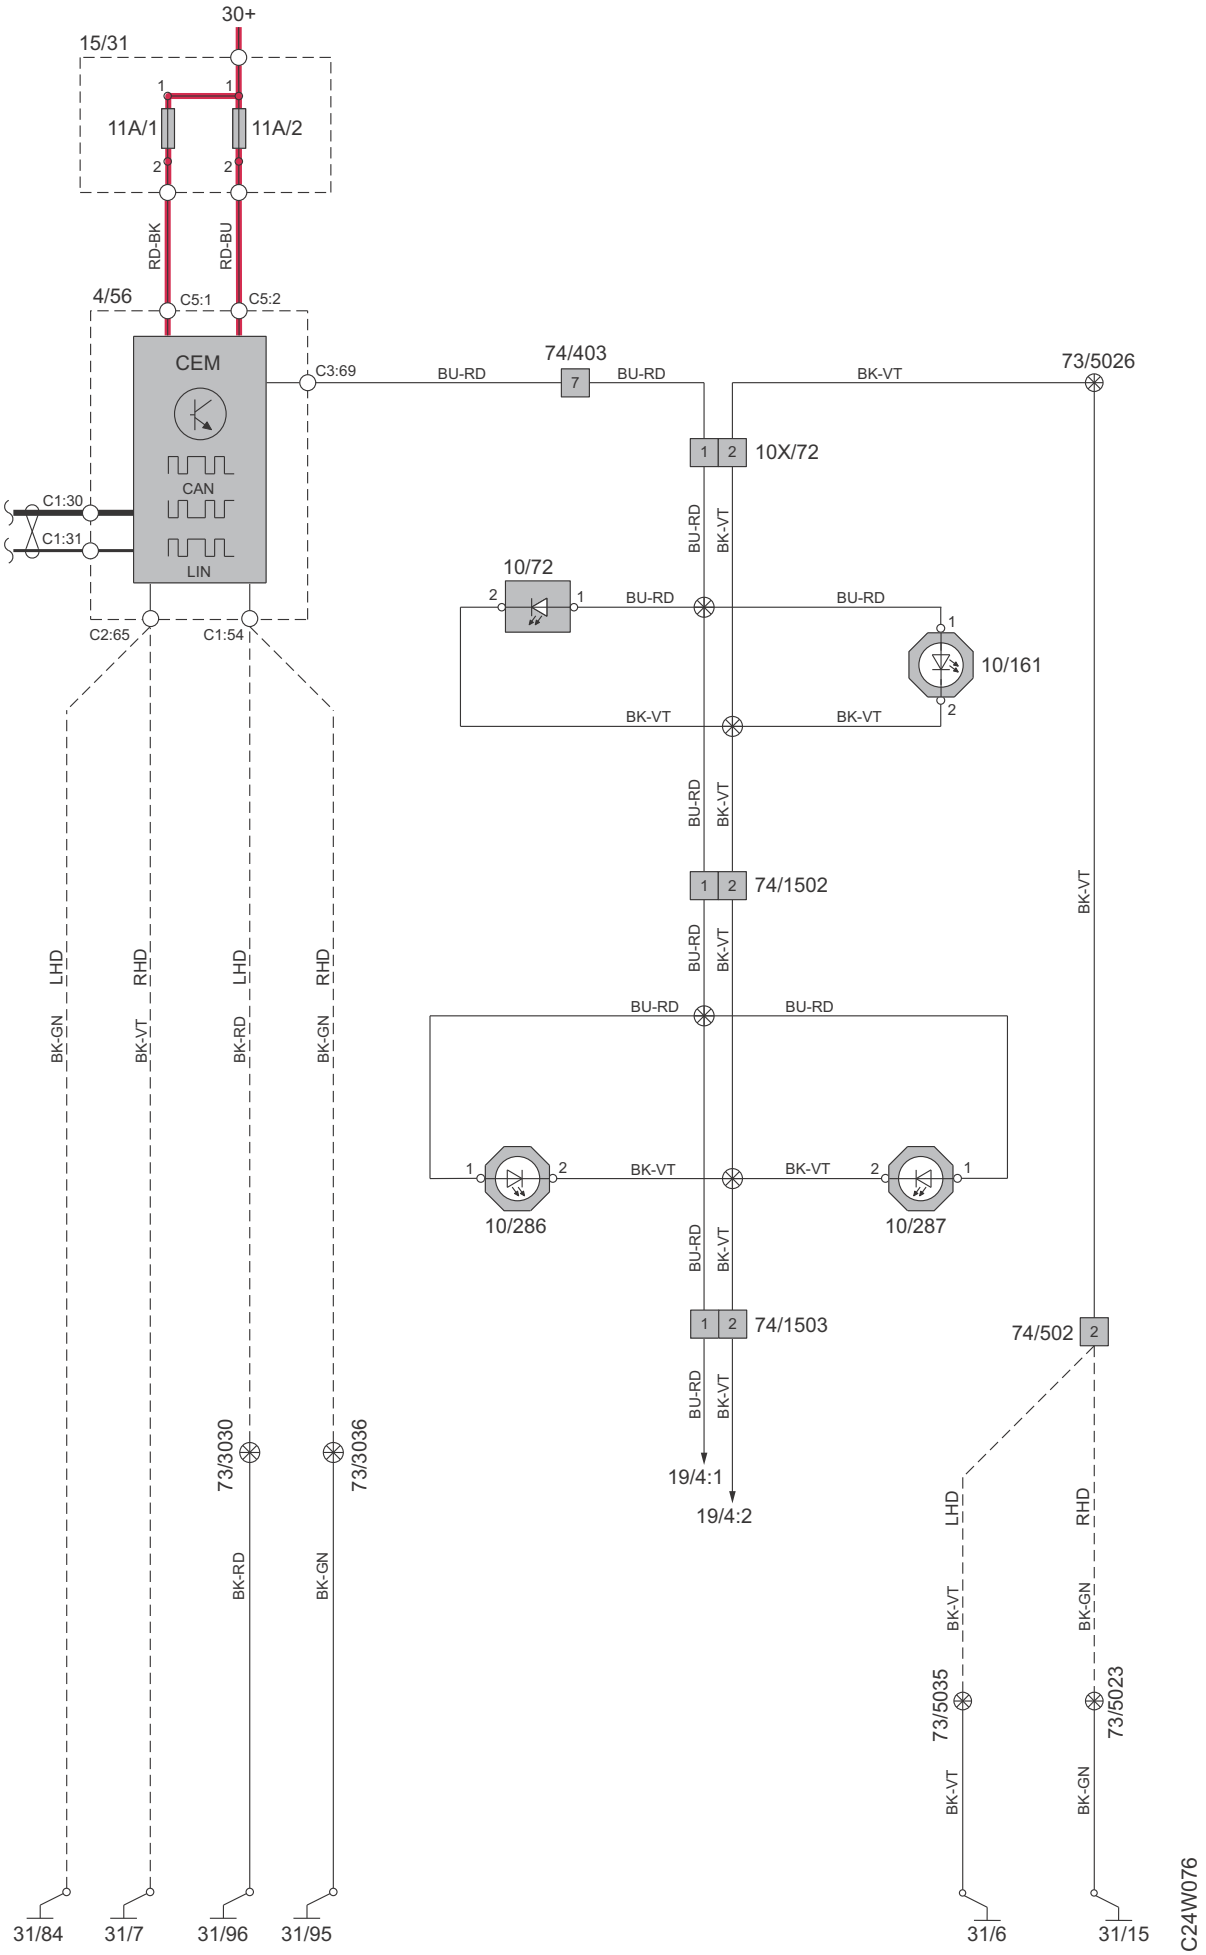

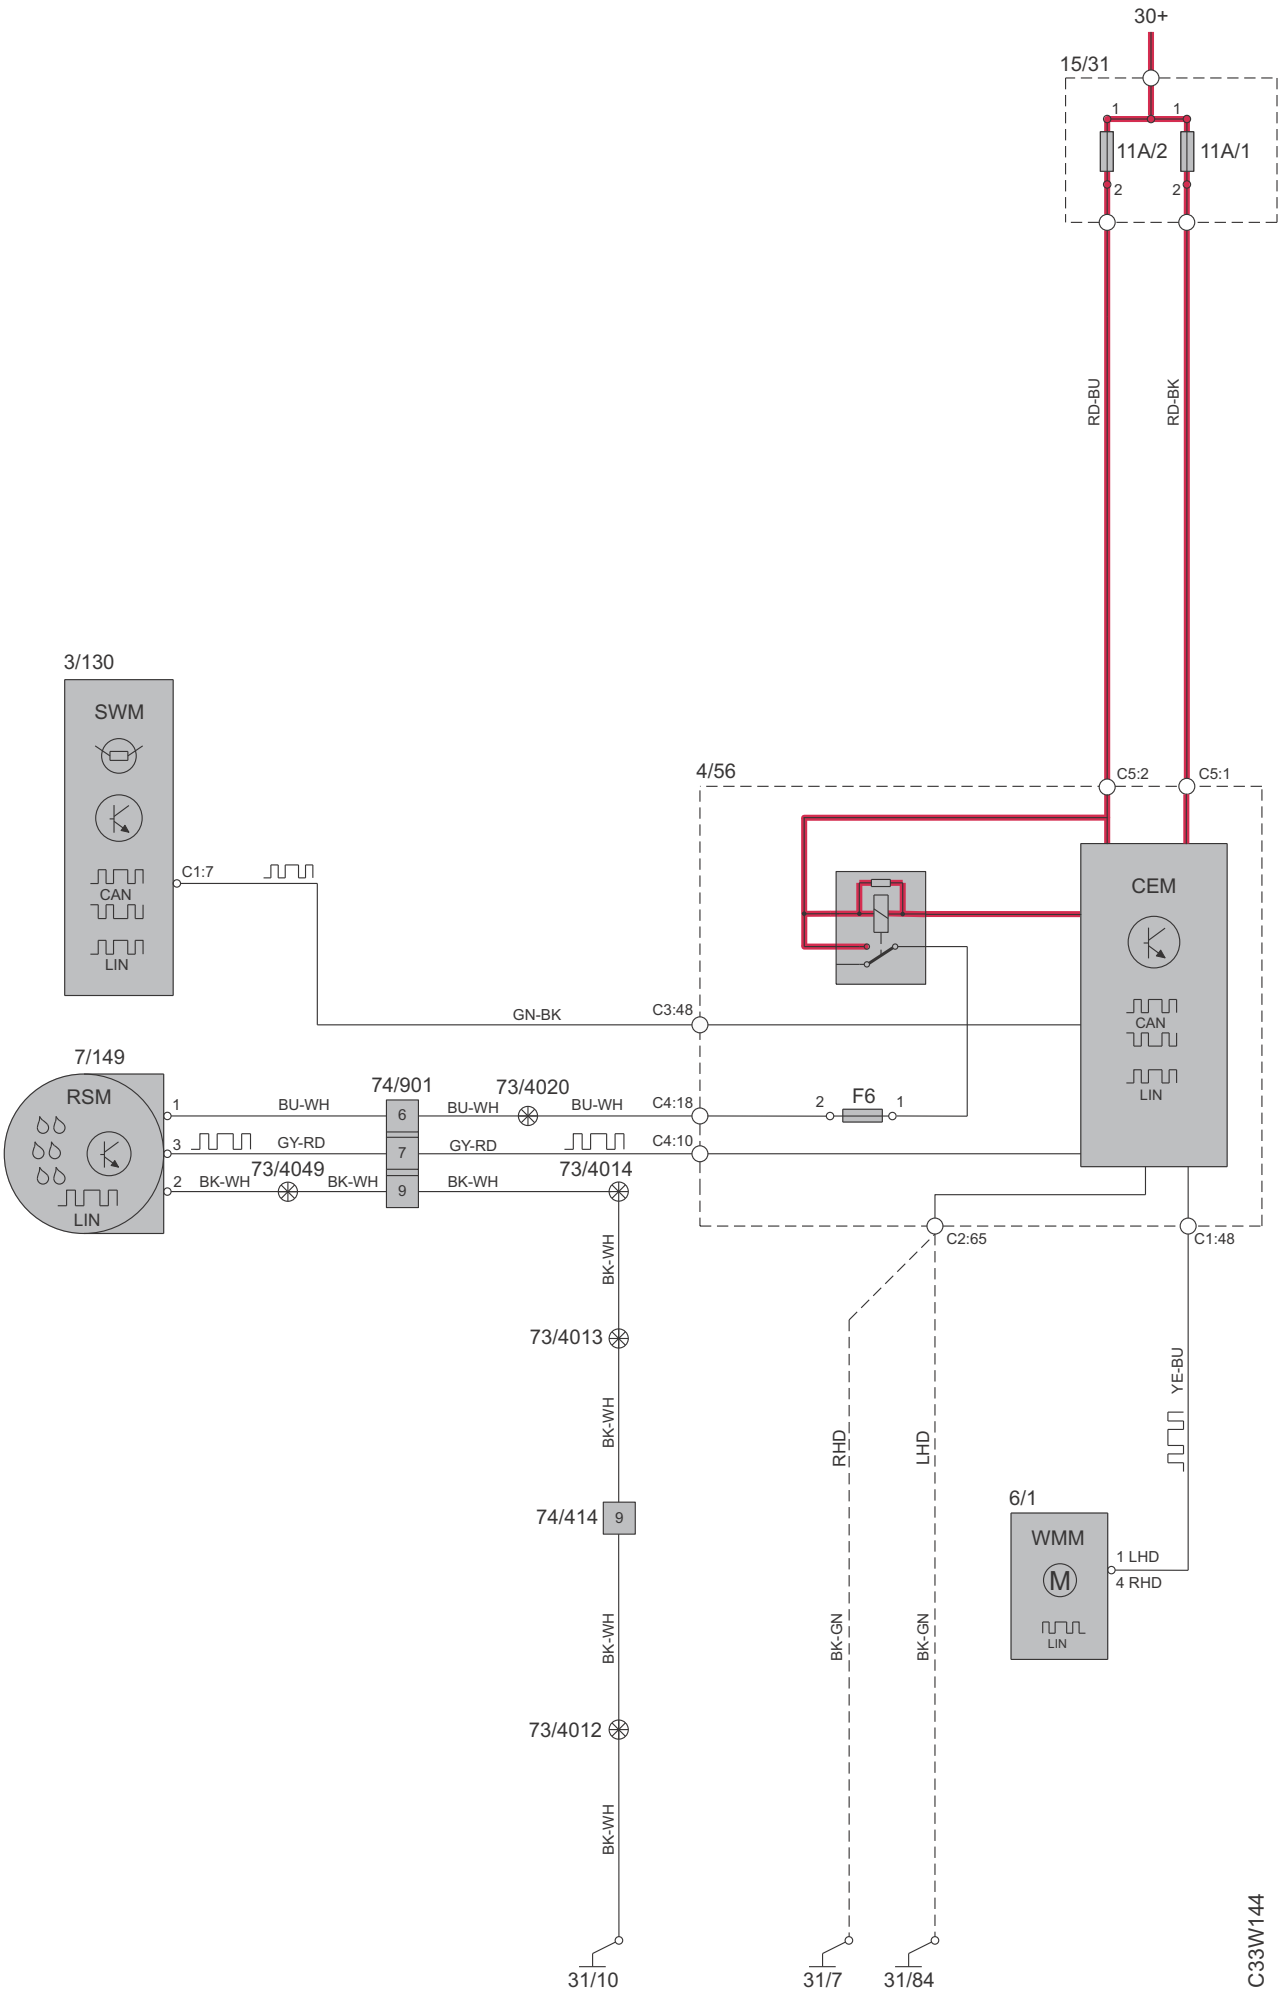
30+
15/31
1
1
11A/2
11A/1
2
2
RD-BU
RD-BK
3/130
SWM
CAN
LIN
C1:7
4/56
C5:2
C5:1
CEM
CAN
LIN
GN-BK
C3:48
7/149
RSM
LIN
1
3
2
BU-WH
GY-RD
BK-WH
74/901
6
7
9
BU-WH
GY-RD
BK-WH
73/4020
73/4049
73/4014
C4:18
C4:10
2
F6
1
BK-WH
73/4013
BK-WH
74/414
9
BK-WH
73/4012
BK-WH
31/10
C2:65
C1:48
RHD
LHD
BK-GN
BK-GN
31/7
31/84
YE-BU
6/1
WMM
M
LIN
1 LHD
4 RHD
C33W144

Group 36 Additional electrical equipment
Direction indicator and hazard warning flashers LHD V70

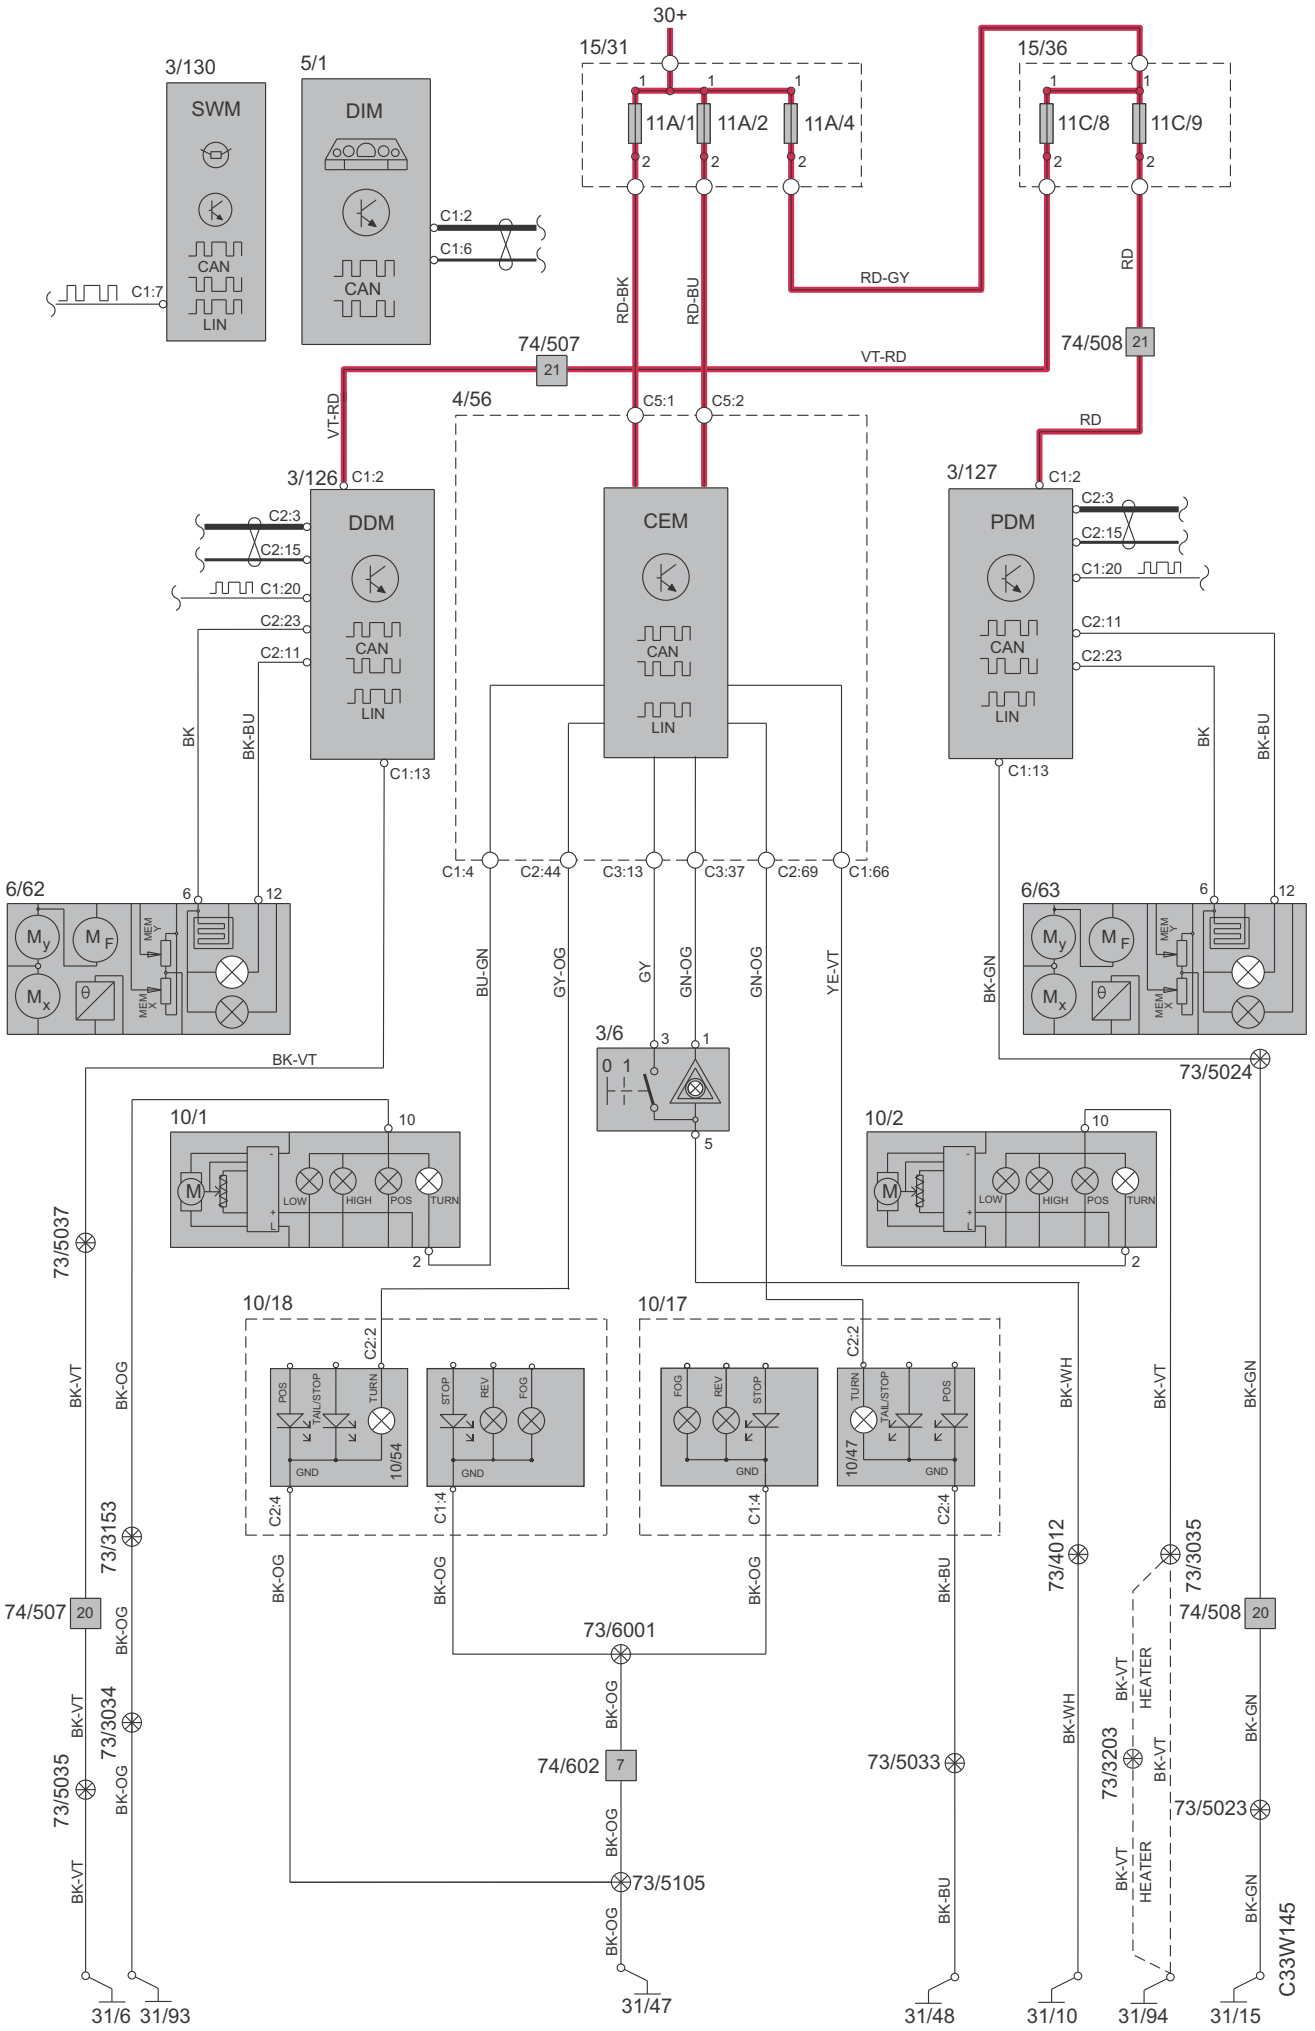

Group 36 Additional electrical equipment
Direction indicator and hazard warning flashers LHD S80

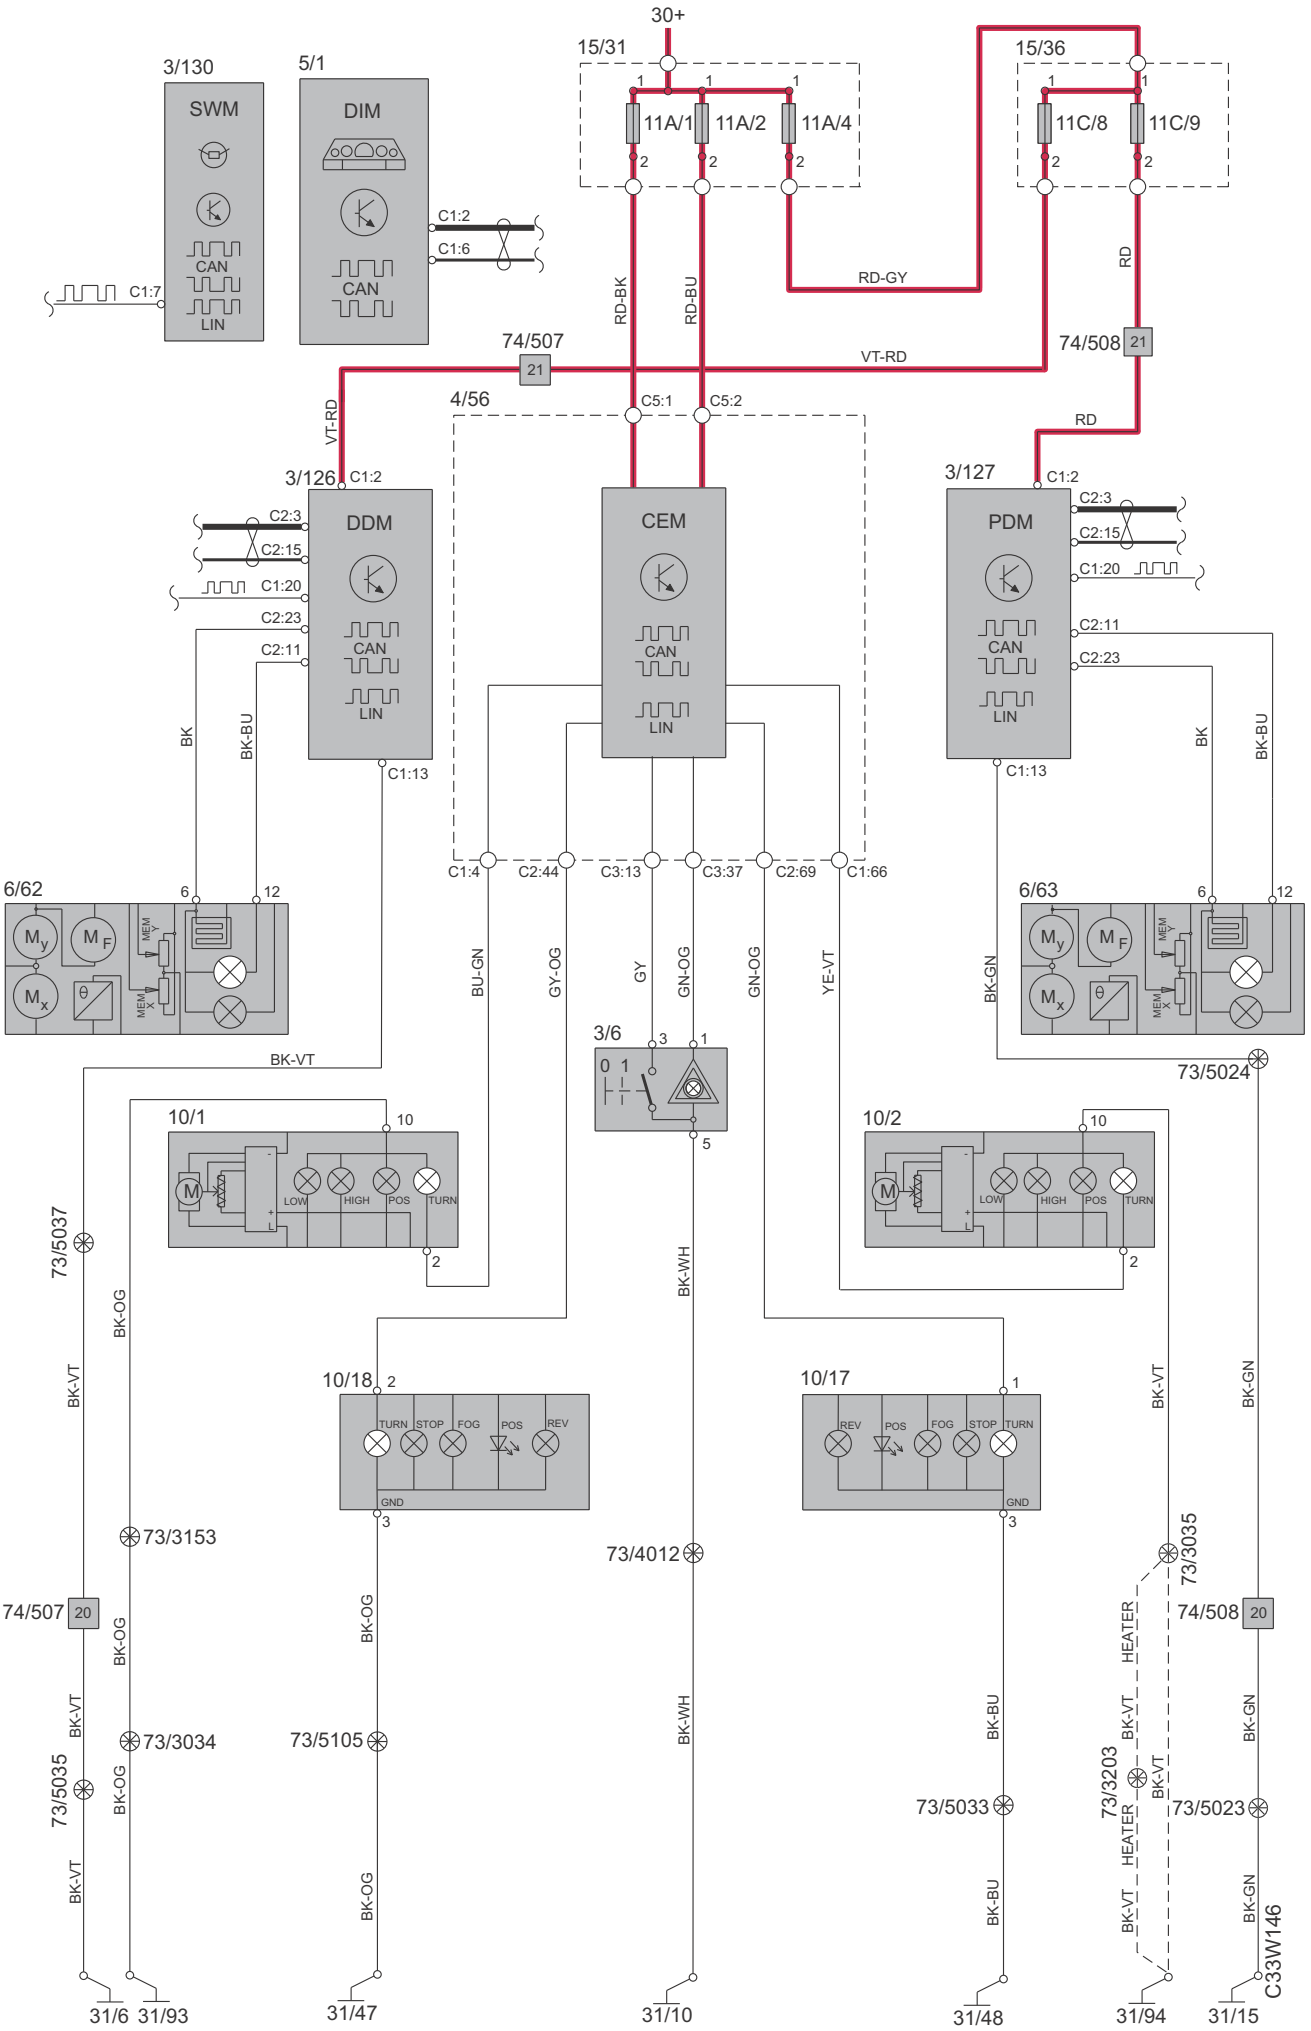

Group 36 Additional electrical equipment
Direction indicator and hazard warning flashers RHD V70

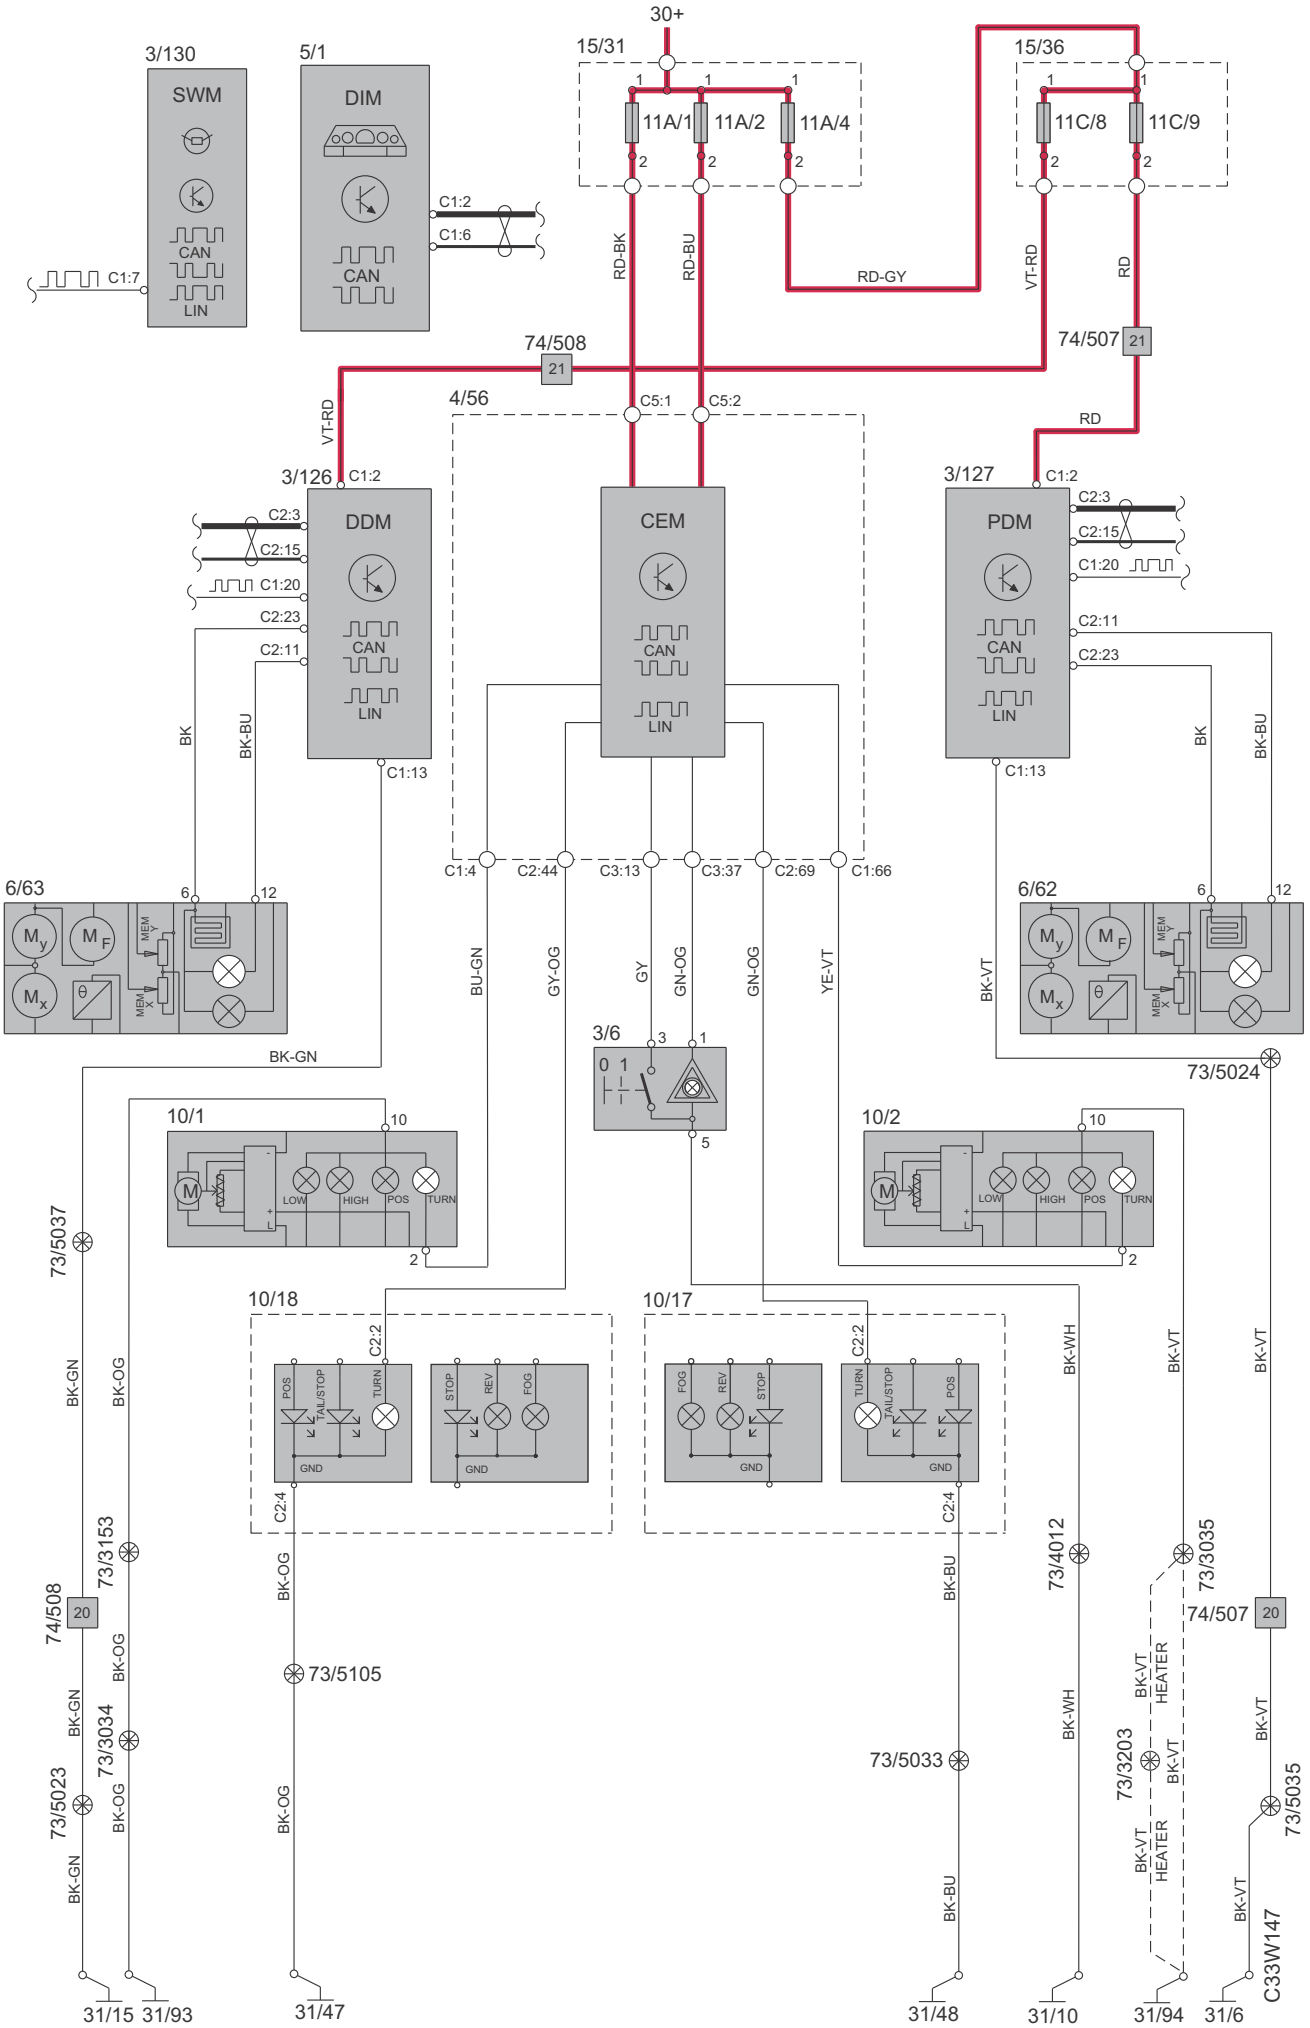

Group 36 Additional electrical equipment
Direction indicator and hazard warning flashers RHD S80

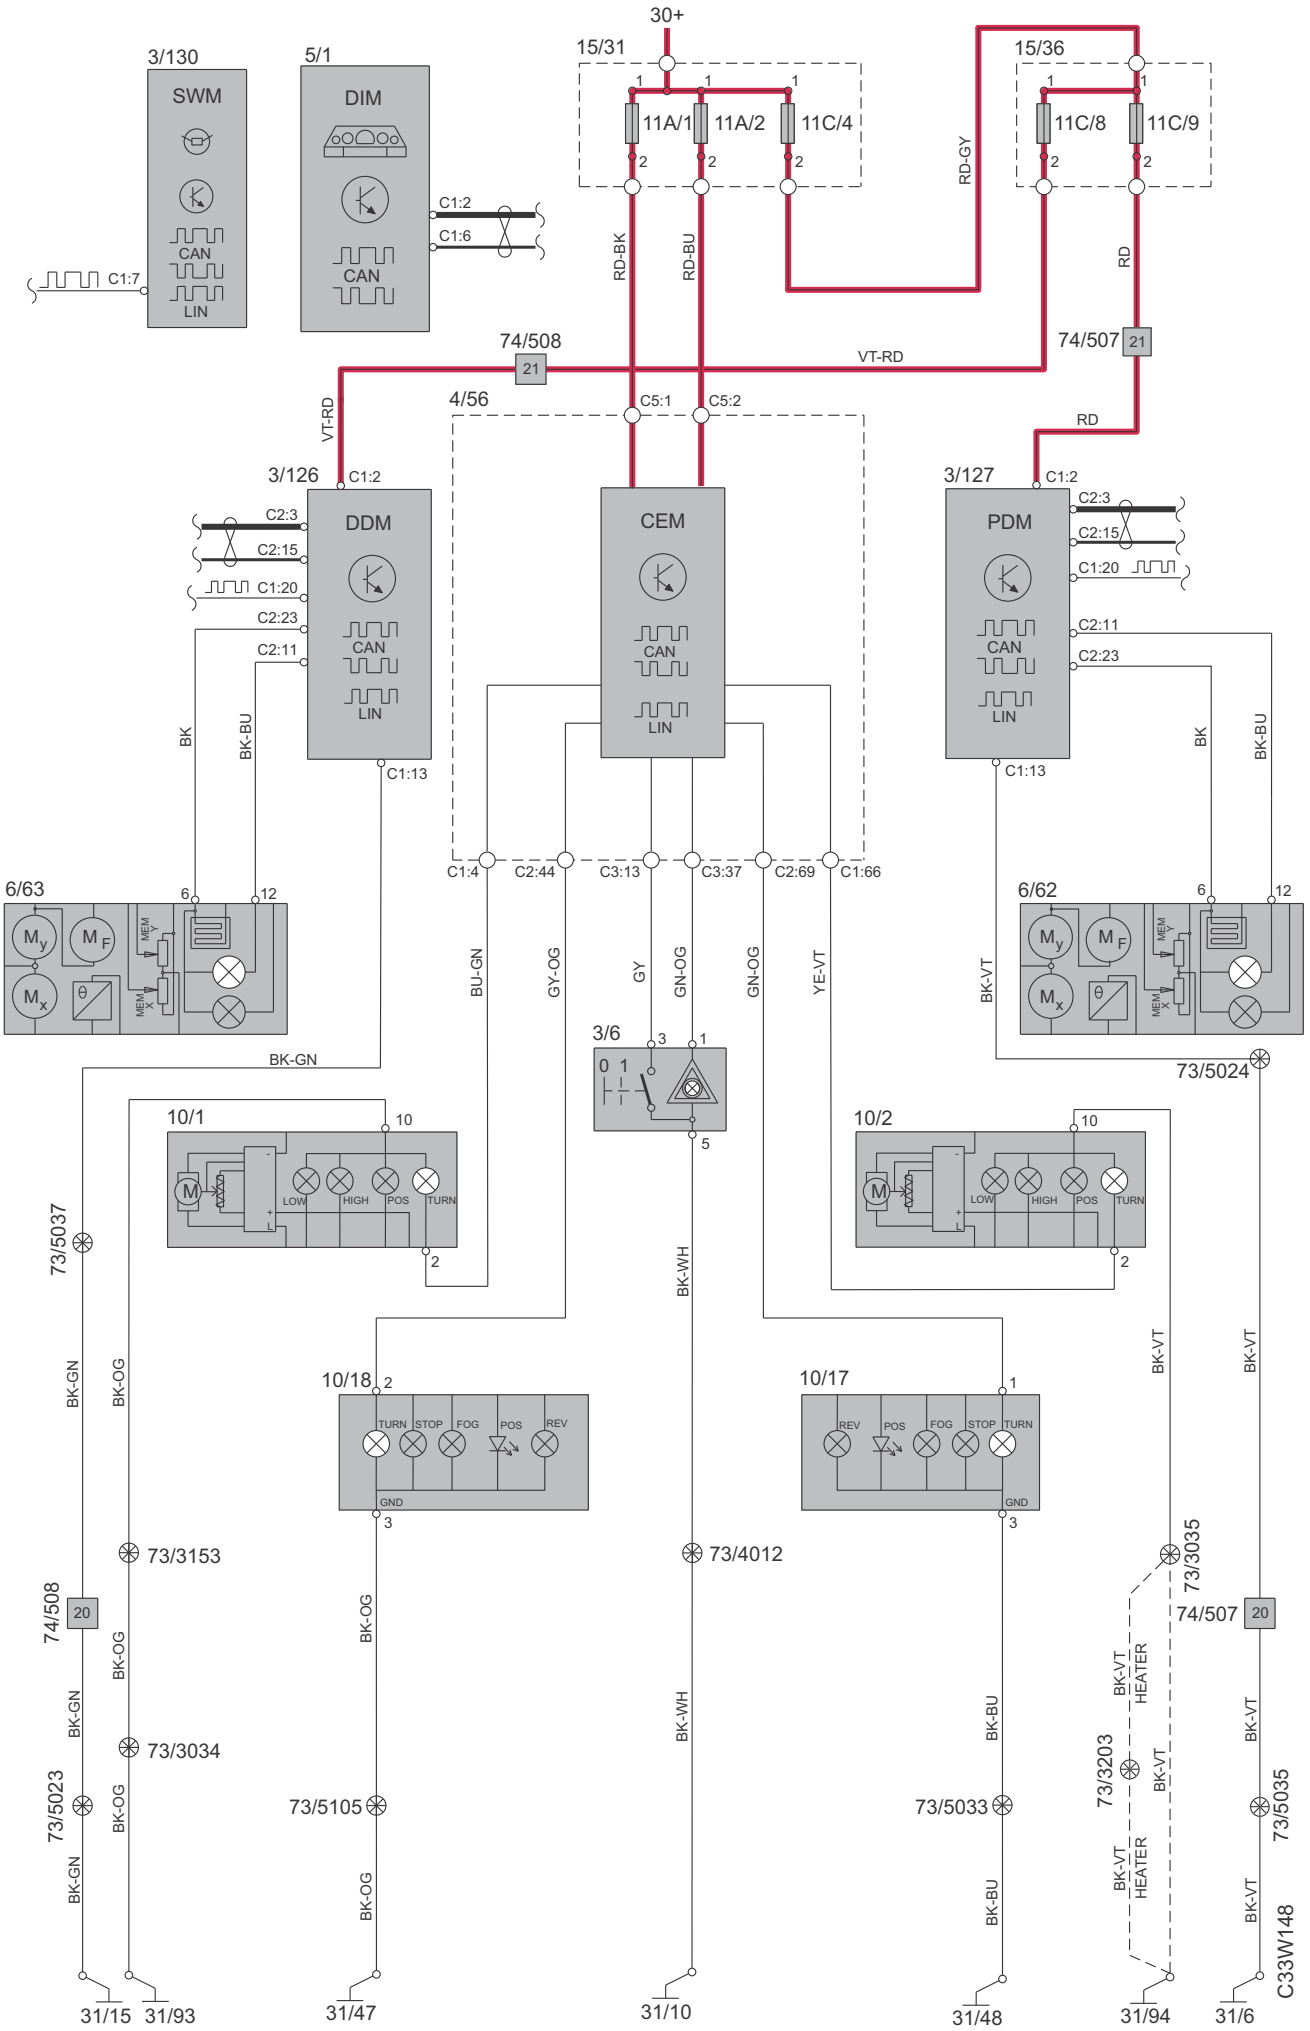

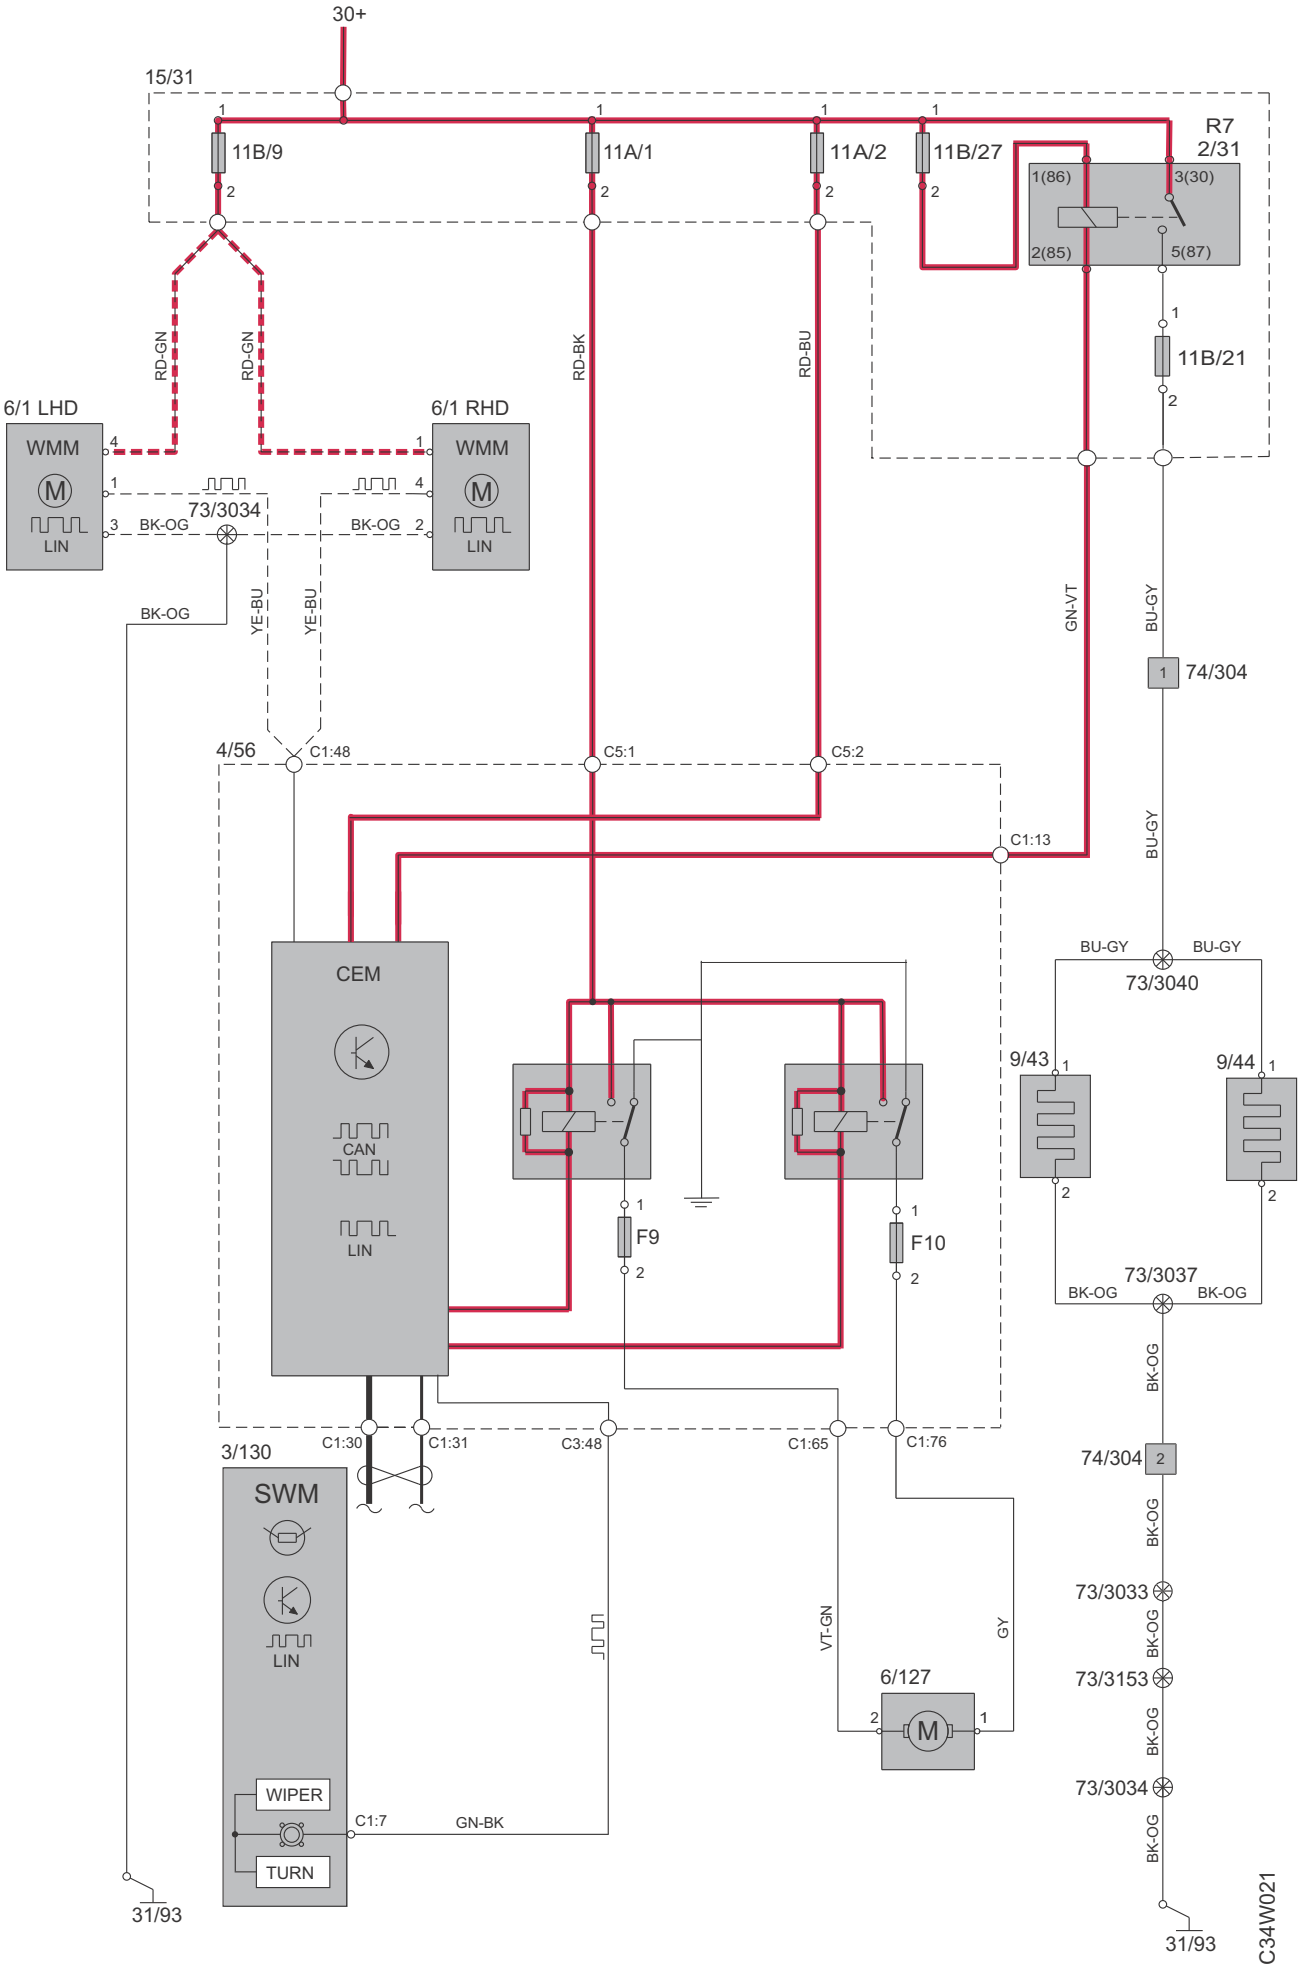
30+
15/31
11B/9
11A/1
11A/2
11B/27
R7
2/31
1(86)
3(30)
2(85)
5(87)
11B/21
RD-GN
RD-GN
RD-BK
RD-BU
6/1 LHD
WMM
LIN
6/1 RHD
WMM
LIN
73/3034
BK-OG
BK-OG
BK-OG
YE-BU
YE-BU
GN-VT
BU-GY
74/304
4/56
C1:48
C5:1
C5:2
C1:13
BU-GY
BU-GY
73/3040
CEM
CAN
LIN
9/43
9/44
F9
F10
73/3037
BK-OG
BK-OG
BK-OG
74/304
BK-OG
73/3033
BK-OG
73/3153
BK-OG
73/3034
BK-OG
31/93
C1:30
C1:31
C3:48
C1:65
C1:76
3/130
SWM
LIN
WIPER
TURN
C1:7
GN-BK
VT-GN
GY
6/127
M
31/93
C34W021

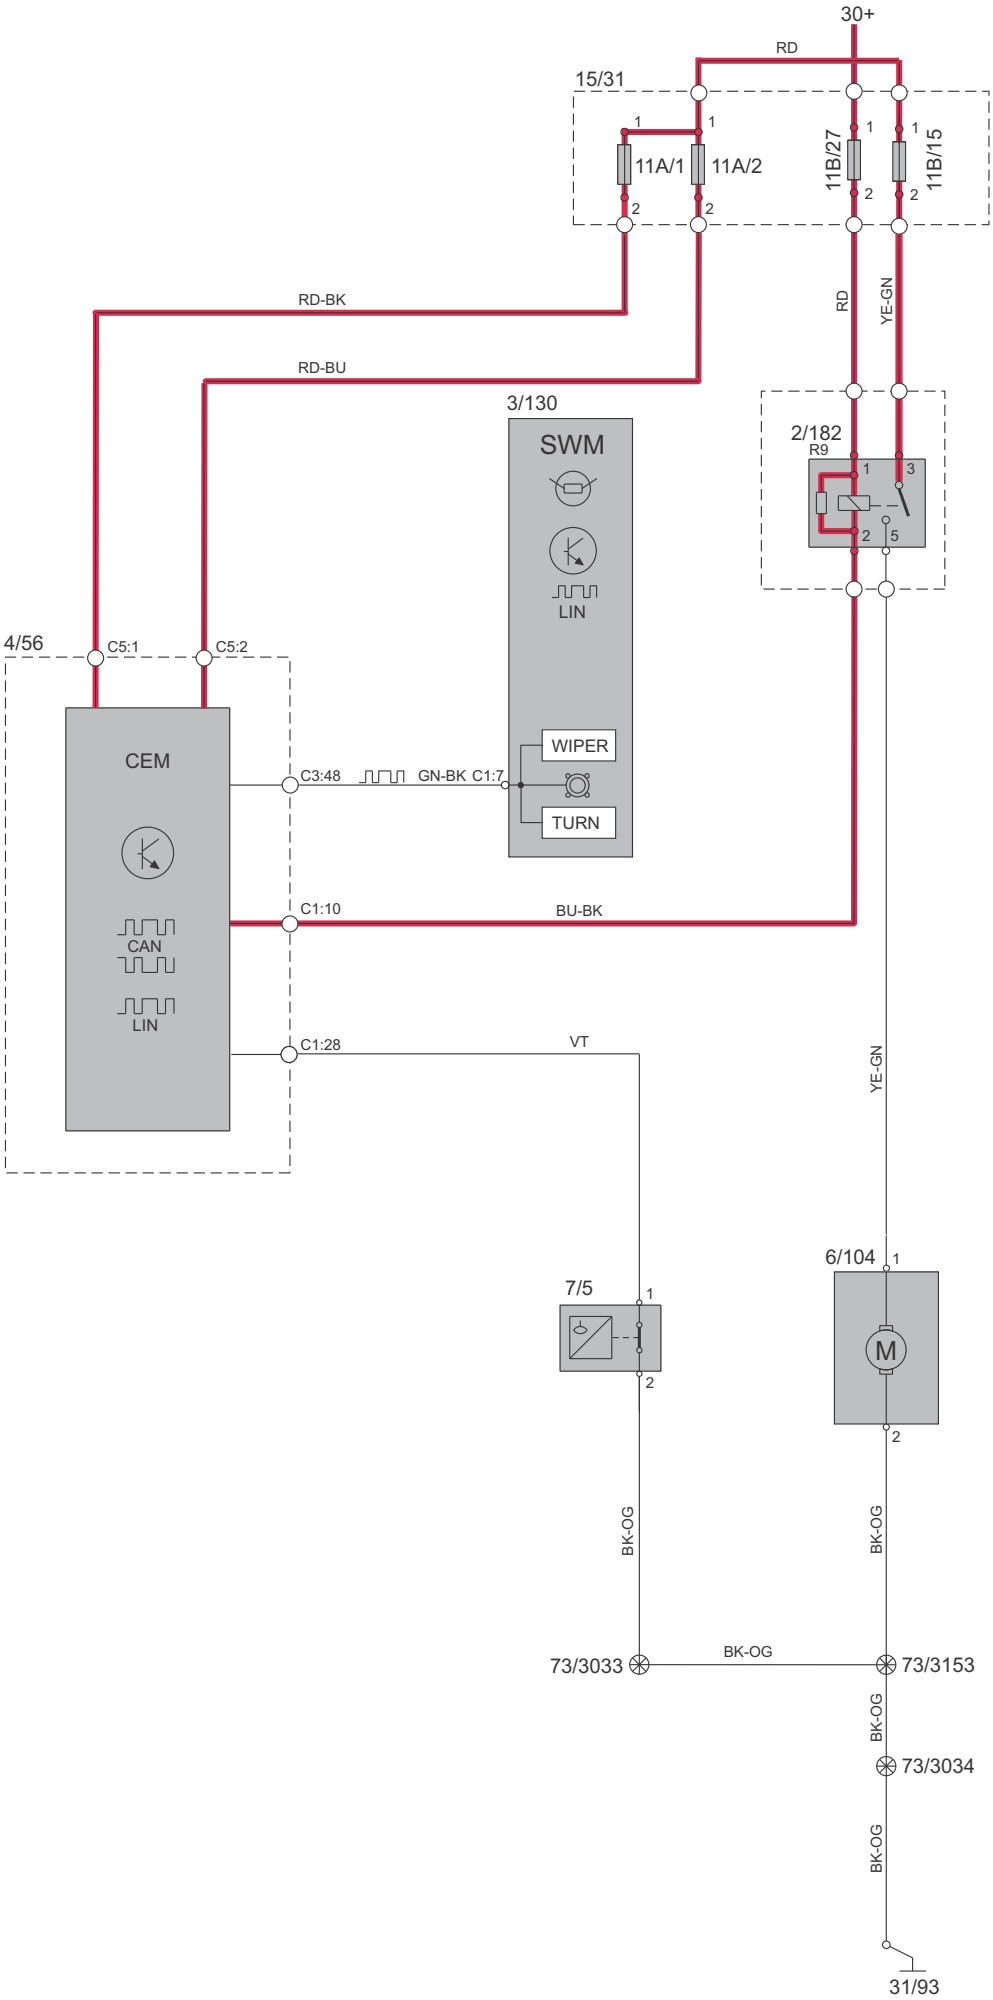
30+
RD
15/31
11A/1
11A/2
11B/27
11B/15
RD-BK
RD-BU
RD
YE-GN
3/130
SWM
LIN
2/182
R9
4/56
C5:1
C5:2
CEM
C3:48
GN-BK
C1:7
WIPER
TURN
C1:10
BU-BK
CAN
LIN
C1:28
VT
YE-GN
6/104
7/5
M
BK-OG
BK-OG
73/3033
BK-OG
73/3153
BK-OG
73/3034
BK-OG
31/93
C34W022

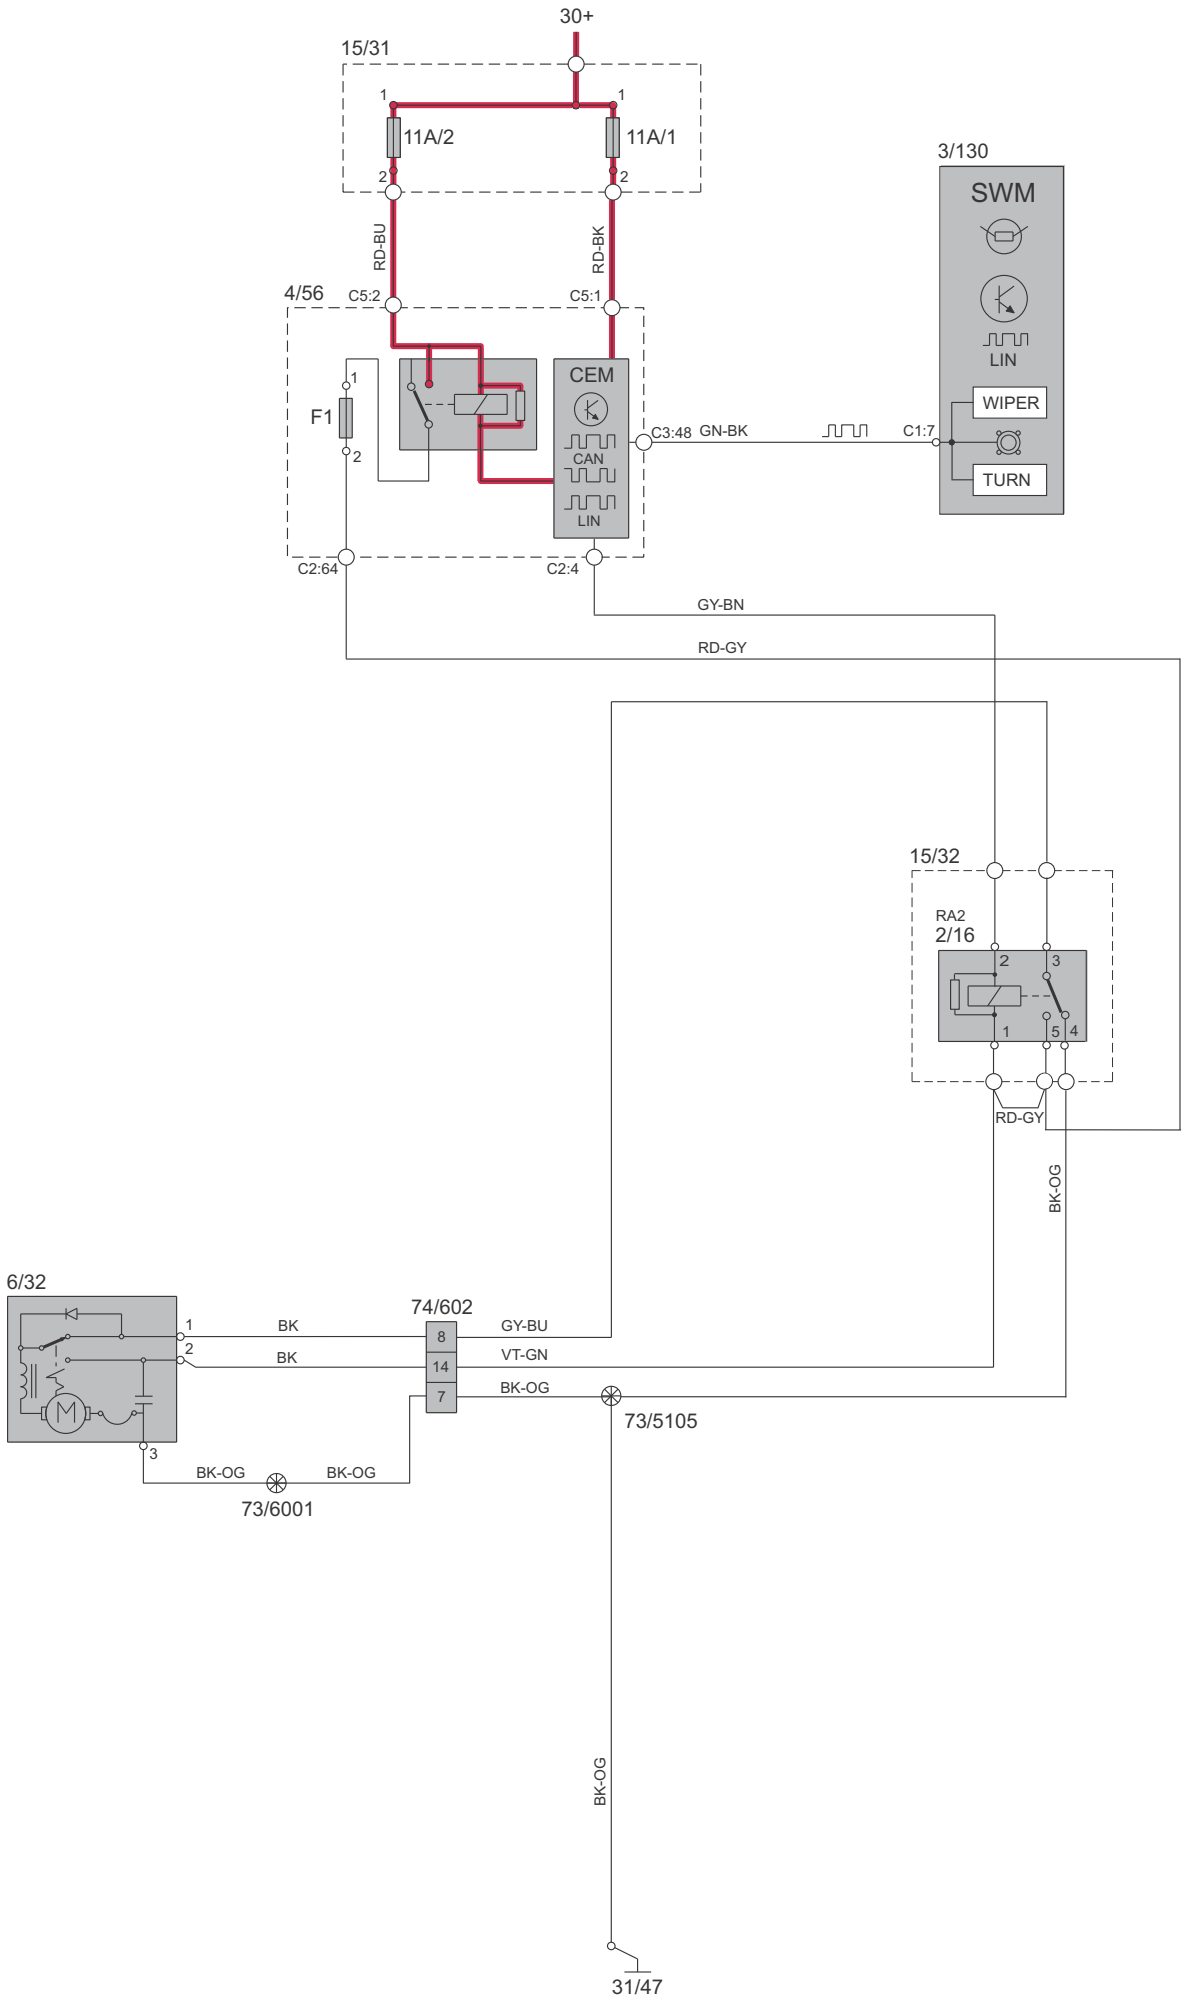
30+
15/31
11A/2
11A/1
RD-BU
RD-BK
4/56
C5:2
C5:1
F1
CEM
CAN
LIN
C3:48
GN-BK
C1:7
3/130
SWM
LIN
WIPER
TURN
C2:64
C2:4
GY-BN
RD-GY
15/32
RA2
2/16
RD-GY
BK-OG
6/32
74/602
BK
BK
GY-BU
VT-GN
BK-OG
73/5105
BK-OG
BK-OG
73/6001
BK-OG
31/47
C33W188

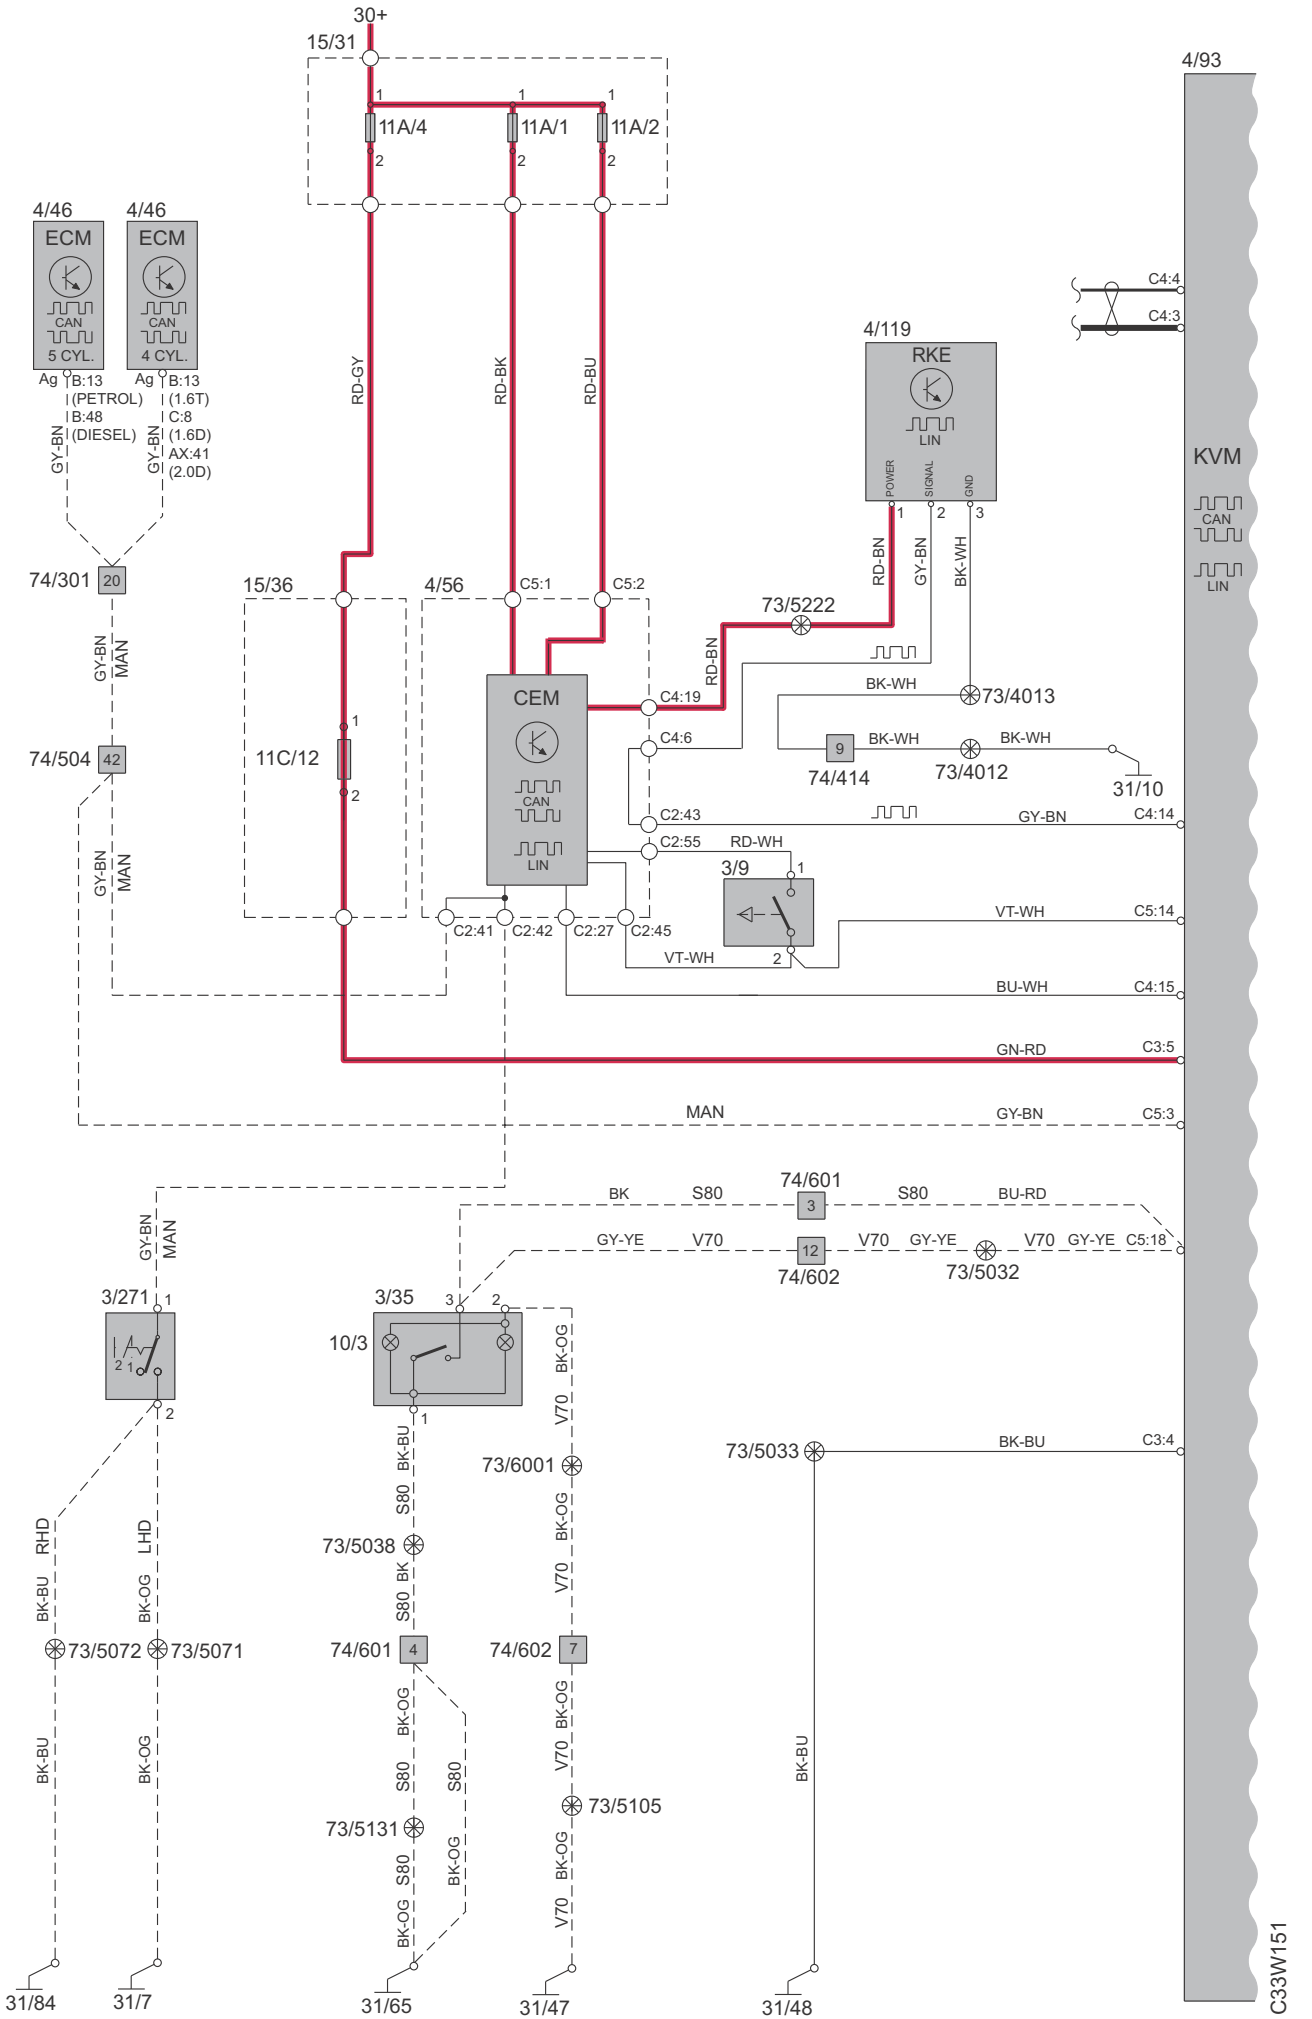
30+
15/31
11A/4
11A/1
11A/2
4/93
4/46
ECM
CAN
5 CYL.
4 CYL.
Ag
B:13
(PETROL)
B:48
(DIESEL)
B:13
(1.6T)
C:8
(1.6D)
AX:41
(2.0D)
GY-BN
74/301
20
MAN
74/504
42
15/36
11C/12
4/56
C5:1
C5:2
CEM
LIN
RD-GY
RD-BK
RD-BU
4/119
RKE
POWER
SIGNAL
GND
RD-BN
BK-WH
73/5222
73/4013
C4:19
C4:6
9
74/414
73/4012
31/10
C2:43
C4:14
C2:55
RD-WH
3/9
C2:41
C2:42
C2:27
C2:45
VT-WH
C5:14
BU-WH
C4:15
GN-RD
C3:5
C5:3
KVM
C4:4
C4:3
74/601
3
S80
BU-RD
GY-YE
V70
12
74/602
73/5032
C5:18
3/271
3/35
10/3
BK-OG
V70
73/6001
BK-BU
S80
73/5033
C3:4
RHD
LHD
73/5038
73/5072
73/5071
74/601
4
74/602
7
73/5105
73/5131
31/84
31/7
31/65
31/47
31/48
C33W151

Group 36 Additional electrical equipment
Keyless vehicle 2:2

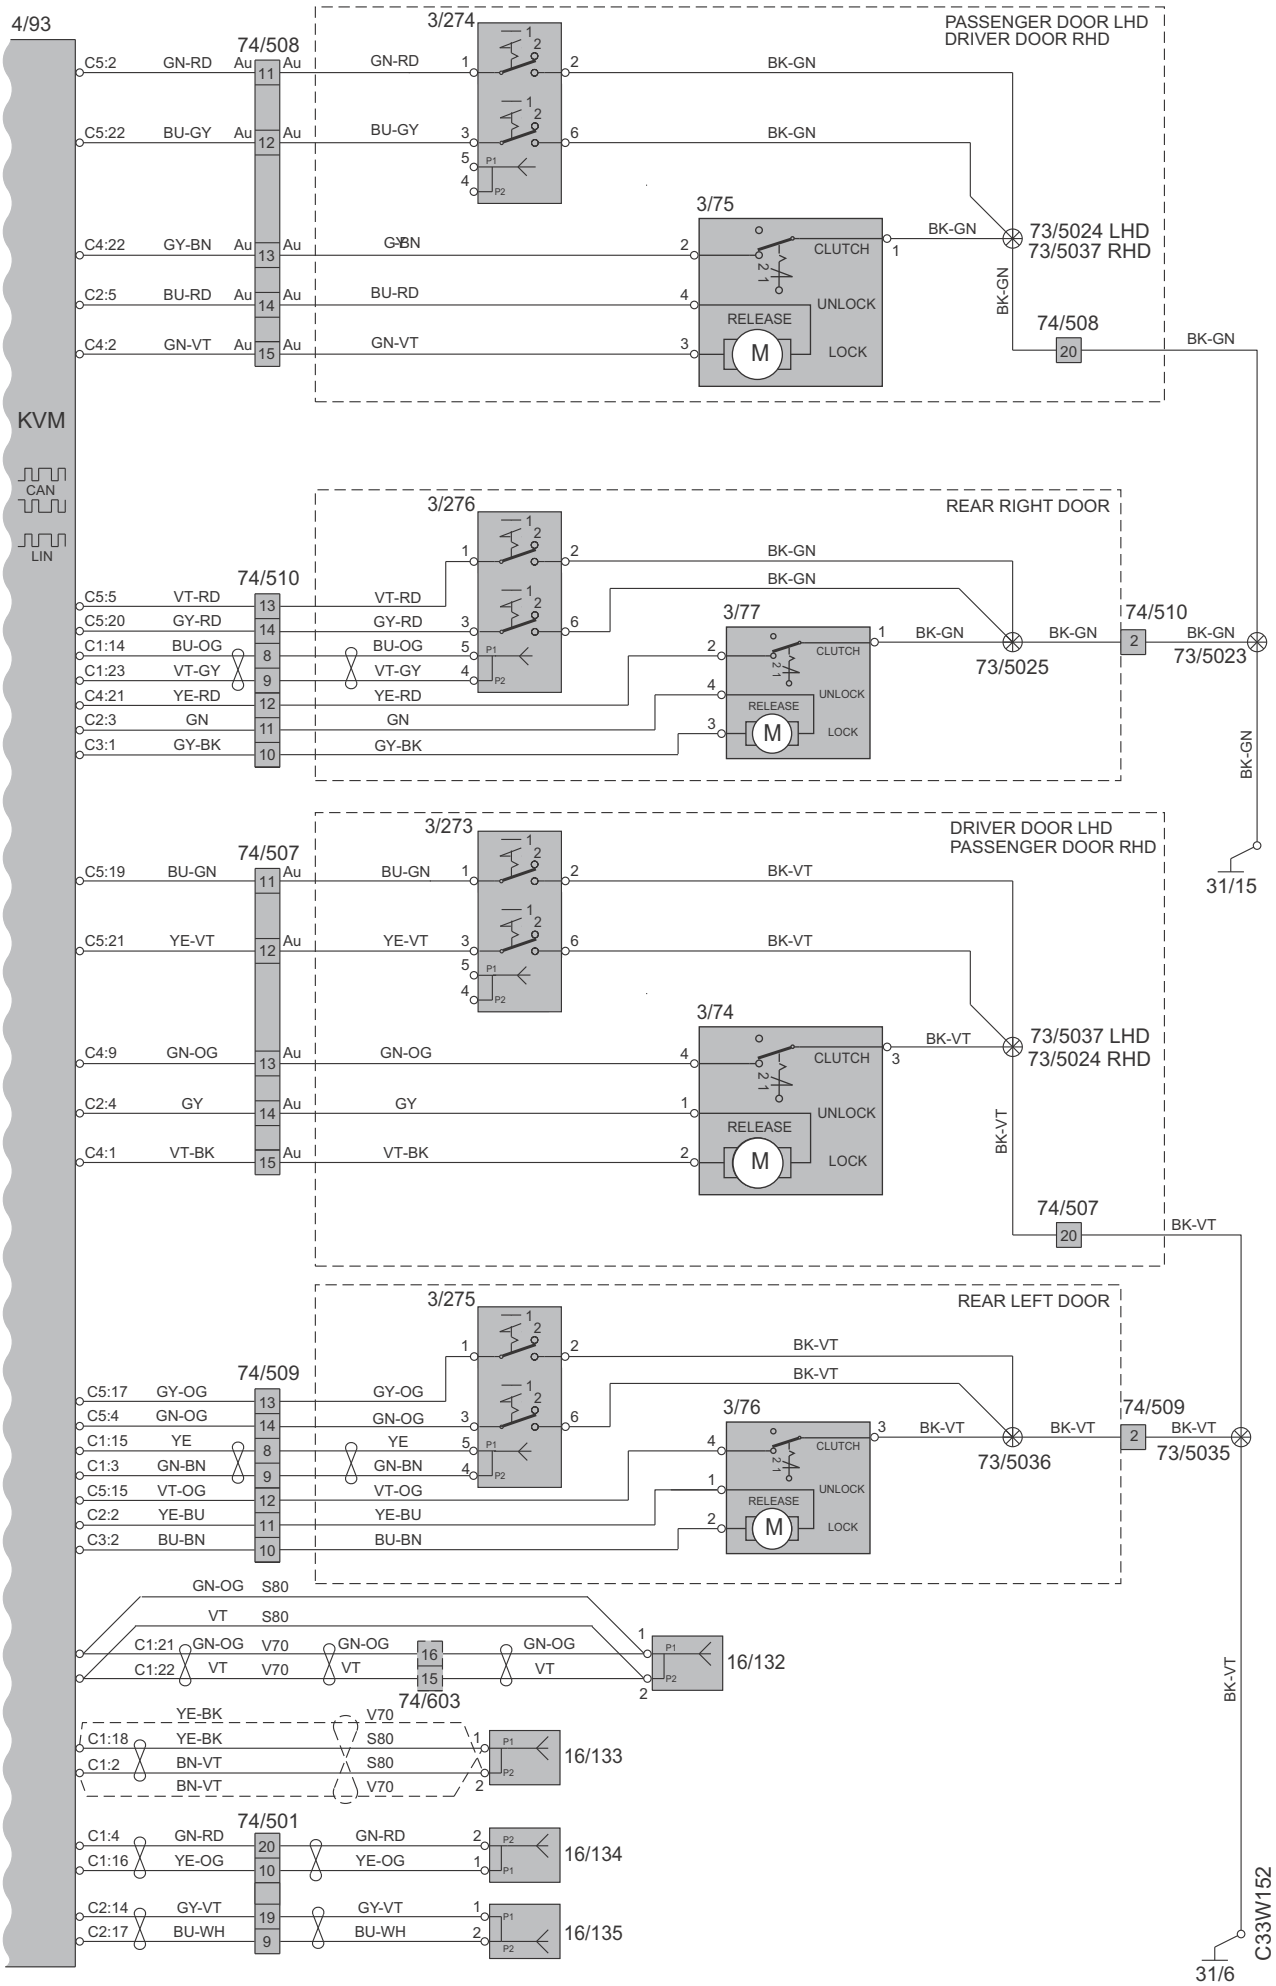

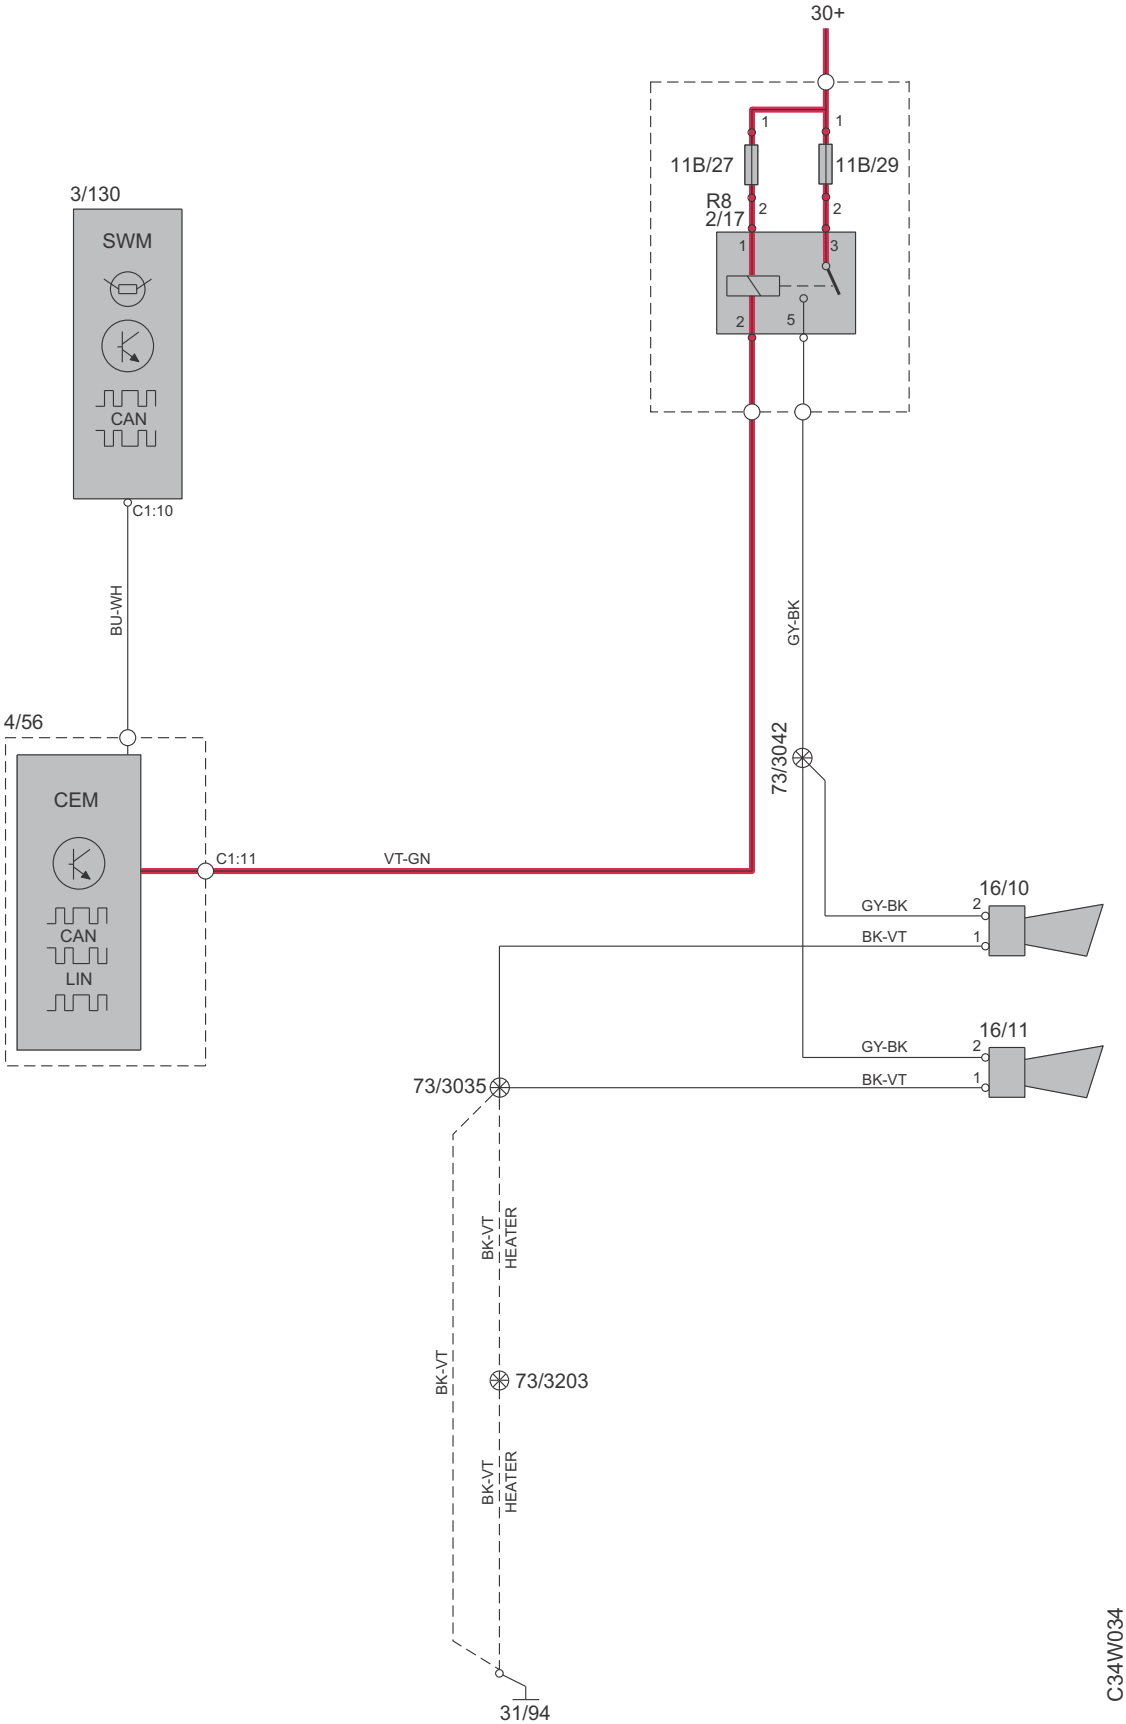
30+
11B/27
11B/29
R8
2/17
3/130
SWM
CAN
C1:10
BU-WH
4/56
CEM
CAN
LIN
C1:11
VT-GN
GY-BK
73/3042
16/10
GY-BK
BK-VT
16/11
GY-BK
BK-VT
73/3035
BK-VT
HEATER
73/3203
BK-VT
HEATER
31/94
C34W034

Group 36 Additional electrical equipment
Anti-theft alarm

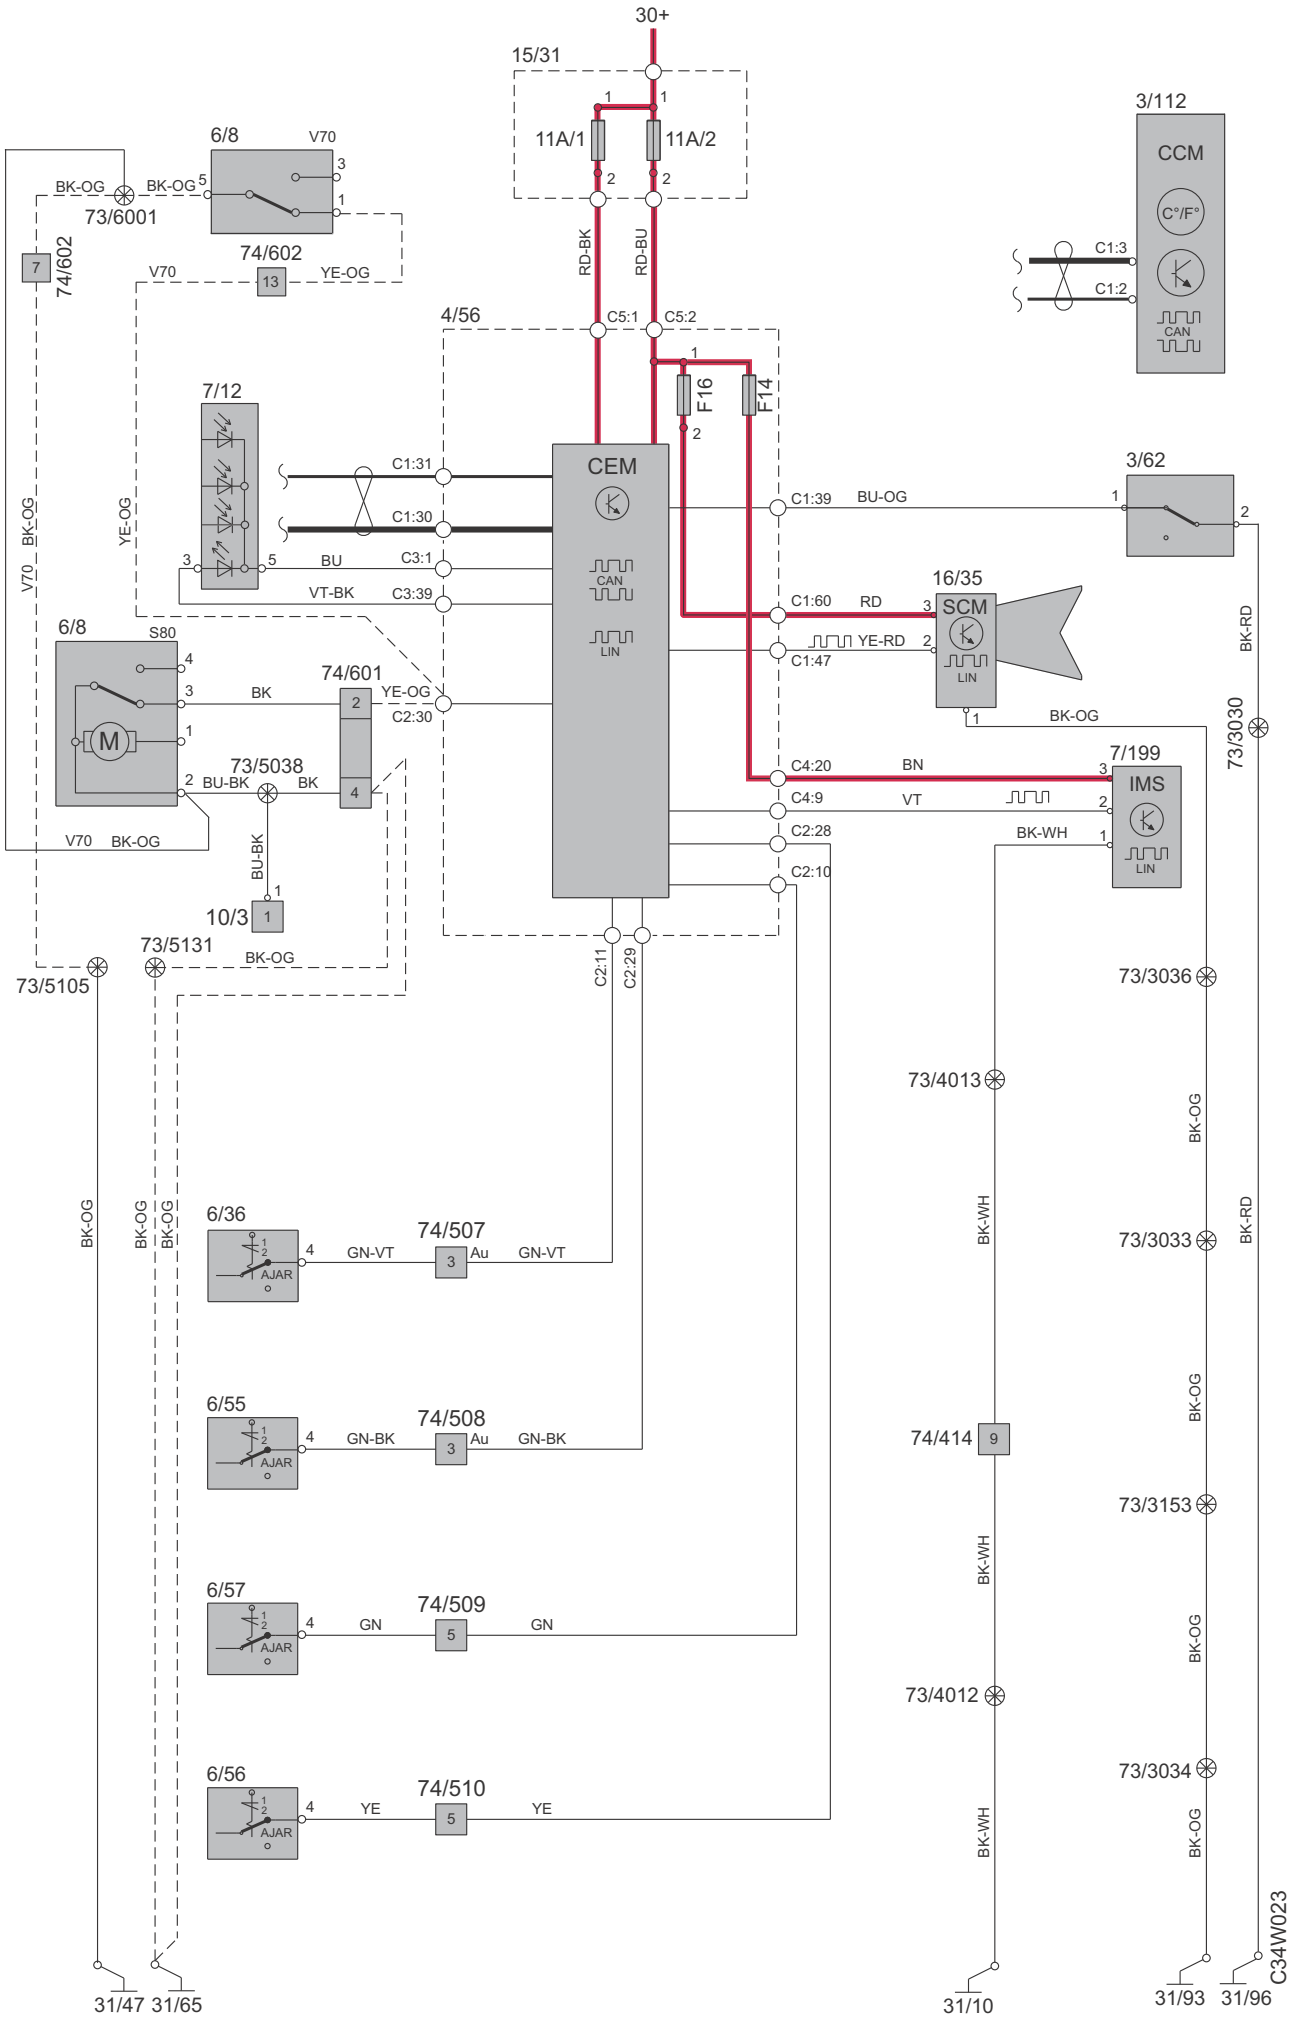

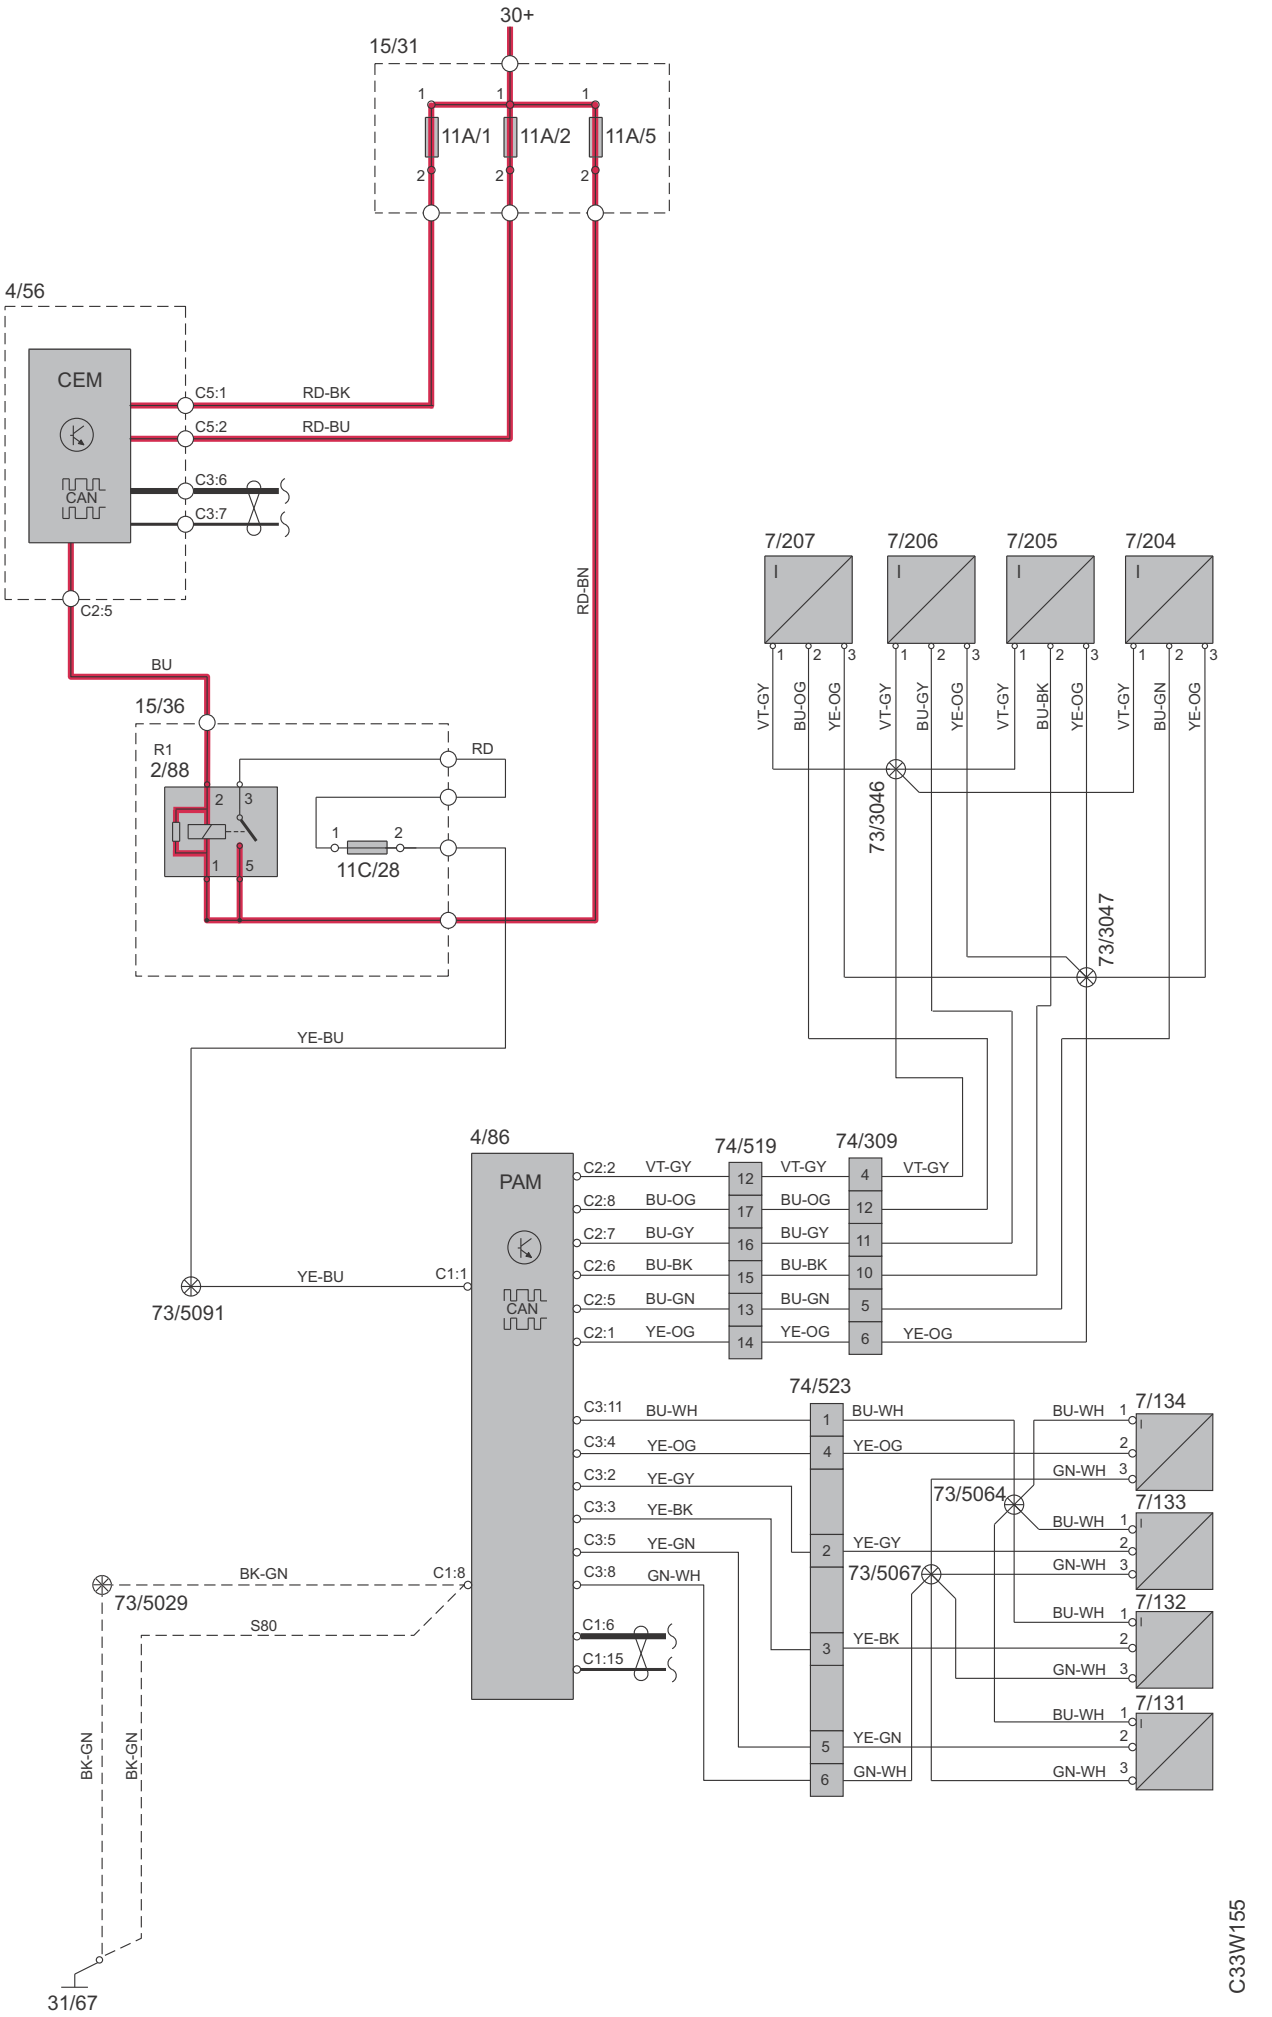
30+
15/31
11A/1
11A/2
11A/5
4/56
CEM
CAN
C5:1
RD-BK
C5:2
RD-BU
C3:6
C3:7
C2:5
BU
RD-BN
15/36
R1
2/88
RD
11C/28
YE-BU
73/5091
7/207
7/206
7/205
7/204
VT-GY
BU-OG
YE-OG
BU-GY
BU-BK
BU-GN
73/3046
73/3047
4/86
PAM
CAN
C1:1
74/519
74/309
C2:2
C2:8
C2:7
C2:6
C2:5
C2:1
74/523
C3:11
BU-WH
C3:4
YE-OG
C3:2
YE-GY
C3:3
YE-BK
C3:5
YE-GN
C3:8
GN-WH
C1:6
C1:15
7/134
7/133
7/132
7/131
73/5064
73/5067
BK-GN
C1:8
73/5029
S80
31/67
C33W155

Group 36 Additional electrical equipment
Collision warning with power brake booster

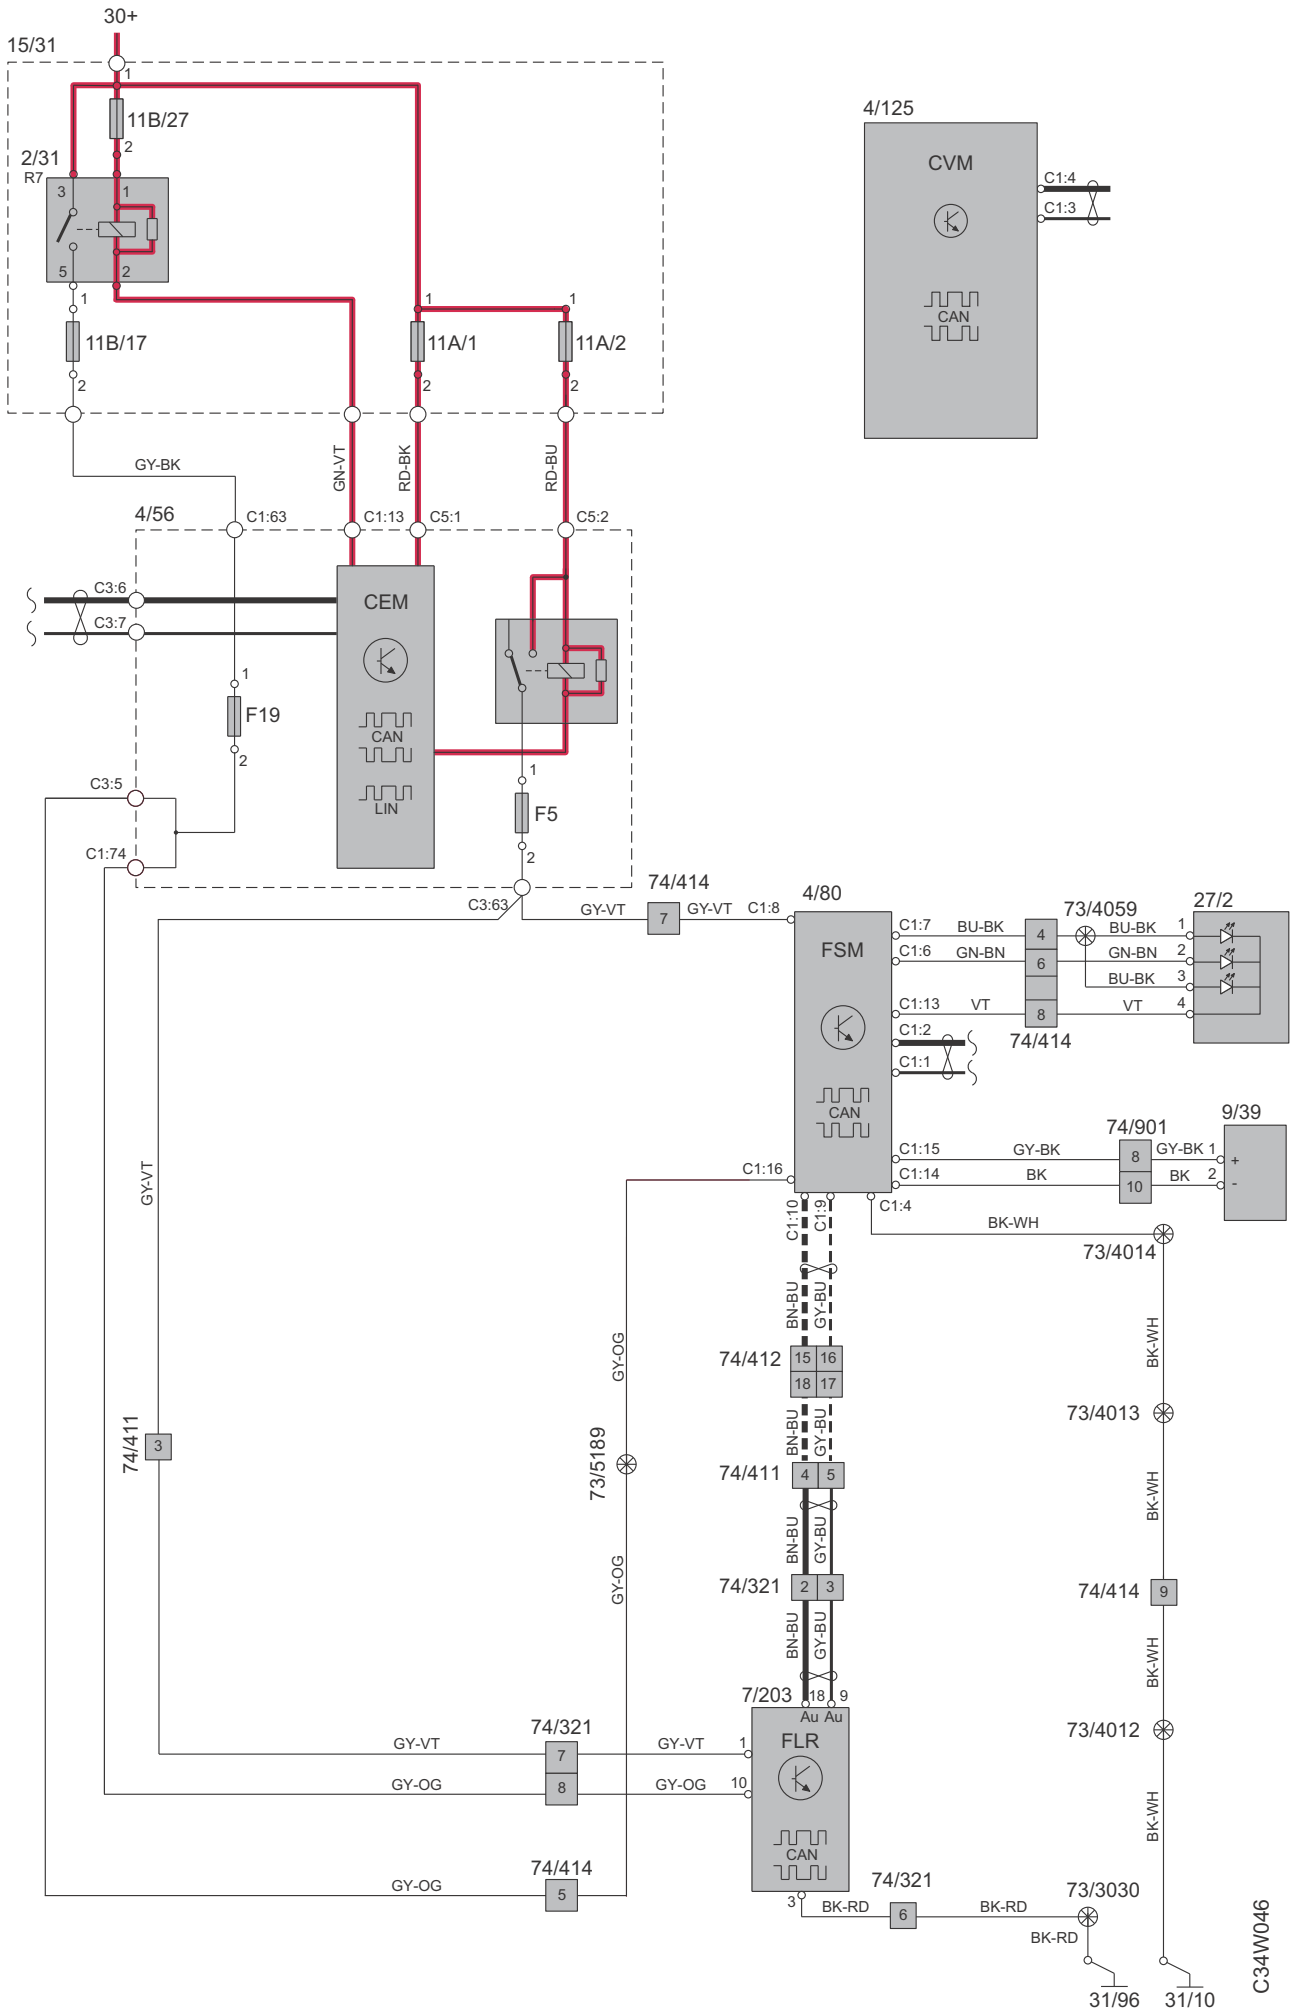

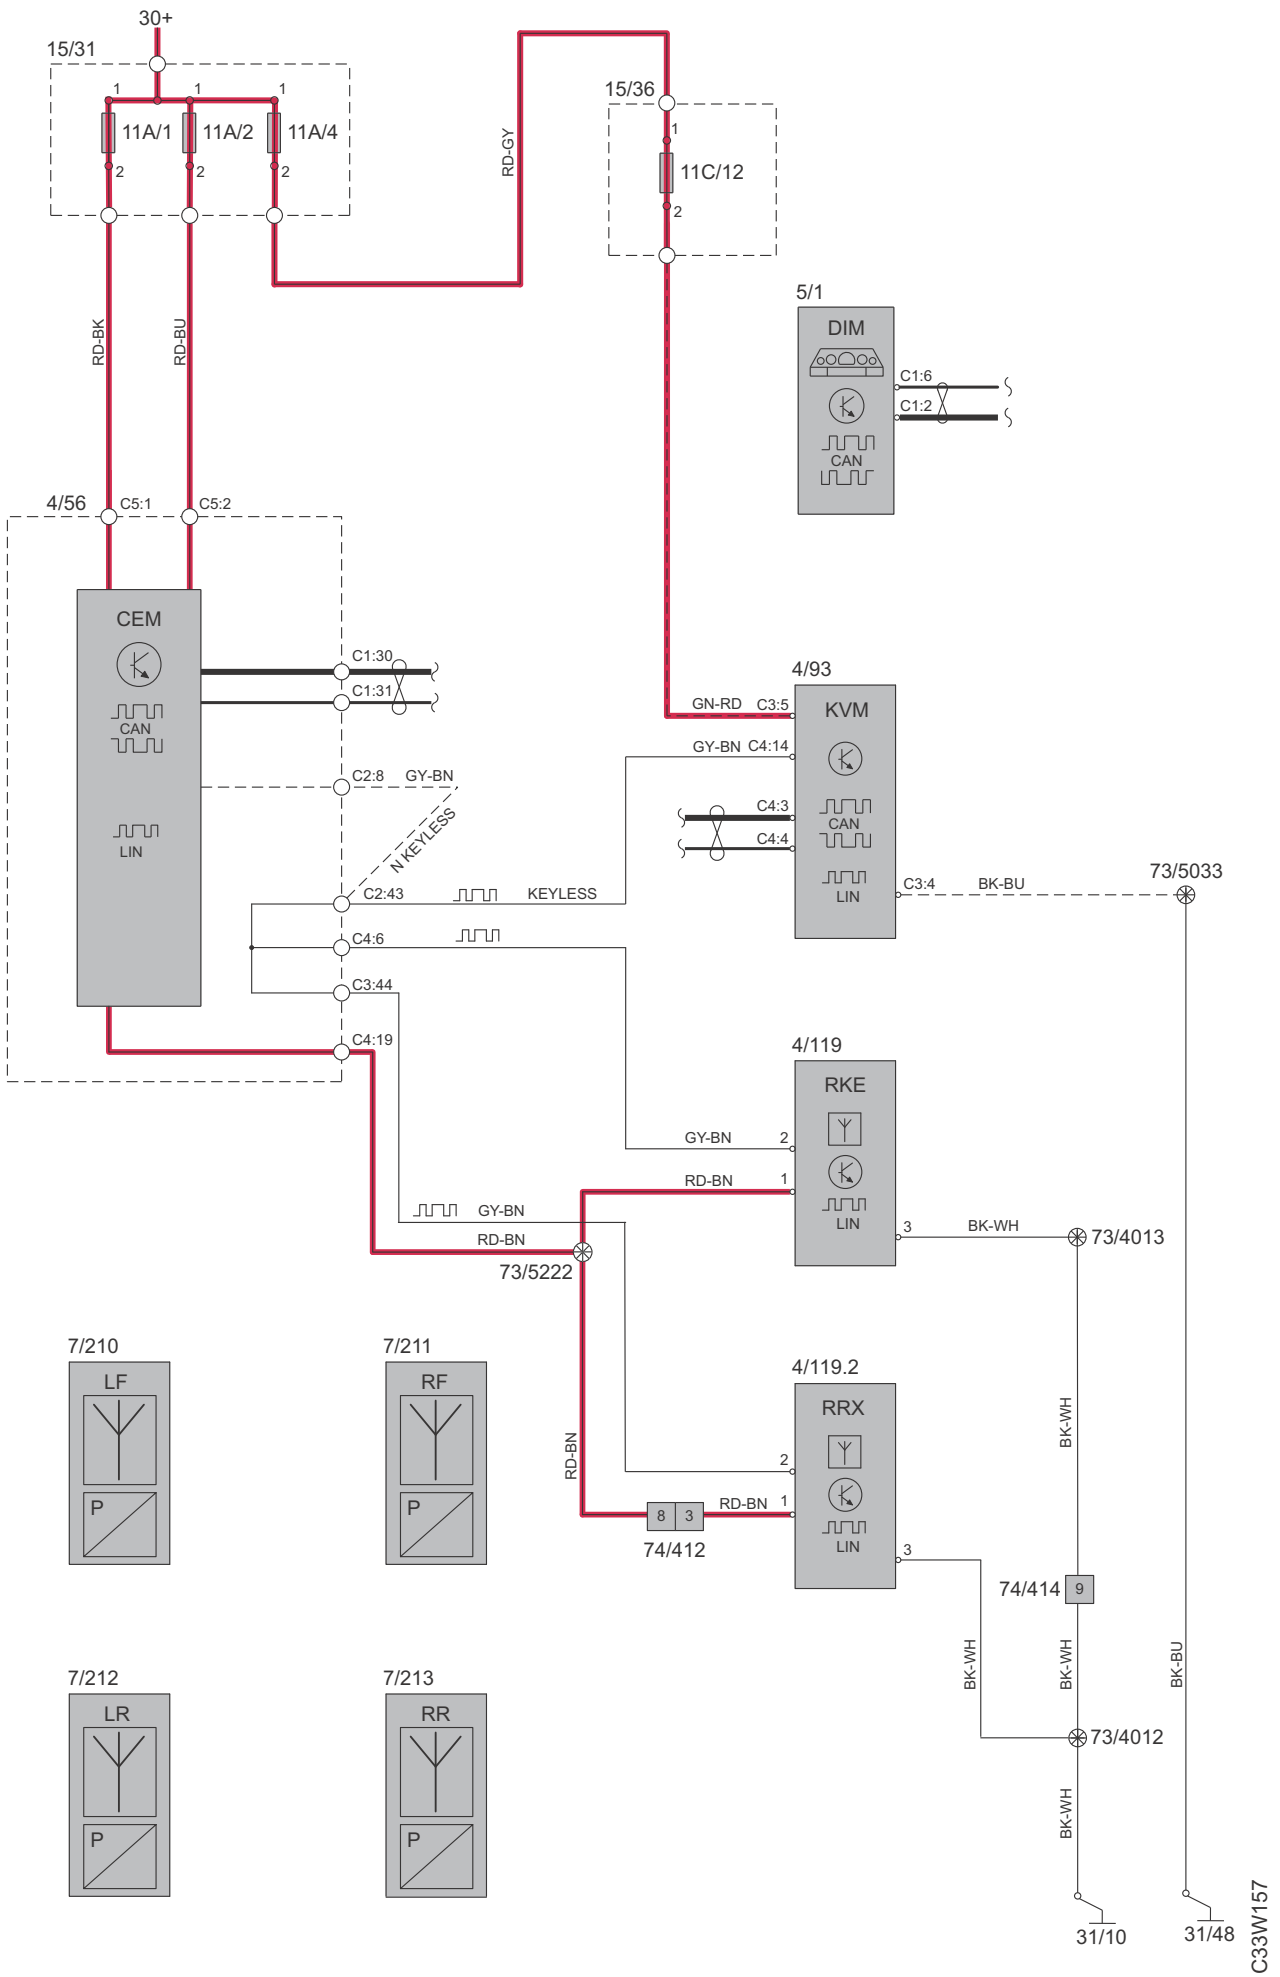
30+
15/31
11A/1
11A/2
11A/4
15/36
11C/12
RD-GY
RD-BK
RD-BU
5/1
DIM
C1:6
C1:2
CAN
4/56
C5:1
C5:2
CEM
C1:30
C1:31
CAN
LIN
C2:8
GY-BN
N KEYLESS
C2:43
KEYLESS
C4:6
C3:44
C4:19
4/93
KVM
GN-RD
C3:5
GY-BN
C4:14
C4:3
C4:4
CAN
LIN
C3:4
BK-BU
73/5033
4/119
RKE
GY-BN
RD-BN
LIN
3
BK-WH
73/4013
73/5222
GY-BN
RD-BN
7/210
LF
P
7/211
RF
P
4/119.2
RRX
RD-BN
8
3
74/412
LIN
74/414
9
BK-WH
BK-WH
BK-BU
73/4012
BK-WH
7/212
LR
P
7/213
RR
P
31/10
31/48
C33W157

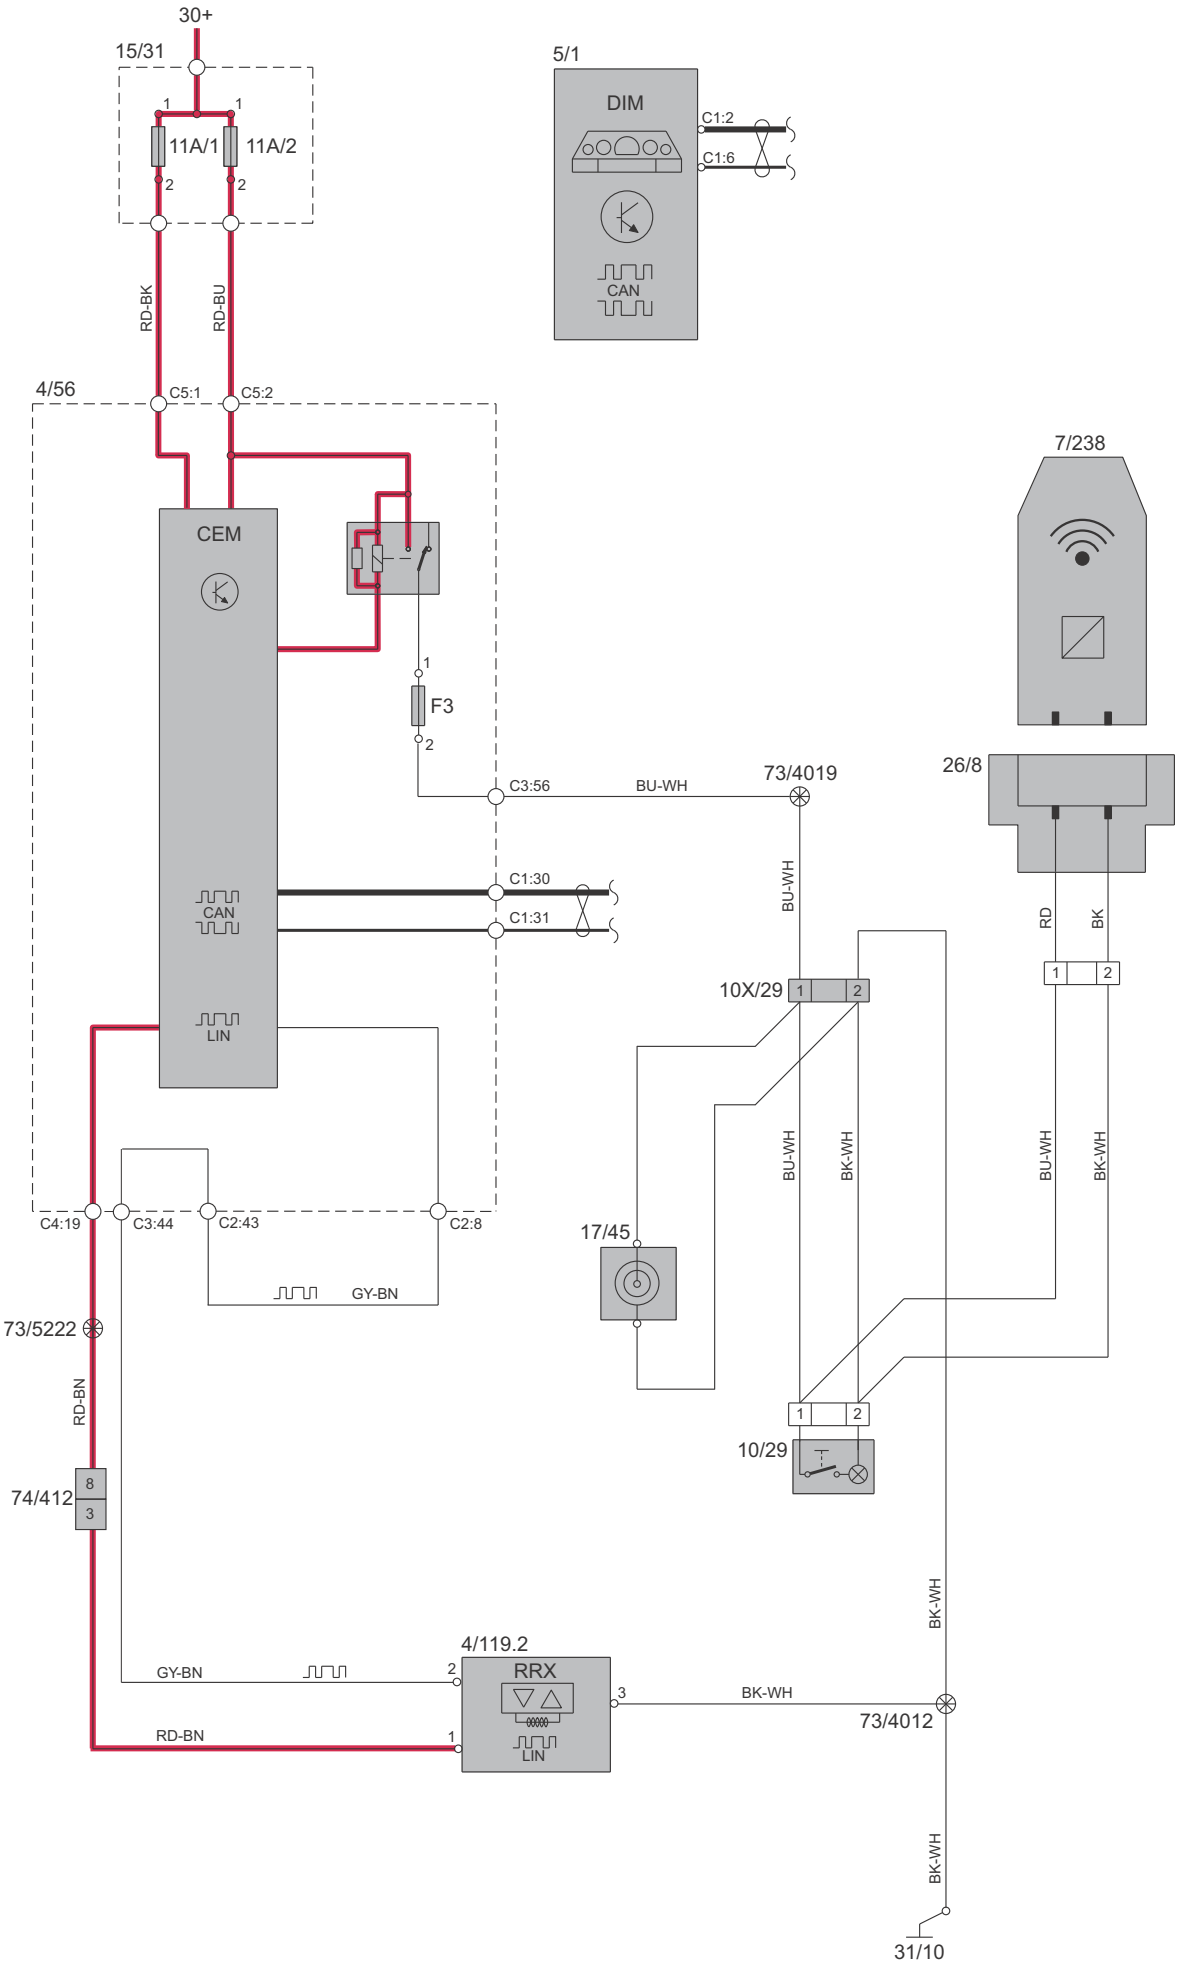
30+
15/31
11A/1
11A/2
RD-BK
RD-BU
4/56
C5:1
C5:2
CEM
CAN
LIN
F3
5/1
DIM
C1:2
C1:6
CAN
C3:56
BU-WH
73/4019
C1:30
C1:31
7/238
26/8
RD
BK
10X/29
BU-WH
BK-WH
17/45
10/29
C4:19
C3:44
C2:43
C2:8
GY-BN
73/5222
RD-BN
74/412
4/119.2
RRX
LIN
GY-BN
RD-BN
BK-WH
73/4012
31/10
C34W056

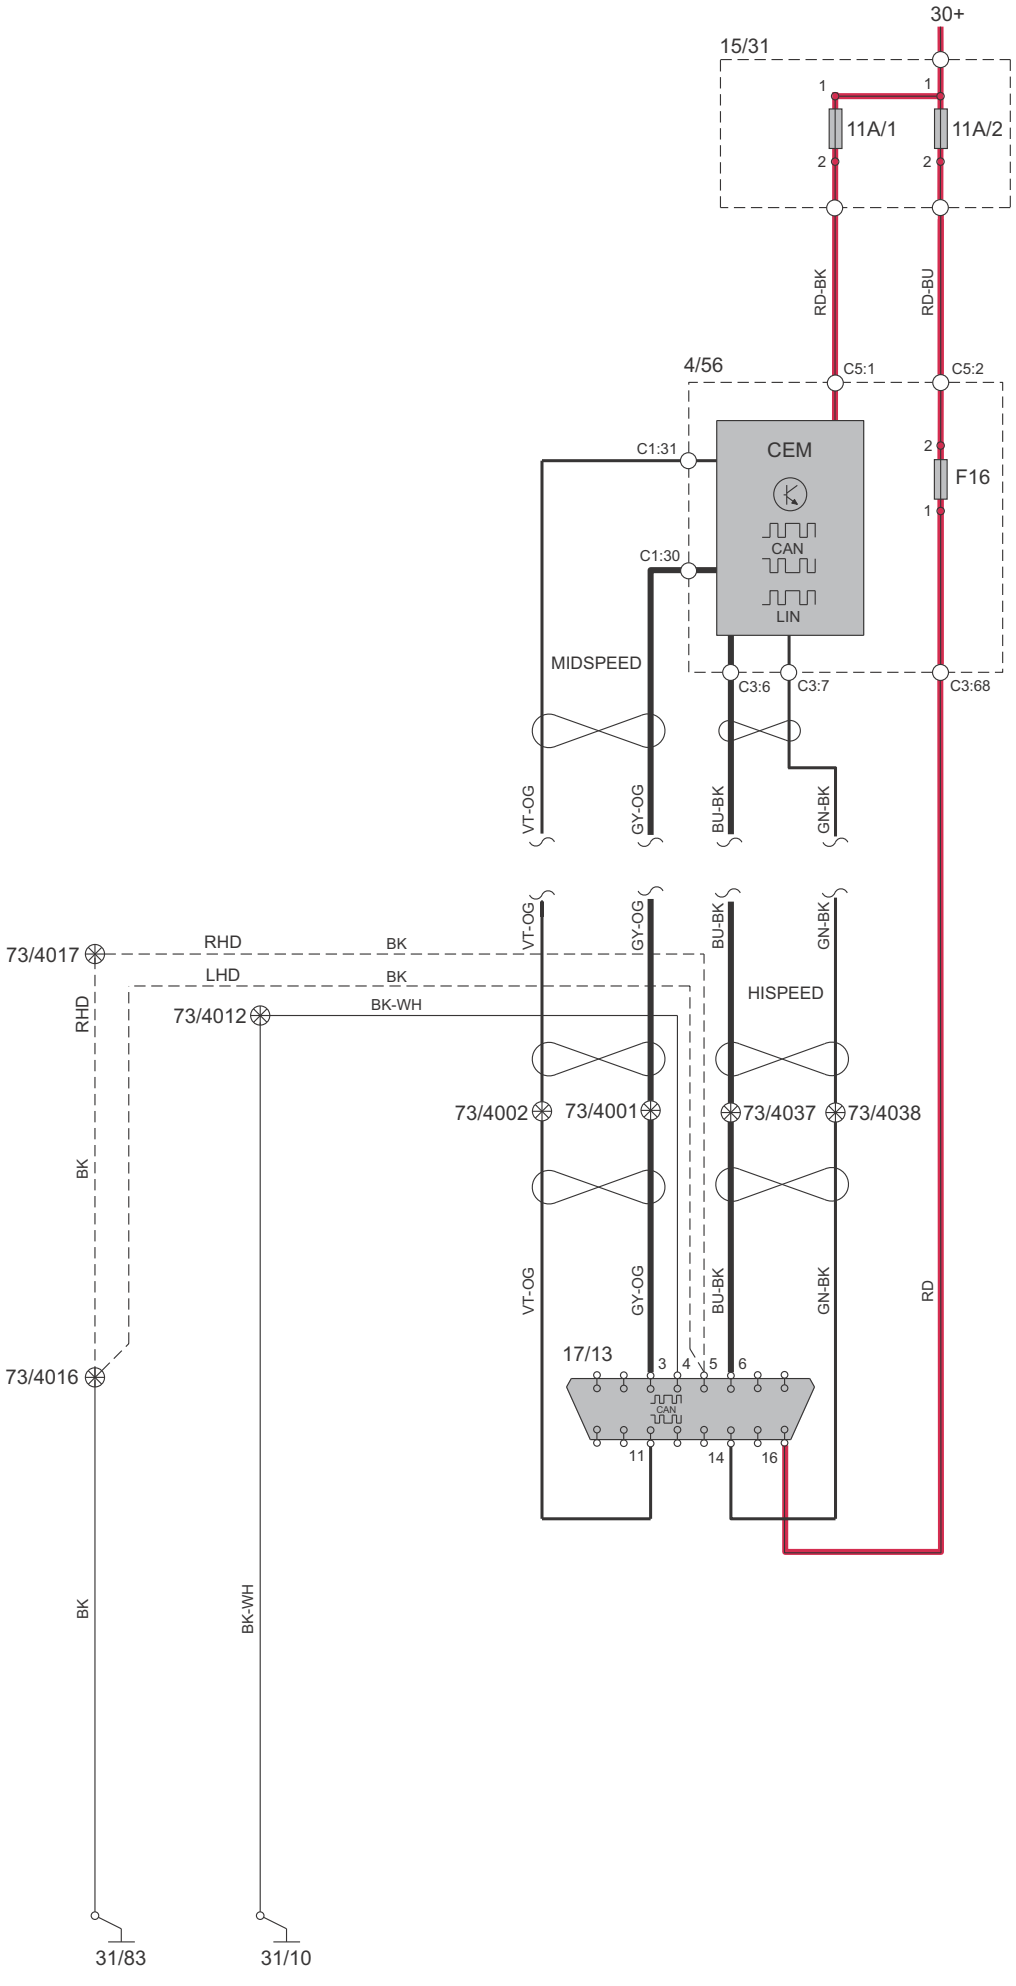
30+
15/31
11A/1
11A/2
RD-BK
RD-BU
4/56
C5:1
C5:2
CEM
C1:31
C1:30
CAN
LIN
F16
MIDSPEED
C3:6
C3:7
C3:68
VT-OG
GY-OG
BU-BK
GN-BK
HISPEED
73/4017
RHD
BK
LHD
BK
BK-WH
73/4012
73/4002
73/4001
73/4037
73/4038
73/4016
17/13
RD
31/83
31/10

C33W158

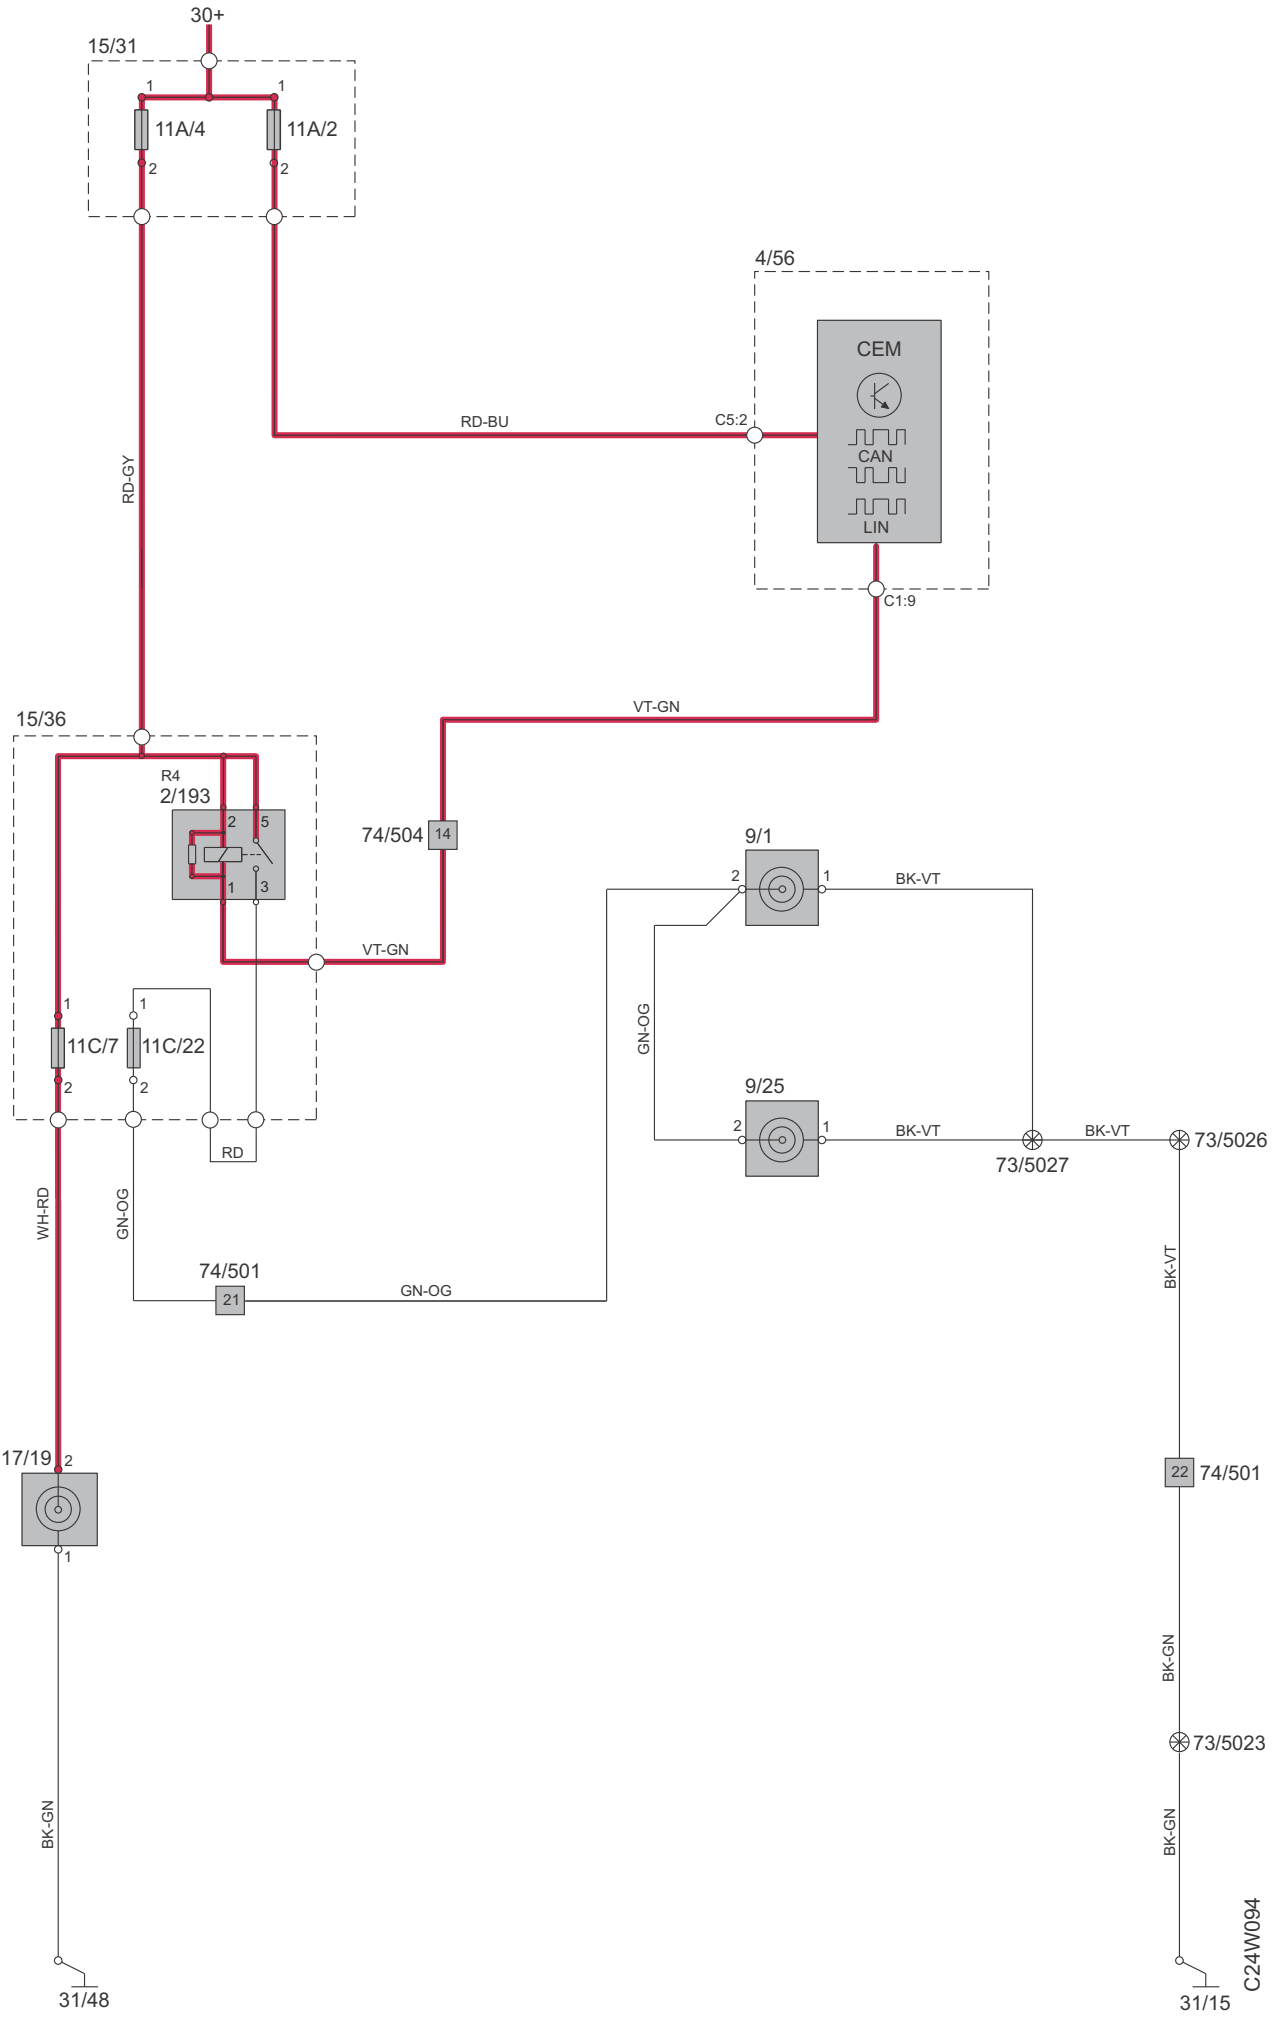
30+
15/31
11A/4
11A/2
4/56
CEM
CAN
LIN
C5:2
C1:9
RD-BU
RD-GY
VT-GN
15/36
R4
2/193
74/504
14
9/1
BK-VT
9/25
GN-OG
11C/7
11C/22
RD
WH-RD
74/501
21
73/5027
73/5026
22
17/19
BK-GN
73/5023
31/48
31/15
C24W094

Group 37 Wiring and fuses, Accessories
Outlet 12 V, S80

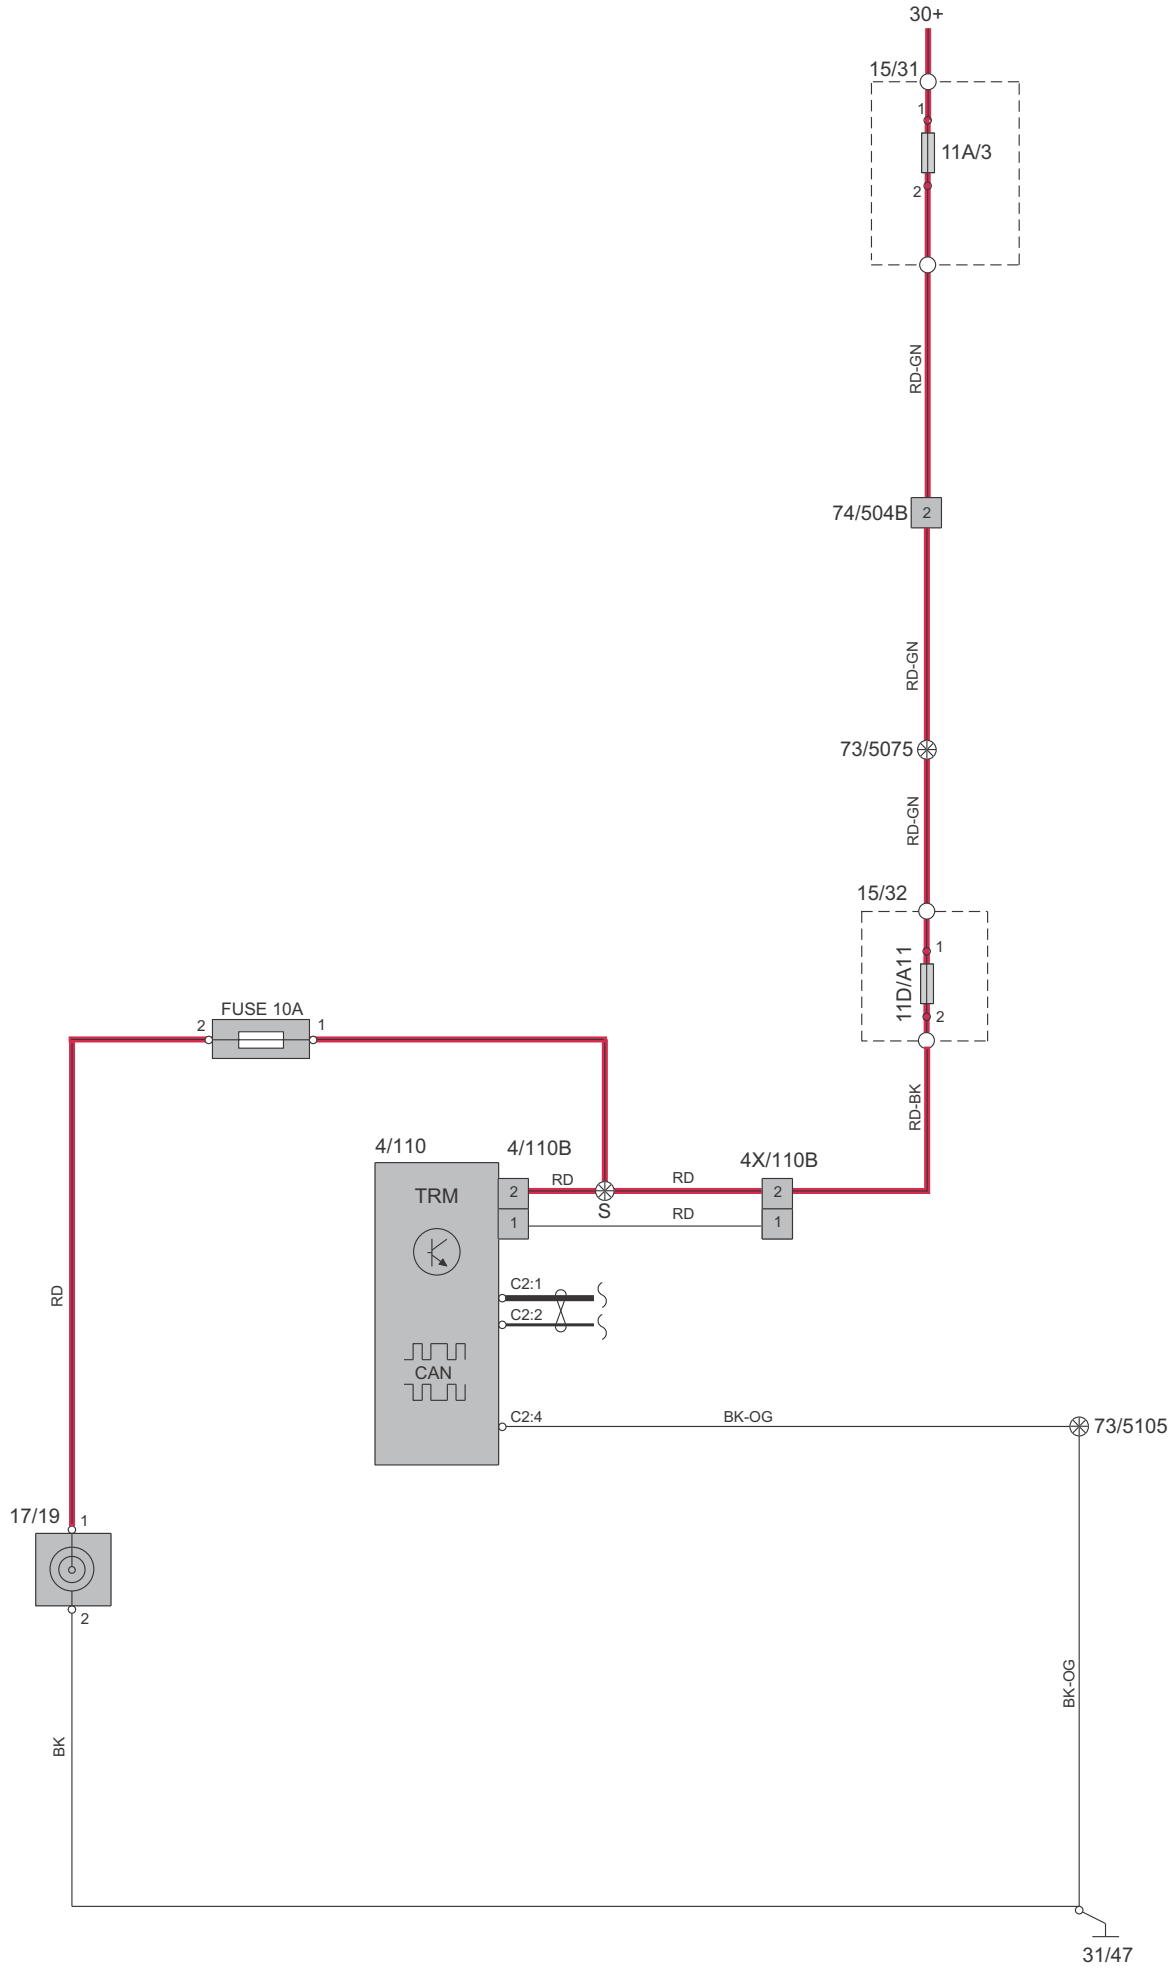

Group 37 Wiring and fuses, Accessories
Cable harness towbar/tow hitch 4-pin V70

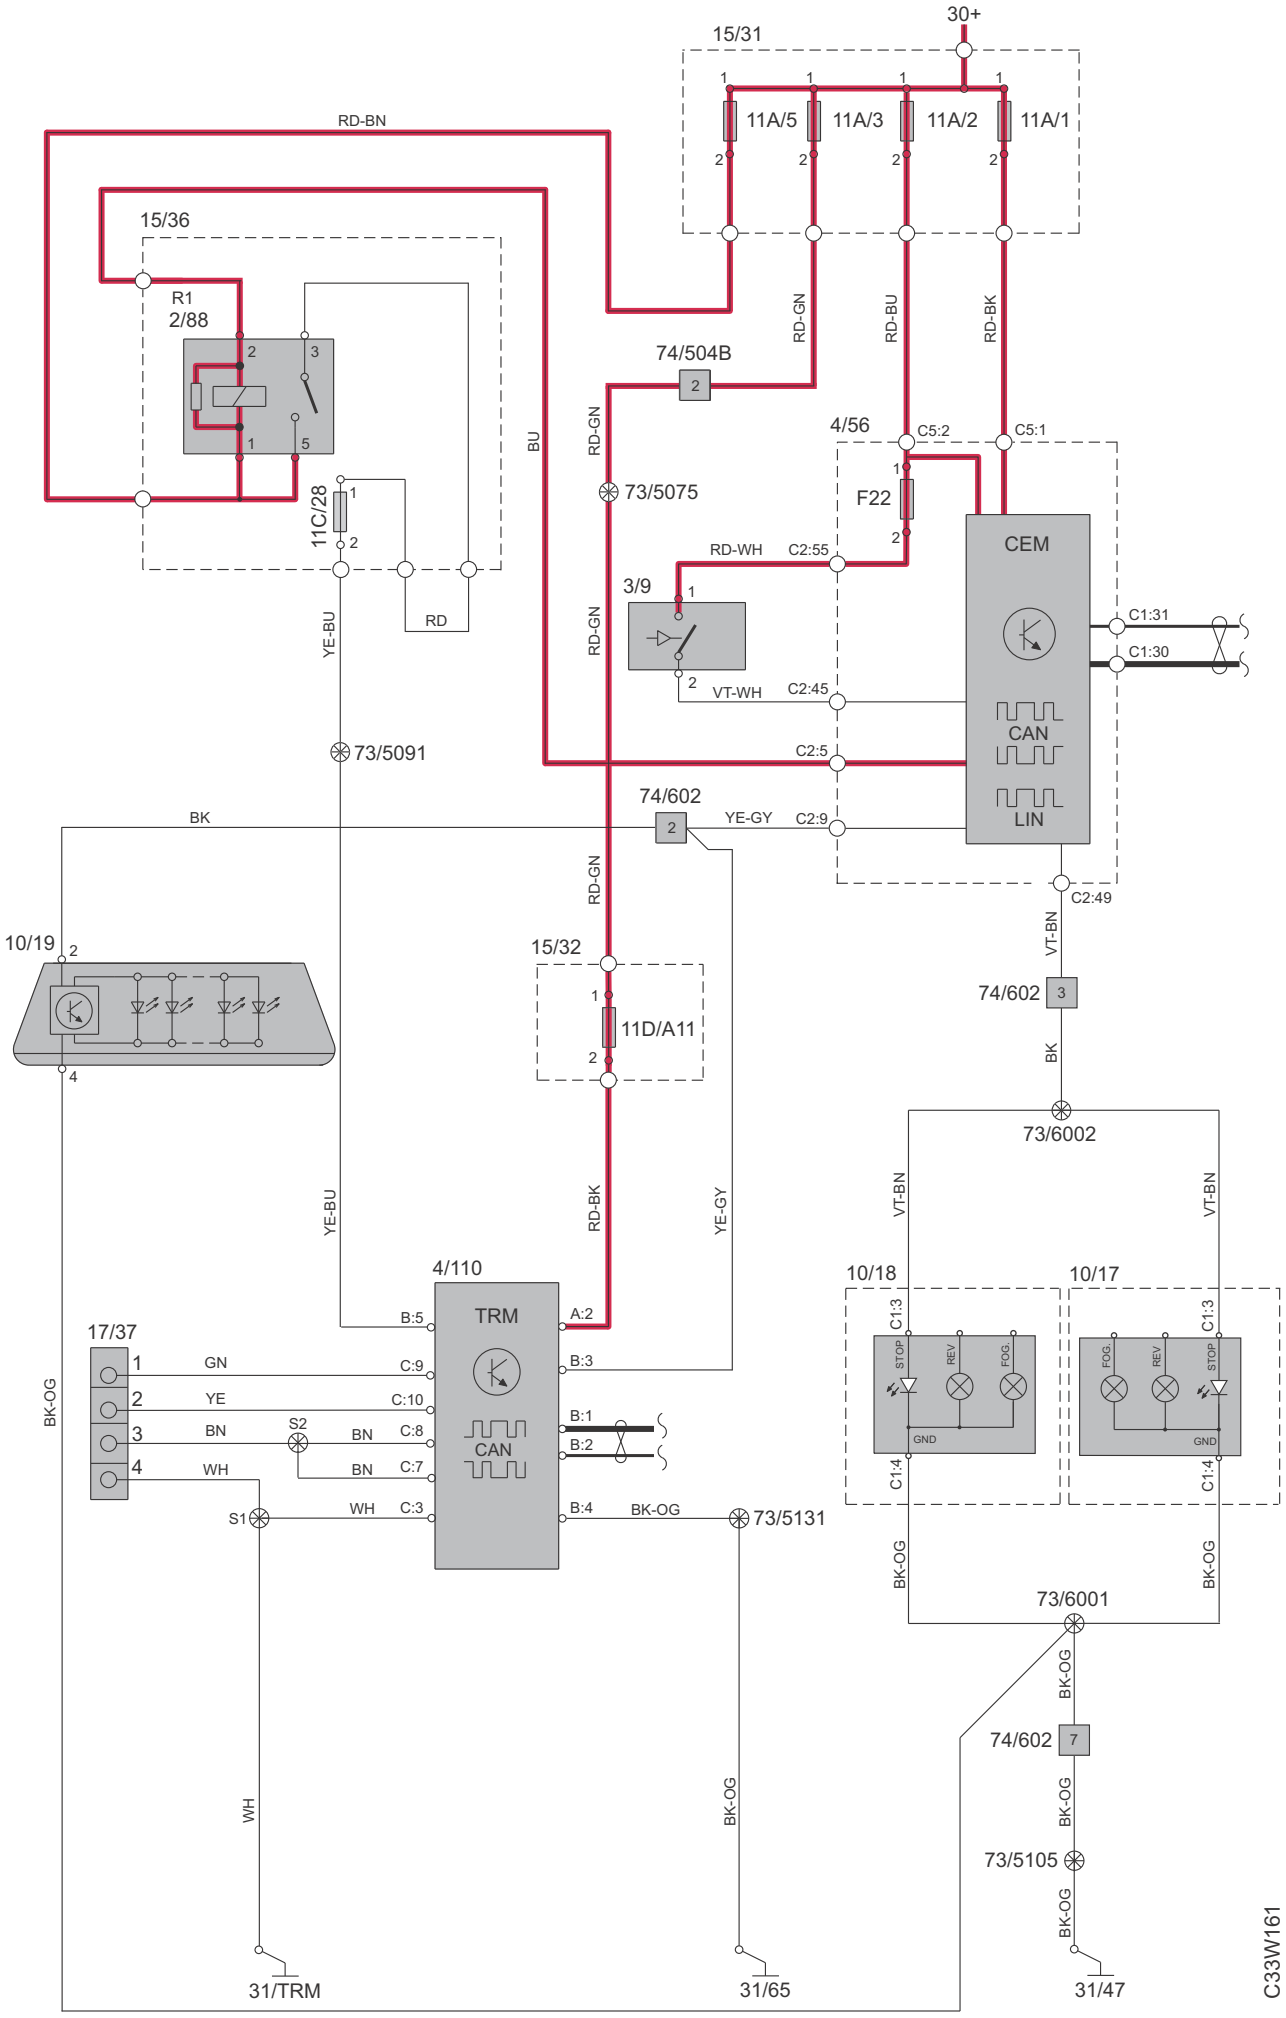

Group 37 Wiring and fuses, Accessories
Cable harness towbar/tow hitch 4-pin S80

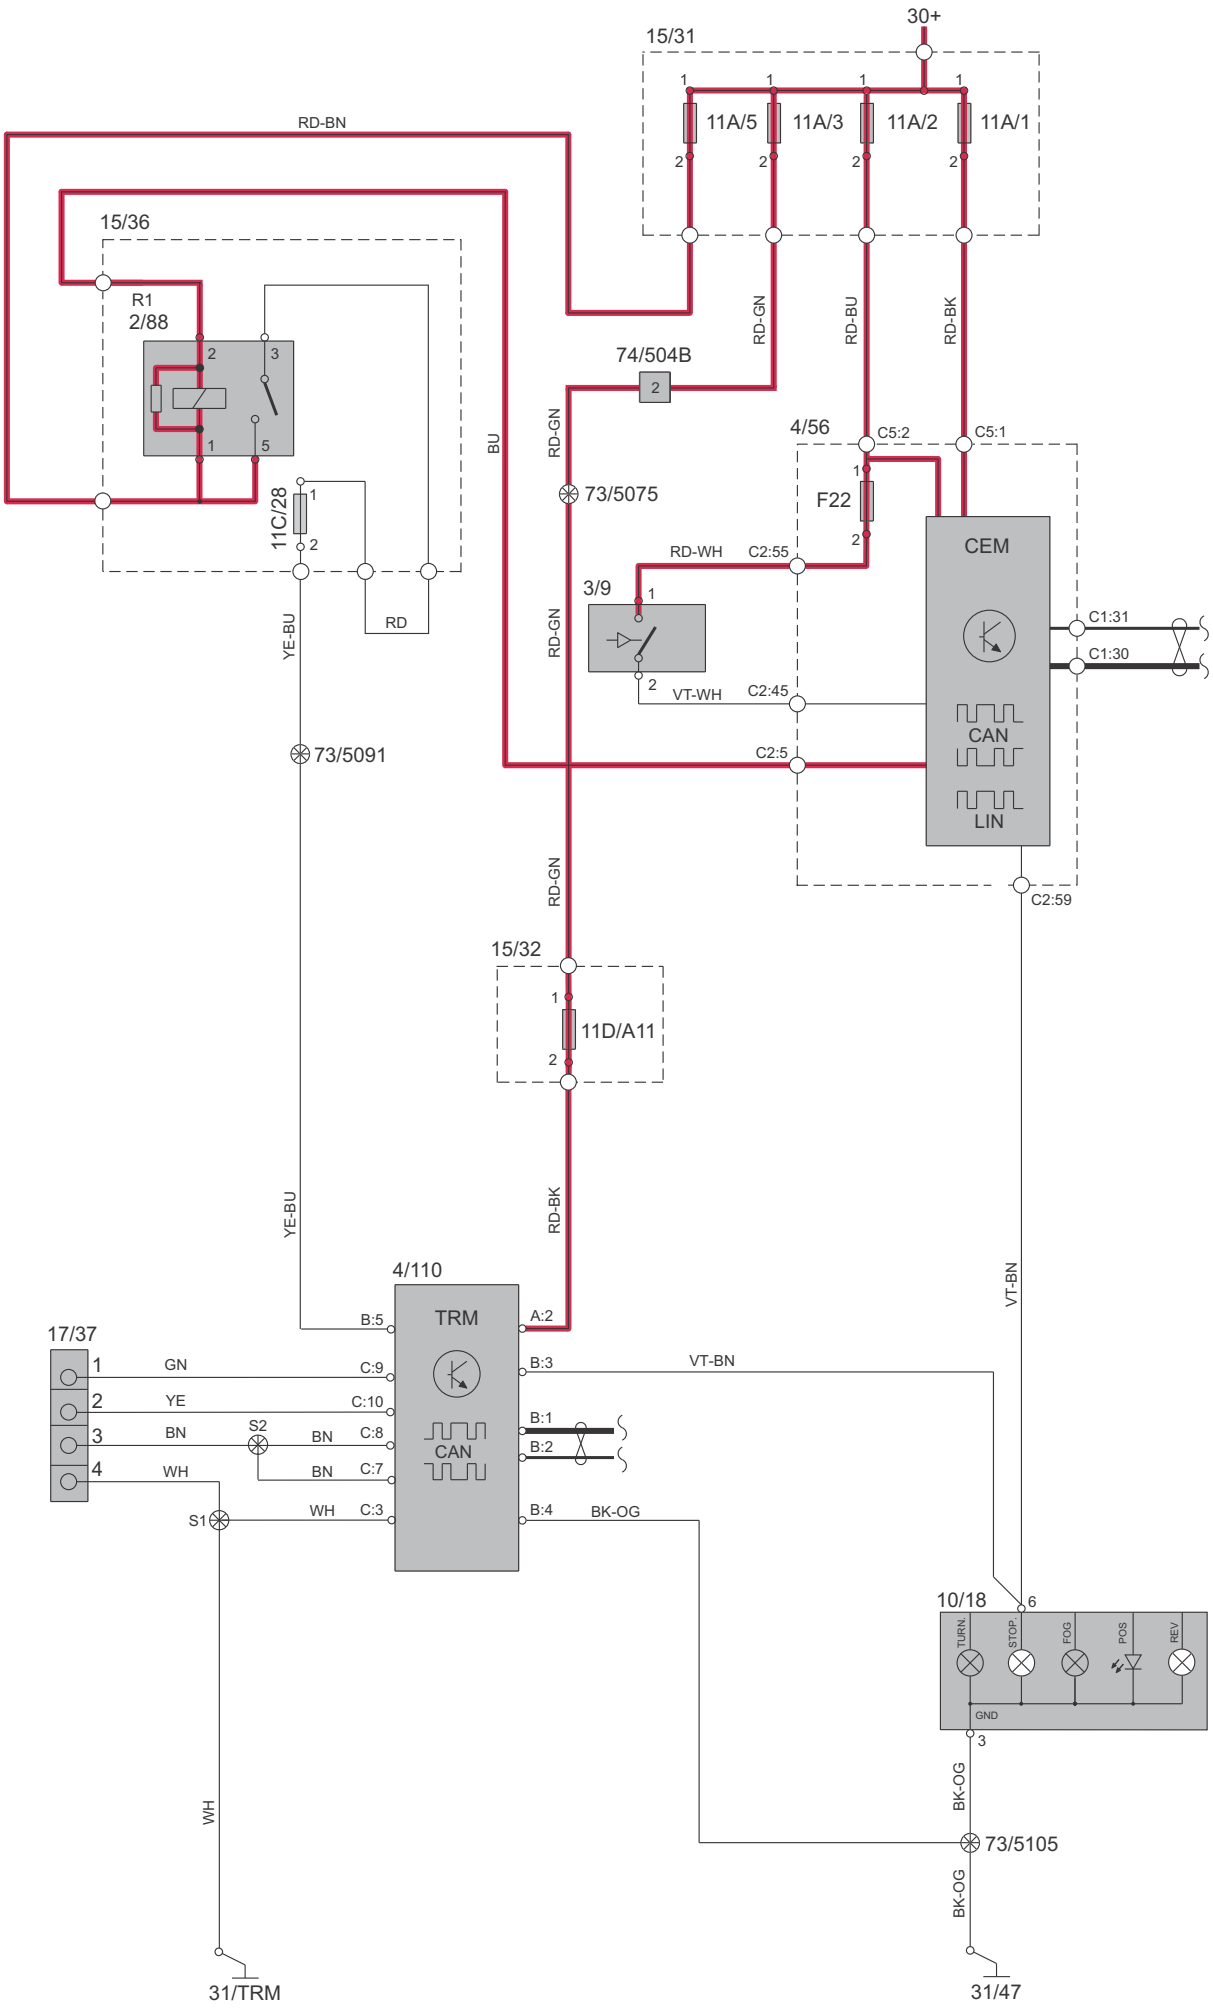

Group 37 Wiring and fuses, Accessories
Cable harness towbar/tow hitch 7-pin V70

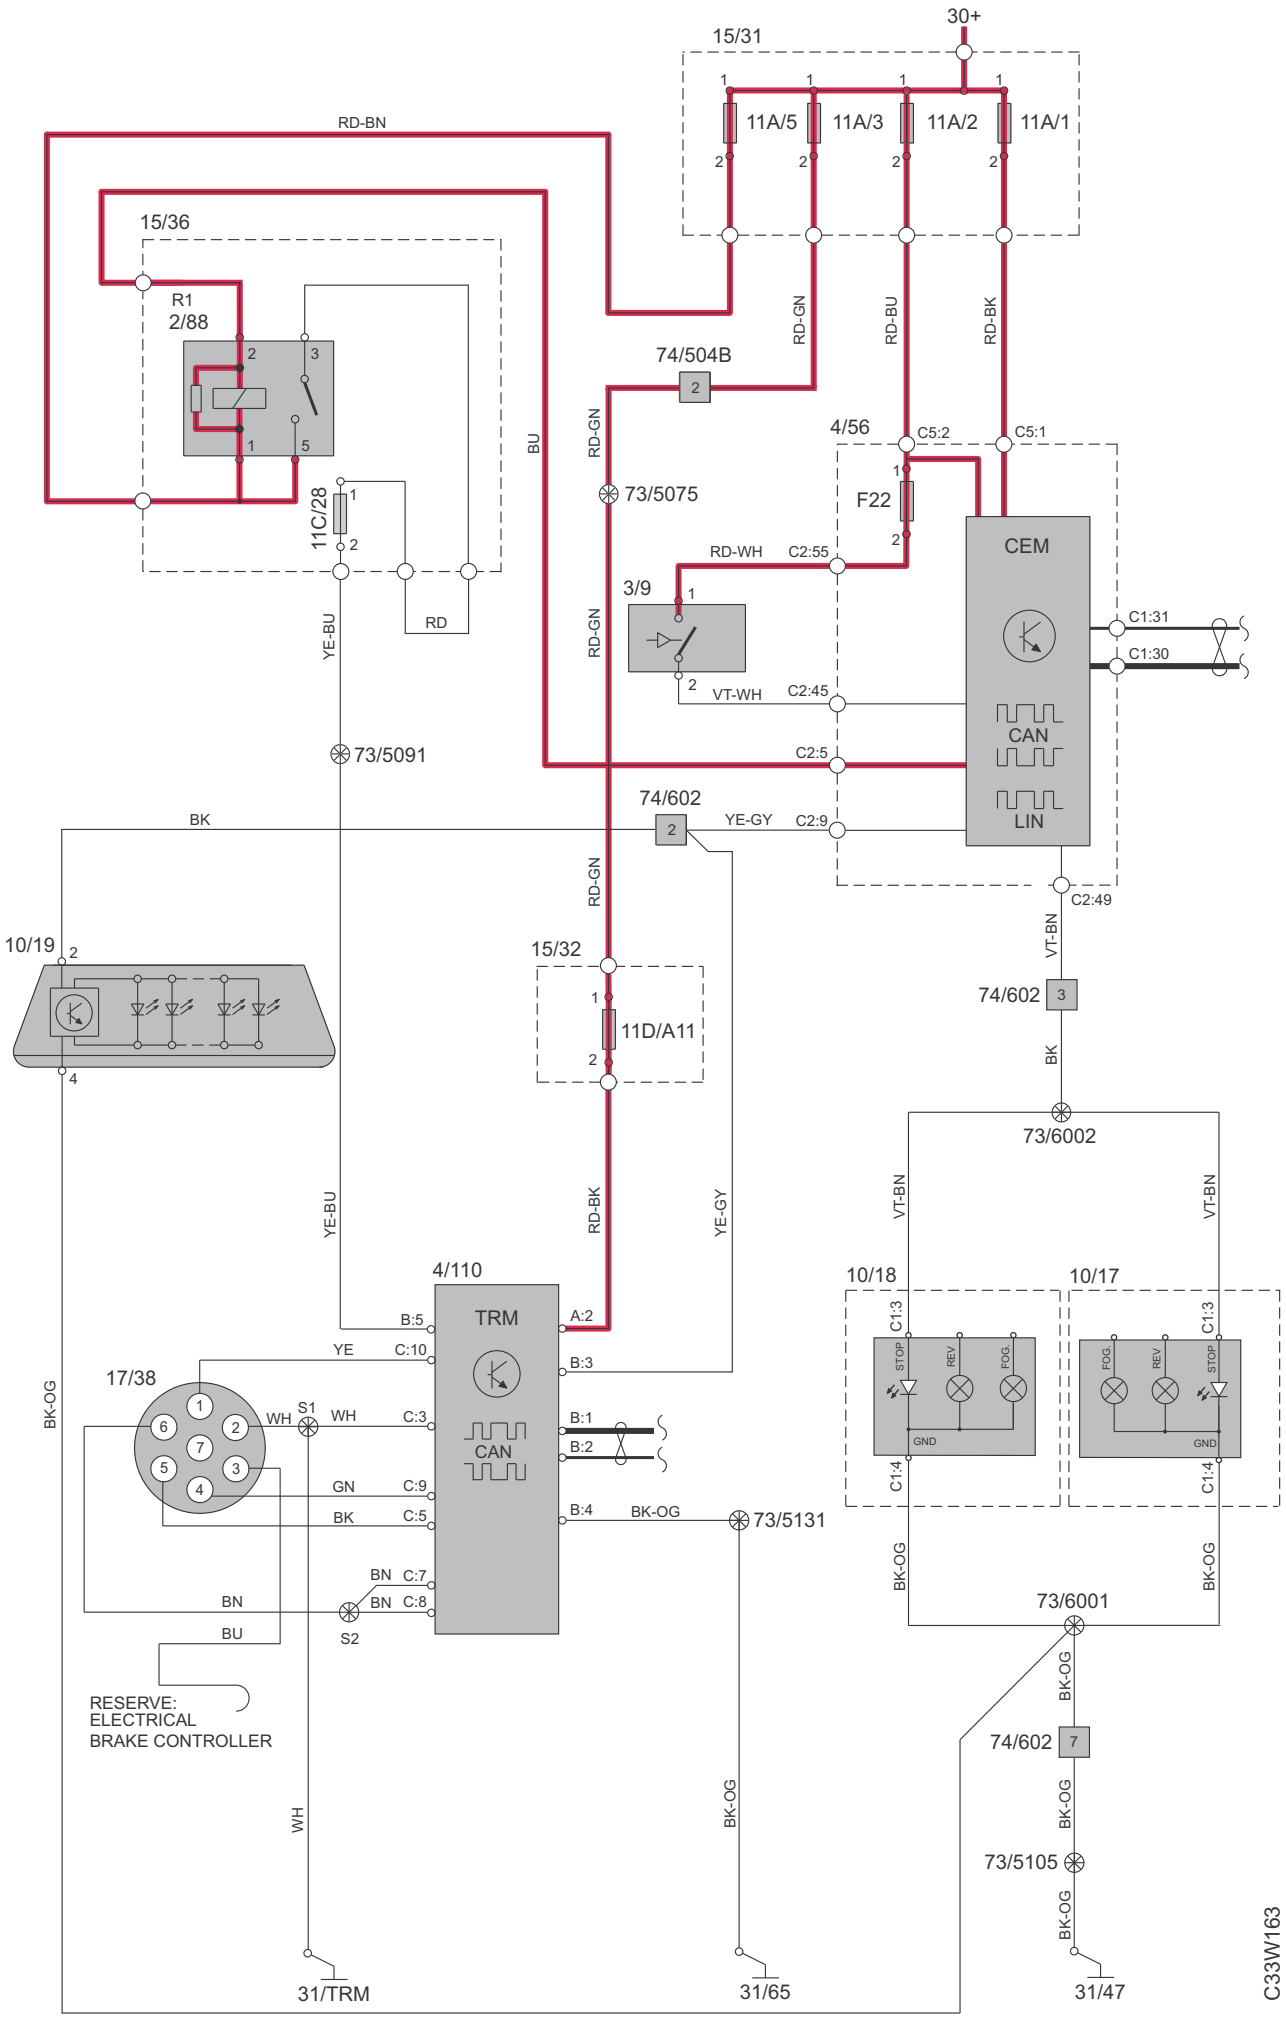

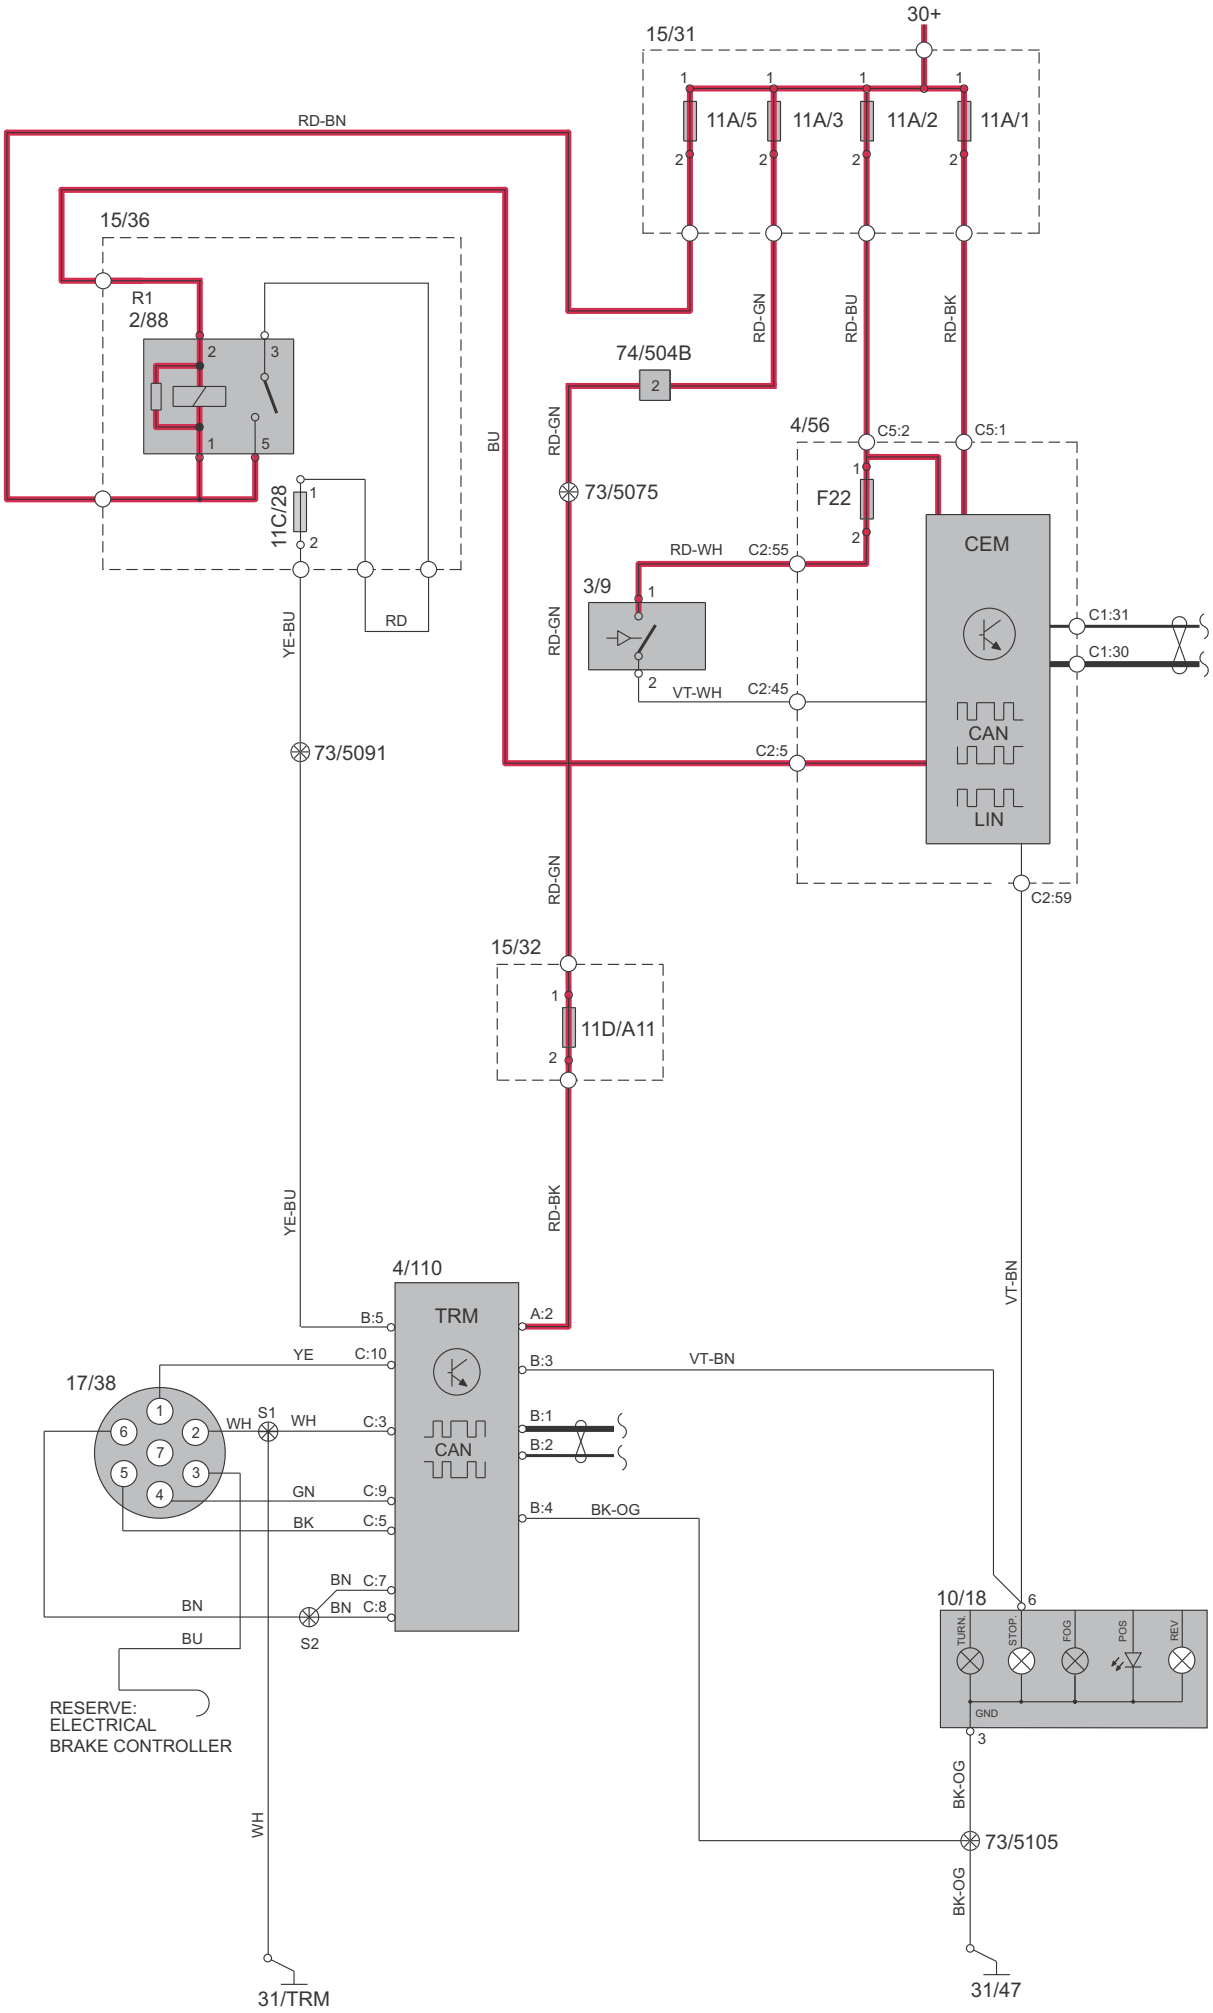
30+
15/31
11A/5
11A/3
11A/2
11A/1
RD-BN
15/36
R1
2/88
11C/28
BU
RD-GN
RD-BU
RD-BK
74/504B
73/5075
4/56
C5:2
C5:1
F22
CEM
RD-WH
C2:55
3/9
VT-WH
C2:45
C2:5
C1:31
C1:30
CAN
LIN
C2:59
YE-BU
RD
73/5091
15/32
11D/A11
4/110
TRM
B:5
A:2
YE
C:10
B:3
VT-BN
17/38
WH
S1
C:3
B:1
B:2
GN
C:9
BK
C:5
B:4
BK-OG
BN
C:7
C:8
S2
RESERVE:
ELECTRICAL
BRAKE CONTROLLER
10/18
TURN
STOP
FOG
POS
REV
GND
73/5105
31/TRM
31/47
C33W164

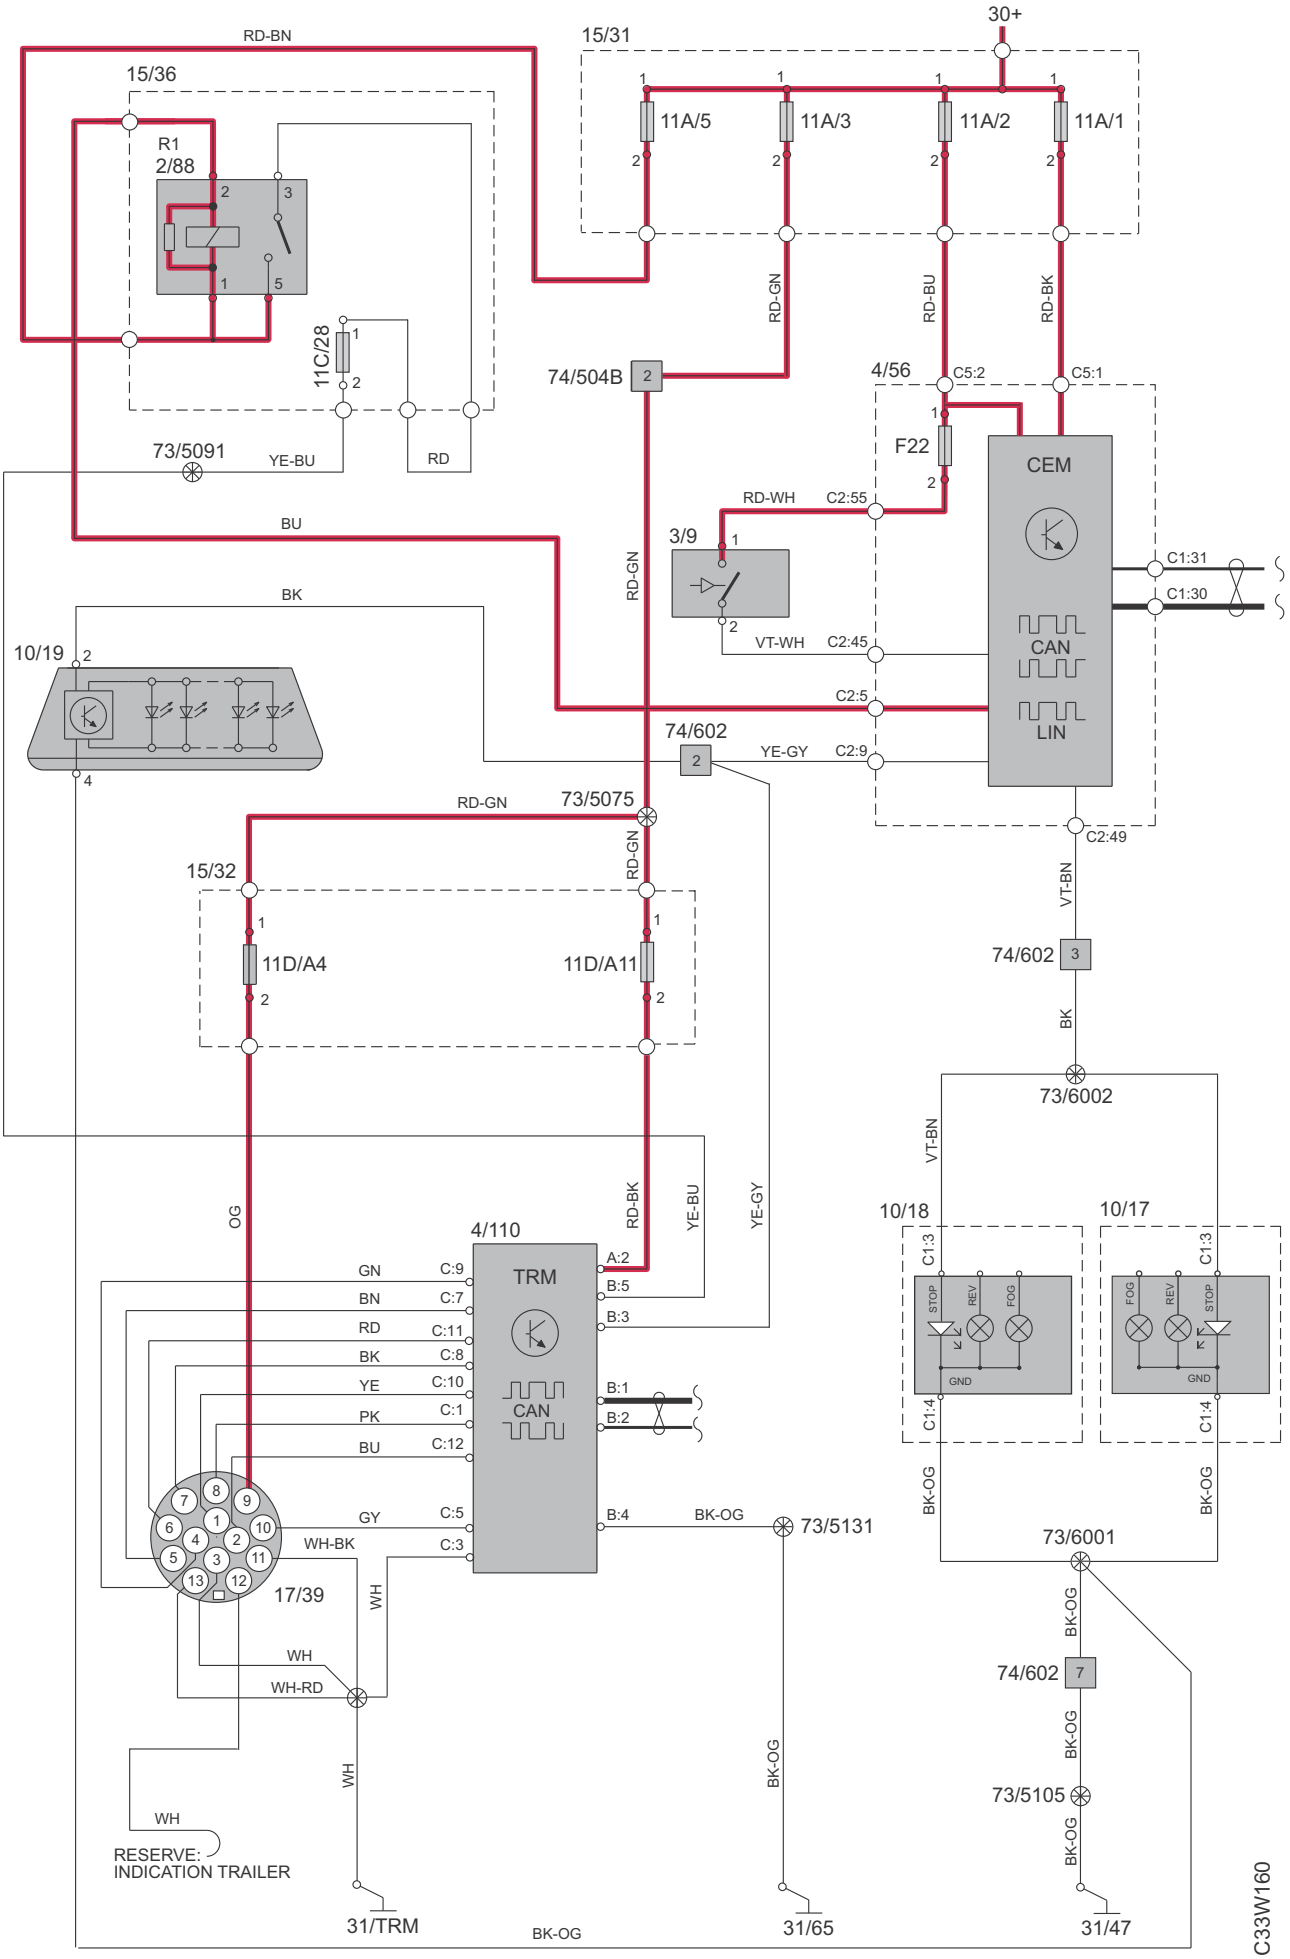
30+
15/31
11A/5
11A/3
11A/2
11A/1
RD-BN
15/36
R1
2/88
11C/28
73/5091
YE-BU
RD
74/504B
RD-GN
RD-BU
RD-BK
4/56
C5:2
C5:1
F22
CEM
RD-WH
C2:55
3/9
VT-WH
C2:45
C1:31
C1:30
CAN
LIN
BU
BK
10/19
C2:5
74/602
YE-GY
C2:9
73/5075
C2:49
15/32
11D/A4
11D/A11
VT-BN
74/602
73/6002
OG
4/110
TRM
GN
BN
RD
BK
YE
PK
BU
GY
WH-BK
C:9
C:7
C:11
C:8
C:10
C:1
C:12
C:5
C:3
A:2
B:5
B:3
B:1
B:2
B:4
BK-OG
73/5131
17/39
WH
WH-RD
10/18
10/17
C1:3
C1:4
STOP
REV
FOG
GND
73/6001
74/602
73/5105
RESERVE:
INDICATION TRAILER
31/TRM
31/65
31/47
C33W160

Group 37 Wiring and fuses, Accessories
Cable harness towbar/tow hitch 13-pin S80

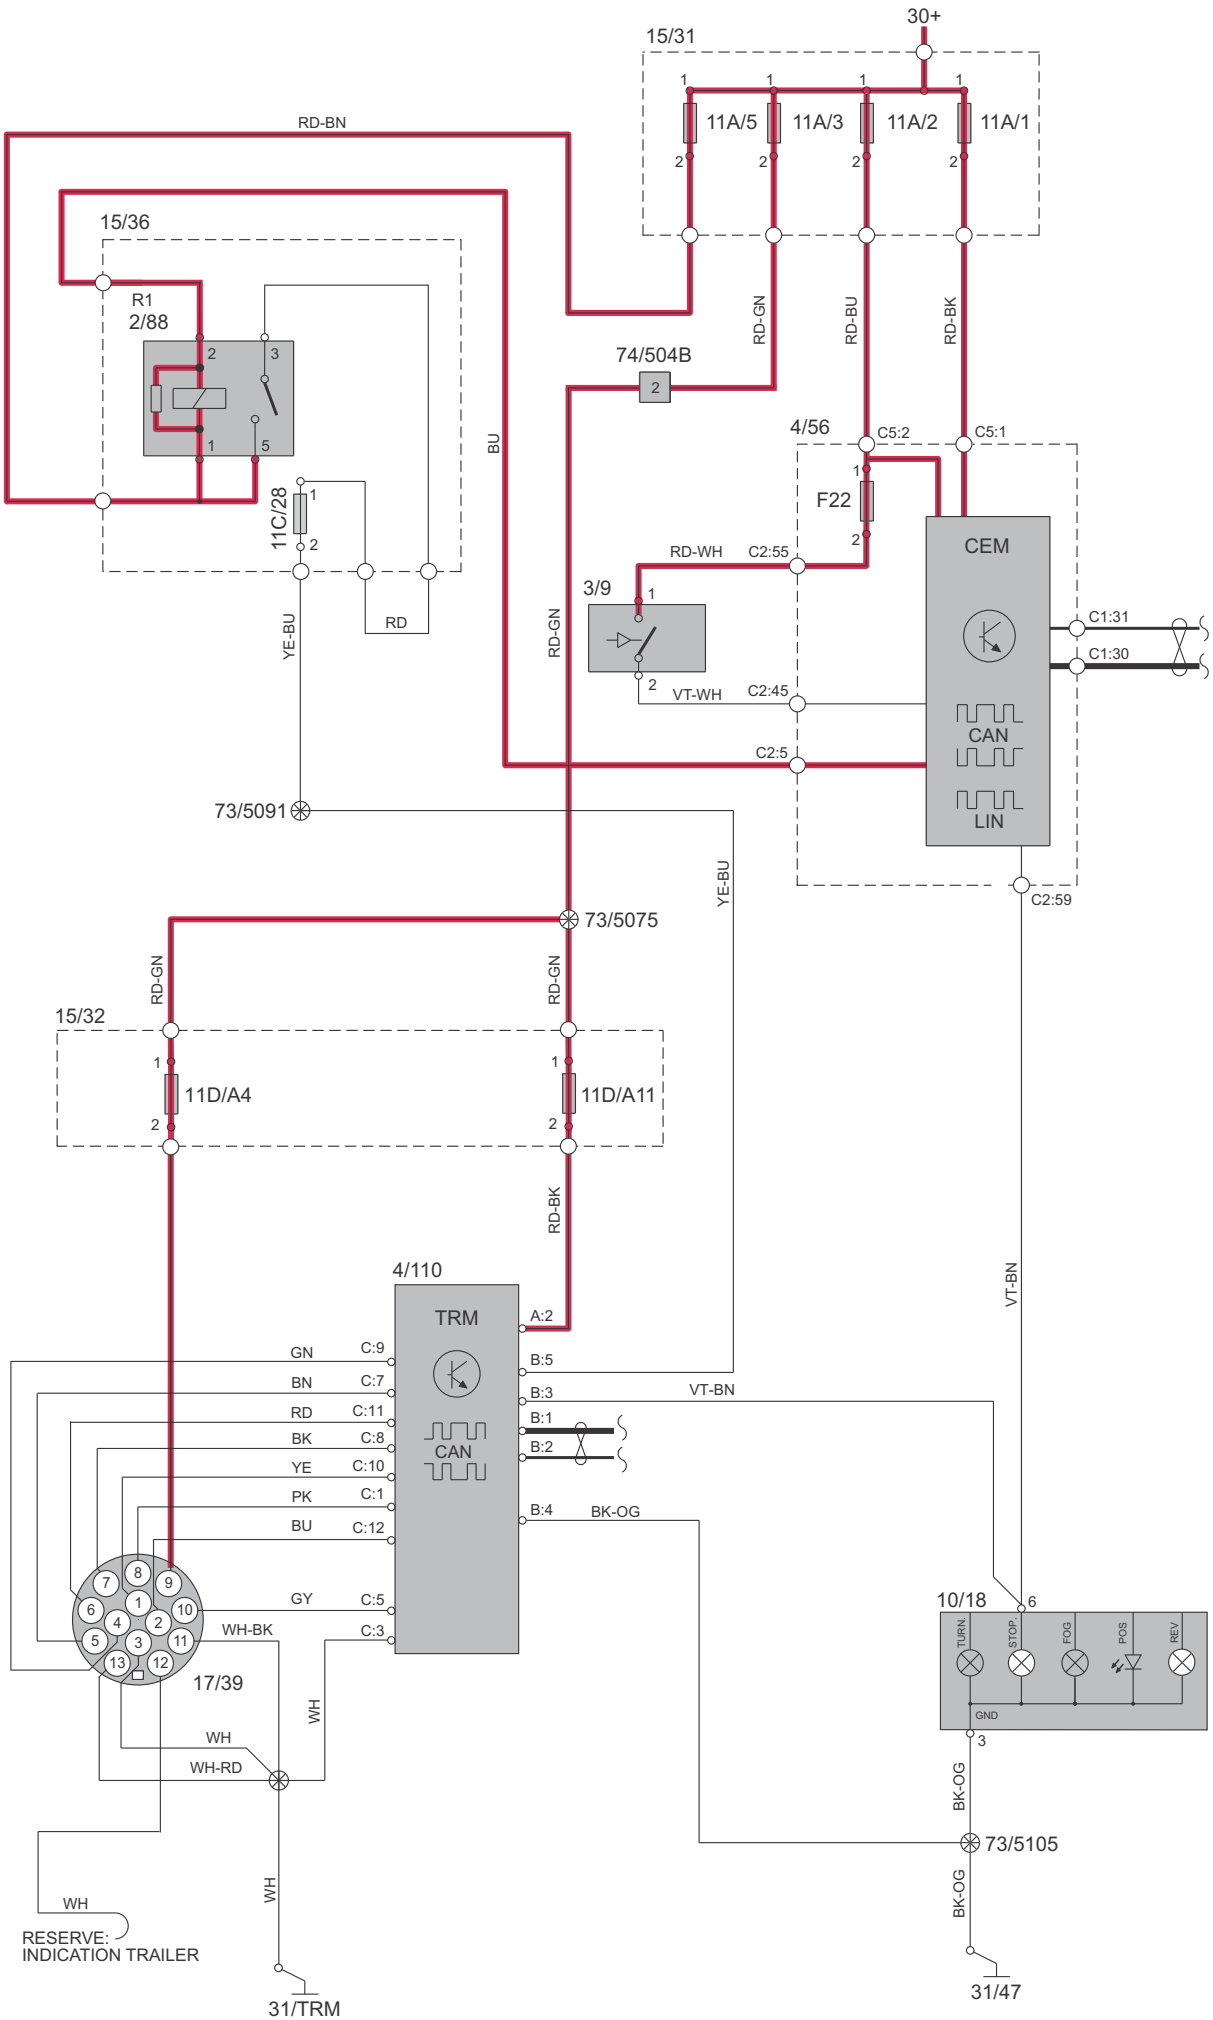

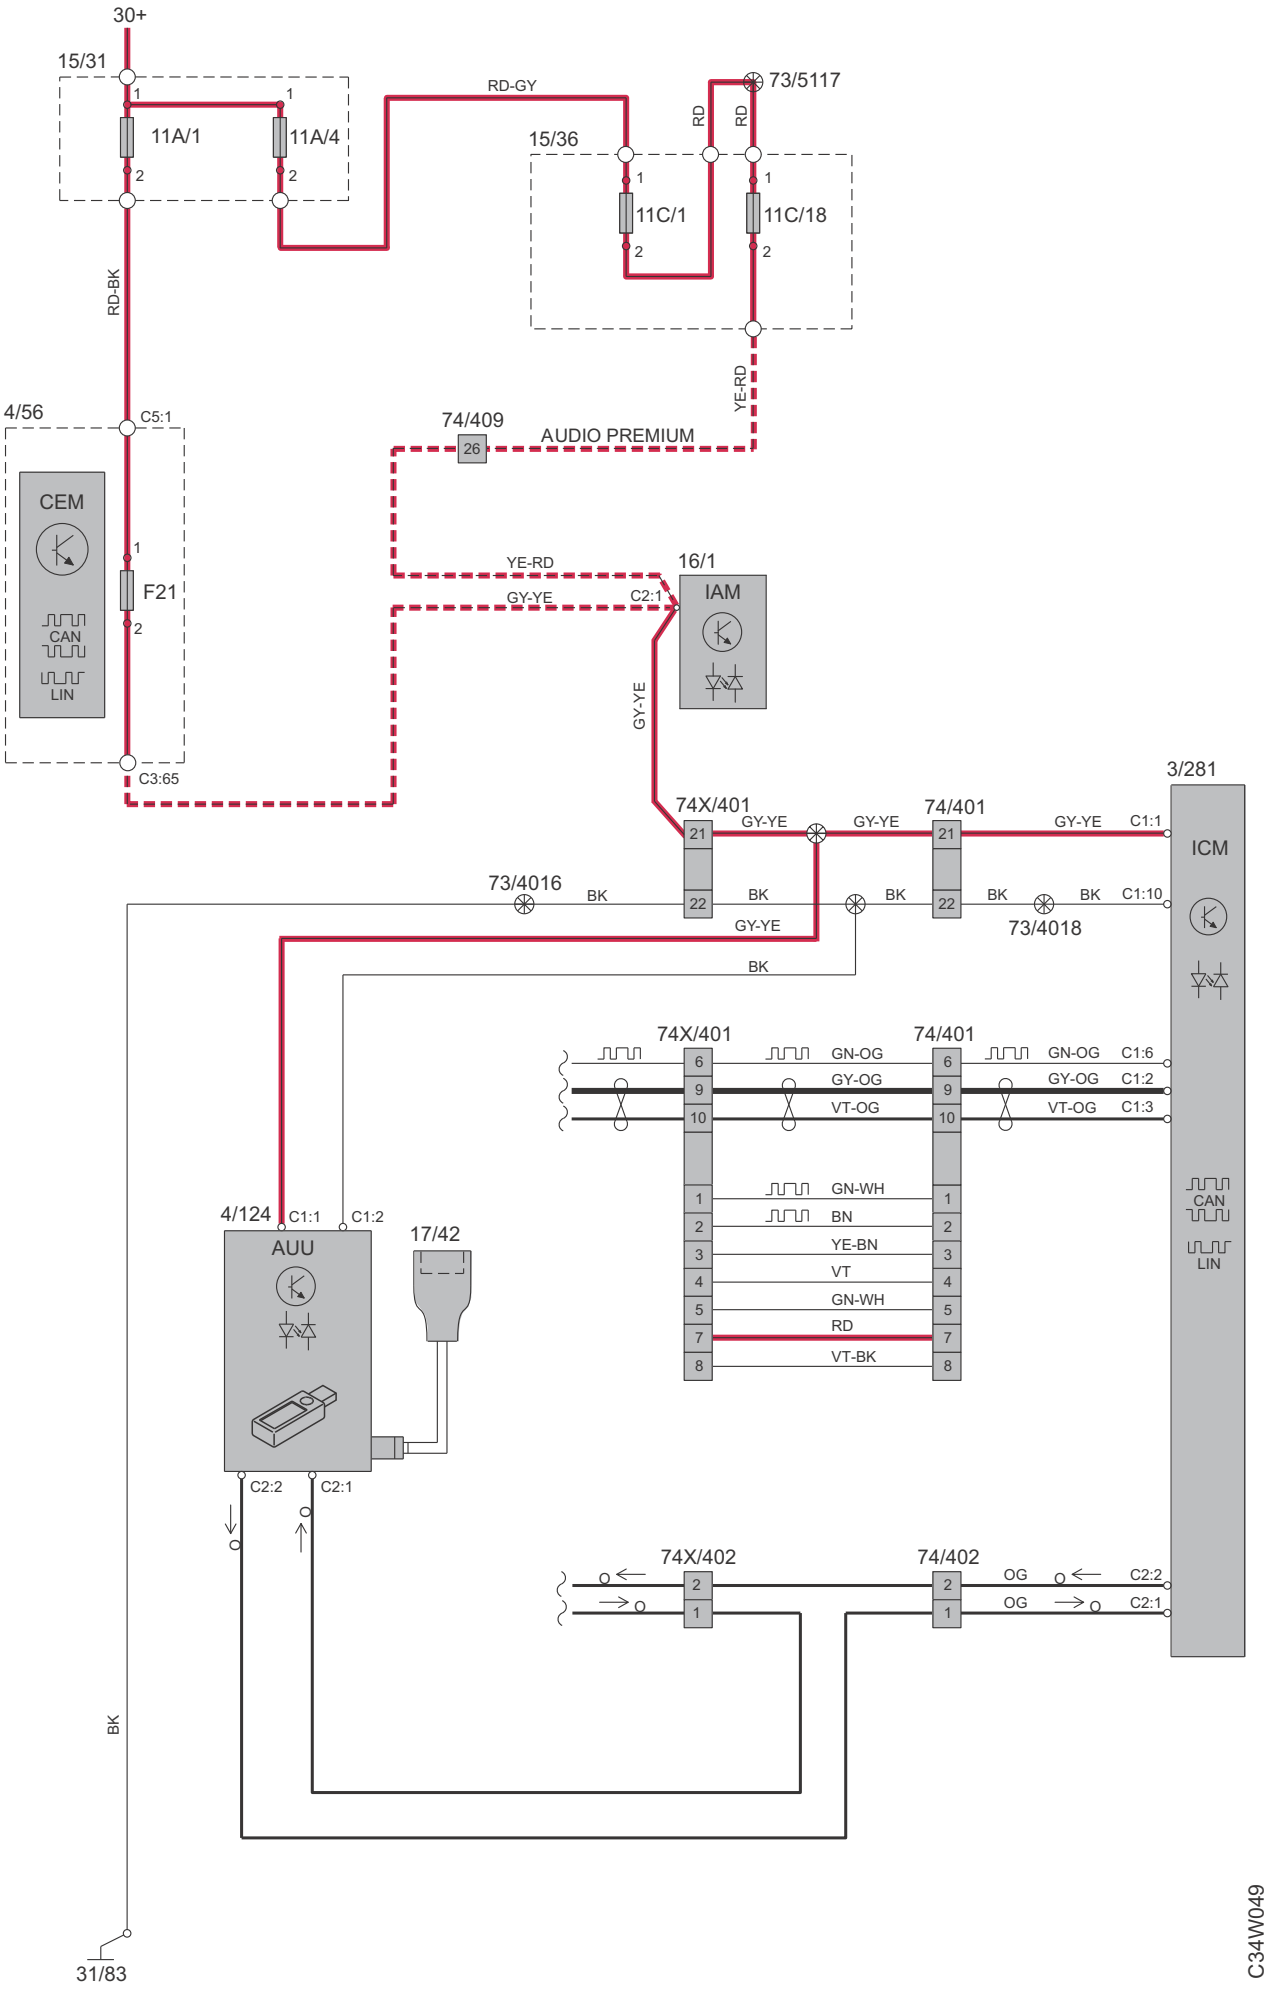
30+
15/31
11A/1
11A/4
RD-GY
73/5117
15/36
11C/1
11C/18
RD
RD
RD-BK
YE-RD
4/56
C5:1
CEM
F21
CAN
LIN
C3:65
74/409
26
AUDIO PREMIUM
YE-RD
GY-YE
16/1
C2:1
IAM
GY-YE
3/281
ICM
74X/401
74/401
GY-YE
C1:1
73/4016
BK
22
73/4018
C1:10
74X/401
74/401
GN-OG
GY-OG
VT-OG
C1:6
C1:2
C1:3
GN-WH
BN
YE-BN
VT
GN-WH
RD
VT-BK
4/124
C1:1
C1:2
AUU
17/42
C2:2
C2:1
74X/402
74/402
OG
C2:2
C2:1
BK
31/83
C34W049

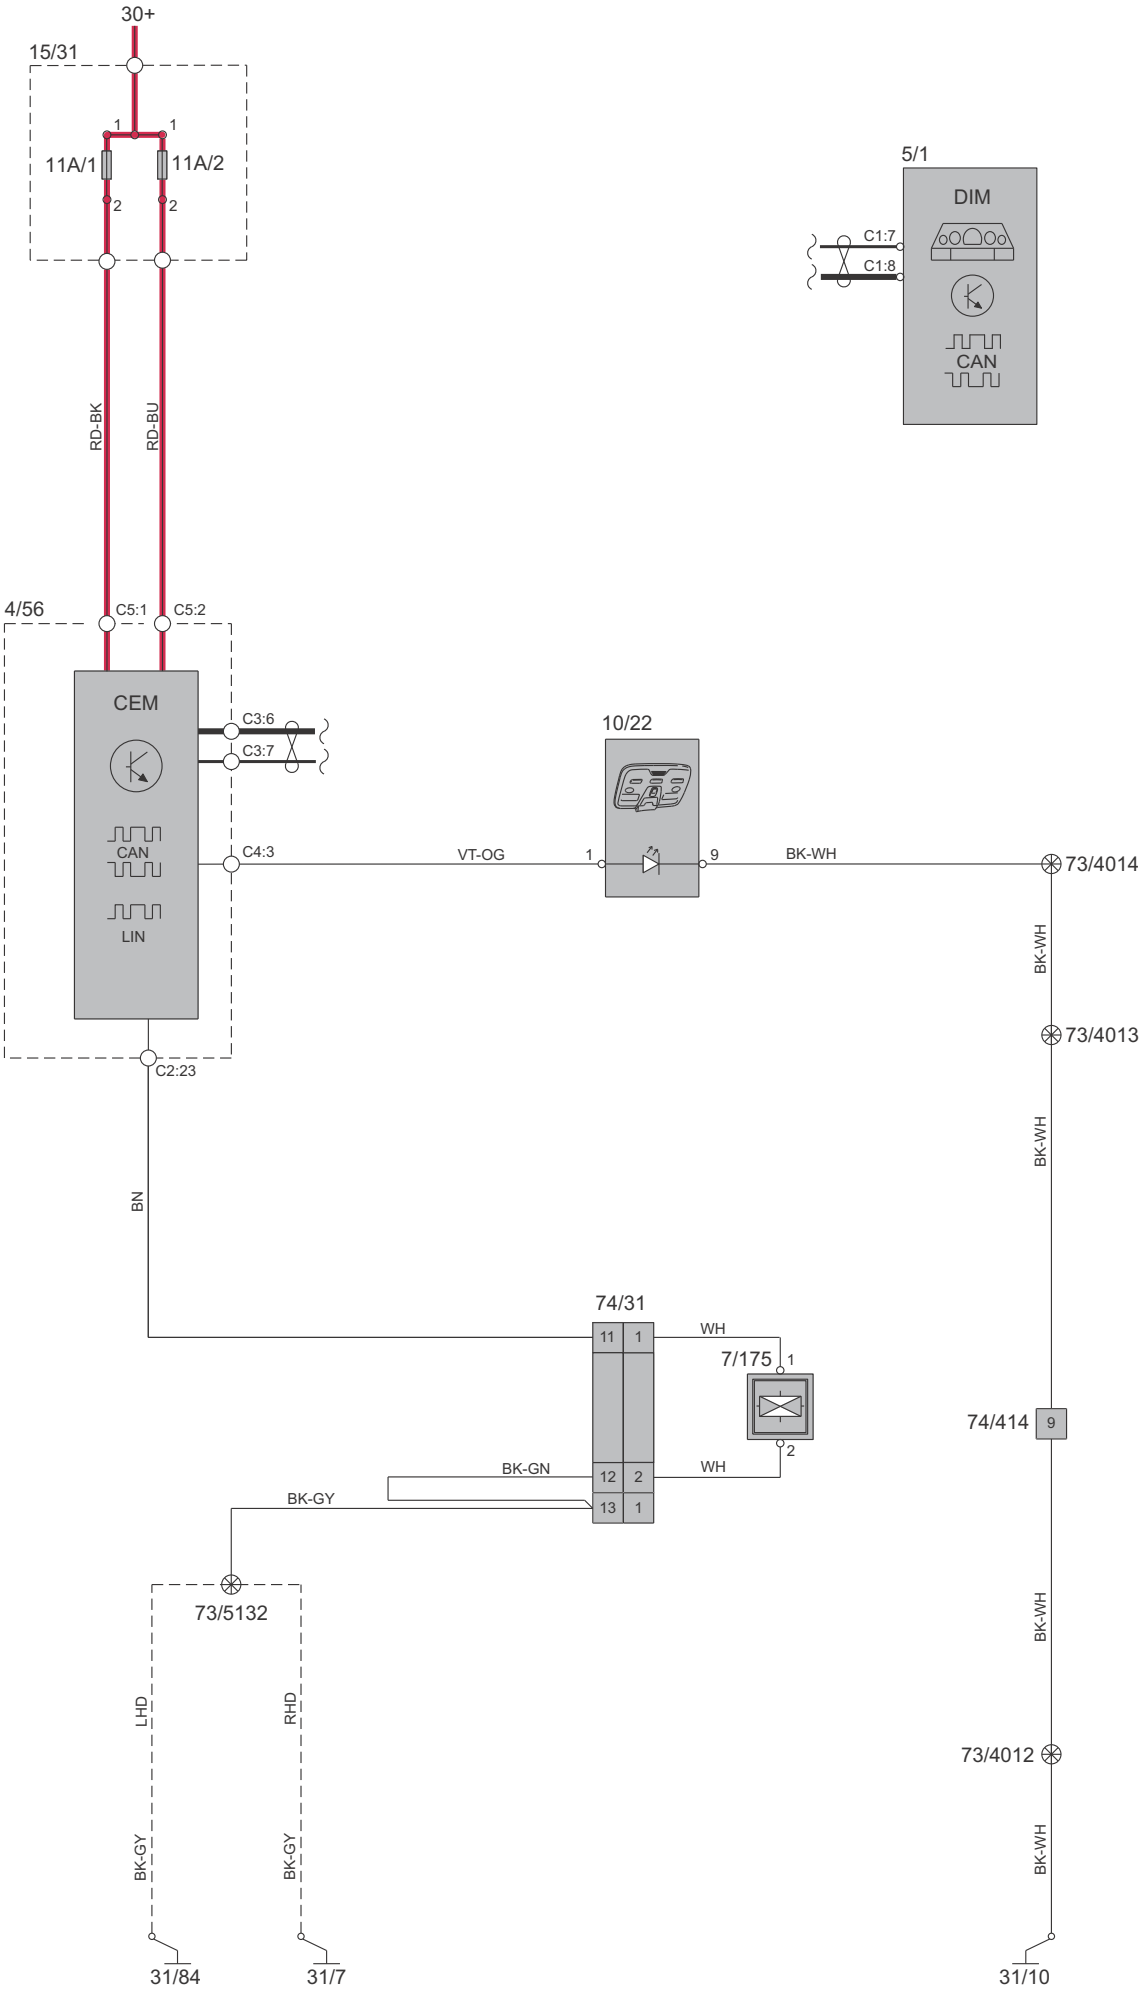
30+
15/31
1
1
11A/1
11A/2
2
2
RD-BK
RD-BU
5/1
DIM
C1:7
C1:8
CAN
4/56
C5:1
C5:2
CEM
C3:6
C3:7
CAN
LIN
C4:3
10/22
VT-OG
1
9
BK-WH
73/4014
BK-WH
73/4013
BK-WH
C2:23
BN
74/31
11
1
WH
7/175
1
2
74/414
9
BK-GN
12
2
WH
BK-GY
13
1
73/5132
LHD
RHD
BK-GY
BK-GY
73/4012
BK-WH
31/84
31/7
31/10
C34W024

Group 38 Instruments
Driver information module

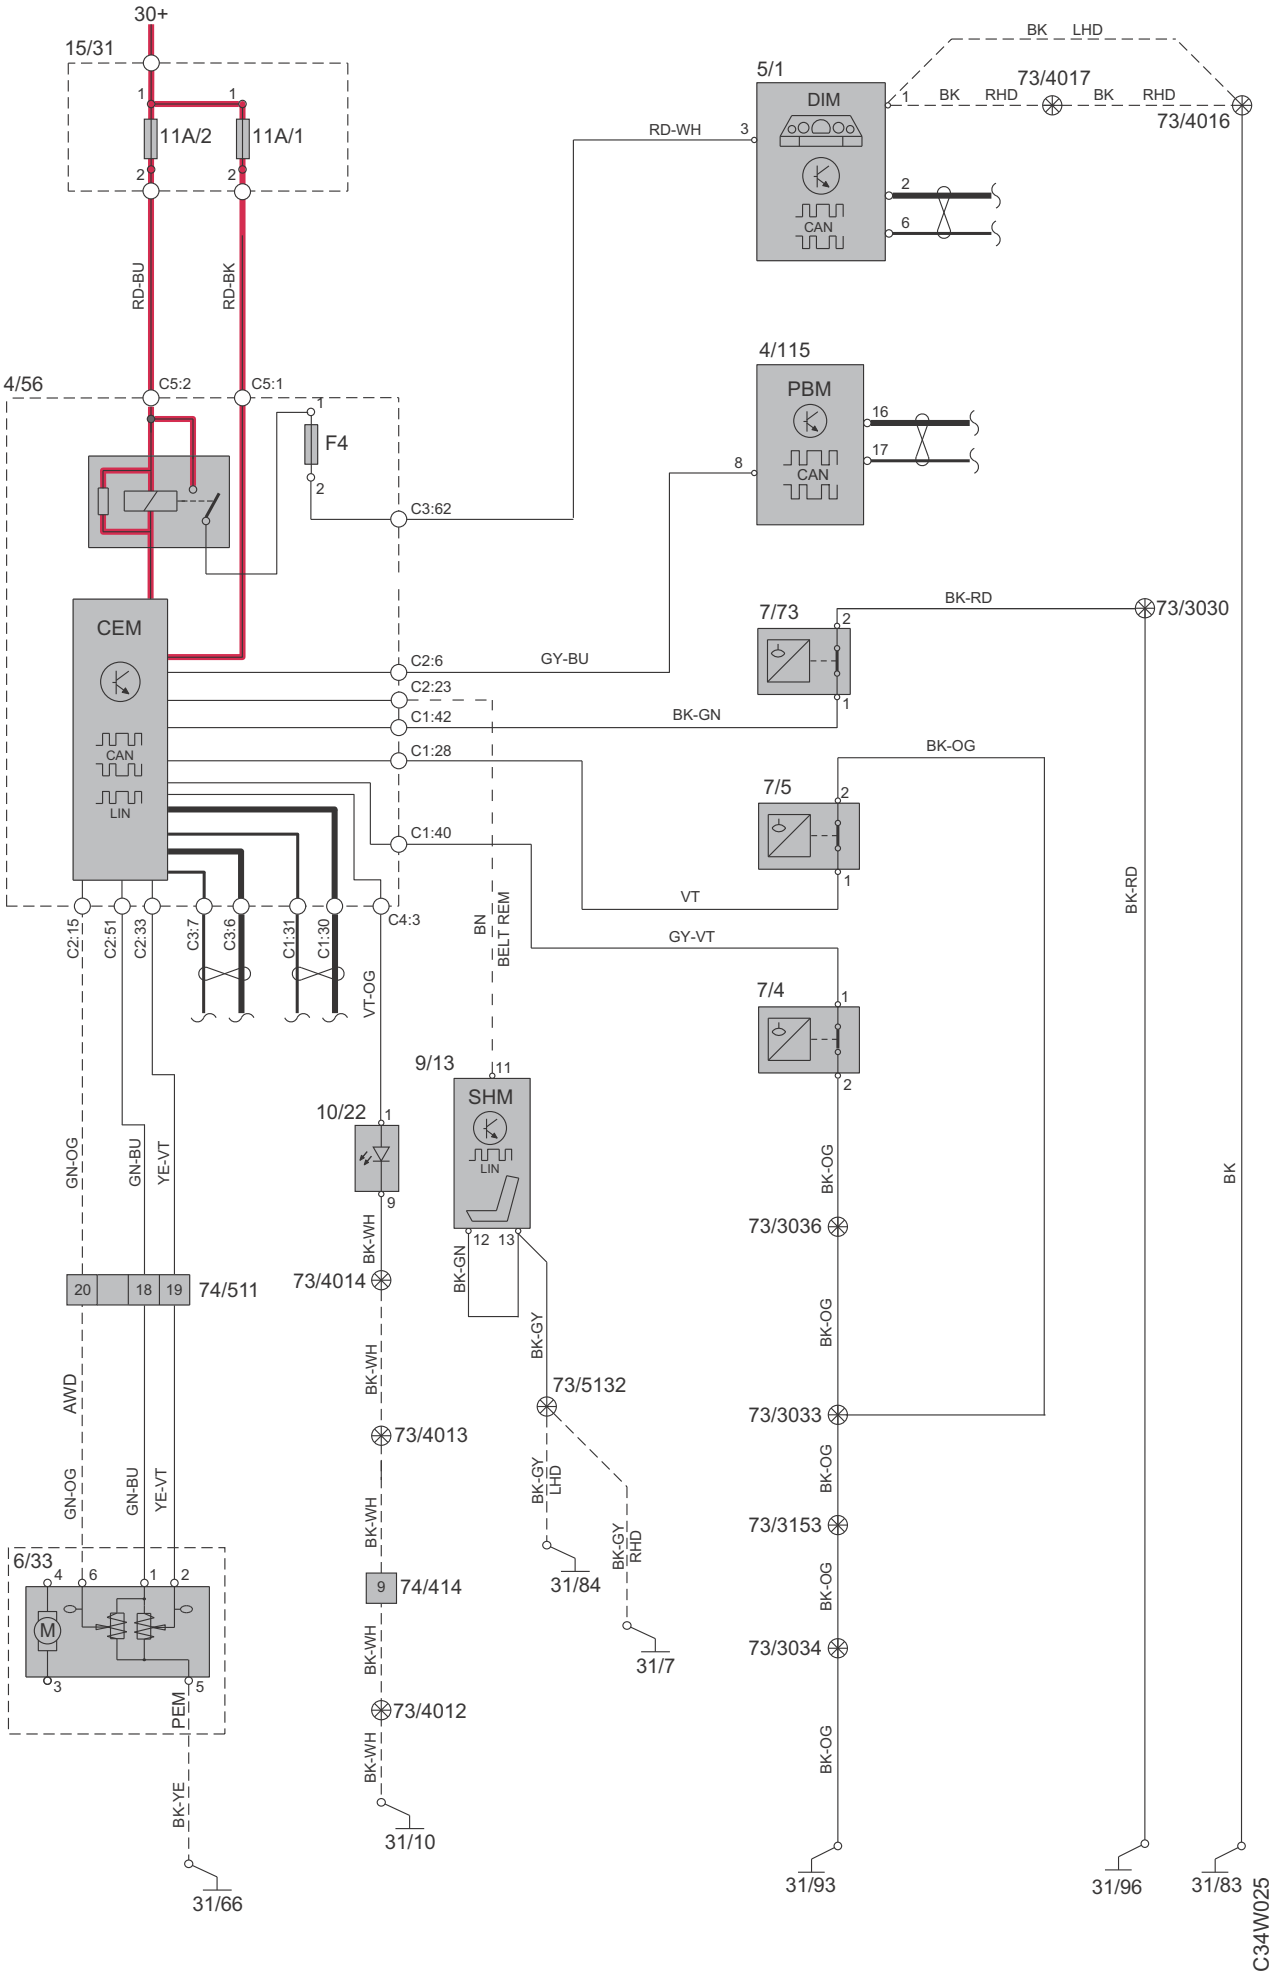

Group 38 Instruments
Analog clock

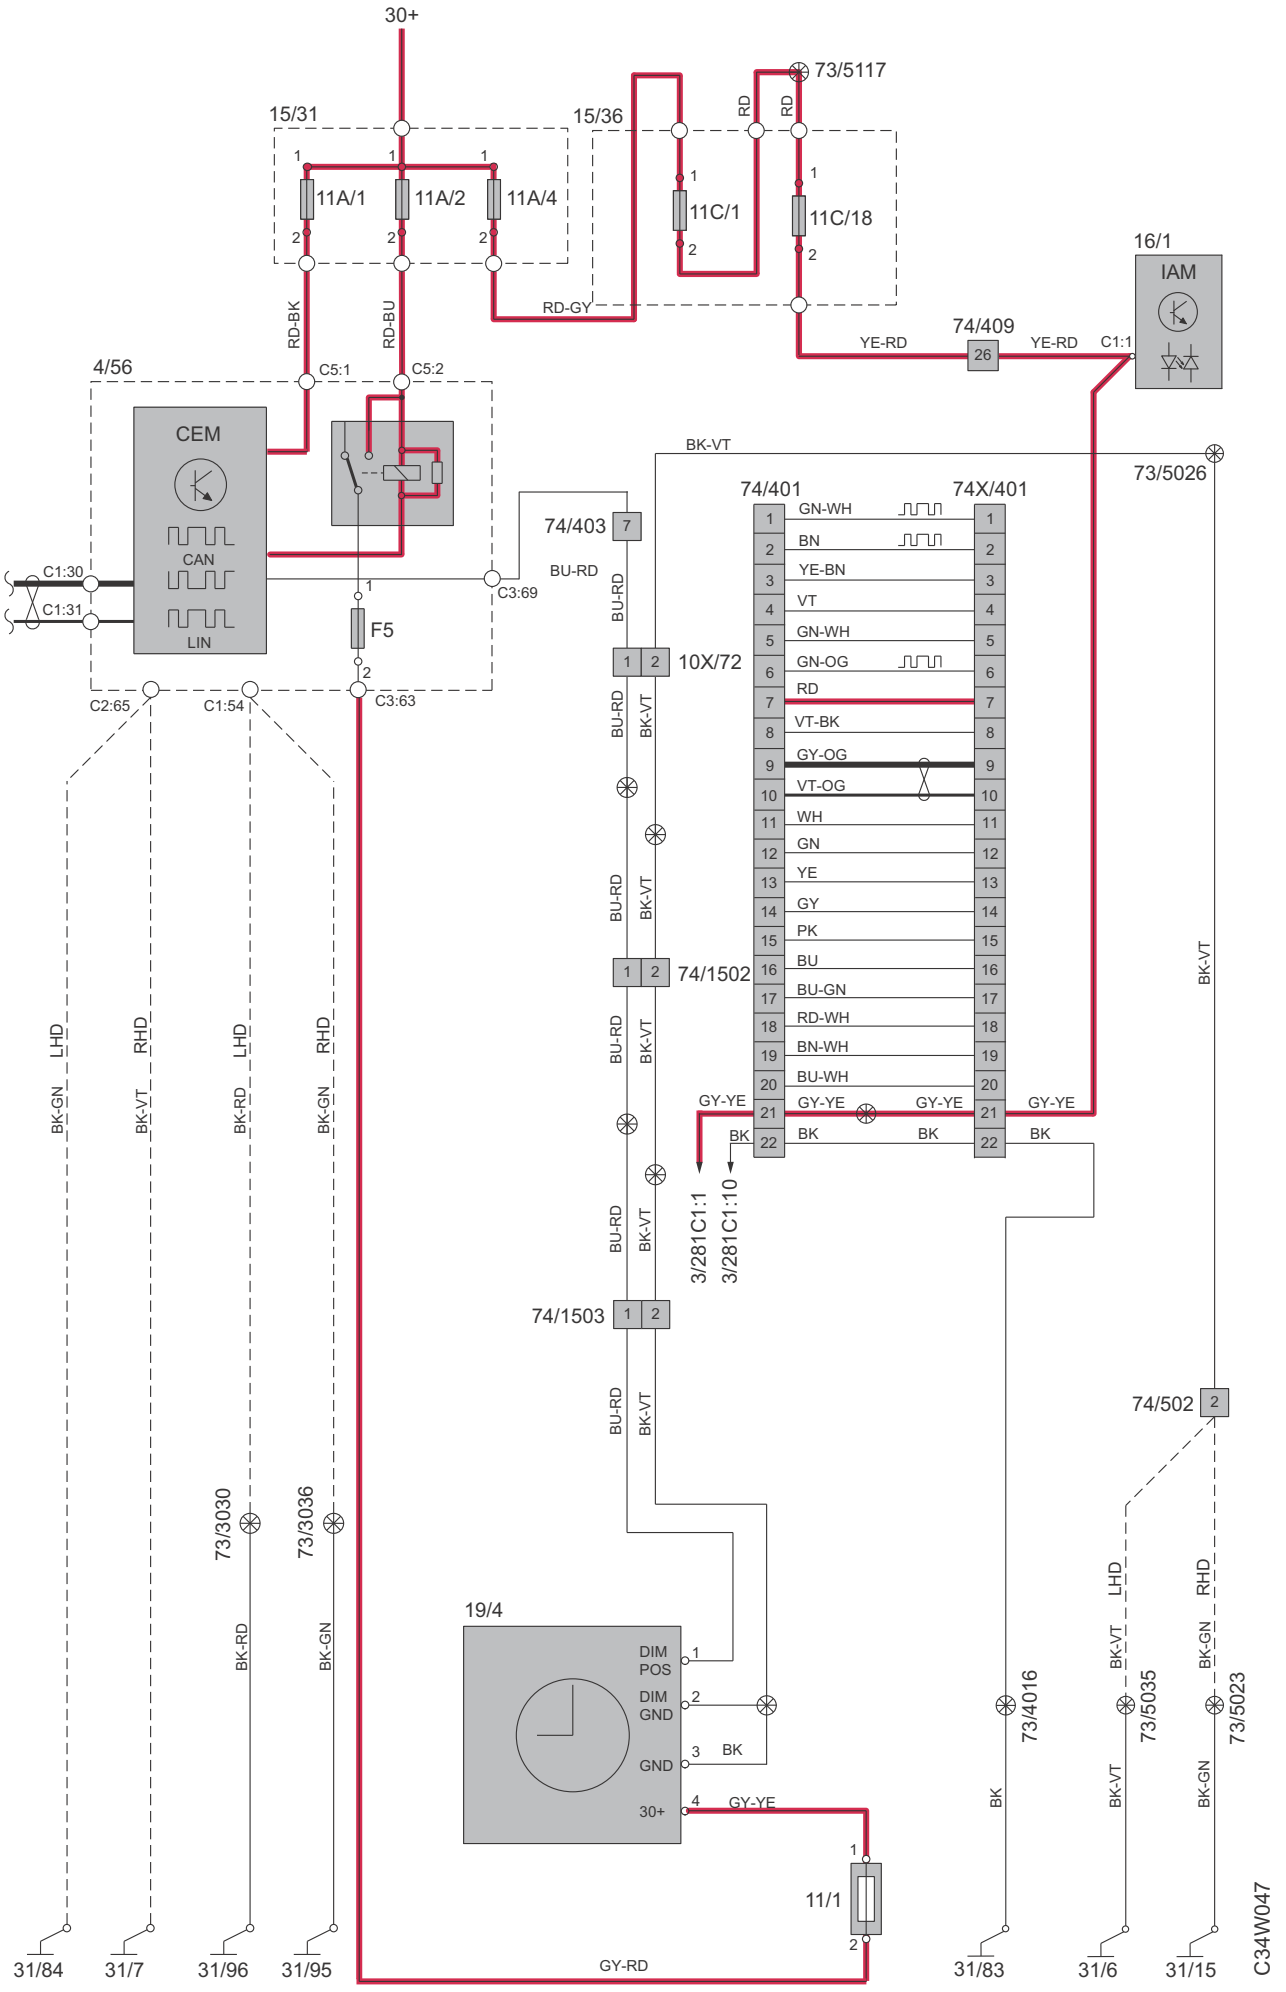

Group 39 Other, Accessories
TV

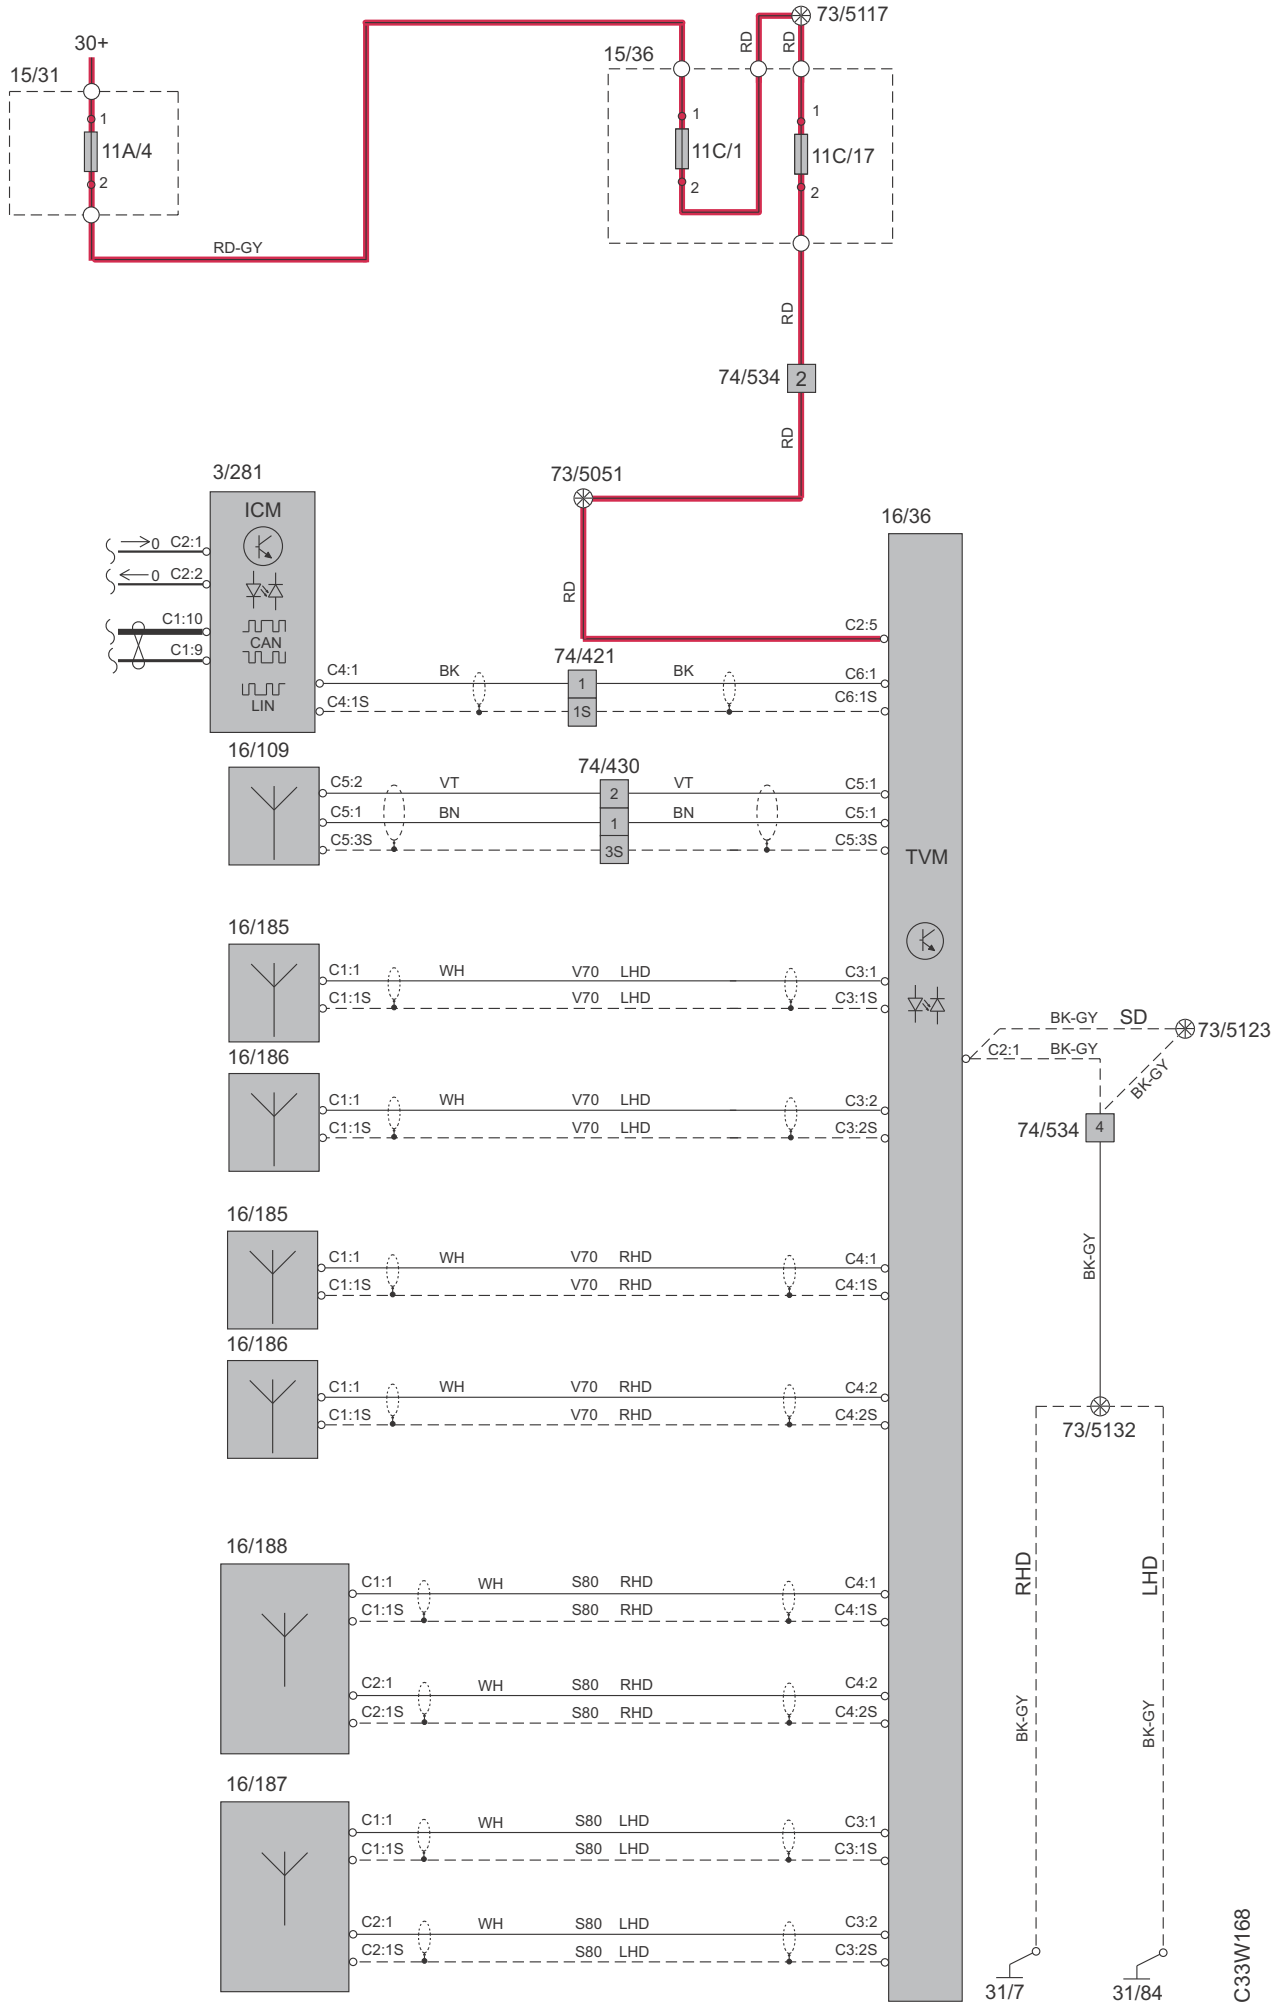

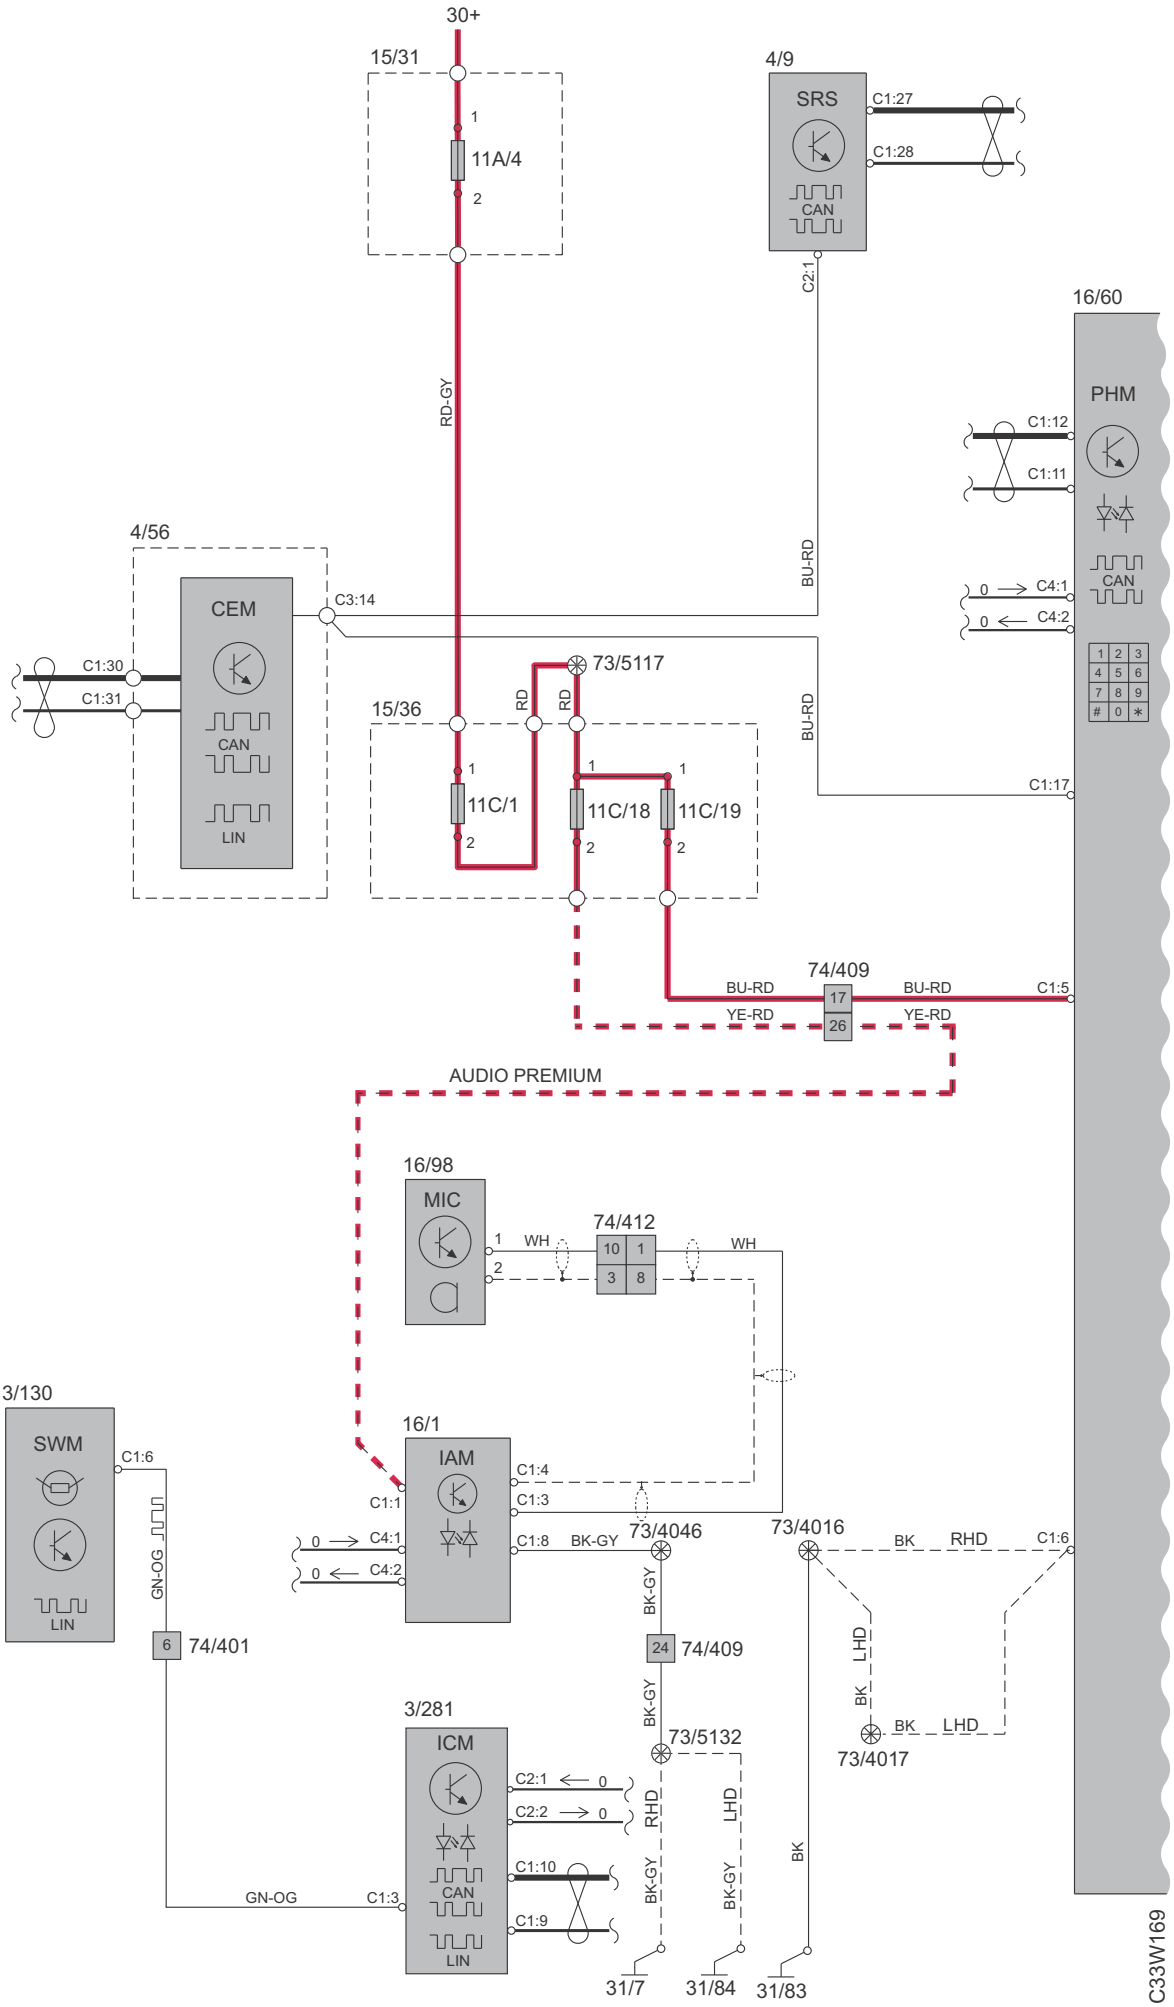
30+
15/31
1
11A/4
2
RD-GY
4/9
SRS
CAN
C1:27
C1:28
C2:1
16/60
PHM
C1:12
C1:11
CAN
0 C4:1
0 C4:2
1 2 3
4 5 6
7 8 9
0 *
BU-RD
C1:17
4/56
CEM
C3:14
C1:30
C1:31
CAN
LIN
73/5117
RD
RD
15/36
11C/1
11C/18
11C/19
74/409
17
26
BU-RD
YE-RD
C1:5
AUDIO PREMIUM
16/98
MIC
WH
74/412
10 1
3 8
3/130
SWM
LIN
C1:6
GN-OG
6
74/401
16/1
IAM
C1:1
C1:4
C1:3
C1:8
BK-GY
73/4046
0 C4:1
0 C4:2
24
74/409
73/4016
BK
RHD
C1:6
LHD
BK
73/4017
3/281
ICM
C2:1
C2:2
C1:10
C1:9
CAN
LIN
GN-OG
C1:3
RHD
LHD
73/5132
31/7
31/84
31/83
C33W169

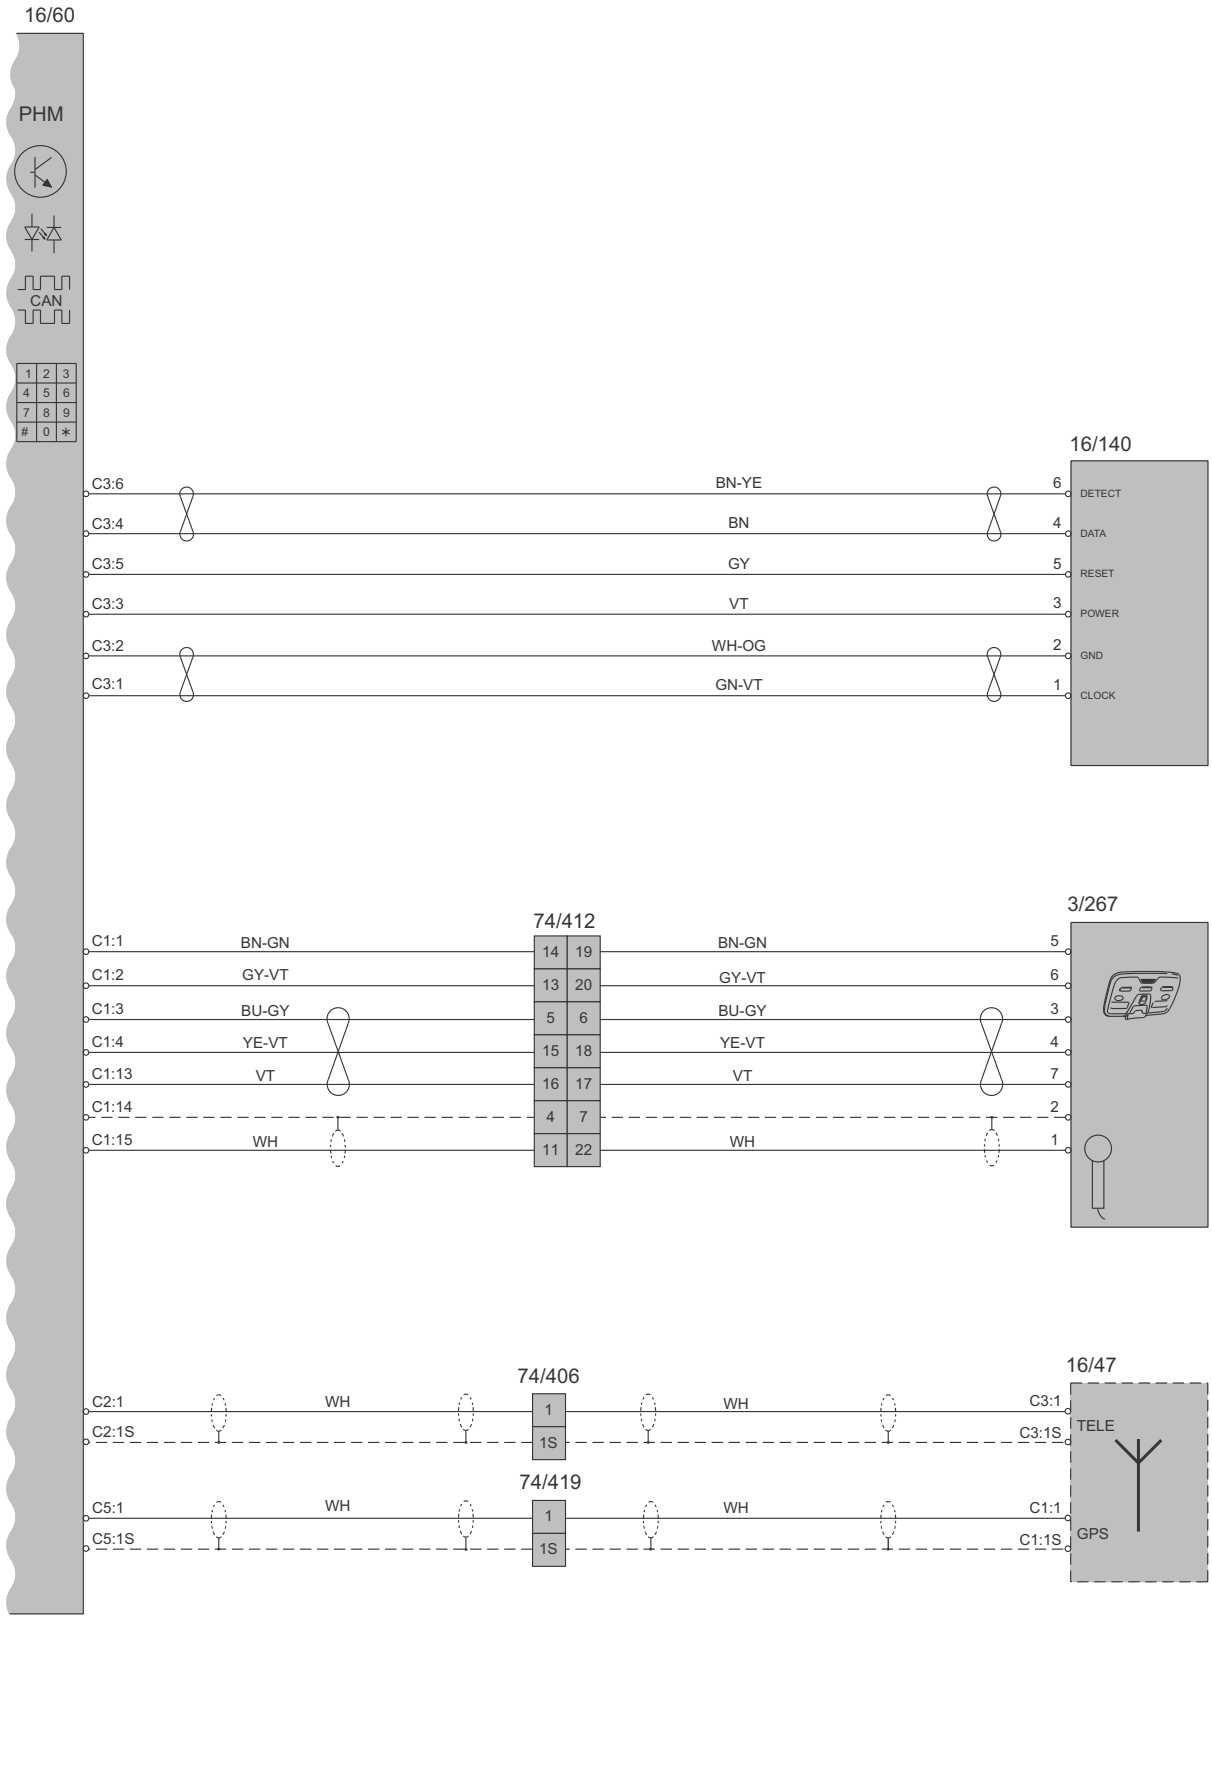
16/60
PHM
CAN
1 2 3
4 5 6
7 8 9
0 *
16/140
C3:6
C3:4
C3:5
C3:3
C3:2
C3:1
BN-YE
BN
GY
VT
WH-OG
GN-VT
6
4
5
3
2
1
DETECT
DATA
RESET
POWER
GND
CLOCK
3/267
74/412
C1:1
C1:2
C1:3
C1:4
C1:13
C1:14
C1:15
BN-GN
GY-VT
BU-GY
YE-VT
VT
WH
14 19
13 20
5 6
15 18
16 17
4 7
11 22
5
6
3
4
7
2
1
74/406
74/419
C2:1
C2:1S
C5:1
C5:1S
C3:1
C3:1S
C1:1
C1:1S
1
1S
TELE
GPS
16/47
C33W170

Group 39 Other
Audio 1:2

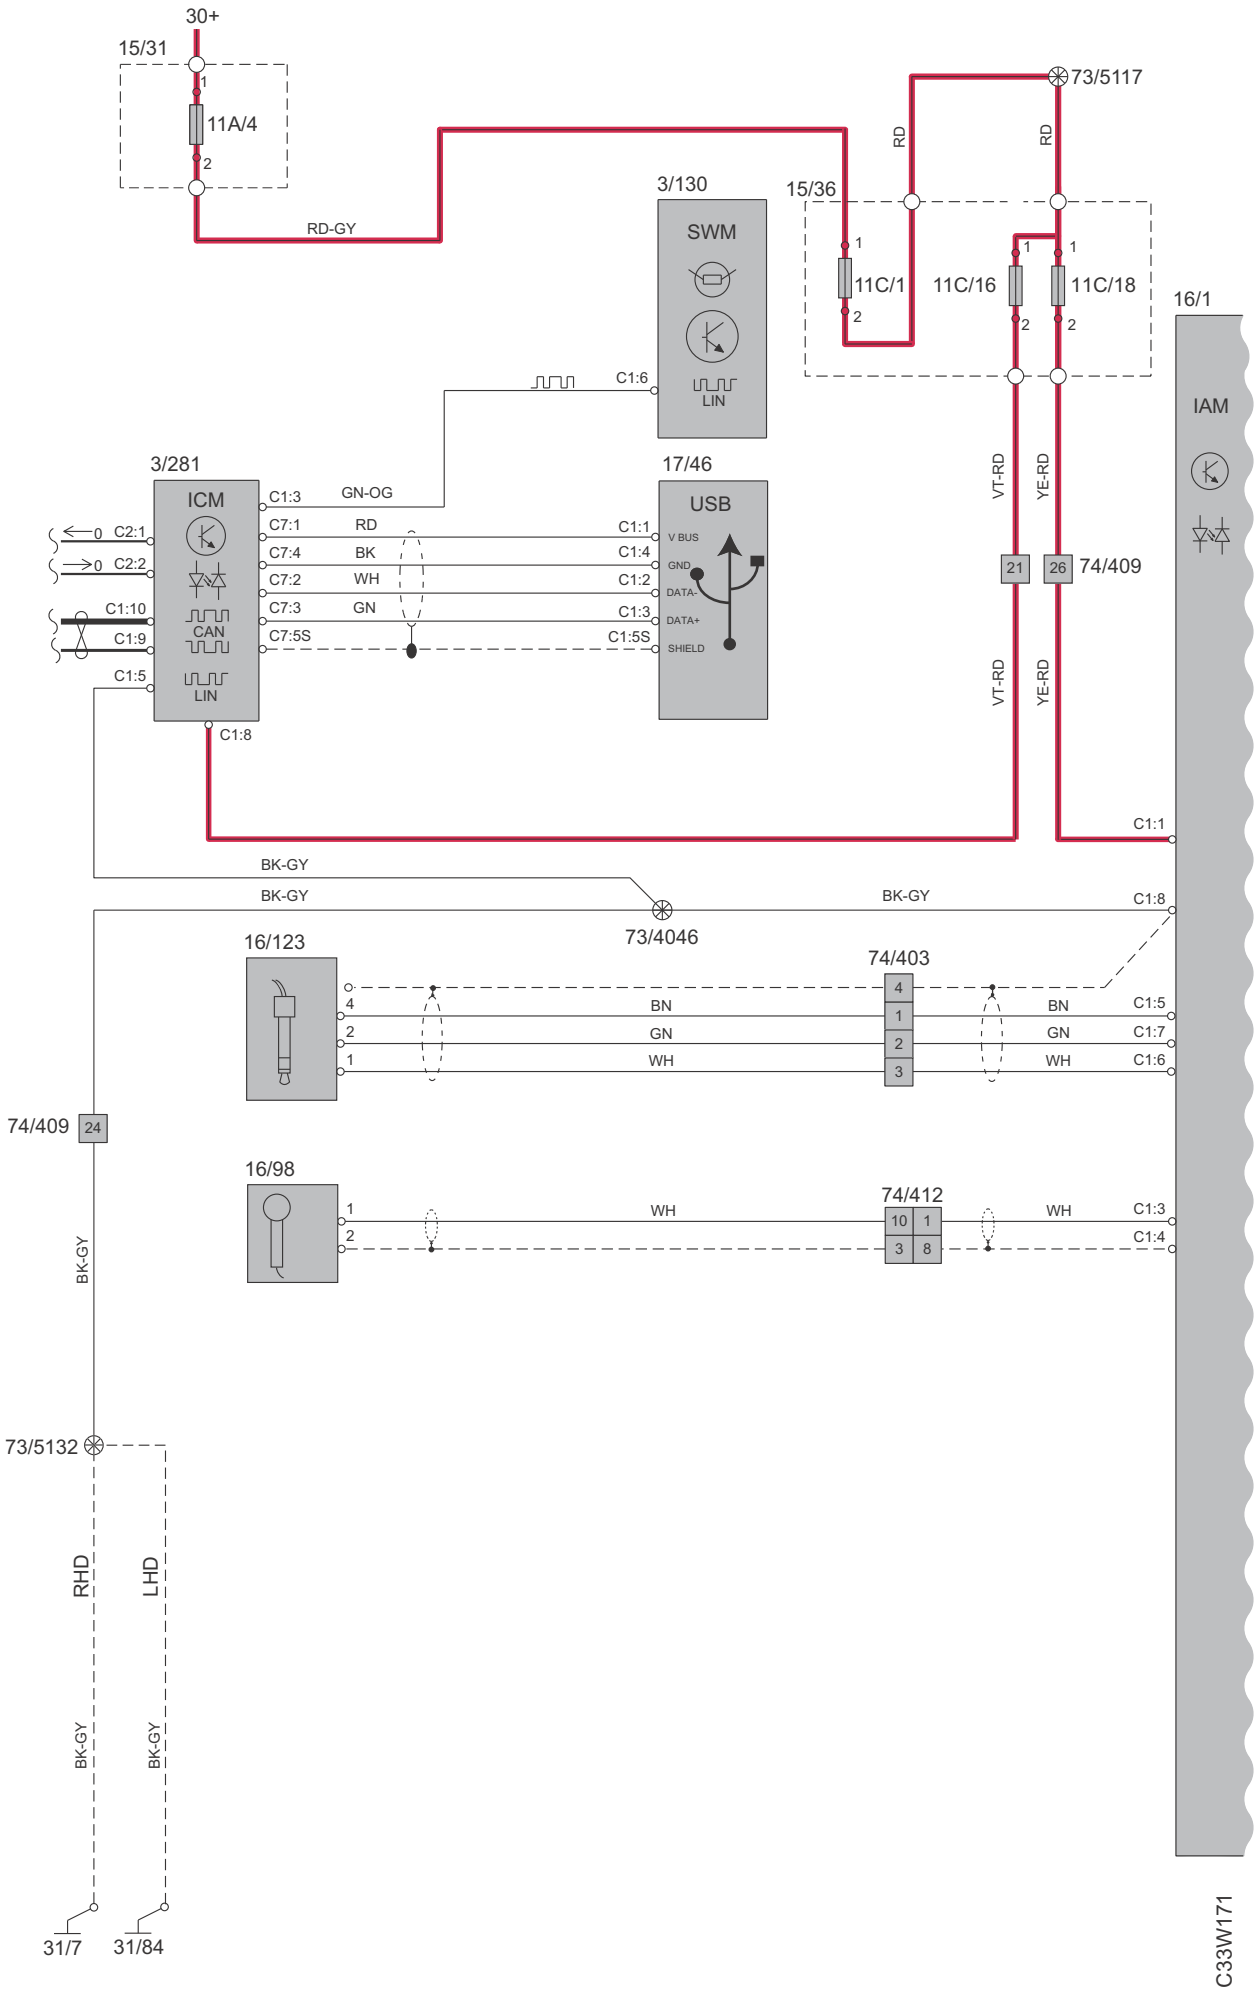

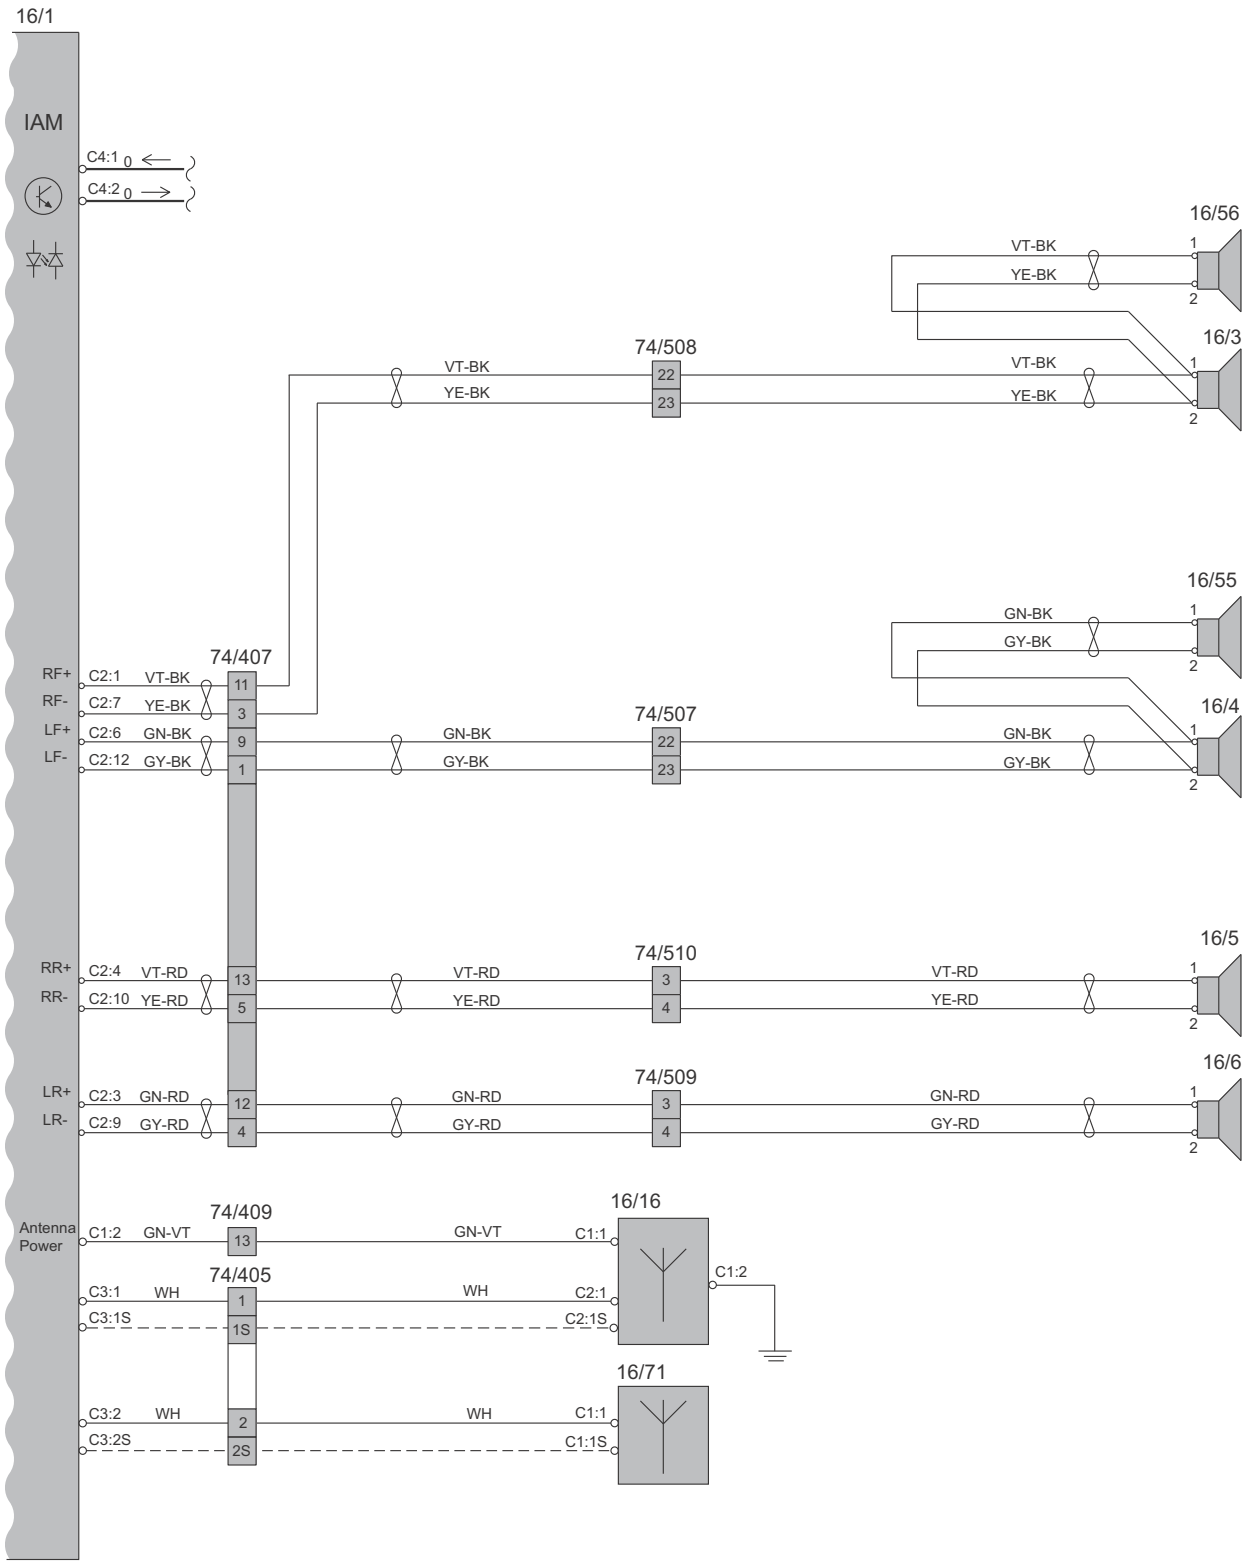
16/1
IAM
C4:1
C4:2
16/56
VT-BK
YE-BK
16/3
74/508
22
23
74/407
RF+
RF-
LF+
LF-
C2:1
C2:7
C2:6
C2:12
VT-BK
YE-BK
GN-BK
GY-BK
11
3
9
1
16/55
16/4
74/507
RR+
RR-
C2:4
C2:10
VT-RD
YE-RD
13
5
74/510
16/5
LR+
LR-
C2:3
C2:9
GN-RD
GY-RD
12
4
74/509
16/6
Antenna Power
C1:2
74/409
13
16/16
C1:1
C1:2
74/405
C3:1
C3:1S
1
1S
C2:1
C2:1S
C3:2
C3:2S
2
2S
16/71
C1:1S

C33W172

Group 39 Other
Audio Premium 1:3

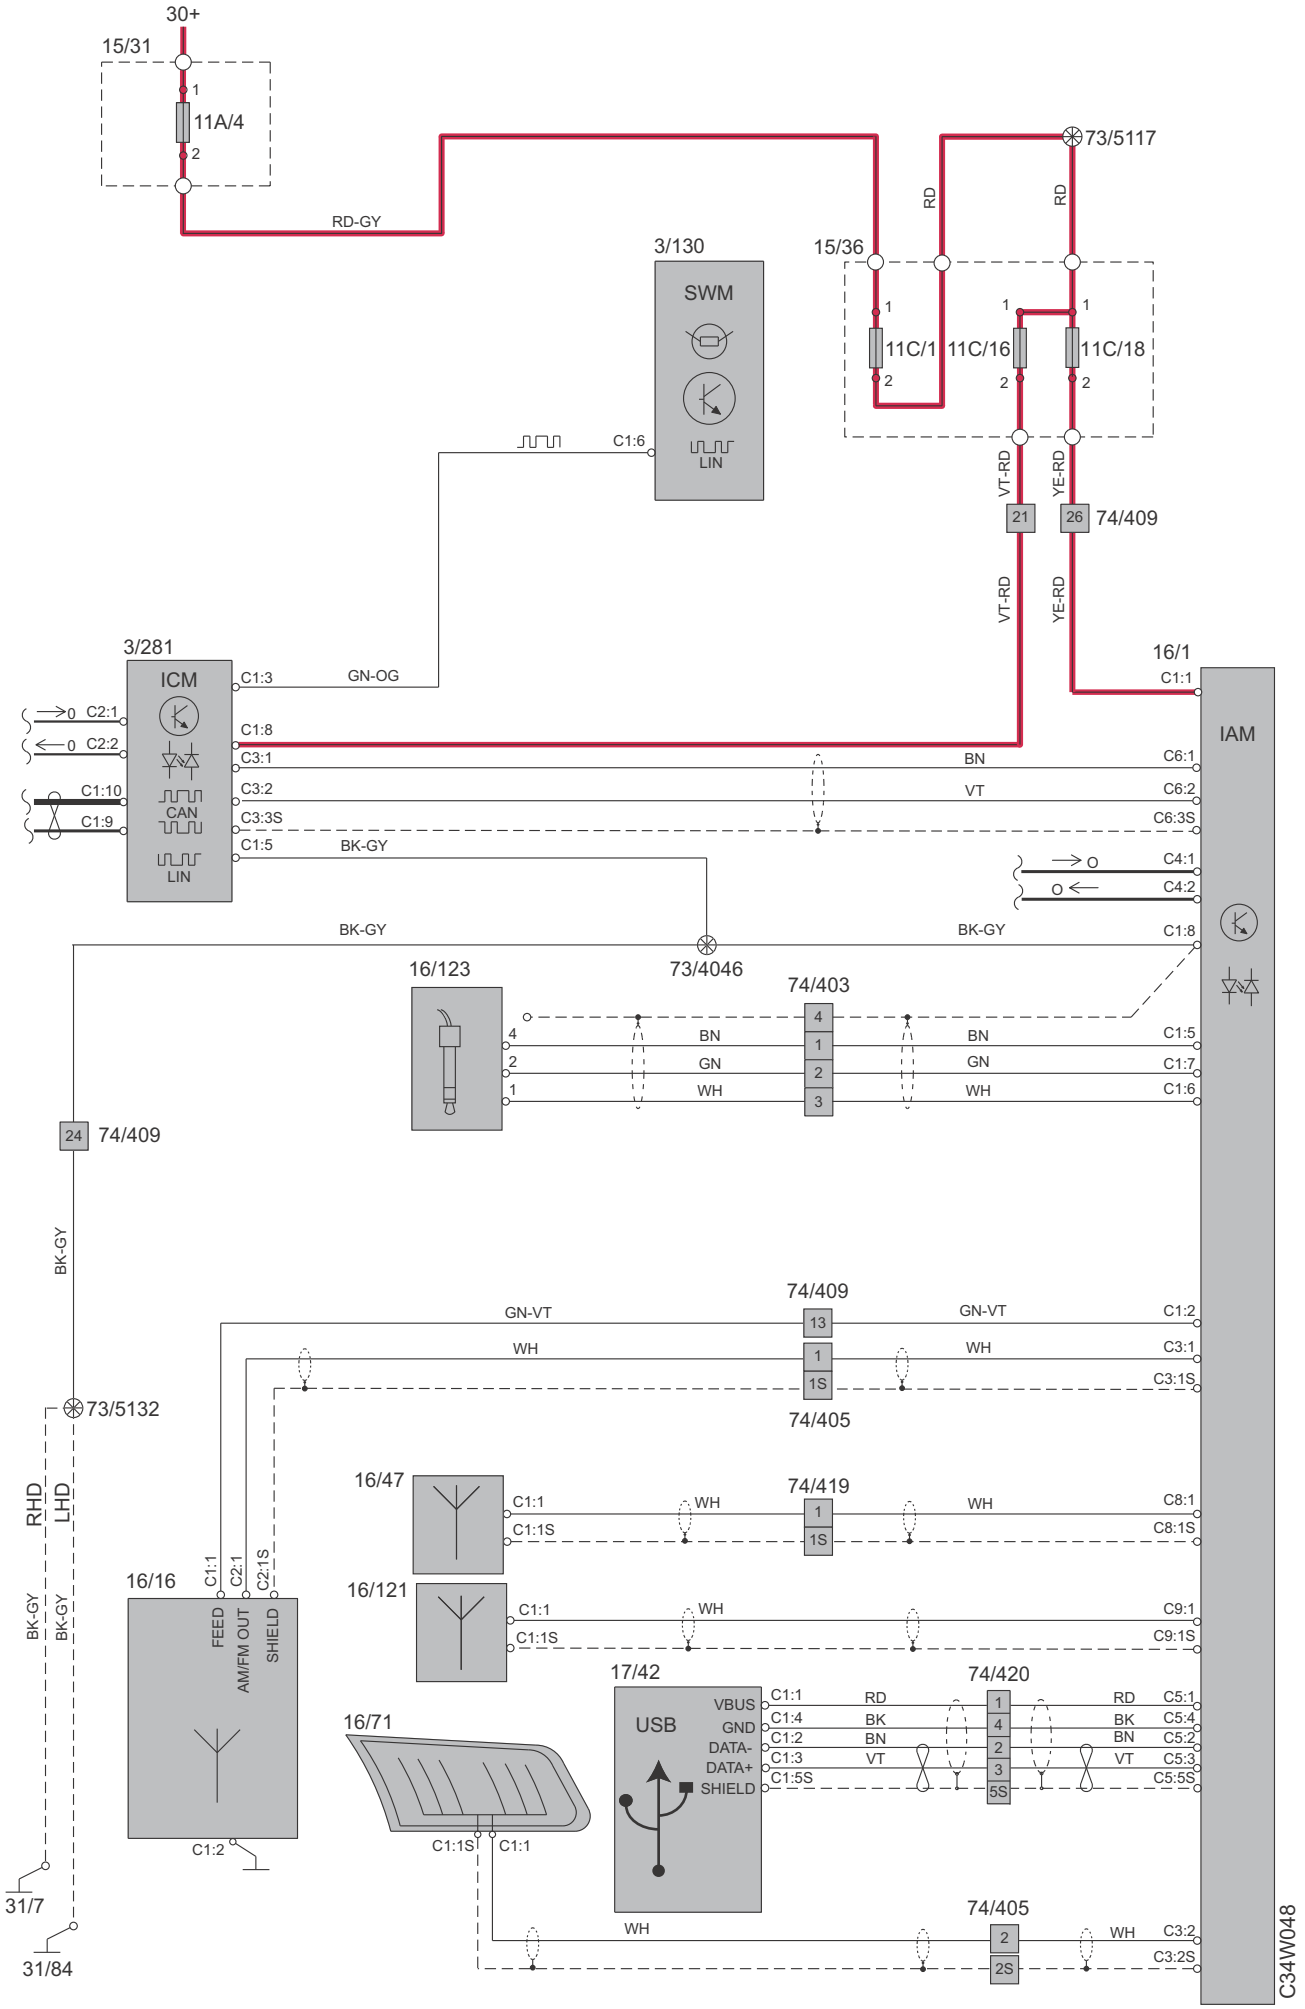

Group 39 Other
Audio Premium 2:3

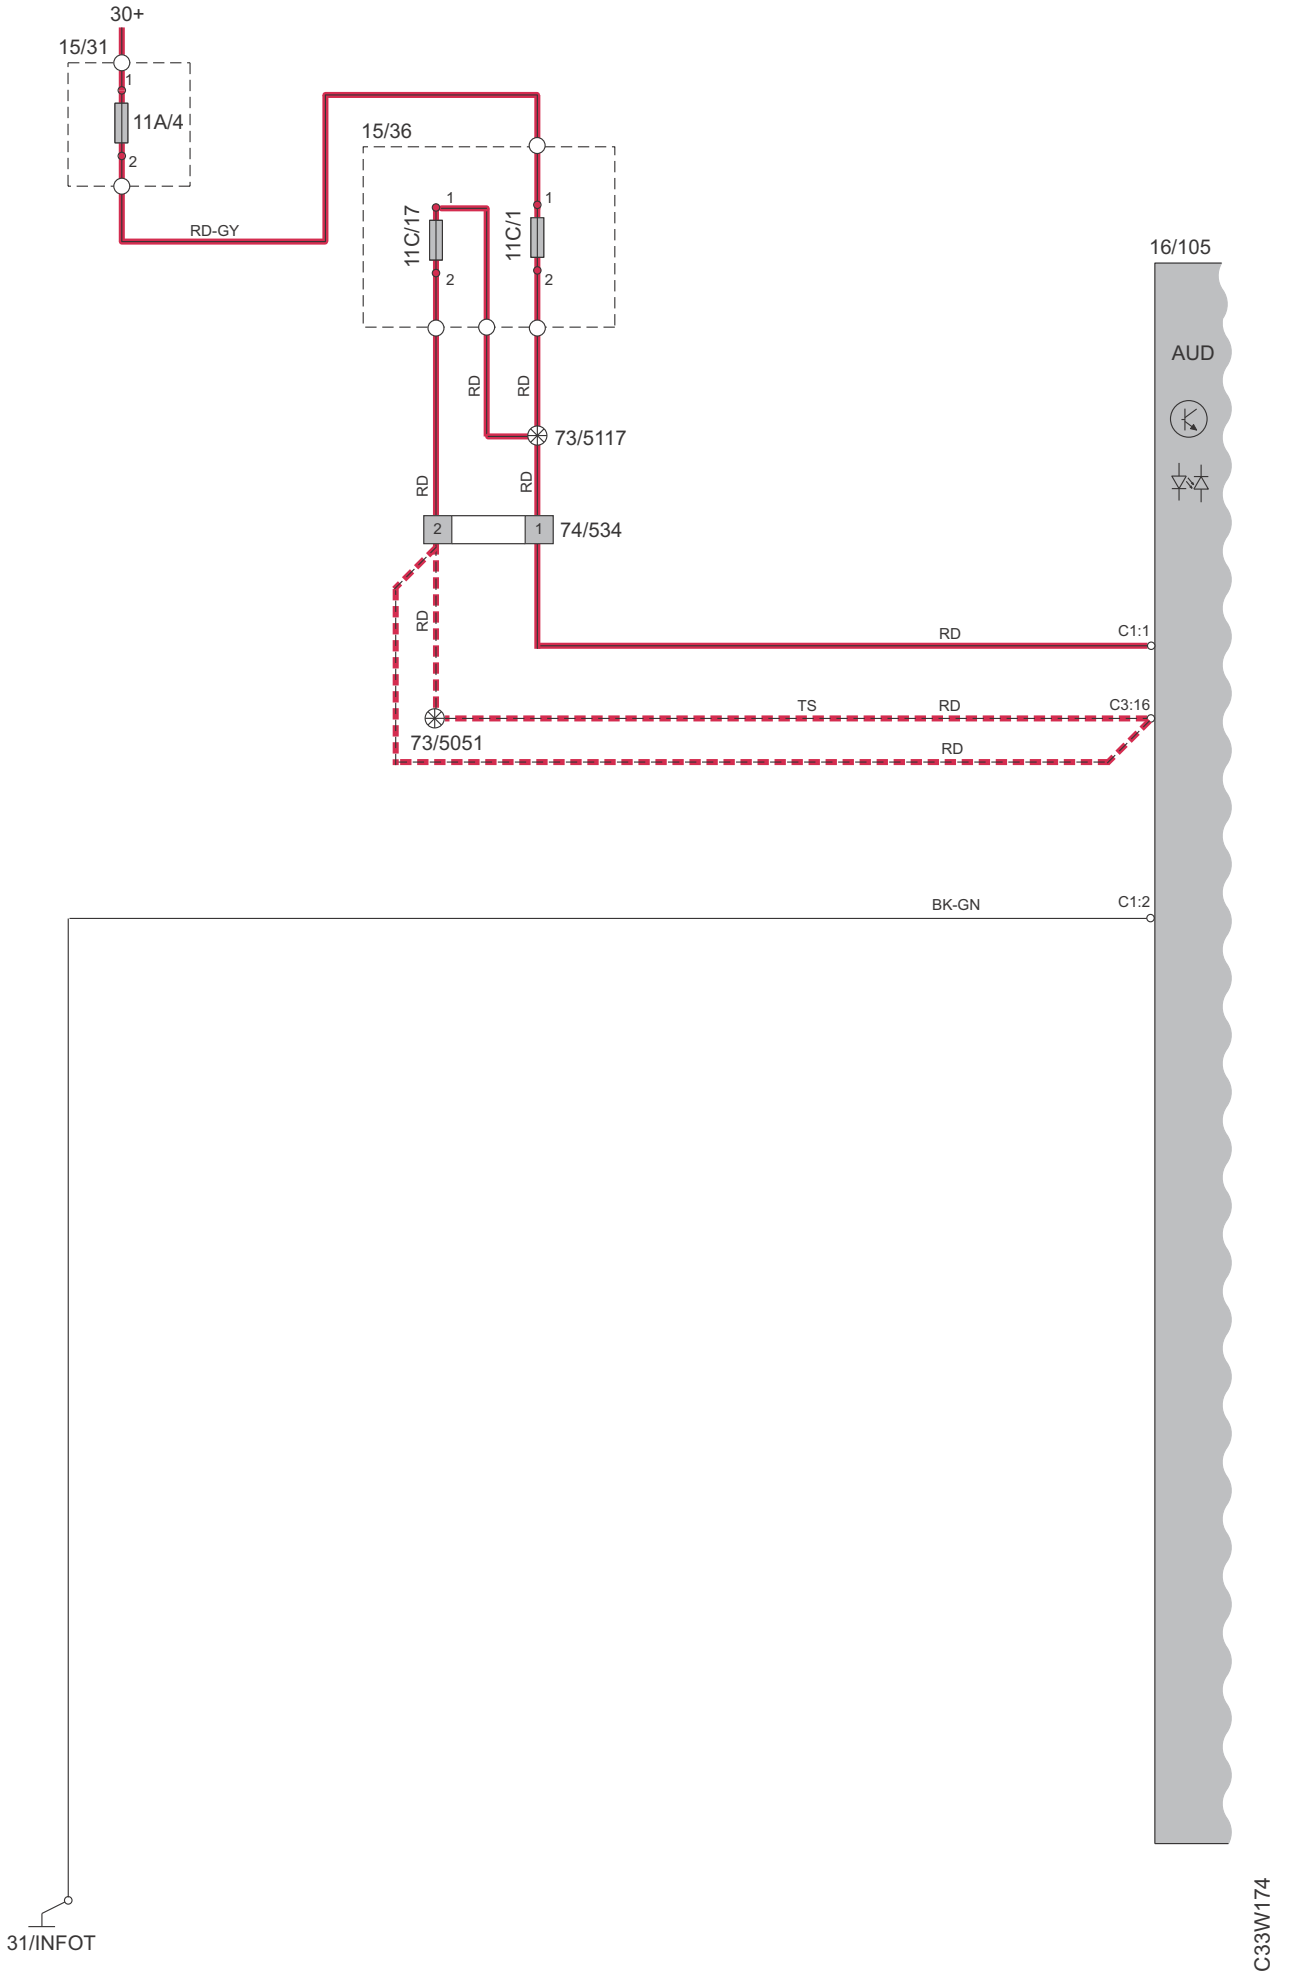

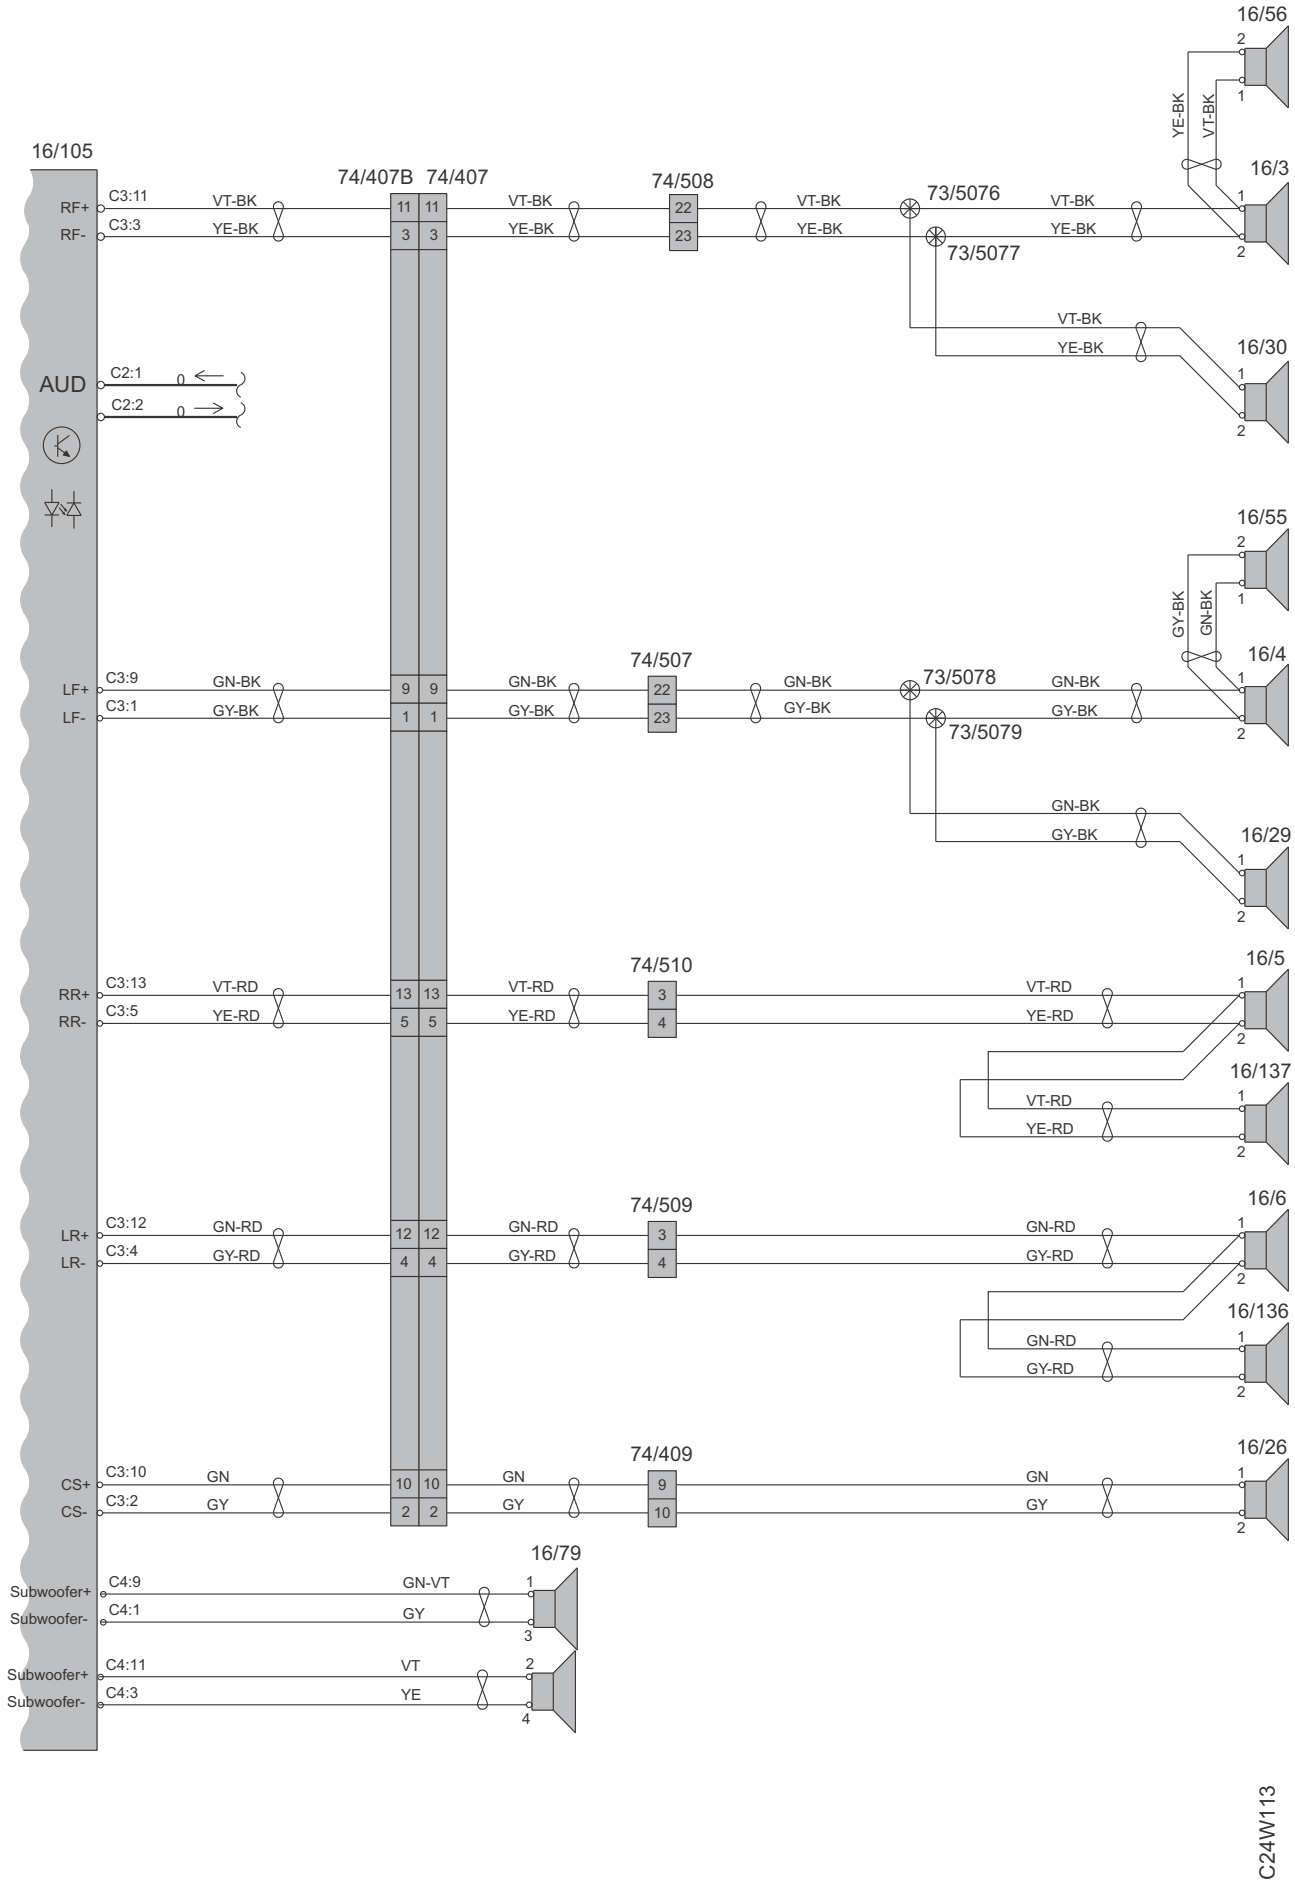
16/105
74/407B
74/407
74/508
73/5076
73/5077
16/56
16/3
16/30
YE-BK
VT-BK
RF+
RF-
C3:11
C3:3
VT-BK
YE-BK
AUD
C2:1
C2:2
74/507
73/5078
73/5079
16/55
16/4
16/29
GY-BK
GN-BK
LF+
LF-
C3:9
C3:1
GN-BK
GY-BK
74/510
16/5
16/137
RR+
RR-
C3:13
C3:5
VT-RD
YE-RD
74/509
16/6
16/136
LR+
LR-
C3:12
C3:4
GN-RD
GY-RD
74/409
16/26
CS+
CS-
C3:10
C3:2
GN
GY
16/79
Subwoofer+
Subwoofer-
C4:9
C4:1
GN-VT
GY
C4:11
C4:3
VT
YE

C24W113

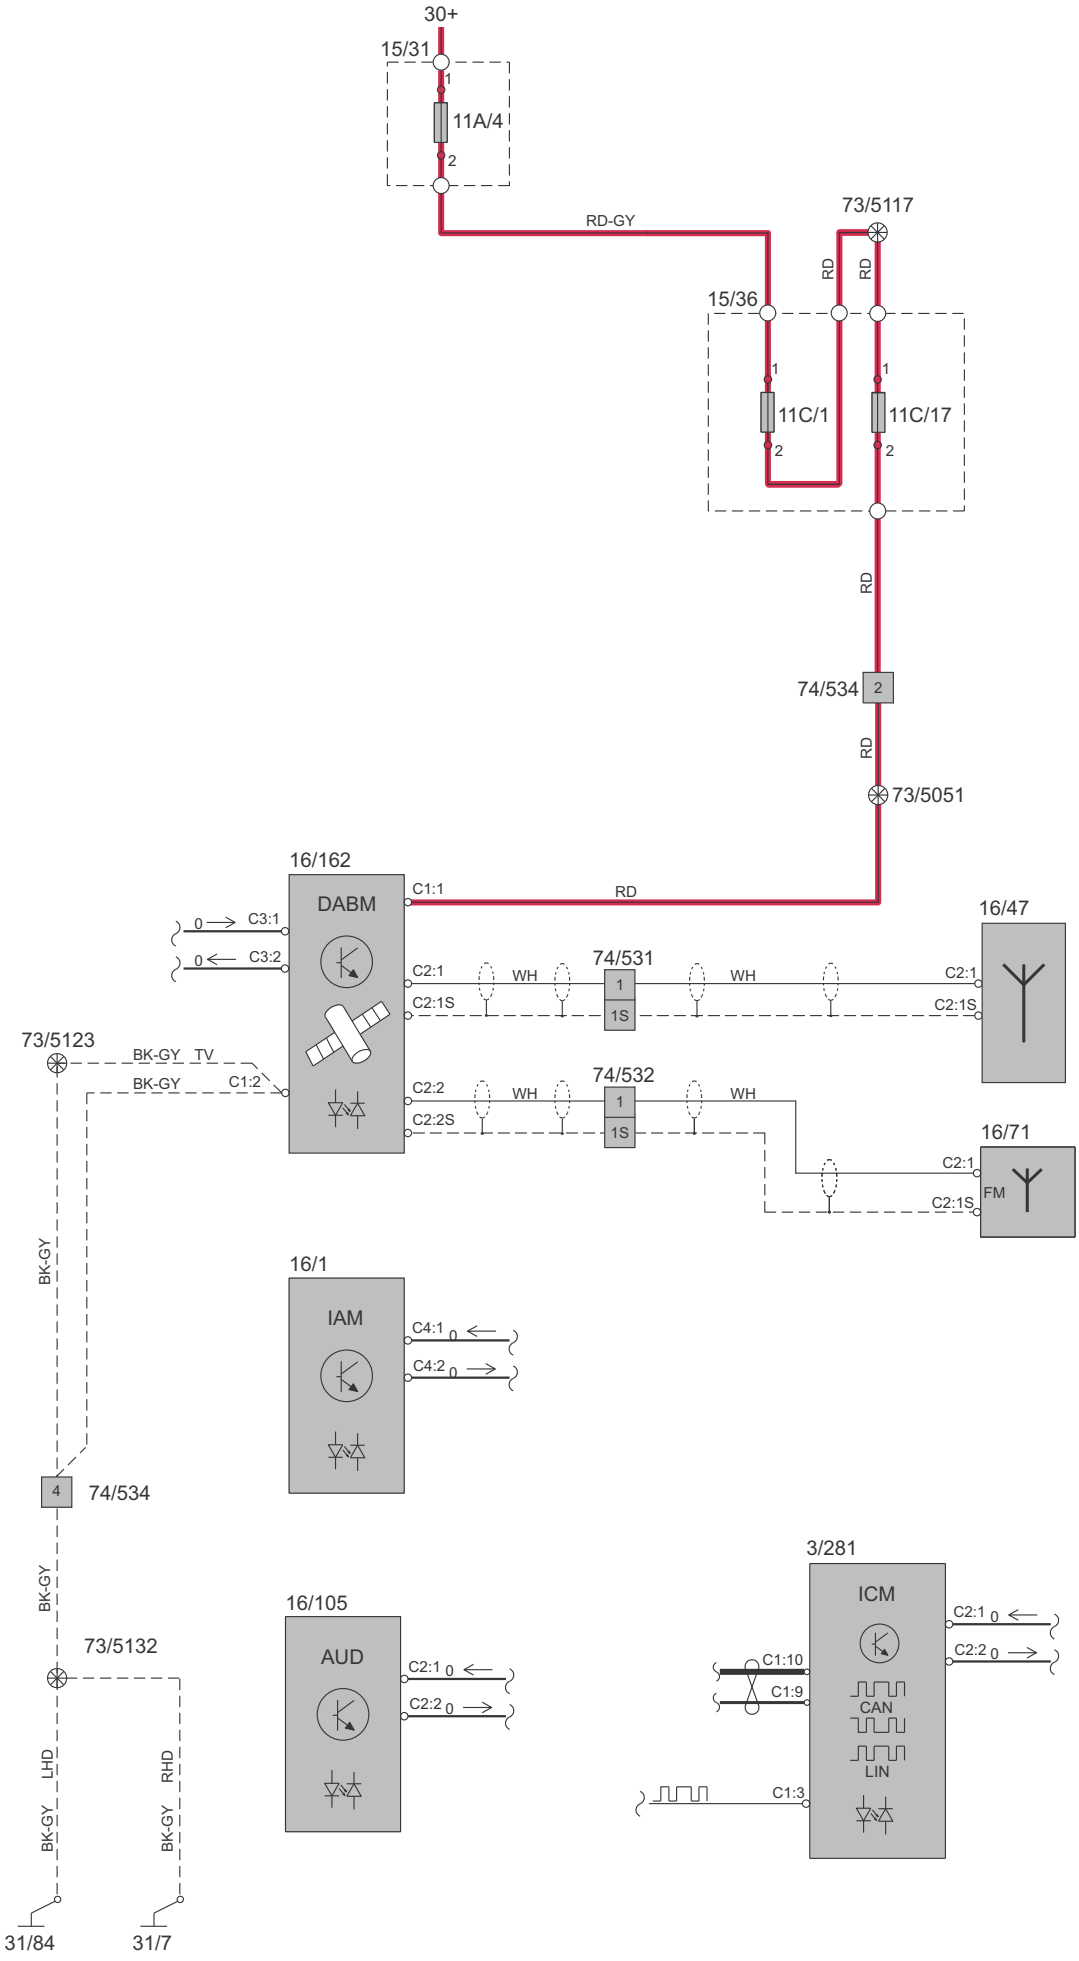
30+
15/31
1
11A/4
2
RD-GY
73/5117
RD
RD
15/36
1
11C/1
2
1
11C/17
2
RD
74/534
2
RD
73/5051
16/162
DABM
C1:1
RD
0
C3:1
0
C3:2
C2:1
WH
74/531
1
1S
WH
C2:1
C2:1S
C2:1S
16/47
C2:2
WH
74/532
1
1S
WH
C2:2S
16/71
C2:1
FM
C2:1S
73/5123
BK-GY
TV
BK-GY
C1:2
BK-GY
16/1
IAM
C4:1
0
C4:2
0
4
74/534
BK-GY
3/281
ICM
C2:1
0
C2:2
0
C1:10
C1:9
CAN
LIN
C1:3
16/105
AUD
C2:1
0
C2:2
0
73/5132
LHD
RHD
BK-GY
BK-GY
31/84
31/7

C33W175

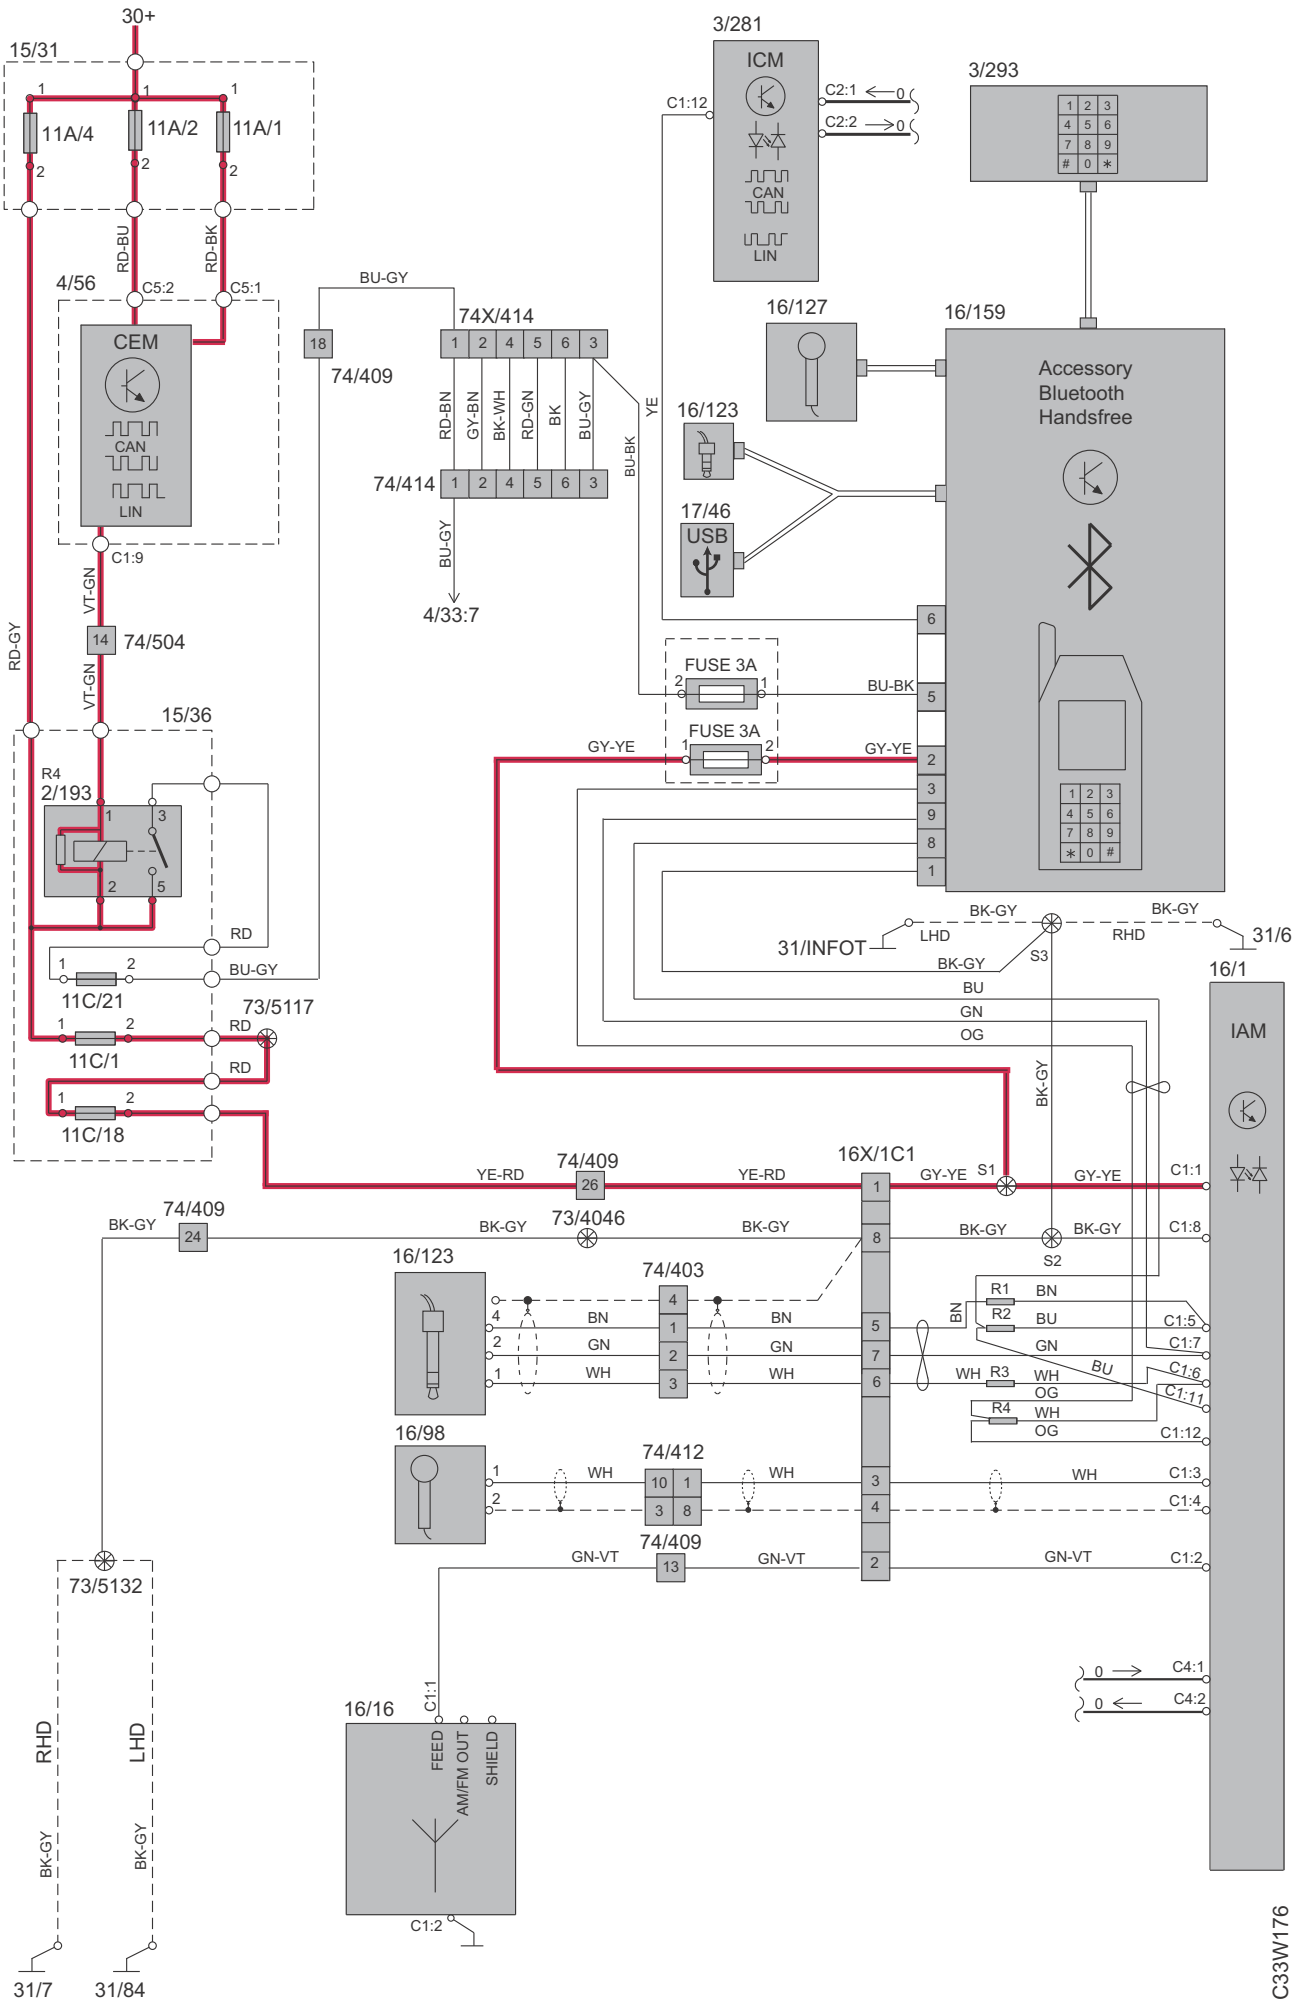
30+
15/31
11A/4
11A/2
11A/1
RD-BU
RD-BK
4/56
C5:2
C5:1
CEM
CAN
LIN
C1:9
VT-GN
74/504
RD-GY
15/36
R4
2/193
RD
BU-GY
11C/21
73/5117
11C/1
11C/18
3/281
ICM
C1:12
C2:1
C2:2
3/293
BU-GY
74X/414
74/409
18
RD-BN
GY-BN
BK-WH
RD-GN
BK
BU-GY
YE
BU-BK
74/414
4/33:7
16/127
16/159
Accessory
Bluetooth
Handsfree
16/123
17/46
USB
FUSE 3A
FUSE 3A
BU-BK
GY-YE
31/INFOT
LHD
RHD
BK-GY
31/6
S3
BU
GN
OG
16/1
IAM
YE-RD
74/409
26
16X/1C1
S1
C1:1
74/409
24
73/4046
C1:8
S2
74/403
BN
GN
WH
R1
R2
R3
R4
C1:5
C1:7
C1:6
C1:11
C1:12
16/98
74/412
C1:3
C1:4
74/409
13
GN-VT
C1:2
73/5132
RHD
LHD
31/7
31/84
16/16
FEED
AM/FM OUT
SHIELD
C4:1
C4:2
C33W176

Multimedia monitor with DVD, Dual Screen (RSE), V70

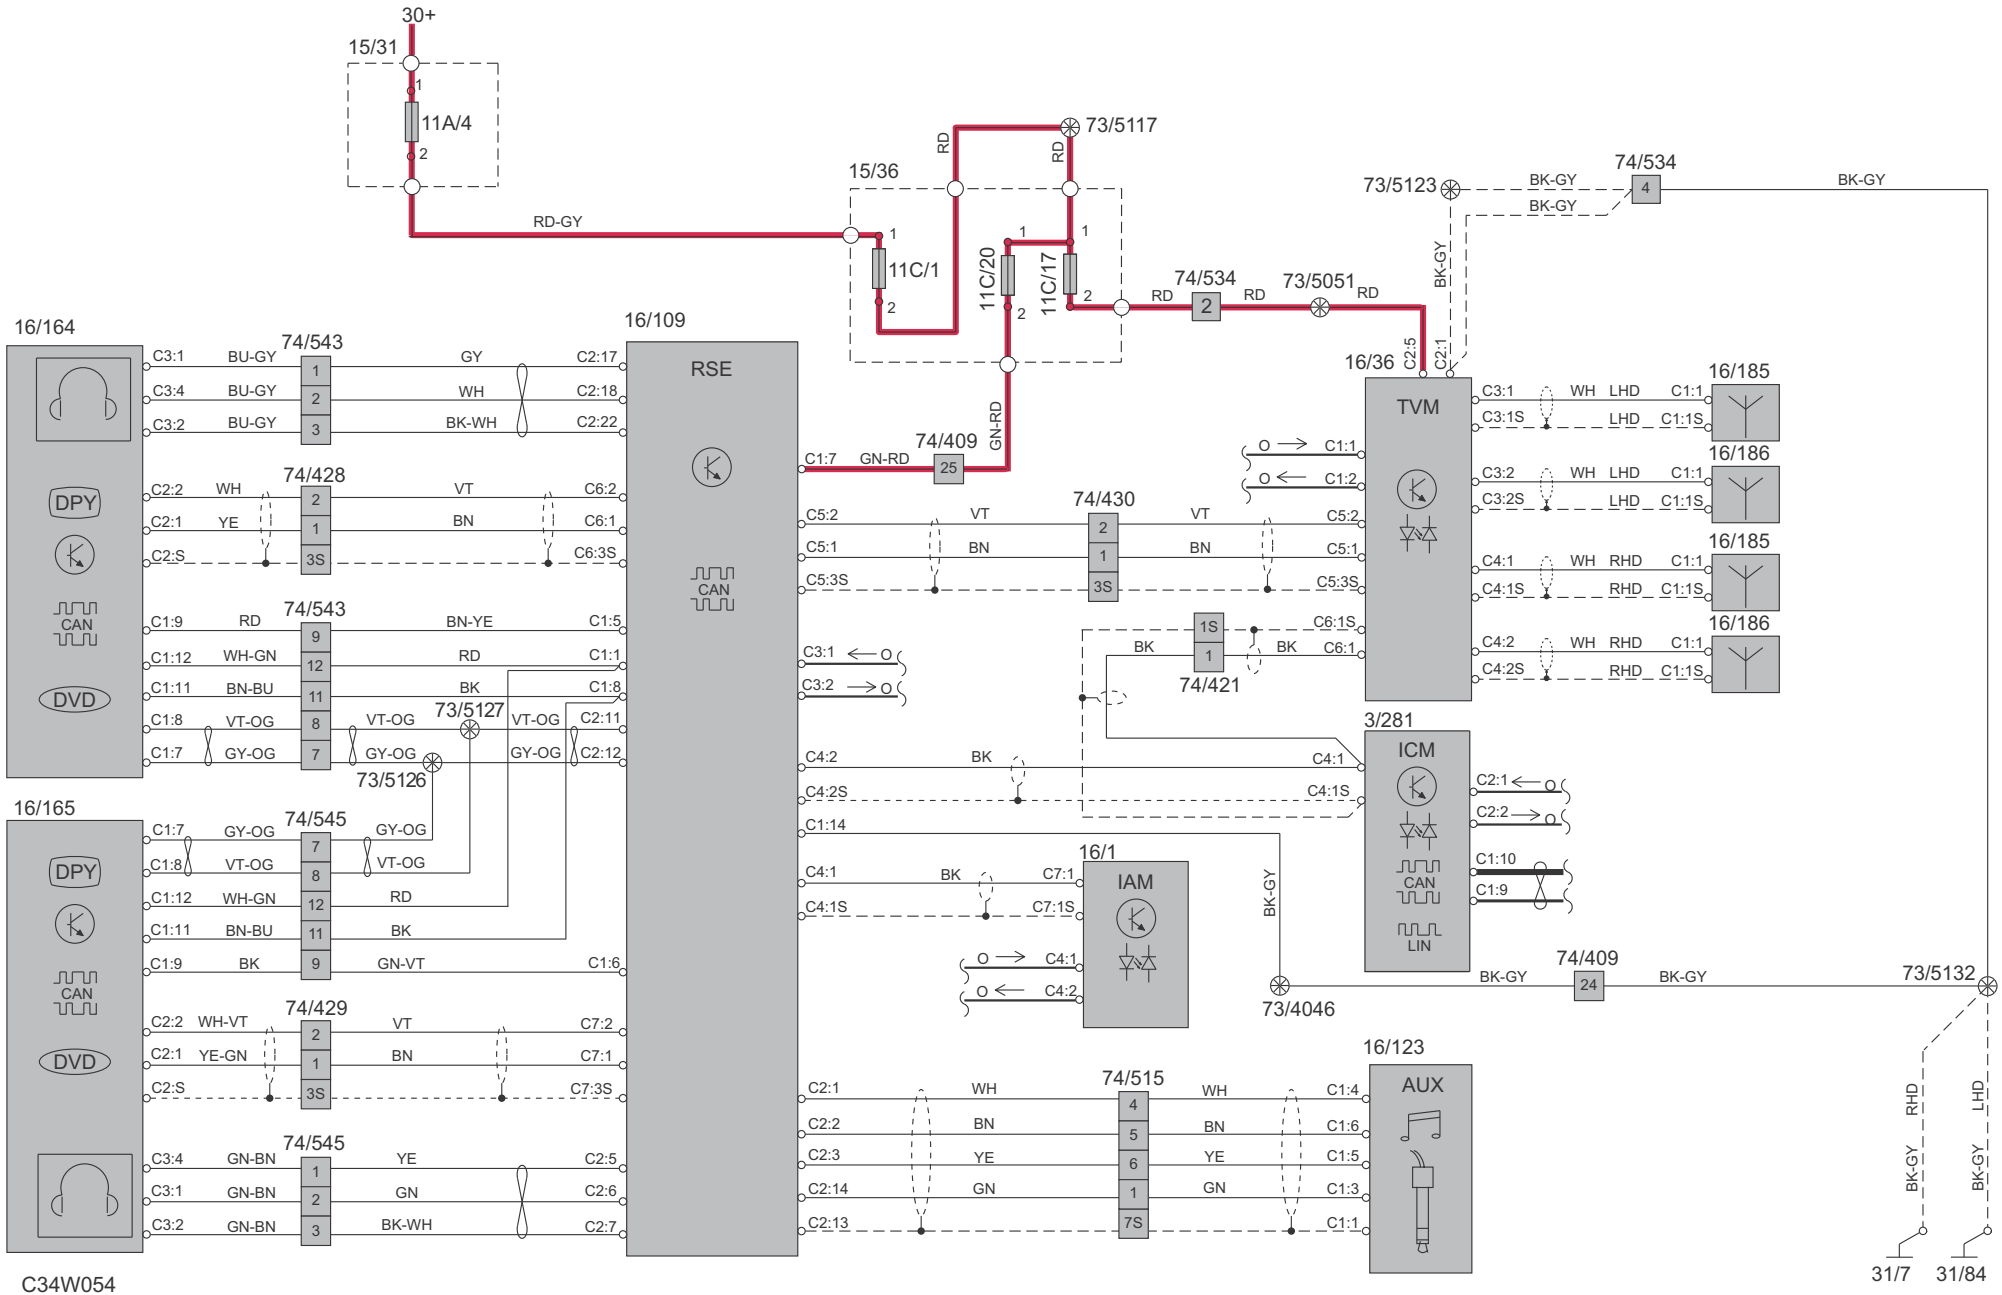

Multimedia monitor with DVD, Dual Screen (RSE), S80

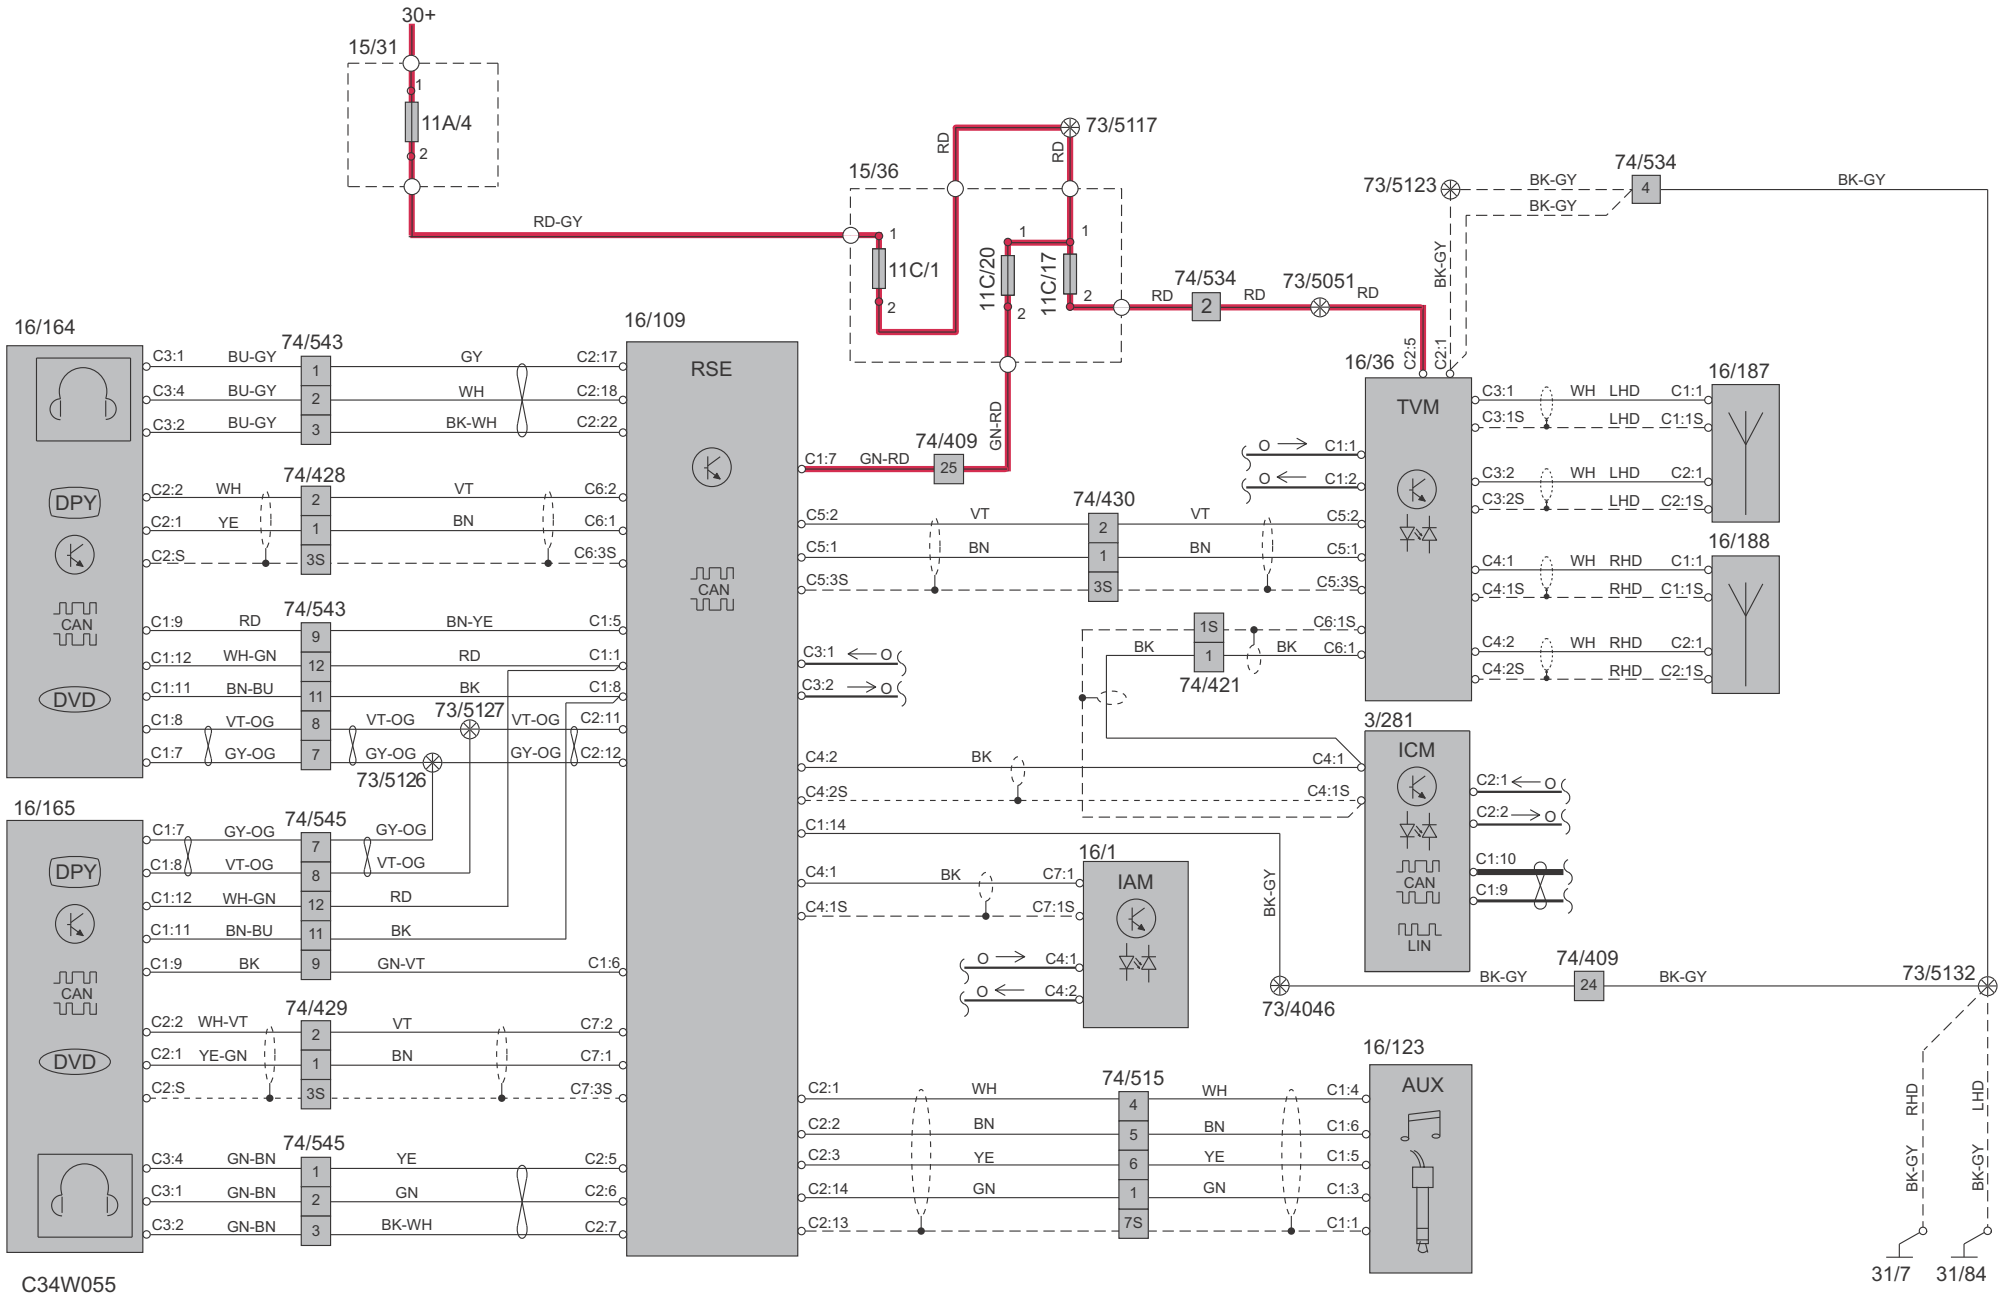

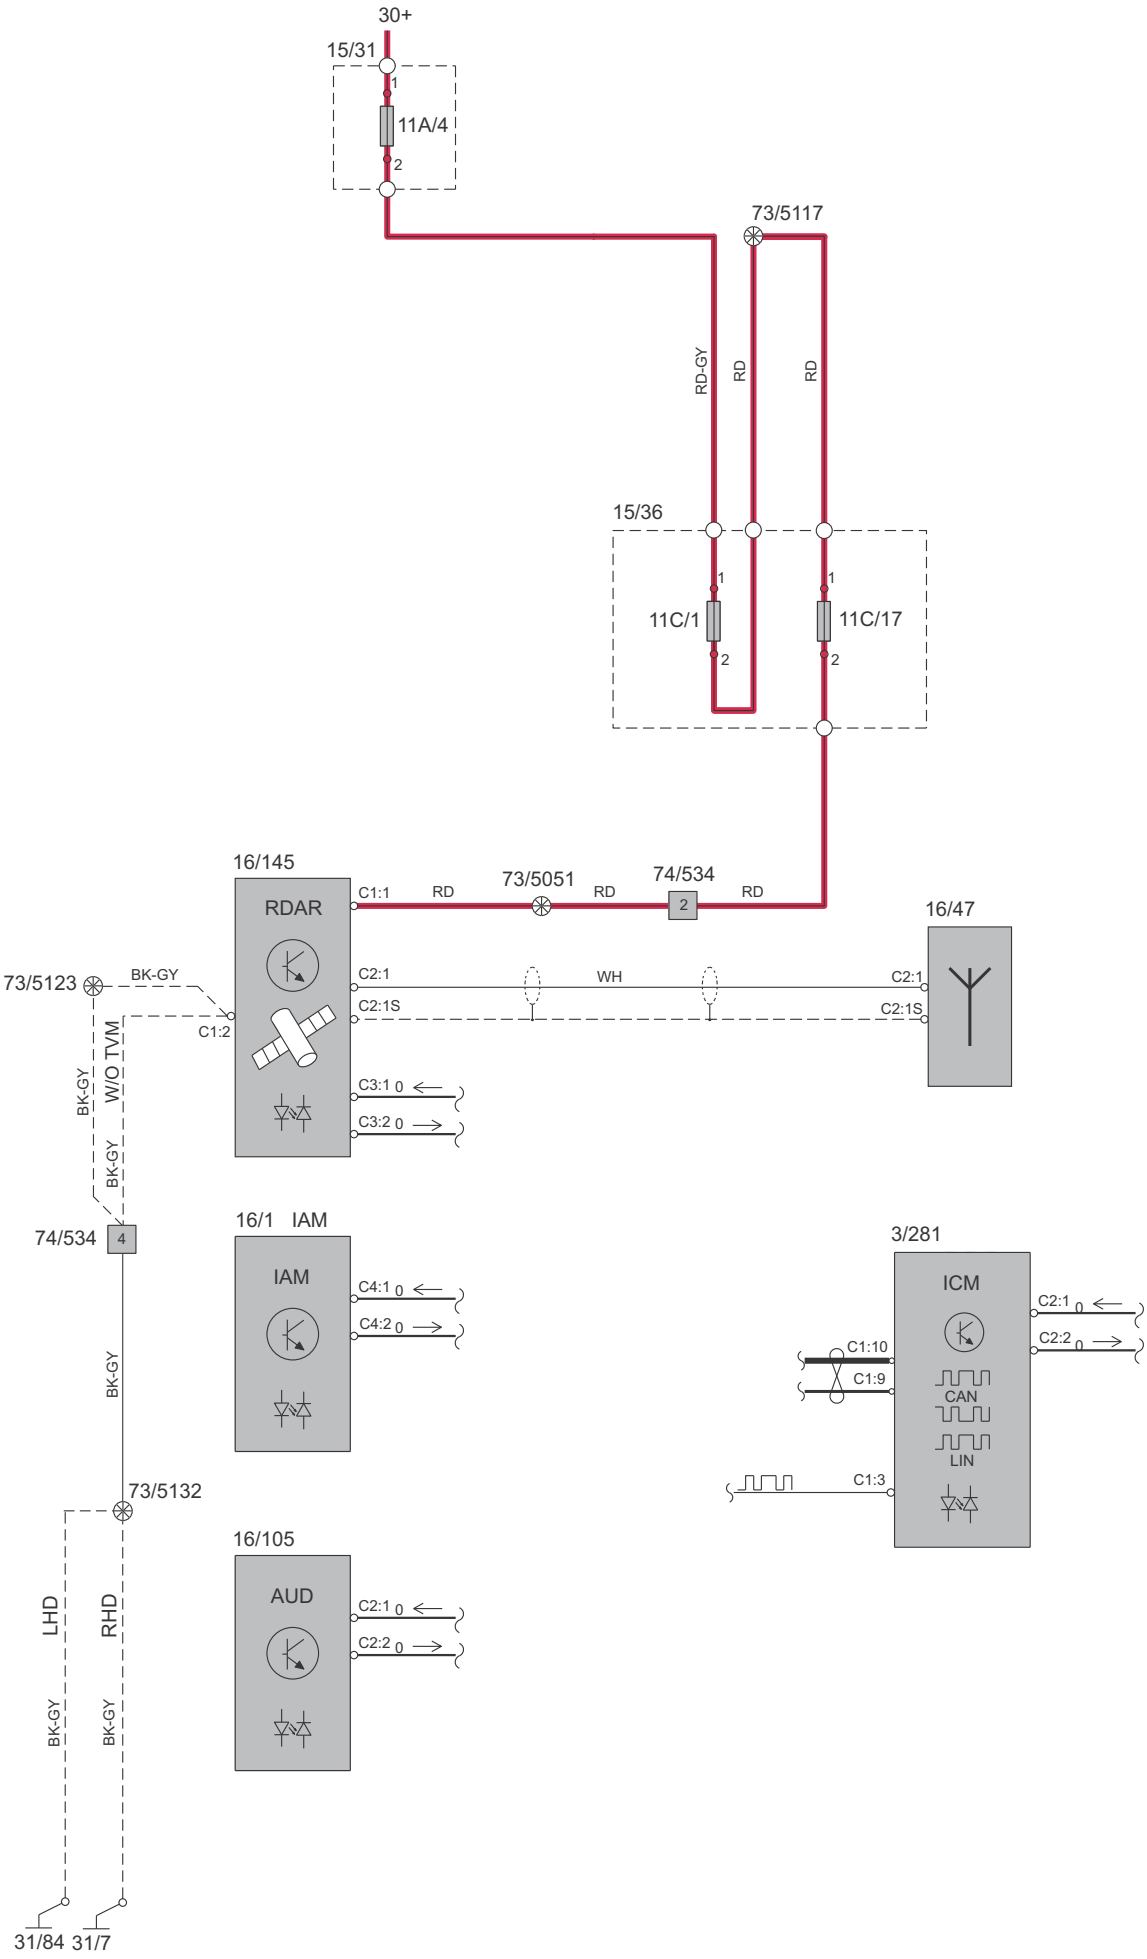
30+
15/31
1
11A/4
2
73/5117
RD-GY
RD
RD
15/36
11C/1
11C/17
16/145
RDAR
C1:1
RD
73/5051
RD
74/534
2
RD
16/47
73/5123
BK-GY
C1:2
C2:1
C2:1S
WH
C2:1
C2:1S
BK-GY
W/O TVM
BK-GY
C3:1
C3:2
74/534
4
16/1 IAM
IAM
C4:1
C4:2
3/281
ICM
C2:1
C2:2
C1:10
C1:9
CAN
LIN
C1:3
BK-GY
73/5132
16/105
AUD
C2:1
C2:2
LHD
RHD
BK-GY
BK-GY
31/84
31/7

C33W179

Parking camera

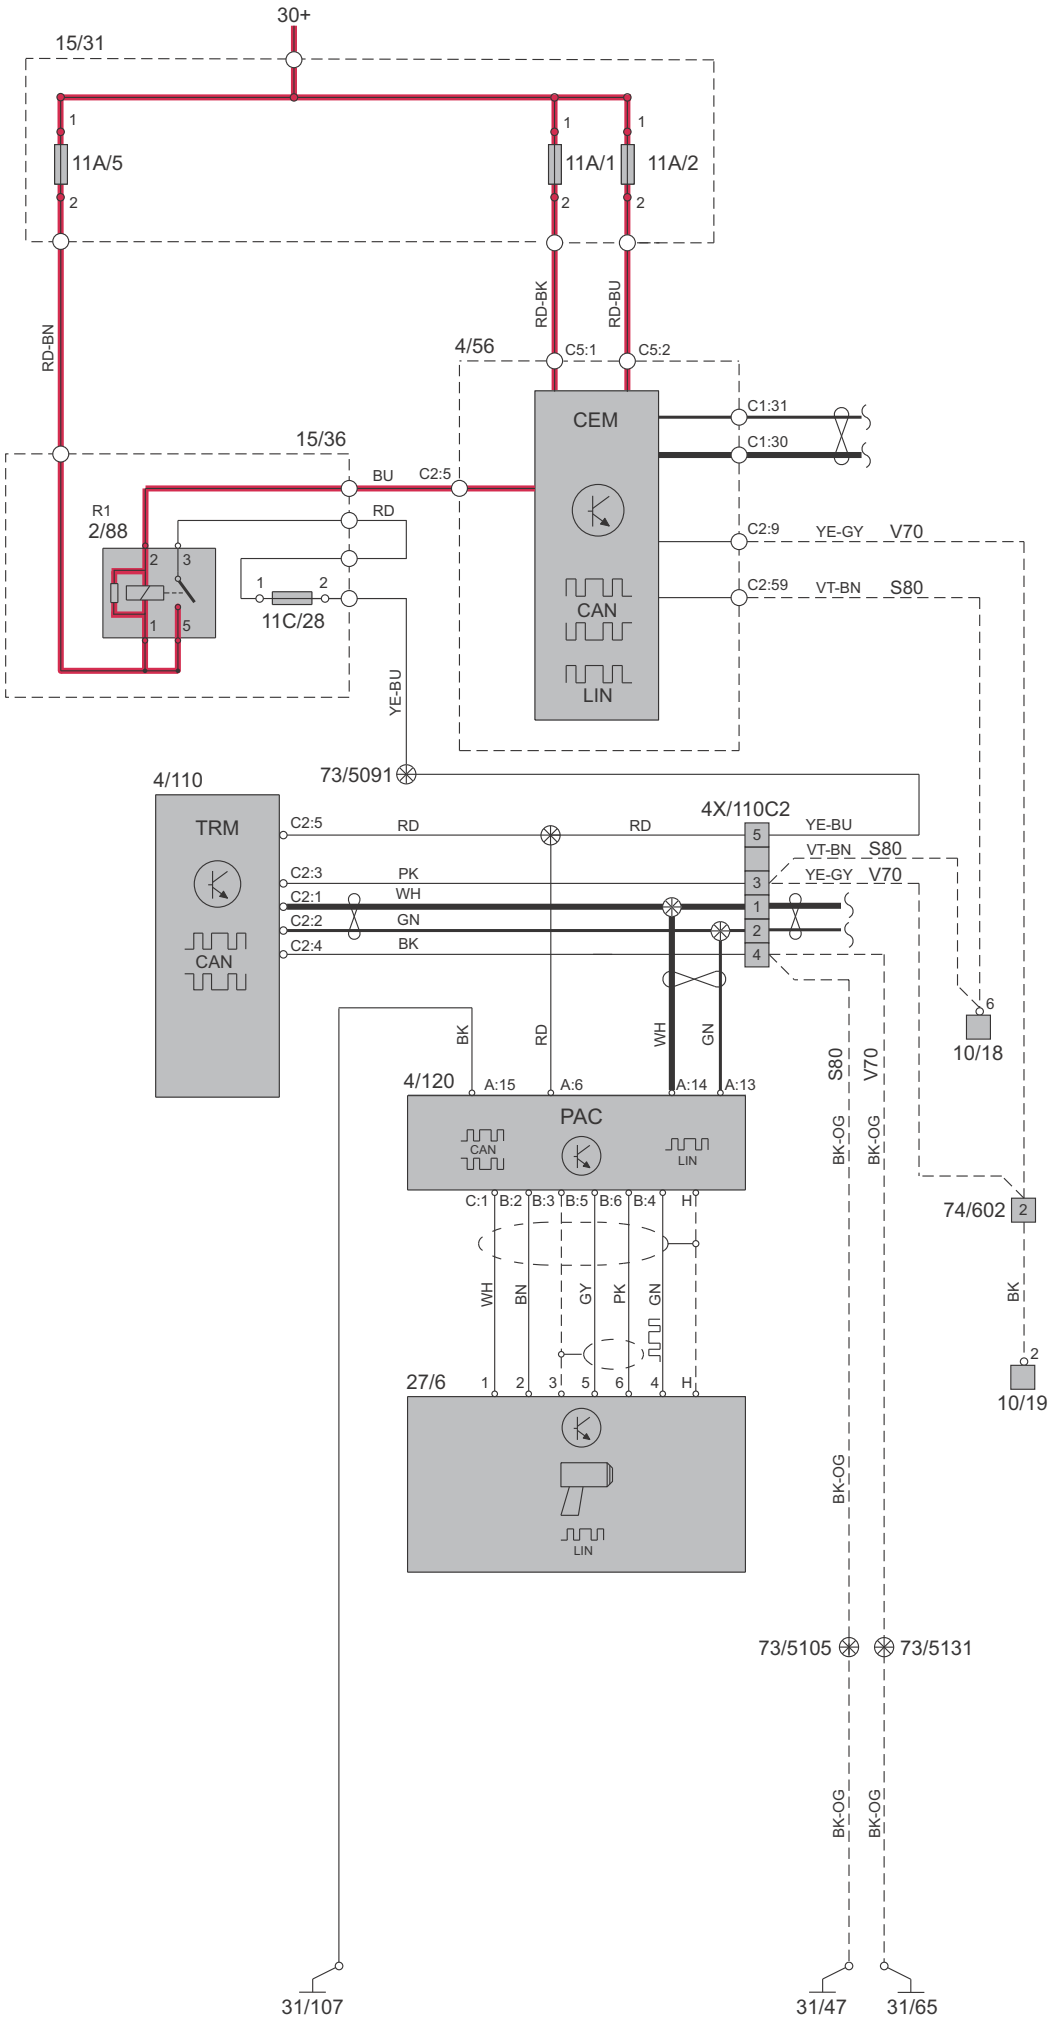

Group 39 Other, Accessories
Parking camera wide-angle, front

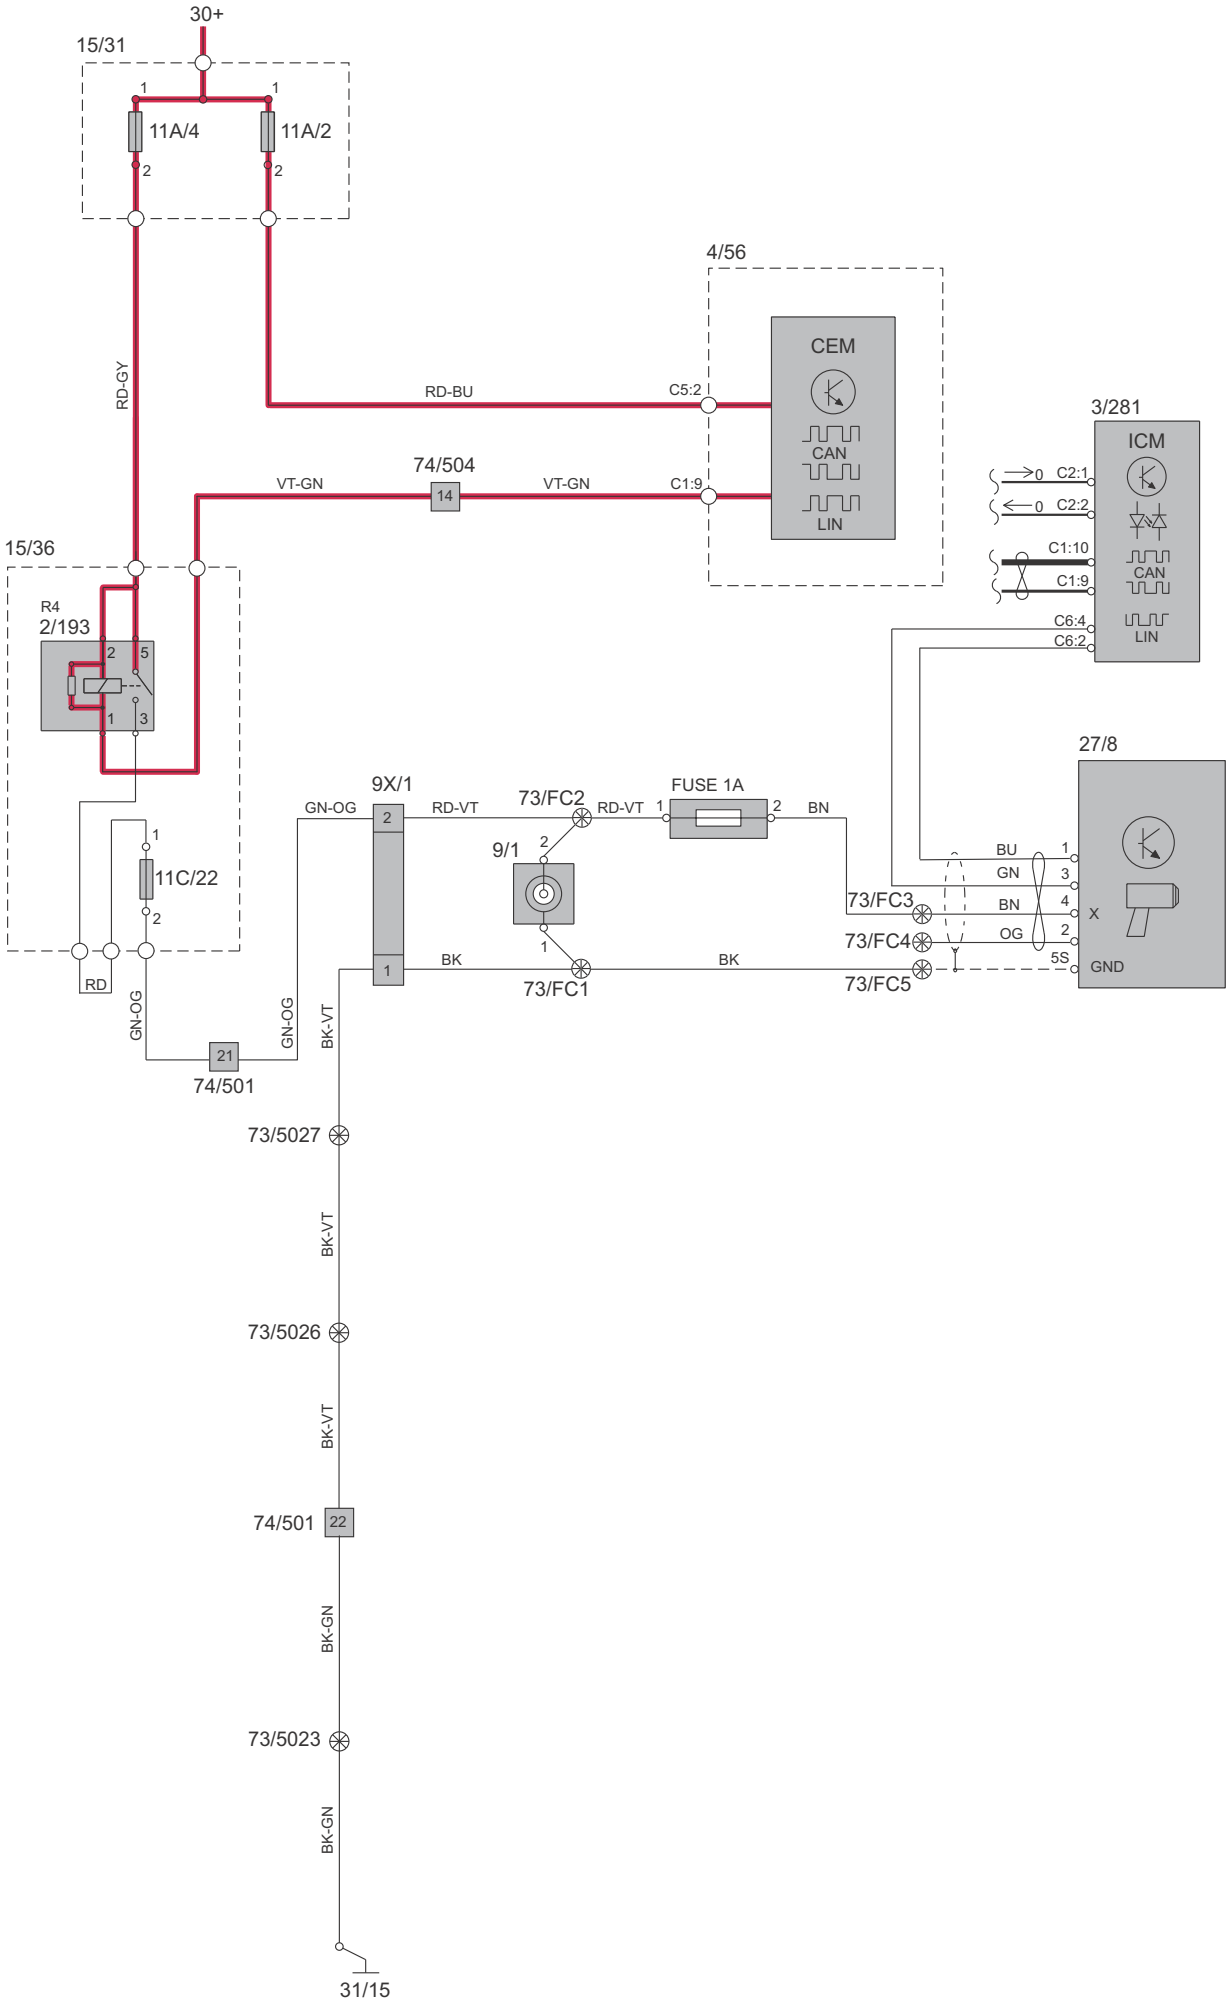

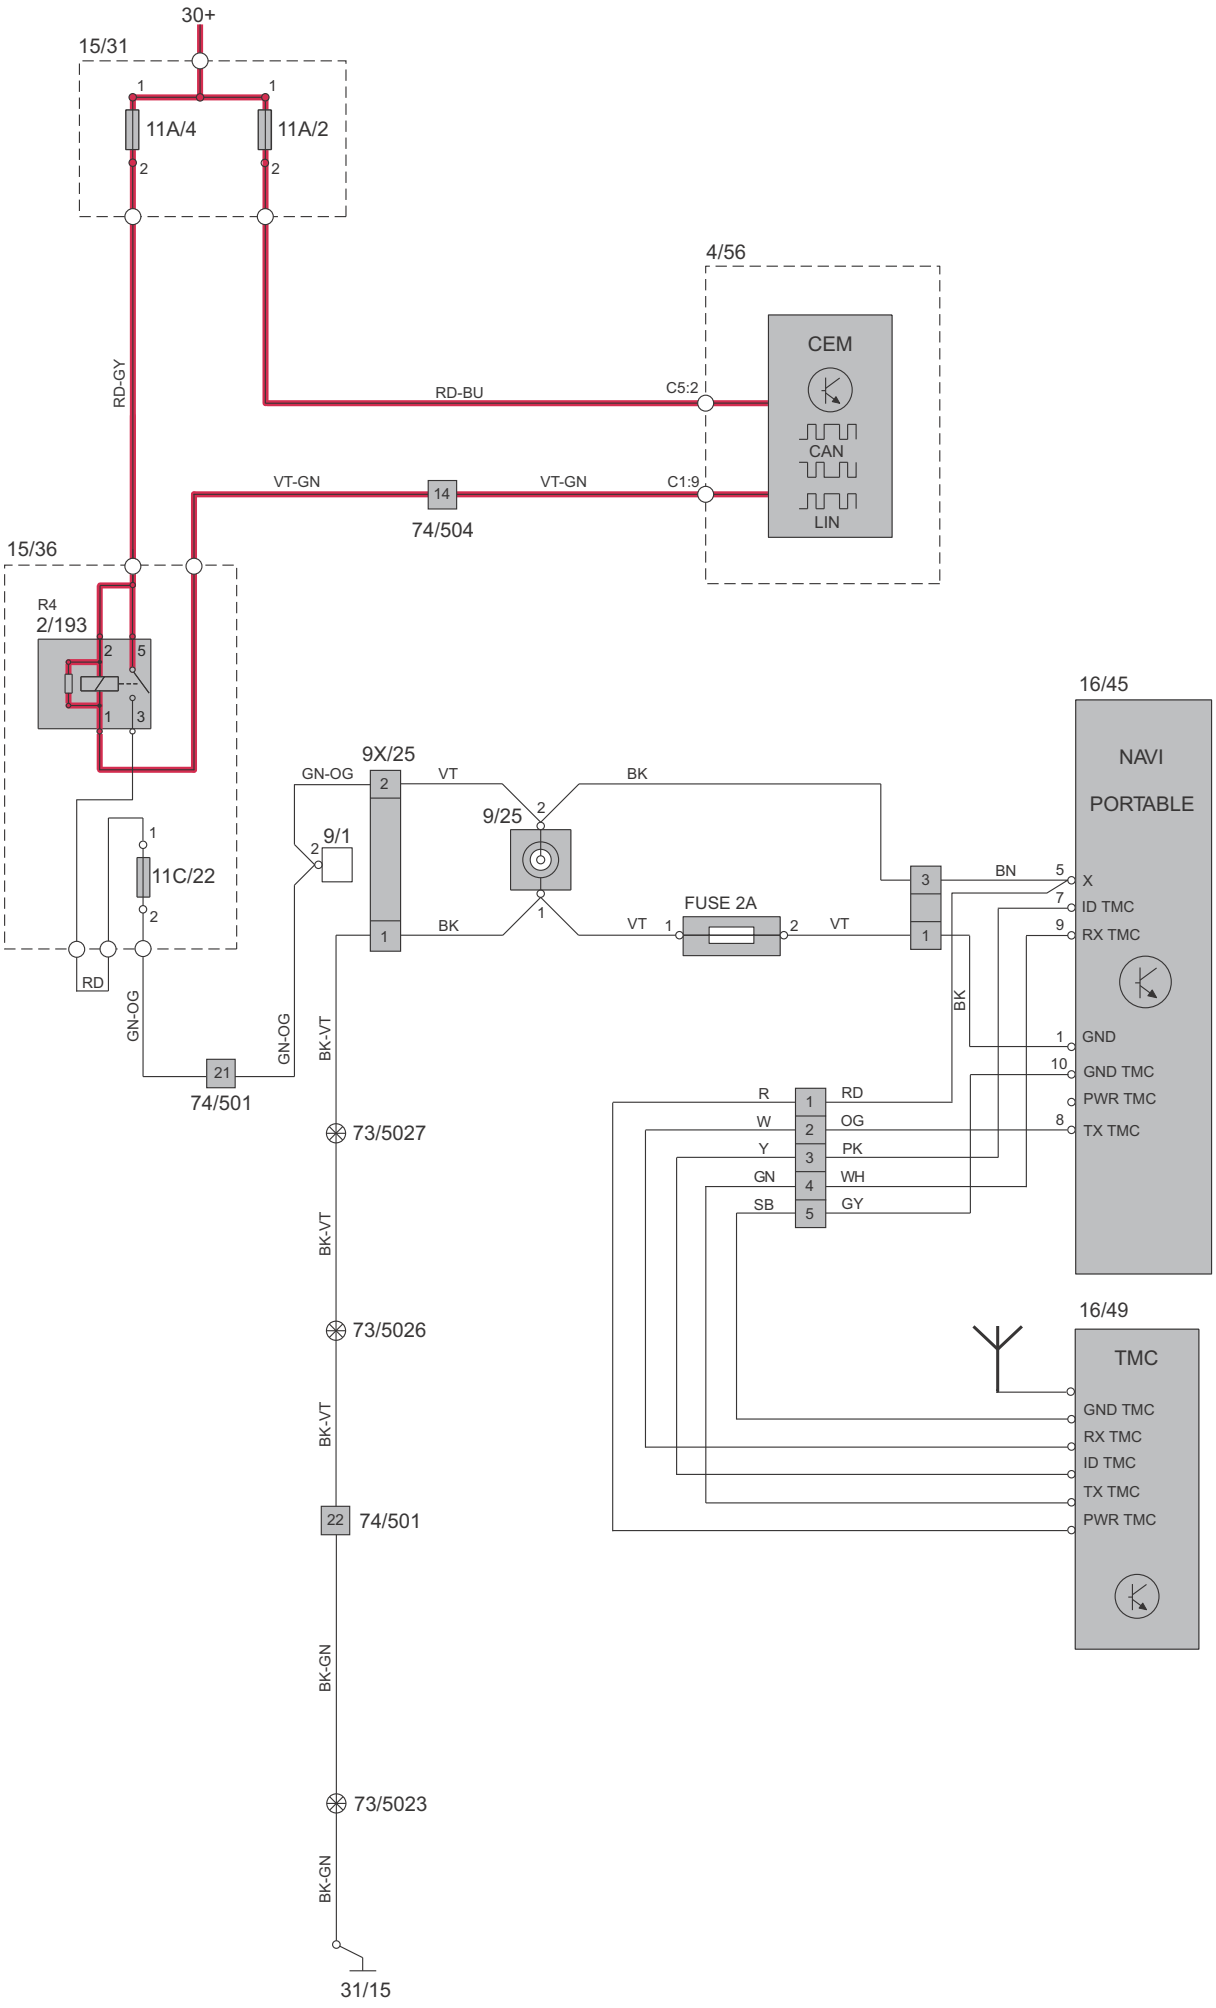
30+
15/31
11A/4
11A/2
RD-GY
RD-BU
4/56
CEM
C5:2
CAN
LIN
VT-GN
14
74/504
C1:9
15/36
R4
2/193
11C/22
RD
GN-OG
21
74/501
9X/25
GN-OG
VT
BK
9/1
9/25
FUSE 2A
BK-VT
73/5027
73/5026
74/501
22
BK-GN
73/5023
31/15
16/45
NAVI
PORTABLE
X
ID TMC
RX TMC
GND
GND TMC
PWR TMC
TX TMC
BN
BK
R
W
Y
GN
SB
RD
OG
PK
WH
GY
16/49
TMC
GND TMC
RX TMC
ID TMC
TX TMC
PWR TMC
C34W072

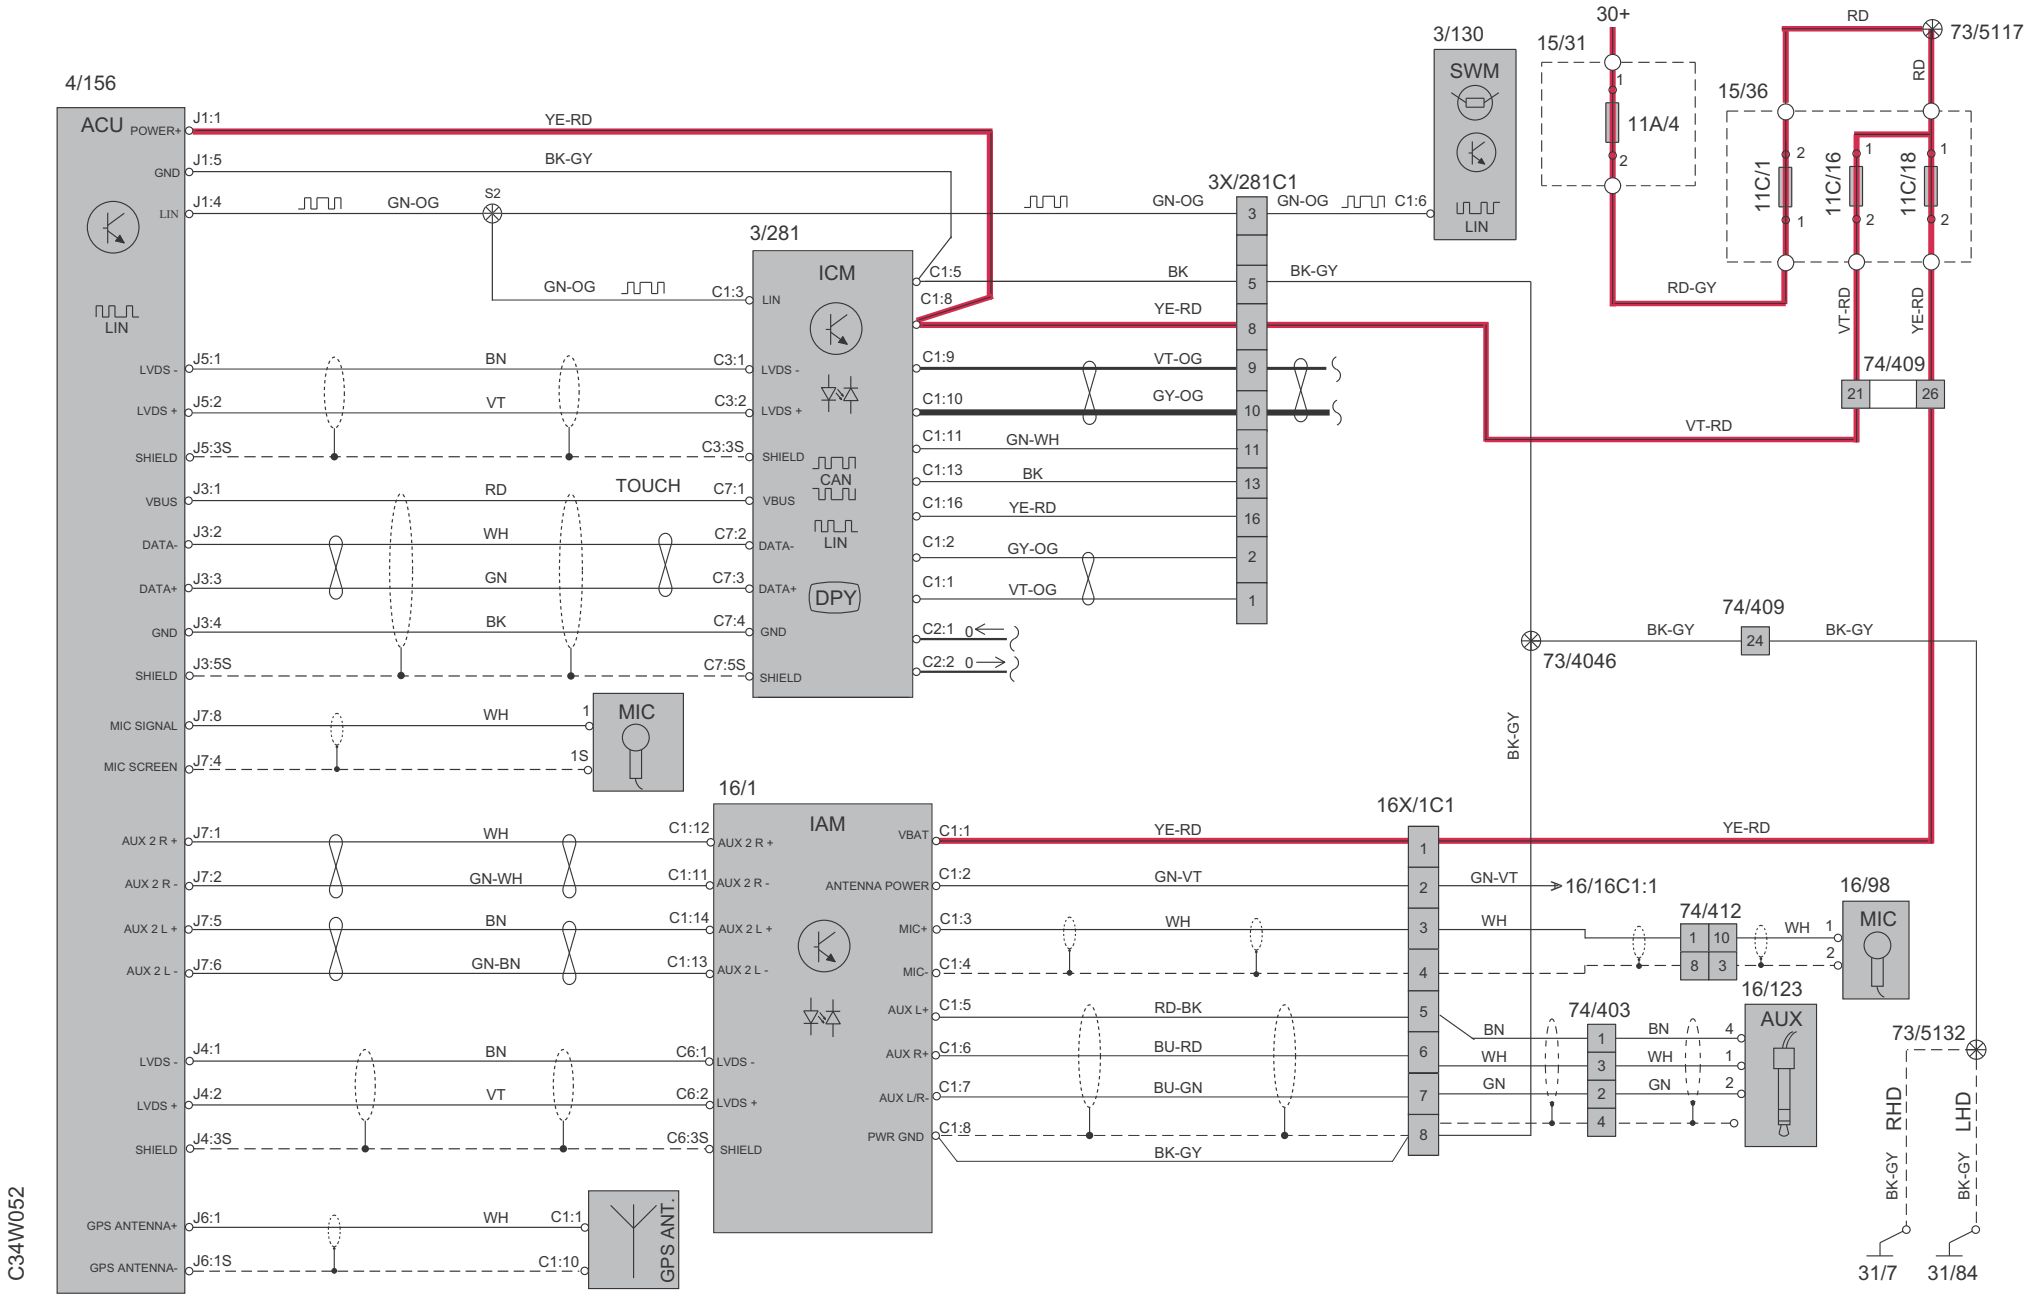
4/156
ACU
POWER+
GND
LIN
J1:1
J1:5
J1:4
YE-RD
BK-GY
GN-OG
S2
3/281
ICM
C1:3
C1:5
C1:8
3X/281C1
3/130
SWM
15/31
30+
11A/4
15/36
11C/1
11C/16
11C/18
RD
RD-GY
VT-RD
YE-RD
73/5117
74/409
21
26
LVDS -
LVDS +
SHIELD
VBUS
DATA-
DATA+
J5:1
J5:2
J5:3S
J3:1
J3:2
J3:3
J3:4
J3:5S
BN
VT
RD
WH
GN
BK
TOUCH
C3:1
C3:2
C3:3S
C7:1
C7:2
C7:3
C7:4
C7:5S
CAN
DPY
C1:9
C1:10
C1:11
C1:13
C1:16
C1:2
C1:1
VT-OG
GY-OG
GN-WH
C2:1
C2:2
73/4046
74/409
24
BK-GY
MIC SIGNAL
MIC SCREEN
J7:8
J7:4
MIC
16/1
IAM
16X/1C1
VBAT
ANTENNA POWER
MIC+
MIC-
AUX L+
AUX R+
AUX L/R-
PWR GND
C1:12
C1:11
C1:14
C1:13
C6:1
C6:2
C6:3S
C1:1
C1:2
C1:3
C1:4
C1:5
C1:6
C1:7
C1:8
GN-VT
RD-BK
BU-RD
BU-GN
16/16C1:1
74/412
16/98
74/403
16/123
AUX
73/5132
RHD
LHD
31/7
31/84
GPS ANTENNA+
GPS ANTENNA-
J6:1
J6:1S
C1:1
C1:10
GPS ANT.
C34W052

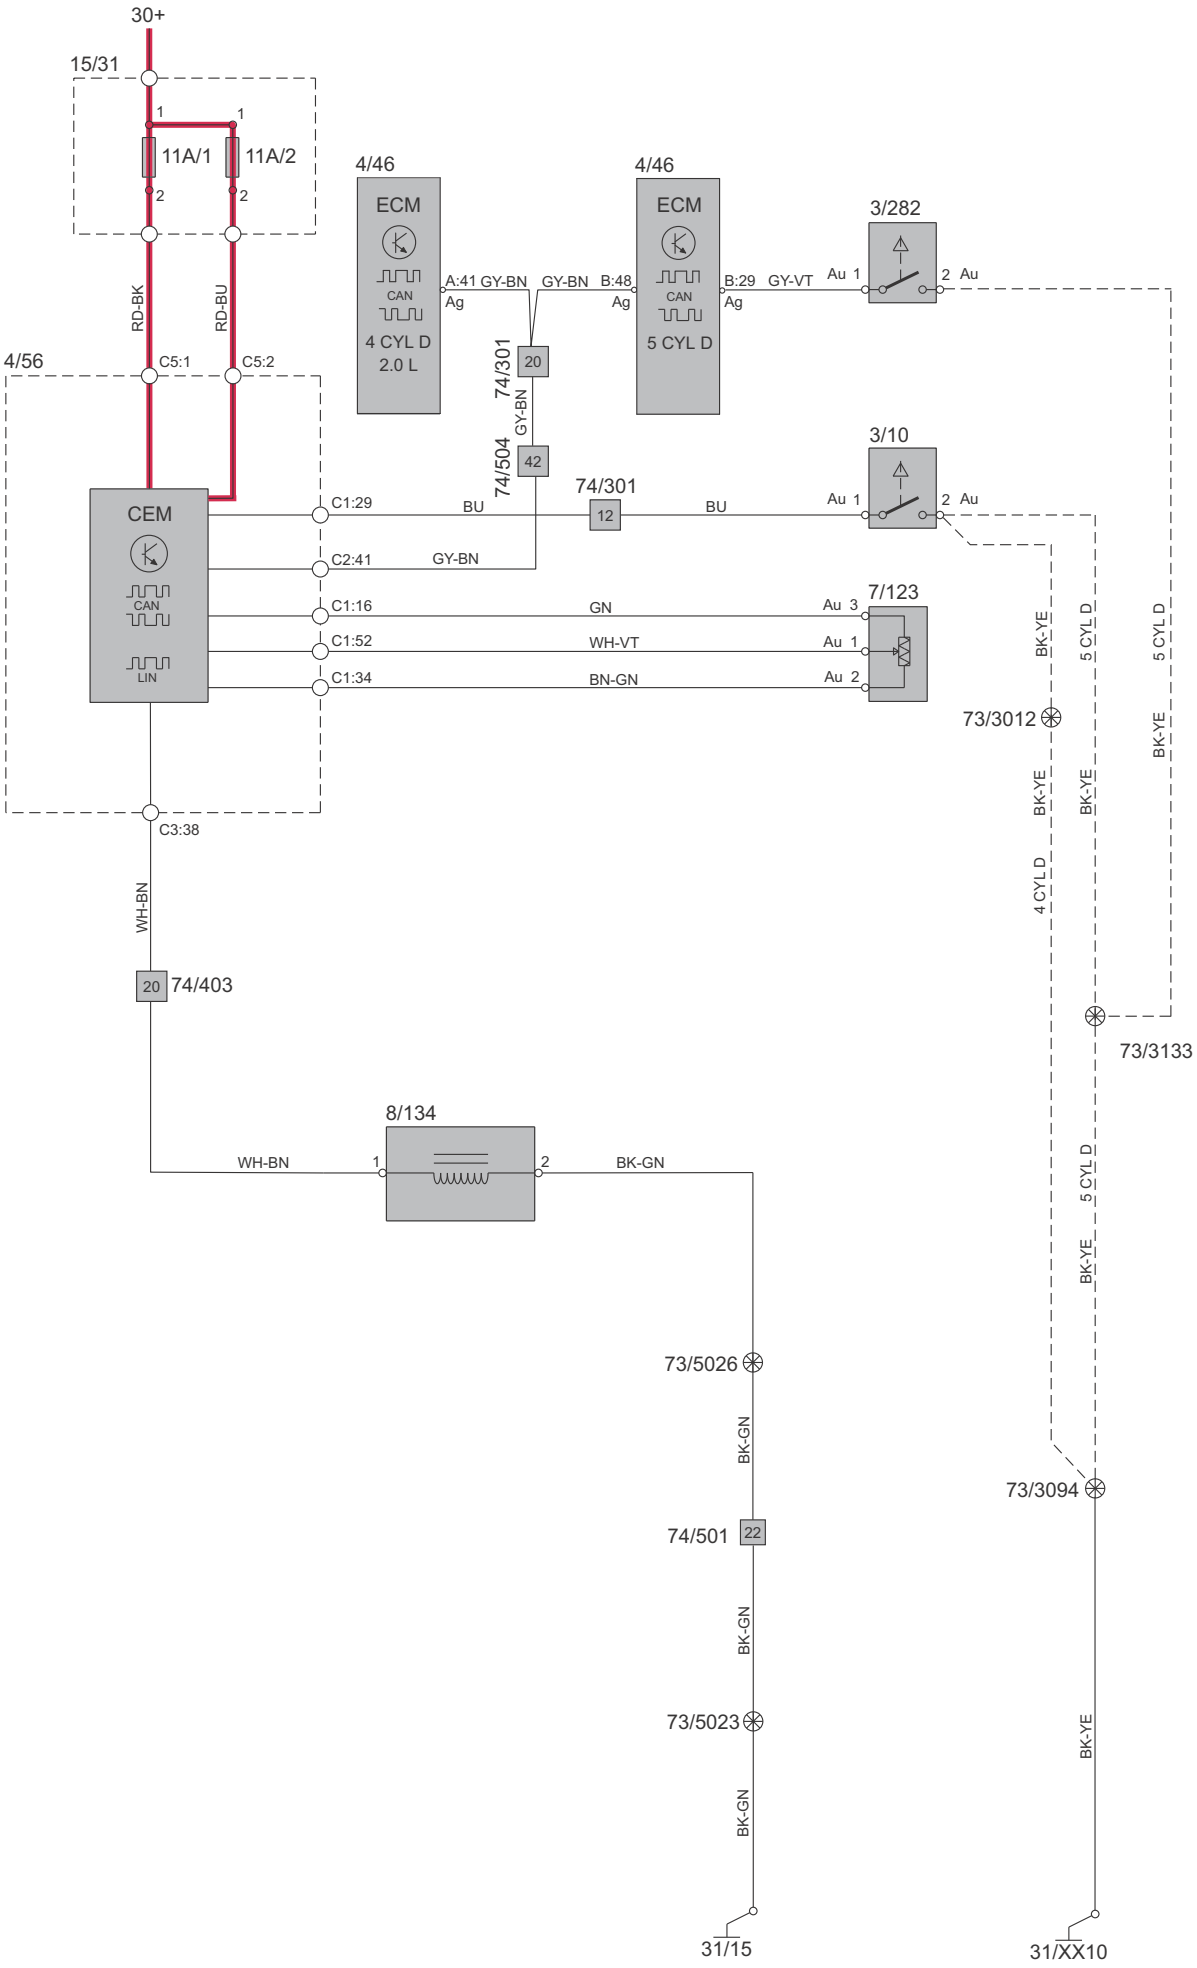
30+
15/31
11A/1
11A/2
RD-BK
RD-BU
4/56
C5:1
C5:2
CEM
CAN
LIN
C3:38
WH-BN
20 74/403
4/46
ECM
CAN
4 CYL D
2.0 L
A:41 GY-BN
Ag
GY-BN
B:48
Ag
4/46
ECM
CAN
5 CYL D
B:29 GY-VT
Ag
3/282
Au 1
2 Au
74/301
20
GY-BN
74/504
42
74/301
12
3/10
Au 1
2 Au
C1:29 BU
C2:41 GY-BN
C1:16 GN
C1:52 WH-VT
C1:34 BN-GN
7/123
Au 3
Au 1
Au 2
BK-YE
5 CYL D
73/3012
73/3133
4 CYL D
73/3094
8/134
WH-BN
BK-GN
73/5026
BK-GN
74/501 22
BK-GN
73/5023
BK-GN
31/15
31/XX10
C34W053

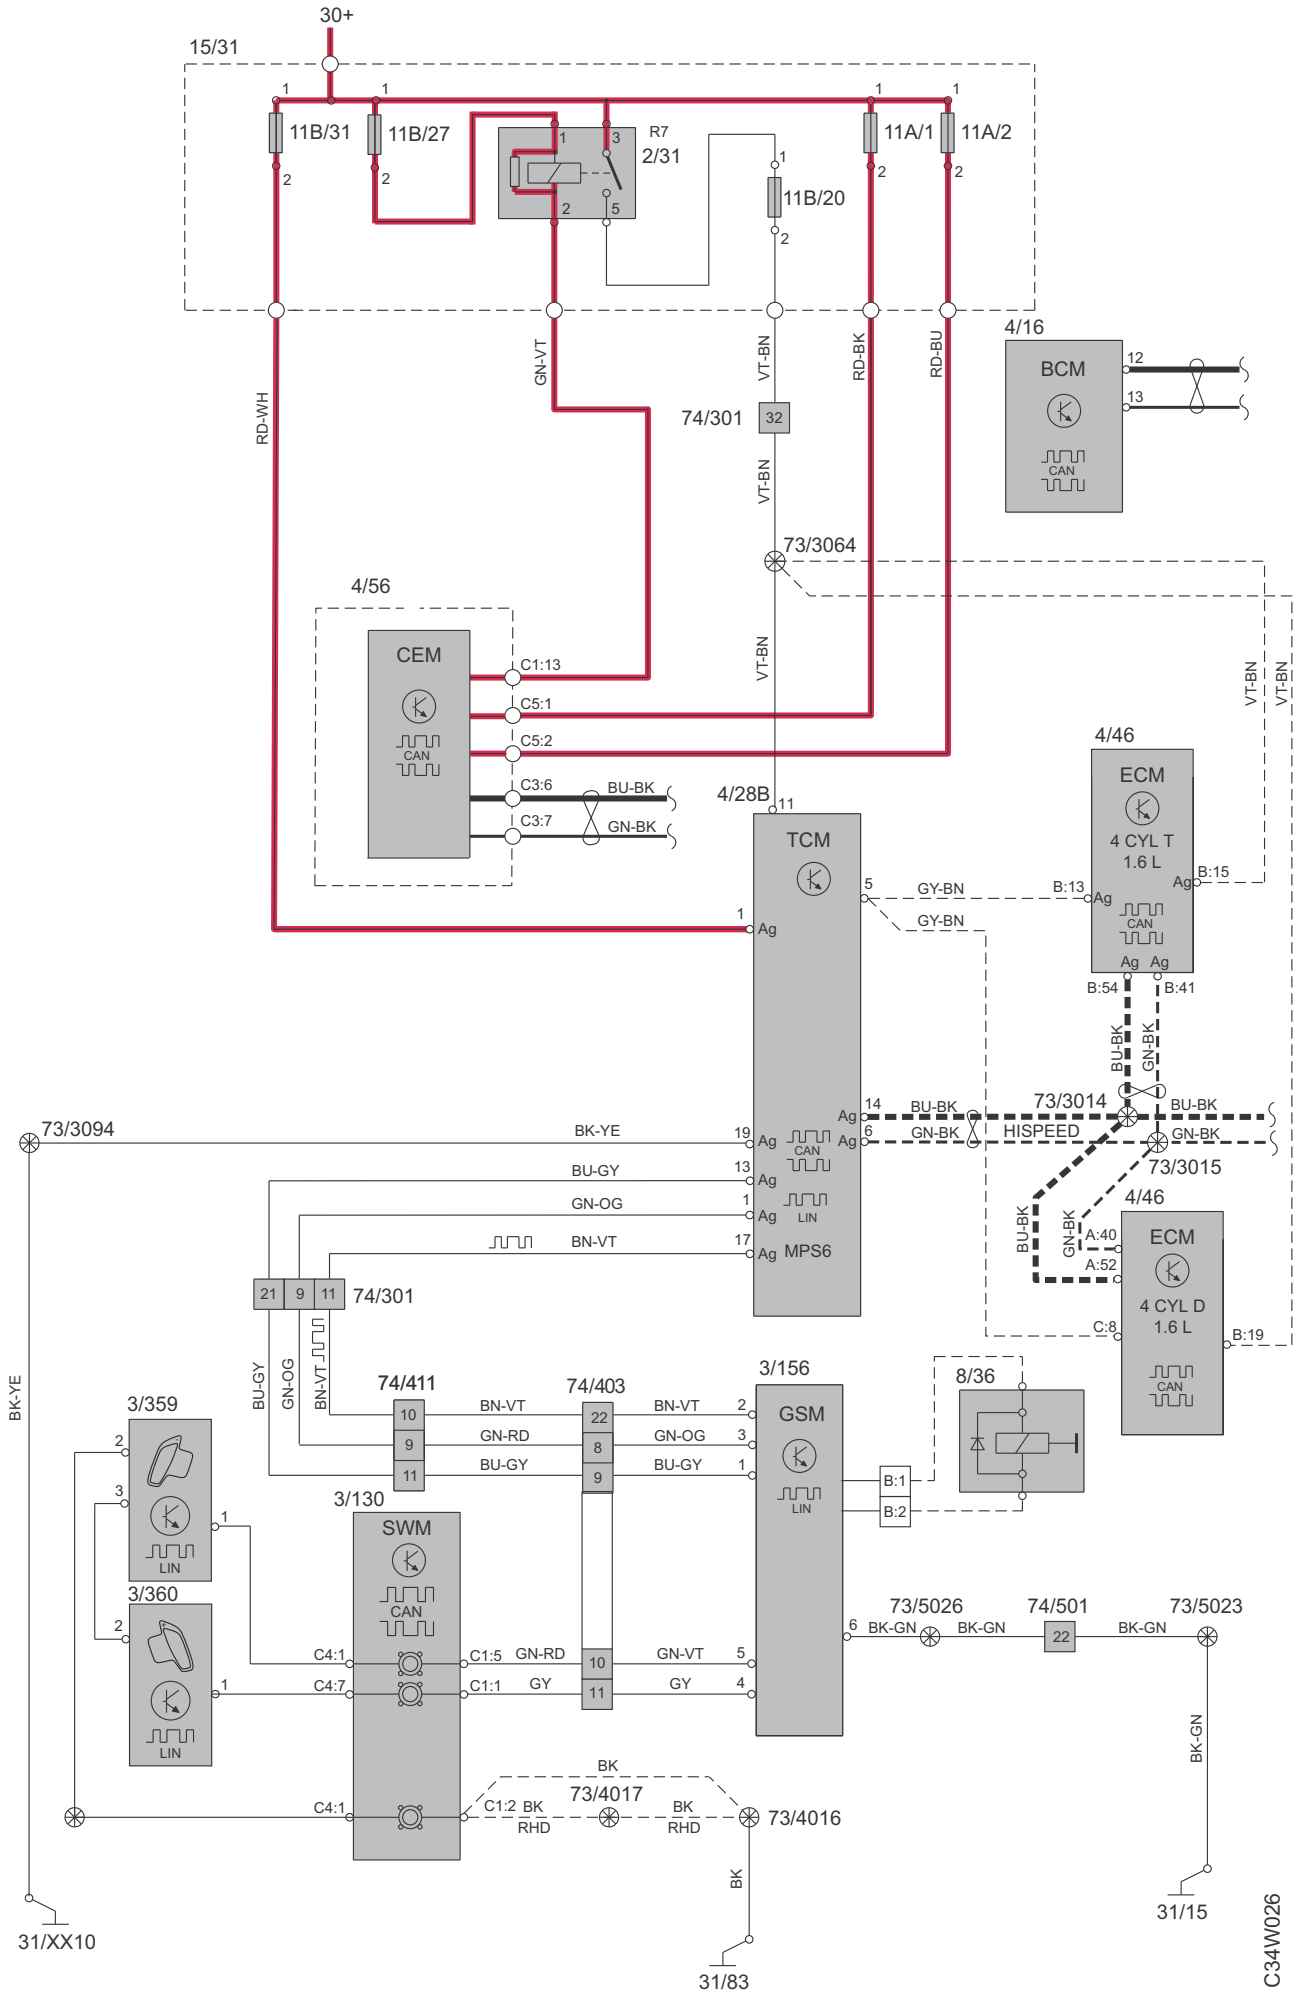
30+
15/31
11B/31
11B/27
R7
2/31
11B/20
11A/1
11A/2
4/16
BCM
CAN
74/301
32
73/3064
4/56
CEM
C1:13
C5:1
C5:2
C3:6
C3:7
BU-BK
GN-BK
4/28B
TCM
MPS6
4/46
ECM
4 CYL T
1.6 L
4 CYL D
1.6 L
GY-BN
HISPEED
73/3014
73/3015
73/3094
BK-YE
BU-GY
GN-OG
BN-VT
74/411
74/403
3/156
GSM
LIN
8/36
3/359
3/360
3/130
SWM
C4:1
C4:7
C1:5
C1:1
GN-RD
GY
73/5026
74/501
73/5023
BK-GN
73/4017
73/4016
BK
RHD
31/XX10
31/83
31/15
C34W026

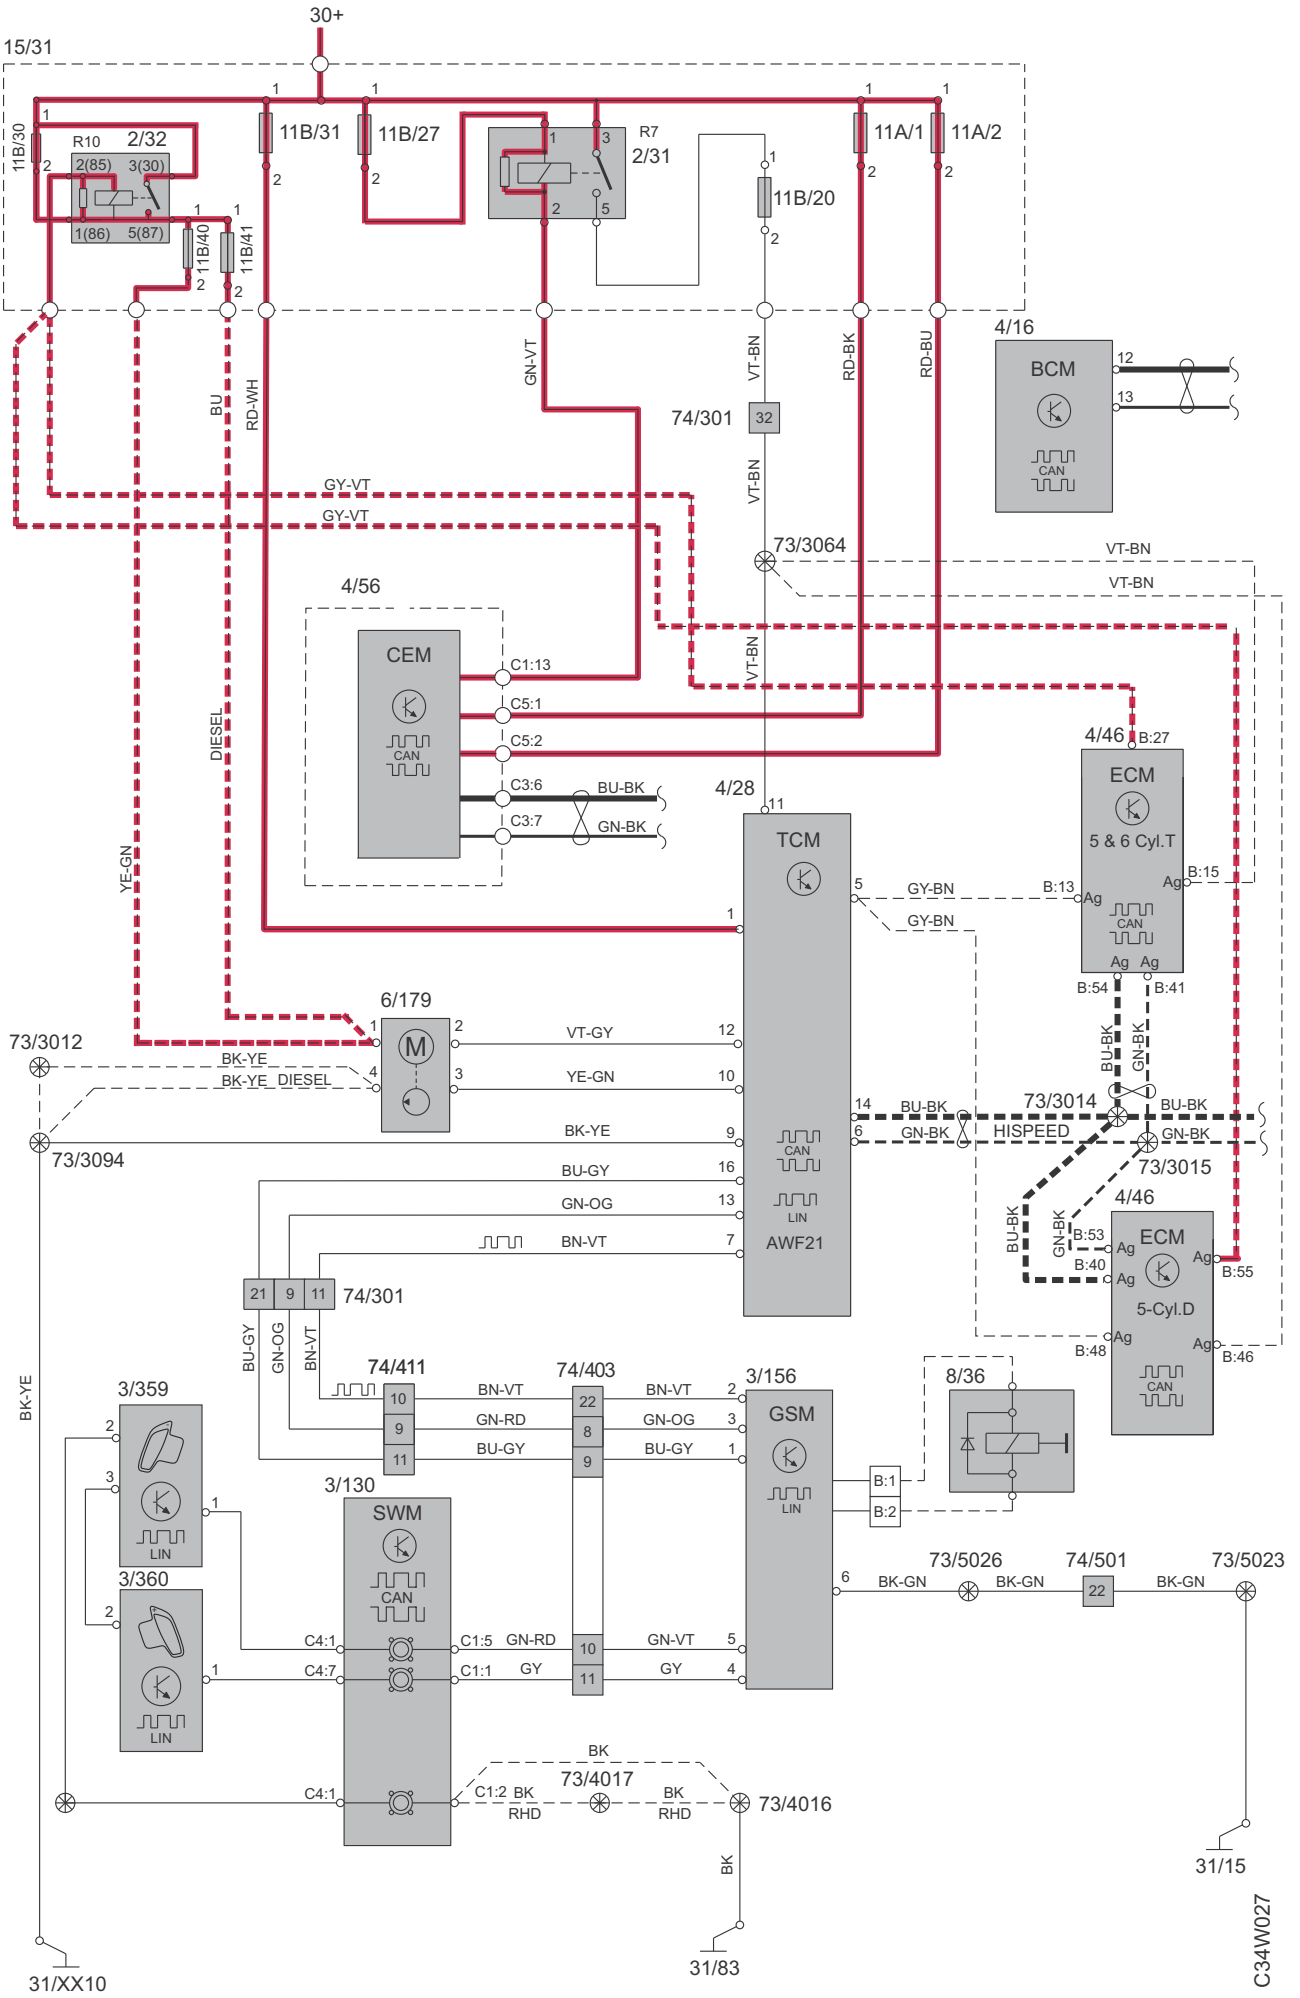
30+
15/31
11B/30
R10
2/32
2(85)
3(30)
1(86)
5(87)
11B/31
11B/27
R7
2/31
11B/20
11A/1
11A/2
11B/40
11B/41
BU
RD-WH
GN-VT
VT-BN
RD-BK
RD-BU
4/16
BCM
CAN
12
13
74/301
32
GY-VT
GY-VT
73/3064
VT-BN
VT-BN
4/56
CEM
CAN
C1:13
C5:1
C5:2
C3:6
C3:7
BU-BK
GN-BK
DIESEL
YE-GN
4/28
TCM
11
1
5
GY-BN
GY-BN
4/46
B:27
ECM
5 & 6 Cyl.T
B:13
B:15
Ag
CAN
B:54
B:41
6/179
M
1
2
3
4
73/3012
BK-YE
BK-YE DIESEL
VT-GY
YE-GN
12
10
73/3094
BK-YE
9
BU-GY
16
GN-OG
13
BN-VT
7
AWF21
14
BU-BK
6
GN-BK
HISPEED
73/3014
BU-BK
GN-BK
73/3015
4/46
ECM
5-Cyl.D
B:53
B:40
B:55
B:48
B:46
21
9
11
74/301
BU-GY
GN-OG
BN-VT
74/411
74/403
3/156
GSM
LIN
8/36
10
9
11
22
8
9
BN-VT
GN-RD
BU-GY
GN-OG
BN-VT
GN-VT
BU-GY
2
3
1
5
B:1
B:2
3/359
LIN
3/360
LIN
3/130
SWM
CAN
C4:1
C4:7
C1:5
C1:1
GN-RD
GY
GN-VT
GY
4
73/5026
BK-GN
BK-GN
74/501
22
BK-GN
73/5023
31/15
BK
73/4017
C1:2
BK
RHD
BK
RHD
73/4016
BK
31/83
31/XX10
C34W027

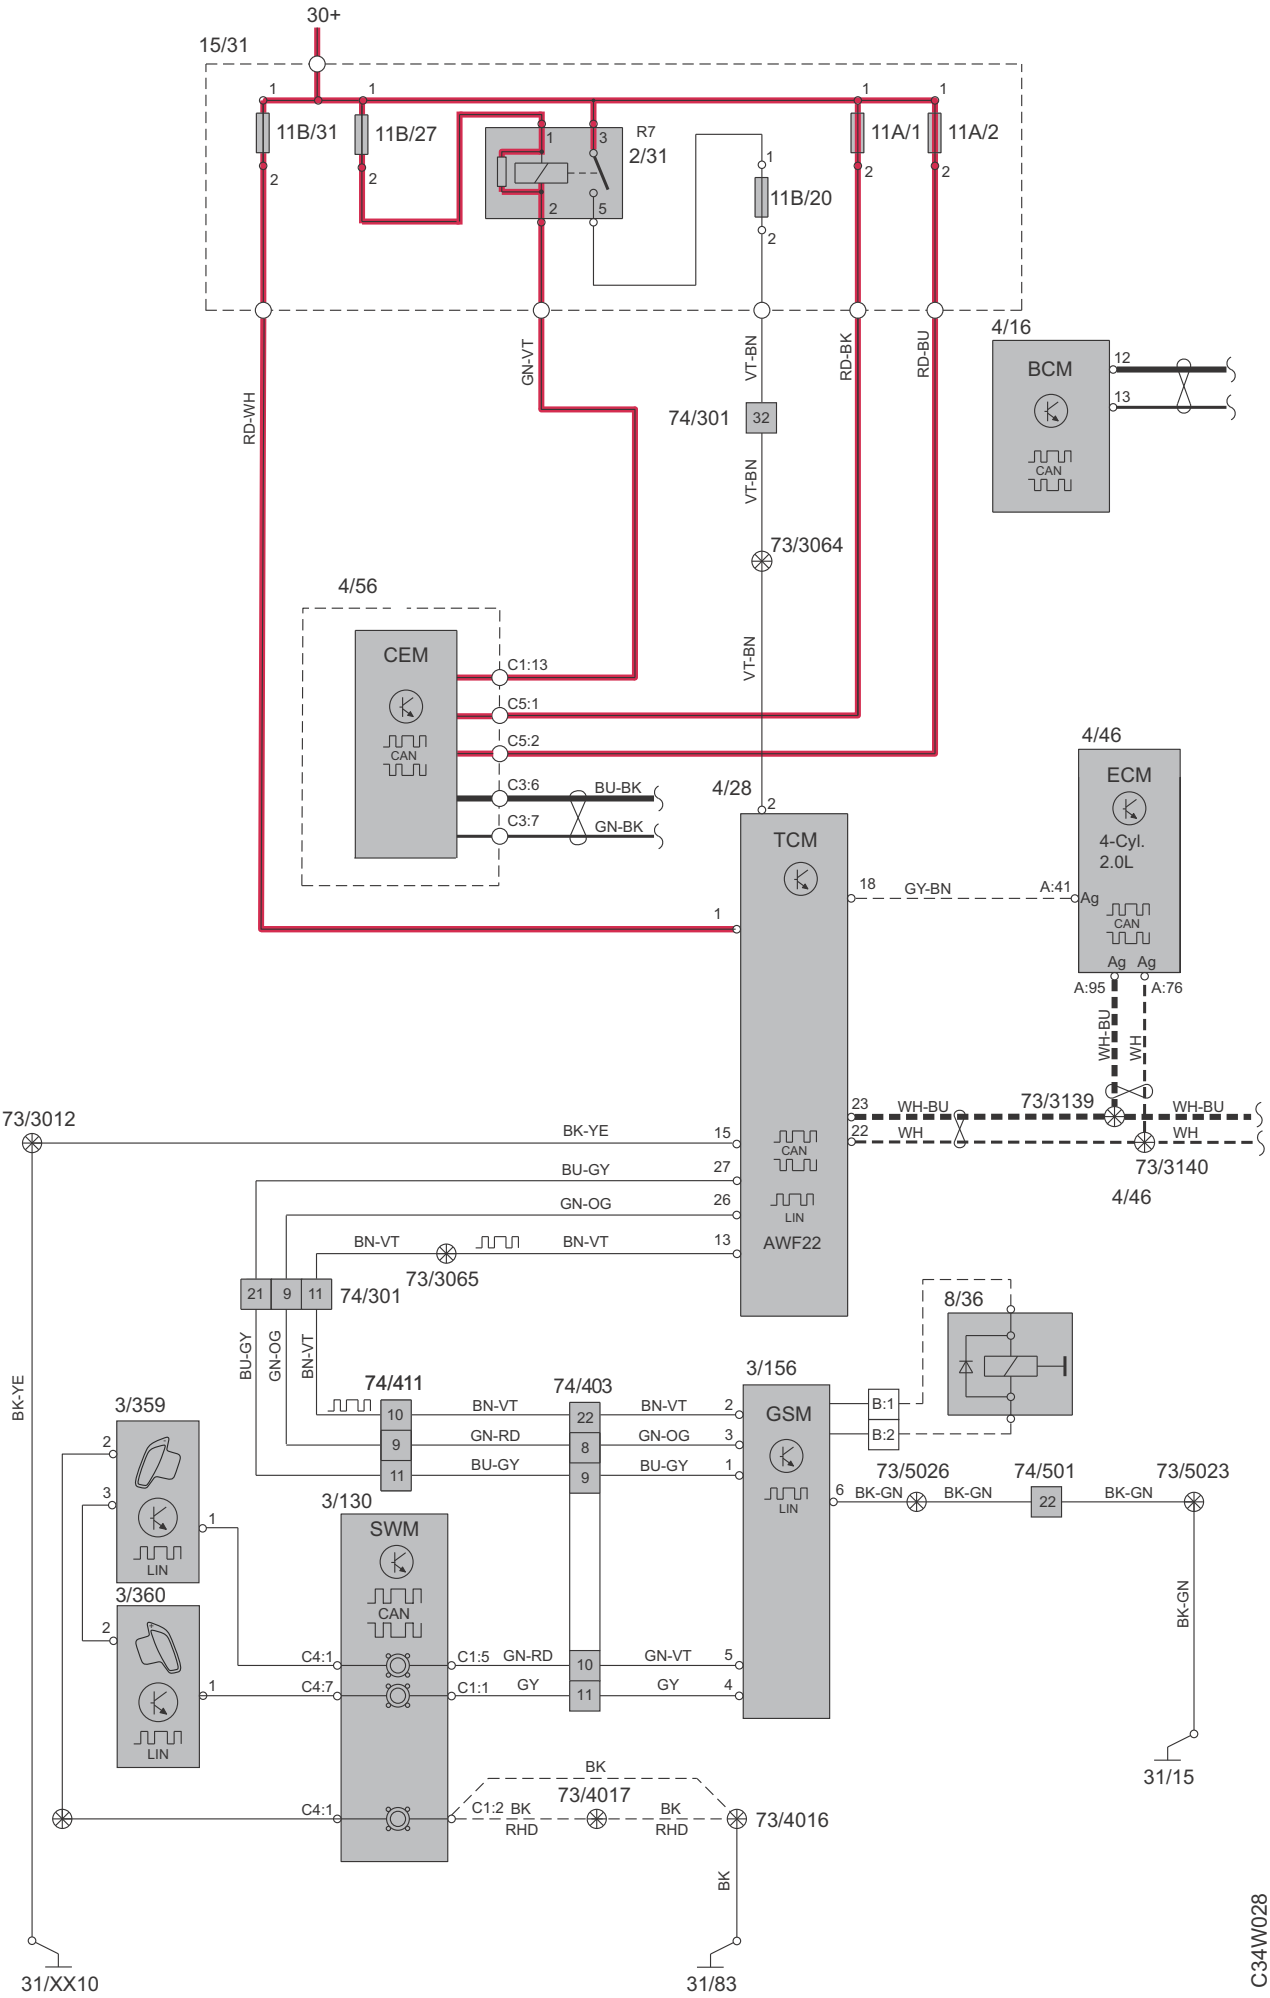
30+
15/31
11B/31
11B/27
R7
2/31
11B/20
11A/1
11A/2
4/16
BCM
CAN
12
13
RD-WH
GN-VT
VT-BN
RD-BK
RD-BU
74/301
32
73/3064
4/56
CEM
CAN
C1:13
C5:1
C5:2
C3:6
C3:7
BU-BK
GN-BK
4/28
TCM
4/46
ECM
4-Cyl.
2.0L
CAN
Ag
A:41
A:95
A:76
18
GY-BN
1
WH-BU
WH
73/3139
73/3140
23
22
73/3012
BK-YE
15
BU-GY
27
GN-OG
26
BN-VT
13
CAN
LIN
AWF22
21
9
11
74/301
73/3065
8/36
3/156
GSM
LIN
74/411
74/403
10
22
BN-VT
2
GN-RD
8
GN-OG
3
BU-GY
9
1
B:1
B:2
73/5026
74/501
73/5023
6
BK-GN
22
3/359
3/360
LIN
3/130
SWM
CAN
C4:1
C4:7
C1:5
GN-RD
C1:1
GY
GN-VT
5
4
31/15
BK
73/4017
C1:2
RHD
73/4016
31/XX10
31/83
C34W028

Differential Electronic Module (DEM)

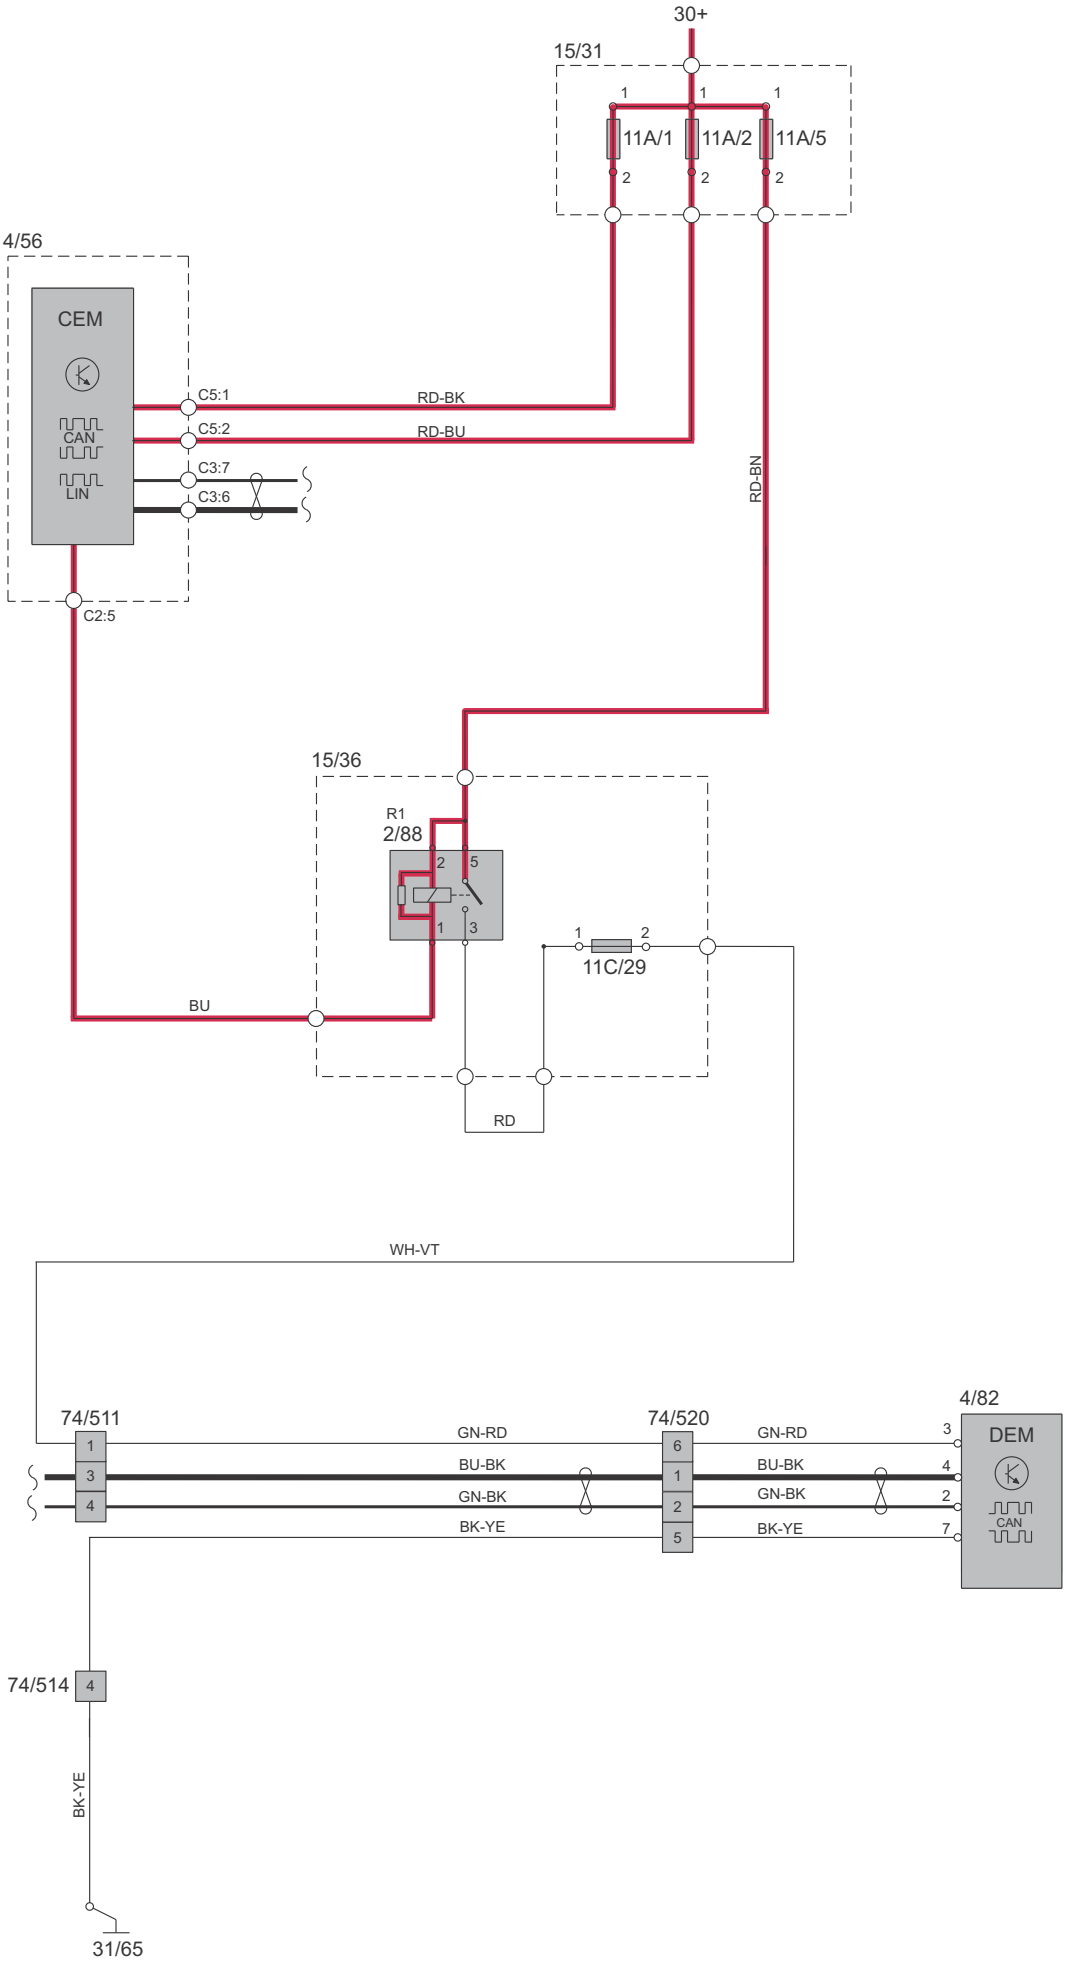

C24W124

Group 55 Parking brake
Electric parking brake

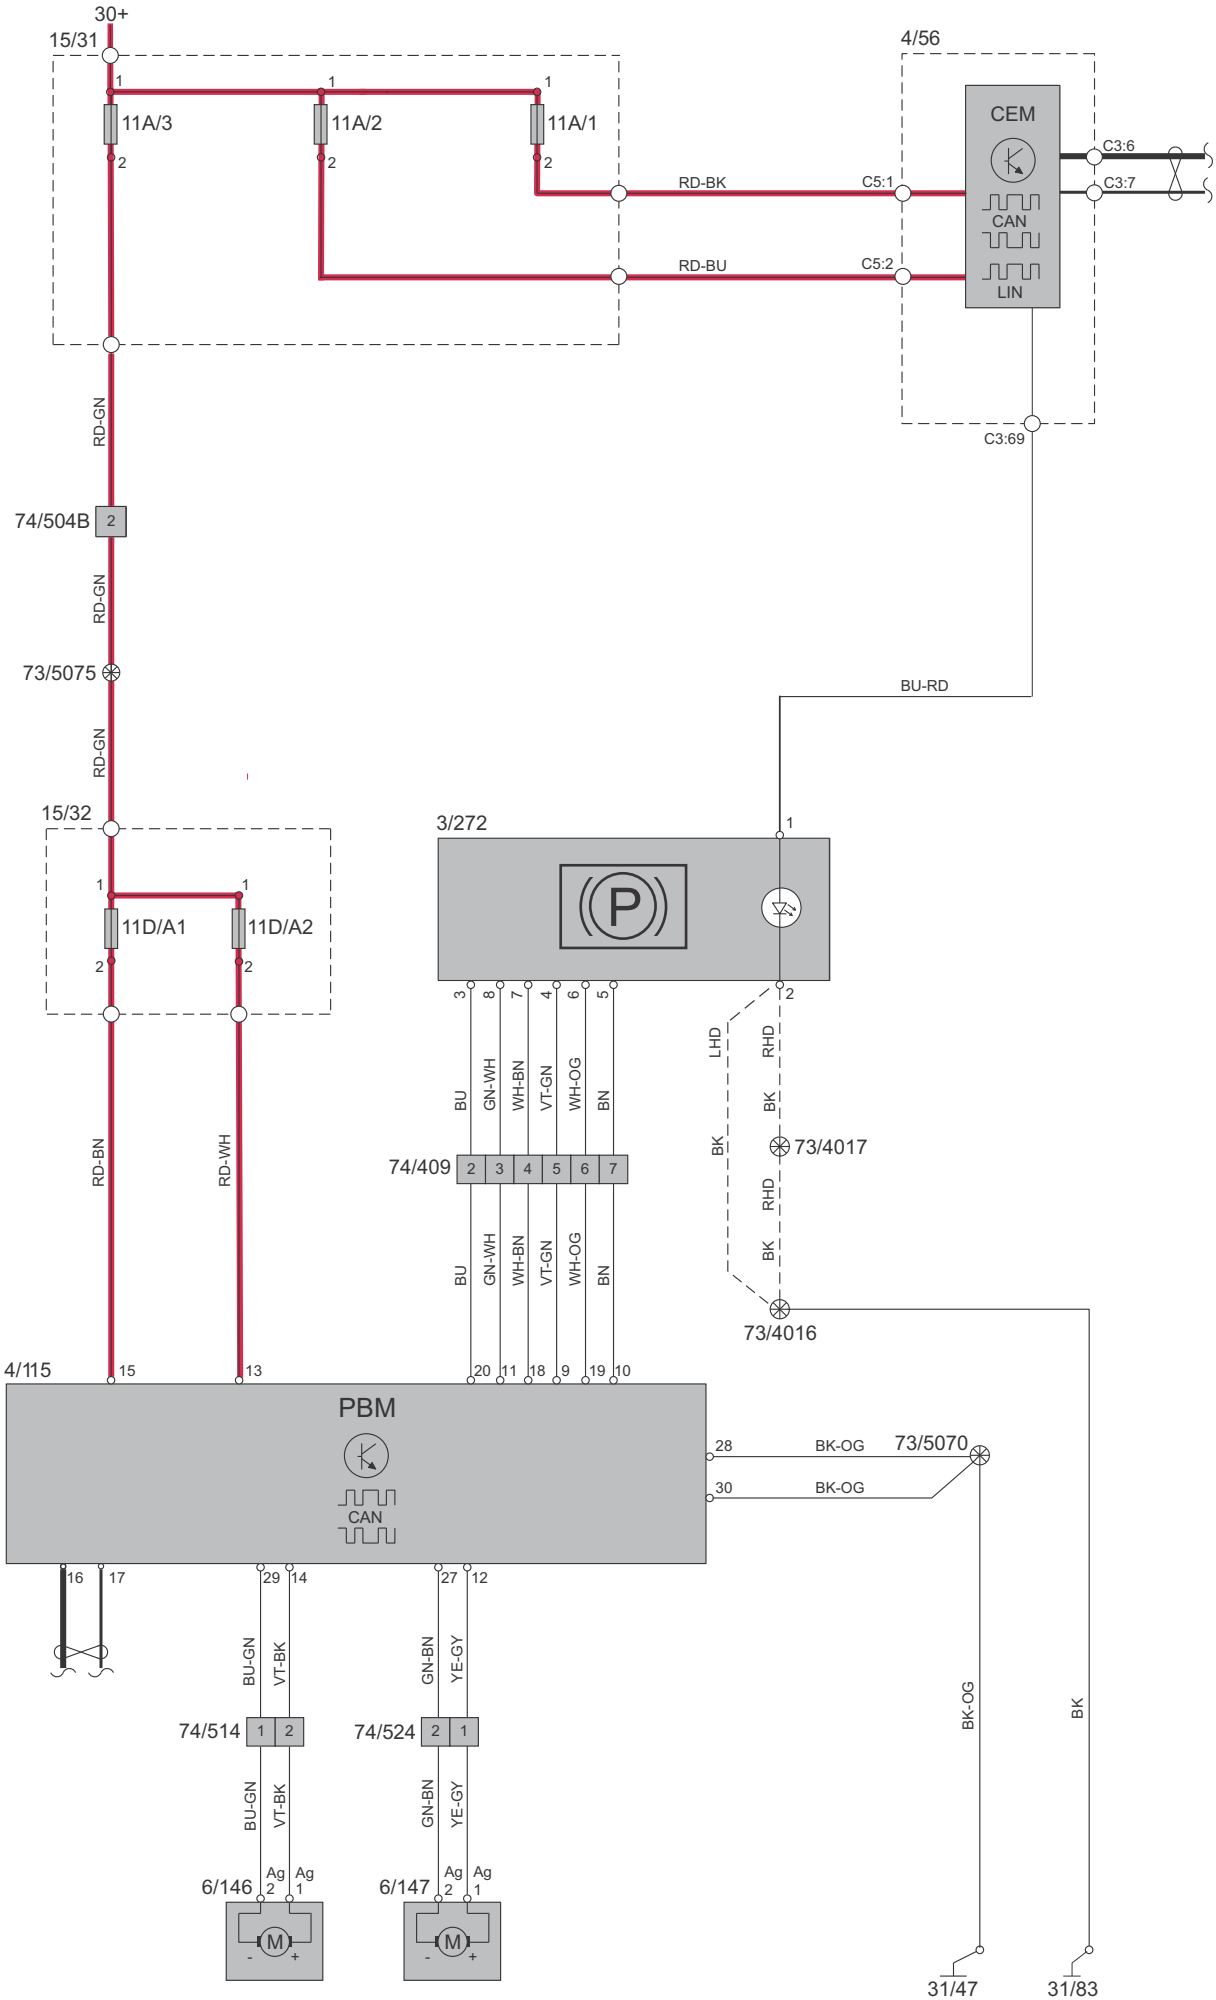

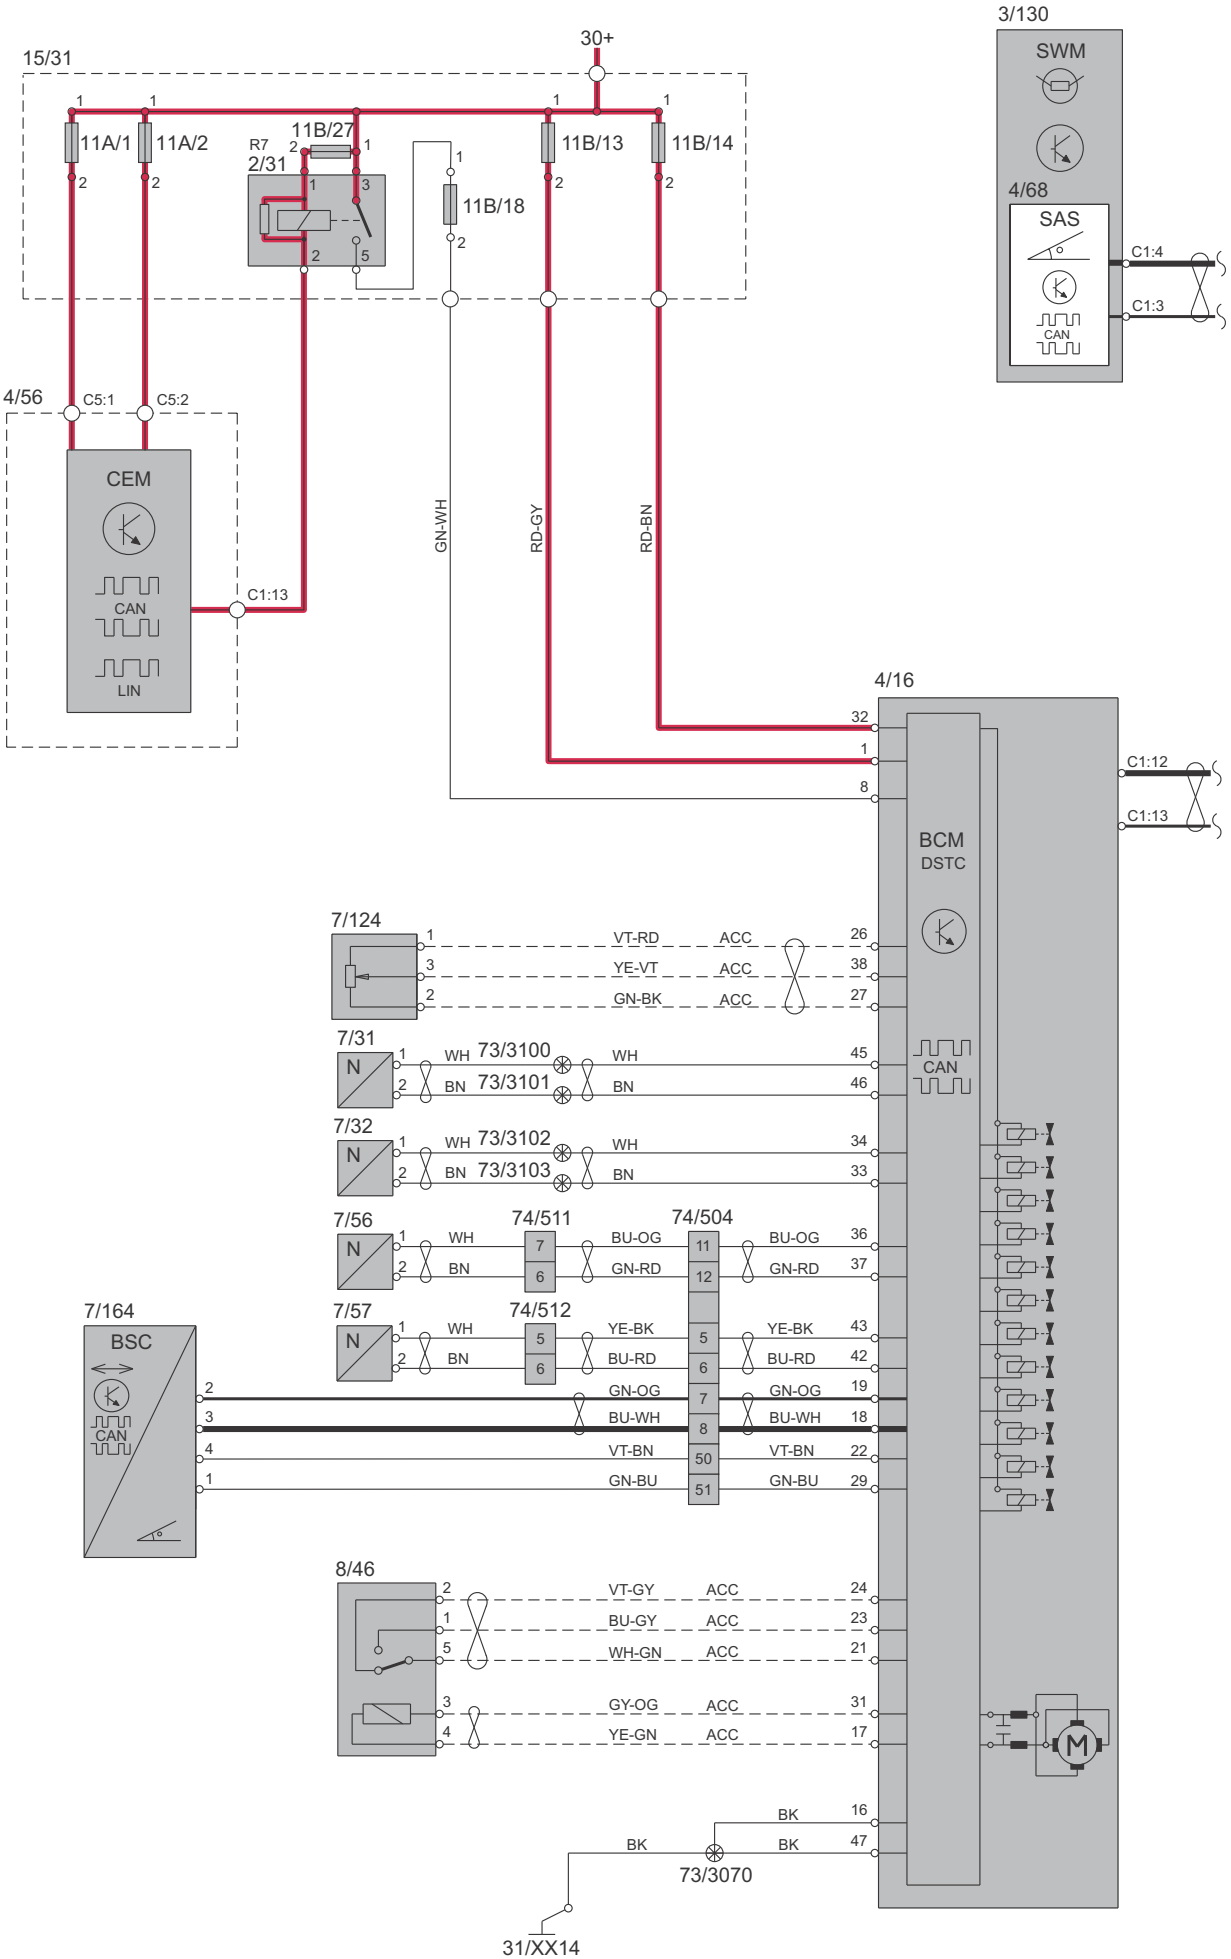
15/31
30+
11A/1
11A/2
11B/27
R7
2/31
11B/18
11B/13
11B/14
3/130
SWM
4/68
SAS
CAN
C1:4
C1:3
4/56
C5:1
C5:2
CEM
CAN
LIN
C1:13
GN-WH
RD-GY
RD-BN
4/16
BCM
DSTC
C1:12
C1:13
7/124
VT-RD
YE-VT
GN-BK
ACC
7/31
73/3100
73/3101
WH
BN
7/32
73/3102
73/3103
7/56
74/511
BU-OG
GN-RD
74/504
7/57
74/512
YE-BK
BU-RD
7/164
BSC
GN-OG
BU-WH
VT-BN
GN-BU
8/46
VT-GY
BU-GY
WH-GN
GY-OG
YE-GN
BK
73/3070
31/XX14
C33W100

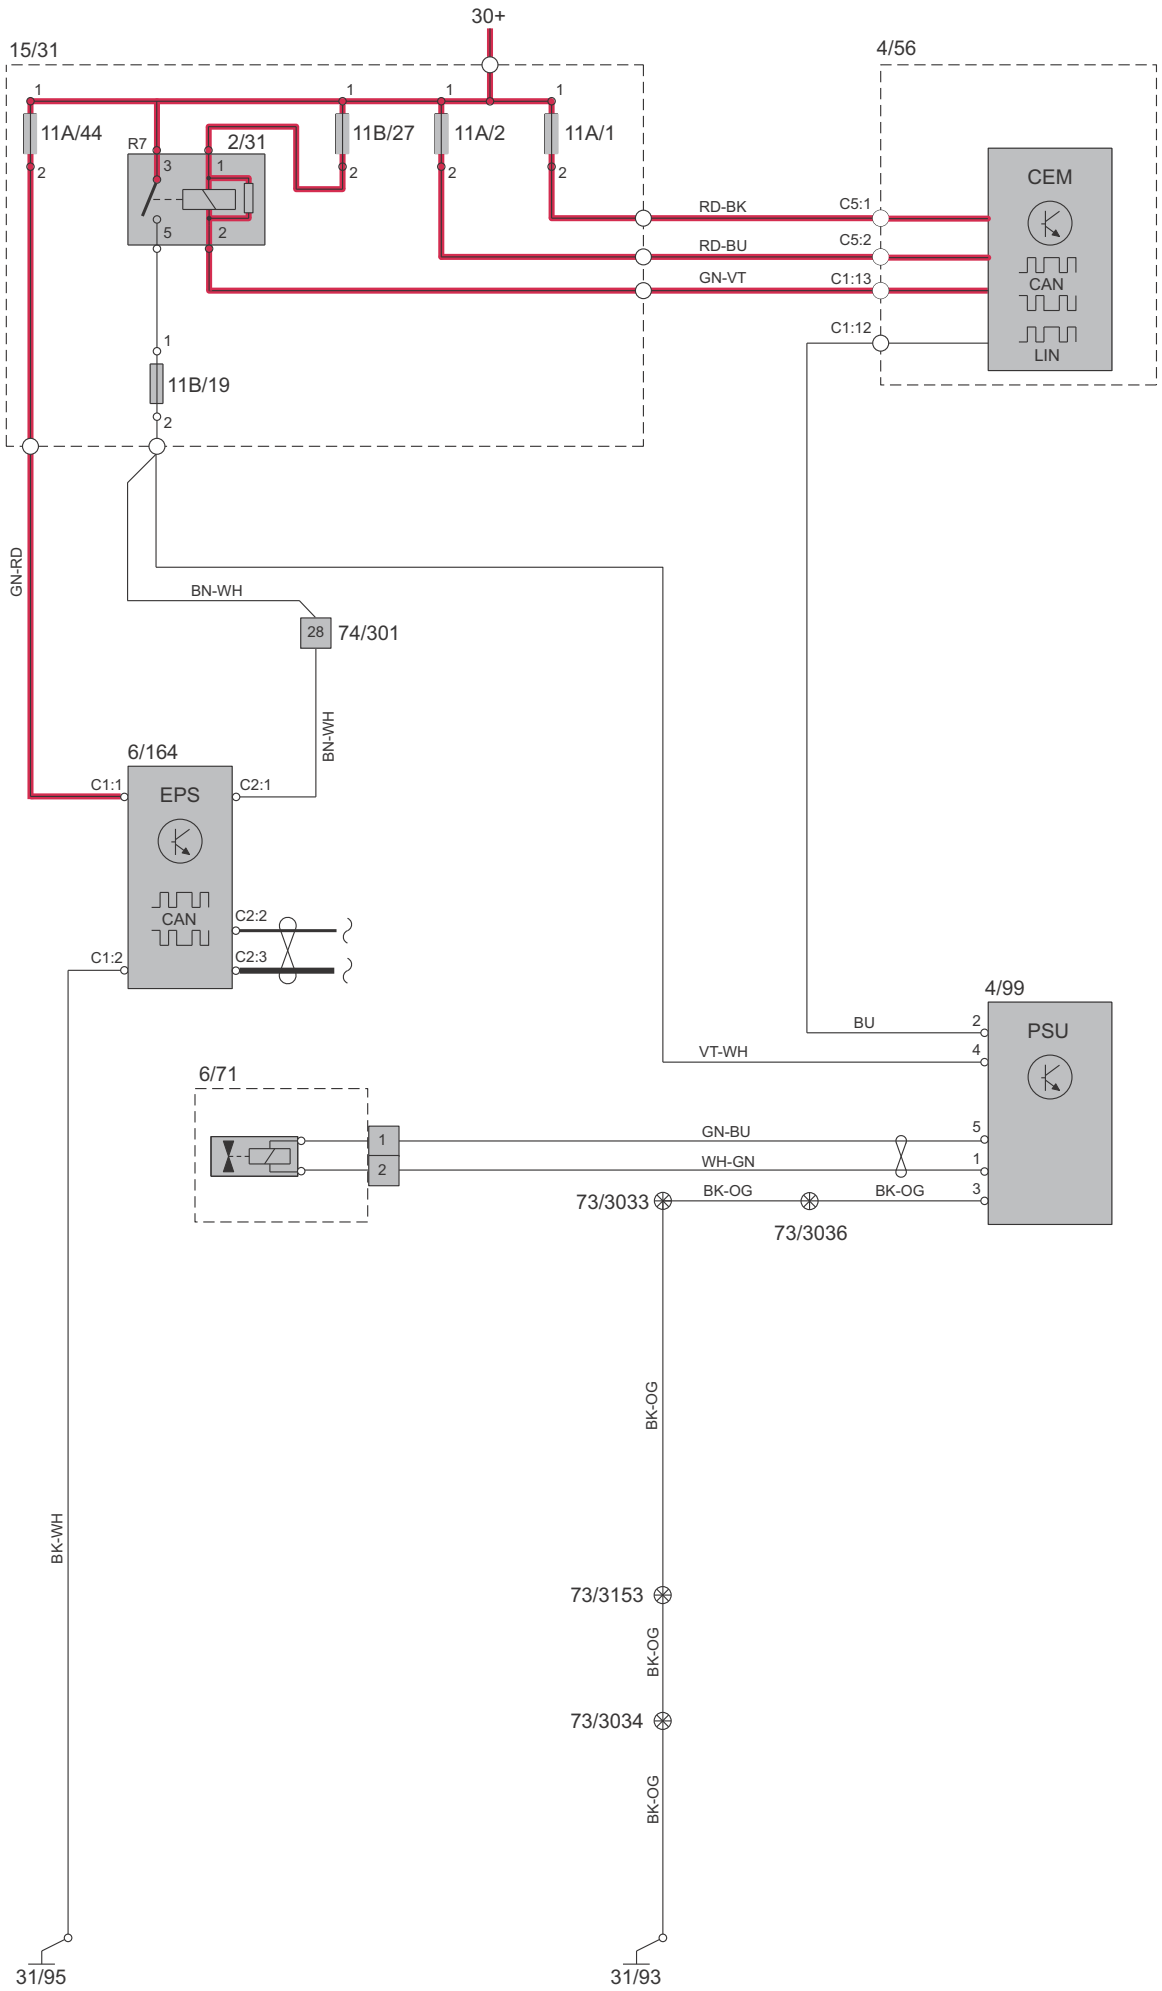
30+
15/31
11A/44
R7
2/31
11B/27
11A/2
11A/1
11B/19
4/56
CEM
CAN
LIN
RD-BK
RD-BU
GN-VT
C5:1
C5:2
C1:13
C1:12
GN-RD
BN-WH
28
74/301
BN-WH
6/164
EPS
CAN
C1:1
C2:1
C2:2
C2:3
C1:2
4/99
PSU
BU
VT-WH
6/71
GN-BU
WH-GN
BK-OG
BK-OG
73/3033
73/3036
BK-OG
73/3153
BK-OG
73/3034
BK-OG
BK-WH
31/95
31/93
C33W101

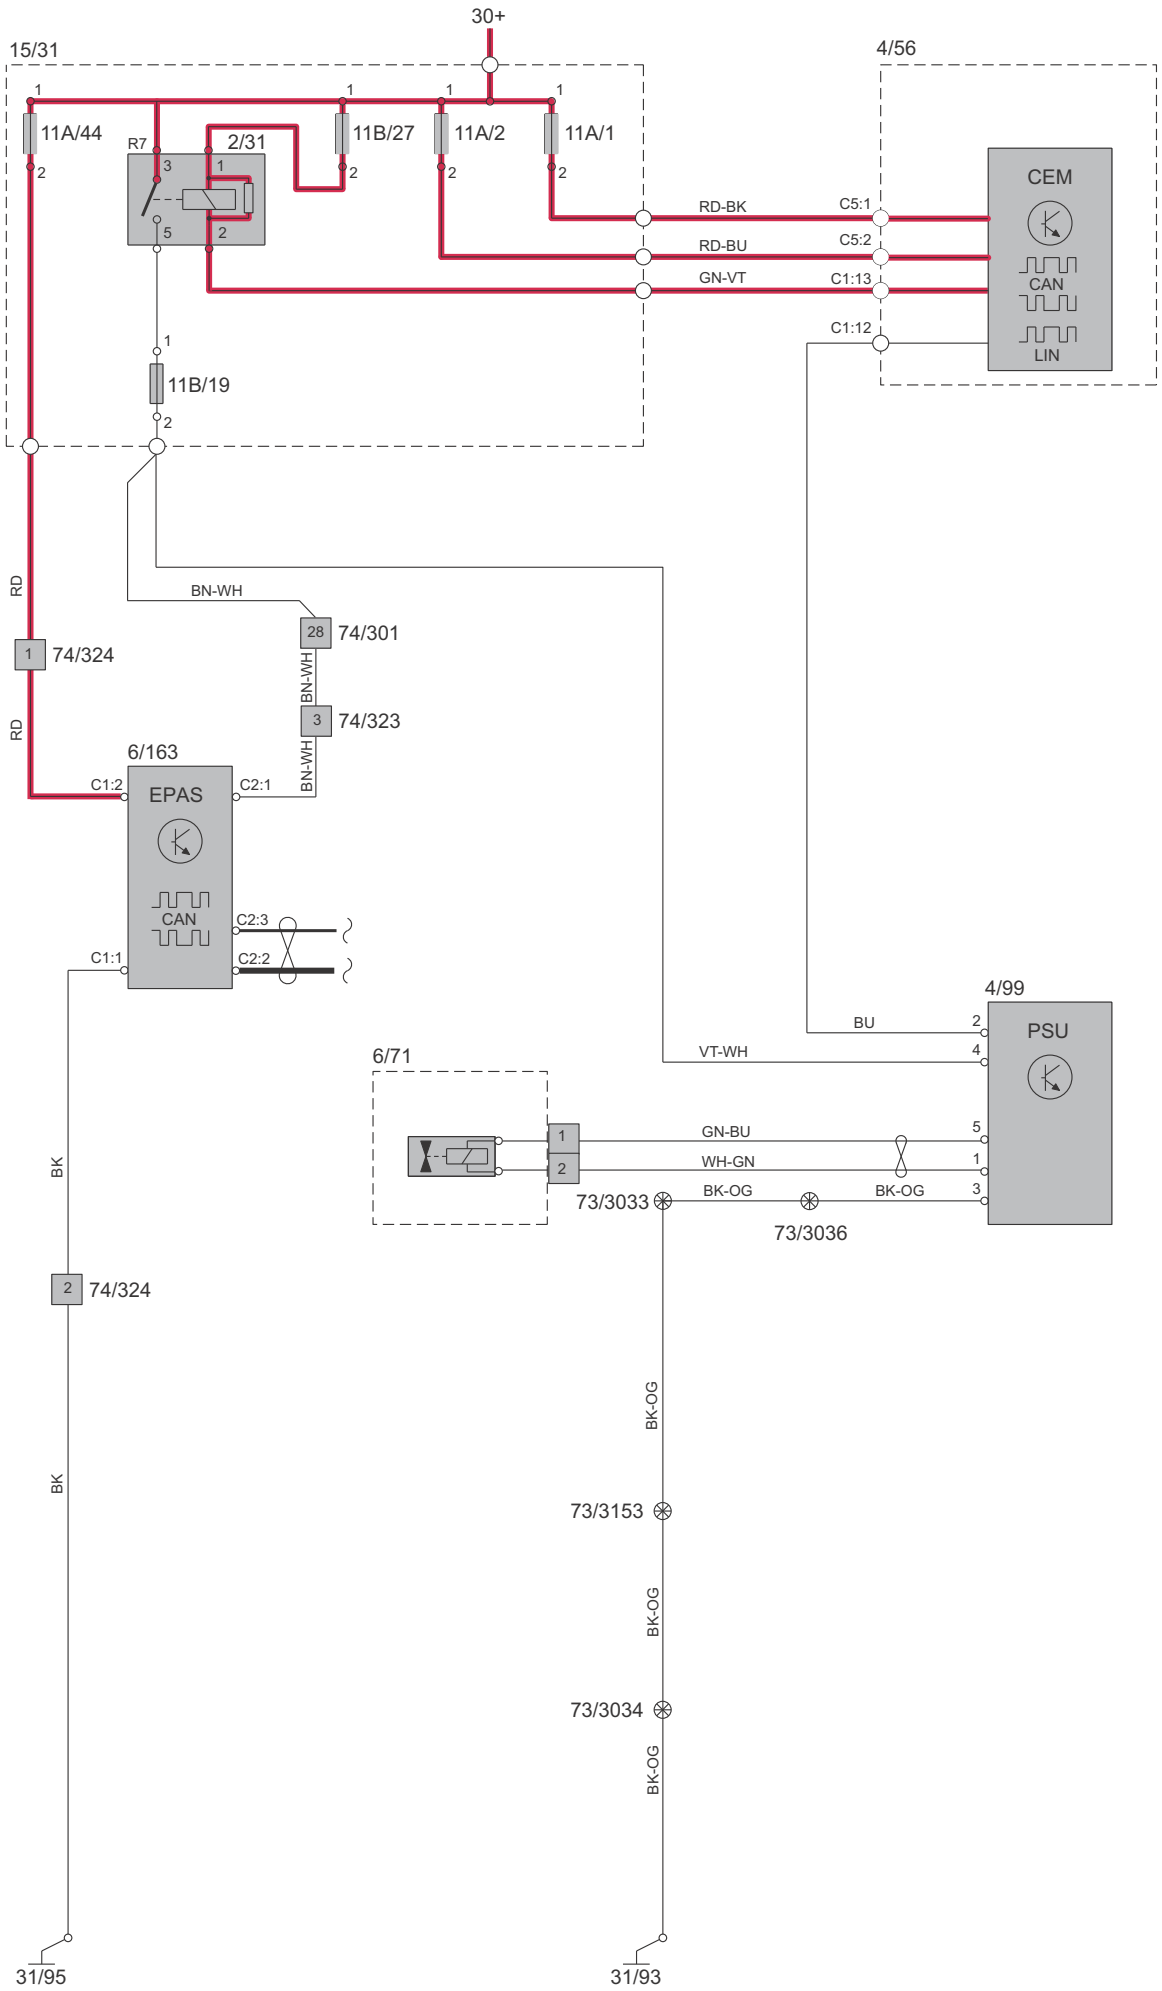
30+
15/31
11A/44
R7
2/31
11B/27
11A/2
11A/1
11B/19
4/56
CEM
CAN
LIN
RD-BK
RD-BU
GN-VT
C5:1
C5:2
C1:13
C1:12
RD
BN-WH
74/324
74/301
74/323
BN-WH
BN-WH
6/163
EPAS
CAN
C1:2
C2:1
C2:3
C2:2
C1:1
4/99
PSU
BU
VT-WH
6/71
GN-BU
WH-GN
BK-OG
BK-OG
73/3033
73/3036
BK
74/324
BK
BK-OG
73/3153
BK-OG
73/3034
BK-OG
31/95
31/93
C34W050

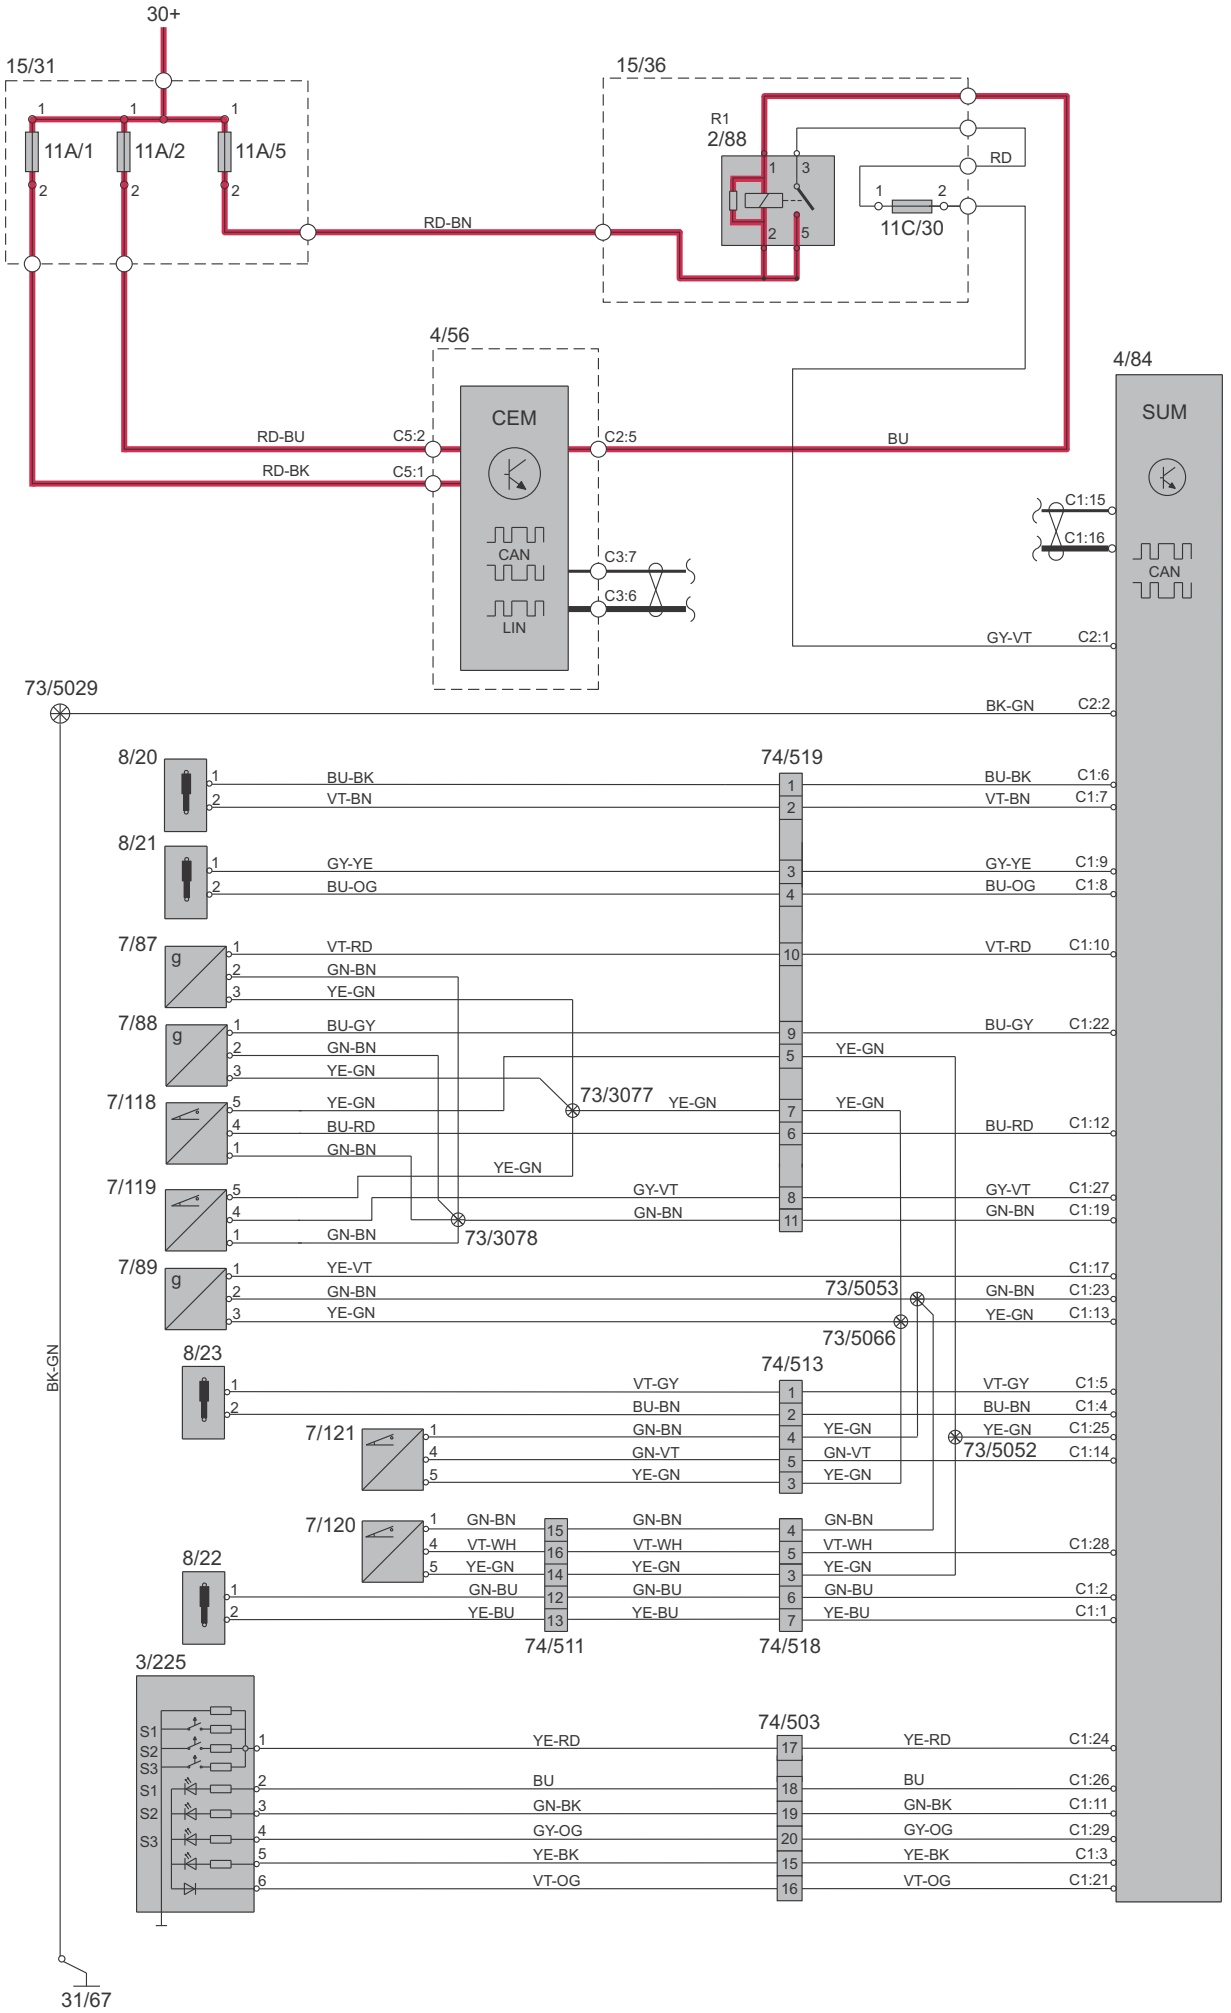
30+
15/31
11A/1
11A/2
11A/5
15/36
R1
2/88
RD
11C/30
RD-BN
4/56
CEM
CAN
LIN
RD-BU
RD-BK
C5:2
C5:1
C2:5
BU
C3:7
C3:6
4/84
SUM
CAN
C1:15
C1:16
GY-VT
C2:1
73/5029
BK-GN
C2:2
8/20
BU-BK
VT-BN
74/519
C1:6
C1:7
8/21
GY-YE
BU-OG
C1:9
C1:8
7/87
VT-RD
GN-BN
YE-GN
C1:10
7/88
BU-GY
C1:22
7/118
BU-RD
C1:12
73/3077
7/119
GY-VT
C1:27
GN-BN
C1:19
73/3078
7/89
YE-VT
C1:17
73/5053
C1:23
73/5066
C1:13
8/23
74/513
VT-GY
BU-BN
C1:5
C1:4
7/121
C1:25
73/5052
C1:14
7/120
VT-WH
C1:28
8/22
GN-BU
YE-BU
C1:2
C1:1
74/511
74/518
3/225
74/503
C1:24
C1:26
C1:11
C1:29
C1:3
C1:21
BK-GN
31/67
C33W102

Group 83 Doors and openings
Central locking front doors LHD

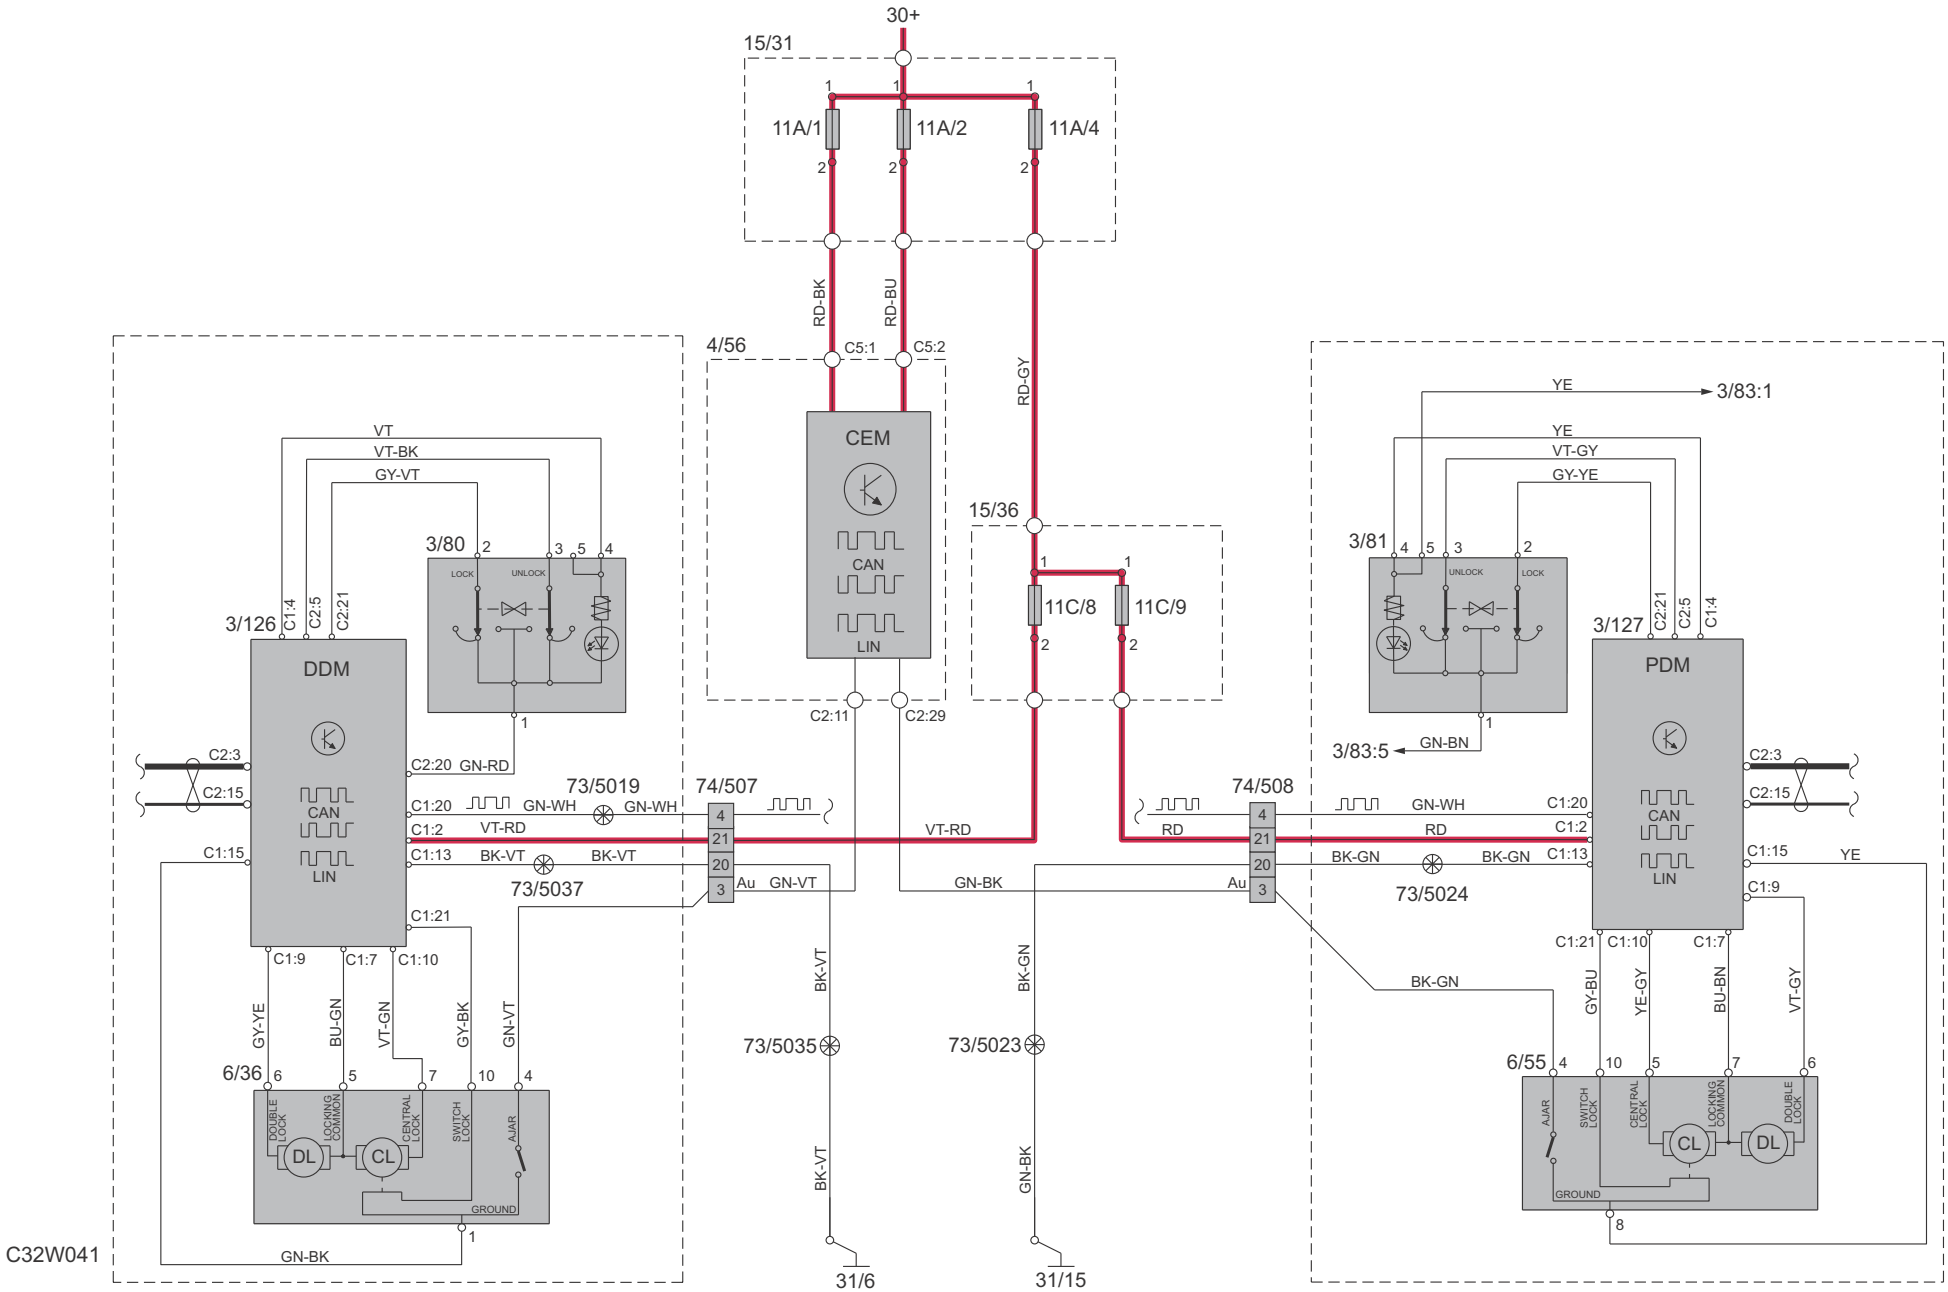

Group 83 Doors and openings
Central locking front doors RHD

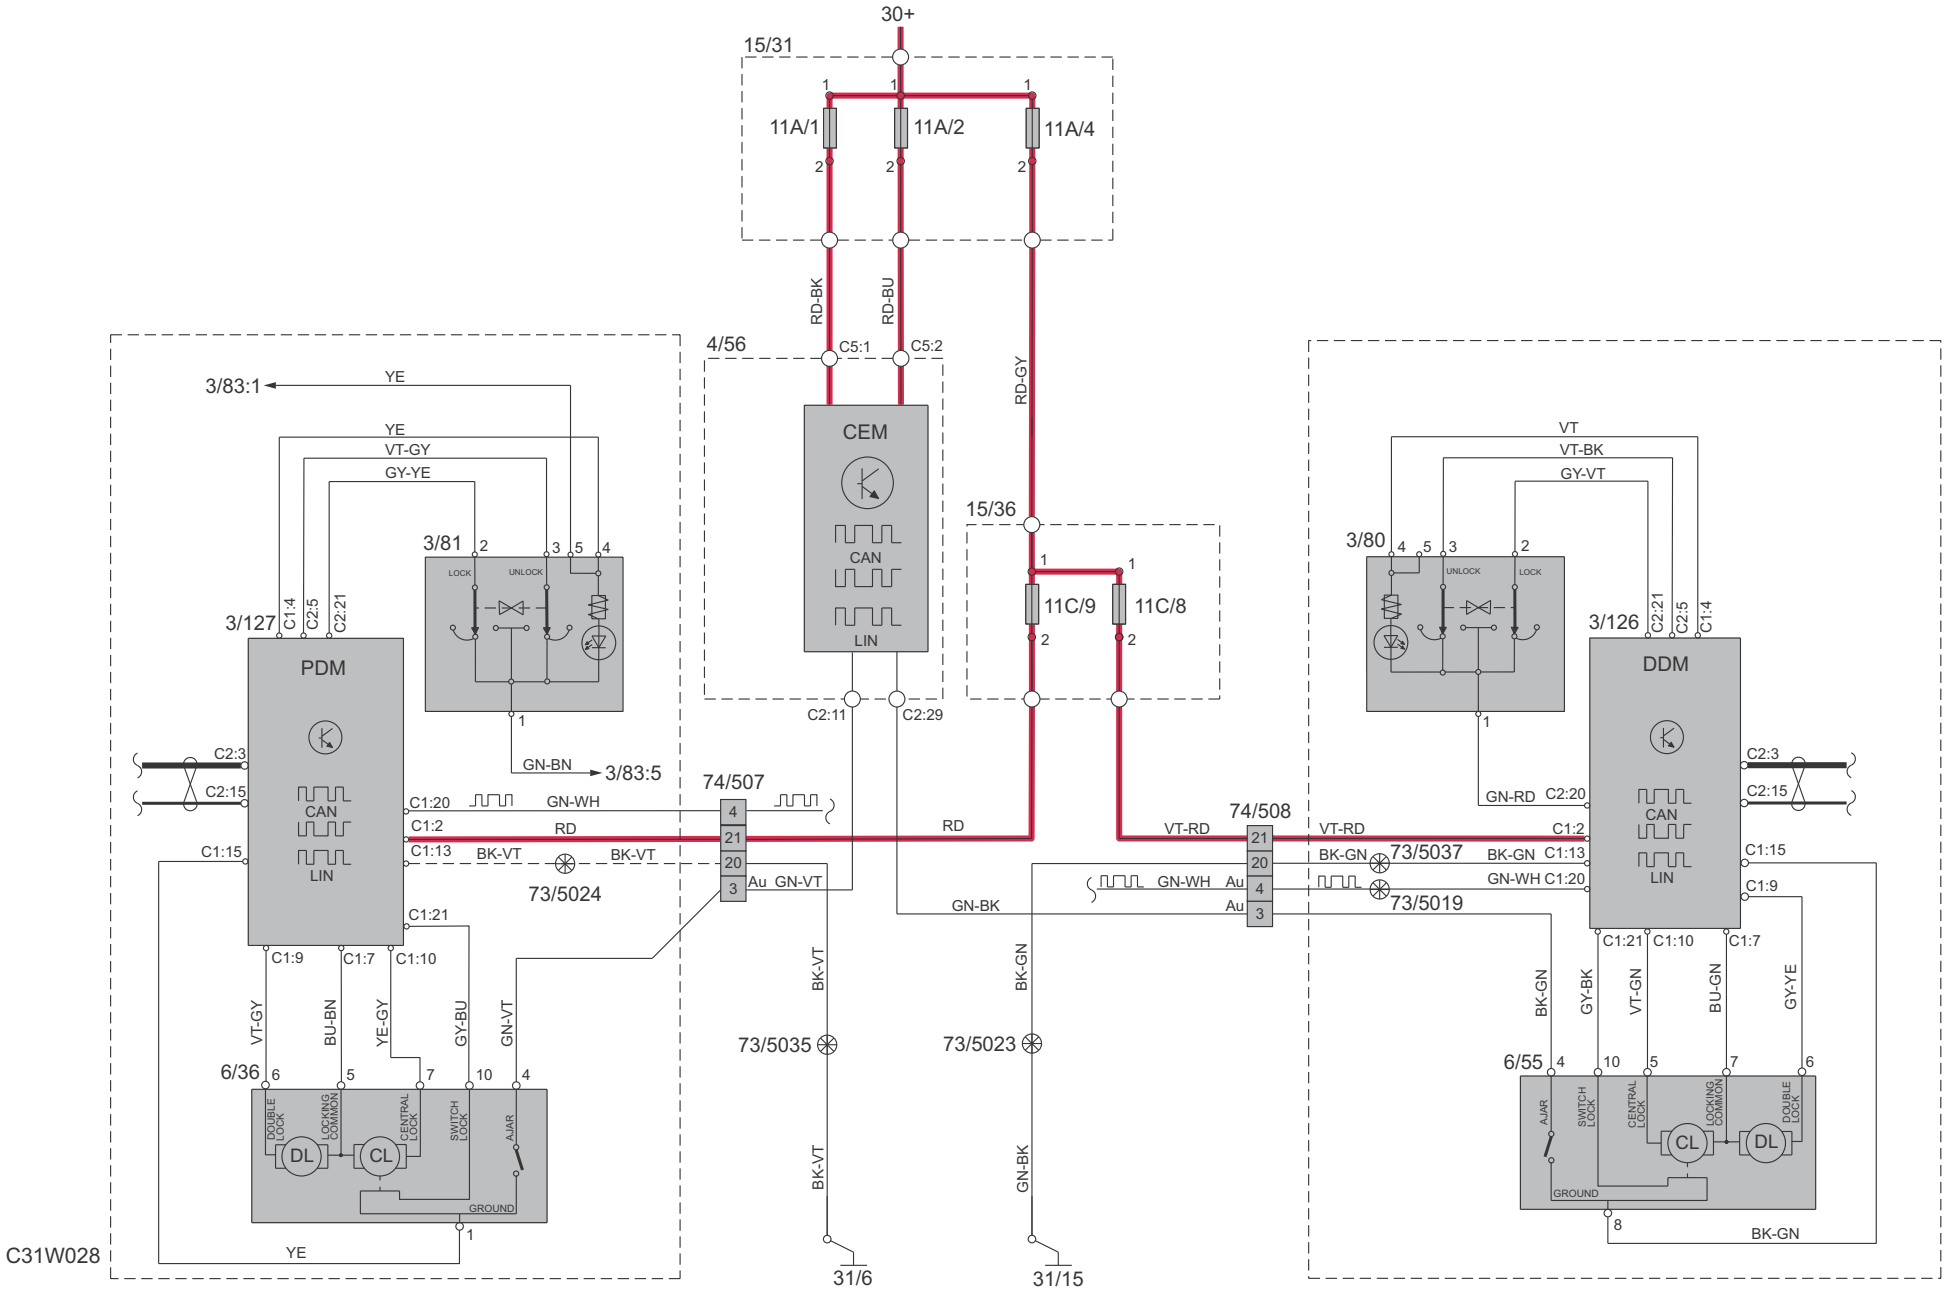

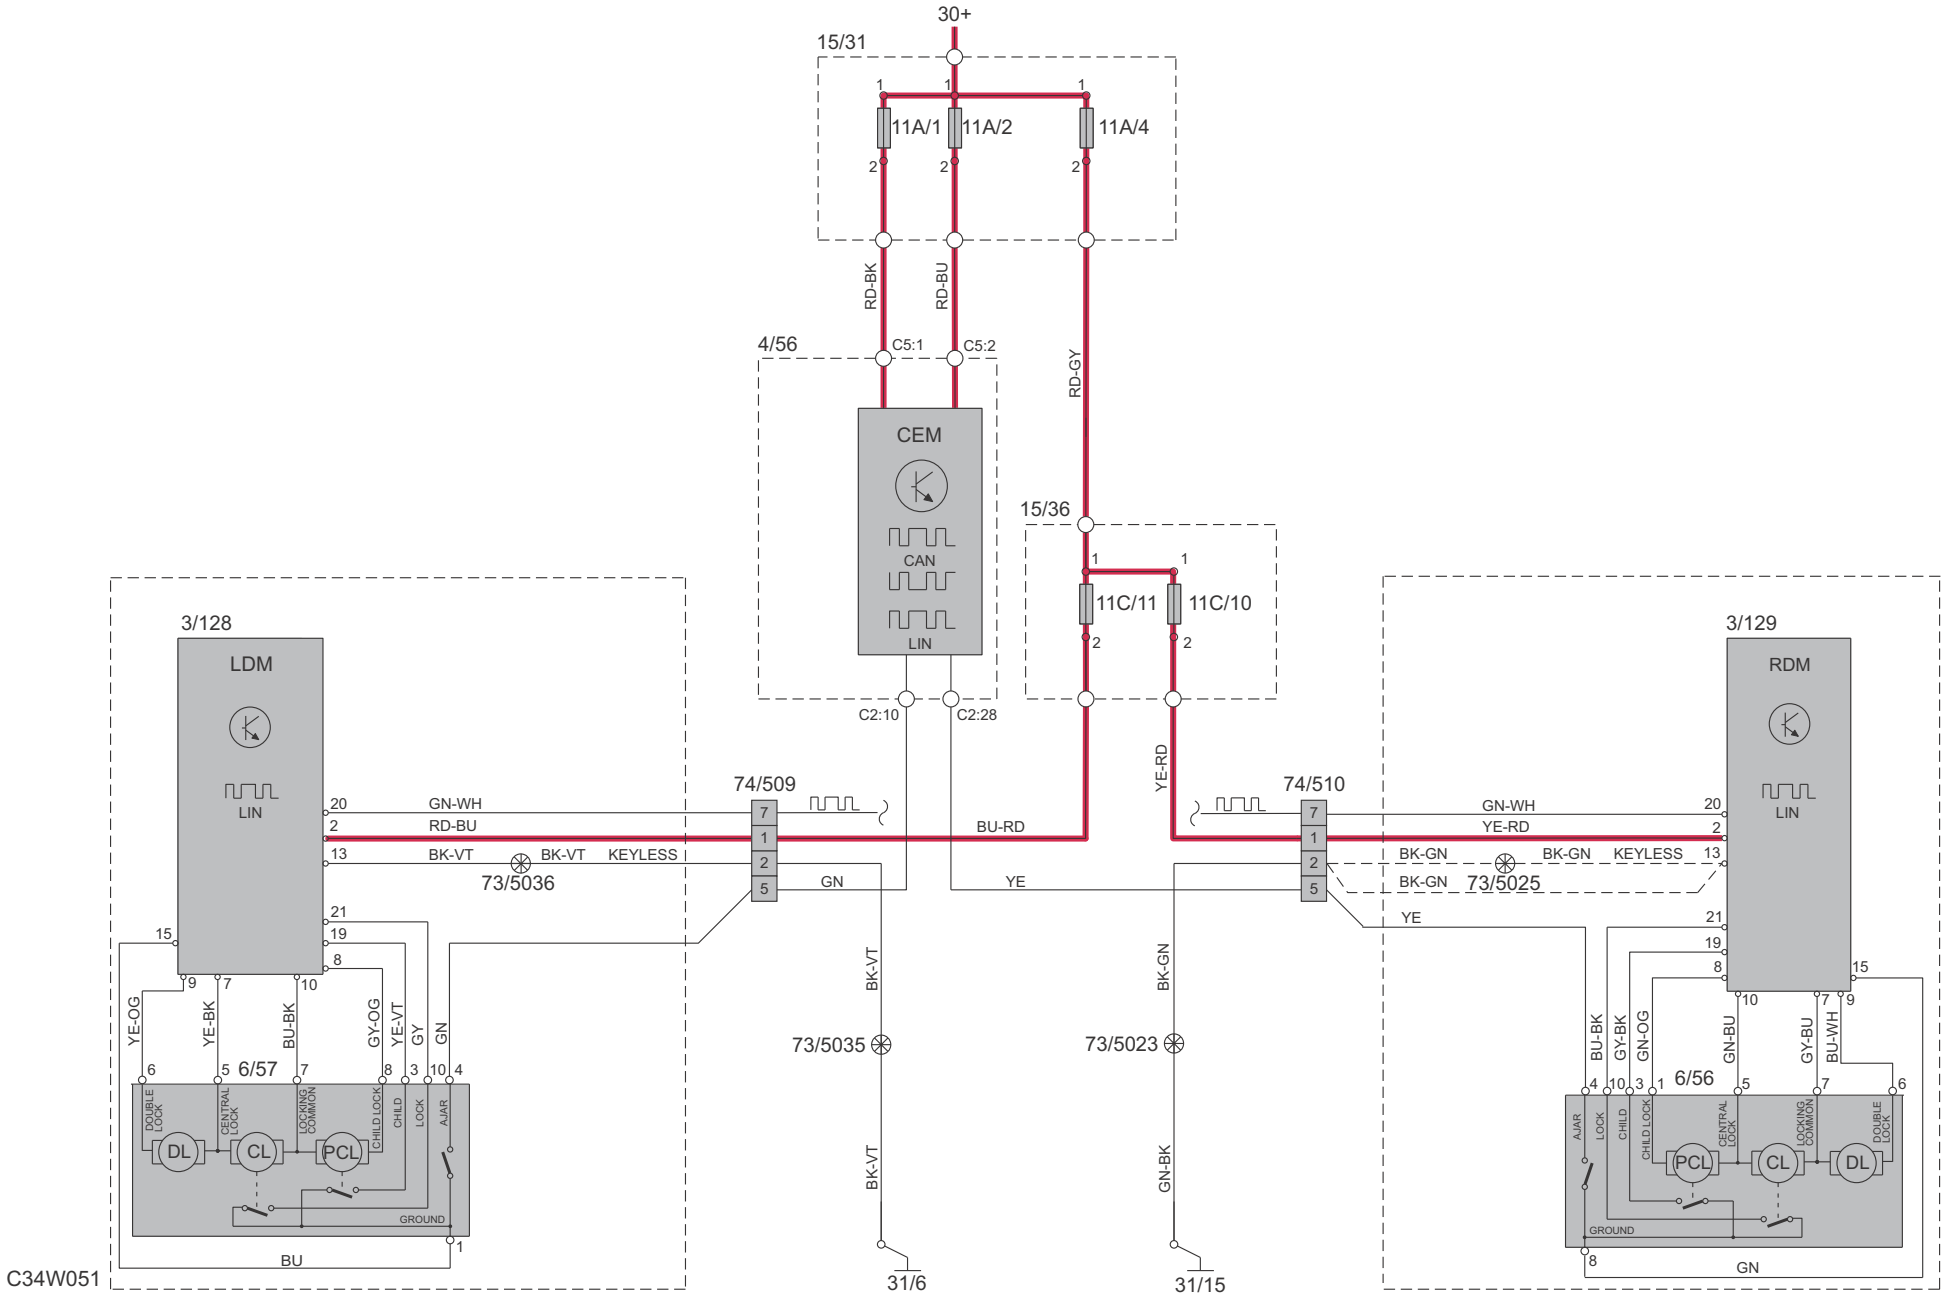
30+
15/31
11A/1
11A/2
11A/4
RD-BK
RD-BU
RD-GY
4/56
C5:1
C5:2
CEM
CAN
LIN
15/36
11C/11
11C/10
C2:10
C2:28
YE-RD
3/128
LDM
LIN
74/509
74/510
GN-WH
RD-BU
BK-VT
BK-VT
KEYLESS
73/5036
BU-RD
GN
YE
BK-VT
BK-GN
73/5035
73/5023
BK-VT
GN-BK
31/6
31/15
3/129
RDM
LIN
GN-WH
YE-RD
BK-GN
BK-GN
KEYLESS
BK-GN
73/5025
YE
6/57
YE-OG
YE-BK
BU-BK
GY-OG
YE-VT
GY
GN
DOUBLE LOCK
CENTRAL LOCK
LOCKING COMMON
CHILD LOCK
CHILD
LOCK
AJAR
DL
CL
PCL
GROUND
BU
6/56
BU-BK
GY-BK
GN-OG
GN-BU
GY-BU
BU-WH
GN
C34W051

Group 83 Doors and openings
Central locking trunk lid/tailgate V70

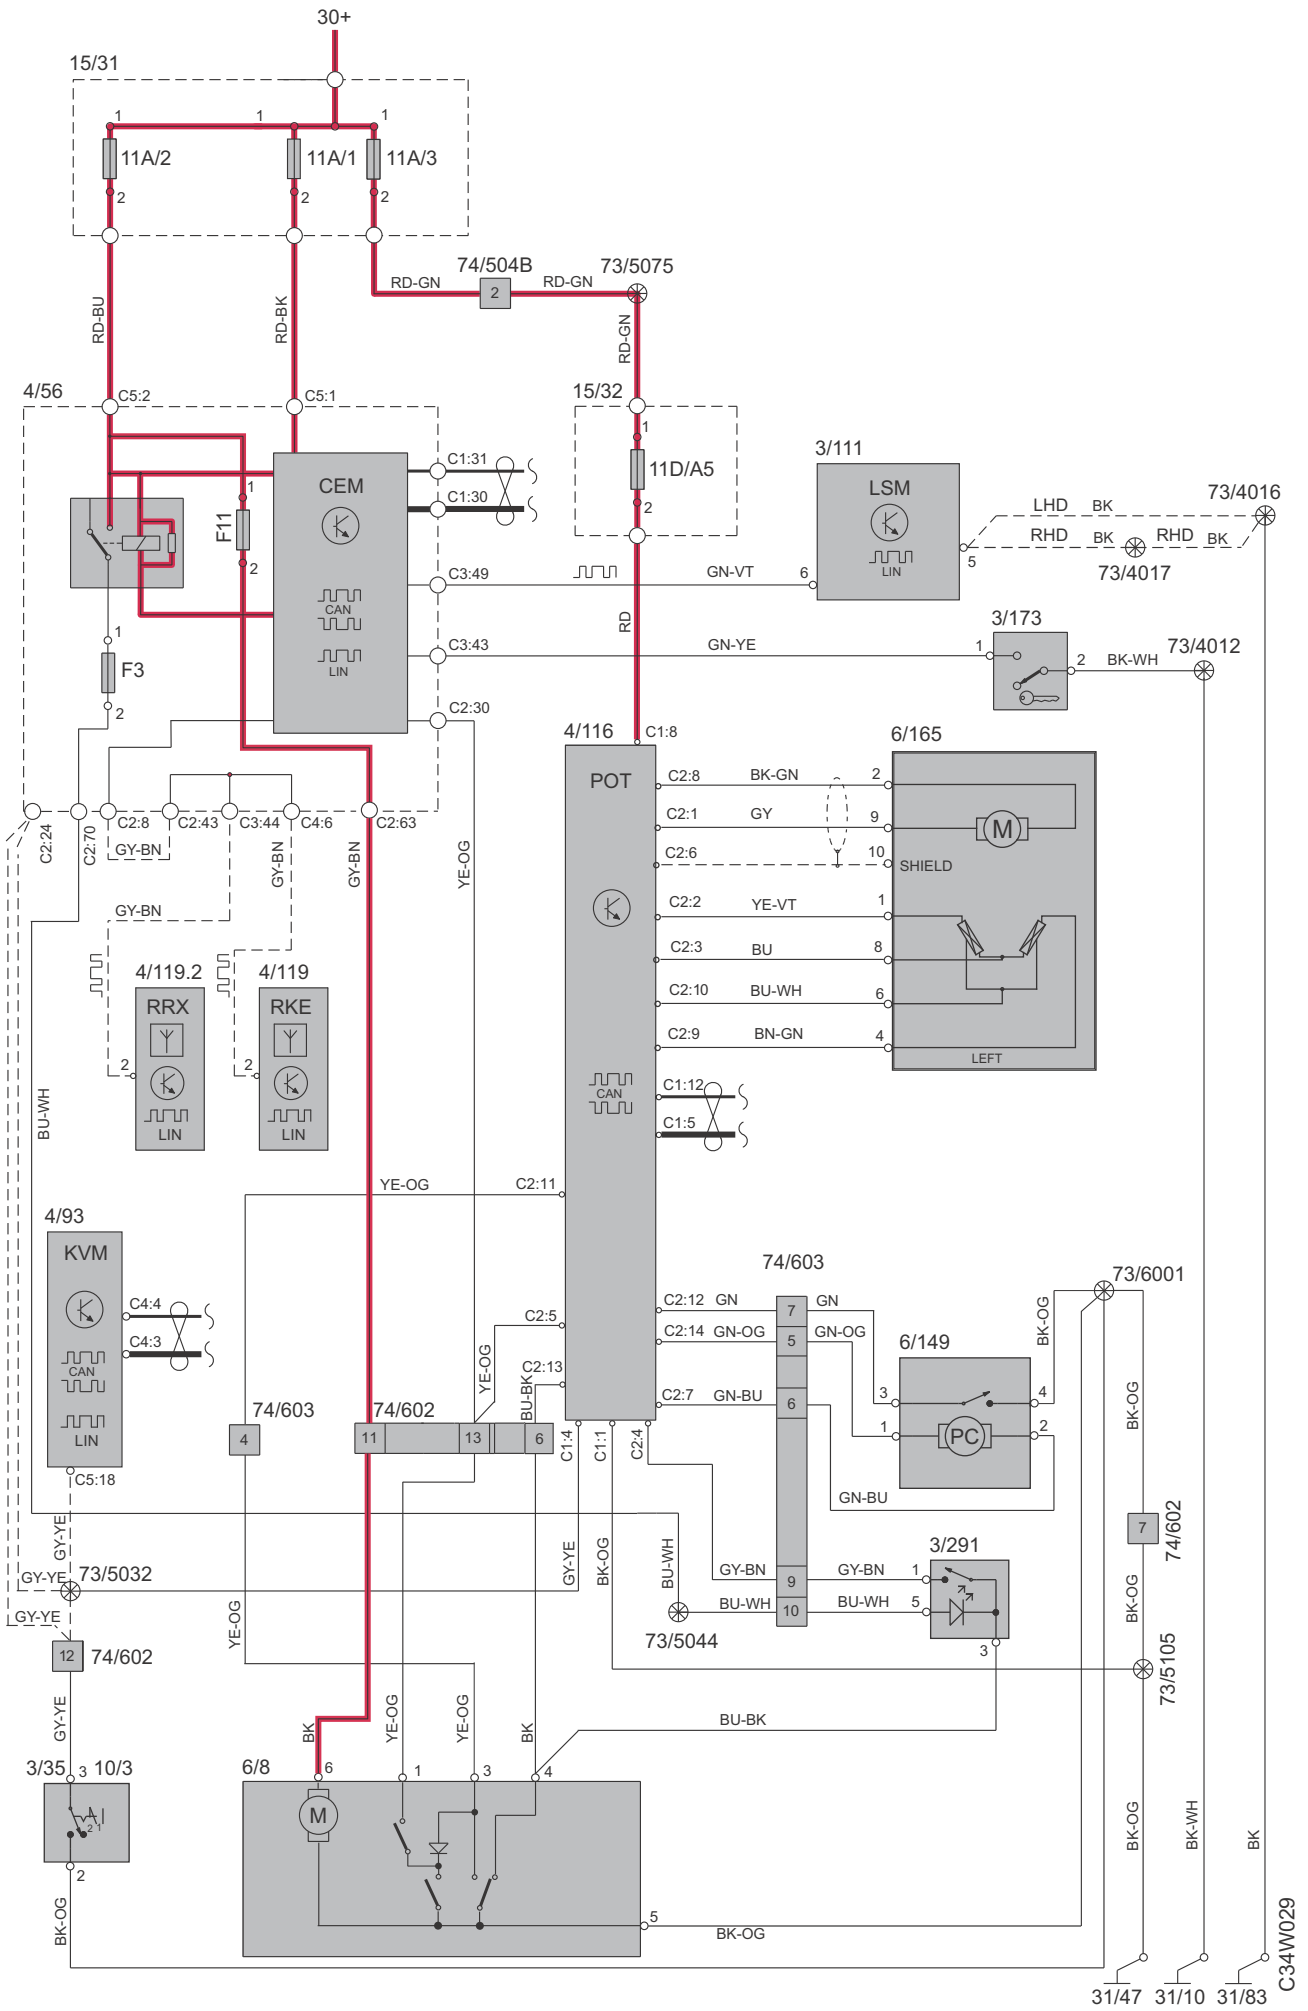

Group 83 Doors and openings
Central locking trunk lid/tailgate S80

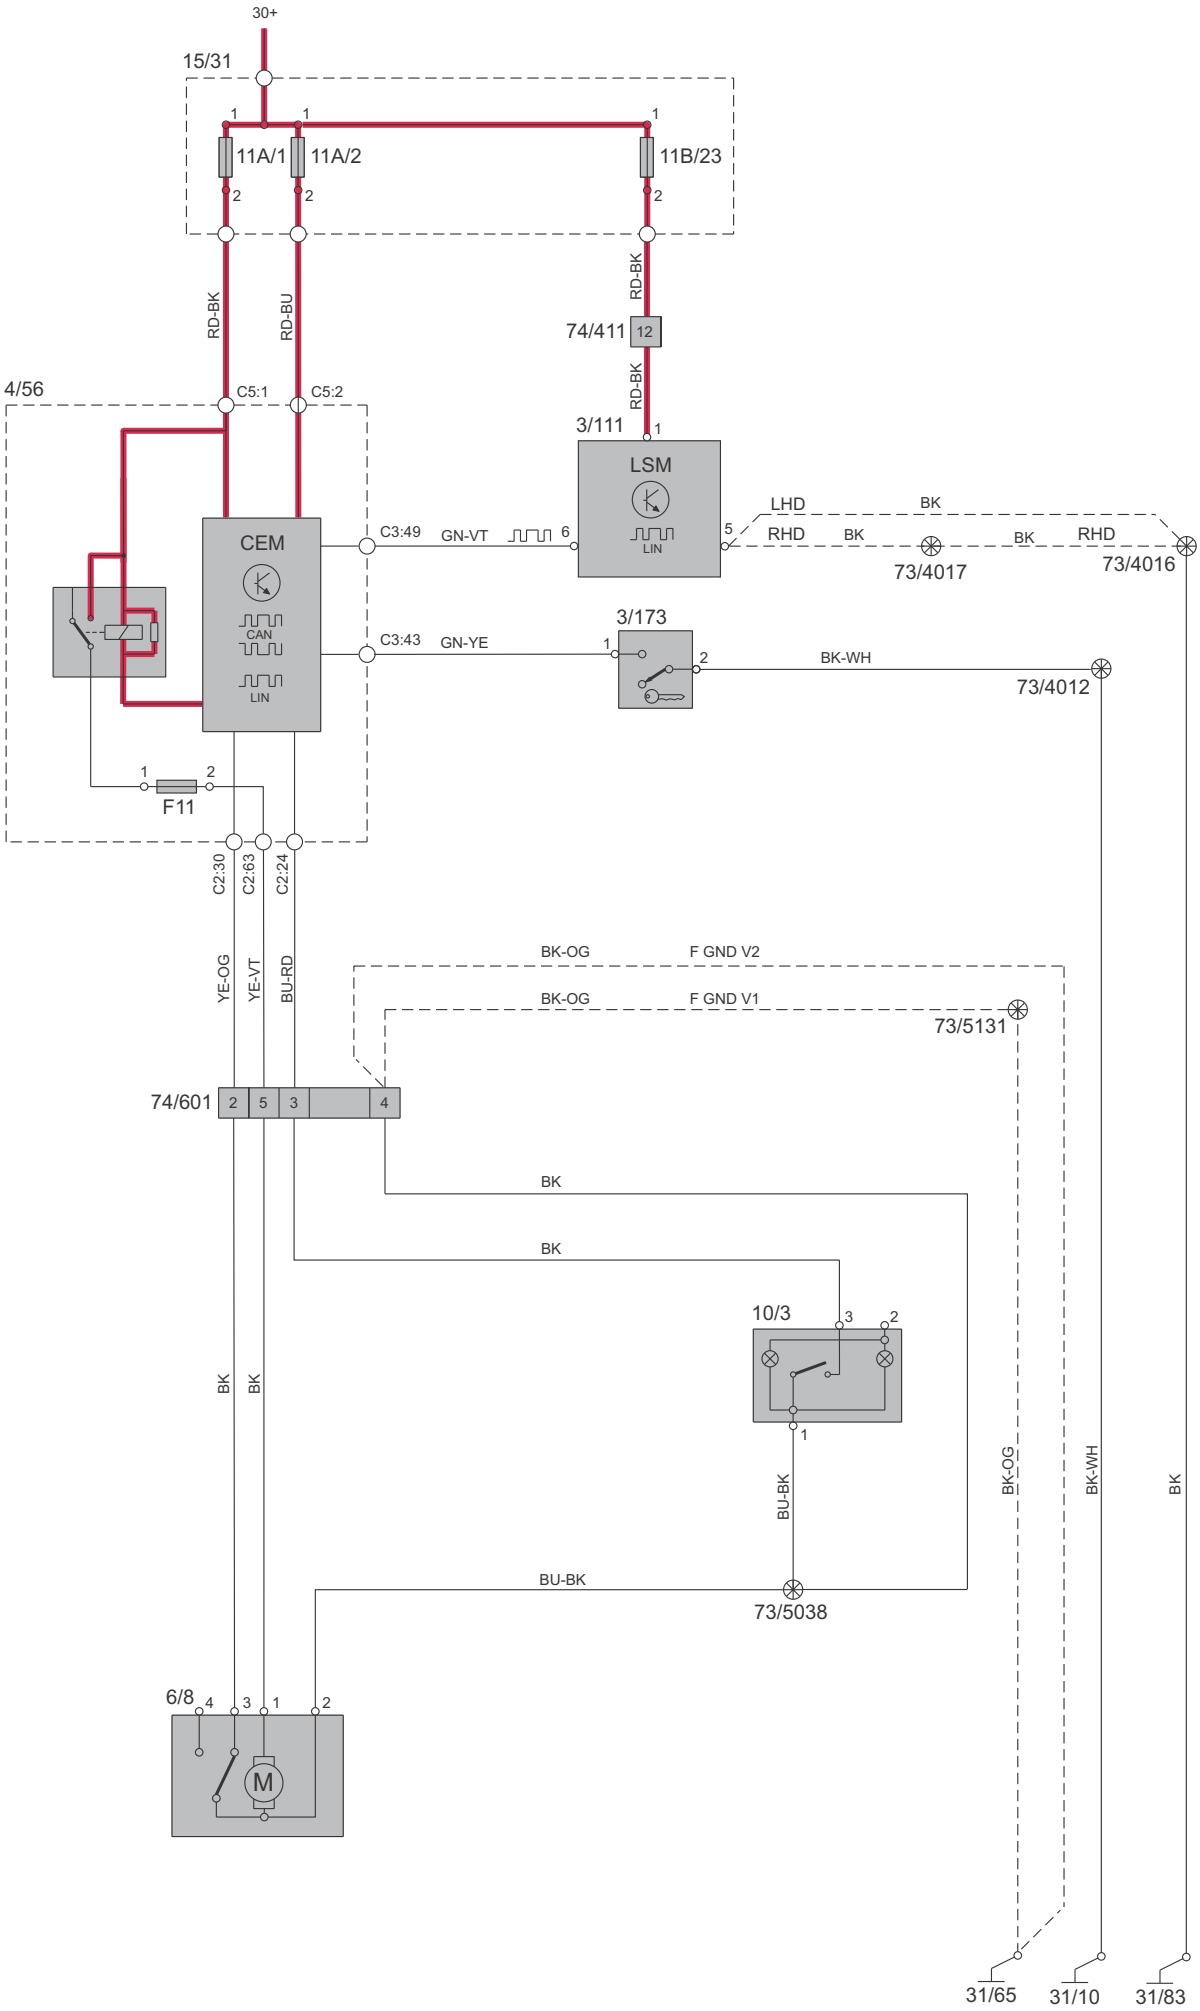

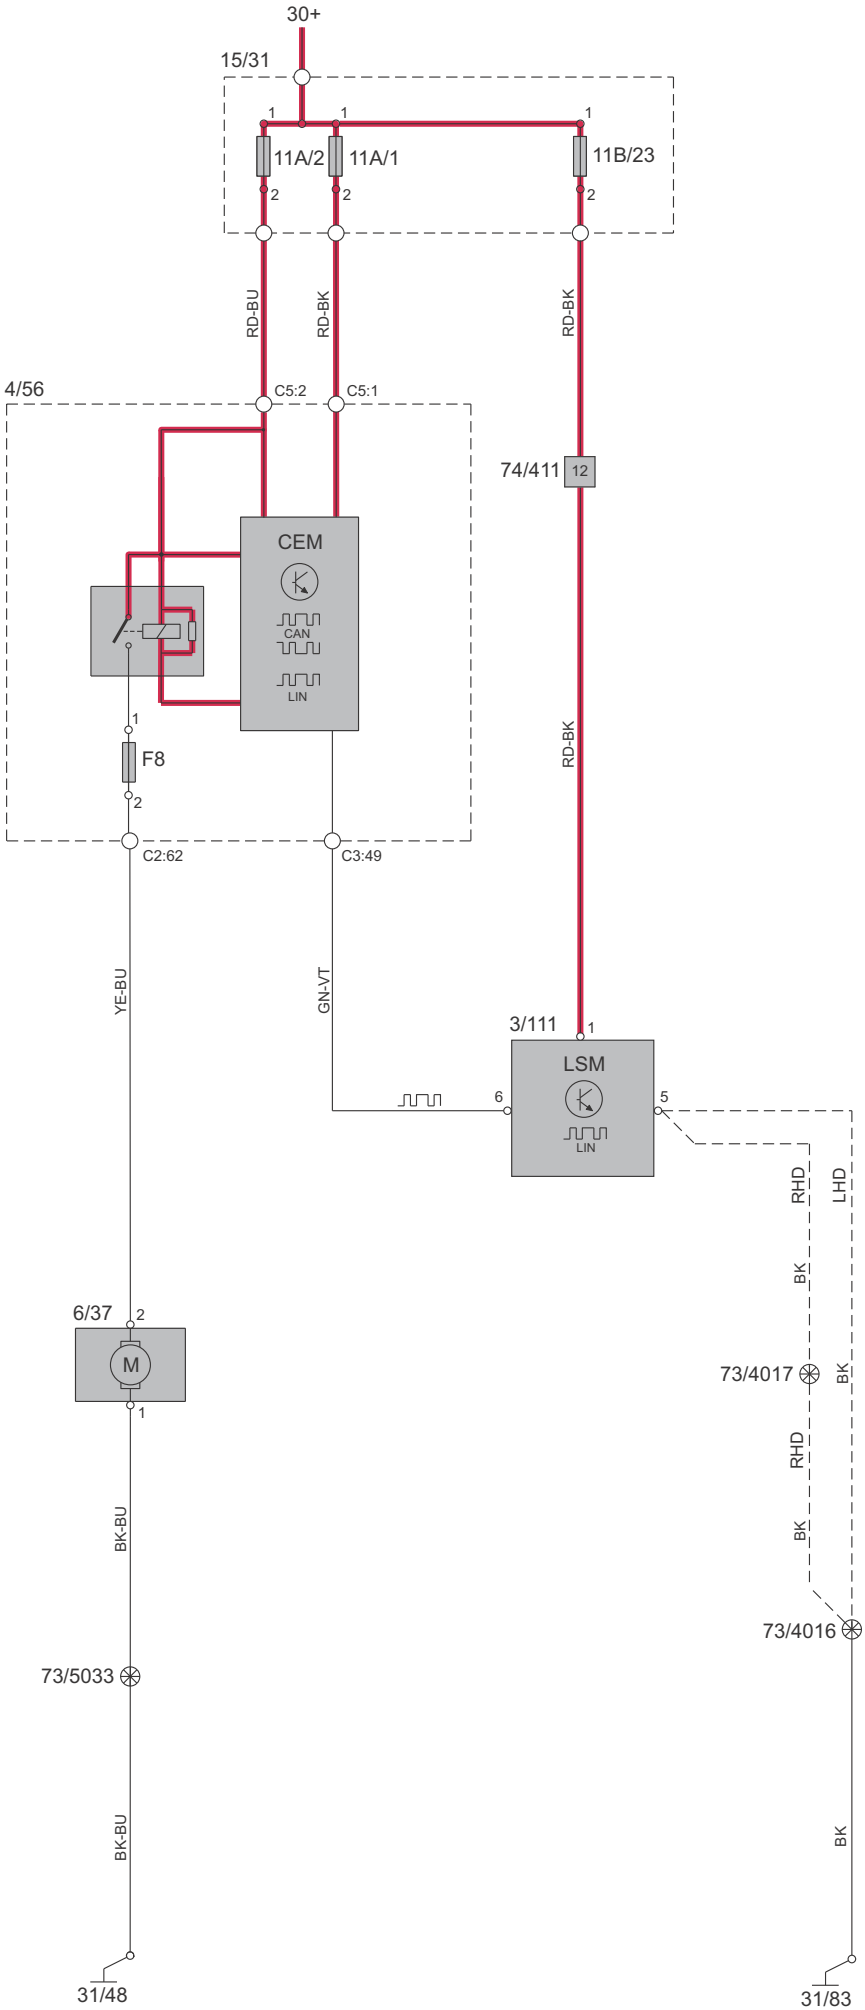
30+
15/31
11A/2
11A/1
11B/23
RD-BU
RD-BK
RD-BK
4/56
C5:2
C5:1
74/411
12
CEM
CAN
LIN
F8
RD-BK
C2:62
C3:49
YE-BU
GN-VT
3/111
LSM
LIN
RHD
LHD
BK
6/37
M
73/4017
BK
RHD
BK
73/4016
BK-BU
73/5033
BK-BU
BK
31/48
31/83

C33W105

Group 83 Doors and openings
Signal receiver central locking

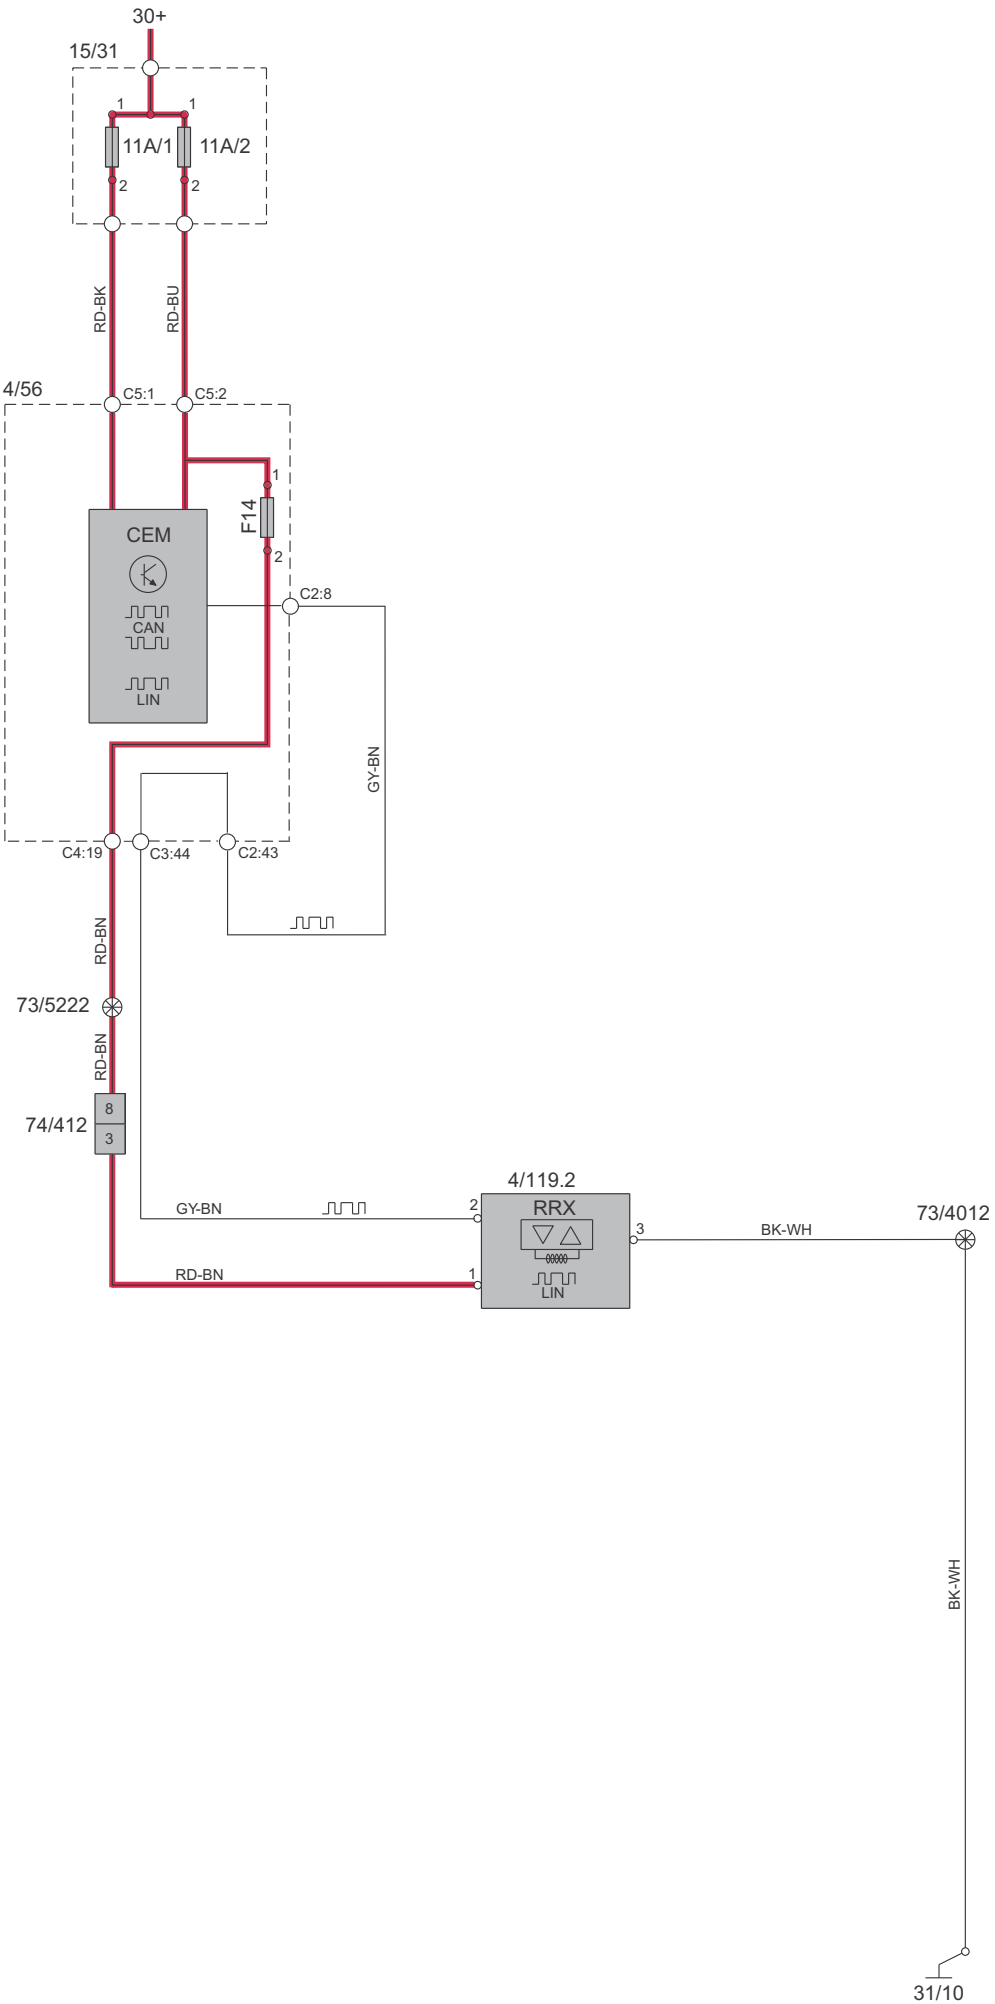

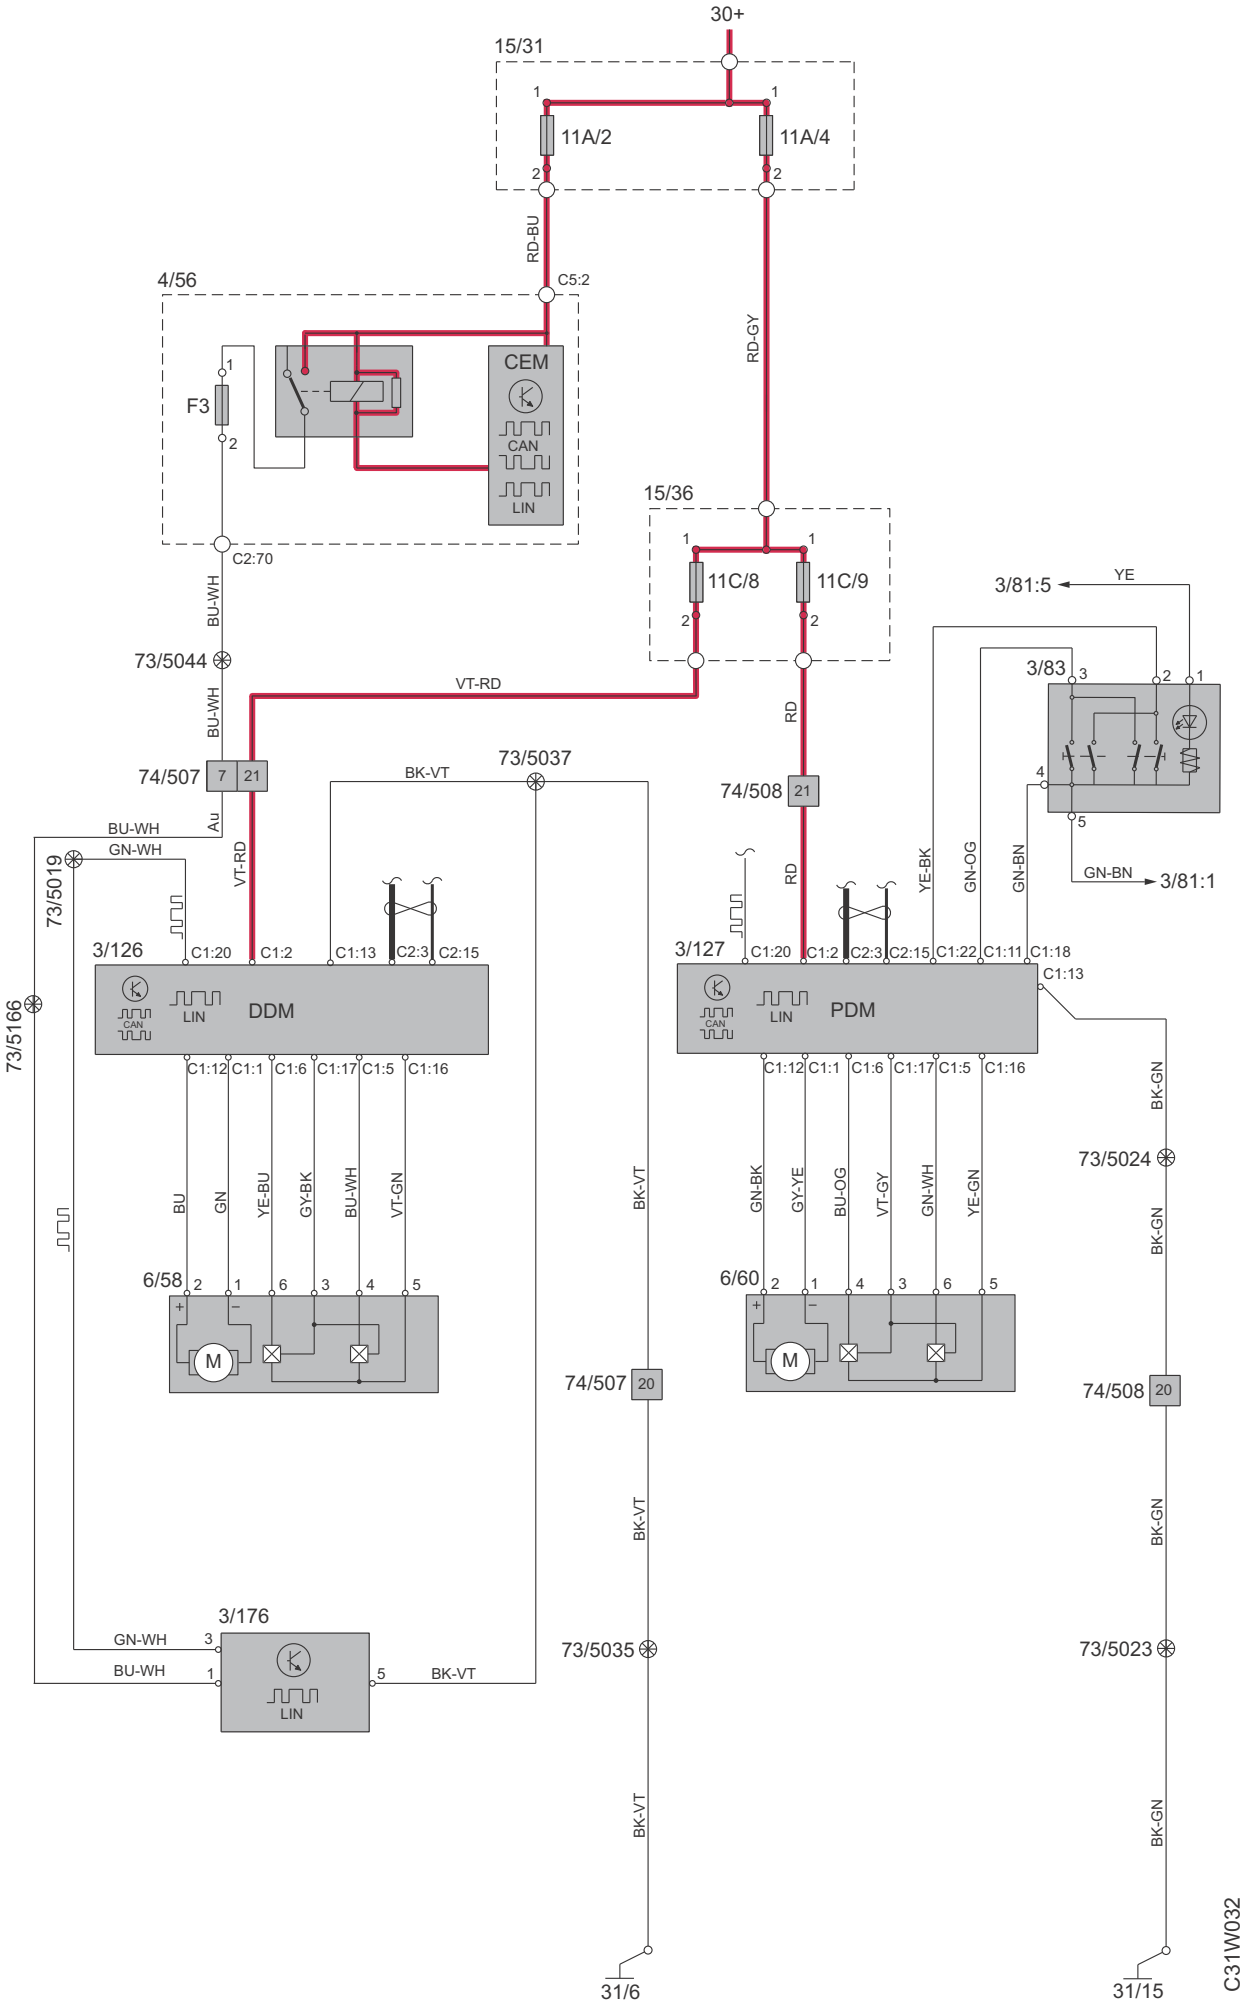
30+
15/31
11A/2
11A/4
RD-BU
RD-GY
4/56
C5:2
CEM
CAN
LIN
F3
C2:70
15/36
11C/8
11C/9
3/81:5
YE
3/83
BU-WH
73/5044
VT-RD
RD
74/507
74/508
BK-VT
73/5037
BU-WH
GN-WH
73/5019
VT-RD
YE-BK
GN-OG
GN-BN
3/81:1
3/126
3/127
DDM
PDM
73/5166
BU
GN
YE-BU
GY-BK
BU-WH
VT-GN
GN-BK
GY-YE
BU-OG
VT-GY
GN-WH
YE-GN
BK-GN
73/5024
6/58
6/60
74/507
74/508
3/176
73/5035
73/5023
31/6
31/15
C31W032

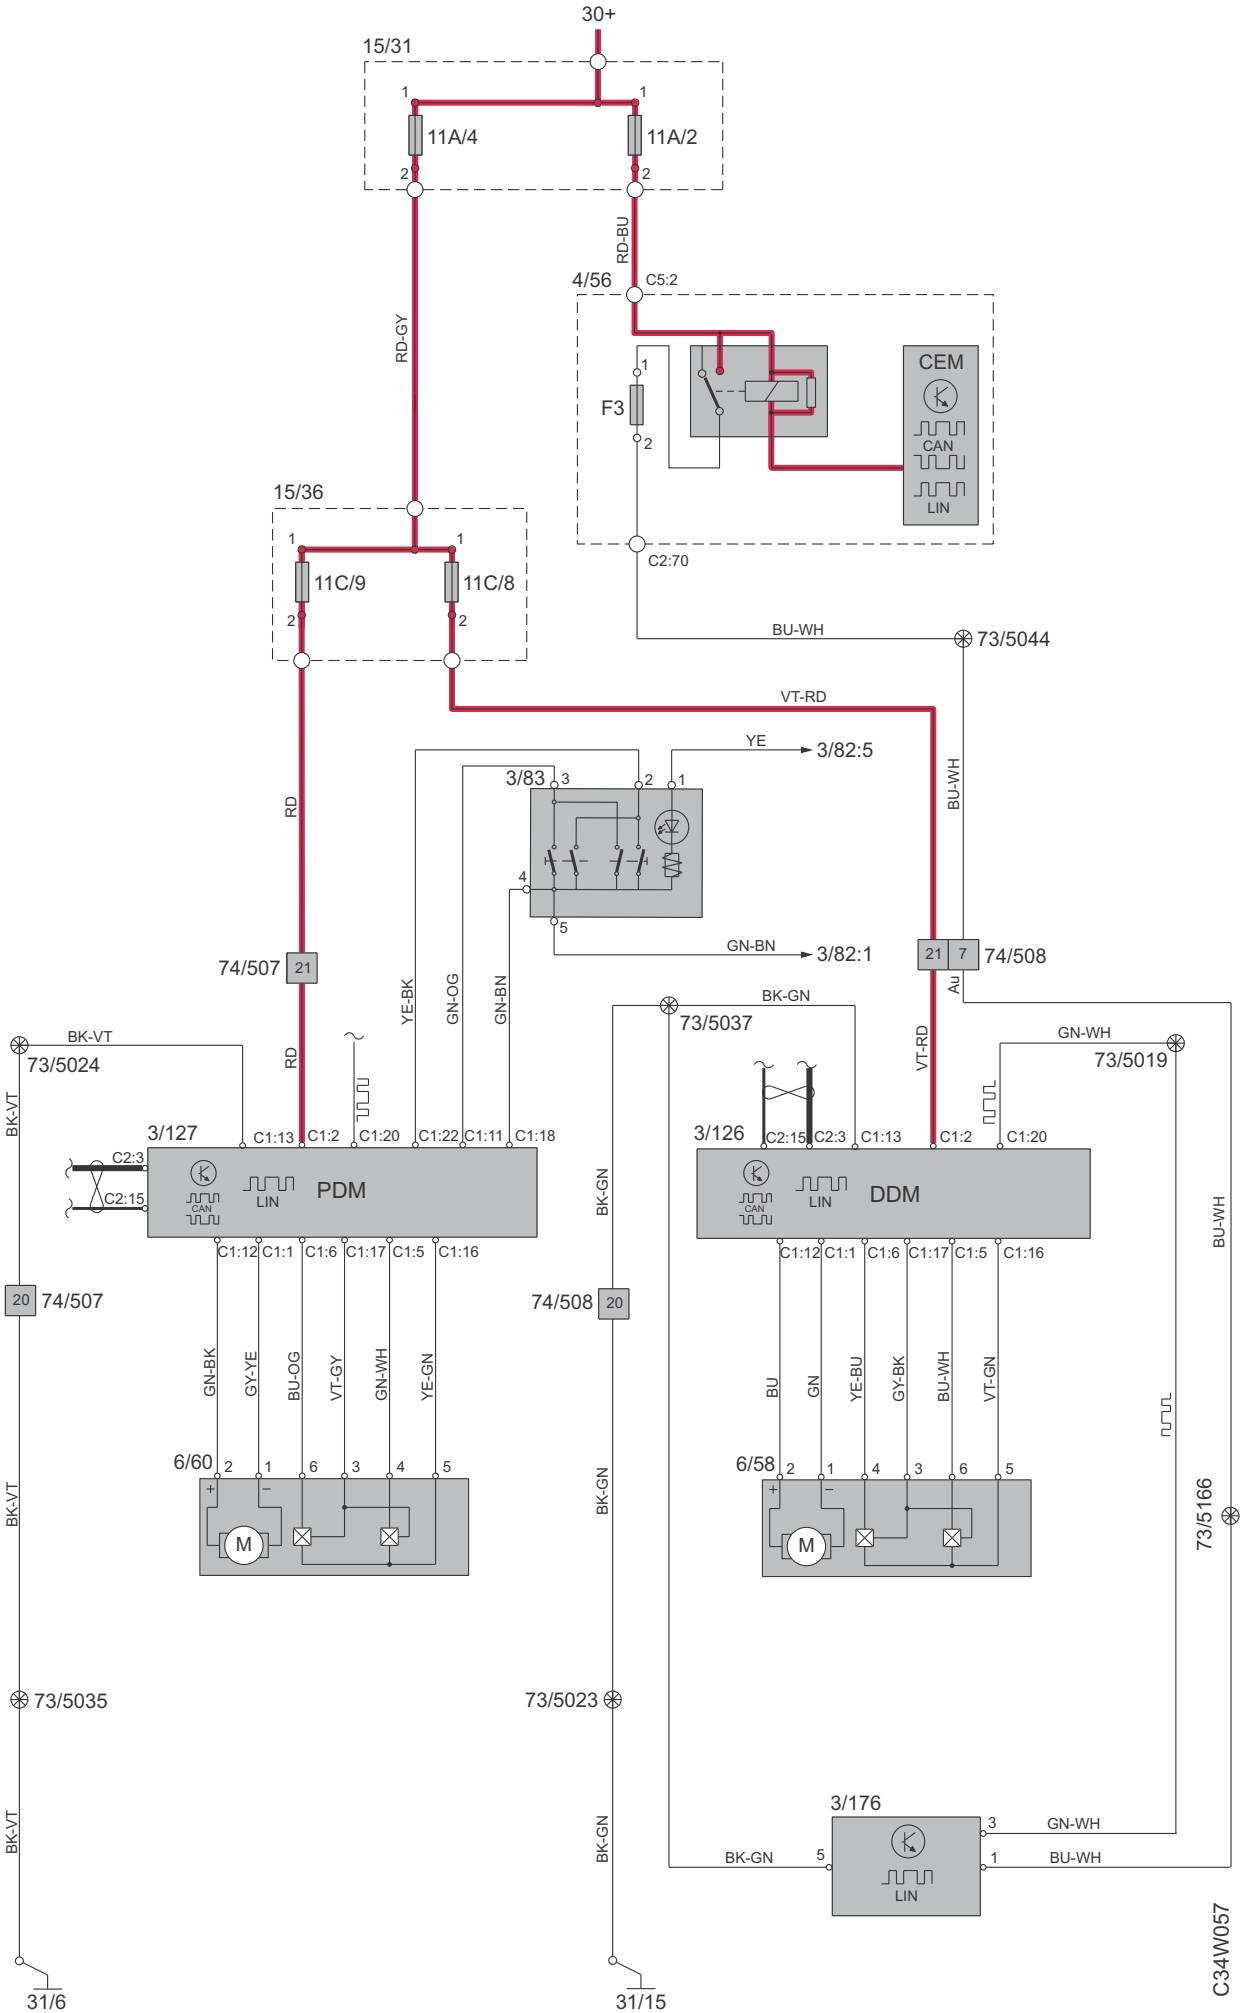
30+
15/31
11A/4
11A/2
RD-BU
RD-GY
4/56
C5:2
F3
CEM
CAN
LIN
C2:70
15/36
11C/9
11C/8
BU-WH
73/5044
VT-RD
YE
3/82:5
3/83
RD
GN-BN
3/82:1
74/507
74/508
BK-GN
73/5037
BK-VT
73/5024
YE-BK
GN-OG
GN-BN
GN-WH
73/5019
3/127
PDM
3/126
DDM
C1:13
C1:2
C1:20
C1:22
C1:11
C1:18
C2:3
C2:15
C1:12
C1:1
C1:6
C1:17
C1:5
C1:16
GN-BK
GY-YE
BU-OG
VT-GY
GN-WH
YE-GN
BU
GN
YE-BU
GY-BK
BU-WH
VT-GN
6/60
6/58
M
73/5035
73/5023
73/5166
3/176
BK-GN
GN-WH
BU-WH
31/6
31/15
C34W057

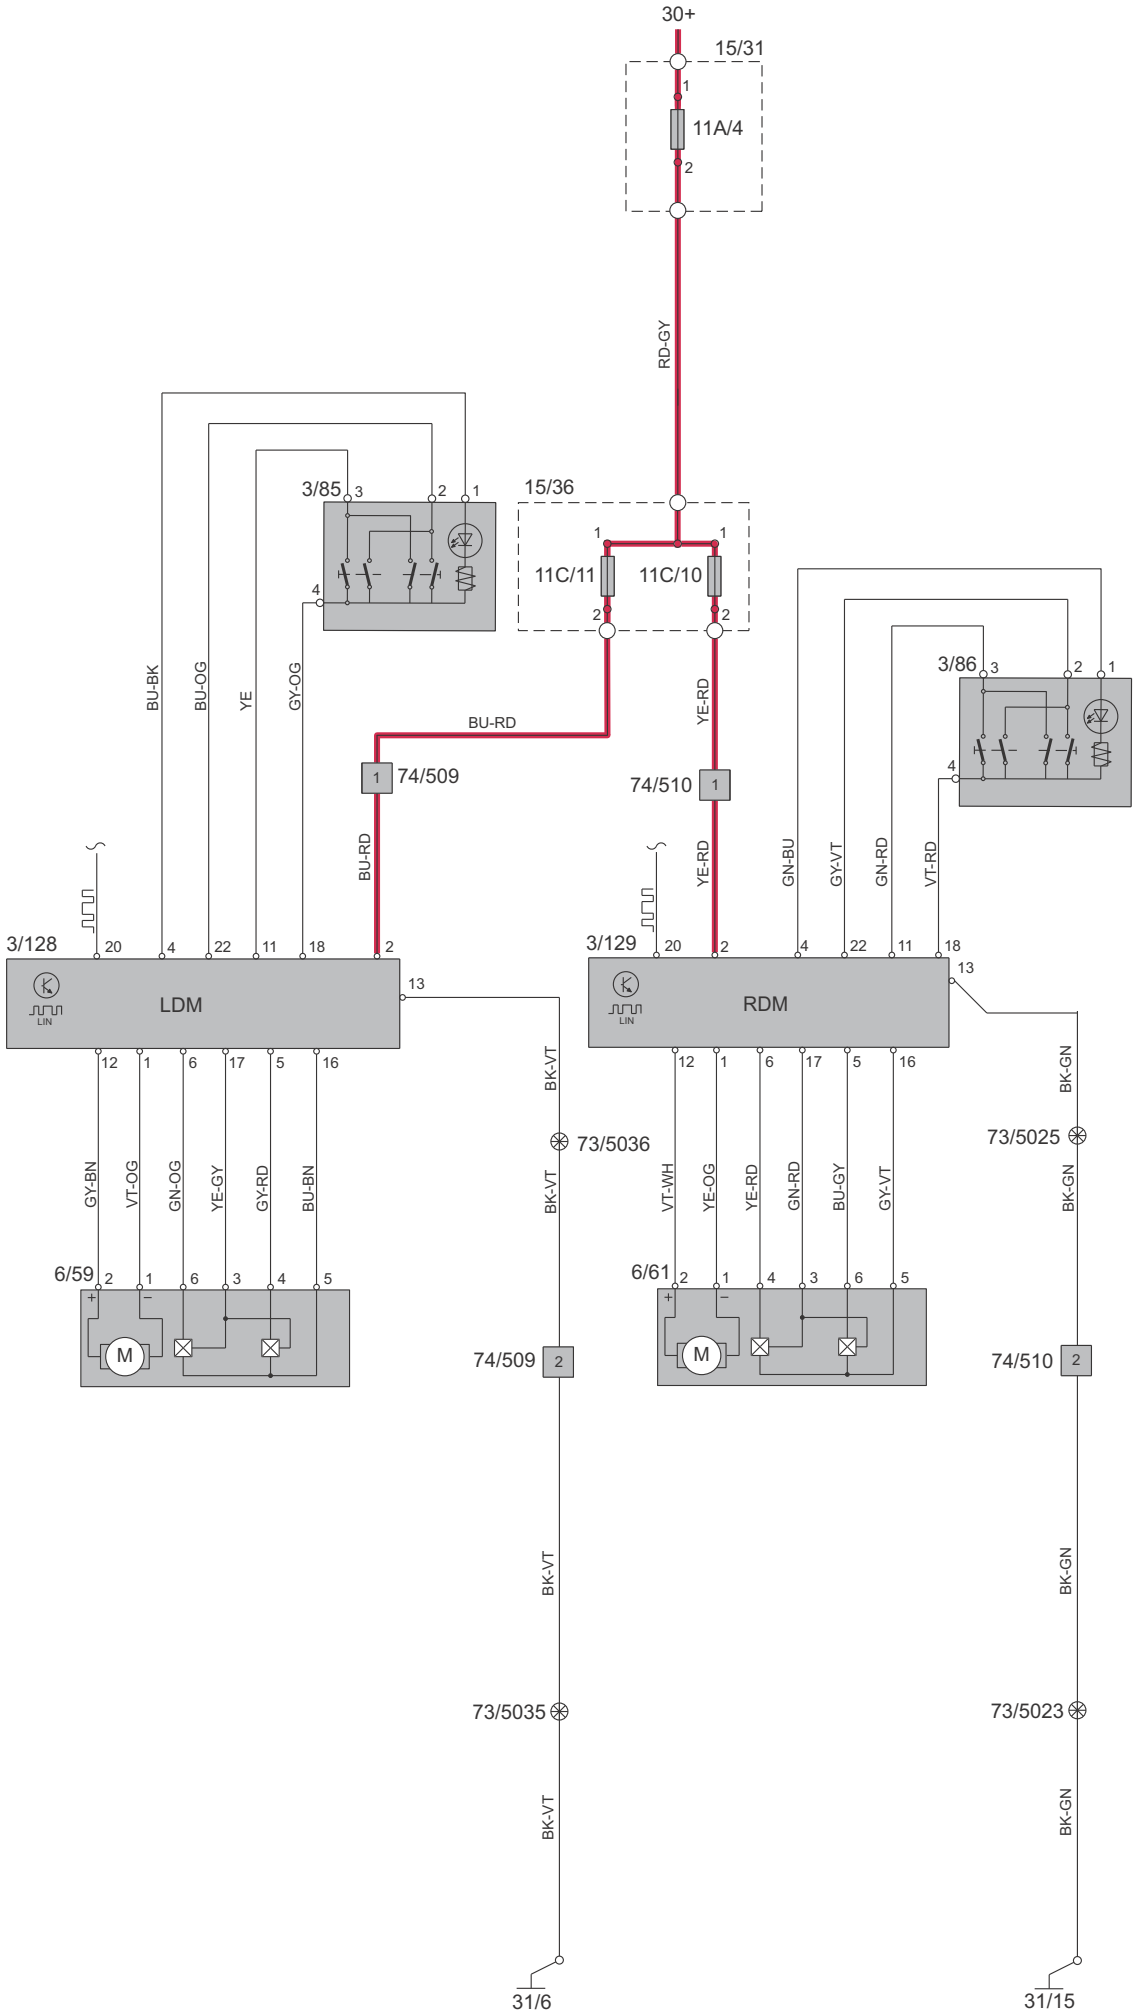
30+
15/31
1
11A/4
2
RD-GY
15/36
1
1
11C/11
11C/10
2
2
3/85
3
2
1
4
BU-BK
BU-OG
YE
GY-OG
BU-RD
YE-RD
1
74/509
74/510
1
BU-RD
YE-RD
3/86
3
2
1
4
GN-BU
GY-VT
GN-RD
VT-RD
3/128
20
4
22
11
18
2
13
LDM
LIN
3/129
20
2
4
22
11
18
13
RDM
LIN
12
1
6
17
5
16
BK-VT
73/5036
BK-VT
GY-BN
VT-OG
GN-OG
YE-GY
GY-RD
BU-BN
VT-WH
YE-OG
YE-RD
GN-RD
BU-GY
GY-VT
BK-GN
73/5025
BK-GN
6/59
2
1
6
3
4
5
6/61
2
1
4
3
6
5
M
M
74/509
2
74/510
2
BK-VT
BK-GN
73/5035
73/5023
BK-VT
BK-GN
31/6
31/15
C31W034

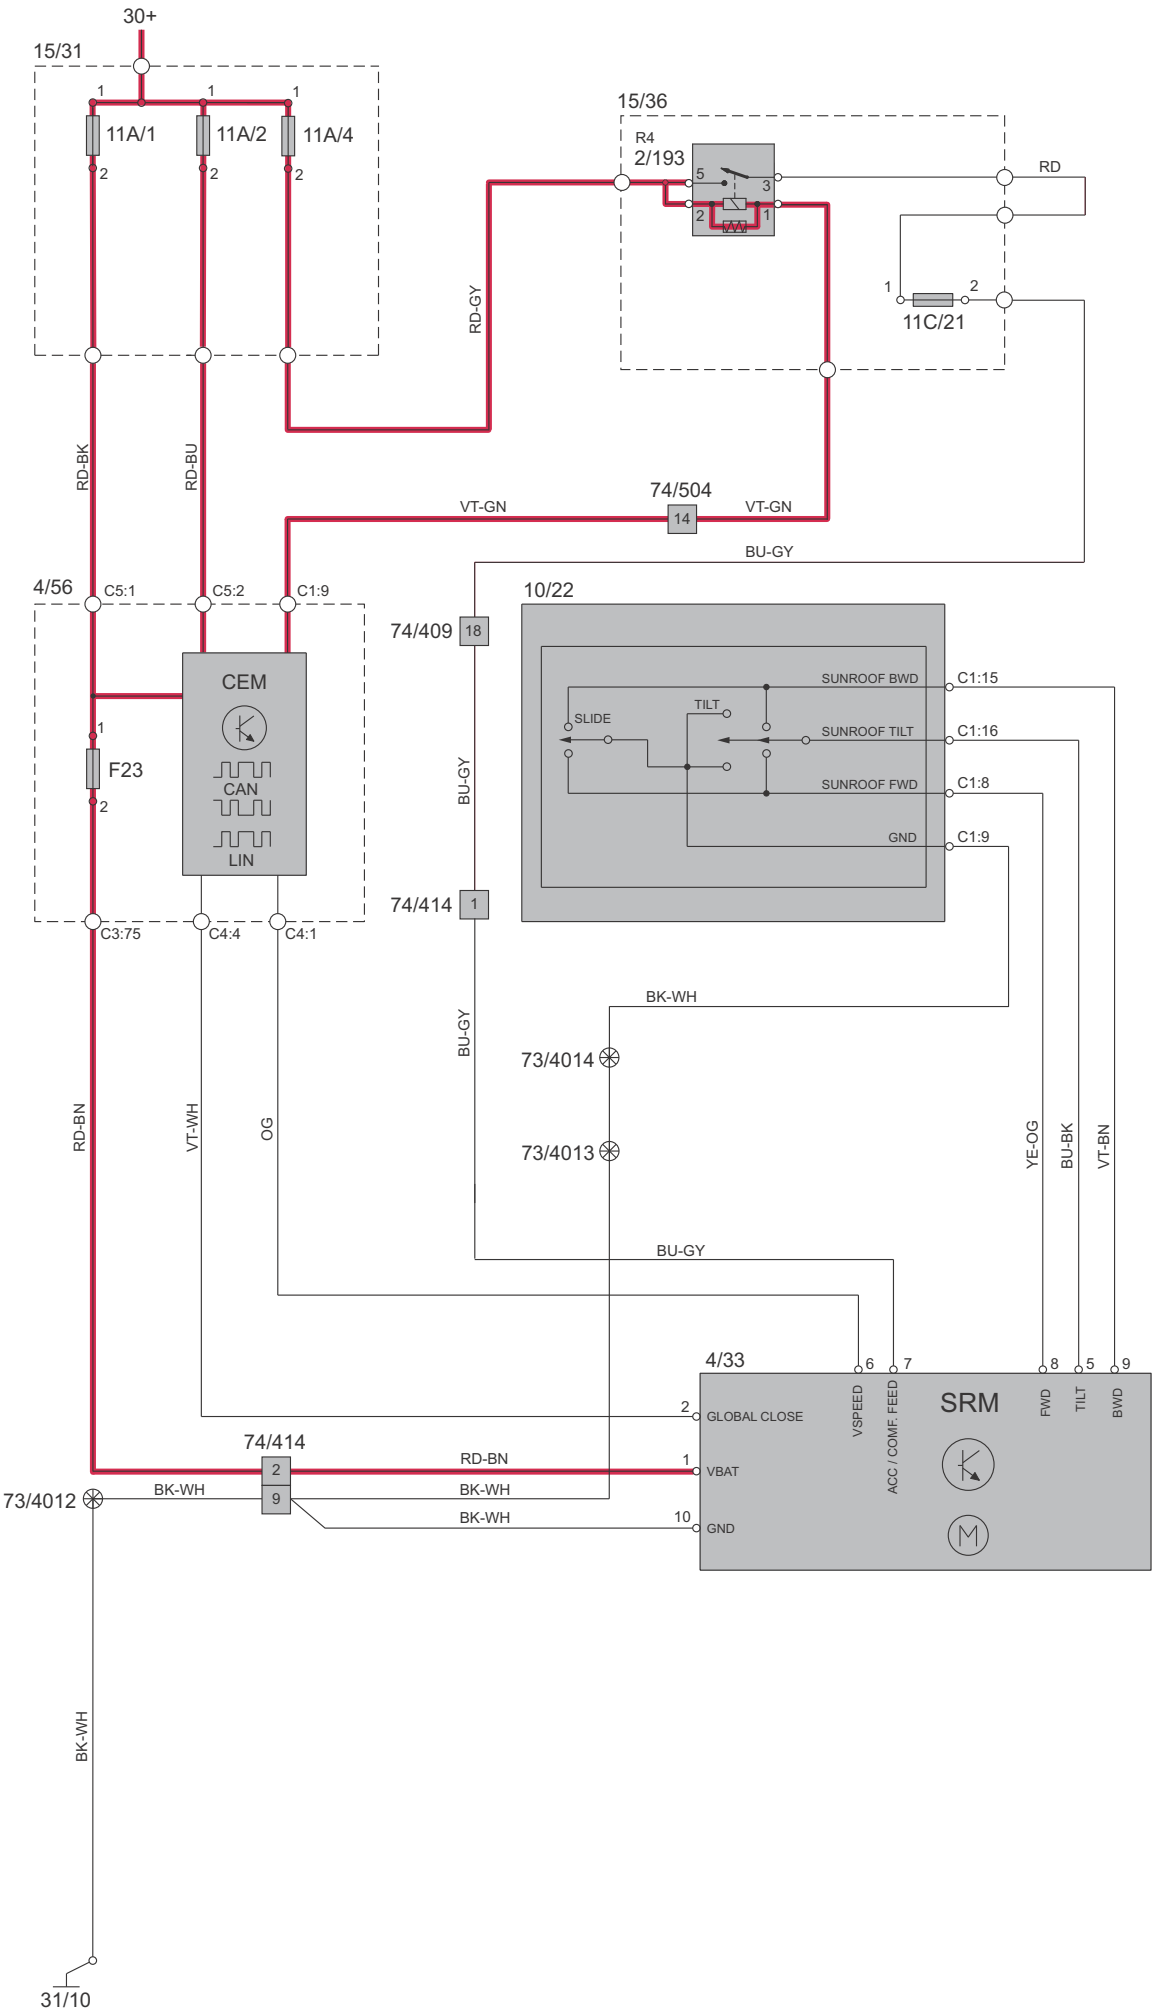
30+
15/31
11A/1
11A/2
11A/4
15/36
R4
2/193
RD
11C/21
RD-GY
RD-BK
RD-BU
VT-GN
74/504
14
VT-GN
BU-GY
4/56
C5:1
C5:2
C1:9
CEM
F23
CAN
LIN
C3:75
C4:4
C4:1
74/409
18
10/22
SUNROOF BWD
SLIDE
TILT
SUNROOF TILT
SUNROOF FWD
GND
C1:15
C1:16
C1:8
C1:9
74/414
1
BU-GY
BK-WH
73/4014
73/4013
RD-BN
VT-WH
OG
YE-OG
BU-BK
VT-BN
BU-GY
4/33
SRM
GLOBAL CLOSE
VBAT
GND
VSPEED
ACC / COMF. FEED
FWD
TILT
BWD
74/414
2
9
RD-BN
BK-WH
BK-WH
BK-WH
73/4012
BK-WH
31/10
C34W058

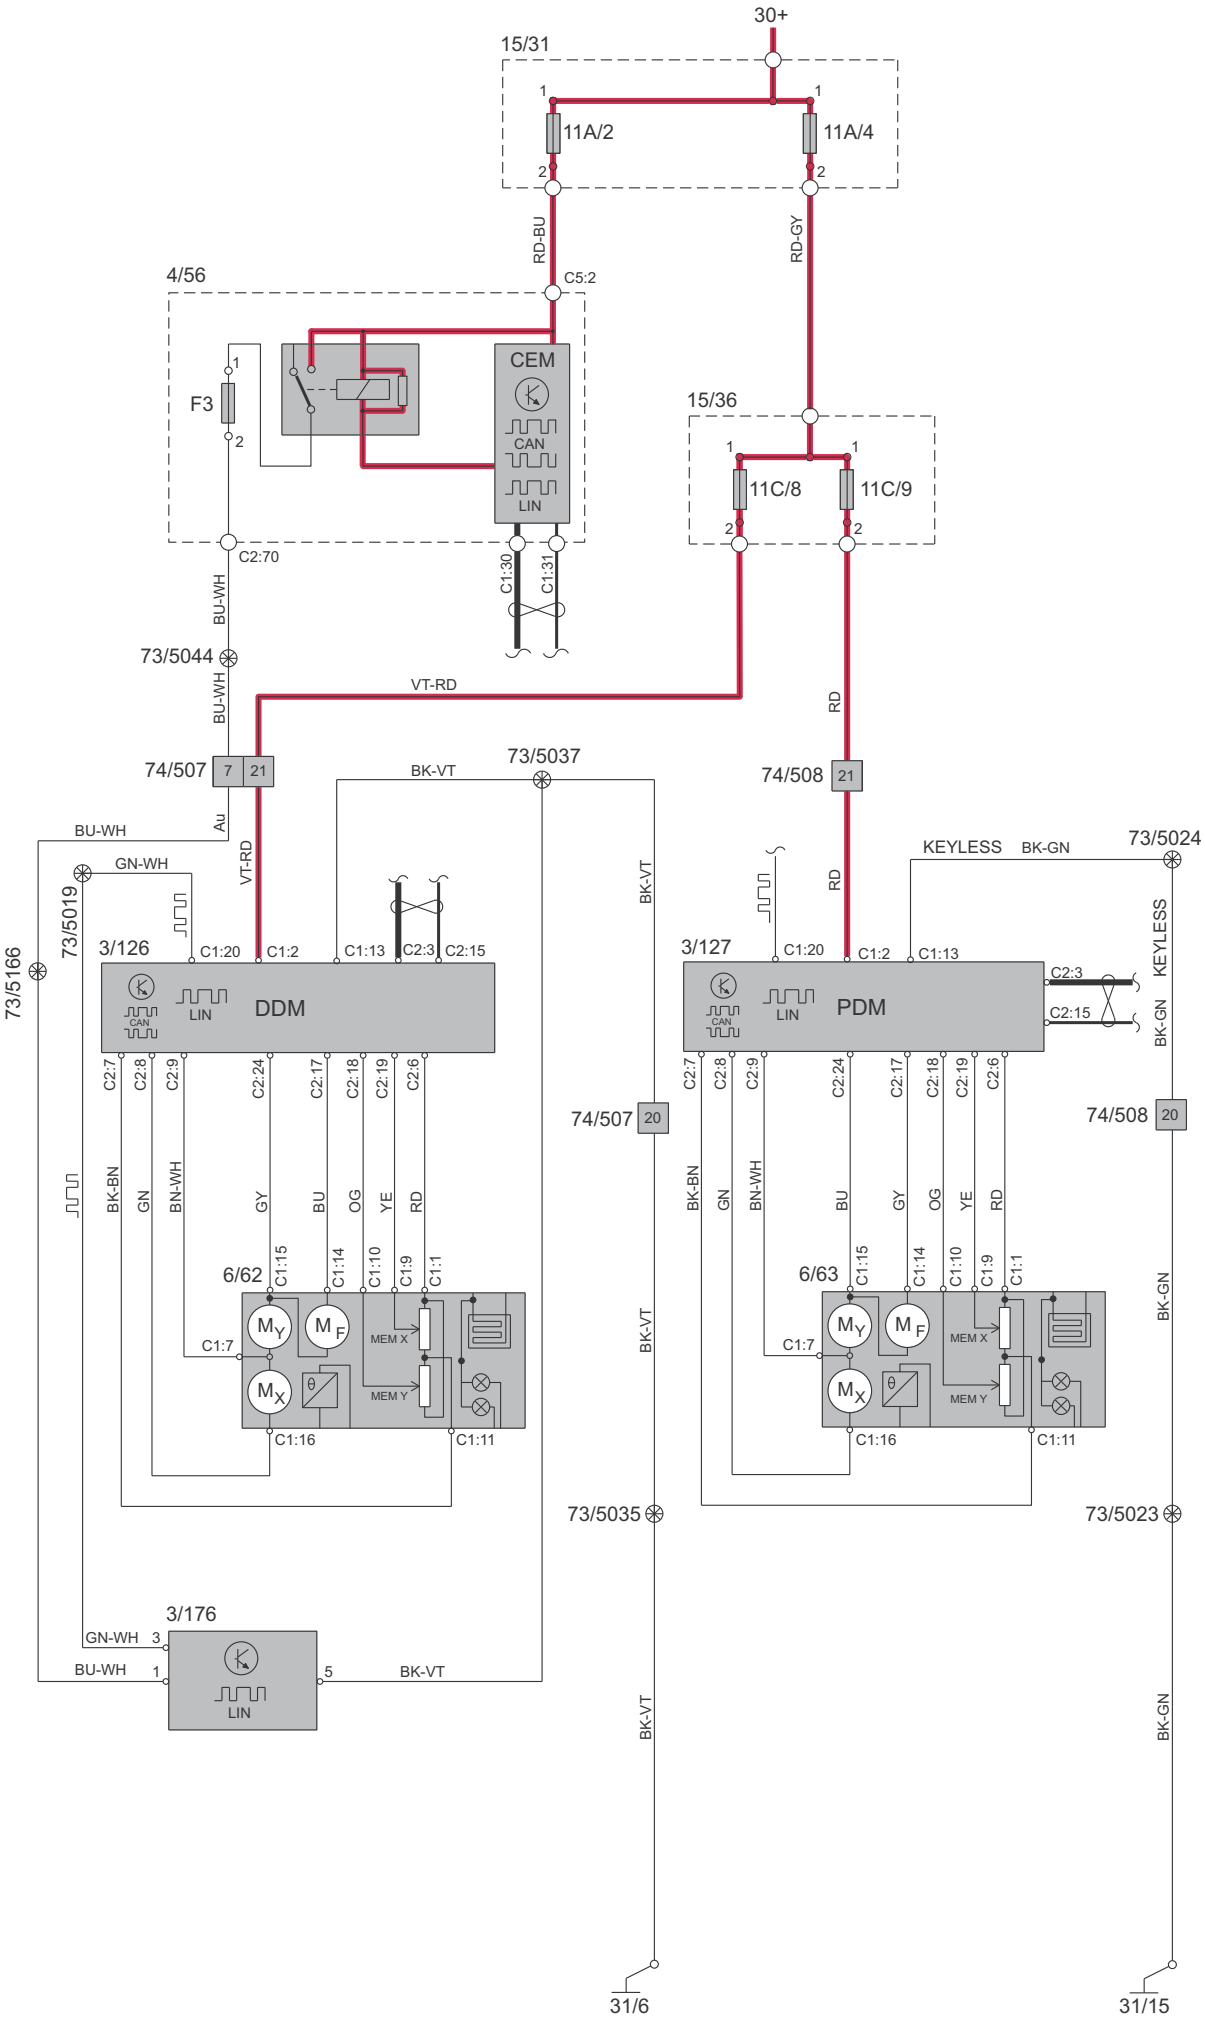
30+
15/31
11A/2
11A/4
RD-BU
RD-GY
4/56
C5:2
F3
CEM
CAN
LIN
15/36
11C/8
11C/9
C2:70
C1:30
C1:31
BU-WH
73/5044
VT-RD
RD
74/507
7
21
74/508
21
BK-VT
73/5037
BU-WH
Au
GN-WH
73/5019
73/5166
KEYLESS
BK-GN
73/5024
3/126
C1:20
C1:2
C1:13
C2:3
C2:15
DDM
3/127
PDM
C2:7
C2:8
C2:9
C2:24
C2:17
C2:18
C2:19
C2:6
74/507
20
74/508
20
BK-BN
GN
BN-WH
GY
BU
OG
YE
RD
6/62
6/63
C1:15
C1:14
C1:10
C1:9
C1:1
C1:7
MEM X
MEM Y
C1:16
C1:11
73/5035
73/5023
3/176
GN-WH
BU-WH
BK-VT
31/6
31/15
C31W036

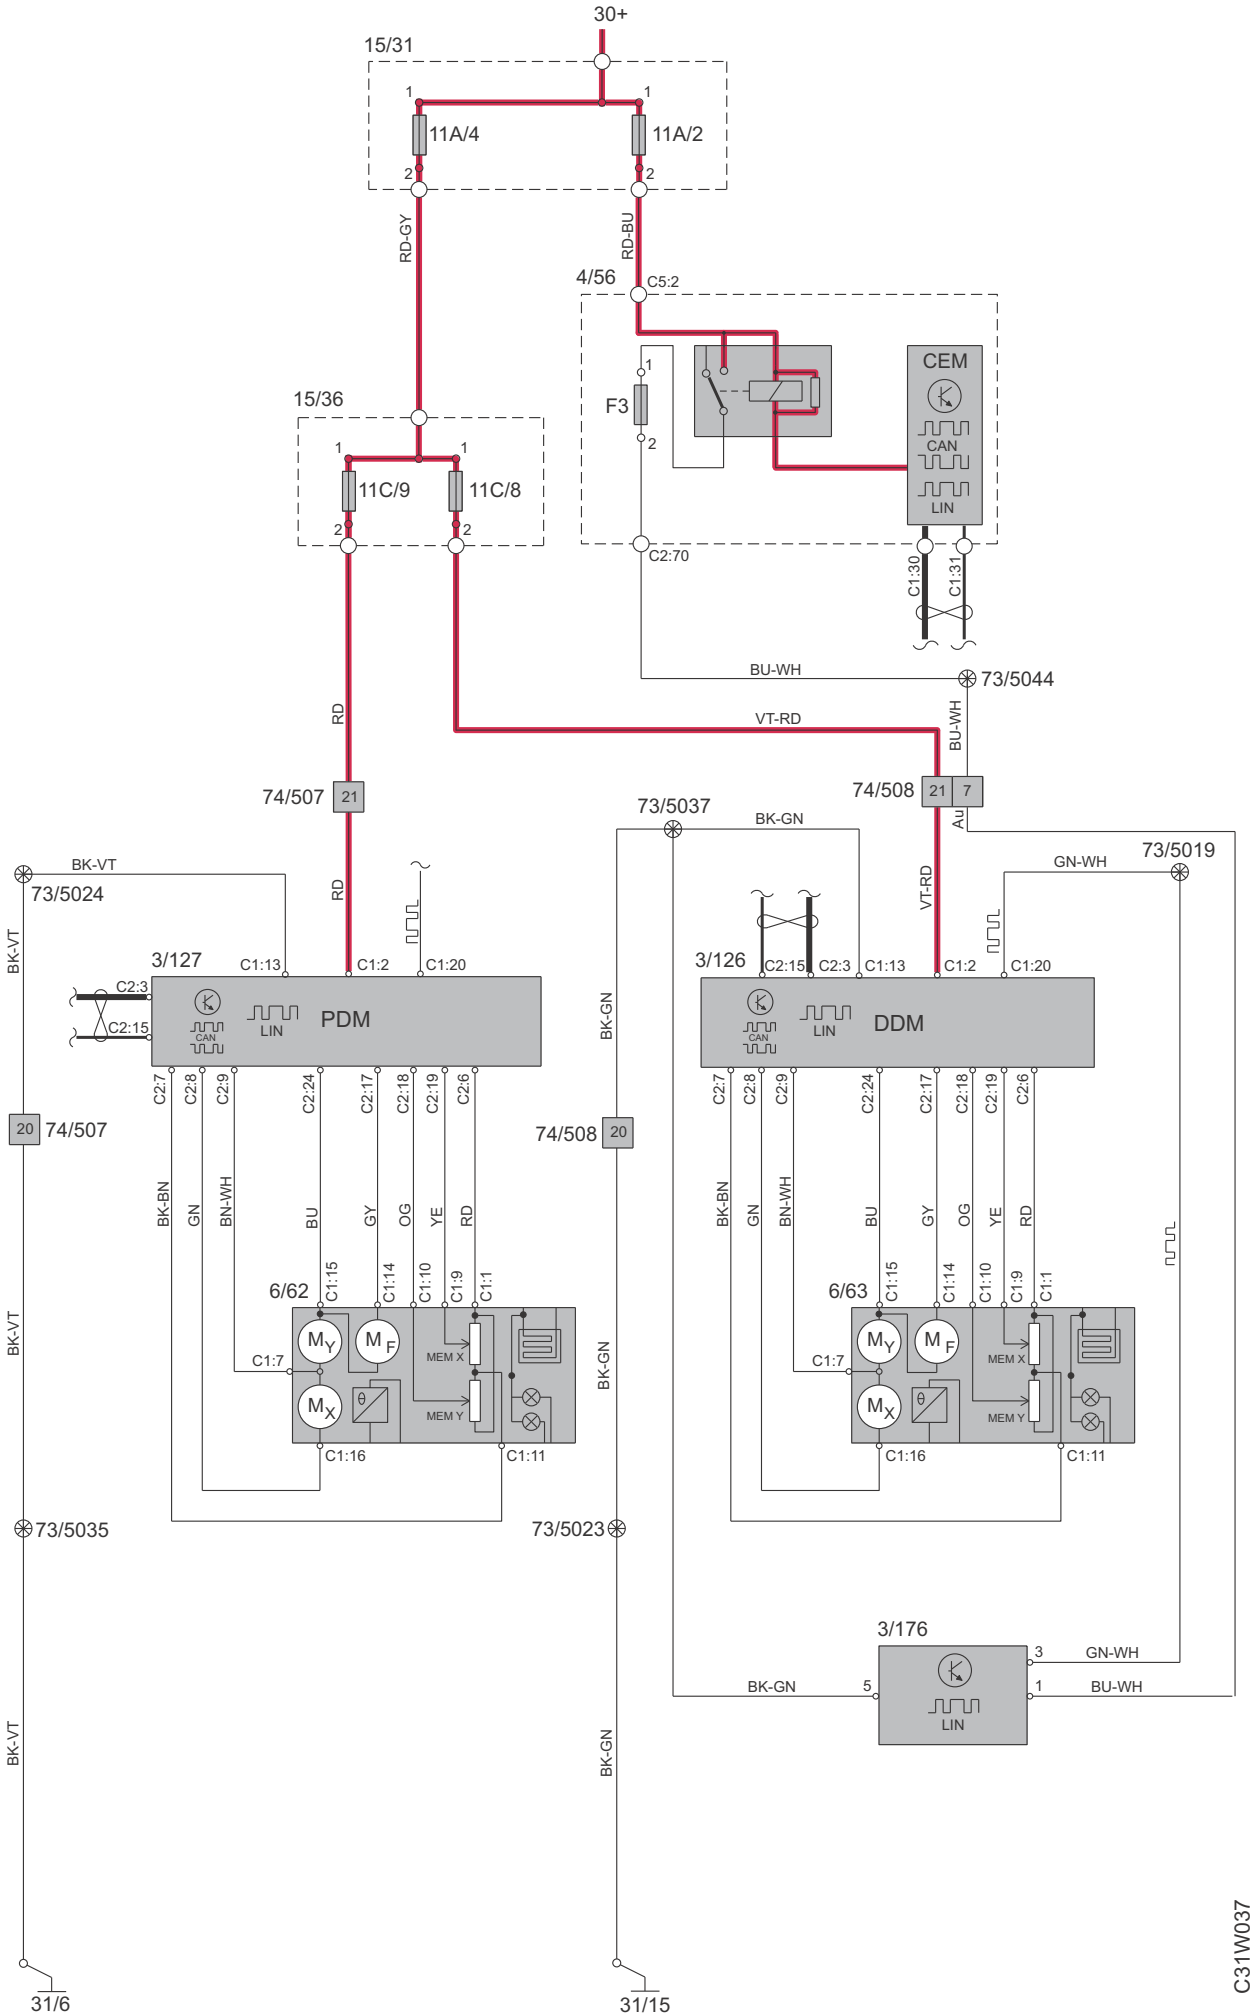
30+
15/31
11A/4
11A/2
RD-GY
RD-BU
4/56
C5:2
F3
CEM
CAN
LIN
15/36
11C/9
11C/8
C2:70
C1:30
C1:31
BU-WH
73/5044
RD
VT-RD
BU-WH
74/507
21
74/508
21
7
73/5037
BK-GN
73/5019
GN-WH
BK-VT
73/5024
3/127
C1:13
C1:2
C1:20
PDM
3/126
C2:15
C2:3
DDM
20
74/507
74/508
20
BK-BN
GN
BN-WH
BU
GY
OG
YE
RD
6/62
6/63
C1:7
MEM X
MEM Y
C1:16
C1:11
73/5035
73/5023
3/176
BK-GN
GN-WH
BU-WH
31/6
31/15
C31W037

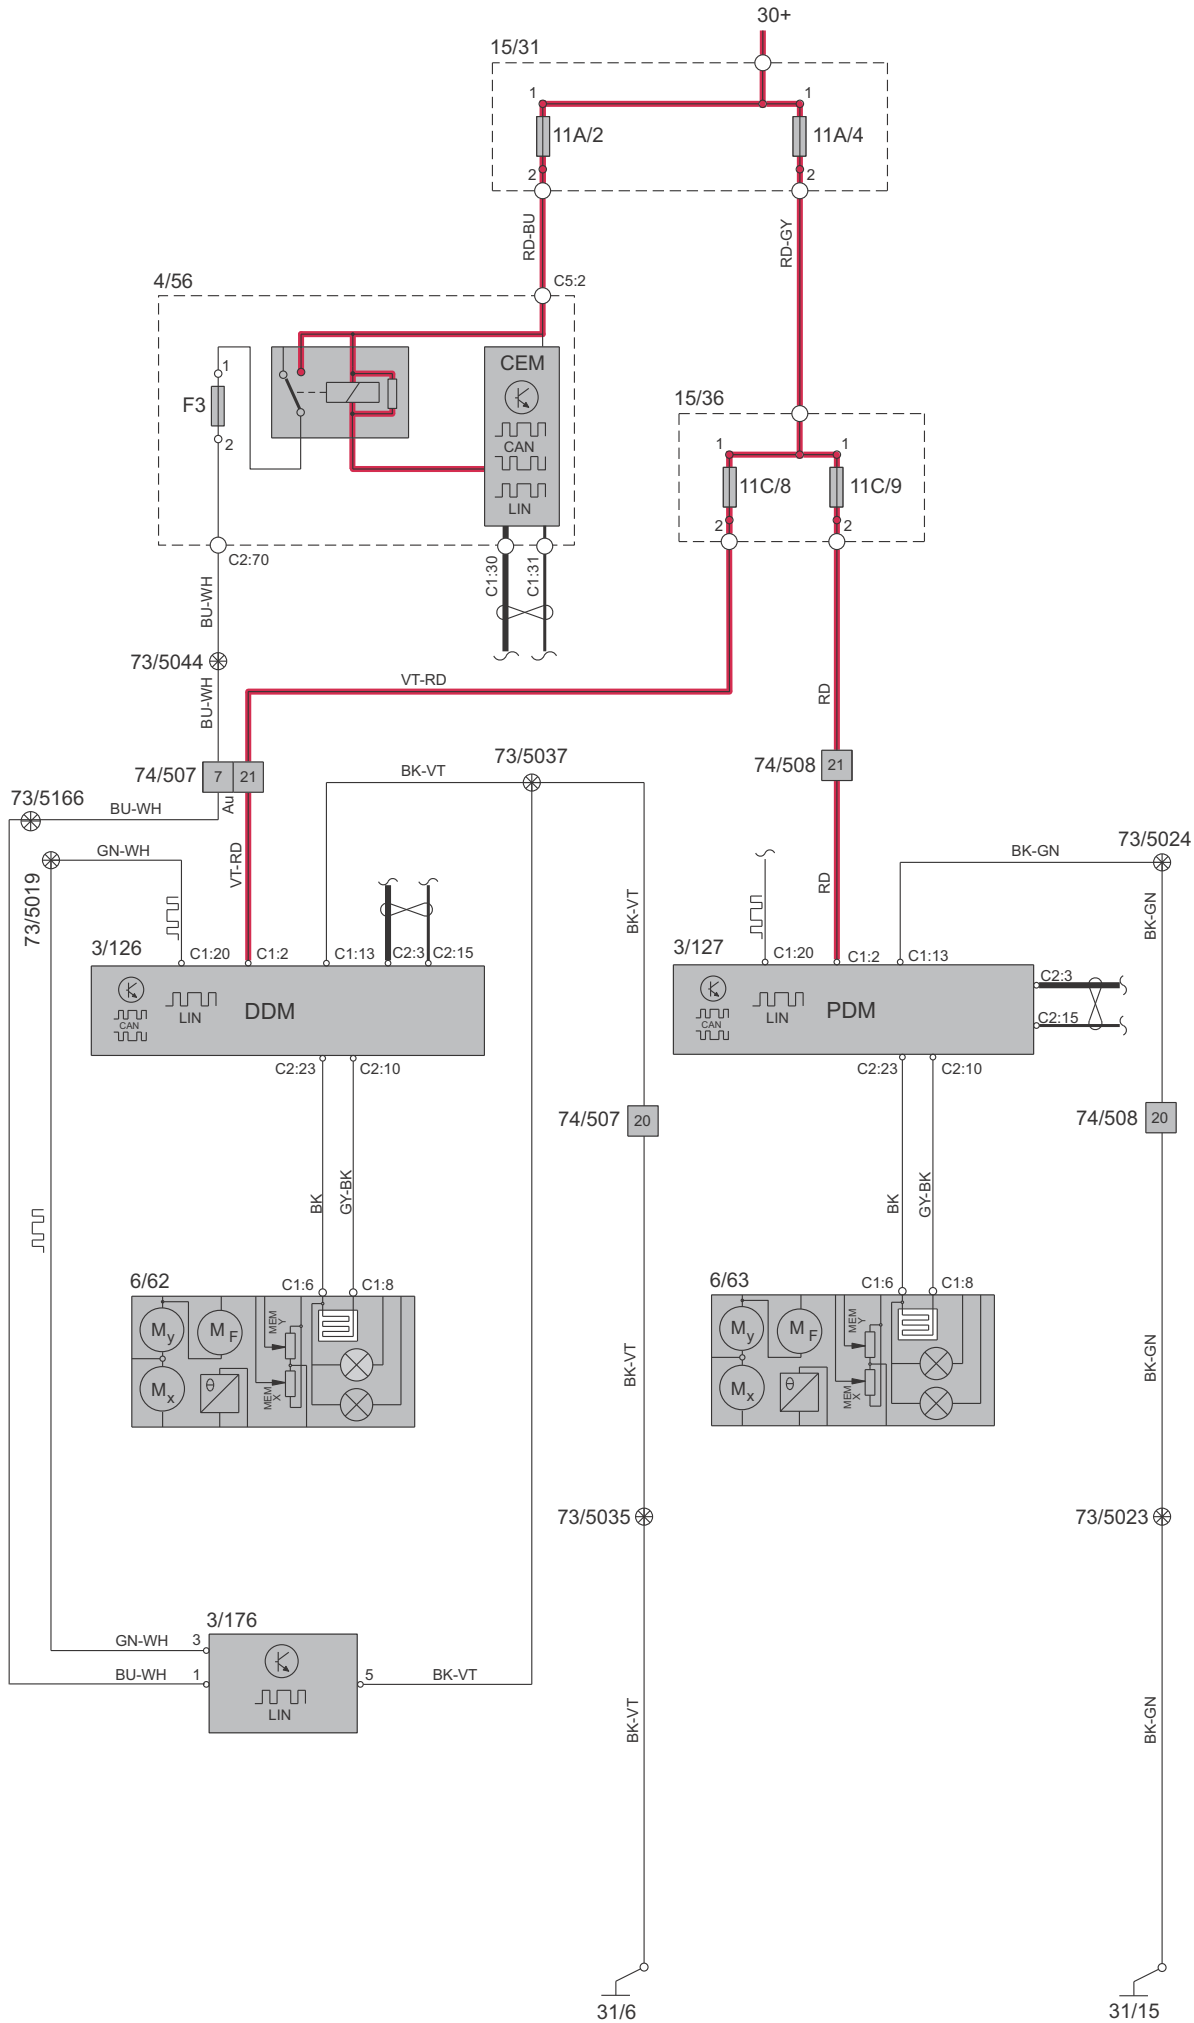
30+
15/31
11A/2
11A/4
RD-BU
RD-GY
4/56
C5:2
F3
CEM
CAN
LIN
15/36
11C/8
11C/9
C2:70
C1:30
C1:31
BU-WH
73/5044
VT-RD
RD
74/507
74/508
73/5037
BK-VT
73/5166
BU-WH
GN-WH
73/5019
73/5024
BK-GN
3/126
C1:20
C1:2
C1:13
C2:3
C2:15
DDM
3/127
PDM
C2:23
C2:10
74/507 20
74/508 20
BK
GY-BK
6/62
6/63
C1:6
C1:8
73/5035
73/5023
3/176
31/6
31/15
C31W038

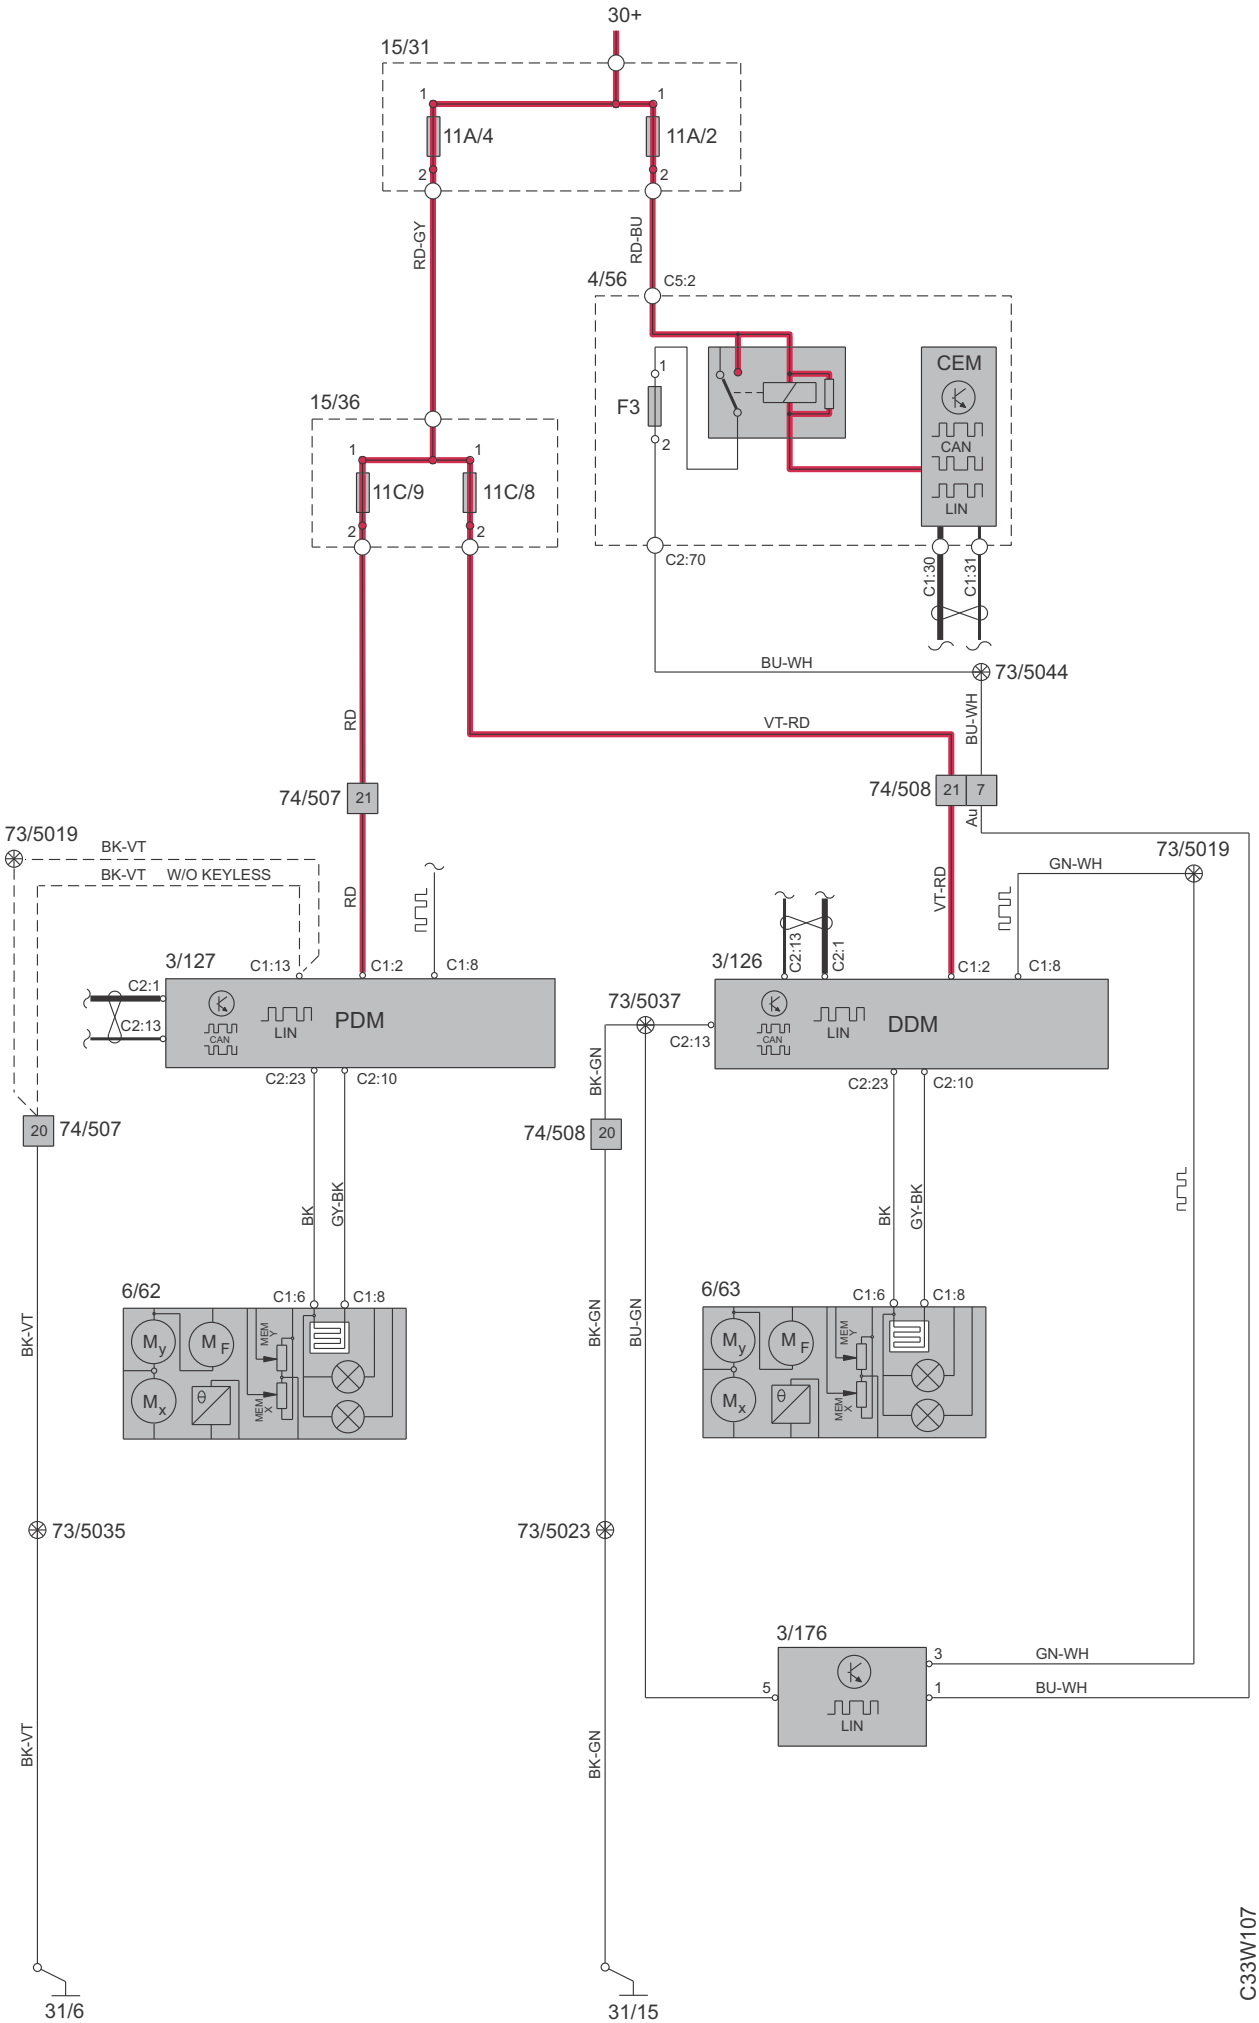
30+
15/31
11A/4
11A/2
RD-GY
RD-BU
4/56
C5:2
F3
CEM
CAN
LIN
15/36
11C/9
11C/8
C2:70
C1:30
C1:31
BU-WH
73/5044
RD
VT-RD
BU-WH
74/507
21
74/508
21
7
Au
73/5019
BK-VT
BK-VT W/O KEYLESS
GN-WH
3/127
C1:13
C1:2
C1:8
C2:1
C2:13
PDM
3/126
DDM
73/5037
C2:23
C2:10
20
74/507
74/508
BK
GY-BK
6/62
6/63
BK-GN
BU-GN
73/5035
73/5023
3/176
GN-WH
BU-WH
31/6
31/15
C33W107

Group 84 Exterior decorative elements, etc.
Blind spot information system LHD

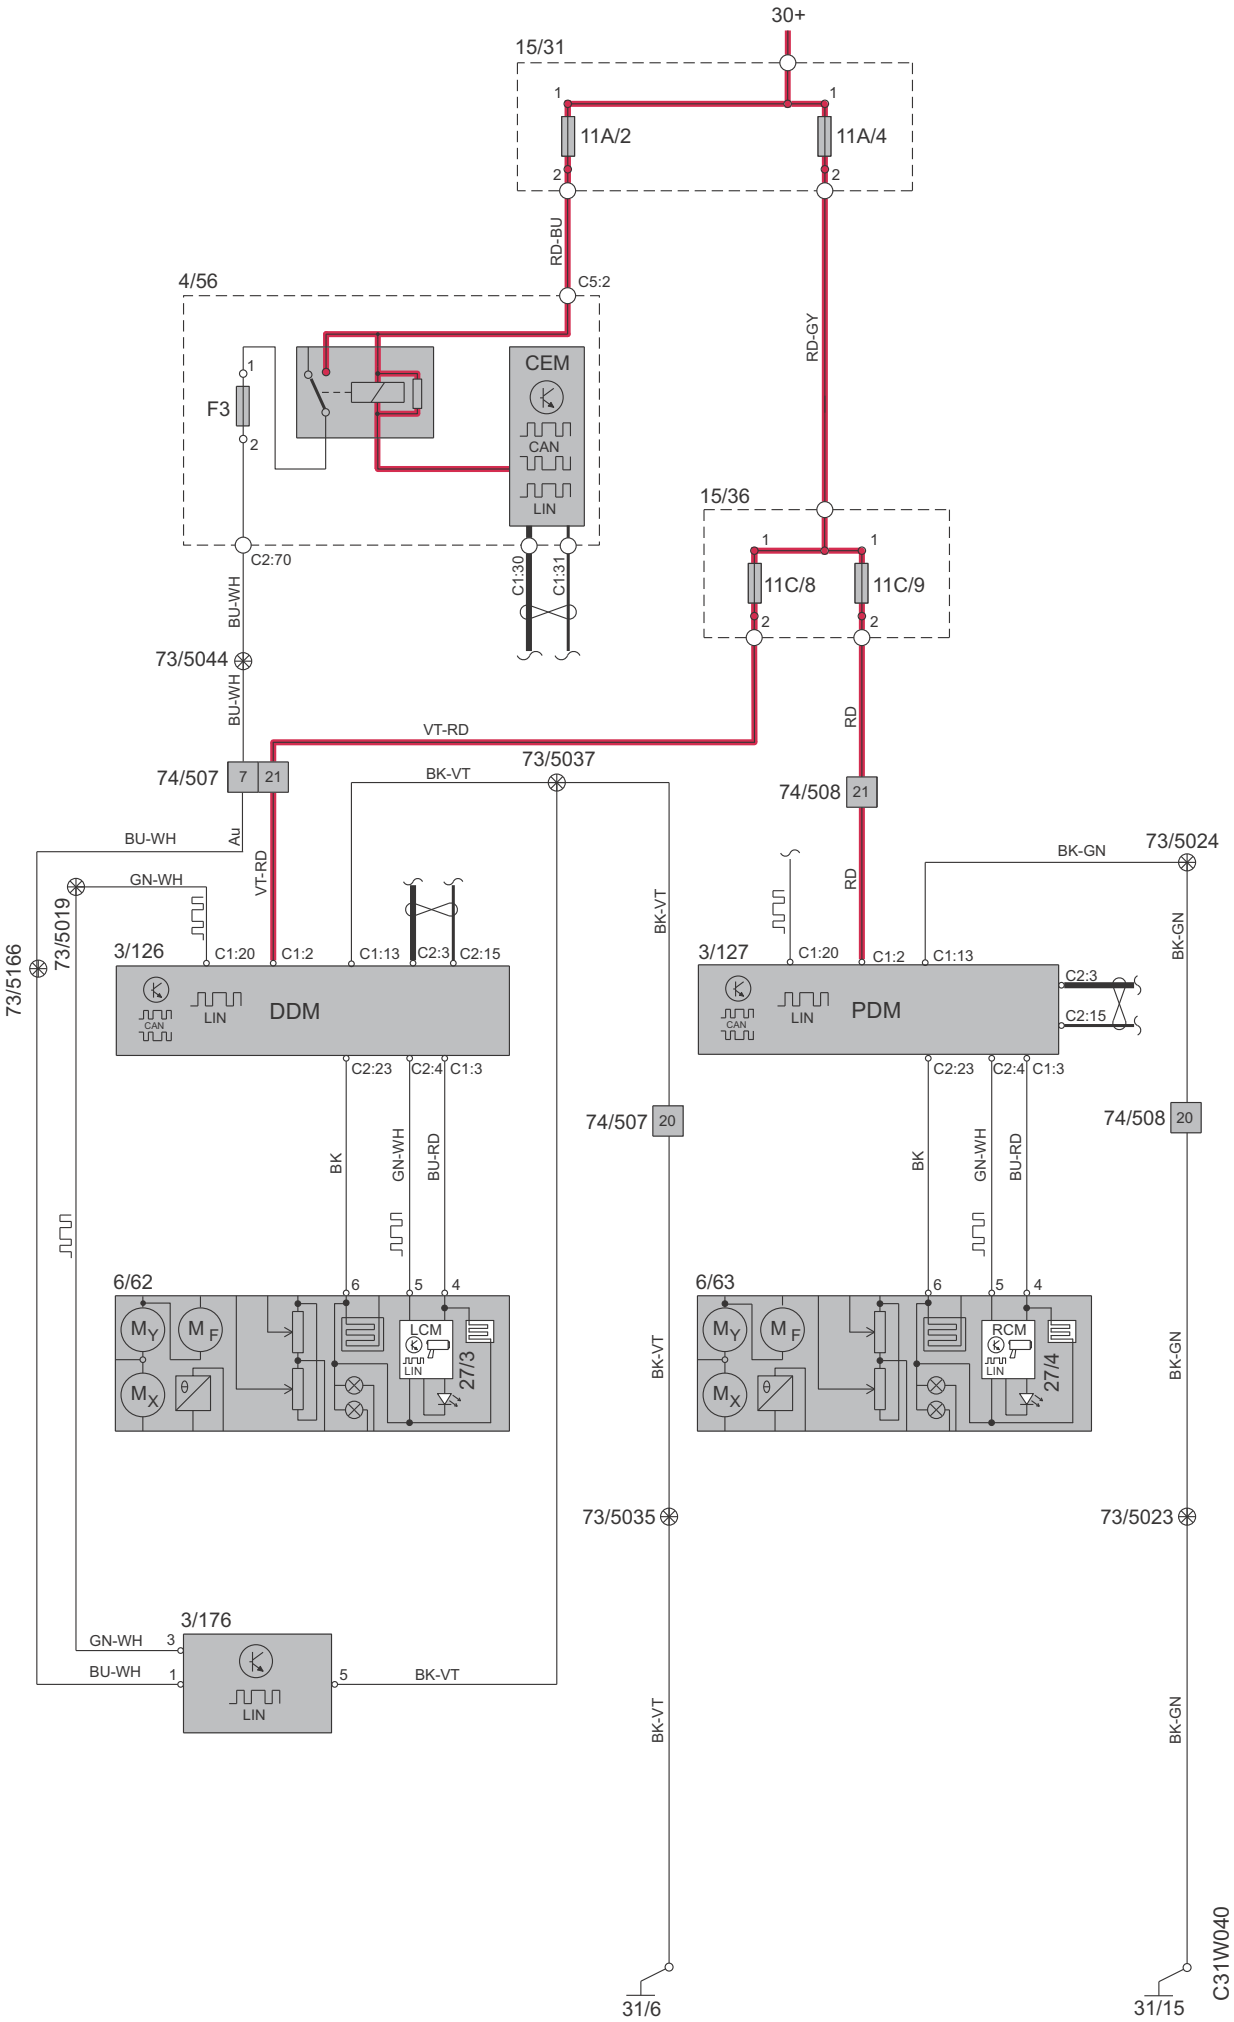

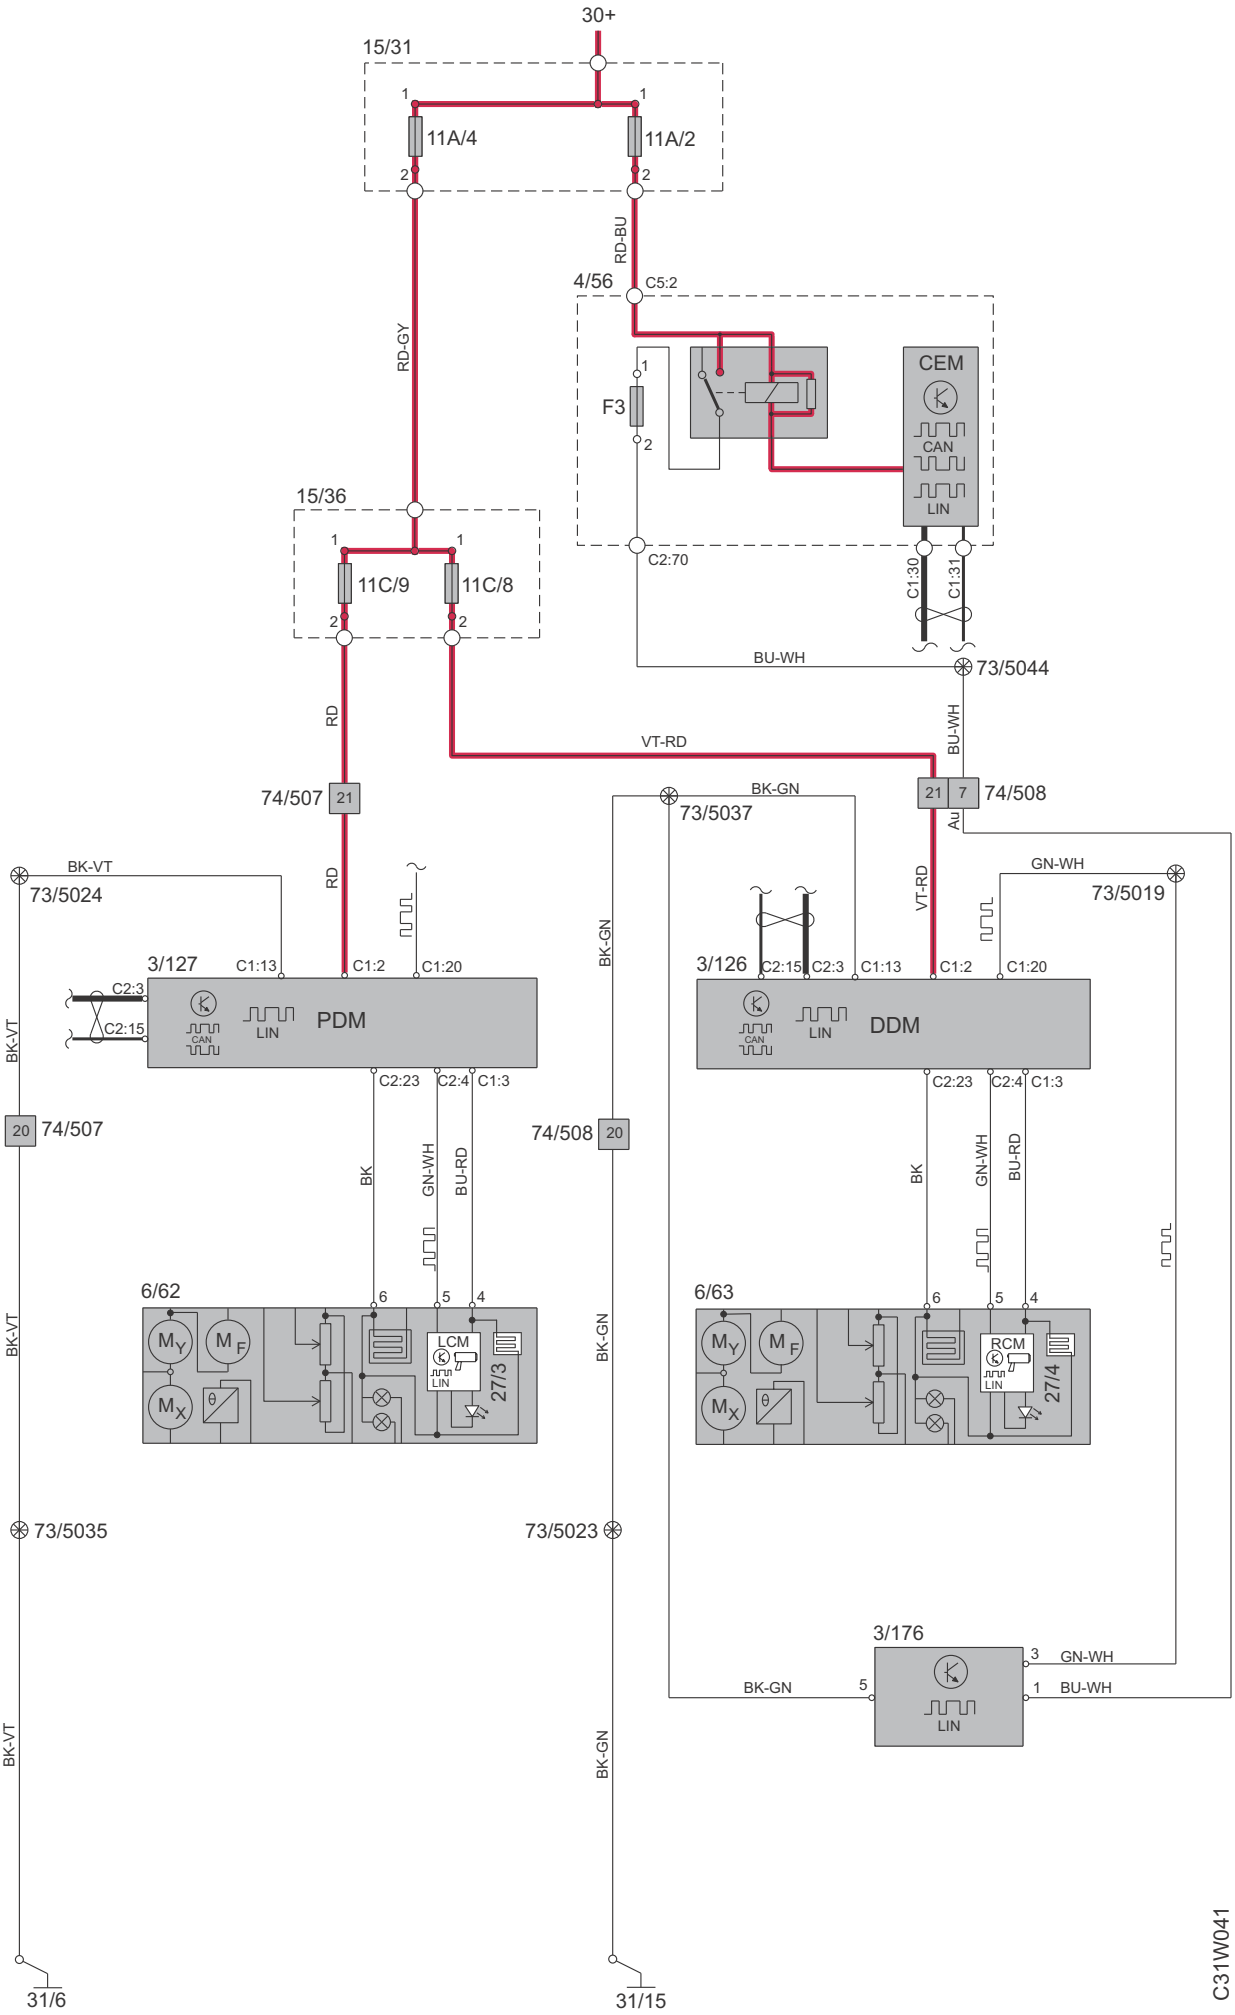
30+
15/31
11A/4
11A/2
RD-BU
4/56
C5:2
RD-GY
F3
CEM
CAN
LIN
15/36
11C/9
11C/8
C2:70
C1:30
C1:31
BU-WH
73/5044
RD
VT-RD
BU-WH
74/507
74/508
BK-GN
73/5037
BK-VT
73/5024
GN-WH
73/5019
3/127
PDM
3/126
DDM
C2:3
C2:15
C1:13
C1:2
C1:20
C2:23
C2:4
C1:3
BK
GN-WH
BU-RD
6/62
6/63
LCM
RCM
27/3
27/4
73/5035
73/5023
3/176
31/6
31/15
C31W041

Group 84 Exterior decorative elements, etc.
Heated windshield LHD

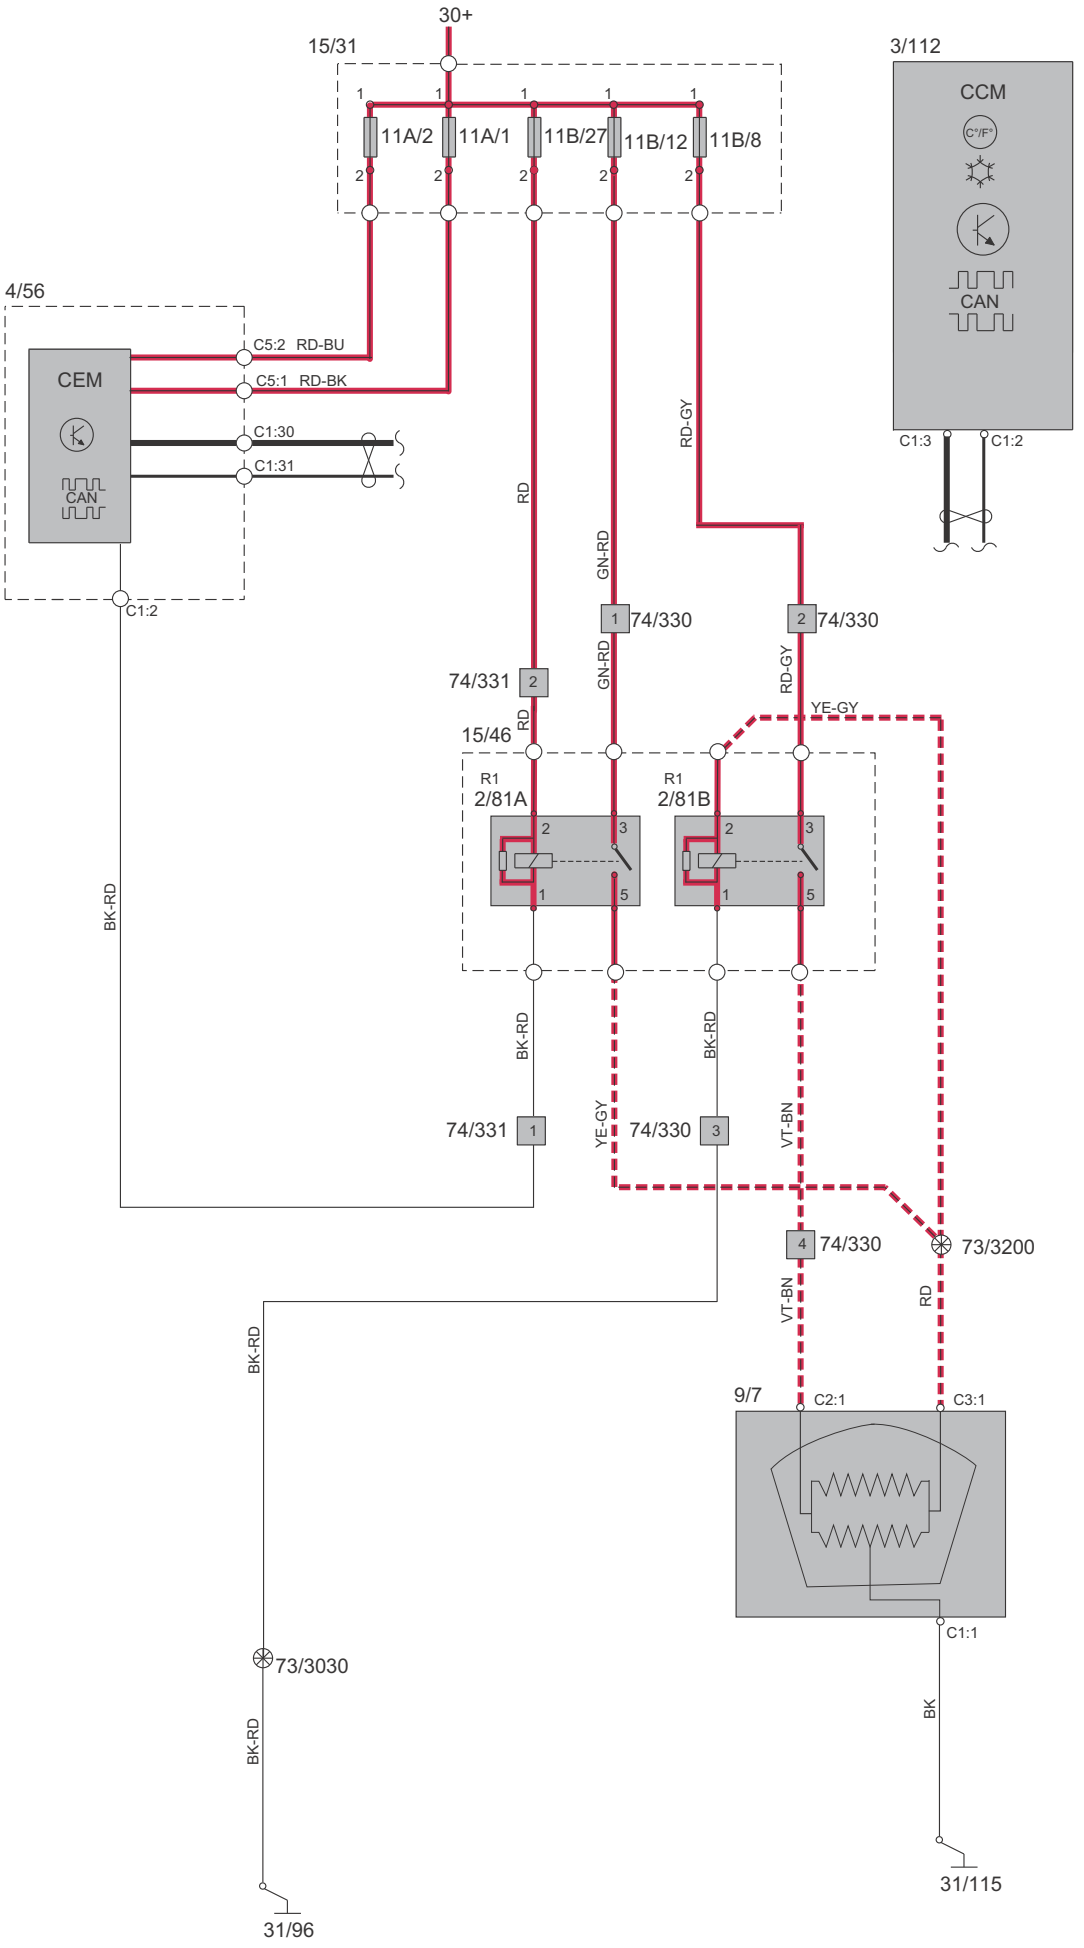

C34W059

Group 84 Exterior decorative elements, etc.
Heated windshield RHD

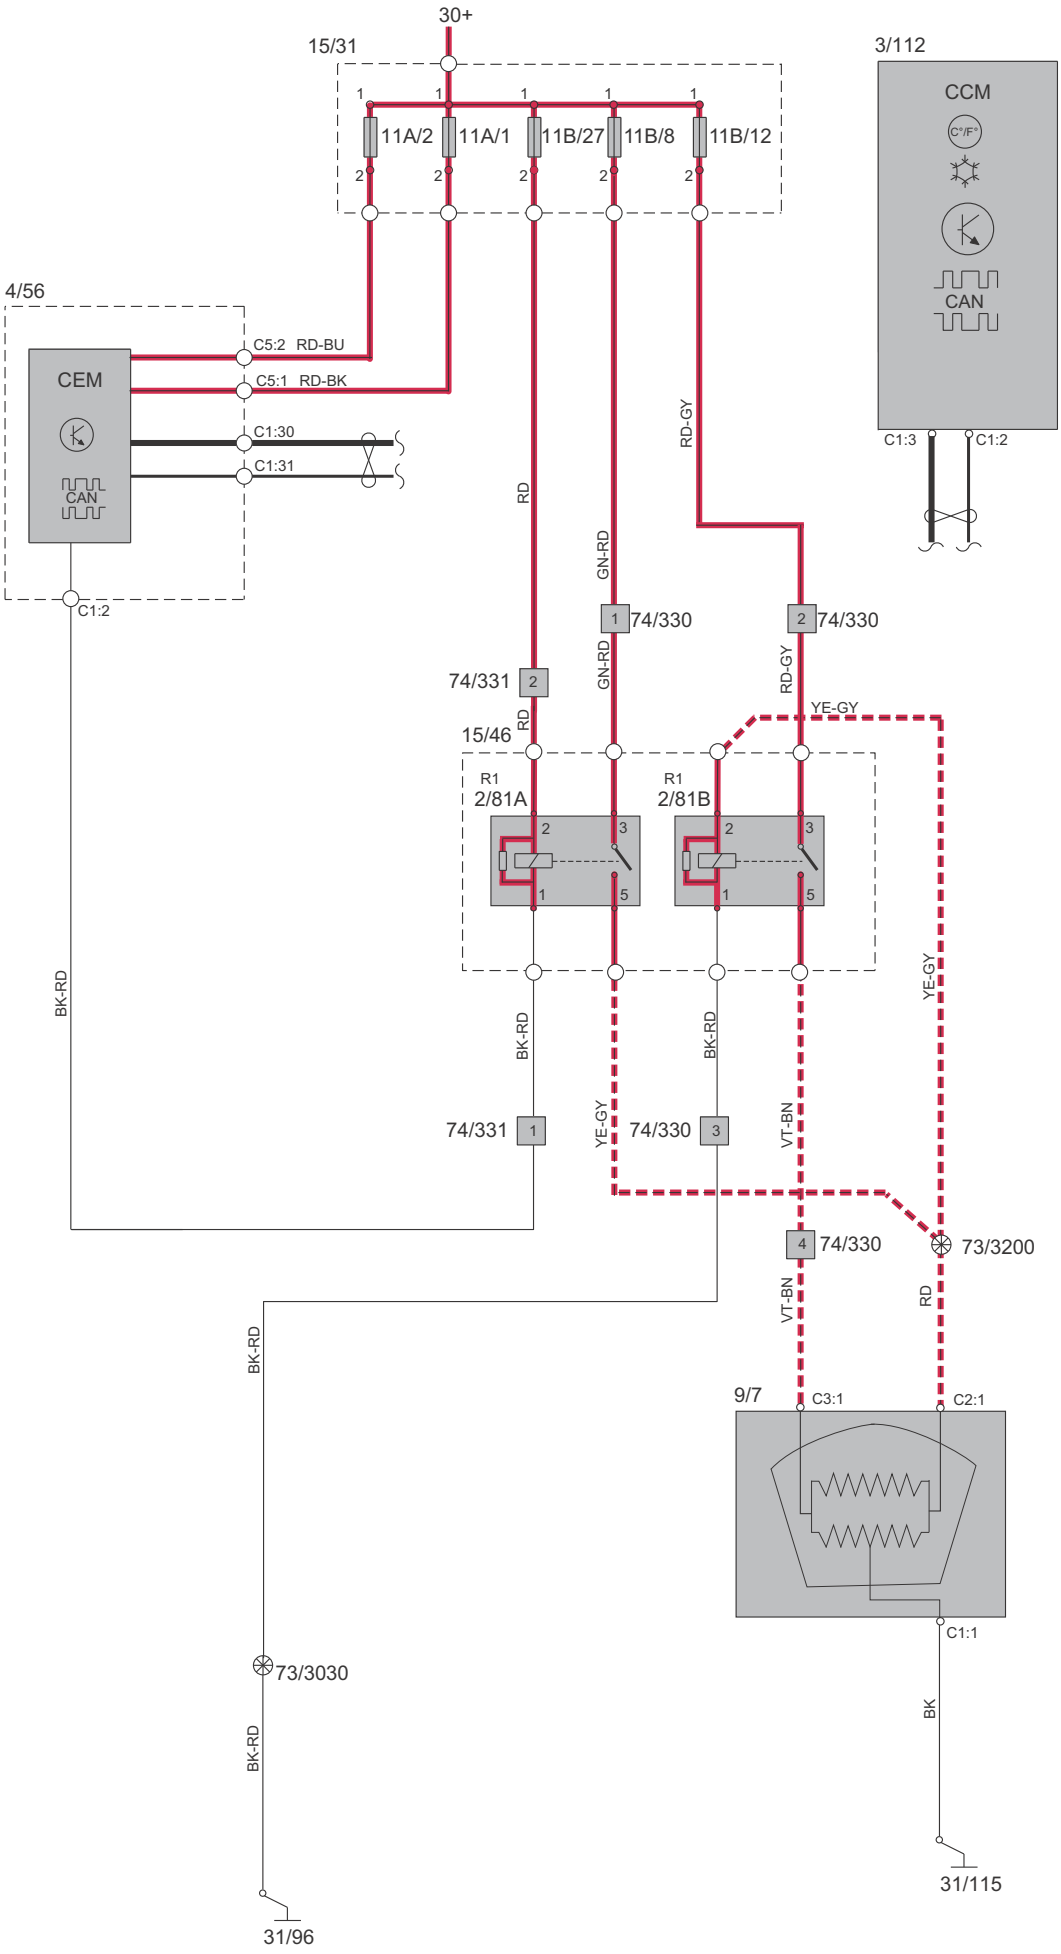

C34W060

Group 84 Exterior decorative elements, etc.
Heated rear window

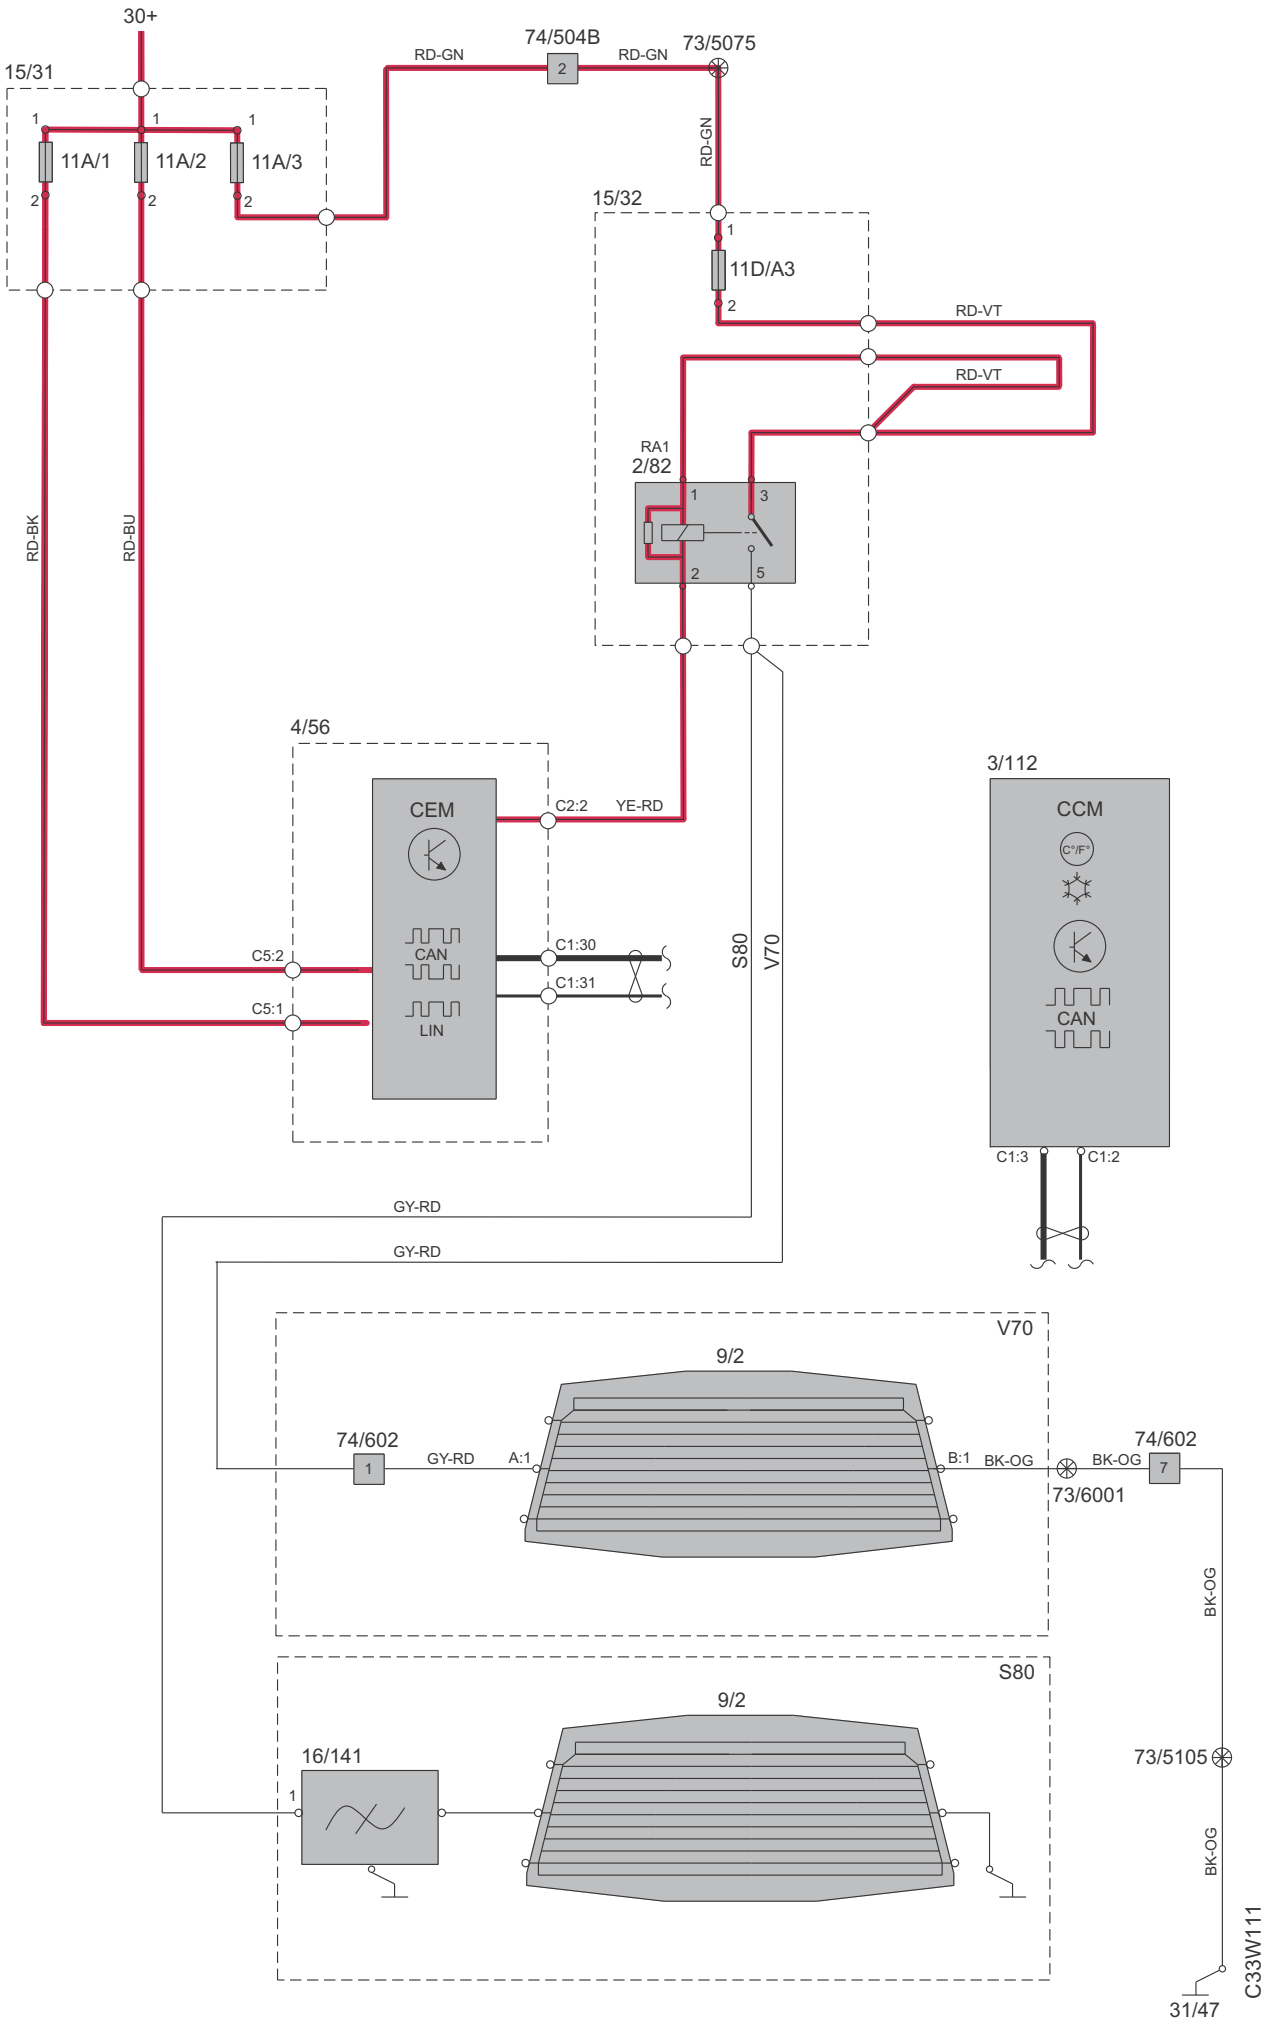

Group 85 Interior equipment
Power driver's seat with memory function LHD

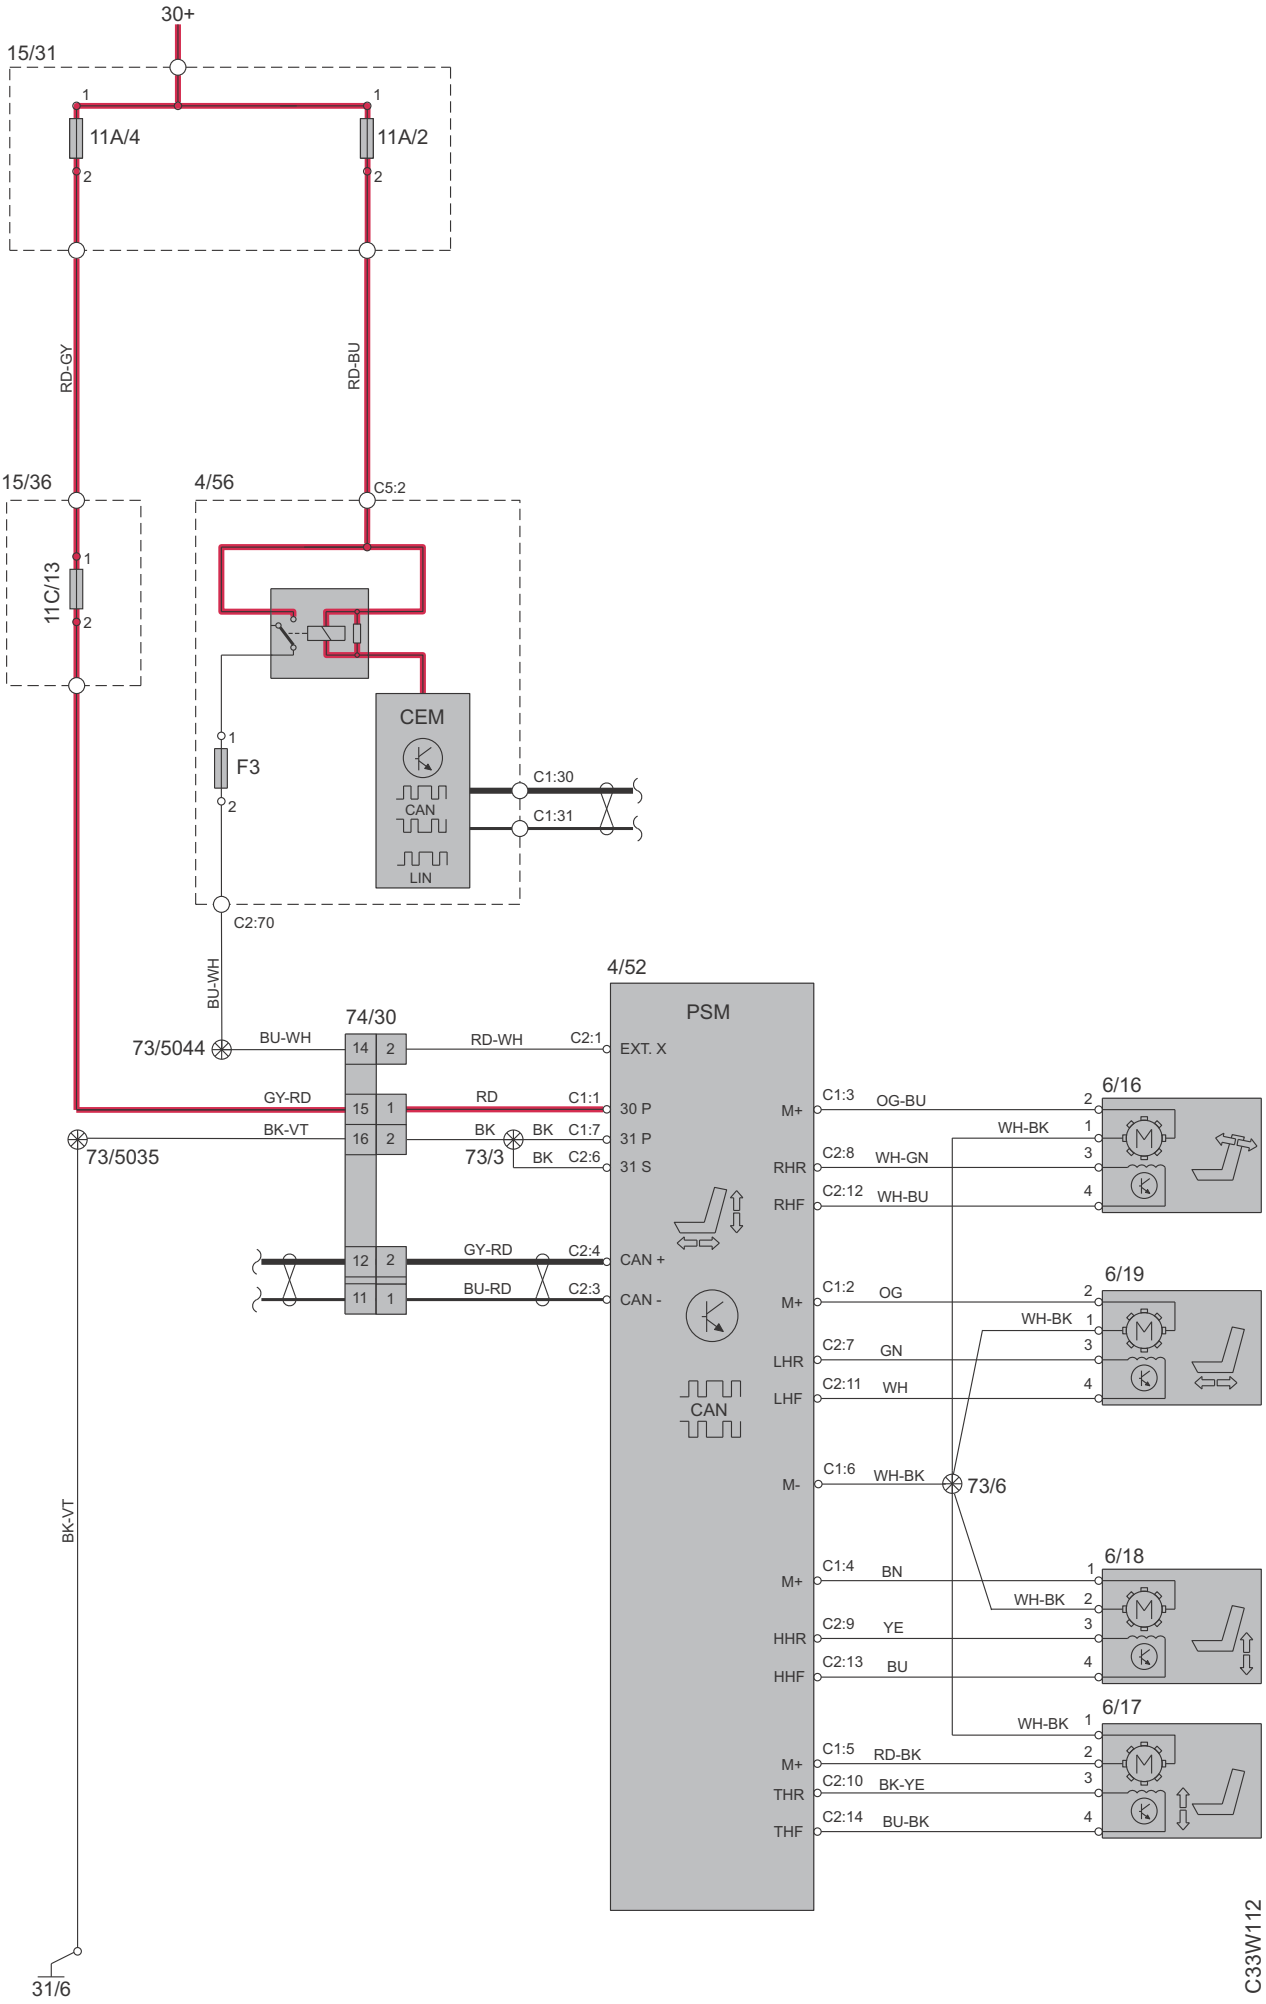

Group 85 Interior equipment
Power driver’s seat with memory function RHD

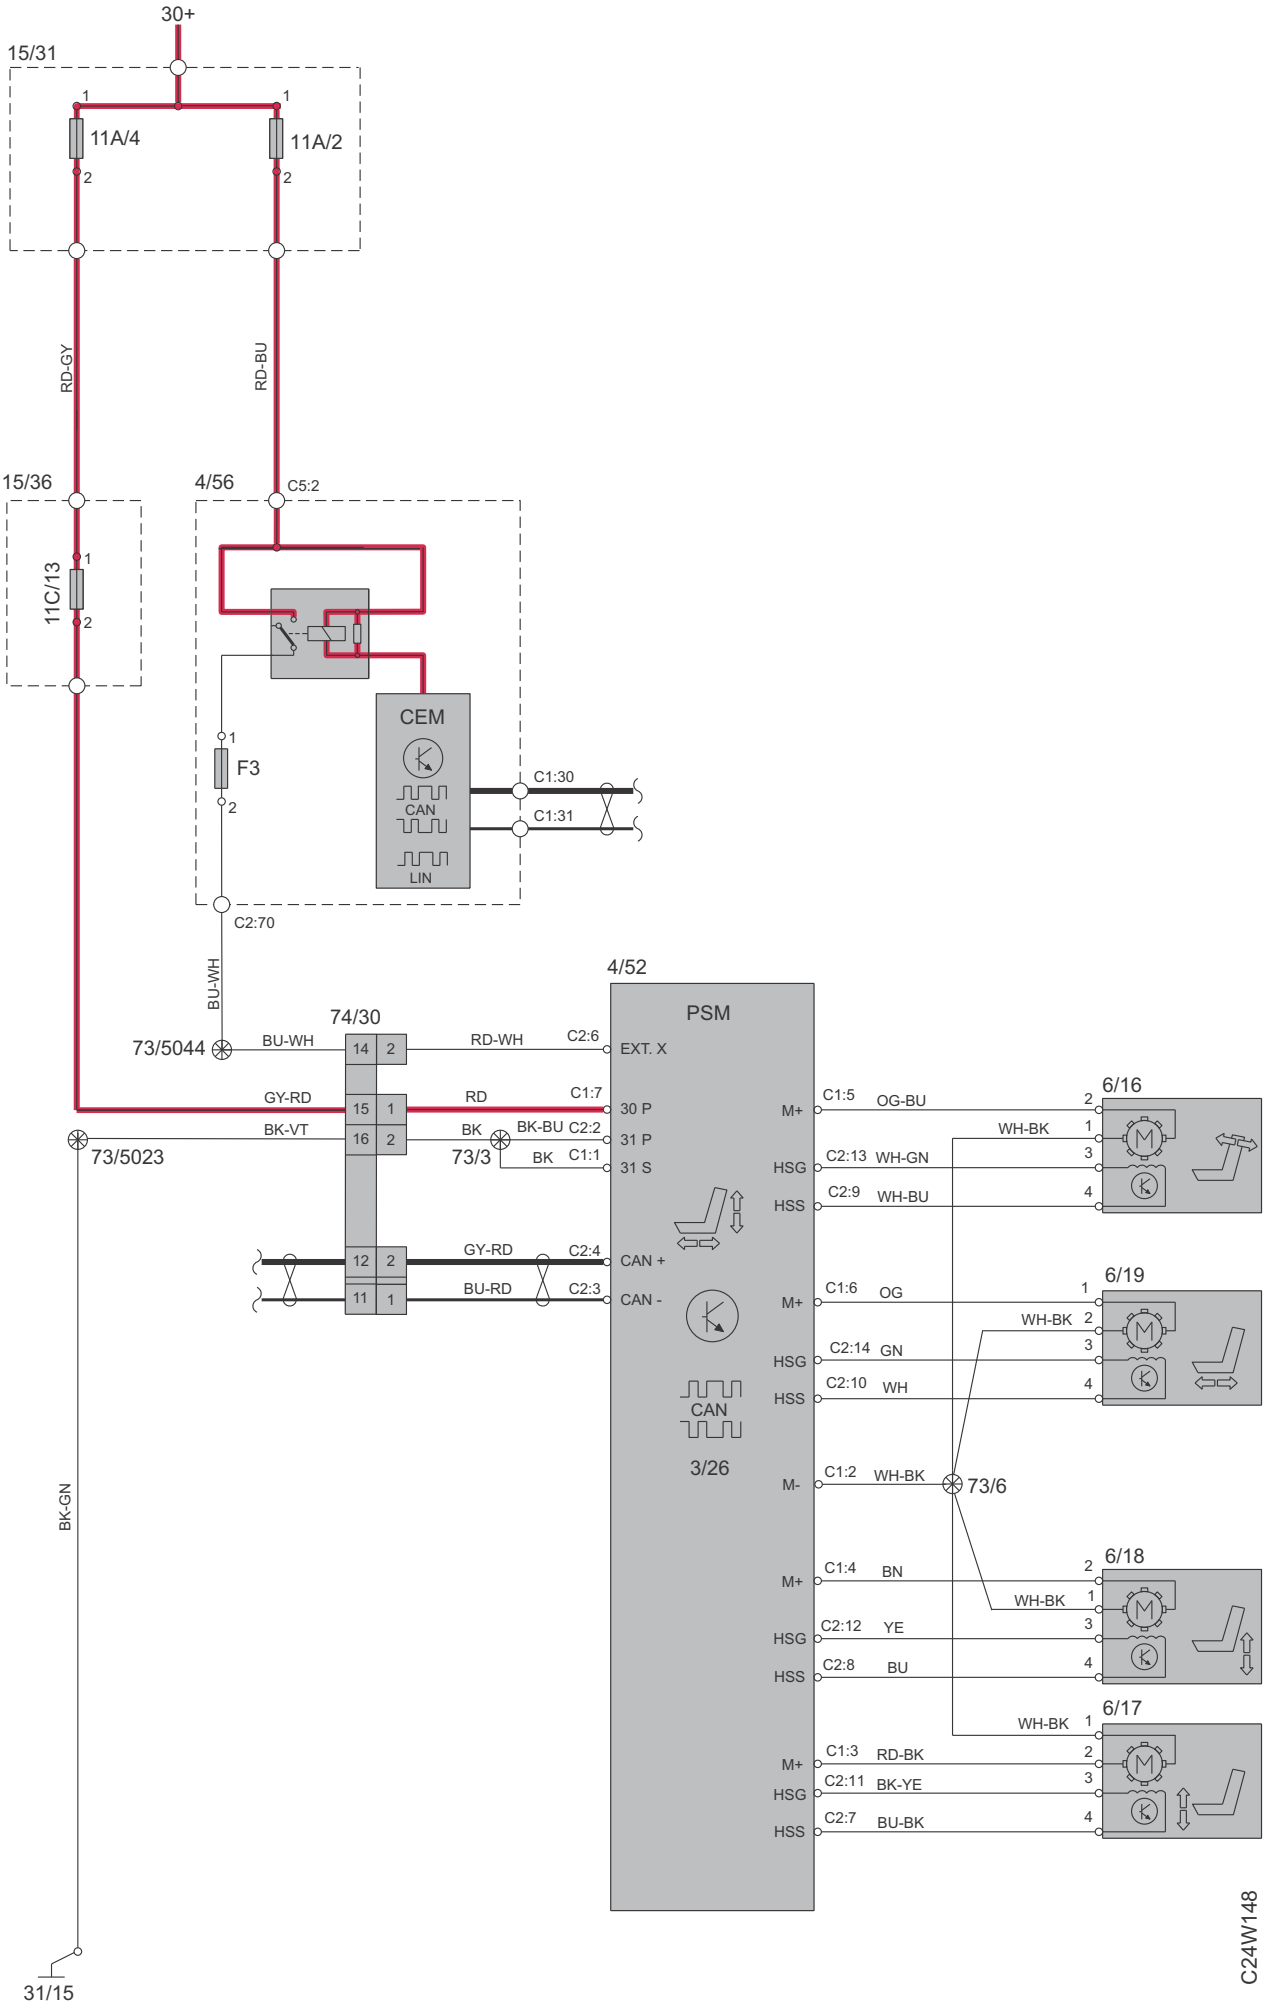

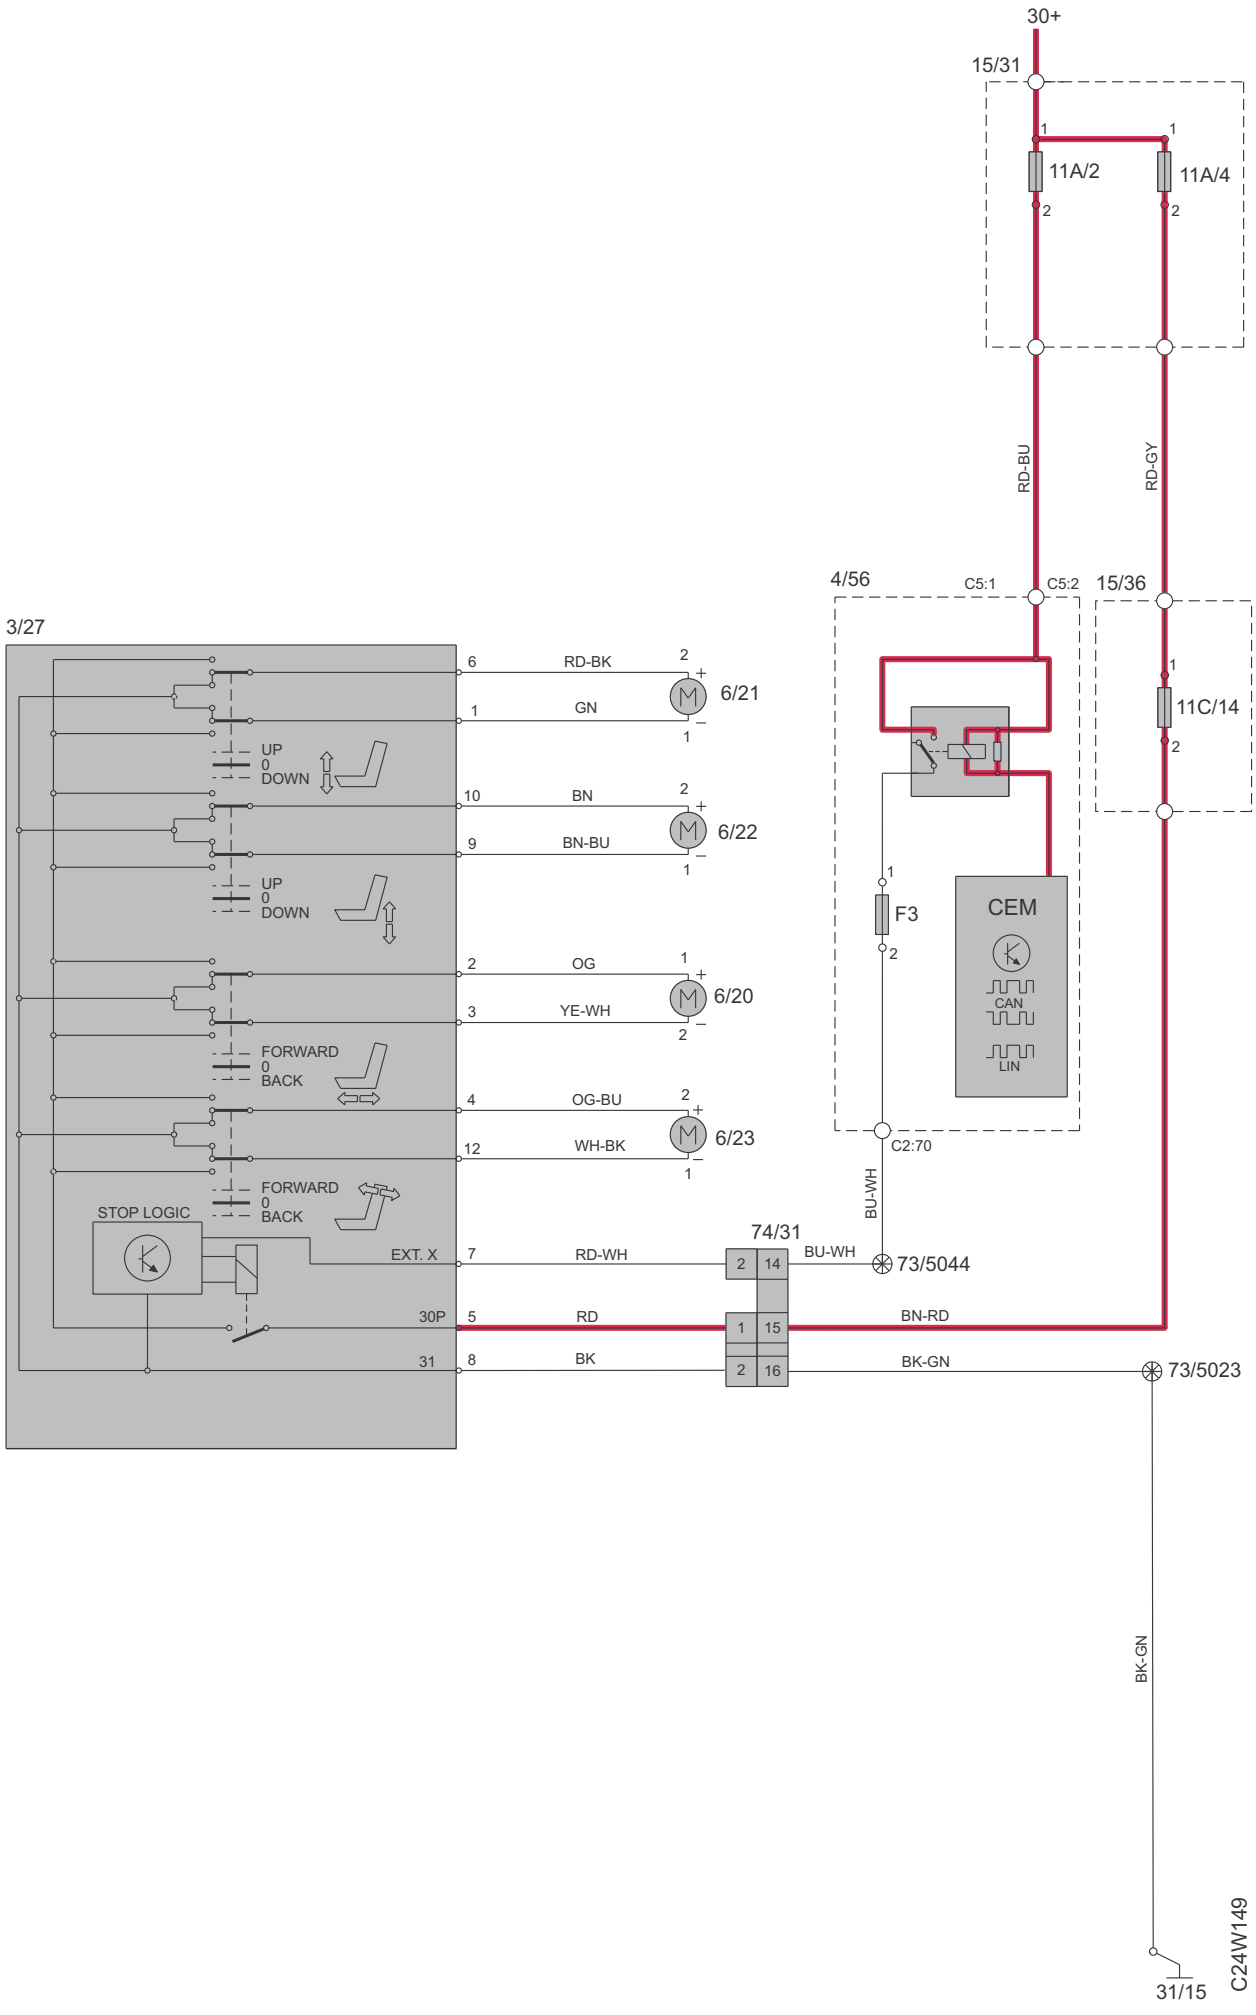
30+
15/31
11A/2
11A/4
RD-BU
RD-GY
4/56
C5:1
C5:2
15/36
11C/14
3/27
6
RD-BK
6/21
1
GN
UP
0
DOWN
10
BN
6/22
9
BN-BU
UP
0
DOWN
2
OG
6/20
3
YE-WH
FORWARD
0
BACK
4
OG-BU
6/23
12
WH-BK
FORWARD
0
BACK
STOP LOGIC
EXT. X
7
RD-WH
30P
5
RD
31
8
BK
F3
CEM
CAN
LIN
C2:70
BU-WH
74/31
BU-WH
73/5044
BN-RD
BK-GN
73/5023
BK-GN
31/15
C24W149

Group 85 Interior equipment
Power passenger seat RHD

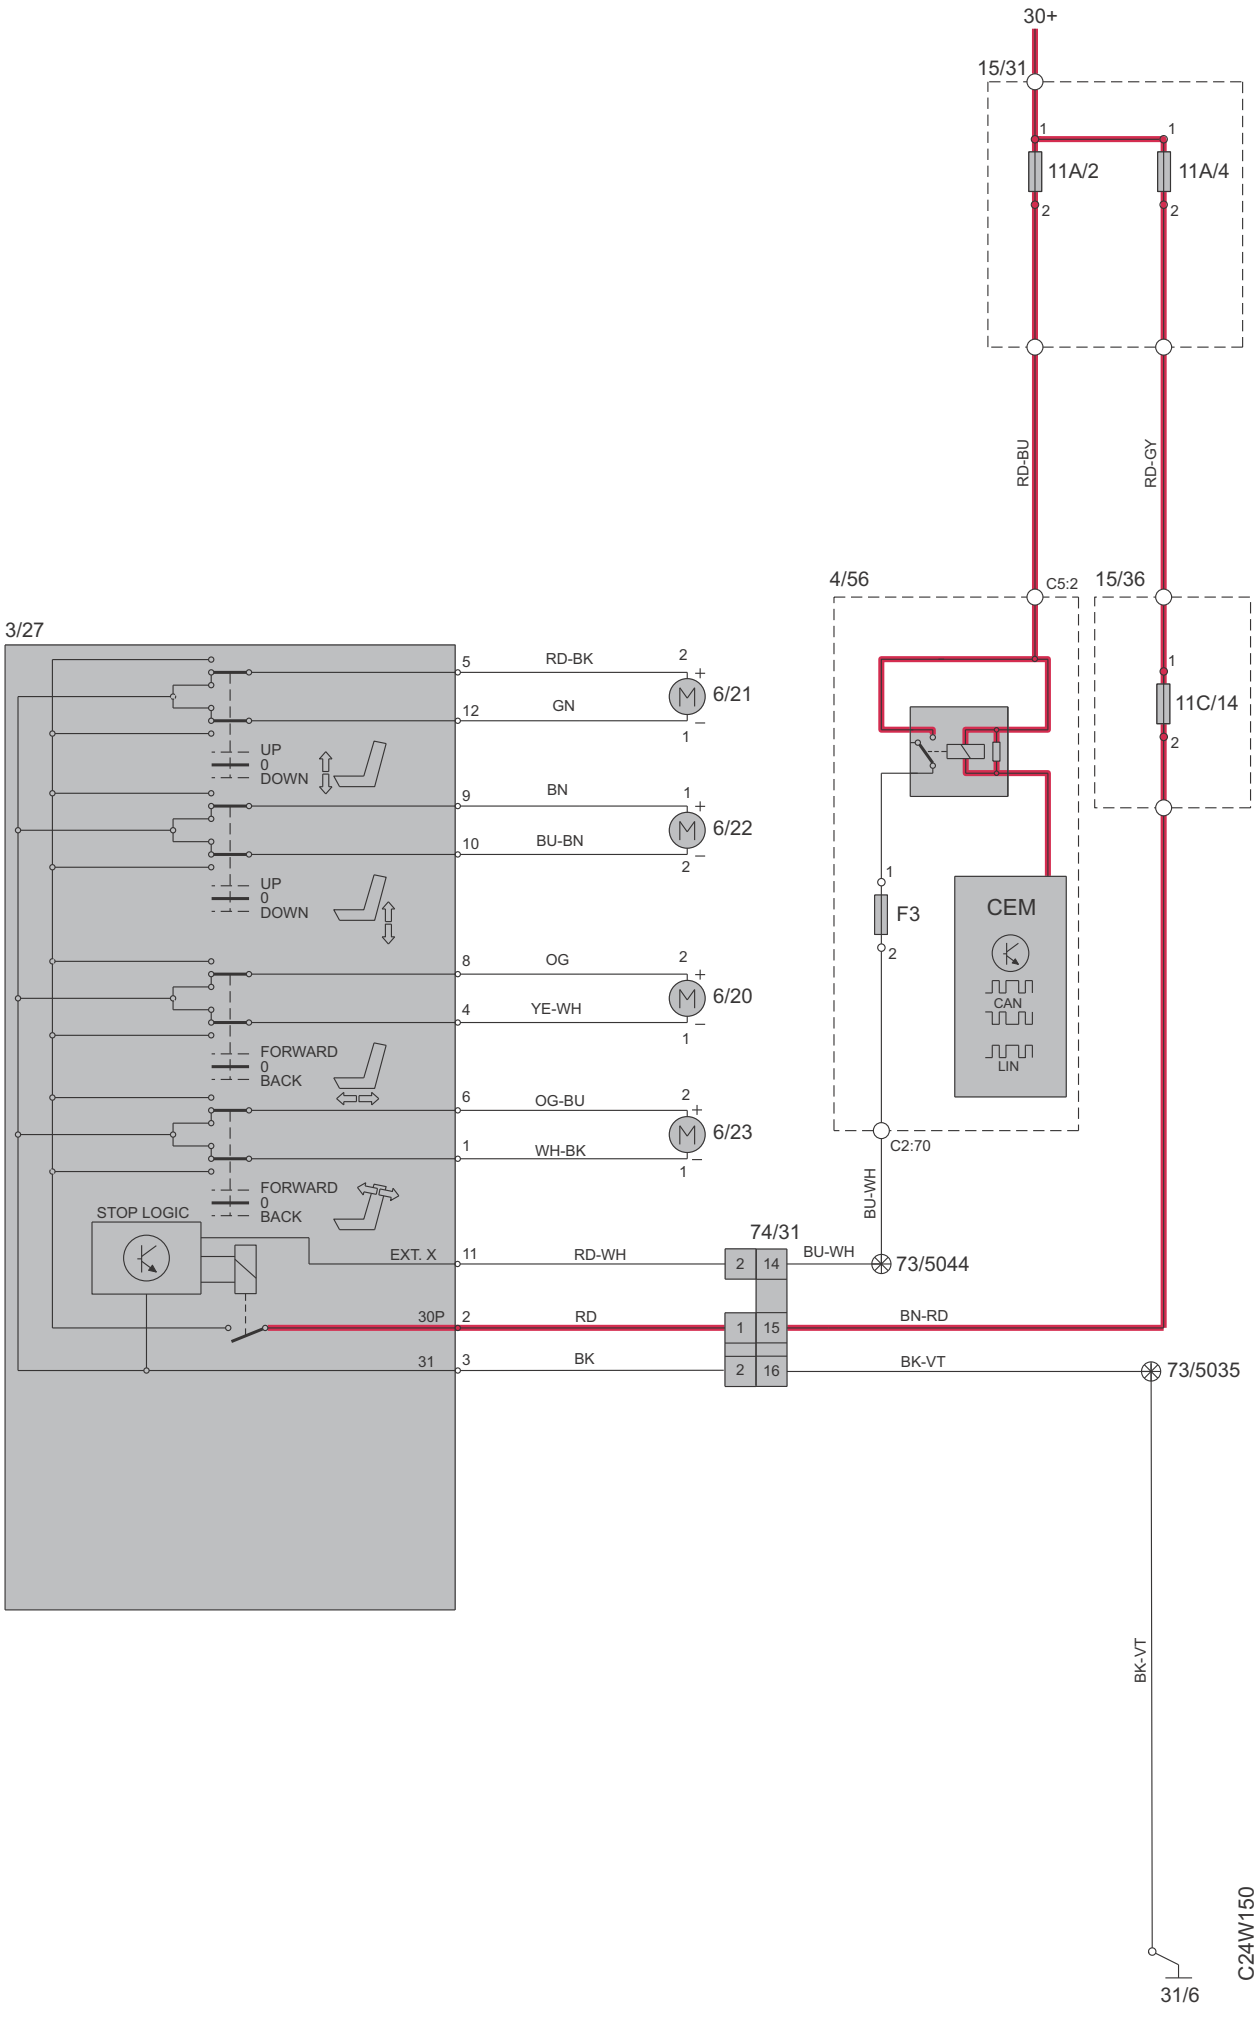

Group 85 Interior equipment
Heated steering wheel

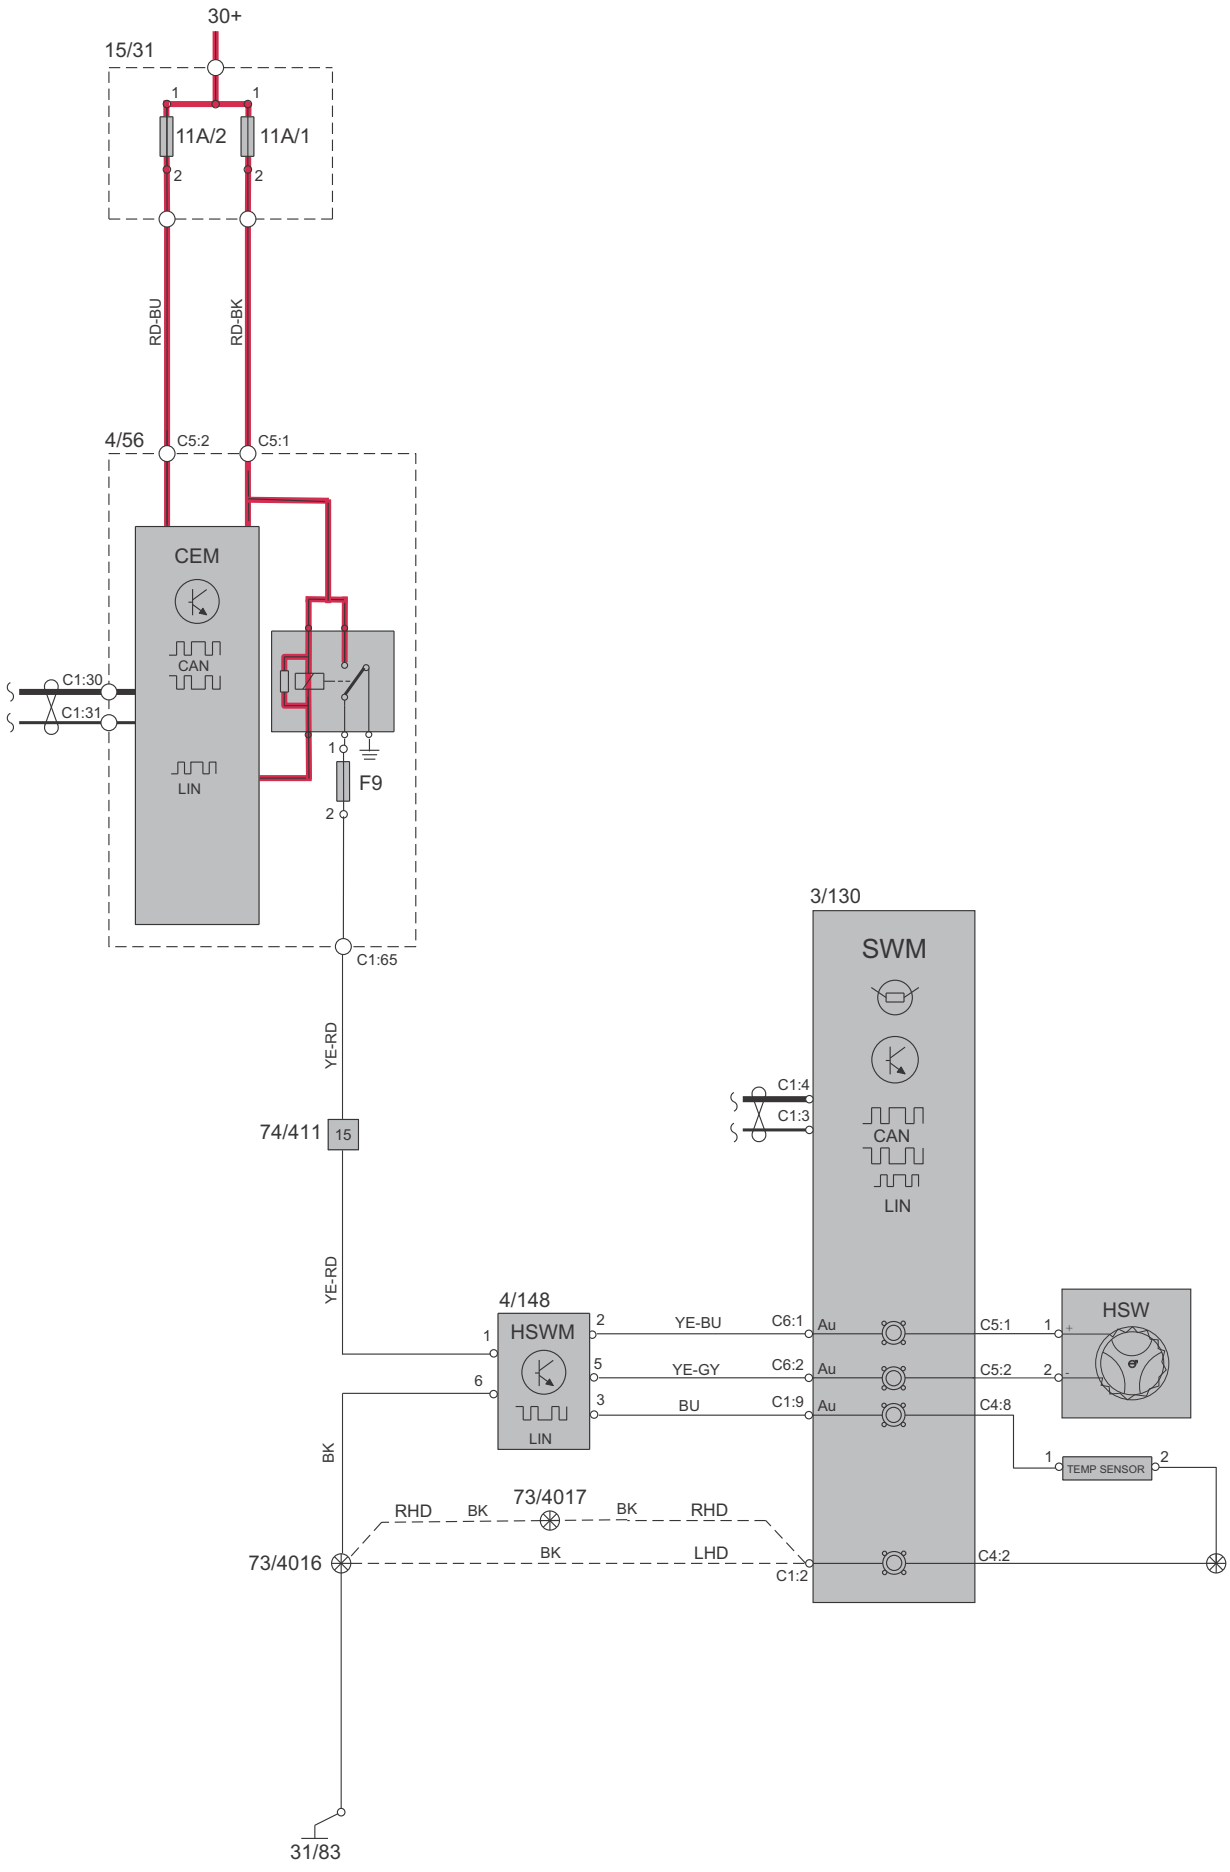

Group 85 Interior equipment
Heated front seats with fans

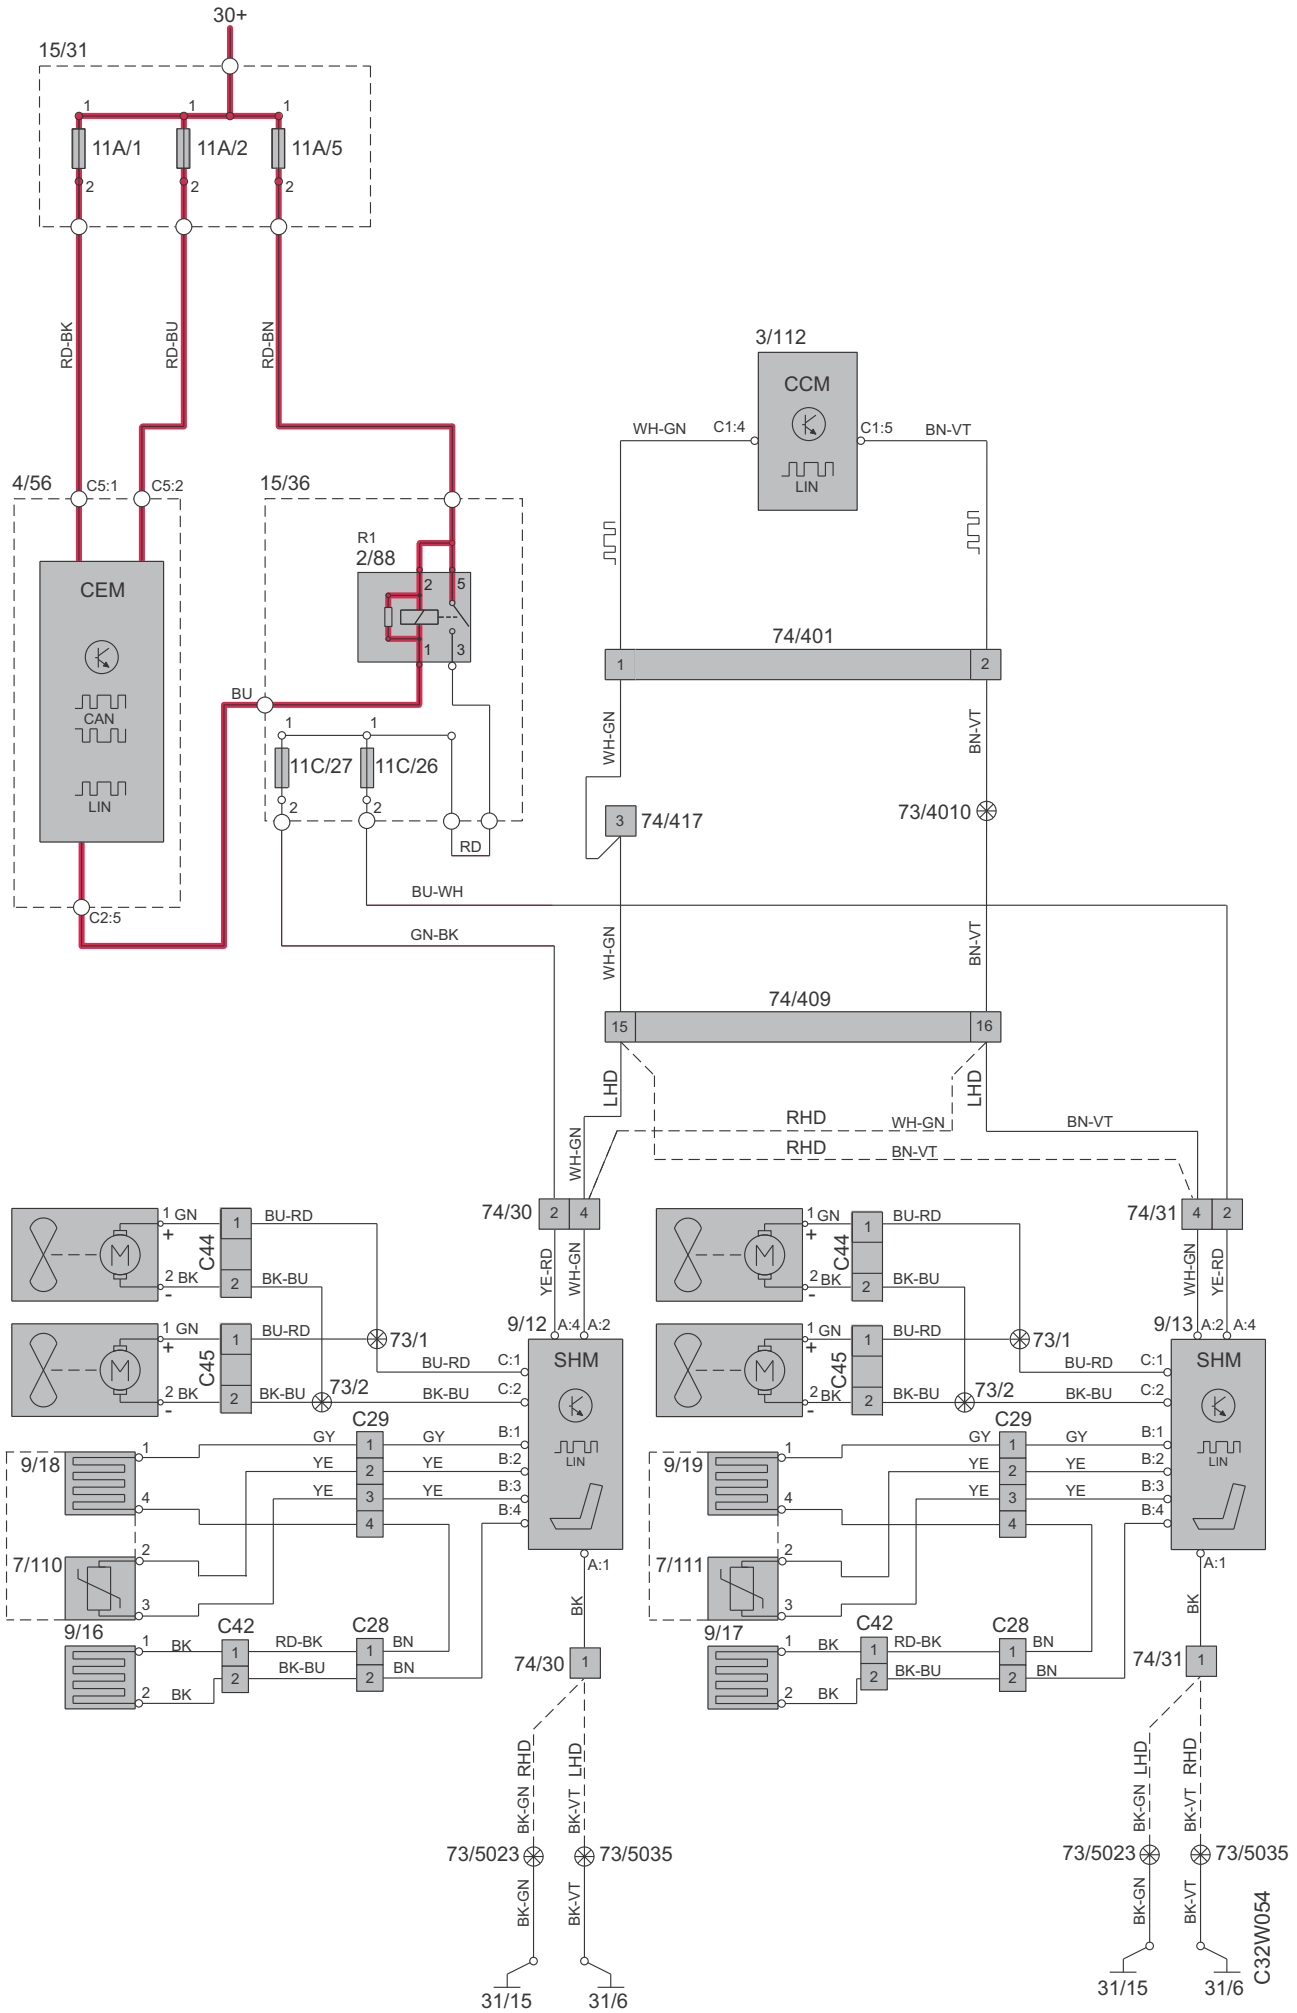

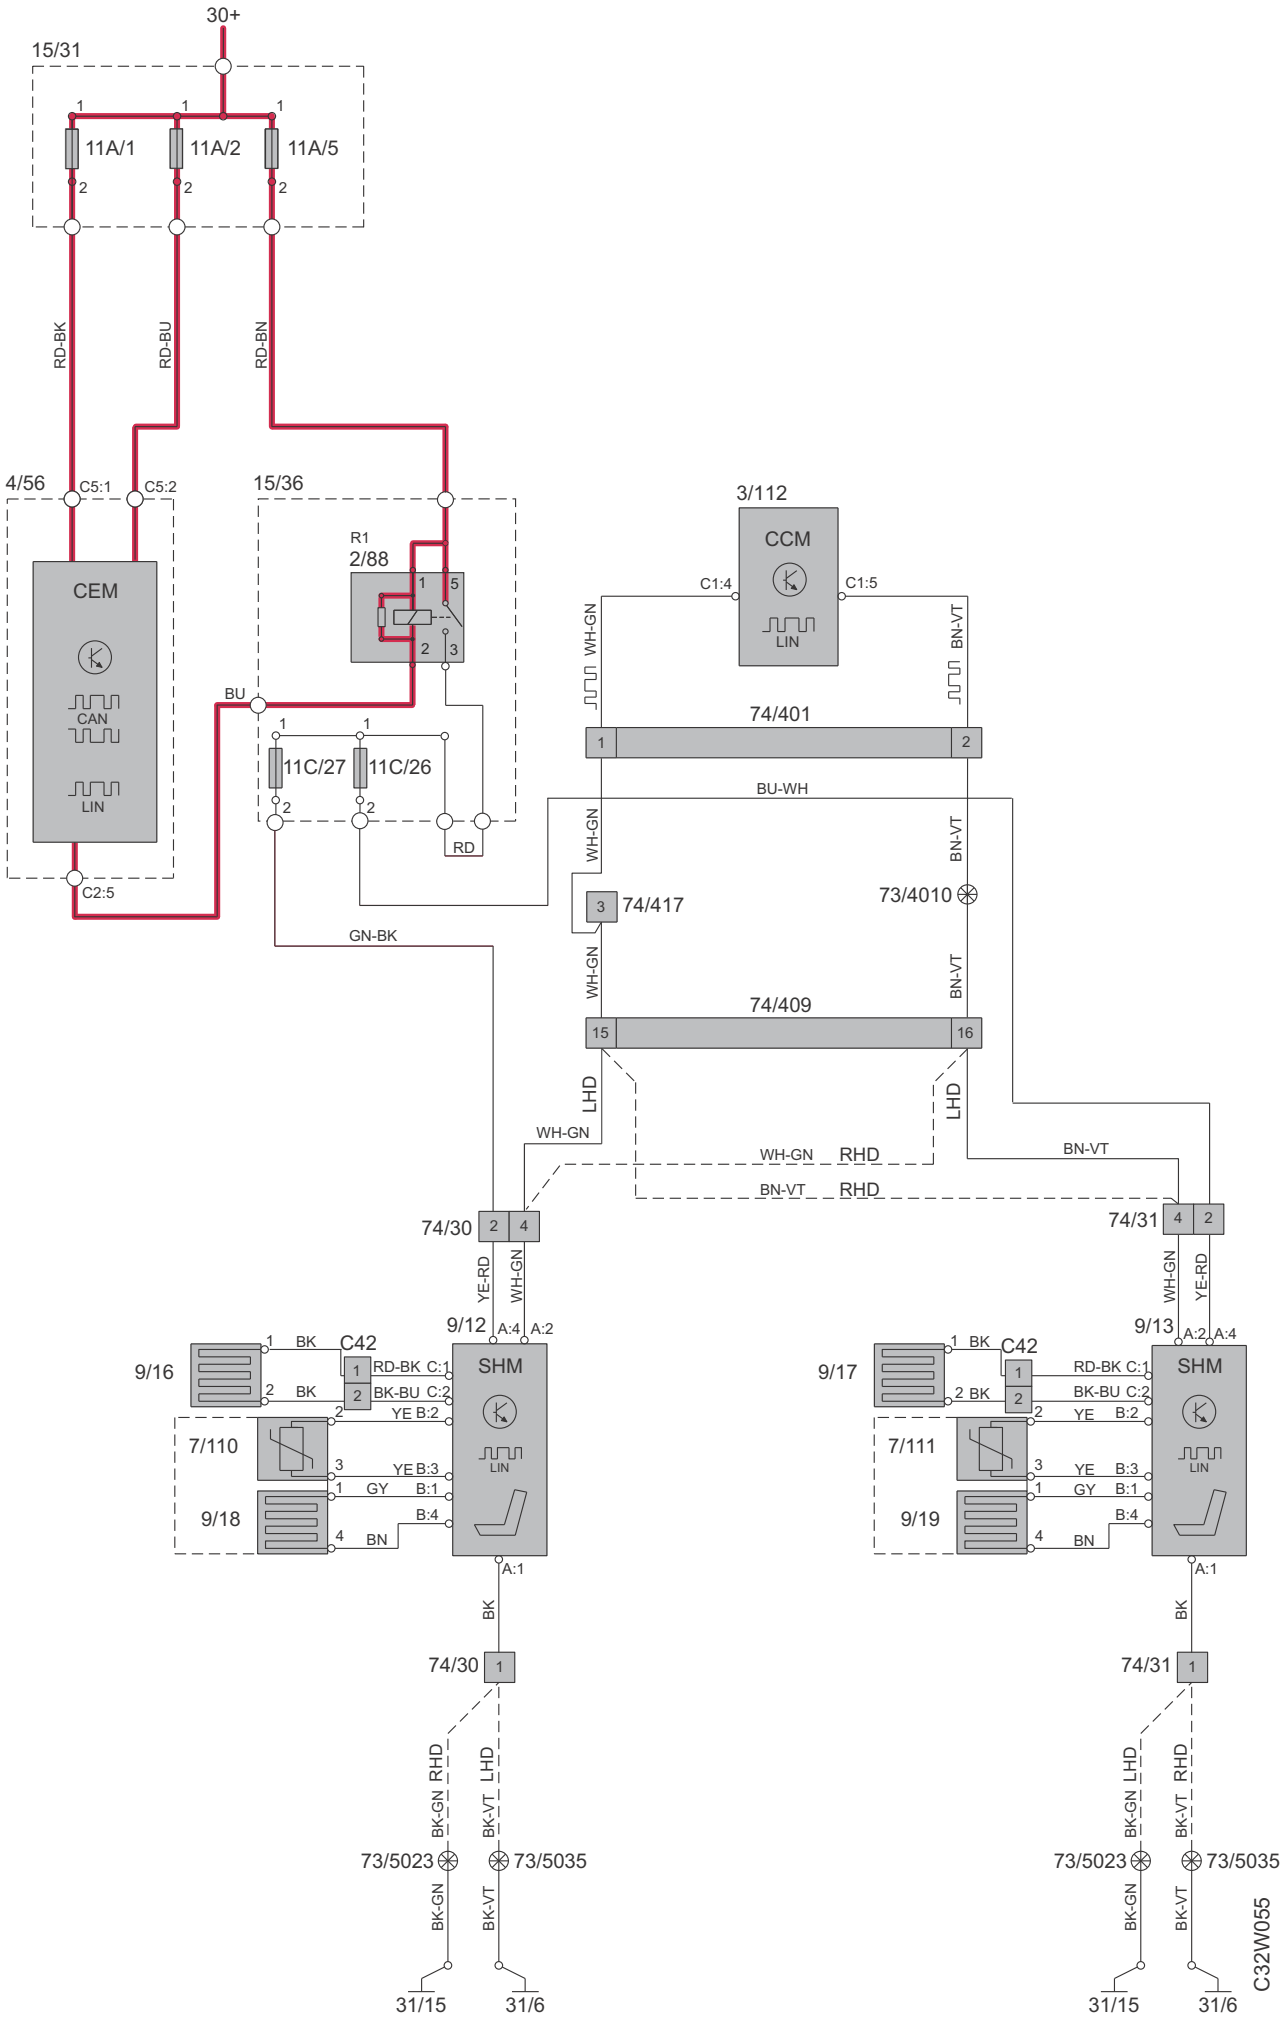
30+
15/31
11A/1
11A/2
11A/5
RD-BK
RD-BU
RD-BN
4/56
C5:1
C5:2
CEM
CAN
LIN
C2:5
15/36
R1
2/88
BU
11C/27
11C/26
RD
3/112
CCM
C1:4
C1:5
LIN
WH-GN
BN-VT
74/401
BU-WH
74/417
73/4010
74/409
LHD
RHD
GN-BK
74/30
74/31
YE-RD
9/12
9/13
A:4
A:2
9/16
9/17
C42
BK
RD-BK C:1
BK-BU C:2
YE B:2
YE B:3
GY B:1
B:4
BN
SHM
7/110
7/111
9/18
9/19
A:1
BK-GN
BK-VT
73/5023
73/5035
31/15
31/6
C32W055

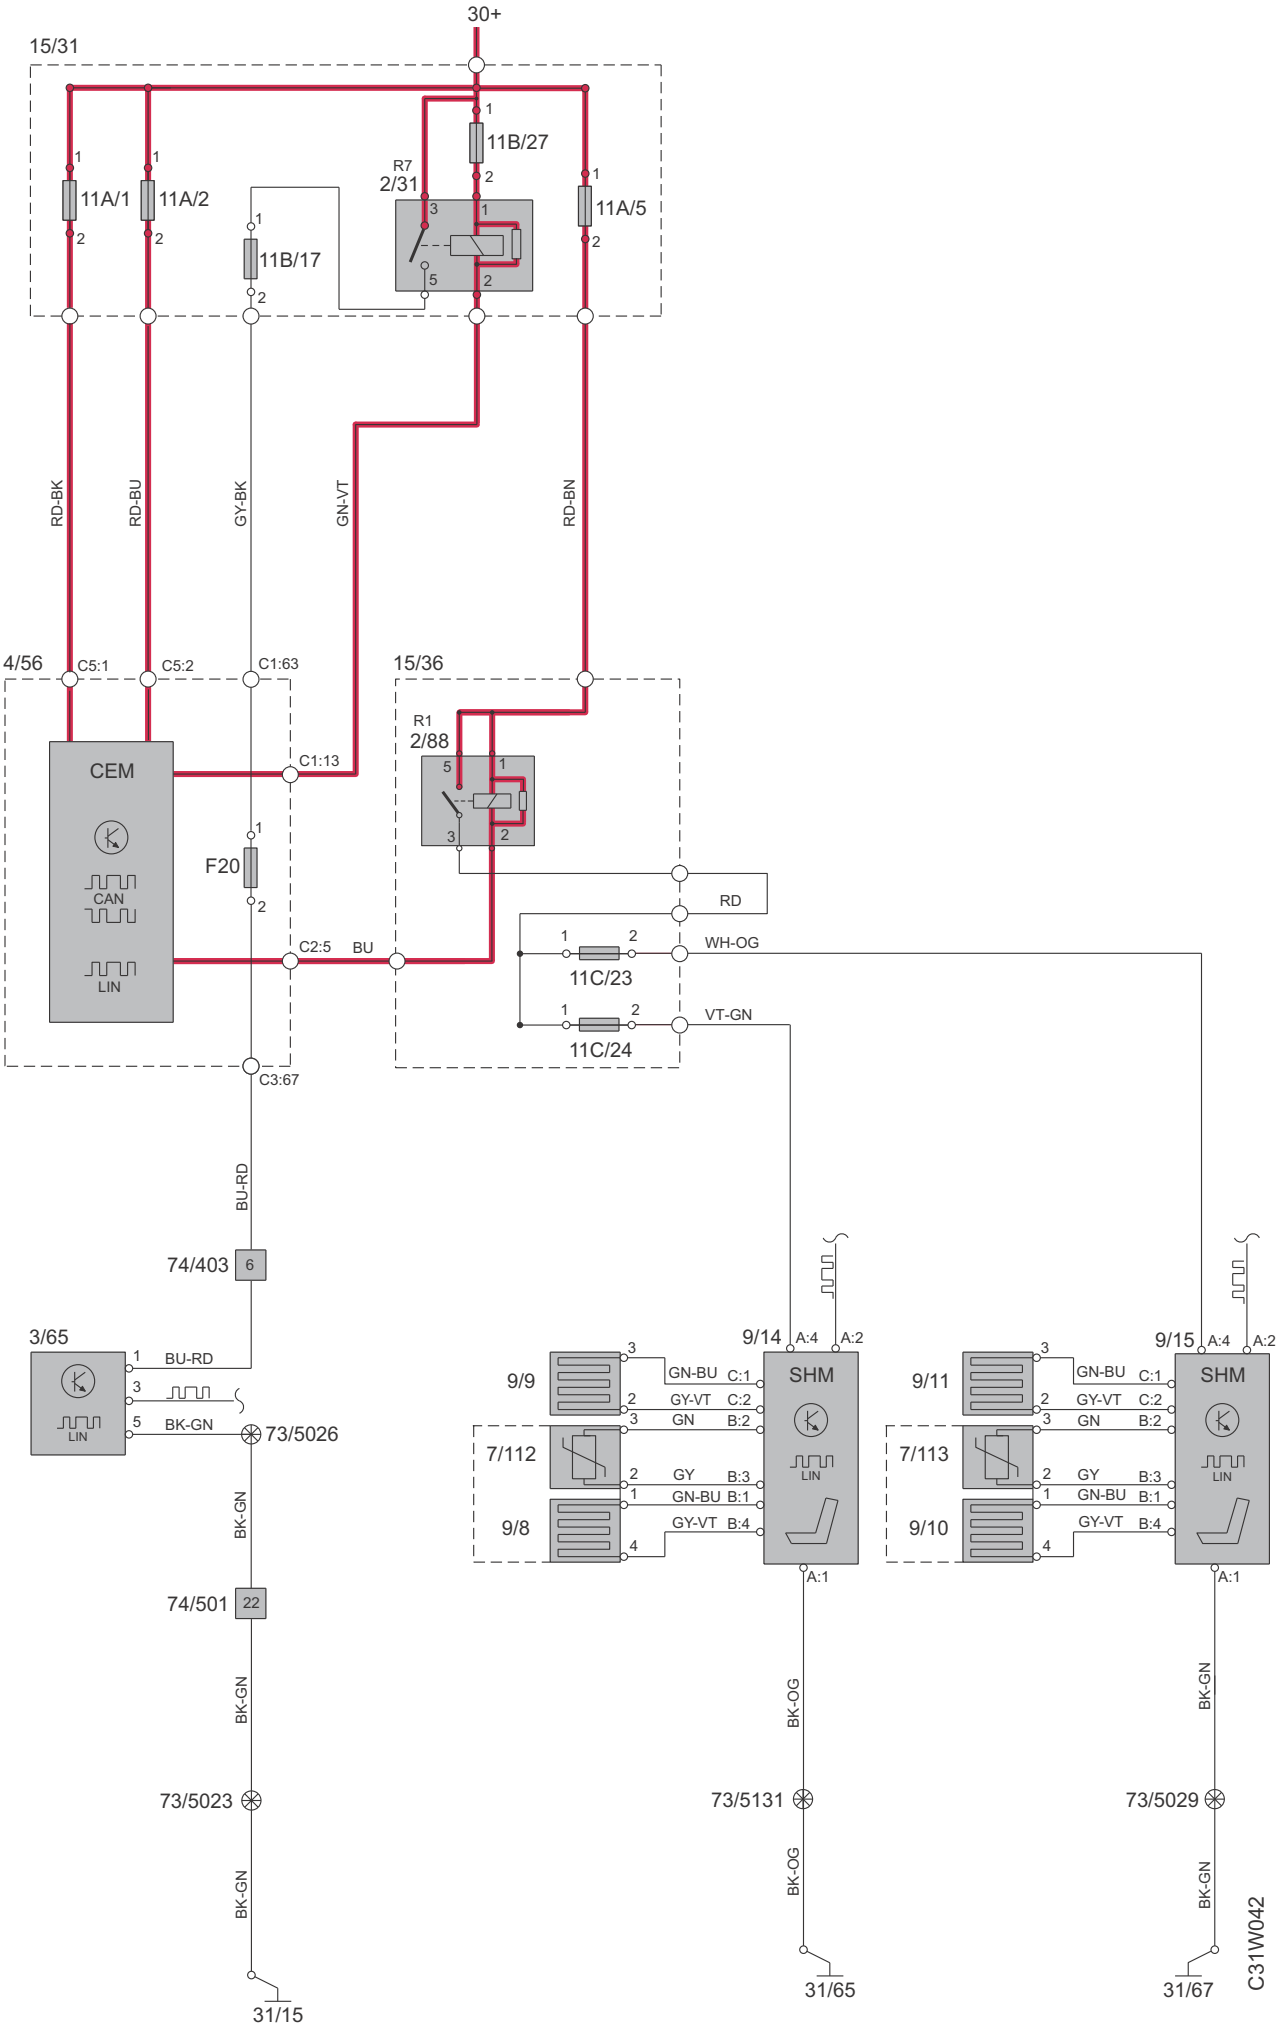
30+
15/31
11A/1
11A/2
11B/17
R7
2/31
11B/27
11A/5
RD-BK
RD-BU
GY-BK
GN-VT
RD-BN
4/56
C5:1
C5:2
C1:63
15/36
R1
2/88
CEM
CAN
LIN
C1:13
F20
C2:5
BU
RD
WH-OG
11C/23
VT-GN
11C/24
C3:67
BU-RD
74/403
6
3/65
BU-RD
BK-GN
73/5026
BK-GN
74/501
22
BK-GN
73/5023
BK-GN
31/15
9/14
A:4
A:2
9/9
7/112
9/8
GN-BU C:1
GY-VT C:2
GN B:2
GY B:3
GN-BU B:1
GY-VT B:4
SHM
LIN
A:1
BK-OG
73/5131
BK-OG
31/65
9/15
9/11
7/113
9/10
BK-GN
73/5029
BK-GN
31/67
C31W042

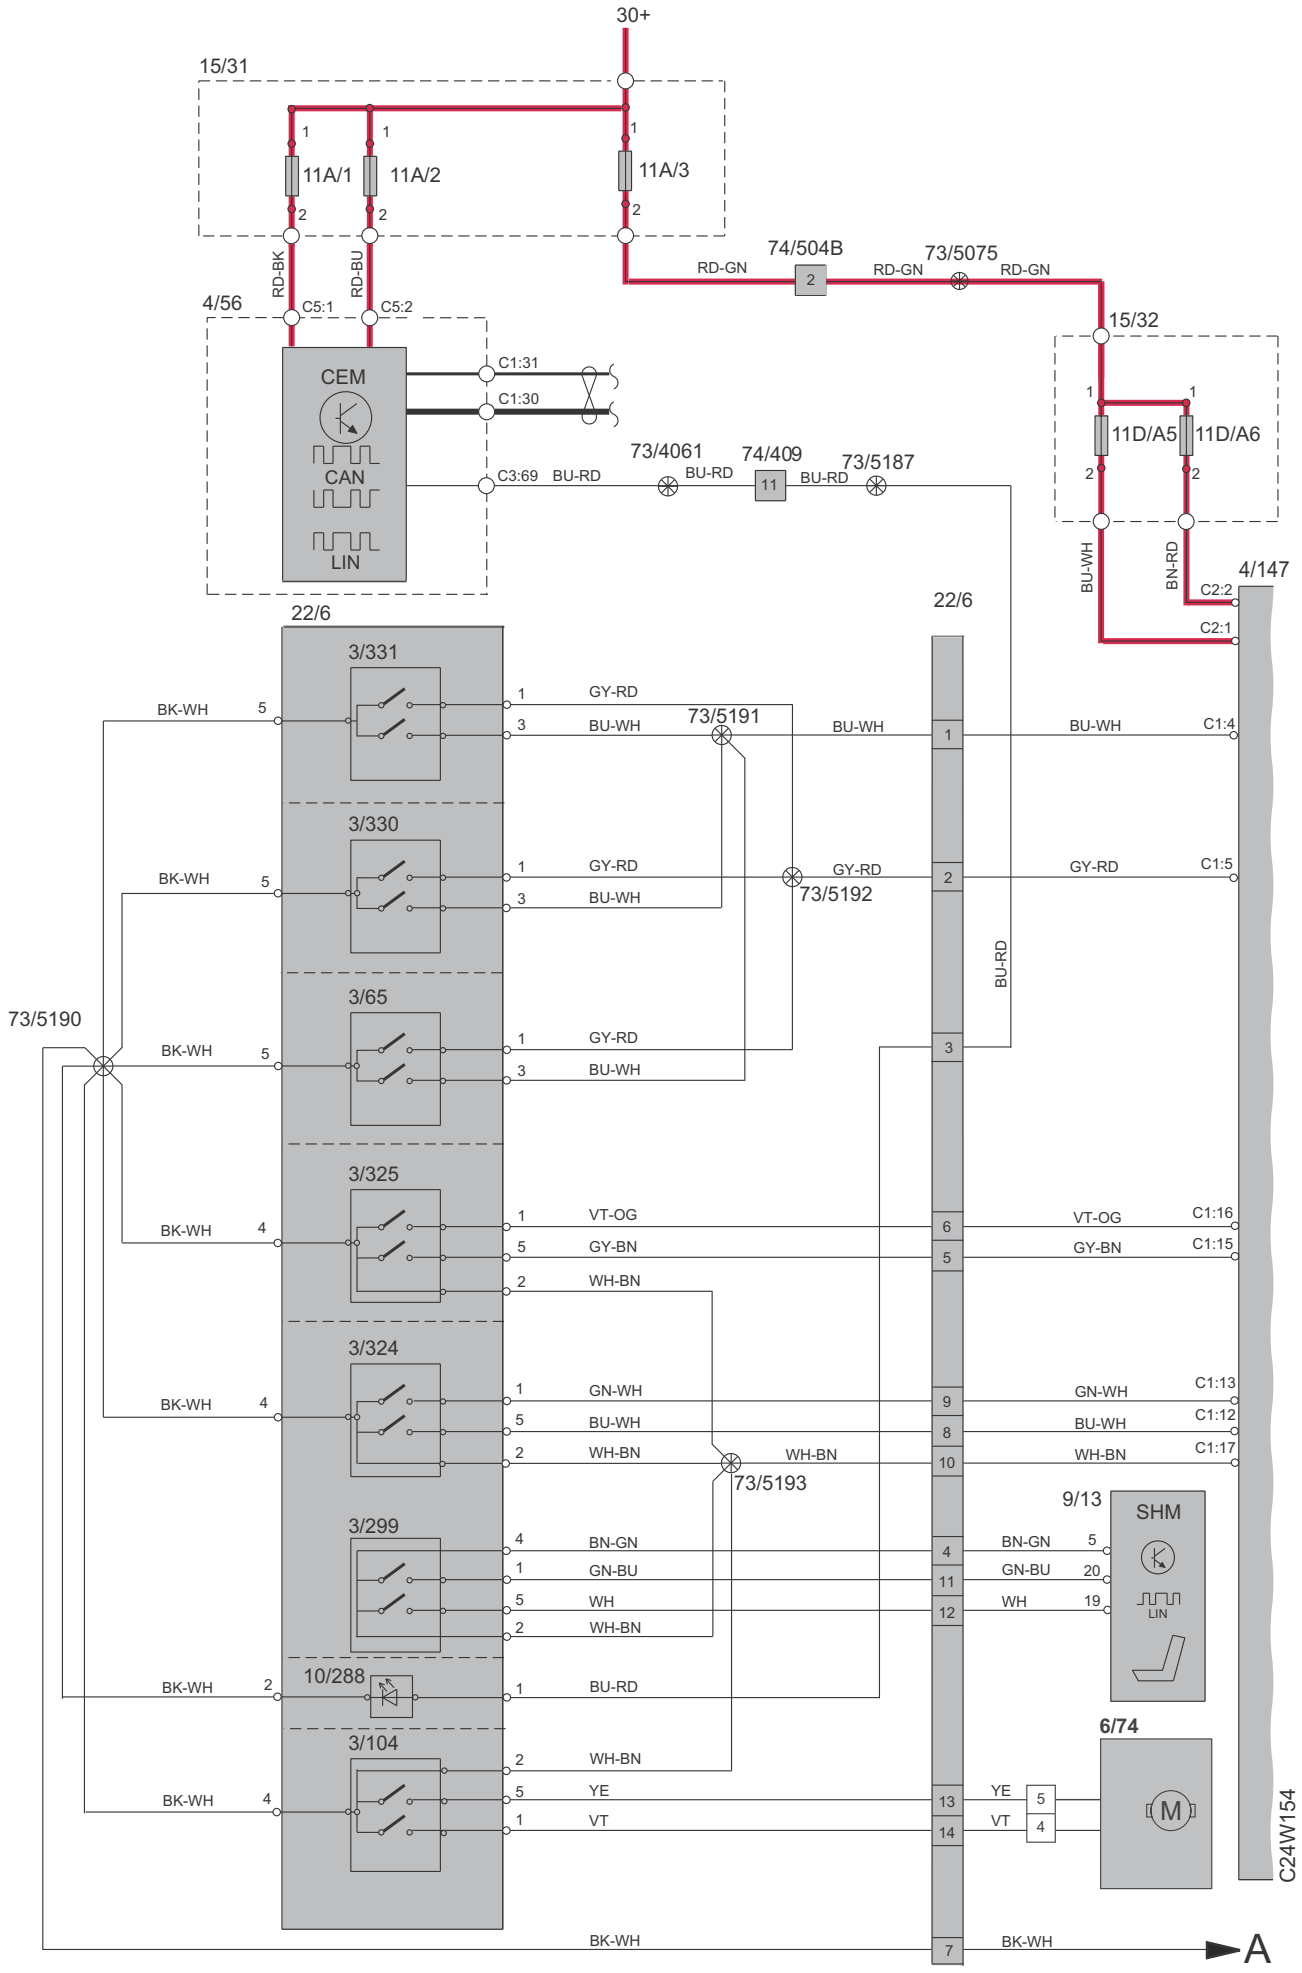
30+
15/31
11A/1
11A/2
11A/3
RD-BK
RD-BU
4/56
C5:1
C5:2
CEM
CAN
LIN
C1:31
C1:30
C3:69
BU-RD
74/504B
RD-GN
73/5075
15/32
11D/A5
11D/A6
73/4061
74/409
73/5187
BU-WH
BN-RD
4/147
C2:2
C2:1
22/6
3/331
3/330
3/65
3/325
3/324
3/299
10/288
3/104
BK-WH
GY-RD
BU-WH
73/5191
73/5192
73/5190
VT-OG
GY-BN
WH-BN
GN-WH
BN-GN
GN-BU
WH
73/5193
9/13
SHM
6/74
YE
VT
C24W154
A

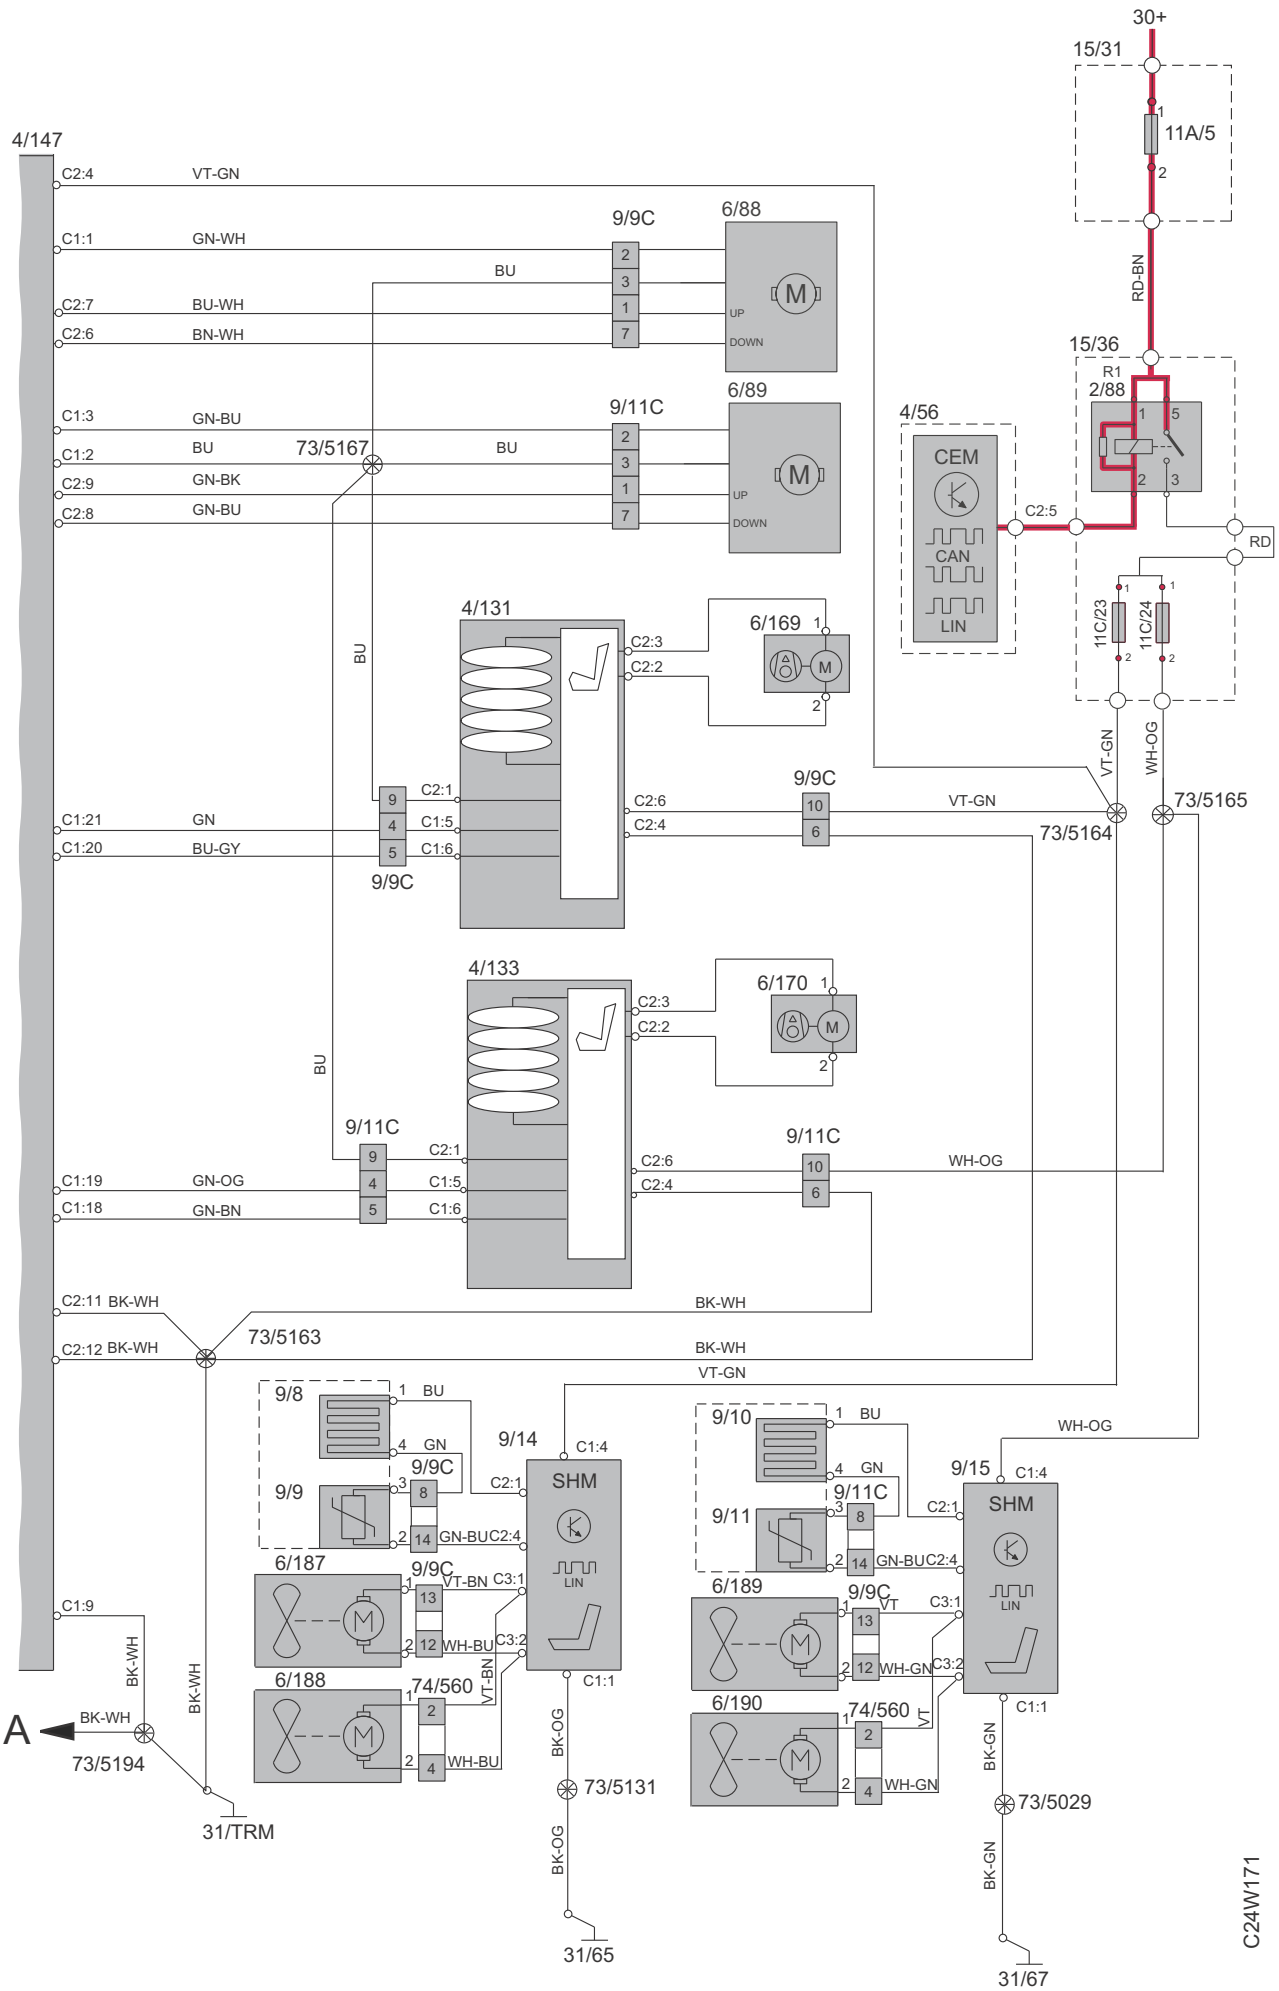
30+
15/31
11A/5
RD-BN
15/36
R1
2/88
RD
4/147
C2:4 VT-GN
C1:1 GN-WH
C2:7 BU-WH
C2:6 BN-WH
9/9C
6/88
UP
DOWN
C1:3 GN-BU
C1:2 BU
C2:9 GN-BK
C2:8 GN-BU
9/11C
6/89
73/5167
BU
4/56
CEM
CAN
LIN
C2:5
11C/23
11C/24
4/131
6/169
C2:3
C2:2
C1:21 GN
C1:20 BU-GY
C2:1
C1:5
C1:6
C2:6
C2:4
VT-GN
WH-OG
73/5165
73/5164
4/133
6/170
C1:19 GN-OG
C1:18 GN-BN
C2:11 BK-WH
C2:12 BK-WH
73/5163
9/8
9/9
9/14
SHM
6/187
6/188
74/560
VT-BN
WH-BU
9/10
9/11
9/15
6/189
6/190
WH-GN
C1:9
BK-WH
A
73/5194
31/TRM
BK-OG
73/5131
31/65
73/5029
31/67
C24W171

Climate control system 4-Cyl. 1.6L Turbo 1:2

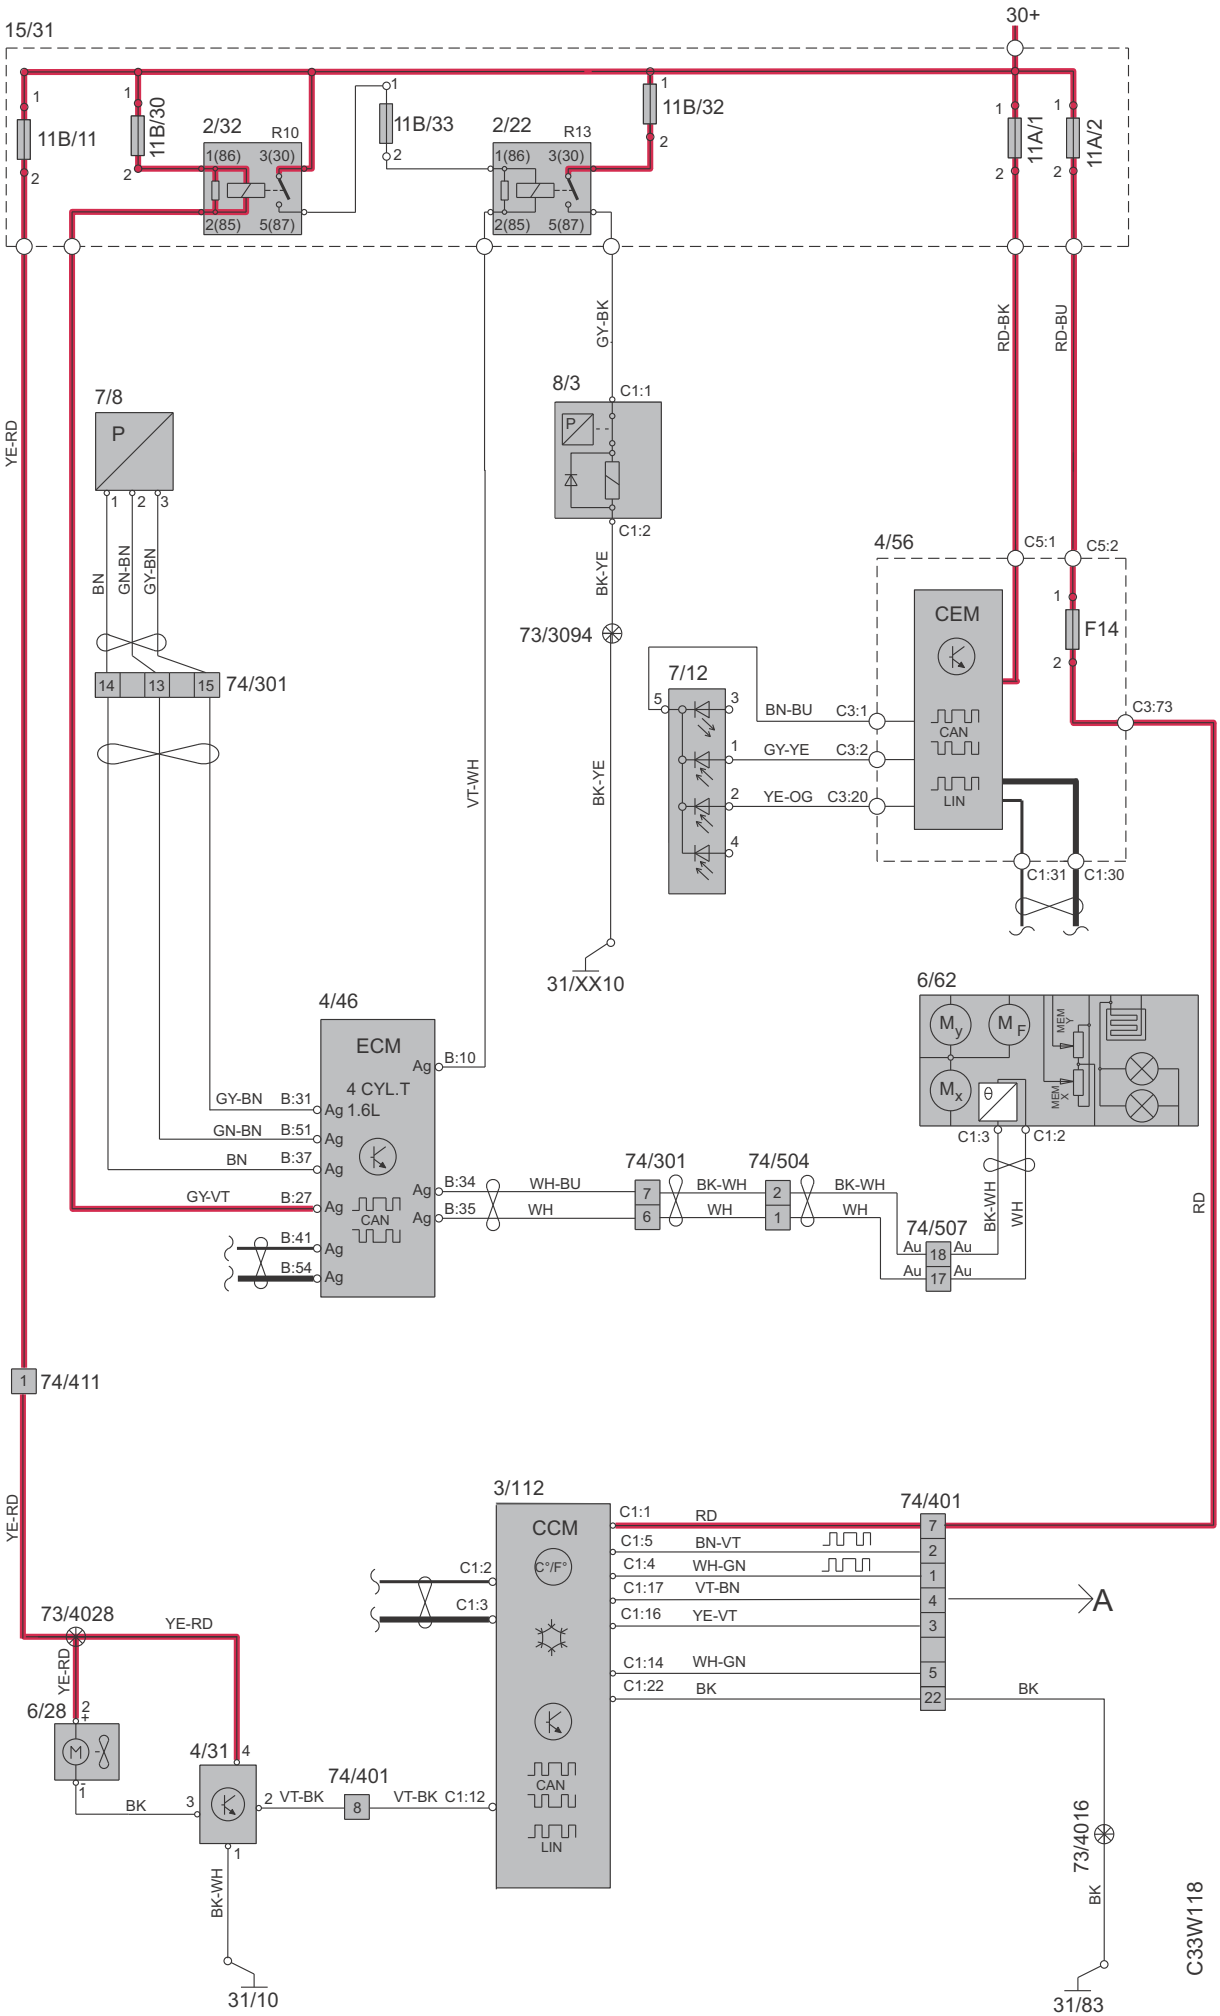

Climate control system 4-Cyl. 1.6L Turbo 2:2

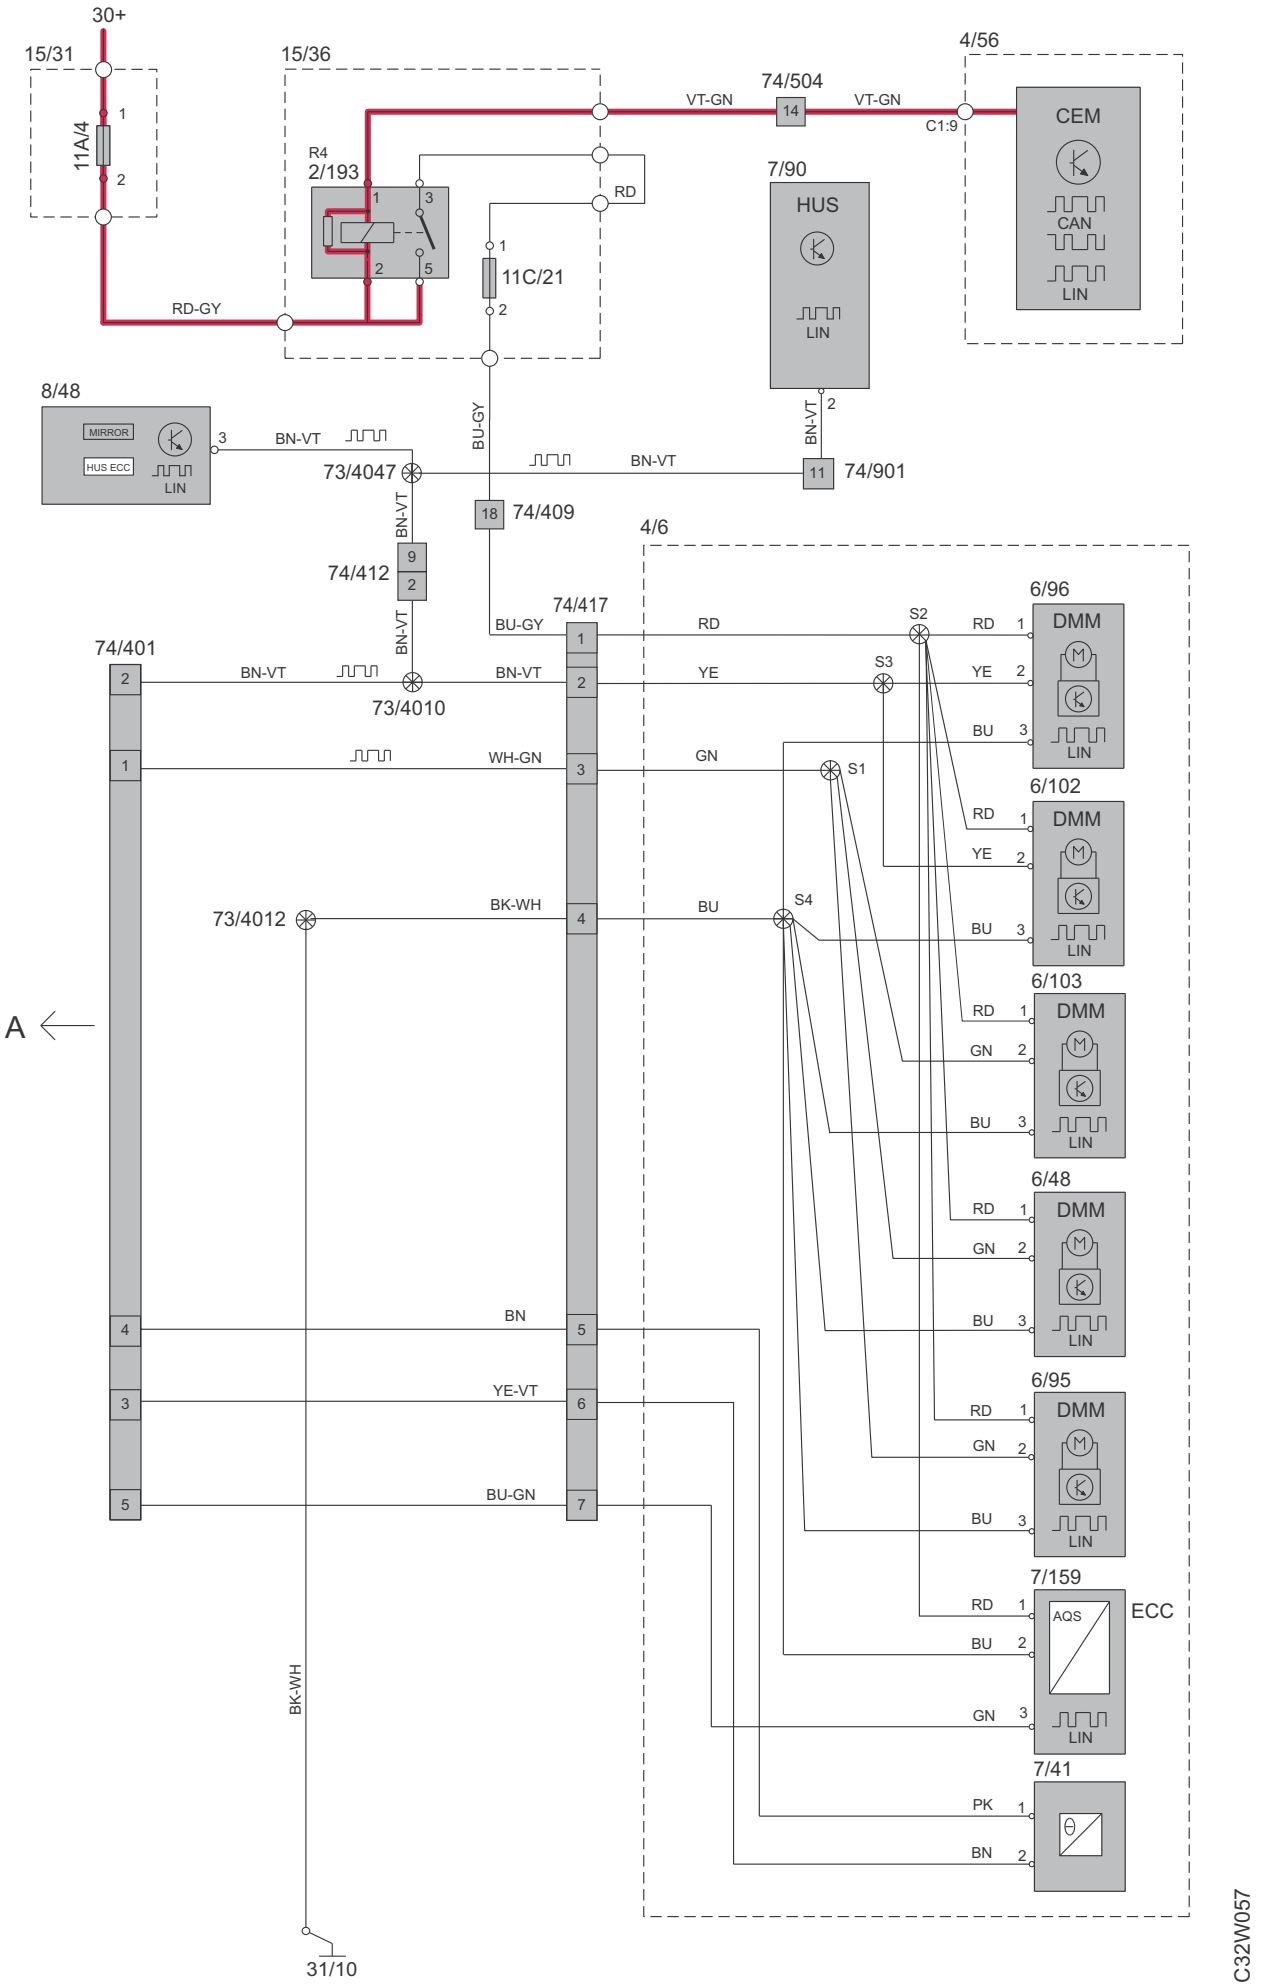

Climate control system 4-Cyl. 2.0L Turbo 1:2

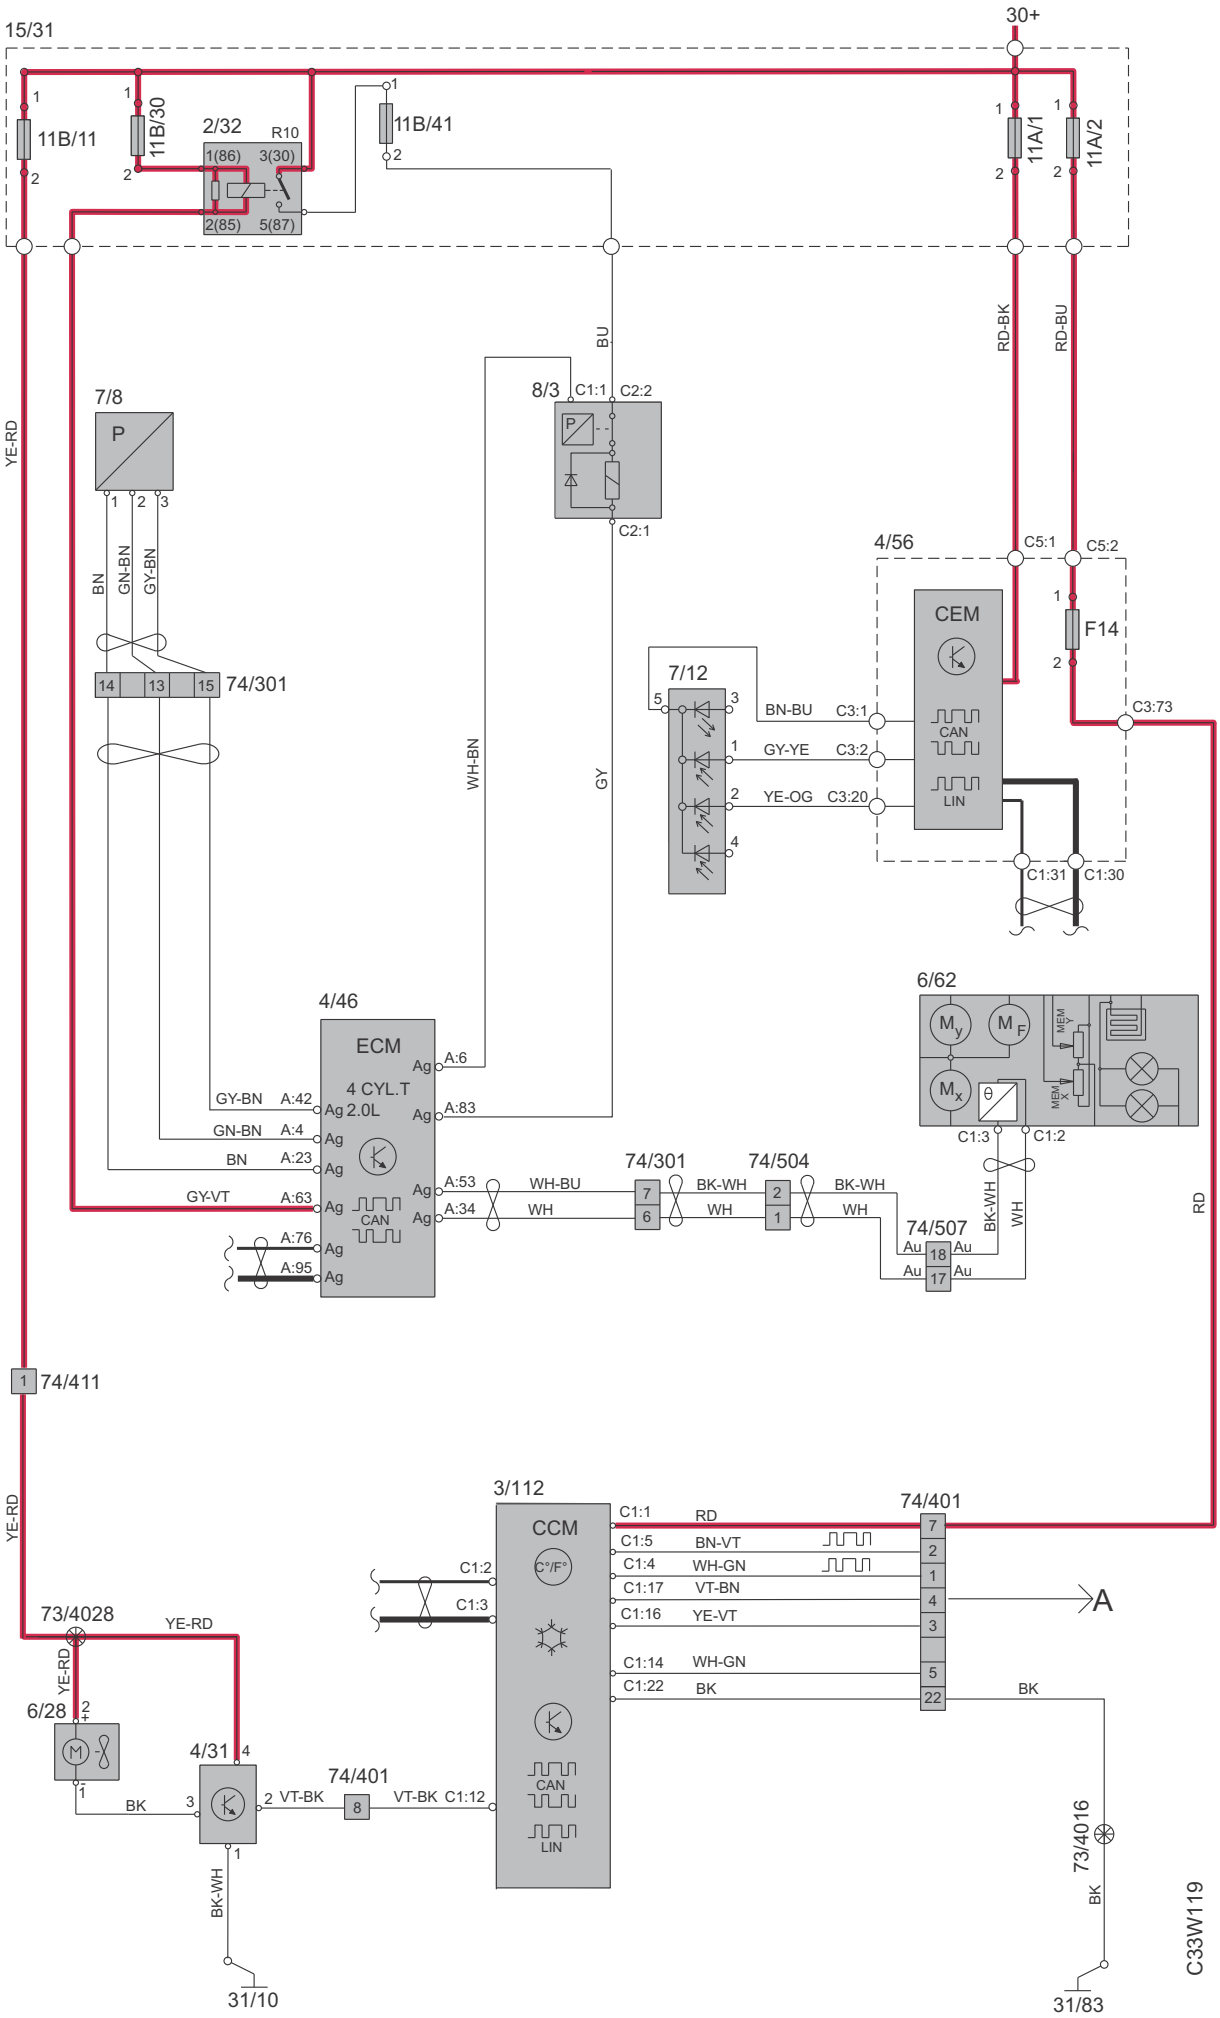

Climate control system 4-Cyl. 2.0L Turbo 2:2

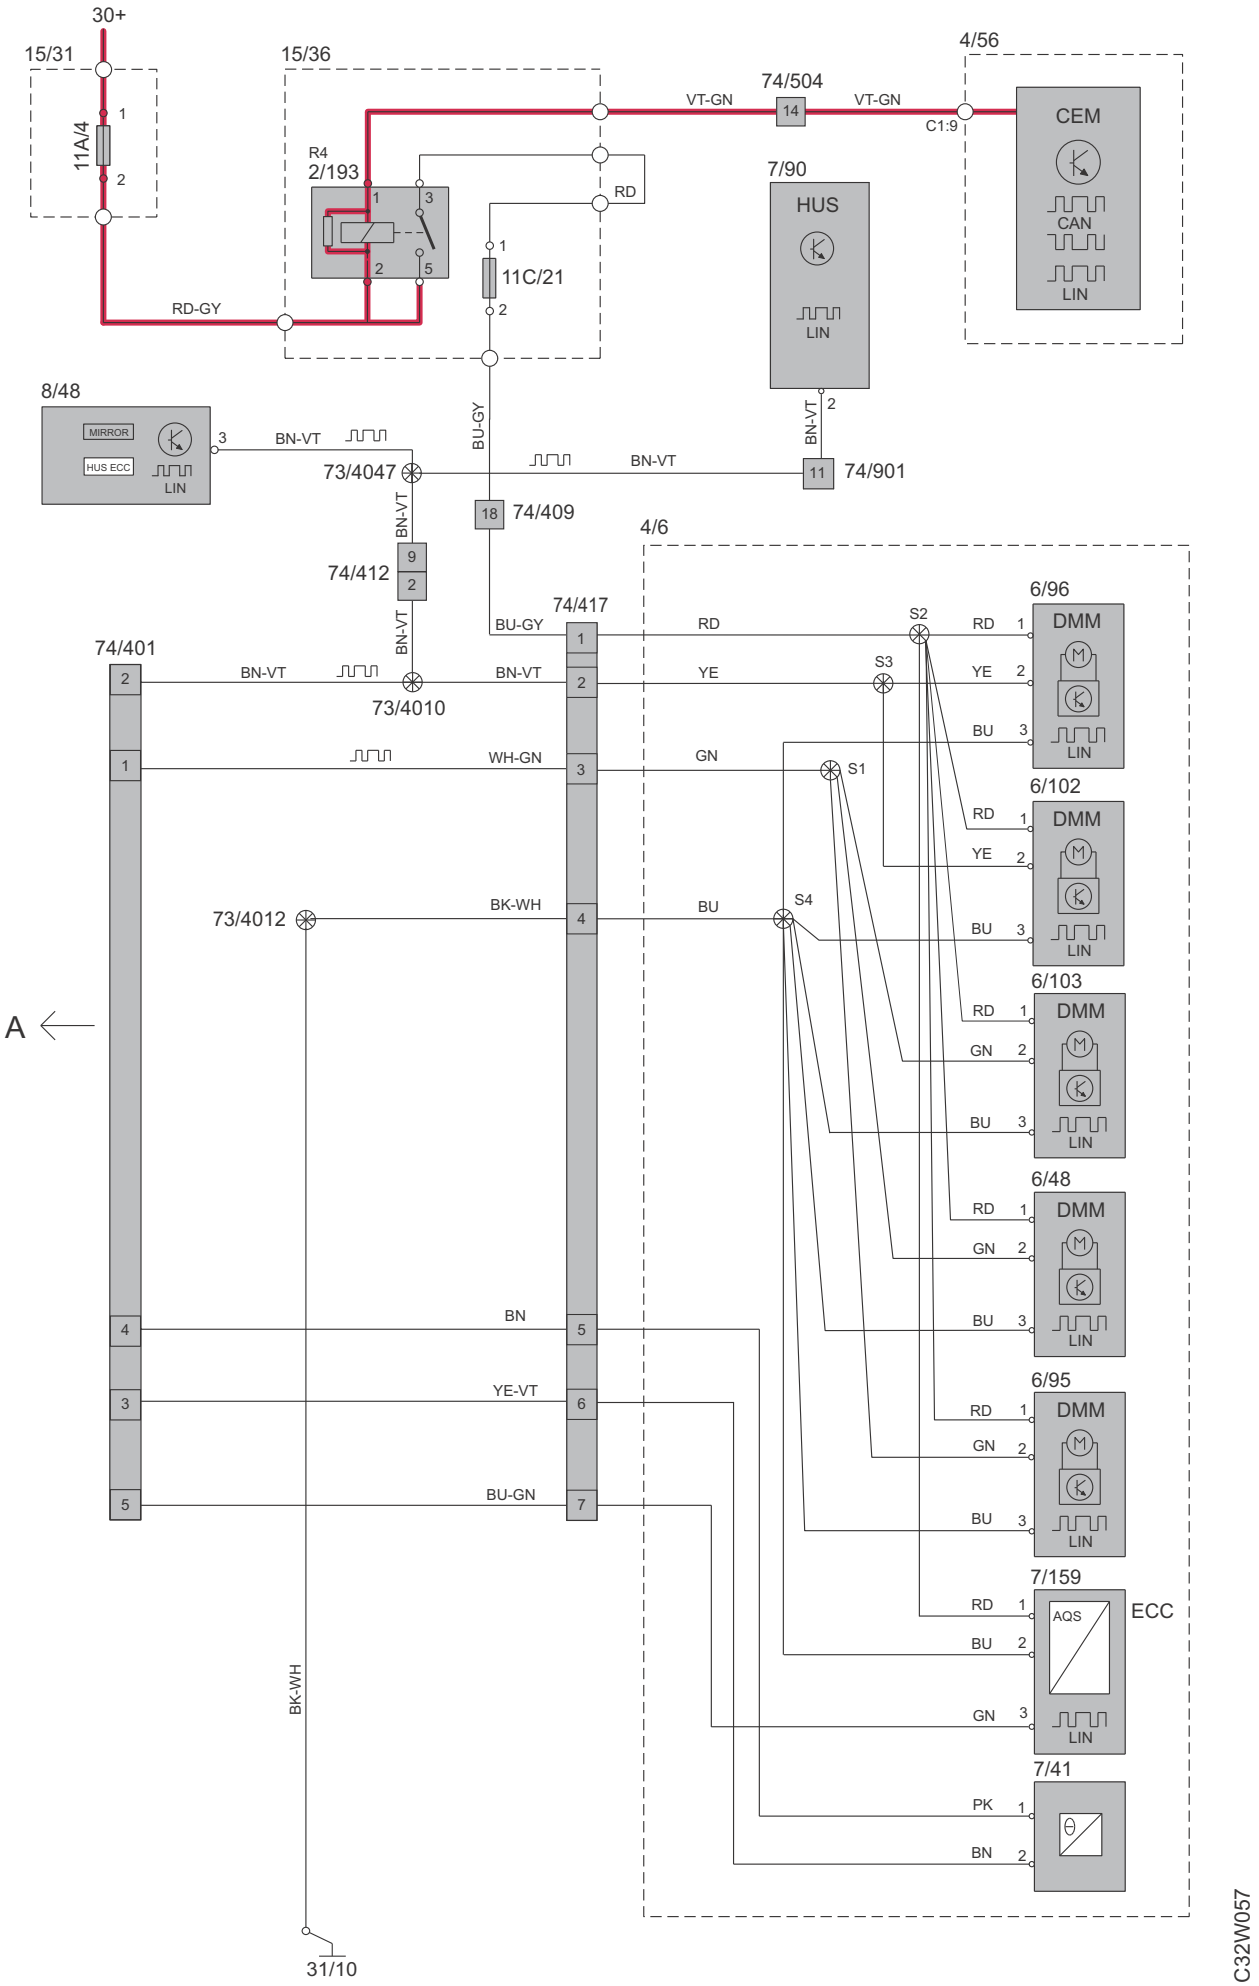

C32W057

Climate control system 4-Cyl. 1.6L Diesel 1:2

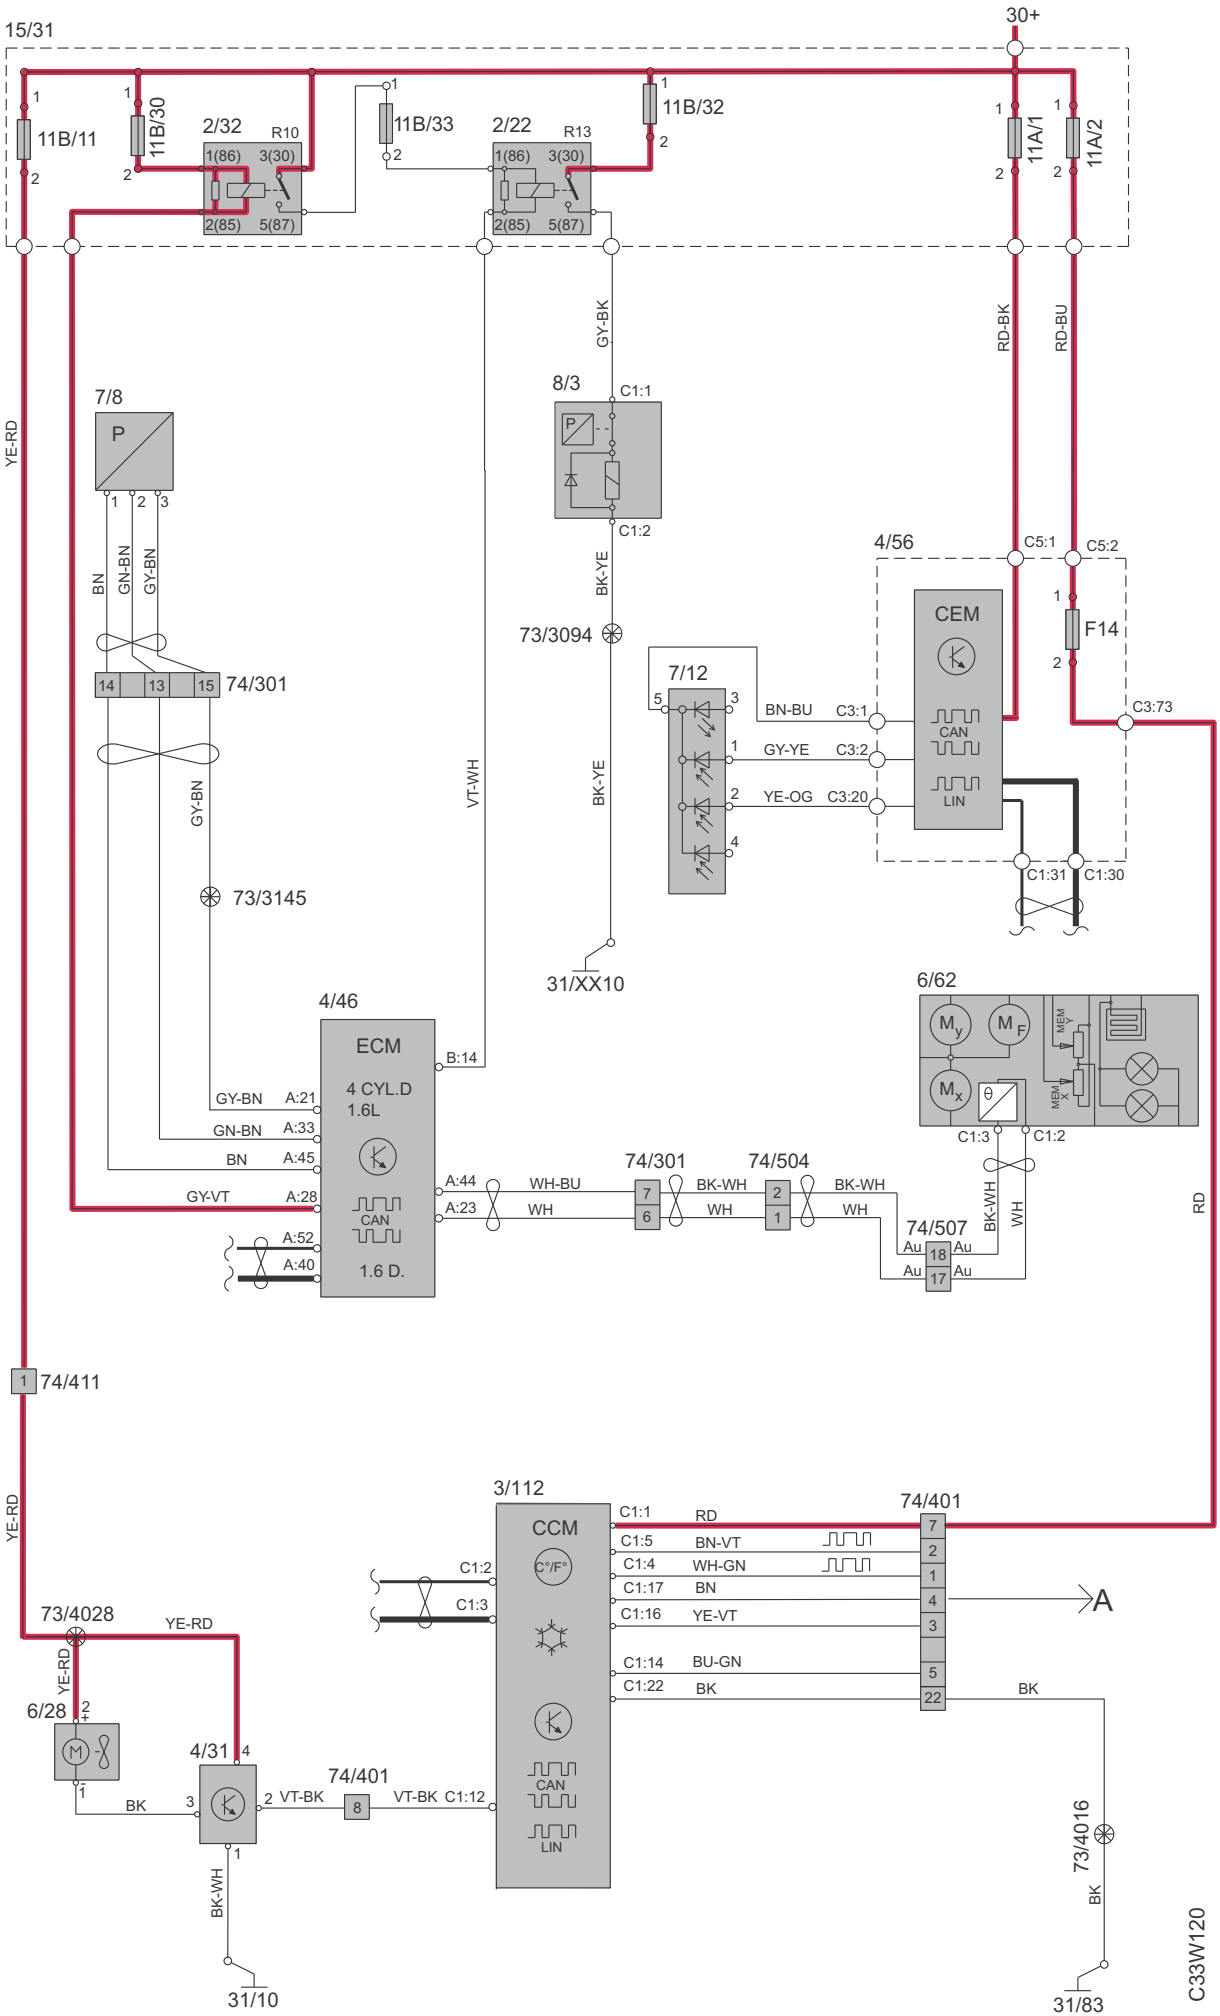

Climate control system 4-Cyl. 1.6L Diesel 2:2

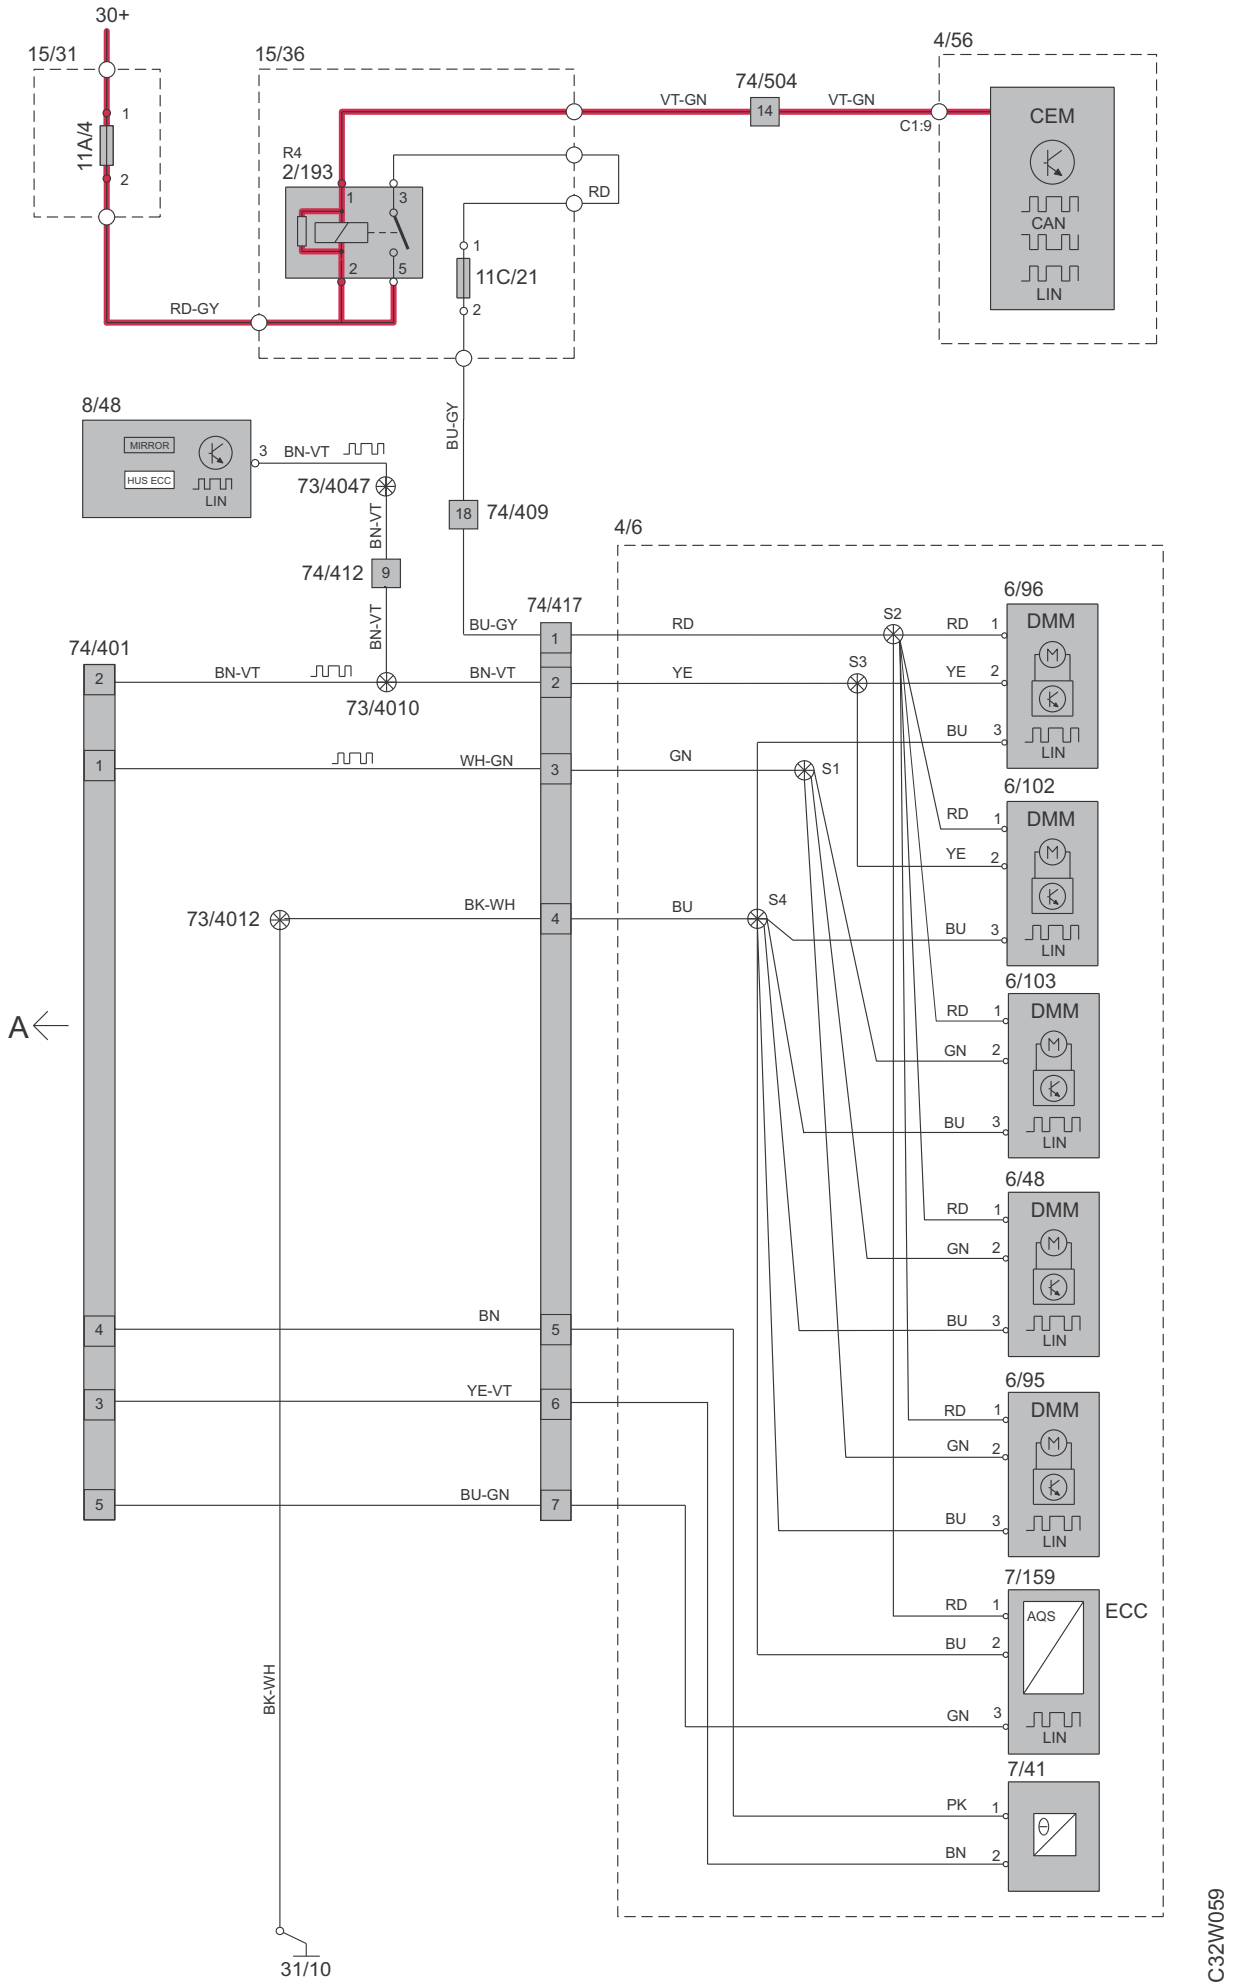

Climate control system 4-Cyl. 2.0L Diesel 1:2

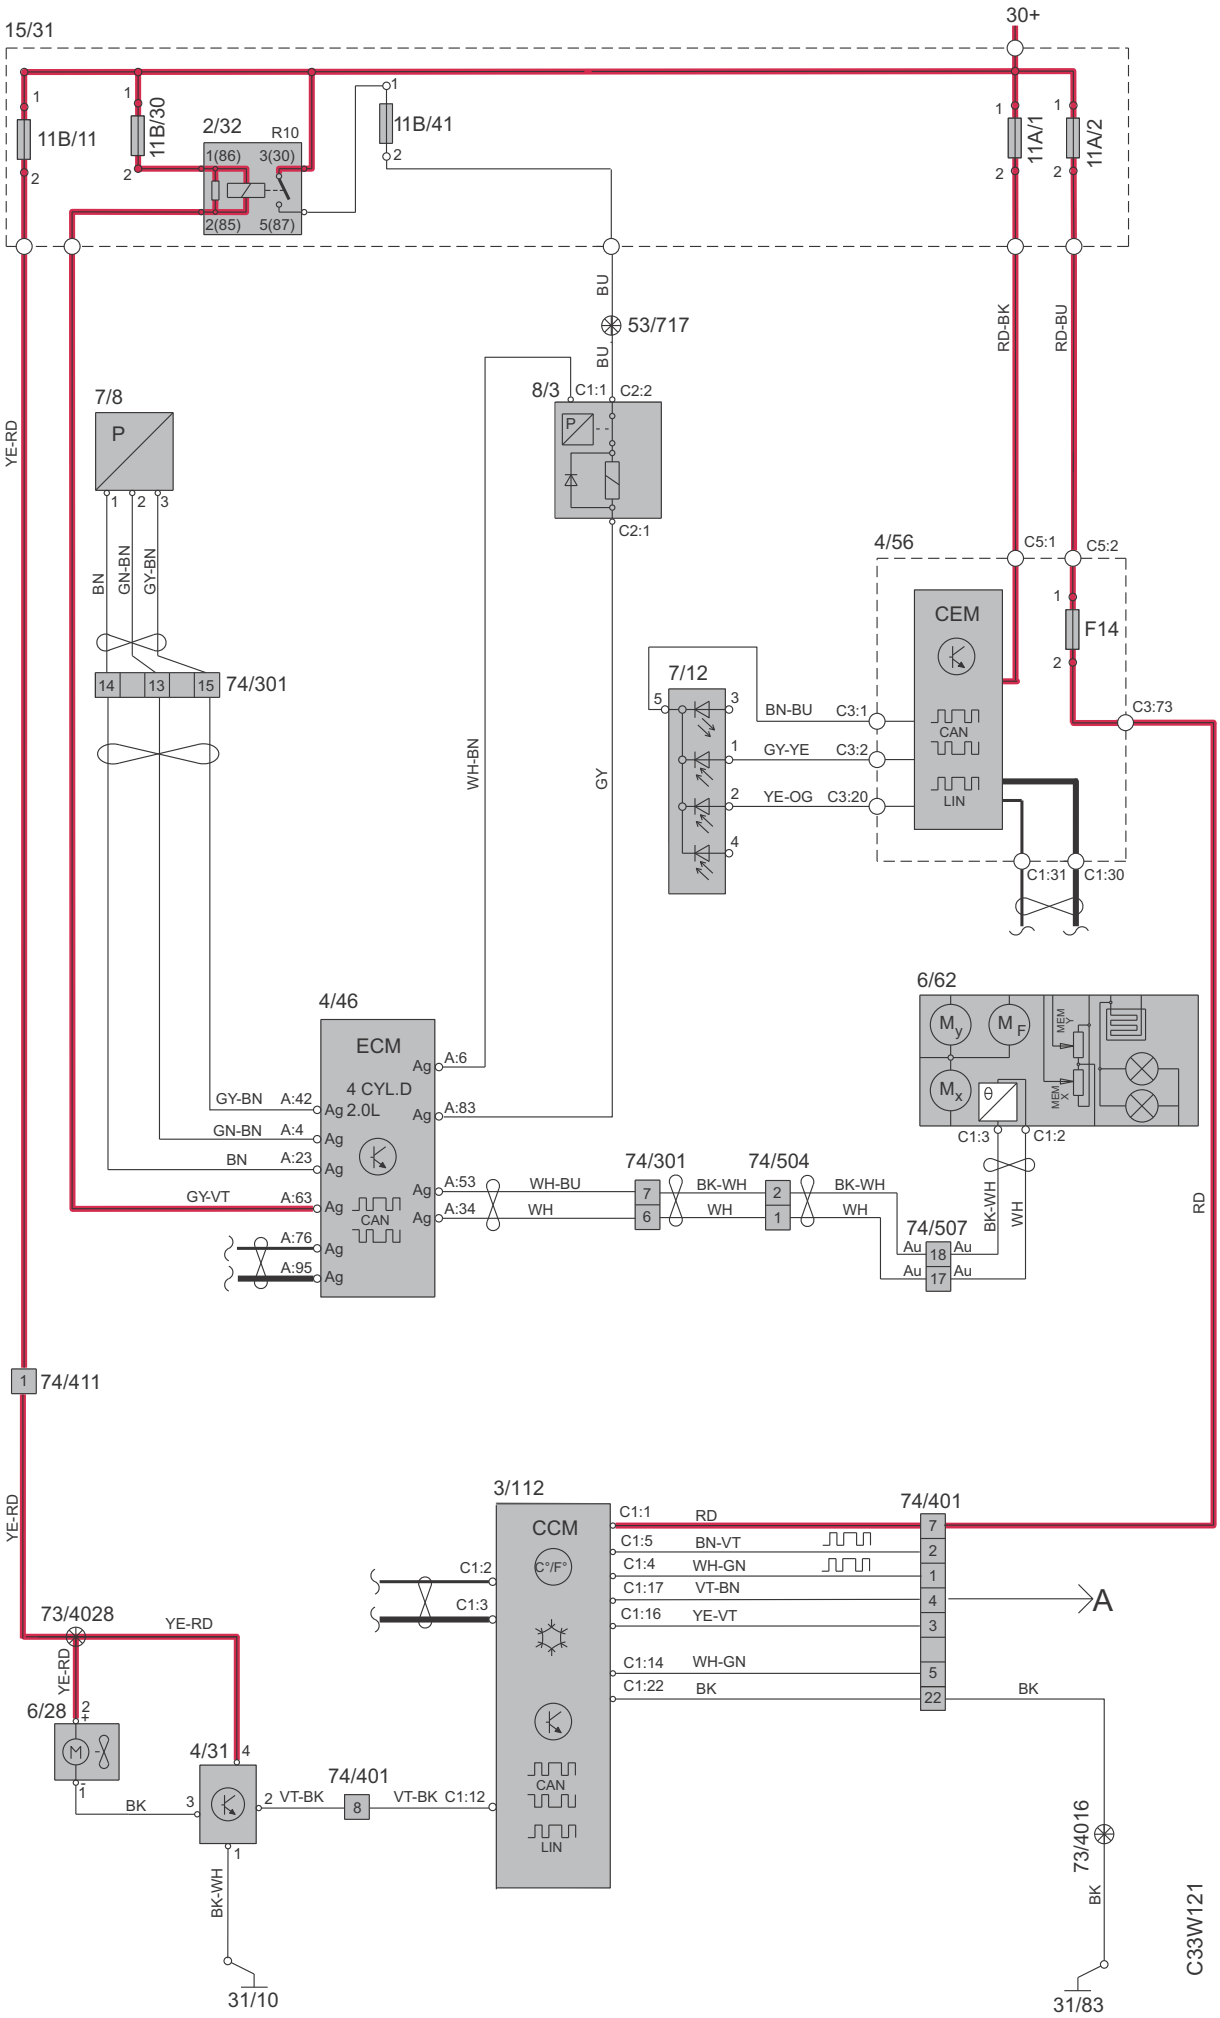

Climate control system 4-Cyl. 2.0L Diesel 2:2

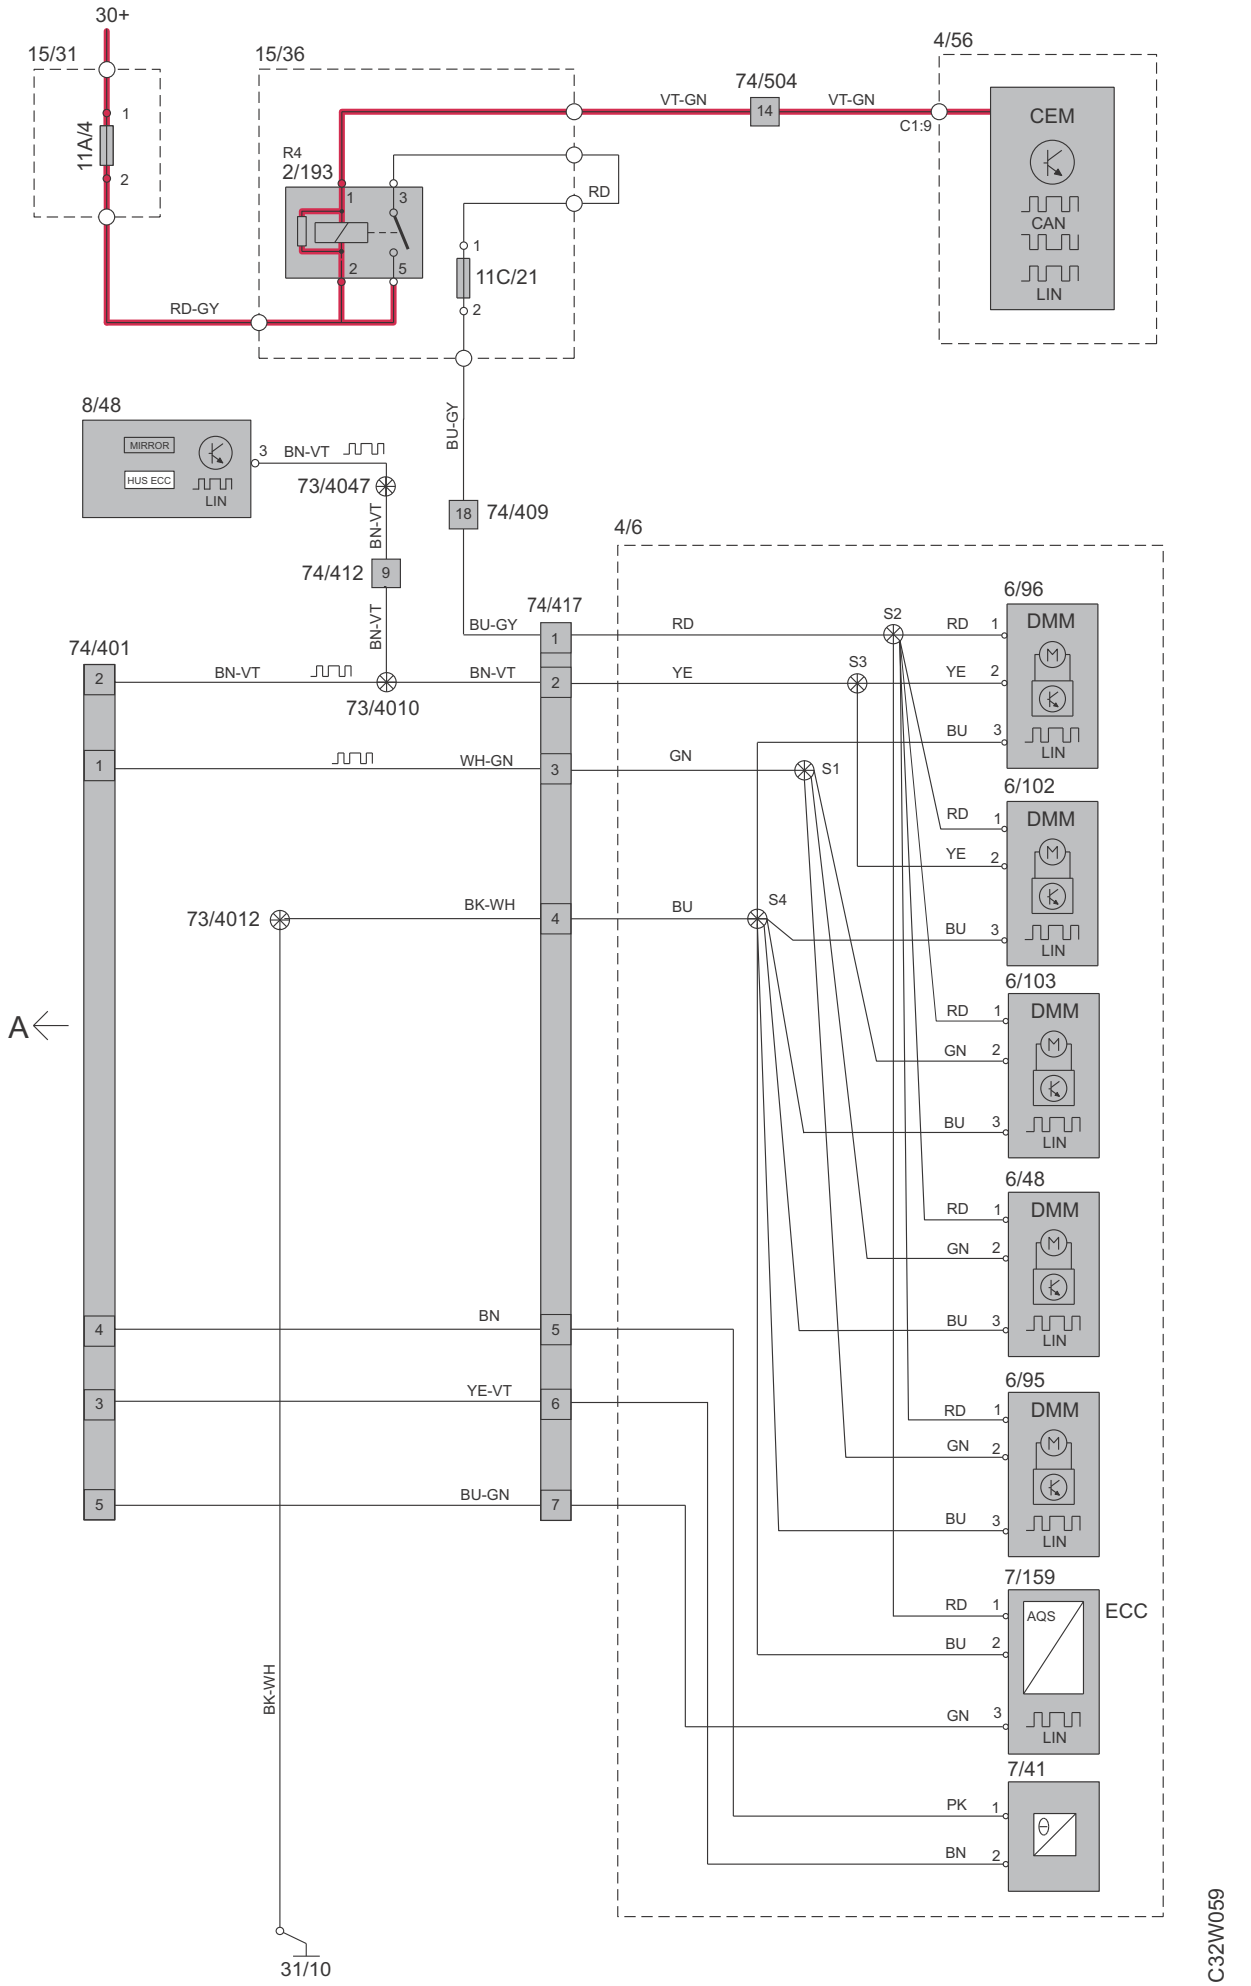

C32W059

Climate control system 6-Cyl. 1:2

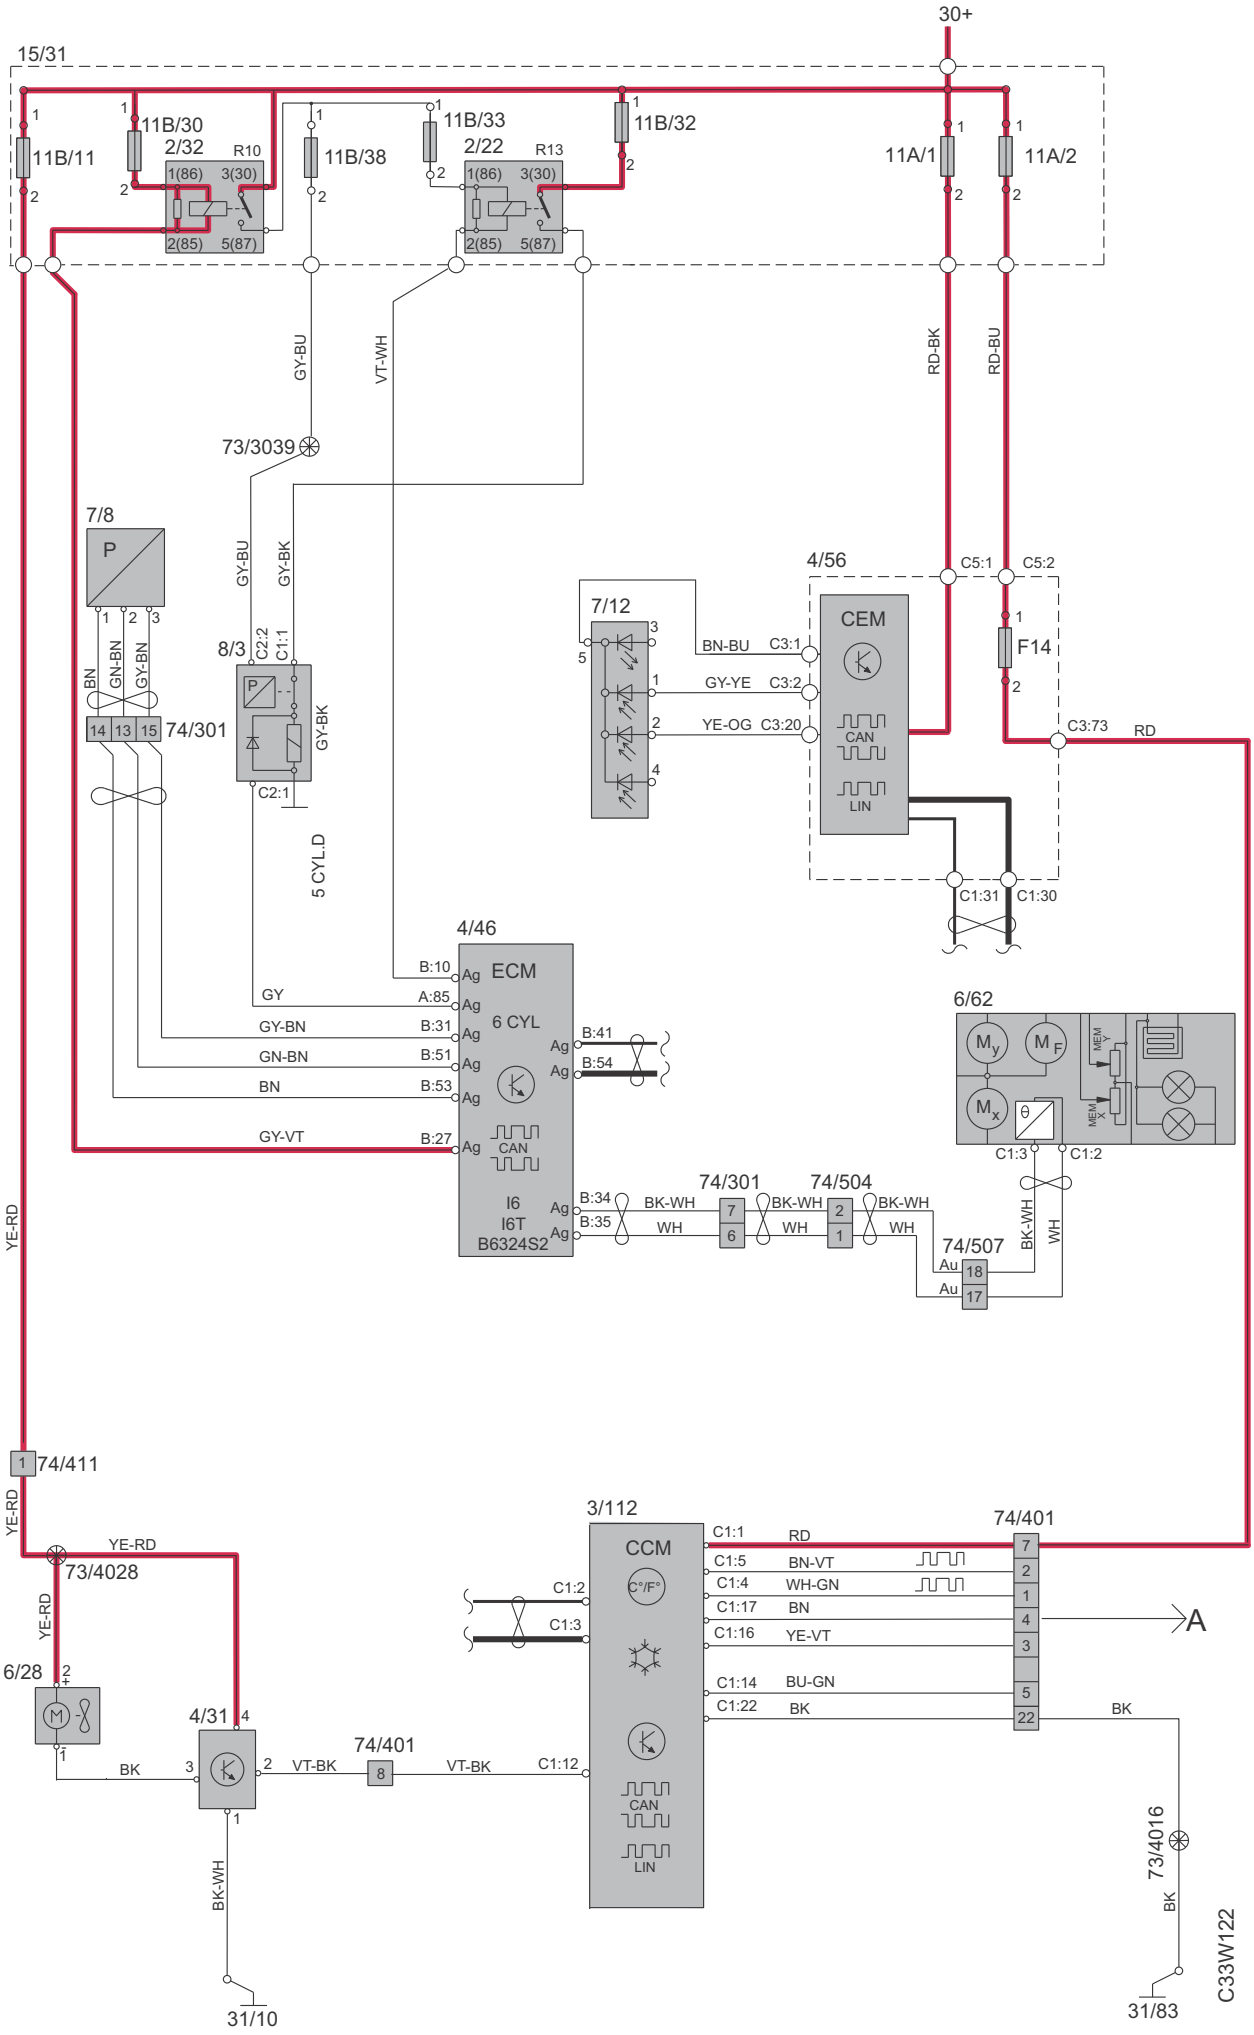

Group 87 Climate control system
Climate control system 6-Cyl. 2:2

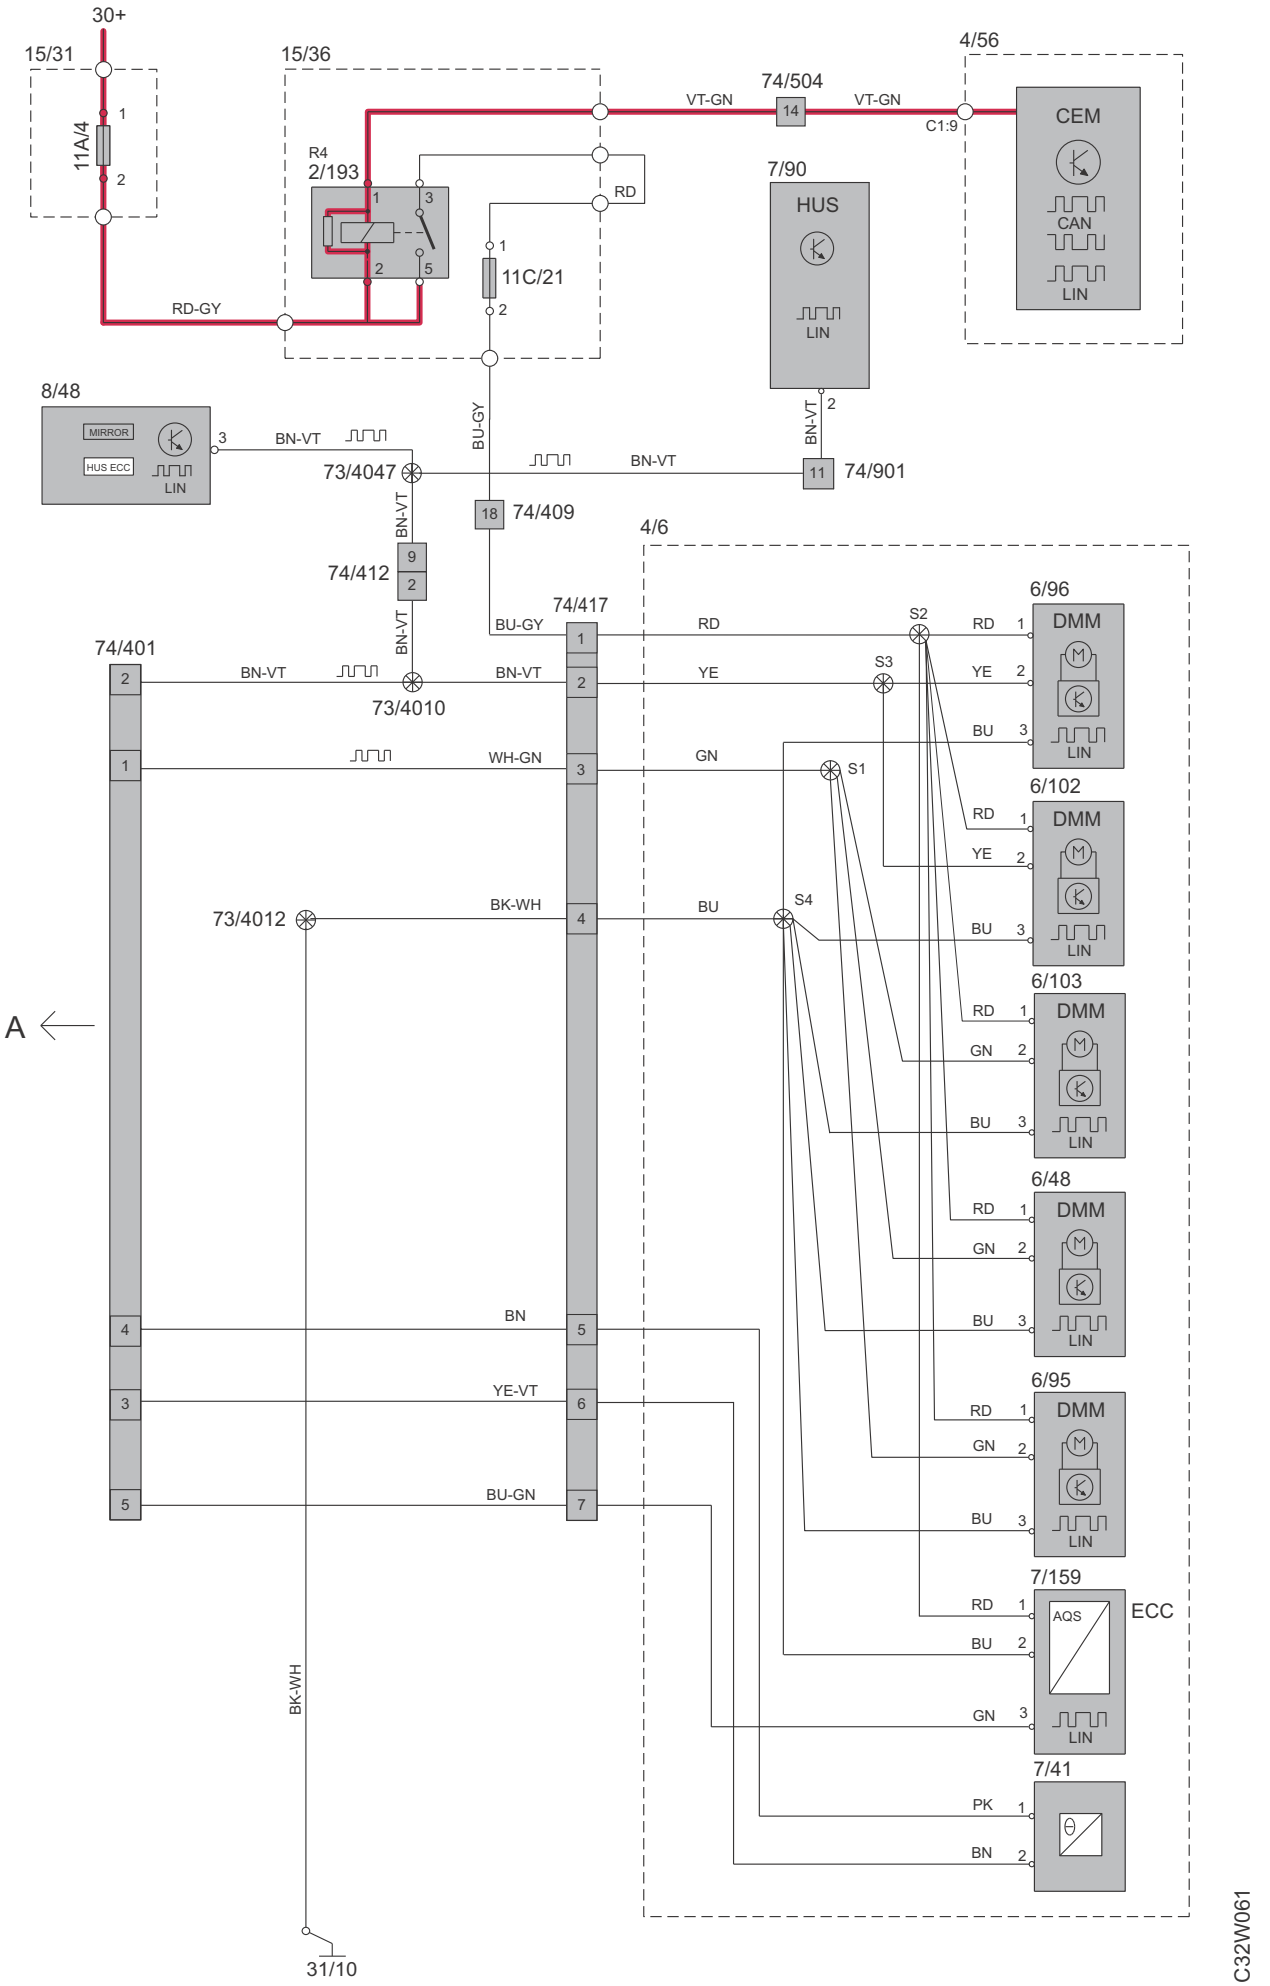

Climate control system 5-Cyl. Turbo 1:2

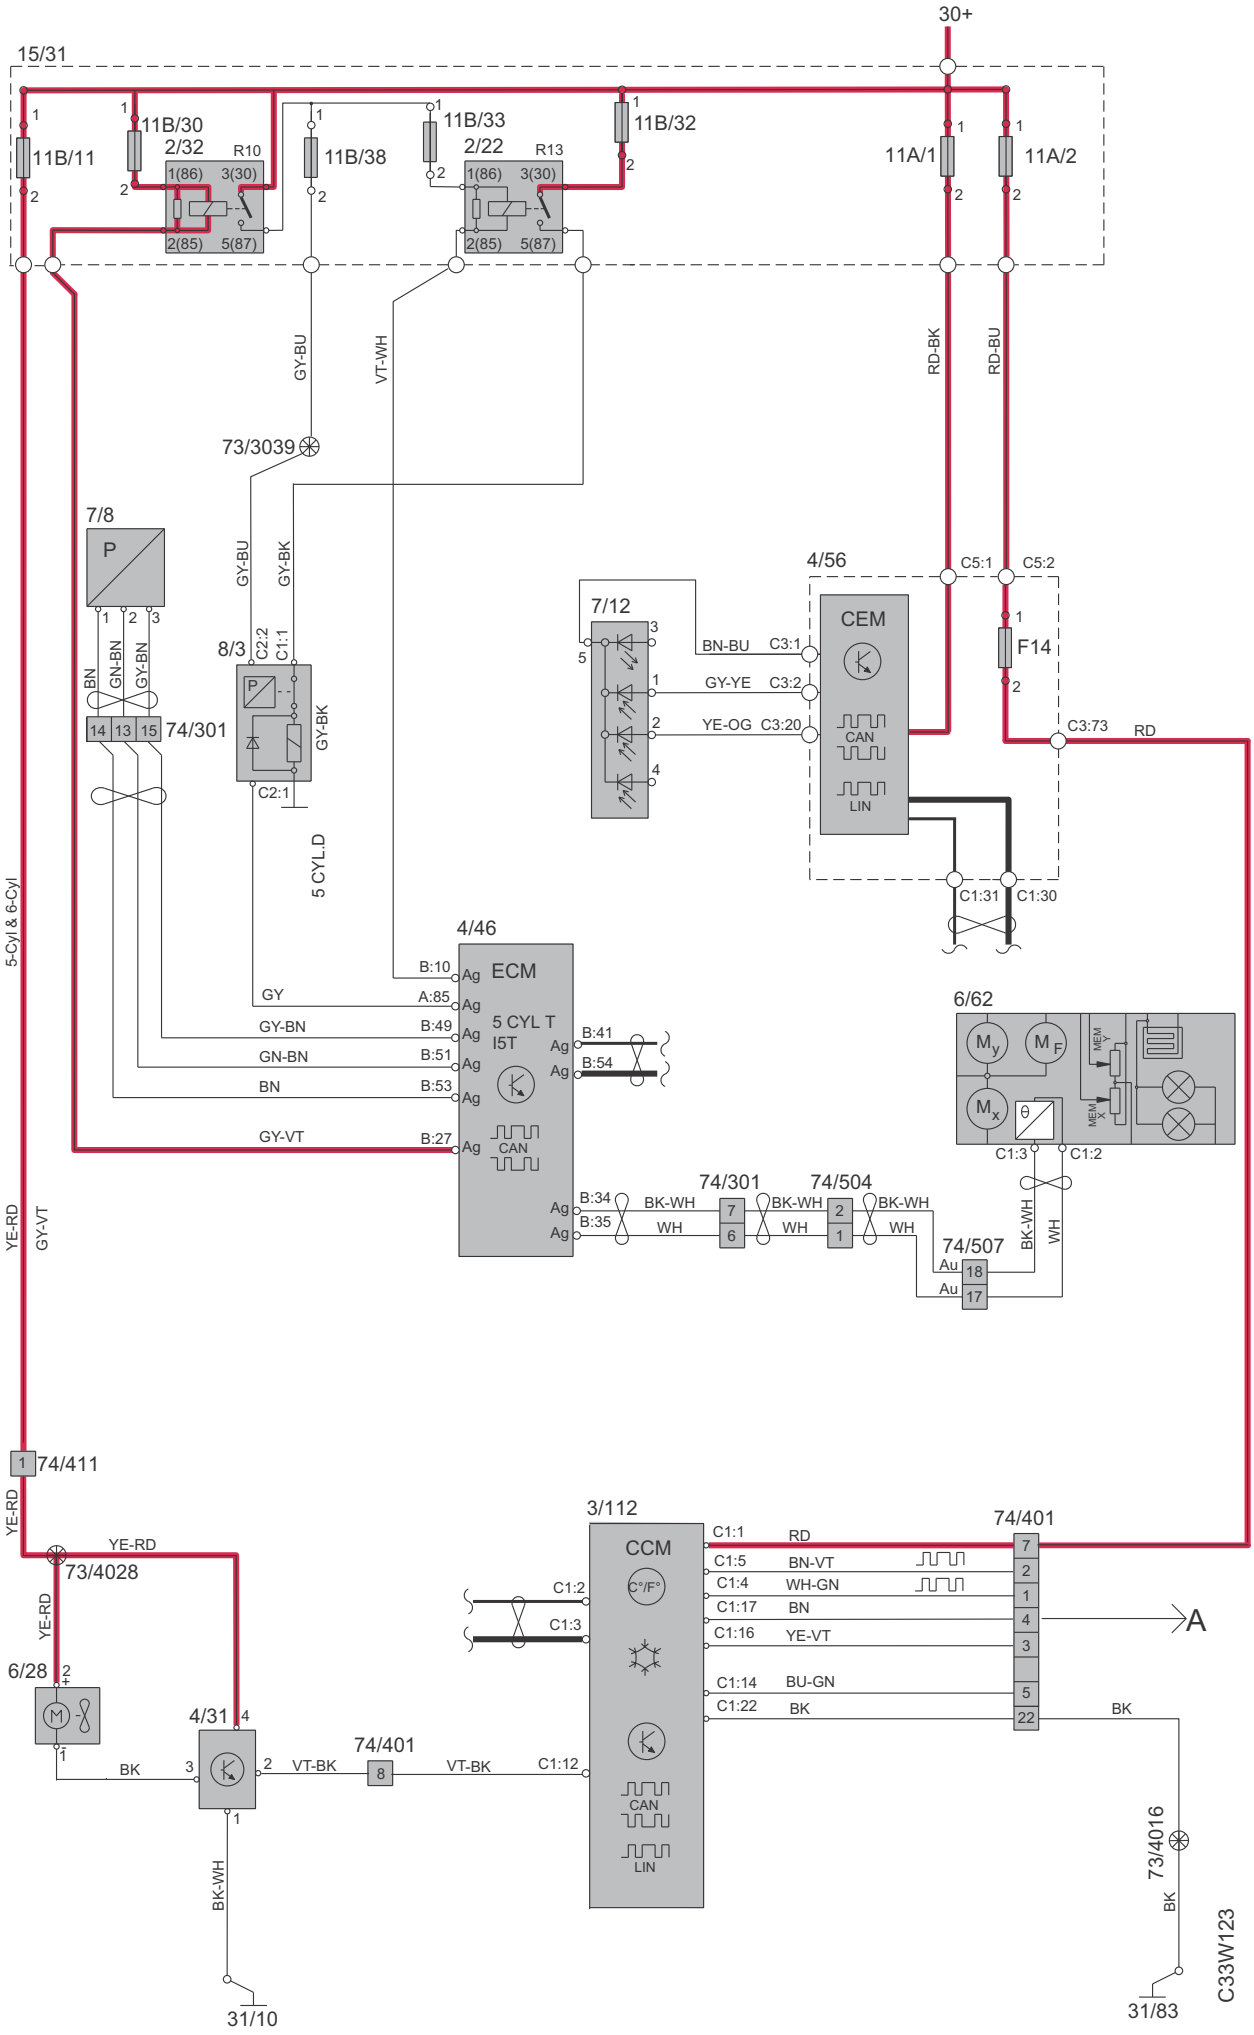

Climate control system 5-Cyl. Turbo 2:2

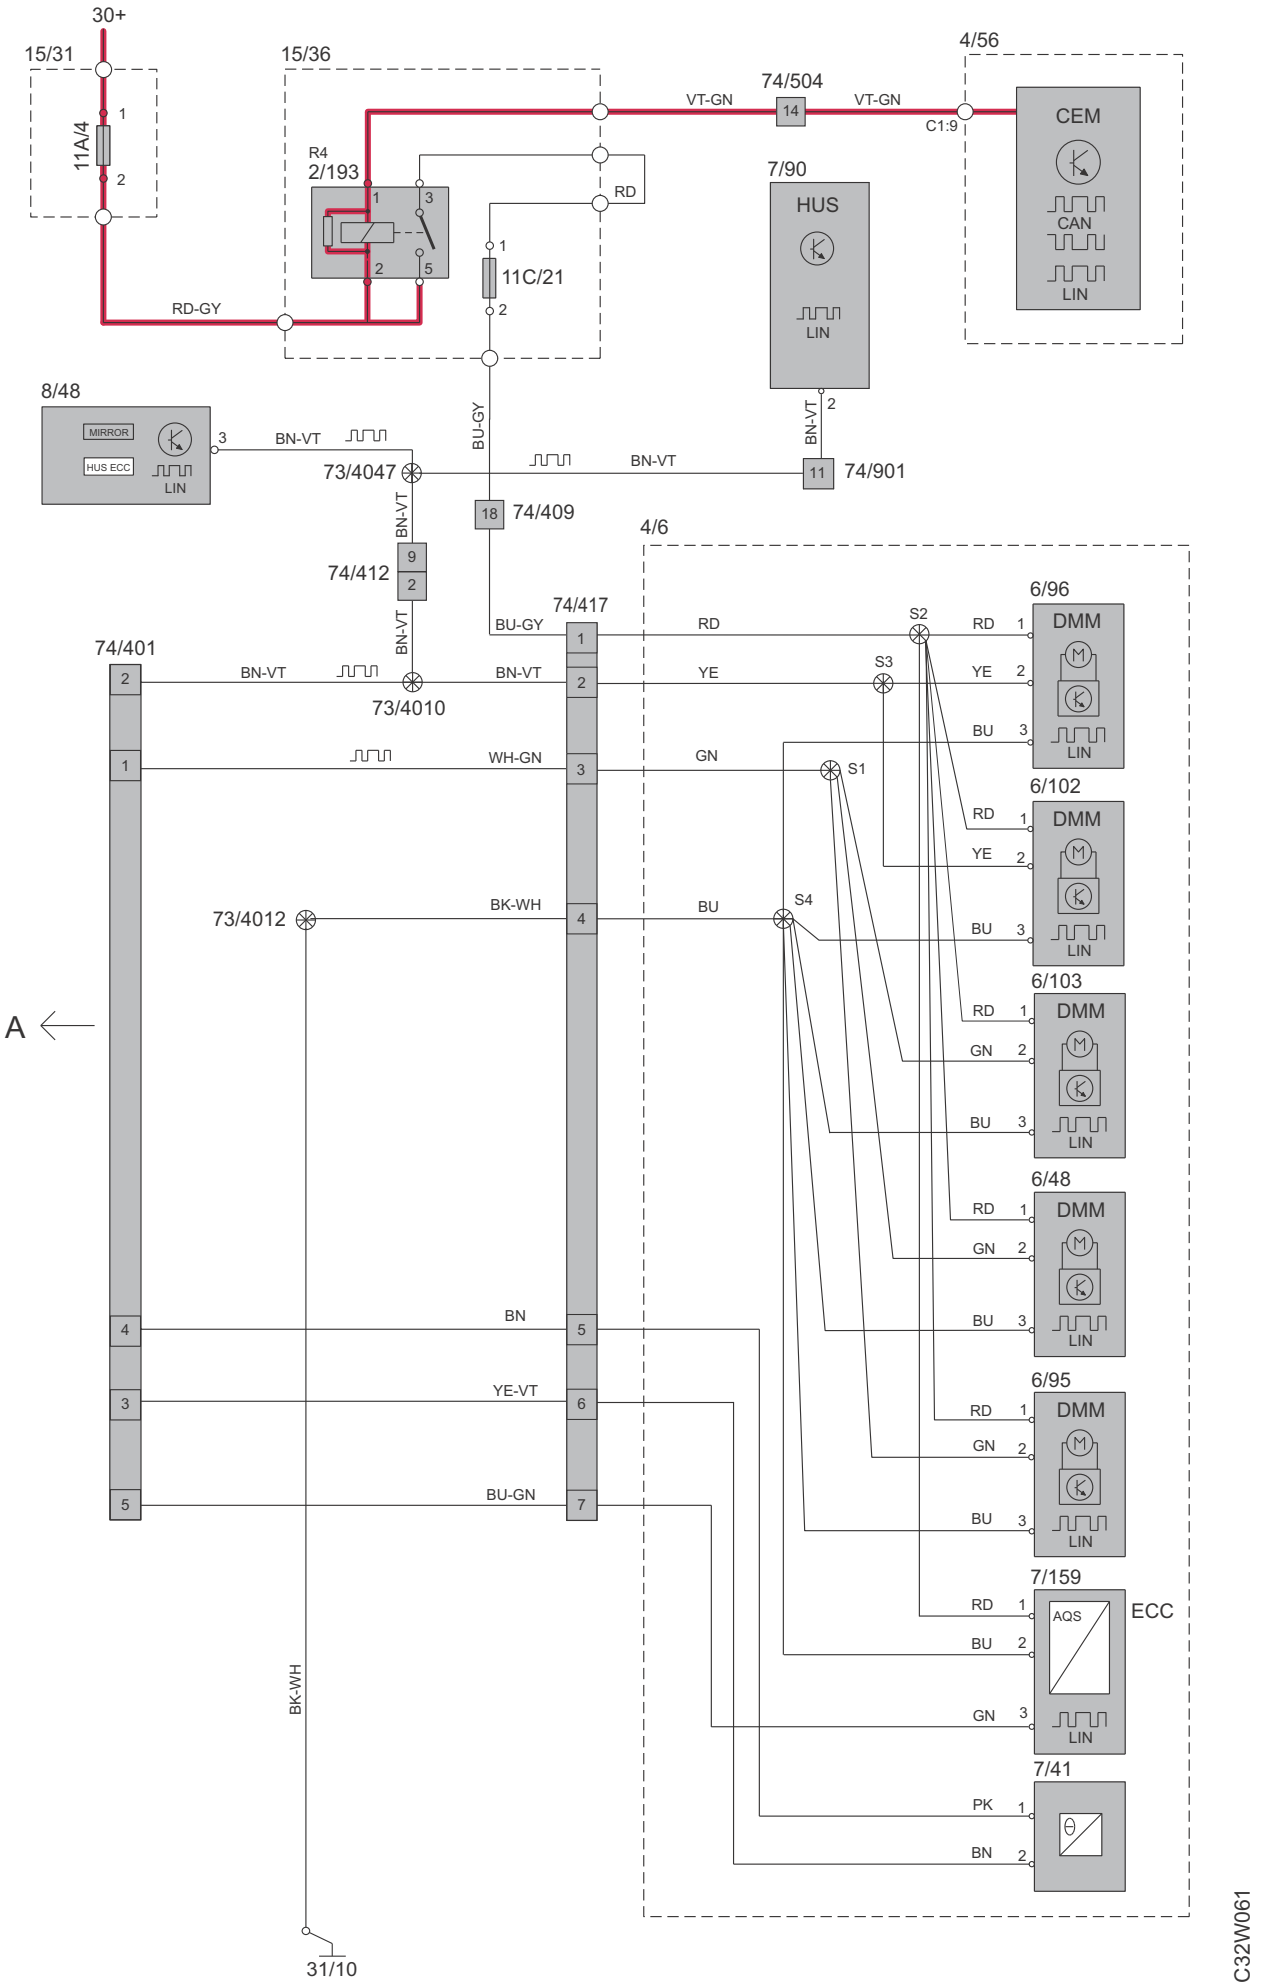

Climate control system 5-Cyl. Diesel 1:2

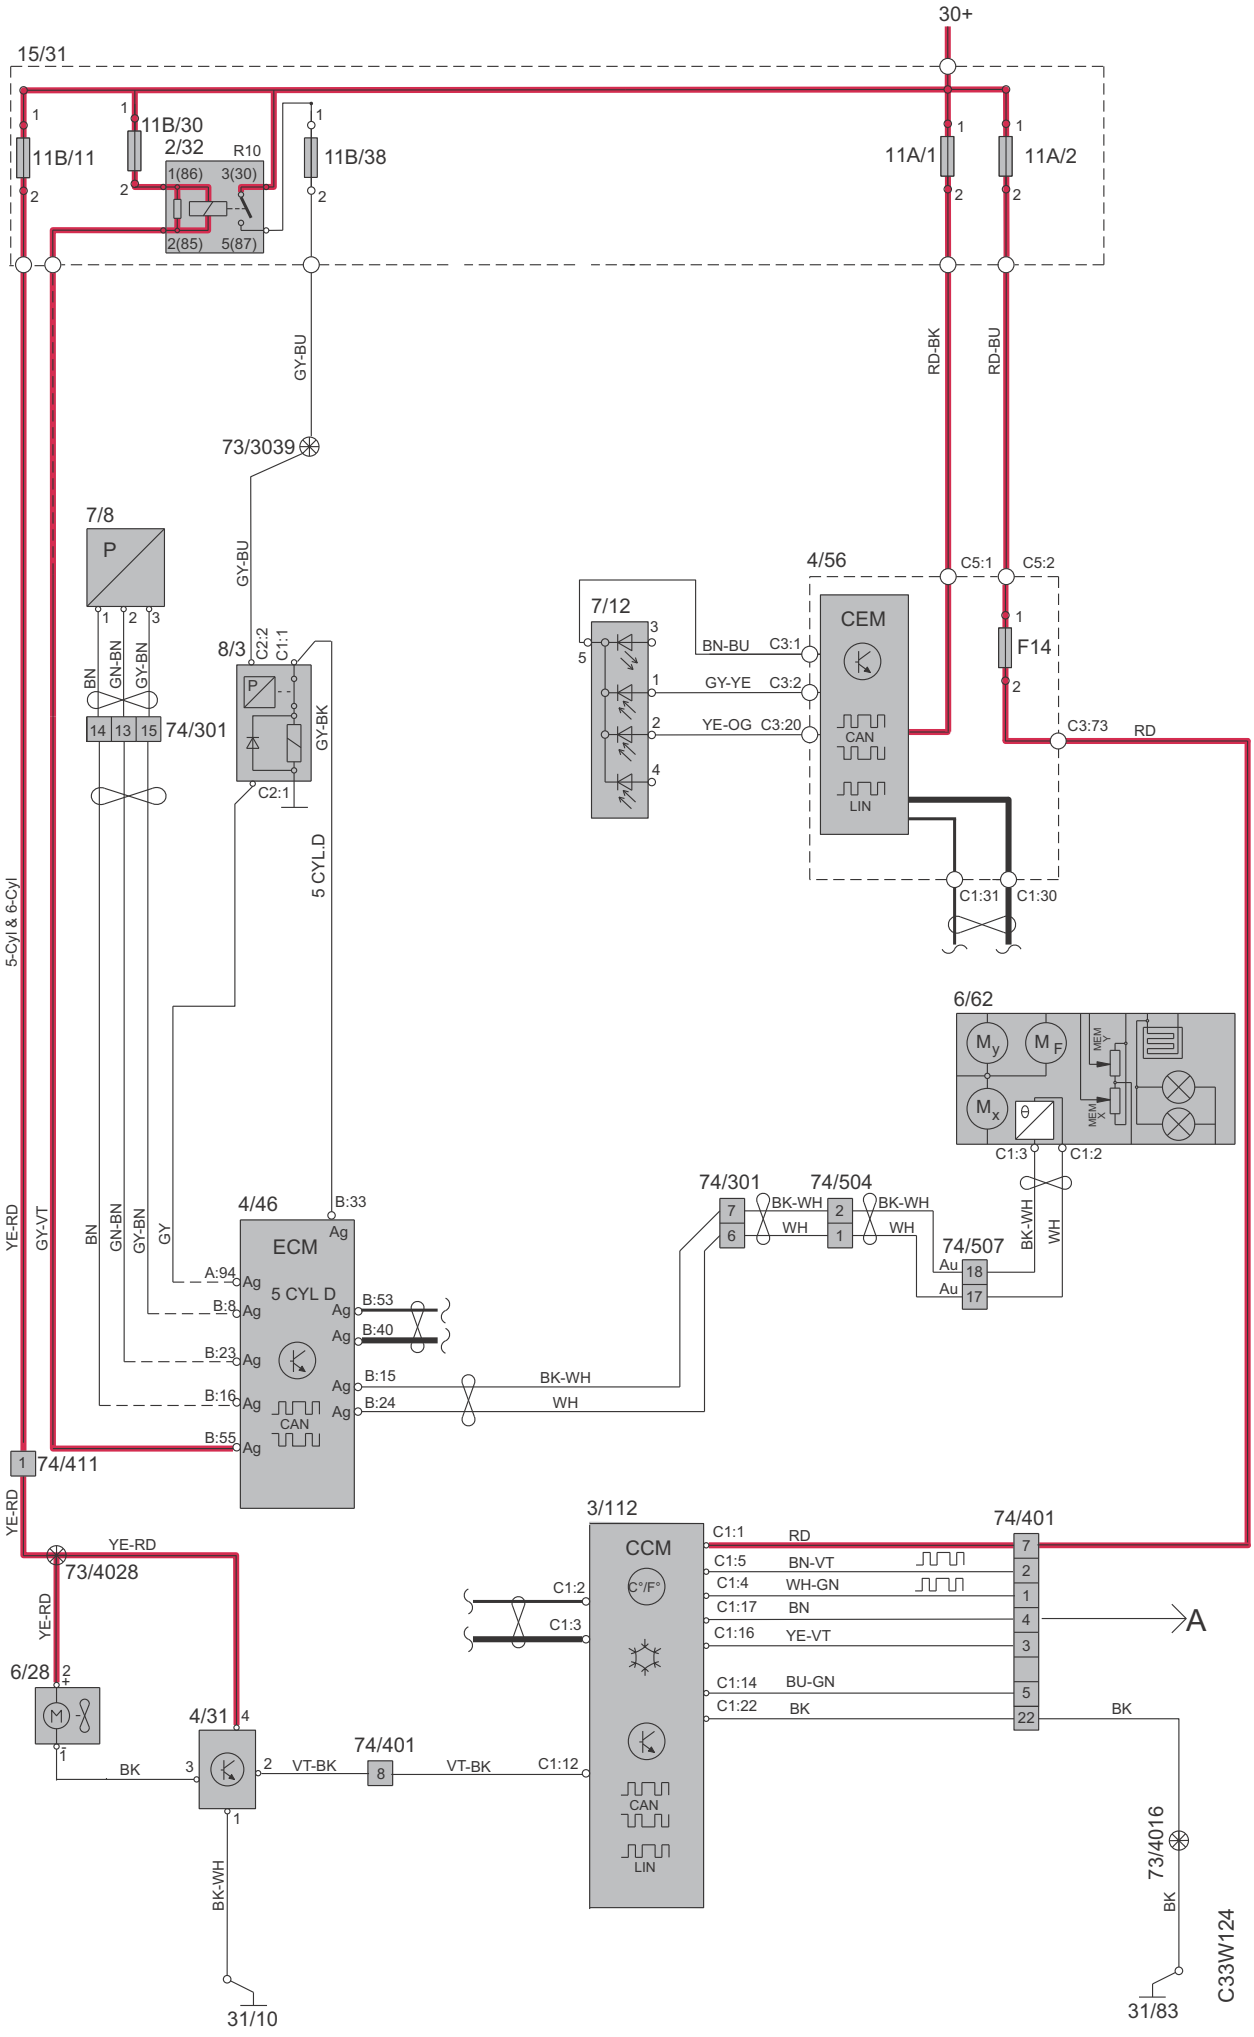

Climate control system 5-Cyl. Diesel 2:2

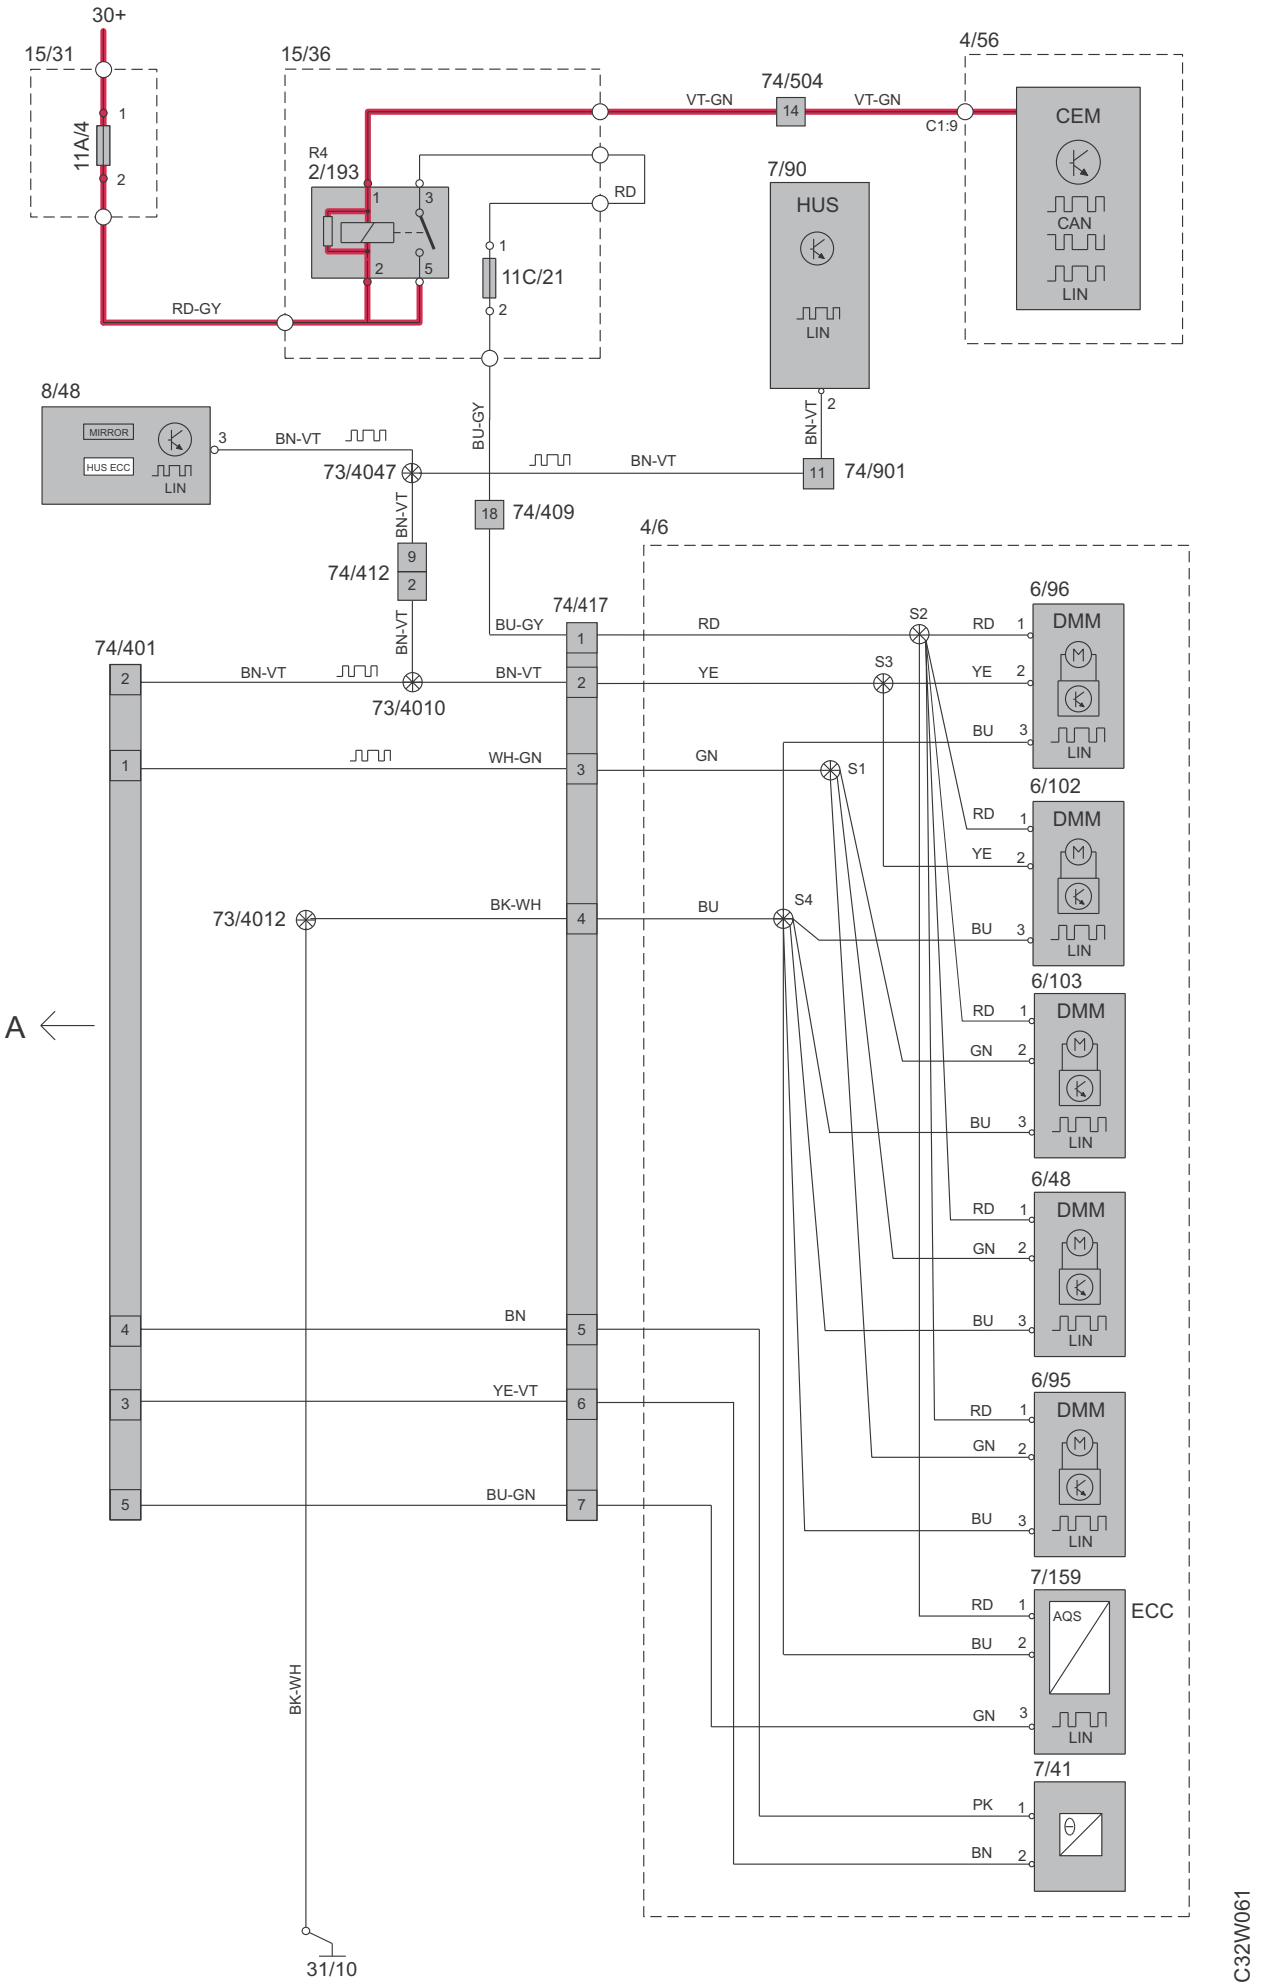

C32W061

Climate control system PTC-elements

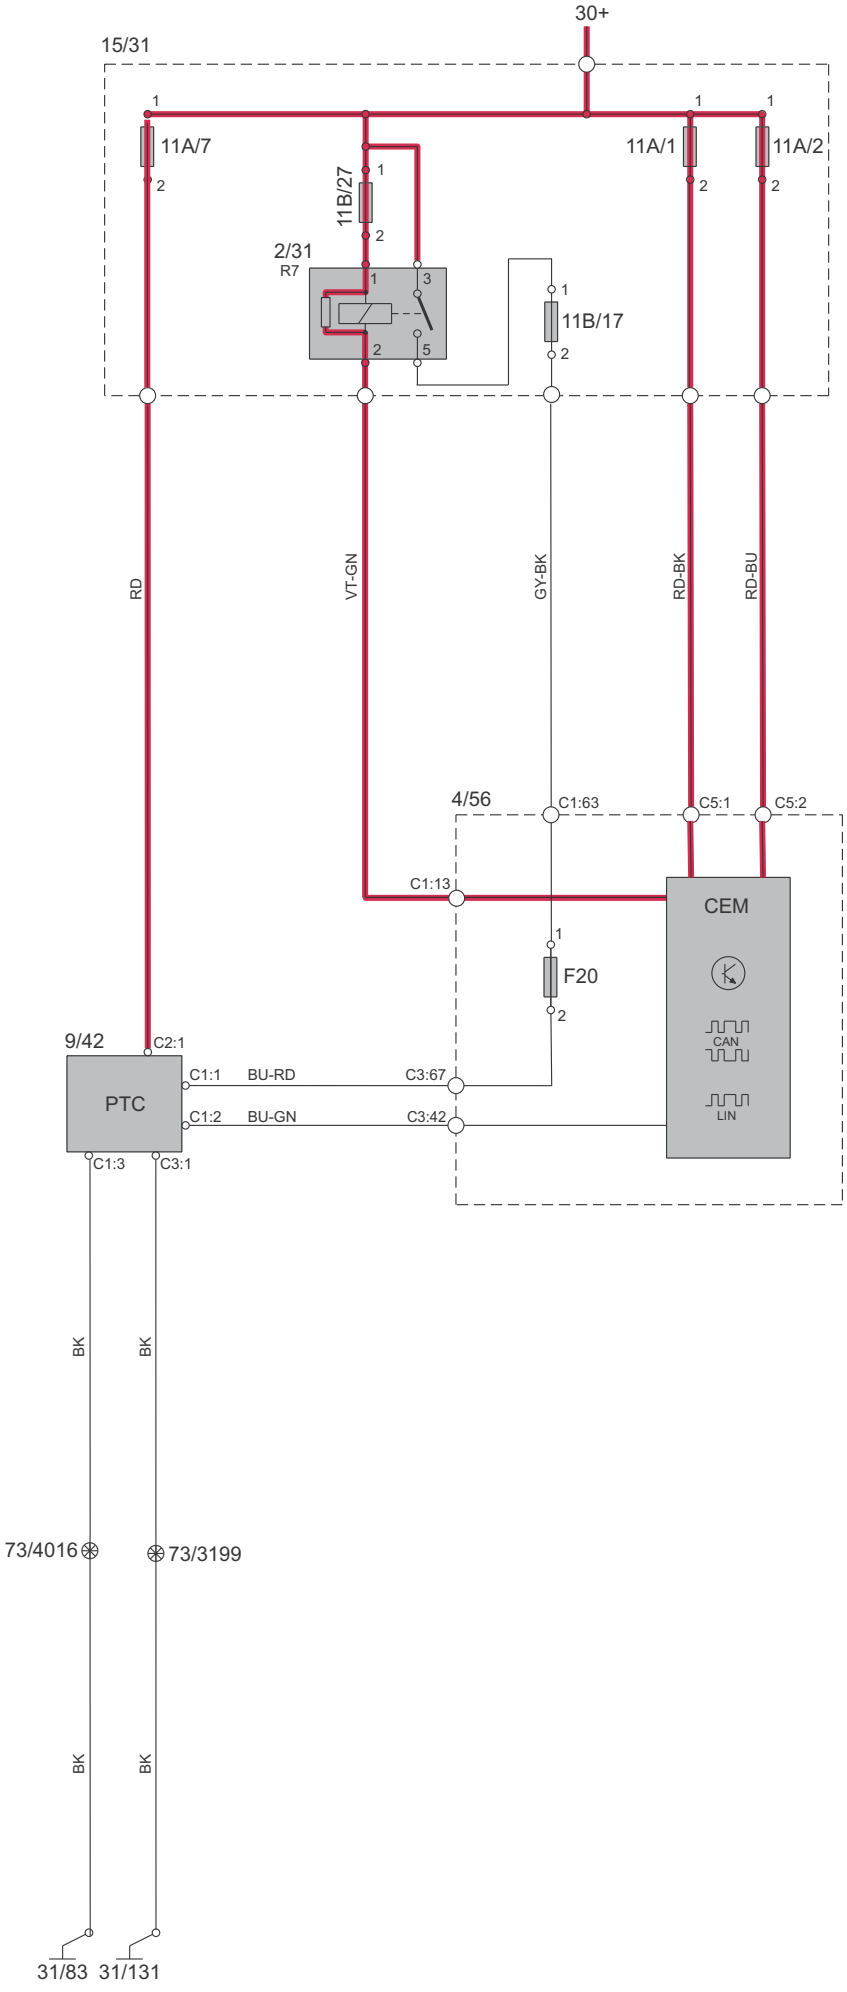

C33W187

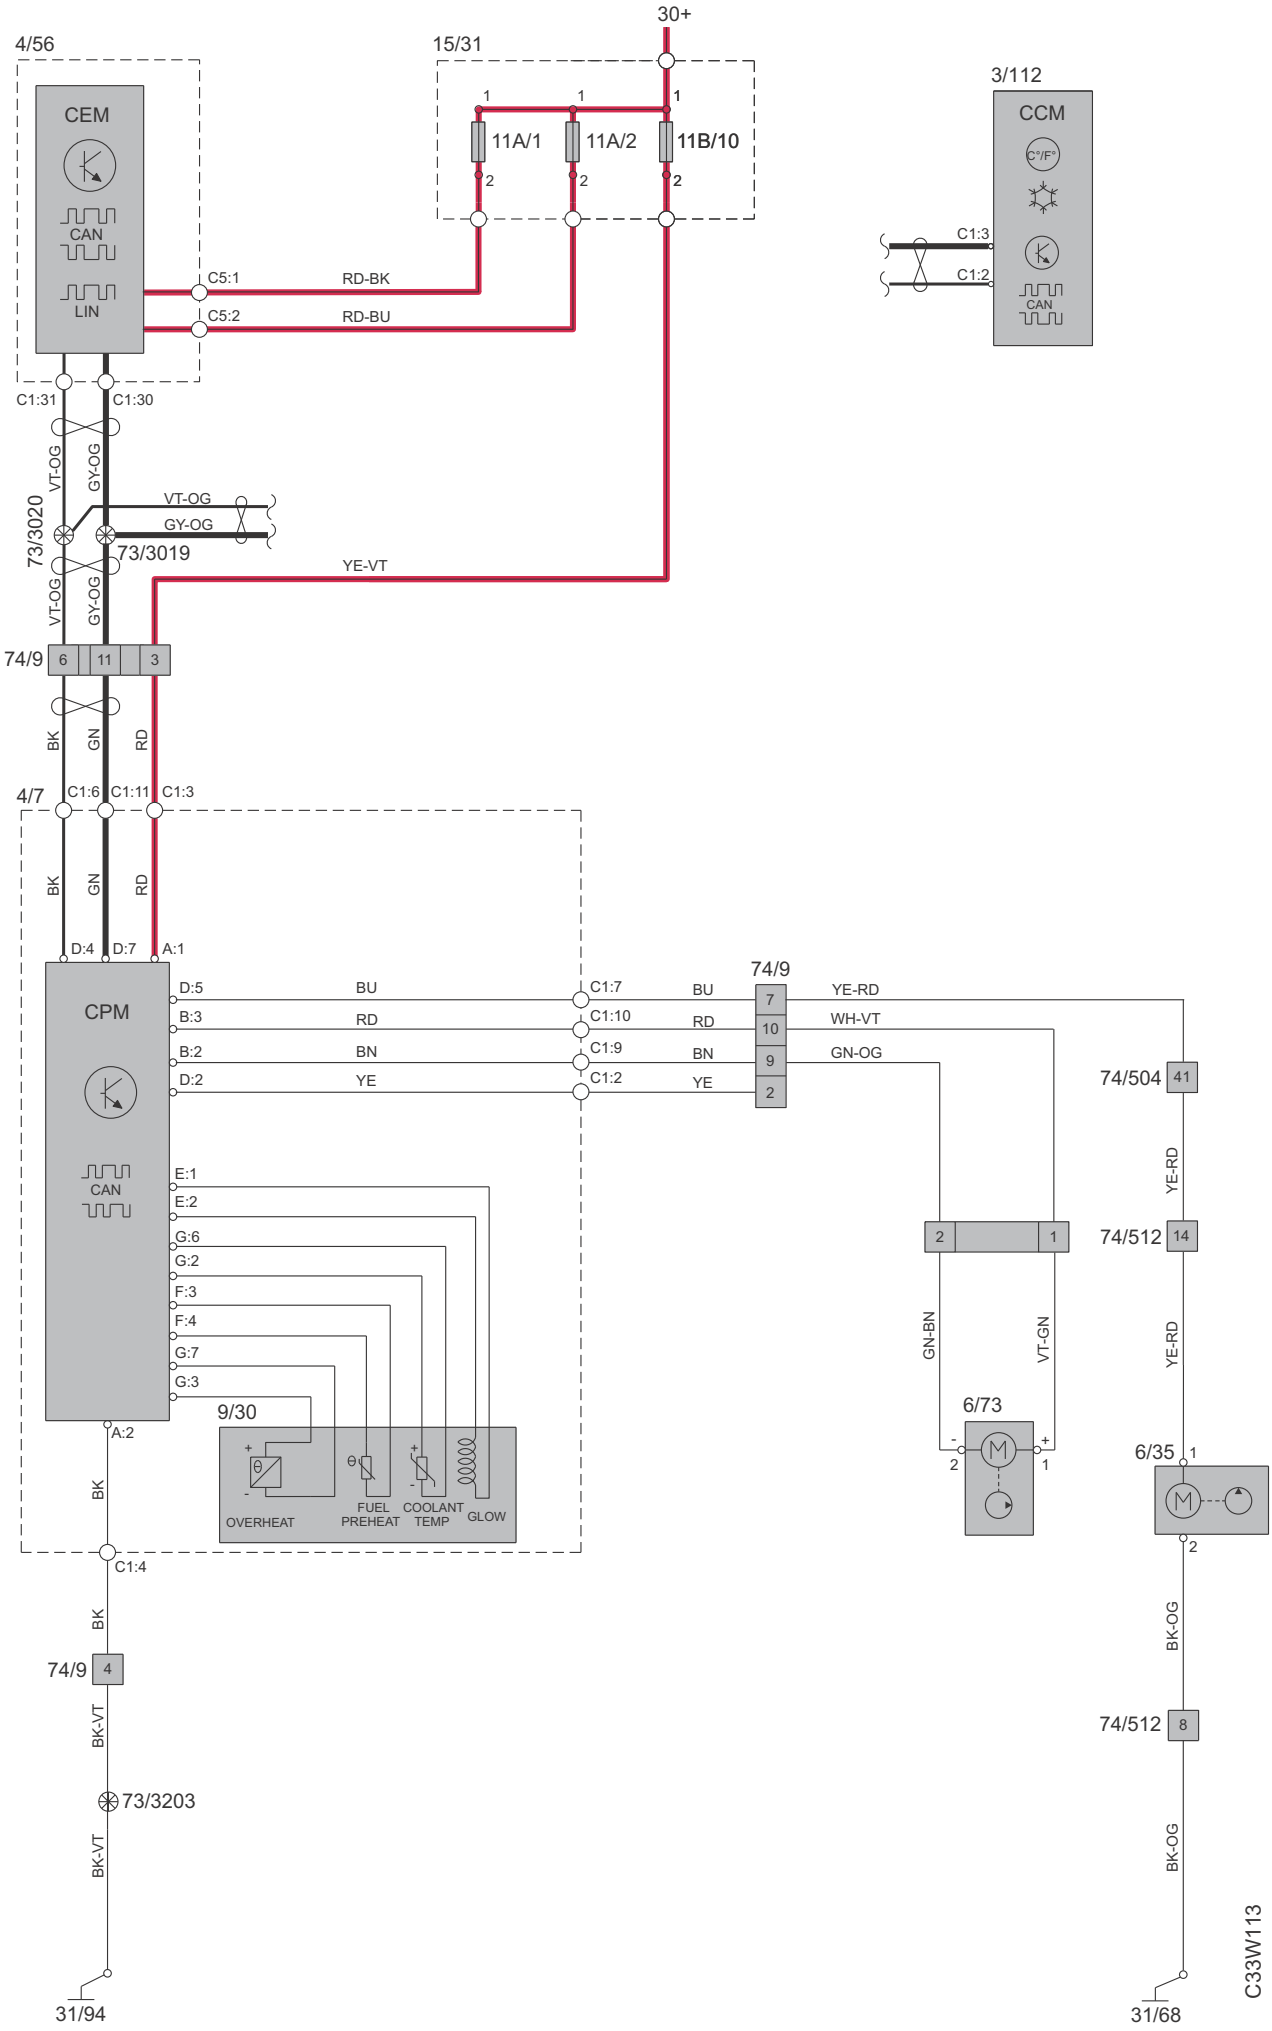
30+
4/56
15/31
3/112
CEM
CAN
LIN
11A/1
11A/2
11B/10
CCM
C°/F°
C1:3
C1:2
C5:1
RD-BK
C5:2
RD-BU
C1:31
C1:30
VT-OG
GY-OG
73/3020
73/3019
YE-VT
74/9
6
11
3
BK
GN
RD
4/7
C1:6
C1:11
C1:3
D:4
D:7
A:1
CPM
D:5
BU
C1:7
B:3
RD
C1:10
B:2
BN
C1:9
D:2
YE
C1:2
E:1
E:2
G:6
G:2
F:3
F:4
G:7
G:3
9/30
OVERHEAT
FUEL PREHEAT
COOLANT TEMP
GLOW
A:2
C1:4
74/9
4
BK-VT
73/3203
31/94
YE-RD
WH-VT
GN-OG
74/504
41
74/512
14
GN-BN
VT-GN
6/73
6/35
BK-OG
8
31/68
C33W113

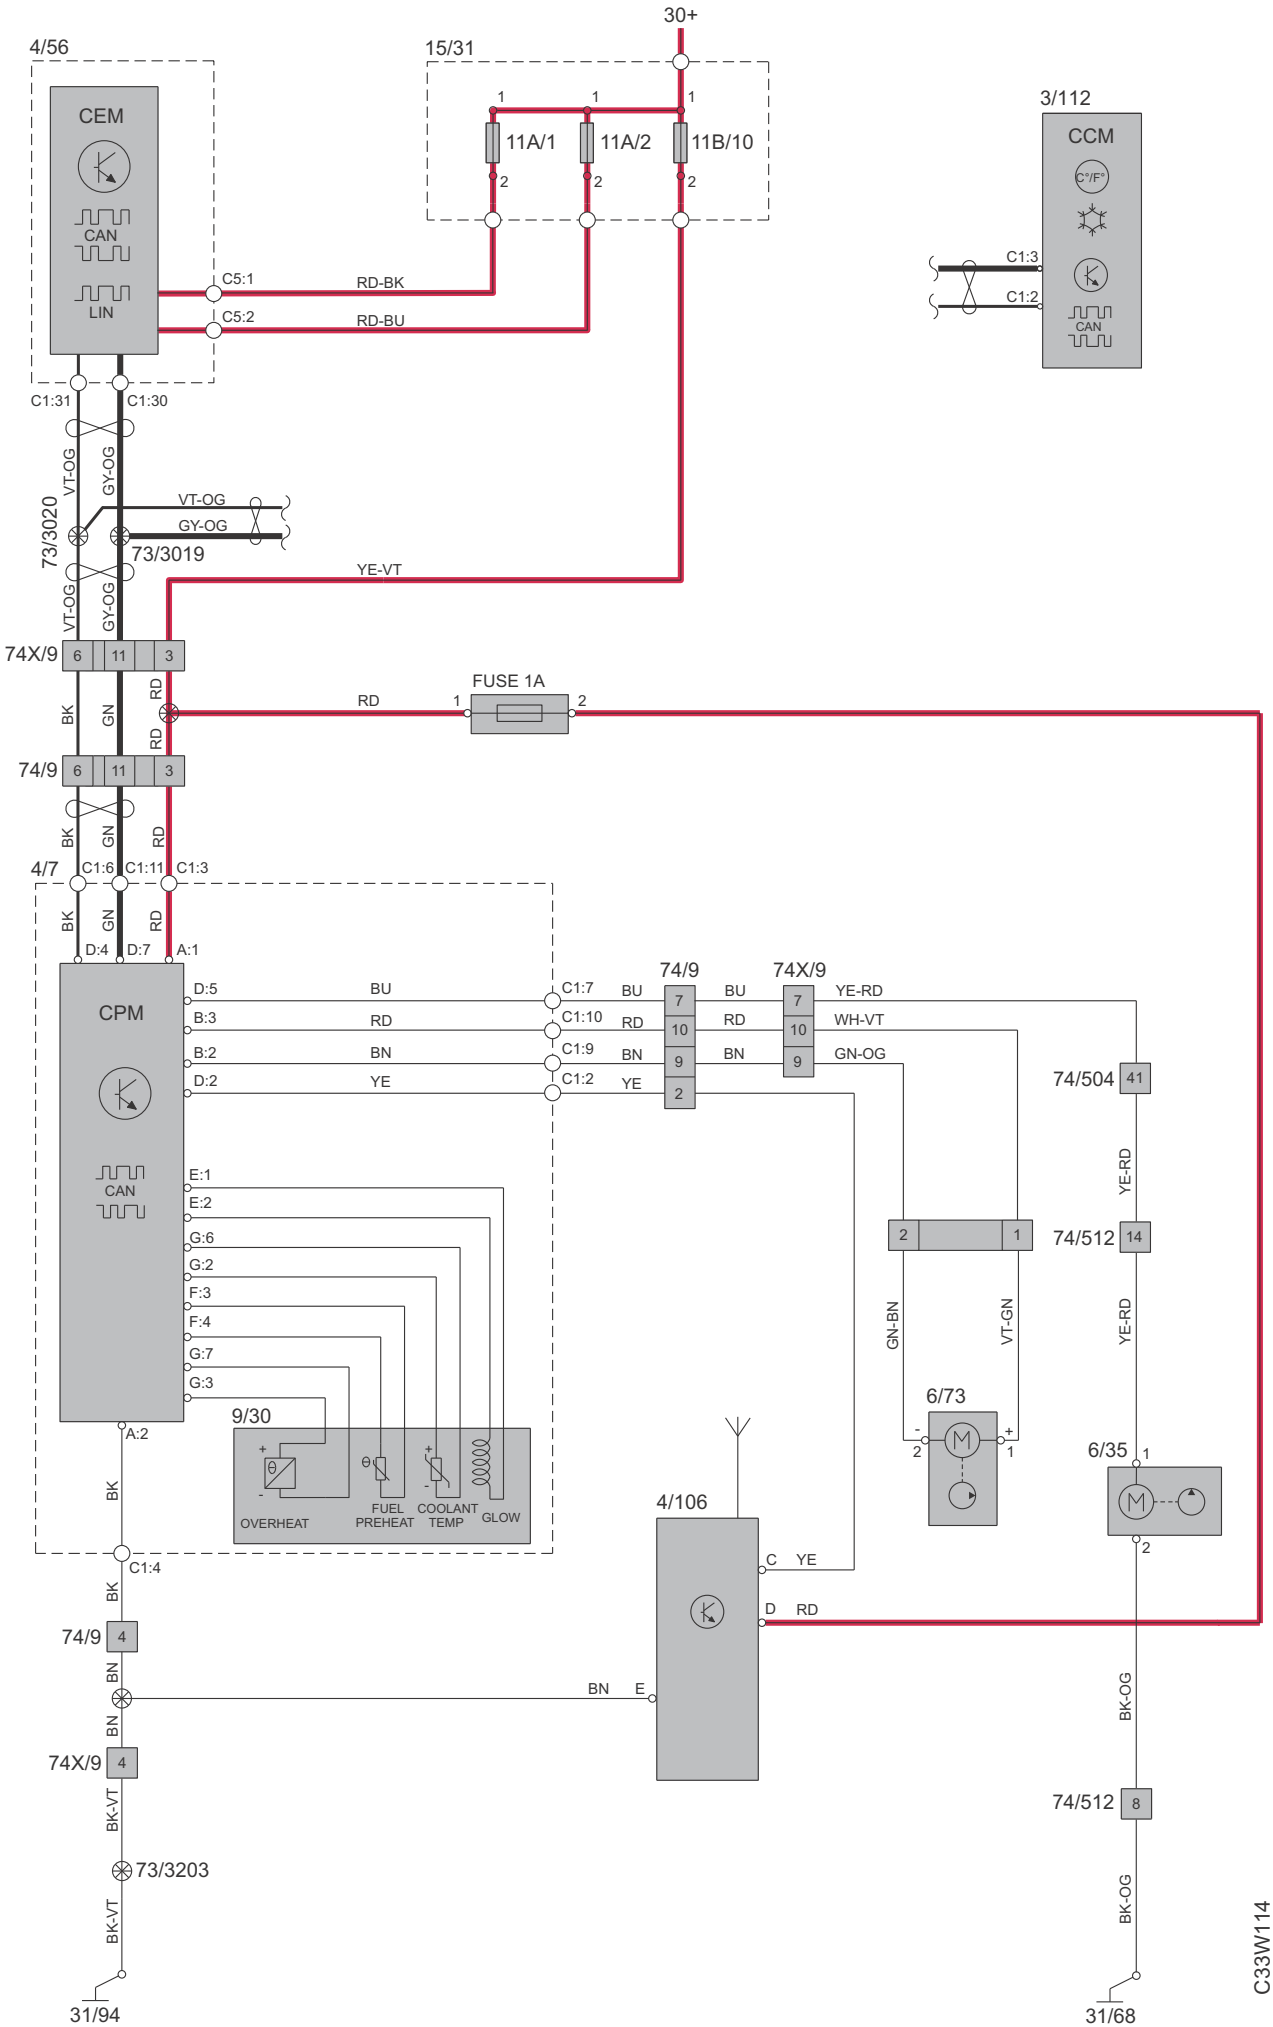
30+
4/56
15/31
3/112
CEM
CAN
LIN
11A/1
11A/2
11B/10
CCM
C°/F°
C5:1
C5:2
RD-BK
RD-BU
C1:3
C1:2
C1:31
C1:30
VT-OG
GY-OG
73/3020
73/3019
YE-VT
74X/9
74/9
FUSE 1A
RD
BK
GN
4/7
C1:6
C1:11
C1:3
D:4
D:7
A:1
CPM
D:5
B:3
B:2
D:2
BU
RD
BN
YE
C1:7
C1:10
C1:9
C1:2
74/9
74X/9
YE-RD
WH-VT
GN-OG
74/504
74/512
E:1
E:2
G:6
G:2
F:3
F:4
G:7
G:3
9/30
OVERHEAT
FUEL PREHEAT
COOLANT TEMP
GLOW
6/73
GN-BN
VT-GN
6/35
4/106
C
YE
D
RD
A:2
C1:4
74/9
74X/9
BN
E
BK-VT
73/3203
BK-OG
74/512
31/94
31/68
C33W114

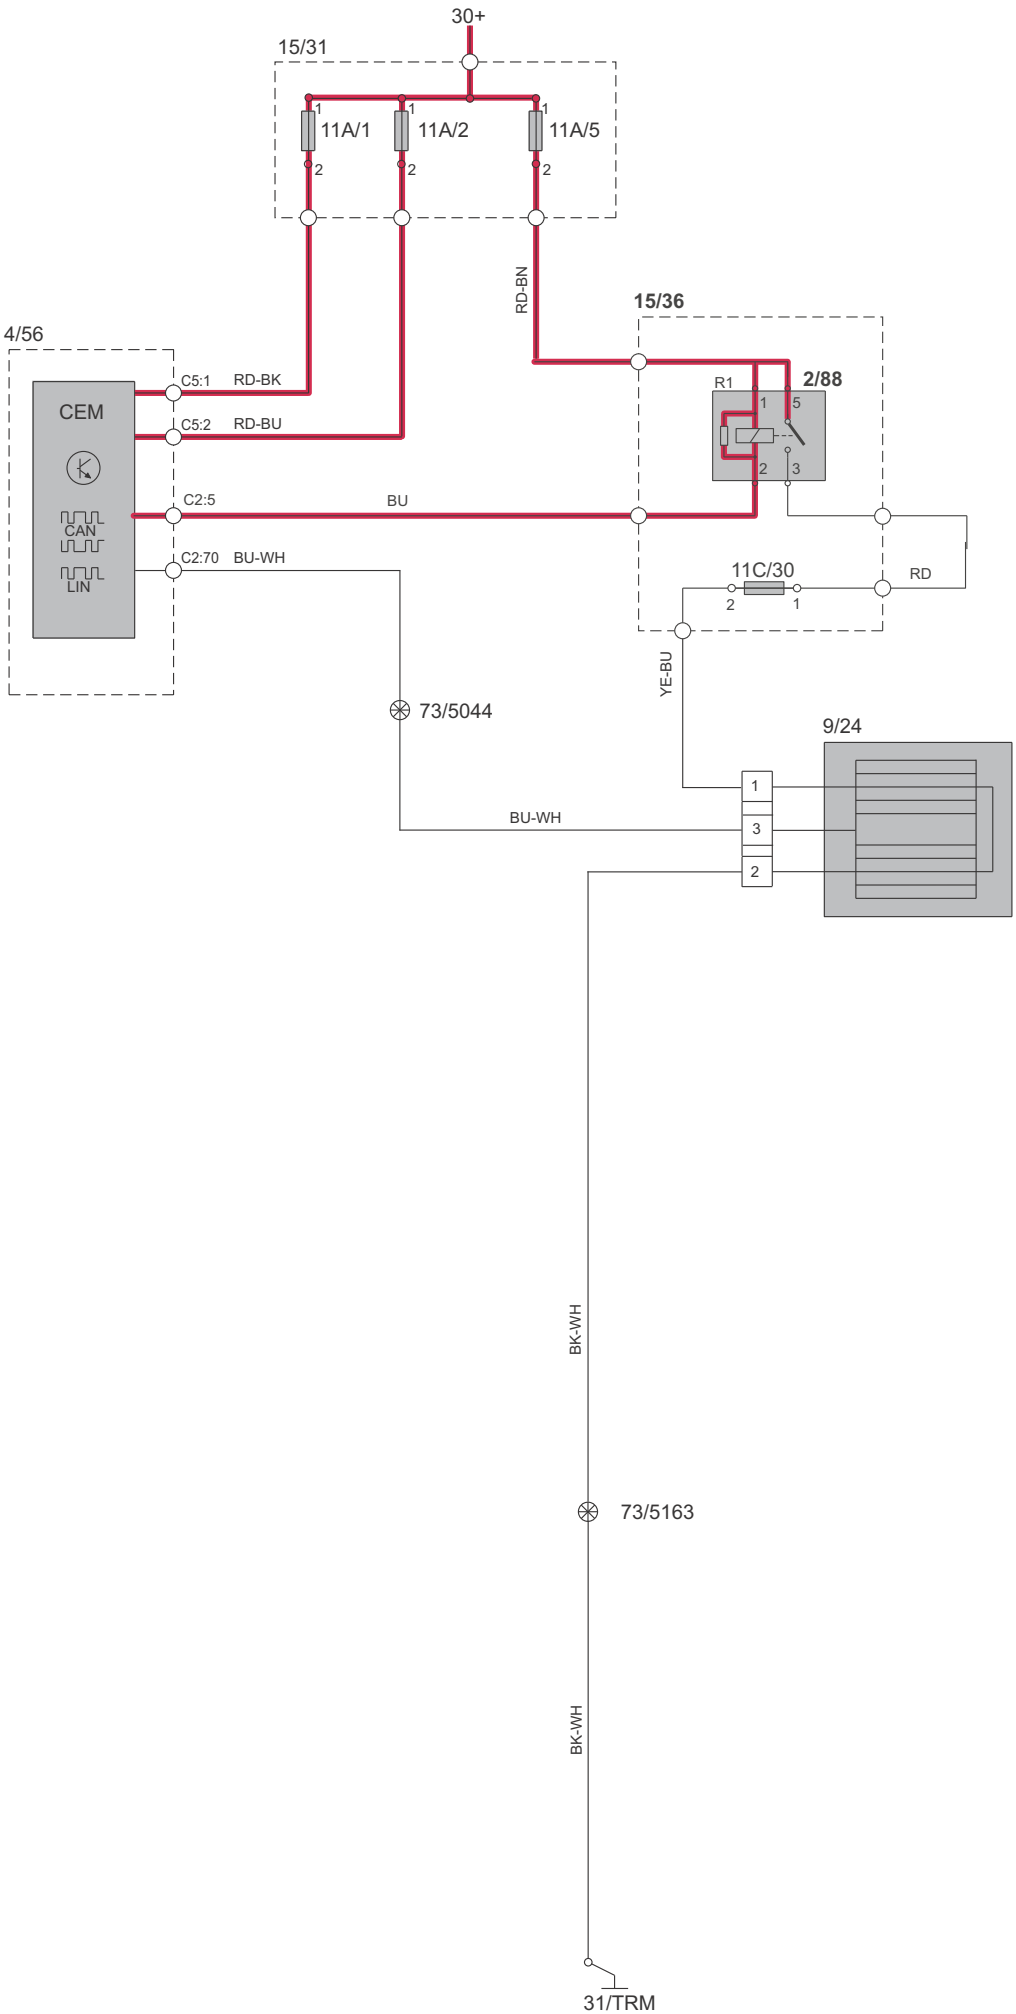
30+
15/31
11A/1
11A/2
11A/5
RD-BN
15/36
2/88
R1
4/56
CEM
CAN
LIN
C5:1 RD-BK
C5:2 RD-BU
C2:5 BU
C2:70 BU-WH
11C/30
RD
YE-BU
73/5044
9/24
BU-WH
BK-WH
73/5163
BK-WH
31/TRM
C24W164

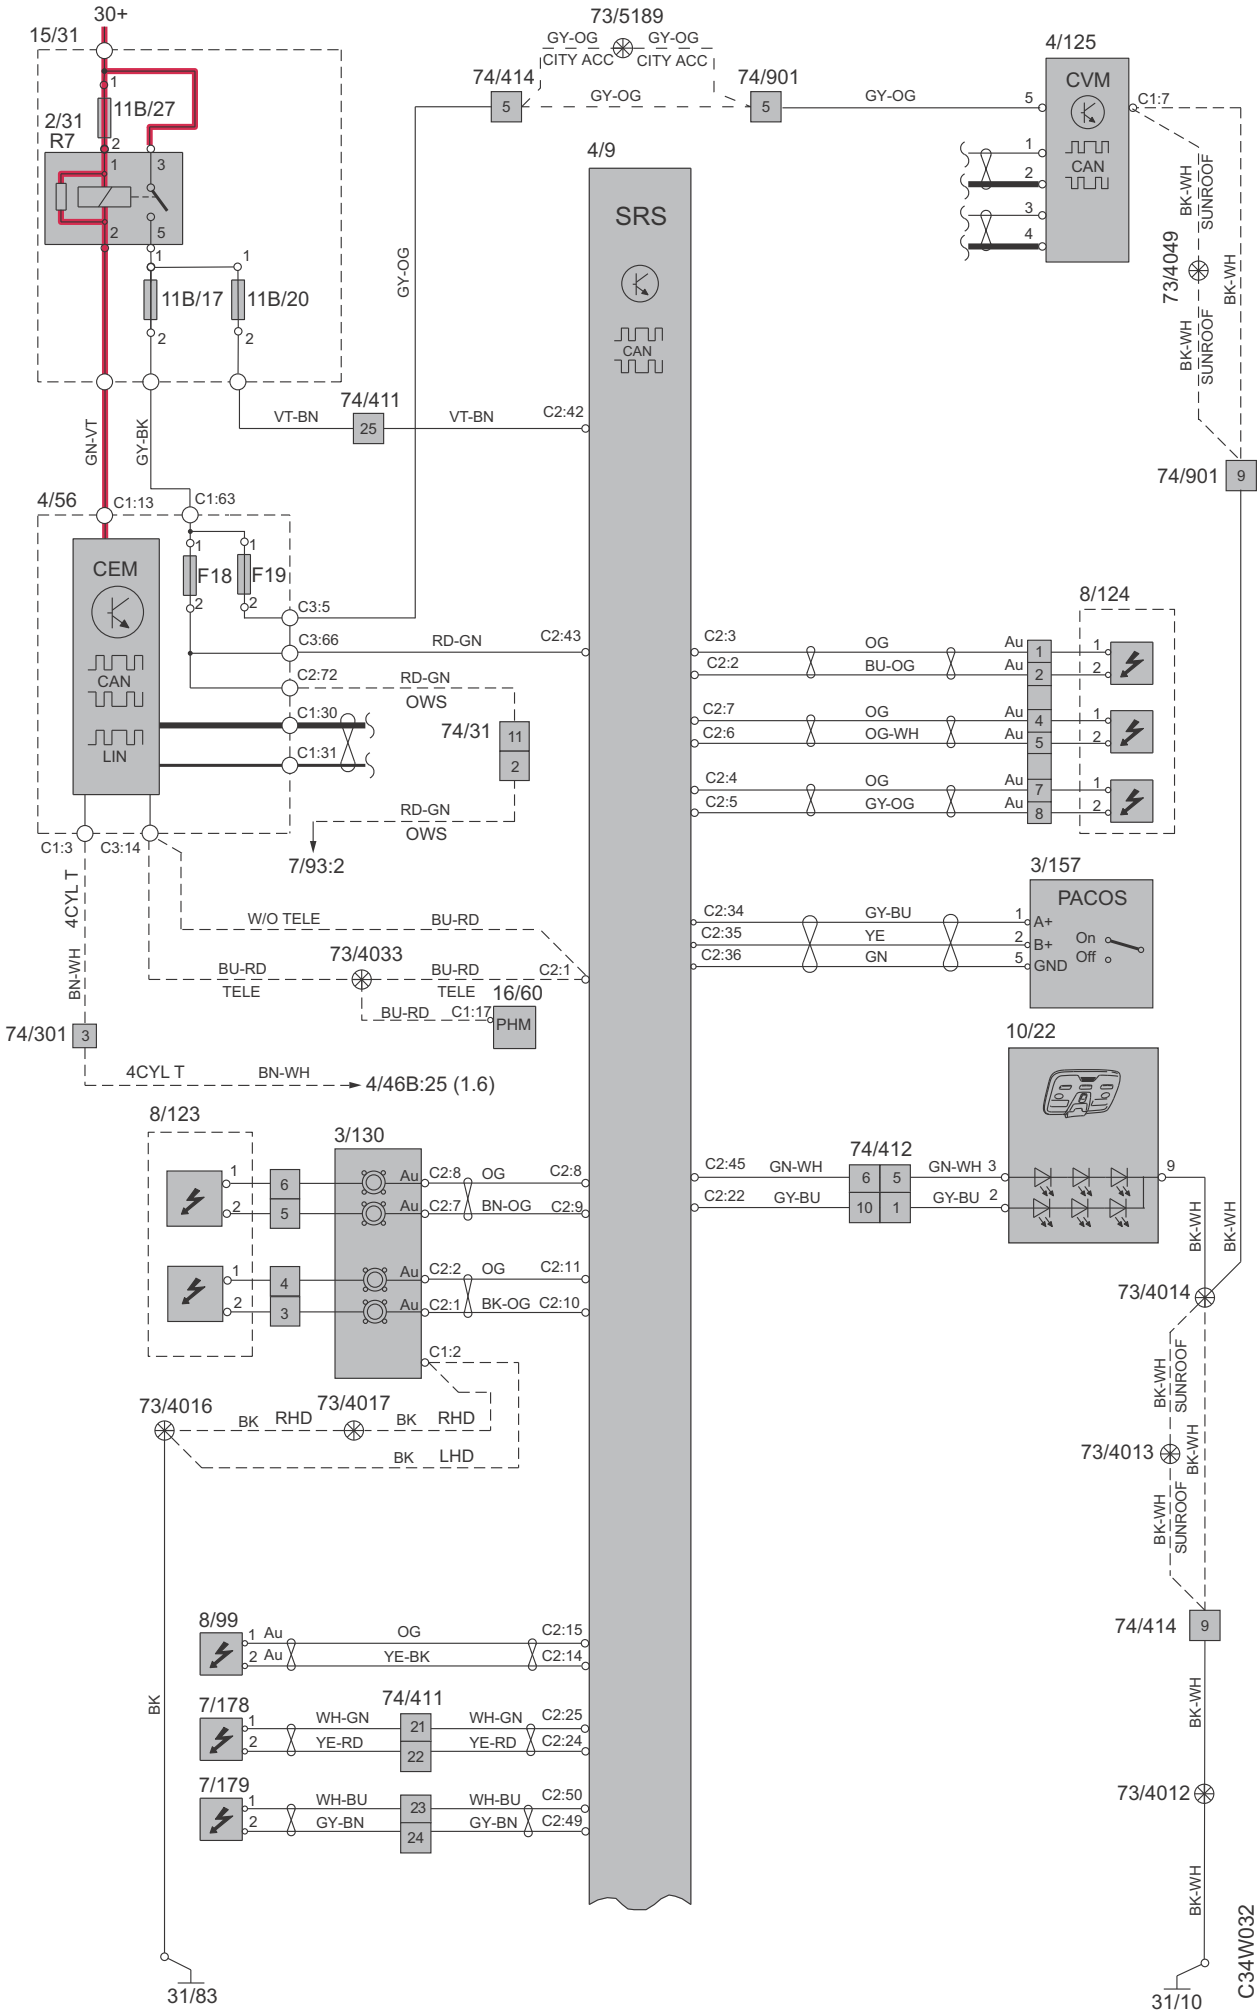
30+
15/31
11B/27
2/31
R7
11B/17
11B/20
GN-VT
GY-BK
4/56
C1:13
C1:63
CEM
CAN
LIN
F18
F19
C3:5
C3:66
RD-GN
C2:43
C2:72
RD-GN
OWS
C1:30
C1:31
74/31
11
2
RD-GN
OWS
7/93:2
C1:3
C3:14
4CYL T
BN-WH
74/301
3
4CYL T
BN-WH
4/46B:25 (1.6)
W/O TELE
BU-RD
73/4033
BU-RD
TELE
BU-RD
TELE
C2:1
16/60
BU-RD
C1:17
PHM
8/123
3/130
C2:8
OG
C2:8
C2:7
BN-OG
C2:9
C2:2
OG
C2:11
C2:1
BK-OG
C2:10
C1:2
73/4016
BK
RHD
73/4017
BK
RHD
BK
LHD
8/99
Au
OG
C2:15
Au
YE-BK
C2:14
7/178
WH-GN
74/411
21
WH-GN
C2:25
YE-RD
22
YE-RD
C2:24
7/179
WH-BU
23
WH-BU
C2:50
GY-BN
24
GY-BN
C2:49
BK
31/83
VT-BN
74/411
25
VT-BN
C2:42
GY-OG
73/5189
GY-OG
CITY ACC
GY-OG
CITY ACC
74/414
5
GY-OG
74/901
5
GY-OG
4/125
CVM
CAN
C1:7
5
1
2
3
4
BK-WH
SUNROOF
73/4049
BK-WH
BK-WH
SUNROOF
74/901
9
4/9
SRS
CAN
8/124
C2:3
OG
Au
C2:2
BU-OG
Au
C2:7
OG
Au
C2:6
OG-WH
Au
C2:4
OG
Au
C2:5
GY-OG
Au
3/157
PACOS
C2:34
GY-BU
C2:35
YE
C2:36
GN
A+
B+
GND
On
Off
10/22
C2:45
GN-WH
74/412
GN-WH
C2:22
GY-BU
GY-BU
9
BK-WH
BK-WH
73/4014
BK-WH
SUNROOF
73/4013
BK-WH
BK-WH
SUNROOF
74/414
9
BK-WH
73/4012
BK-WH
31/10
C34W032

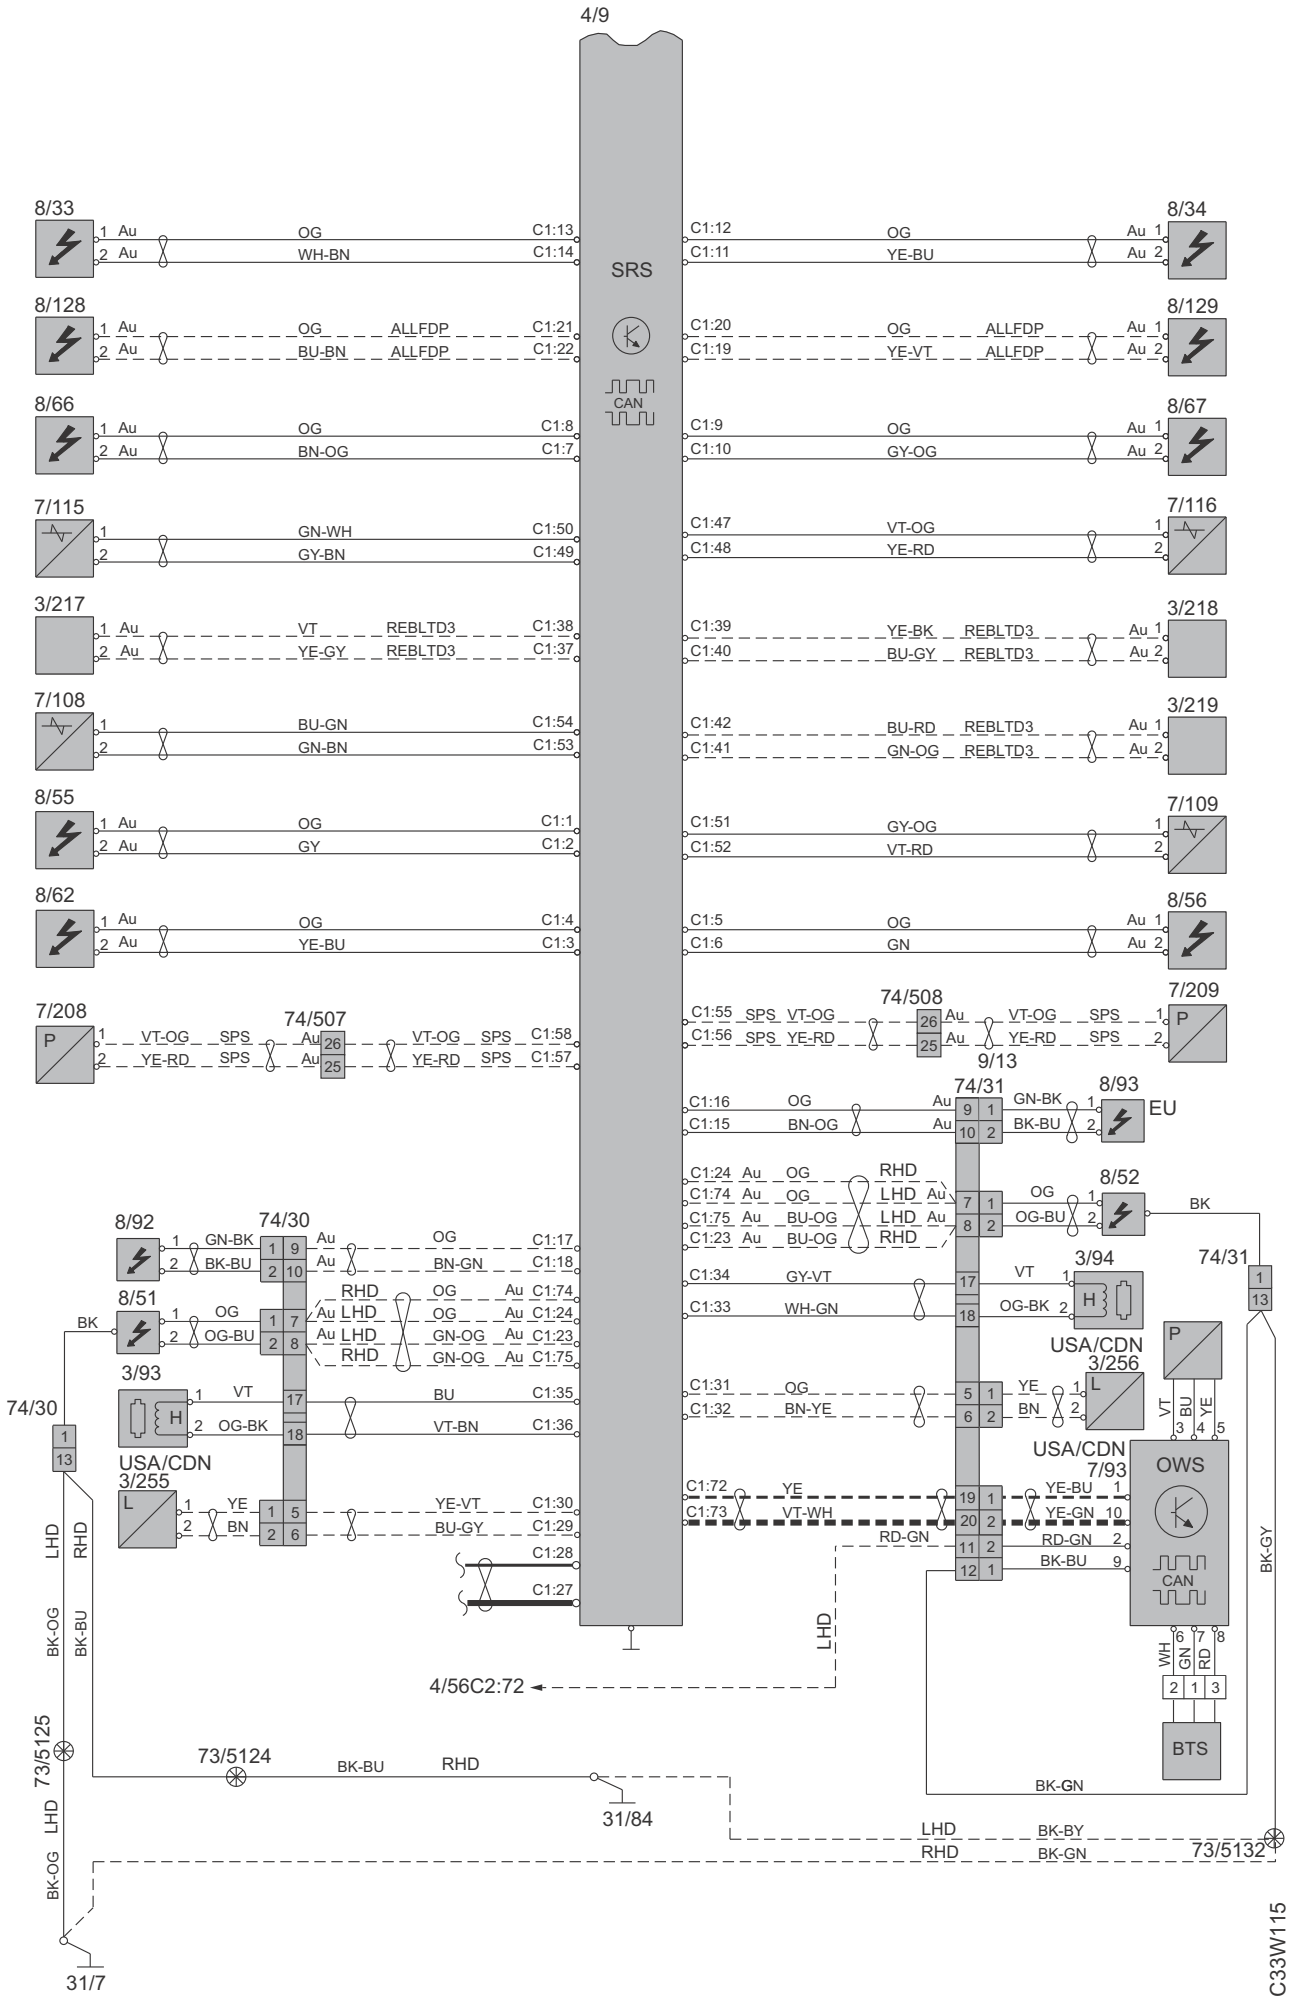
4/9
SRS
CAN
8/33
8/34
8/128
8/129
8/66
8/67
7/115
7/116
3/217
3/218
7/108
3/219
8/55
7/109
8/62
8/56
7/208
74/507
74/508
9/13
7/209
74/31
8/93
EU
8/92
74/30
8/51
8/52
3/94
3/93
USA/CDN
3/256
USA/CDN
3/255
USA/CDN
7/93
OWS
BTS
74/30
74/31
4/56C2:72
73/5125
73/5124
31/84
73/5132
31/7
LHD
RHD
BK-OG
BK-BU
BK-GY
BK-GN
C33W115

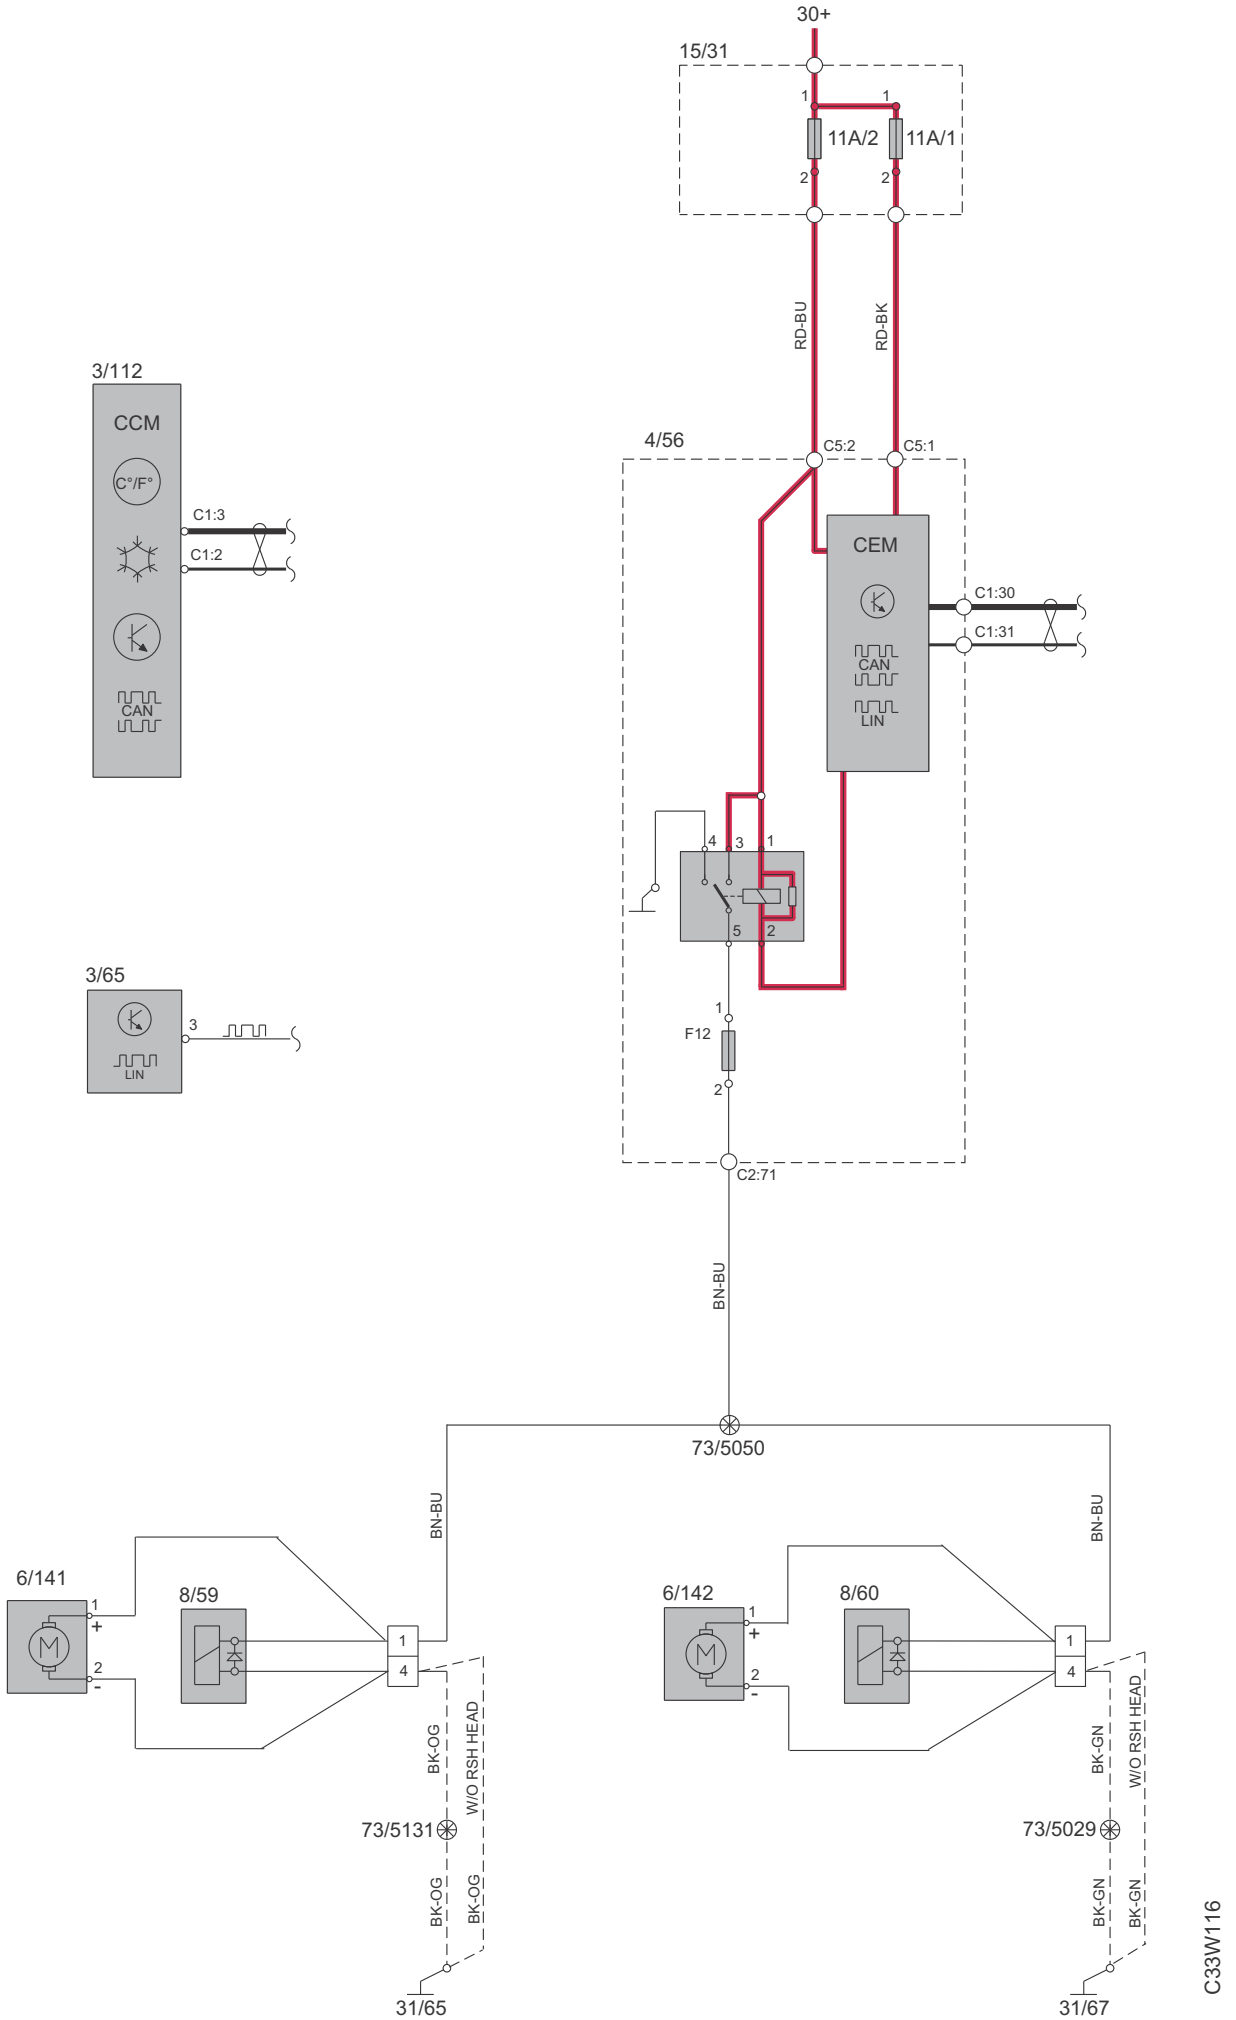
30+
15/31
1
1
11A/2
11A/1
2
2
RD-BU
RD-BK
3/112
CCM
C°/F°
C1:3
C1:2
CAN
4/56
C5:2
C5:1
CEM
C1:30
C1:31
CAN
LIN
4
3
1
5
2
3/65
3
LIN
1
F12
2
C2:71
BN-BU
73/5050
BN-BU
BN-BU
6/141
8/59
6/142
8/60
1
+
2
-
1
4
BK-OG
W/O RSH HEAD
73/5131
BK-OG
BK-OG
31/65
BK-GN
W/O RSH HEAD
73/5029
BK-GN
BK-GN
31/67
C33W116

Group 88 Internal equipment
Remote control garage opening

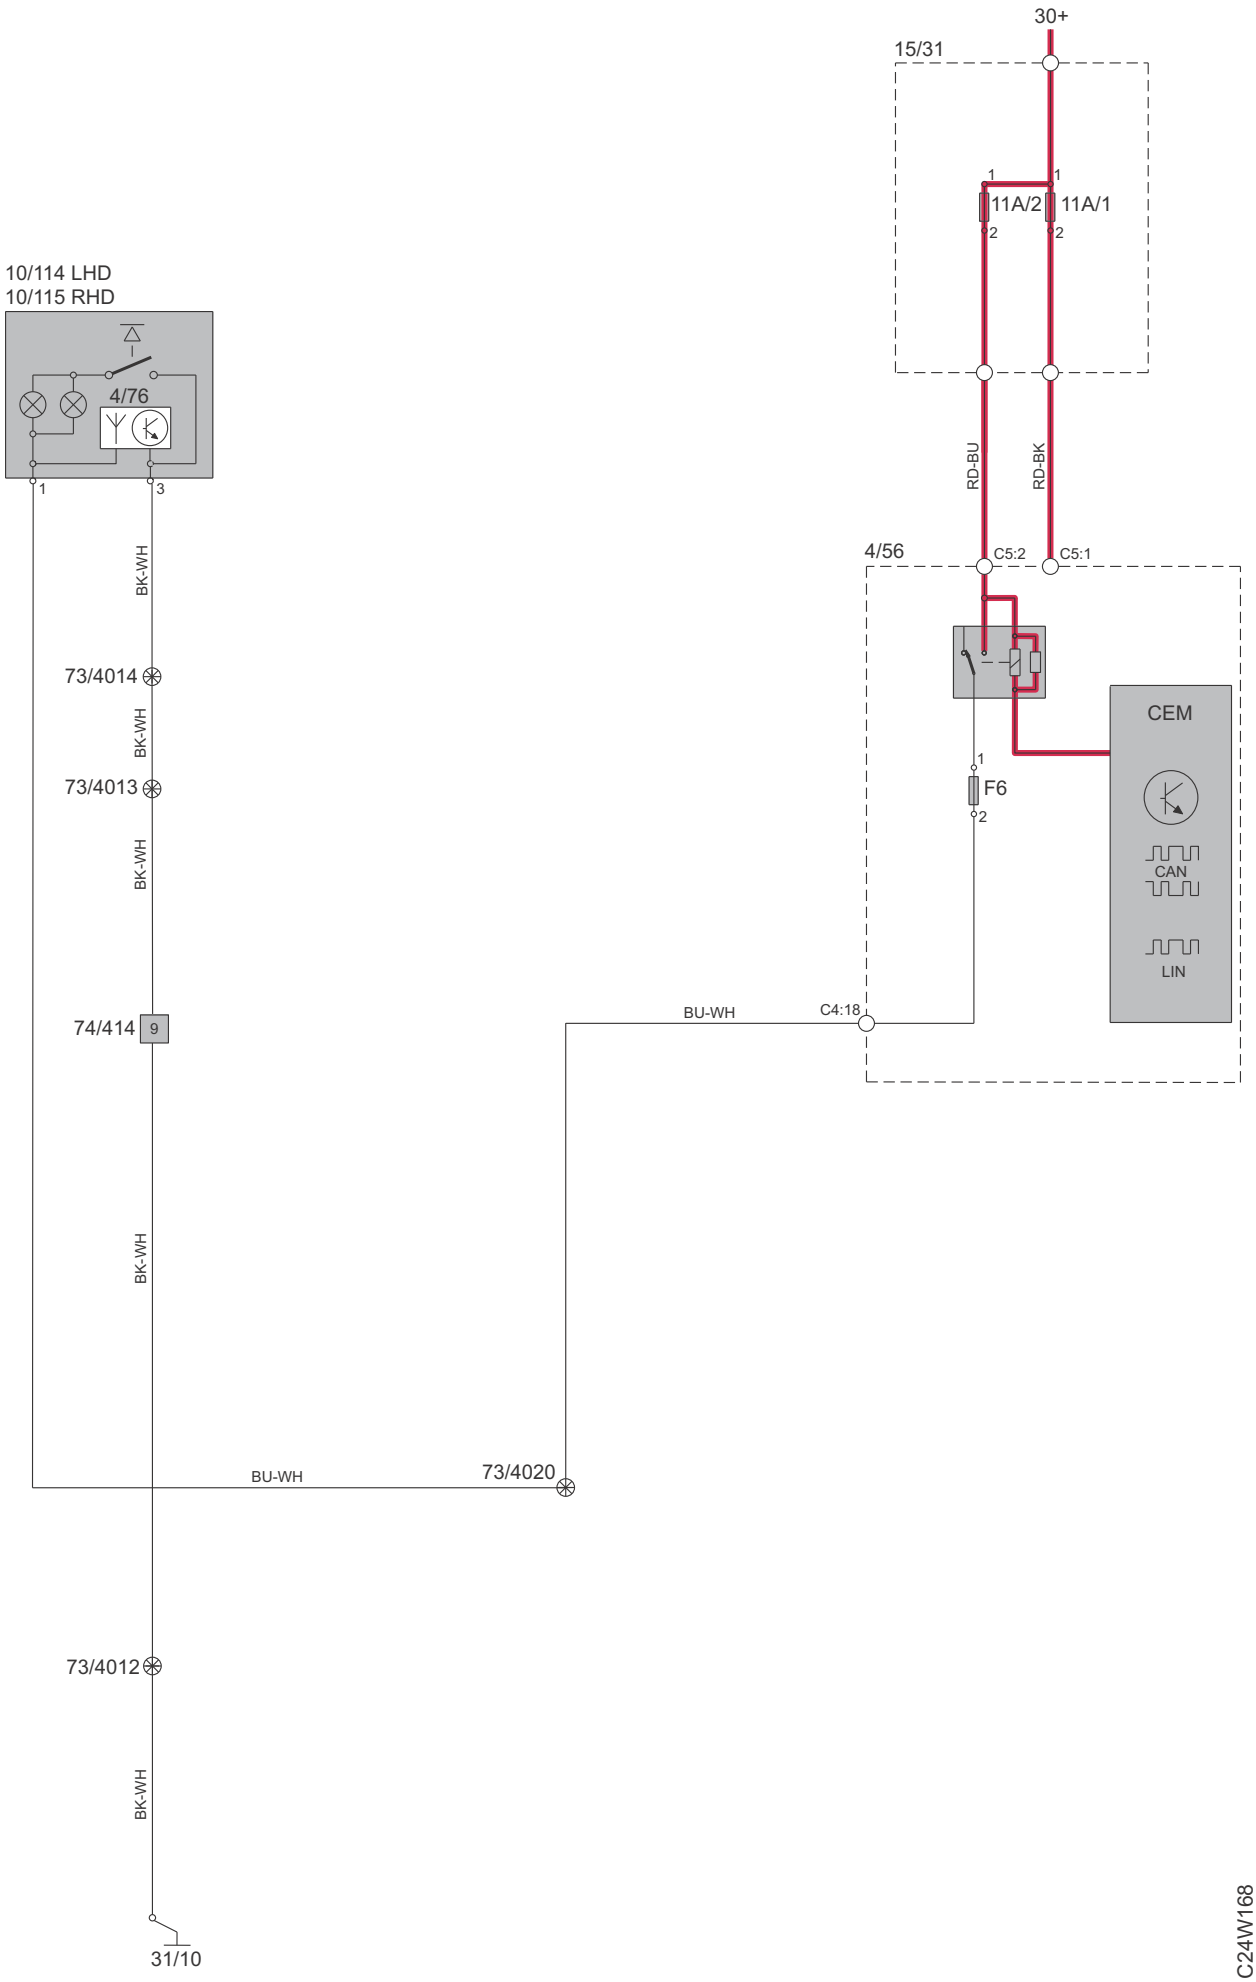

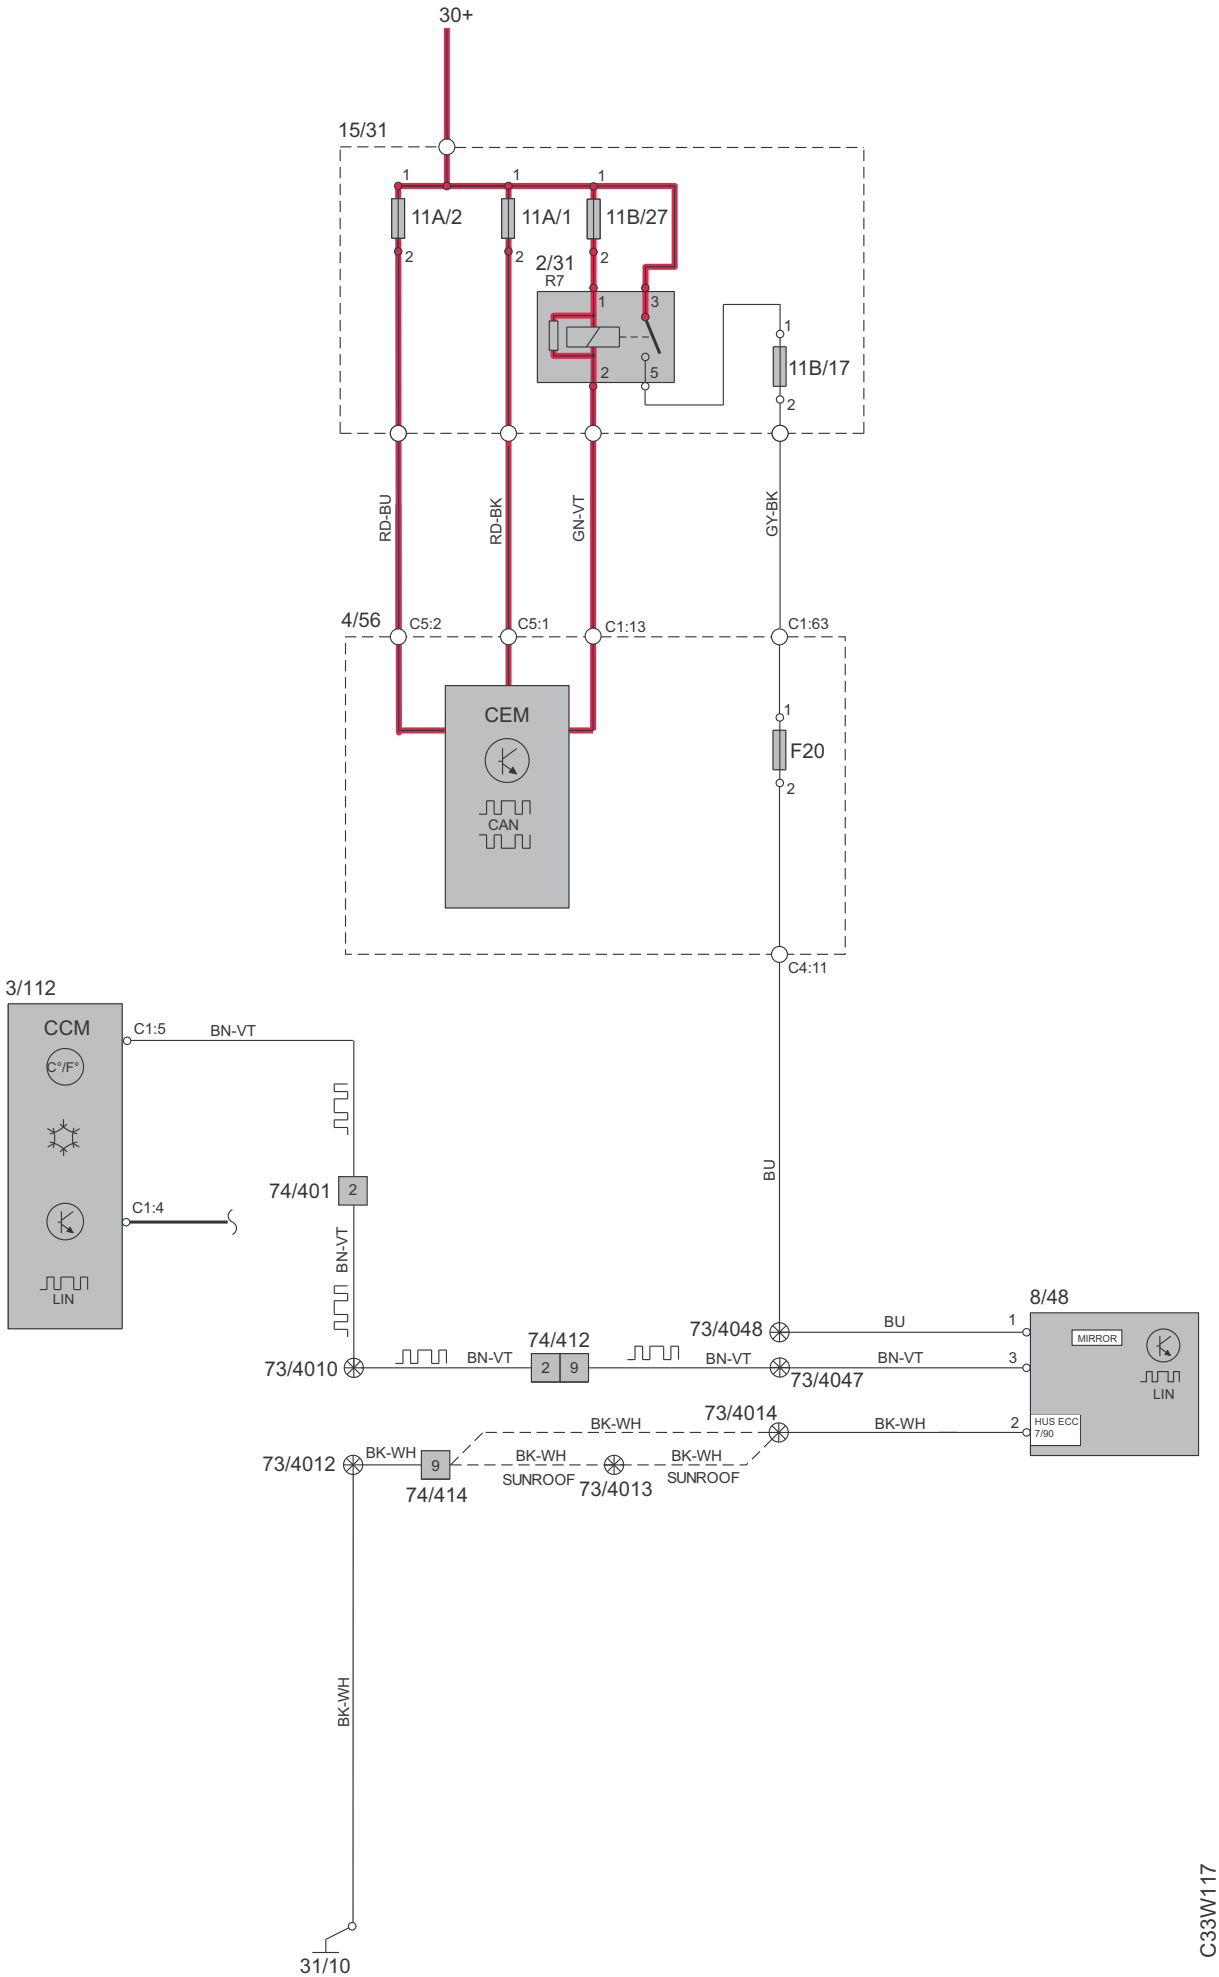
30+
15/31
11A/2
11A/1
11B/27
2/31
R7
11B/17
RD-BU
RD-BK
GN-VT
GY-BK
4/56
C5:2
C5:1
C1:13
C1:63
CEM
CAN
F20
C4:11
3/112
CCM
C1:5
BN-VT
C1:4
LIN
74/401
BU
74/412
73/4048
8/48
MIRROR
73/4010
73/4047
73/4014
HUS ECC 7/90
73/4012
74/414
SUNROOF
73/4013
31/10
C33W117

Connectors
74/9 - 74/30:1-7

74/9
12-pin black

No.	Engine compartment harness			Heater harness		
1	-		-	-		-
2	4/106:C	Control module, remote parking heater start	YE	4/7C1:2	Combustion Preheater Module (CPM)	YE
3	11B/10:2	Fuse in distribution box in engine compartment	YE-VT	4/7C1:3	Combustion Preheater Module (CPM)	RD
4	73/3203	Branching point	BK-VT	4/7C1:4	Combustion Preheater Module (CPM)	BK
5	-		-	-		-
6	73/3020	Branching point	VT	4/7C1:6	Combustion Preheater Module (CPM)	BK
7	74/504:41	Connector	YE-RD	4/7C1:7	Combustion Preheater Module (CPM)	BU
8	-		-	-		-
9	6/73:2	Coolant pump	GN-OG	4/7C1:9	Combustion Preheater Module (CPM)	BN
10	6/73:1	Coolant pump	WH-VT	4/7C1:10	Combustion Preheater Module (CPM)	RD
11	73/3019	Branching point	GY	4/7C1:11	Combustion Preheater Module (CPM)	GN
12	-		-	-		-

74/30
20-pin black

No.	Floor harness			Harness driver’s seat		
1	73/5035 73/5023	Branching point, LHD Branching point, RHD	BK-VT BK-GN	9/12A:1	Seat Heating Module (SHM), driver’s side	BK
2	11C/27:2	Fuse, distribution box in passenger compartment	GN-BK	9/12A:2	Seat Heating Module (SHM), driver’s side	YE-RD
3	-		-	-		-
4	74/409:15 74/409:16	Connector, LHD Connector, RHD	WH-GN	9/12A:4	Seat Heating Module (SHM), driver’s side	WH-GN
5	4/9C1:30	Supplemental restraint system module (SRS)	YE-VT	3/255:1	Position sensor driver’s seat USA/CDN	YE
6	4/9C1:29	Supplemental restraint system module (SRS)	BU-GY	3/255:2	Position sensor driver’s seat USA/CDN	BN
7	4/9C1:24 4/9C1:74	Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD	OG	8/51:1	Front left side airbag igniter	OG

continues

Connectors
74/30:8-20

74/30
20-pin black

No.	Floor harness			Harness driver's seat		
8	4/9C1:23 4/9C1:75	Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD	GN-OG	8/51:2	Front left side airbag igniter	OG-BU
9	4/9C1:17	Supplemental restraint system module (SRS)	OG	8/92:1	Lap belt tensioner, driver	GN-BK
10	4/9C1:18	Supplemental restraint system module (SRS)	BN-GN	8/92:2	Lap belt tensioner, driver	BK-BU
11	73/5004	Branching point	VT-OG	4/52C2:3	Power Seat Module (PSM)	GN
12	73/5003	Branching point	GY-OG	4/52C2:4	Power Seat Module (PSM)	WH
13	73/5125 73/5124	Branching point, LHD Branching point, RHD	BK-OG BK-BU	8/51	Front left side airbag igniter	BK
14	73/5044	Branching point	BU-WH	4/52C2:1 4/52C2:6	Power Seat Module (PSM), LHD Power Seat Module (PSM), RHD	RD-WH
15	11C/13:2	Fuse in distribution box passenger compartment	GY-RD	4/52C1:1 4/52C1:7	Power Seat Module (PSM), LHD Power Seat Module (PSM), RHD	RD
16	73/5035 73/5023	Branching point, LHD Branching point, RHD	BK-VT BK-GN	73/3	Branching point	BK
17	4/9C1:35	Supplemental restraint system module (SRS)	BU	3/93:1	Contact, driver's seat belt buckle	VT
18	4/9C1:36	Supplemental restraint system module (SRS)	VT-BN	3/93:2	Contact, driver's seat belt buckle	OG-BK
19	-		-	-		-
20	-		-	-		-

Connectors
74/31:1-13

74/31
20-pin black

No.	Floor harness			Harness passenger seat		
1	73/5023 73/5035	Branching point, LHD Branching point, RHD	BK-GN BK-VT	9/13A:1	Seat Heating Module (SHM), passenger side	BK
2	11C/26:2	Fuse in distribution box passenger compartment	BU-WH	9/13A:4	Seat Heating Module (SHM), passenger side	YE-RD
3	-		-	-		-
4	74/409:16 74/409:15	Connector, LHD Connector, RHD	BN-VT	9/13A:2	Seat Heating Module (SHM), passenger side	WH-GN
5	4/9C1:31	Supplemental restraint system module (SRS)	OG	3/256:1	Position sensor passenger seat USA/CDN	-
6	4/9C1:32	Supplemental restraint system module (SRS)	BN-YE	3/256:2	Position sensor passenger seat USA/CDN	-
7	4/9C1:74 4/9C1:24	Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD	OG	8/52:1	Igniter side airbag front right	OG
8	4/9C1:75 4/9C1:23	Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD	BU-OG	8/52:2	Igniter side airbag front right	OG-BU
9	4/91C1:16	Supplemental restraint system module (SRS)	OG	8/93:1	Lap belt tensioner, passenger	GN-BK
10	4/9C1:15	Supplemental restraint system module (SRS)	BN-OG	8/93:2	Lap belt tensioner, passenger	BK-BU
11	4/56C2:23 4/56C2:72	Central Electronic Module (CEM) Central Electronic Module (CEM)	BN RD-GN	7/175:1 7/93:2	Occupant weight sensor, seat belt reminder Occupant Weight Sensor (OWS)	WH RD-GN
12	74/31:13	Connector, RHD	BK-GN	7/175:2 7/93:9	Occupant weight sensor, seat belt reminder Occupant Weight Sensor (OWS)	WH BK-BU
13	73/5132 74/31:12	Branching point Connector, LHD	BK-GY BK-GN	8/52	Igniter side airbag front right	BK

continues

Connectors
74/31:14-20 - 74/301:1-2

74/31
20-pin black

No.	Floor harness			Harness passenger seat		
14	73/5044	Branching point	BU-WH	3/27:7 3/27:11	Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD	RD-WH
15	11C/14:2	Fuse in distribution box passenger compartment	BN-RD	3/27:5 3:27:2	Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD	RD
16	73/5023 73/5035	Branching point, LHD Branching point, RHD	BK-GN	3/27:8 3/27:3	Switch unit, power passenger seat Switch unit, power passenger seat	BK
17	4/9C1:34	Supplemental restraint system module (SRS)	GY-VT	3/94:1	Contact, passenger seat belt buckle	VT
18	4/9C1:33	Supplemental restraint system module (SRS)	WH-GN	3/94:2	Contact, passenger seat belt buckle	OG-BK
19	4/9C1:72	Supplemental restraint system module (SRS)	YE	7/93:1	Occupant Weight Sensor (OWS)	YE-BU
20	4/9C1:73	Supplemental restraint system module (SRS)	VT-WH	7/93:10	Occupant Weight Sensor (OWS)	YE-GN

74/301
34-pin black

No.	Harness engine			Engine compartment harness		
1	73/3014 73/3016 73/3139	Branching point, 4-Cyl. 2.0L Turbo, AUTO Branching point, 4-Cyl. 2.0L Branching point	BU-BK	73/3021	Branching point	BU-BK
2	73/3015 73/3017 73/3140	Branching point, 4-Cyl. 2.0L Turbo, AUTO Branching point, 4-Cyl. 2.0L Turbo Branching point	GN-BK	73/3022	Branching point	GN-BK

continues

Connectors
74/301:3-10

74/301
34-pin black

No.	Harness engine			Engine compartment harness		
3	4/46B:25 4/46C:6	Engine control module (ECM) Engine control module (ECM), 1.6L Diesel	BN-WH	4/56C1:3	Central Electronic Module (CEM)	BN-WH
4	-		-	-		-
5	-		-	-		-
6	4/46A:23 4/46B:24 4/46B:35 4/46A:34	Engine control module (ECM), 1.6L Diesel Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl. Engine Control Module (ECM), 4-Cyl. 2.0L Diesel	WH YE-GN	74/504:1	Connector	WH
7	4/46A:44 4/46B:15 4/46B:34 4/46A:53	Engine control module (ECM), 1.6L Diesel Engine control module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl. Engine Control Module (ECM), 4-Cyl. 2.0L Diesel	BK-WH GN-BU	74/504:2	Connector	BK-WH
8	-		-	-		-
9	4/28:13 4/28:26 4/28B:1	Transmission Control Module (TCM), AWF21 Transmission Control Module (TCM), AWF22 Transmission Control Module (TCM), MPS6	GN-OG	74/411:9	Connector	GN-OG
10	4/46B:14 4/46C:46 4/46B:49	Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl. Engine control module (ECM), 1.6L Diesel Engine Control Module (ECM), 5-Cyl. Diesel	VT-OG	4/56C1:6	Central Electronic Module (CEM)	VT-OG

continues

Connectors
74/301:11-16

74/301
34-pin black

No.	Harness engine			Engine compartment harness		
11	4/28:7 4/28B:17 73/3065	Transmission Control Module (TCM), AWF21 Transmission Control Module (TCM), MPS6 Branching point, 4-Cyl. 2.0L	BN-VT	74/411:10	Connector	BN-VT
12	3/10:1	Reversing light contact, Manual	BU	4/56C1:29	Central Electronic Module (CEM)	BU
13	4/46A:4 4/46B:23 4/46A:33 4/46B:49 4/46B:51	Engine Control Module (ECM), 4-Cyl. 2.0L Engine Control Module (ECM), 5-Cyl. Diesel Engine control module (ECM), 1.6L Diesel Engine Control Module (ECM), 5-Cyl. Turbo Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl.	GN-BN	7/8:2	Pressure sensor, climate control system	GN-BN
14	4/46A:23 4/46A:42 4/46A:45 4/46B:16 4/46B:37 4/46B:53	Engine Control Module (ECM), 4-Cyl. 2.0L Diesel Engine Control Module (ECM), 4-Cyl. 2.0L Turbo Engine control module (ECM), 1.6L Diesel Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Turbo Engine Control Module (ECM), 5 & 6-Cyl.	BN	7/8:1	Pressure sensor, climate control system	BN
15	4/46A:42 4/46B:8 4/46B:31 73/3145	Engine Control Module (ECM), 4-Cyl. 2.0L Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl. Branching point, 5-Cyl. 1.6L Diesel with start/stop	GY-BN	7/8:3	Pressure sensor, climate control system	GY-BN
16	-		-	-		-

continues

Connectors
74/301:17-22

74/301
34-pin black

No.	Harness engine			Engine compartment harness		
17	2/22:3	Relay, climate control system, 4-Cyl. 2.0L	YE-GN	9/38:1	Electrically heated fuel filter, 4-Cyl. 2.0L	YE-GN
	11B/41:2	Fuse, distribution box in engine compartment, Gasoline	BU	74/504:21	Connector	BU
	73/3131	Branching point, Diesel				
18	4/46A:22	Engine control module (ECM), 1.6L Diesel	VT-BN	4/56C1:5	Central Electronic Module (CEM)	VT-BN
	4/46A:62	Engine Control Module (ECM), 4-Cyl. 2.0L Diesel				
	4/46B:30	Engine Control Module (ECM), 4-Cyl. 2.0L Turbo, 5 & 6-Cyl.				
	4/46B:38	Engine control module (ECM), 5-Cyl. Diesel				
19	4/46A:14	Engine Control Module (ECM), 4-Cyl. 2.0L	BU-WH	74/504:17	Connector	BU-WH
	4/46B:26	Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl.				
	4/46B:34	Engine Control Module (ECM), 5-Cyl. Diesel				
	4/46C:42	Engine control module (ECM), 1.6L Diesel				
20	4/46A:41	Engine Control Module (ECM), 4-Cyl. 2.0L	GY-BN	74/504:42	Connector	GY-BN
	4/46B:13	Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl.				
	4/46B:48	Engine Control Module (ECM), 5-Cyl. Diesel				
	4/46C:8	Engine control module (ECM), 1.6L Diesel				
21	4/28:16	Transmission Control Module (TCM), AWF21	BU-GY	74/411:11	Connector	BU-GY
	4/28:27	Transmission Control Module (TCM), AWF21				
	4/28B:13	Transmission Control Module (TCM), MPS6				
22	4/46A1:	Engine Control Module (ECM), 4-Cyl. 2.0L Turbo	BU-WH	4/56C1:41	Central Electronic Module (CEM)	BU-WH
	4/46B:17	Engine Control Module (ECM), 4- & 5-Cyl. Turbo, 6-Cyl				
	4/46B:36	Engine Control Module (ECM), 5-Cyl. Diesel				
	4/46C:28	Engine control module (ECM), 1.6L Diesel				

continues

Connectors
74/301:23-34

74/301
34-pin black

No.	Harness engine			Engine compartment harness		
23	-		-	-		-
24	4/46A:84 4/46B:45	Engine Control Module (ECM), 4-Cyl. 2.0L Engine Control Module (ECM), 5 & 6-Cyl.	GN-OG	74/504:38	Connector	GN-OG
25	-		-	-		-
26	-		-	-		-
27	73/3162 74/316:4	Branching point, Auto Connector, Manual	RD	74/504:19	Connector	RD
28	6/164C2:1 74/323	Electrohydraulic power steering module (EHPAS) Connector, with EPAS	BN-WH	11B/19:2	Fuse in distribution box in engine compartment	BN-WH
29	4/46A:12 4/46B:17 4/46B:21 4/46B:45	Engine Control Module (ECM), 4-Cyl. 2.0L Diesel Engine Control Module (ECM), 5Cyl. Diesel Engine Control Module (ECM), 5 & 6-Cyl. Engine Control Module (ECM), 4-Cyl. Turbo	YE-OG	74/504:18	Connector	YE-OG
30	-		-	-		-
31	4/46A:66 4/46B:46	Engine Control Module (ECM), 4-Cyl. 2.0L Engine Control Module (ECM), 6-Cyl.	BU-GY	74/504:39	Connector	BU-GY
32	4/46B:15 4/46A:19 4/46B:46 73/3064	Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl. Manual Engine control module (ECM), 1.6L Diesel, Manual Engine Control Module (ECM), 5-Cyl. Diesel, Manual Branching point, Auto	VT-BN	11B/20:2	Fuse, Distribution box in engine compartment	VT-BN
33	4/46A:67 4/46B:23	Engine Control Module (ECM), 4-Cyl. 2.0L Engine Control Module (ECM), 6-Cyl.	VT-OG	74/504:37	Connector	VT-OG
34	-		-	-		-

Connectors
74/302 - 74/307

74/302 4-Cyl.
1-pin black

No.	Harness engine			Harness Starter motor		
1	2/35:5	Relay, starter motor	BU-WH	6/25C2:1	Starter motor	BU-WH

74/304
2-pin black

No.	Engine compartment harness			Harness washer nozzle		
1	11B/21:2	Fuse, Distribution box in engine compartment	BU-GY	73/3040	Branching point	BU-GY
2	73/3033	Branching point	BK-OG	73/3037	Branching point	BK-OG

74/307 4-Cyl. 1.6L Diesel
4-pin black

No.	Harness engine			Glow plug		
1	4/109:2	Glow plug control module	GY-VT	20/22:1	Glow plug	GY-VT
2	4/109:7	Glow plug control module	BU-BN	20/23:1	Glow plug	BU-BN
3	4/109:1	Glow plug control module	VT-WH	20/24:1	Glow plug	VT-WH
4	4/109:6	Glow plug control module	YE-BU	20/25:1	Glow plug	YE-BU

74/307 4-Cyl. 2.0L Diesel
6-pin black

No.	Harness engine			Glow plug		
1	4/109C2:9	Glow plug control module	BK-WH	73/3012	Branching point	BK-WH
2	4/109C2:10	Glow plug control module	BU	53/717	Branching point	BU
3	-		-	-		-
4	4/109C2:12	Glow plug control module	WH-GN	73/3141	Branching point	WH-GN
5	8/113:1	Bypass valve, EGR cooling	GY-BU	53/720	Branching point	GY-BU
6	8/113:2	Bypass valve, EGR cooling	GN-BN	4/46B:57	Engine Control Module (ECM)	BN-GN

Connectors
74/309 - 74/310

74/309
12-pin gray

No.	Engine compartment harness			Harness bumper, front		
1	-		-	-		-
2	-		-	-		-
3	-		-	-		-
4	74/519:12	Connector	VT-GY	73/3046	Branching point	VT-GY
5	74/519:13	Connector	BU-GN	7/204:2	Front parking assistance sensor	BU-GN
6	74/519:14	Connector	YE-OG	73/3047	Branching point	YE-OG
7	-		-	-		-
8	-		-	-		-
9	-		-	-		-
10	74/519:15	Connector	BU-BK	7/205:2	Front parking assistance sensor	BU-BK
11	74/519:16	Connector	BU-GY	7/206:2	Front parking assistance sensor	BU-GY
12	74/519:17	Connector	BU-OG	7/207:2	Front parking assistance sensor	BU-OG

74/310 4-Cyl. 1.6L Turbo
8-pin black

No.	Harness engine			Harness engine		
1	8/6:2	Injection valves	YE-BU	4/46A:3	Engine Control Module (ECM)	YE-BU
2	8/6:1	Injection valves	GN-BU	4/46A:77	Engine Control Module (ECM)	GN-BU
3	8/7:2	Injection valves	BU-OG	4/46A:25	Engine Control Module (ECM)	BU-OG
4	8/7:1	Injection valves	GY-YE	4/46A:52	Engine Control Module (ECM)	GY-YE
5	8/8:2	Injection valves	GN-VT	4/46A:26	Engine Control Module (ECM)	GN-VT
6	8/8:1	Injection valves	VT-GY	4/46A:76	Engine Control Module (ECM)	VT-GY
7	8/9:2	Injection valves	BU	4/46A:27	Engine Control Module (ECM)	BU
8	8/9:1	Injection valves	YE-OG	4/46A:53	Engine Control Module (ECM)	YE-OG

Connectors
74/316

74/316
6-pin black

No.	Harness engine			Engine compartment harness		
1	2/35:3 11B/34:1	Relay, starter motor, start/stop Fuse in distribution box in engine compartment	RD	11A/9:2 11B/12.2	Fuse in distribution box in engine compartment Fuses in distribution box in engine compartment, start/stop	RD
2	73/3160 11B/33:2	Branching point, 4-Cyl. & 5-Cyl. Turbo Fuses in distribution box in engine compartment, 5-Cyl. Diesel	RD-BU	73/3157	Branching point	RD-BU
3	4/46A:65 4/46A:68 4/46A:90 4/46C:3 4/46B:31	Engine Control Module (ECM), 4-Cyl. 2.0L Turbo Engine Control Module (ECM), 4-Cyl. 2.0L Diesel Engine Control Module (ECM), 4-Cyl. Turbo Engine Control Module (ECM), 4-Cyl. Diesel Engine Control Module (ECM), 5-Cyl. Diesel	YE-VT	2/246:2	Secondary battery relay	YE-VT
4	73/3162 74/301:27	Branching point Connector	RD	11B/12:2	Fuses in distribution box in engine compartment	RD
5	4/46A:5 4/46A:65 4/46B:43 4/46C:16	Engine Control Module (ECM), 4-Cyl. 1.6L Turbo Engine Control Module (ECM), 4-Cyl. 2.0L Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Diesel	GY-VT	2/166:2	Battery relay	GY-VT
6	-		-	-		-

Connectors
74/317 - 74/323

74/317
3-pin black

No.	Impulse sensor adapter harness			Harness engine		
1	7/25:1	Impulse sensor, 4-Cyl. 2.0L Diesel & 5-Cyl. Diesel	GN-BN	4/46B:6 4/46A:56	Engine Control Module (ECM), 4-Cyl. 2.0L Diesel Engine Control Module (ECM), 5-Cyl. Diesel	GN-BN
	7/25:1	Impulse sensor, 4-Cyl. 2.0L Turbo	GN-WH	4/46B:6	Engine Control Module (ECM), 4-Cyl. 2.0L Turbo	GN-WH
2	7/25:2	Impulse sensor	YE-YT	4/46A:40 4/46B:21	Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. 2.0L Turbo	YE-YT
3	7/25:3	Impulse sensor	GY-VT	4/46A:62 4/46B:36	Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. 2.0L Turbo	GY-VT

74/321
8-pin black

No.	Forward-aimed radar harness			Engine compartment harness		
1	-		-	-		-
2	7/203:18	Forward-aimed radar (FLR)	BN-BU	74/411:4	Connector	BN-BU
3	7/203:9	Forward-aimed radar (FLR)	GY-BU	74/411:5	Connector	GY-BU
4	-		-	-		-
5	-		-	-		-
6	7/203:3	Forward-aimed radar (FLR)	BK-RD	73/3030	Branching point	BK-RD
7	7/203:1	Forward-aimed radar (FLR)	GY-VT	74/411:3	Connector	GY-VT
8	7/203:10	Forward-aimed radar (FLR)	GY-OG	4/56C1:74	Central Electronic Module (CEM)	GY-OG

74/323
3-pin black

No.	Harness engine			Electrical Power Steering harness		
1	73/3016	Branching point	WH-BU	6/163:2	Electric power steering module (EPS)	WH-BU
2	73/3017	Branching point	WH	6/163:3	Electric power steering module (EPS)	WH
3	74/301:28	Connector	BN-WH	6/163C2:1	Electric power steering module (EPS)	BN-WH

Connectors
74/324 - 74/331

74/324
2-pin brown

No.	Harness engine			Electrical Power Steering harness		
1	11A/44:2	Main fuses in distribution box in engine compartment	RD	6/163C1:2	Electric power steering module (EPS)	RD
2	31/95	Ground connection	BK	6/163C1:1	Electric power steering module (EPS)	BK

74/330
4-pin black

No.	Engine compartment harness			Heated windscreen adapter harness		
1	11B/12:2 11B/8:2	Fuse in distribution box in engine compartment, LHD Fuse in distribution box in engine compartment, RHD	GN-RD	2/81A:3	Relay, heated windshield passenger side	GN-RD
2	11B/8:2 11B/12:2	Fuse in distribution box in engine compartment, LHD Fuse in distribution box in engine compartment, RHD	RD-GY	2/81B:3	Relay, heated windshield driver's side	RD-GY
3	73/3030	Branching point	BK-RD	2/81B:1	Relay, heated windshield driver's side	BK-RD
4	9/7C2:1 9/7C3:1	Heated windshield, LHD Heated windshield, RHD	VT-BN	2/81B:5	Relay, heated windshield driver's side	VT-BN

74/331
2-pin black

No.	Engine compartment harness			Heated windscreen adapter harness		
1	4/46C1:2	Engine control module (ECM)	BK-RD	2/81A:1	Relay, heated windshield passenger side	BK-RD
2	11B/72:2	Fuse in distribution box in engine compartment	RD	2/81A:2	Relay, heated windshield passenger side	RD

Connectors
74/401 - 74/402

74/401
22-pin gray

No.	Center console harness			Dashboard harness		
1	3/112C1:4	Climate Control Module (CCM)	WH-GN	74/417:3	Connector	WH-GN
2	3/112C1:5	Climate Control Module (CCM)	BN-VT	73/4010	Branching point	BN-VT
3	3/112C1:16	Climate Control Module (CCM)	YE-VT	74/417:6	Connector	YE-VT
4	3/112C1:17	Climate Control Module (CCM)	VT-BN	74/417:5	Connector	BN
5	3/112C1:14	Climate Control Module (CCM)	WH-GN	74/417:7	Connector	BU-GN
6	3/281C1:6	Infotainment Control Module (ICM)	GN-OG	3/130C1:6	Steering Wheel Module (SWM)	GN-OG
7	3/112C1:1	Climate Control Module (CCM)	RD	4/56C3:73	Central Electronic Module (CEM)	RD
8	3/112C1:12	Climate Control Module (CCM)	VT-BK	4/31:2	Passenger compartment fan control module	VT-BK
9	3/281C1:2 3/112C1:3	Infotainment Control Module (ICM) Climate Control Module (CCM)	GY-OG	5/1C1:2 73/4001	Driver Information Module (DIM) Branching point	GY-OG
10	3/281C1:3 3/112C1:2	Infotainment Control Module (ICM) Climate Control Module (CCM)	VT-OG	5/1C1:6 73/4002	Driver Information Module (DIM) Branching point	VT-OG
11	-		-	-		-
12	-		-	-		-
13	-		-	-		-
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-
17	-		-	-		-
18	-		-	-		-
19	-		-	-		-
20	-		-	-		-
21	3/281C1:1	Infotainment Control Module (ICM)	GY-YE	16/1C1:1	Integrated Audio Module (IAM)	GY-YE
22	73/4018 3/112C1:22	Branching point Climate Control Module (CCM)	BK	73/4016	Branching point	BK

74/402
2-pin black

No.	Center console harness			Dashboard harness		
1	3/281C2:1	Infotainment Control Module (ICM)	OG	4/124C2:2	Accessory USB unit (AUU)	-
2	3/281C2:2	Infotainment Control Module (ICM)	OG	4/124C2:1	Accessory USB unit (AUU)	-

Connectors
74/403

74/403
22-pin gray

No.	Dashboard harness			Tunnel harness		
1	16/1C2:12	Integrated Audio Module (IAM)	BN	16/123:4	Auxiliary equipment input (AUX)	BN
2	-		-	-		-
3	16/1C1:6	Integrated Audio Module (IAM)	WH	16/123:1	Auxiliary equipment input (AUX)	WH
4	16/1C1:8	Integrated Audio Module (IAM)	-	-		-
5	-		-	-		-
6	4/56C3:67	Central Electronic Module (CEM)	BU-RD	3/65:1	Switch, heated rear seat	BU-RD
7	4/56C3:69 73/4061	Central Electronic Module (CEM) Branching point	BU-RD	10/72:1 10/263:1	Front ashtray lighting Lighting, cup holder tunnel console	BU-RD
8	74/411:9	Connector	GN-RD	3/156A:3	Gear Selector Module (GSM)	GN-OG
9	74/411:11	Connector	BU-GY	3/156A:1	Gear Selector Module (GSM)	BU-GY
10	3/130C1:5	Steering Wheel Module (SWM)	GN-RD	3/156:5	Gear Selector Module (GSM)	GN-VT
11	3/130C1:1	Steering Wheel Module (SWM)	GY	3/156:4	Gear Selector Module (GSM)	GY
12	-		-	-		-
13	-		-	-		-
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-
17	-		-	-		-
18	-		-	-		-
19	-		-	-		-
20	4/56C3:38	Central Electronic Module (CEM)	WH-BN	8/134:1	Solenoid, reverse interlock, manual	WH-BN
21	-		-	-		-
22	74/411:10	Connector	BN-VT	3/156:2	Gear Selector Module (GSM)	BN-VT

Connectors
74/404 - 74/406

74/404
2-pin black

No.	Dashboard harness			Infotainment harness		
1	16/1C4:1 16/109C3:1	Integrated Audio Module (AIM) DVD player/control module	OG	16/36C1:2 16/105C2:2 16/145A:2	TV receiver Audio module (AUD) Remote Digital Audio Receiver (RDAR)	OG
2	3/281C2:2 16/60C4:2	Infotainment Control Module (ICM) Phone Module (PHM)	OG	16/105C2:1	Audio module (AUD)	OG

74/405
4-pin black

No.	Dashboard harness			Floor harness		
1	16/1C3:1	Integrated Audio Module (IAM)	WH	16/16C2:1	Window antenna amplifier	WH
1S	16/1C3:1S	Integrated Audio Module (IAM)	-	16/16C2:1S	Window antenna amplifier	-
2	16/1C3:2	Integrated Audio Module (IAM)	WH	16/71C1:1	Window antenna amplifier	WH
2S	16/1C3:2S	Integrated Audio Module (IAM)	-	16/71C1:1S	Window antenna amplifier	-

74/406
2-pin violet

No.	Dashboard harness			Infotainment harness		
1	16/60C2:1	Phone Module (PHM)	WH	16/47C3:1	Antenna GSM/GPS/RDAR	WH
1S	16/60C2:1S	Phone Module (PHM)	-	16/47C3:1S	Antenna GSM/GPS/RDAR	-

Connectors
74/407 Alternative 1

74/407 Alternative 1
16-pin green

No.	Dashboard harness			Floor harness		
1	16/1C2:12	Integrated Audio Module (IAM)	GY-BK	74/507:23	Connector	GY-BK
2	-		-	-		-
3	16/1C2:7	Integrated Audio Module (IAM)	YE-BK	74/508:23	Connector	YE-BK
4	16/1C2:9	Integrated Audio Module (IAM)	GY-RD	74/509:4	Connector	GY-RD
5	16/1C2:10	Integrated Audio Module (IAM)	YE-RD	74/510:4	Connector	YE-RD
6	-		-	-		-
7	-		-	-		-
8	-		-	-		-
9	16/1C2:6	Integrated Audio Module (IAM)	GN-BK	74/507:22	Connector	GN-BK
10	-		-	-		-
11	16/1C2:1	Integrated Audio Module (IAM)	VT-BK	74/508:22	Connector	VT-BK
12	16/1C2:3	Integrated Audio Module (IAM)	GN-RD	74/509:3	Connector	GN-RD
13	16/1C2:4	Integrated Audio Module (IAM)	VT-RD	74/510:3	Connector	VT-RD
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-

Connectors
74/407 Alternative 2

74/407 Alternative 2
16-pin green

No.	Infotainment harness			Floor harness		
1	74/407B:1 16/1C2:12	Connector Integrated Audio Module (IAM), Base performance	GY-BK	74/507:23	Connector	GY-BK
2	74/407B:2	Connector	GY	74/409:10	Connector	GY
3	74/407B:3 16/1C2:7	Connector Integrated Audio Module (IAM), Base performance	YE-BK	74/508:23	Connector	YE-BK
4	74/407B:4 16/1C2:9	Connector Integrated Audio Module (IAM), Base performance	GY-RD	74/509:4	Connector	GY-RD
5	74/407B:5 16/1C2:10	Connector Integrated Audio Module (IAM), Base performance	YE-RD	74/510:4	Connector	YE-RD
6	-		-	-		-
7	-		-	-		-
8	-		-	-		-
9	74/407B:9 16/1C2:6	Connector Integrated Audio Module (IAM), Base performance	GN-BK	74/507:22	Connector	GN-BK
10	74/407B:10	Connector	GN	74/409:9	Connector	GN
11	74/407B:11 16/1C2:1	Connector Integrated Audio Module (IAM), Base performance	VT-BK	74/508:22	Connector	VT-BK
12	74/407B:12 16/1C2:3	Connector Integrated Audio Module (IAM), Base performance	GN-RD	74/509:3	Connector	GN-RD
13	74/407B:13 16/1C2:4	Connector Integrated Audio Module (IAM), Base performance	VT-RD	74/510:3	Connector	VT-RD
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-

Connectors
74/407B

74/407B
16-pin green

No.	Infotainment harness		Floor harness	
1	16/105C3:1 Audio module (AUD)	GY-BK	74/407:1 Connector	GY-BK
2	16/105C3:2 Audio module (AUD)	GY	74/407:2 Connector	GY
3	16/105C3:3 Audio module (AUD)	YE-BK	74/407:3 Connector	YE-BK
4	16/105C3:4 Audio module (AUD)	GY-RD	74/407:4 Connector	GY-RD
5	16/105C3:5 Audio module (AUD)	YE-RD	74/407:5 Connector	YE-RD
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	16/105C3:9 Audio module (AUD)	GN-BK	74/407:9 Connector	GN-BK
10	16/105C3:10 Audio module (AUD)	GN	74/407:10 Connector	GN
11	16/105C3:11 Audio module (AUD)	VT-BK	74/407:11 Connector	VT-BK
12	16/105C3:12 Audio module (AUD)	GN-RD	74/407:12 Connector	GN-RD
13	16/105C3:13 Audio module (AUD)	VT-RD	74/407:13 Connector	VT-RD
14	-	-	-	-
15	-	-	-	-
16	-	-	-	-

Connectors
74/409

74/409
26-pin green

No.	Dashboard harness			Floor harness		
1	-		-	-		-
2	3/272:3	Switch, parking brake	BU	4/115:20	Park Brake Module (PBM)	BU
3	3/272:8	Switch, parking brake	GN-WH	4/115:11	Park Brake Module (PBM)	GN-WH
4	3/272:7	Switch, parking brake	WH-BN	4/115:18	Park Brake Module (PBM)	WH-BN
5	3/272:4	Switch, parking brake	VT-GN	4/115:9	Park Brake Module (PBM)	VT-GN
6	3/272:6	Switch, parking brake	WH-OG	4/115:19	Park Brake Module (PBM)	WH-OG
7	3/272:5	Switch, parking brake	BN	4/115:10	Park Brake Module (PBM)	BN
8	-		-	-		-
9	16/26:1	Center dashboard speaker	GN	74/407:10	Connector	GN
10	16/26:2	Center dashboard speaker	GY	74/407:2	Connector	GY
11	73/4061	Branching point	BU-RD	73/5187	Branching point	BU-RD
12	-		-			-
13	16/1C1:2	Integrated Audio Module (IAM)	GN-VT	16/16C1:1	Window antenna amplifier	GN-VT
14	-		-	-		-
15	74/417:3	Connector	WH-GN	73/5021 74/30:4 74/31:4	Branching point Connector, LHD Connector, RHD	WH-GN BN-VT
16	73/4010	Branching point	BN-VT	74/30:4 9/15A:2 74/31:4	Connector, RHD Control module, right rear seat heater Connector, LHD	WH-GN BN-VT
17	11C/19:2	Fuse in distribution box passenger compartment	BU-RD	16/60C1:5	Phone Module (PHM)	BU-RD
18	11C/21:2	Fuse in distribution box passenger compartment	BU-GY	74/414:1 74/417:1	Connector Connector	BU-GY
19	73/4034	Branching point	GY-OG	73/5005 73/5009	Branching point, RHD Branching point, LHD	GY-OG
20	73/4035	Branching point	VT-OG	73/5006 73/5010	Branching point, RHD Branching point, LHD	VT-OG
21	11C/16:2	Fuses in distribution box passenger compartment	VT-RD	3/281C1:8	Infotainment Control Module (ICM)	VT-RD
22	73/4057	Branching point	GN-BK	74/518:2 73/5181	Connector Branching point	GN-BK
23	73/4056	Branching point	BU-BK	74/518:1 73/5180	Connector Branching point	BU-BK
24	73/4046	Branching point	BK-GY	73/5132	Branching point	BK-GY
25	11C/20:2	Fuse in distribution box passenger compartment	GN-RD	16/109C1:7	DVD player/control module	GN-RD
26	11C/18:2	Fuse in distribution box passenger compartment	YE-RD	16/1C1:1	Integrated Audio Module (IAM)	YE-RD

74/411
26-pin gray

No.	Engine compartment harness			Dashboard harness		
1	11B/11:2	Fuse in distribution box in engine compartment	YE-RD	73/4028	Branching point	YE-RD
2	-		-	-		-
3	4/56C3:63	Central Electronic Module (CEM)	GY-VT	74/321:7	Connector	GY-VT
4	74/321:2	Connector	BN-BU	74/412:18	Connector	BN-BU
5	74/321:3	Connector	GY-BU	74/412:17	Connector	GY-BU
6	10/1:8 10/2:8	Lamp housing, front left Lamp housing, front right	BK	73/4017 73/4016	Branching point, LHD Branching point, RHD	BK
7	-		-	-		-
8	-		-	-		-
9	74/301:9	Connector	GN-OG	74/403:8	Connector	GN-RD
10	74/301:11	Connector	BN-VT	74/403:22	Connector	BN-VT
11	74/301:21	Connector	BU-GY	74/403:9	Connector	BU-GY
12	11B/23:2	Fuse, Distribution box in engine compartment	RD-BK	3/111:1	Light Switch Module (LSM)	RD-BK
13	10/1:12 10/2:12	Lamp housing, front left Lamp housing, front right	VT-GN	3/111:4	Light Switch Module (LSM)	VT-GN
14	-		-	-		-
15	4/56C1:65	Central Electronic Module (CEM)	YE-RD	4/148:1	Heated Steering Wheel Module (HSWM)	YE-RD
16	-		-	-		-
17	-		-	-		-
18	-		-	-		-
19	-		-	-		-
20	-		-	-		-
21	7/178:1	Front impact sensor, right	WH-GN	4/9C2:25	Supplemental restraint system module (SRS)	WH-GN
22	7/178:2	Front impact sensor, right	YE-RD	4/9C2:24	Supplemental restraint system module (SRS)	YE-RD
23	7/179:1	Front impact sensor, left	WH-BU	4/9C2:50	Supplemental restraint system module (SRS)	WH-BU
24	7/179:2	Front impact sensor, left	GY-BN	4/9C2:49	Supplemental restraint system module (SRS)	GY-BN
25	11B/20:2	Fuse, Distribution box in engine compartment	VT-BN	4/9C2:42	Supplemental restraint system module (SRS)	VT-BN
26	-		-	-		-

Connectors
74/412A

74/412A
22-pin green

No.	Dashboard harness			Roof harness		
1	16/1C1:3	Integrated Audio Module (IAM)	WH	74/412B:10	Connector	-
2	73/4010	Branching point	BN-VT	74/412B:9	Connector	-
3	4/119.2:1	Remote Receiver Module (RRX)	RD-BN	74/412B:8	Connector	-
4	16/60C1:14	Phone Module (PHM)	-	74/412B:7	Connector	-
5	16/60C1:3	Phone Module (PHM)	BU-GY	74/412B:6	Connector	-
6	4/9C2:45	Supplemental restraint system module (SRS)	GN-WH	74/412B:5	Connector	-
7	-		-	-		-
8	16/1C1:4	Integrated Audio Module (IAM)	-	74/412B:3	Connector	-
9	-		-	-		-
10	4/9C2:22	Supplemental restraint system module (SRS)	GY-BU	74/412B:1	Connector	-
11	16/60C1:15	Phone Module (PHM)	WH	74/412B:22	Connector	-
12	-		-	-		-
13	16/60C1:2	Phone Module (PHM)	GY-VT	74/412B:20	Connector	-
14	16/60C1:1	Phone Module (PHM)	BN-GN	74/412B:19	Connector	-
15	16/60C1:4	Phone Module (PHM)	YE-VT	74/412B:18	Connector	-
16	16/60C1:13	Phone Module (PHM)	VT	74/412B:17	Connector	-
17	74/411:5	Connector	GY-BU	74/412B:16	Connector	-
18	74/411:4	Connector	BN-BU	74/412B:15	Connector	-
19	-		-	-		-
20	-		-	-		-
21	73/4005	Branching point	BU-BK	74/412B:12	Connector	-
22	73/4006	Branching point	GN-BK	74/412B:11	Connector	-

Connectors
74/412B

74/412B
22-pin green

No.	Dashboard harness		Roof harness		
1	74/412A:10 Connector	-	10/22:2	Ceiling light	GY-BU
2	-	-	-		-
3	74/412A:8 Connector	-	16/98:2	Microphone	-
4	-	-	-		-
5	74/412A:6 Connector	-	10/22:3	Ceiling light	GN-WH
6	74/412A:5 Connector	-	3/267:3	Switch unit, telematics	BU-GY
7	74/412A:4 Connector	-	3/267:2	Switch unit, telematics	-
8	74/412A:3 Connector	-	73/5222	Branching point	RD-BN
9	74/412A:2 Connector	-	73/4047	Branching point	BN-VT
10	74/412A:1 Connector	-	16/98:1	Microphone	WH
11	74/412A:22 Connector	-	73/5098 73/5155	Branching point Branching point	GN-BK
12	74/412A:21 Connector	-	73/5097 73/5154	Branching point Branching point	BU-BK
13	-	-	-		-
14	-	-	-		-
15	74/412A:18 Connector	-	3/267:4 4/80:10	Switch unit, telematics Forward Sensing Module (FSM)	YE-VT BN-BU
16	74/412A:17 Connector	-	4/80:9	Forward Sensing Module (FSM)	GY-BN
17	74/412A:16 Connector	-	3/267:7	Switch unit, telematics	VT
18	74/412A:15 Connector	-	3/267:4	Switch unit, telematics	YE-VT
19	74/412A:14 Connector	-	3/267:5	Switch unit, telematics	BN-GN
20	74/412A:13 Connector	-	3/267:6	Switch unit, telematics	GY-VT
21	-	-	-		-
22	74/412A:11 Connector	-	3/267:1	Switch unit, telematics	WH

Connectors
74/414 - 74/417

74/414
10-pin black

No.	Dashboard harness			Roof harness		
1	74/409:18	Connector	BU-GY	4/33:7	Sunroof control module	BU-GY
2	4/56C3:75	Central Electronic Module (CEM)	RD-BN	4/33:1	Sunroof control module	RD-BN
3	-		-	-		-
4	73/4059	Branching point	BU-BK	4/80C1:7	Forward Sensing Module (FSM)	BU-BK
5	4/56C3:5	Central Electronic Module (CEM)	GY-OG	73/5189 74/901:5	Branching point Connector	GY-OG
6	27/2:2	Indicator, visual collision warning	GN-BN	4/80C1:6	Forward Sensing Module (FSM)	GN-BN
7	4/56C3:63	Central Electronic Module (CEM)	GY-VT	4/80C1:8	Forward Sensing Module (FSM)	GY-VT
8	27/2:4	Indicator, visual collision warning	VT	4/80C1:13	Forward Sensing Module (FSM)	VT
9	73/4012	Branching point	BK-WH	4/33:10 73/4013 73/4014	Sunroof control module Branching point Connector, W/O sunroof	BK-WH
10	73/4061	Branching point	BU-RD	73/4060	Branching point	BU-RD

74/417
7-pin green

No.	Dashboard harness			Climate control system harness		
1	74/409:18	Connector	BU-GY	4/6	Climate control system	RD
2	73/4010	Branching point	BN-VT	4/6	Climate control system	YE
3	74/401:1 74/409:15	Connector Connector	WH-GN	4/6	Climate control system	GN
4	73/4012	Branching point	BK-WH	4/6	Climate control system	BU
5	74/401:4	Connector	BN	4/6	Climate control system	PK
6	74/401:3	Connector	YE-VT	4/6	Climate control system	BN
7	74/401:5	Connector	BU-GN	4/6	Climate control system	GN

Connectors
74/419 - 74/421

74/419
2-pin blue

No.	Dashboard harness			Infotainment harness		
1	16/1C8:1 16/60C5:1	Integrated Audio Module (IAM) Phone module (PHM)	WH	16/47C1:1	Antenna GSM/GPS/RDAR	WH
1S	16/1C8:1 16/60C5:1S	Integrated Audio Module (IAM) Phone module (PHM)	-	16/47C1:1S	Antenna GSM/GPS/RDAR	-

74/420
5-pin gray

No.	Dashboard harness			Tunnel harness		
1	16/1C5:1	Integrated Audio Module (IAM)	RD	17/42C1:1	USB-port	RD
2	16/1C5:2	Integrated Audio Module (IAM)	BN	17/42C1:2	USB-port	BN
3	16/1C5:3	Integrated Audio Module (IAM)	VT	17/42C1:3	USB-port	VT
4	16/1C5:4	Integrated Audio Module (IAM)	BK	17/42C1:4	USB-port	BK
5	16/1C5:S	Integrated Audio Module (IAM)	-	17/42C1:5S	USB-port	-

74/421
2-pin gray

No.	Dashboard harness			Infotainment harness		
1	3/281C4:1	Infotainment Control Module (ICM)	BK	16/36C6:1	TV receiver	BK
1S	3/281C4:1S	Infotainment Control Module (ICM)	-	16/36C6:1S	TV receiver	-

Connectors
74/428 - 74/501:1-10

74/428
3-pin blue

No.	Dashboard harness		Harness passenger seat	
1	16/109C6:1 DVD player/control module	BN	16/164C2:1 Screen, left head restraint	YE
2	16/109C6:2 DVD player/control module	VT	16/164C2:2 Screen, left head restraint	WH
3S	16/109C6:3S DVD player/control module	-	16/164C2:S Screen, left head restraint	-

74/429
3-pin blue

No.	Dashboard harness		Harness drivers seat	
1	16/109C7:1 DVD player/control module	BN	16/165C2:1 Screen, right head restraint	YE-GN
2	16/109C7:2 DVD player/control module	VT	16/165C2:2 Screen, right head restraint	WH-VT
3S	16/109C7:3S DVD player/control module	-	16/165C2:S Screen, right head restraint	-

74/430
3-pin blue

No.	Dashboard harness		Infotainment harness	
1	16/109C5:1 DVD player/control module	BN	16/36C5:1 Screen, right head restraint	BN
2	16/109C5:2 DVD player/control module	VT	16/36C5:2 Screen, right head restraint	VT
3S	16/109C5:3S DVD player/control module	-	16/36C5:3S Screen, right head restraint	-

74/501
22-pin gray

No.	Floor harness		Tunnel harness	
1	-	-	-	-
2	-	-	-	-
3	-	-	-	-
4	-	-	-	-
5	-	-	-	-
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	16/135:2 Antenna, door lock, passenger compartment 3	BU-WH	4/93C2:17 Keyless vehicle module (KVM)	BU-WH
10	16/134:1 Antenna, door lock, passenger compartment 2	YE-OG	4/93C1:16 Keyless vehicle module (KVM)	YE-OG

continues

Connectors
74/501:11-22 - 74/502

74/501
22-pin gray

No.	Floor harness			Tunnel harness		
11	-		-	-		-
12	-		-	-		-
13	-		-	-		-
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-
17	-		-	-		-
18	3/65:3	Switch, heated rear seat	BN-VT	73/5021	Branching point	BN-VT
19	16/135:1	Antenna, door lock, passenger compartment 3	GY-VT	4/93C2:14	Keyless vehicle module (KVM)	GY-VT
20	16/134:2	Antenna, door lock, passenger compartment 2	GN-RD	4/93C1:4	Keyless vehicle module (KVM)	GN-RD
21	9/1:2	Outlet 12V front	GN-OG	11C/22:2	Fuse in distribution box passenger compartment	GN-OG
22	73/5023	Branching point	BK-GN	73/5026	Branching point	BK-VT

74/502
2-pin gray

No.	Floor harness			Tunnel harness		
1	-		-	-		-
2	73/5035 73/5023	Branching point, LHD Branching point, RHD	BK-VT BK-GN	73/5026	Branching point	BK-VT

Connectors
74/503

74/503
22-pin gray

No.	Infotainment harness		Tunnel harness	
1	-	-	-	-
2	-	-	-	-
3	-	-	-	-
4	-	-	-	-
5	-	-	-	-
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	-	-	-	-
10	-	-	-	-
11	-	-	-	-
12	-	-	-	-
13	-	-	-	-
14	-	-	-	-
15	4/84C1:3 Suspension Module (SUM)	YE-BK	3/225:5 Switch unit, Continuously Controlled Damping (CCD)	YE-BK
16	4/84C1:21 Suspension Module (SUM)	VT-OG	3225:6 Switch unit, Continuously Controlled Damping (CCD)	VT-OG
17	4/84C1:24 Suspension Module (SUM)	YE-RD	3/225:1 Switch unit, Continuously Controlled Damping (CCD)	YE-RD
18	4/84C1:26 Suspension Module (SUM)	BU	3/225:2 Switch unit, Continuously Controlled Damping (CCD)	BU
19	4/84C1:11 Suspension Module (SUM)	GN-BK	3/225:3 Switch unit, Continuously Controlled Damping (CCD)	GN-BK
20	4/84C1:29 Suspension Module (SUM)	GY-OG	3/225:4 Switch unit, Continuously Controlled Damping (CCD)	GY-OG
21	-	-	-	-
22	-	-	-	-

Connectors
74/504:1-25

74/504
57-pin natural

No.	Engine compartment harness			Floor harness		
1	74/301:6	Connector	WH	74/507:17	Connector	WH
2	74/301:7	Connector	BK-WH	74/507:18	Connector	BK-WH
3	-		-	-		-
4	-		-	-		-
5	4/16:43	Brake Control Module (BCM)	YE-BK	74/512:5	Connector	YE-BK
6	4/16:42	Brake Control Module (BCM)	BU-RD	74/512:6	Connector	BU-RD
7	4/16:19	Brake Control Module (BCM)	GN-OG	7/164:2	Body Sensor Cluster Stability Sensor (BSC)	GN-OG
8	4/16:18	Brake Control Module (BCM)	BU-WH	7/164:3	Body Sensor Cluster Stability Sensor (BSC)	BU-WH
9	-		-	-		-
10	-		-	-		-
11	4/16:36	Brake Control Module (BCM)	BU-OG	74/511:7	Connector	BU-OG
12	4/16:37	Brake Control Module (BCM)	GN-RD	74/511:6	Connector	GN-RD
13	-		-	-		-
14	2/193:1	Relay, comfort functions	VT-GN	4/56C1:9	Central Electronic Module (CEM)	VT-GN
15	-		-	-		-
16	-		-	-		-
17	74/301:19	Connector	BU-WH	7/51:5	Accelerator pedal sensor	BU-WH
18	74/301:29	Connector	YE-OG	74/511:17	Connector	YE-OG
19	74/301:27	Connector	RD	4/56C2:17	Central Electronic Module (CEM)	RD
20	-		-	-		-
21	74/301:17	Connector	BU	74/512:7	Connector	BU
21	-		-	-		-
22	-		-	-		-
23	-		-	-		-
24	-		-	-		-
25	-		-	-		-

continues

Connectors
74/504:26-48

74/504
57-pin natural

No.	Engine compartment harness			Floor harness		
26	-		-	-		-
27	-		-	-		-
28	-		-	-		-
29	-		-	-		-
30	-		-	-		-
31	-		-	-		-
32	-		-	-		-
33	-		-	-		-
34	-		-	-		-
35	-		-	-		-
36	-		-	-		-
37	74/301:33	Connector	VT-OG	74/512:2	Connector	VT-OG
38	74/512:3	Connector	GN-OG	74/301:24	Connector	GN-OG
39	74/301:31	Connector	BU-GY	74/512:4	Connector	BU-GY
40	-		-	-		-
41	9/30:7	Auxiliary heater	YE-RD	74/512:14	Connector	YE-RD
42	74/301:20	Connector, Manual	GY-BN	4/56C2:41 4/93C5:3	Central Electronic Module (CEM) Keyless Vehicle Module (KVM)	GY-BN
43	-		-	-		-
44	73/3021	Branching point	BU-BK	73/5015 74/511:3	Branching point Connector, W/O 4-Cyl.	BU-BK
45	73/3022	Branching point	GN-BK	73/5016 74/511:4	Branching point Connector, W/O 4-Cyl.	GN-BK
46	-		-	-		-
47	-		-	-		-
48	-		-	-		-

continues

Connectors
74/504:49-57 - 74/504B

74/504
57-pin natural

No.	Engine compartment harness			Floor harness		
49	-		-	-		-
50	4/16:22	Brake Control Module (BCM)	VT-BN	7/164:4	Body Sensor Cluster Stability Sensor (BSC)	VT-BN
51	4/16:29	Brake Control Module (BCM)	GN-BU	7/164:1	Body Sensor Cluster Stability Sensor (BSC)	GN-BU
52	-		-	-		-
53	-		-	-		-
54	-		-	-		-
55	-		-	-		-
56	73/3019 4/56C1:30	Branching point Central Electronic Module (CEM)	GY-OG	73/5005 73/5009	Branching point, LHD Branching point, RHD	GY-OG
57	73/3020 4/56C1:31	Branching point Central Electronic Module (CEM)	VT-OG	73/5006 73/5010	Branching point, LHD Branching point, RHD	VT-OG

74/504B
2-pin red

No.	Engine compartment harness			Floor harness		
1	-		-	-		-
2	11A/3:2 11A/5:2	Fuse, Distribution box in engine compartment, without Start/Stop Fuse, Distribution box in engine compartment, with Start/Stop	RD-GN	73/5075	Branching point	RD-GN

Connectors
74/507:1-20

74/507
26-pin black

No.	Harness driver door			Floor harness		
1	3/126C2:3	Driver Door Module (DDM)	GY-OG	73/5005	Branching point	GY-OG
2	3/126C2:15	Driver Door Module (DDM)	VT-OG	73/5006	Branching point	VT-OG
3	6/36:4	Lock motor, central locking, left front door	GN-VT	4/56C2:11	Central Electronic Module (CEM)	GN-VT
4	3/127C1:20 73/5019	Passenger Door Module (PDM), RHD Branching point, LHD	GN-WH	74/509:7	Connector	GN-WH
5	-		-	-		-
6	-		-	-		-
7	10/262:1 7:3/5166	Ground illumination lighting, left front, RHD Branching point	BU-WH	73/5044	Branching point, LHD	BU-WH
8	10/261:2 10/262:2	Ground illumination lighting, left front, LHD Ground illumination lighting, right front, RHD	GY-BK	73/5060	Branching point	GY-BK
9	73/5201 73/5202	Branching point Branching point	BU-RD	73/5187	Branching point	BU-RD
10	-		-	-		-
11	3/273:1	Lock contact, left front door	BU-GN	4/93C5:19	Keyless Vehicle Module (KVM)	BU-GN
12	3/273:3	Lock contact, left front door	YE-VT	4/93C5:21	Keyless Vehicle Module (KVM)	YE-VT
13	3/74:4	Left-hand front door lock unit, LHD	GN-OG	4/93C4:9	Keyless Vehicle Module (KVM)	GN-OG
14	3/74:1	Left-hand front door lock unit, LHD	GY	4/93C2:4	Keyless Vehicle Module (KVM)	GY
15	3/74:2	Left-hand front door lock unit, LHD	VT-BK	4/93C4:1	Keyless Vehicle Module (KVM)	VT-BK
16	-		-	-		-
17	6/62:2	Power door mirror, left	WH	74/504:1	Connector	WH
18	6/62:3	Power door mirror, left	BK-WH	74/504:2	Connector	BK-WH
19	-		-	-		-
20	73/5037 73/5024	Branching point, LHD Branching point, RHD	BK-VT	73/5035	Branching point	BK-VT

continues

Connectors
74/507:21-26 - 74/508:1-7

74/507
26-pin black

No.	Harness driver door			Floor harness		
21	3/126C1:2 3/127C1:2	Driver Door Module (DDM), LHD Passenger Door Module (PDM), RHD	VT-RD RD	11C/8:2 11C/9:2	Fuses in distribution box passenger compartment, LHD Fuses in distribution box passenger compartment, RHD	VT-RD RD
22	16/4:1 73/5078	Left-hand front door speaker Branching point	GN-BK	74/407:9	Connector	GN-BK
23	16/4:2 73/5079	Left-hand front door speaker Branching point	GY-BK	74/407:1	Connector	GY-BK
24	-		-	-		-
25	7/208:1	Side impact sensor, left front door	VT-OG	4/9C1:58	Supplemental restraint system module (SRS)	VT-OG
26	7/208:2	Side impact sensor, left front door	YE-RD	4/9C1:57	Supplemental restraint system module (SRS)	YE-RD

74/508
26-pin black

No.	Harness passenger door			Floor harness		
1	3/126C2:1 3/127C2:3	Driver Door Module (DDM), RHD Passenger Door Module (PDM), LHD	GY-OG	73/5005 73/5009	Branching point, LHD Branching point, RHD	GY-OG
2	3/126C2:13 3/127C2:15	Driver Door Module (DDM), RHD Passenger Door Module (PDM), LHD	VT-OG	73/5006 73/5010	Branching point, LHD Branching point, RHD	VT-OG
3	6/55:4	Lock motor, central locking, right front door	GN-BK	4/56C2:29	Central Electronic Module (CEM)	GN-BK
4	3/127C1:20 73/5019	Passenger Door Module (PDM), LHD Branching point, RHD	GN-WH	74/510:7	Connector	GN-WH
5	-		-	-		-
6	-		-	-		-
7	10/262:1 73/5166	Ground illumination lighting, right front, LHD Branching point, RHD	BU-WH	73/5044	Branching point	BU-WH

continues

Connectors
74/508:8-26

74/508
26-pin black

No.	Harness passenger door			Floor harness		
8	10/261:2 10/262:2	Ground illumination lighting, left front, RHD Ground illumination lighting, right front, LHD	GY-BK	73/5060	Branching point	GY-BK
9	73/5201 73/5202	Branching point, RHD Branching point, LHD	BU-RD	73/5187	Branching point	BU-RD
10	-		-	-		-
11	3/274:1	Lock contact, right front door	GN-RD	4/93C5:2	Keyless Vehicle Module (KVM)	GN-RD
12	3/274:3	Lock contact, right front door	BU-GY	4/93C5:22	Keyless Vehicle Module (KVM)	BU-GY
13	3/75:2	Right-hand front door lock unit	GY-BN	4/93C4:22	Keyless Vehicle Module (KVM)	GY-BN
14	3/75:4	Right-hand front door lock unit	BU-RD	4/93C2:5	Keyless Vehicle Module (KVM)	BU-RD
15	3/75:3	Right-hand front door lock unit	GN-VT	4/93C4:2	Keyless Vehicle Module (KVM)	GN-VT
16	-		-	-		-
17	-		-	-		-
18	-		-	-		-
19	-		-	-		-
20	73/5024 73/5037	Branching point, LHD Branching point, RHD	BK-GN	73/5023	Branching point	BK-GN
21	3/126C1:2 3/127C1:2	Driver Door Module (DDM), RHD Passenger Door Module (PDM), LHD	VT-RD RD	11C/8:2 11C/9:2	Fuses in distribution box passenger compartment Fuses in distribution box passenger compartment	VT-RD RD
22	16/3:1 73/5076	Right-hand front door speaker Branching point	VT-BK	74/407:11	Connector	VT-BK
23	16/3:2 73/5077	Right-hand front door speaker Branching point	YE-BK	74/407:3	Connector	YE-BK
24	-		-	-		-
25	-		-	-		-
26	-		-	-		-

Connectors
74/509

74/509
16-pin black

No.	Harness rear door			Floor harness		
1	3/128:2	Left rear door module (LDM)	RD-BU	11C/11:2	Fuse in distribution box passenger compartment	BU-RD
2	3/128:13 73/5036	Left rear door module (LDM) Branching point	BK-VT	73/5035	Branching point	BK-VT
3	16/6:1	Left-hand rear door speaker	GN-RD	74/407:12	Connector	GN-RD
4	16/6:2	Left-hand rear door speaker	GY-RD	74/407:4	Connector	GY-RD
5	6/57:4	Lock motor, central locking, left rear door	GN	4/56C2:10	Central Electronic Module (CEM)	GN
6	10/243:1	Lighting, left-hand rear inner door handle	BU-RD	73/5187	Branching point	BU-RD
7	3/128:20	Left rear door module (LDM)	GN-WH	74/507:4	Connector	GN-WH
8	3/275:5	Lock contact, left rear door	YE	4/93C1:15	Keyless Vehicle Module (KVM)	YE
9	3/275:2	Lock contact, left rear door	GN-BN	4/93C1:3	Keyless Vehicle Module (KVM)	GN-BN
10	3/76:2	Lock unit, rear left door	BU-BN	4/93C3:2	Keyless Vehicle Module (KVM)	BU-BN
11	3/76:1	Lock unit, rear left door	YE-BU	4/93C2:2	Keyless Vehicle Module (KVM)	YE-BU
12	3/76:4	Lock unit, rear left door	VT-OG	4/93C5:15	Keyless Vehicle Module (KVM)	VT-OG
13	3/275:1	Lock contact, left rear door	GY-OG	4/93C5:17	Keyless Vehicle Module (KVM)	GY-OG
14	3/275:3	Lock contact, left rear door	GN-OG	4/93C5:4	Keyless Vehicle Module (KVM)	GN-OG
15	10/294:1	Ground illumination lighting, left rear	BU-WH	73/5044	Branching point	BU-WH
16	10/294:2	Ground illumination lighting, left rear	GY-BK	73/5060	Branching point	GY-BK

Connectors
74/510

74/510
16-pin black

No.	Harness rear door			Floor harness		
1	3/129:2	Right rear door module (RDM)	YE-RD	11C/10:2	Fuse in distribution box passenger compartment	YE-RD
2	3/129:13 73/5025	Right rear door module (RDM) Branching point	BK-GN	73/5023	Branching point	BK-GN
3	16/5:1	Right-hand rear door speaker	VT-RD	74/407:13	Connector	VT-RD
4	16/5:2	Right-hand rear door speaker	YE-RD	74/407:5	Connector	YE-RD
5	6/56:4	Lock motor, central locking, right rear door	YE	4/56C2:28	Central Electronic Module (CEM)	YE
6	10/244:1	Lighting, right-hand rear inner door handle	BU-RD	73/5187	Branching point	BU-RD
7	3/129:20	Right rear door module (RDM)	GN-WH	74/508:4	Connector	GN-WH
8	3/276:5	Lock contact, right rear door	BU-OG	4/93C1:14	Keyless Vehicle Module (KVM)	BU-OG
9	3/276:4	Lock contact, right rear door	VT-GY	4/93C1:23	Keyless Vehicle Module (KVM)	VT-GY
10	3/77:3	Lock unit, rear right door	GY-BK	4/93C3:1	Keyless Vehicle Module (KVM)	GY-BK
11	3/77:4	Lock unit, rear right door	GN	4/93C2:3	Keyless Vehicle Module (KVM)	GN
12	3/77:2	Lock unit, rear right door	YE-RD	4/93C4:21	Keyless Vehicle Module (KVM)	YE-RD
13	3/276:1	Lock contact, right rear door	VT-RD	4/93C5:5	Keyless Vehicle Module (KVM)	VT-RD
14	3/276:3	Lock contact, right rear door	GY-RD	4/93C5:20	Keyless Vehicle Module (KVM)	GY-RD
15	10/295:1	Ground illumination lighting, right rear	BU-WH	73/5044	Branching point	BU-WH
16	10/295:2	Ground illumination lighting, right rear	GY-BK	73/5060	Branching point	GY-BK

Connectors
74/511

74/511
22-pin gray

No.	Floor harness			Left rear axle harness		
1	11C/29:2	Fuse in distribution box passenger compartment	WH-VT	74/520:6	Connector	GN-RD
2	-		-	-		-
3	73/5015 74/504:44	Branching point Connector	BU-BK	74/520:1	Connector	BU-BK
4	73/5016 74/504:45	Branching point Connector	GN-BK	74/520:2	Connector	GN-BK
5	-		-	-		-
6	74/504:12	Connector	GN-RD	7/56:2	Sensor ABS, rear left	BN
7	74/504:11	Connector	BU-OG	7/56:1	Sensor ABS, rear left	WH
8	-		-	-		-
9	-		-	-		-
10	-		-	-		-
11	-		-	-		-
12	74/518:6	Connector	GN-BU	8/22:1	Shock absorber, Four-C, rear left	GN-BU
13	74/518:7	Connector	YE-BU	8/22:2	Shock absorber, Four-C, rear left	YE-BU
14	74/518:3	Connector	YE-GN	7/120:5	Height sensor, suspension, rear left	YE-GN
15	74/518:4	Connector	GN-BN	7/120:1	Height sensor, suspension, rear left	GN-BN
16	74/518:5	Connector	VT-WH	7/120:4	Height sensor, suspension, rear left	VT-WH
17	74/504:18	Connector	YE-OG	4/83:5	Fuel pump control module	YE-OG
18	4/56C2:51	Central Electronic Module (CEM)	GN-BU	6/33:1	Fuel pump	GN-BU
19	4/56C2:33	Central Electronic Module (CEM)	YE-VT	6/33:2	Fuel pump	YE-VT
20	4/56C2:15	Central Electronic Module (CEM)	GN-OG	6/33:6	Fuel pump	GN-OG
21	-		-	-		-
22	-		-	-		-

Connectors
74/512 - 74/513

74/512
14-pin gray

No.	Floor harness			Harness rear axle right		
1	-		-	-		-
2	74/504:37	Connector	VT-OG	6/67:1	Pump, fuel leakage control	VT-OG
3	74/504:38	Connector	GN-OG	6/67:2	Pump, fuel leakage control	GN-OG
4	74/504:39	Connector	BU-GY	6/67:3	Pump, fuel leakage control	BU-GY
5	74/504:5	Connector	YE-BK	7/57:1	Right-hand rear ABS sensor	WH
6	74/504:6	Connector	BU-RD	7/57:2	Right-hand rear ABS sensor	BN
7	74/504:21	Connector	BU	6/67:4 9/38:1	Pump, fuel leakage control Electrically heated fuel filter	BU
8	31/68	Ground connection	BK-OG	6/35:2 9/38:2	Fuel pump, auxiliary heater Electrically heated fuel filter	BK-OG
9	4/56C2:34	Central Electronic Module (CEM)	YE-GN	7/121:5	Height sensor, suspension, rear right	YE-GN
10	4/56C2:53	Central Electronic Module (CEM)	GN-BN	7/121:1	Height sensor, suspension, rear right	GN-BN
11	4/56C2:35	Central Electronic Module (CEM)	GN-VT	7/121:4	Height sensor, suspension, rear right	GN-VT
12	-		-	-		-
13	-		-	-		-
14	74/504:41	Connector	YE-RD	6/35:1	Fuel pump, auxiliary heater	YE-RD

74/513
5-pin green

No.	Infotainment harness			Harness rear axle right		
1	4/84C1:5	Suspension Module (SUM)	VT-GY	8/23:1	Shock absorber, Four-C, rear right	VT-GY
2	4/84C1:4	Suspension Module (SUM)	BU-BN	8/23:2	Shock absorber, Four-C, rear right	BU-BN
3	73/5066	Branching point	YE-GN	7/121:5	Shock absorber, Four-C, rear right	YE-GN
4	73/5053	Branching point	YE-GN	7/121:1	Shock absorber, Four-C, rear right	GN-BN
5	4/84C1:14	Suspension Module (SUM)	GN-VT	7/121:4	Shock absorber, Four-C, rear right	GN-VT

Connectors
74/514 - 74/518

74/514
4-pin gray

No.	Floor harness			Left rear axle harness		
1	4/115:29	Park Brake Module (PBM)	BU-GN	6/146:2	Lock motor, rear left brake disc	BU-GN
2	4/115:14	Park Brake Module (PBM)	VT-BK	6/146:1	Lock motor, rear left brake disc	VT-BK
3	4/56C2:76	Central Electronic Module (CEM)	YE-OG	4/83:4 6/33:4	Fuel pump control module Fuel pump	YE-OG
4	31/65	Ground connection	BK-YE	74/520:5	Connector	BK-YE

74/515
7-pin gray

No.	Dashboard harness			Tunnel harness		
1	16/109C2:14	DVD player/control module	GN	16/123C1:3	Auxiliary equipment input (AUX)	GN
2	-		-	-		-
3	-		-	-		-
4	16/109C2:1	DVD player/control module	WH	16/123C1:4	Auxiliary equipment input (AUX)	WH
5	16/109C2:2	DVD player/control module	BN	16/123C1:6	Auxiliary equipment input (AUX)	BN
6	16/109C2:3	DVD player/control module	YE	16/123C1:5	Auxiliary equipment input (AUX)	YE
7S	16/109C2:13	DVD player/control module	-	16/123C1:1	Auxiliary equipment input (AUX)	-

74/518
7-pin gray

No.	Infotainment harness			Floor harness		
1	4/84C1:16	Suspension Module (SUM)	BU-BK	73/5180 74/409:23	Branching point Connector	BU-BK
2	4/84C1:15	Suspension Module (SUM)	GN-BK	73/5181 74/409:22	Branching point Connector	GN-BK
3	73/5052	Branching point	YE-GN	74/511:14	Connector	YE-GN
4	73/5053	Branching point	GN-BN	74/511:15	Connector	GN-BN
5	4/84C1:28	Suspension Module (SUM)	VT-WH	74/511:16	Connector	VT-WH
6	4/84C1:2	Suspension Module (SUM)	GN-BU	74/511:12	Connector	GN-BU
7	4/84C1:1	Suspension Module (SUM)	YE-BU	74/511:13	Connector	YE-BU

74/519
22-pin gray

No.	Infotainment harness			Engine compartment harness		
1	4/84C1:6	Suspension Module (SUM)	BU-BK	8/20:1	Shock absorber, Four-C, front left	BU-BK
2	4/84C1:7	Suspension Module (SUM)	VT-BN	8/20:2	Shock absorber, Four-C, front left	VT-BN
3	4/84C1:9	Suspension Module (SUM)	GY-YE	8/21:1	Shock absorber, Four-C, front right	GY-YE
4	4/84C1:8	Suspension Module (SUM)	BU-OG	8/21:2	Shock absorber, Four-C, front right	BU-OG
5	73/5052	Branching point	YE-GN	7/118:5	Height sensor, suspension, front left	YE-GN
6	4/84C1:12	Suspension Module (SUM)	BU-RD	7/118:4	Height sensor, suspension, front left	BU-RD
7	73/5066	Branching point	YE-GN	73/3077	Branching point	YE-GN
8	4/84C1:27	Suspension Module (SUM)	GY-VT	7/119:4	Height sensor, suspension, front right	GY-VT
9	4/84C1:22	Suspension Module (SUM)	BU-GY	7/88:1	Acceleration sensor, Four-C, front right	BU-GY
10	4/84C1:10	Suspension Module (SUM)	VT-RD	7/87:1	Acceleration sensor, Four-C, front left	VT-RD
11	4/84C1:19	Suspension Module (SUM)	GN-BN	73/3078	Branching point	GN-BN
12	4/86C2:2	Parking Assistance Module (PAM)	VT-GY	74/309:4	Connector	VT-GY
13	4/86C2:5	Parking Assistance Module (PAM)	BU-GN	74/309:5	Connector	BU-GN
14	4/86C2:1	Parking Assistance Module (PAM)	YE-OG	74/309:6	Connector	YE-OG
15	4/86C2:6	Parking Assistance Module (PAM)	BU-BK	74/309:10	Connector	BU-BK
16	4/86C2:7	Parking Assistance Module (PAM)	BU-GY	74/309:11	Connector	BU-GY
17	4/86C2:8	Parking Assistance Module (PAM)	BU-OG	74/309:12	Connector	BU-OG
18	-		-	-		-
19	-		-	-		-
20	-		-	-		-
21	-		-	-		-
22	-		-	-		-

Connectors
74/520 - 74/523

74/520
6-pin gray

No.	Left rear axle harness			All wheel drive harness		
1	74/511:3	Connector	BU-BK	4/82C1:4	Differential Electronic Module (DEM)	BU-BK
2	74/511:4	Connector	GN-BK	4/82C1:2	Differential Electronic Module (DEM)	GN-BK
3	-		-	-		-
4	-		-	-		-
5	74/514:4	Connector	BK-YE	4/82:7	Differential Electronic Module (DEM)	BK-YE
6	74/511:1	Connector	GN-RD	4/82:3	Differential Electronic Module (DEM)	GN-RD

74/523
6-pin gray

No.	Harness parking assistance adp.			Harness bumper, rear		
1	4/86C3:11	Parking Assistance Module (PAM)	BU-WH	73/5064	Branching point	BU-WH
2	4/86C3:2	Parking Assistance Module (PAM)	YE-GY	7/133:2	Rear parking assistance sensor	YE-GY
3	4/86C3:3	Parking Assistance Module (PAM)	YE-BK	7/132:2	Rear parking assistance sensor	YE-BK
4	4/86C3:4	Parking Assistance Module (PAM)	YE-OG	7/134:2	Rear parking assistance sensor	YE-OG
5	4/86C3:5	Parking Assistance Module (PAM)	YE-GN	7/131:2	Rear parking assistance sensor	YE-GN
6	4/86C3:8	Parking Assistance Module (PAM)	GN-WH	73/5067	Branching point	GN-WH

Connectors
74/524 - 74/532

74/524
2-pin gray

No.	Harness rear axle right			Floor harness		
1	4/115:12	Park Brake Module (PBM)	YE-GY	6/147:1	Lock motor, rear right brake disc	YE-GY
2	4/115:27	Park Brake Module (PBM)	GN-BN	6/147:2	Lock motor, rear right brake disc	GN-BN

74/531
2-pin gray

No.	Infotainment harness			DAB Adapter harness		
1	16/162C2:1	Remote Digital Audio Receiver (RDAR)	WH	16/47C2:1	Digital Audio Broadcast Module (DABM)	WH
1S	16/162C2:1S	Remote Digital Audio Receiver (RDAR)	-	16/47C2:1S	Digital Audio Broadcast Module (DABM)	-

74/532
2-pin gray

No.	Floor harness			DAB Adapter harness		
1	16/162C2:2	Digital Audio Broadcast Module (DABM)	WH	16/71C2:1	Window antenna amplifier	WH
1S	16/162C2:2S	Digital Audio Broadcast Module (DABM)	-	16/71C2:1S	Window antenna amplifier	-

Connectors
74/534 - 74/543

74/534
4-pin gray

No.	Floor harness			Infotainment harness		
1	73/5117	Branching point	RD	16/105C1:1	Audio module (AUD)	RD
2	11C/17:2	Fuse in distribution box passenger compartment	RD	16/105C3:16 73/5051	Audio module (AUD) Branching point	RD
3	-		-	-		-
4	73/5132	Branching point	BK-GY	16/36C2:2 16/145C1:2 16/162C1:2 73/5123	TV receiver Remote Digital Audio Receiver (RDAR) Digital Audio Broadcast Module (DABM) Branching point	BK-GY

74/543
16-pin green

No.	Dashboard harness			Harness drivers seat		
1	16/109C2:17	DVD player/control module	GY	16/164C3:1	Screen, left head restraint	BU-GY
2	16/109C2:18	DVD player/control module	WH	16/164C3:4	Screen, left head restraint	BU-GY
3	16/109C2:22	DVD player/control module	BK-WH	16/164C3:2	Screen, left head restraint	BU-GY
4	-		-	-		-
5	-		-	-		-
6	-		-	-		-
7	73/5126	Branching point	GY-OG	16/164C1:7	Screen, left head restraint	GY-OG
8	73/5127	Branching point	VT-OG	16/164C1:8	Screen, left head restraint	VT-OG
9	16/109C1:5	DVD player/control module	BN-YE	16/164C1:9	Screen, left head restraint	RD
10	-		-	-		-
11	16/109C1:8	DVD player/control module	BK	16/164C1:11	Screen, left head restraint	BN-BU
12	16/109C1:1	DVD player/control module	RD	16/164C1:12	Screen, left head restraint	WH-GN
13	-		-	-		-
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-

Connectors
74/545 - 74/561

74/545
16-pin green

No.	Dashboard harness			Harness drivers seat	
1	16/109C2:5	DVD player/control module	YE	16/165C3:4 Screen, right head restraint	GN-BN
2	16/109C2:6	DVD player/control module	GN	16/165C3:1 Screen, right head restraint	GN-BN
3	16/109C2:7	DVD player/control module	BK-WH	16/165C3:2 Screen, right head restraint	GN-BN
4	-		-	-	-
5	-		-	-	-
6	-		-	-	-
7	73/5126	Branching point	GY-OG	16/165C1:7 Screen, right head restraint	GY-OG
8	73/5127	Branching point	VT-OG	16/165C1:8 Screen, right head restraint	VT-OG
9	16/109C1:6	DVD player/control module	GN-VT	16/165C1:9 Screen, right head restraint	BK
10	-		-	-	-
11	16/109C1:8	DVD player/control module	BK	16/165C1:11 Screen, right head restraint	BN-BU
12	16/109C1:1	DVD player/control module	RD	16/165C1:12 Screen, right head restraint	WH-GN
13	-		-	-	-
14	-		-	-	-
15	-		-	-	-
16	-		-	-	-

74/561
2-pin gray

No.	Floor harness			Infotainment harness	
1	73/5011 73/5180	Branching point Branching point	BU-BK	16/105C5:10 Audio Module (AUD)	BU-BK
2	73/5012 73/5181	Branching point Branching point	GN-BK	16/105C5:22 Audio Module (AUD)	GN-BK

Connectors
74/601 S80

74/601 S80
10-pin gray

No.	Trunk lid harness			Floor harness		
1	10/3:2	License plate lighting	BK	4/56C2:48	Central Electronic Module (CEM)	YE-VT
2	6/8:3	Central locking motor, trunk lid	BK	4/56C2:30	Central Electronic Module (CEM)	YE-OG
3	10/3:3	License plate lighting	BK	4/56C2:24 4/93C5:18	Central Electronic Module (CEM) Keyless Vehicle Module (KVM)	BU-RD
4	73/5038	Branching point	BK	31/65 73/5131	Ground connectioN Branching point	BK-OG
5	6/8:1	Central locking motor, trunk lid	BK	4/56C2:63	Central Electronic Module (CEM)	YE-VT
6	6/8:4	Central locking motor, trunk lid	BK	10/127:4 10/128:4	Lighting, cargo compartment, left-hand side Lighting, cargo compartment, right-hand side	BU-BK
7	-		-	-		-
8	-		-	-		-
9	-		-	-		-
10	-		-	-		-

Connectors
74/602 V70

74/602 V70
14-pin gray

No.	Floor harness			Tailgate harness		
1	2/82:5	Relay, heated rear window	GY-RD	9/2A:1	Heated rear window	GY-RD
2	4/56C2:9 4/110B:3	Central Electronic Module (CEM) Trailer Module (TRM)	YE-GY	10/19:2	Auxiliary brake light	BK
3	4/56C2:49	Central Electronic Module (CEM)	VT-GN	73/6002	Branching point	BK
4	4/56C2:73	Central Electronic Module (CEM)	GN-BN	73/6003	Branching point	BK
5	4/56C2:54	Central Electronic Module (CEM)	BN-GN	10/18:C1:2	Lamp housing, rear left	BK
6	4/116C2:13 10/25:2	Power Operated Tailgate Module (POT) Ceiling light, cargo compartment	BU-BK	6/8:4	Central locking motor, trunk lid	BK
7	73/5105	Branching point	BK-OG	73/6001	Branching point	BK-OG
8	2/16:3	Relay, rear window wiper	GY-BU	6/32:1	Rear window wiper motor	BK
9	4/56C2:48	Central Electronic Module (CEM)	YE-VT	10/3:1	License plate lighting	YE-VT
10	4/56C2:50	Central Electronic Module (CEM)	WH-BU	10/17C1:2	Lamp housing, rear right	BK
11	4/56C2:63	Central Electronic Module (CEM)	GY-BN	6/8:6	Central locking motor, trunk lid	BK
12	4/56C2:24 73/5032	Central Electronic Module (CEM) Branching point	GY-YE	10/3:3	License plate lighting	GY-YE
13	4/56C2:30	Central Electronic Module (CEM)	YE-OG	6/8:1	Central locking motor, trunk lid	YE-OG
14	2/16:1	Relay, rear window wiper	VT-GN	6/32:2	Rear window wiper motor	BK

Connectors
74/603 V70

74/603 V70
22-pin gray

No.	Floor harness			Tailgate harness		
1	-		-	-		-
2	-		-	-		-
3	-		-	-		-
4	4/116C2:11	Power Operated Tailgate Module (POT)	YE-OG	6/8:3	Lock unit, tailgate V70	YE-OG
5	4/116C2:14	Power Operated Tailgate Module (POT)	GN-OG	6/149:1	Tailgate closing motor	GN-OG
6	73/4020	Power Operated Tailgate Module (POT)	GN-BU	6/149:2	Tailgate closing motor	GN-BU
7	4/116C2:12	Power Operated Tailgate Module (POT)	GN	6/149:3	Tailgate closing motor	GN
8	-		-	-		-
9	4/116C2:4	Power Operated Tailgate Module (POT)	GY-BN	3/291:1	Tailgate closing switch	GY-BN
10	73/5044	Branching point	BU-WH	3/291:5	Tailgate closing switch	BU-WH
11	-		-	-		-
12	-		-	-		-
13	-		-	-		-
14	-		-	-		-
15	4/93C1:22	Keyless Vehicle Module (KVM)	VT	16/132:2	Antenna door lock trunk lid/tailgate	VT
16	4/93C1:21	Keyless Vehicle Module (KVM)	GN-OG	16/132:1	Antenna door lock trunk lid/tailgate	GN-OG
17	-		-	-		-
18	-		-	-		-
19	-		-	-		-
20	-		-	-		-
21	-		-	-		-
22	-		-	-		-

74/901
12-pin black

No.	Roof harness			Harness windshield module		
1	-		-	-		-
2	-		-	-		-
3	73/5097	Branching point	BU-BK	4/125:4	Closing velocity module (CVM)	BU-BK
4	73/5098	Branching point	GN-BK	4/125:3	Closing velocity module (CVM)	GN-BK
5	73/5189 74/414:5	Branching point Connector	GY-OG	4/125C1:5	Closing velocity module (CVM)	GY-OG
6	73/4020	Branching point	BU-WH	7/149:1	Rain Sensor Module (RSM	BU-WH
7	4/56C4:10	Central Electronic Module (CEM)	GY-RD	7/149:3	Rain Sensor Module (RSM)	GY-RD
8	4/80C1:15	Forward Sensing Module (FSM)	GY-BK	9/39:1	Heating element camera	GY-BK
9	73/4014	Branching point	BK-WH	4/125C1:7 73/4049	Closing velocity module (CVM) Branching point	BK-WH
10	4/80C1:14	Forward Sensing Module (FSM)	BK	9/39:2	Heating element camera	BK
11	73/4047	Branching point	BN-VT	7/90:2	Moisture sensor	BN-VT
12	73/4048	Branching point	BU	7/90:3	Moisture sensor	BU

Branching points
53/720 - 73/3004

53/720

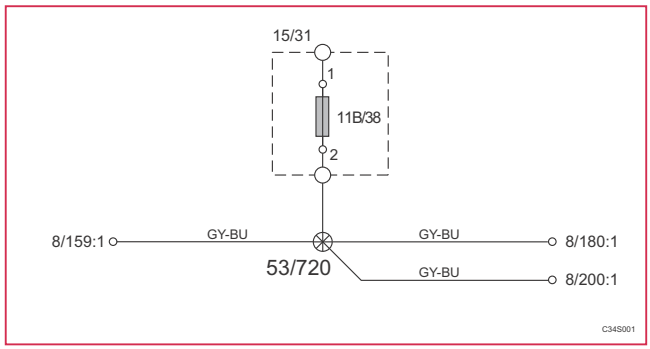

73/6

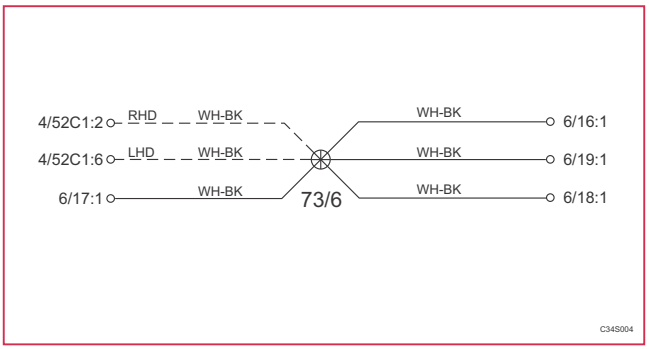

73/800

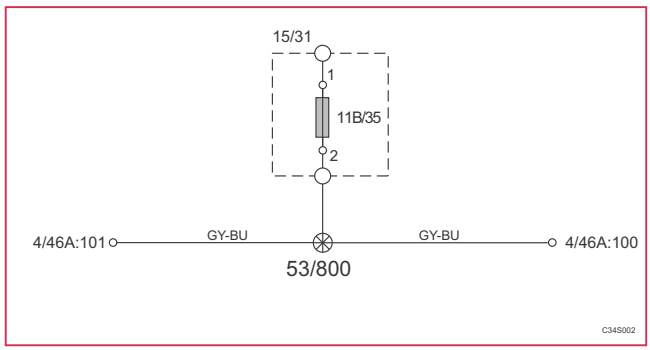

73/3004 4-Cyl. Turbo

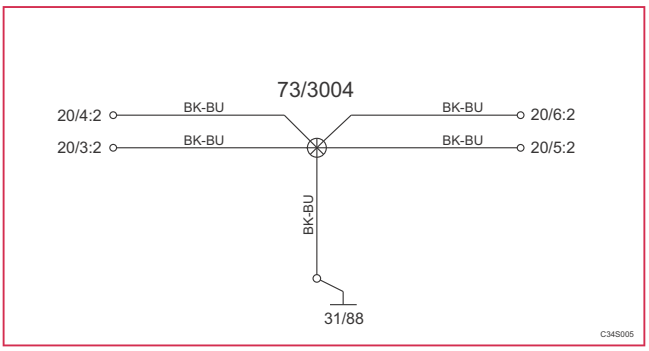

73/1

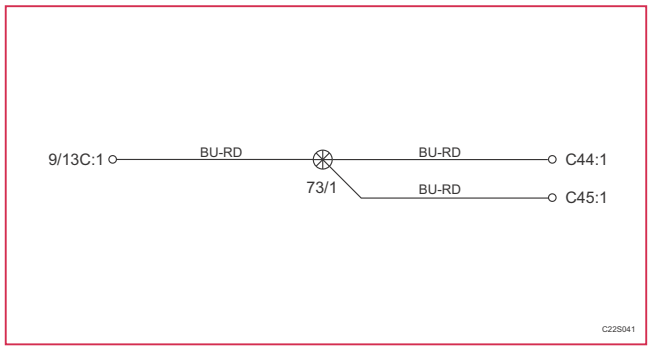

73/3004 5-Cyl. Turbo

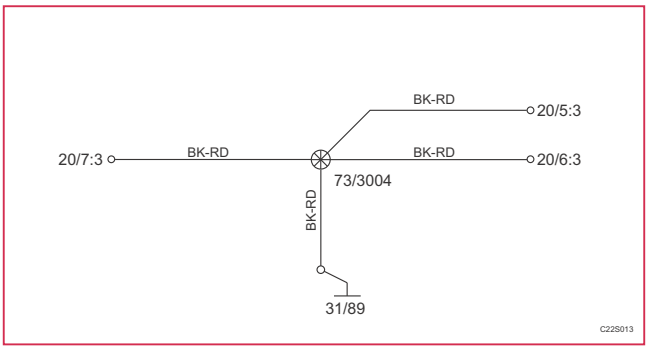

73/2

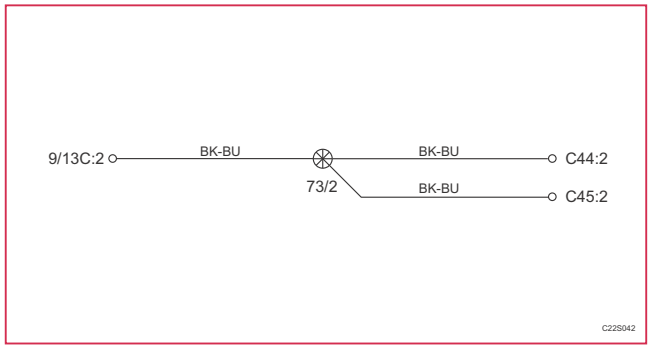

73/3004 6-Cyl.

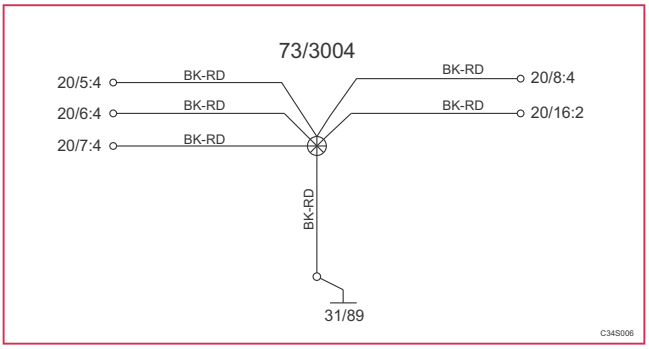

73/3

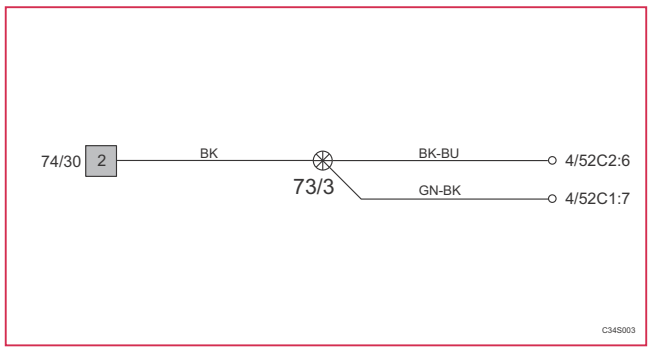

73/3004 6-Cyl. Turbo

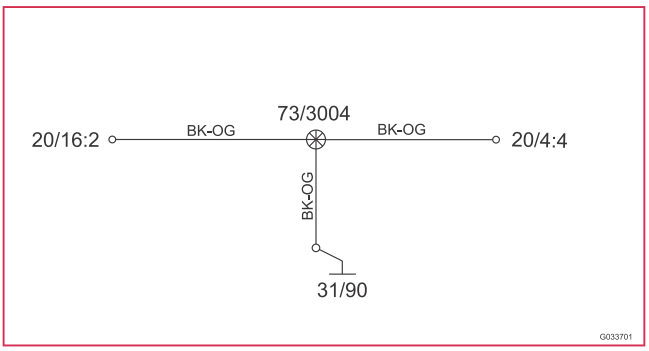

Branching points
73/3005 - 73/3014

73/3005 4-Cyl. 1.6L Turbo

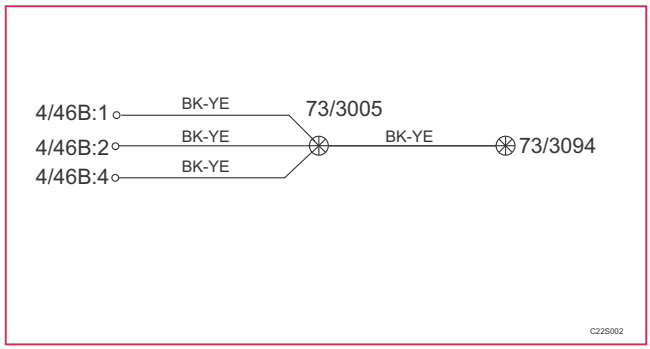

73/3006

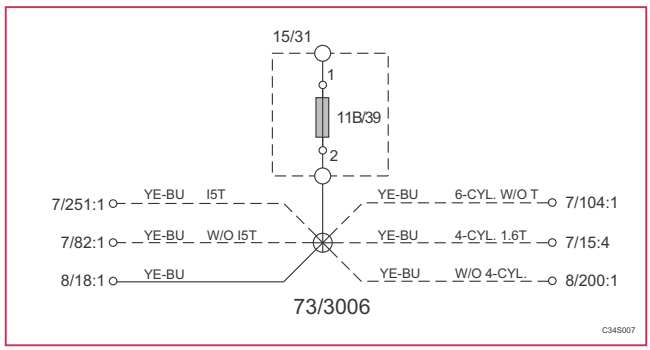

73/3009

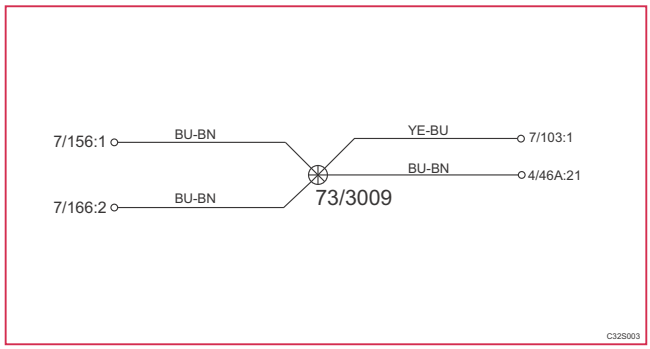

73/3010

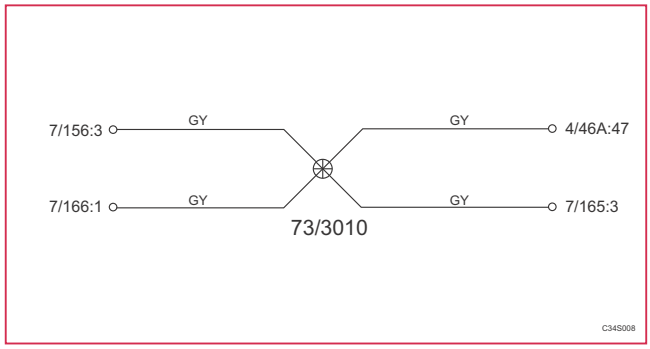

73/3012 4-Cyl. Turbo

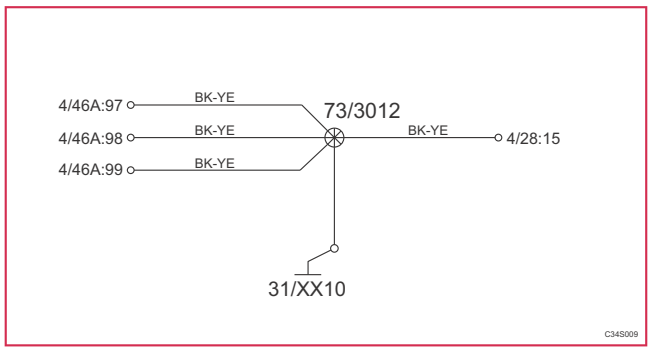

73/3012 4-Cyl. Diesel

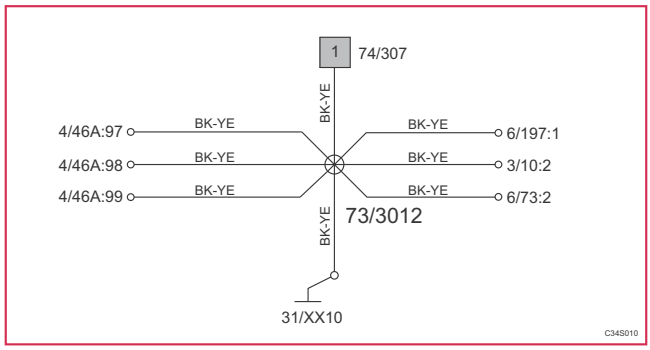

73/3012 5-Cyl. Turbo

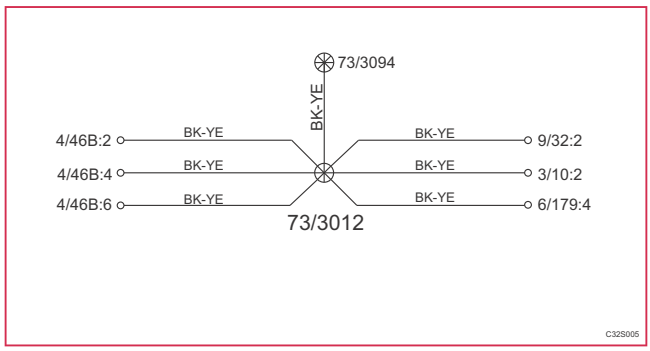

73/3012 5-Cyl. Diesel

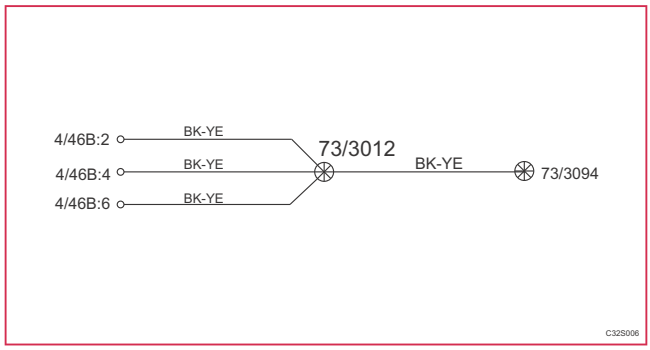

73/3012 6-Cyl.

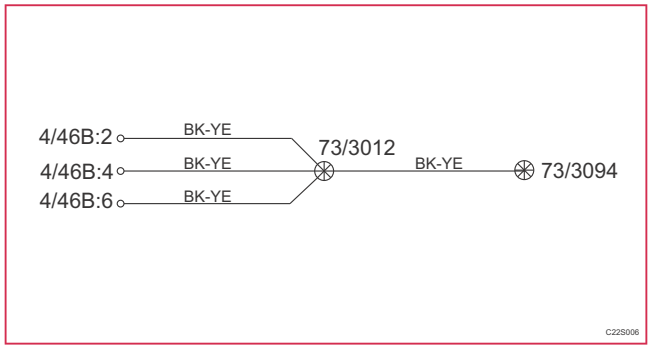

73/3014

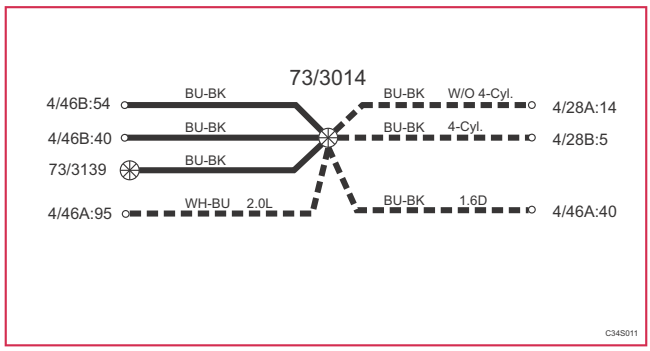

Branching points
73/3015 - 73/3034

73/3015

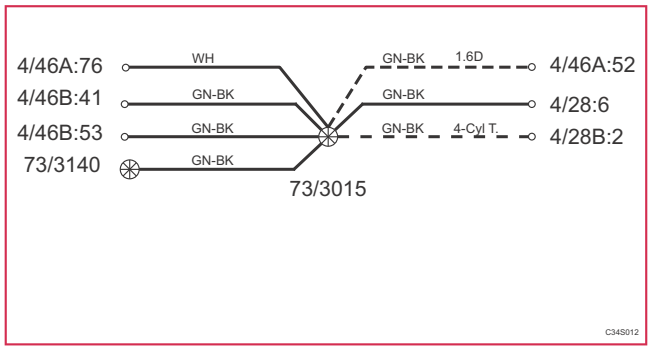

73/3016

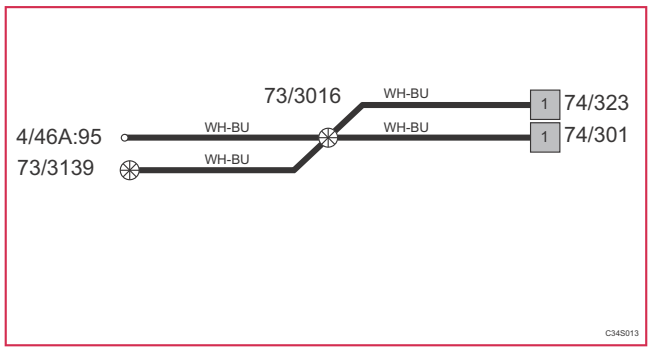

73/3017

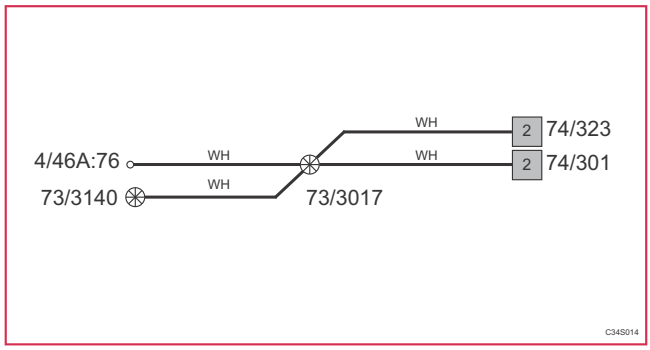

73/3019

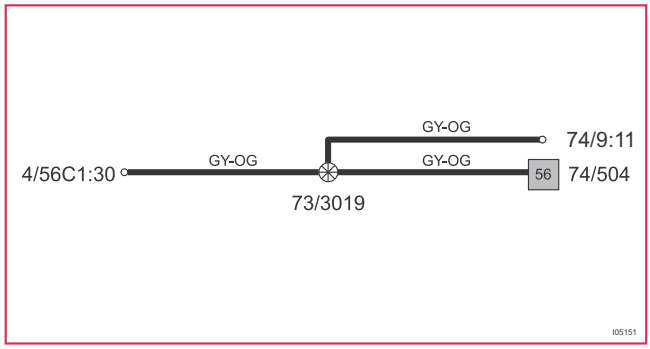

73/3020

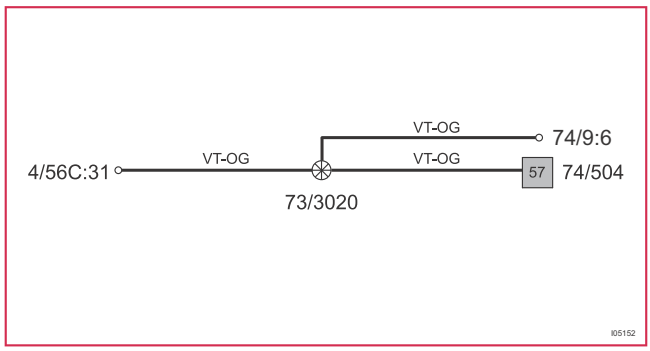

73/3021

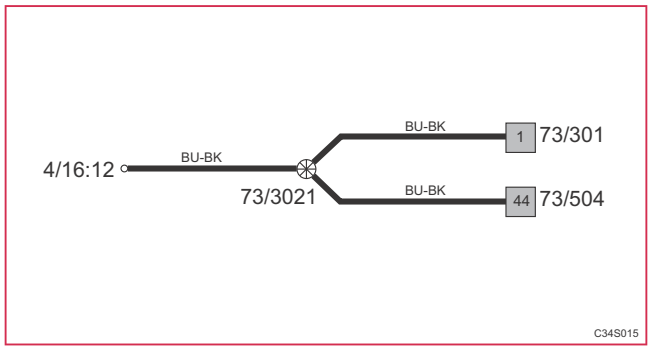

73/3022

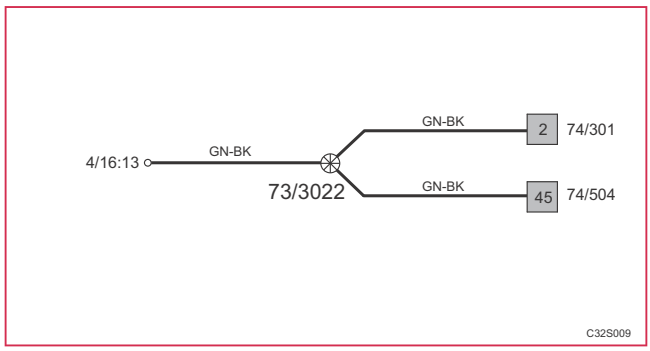

73/3030

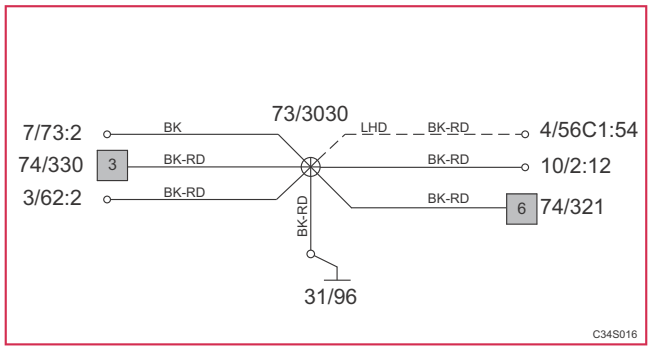

73/3033

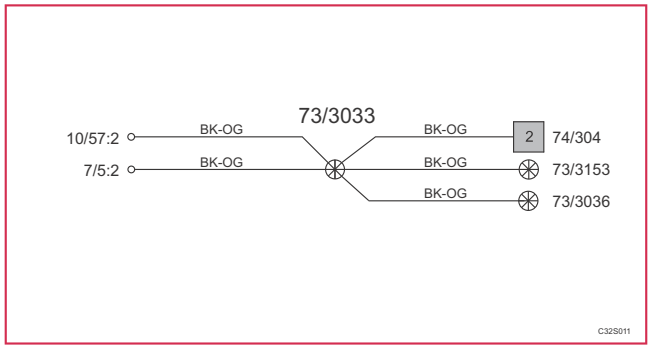

73/3034

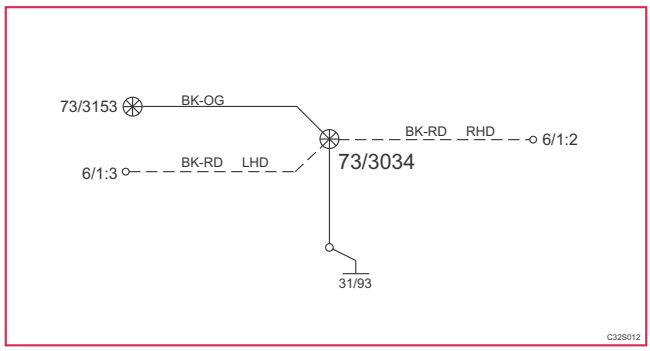

Branching points
73/3035 - 73/3046

73/3035

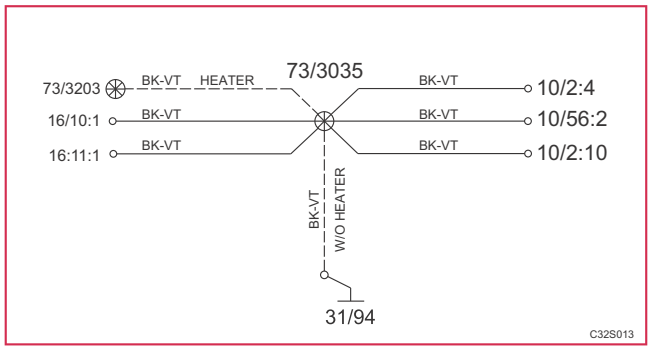

73/3036

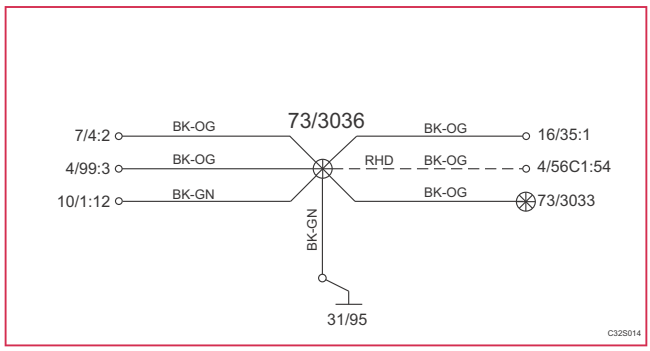

73/3037

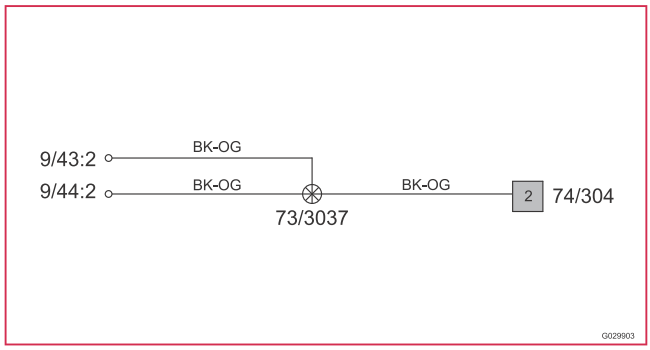

73/3039 4-Cyl. 1.6L Turbo

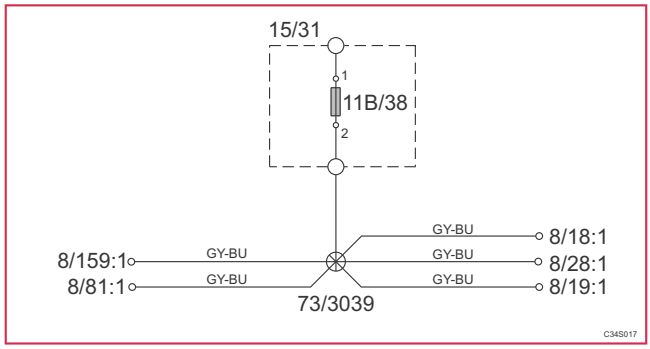

73/3039 5-Cyl. Diesel

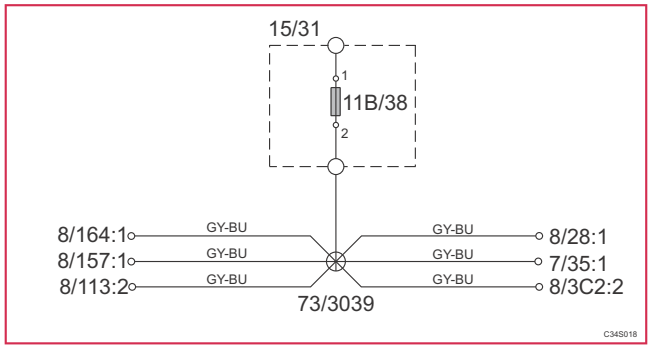

73/3039 5-Cyl. Turbo

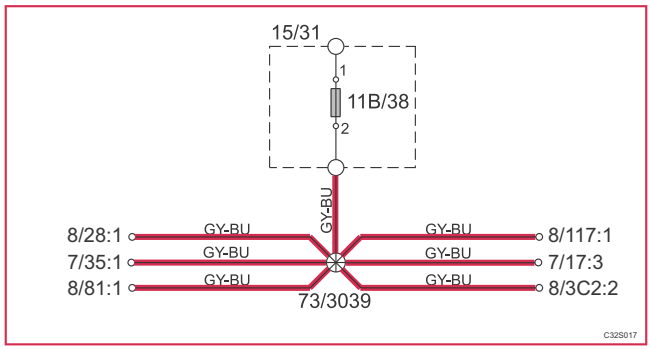

73/3039 6-Cyl.

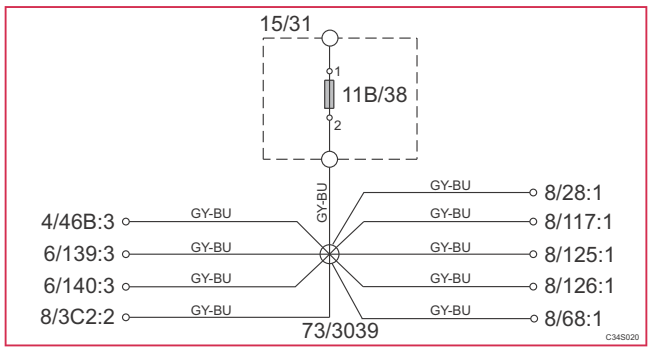

73/3040

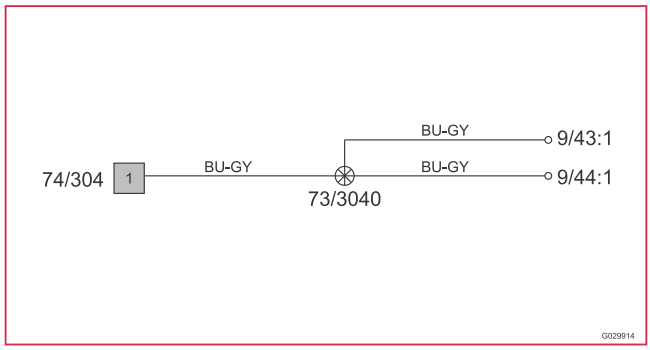

73/3042

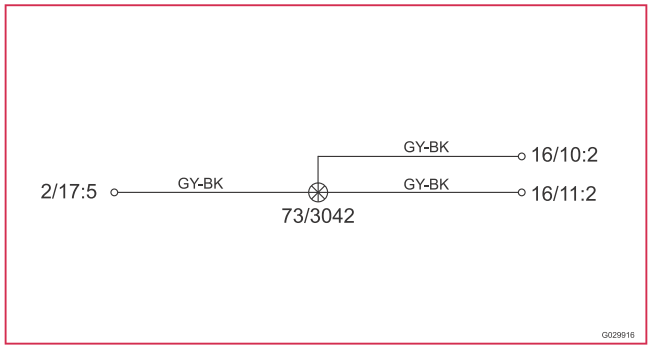

73/3046

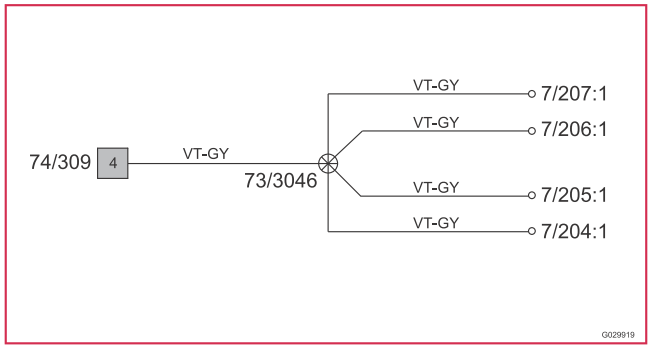

Branching points
73/3047 - 73/3058

73/3047

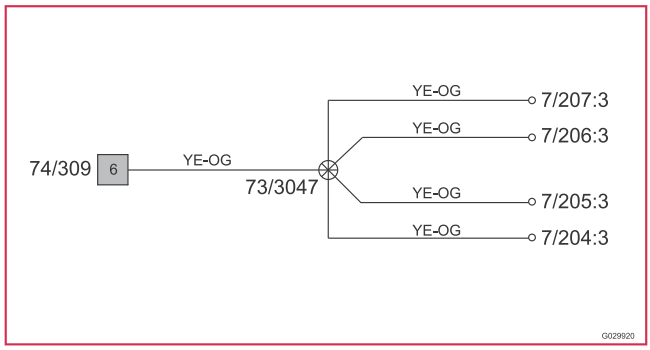

73/3050 5-Cyl. Diesel

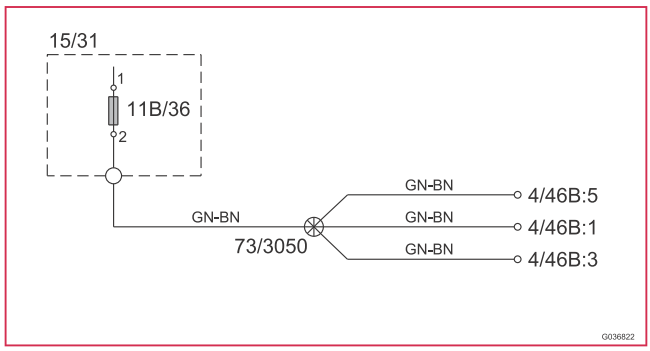

73/3051 4-Cyl. Diesel

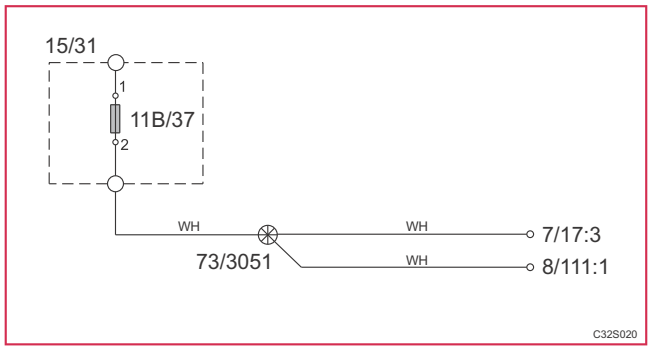

73/3051 5-Cyl. Diesel

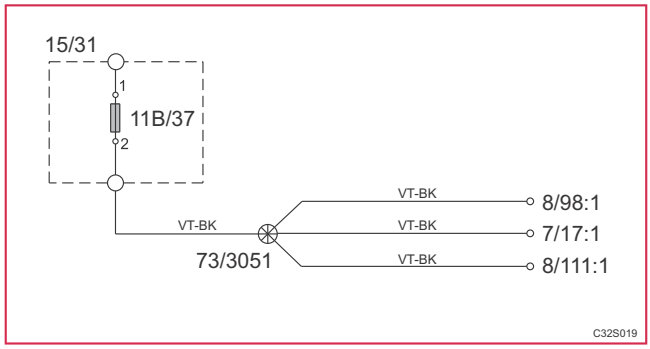

73/3053 4-Cyl.

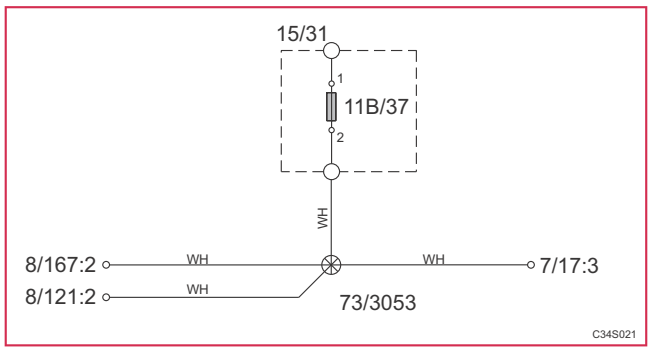

73/3053 5-Cyl.

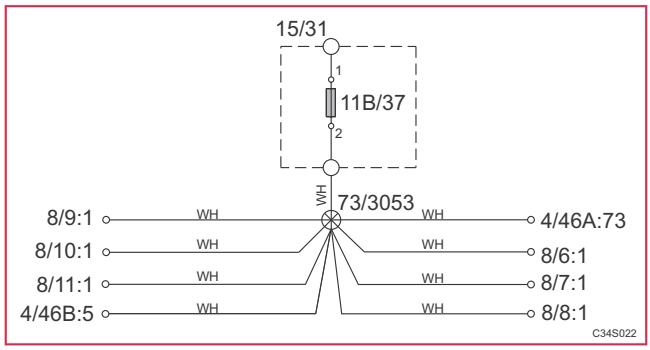

73/3053 6-Cyl.

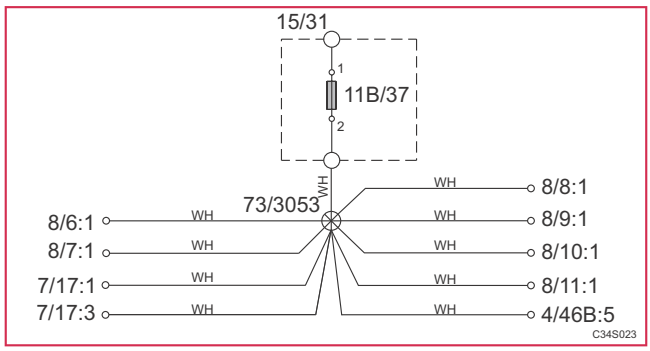

73/3058 4-Cyl.

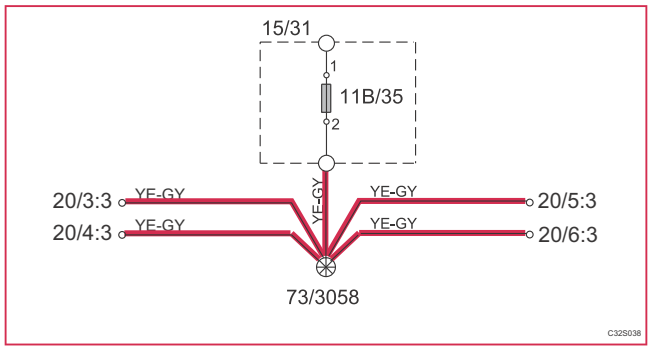

73/3058 5-Cyl.

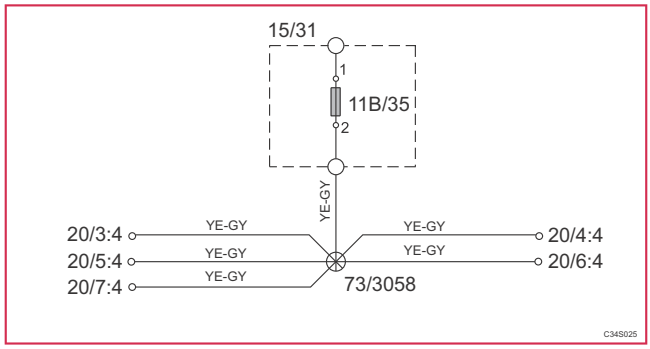

73/3058 6-Cyl.

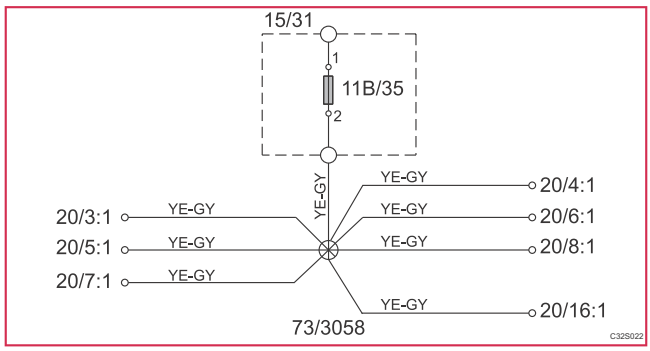

Branching points
73/3064 - 73/3070

73/3064 4-Cyl. 1.6L

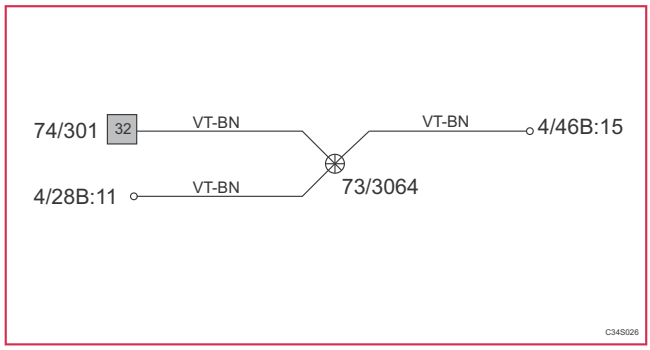

73/3064 4-Cyl. 1.6L

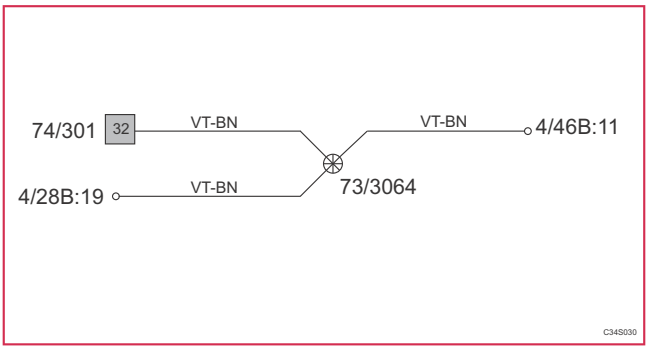

73/3064 4-Cyl. 2.0L

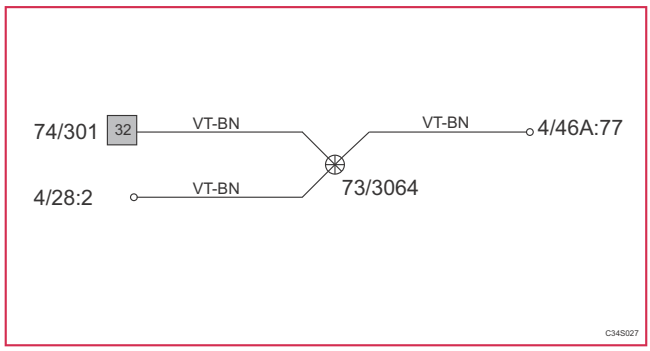

73/3064 4-Cyl. 2.0L

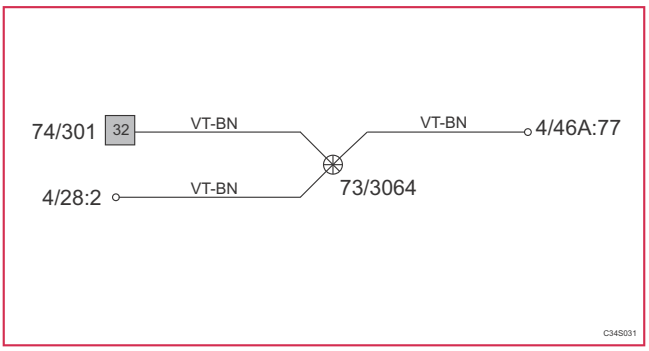

73/3064 5-Cyl. Turbo

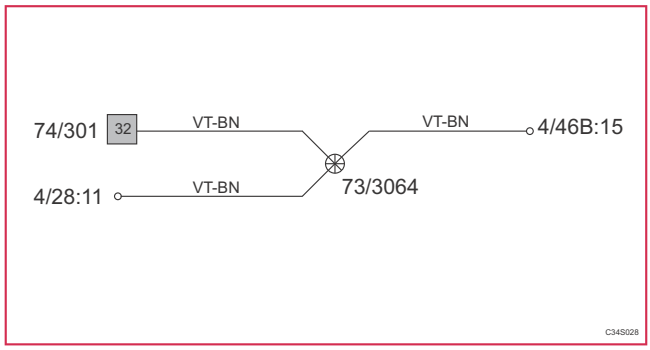

73/3065

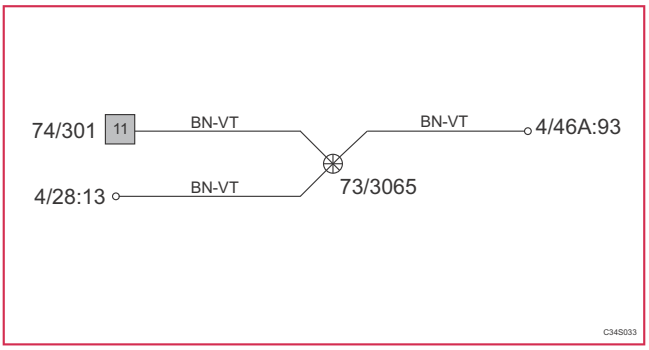

73/3064 5-Cyl. Diesel

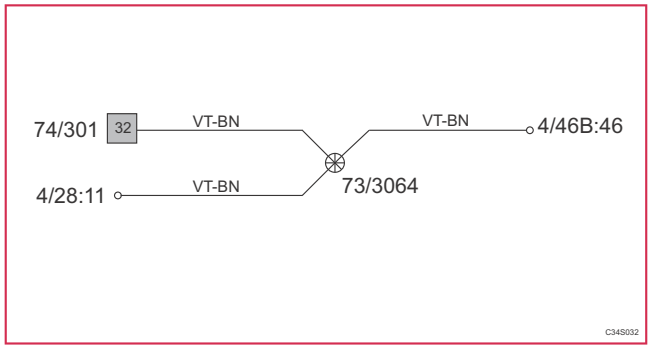

73/3068

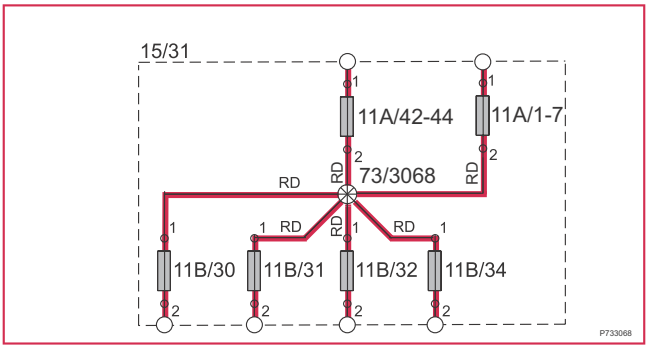

73/3064 6-Cyl.

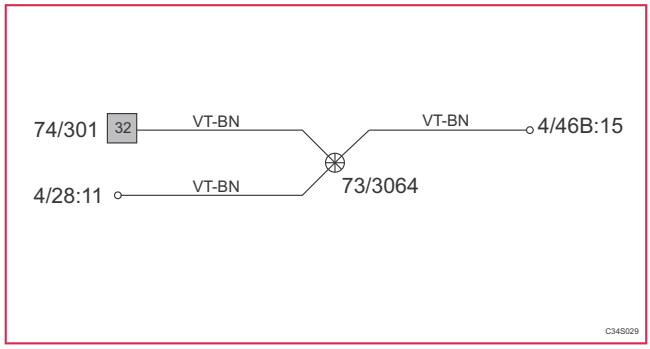

73/3070

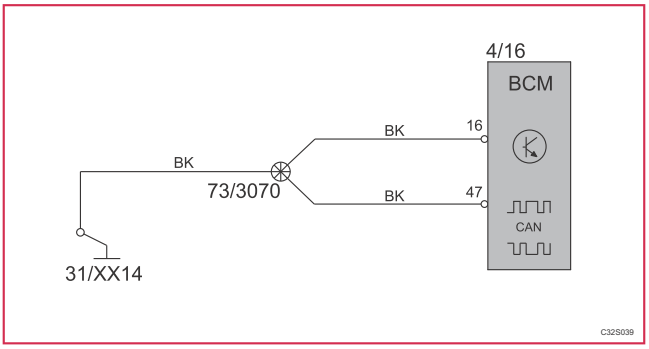

Branching points
73/3076 - 73/3094

73/3076

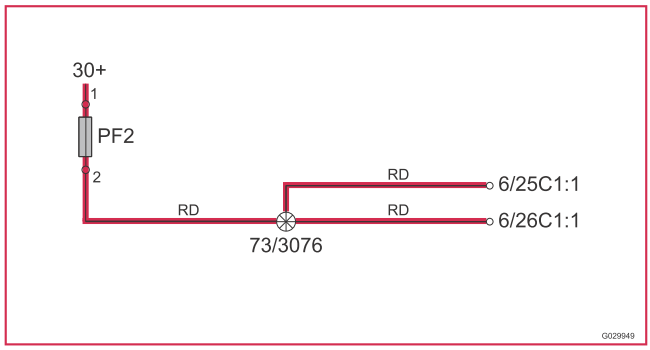

73/3077

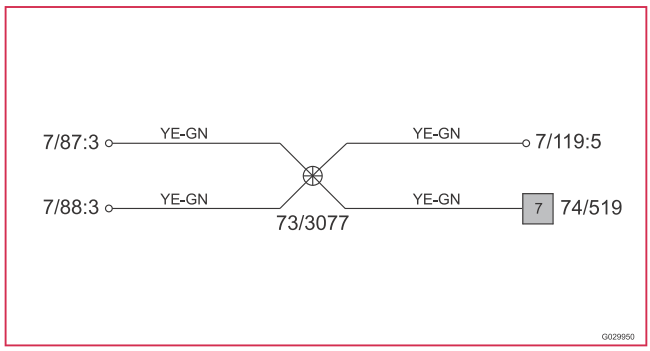

73/3078

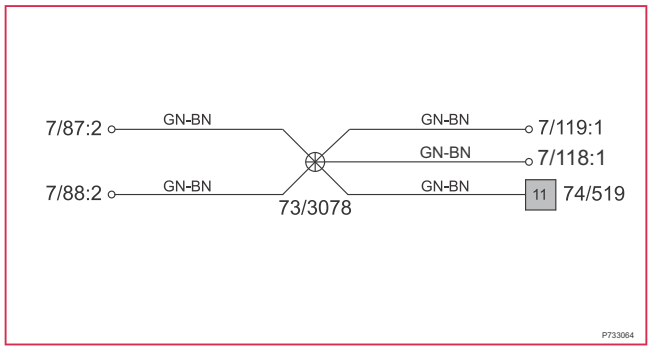

73/3085

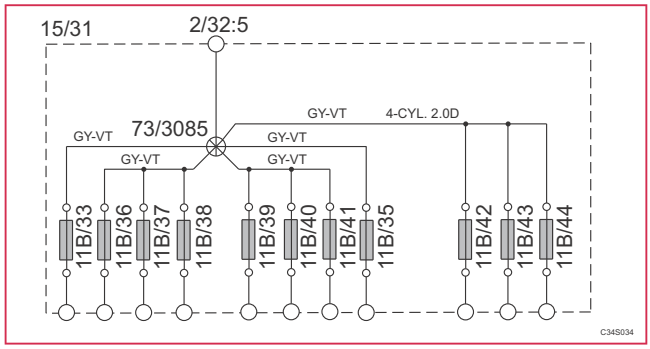

73/3091

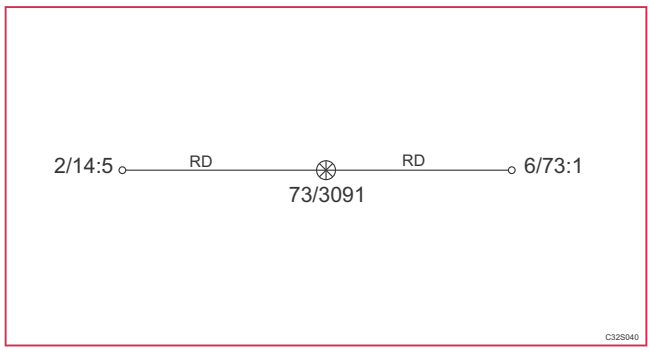

73/3094 5-Cyl. Diesel

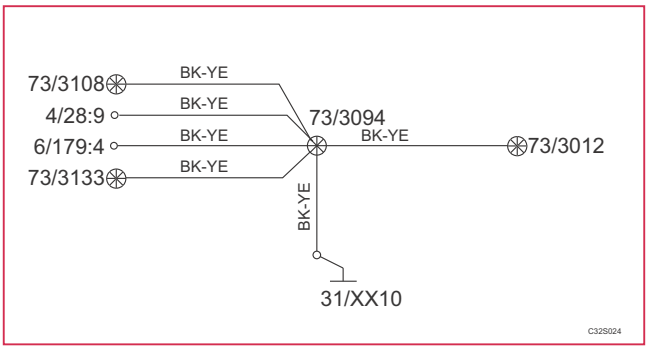

73/3094 4-Cyl. 1.6L Turbo

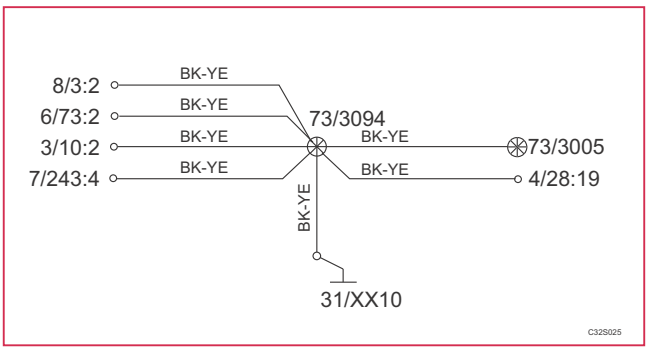

73/3094 5-Cyl. Turbo

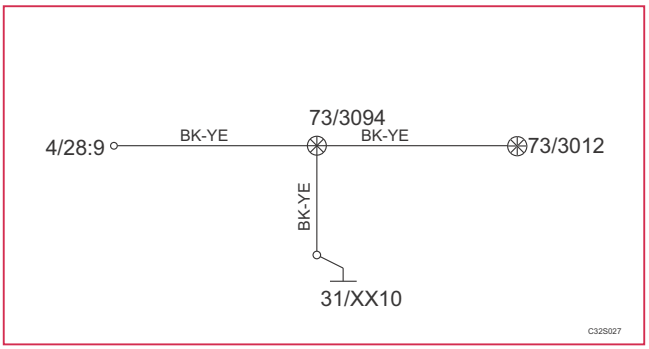

73/3094 6-Cyl.

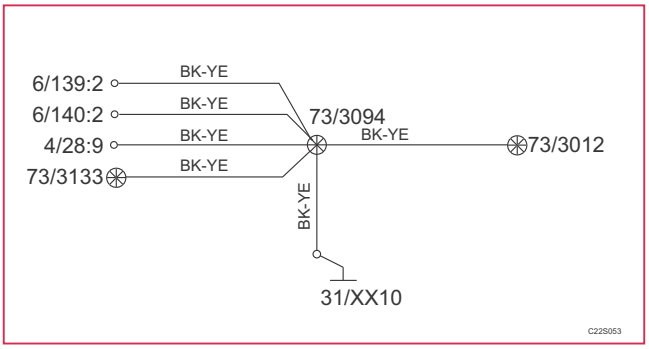

73/3094 4-Cyl. Diesel

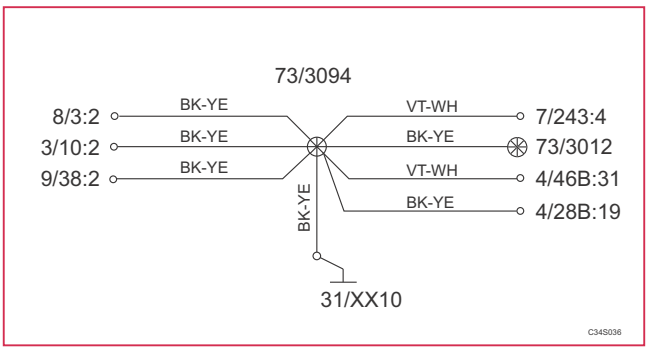

Branching points
73/3095 - 73/3136

73/3095

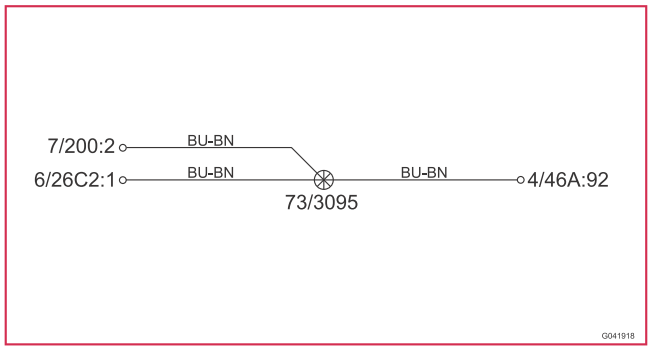

73/3108

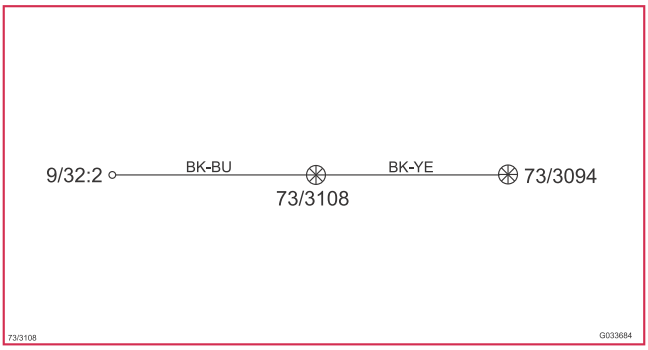

73/3100

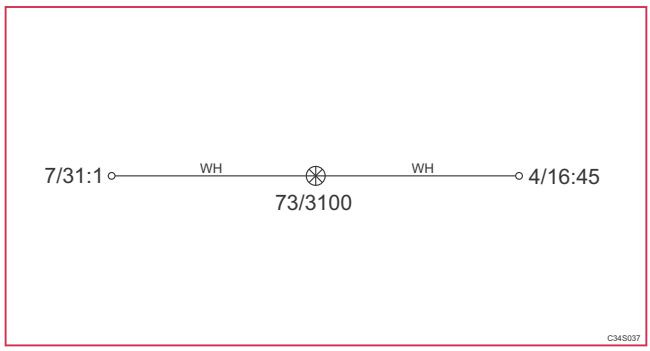

73/3125

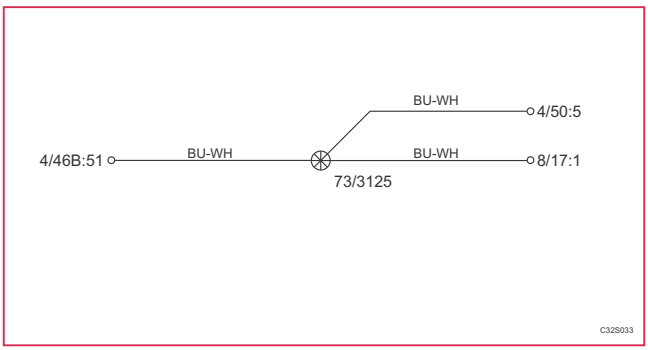

73/3101

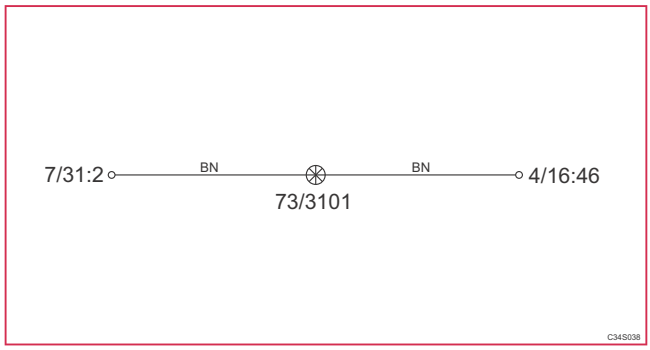

73/3131

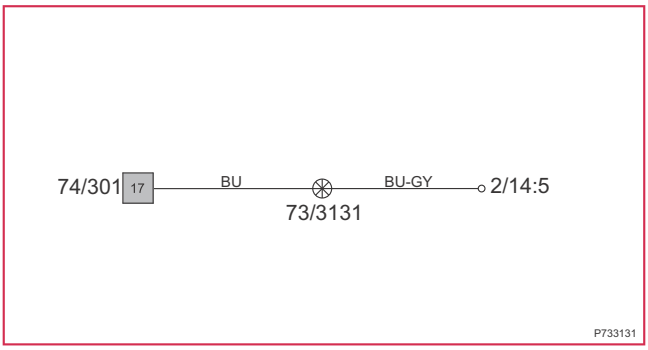

73/3102

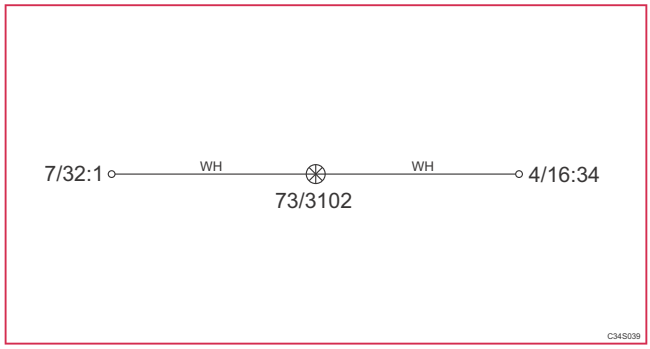

73/3133

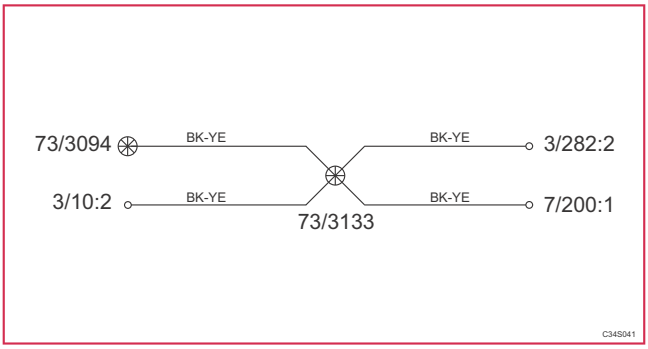

73/3103

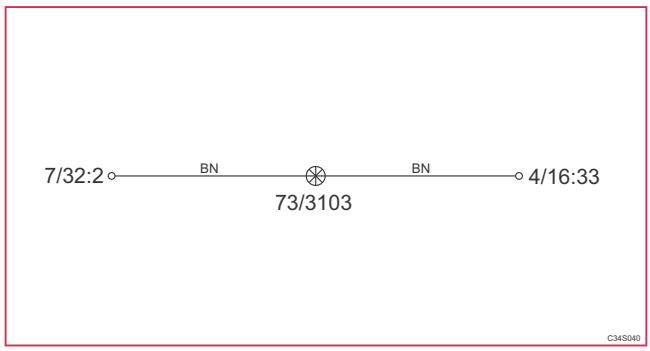

73/3136

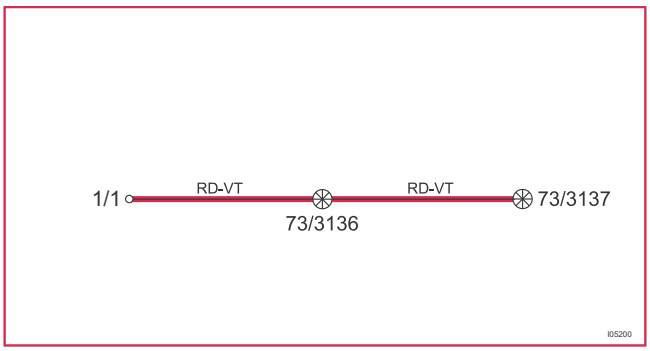

Branching points
73/3137 - 73/3156 5-Cyl.

73/3137

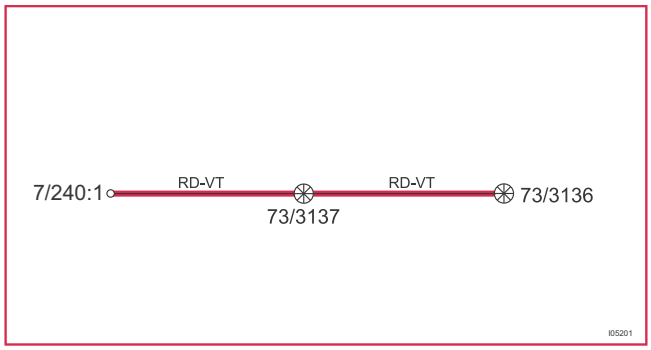

73/3150

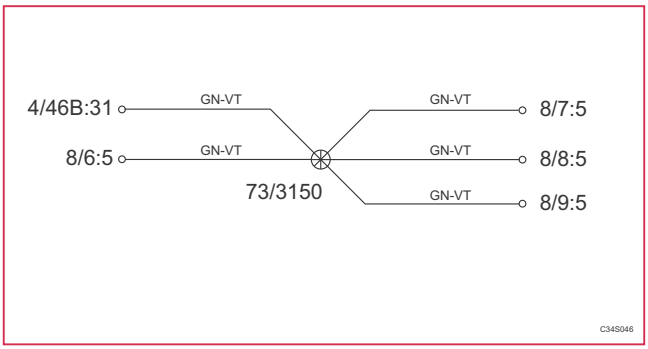

73/3139

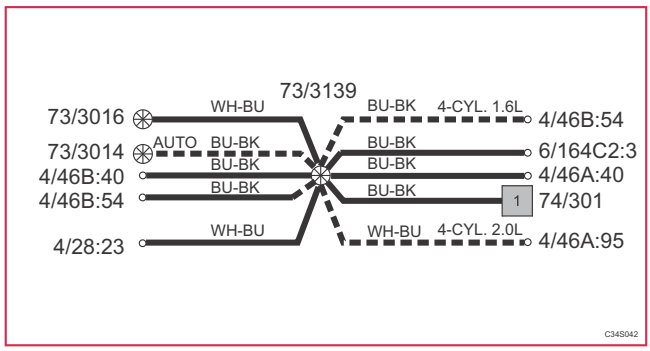

73/3151

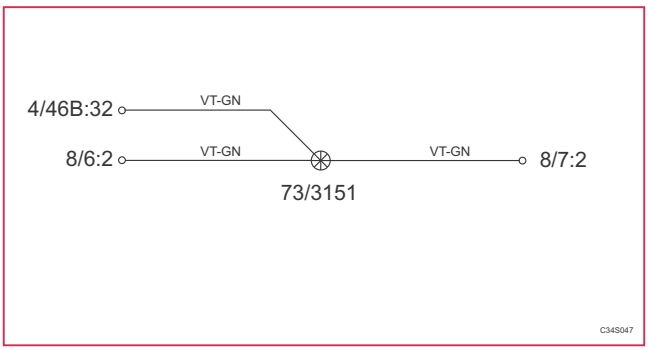

73/3140

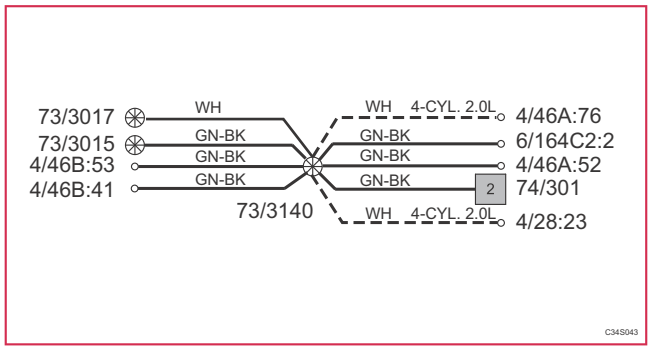

73/3152

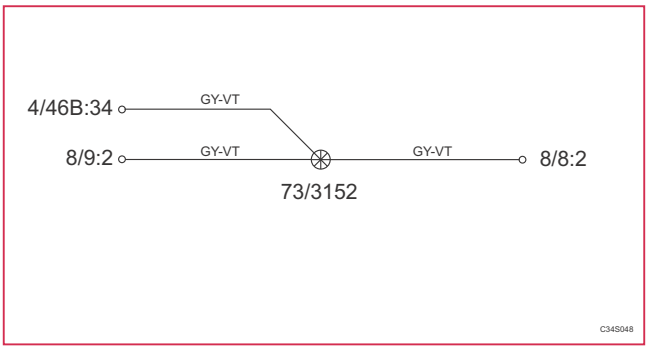

73/3141

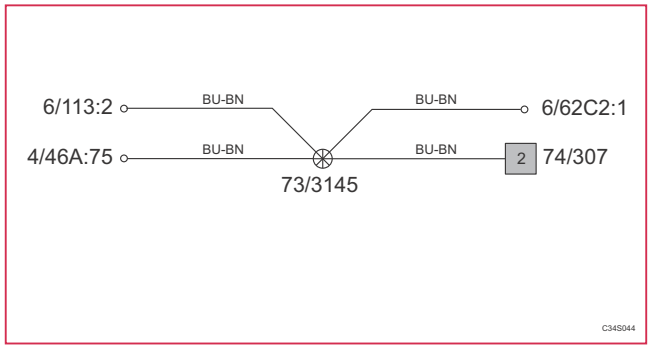

73/3153

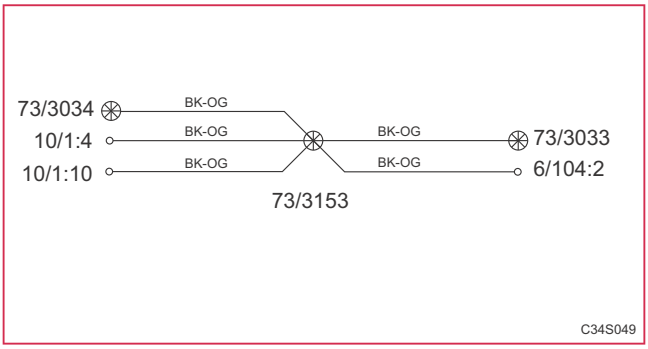

73/3145

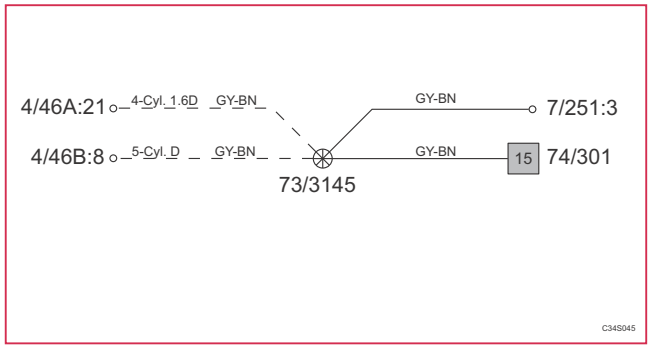

73/3156 5-Cyl. Turbo

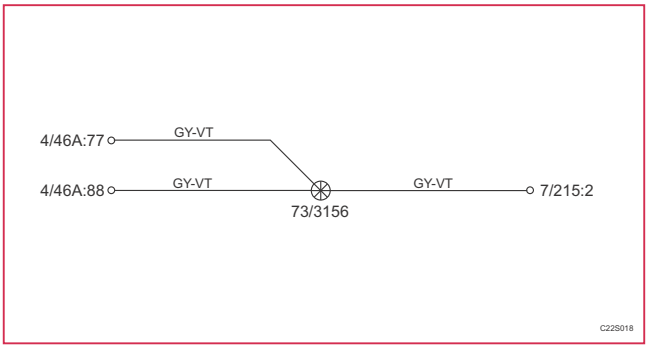

Branching points
73/3156 6-Cyl. - 73/3200

73/3156 6-Cyl.

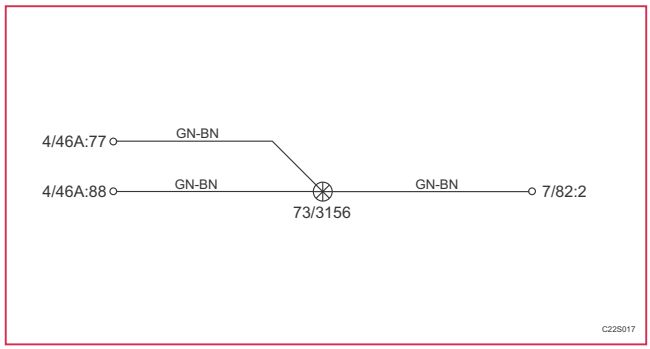

73/3157

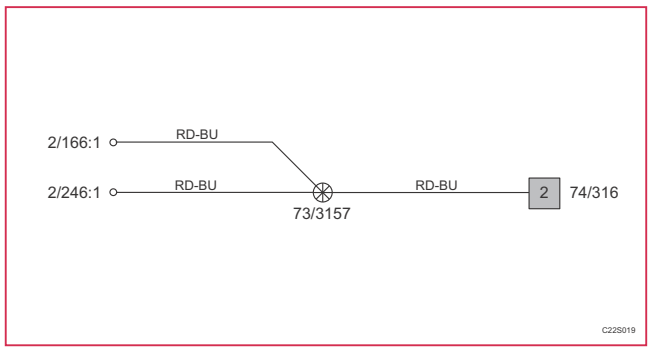

73/3160 4-Cyl. & 5-Cyl. Turbo

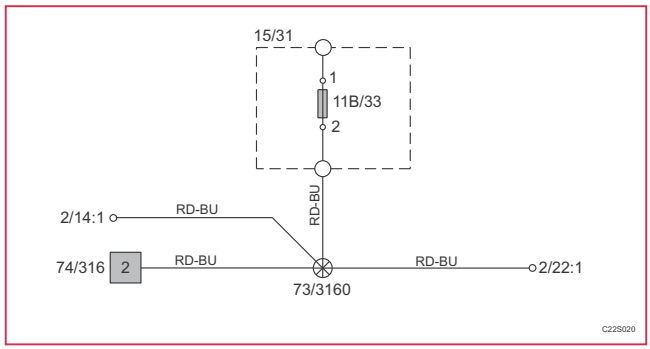

73/3161

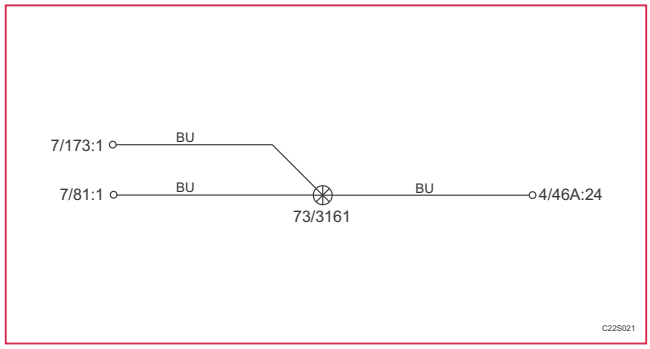

73/3162

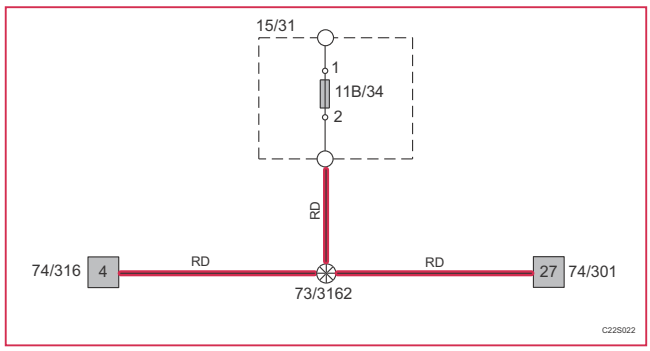

73/3163

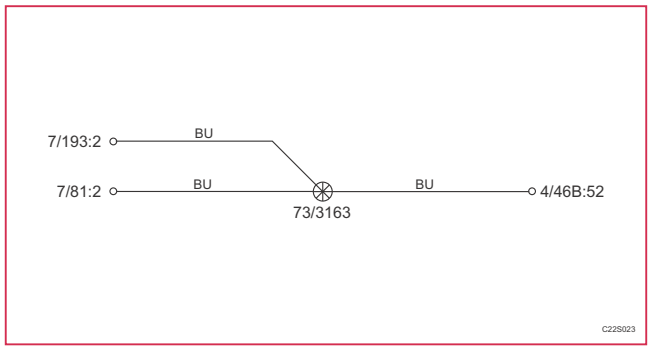

73/3165

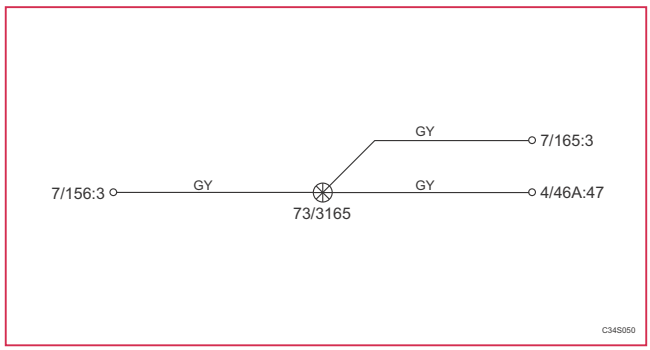

73/3166

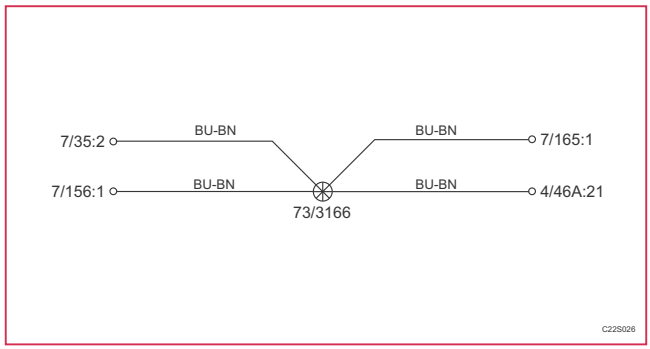

73/3199

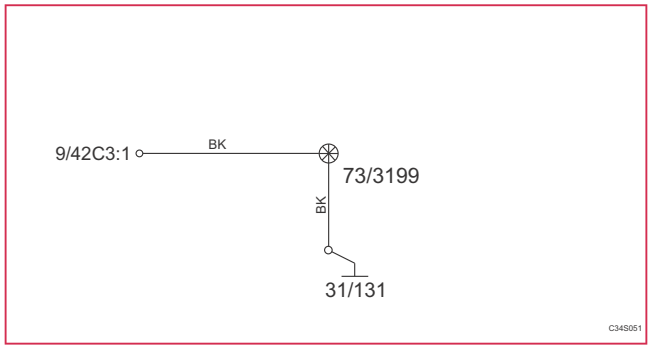

73/3200

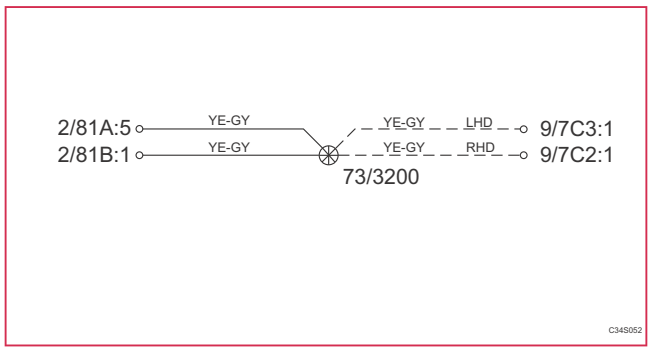

Branching points
73/3203 - 73/4016 LHD

73/3203

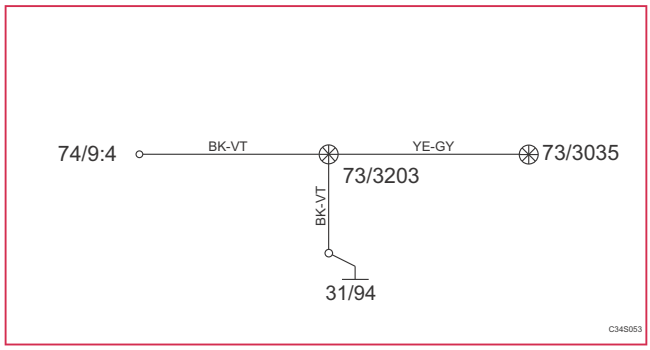

73/4010

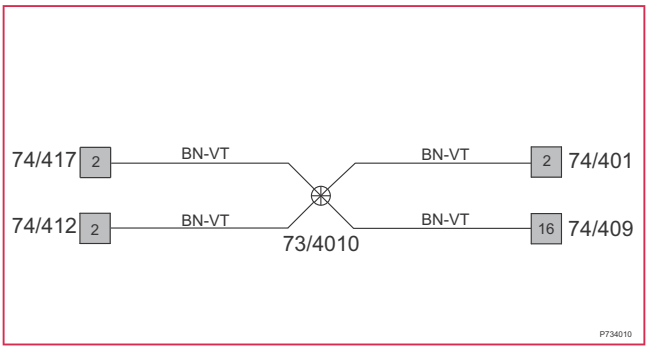

73/4001

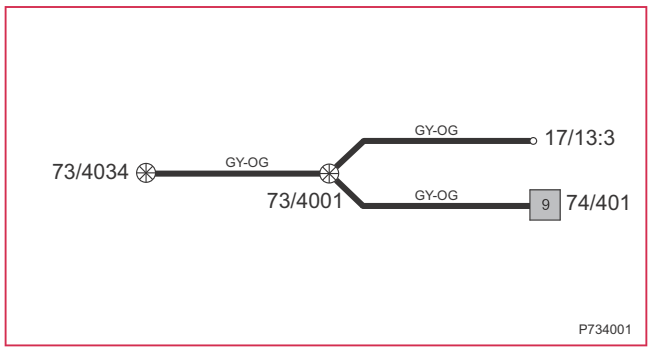

73/4012

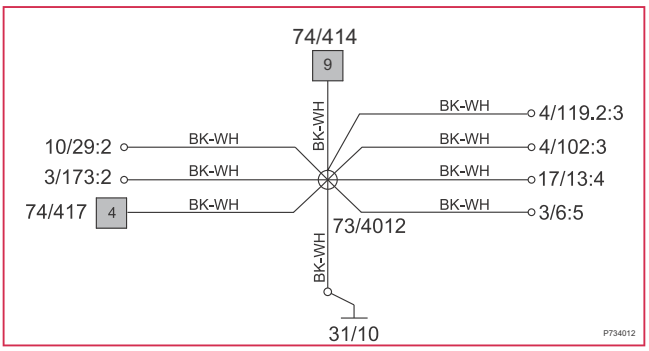

73/4002

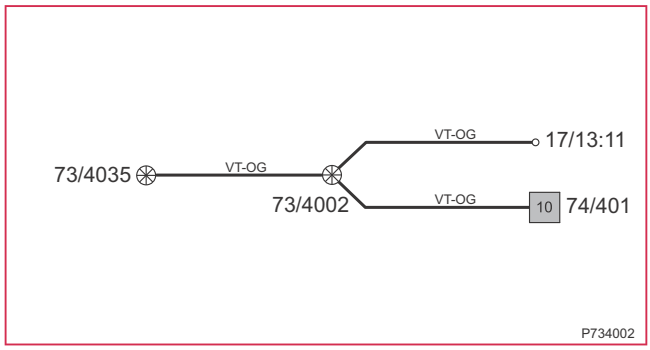

73/4013

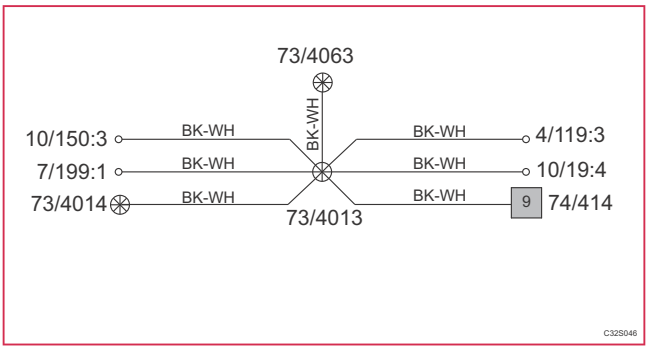

73/4005

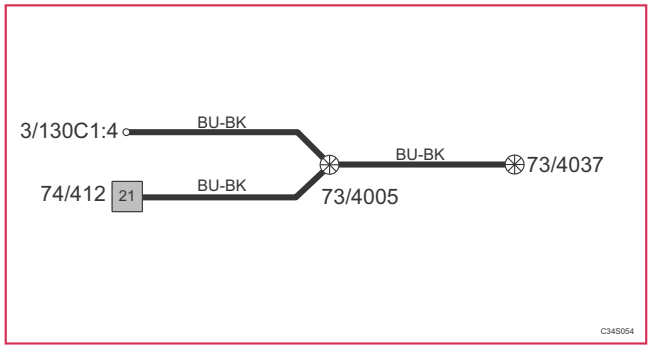

73/4014

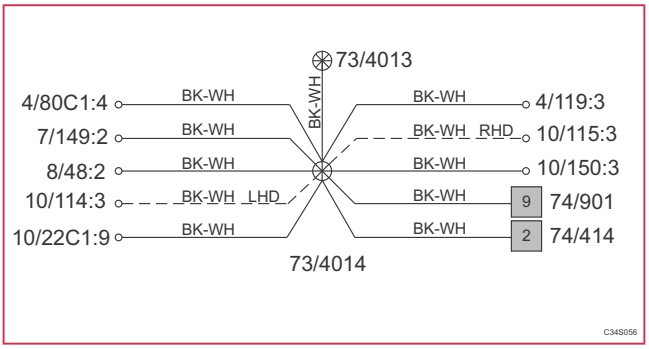

73/4006

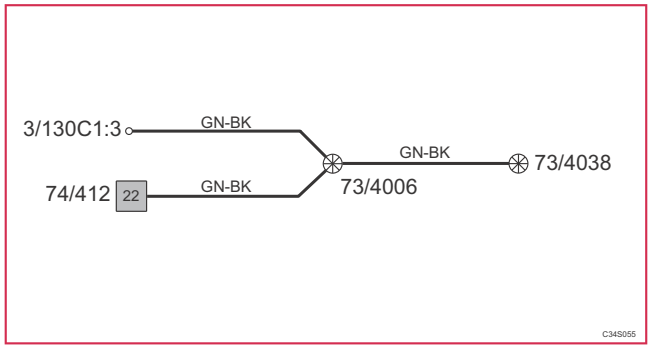

73/4016 LHD

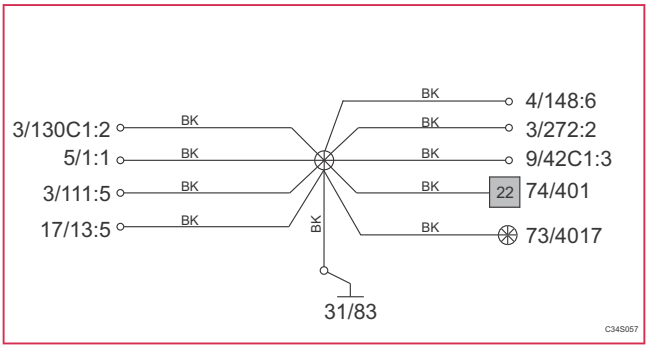

Branching points
73/4016 RHD - 73/4034

73/4016 RHD

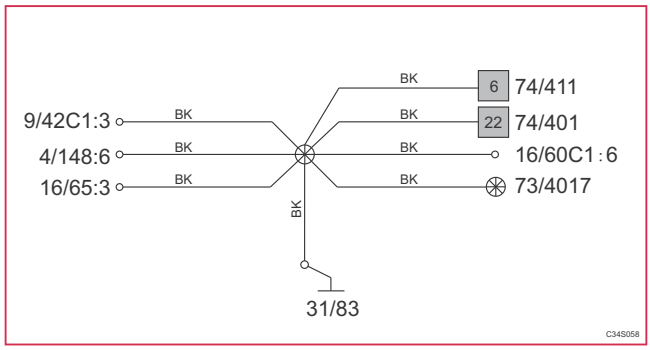

73/4020

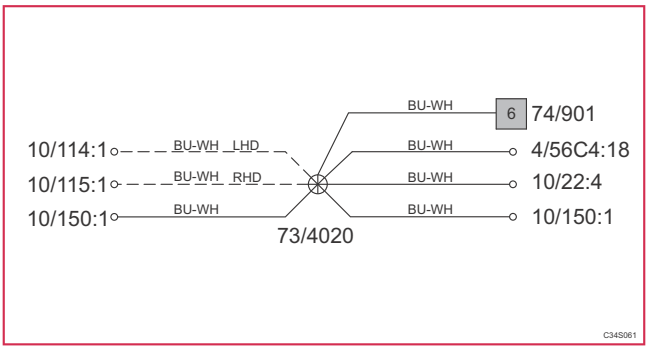

73/4017 LHD

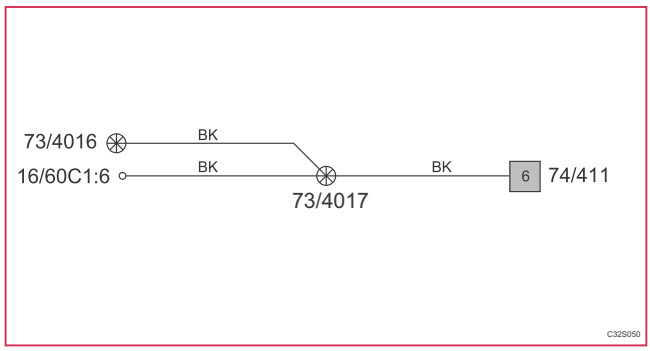

73/4028

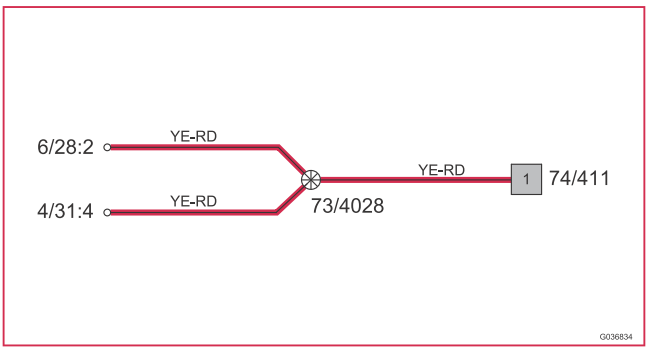

73/4017 RHD

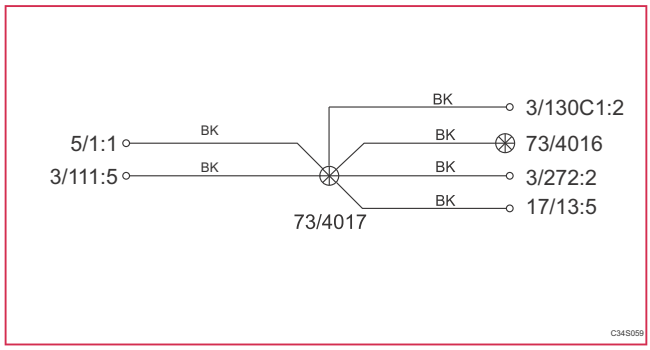

73/4029

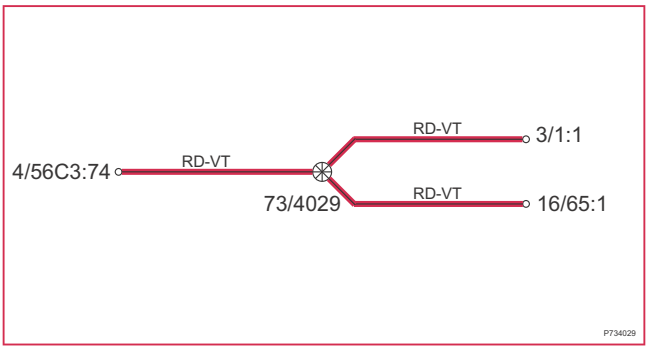

73/4018

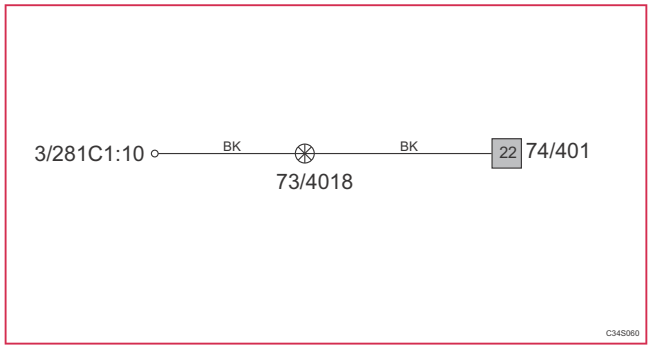

73/4033

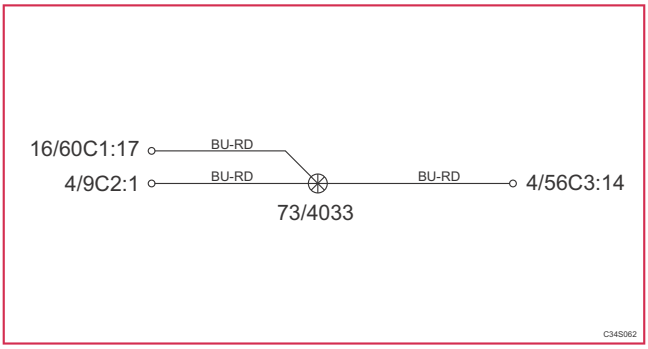

73/4019

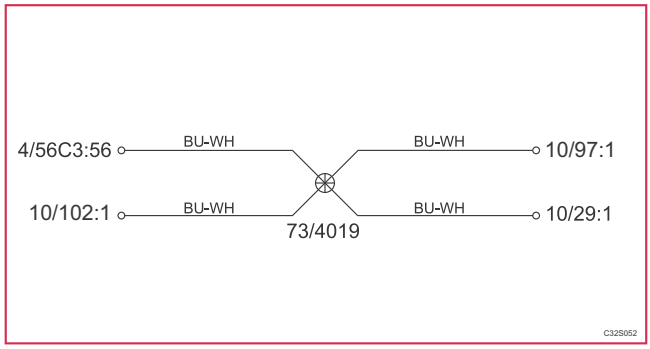

73/4034

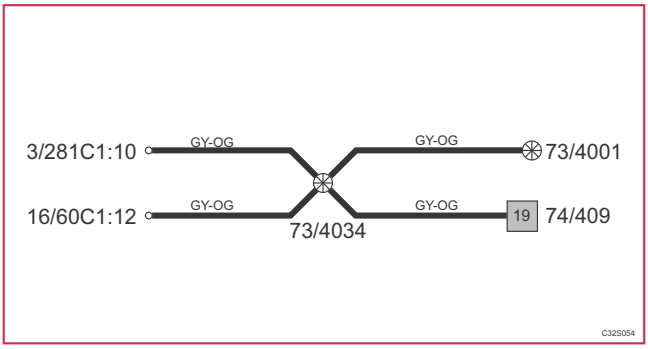

Branching points
73/4035 - 73/4059

73/4035

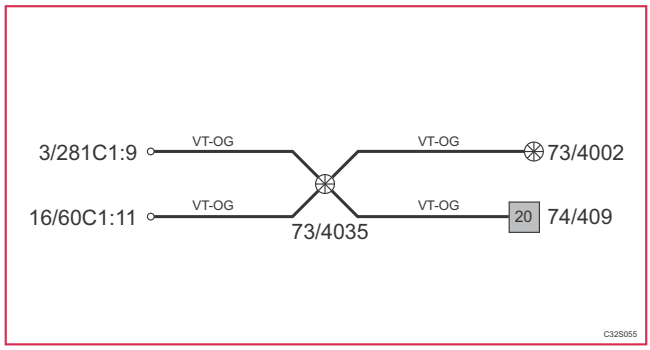

73/4048

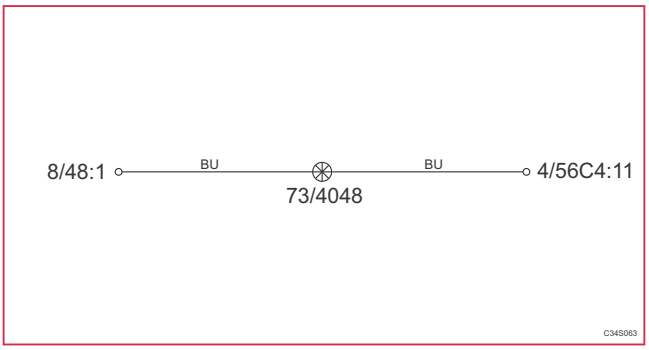

73/4037

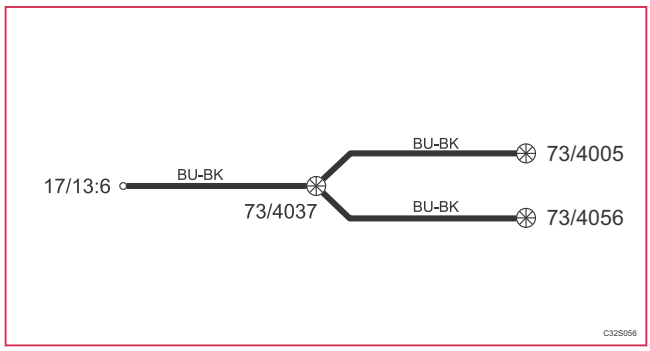

73/4049

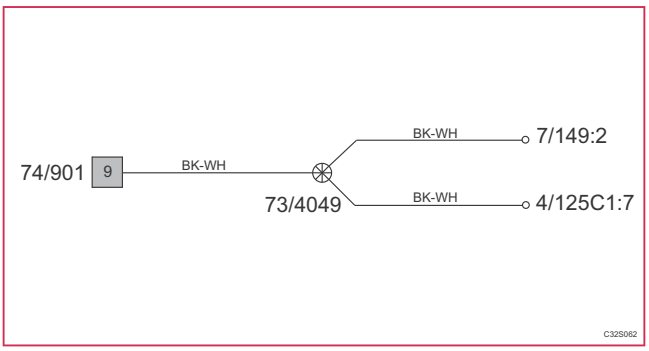

73/4038

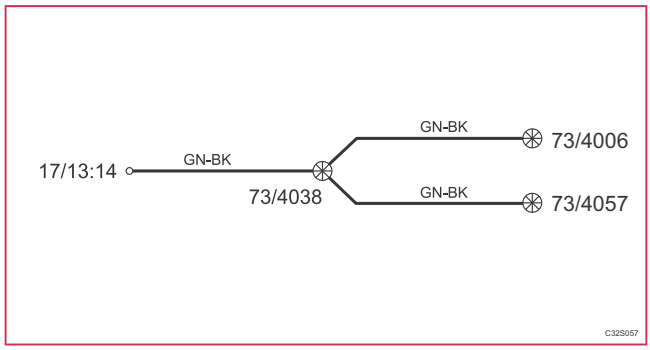

73/4056

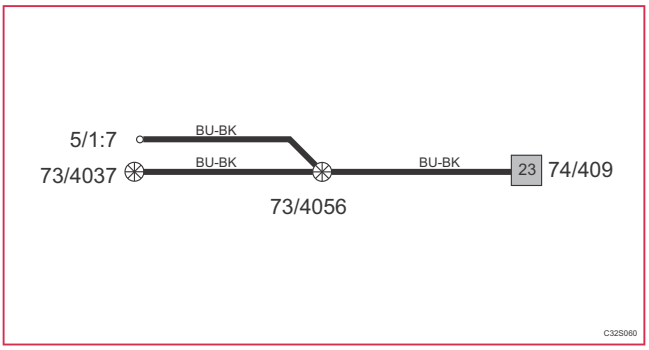

73/4046

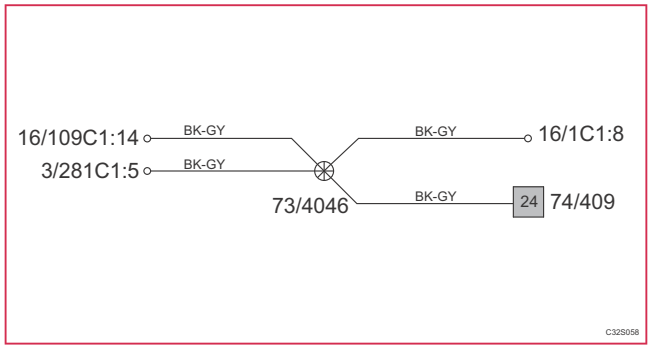

73/4057

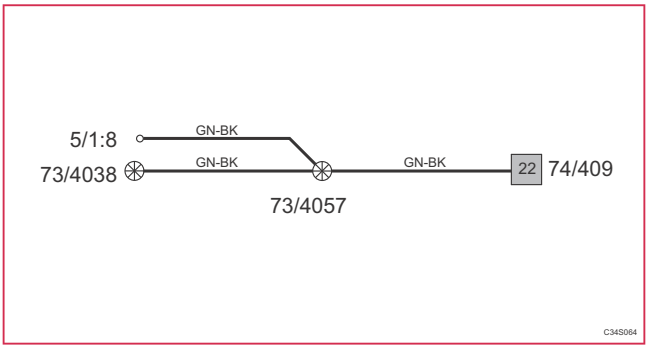

73/4047

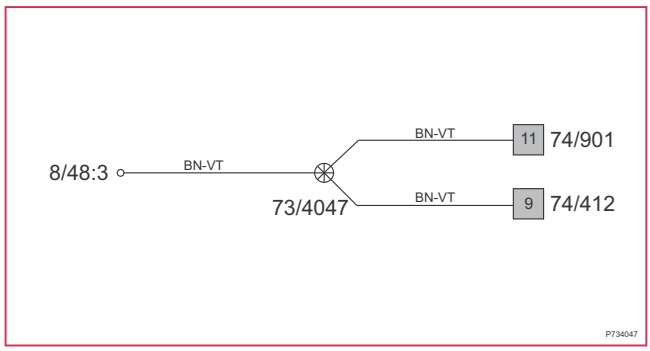

73/4059

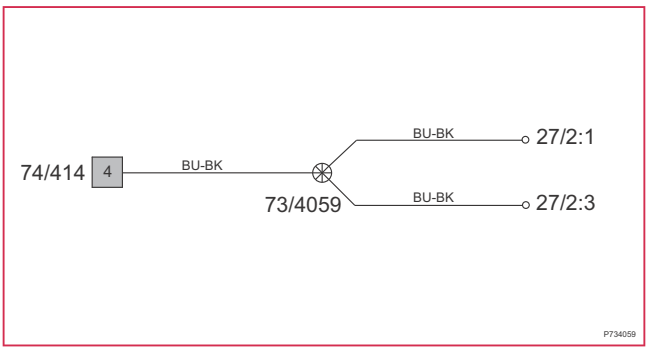

Branching points
73/4060 - 73/5004

73/4060

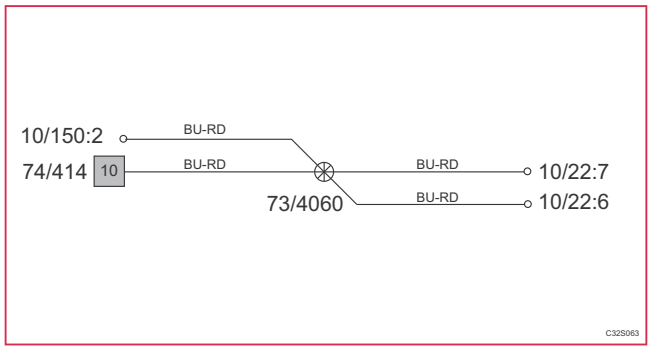

73/4061

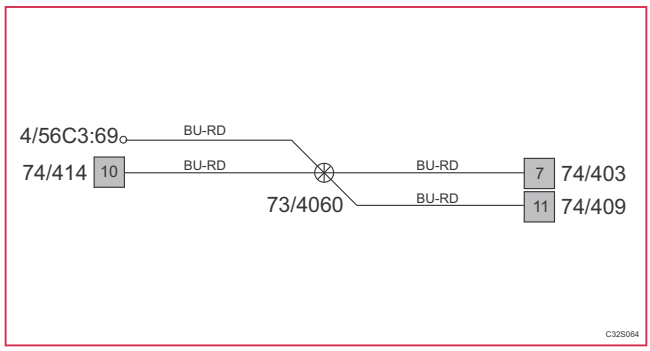

73/5001 LHD

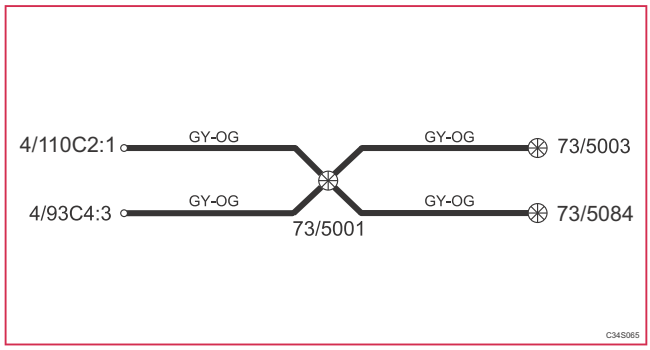

73/5001 RHD

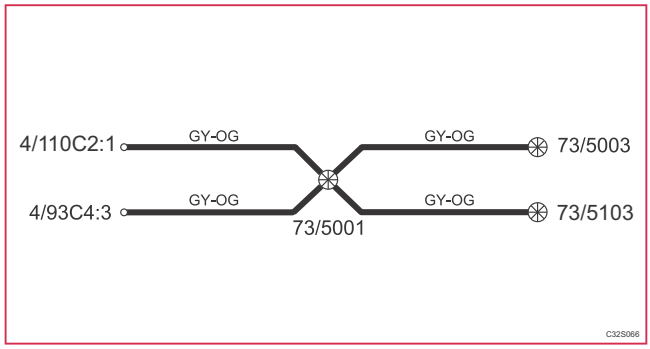

73/5002 LHD

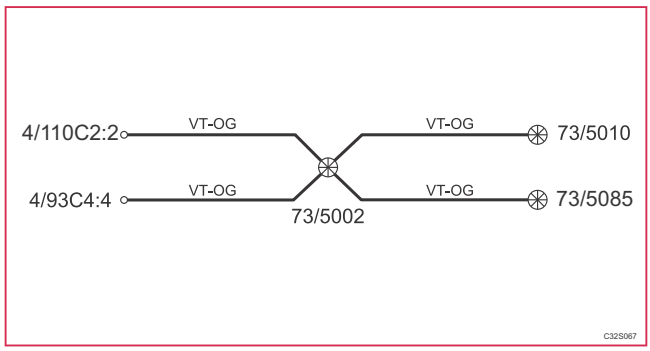

73/5002 RHD

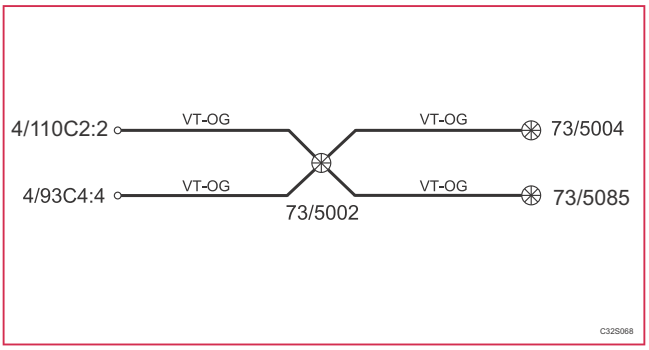

73/5003 LHD

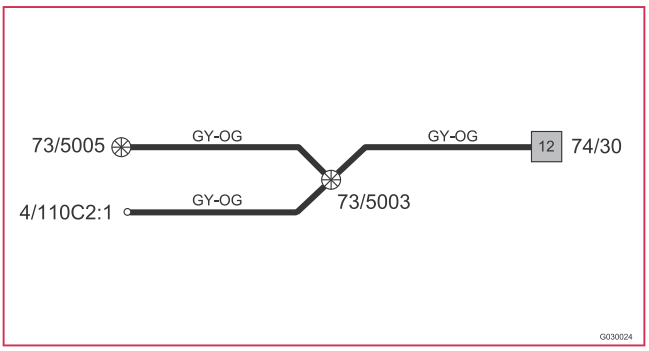

73/5003 RHD

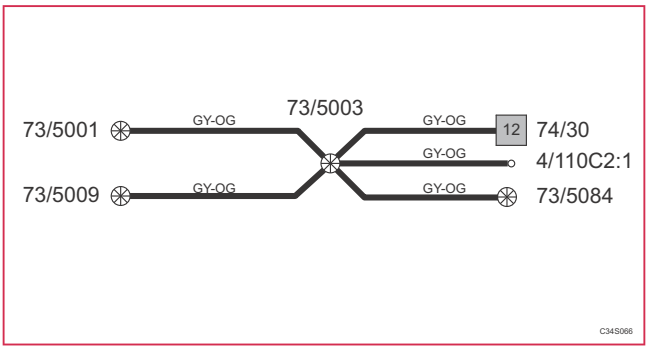

73/5004 LHD

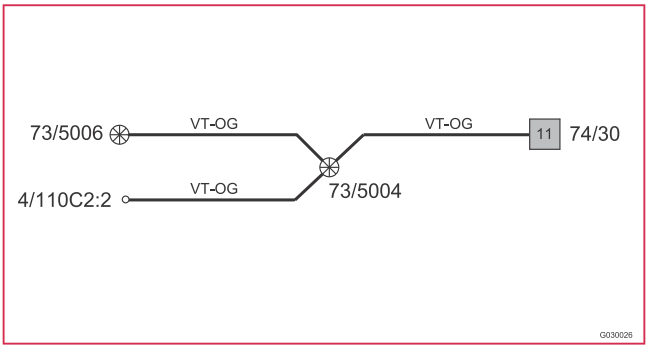

73/5004 RHD

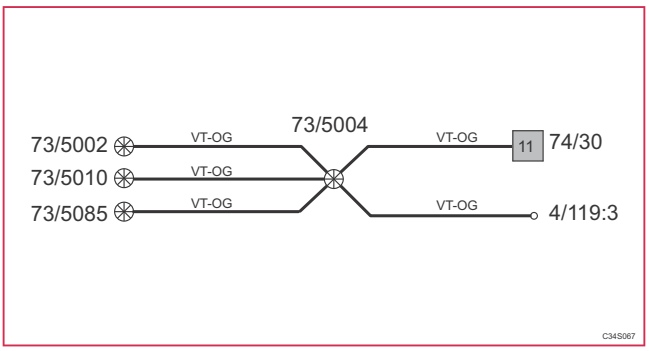

Branching points
73/5005 - 73/5012

73/5005 LHD

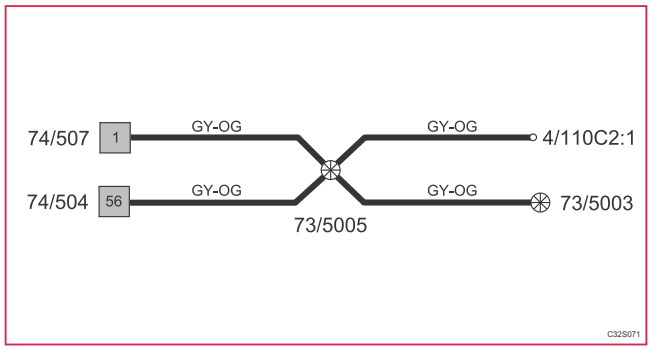

73/5005 RHD

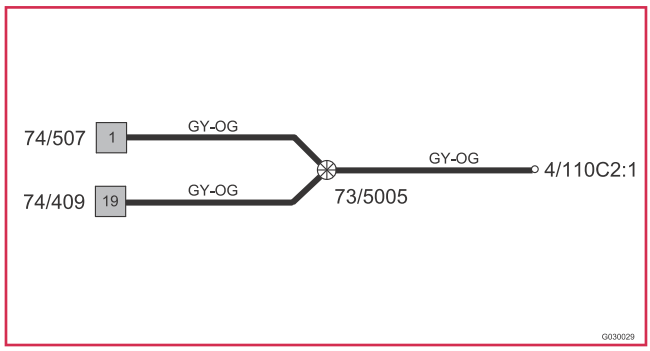

73/5006 LHD

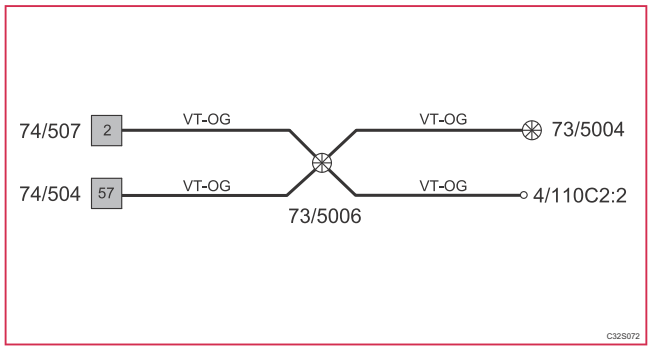

73/5006 RHD

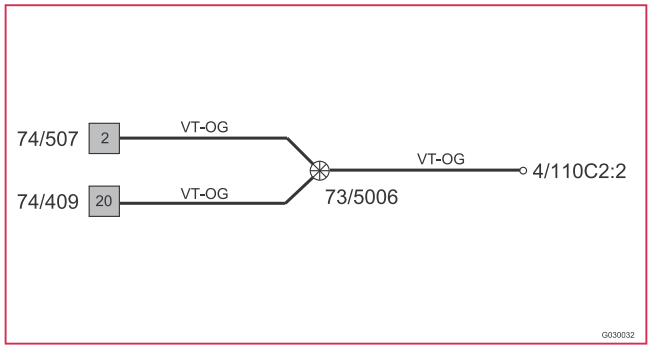

73/5009 LHD

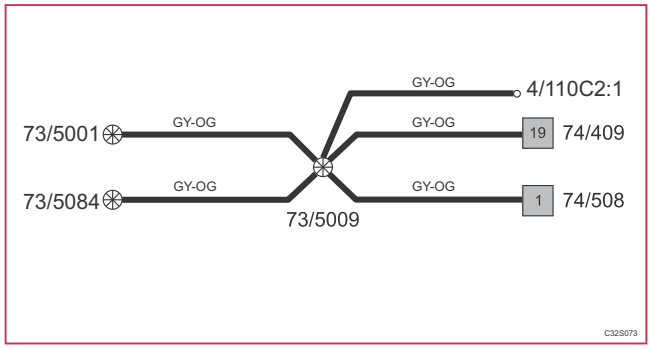

73/5009 RHD

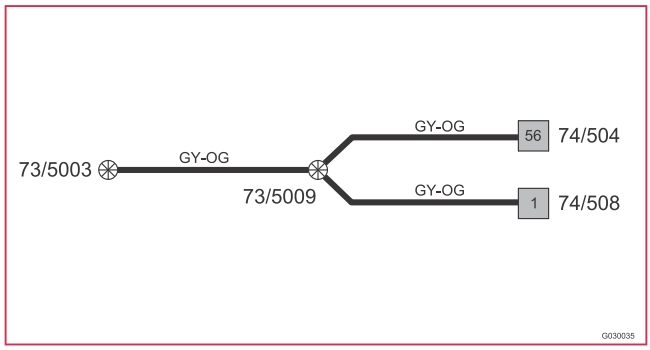

73/5010 LHD

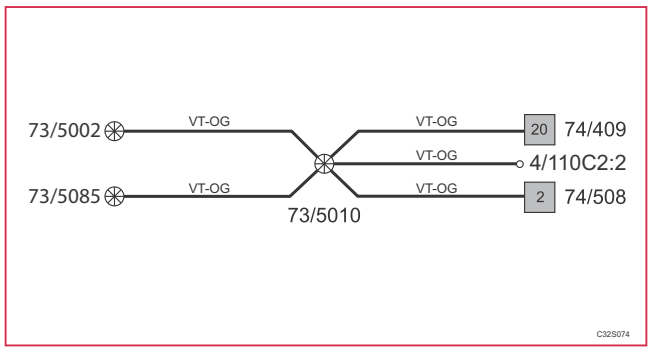

73/5010 RHD

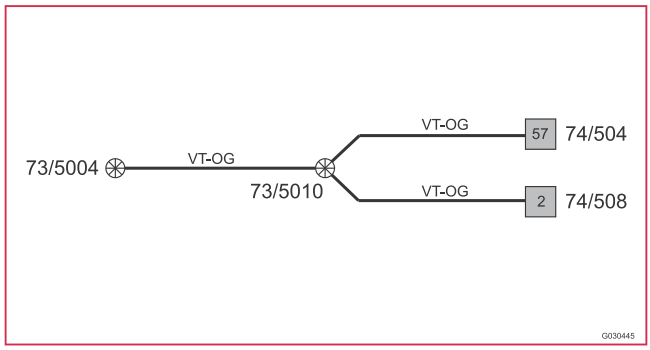

73/5011

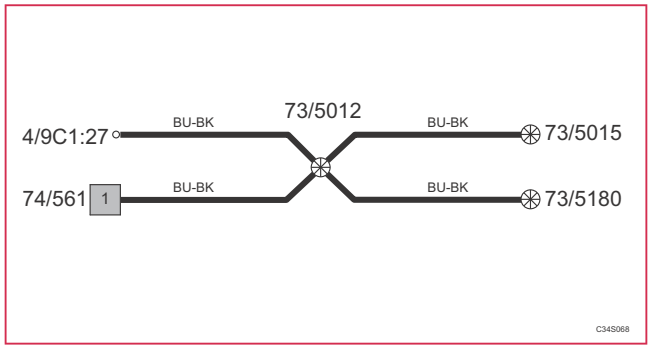

73/5012

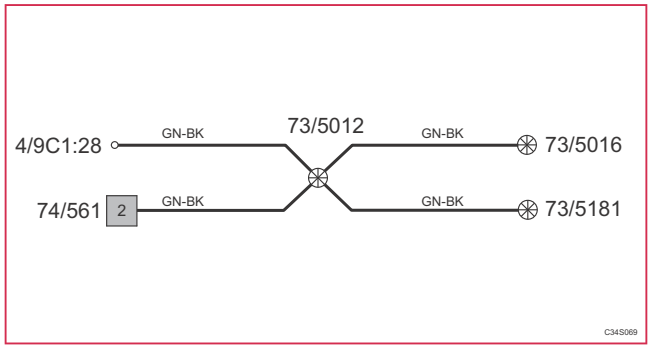

Branching points
73/5015 - 73/5027

73/5015

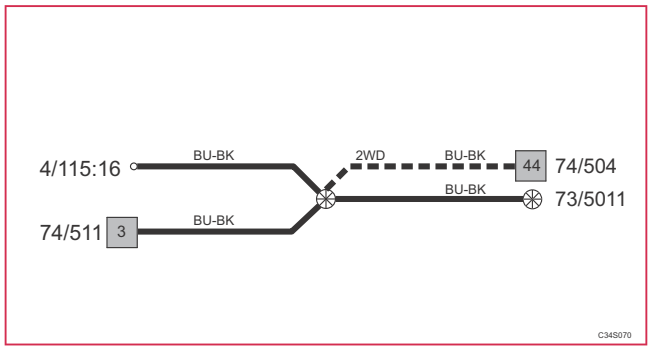

73/5016

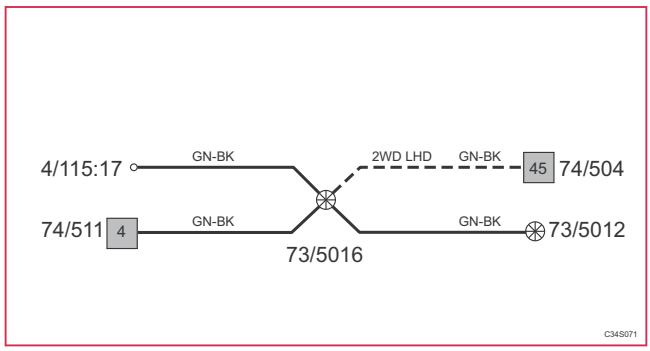

73/5019

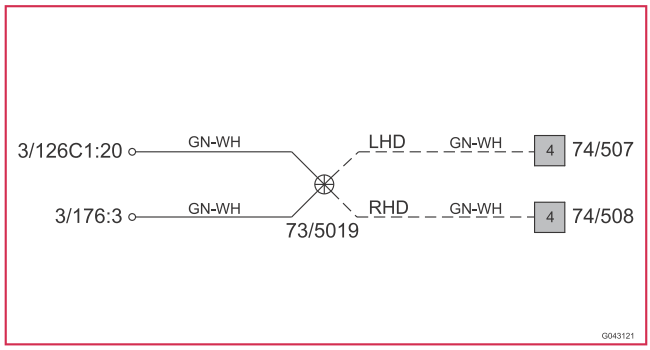

73/5021

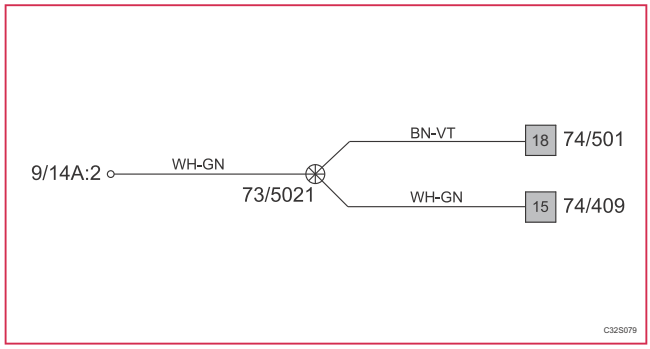

73/5023

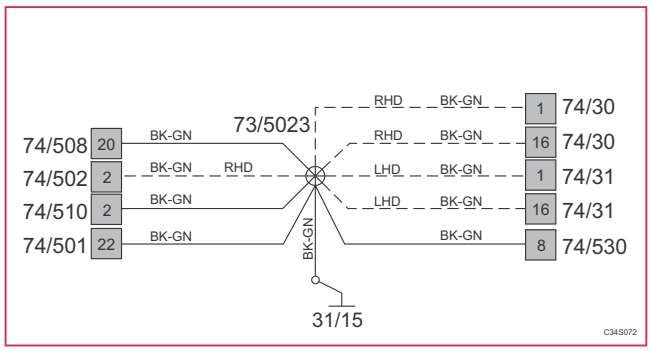

73/5024 LHD

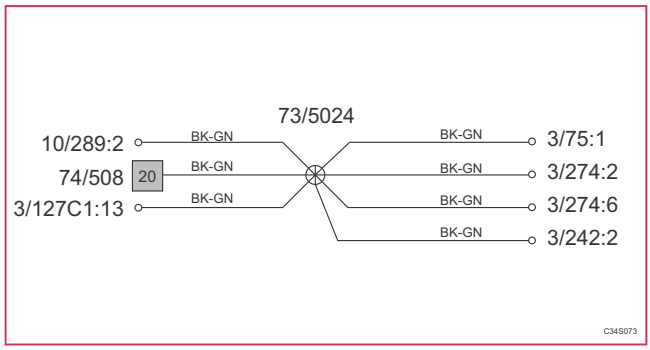

73/5024 RHD

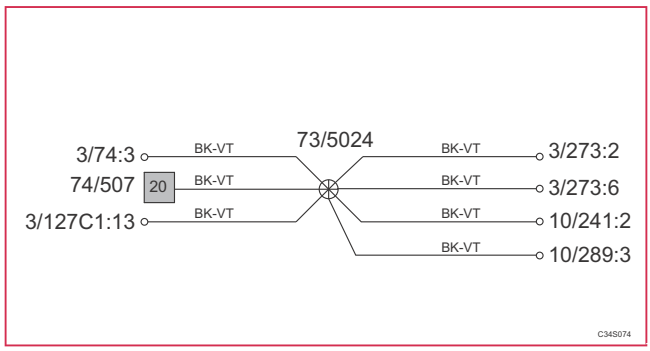

73/5025

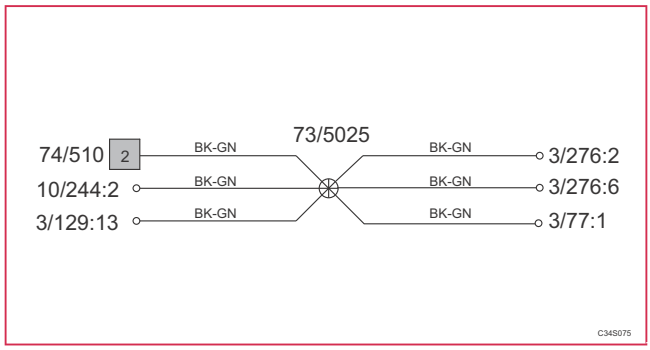

73/5026

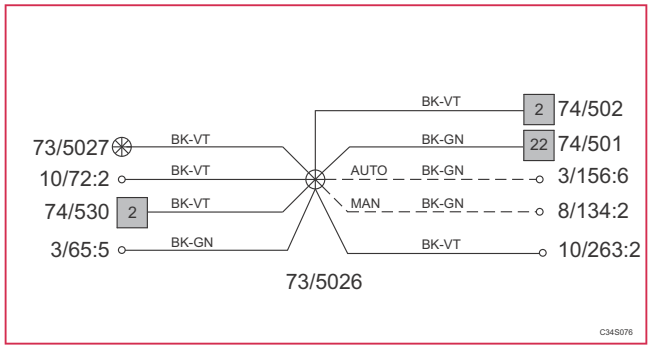

73/5027

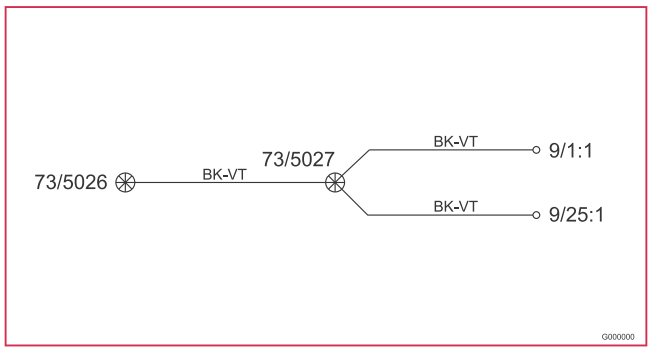

Branching points
73/5029 - 73/5044 V70

73/5029

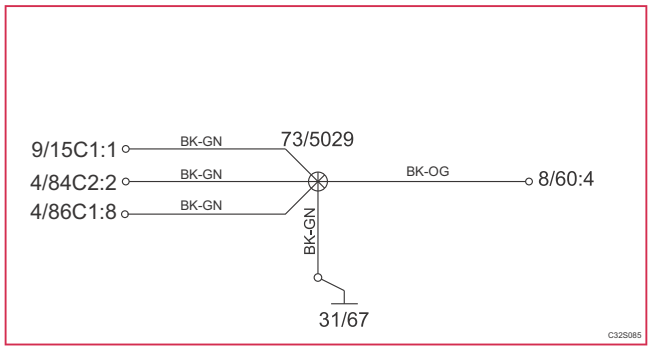

73/5036

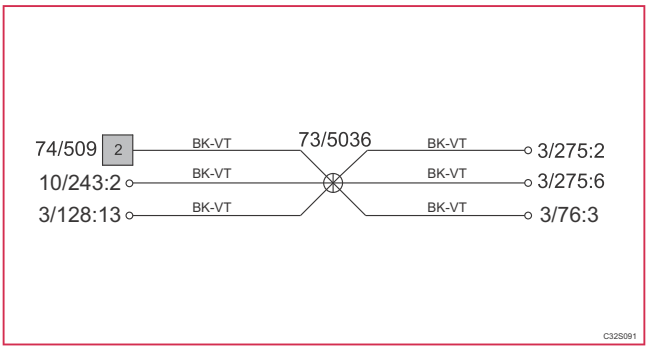

73/5032 V70

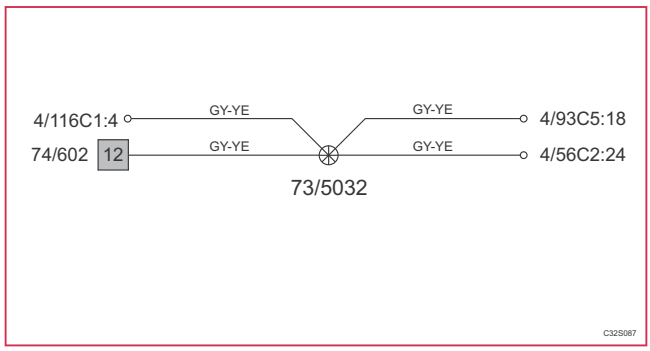

73/5037 LHD

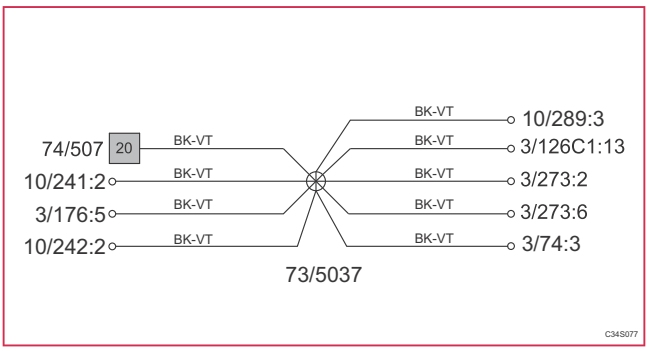

73/5033

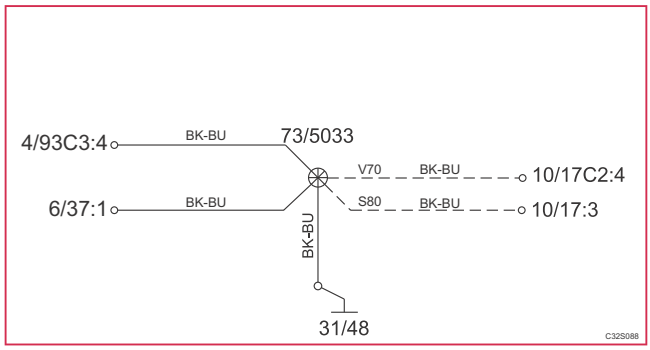

73/5037 RHD

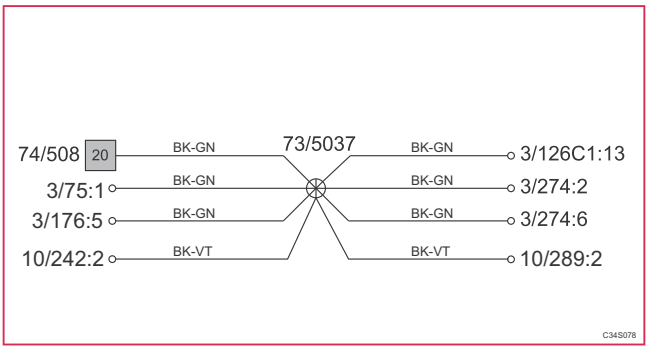

73/5035 LHD

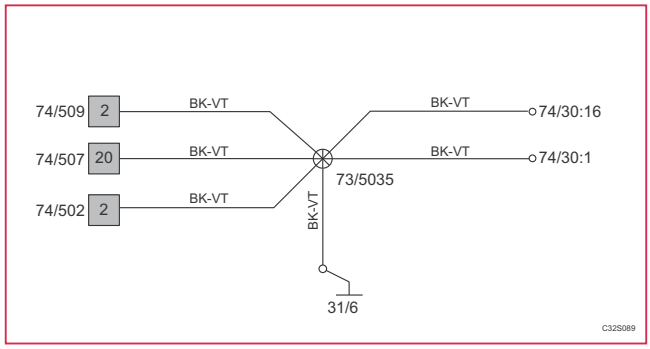

73/5038 S80

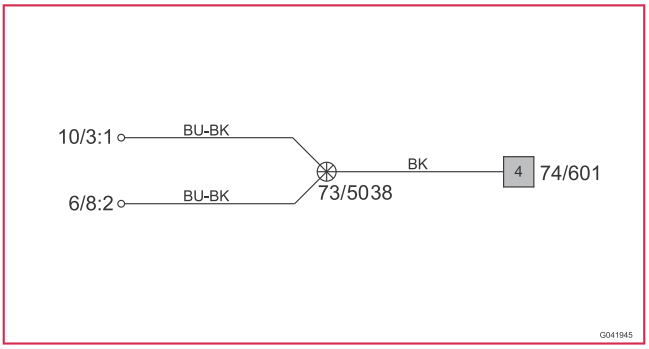

73/5035 RHD

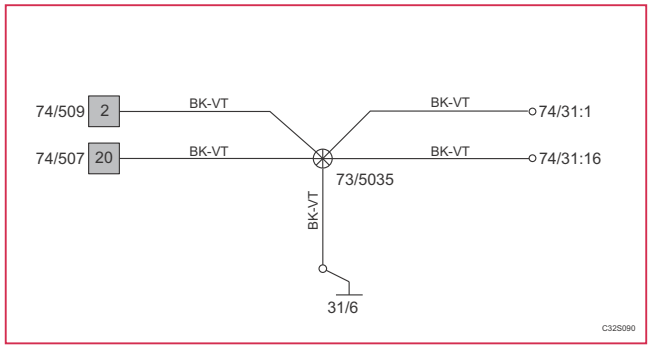

73/5044 V70 LHD

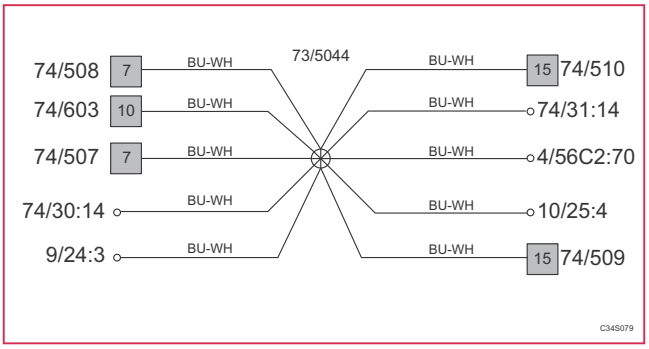

Branching points
73/5044 S80 - 73/5066

73/5044 S80 LHD

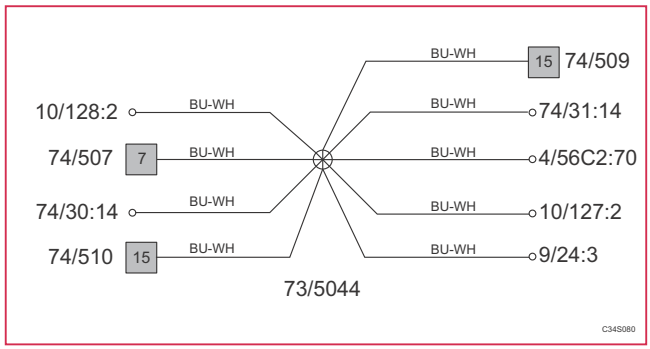

73/5044 V70 RHD

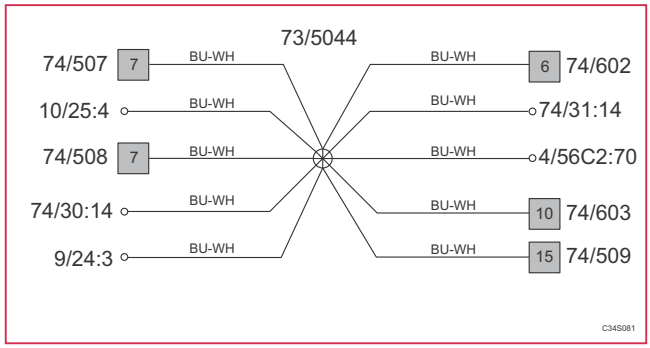

73/5044 S80 RHD

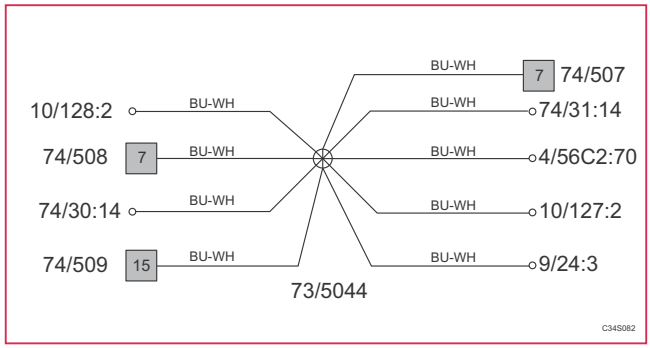

73/5050

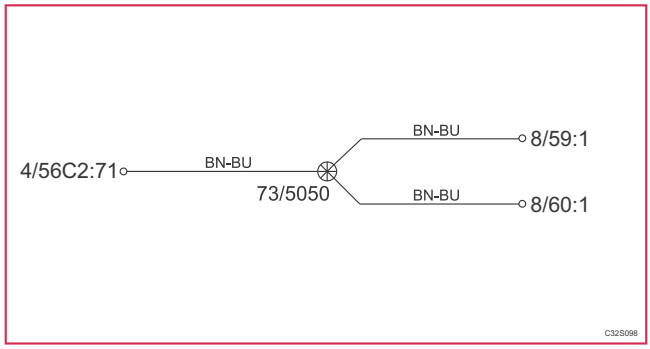

73/5051

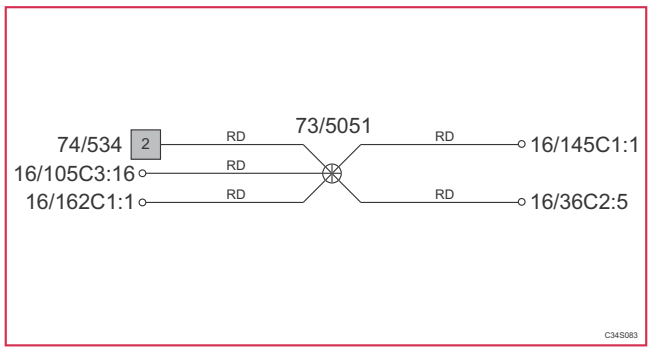

73/5052

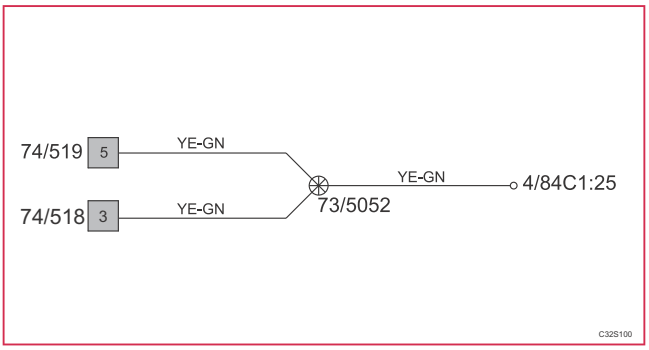

73/5053

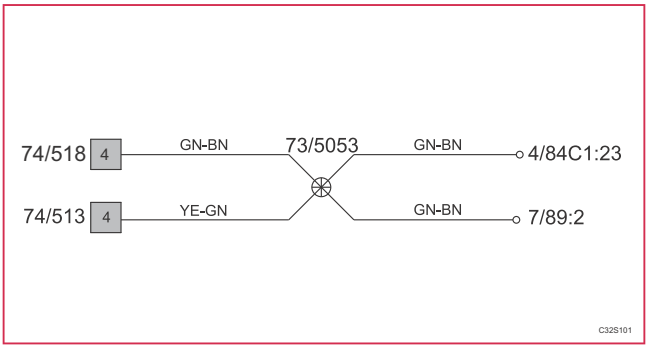

73/5060

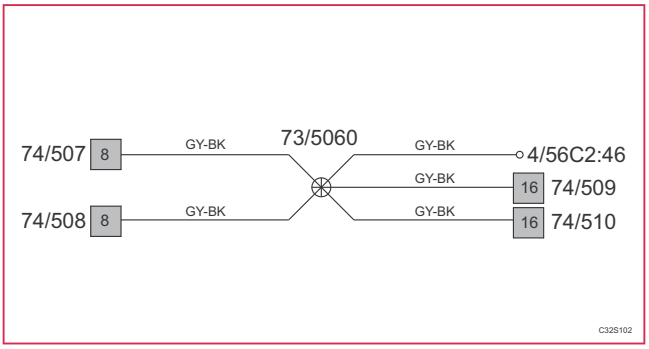

73/5064

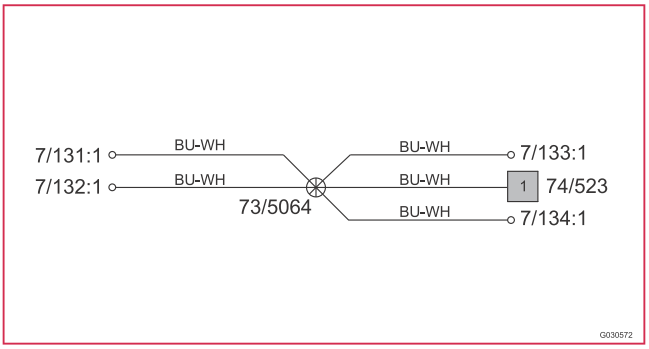

73/5066

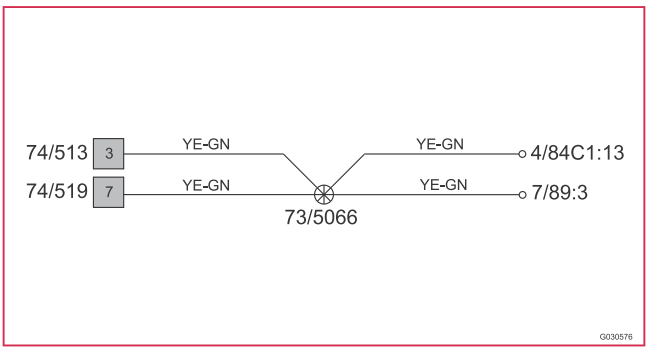

Branching points
73/5067 - 73/5084

73/5067

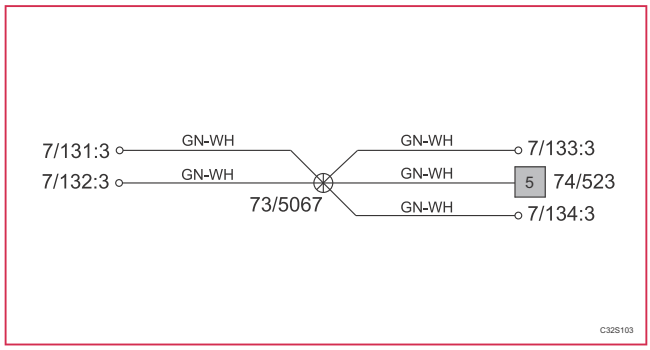

73/5076

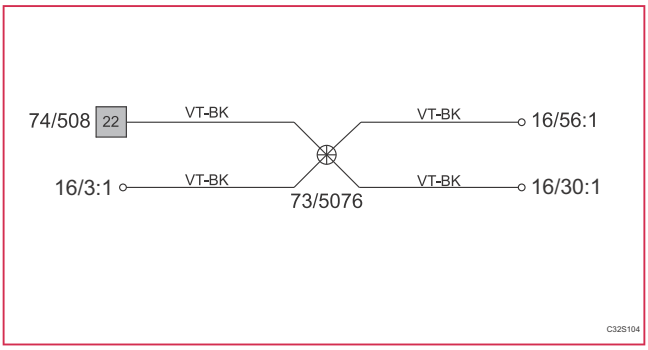

73/5070

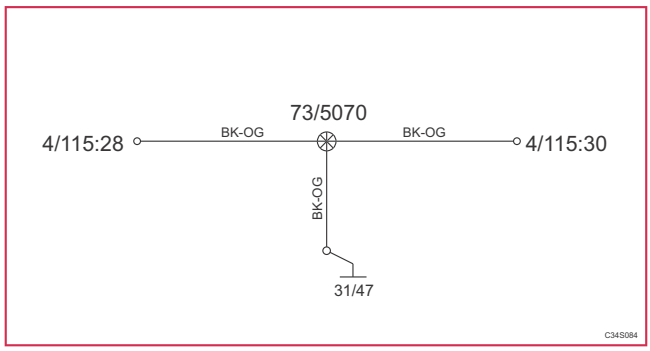

73/5077

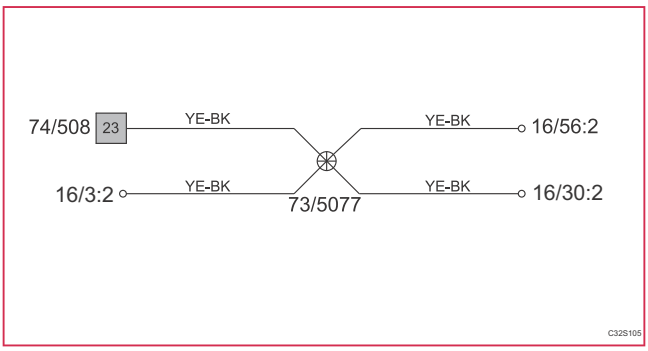

73/5071 LHD

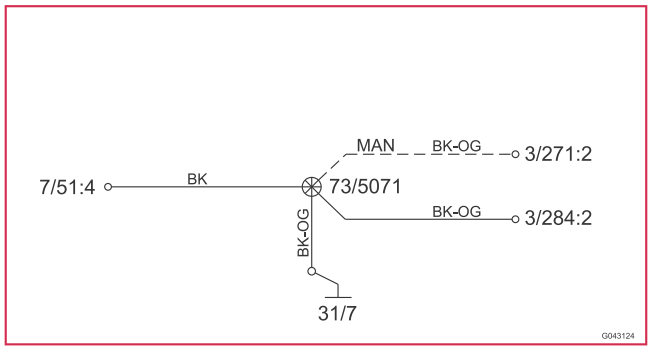

73/5078

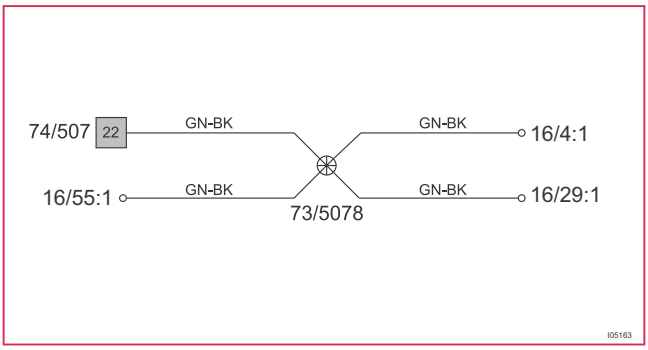

73/5072 RHD

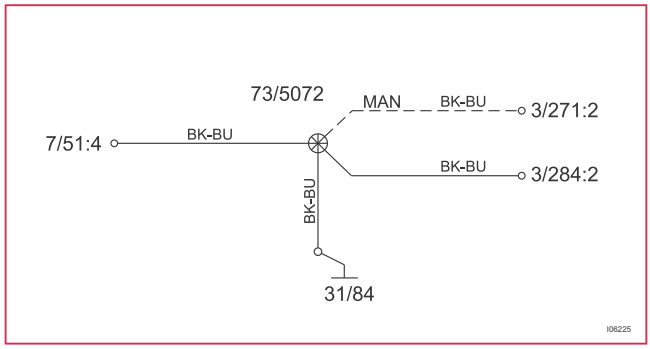

73/5079

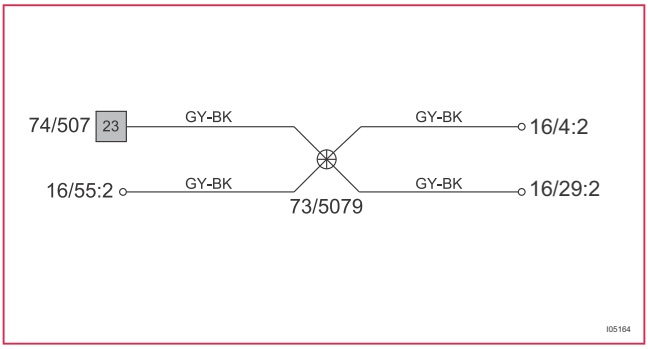

73/5075

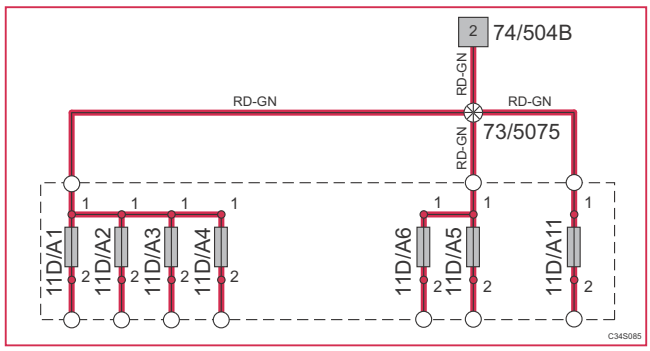

73/5084

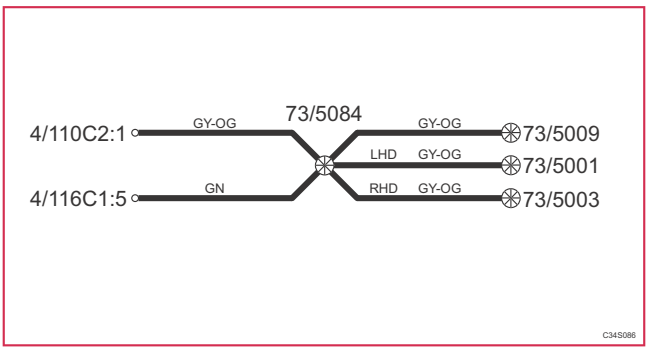

Branching points
73/5085 - 73/5125

73/5085

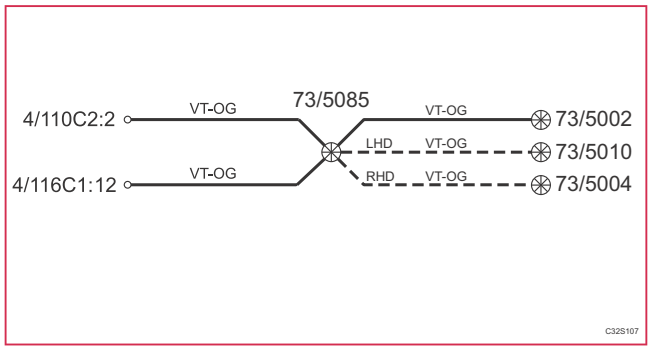

73/5113

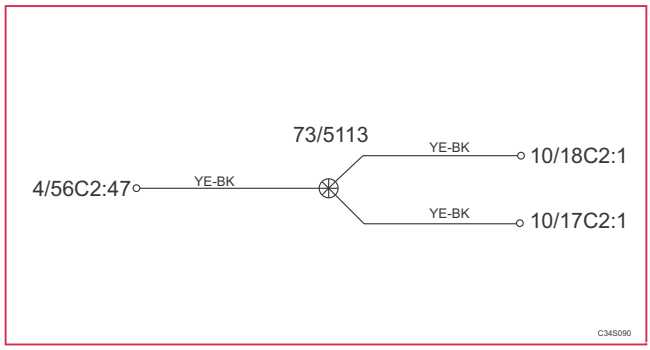

73/5091

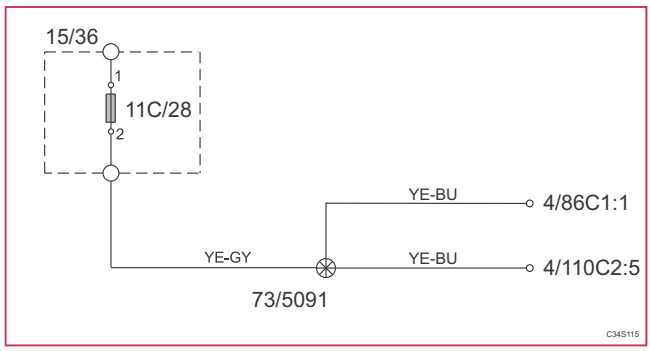

73/5117

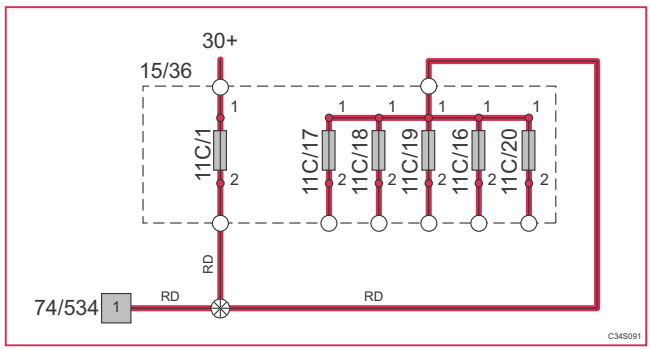

73/5097

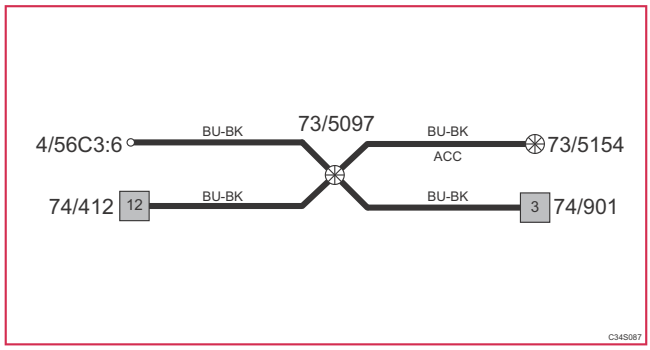

73/5123

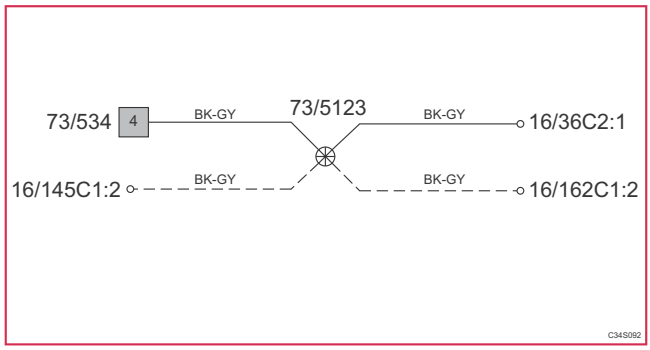

73/5098

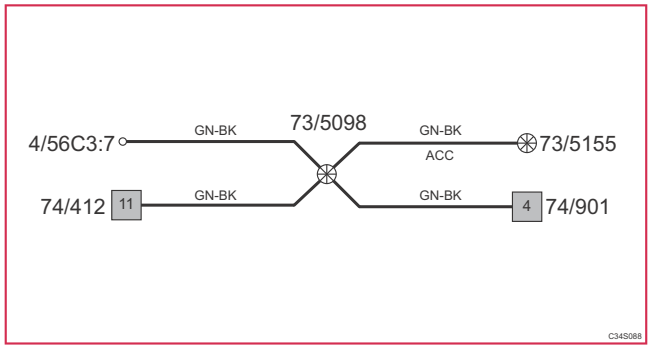

73/5124

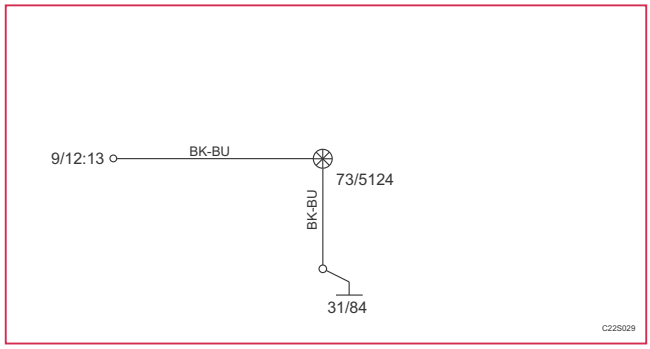

73/5105

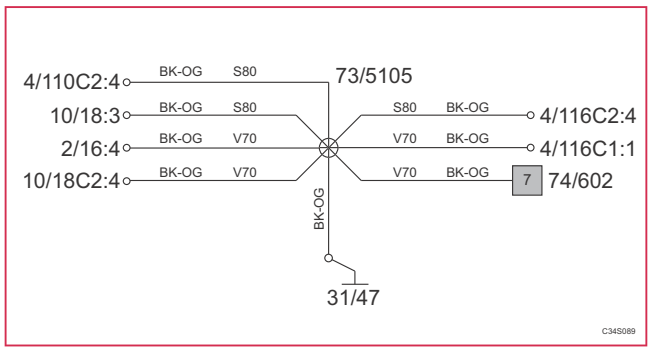

73/5125

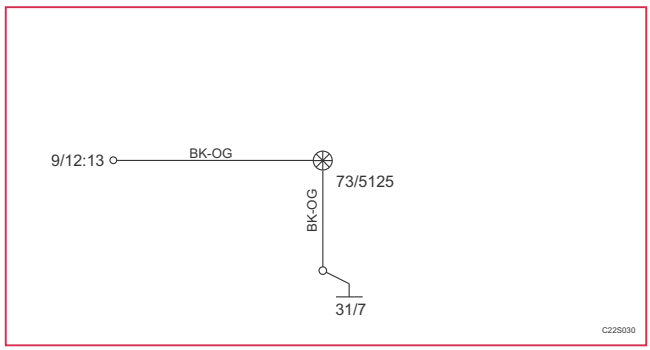

Branching points
73/5126 - 73/5164

73/5126

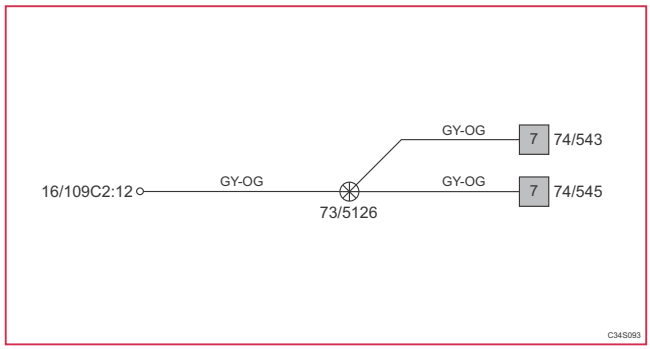

73/5153

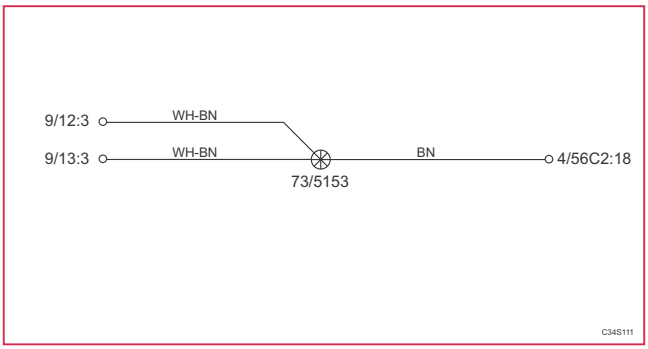

73/5127

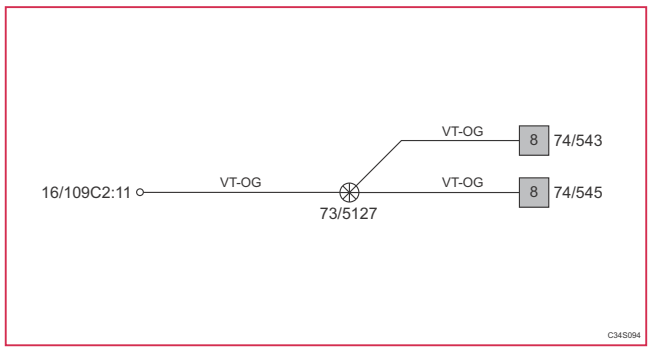

73/5154

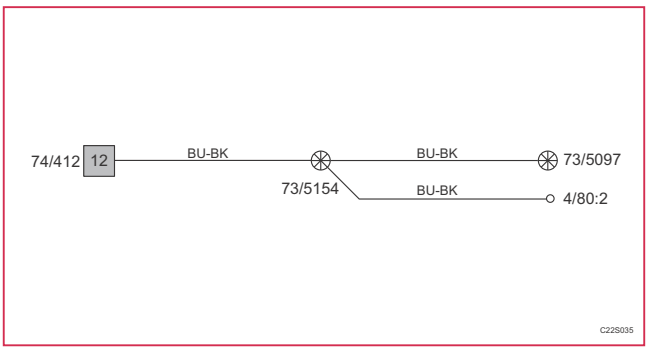

73/5131

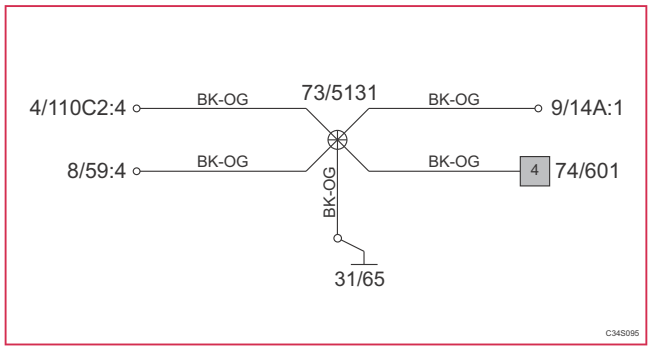

73/5155

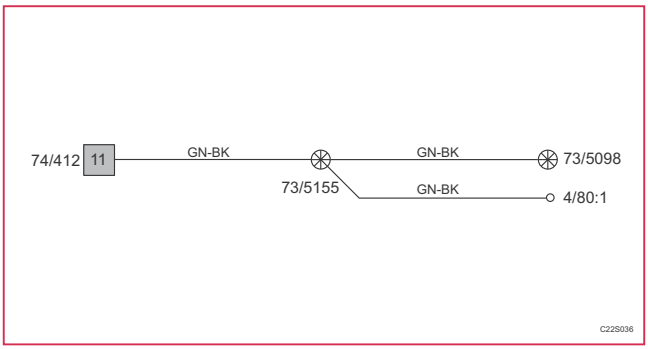

73/5132 LHD

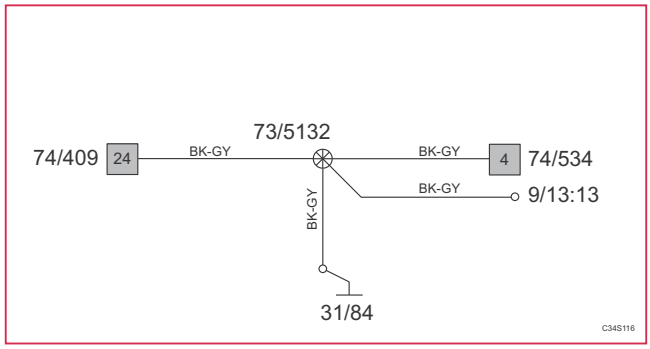

73/5163

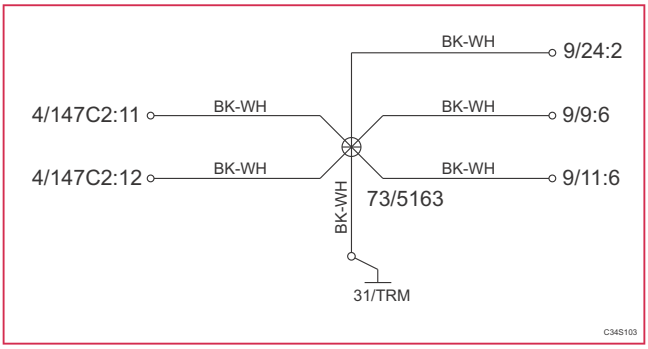

73/5132 RHD

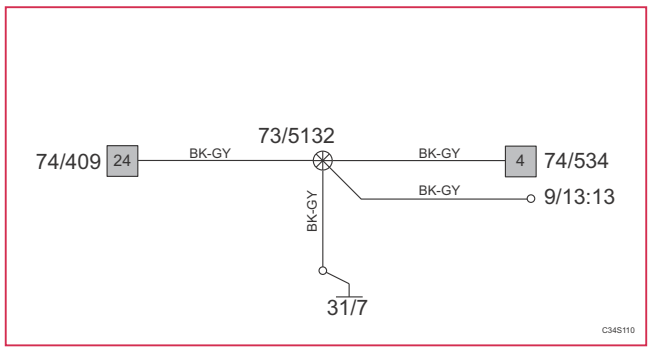

73/5164

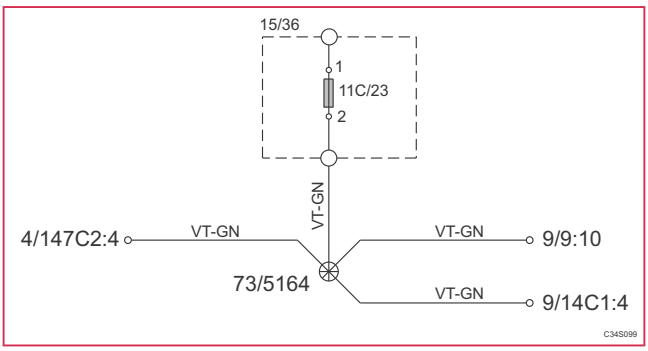

Branching points
73/5165 - 73/5192

73/5165

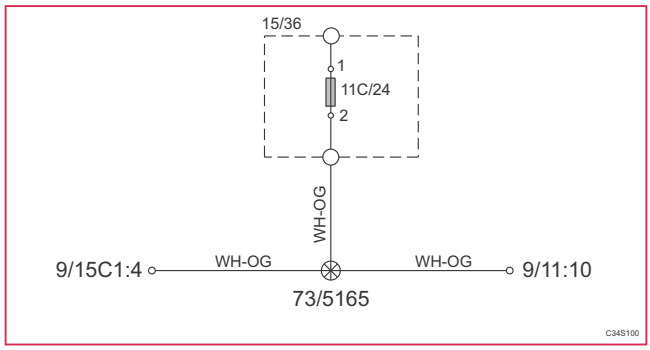

73/5187

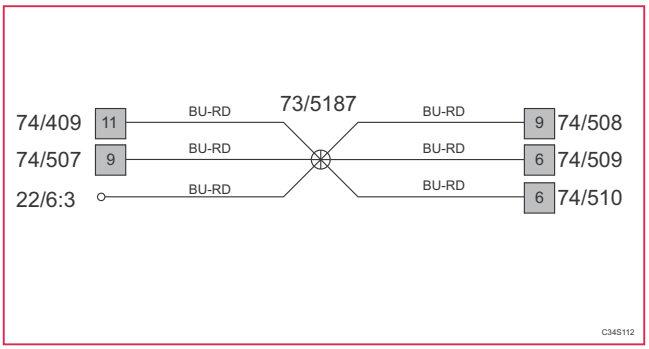

73/5166

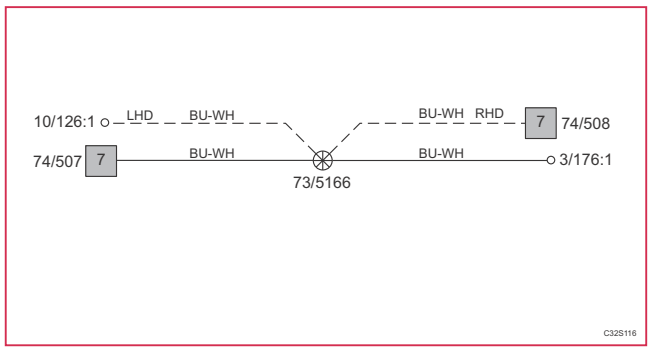

73/5189

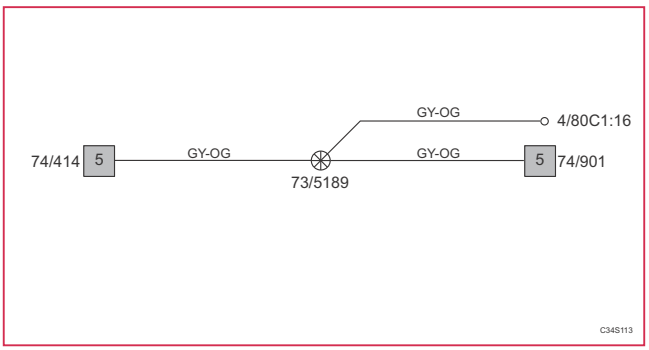

73/5167

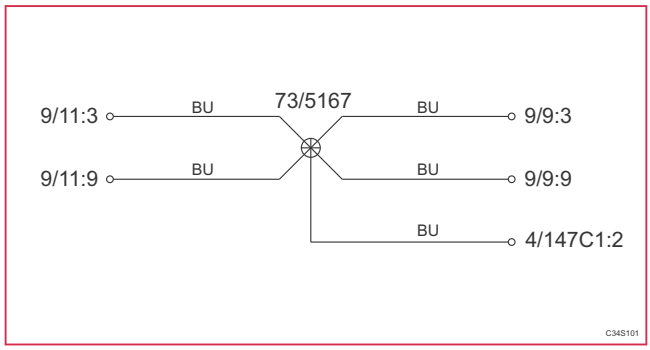

73/5190

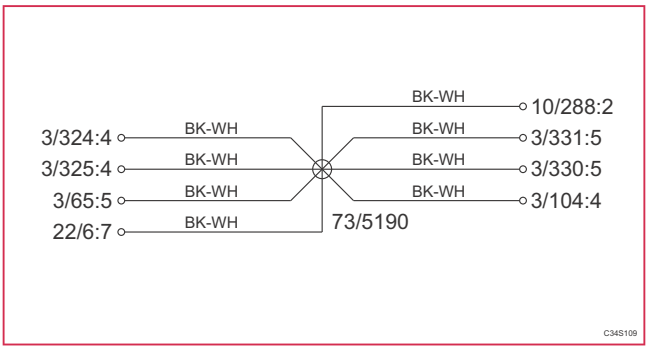

73/5180

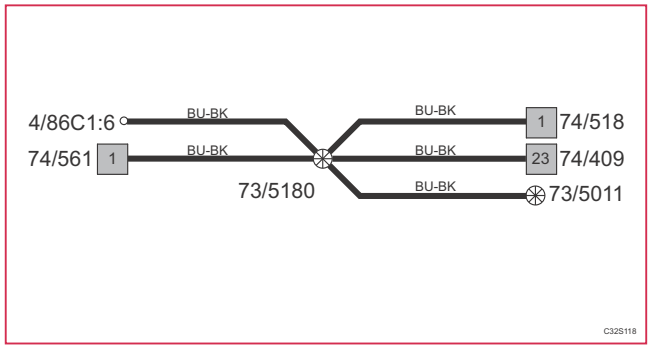

73/5191

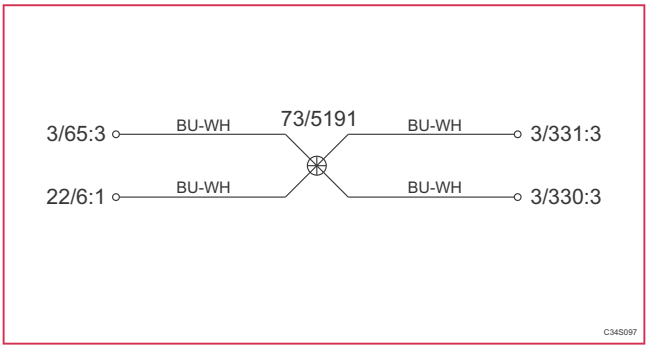

73/5181

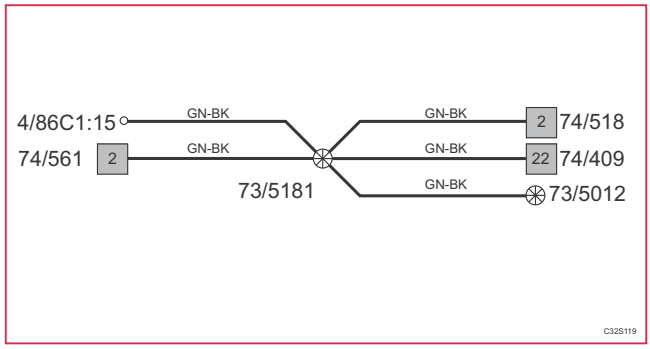

73/5192

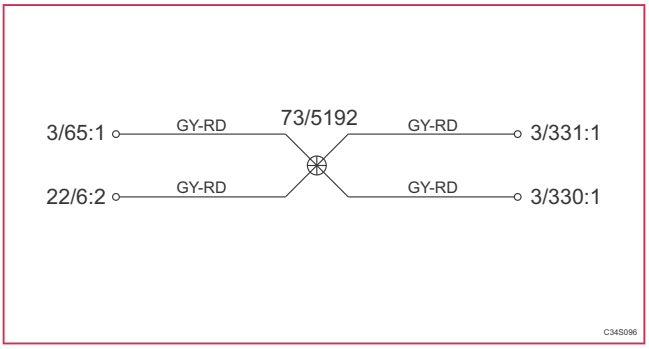

Branching points
73/5193 - 73/6003

73/5193

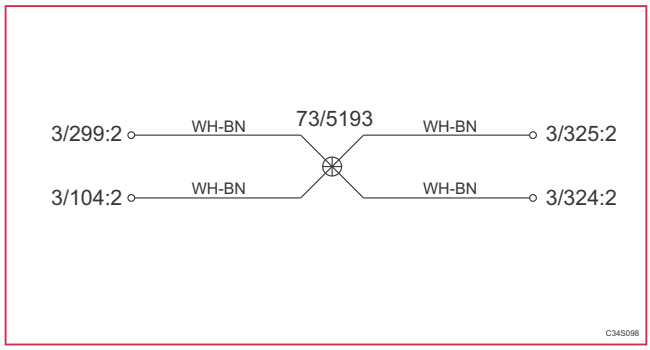

73/5194

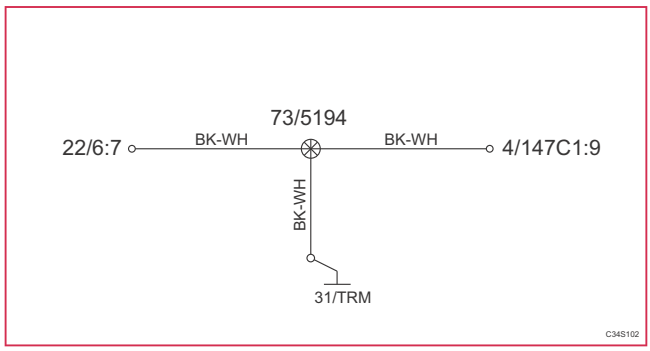

73/5201 LHD

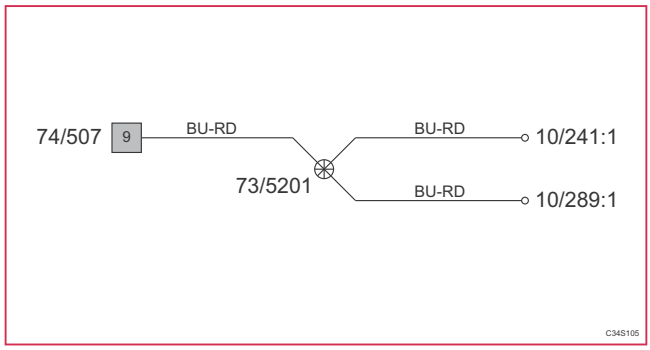

73/5201 RHD

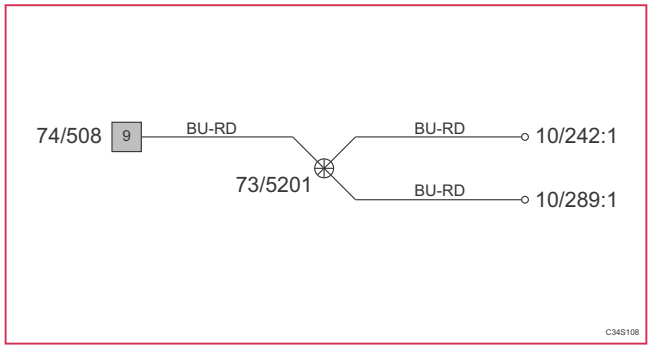

73/5202 LHD

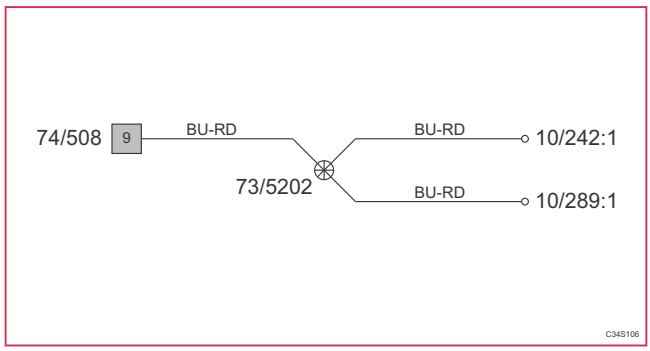

73/5202 RHD

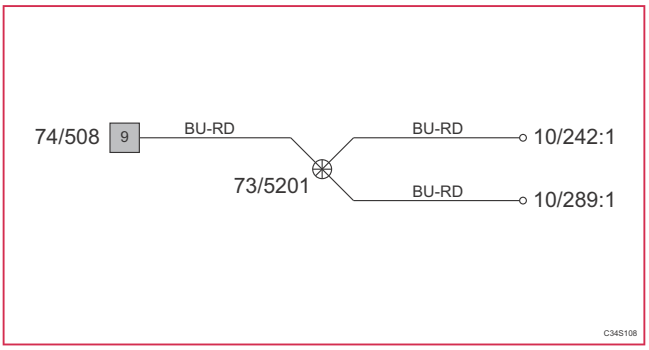

73/5222

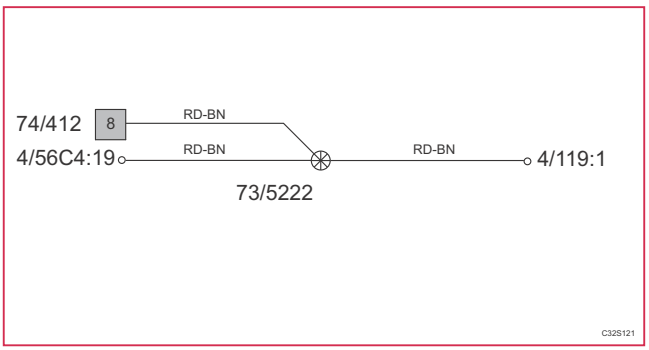

73/6001

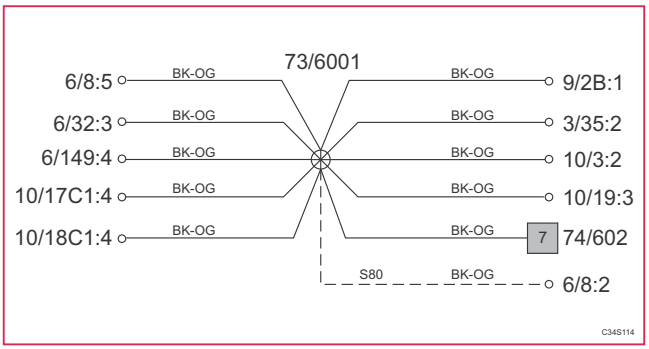

73/6002 V70

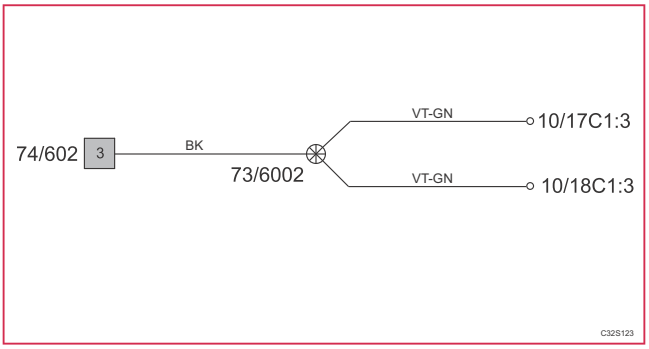

73/6003 V70

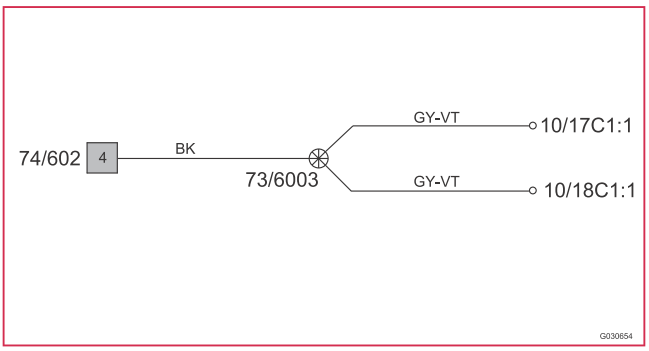

Cable harness routing in vehicle
Engine harness, 4-Cyl. 1.6L Turbo

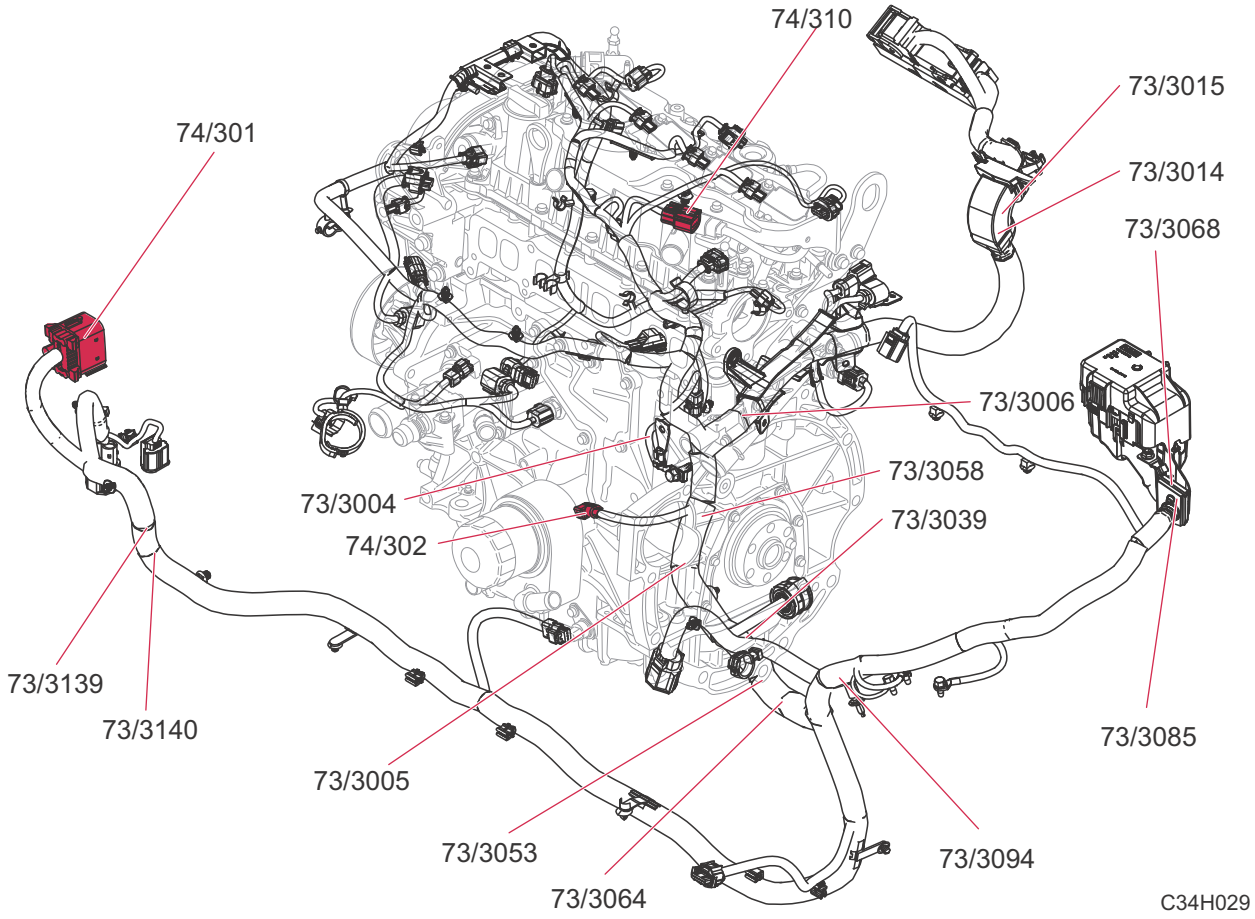

Cable harness routing in vehicle
Engine harness, 4-Cyl. 2.0L Turbo

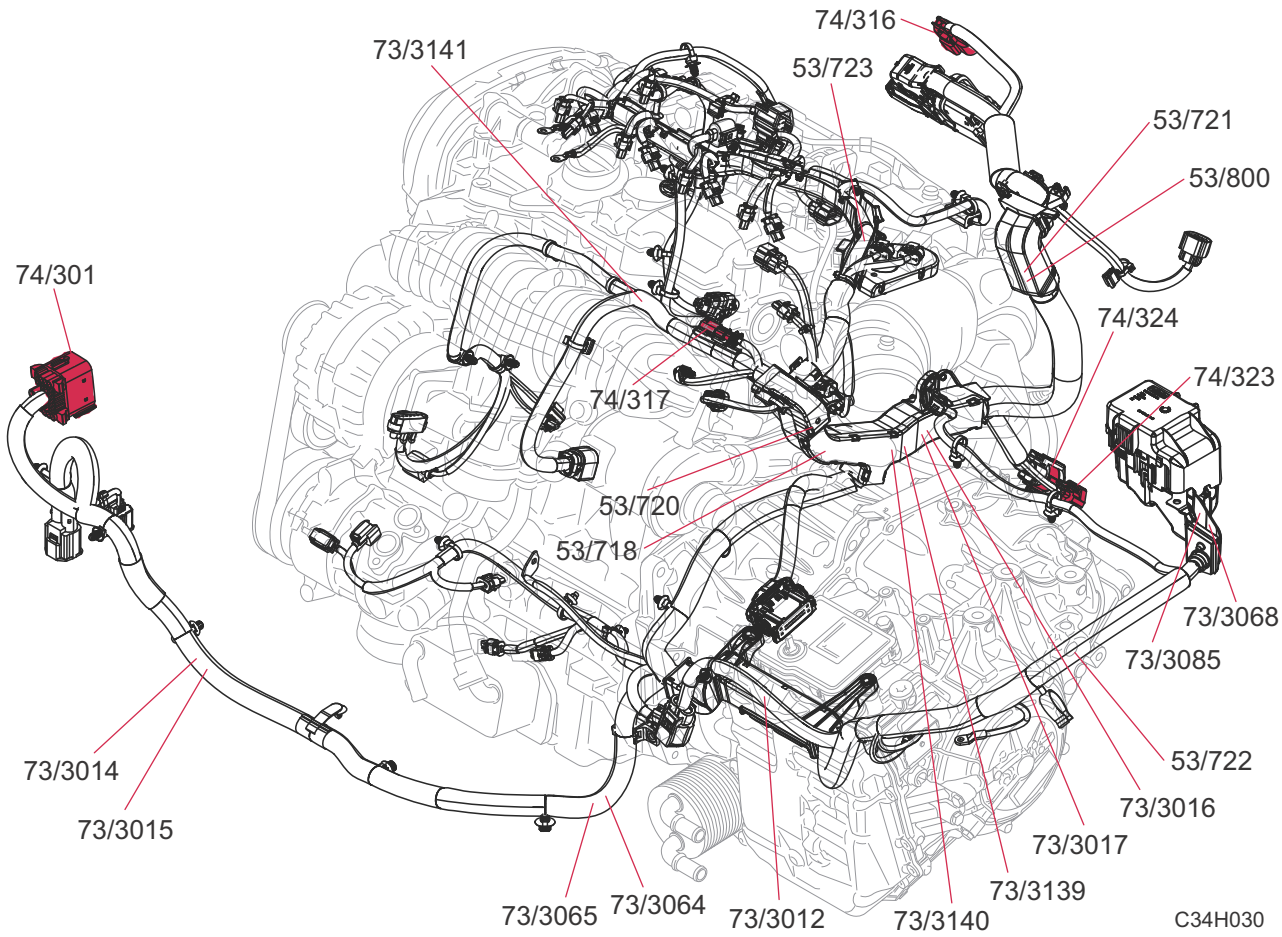

Cable harness routing in vehicle
Engine harness, 4-Cyl. Diesel 1.6 MAN

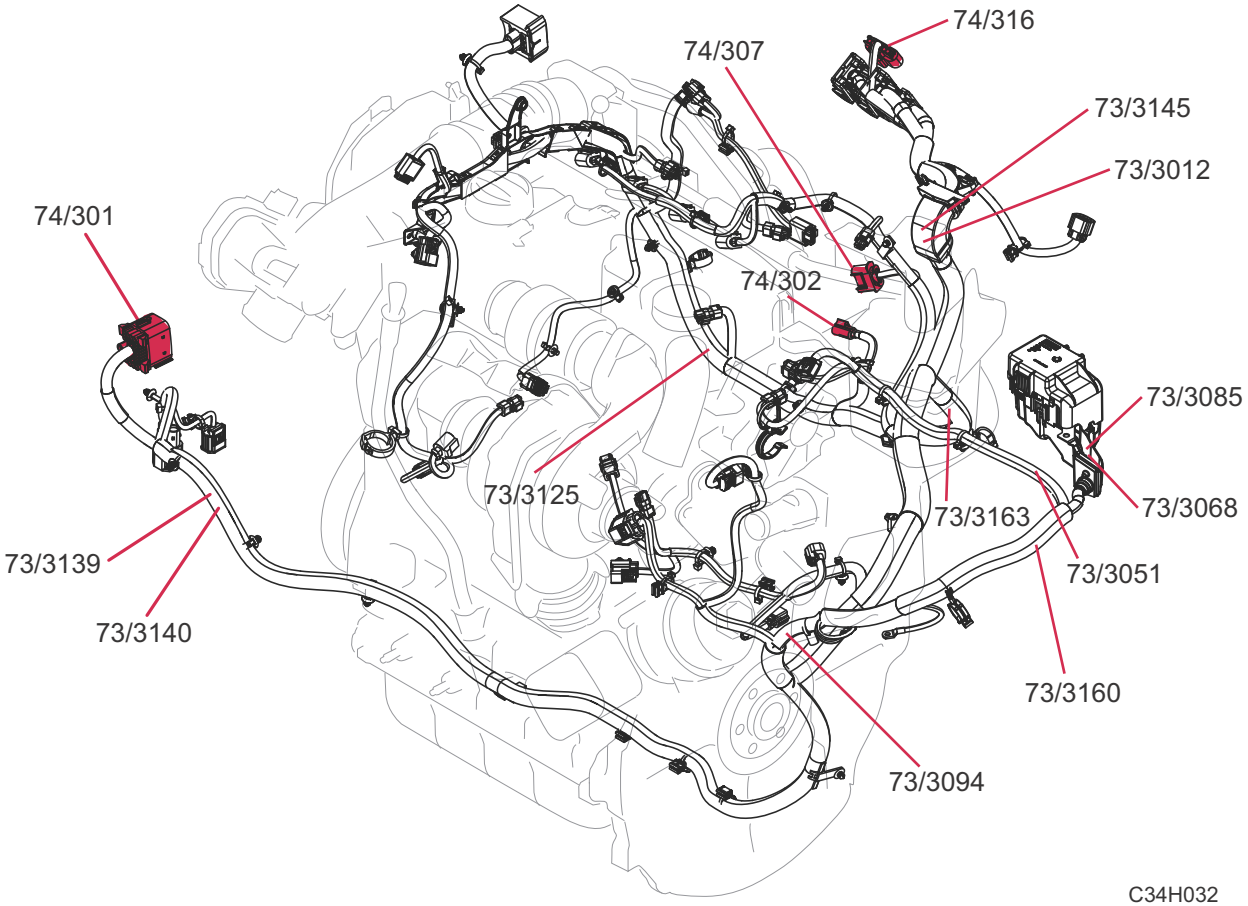

Cable harness routing in vehicle
Engine harness, 4-Cyl. Diesel 1.6 AUTO

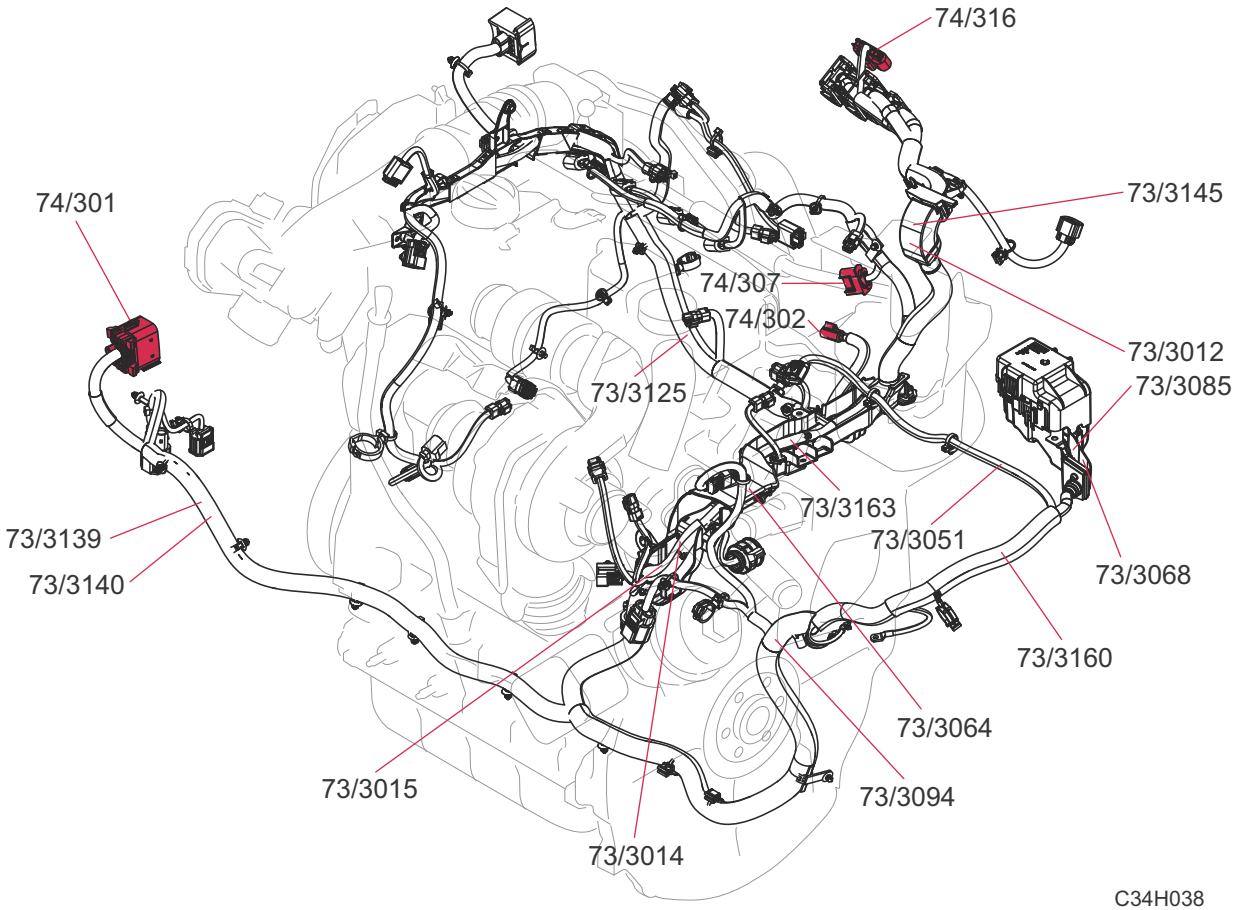

Cable harness routing in vehicle
Engine harness, 4-Cyl. Diesel 2.0

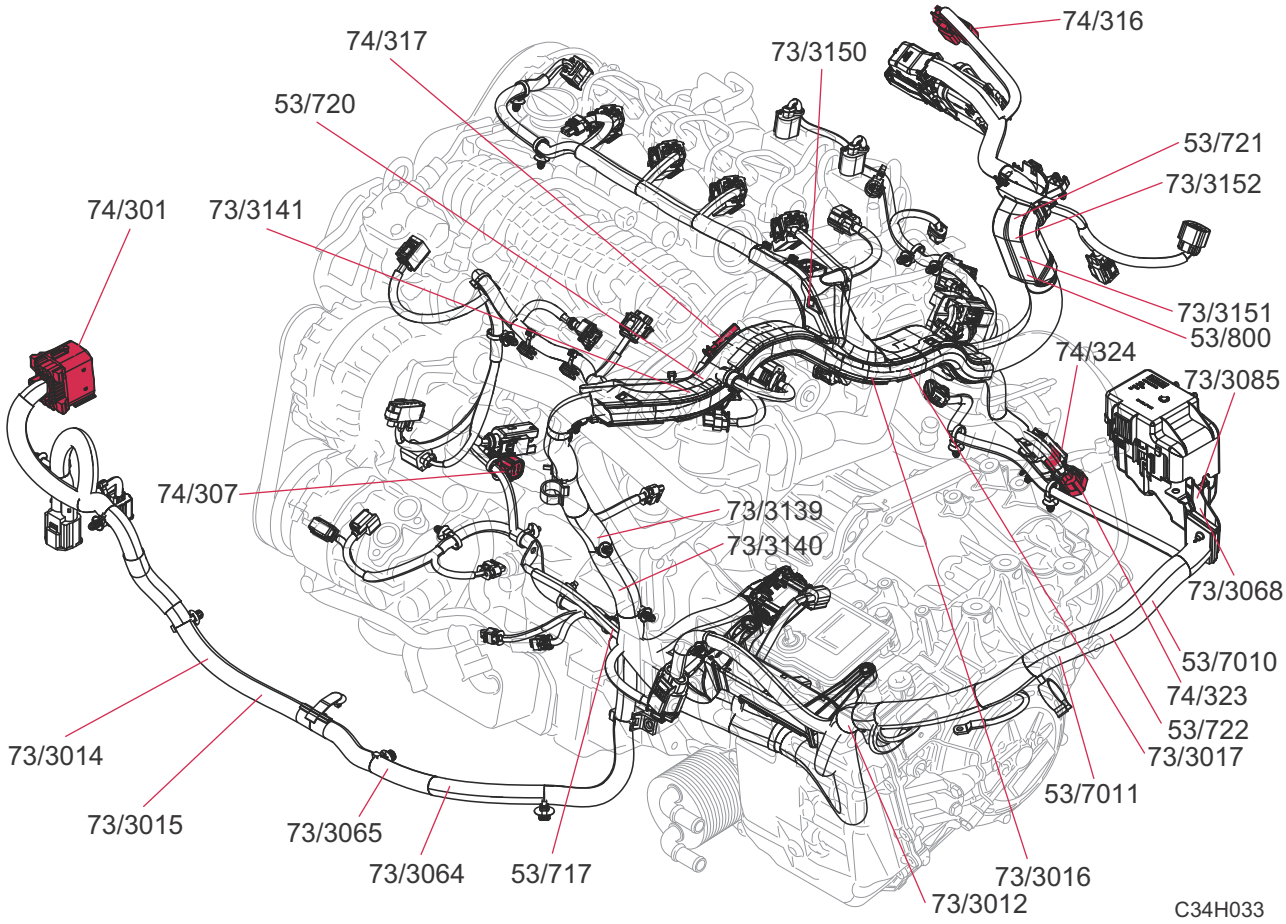

Cable harness routing in vehicle
Engine harness, 5-Cyl. Turbo

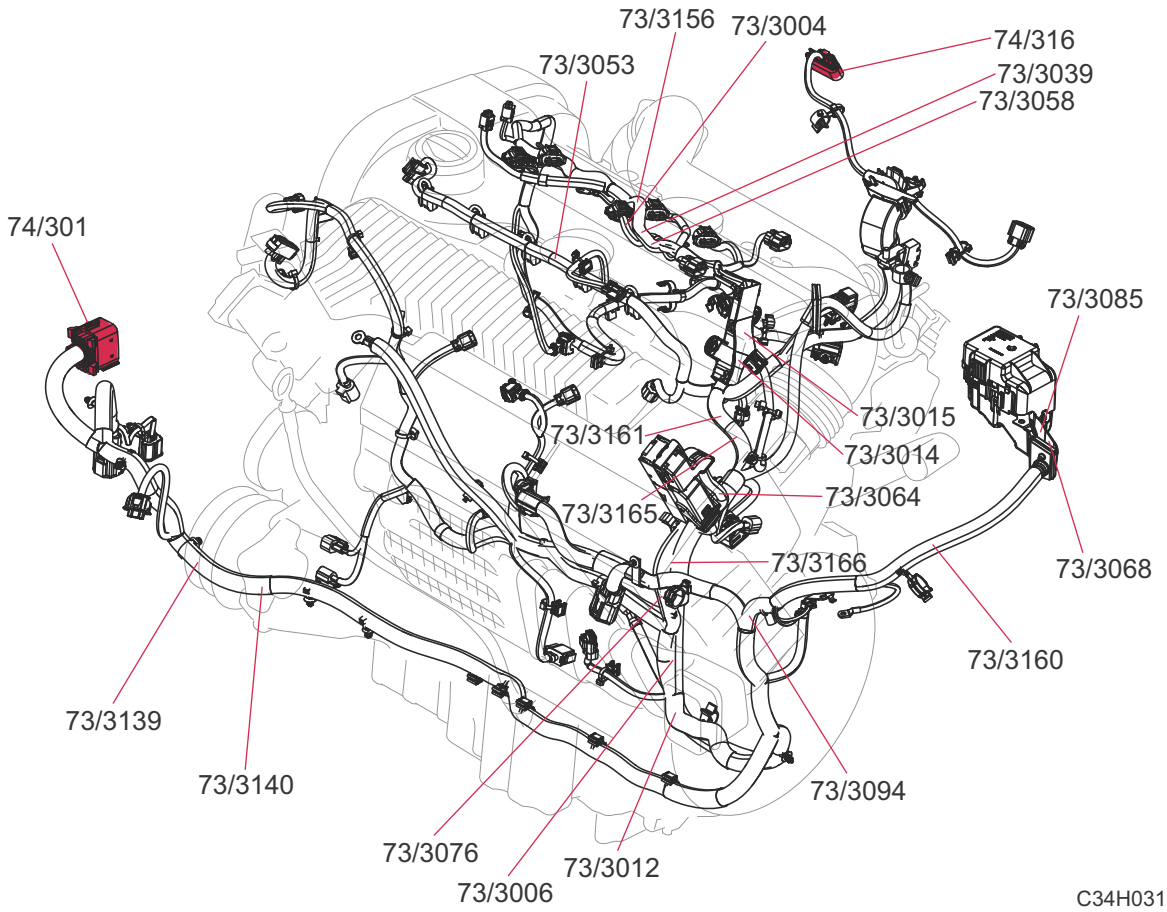

Cable harness routing in vehicle
Engine harness, 5-Cyl. Diesel

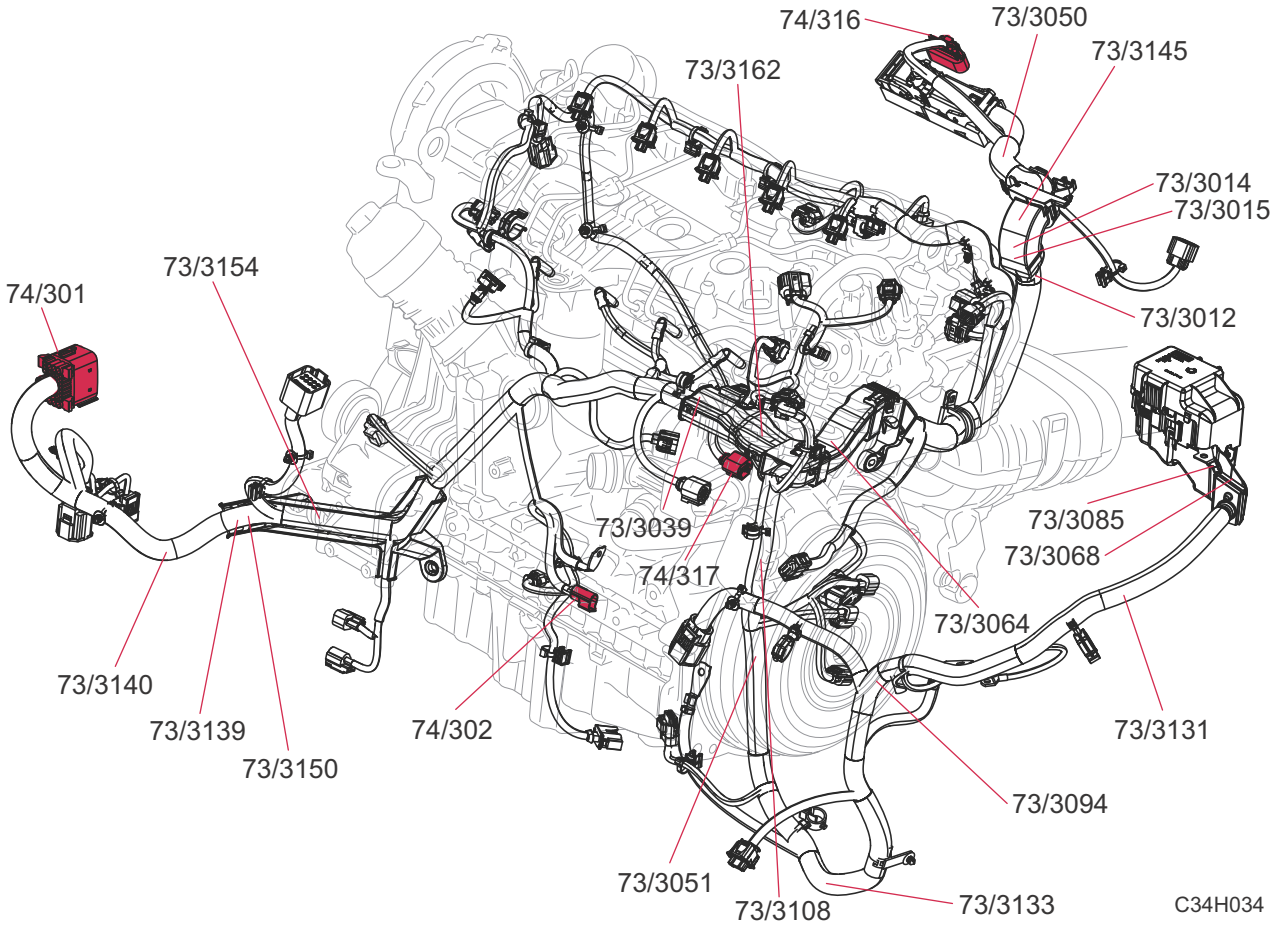

Cable harness routing in vehicle
Engine harness, 6-Cyl. 3.0L Turbo

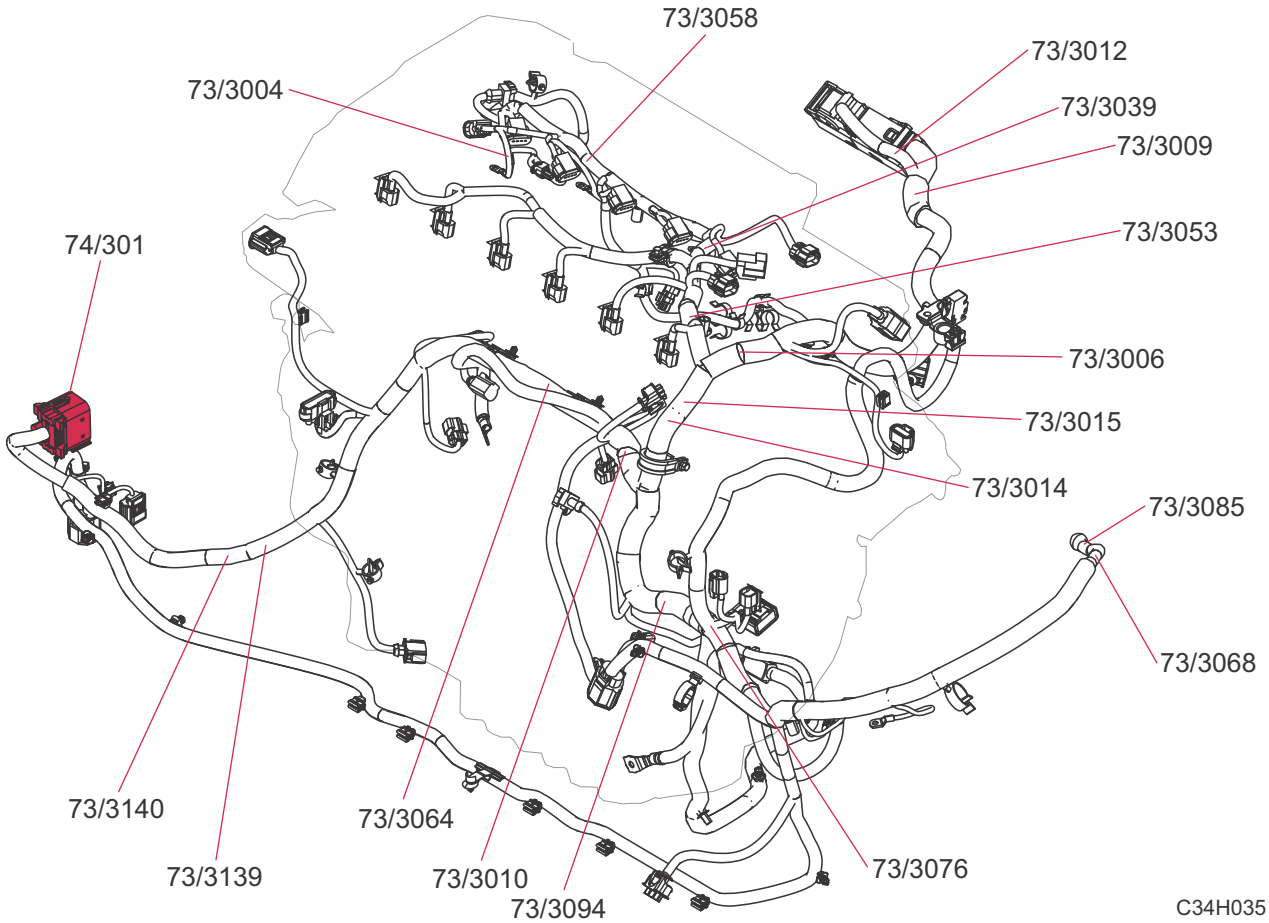

Cable harness routing in vehicle
Engine harness, 6-Cyl. 3.2L

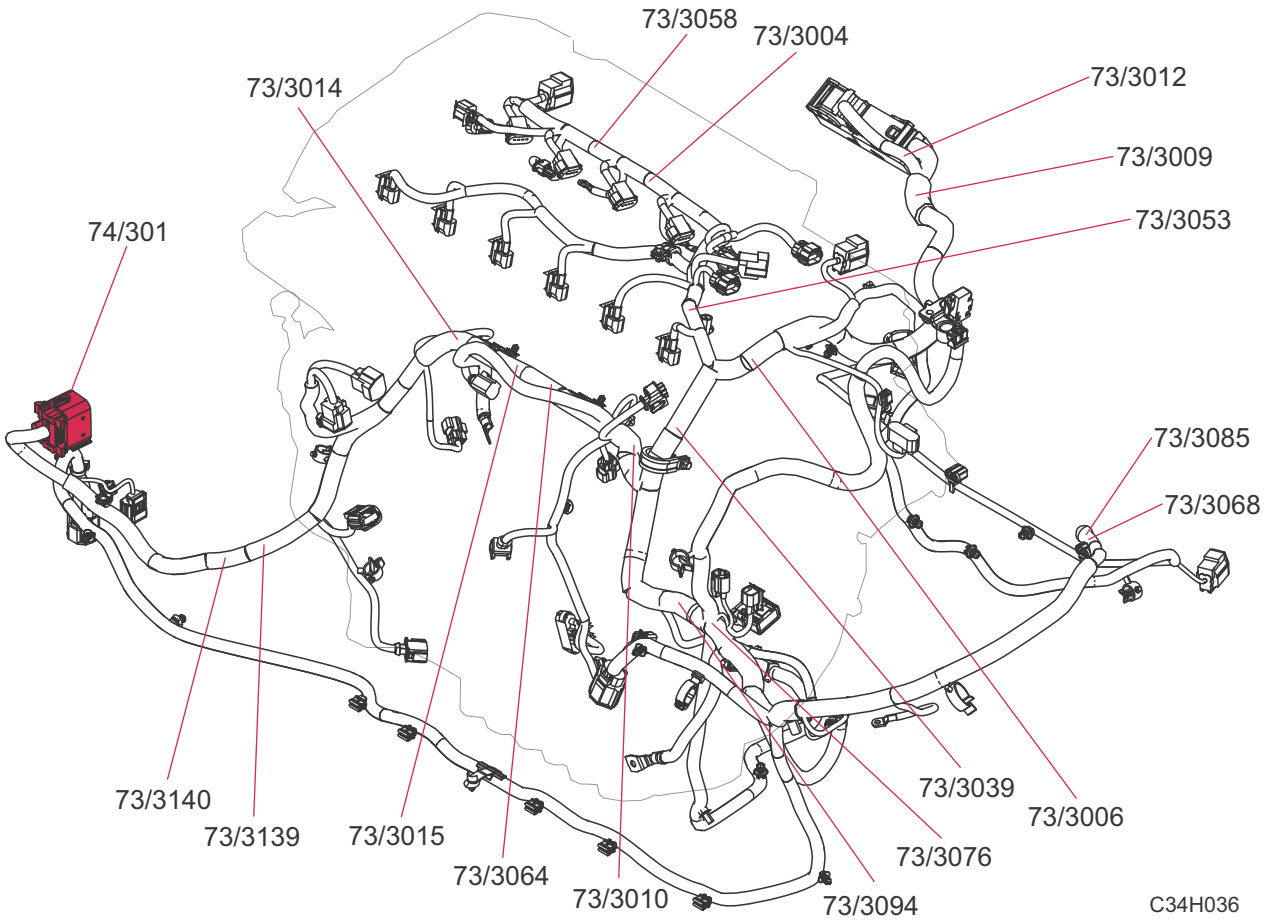

Cable harness routing in vehicle
Engine harness, 6-Cyl. 3.2L PZEV

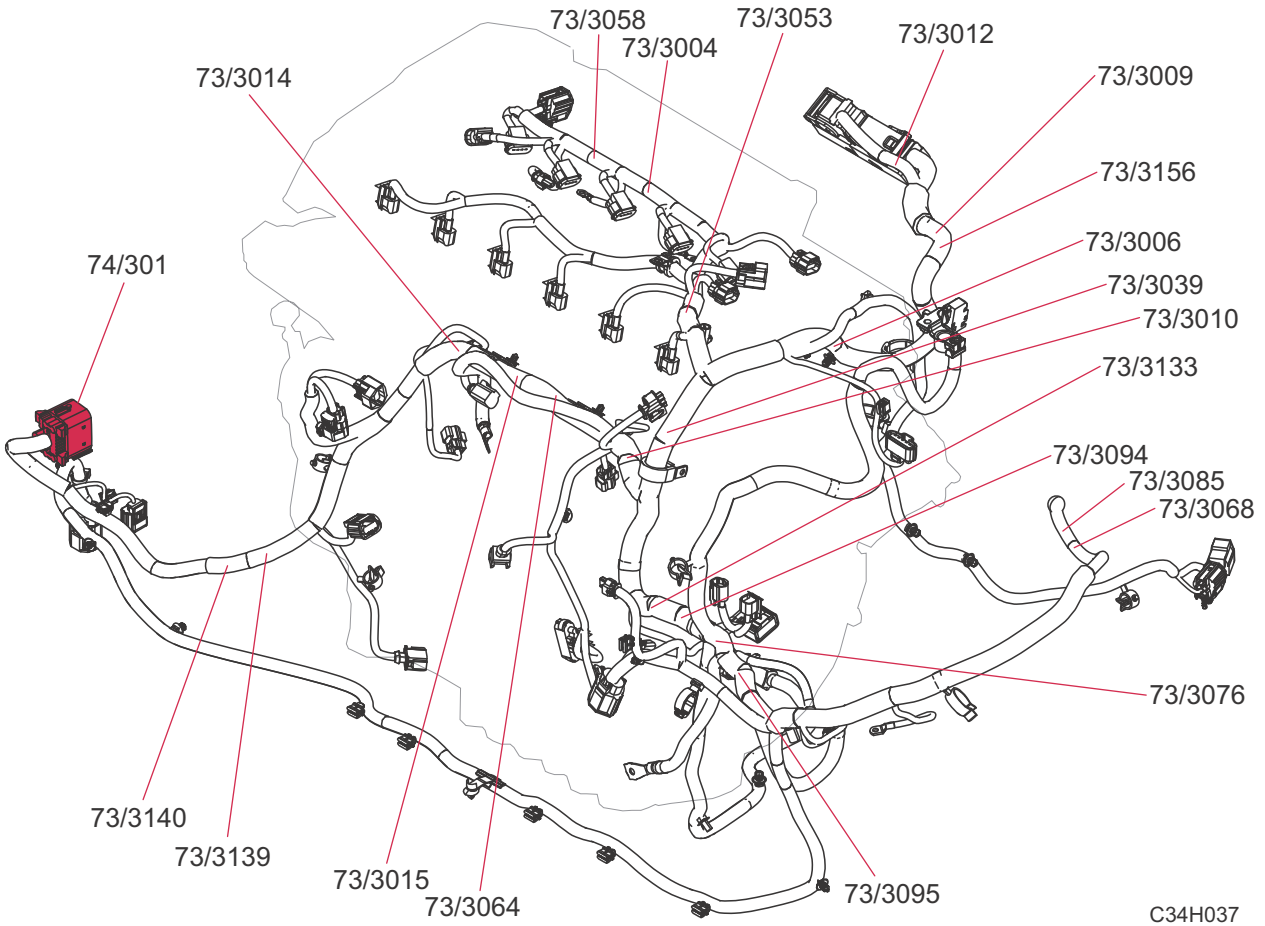

Cable harness routing in vehicle
Engine compartment harness, LHD

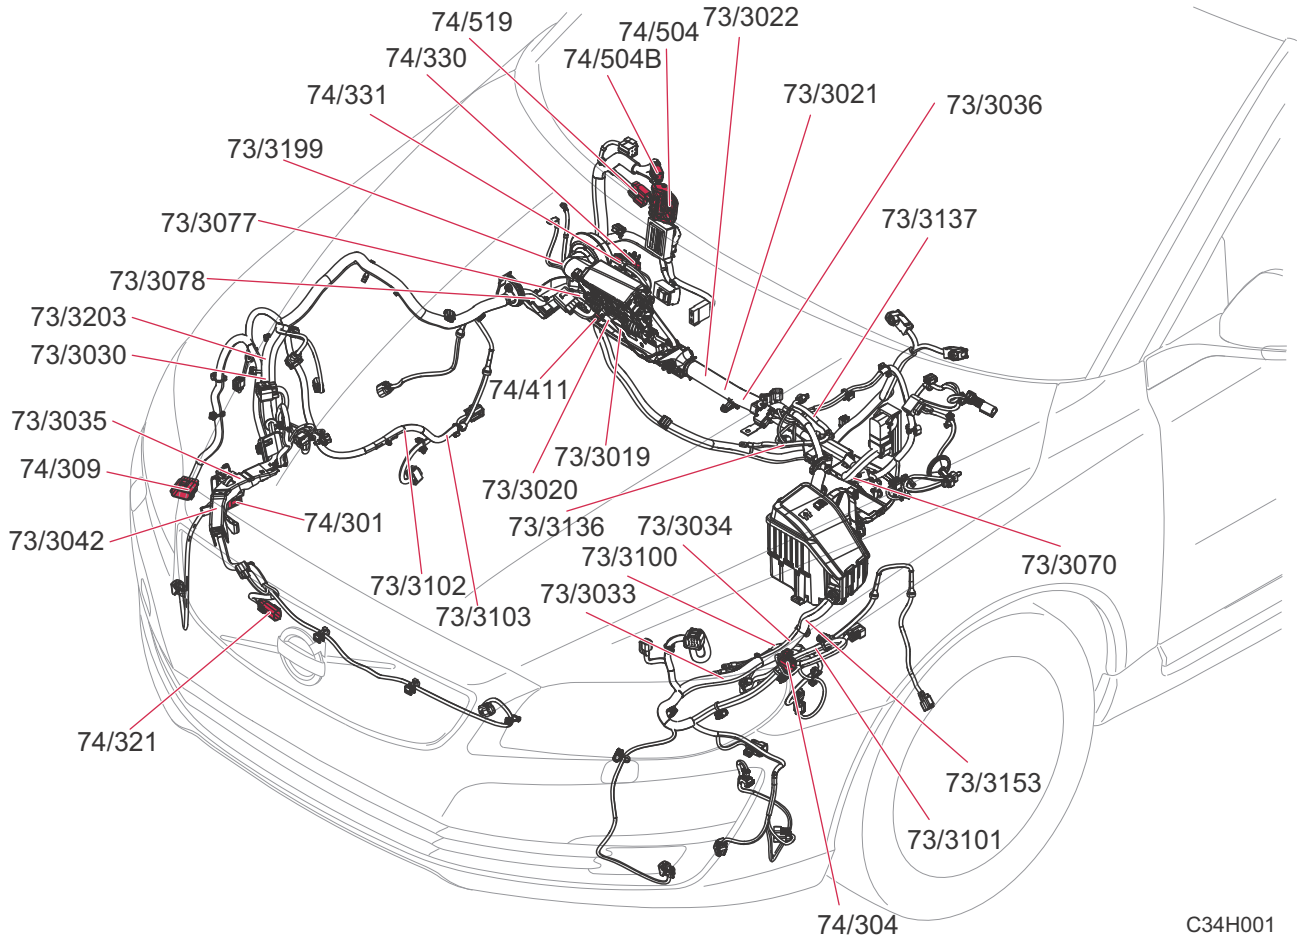

Cable harness routing in vehicle
Engine compartment harness, RHD

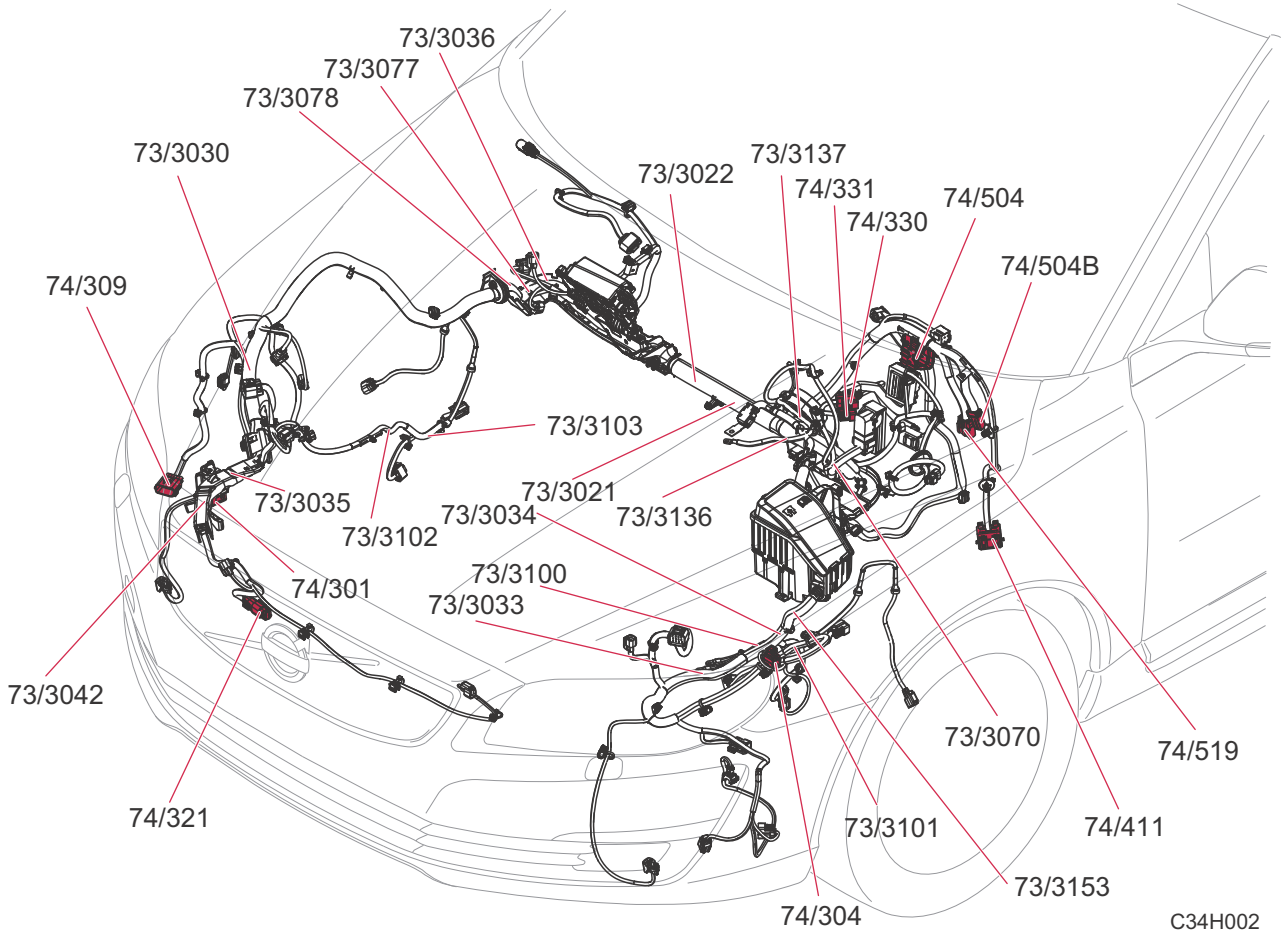

Cable harness routing in vehicle
Dashboard harness, LHD

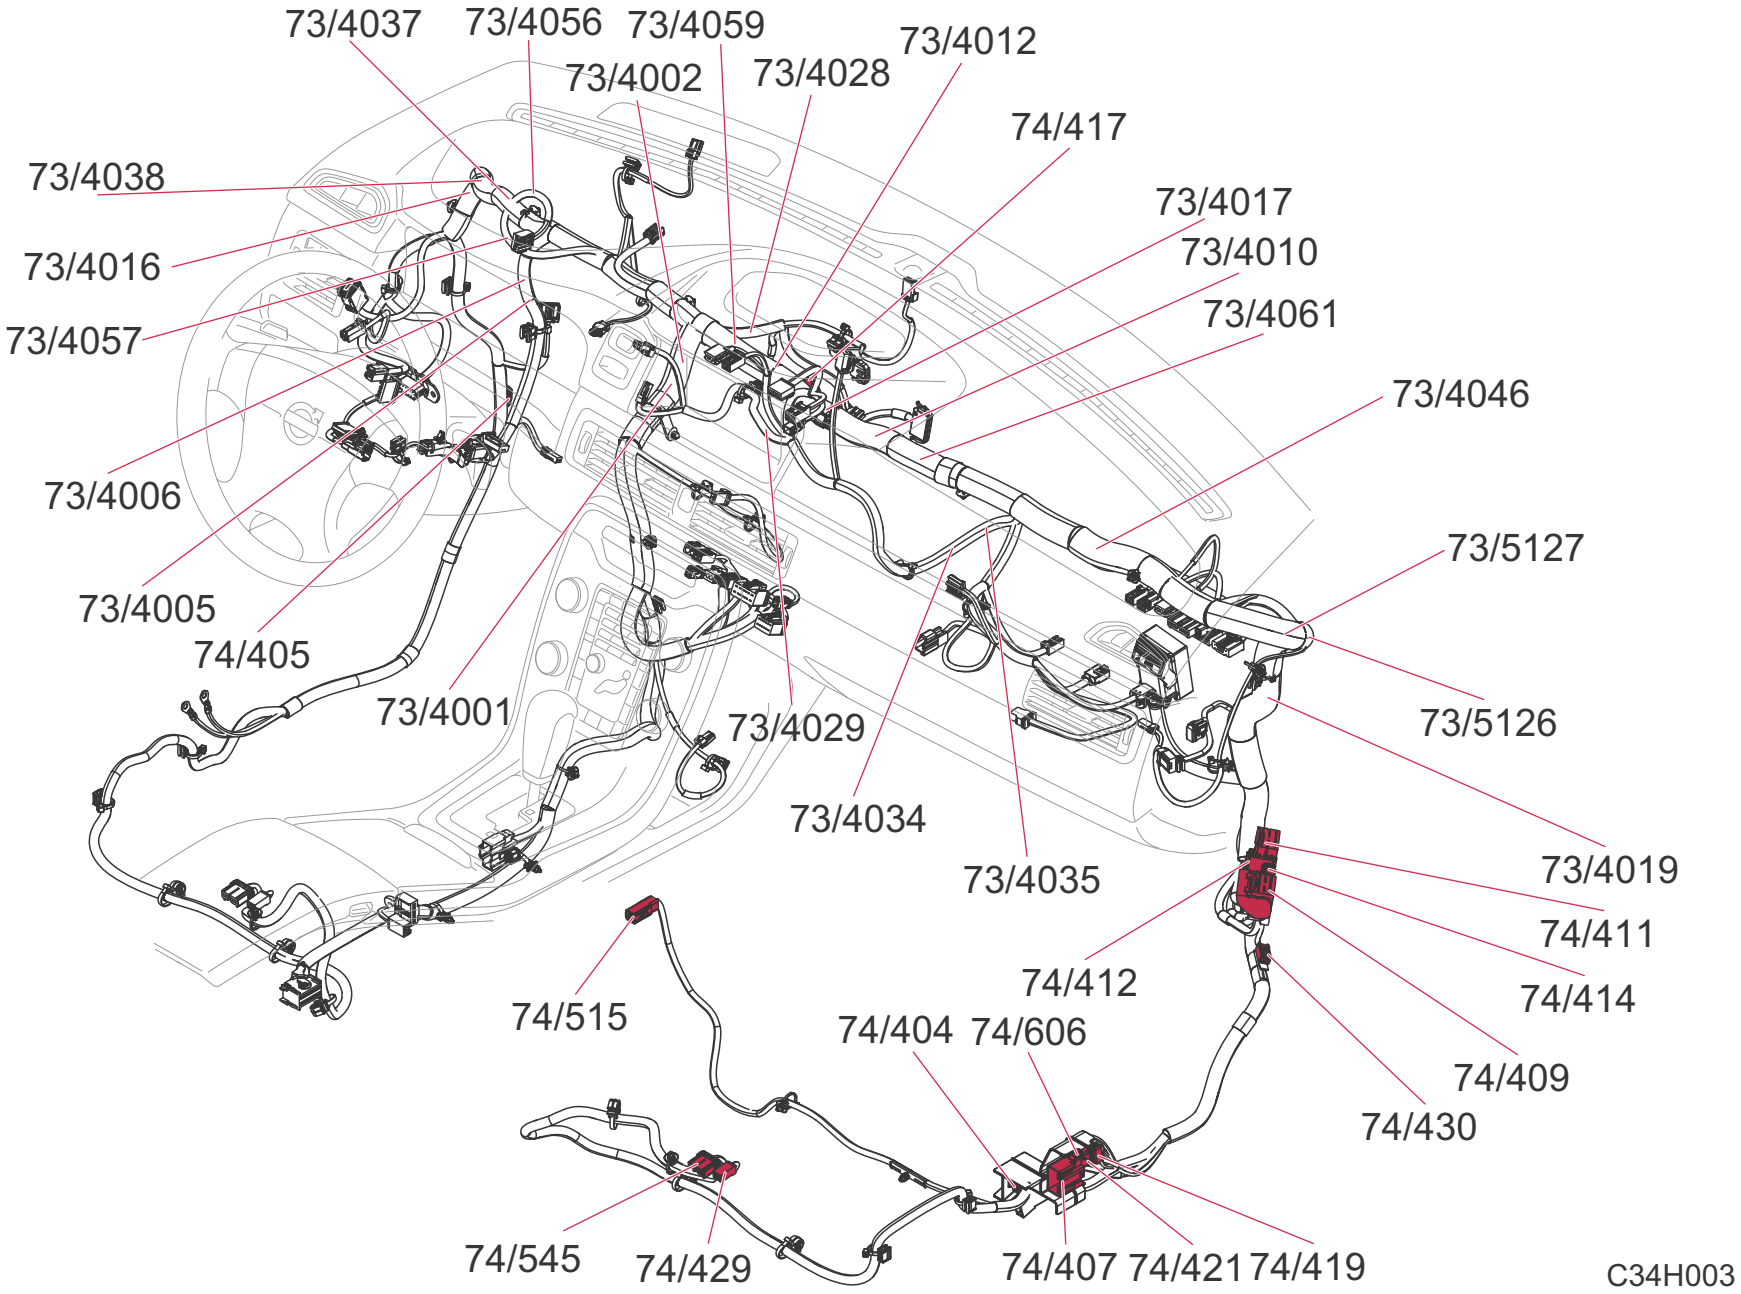

Cable harness routing in vehicle
Dashboard harness, RHD

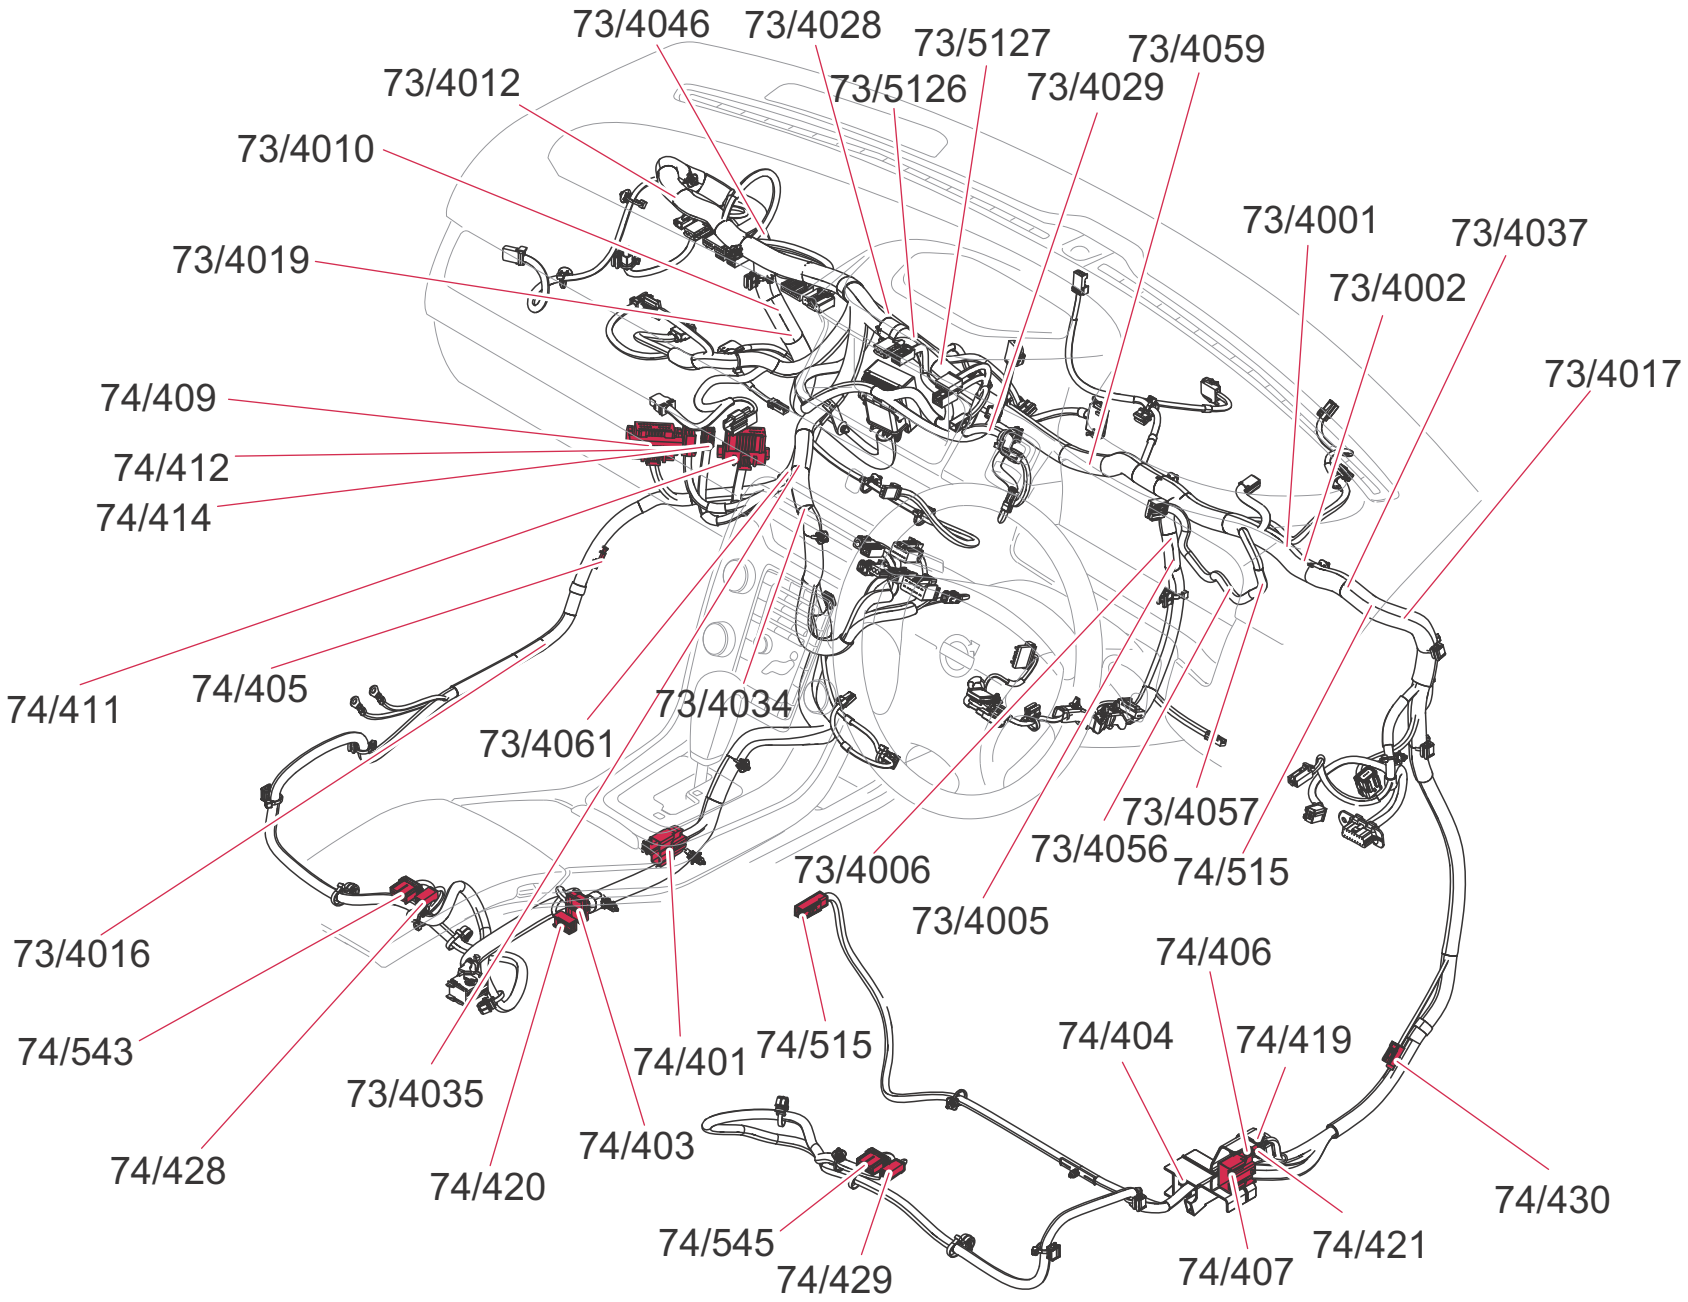

Cable harness routing in vehicle
Floor harness, S80 LHD

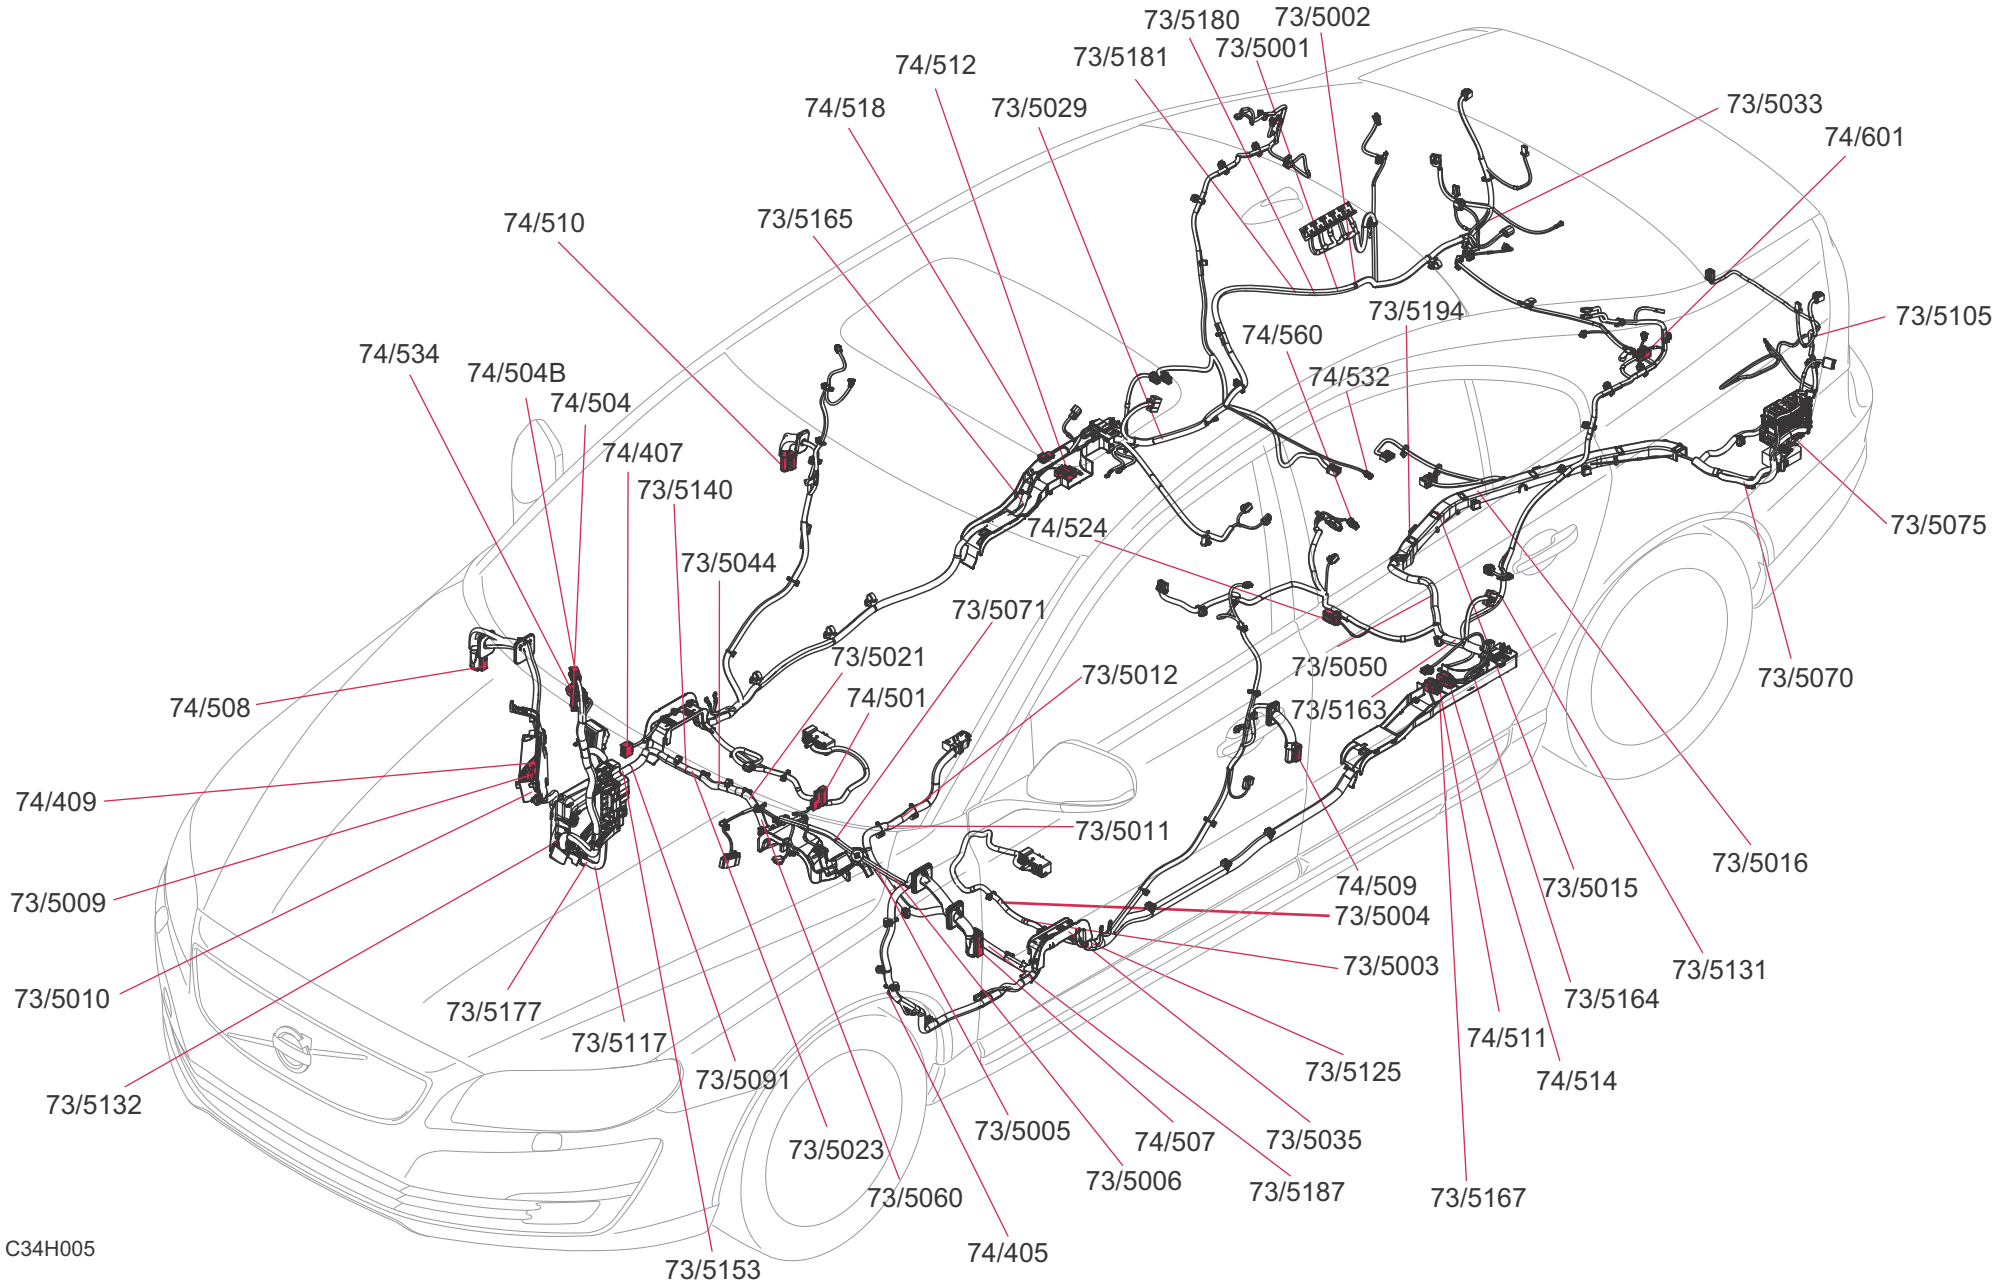

Cable harness routing in vehicle
Floor harness, S80 RHD

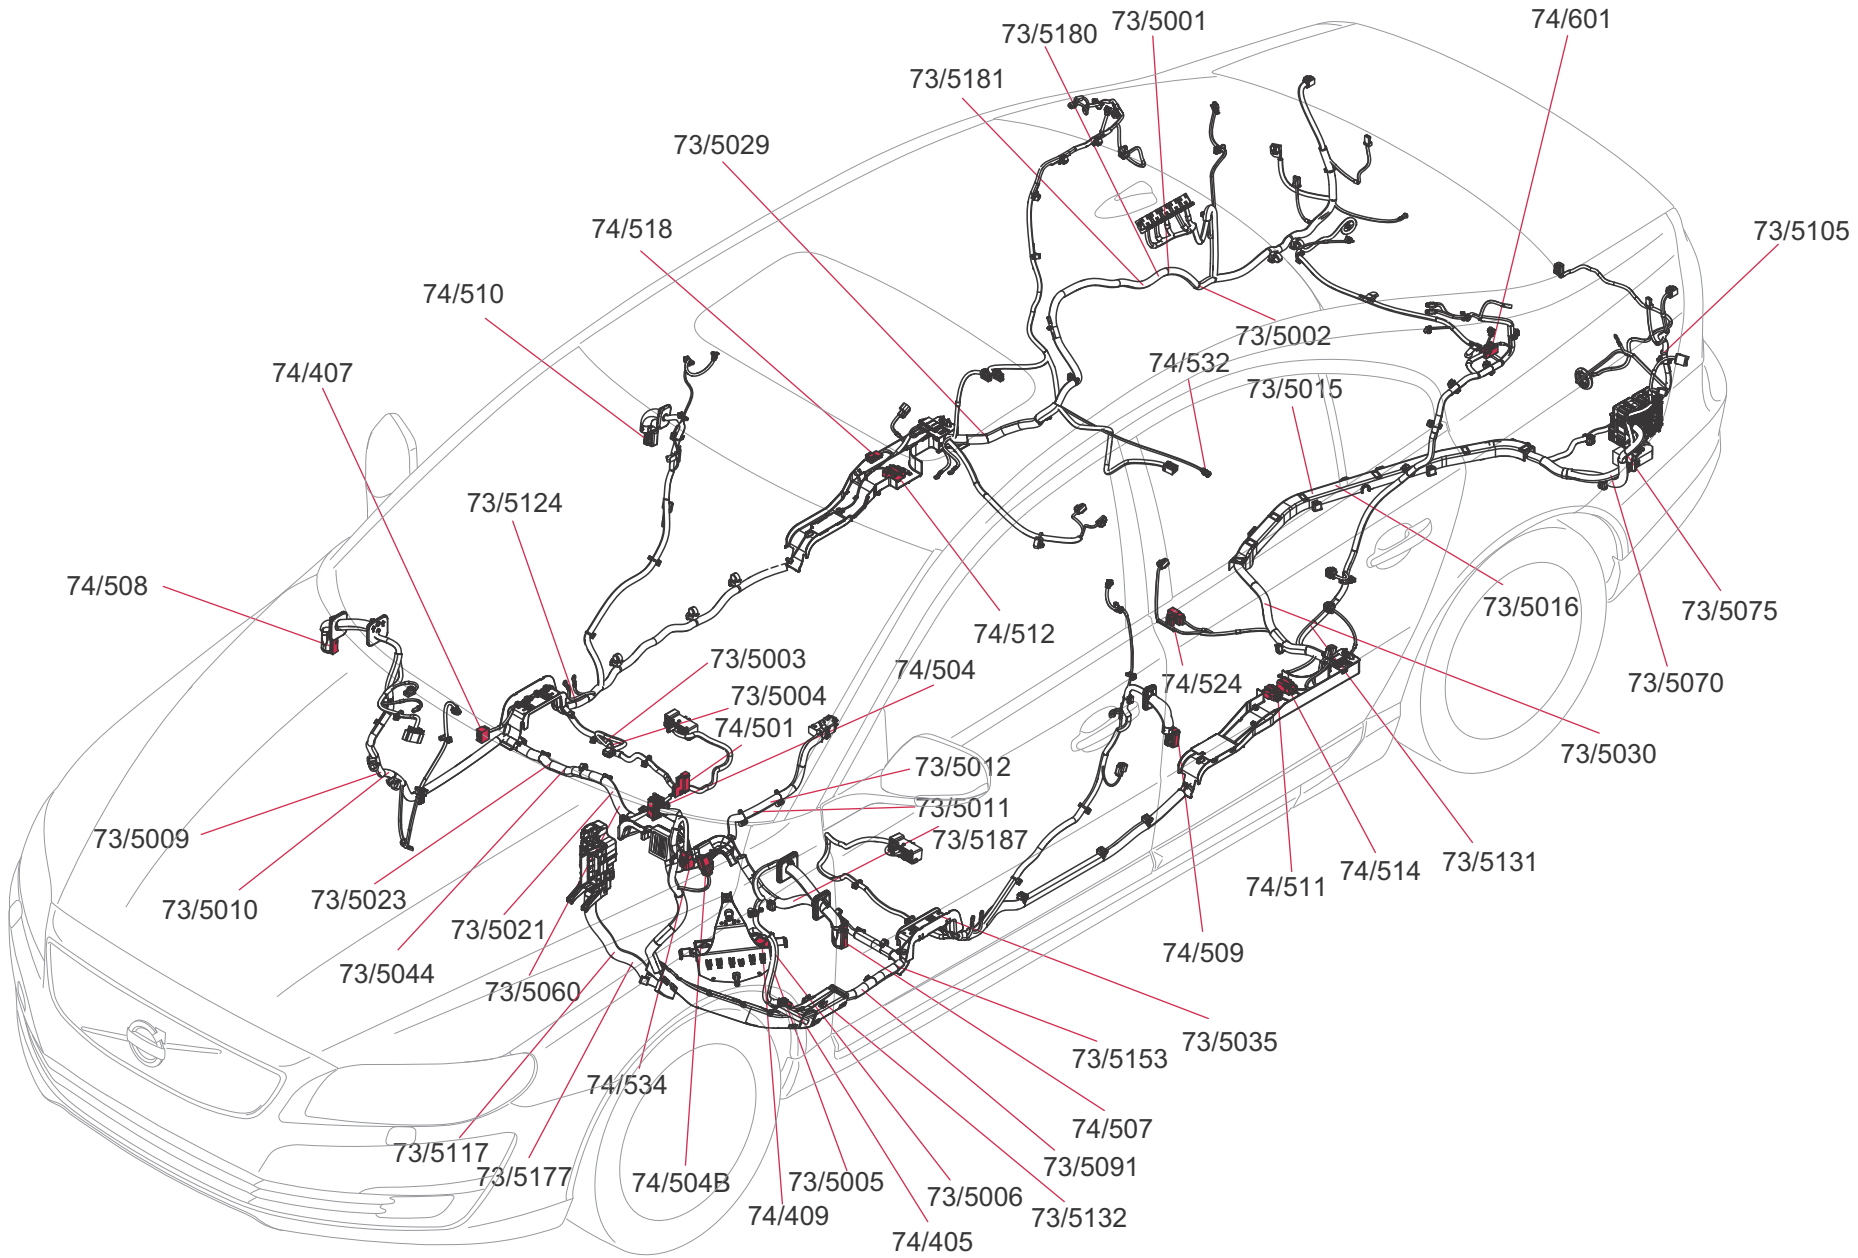

Cable harness routing in vehicle
Floor harness, V70 LHD

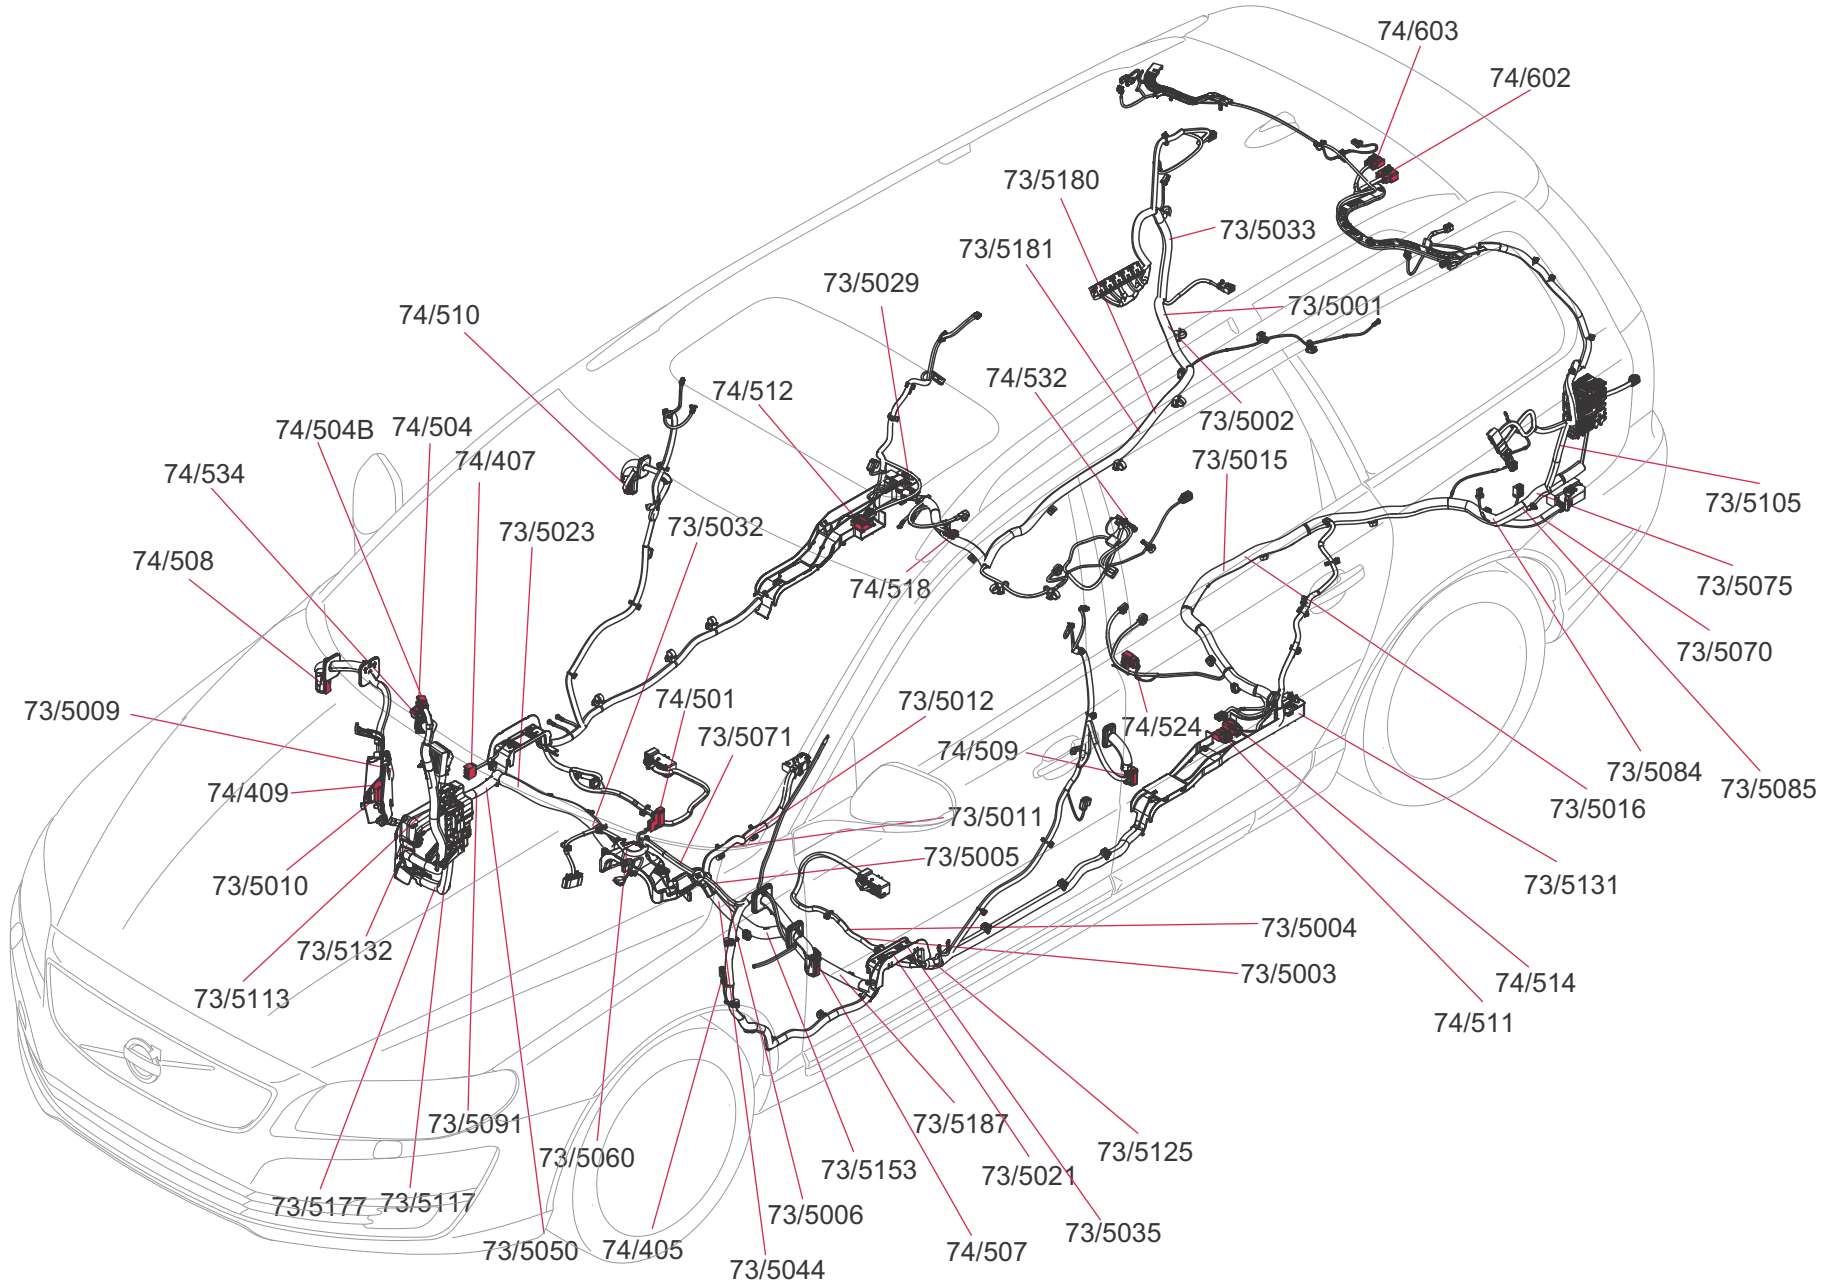

C34H007

Cable harness routing in vehicle
Floor harness, V70 RHD

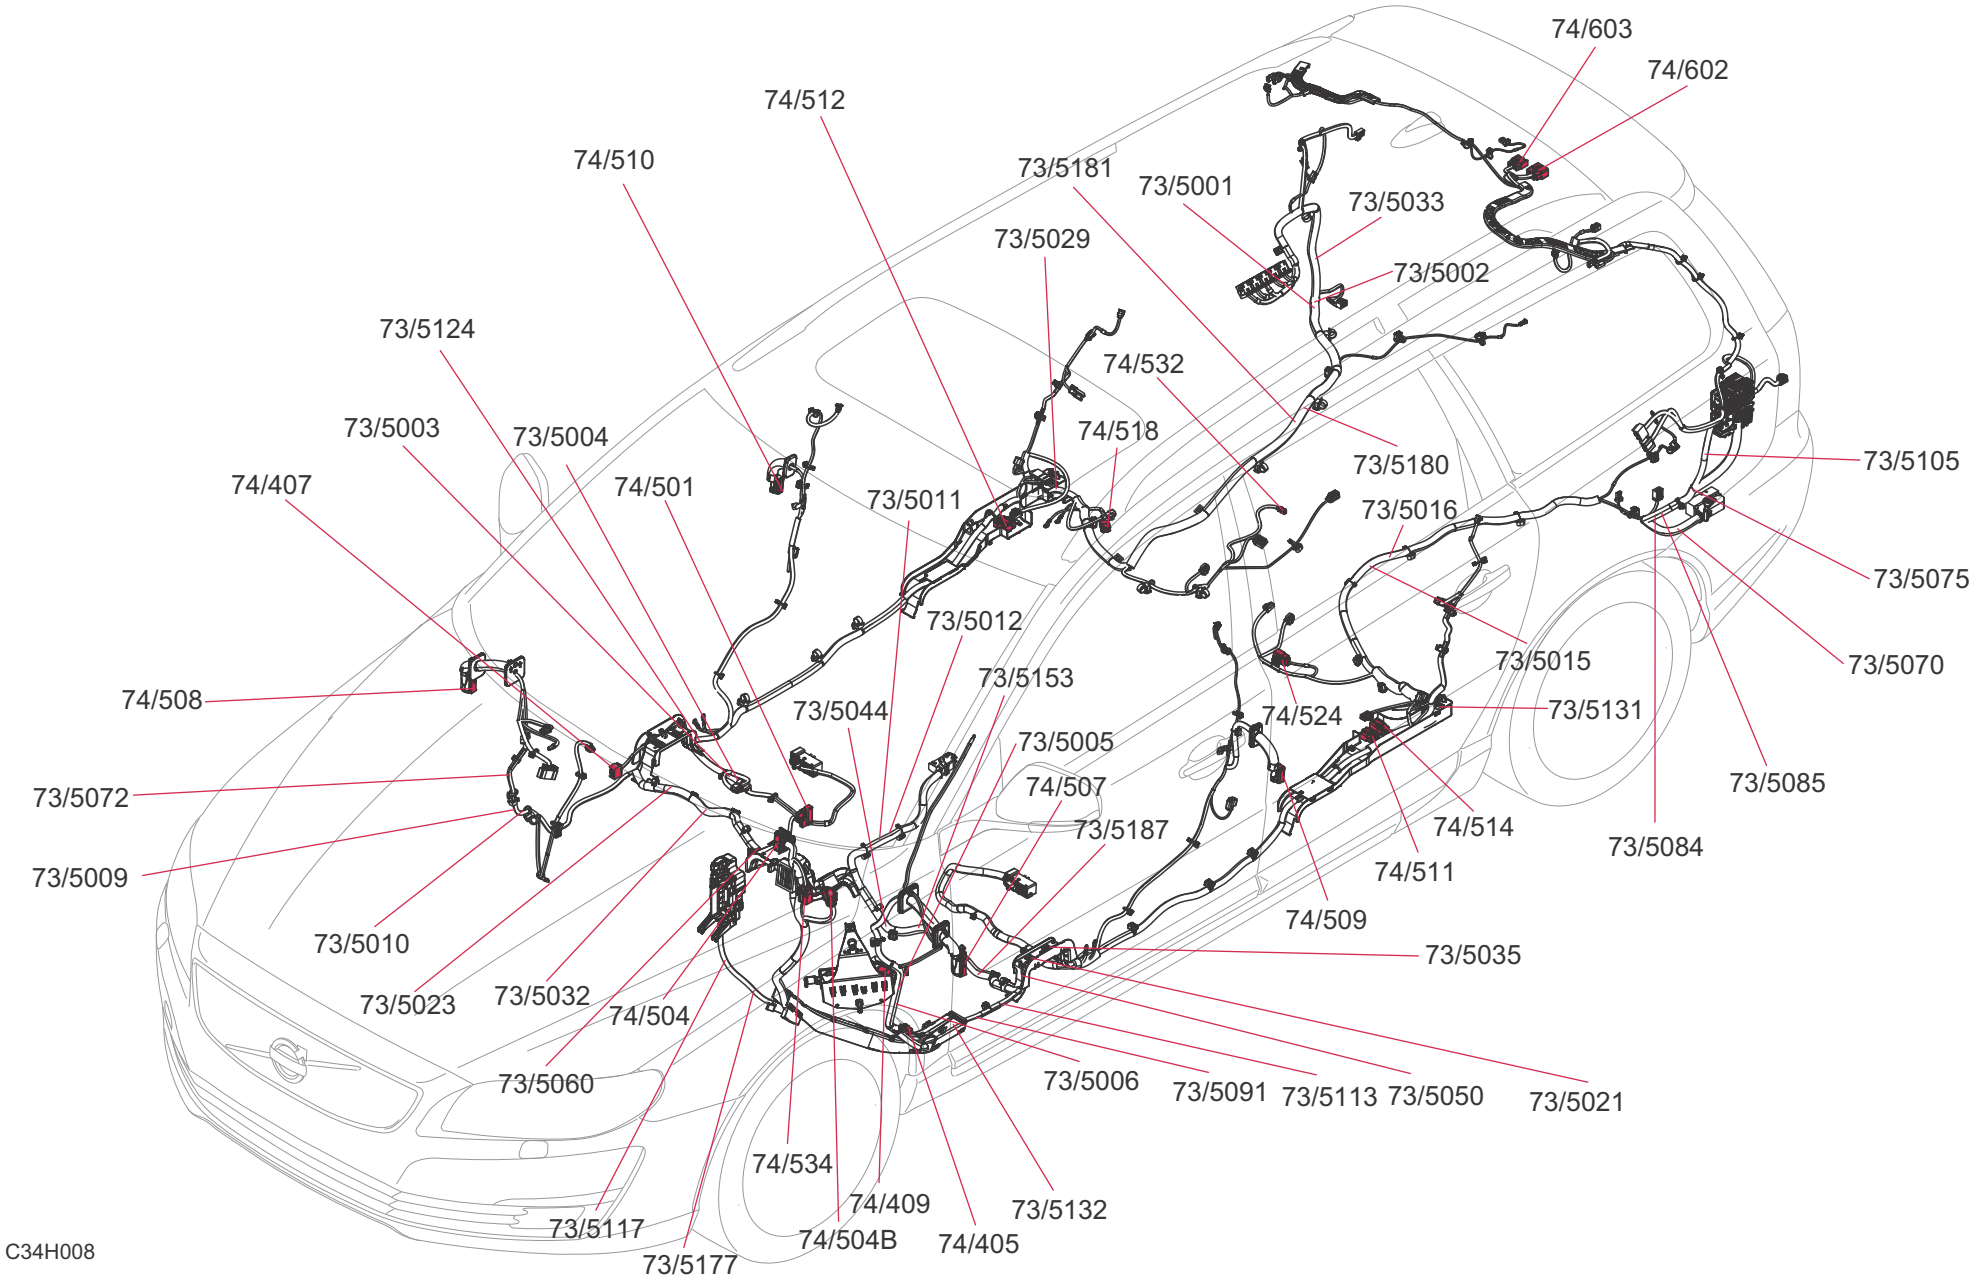

Cable harness routing in vehicle
Infotainment harness, S80 LHD

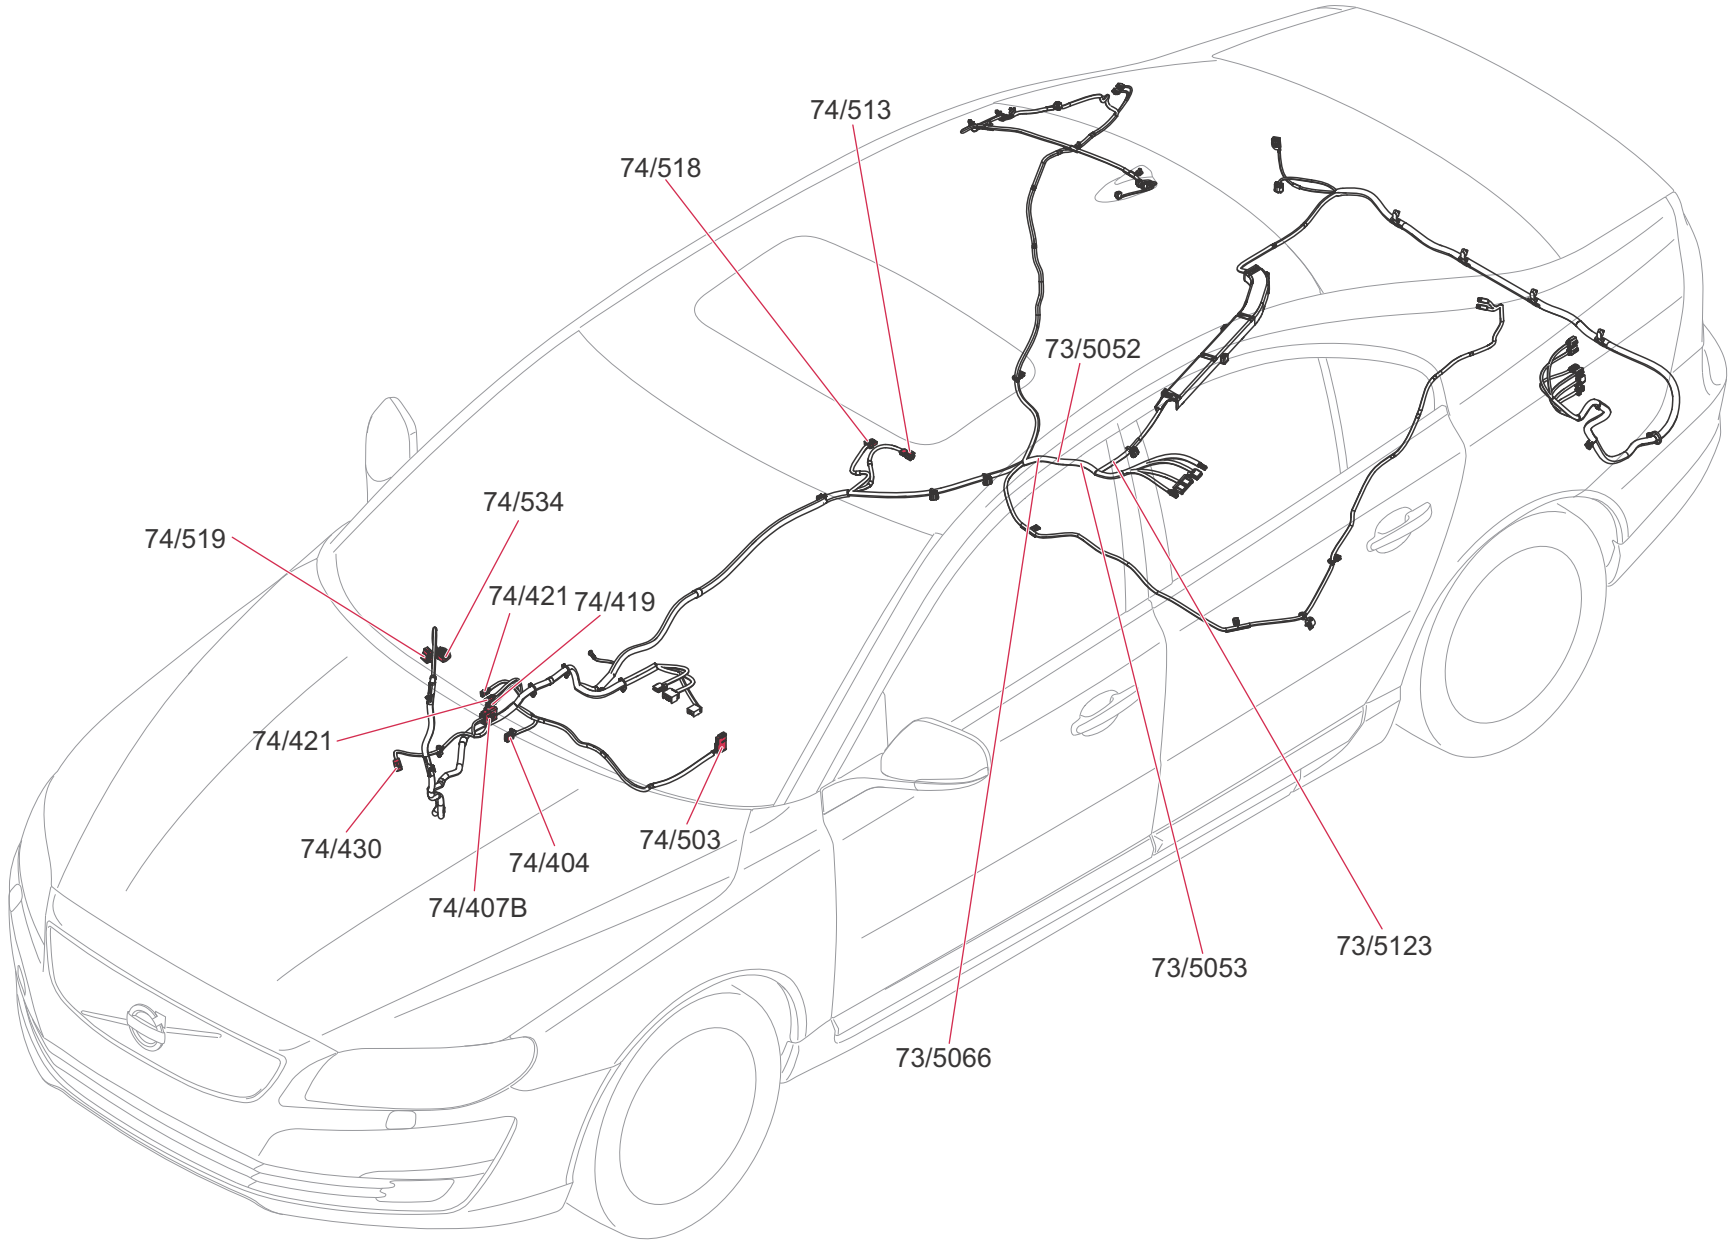

C34H009

Cable harness routing in vehicle
Infotainment harness, S80 RHD

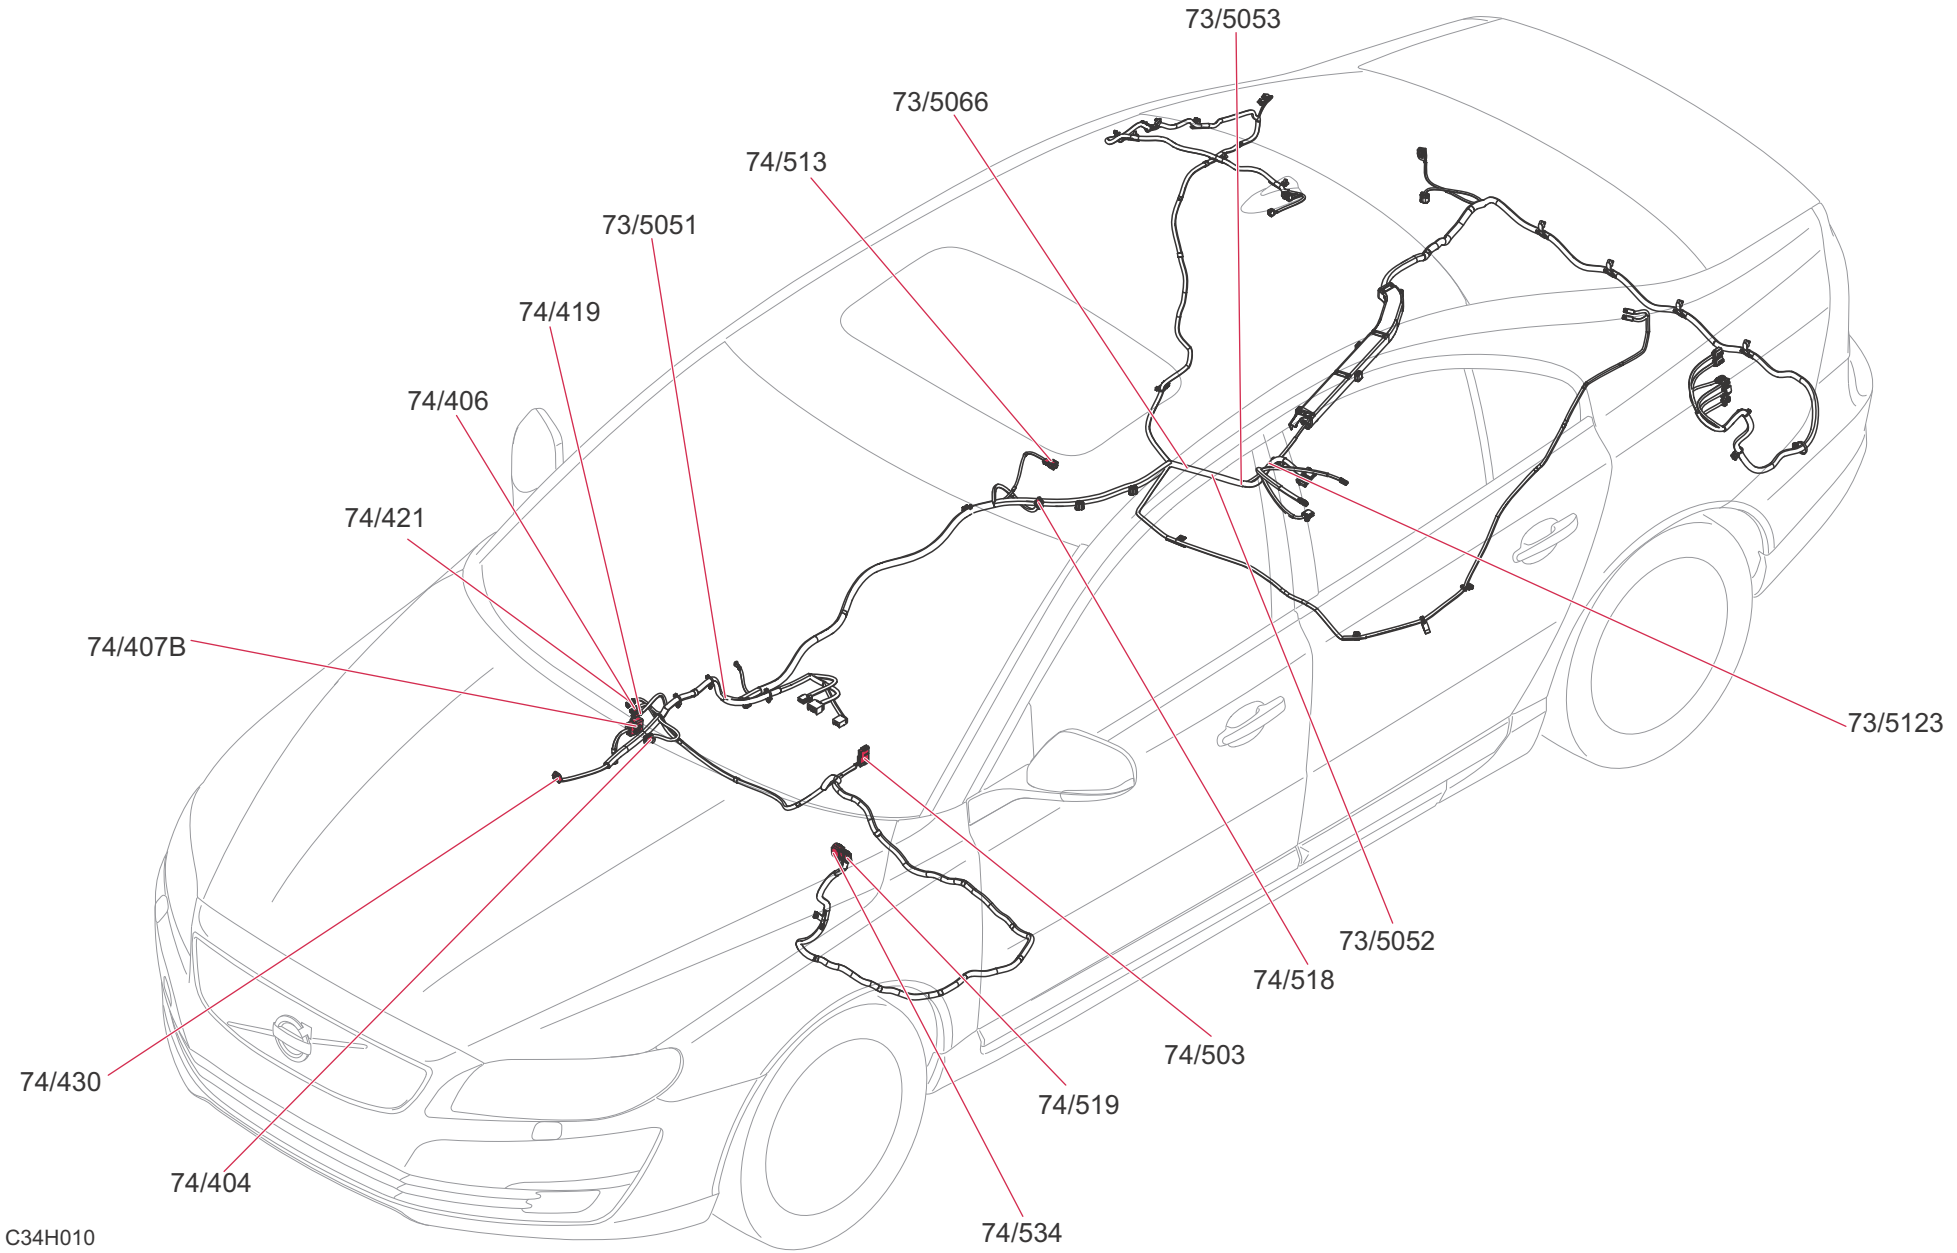

Cable harness routing in vehicle
Infotainment harness, V70 LHD

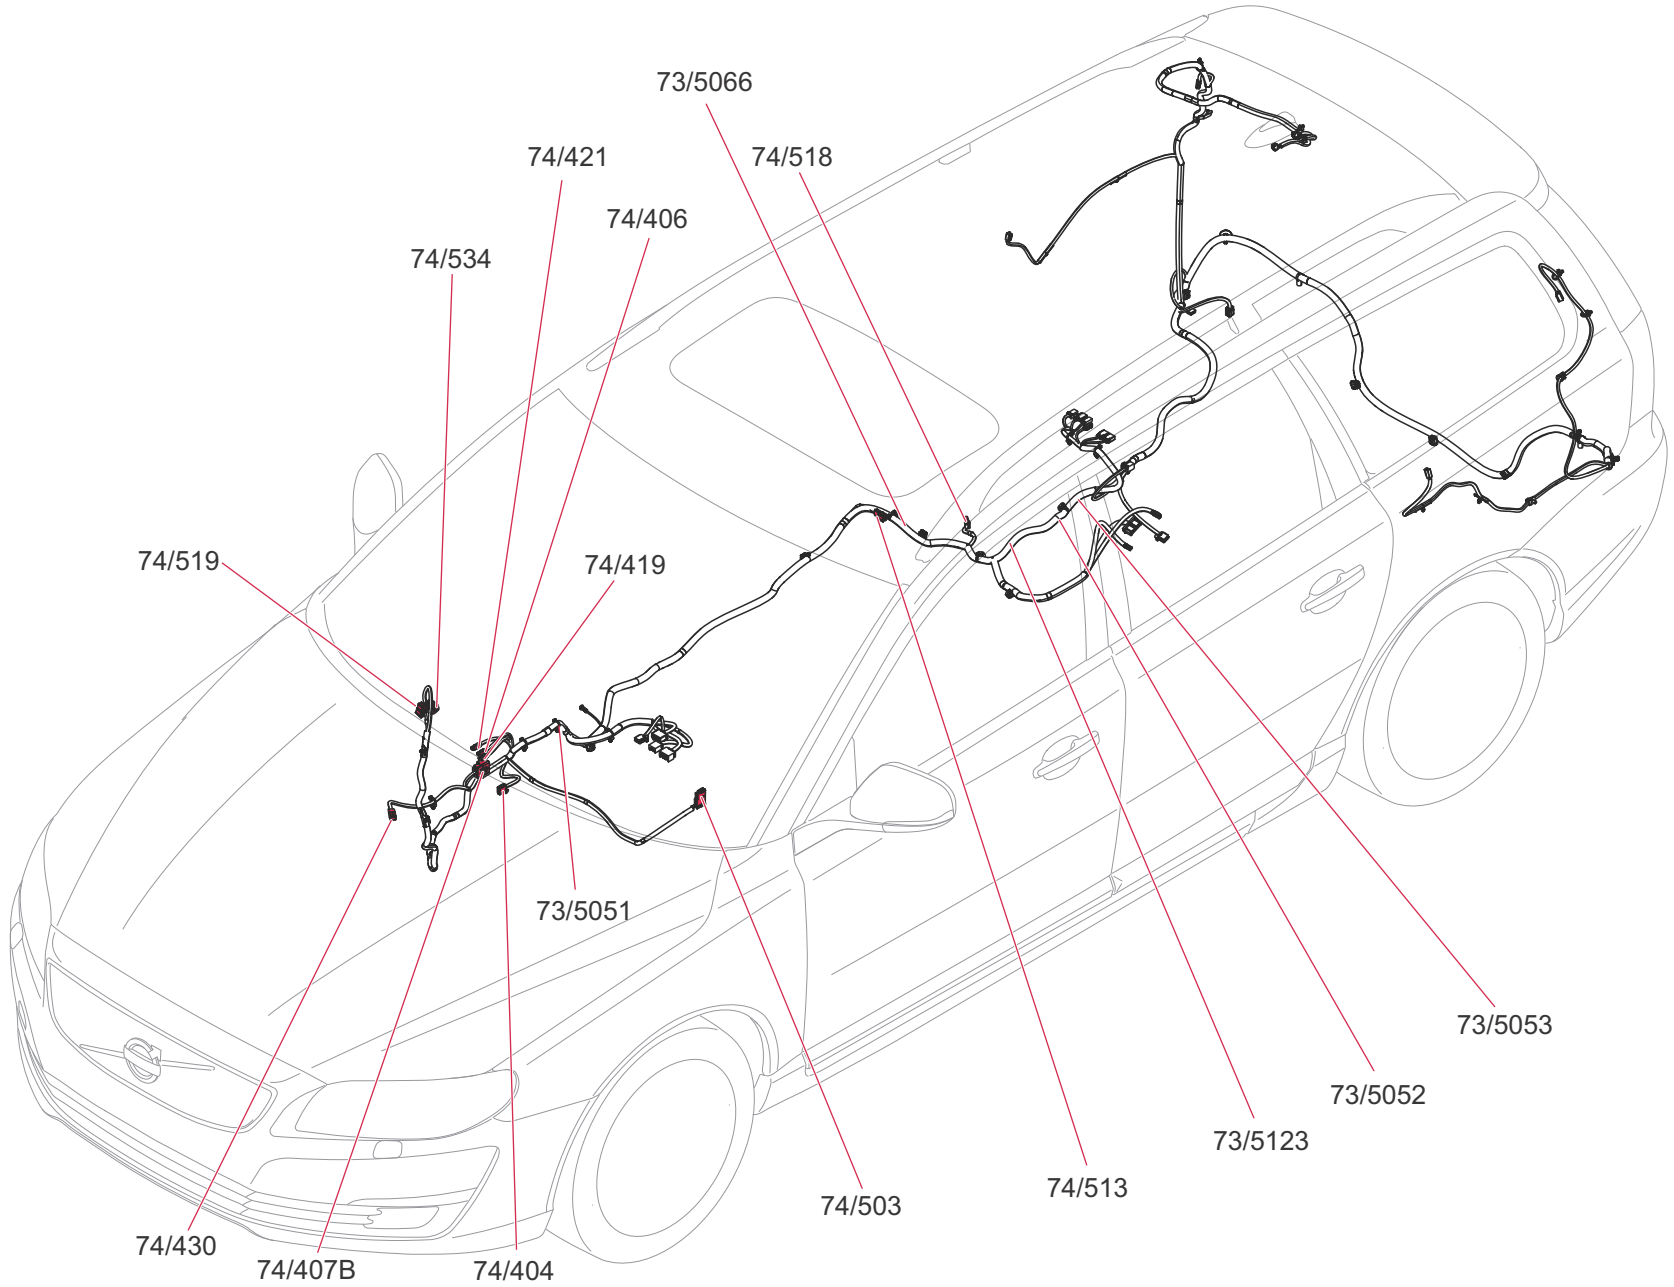

Cable harness routing in vehicle
Infotainment harness, V70 RHD

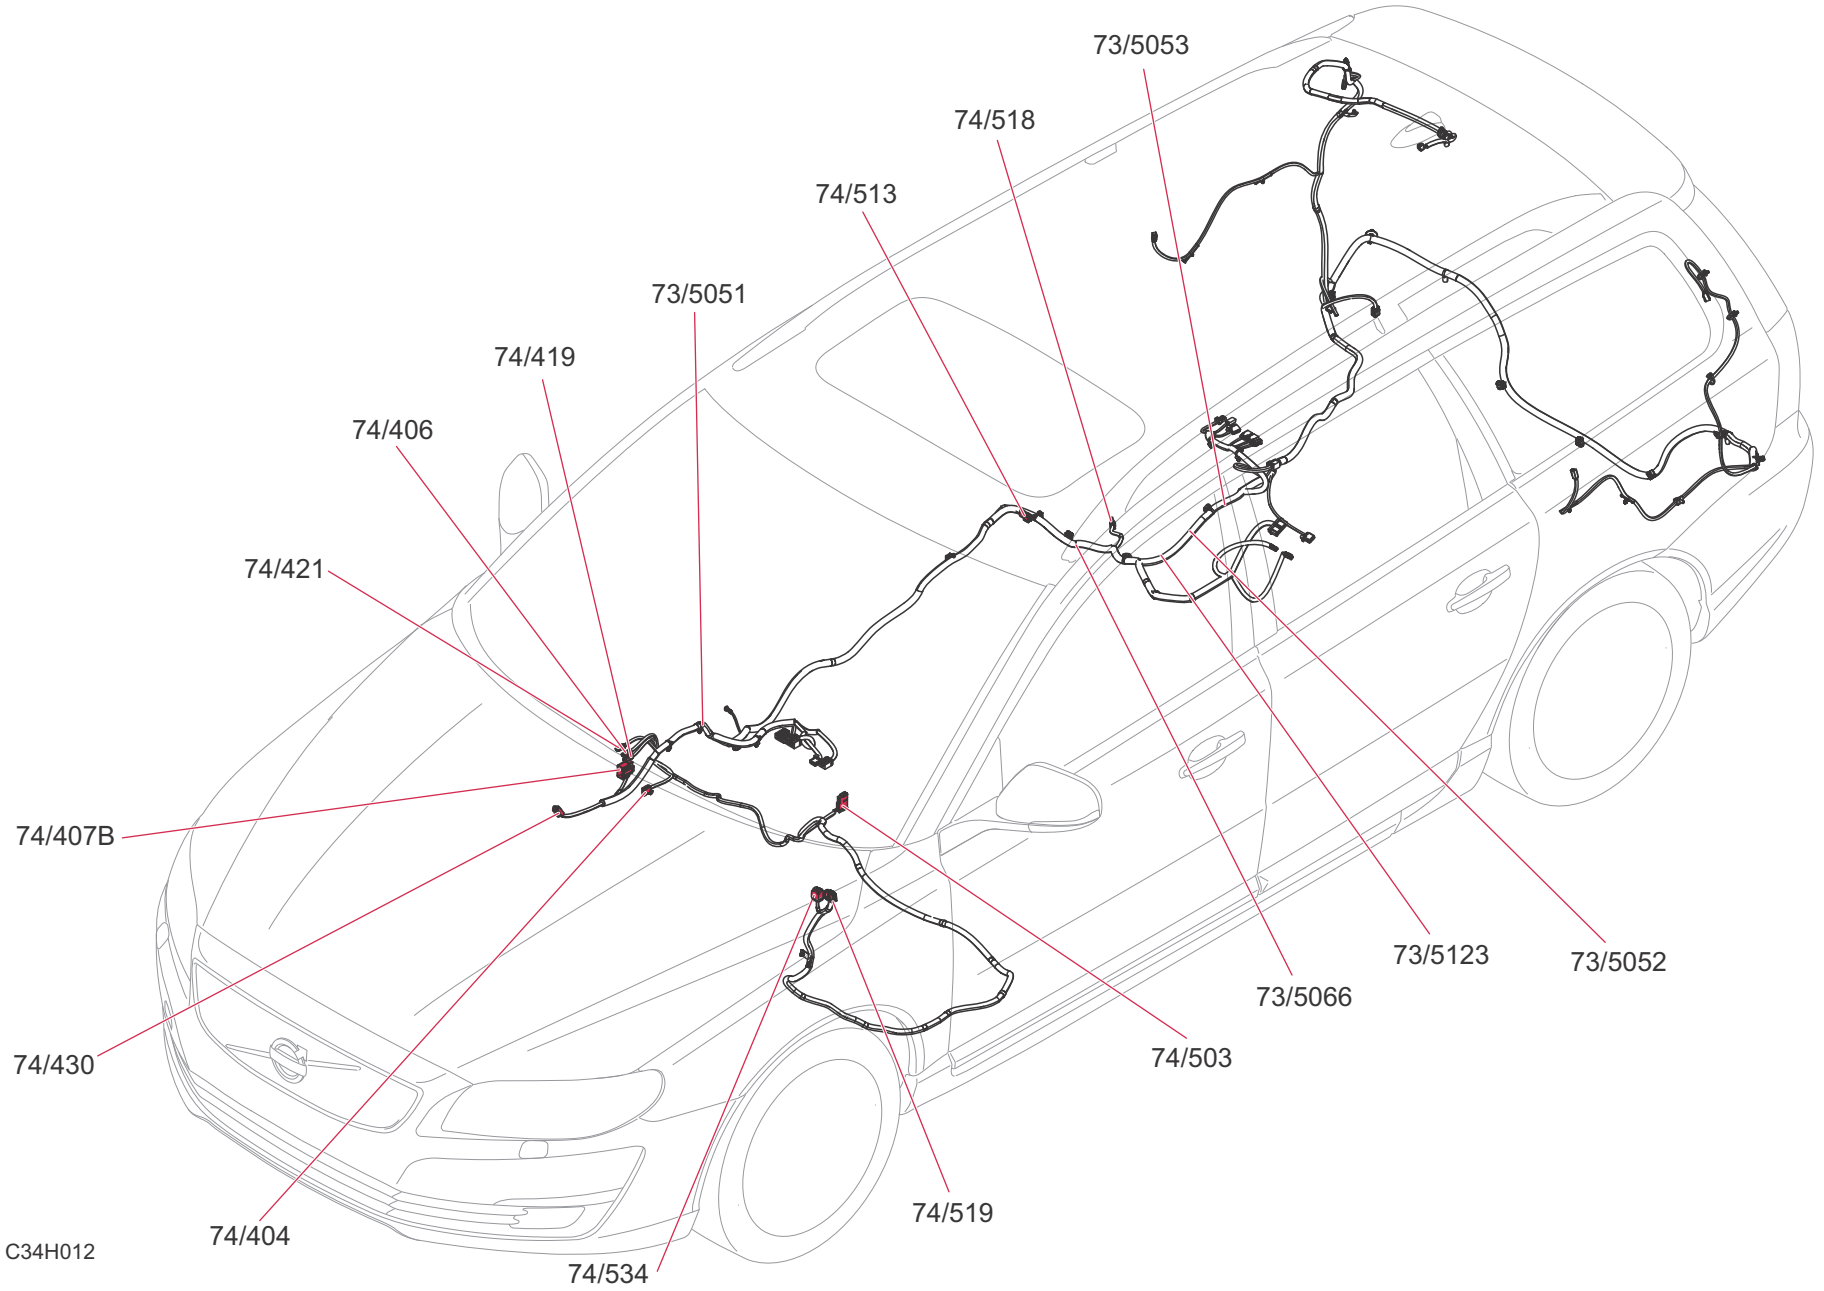

Cable harness routing in vehicle
Roof harness, LHD

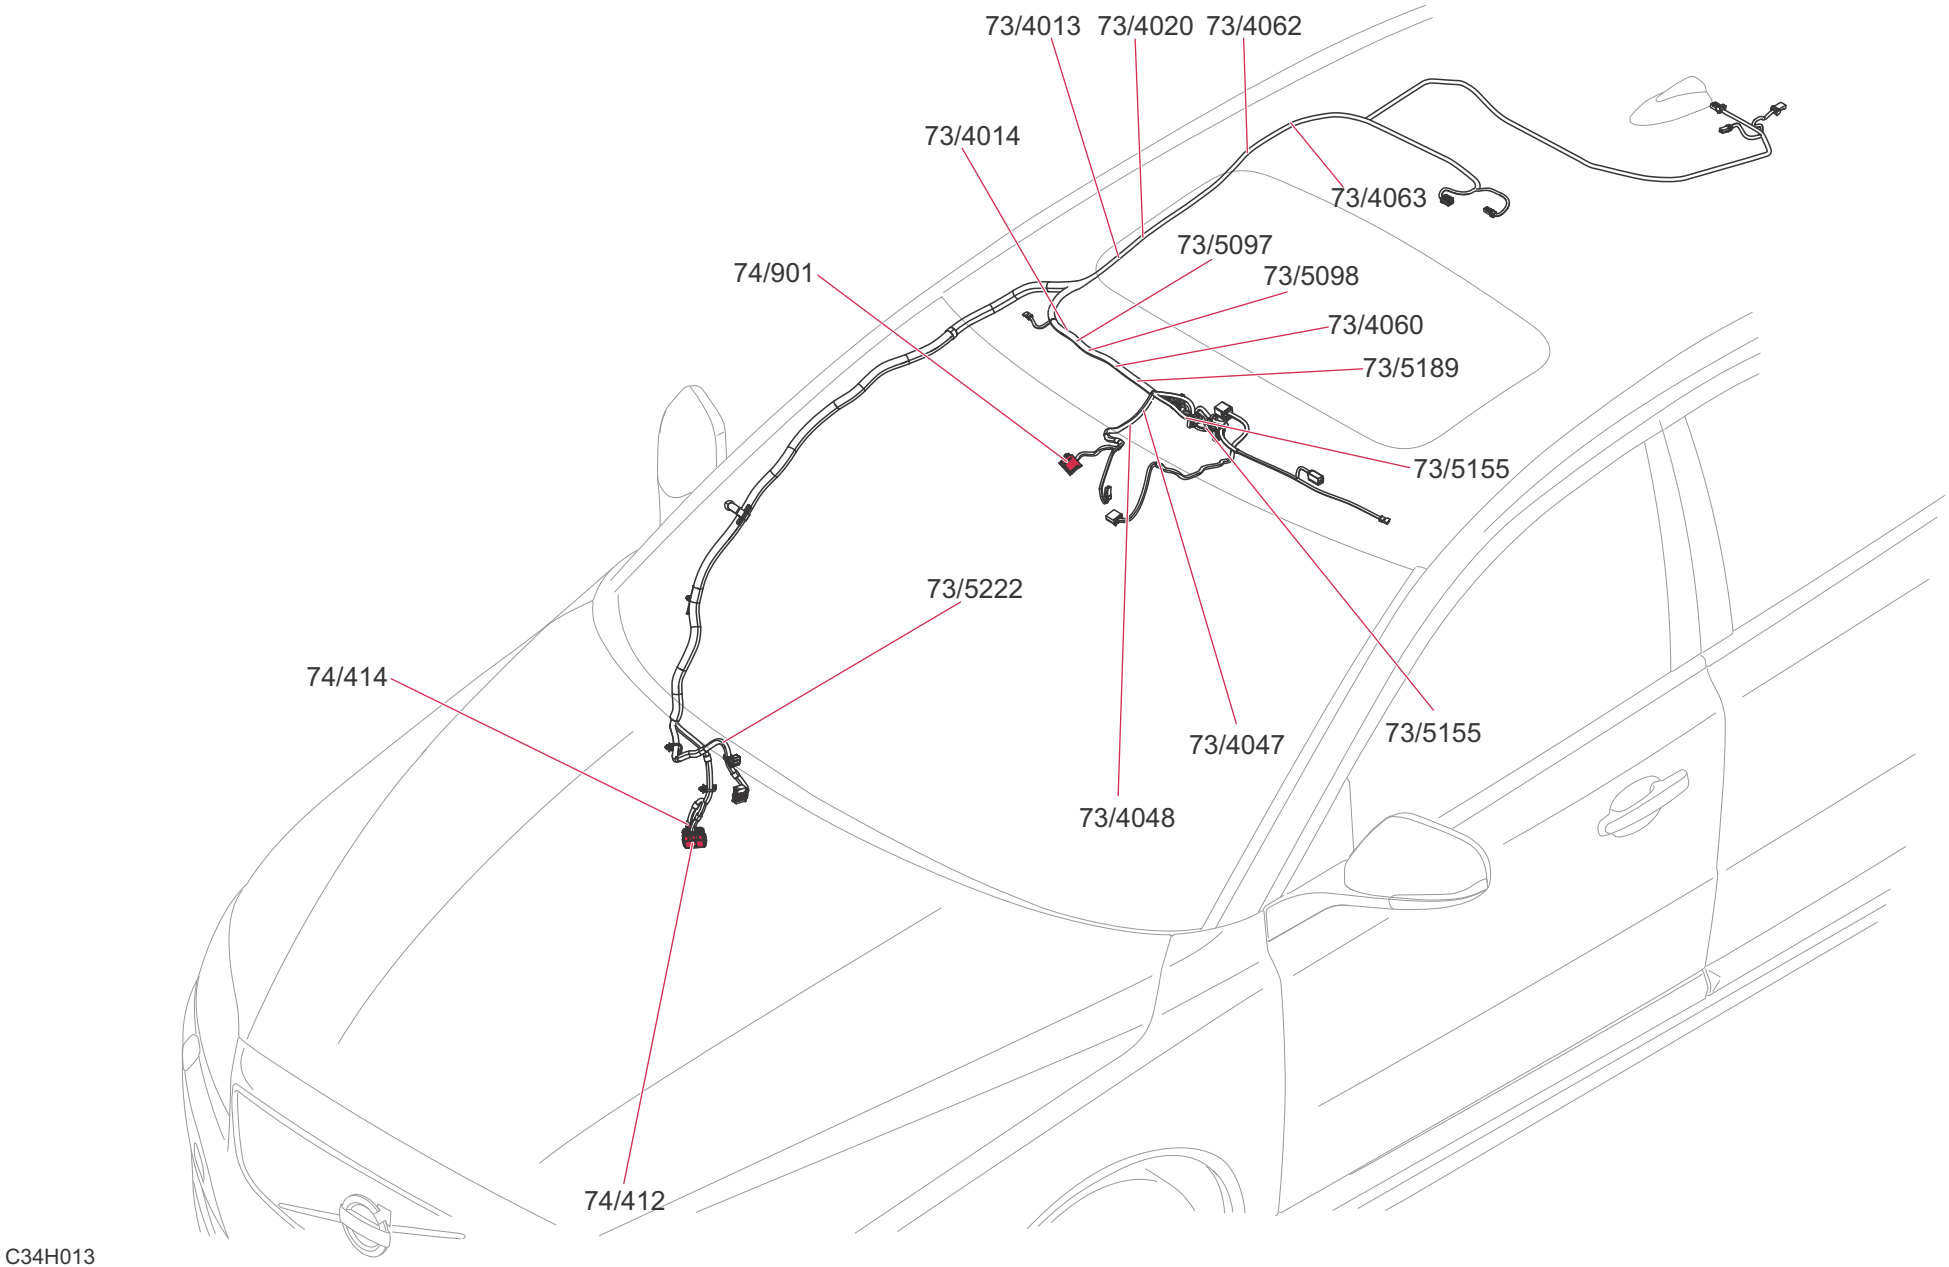

Cable harness routing in vehicle
Roof harness, RHD

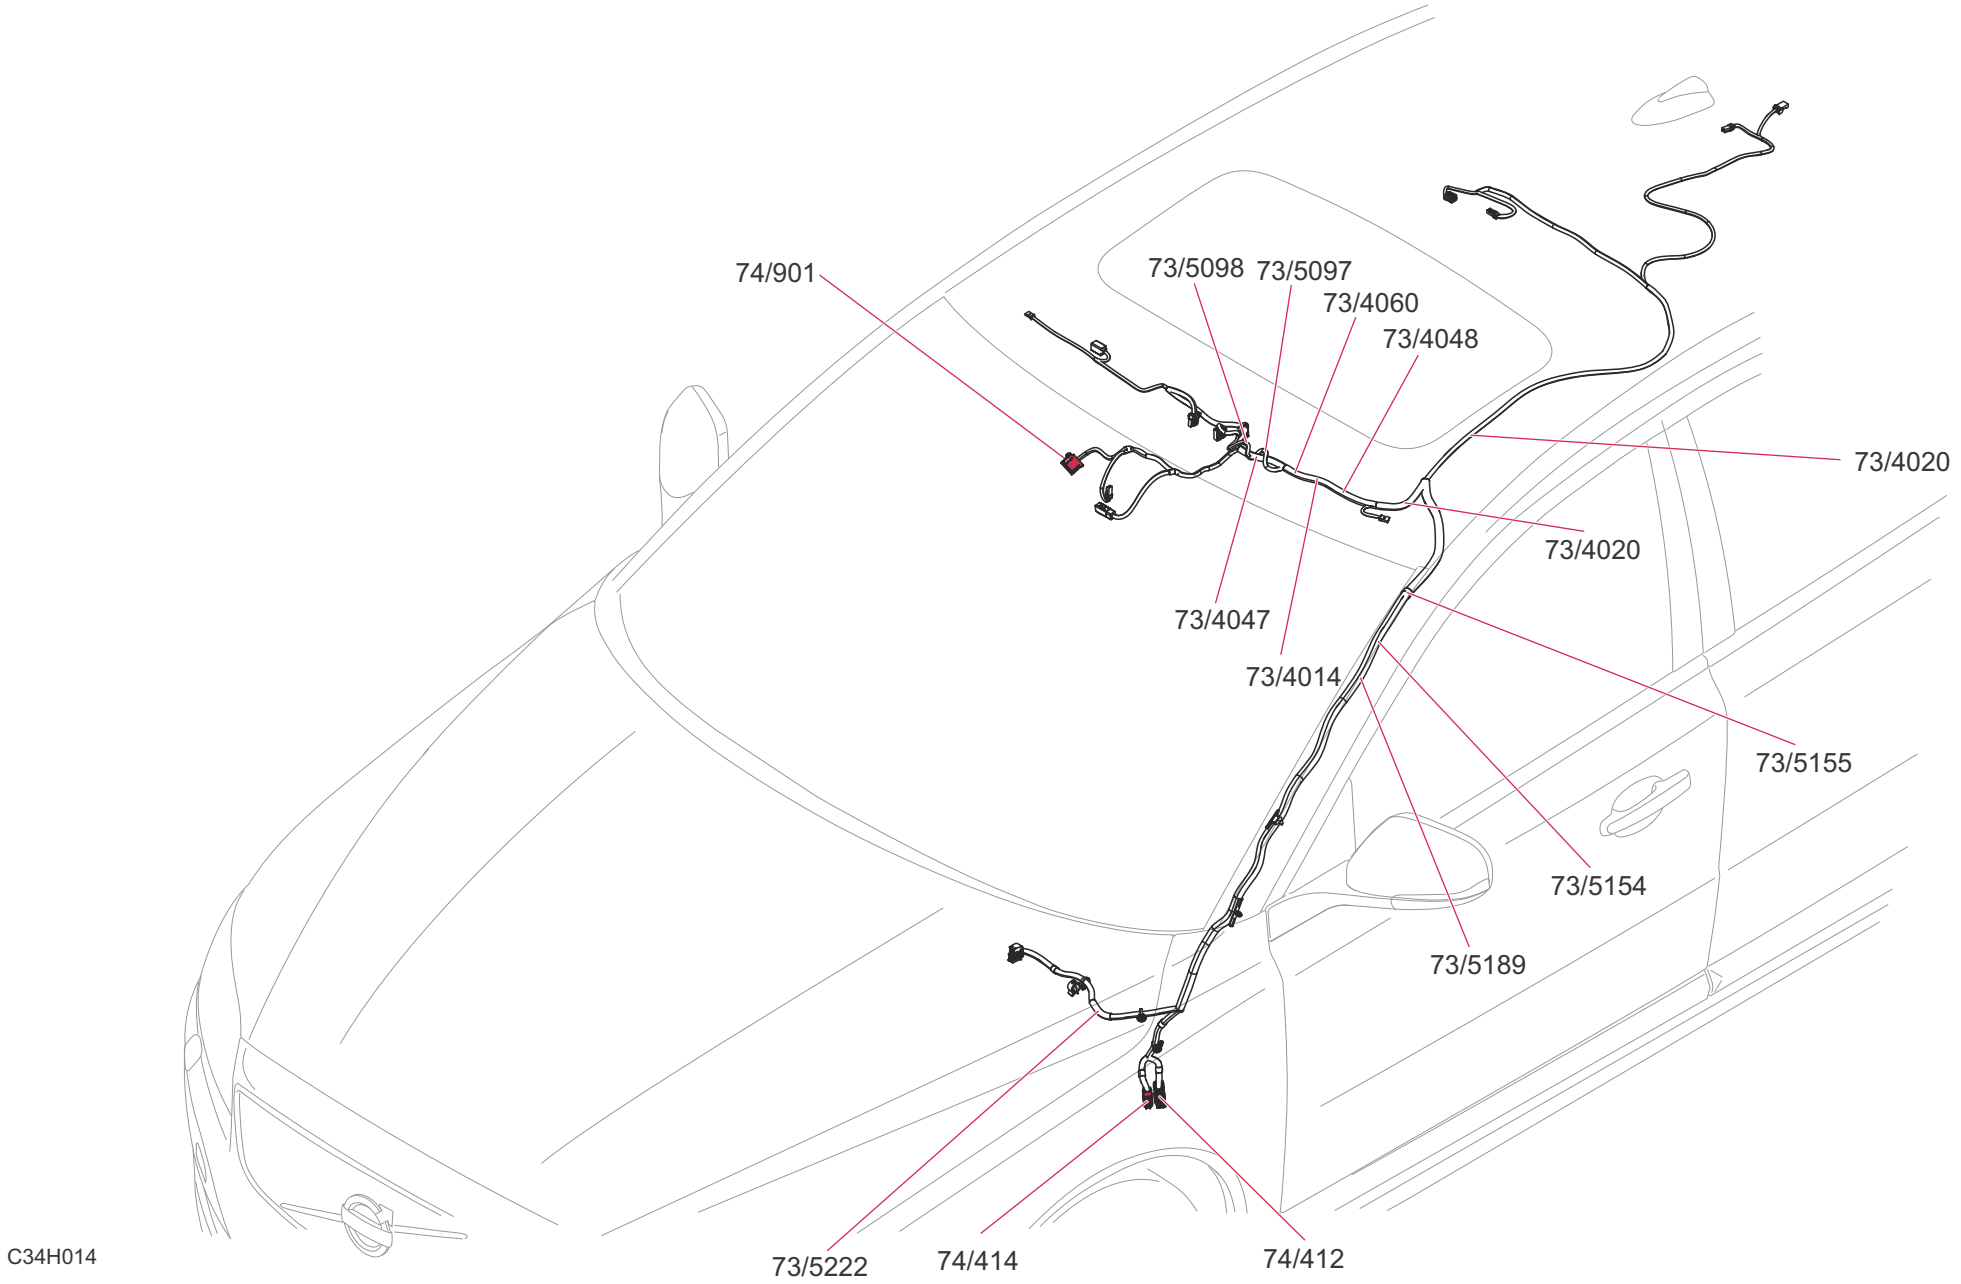

Cable harness routing in vehicle
Heated windscreen adapter harness

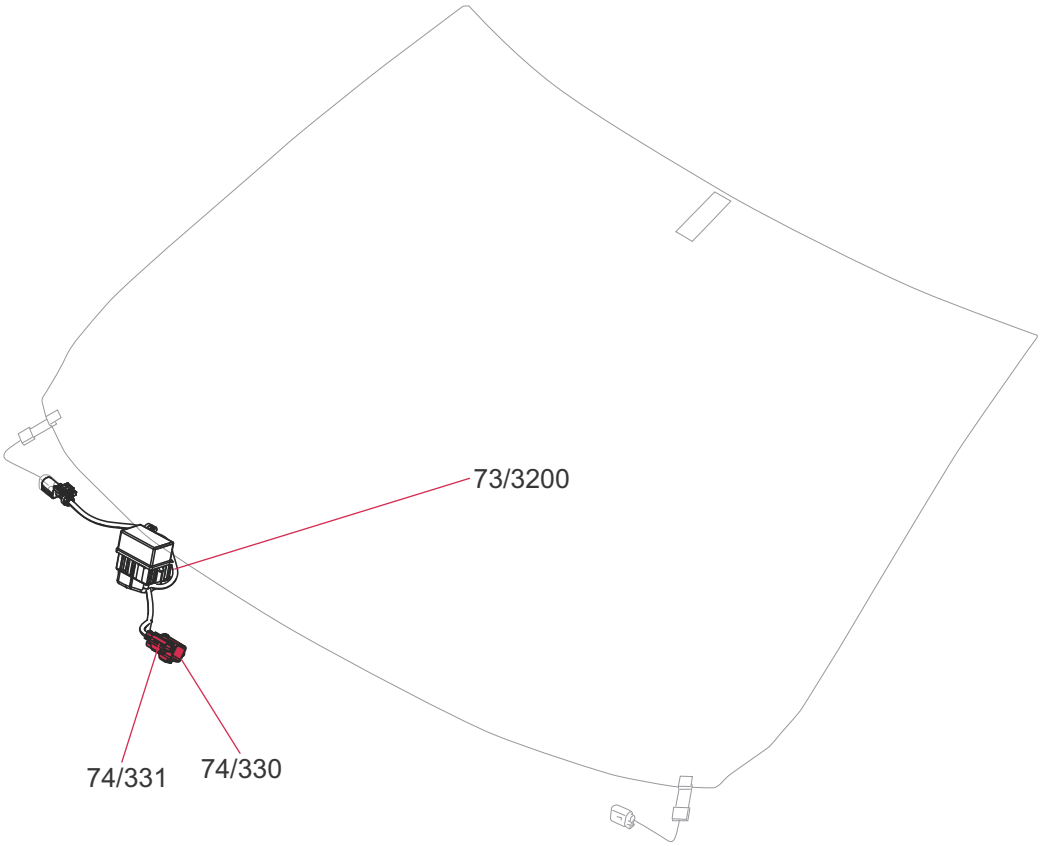

C34H015

Cable harness routing in vehicle
Tunnel harness

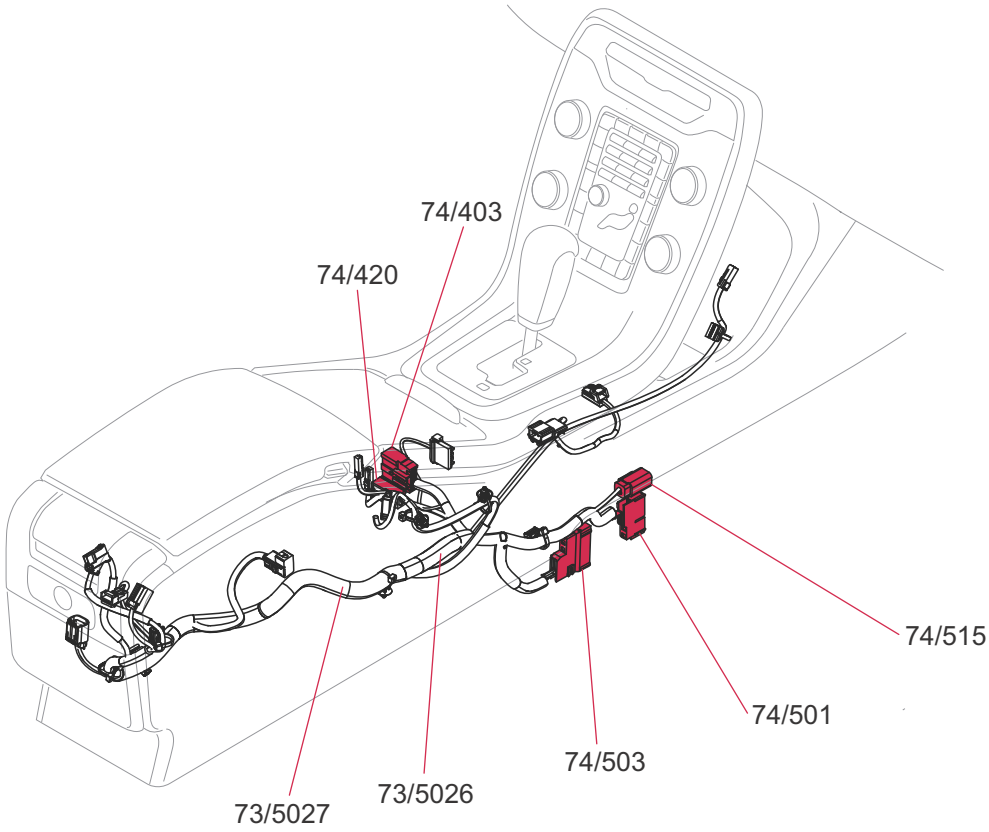

C34H016

Cable harness routing in vehicle
Harness driver door, LHD

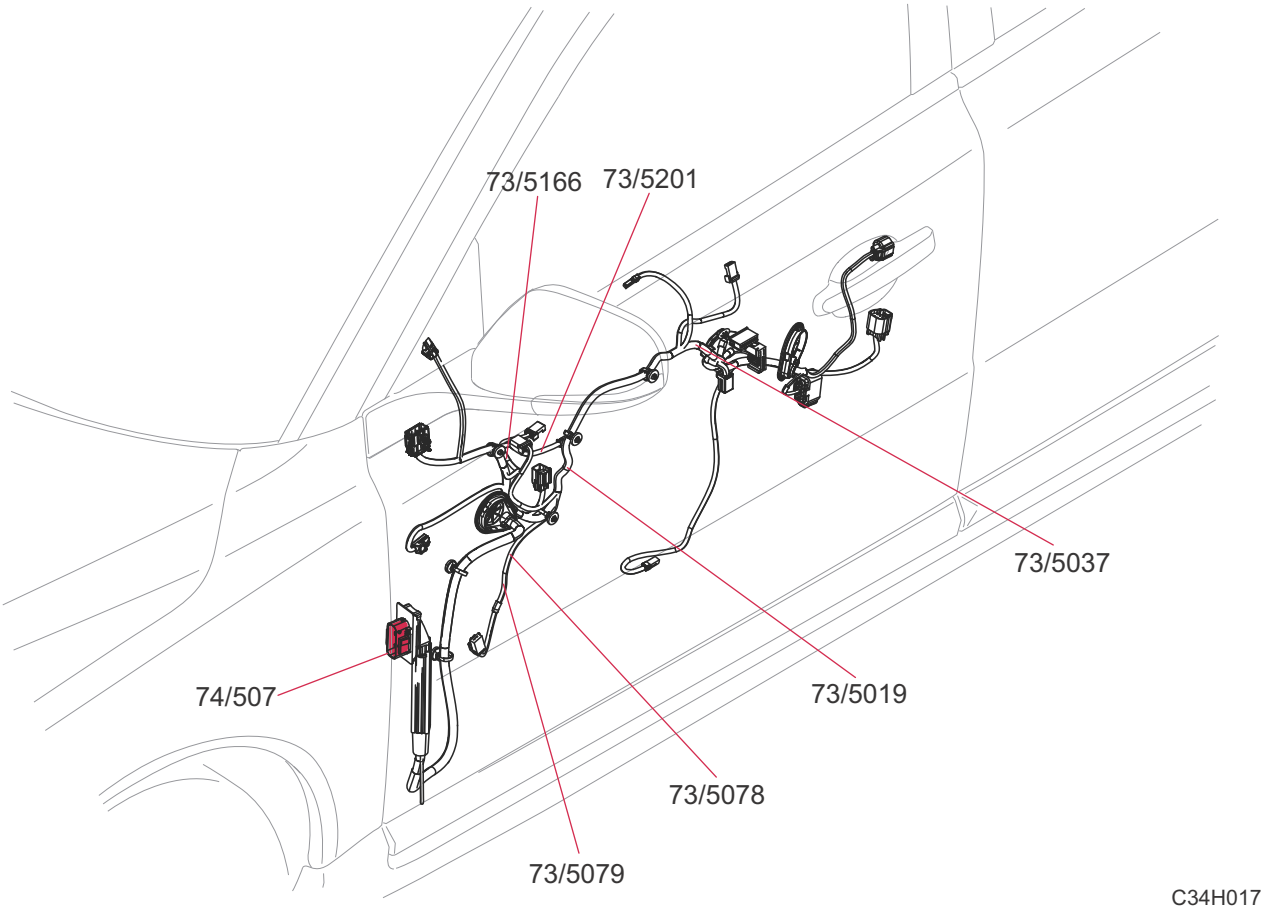

Cable harness routing in vehicle
Harness driver door, RHD

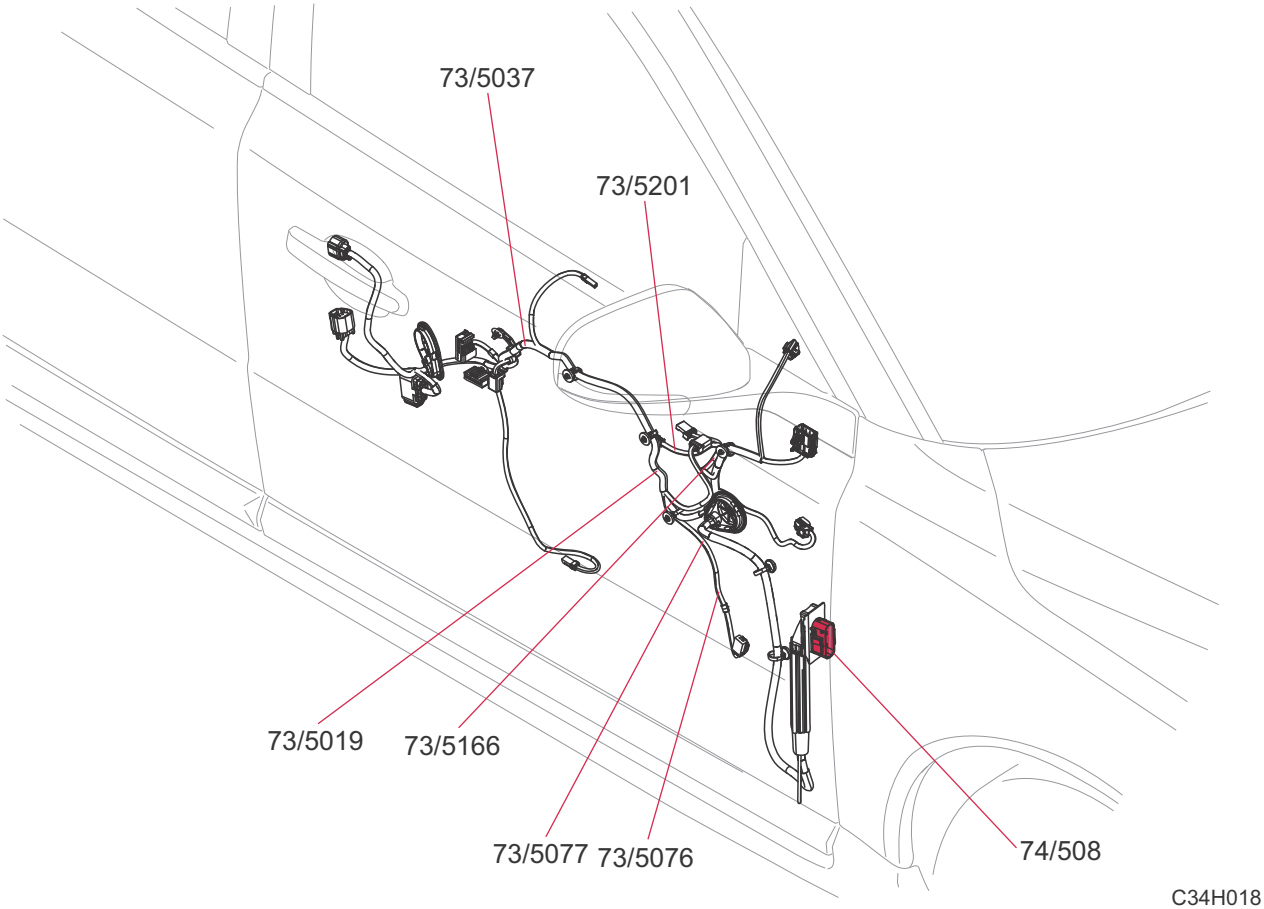

Cable harness routing in vehicle
Harness passenger door, LHD

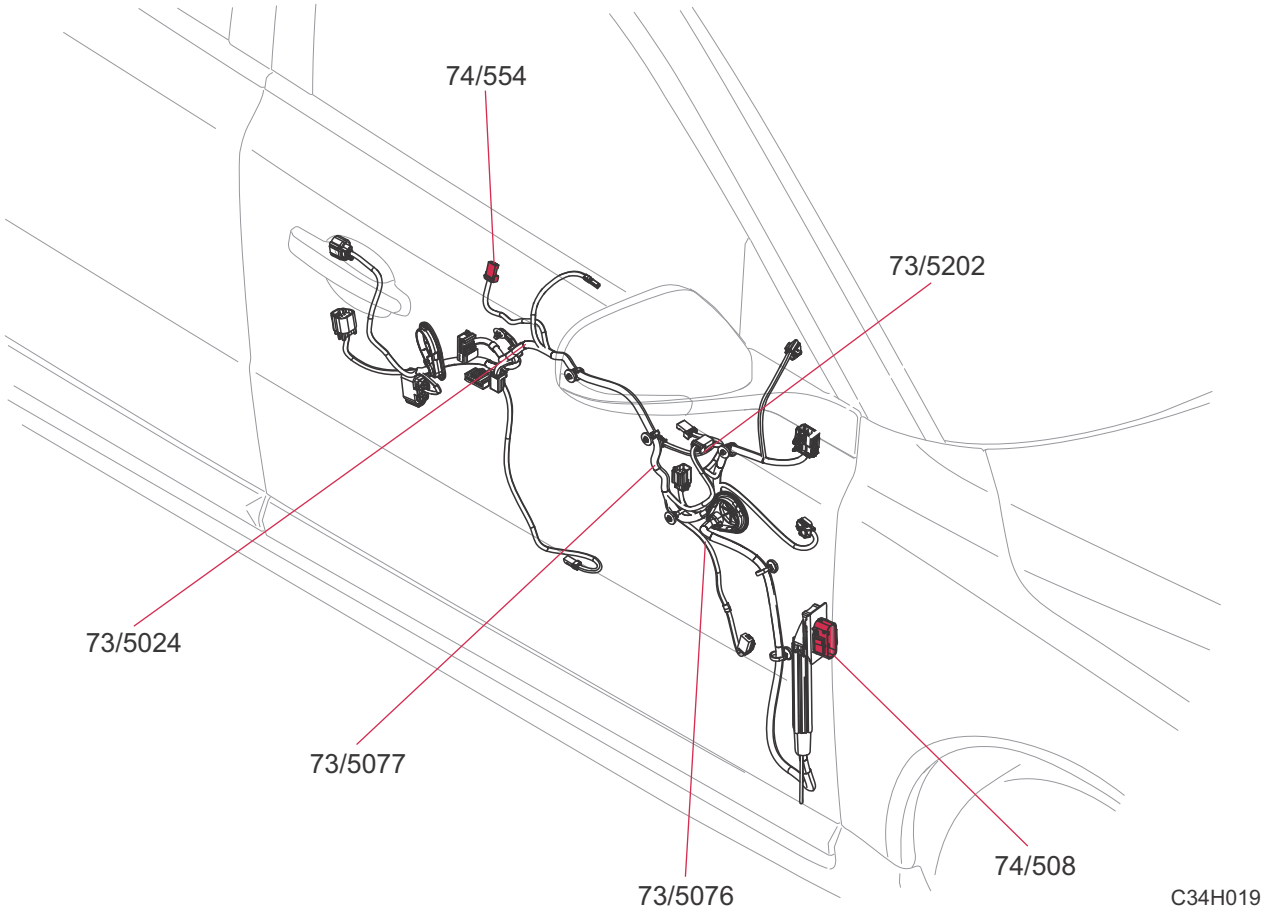

Cable harness routing in vehicle
Harness passenger door, RHD

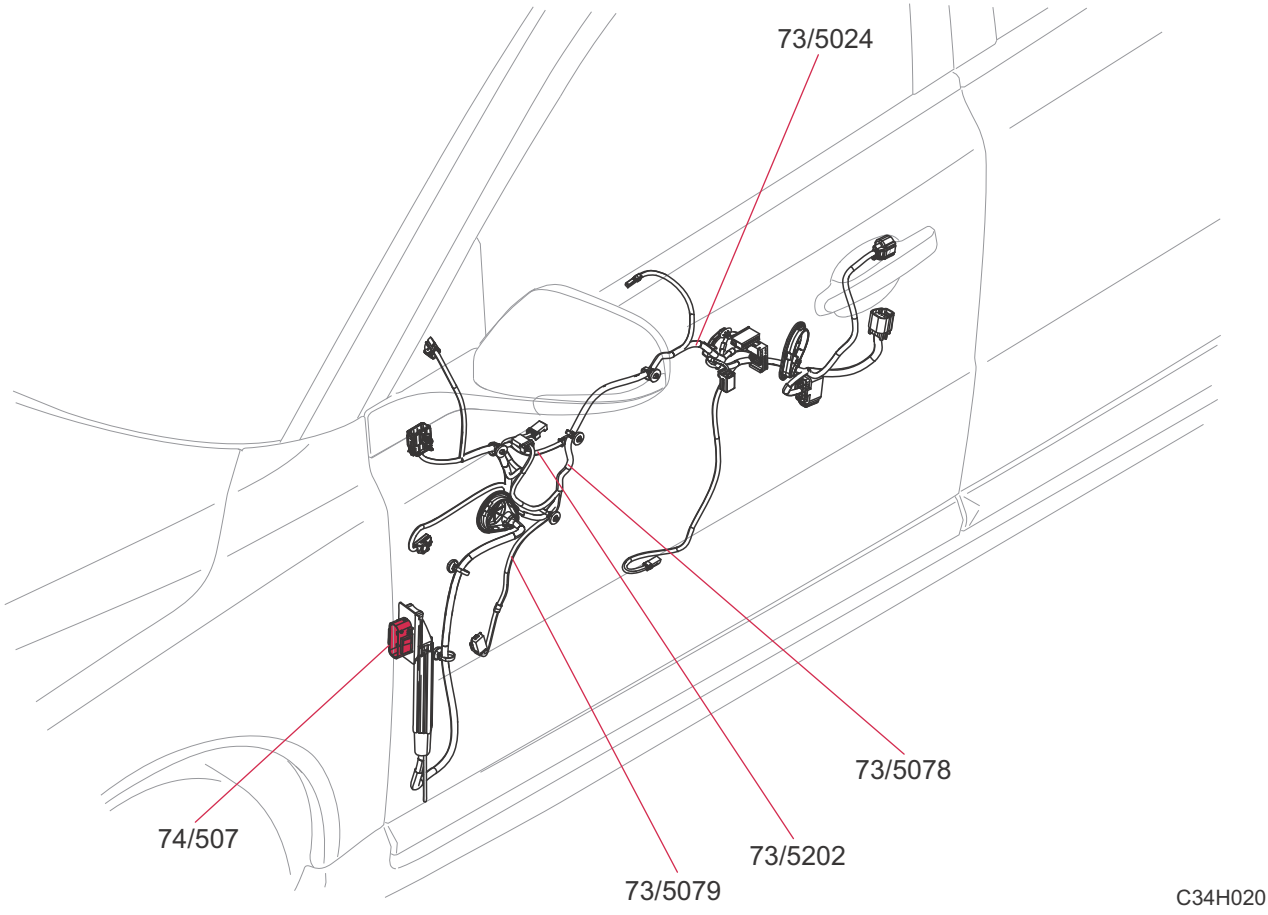

Cable harness routing in vehicle
Harness rear door, S80 LHD

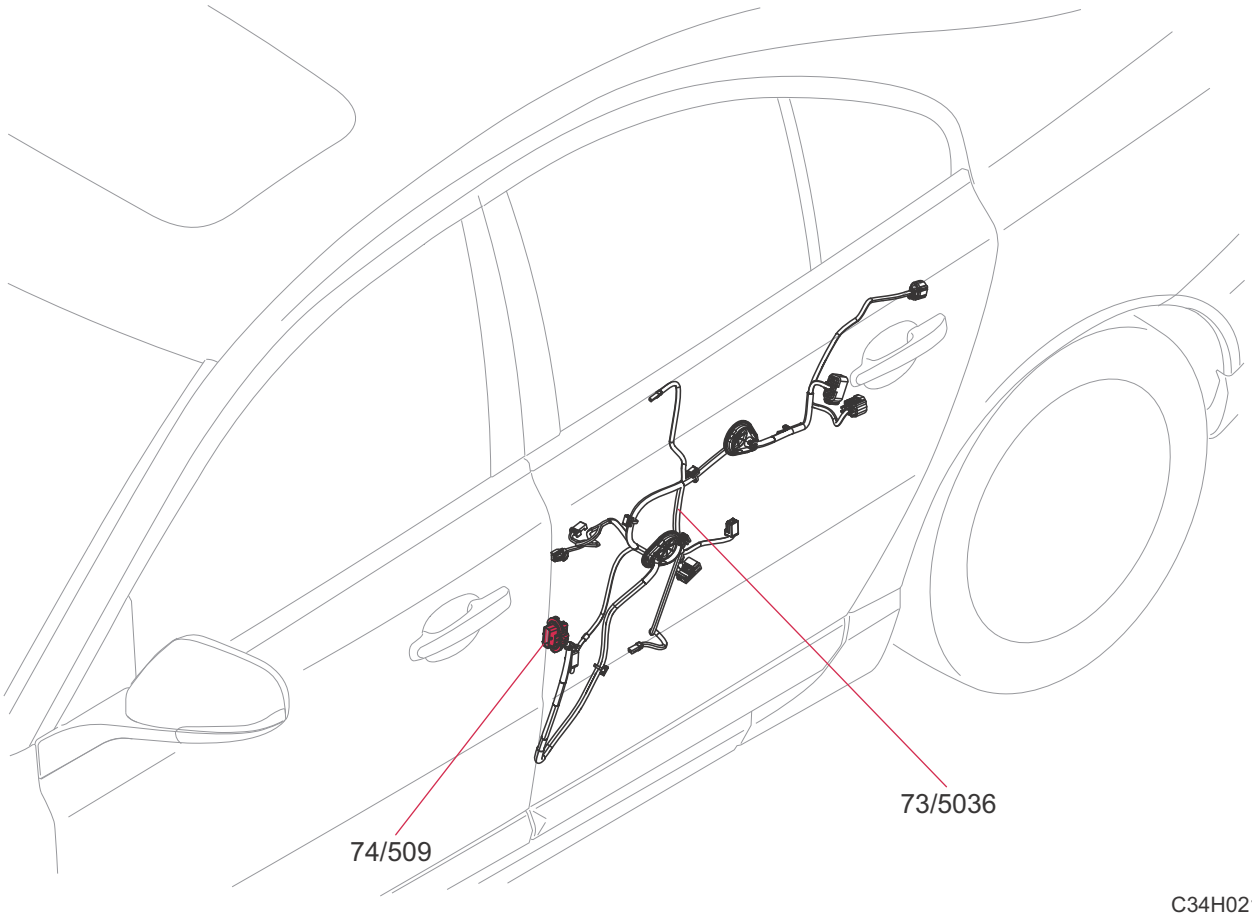

C34H021

Cable harness routing in vehicle
Harness rear door, S80 RHD

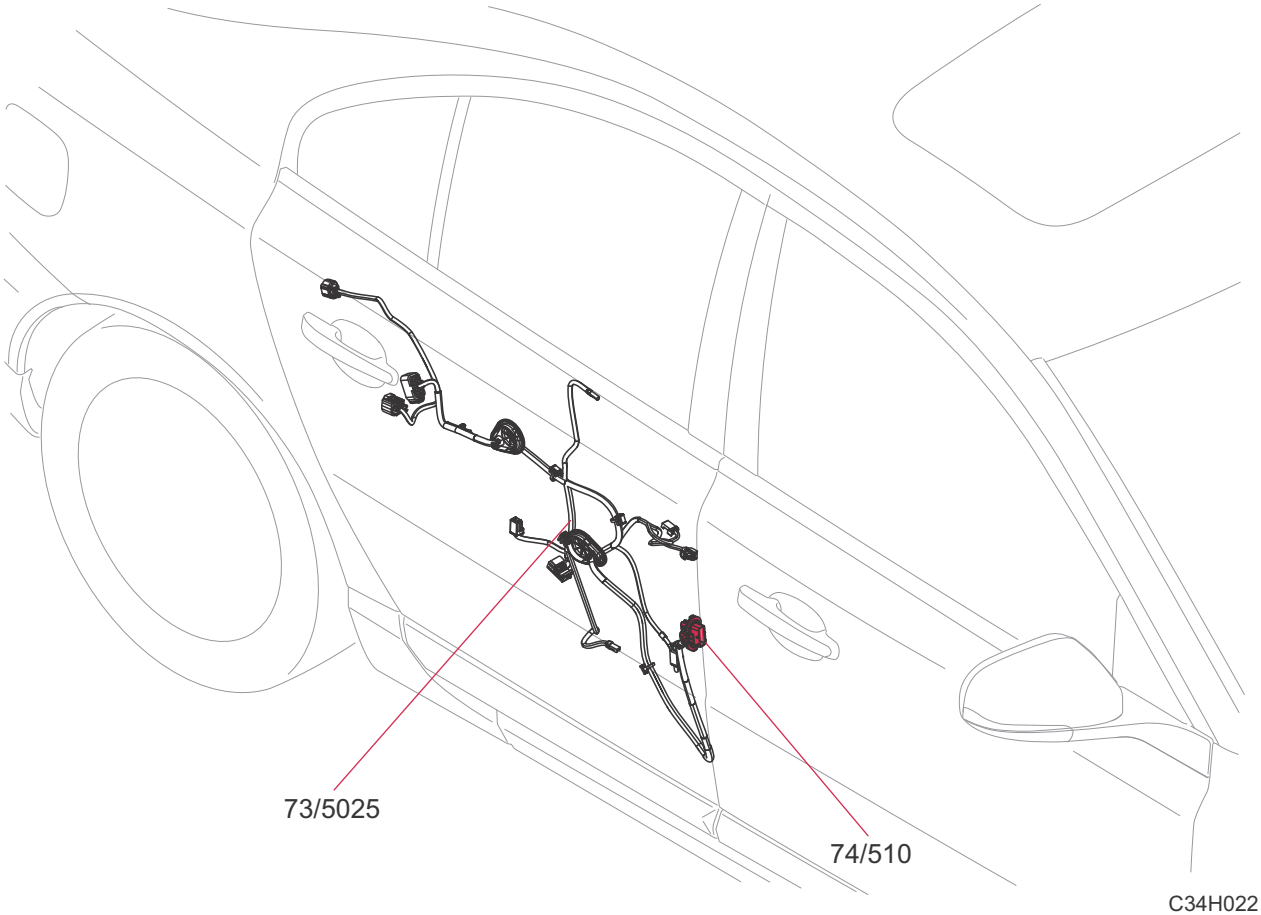

C34H022

Cable harness routing in vehicle
Harness rear door, V70 LHD

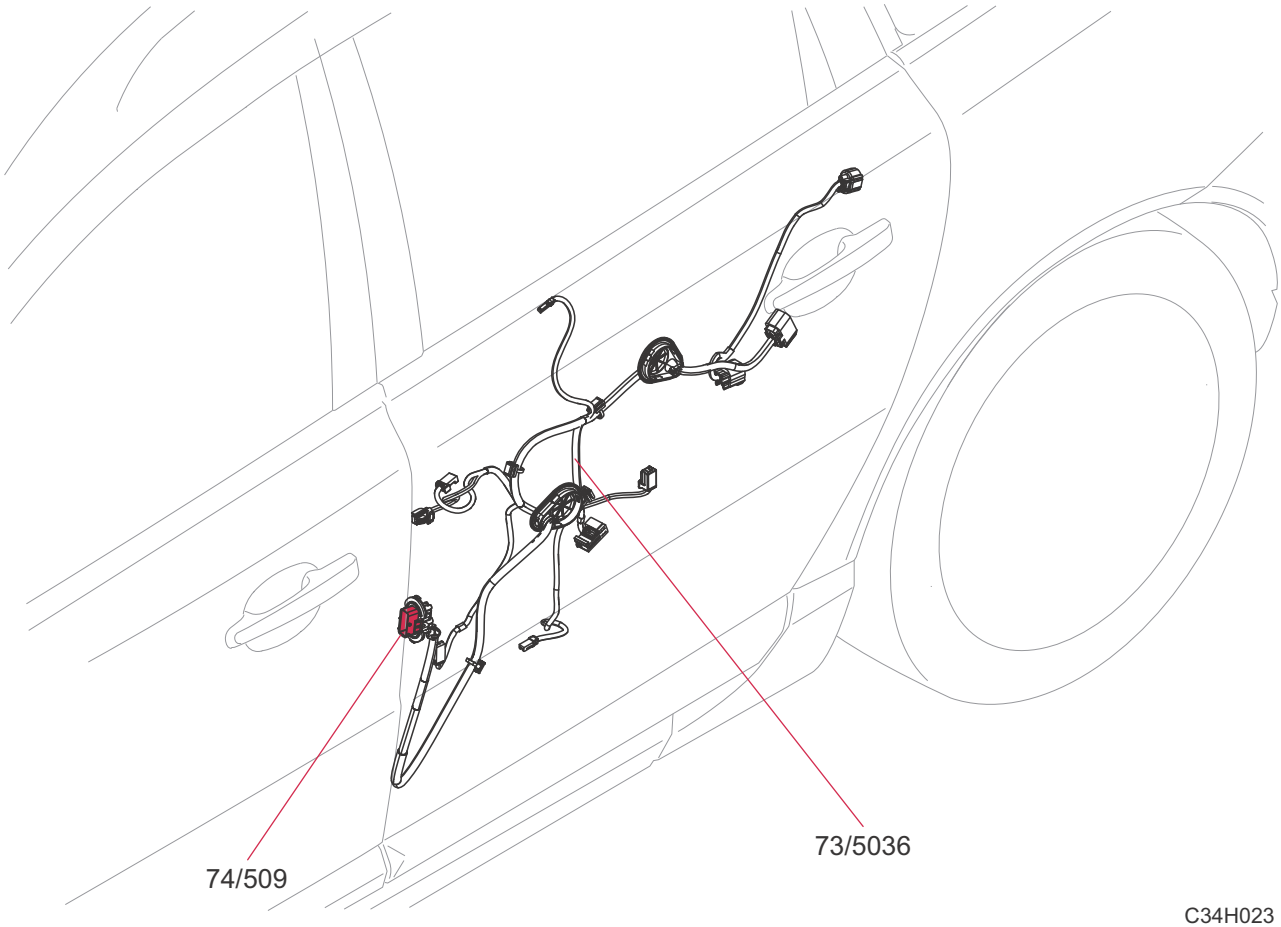

Cable harness routing in vehicle
Harness rear door, V70 RHD

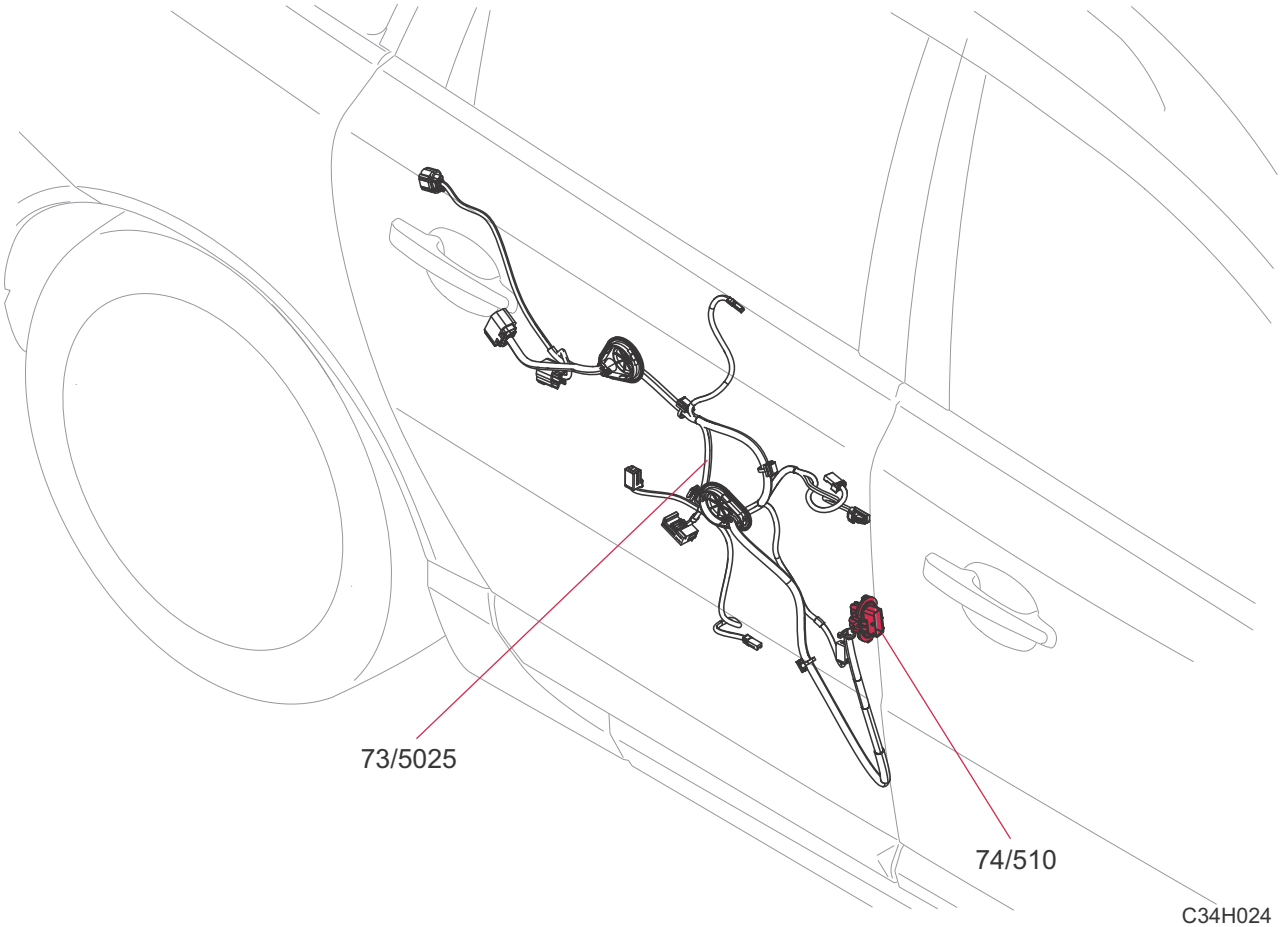

Cable harness routing in vehicle
Tailgate harness

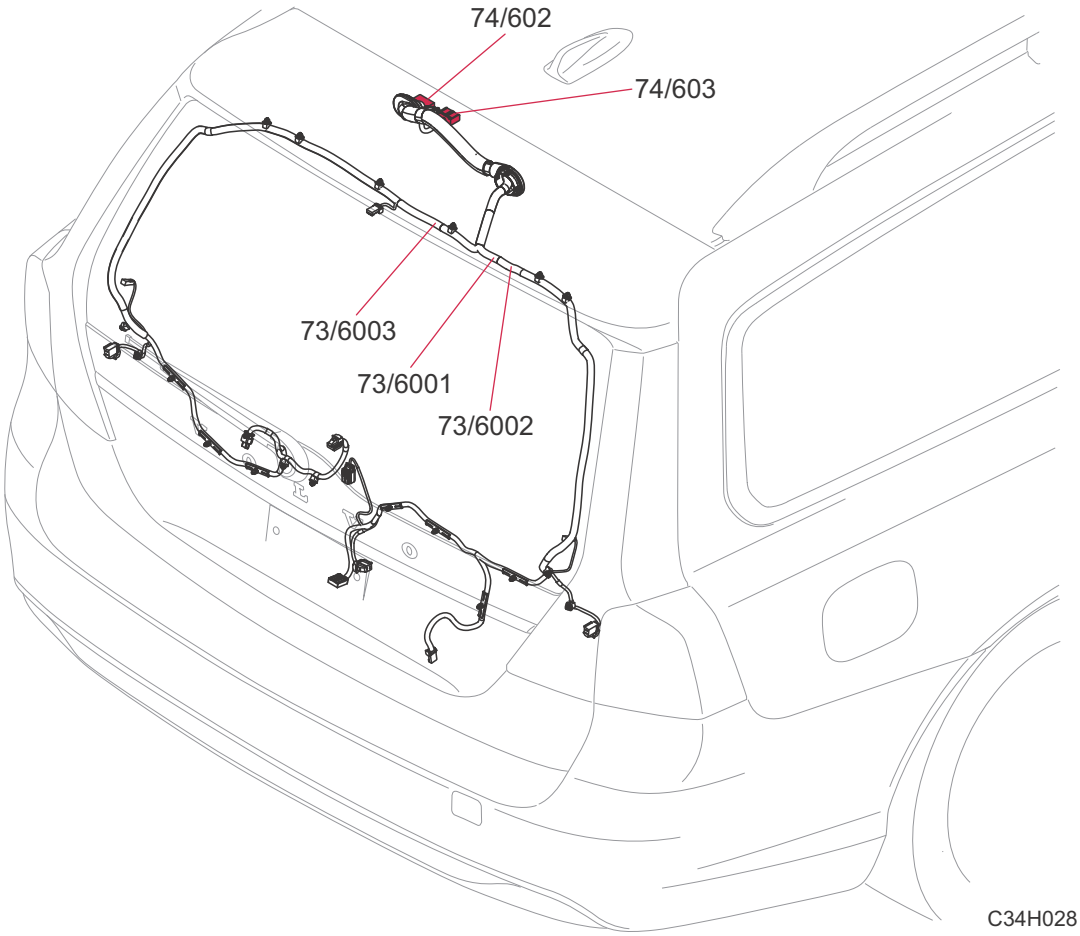

Cable harness routing in vehicle
Harness bumper, front

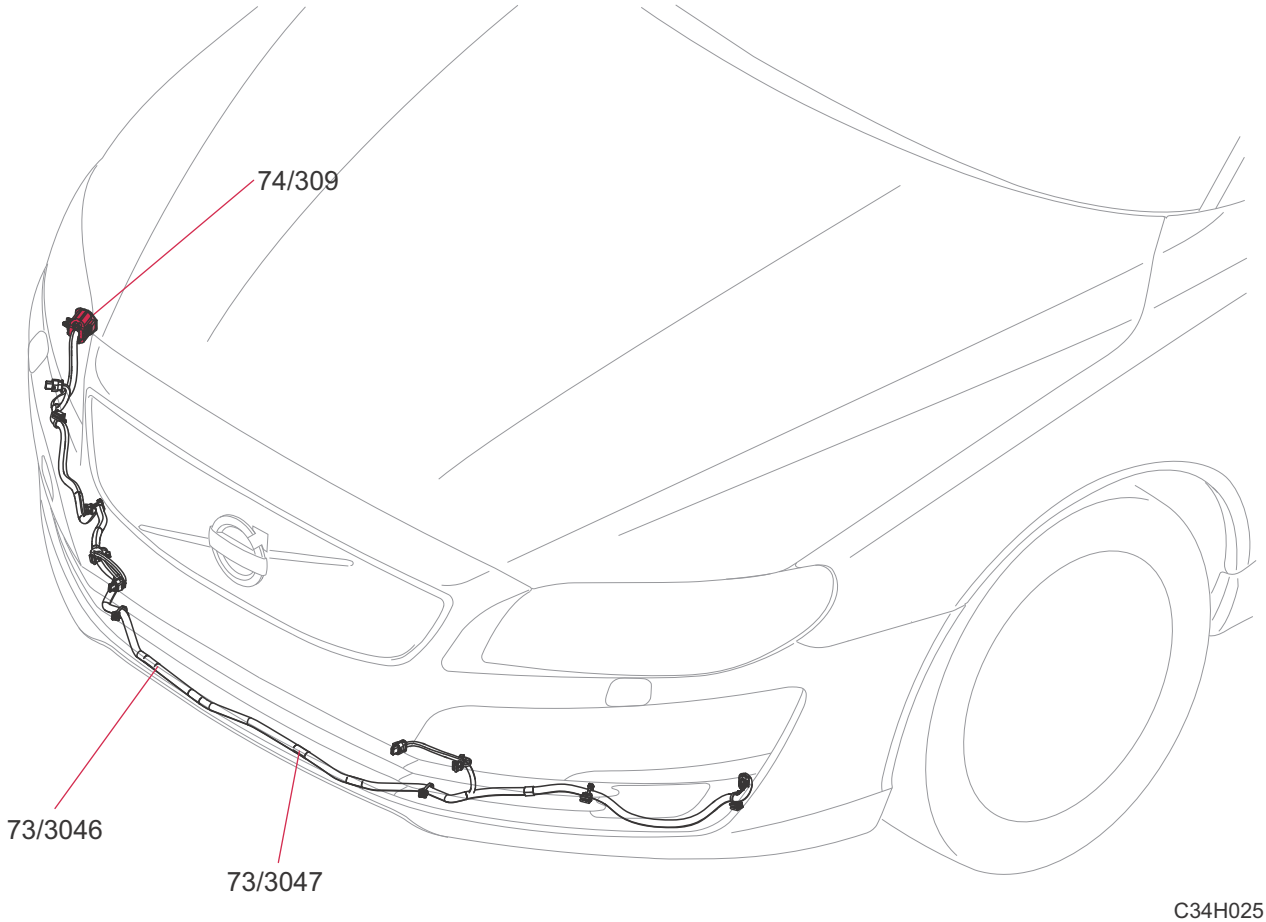

Cable harness routing in vehicle
Harness bumper,V70, rear

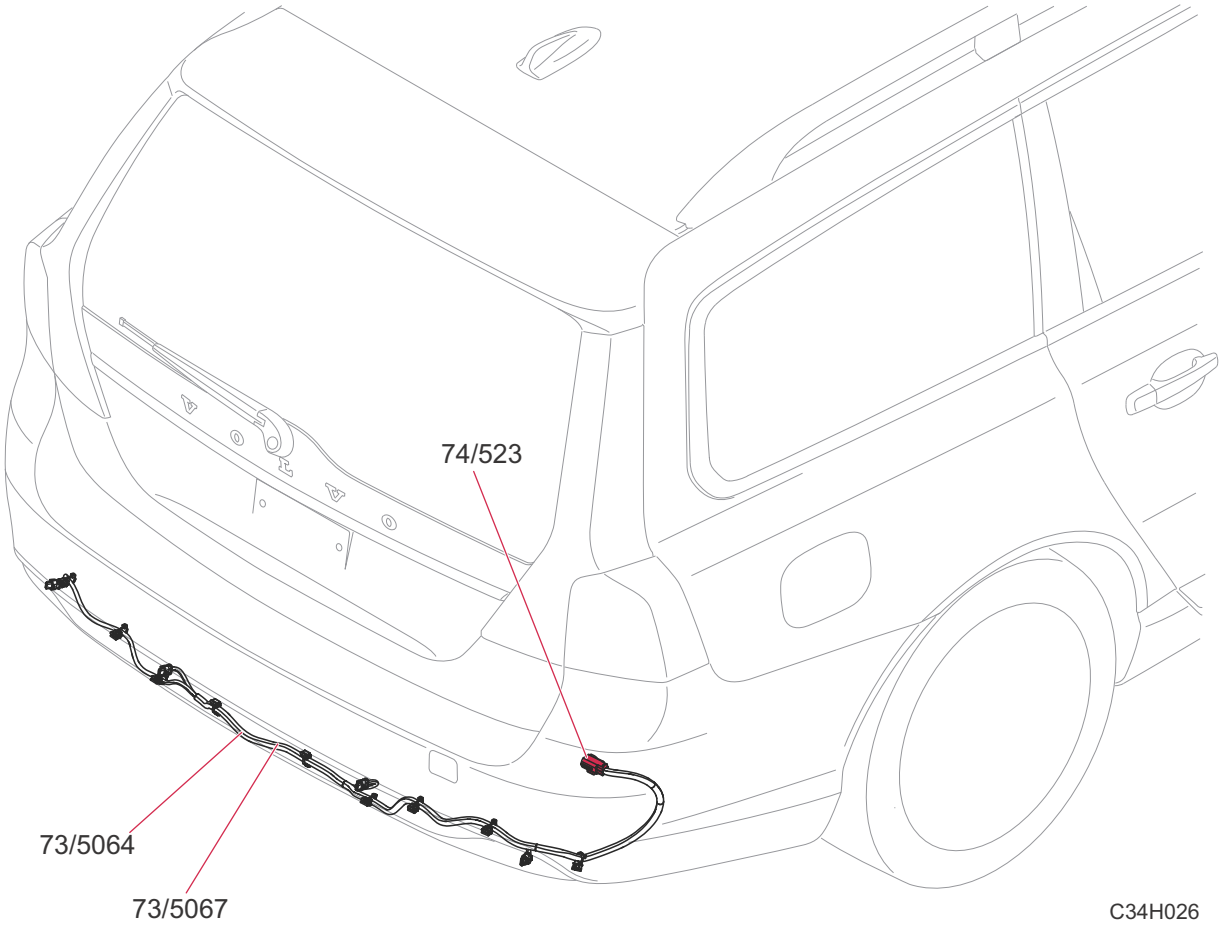

Cable harness routing in vehicle
Harness bumper,S80, rear

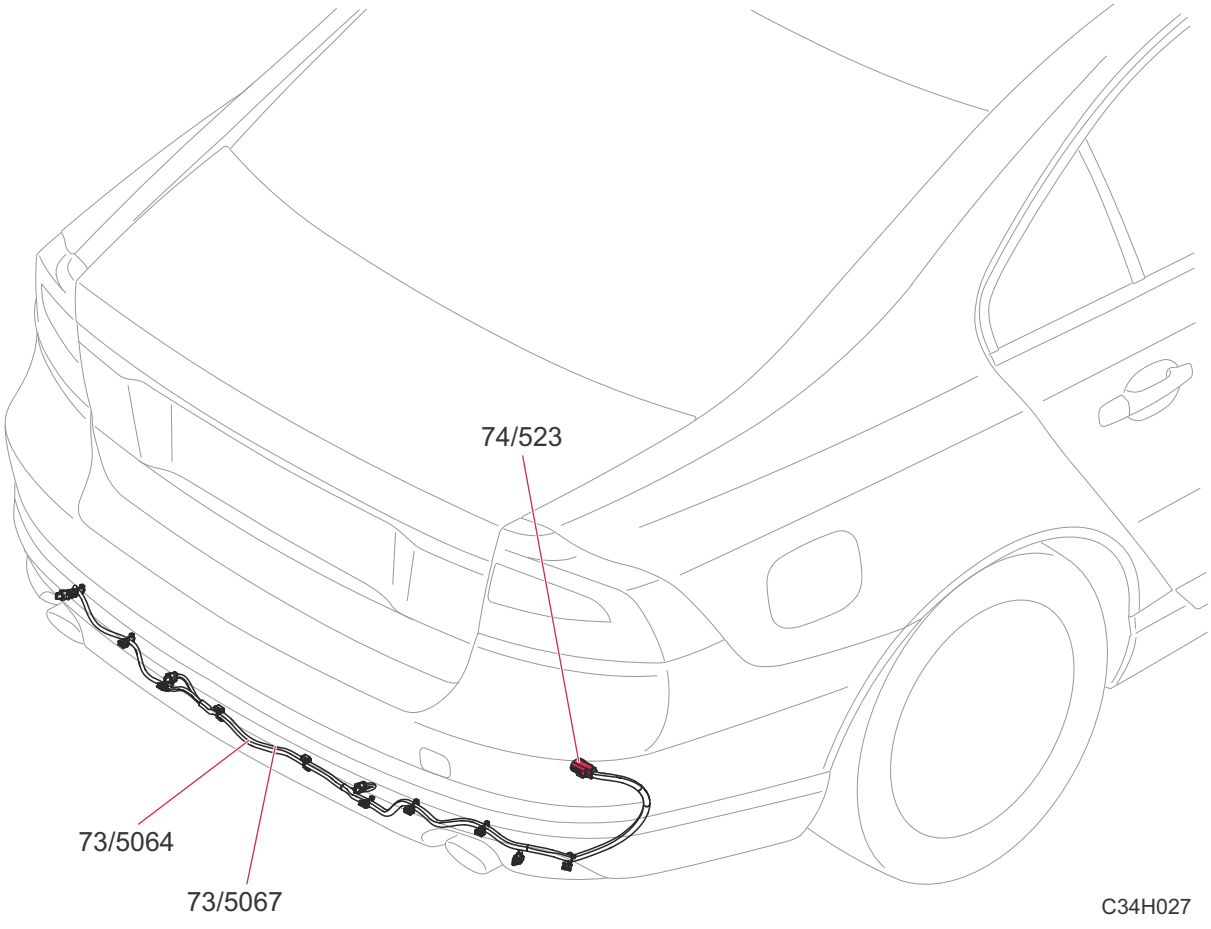

Cable harness routing in vehicle
Executive harnesses

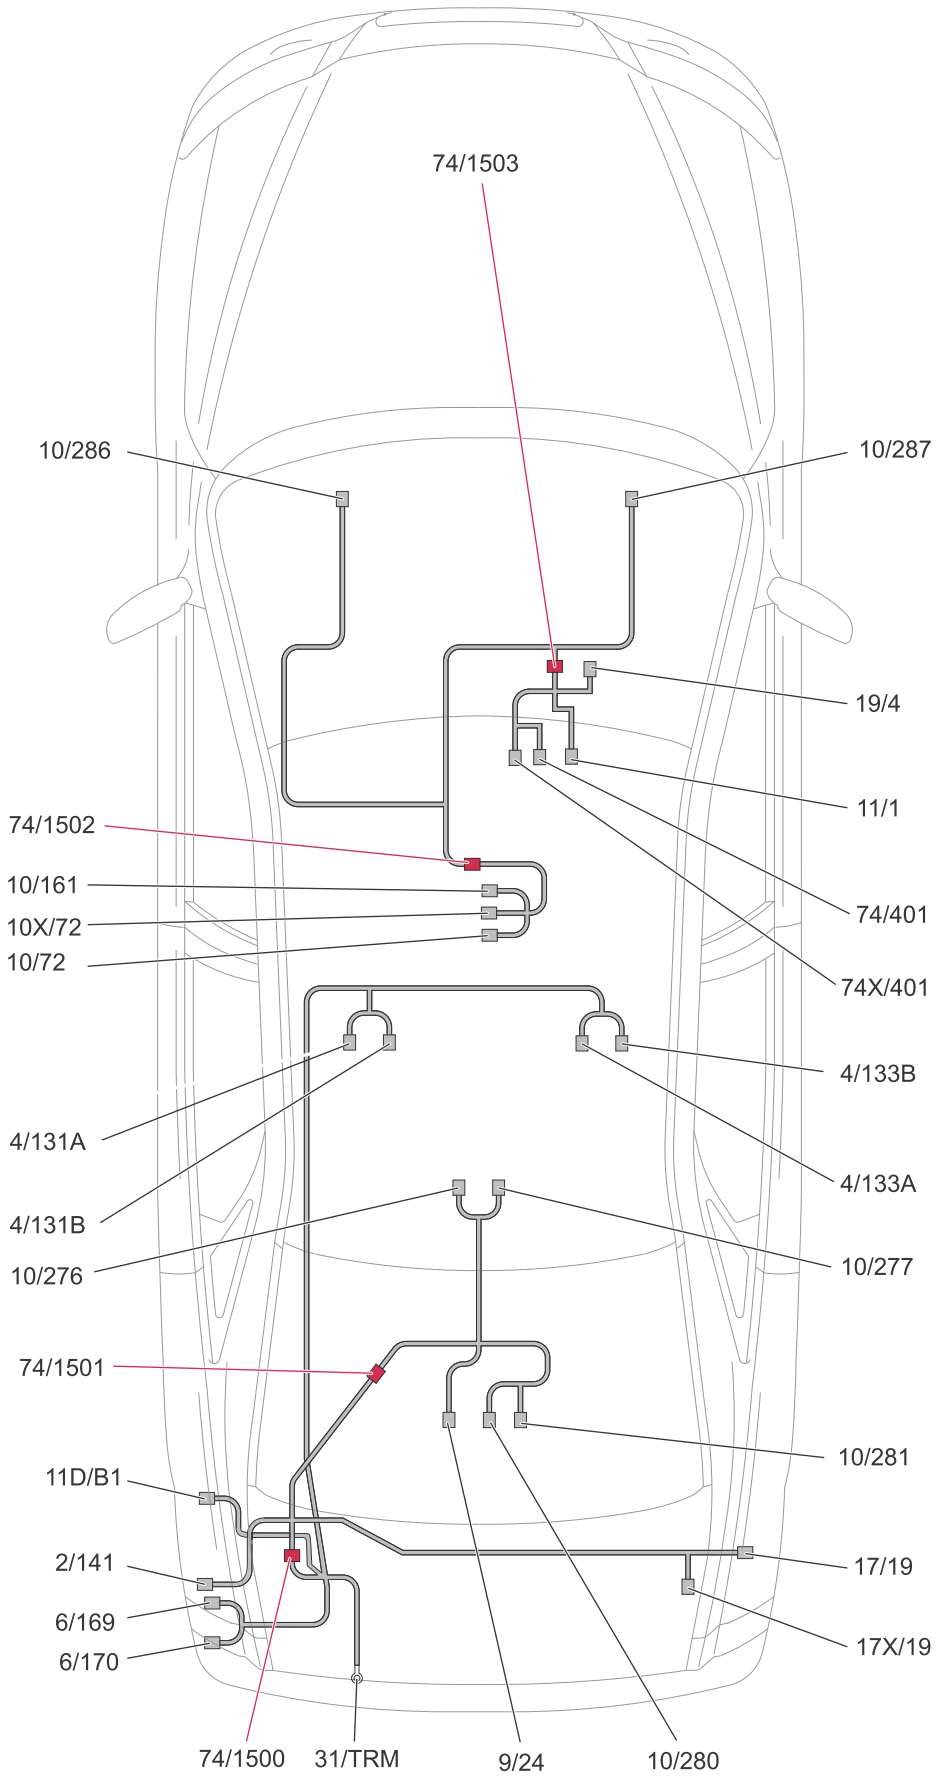

Component illustrations
1/1 - 2/64

1/1 Battery

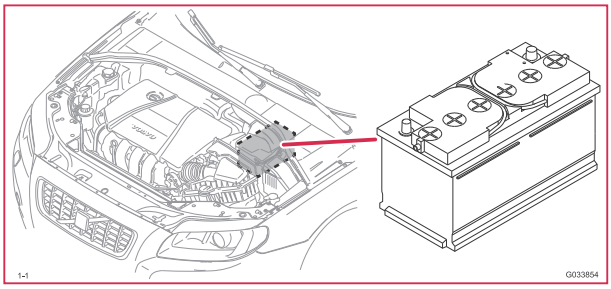

1/2 Secondary battery

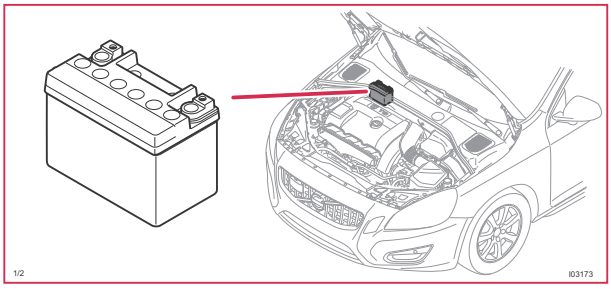

2/14 Relay, glow plug system

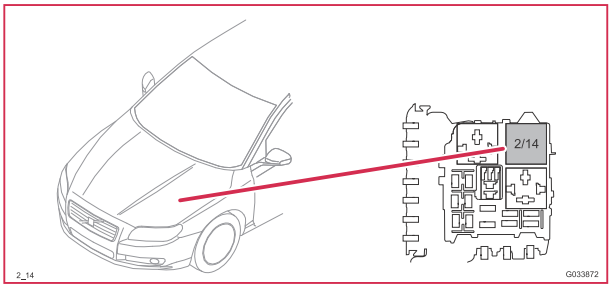

2/16 Rear window wiper relay, V70

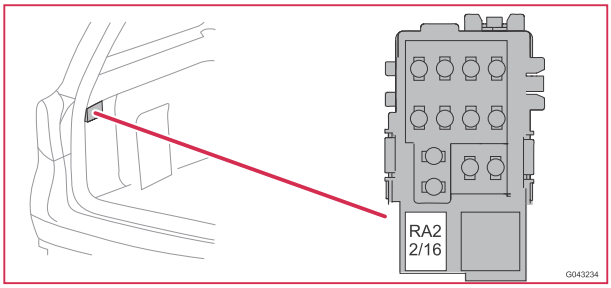

2/17 Relay, horn

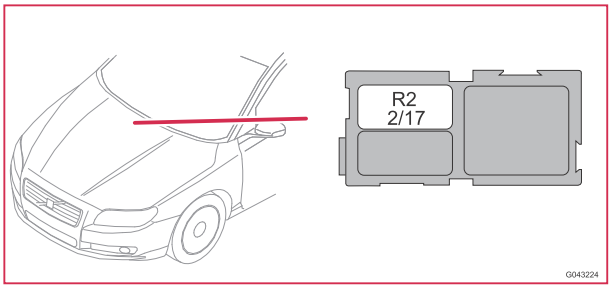

2/22 Relay, climate control system

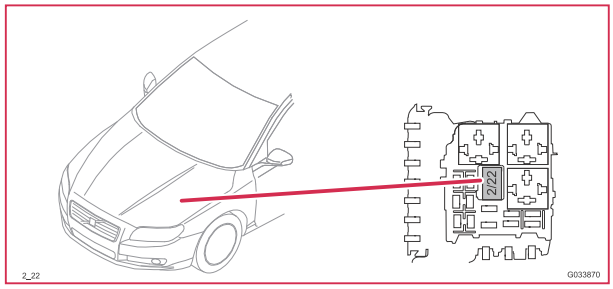

2/31 Relay, 15-feed

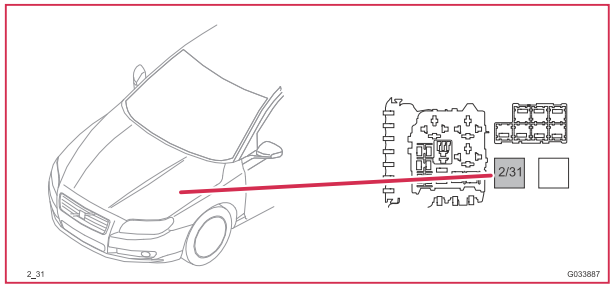

2/32 Main relay, engine management system

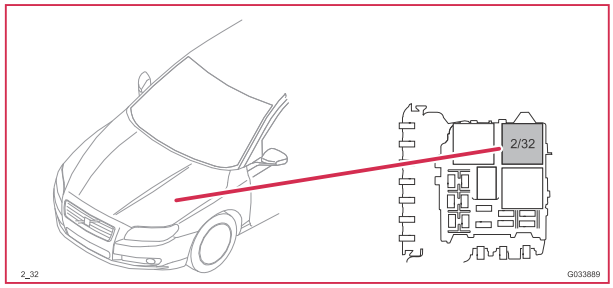

2/35 Relay, starter motor

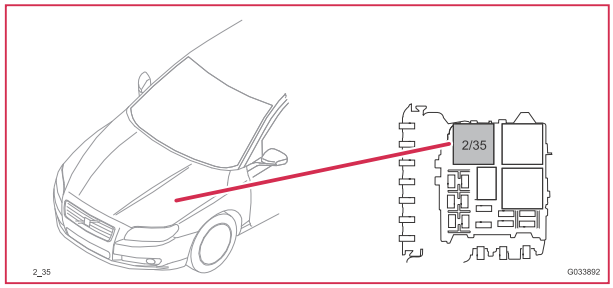

2/64 Auxiliary light relay, accessory

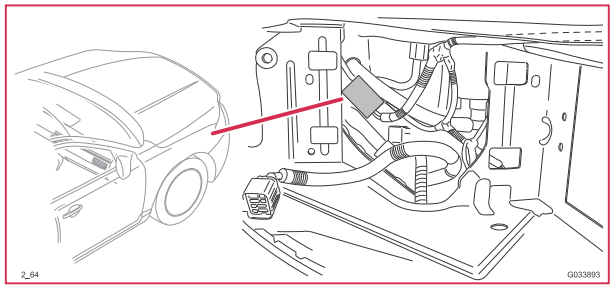

Component illustrations
2/81A - 2/246

2/81A Relay, heated windshield passenger side

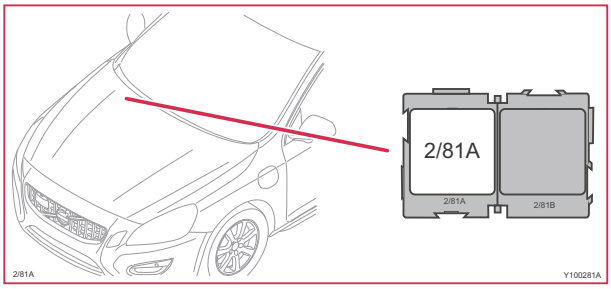

2/81B Relay, heated windshield driver's side

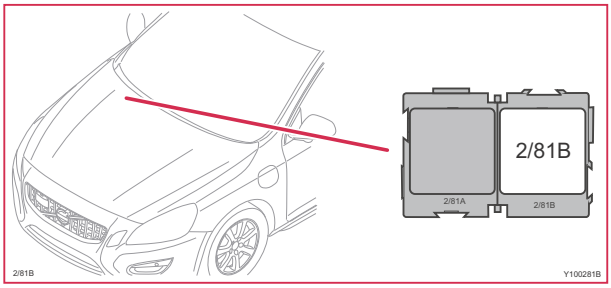

2/82 Relay, rear window defroster, V70

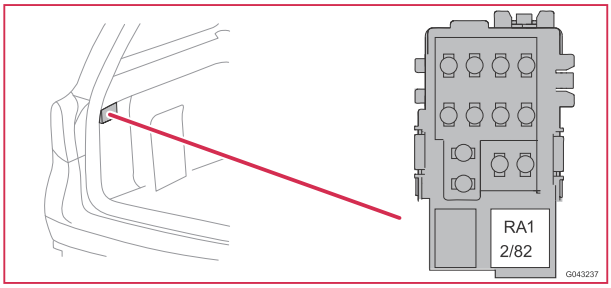

2/82 Relay, rear window defroster, S80

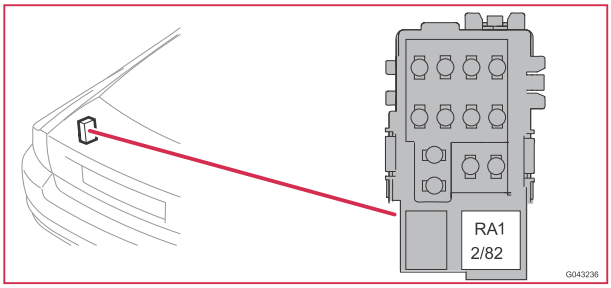

2/88 Relay, 15-feed rear

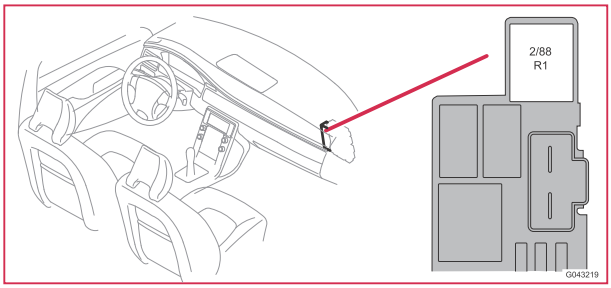

2/141 Refrigeration box relay

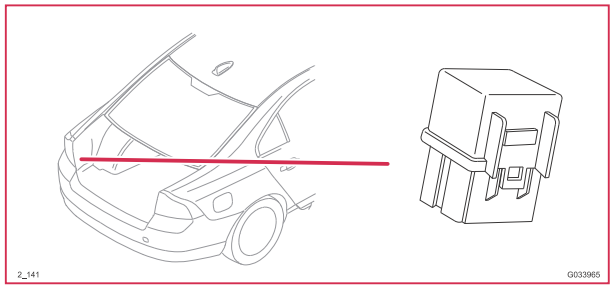

2/166 Battery relay

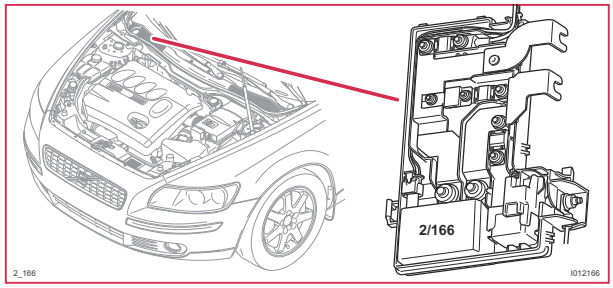

2/182 Relay, headlight washer motor

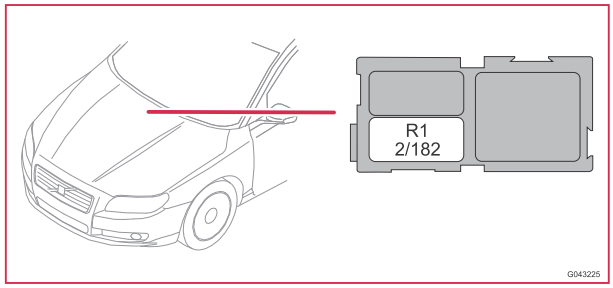

2/193 Relay, comfort functions

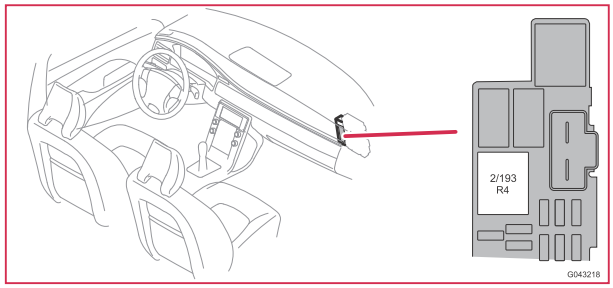

2/246 Secondary battery relay

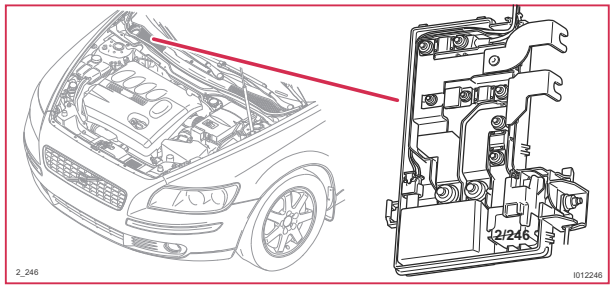

Component illustrations
2/249 - 3/35

2/249 Relay, heated steering wheel

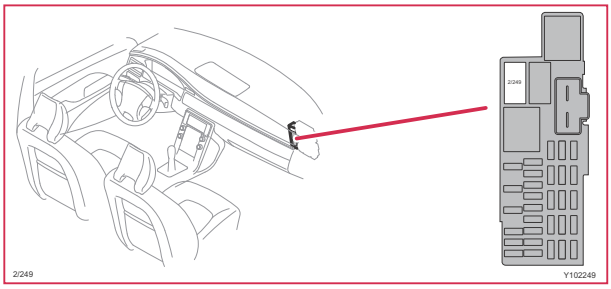

3/1 Ignition switch

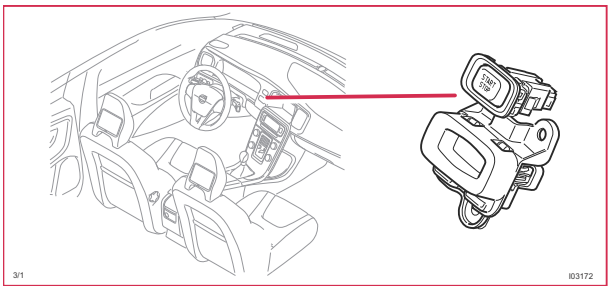

3/4 Steering wheel switch left (SWSL)

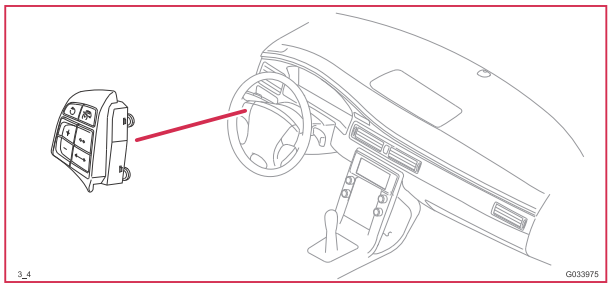

3/6 Switch, hazard warning flashers

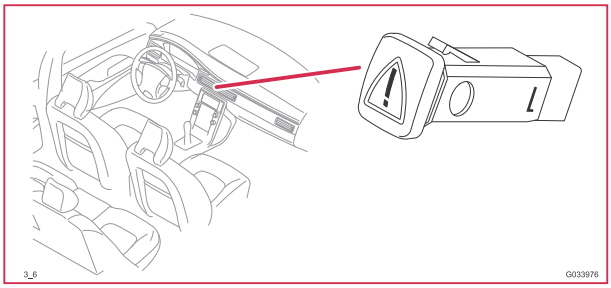

3/8 Switch, heated rear window/rearview mirrors

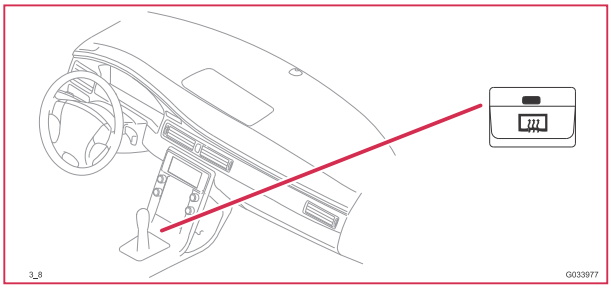

3/9 Contact brake light

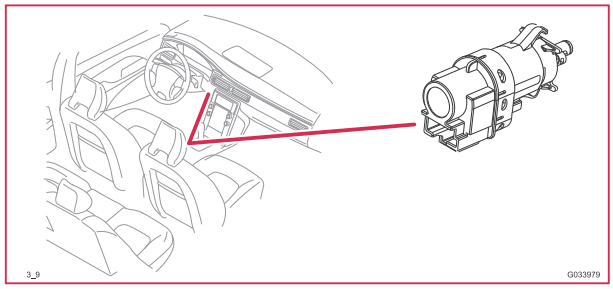

3/10 Reversing light contact

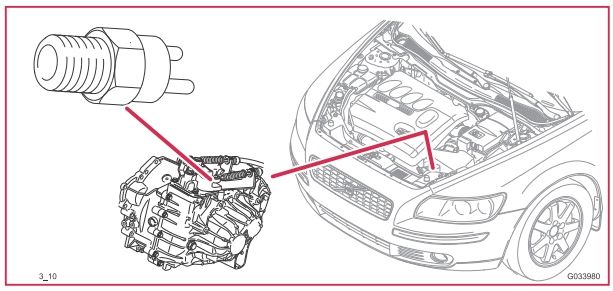

3/27 Switch unit, power passenger seat

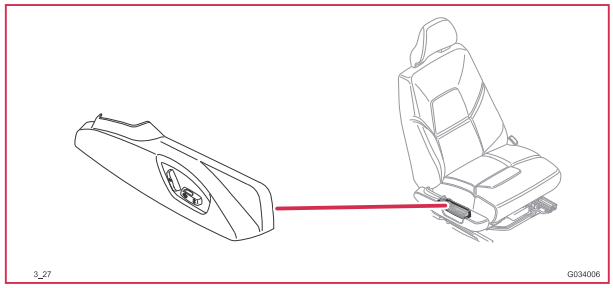

3/35 Trunk handle switch, V70

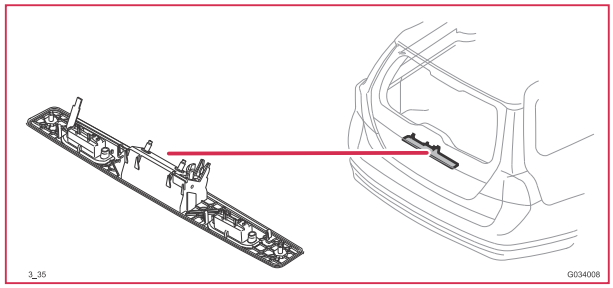

3/35 Trunk handle switch, S80

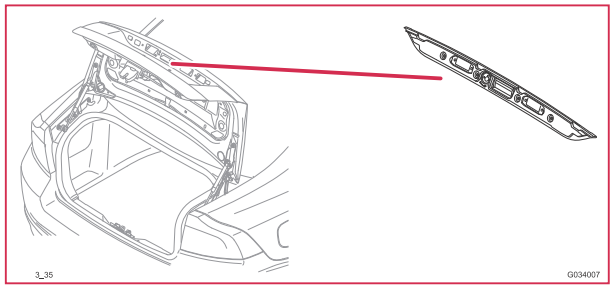

Component illustrations
3/37 - 3/83

3/37 Contact horn

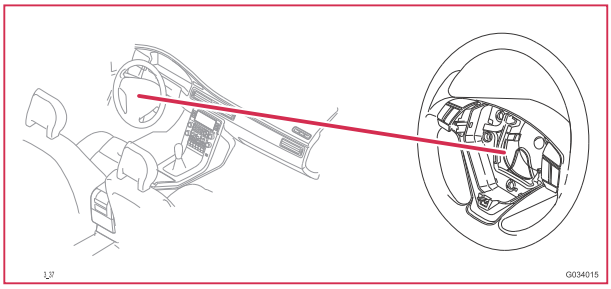

3/62 Hood alarm contact

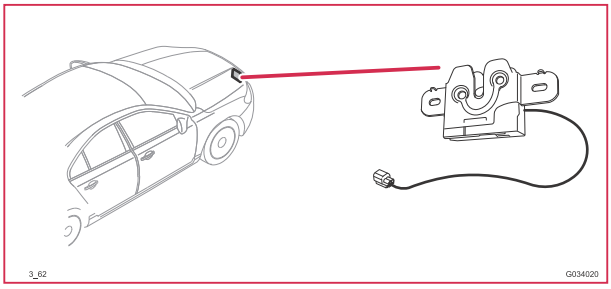

3/65 Switch, heated rear seat

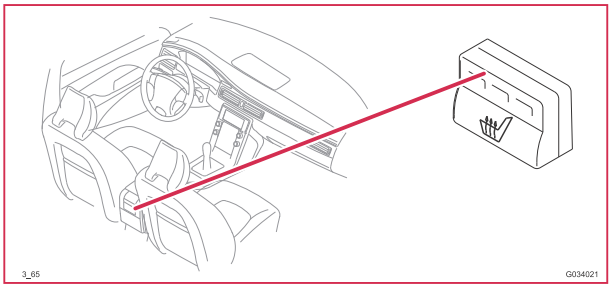

3/74 Left-hand front door lock unit

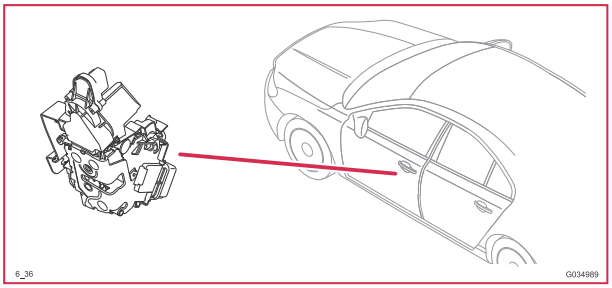

3/75 Right-hand front door lock unit

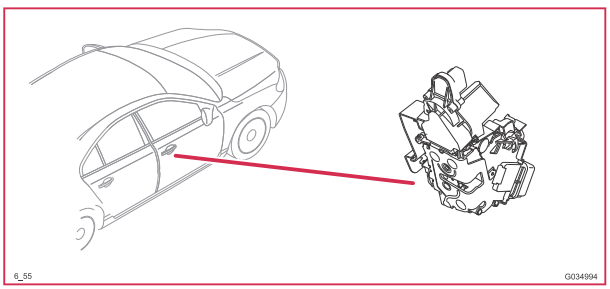

3/76 Lock unit, rear left door

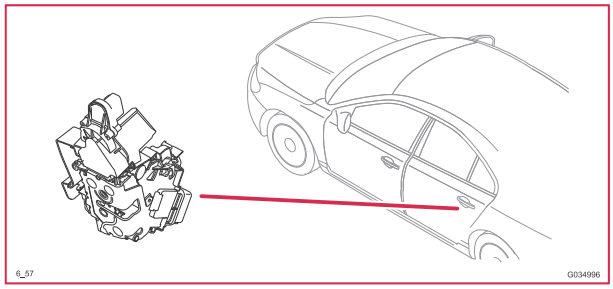

3/77 Lock unit, rear right door

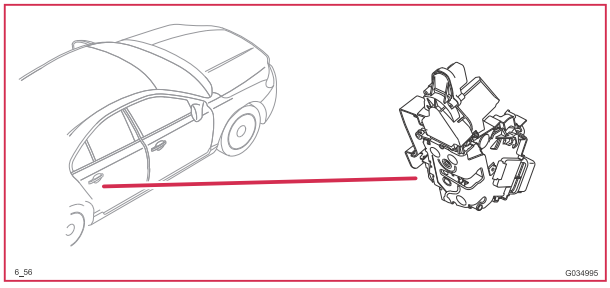

3/80 Switch, central locking system, driver's door

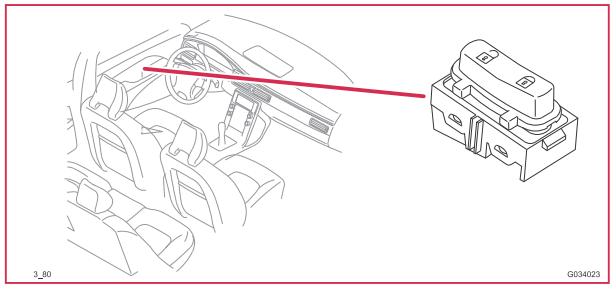

3/81 Power window switches, driver's door

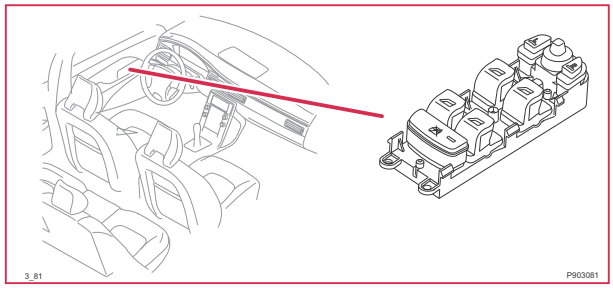

3/83 Switch, passenger door power window

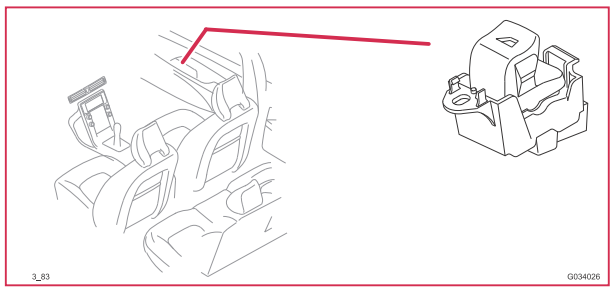

Component illustrations
3/85 - 3/127

3/85 Power window switch, rear left door

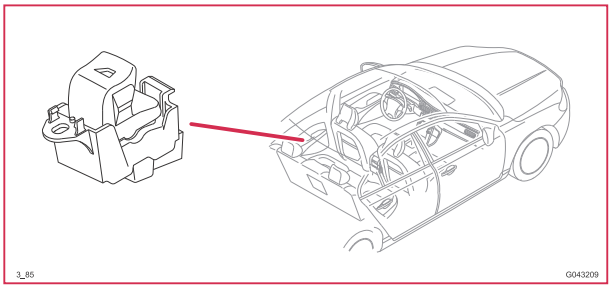

3/86 Power window switch, right rear door

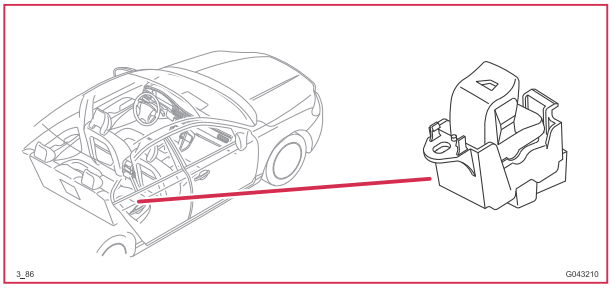

3/93 Contact, driver's seat belt buckle

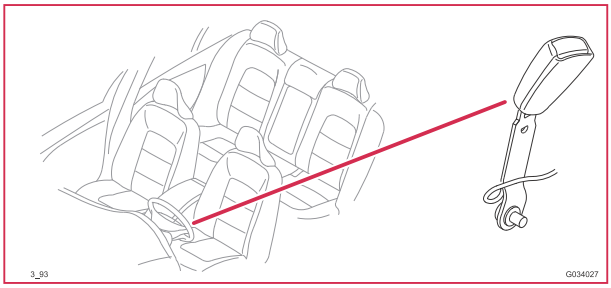

3/94 Contact, passenger seat belt buckle

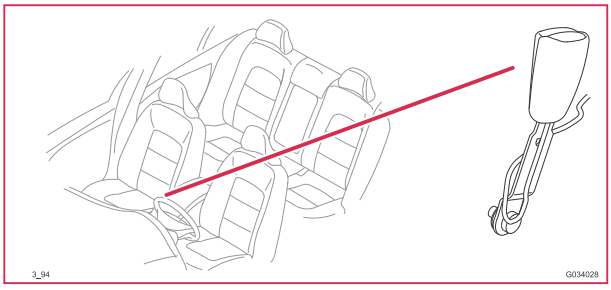

3/104 Switch, sun curtain rear

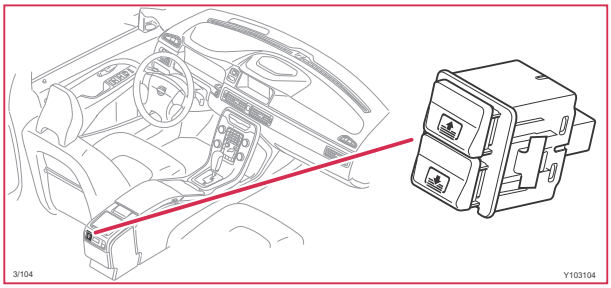

3/111 Light Switch Module (LSM)

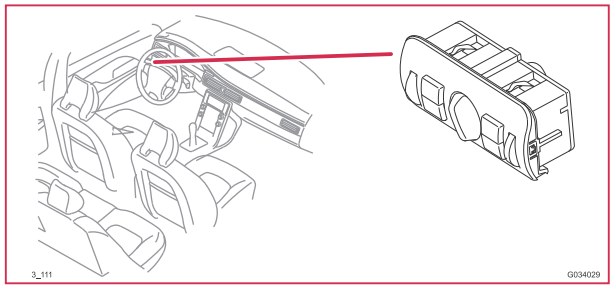

3/112 Climate Control Module (CCM)

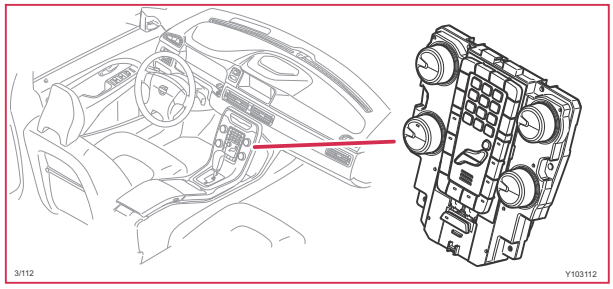

3/117 Switch unit, ceiling light

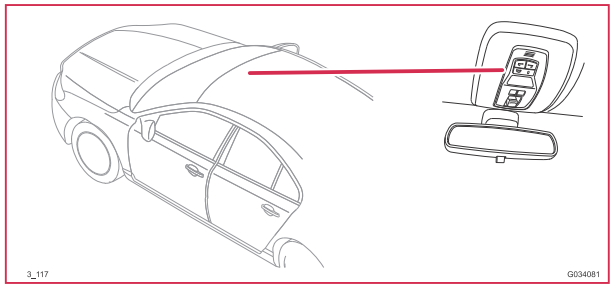

3/126 Driver Door Module (DDM)

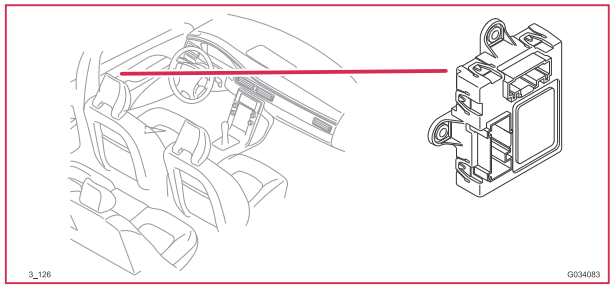

3/127 Passenger Door Module (PDM)

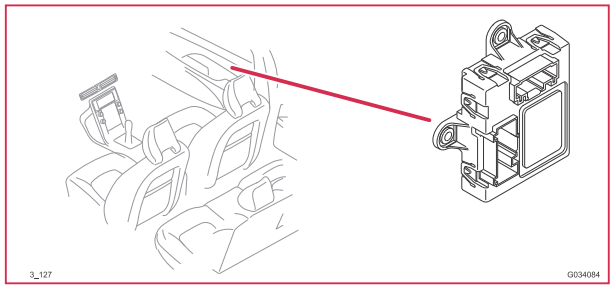

Component illustrations
3/128 - 3/217

3/128 Left rear door module (LDM)

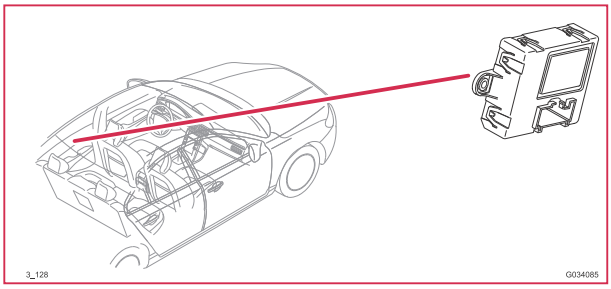

3/129 Right rear door module (RDM)

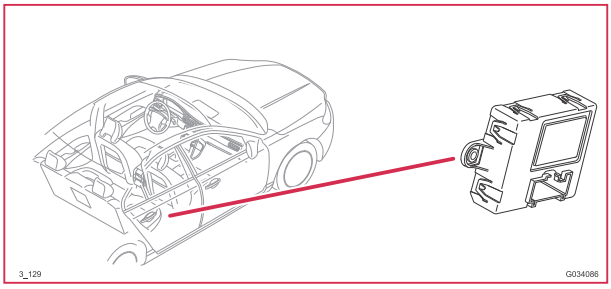

3/130 Steering Wheel Module (SWM)

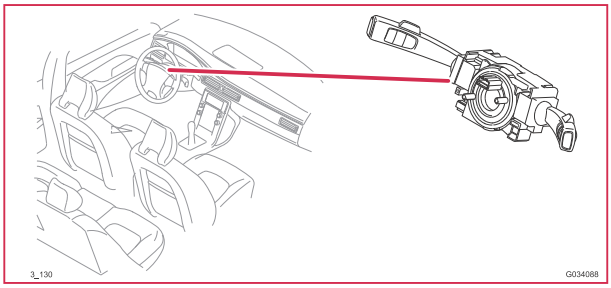

3/131 Steering wheel switch right (SWSR)

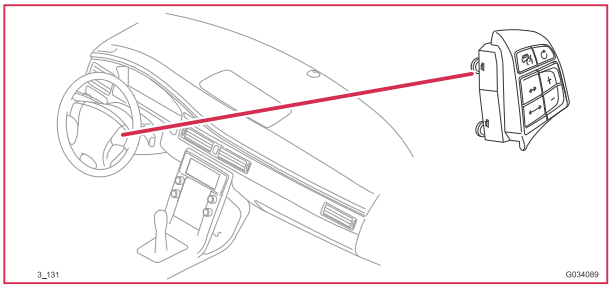

3/135 RTI switch

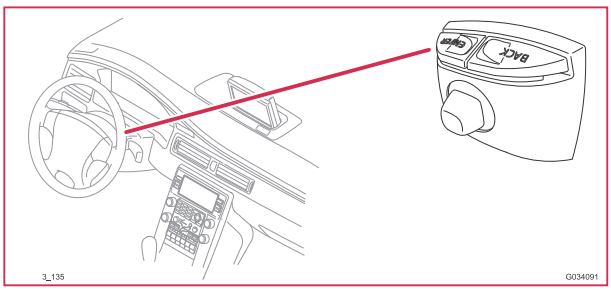

3/156 Gear Selector Module (GSM)

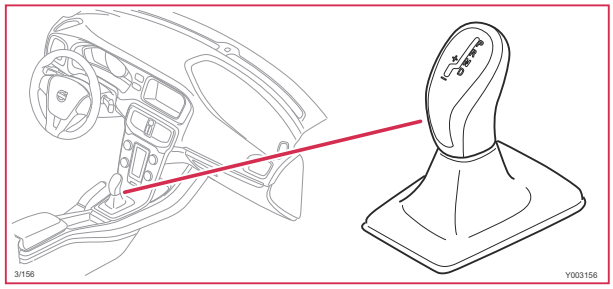

3/157 Switch, passenger side airbag

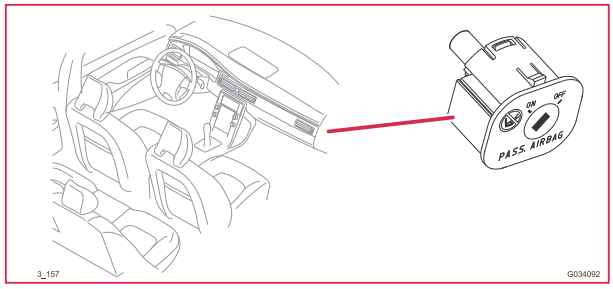

3/173 Switch, trunk lid/tailgate private lock

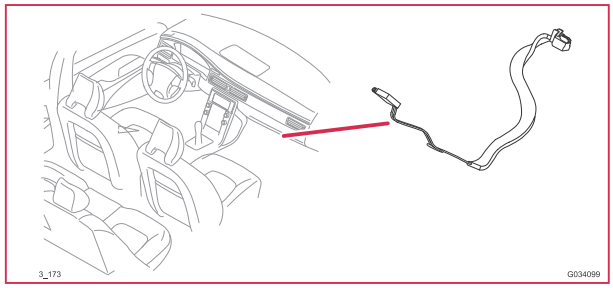

3/176 Power window switches, driver's door

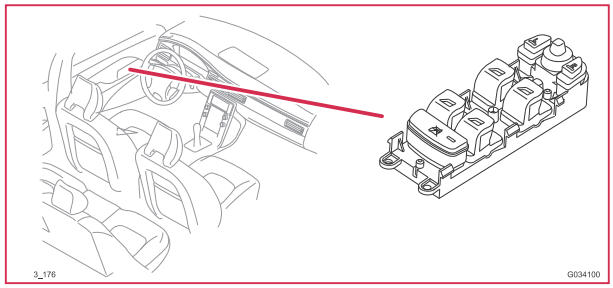

3/217 Contact, left rear belt buckle

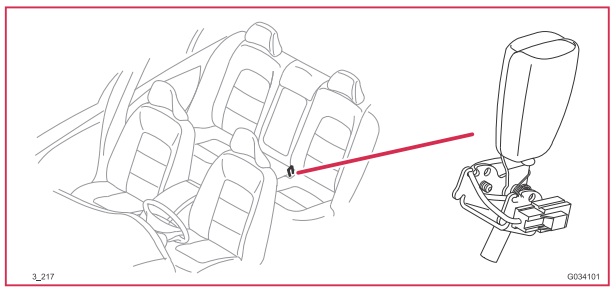

Component illustrations
3/218 - 3/274

3/218 Contact, center rear belt buckle

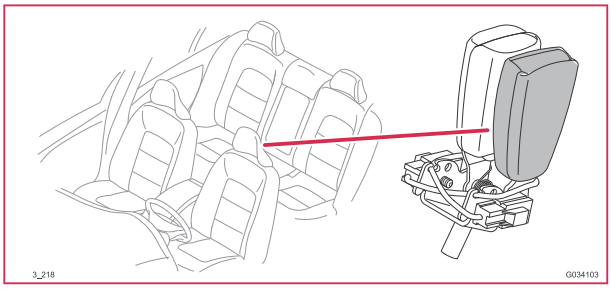

3/219 Contact, right rear belt buckle

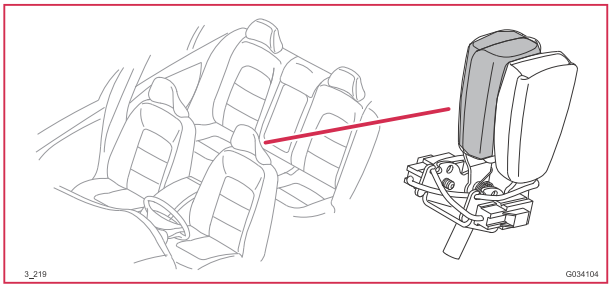

3/225 Switch unit, Continuously Controlled Damping (CCD)

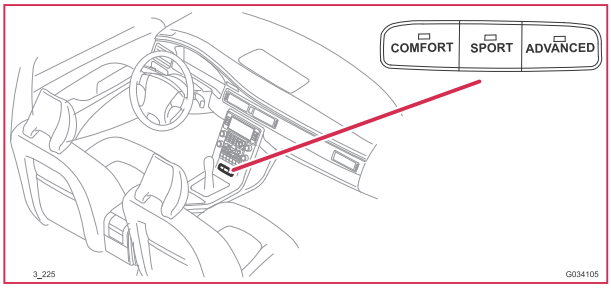

3/255 Position sensor, driver's seat

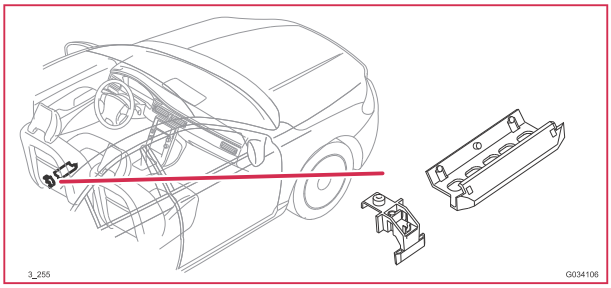

3/256 Position sensor, passenger seat

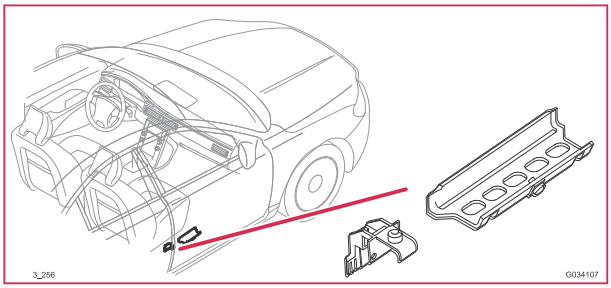

3/267 Switch unit, telematics

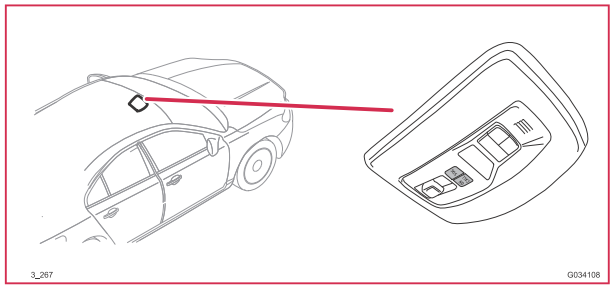

3/271 Contact, immobilizer, clutch pedal

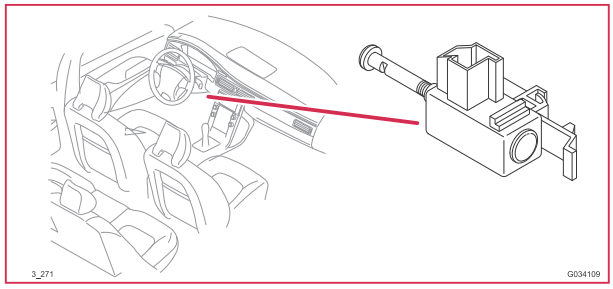

3/272 Switch, parking brake

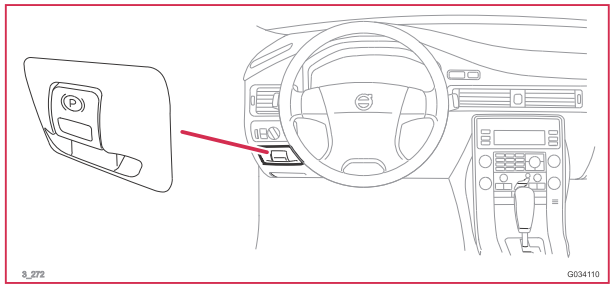

3/273 Lock contact, left front door

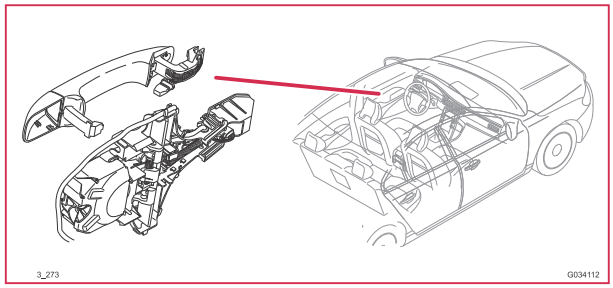

3/274 Lock contact, right front door

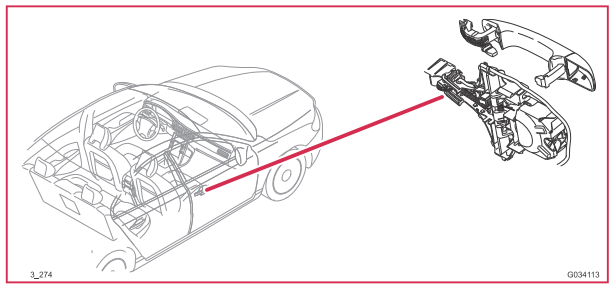

Component illustrations
3/275 - 3/325

3/275 Lock contact, left rear door

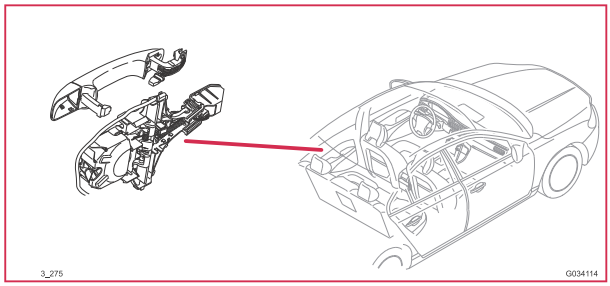

3/276 Lock contact, right rear door

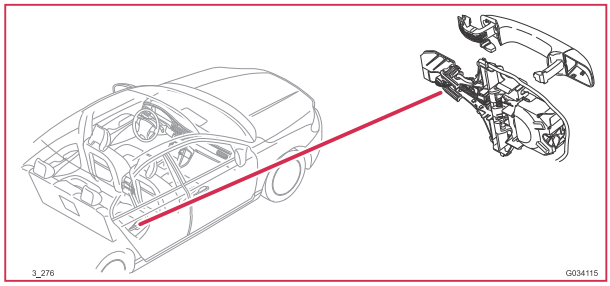

3/281 Infotainment Control Module (ICM)

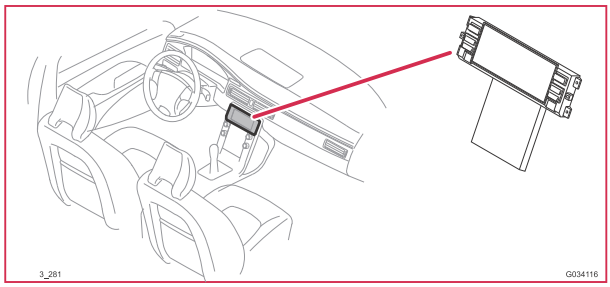

3/282 Switch indicator 1st gear

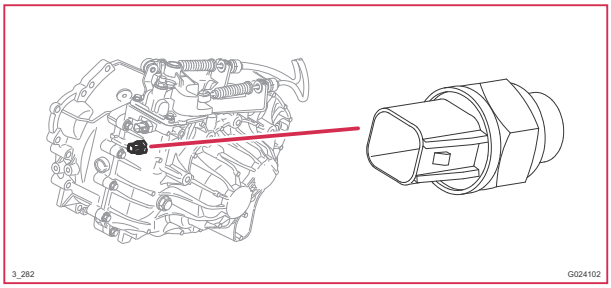

3/284 Diagnostic contact, brake light

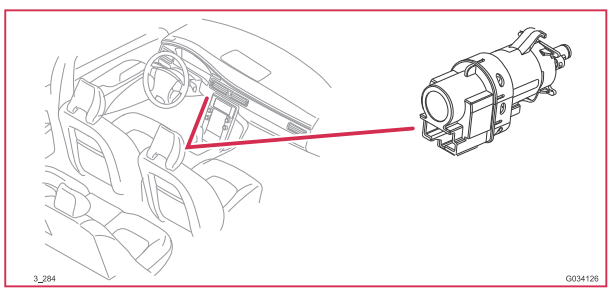

3/291 Tailgate closing switch, V70

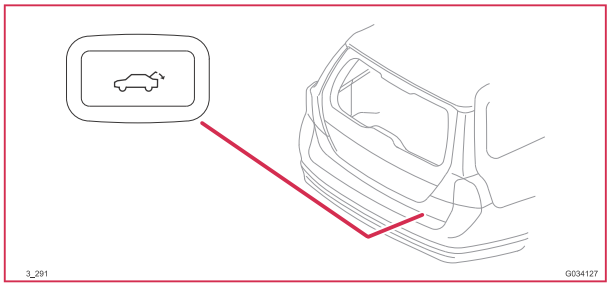

3/293 Handsfree control panel cellular phone

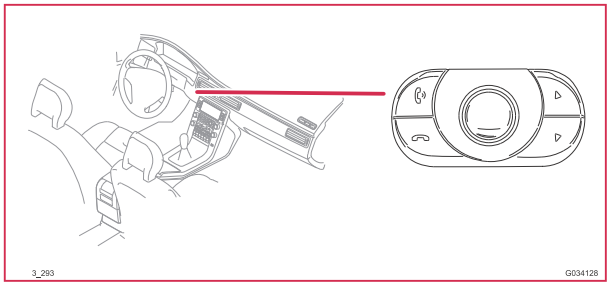

3/299 Switch, passenger seat adjustment, rear seat

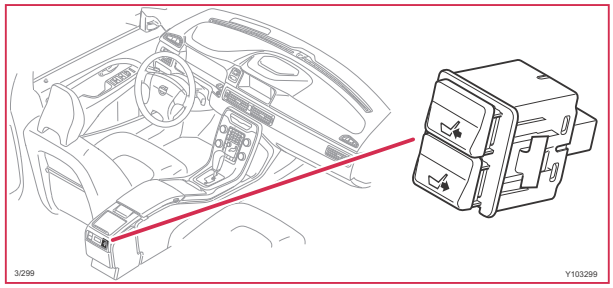

3/324 Switch, rear seat adjustment, left-hand side

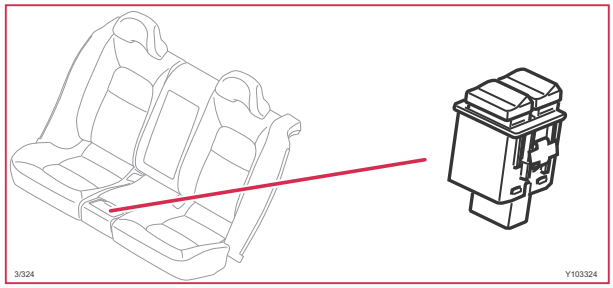

3/325 Switch, rear seat adjustment, right-hand side

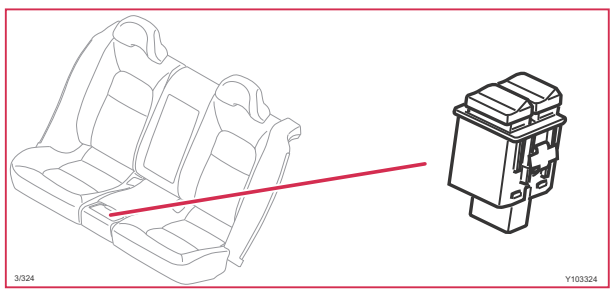

Component illustrations
3/330 - 4/28B

3/330 Switch, rear seat massage and ventilation, left

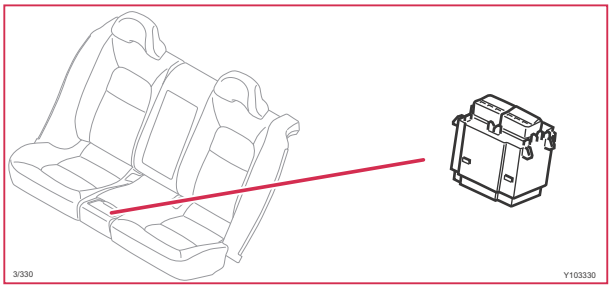

3/331 Switch, rear seat massage and ventilation, right

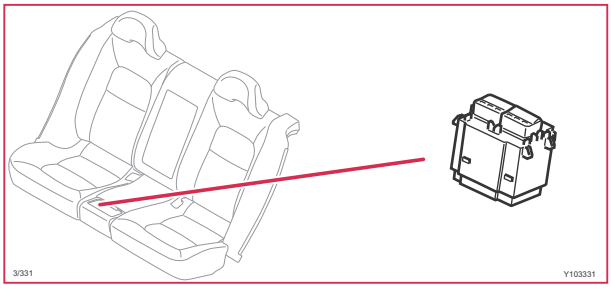

3/359 Paddle shifter, left

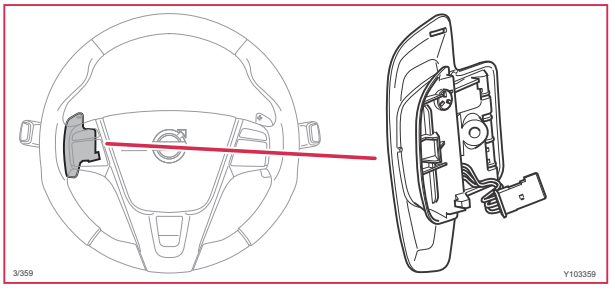

3/360 Paddle shifter, right

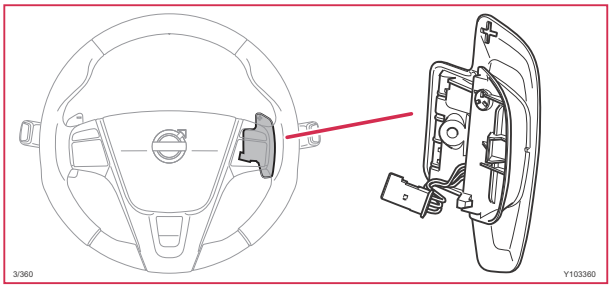

4/6 Climate control system

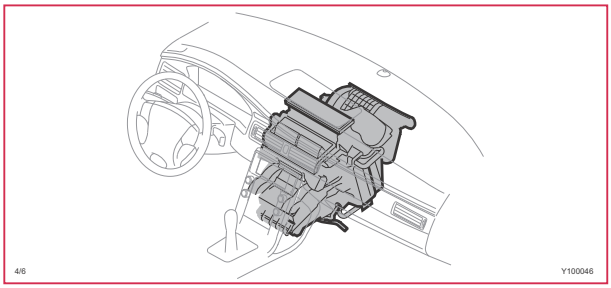

4/7 Combustion Preheater Module (CPM)

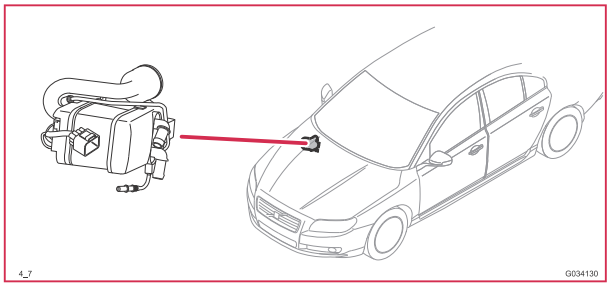

4/9 Supplemental restraint system module (SRS)

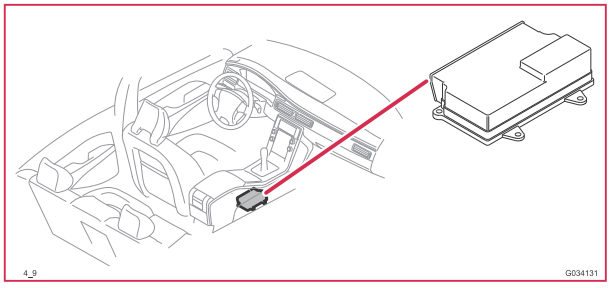

4/16 Brake Control Module (BCM)

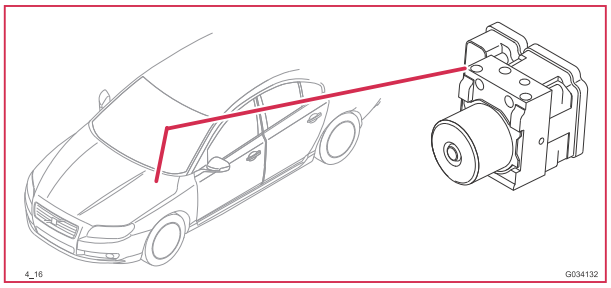

4/28 Transmission Control Module (TCM), AWF21/AWF22

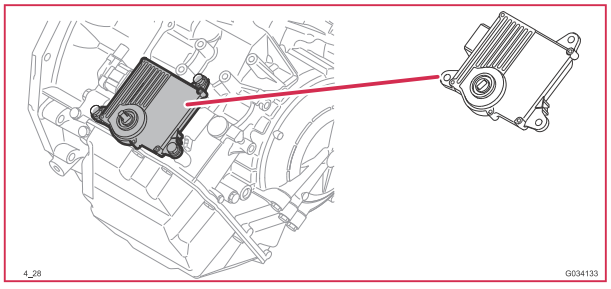

4/28B Transmission Control Module (TCM), MPS6

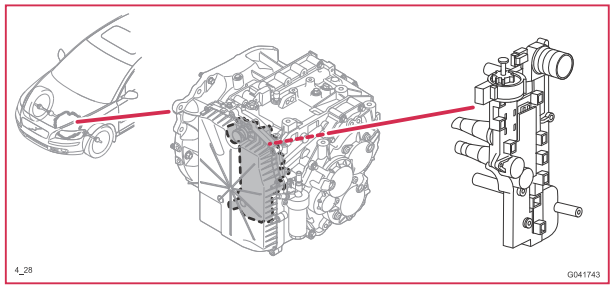

Component illustrations
4/31 - 4/50

4/31 Passenger compartment fan control module

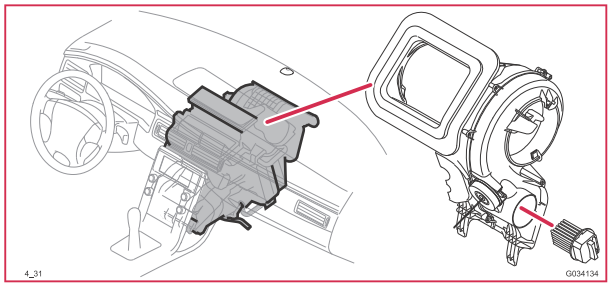

4/33 Sunroof control module

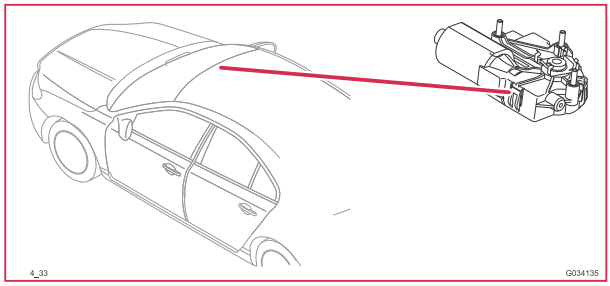

4/46 Engine Control Module (ECM), 4-Cyl. 1.6L Turbo

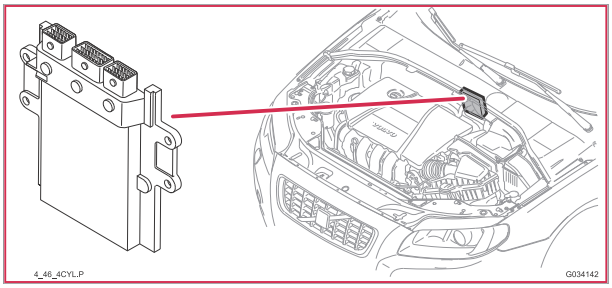

4/46 Engine Control Module (ECM), 4-Cyl. 2.0L Turbo

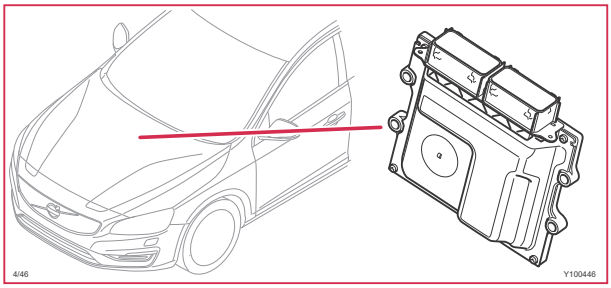

4/46 Engine Control Module (ECM), 4-Cyl. 1.6L Diesel

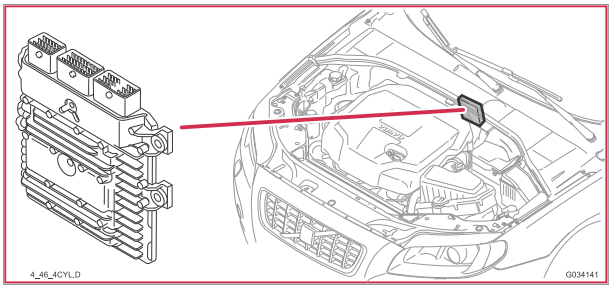

4/46 Engine Control Module (ECM), 4-Cyl. 2.0L Diesel

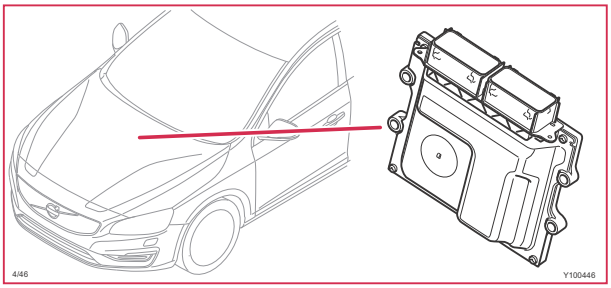

4/46 Engine Control Module (ECM), 5-Cyl. Turbo

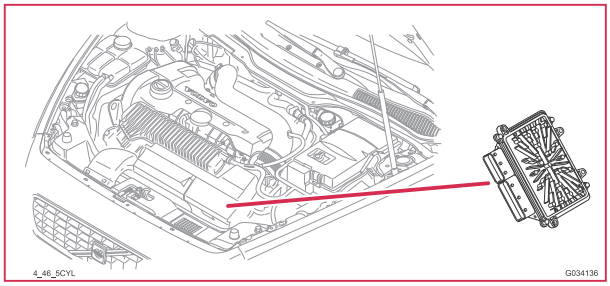

4/46 Engine Control Module (ECM), 5-Cyl. Diesel

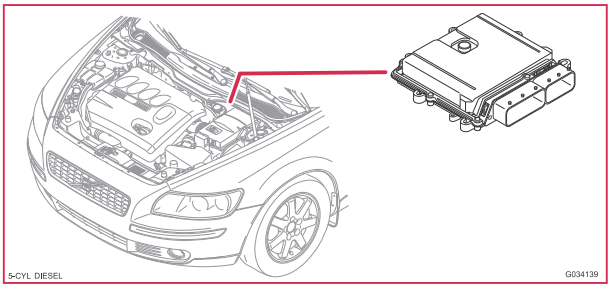

4/46 Engine Control Module (ECM), 6-Cyl.

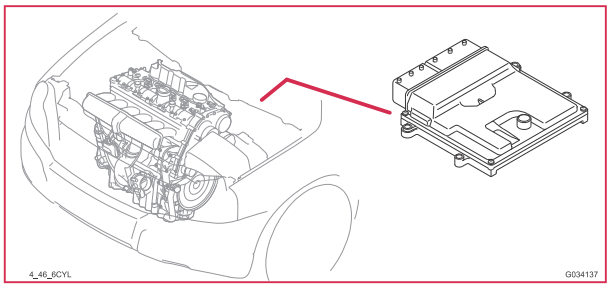

4/50 Throttle unit, 4-Cyl. Turbo

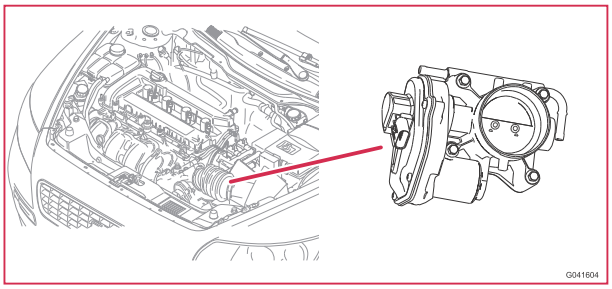

Component illustrations
4/50 - 4/68

4/50 Throttle unit, 5-Cyl.

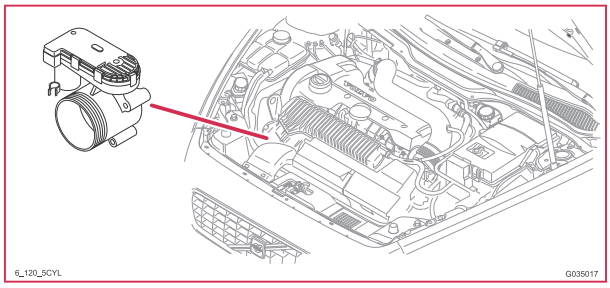

4/50 Throttle unit, Diesel

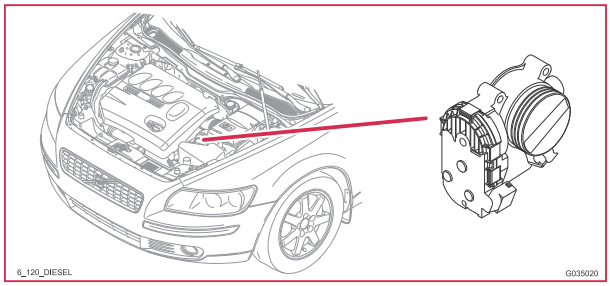

4/52 Power Seat Module (PSM)

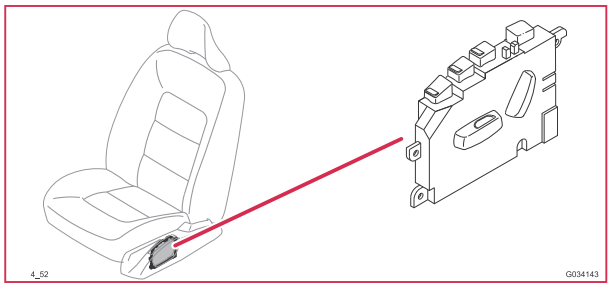

4/56 Central Electronic Module (CEM)

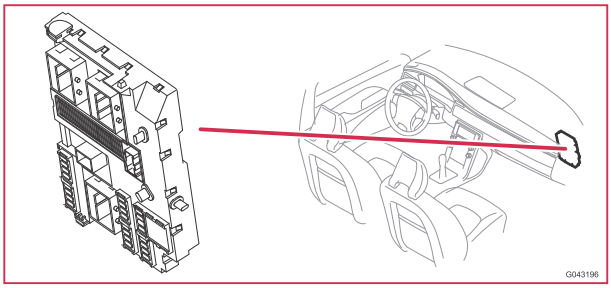

4/56:C1 Central Electronic Module (CEM)

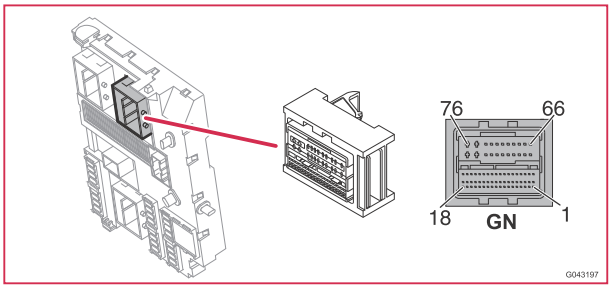

4/56:C2 Central Electronic Module (CEM)

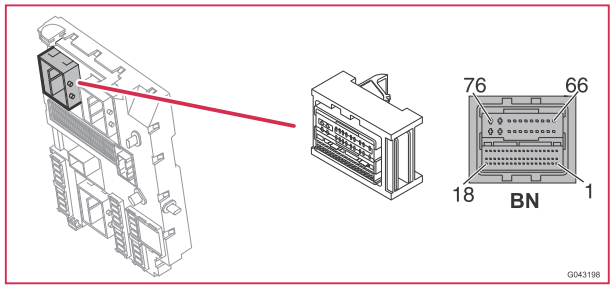

4/56:C3 Central Electronic Module (CEM)

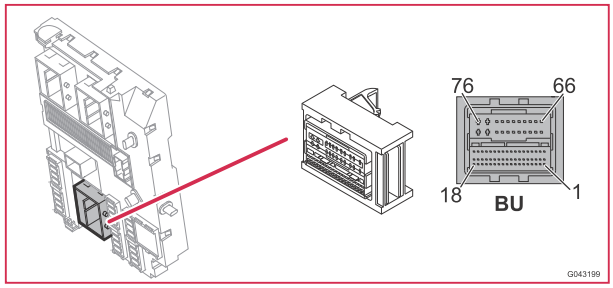

4/56:C4 Central Electronic Module (CEM)

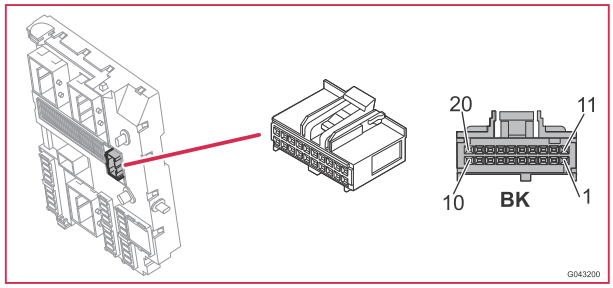

4/56:C5 Central Electronic Module (CEM)

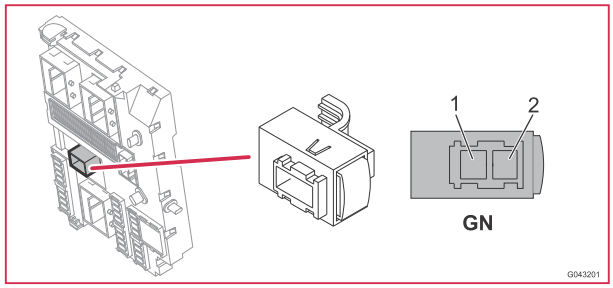

4/68 Steering Wheel Angle Sensor Module (SAS)

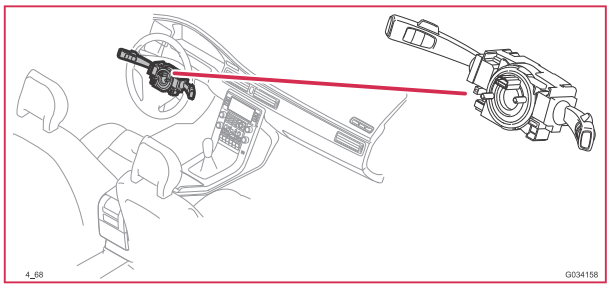

Component illustrations
4/71 - 4/102

4/71 Cooling fan control module

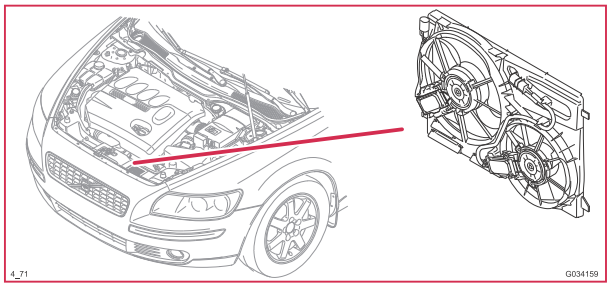

4/76 Remote control unit for garage door opener

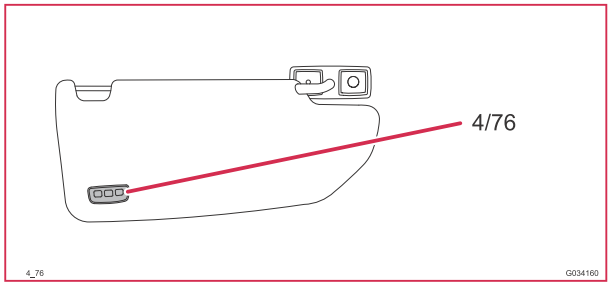

4/80 Forward Sensing Module (FSM)

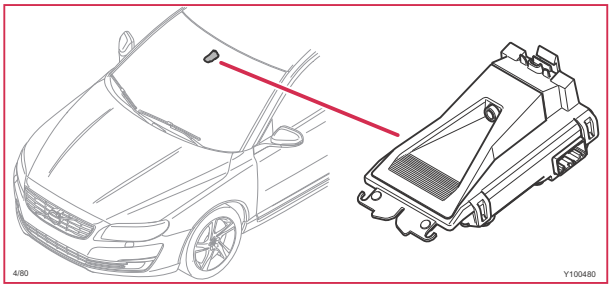

4/82 Differential Electronic Module (DEM)

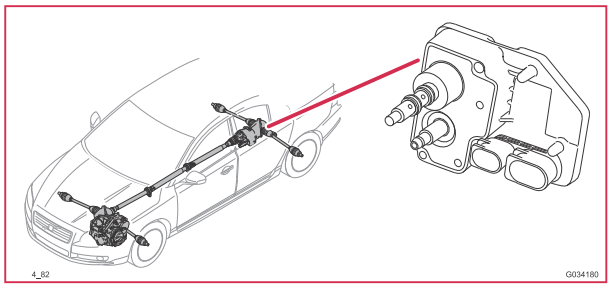

4/83 Fuel pump control module

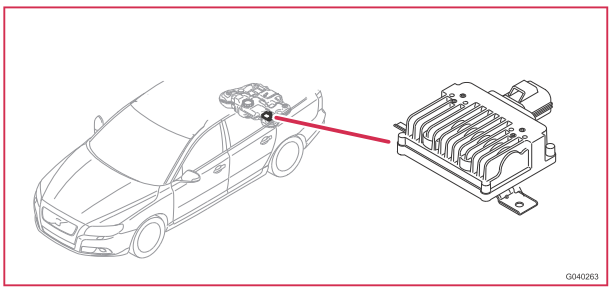

4/84 Suspension Module (SUM)

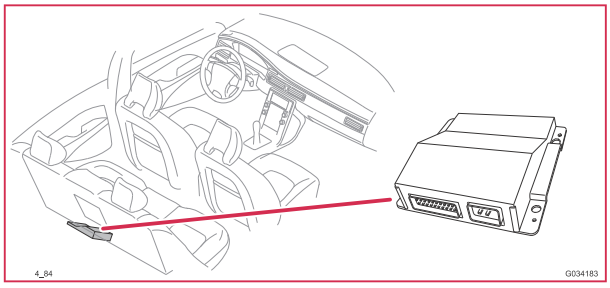

4/86 Parking Assistance Module (PAM)

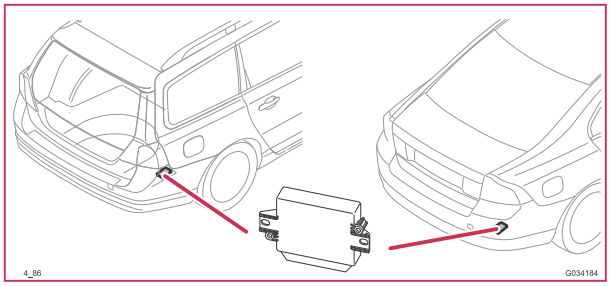

4/93 Keyless Vehicle Module (KVM)

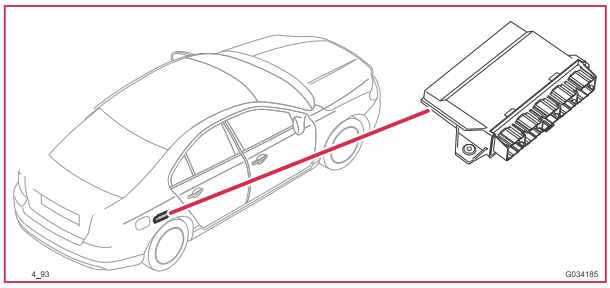

4/99 Electronic power steering control module

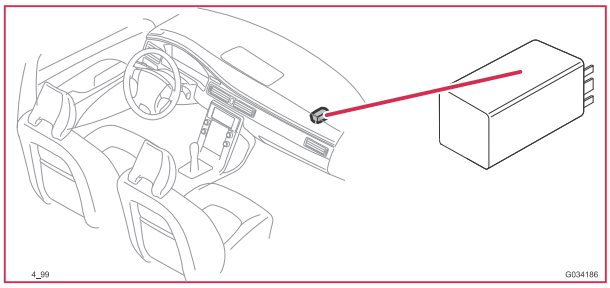

4/102 Steering Column Lock Module (SCL)

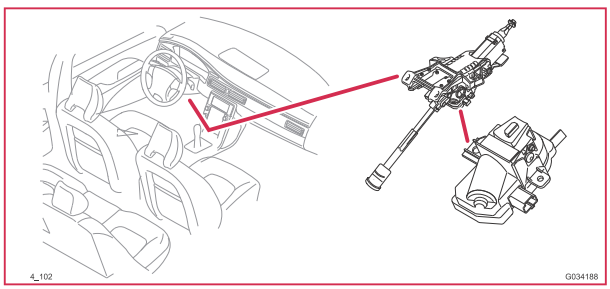

Component illustrations
4/106- 4/125

4/106 Control module, remote parking heater start

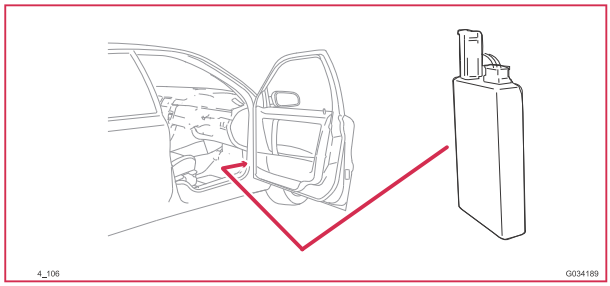

4/109 Glow plug control module

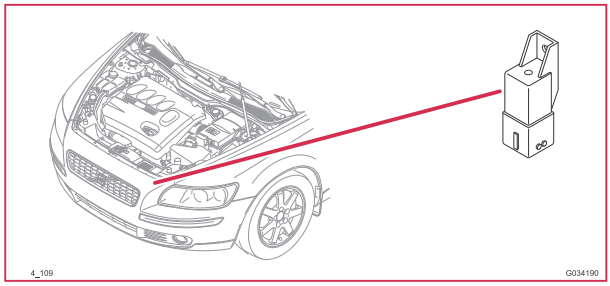

4/110 Trailer Module (TRM)

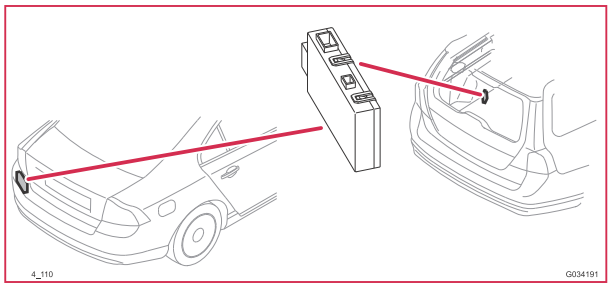

4/115 Park Brake Module (PBM)

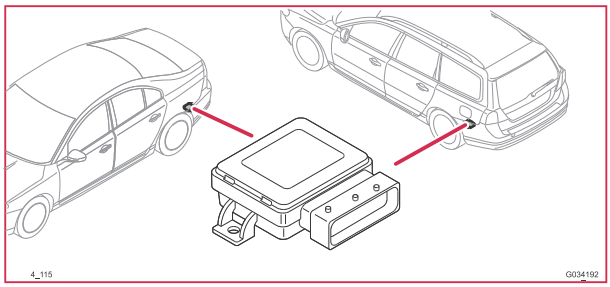

4/116 Power Operated Tailgate Module (POT), V70

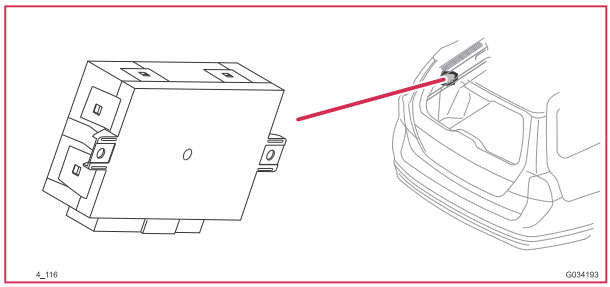

4/119 Remote Keyless Entry (RKE)

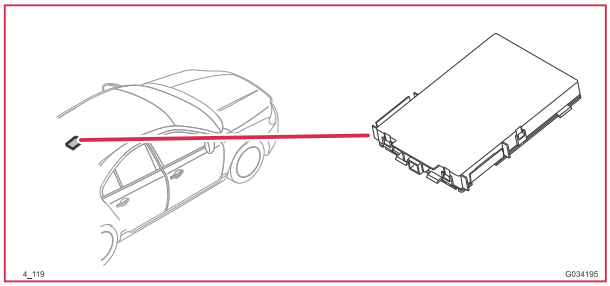

4/119.2 Remote Receiver Module (RRX)

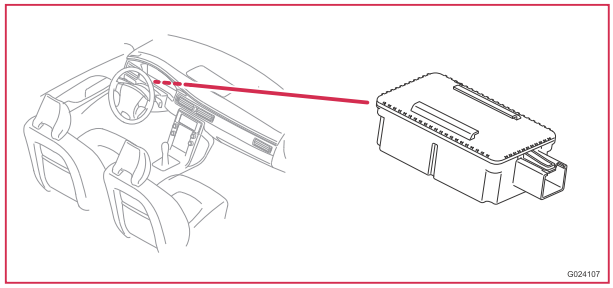

4/120 Parking Assistance Camera module (PAC)

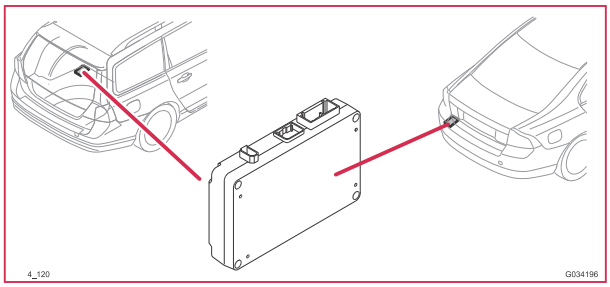

4/124 Accessory USB unit (AUU)

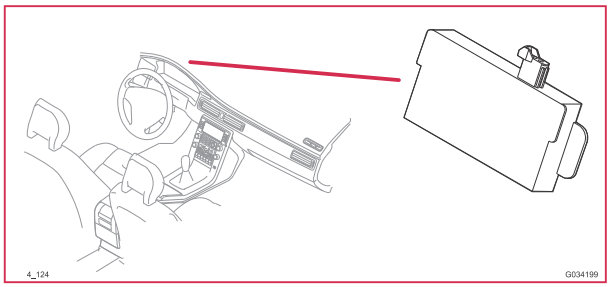

4/125 Closing velocity module (CVM)

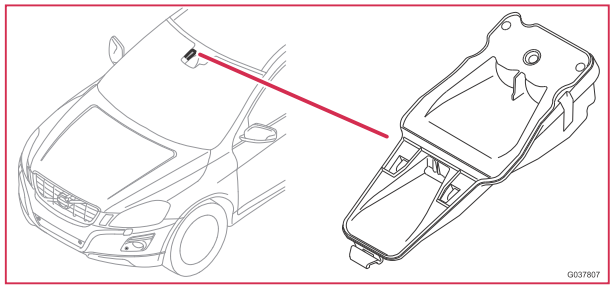

Component illustrations
4/131 - 6/18

4/131 Control module back massage left

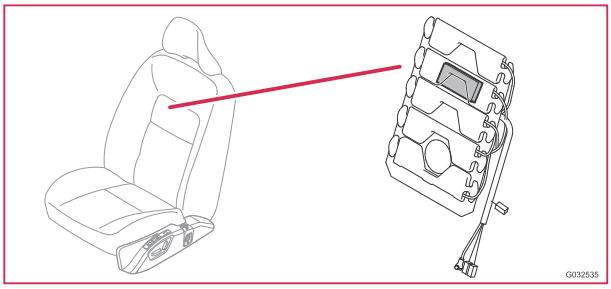

4/133 Control module back massage right

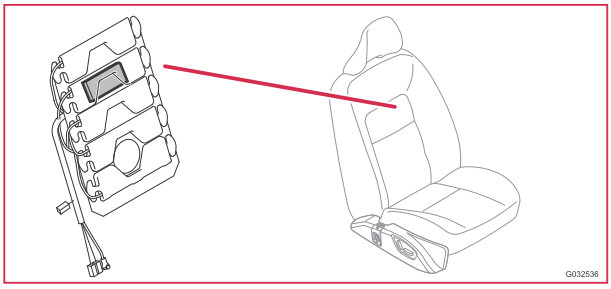

4/148 Heated Steering Wheel Module (HSWM)

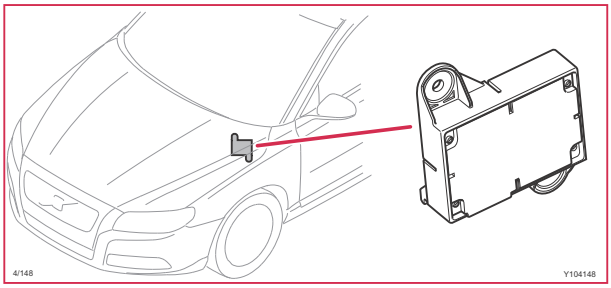

4/156 Accessory Connectivity Unit (ACU)

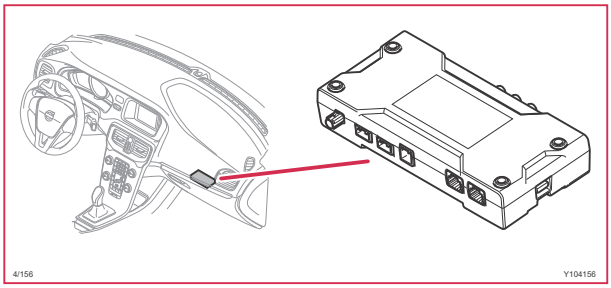

5/1 Driver Information Module (DIM)

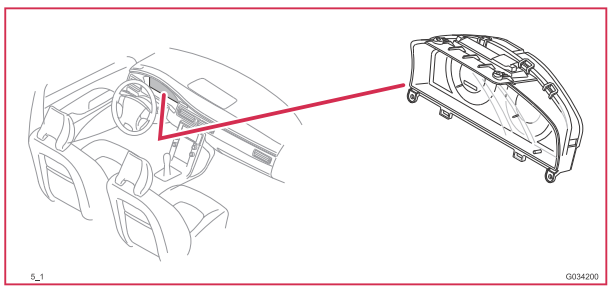

6/1 Wiper Motor Module (WMM)

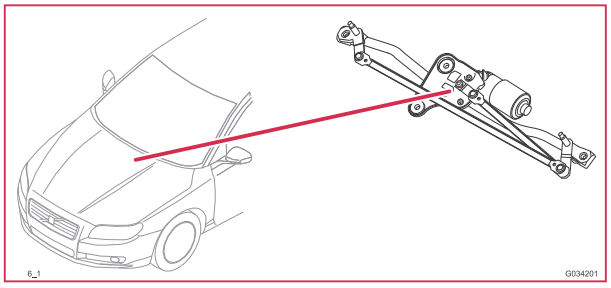

6/8 Central locking motor, trunk lid

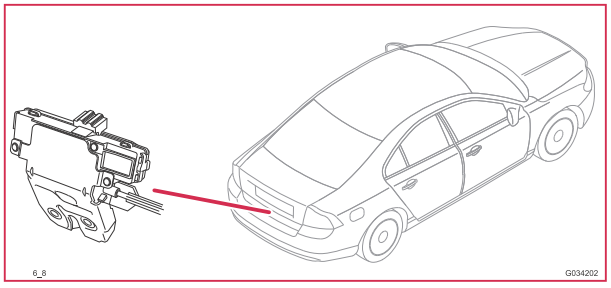

6/16 Driver seat motor, backrest angle

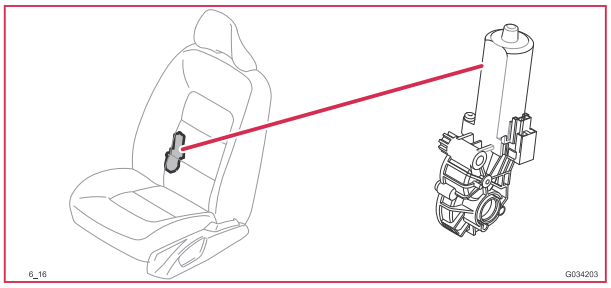

6/17 Driver seat motor, up/down front edge

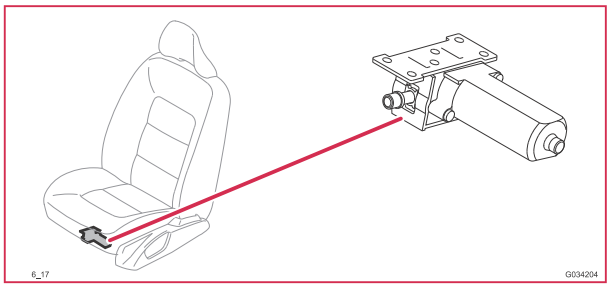

6/18 Driver seat motor, up/down rear edge

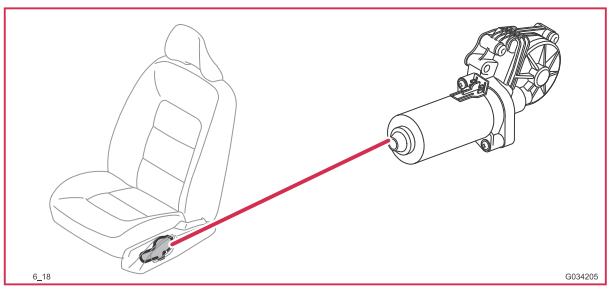

Component illustrations
6/19 - 6/33

6/19 Driver seat motor, forward/backward

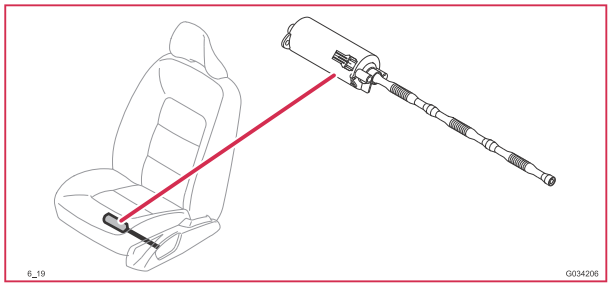

6/20 Passenger seat motor, forward/backward

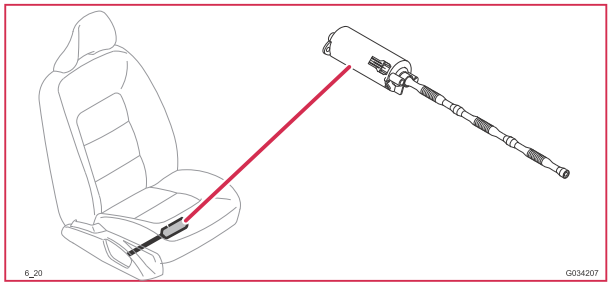

6/21 Passenger seat motor, up/down front edge

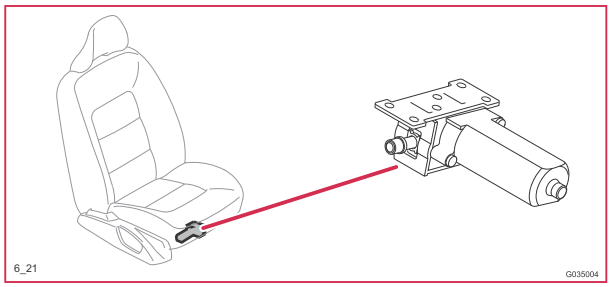

6/22 Passenger seat motor, up/down rear edge

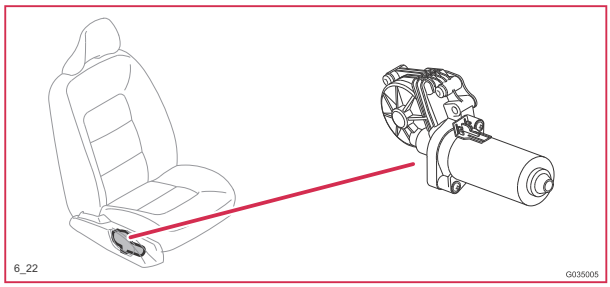

6/23 Passenger seat motor, backrest angle

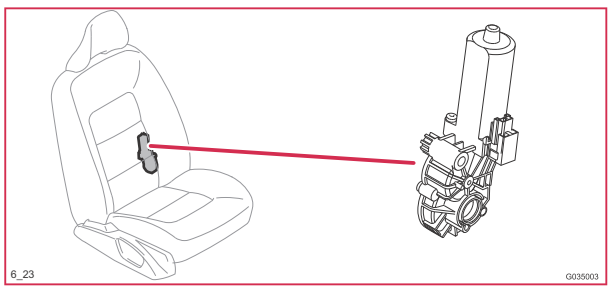

6/25 Starter motor

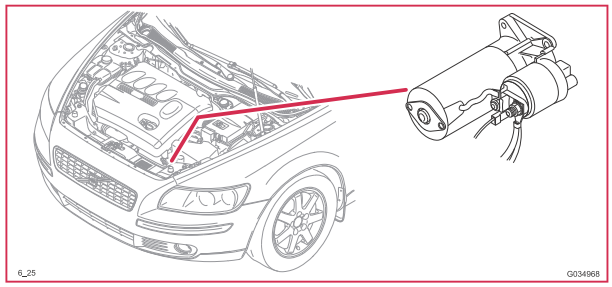

6/26 Alternator Control Module (ACM)

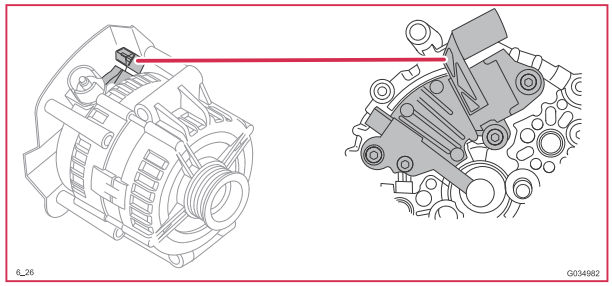

6/28 Motor, passenger compartment fan

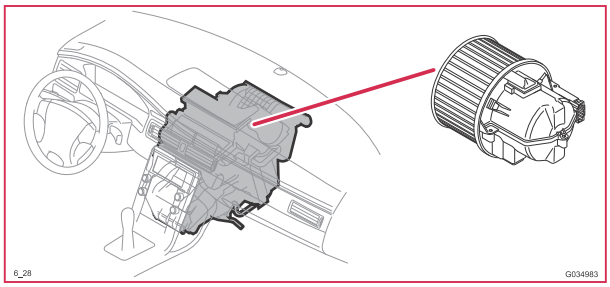

6/32 Rear window wiper motor, V70

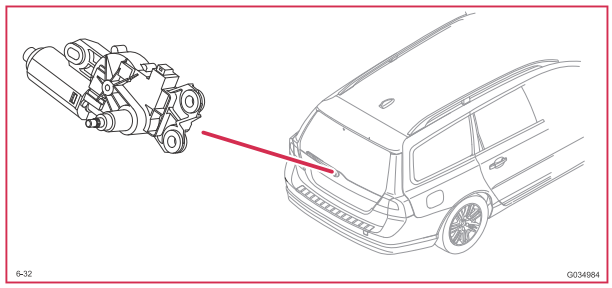

6/33 Fuel pump

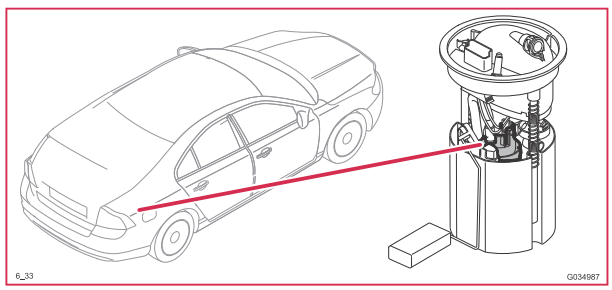

Component illustrations
6/35 - 6/60

6/35 Fuel pump, auxiliary heater

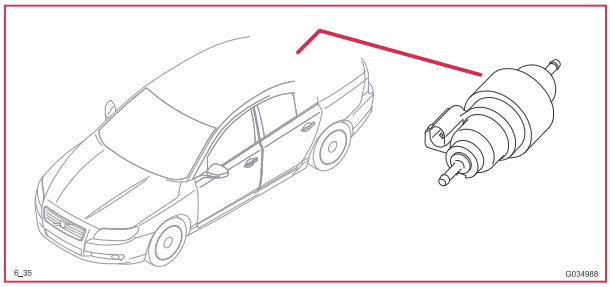

6/36 Lock motor, central locking, left front door

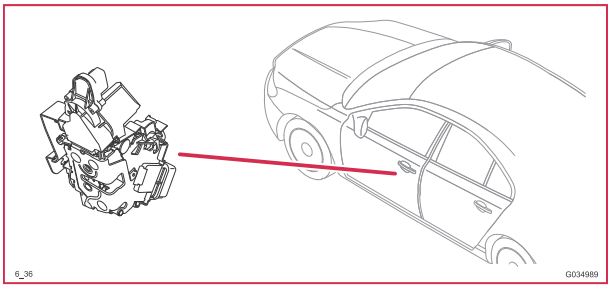

6/37 Lock motor, fuel filler cover

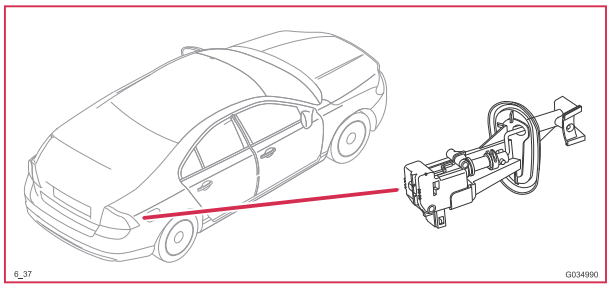

6/48 Damper Motor Module (DMM), recirculation

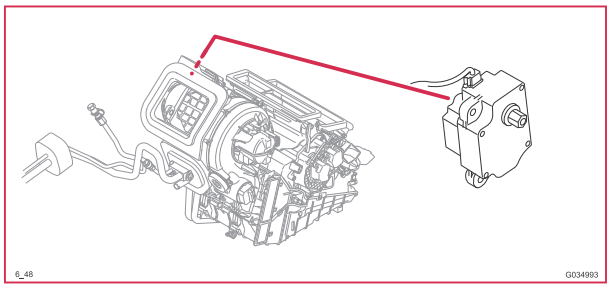

6/55 Lock motor, central locking, right front door

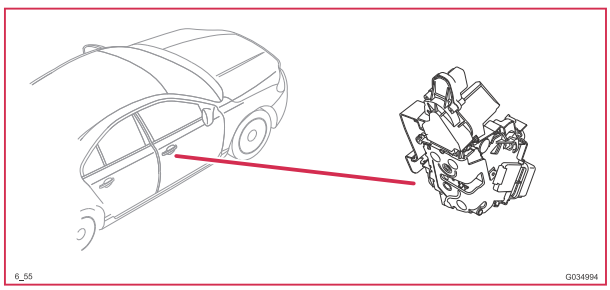

6/56 Lock motor, central locking, right rear door

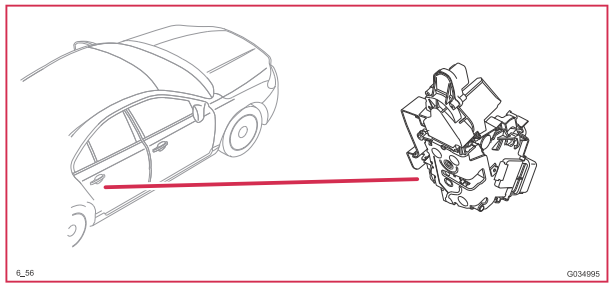

6/57 Lock motor, central locking, left rear door

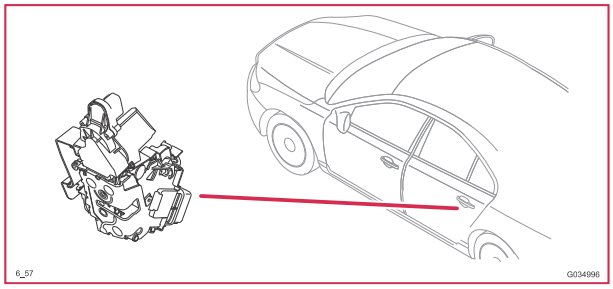

6/58 Motor, front driver's door power window

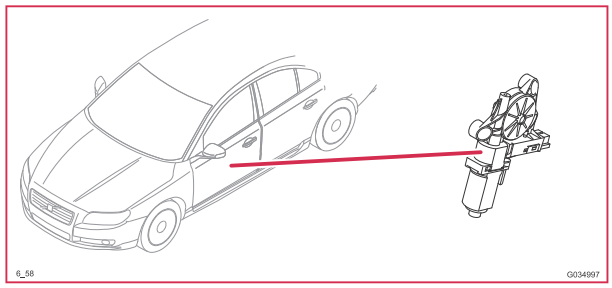

6/59 Motor, rear left power window

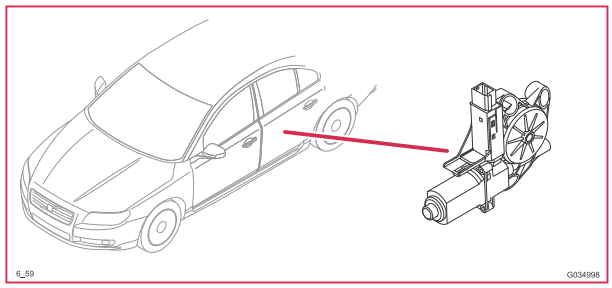

6/60 Motor, front passenger door power window

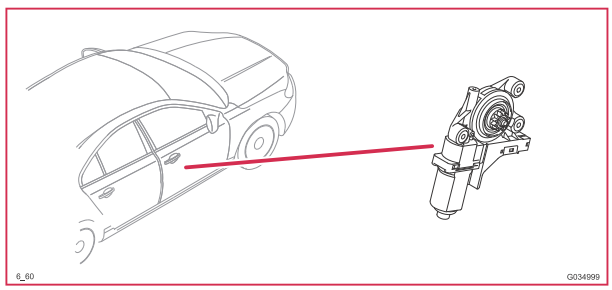

Component illustrations
6/61 - 6/95

6/61 Motor, rear right power window

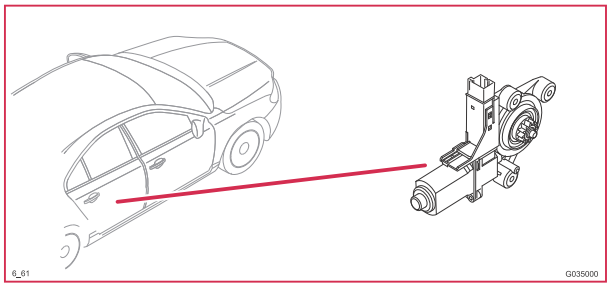

6/62 Power door mirror, left

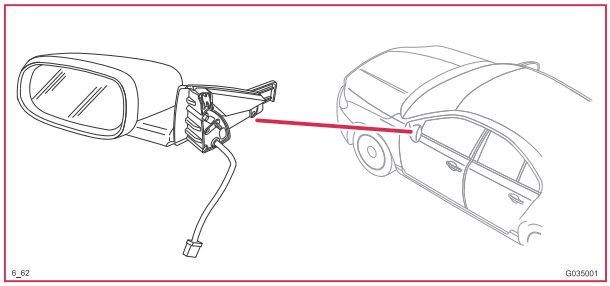

6/63 Power door mirror, right

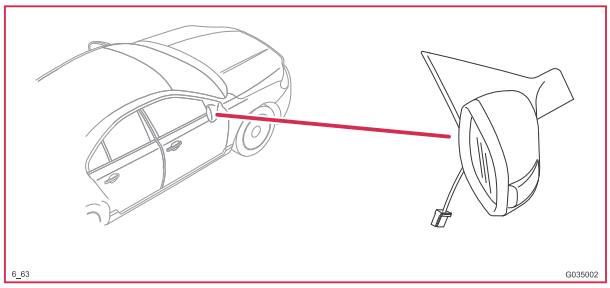

6/67 Pump, fuel leakage control

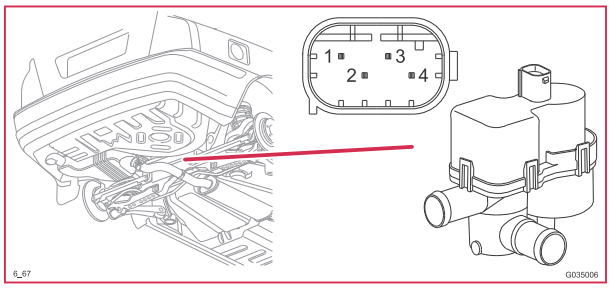

6/71 Valve, speed-dependent power steering

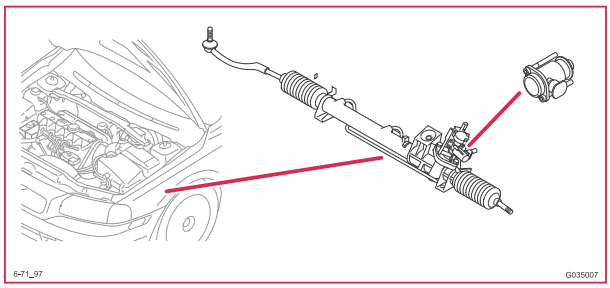

6/73 Coolant pump

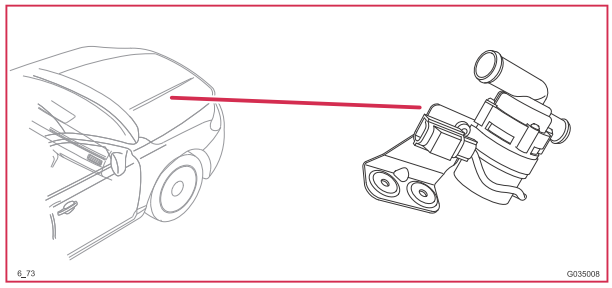

6/74 Motor, sun curtain

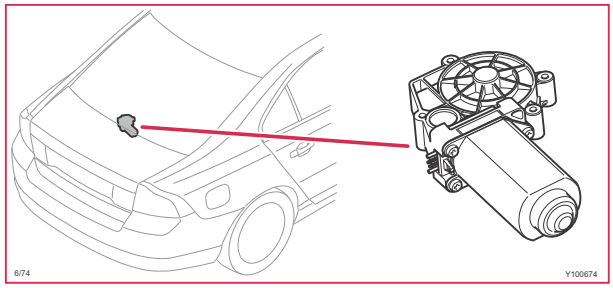

6/88 Motor, seat backrest reclining, left rear

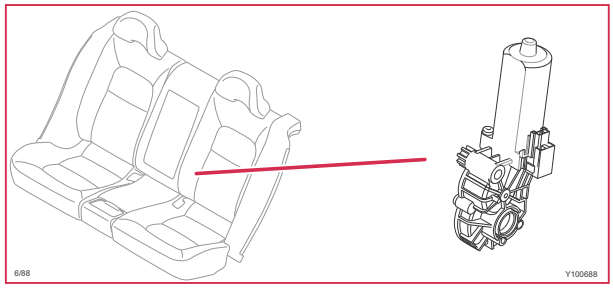

6/89 Motor, seat backrest reclining, right rear

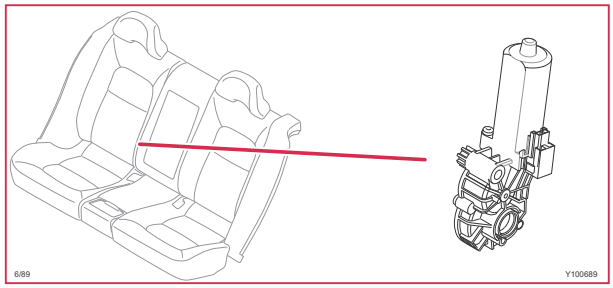

6/95 Damper Motor Module (DMM), temperature, left side

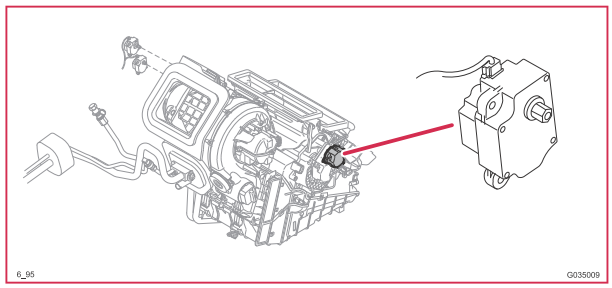

Component illustrations
6/96 - 6/141

6/96 Damper Motor Module (DMM), temperature, right side

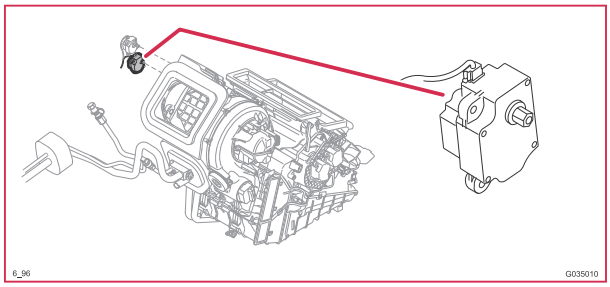

6/102 Damper Motor Module (DMM), defroster

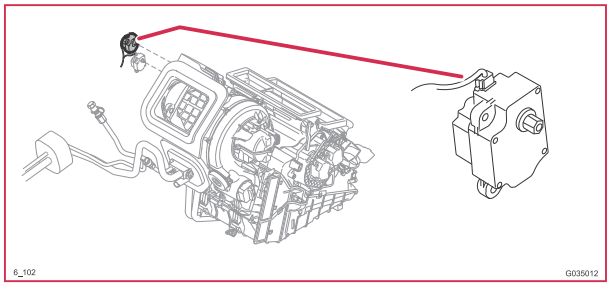

6/103 Damper Motor Module (DMM), floor/ventilation

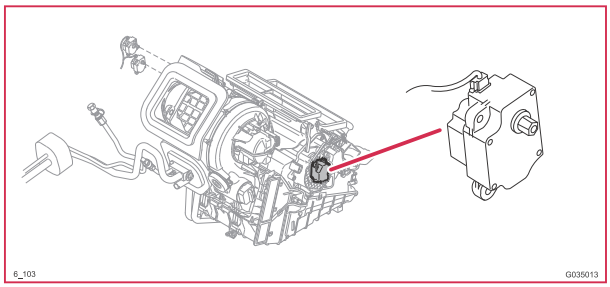

6/104 High pressure headlight washer motor

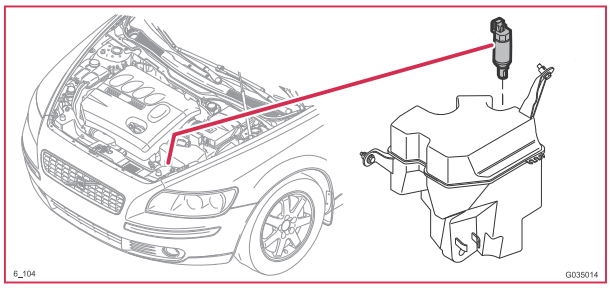

6/113 Coolant water pump

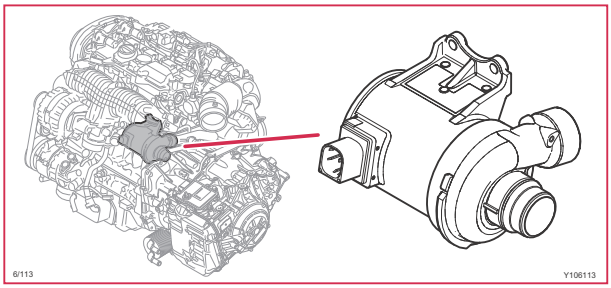

6/120 Throttle unit, 6-Cyl.

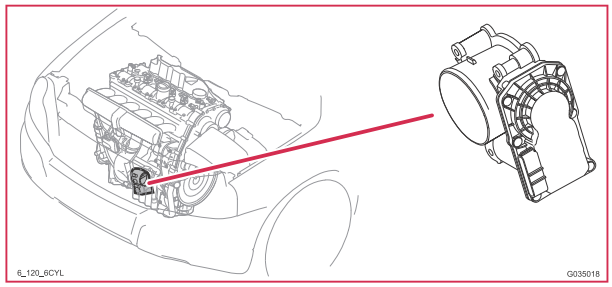

6/127 Washer motor

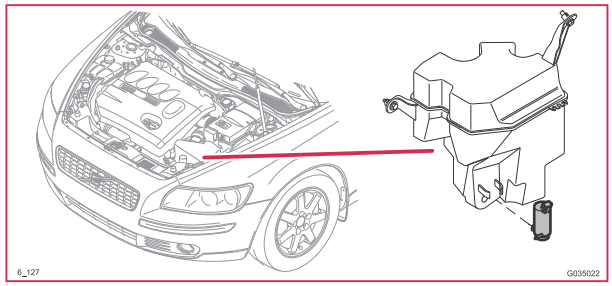

6/139 Upper actuating motor, intake manifold

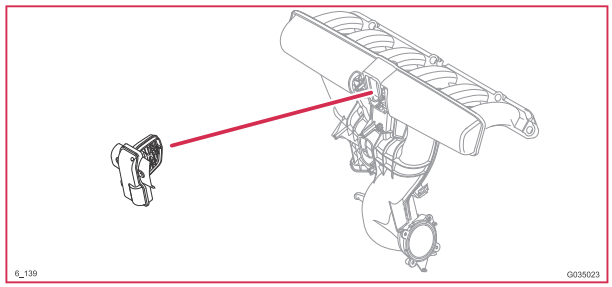

6/140 Lower actuating motor, intake manifold

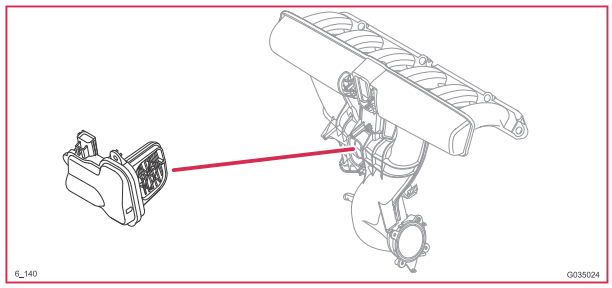

6/141 Motor folding head restraint left

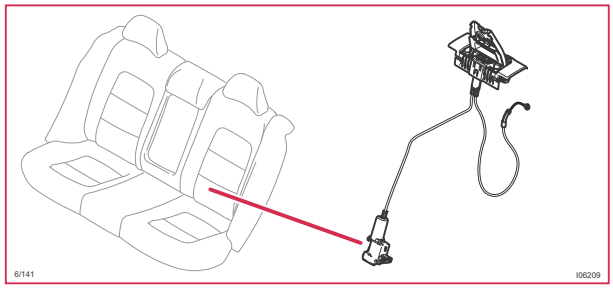

Component illustrations
6/142 - 6/176

6/142 Motor folding head restraint right

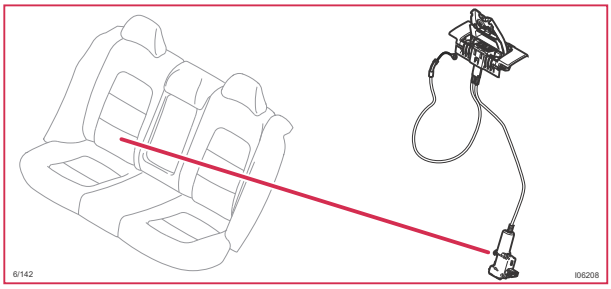

6/146 Lock motor, rear left brake disc

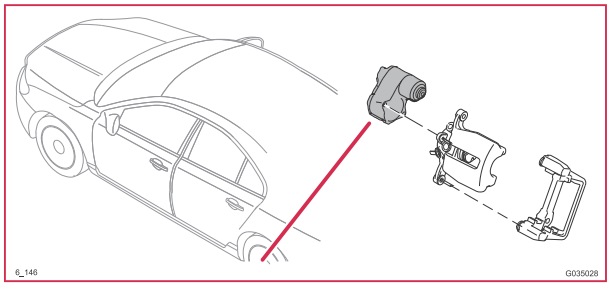

6/147 Lock motor, rear right brake disc

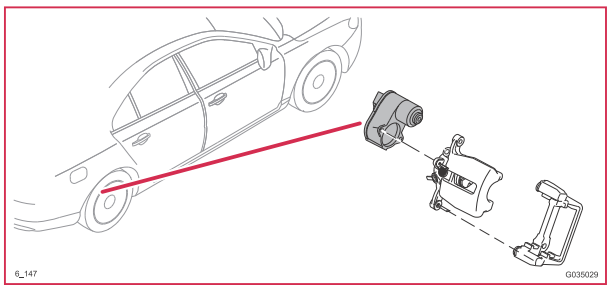

6/149 Tailgate closing motor, V70

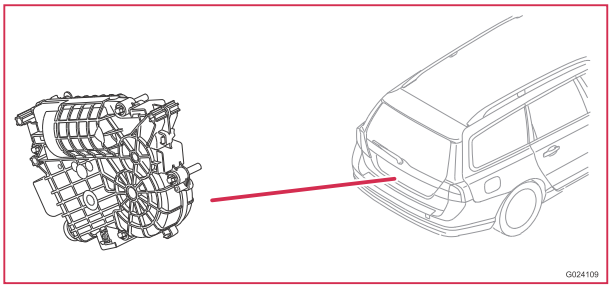

6/163 Electric power steering module (EPAS)

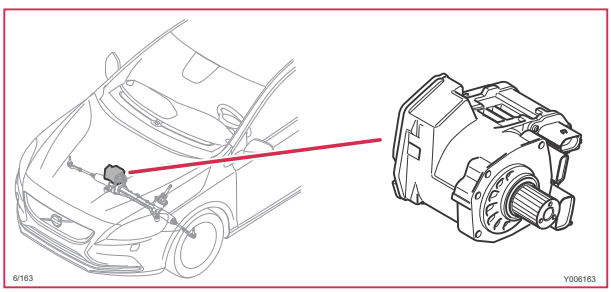

6/164 Electrohydraulic power steering module (EHPAS)

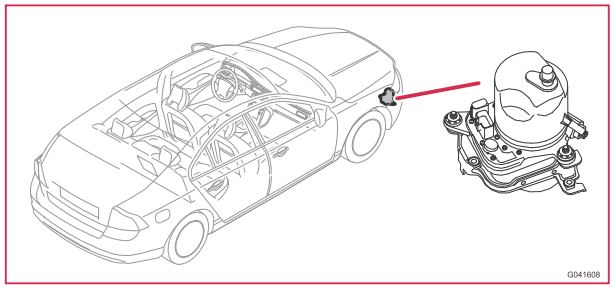

6/165 Motor tailgate opening left

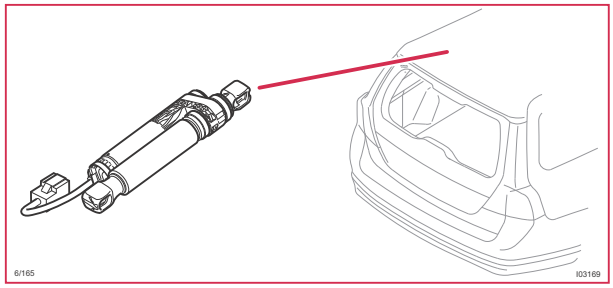

6/169 Left pump back massage

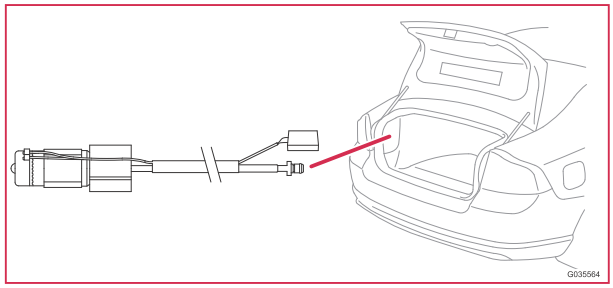

6/170 Right pump back massage

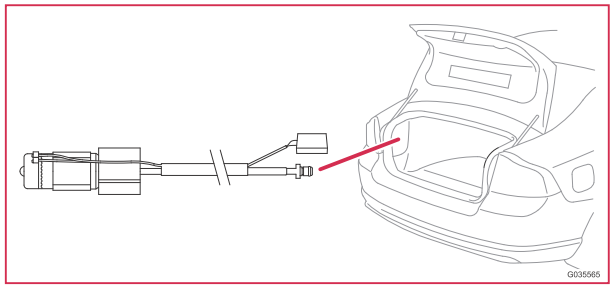

6/176 Electric oil pump

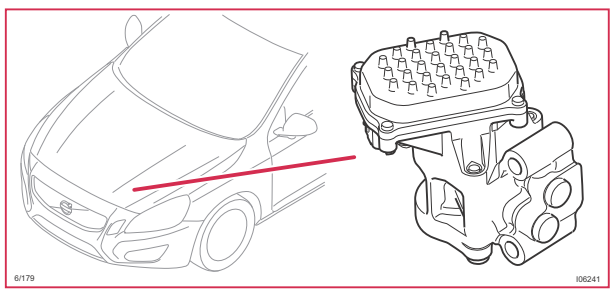

Component illustrations
6/181 - 7/8

6/181 Supercharger bypass actuator

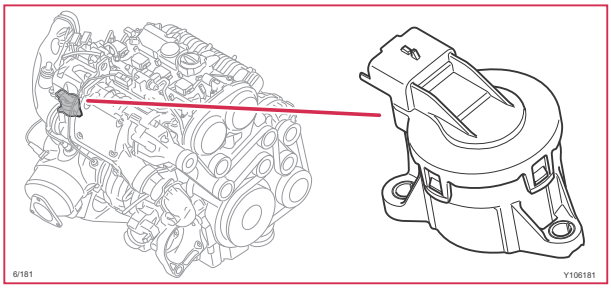

6/187 Fan, seat cushion ventilation, left rear

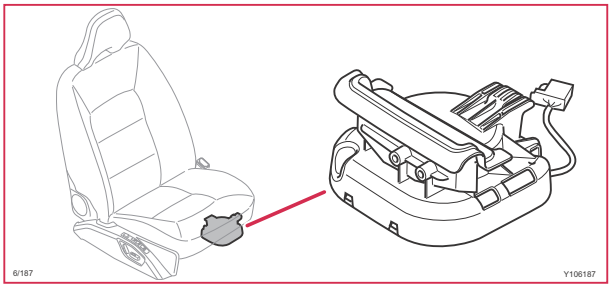

6/188 Fan, seat backrest ventilation, left rear

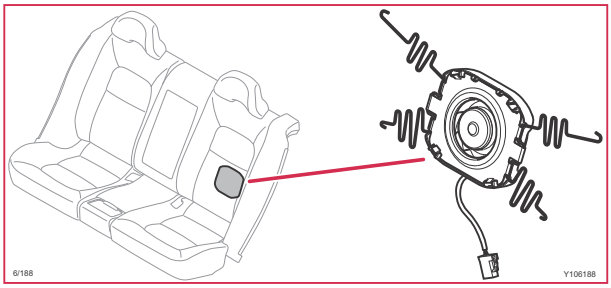

6/189 Fan, seat cushion ventilation, right rear

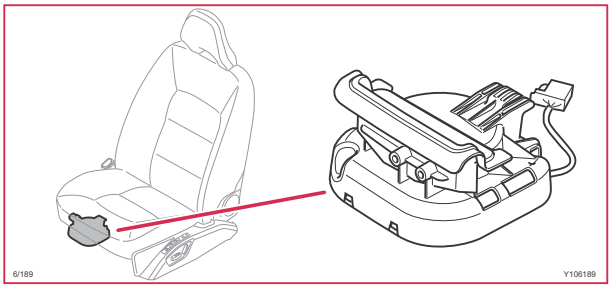

6/190 Fan, seat backrest ventilation, right rear

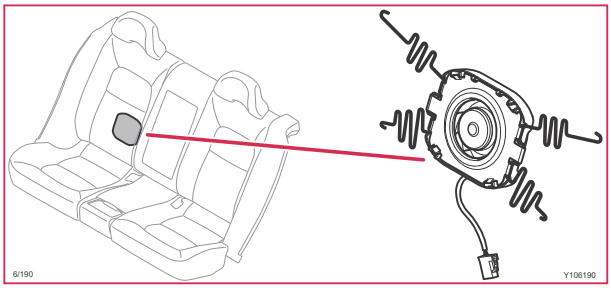

6/197 EGR Cooling pump

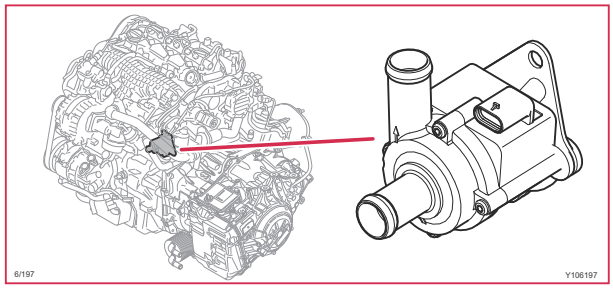

7/4 Brake fluid level sensor

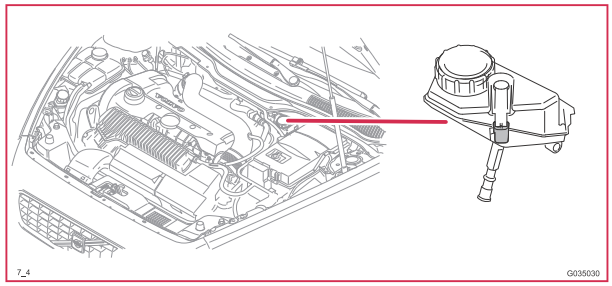

7/5 Washer fluid level sensor

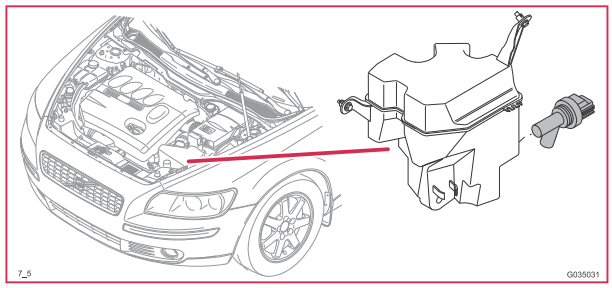

7/6 Oil pressure monitor

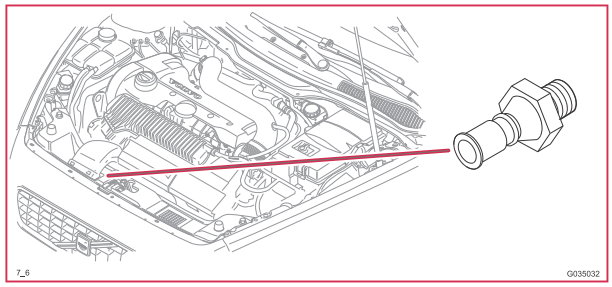

7/8 Pressure sensor, climate control system

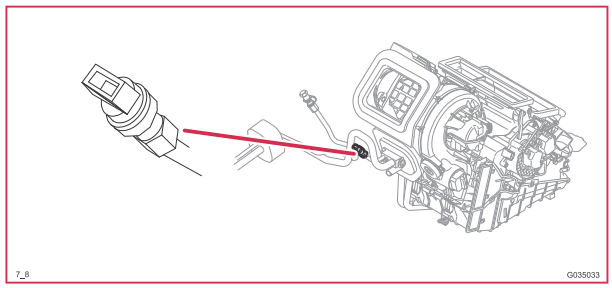

Component illustrations
7/12 - 7/25 4-Cyl.

7/12 Solar sensor, twilight sensor and indicator alarm

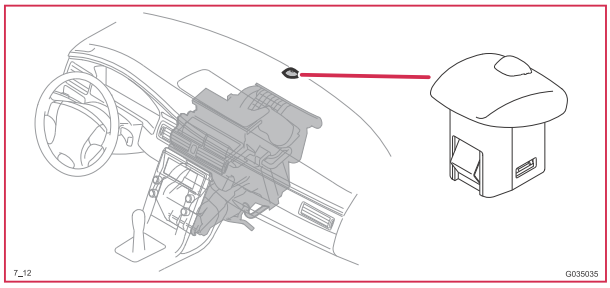

7/15 Front heated oxygen sensor, 4-Cyl.

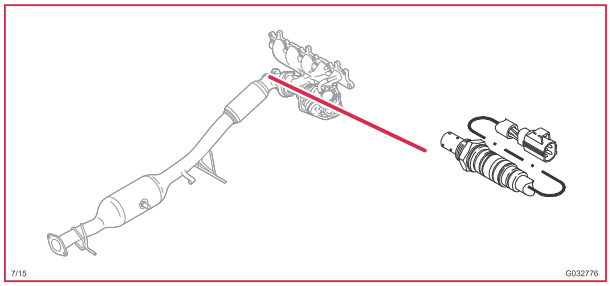

7/15 Front heated oxygen sensor, 5-Cyl.

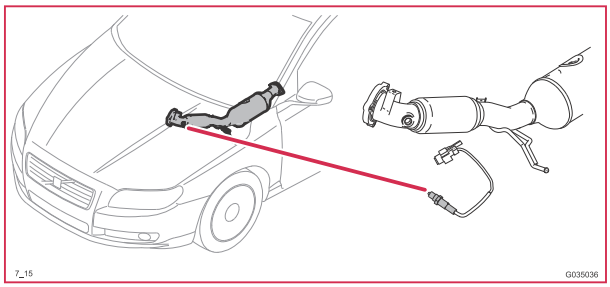

7/15 Front oxygen sensor, bank 1, 6-Cyl.

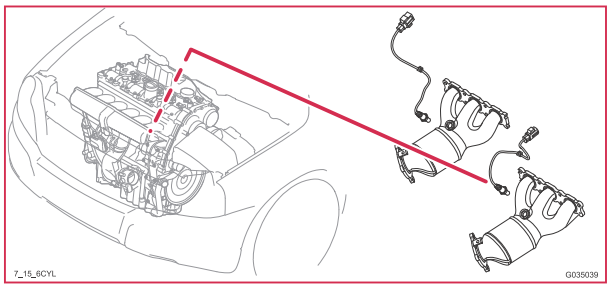

7/15 Front heated oxygen sensor, Diesel

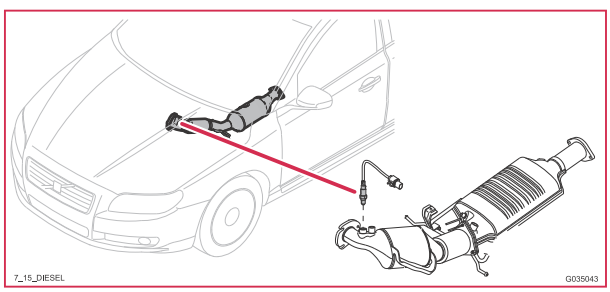

7/16 Sensor, coolant temperature

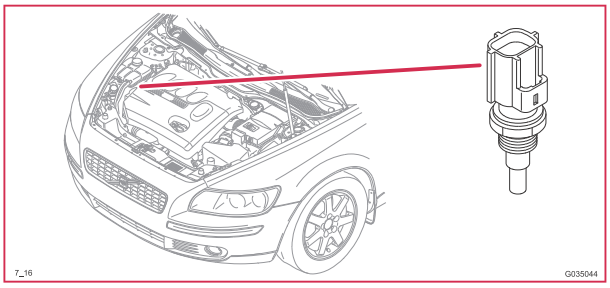

7/17 Mass airflow sensor (MAF)

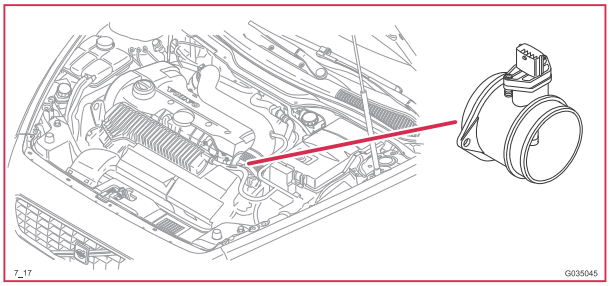

7/23 Rear knock sensor

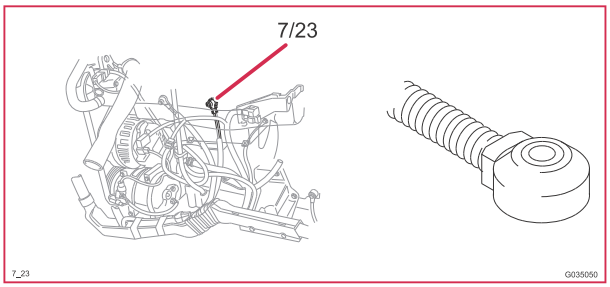

7/24 Front knock sensor

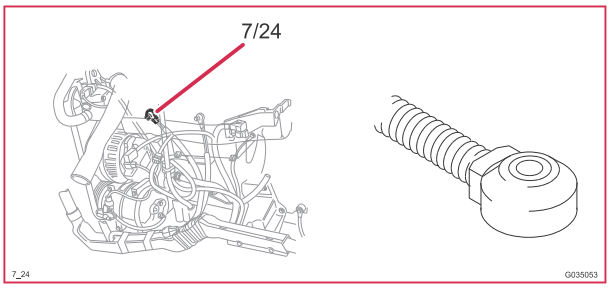

7/25 Impulse sensor, 4-Cyl.

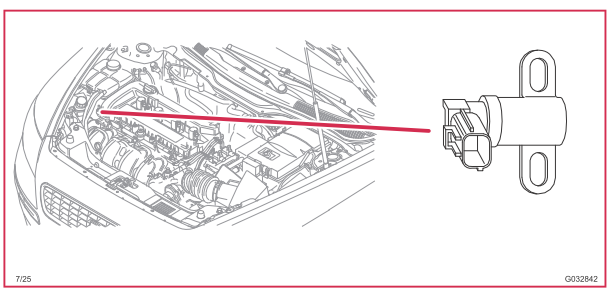

Component illustrations
7/25 5-Cyl.- 7/73

7/25 Impulse sensor, 5-Cyl. & Diesel

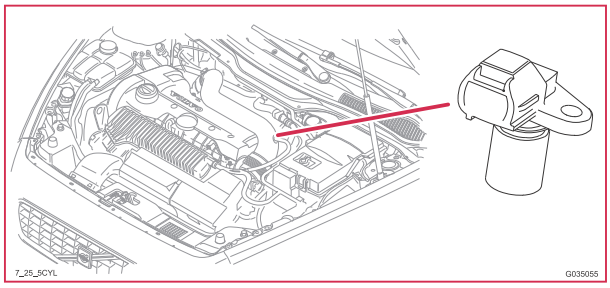

7/25 Impulse sensor, 6-Cyl.

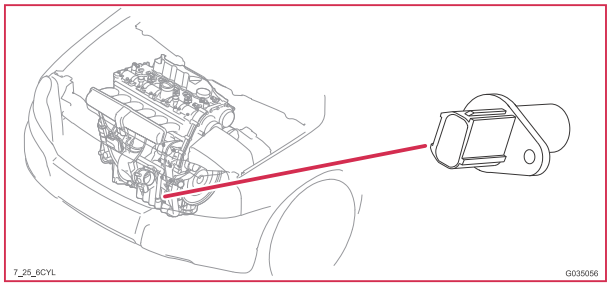

7/31 Sensor ABS, front left

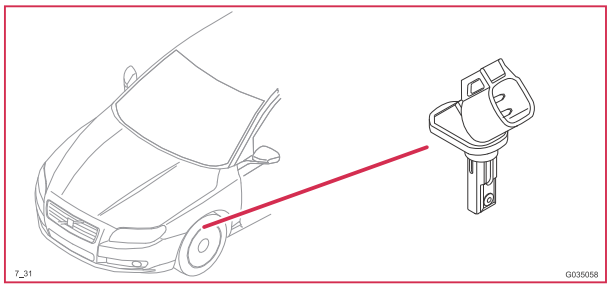

7/32 Sensor ABS, front right

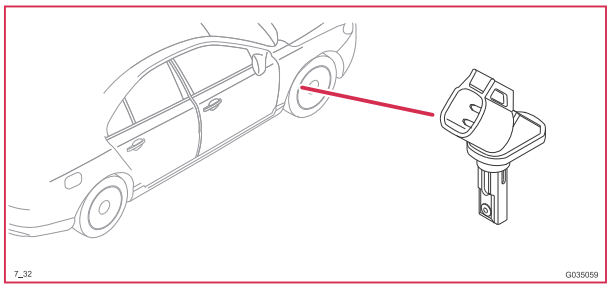

7/35 Oil level sensor

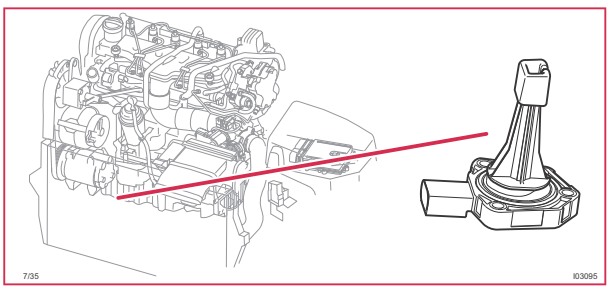

7/41 Temperature sensor evaporator

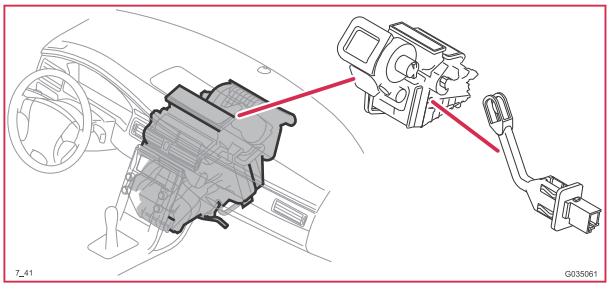

7/51 Accelerator pedal sensor

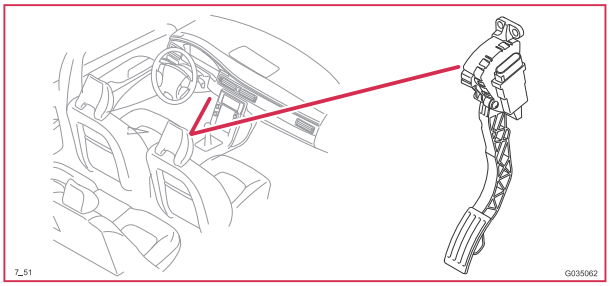

7/56 Sensor ABS, rear left

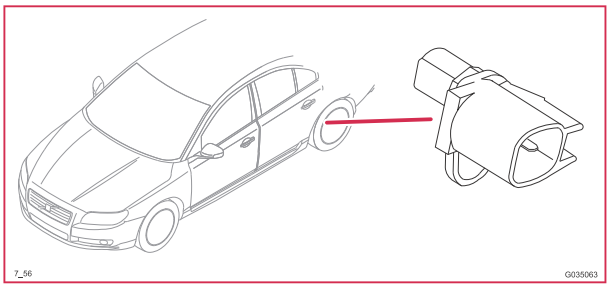

7/57 Right-hand rear ABS sensor

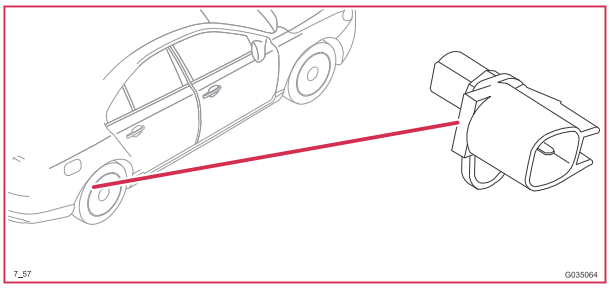

7/73 Coolant level sensor

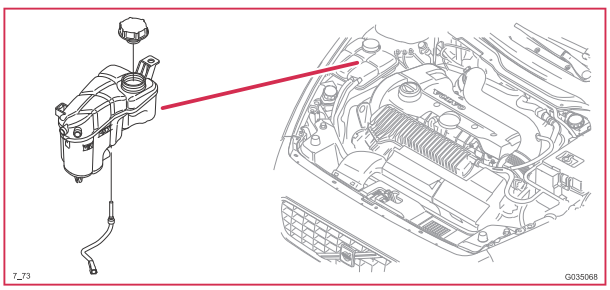

Component illustrations
7/81 - 7/91

7/81 Pressure sensor intake manifold, 4-Cyl.

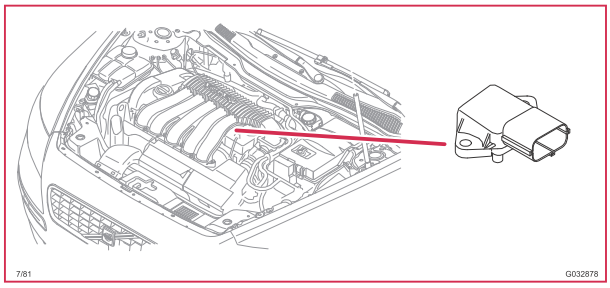

7/81 Pressure sensor intake manifold, 5-Cyl. Diesel

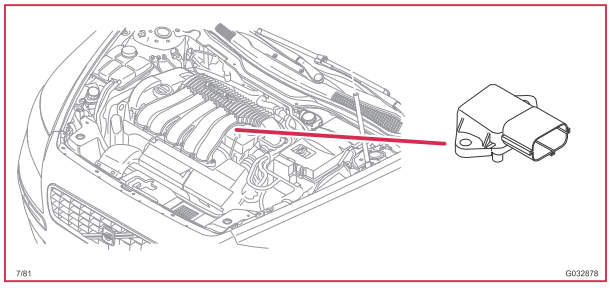

7/81 Pressure sensor, intake manifold, 6-Cyl.

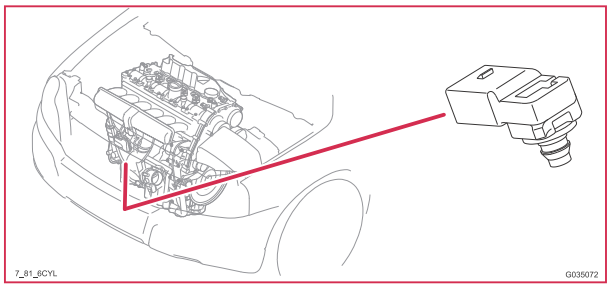

7/82 Rear oxygen sensor, bank 1, 4-Cyl.

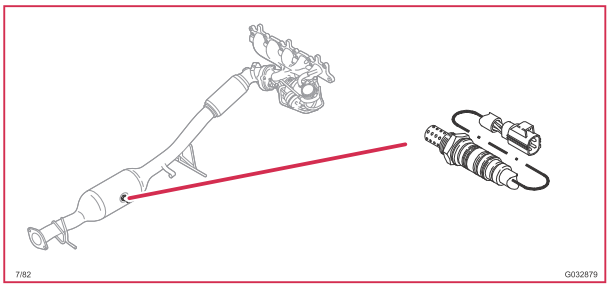

7/82 Rear oxygen sensor, bank 1, 6-Cyl.

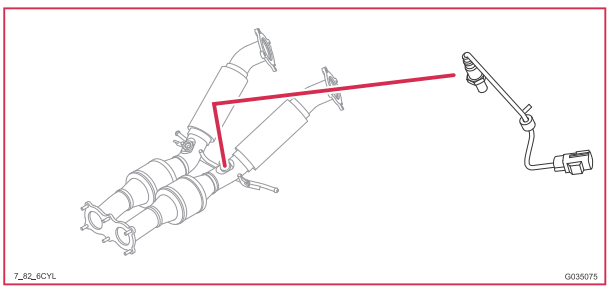

7/87 Acceleration sensor, Four-C, front left

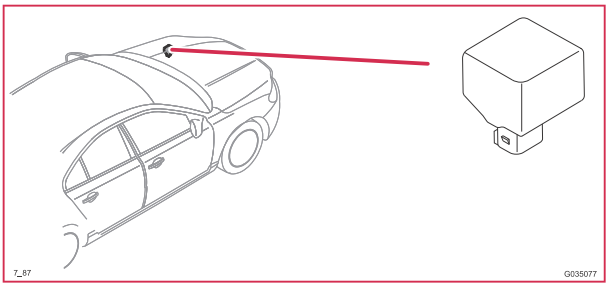

7/88 Acceleration sensor, Four-C, front right

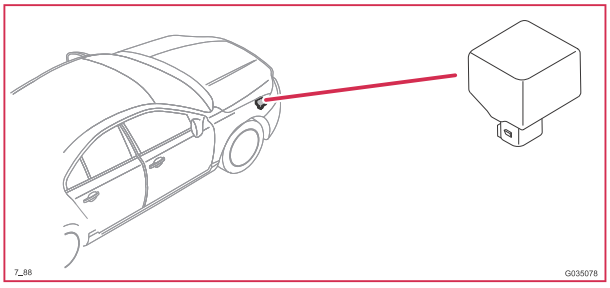

7/89 Acceleration sensor, Four-C, rear left

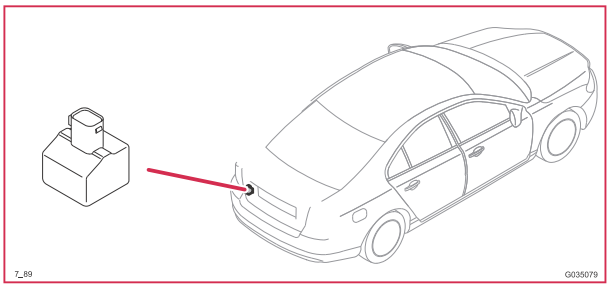

7/90 Moisture sensor

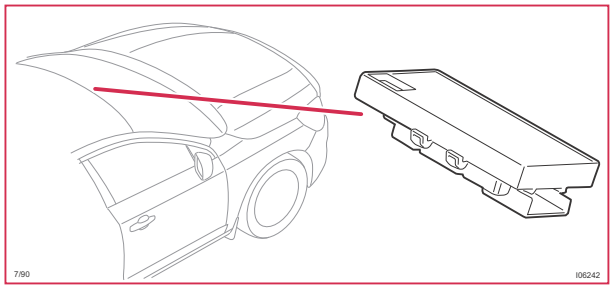

7/91 Steering angle sensor

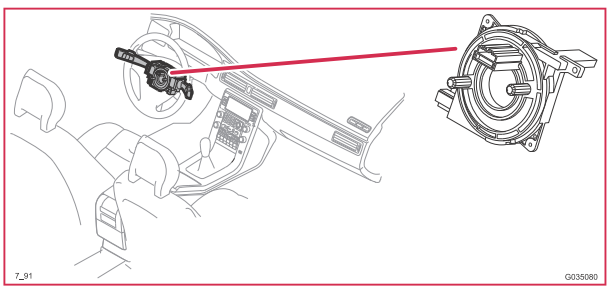

Component illustrations
7/93 - 7/113

7/93 Occupant Weight Sensor (OWS)

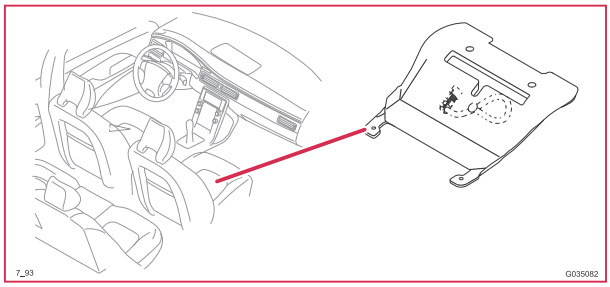

7/103 Front oxygen sensor, bank 2, 6-Cyl.

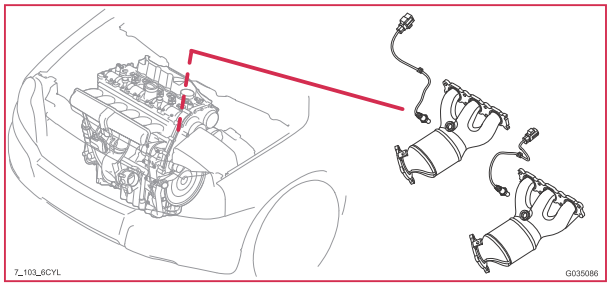

7/104 Rear oxygen sensor, 4-Cyl. 2.0L Diesel

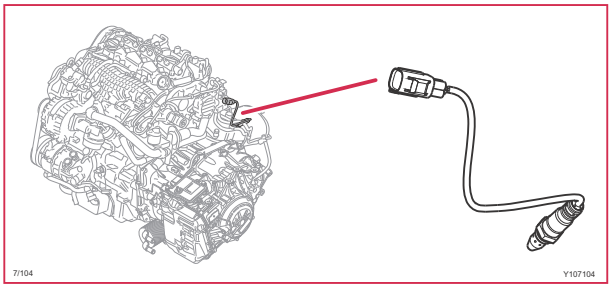

7/104 Rear oxygen sensor, bank 2, 6-Cyl.

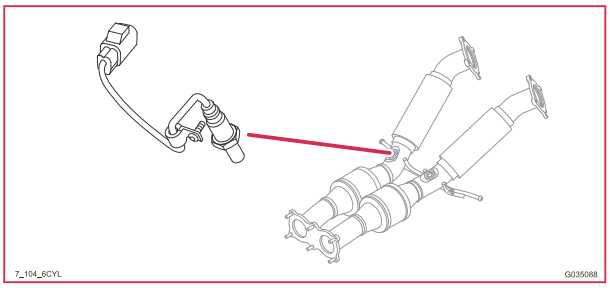

7/108 Left-hand rear side impact sensor

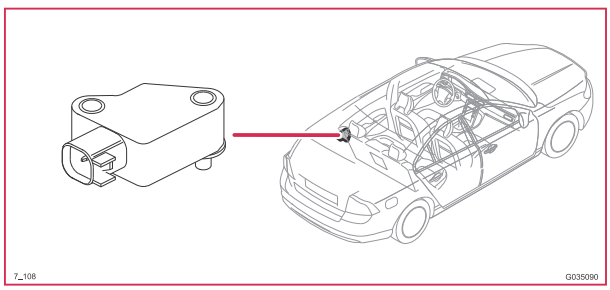

7/109 Right-hand rear side impact sensor

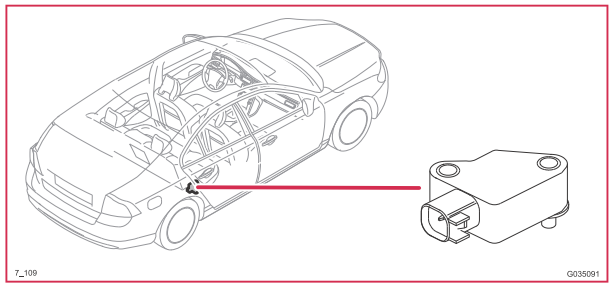

7/110 Temperature sensor, driver's seat

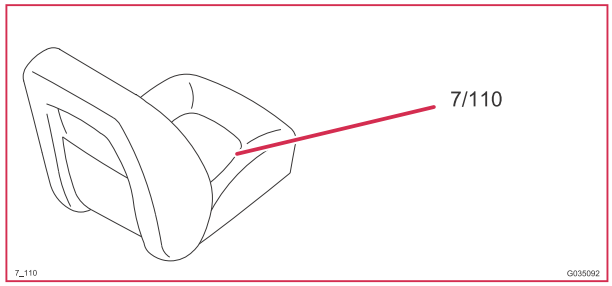

7/111 Temperature sensor, passenger seat

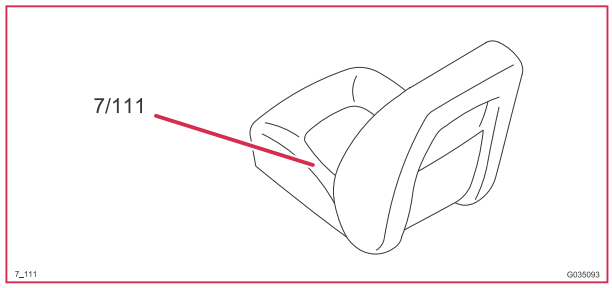

7/112 Seat temperature sensor, left rear

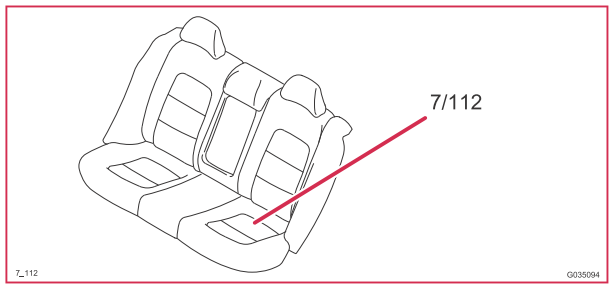

7/113 Seat temperature sensor, right rear

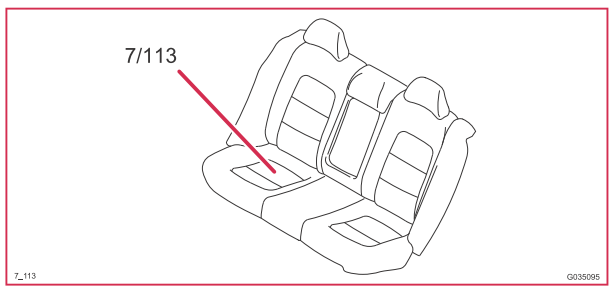

Component illustrations
7/115 - 7/140

7/115 Side impact sensor, left B-post

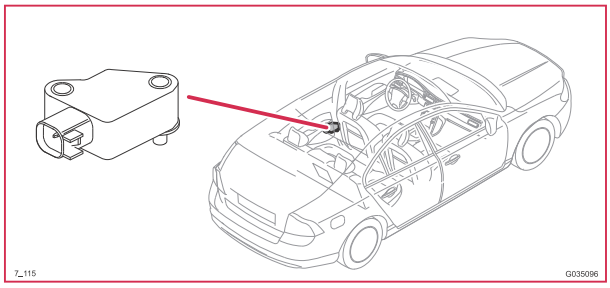

7/116 Side impact sensor, right B-post

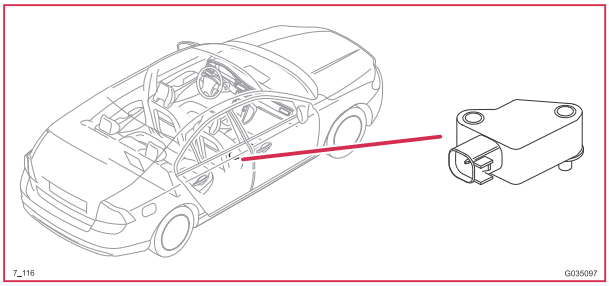

7/118 Height sensor, suspension, front left

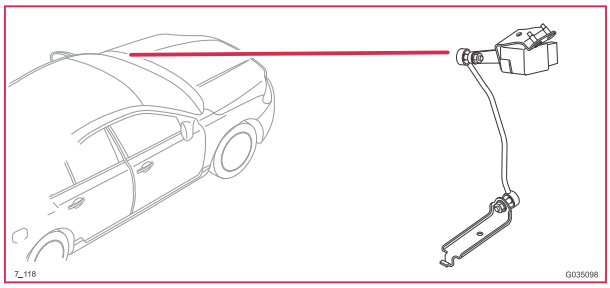

7/119 Height sensor, suspension, front right

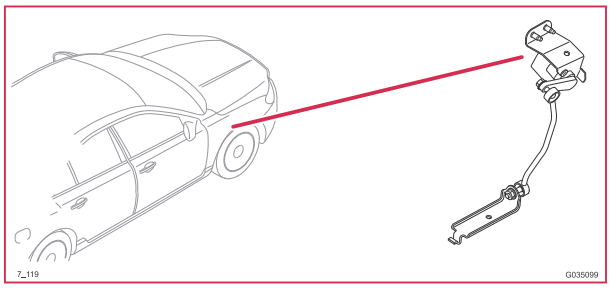

7/120 Height sensor, suspension, rear left

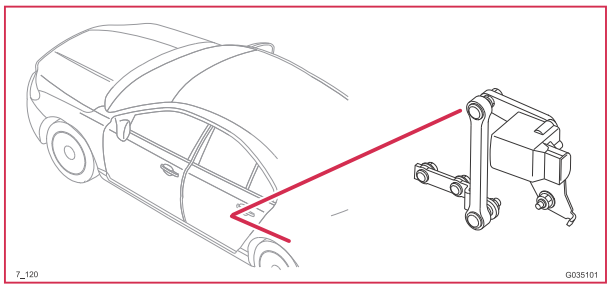

7/121 Height sensor, suspension, rear right

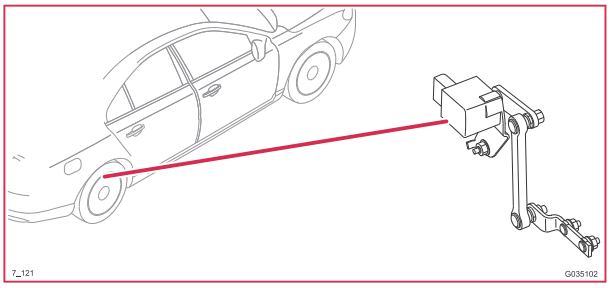

7/123 Clutch pedal sensor

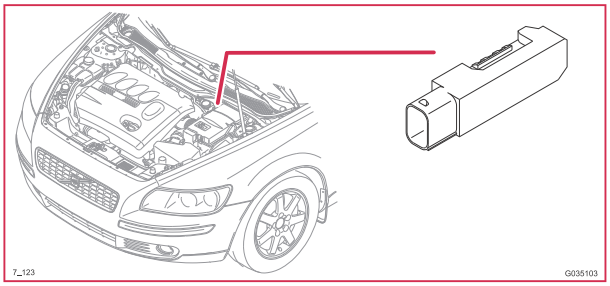

7/124 Sensor brake pedal

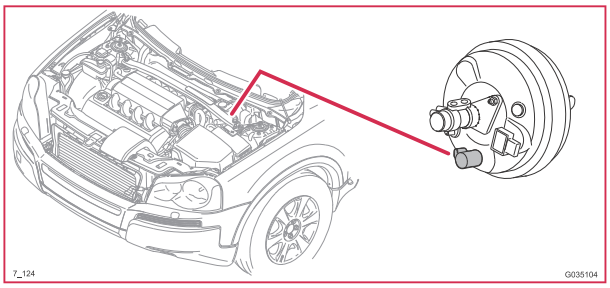

7/131- 7/134 Rear parking assistance sensor

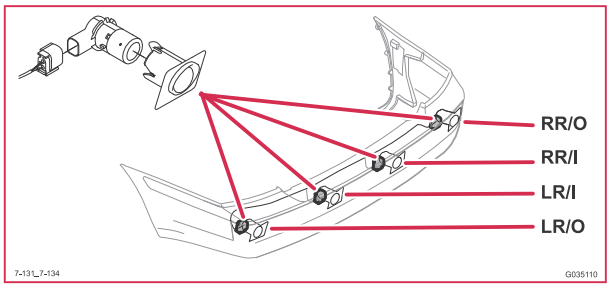

7/140 Fuel pressure sensor, low

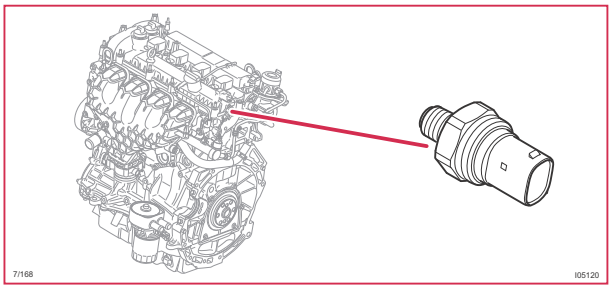

Component illustrations
7/149 - 7/165

7/149 Rain Sensor Module (RSM)

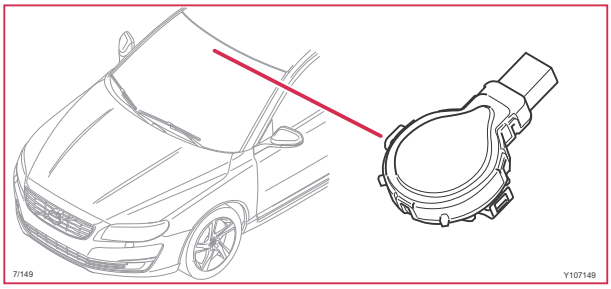

7/154 Sensor fuel temperature

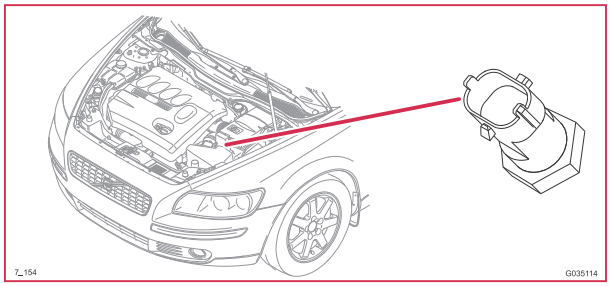

7/156 Pressure and temperature sensor, fuel

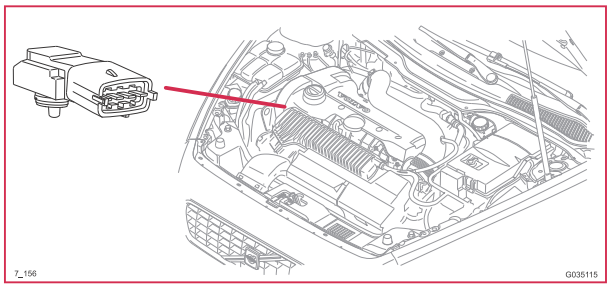

7/159 Air Quality Sensor (AQS)

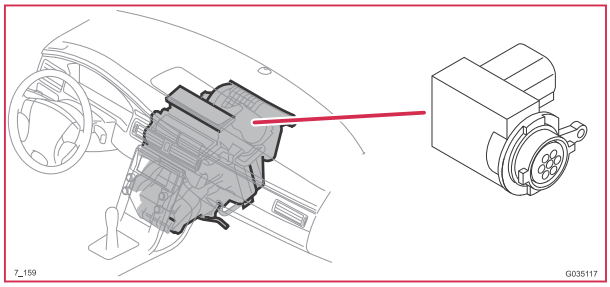

7/162 Pressure sensor, fuel line

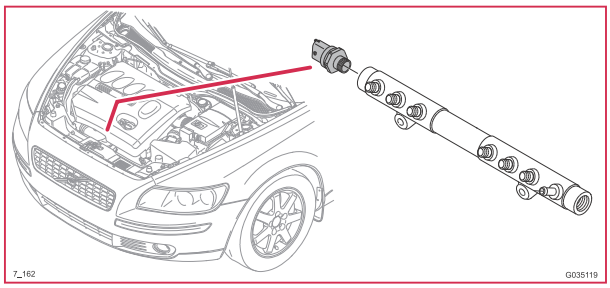

7/164 Body Sensor Cluster Stability Sensor (BSC)

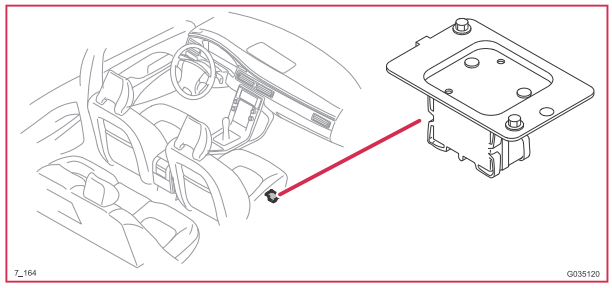

7/165 Pressure and temperature sensor, intake manifold, 4-Cyl.

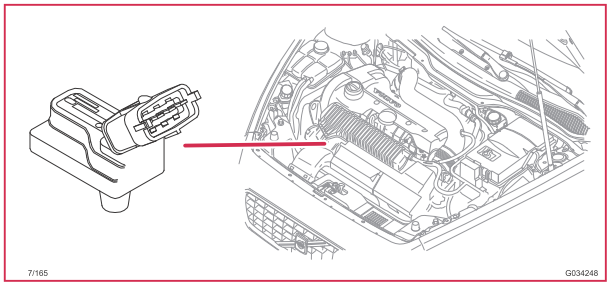

7/165 Pressure and temperature sensor, intake manifold, 5-Cyl.

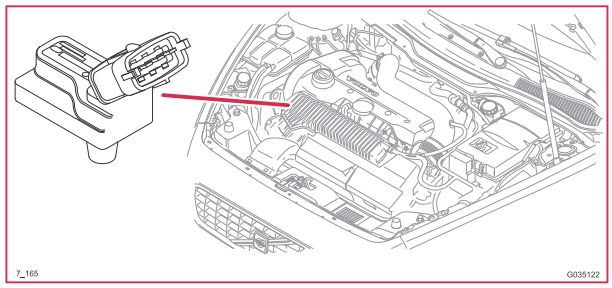

7/165 Pressure and temperature sensor, intake manifold, Diesel

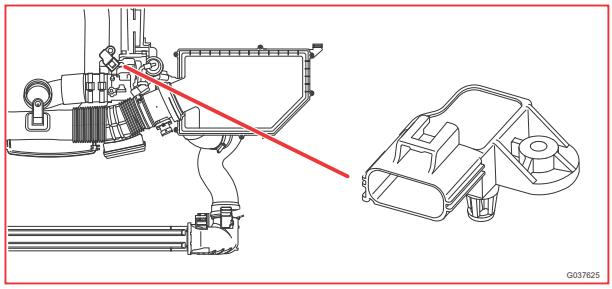

7/165 Pressure and temperature sensor, intake manifold, 6-Cyl.

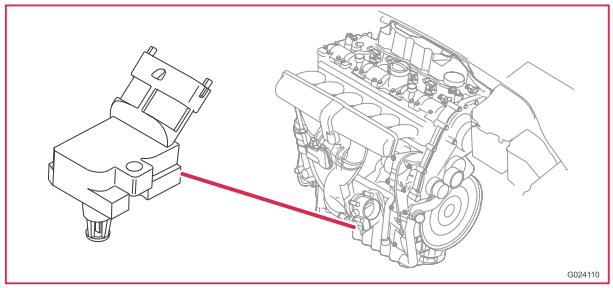

Component illustrations
7/166 - 7/175

7/166 Oil level sensor, 6-Cyl.

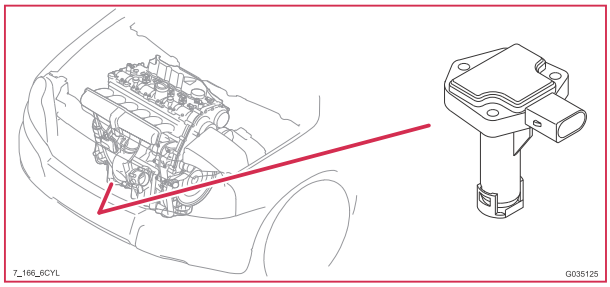

7/172 Camshaft position sensor, intake side, 5-Cyl.

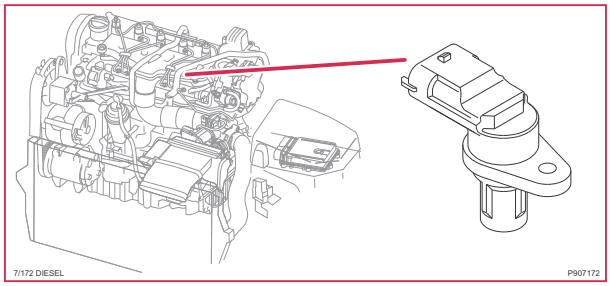

7/172 Camshaft position sensor, intake side, 6-Cyl.

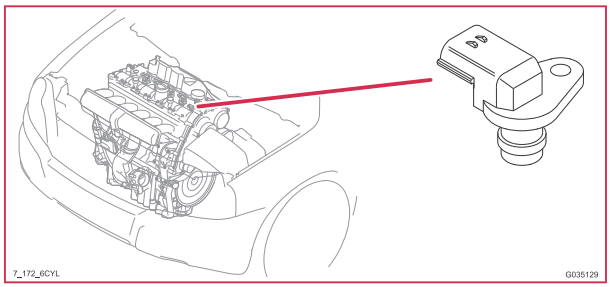

7/172 Position sensor camshaft, intake side, 4-Cyl. Diesel

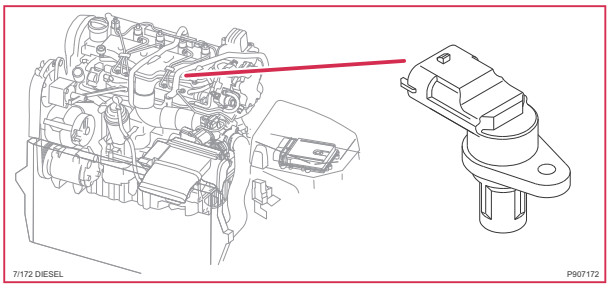

7/173 Position sensor camshaft, outlet side, 4-Cyl.

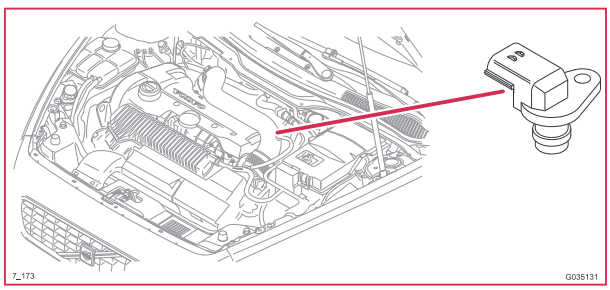

7/173 Camshaft position sensor, exhaust side, 5-Cyl.

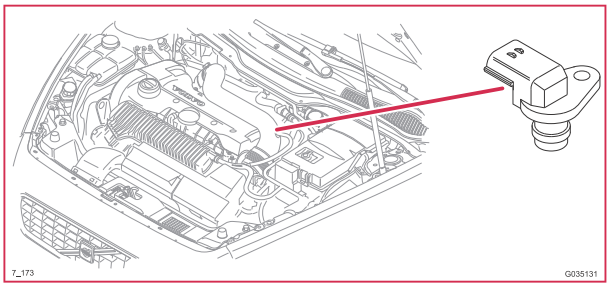

7/173 Camshaft position sensor, exhaust side, 6-Cyl.

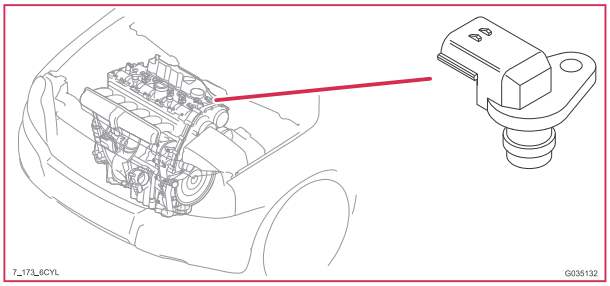

7/173 Camshaft position sensor, exhaust side, Diesel

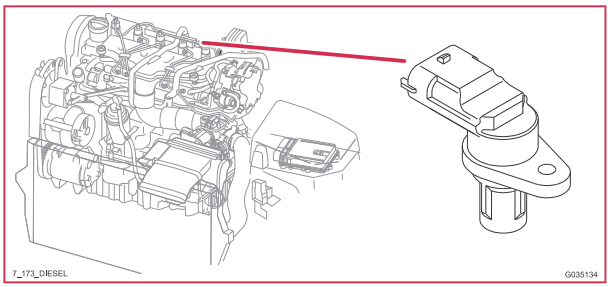

7/174 Differential pressure sensor, particle filter

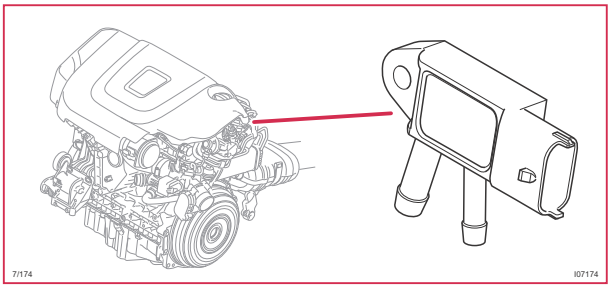

7/175 Occupant weight sensor, seat belt reminder

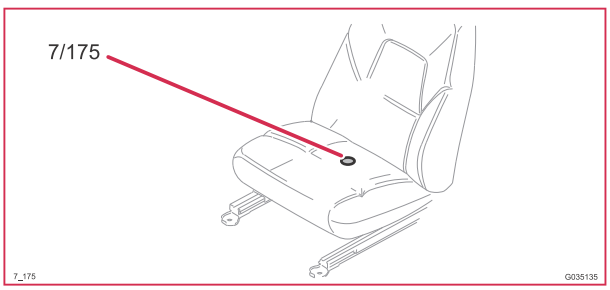

Component illustrations
7/178 - 7/208

7/178 Front impact sensor, right

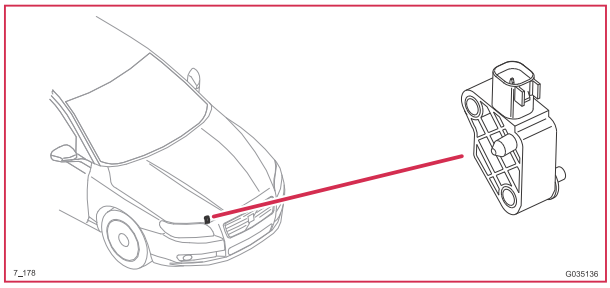

7/179 Front impact sensor, left

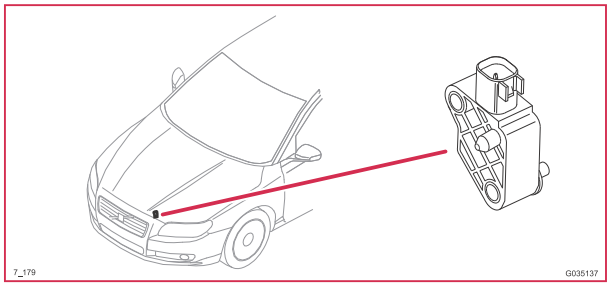

7/190 Temperature sensor, catalytic converter

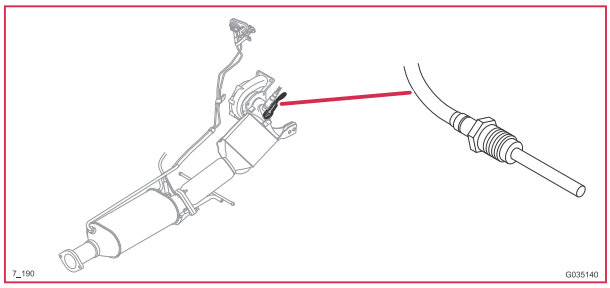

7/191 Temperature sensor, particle filter

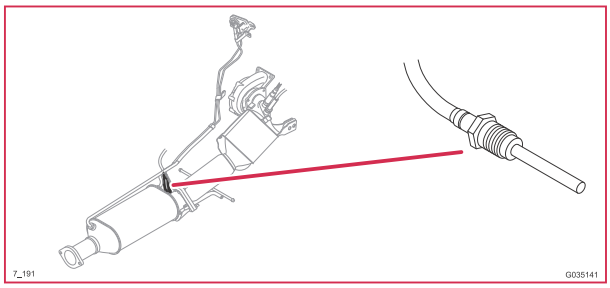

7/193 Position sensor turbo

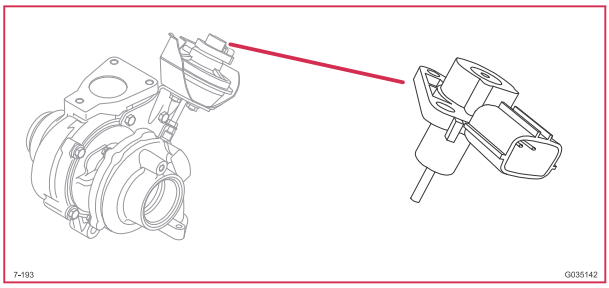

7/199 Ultrasonic sensor (IMS)

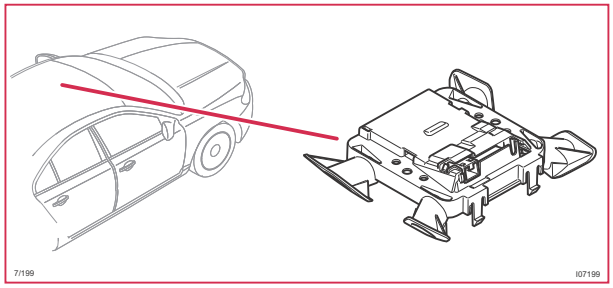

7/200 Sensor, coolant temperature

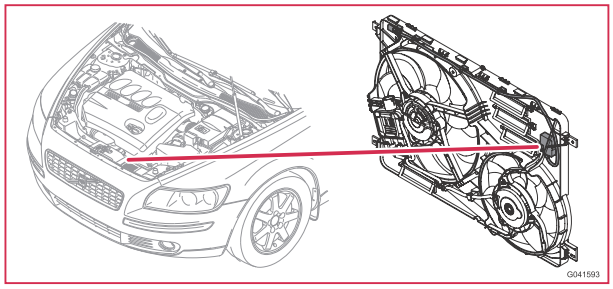

7/203 Forward-aimed radar (FLR)

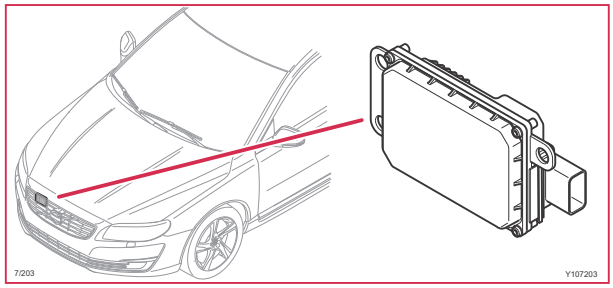

7/204-7/207 Front parking assistance sensor

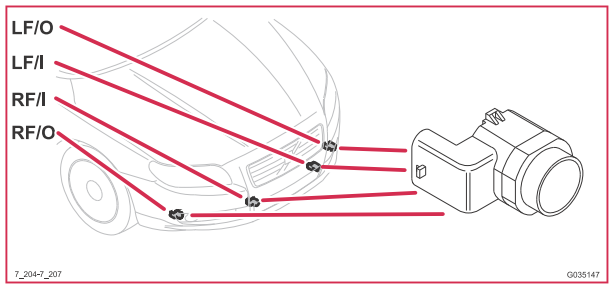

7/208 Side impact sensor, left front door

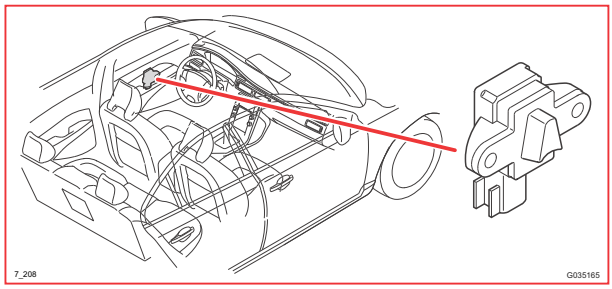

7/209 Side impact sensor, right front door

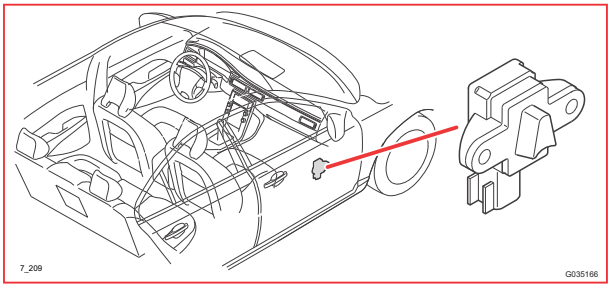

7/210-7/213 Tire pressure sensor

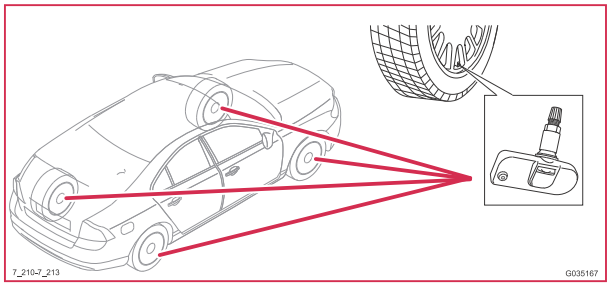

7/215 Rear heated oxygen sensor, 5-Cyl. Diesel

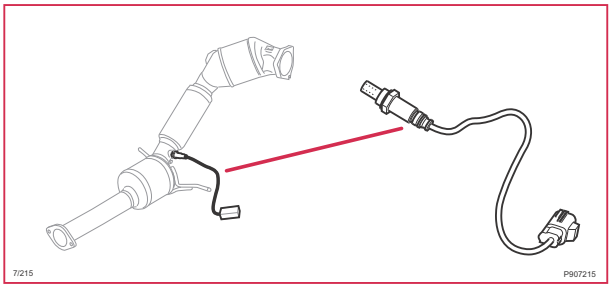

7/232 Manifold air temperature and pressure sensor

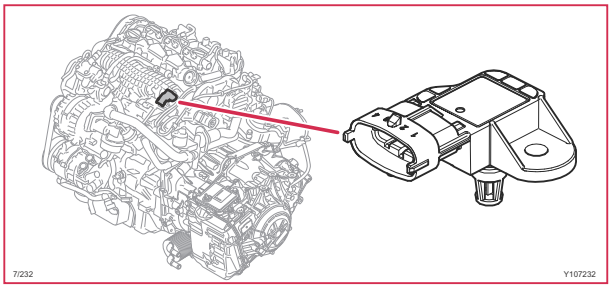

7/238 Alcolock sensor

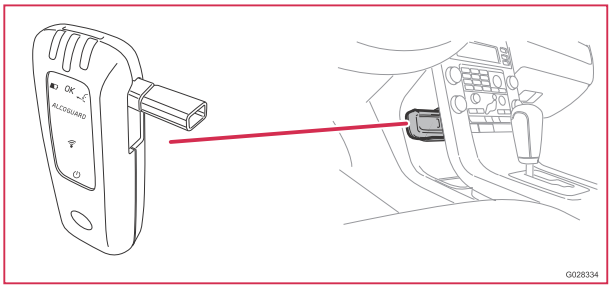

7/240 Battery monitoring sensor (BMS)

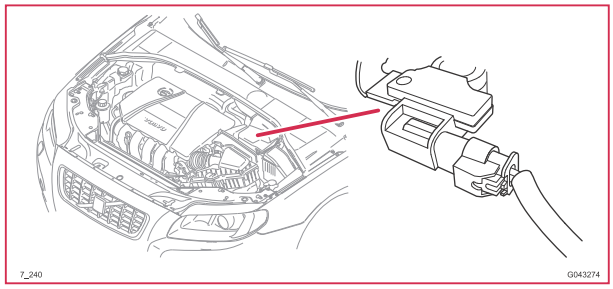

7/243 Gear position sensor neutral position

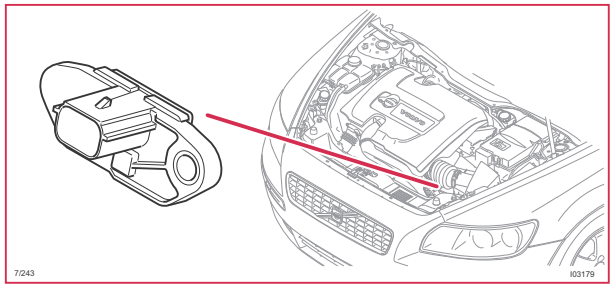

7/248 Oil pressure and temperature sensor

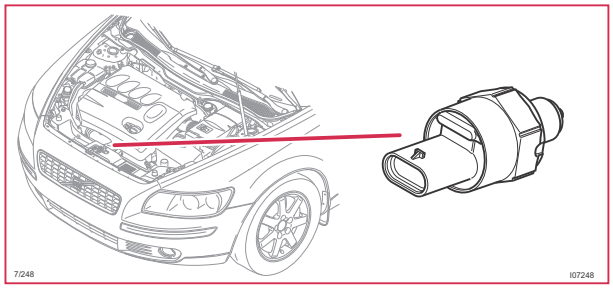

7/251 Brake vacuum sensor

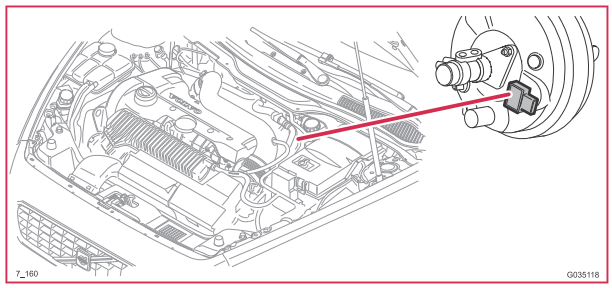

8/3 Electromagnetic clutch, climate control system

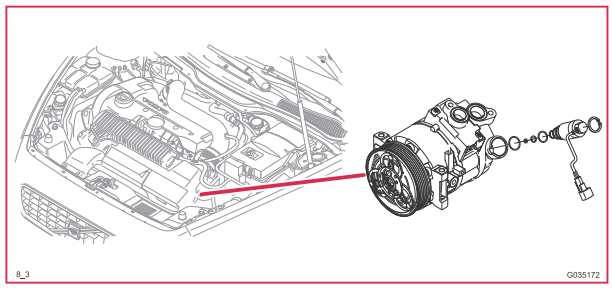

Component illustrations
8/6 - 8/23

8/6-11 Injection valves

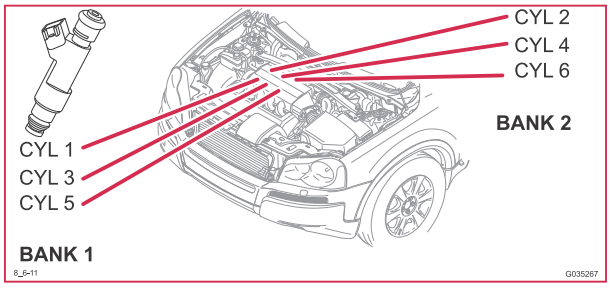

8/17 EGR valve, 4-Cyl. Diesel

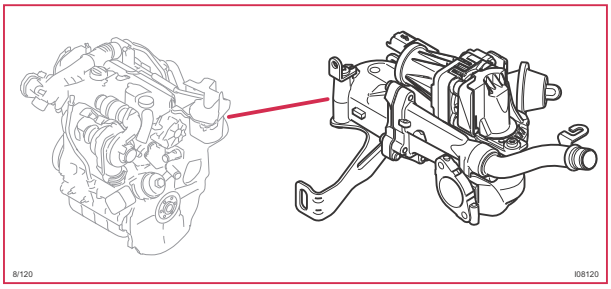

8/18 EVAP valve, 4-Cyl.

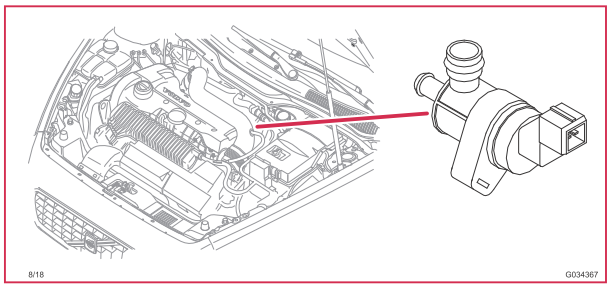

8/18 EVAP valve, 5-Cyl.

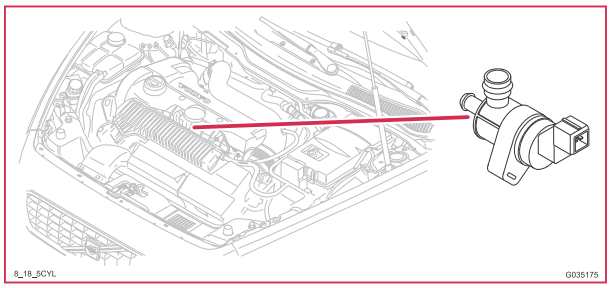

8/18 EVAP valve, 6-Cyl.

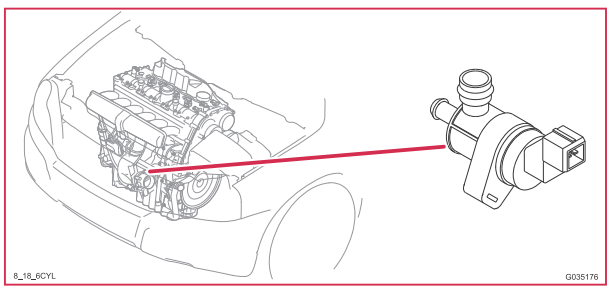

8/19 Reset valve, camshaft intake

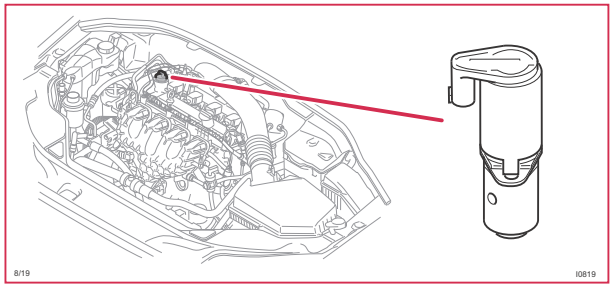

8/20 Shock absorber, Four-C, front left

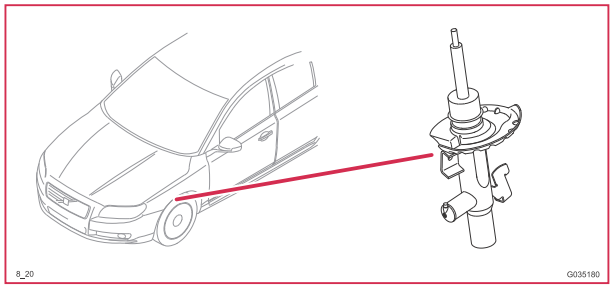

8/21 Shock absorber, Four-C, front right

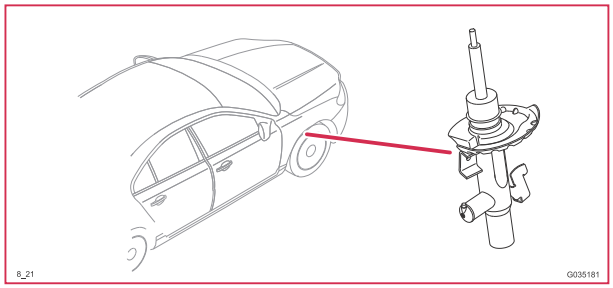

8/22 Shock absorber, Four-C, rear left

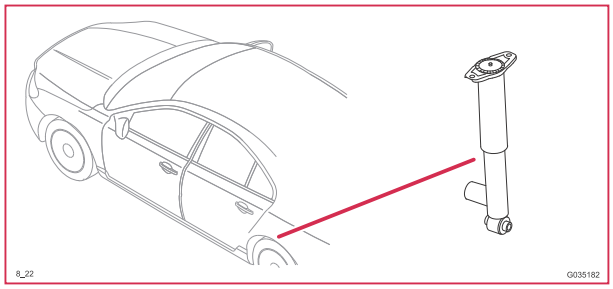

8/23 Shock absorber, Four-C, rear right

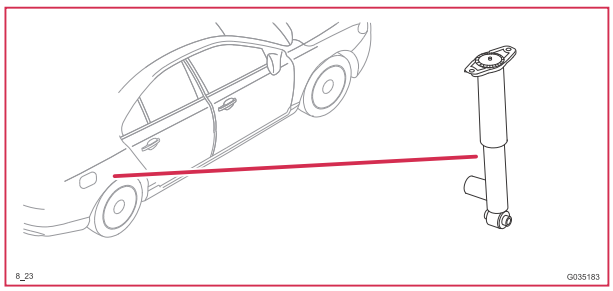

Component illustrations
8/28 - 8/56

8/28 Turbo control valve

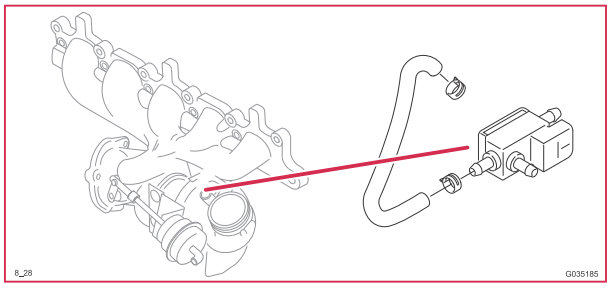

8/33 Igniter, belt tensioner, driver's side

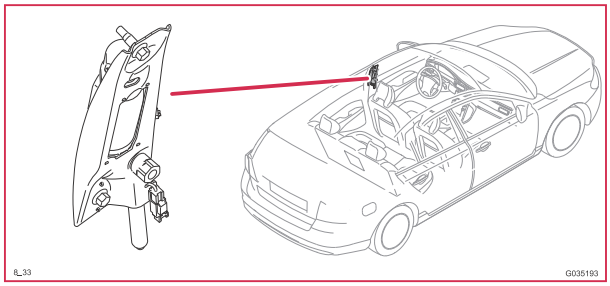

8/34 Igniter, belt tensioner, passenger side

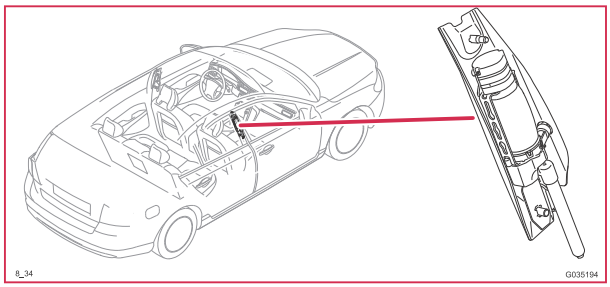

8/36 Solenoid shift lock

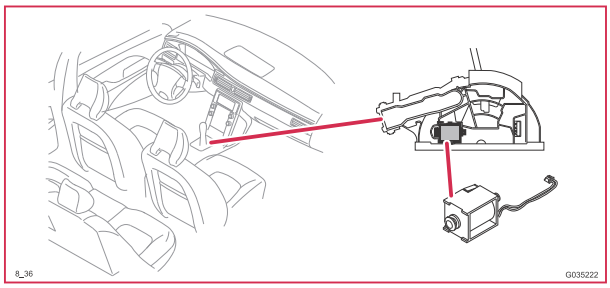

8/46 Activation unit, DSTC

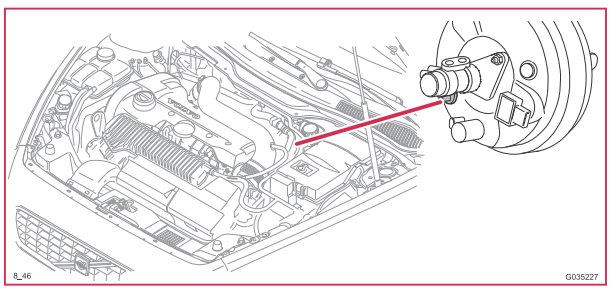

8/48 Auto-dimming rearview mirror

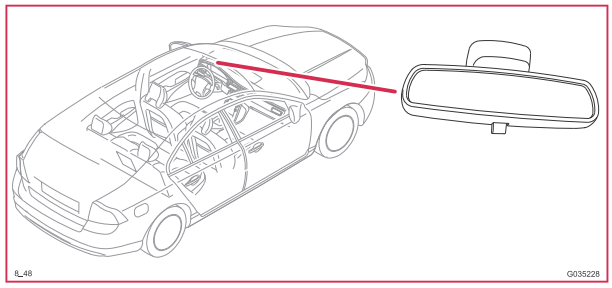

8/51 Igniter side airbag front driver's seat

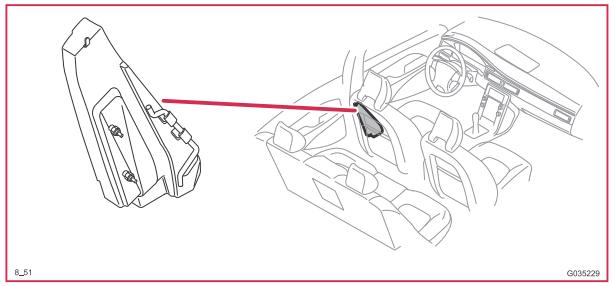

8/52 Igniter side airbag front passenger seat

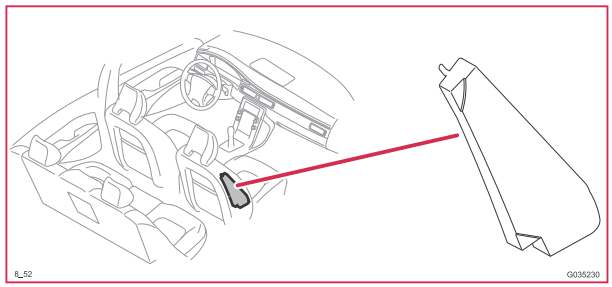

8/55 Igniter, rear left belt tensioner

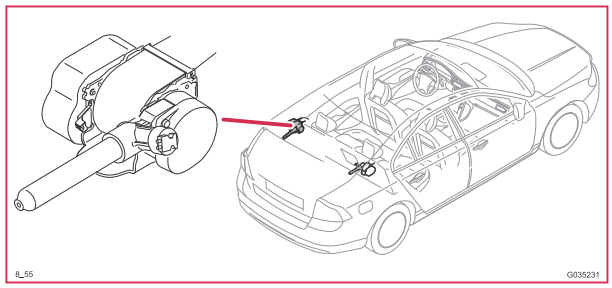

8/56 Igniter, rear right belt tensioner

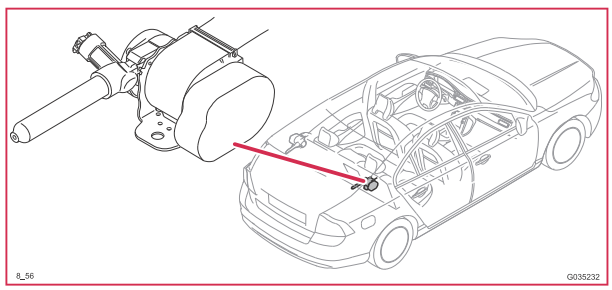

Component illustrations
8/59 - 8/92

8/59 Rear left head restraint solenoid

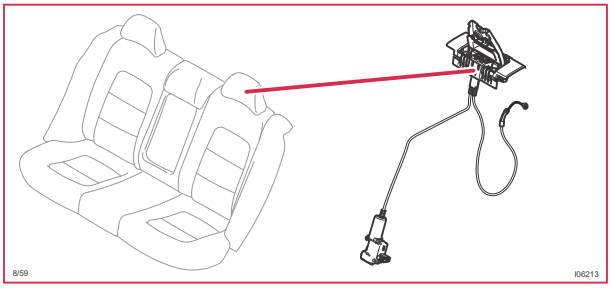

8/60 Rear right head restraint solenoid

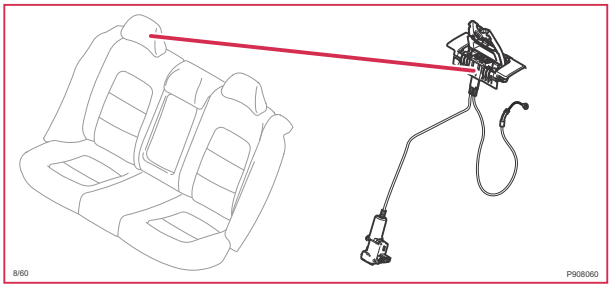

8/62 Belt tensioner igniter, center rear seat

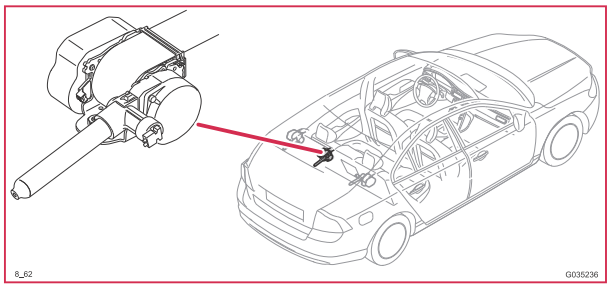

8/66 Igniter, left inflatable curtain

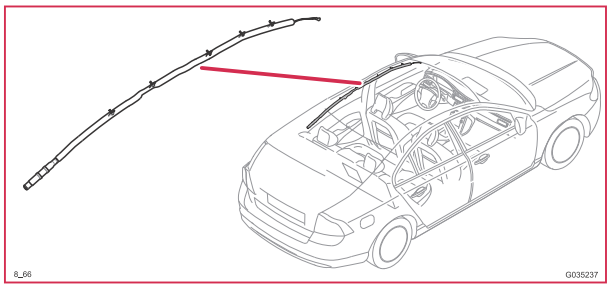

8/67 Igniter, right inflatable curtain

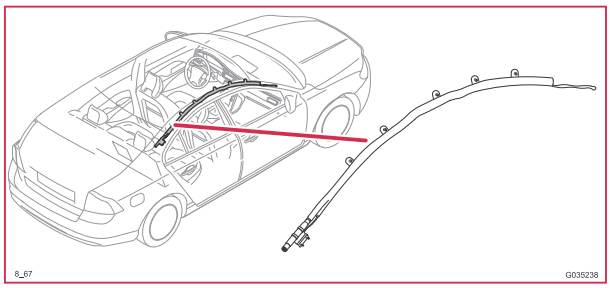

8/68 Relief valve

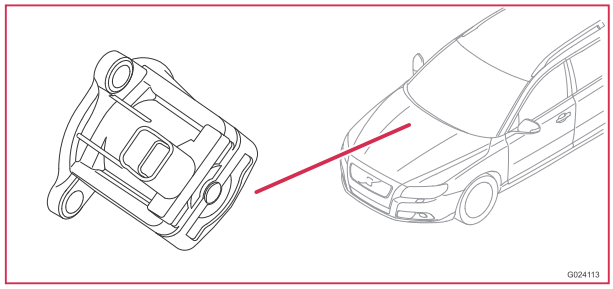

8/77 Control valve, fuel volume

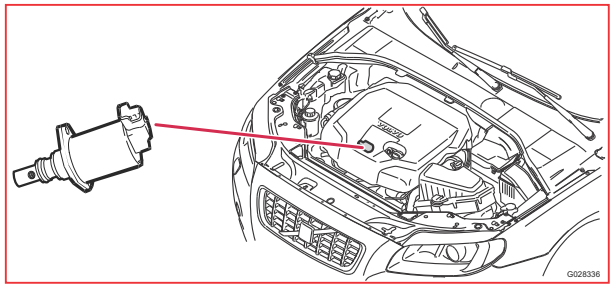

8/81 Reset valve, camshaft exhaust, 4-Cyl.

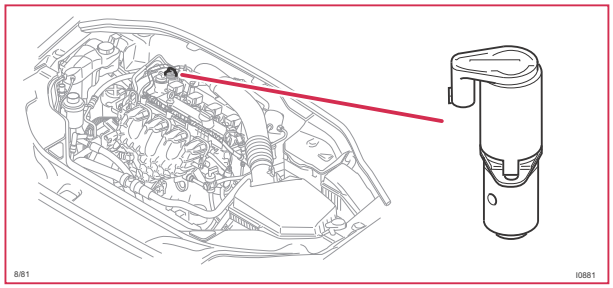

8/81 Reset valve, camshaft exhaust, 5-Cyl.

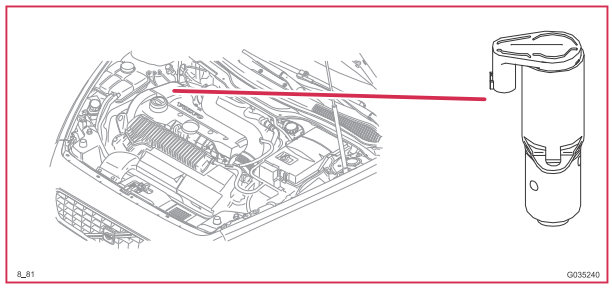

8/92 Lap belt tensioner, driver

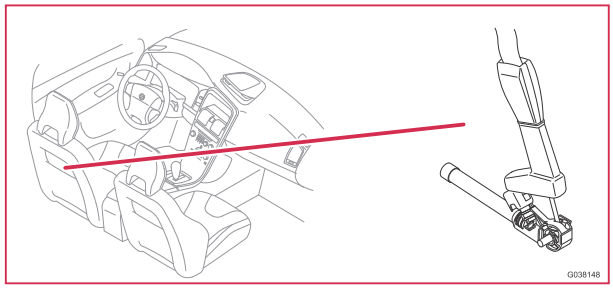

Component illustrations
8/93 - 8/117 6-Cyl.

8/93 Lap belt tensioner, passenger

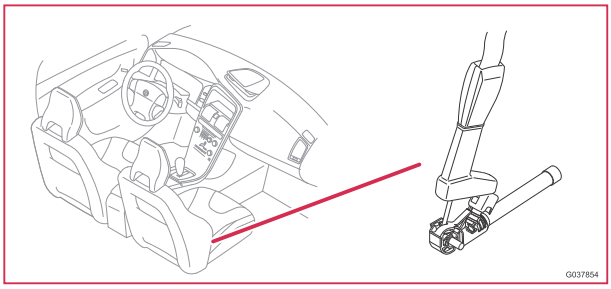

8/98 Control valve fuel pressure

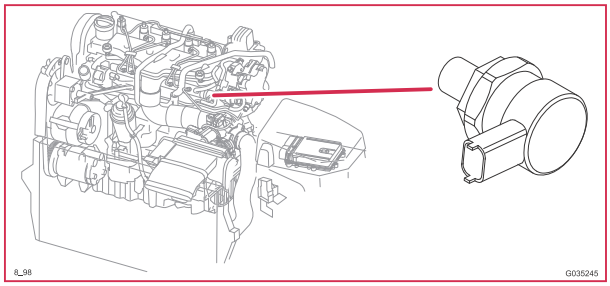

8/99 Steering column igniter

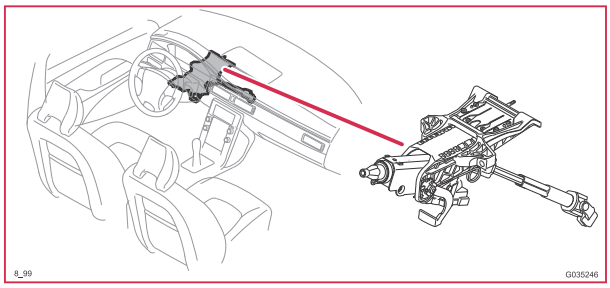

8/111 Control valve fuel flow

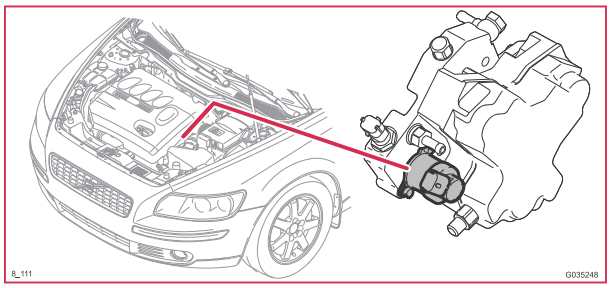

8/113 Bypass valve, EGR cooling, 4 Cyl.

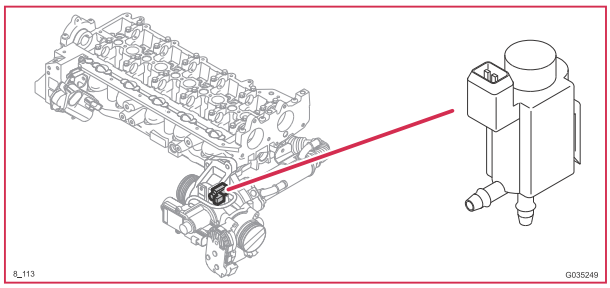

8/113 Bypass valve, EGR cooling, 5 Cyl.

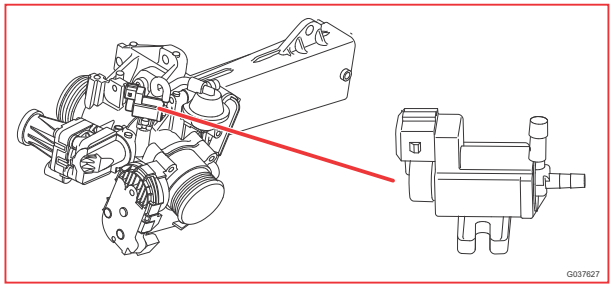

8/114 Swirl actuator valve

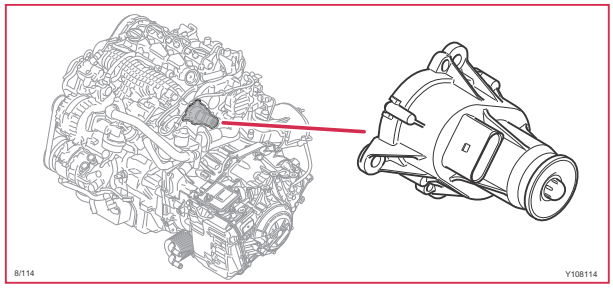

8/117 Solenoid, variable valve timing, intake, 4-Cyl. 2.0L Turbo

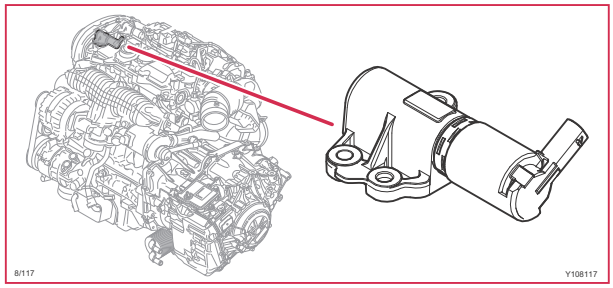

8/117 Solenoid, variable valve timing, intake, 5-Cyl.

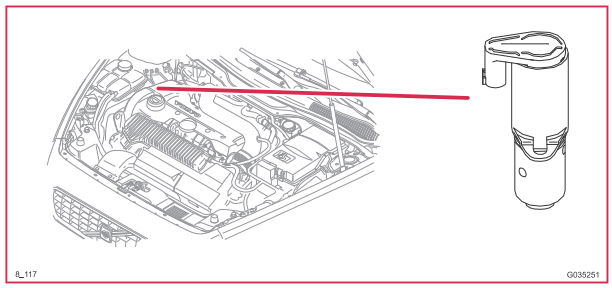

8/117 Solenoid, variable valve timing, intake, 6-Cyl.

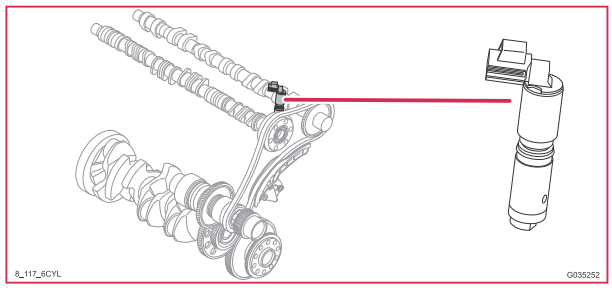

Component illustrations
8/118 - 8/134

8/118 Solenoid, variable valve timing, intake, 4-Cyl. 2.0L Turbo

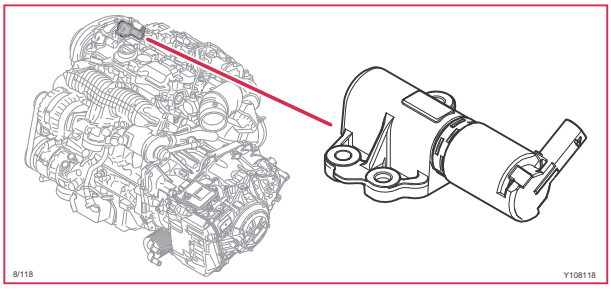

8/120 EGR valve, 5-Cyl. Diesel

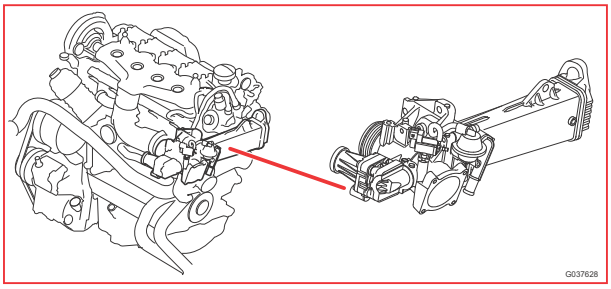

8/121 Radiator valve

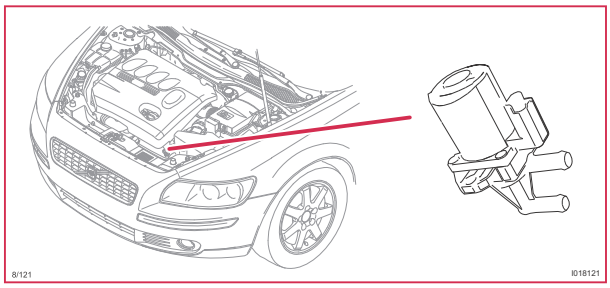

8/123 Driver airbag

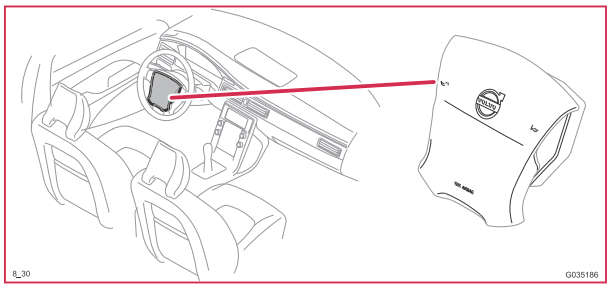

8/124 Passenger airbag

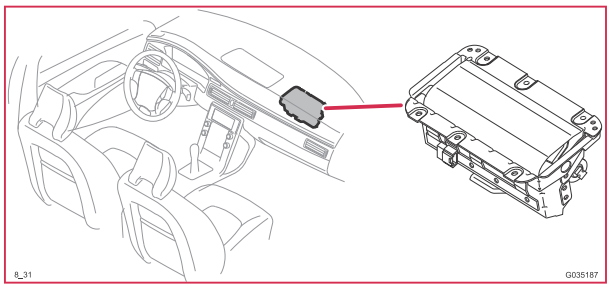

8/125 Solenoid front cam profile

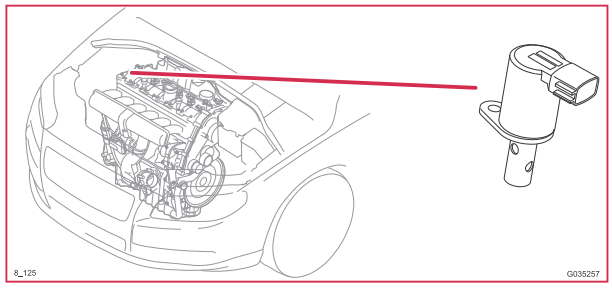

8/126 Solenoid rear cam profile

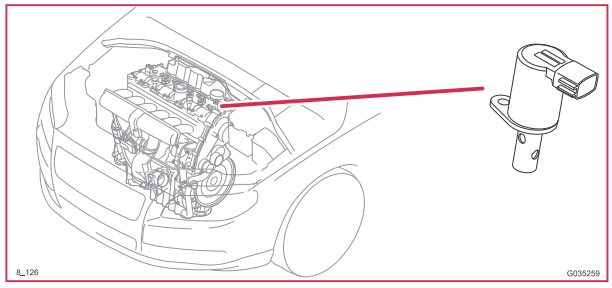

8/128 Driver's belt force limiter

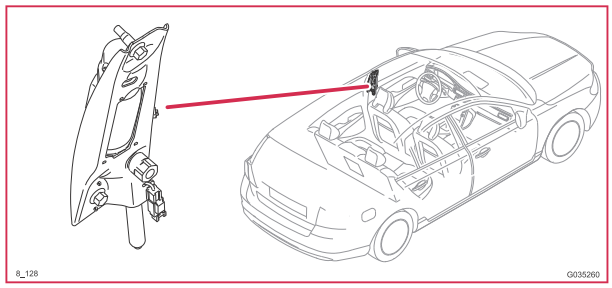

8/129 Passenger belt force limiter

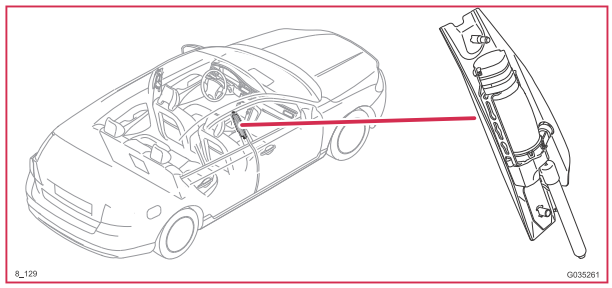

8/134 Solenoid, reverse interlock, manual

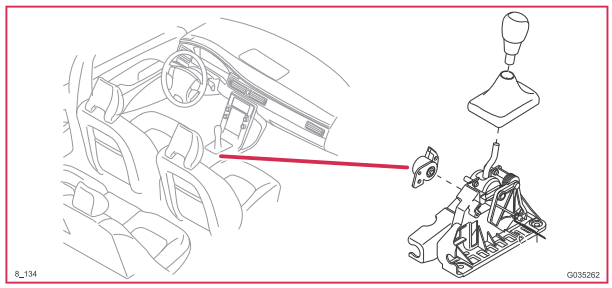

Component illustrations
8/157 - 9/2

8/157 Turbocharger control valve, 5-Cyl. Diesel

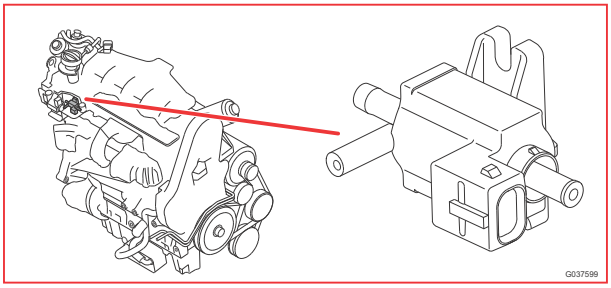

8/159 Bypass valve

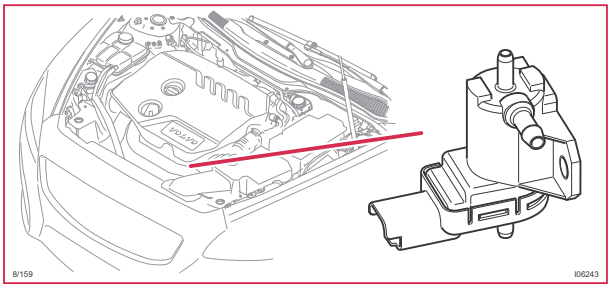

8/164 Electric piston cooling valve

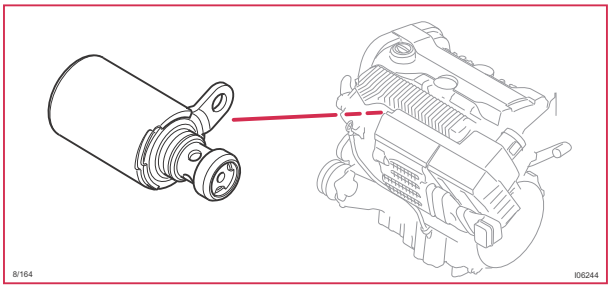

8/167 Bypass solenoid

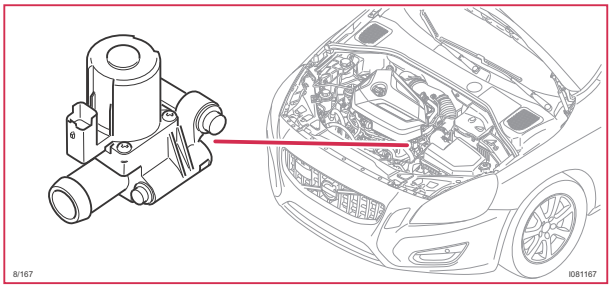

8/180 Engine oil pump solenoid

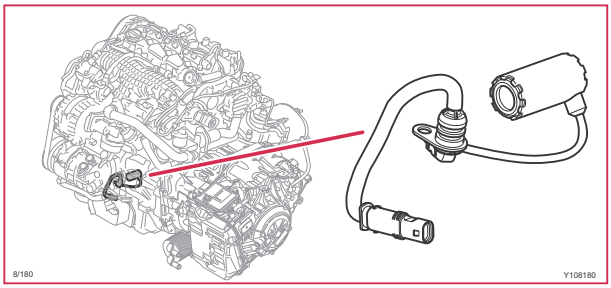

8/197 Vacuum valve, water cooler bypass

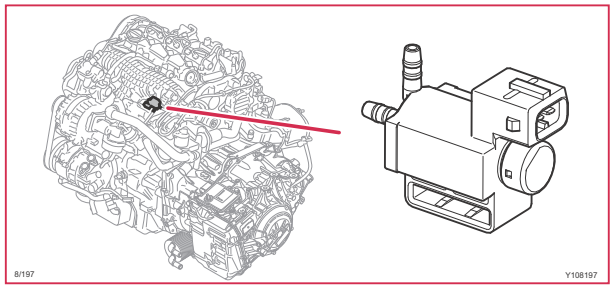

8/199 Vacuum regulator, turbo bypass control

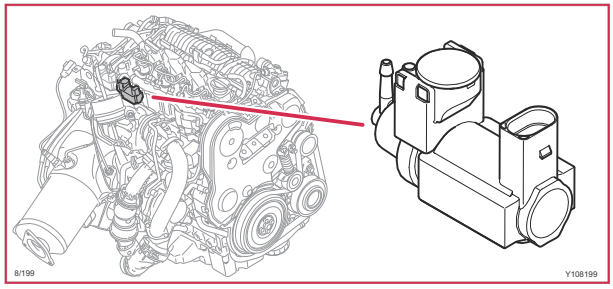

8/200 Vacuum regulator, turbo wastegate control

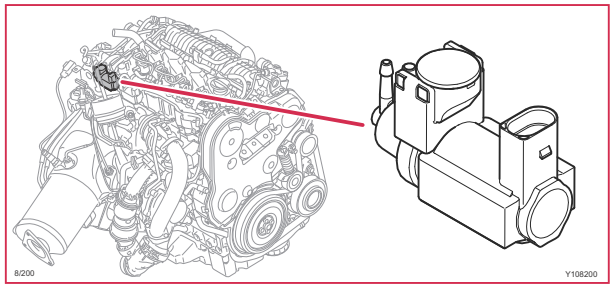

9/1 Front 12V outlet

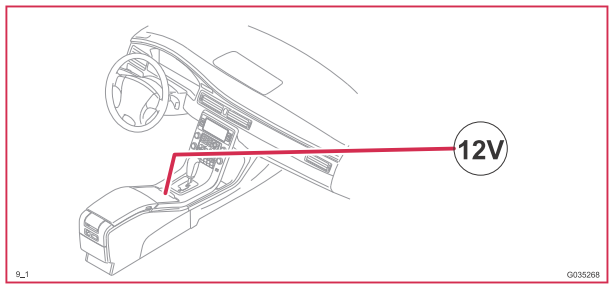

9/2 Heated rear window

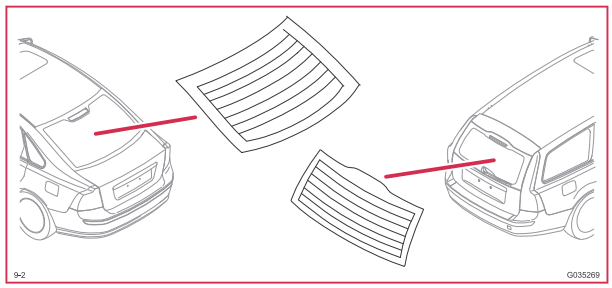

Component illustrations
9/7 - 9/16

9/7 Heated windshield

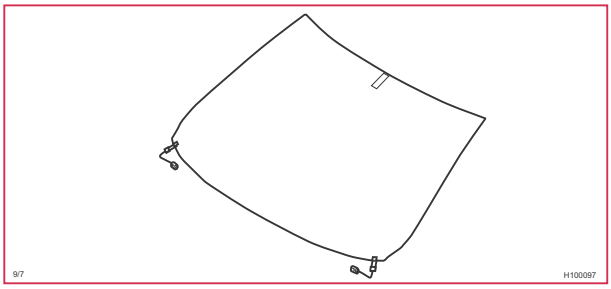

9/8 Heating element, left rear seat cushion

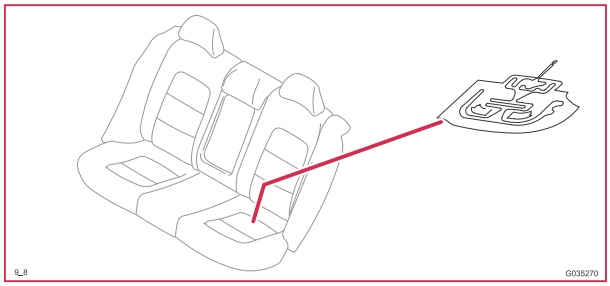

9/9 Heating element, left rear seat backrest

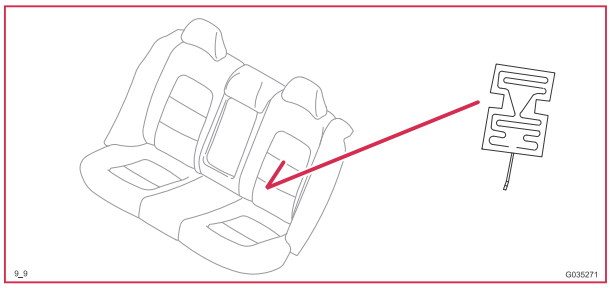

9/10 Heating element, right rear seat cushion

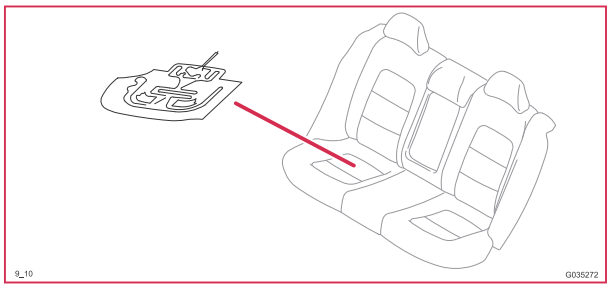

9/11 Heating element, right rear seat backrest

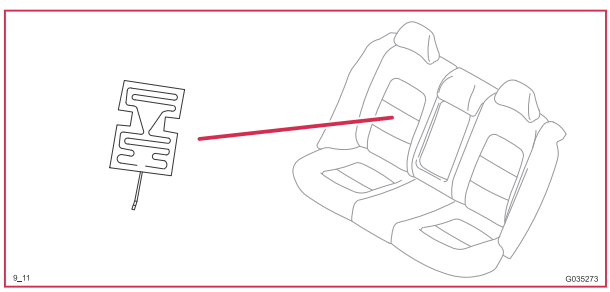

9/12 Seat Heating Module (SHM), driver's side

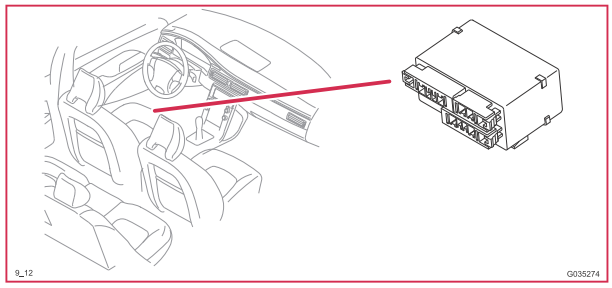

9/13 Seat Heating Module (SHM), passenger side

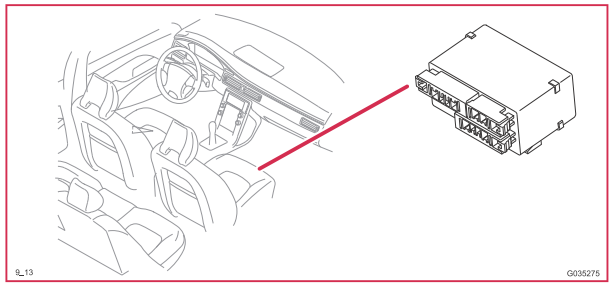

9/14 Control module, rear left seat heater

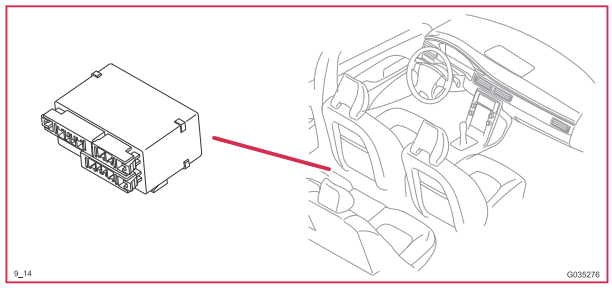

9/15 Control module, right rear seat heater

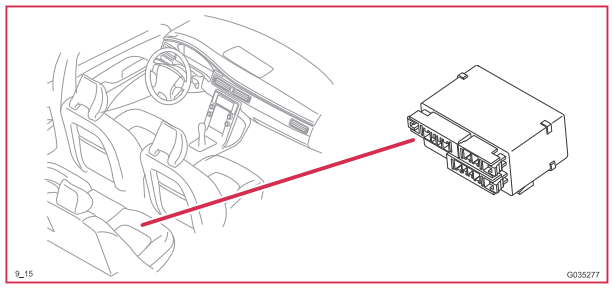

9/16 Heating element, driver's seat backrest

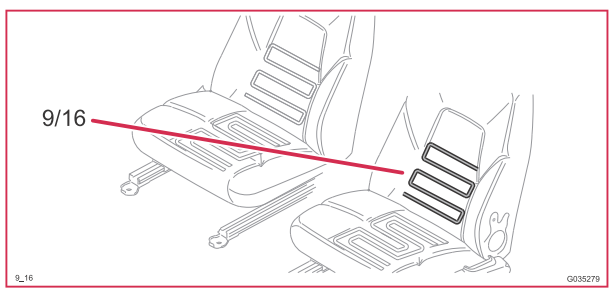

Component illustrations
9/17 - 9/42

9/17 Heating element, passenger seat backrest

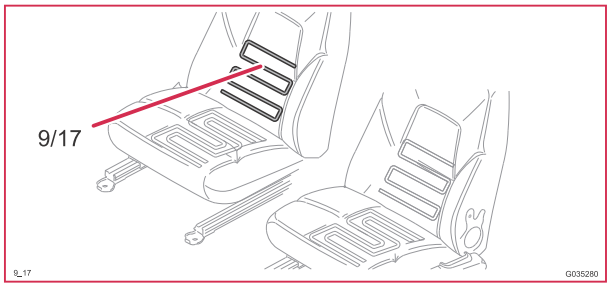

9/18 Heating element, driver's seat cushion

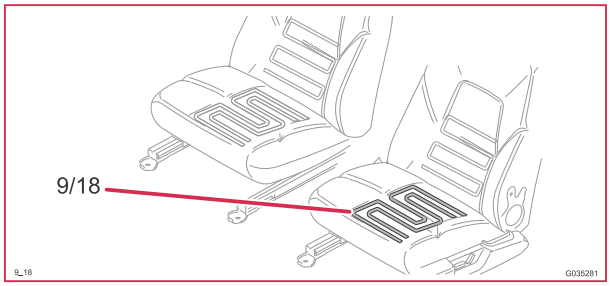

9/19 Heating element, passenger seat cushion

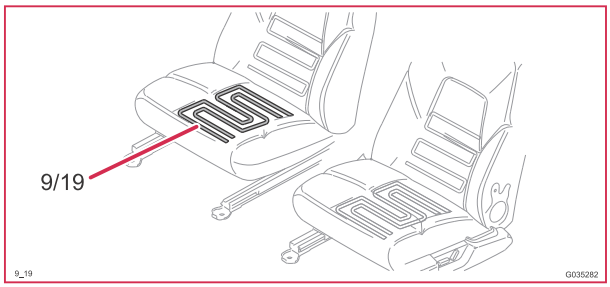

9/24 Refrigeration box

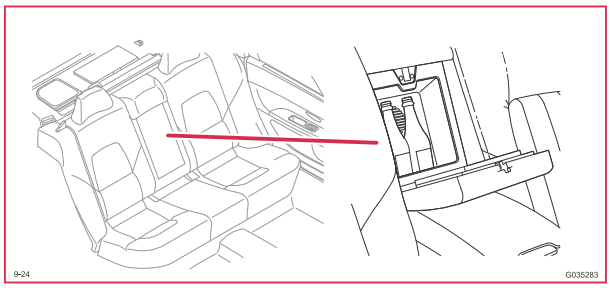

9/25 Rear 12V outlet

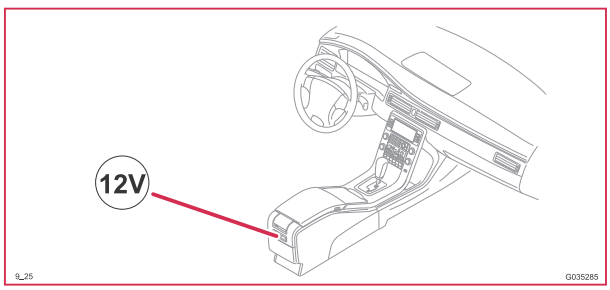

9/30 Auxiliary heater

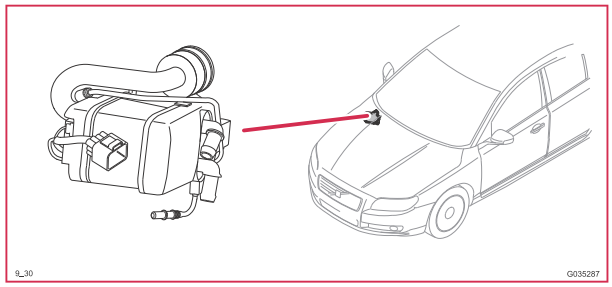

9/32 PTC resistor, crankcase ventilation

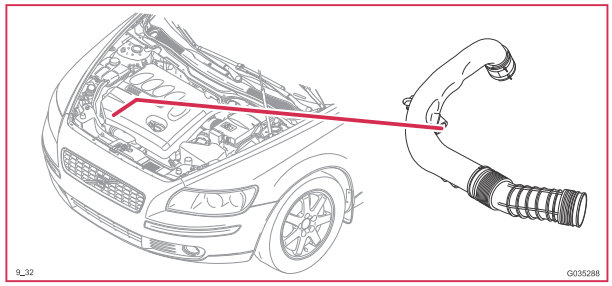

9/38 Electrically heated fuel filter

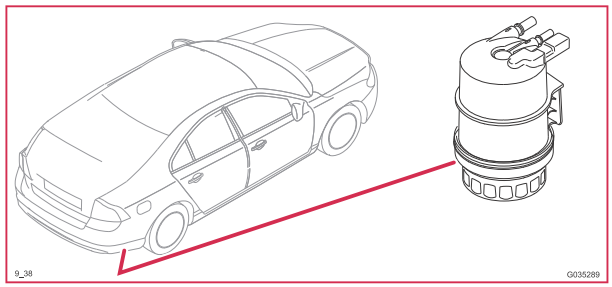

9/39 Heating element camera

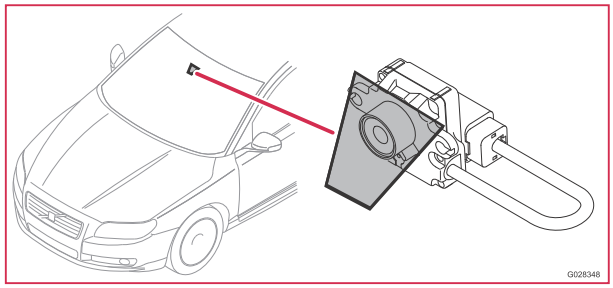

9/42 PTC-element

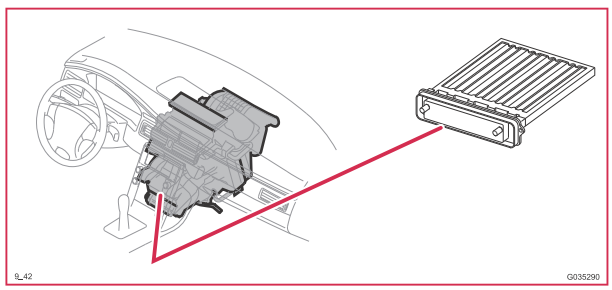

Component illustrations
9/43 - 10/18

9/43 Heated windshield washer nozzle, left

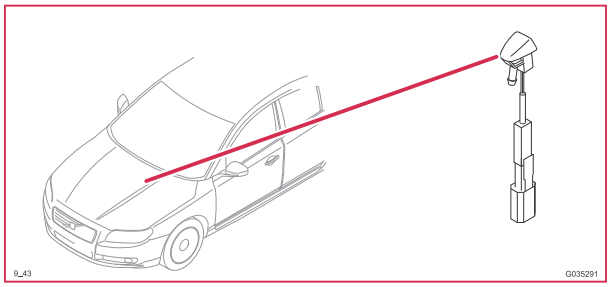

9/44 Heated windshield washer nozzle, right

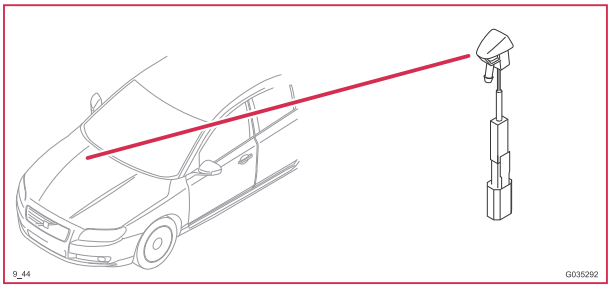

10/1 Lamp housing, front left

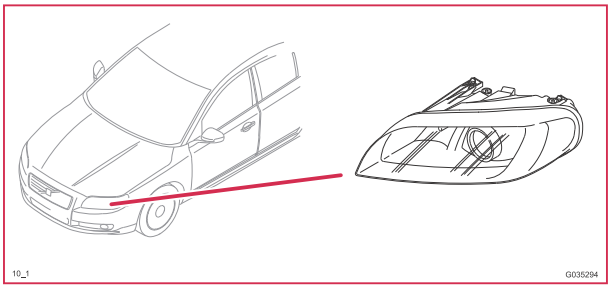

10/2 Lamp housing, front right

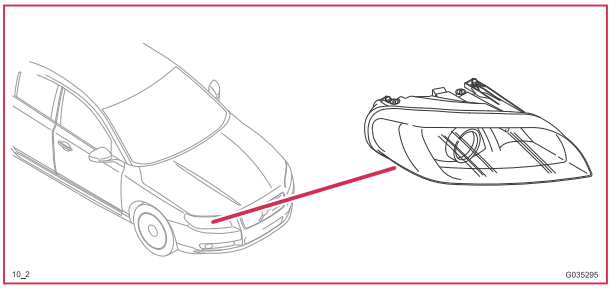

10/3 License plate lighting, V70

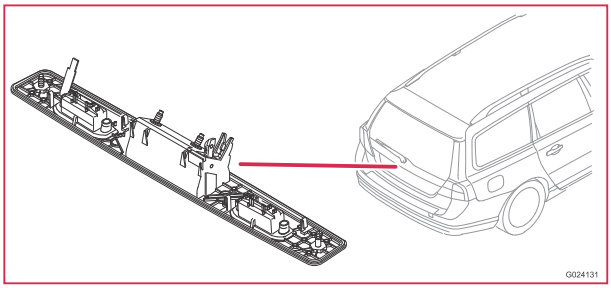

10/3 License plate lighting, S80

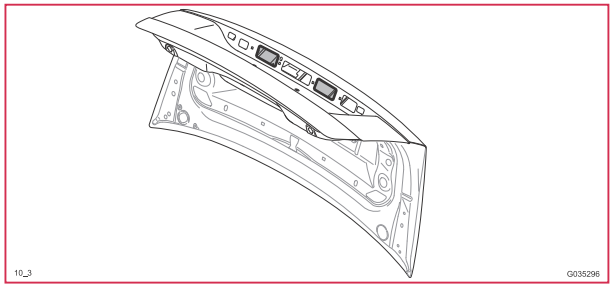

10/17 Lamp housing, rear right V70

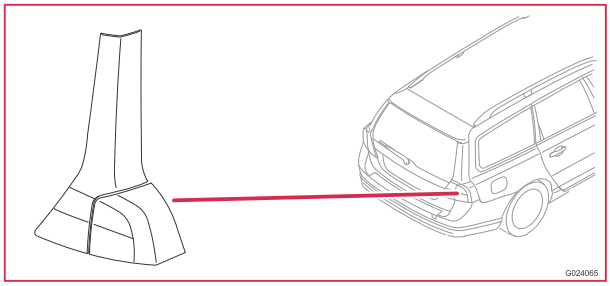

10/17 Lamp housing, rear right, S80

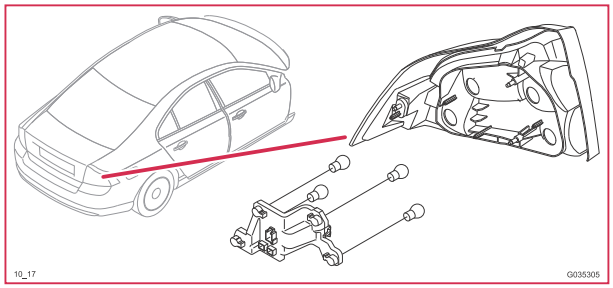

10/18 Lamp housing, rear left, V70

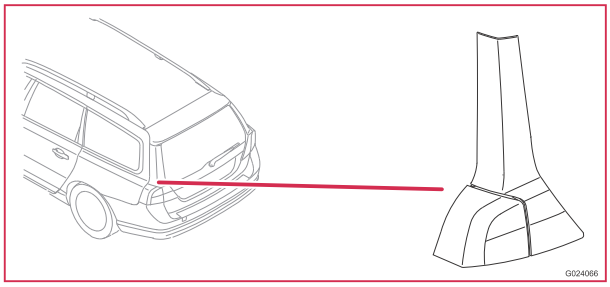

10/18 Lamp housing, rear left, S80

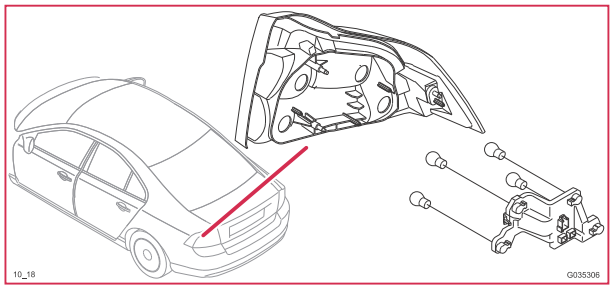

Component illustrations
10/19 - 10/72

10/19 Auxiliary brake light V70

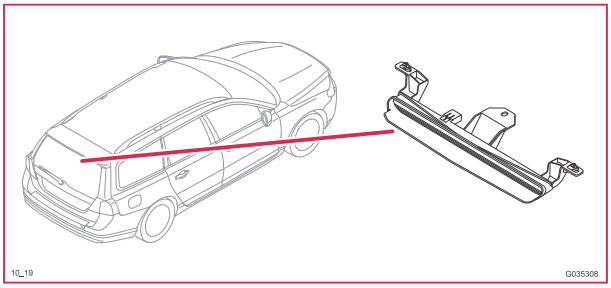

10/19 Auxiliary brake light, S80

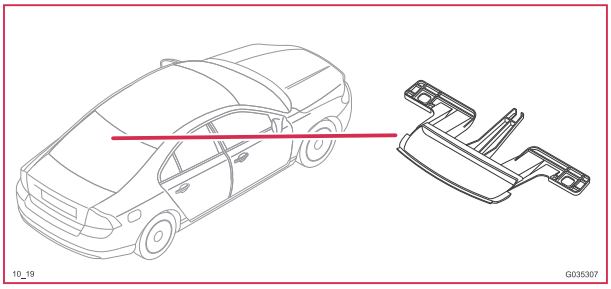

10/22 Ceiling light

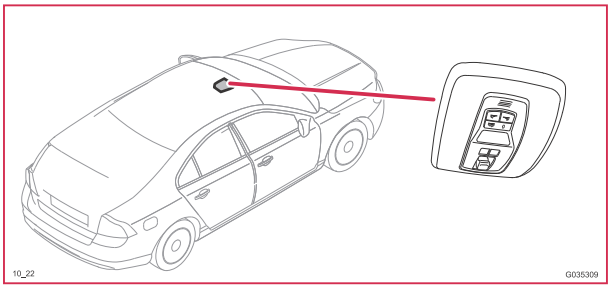

10/25 Ceiling light, cargo compartment, V70

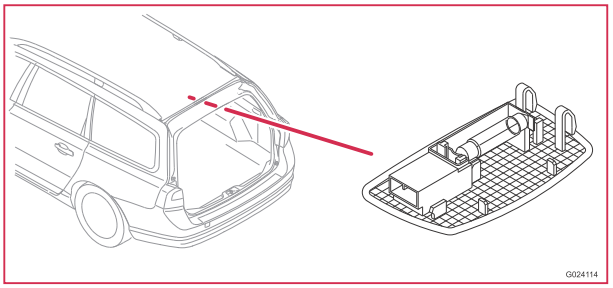

10/29 Glove compartment lighting

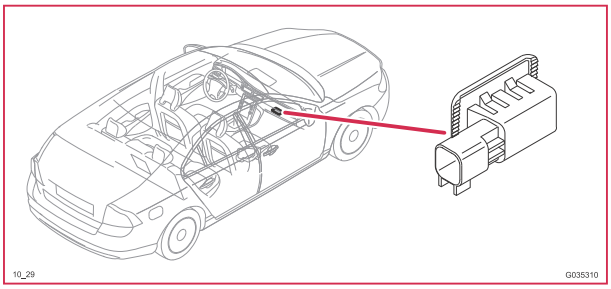

10/56 Daytime running lamp left, V70 & S80

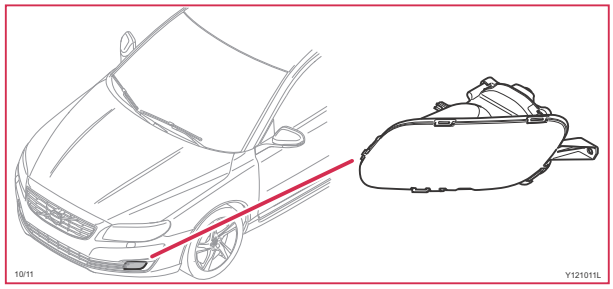

10/57 Daytime running lamp right, V70 & S80

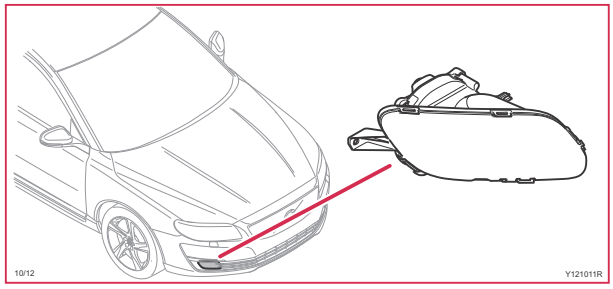

10/65 Auxiliary light, front right

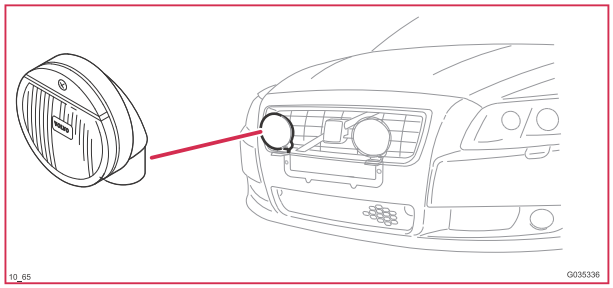

10/69 Auxiliary light, front left

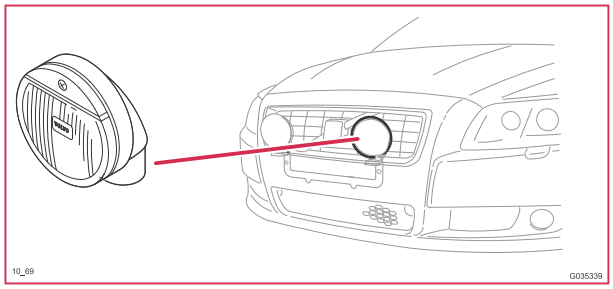

10/72 Front ashtray lighting

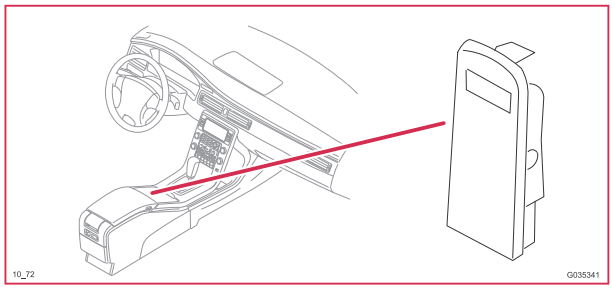

Component illustrations
10/97 - 10/161

10/97 Left-hand front courtesy lighting

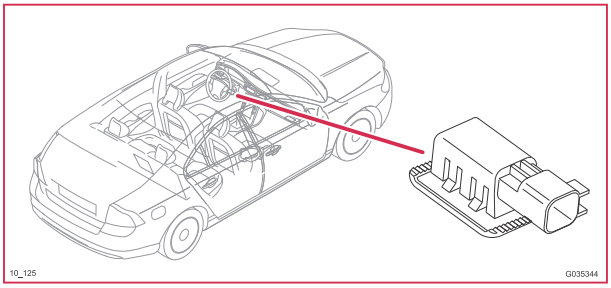

10/102 Right-hand front courtesy lighting

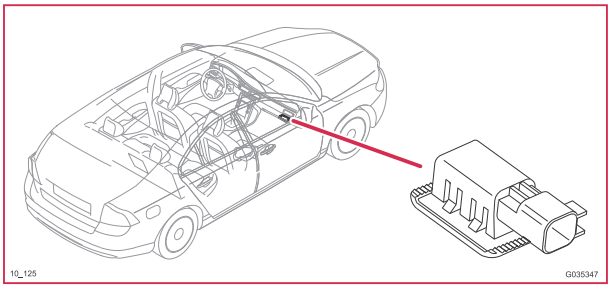

10/114 Left-hand vanity mirror lighting

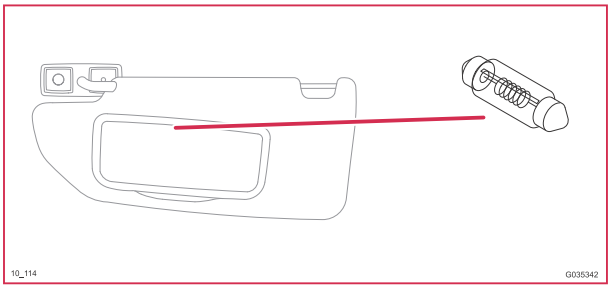

10/115 Right-hand vanity mirror lighting

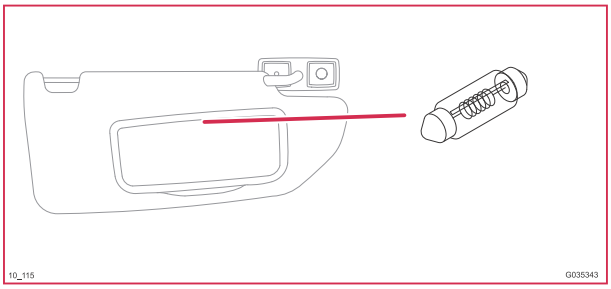

10/122 Left-hand rear courtesy lighting

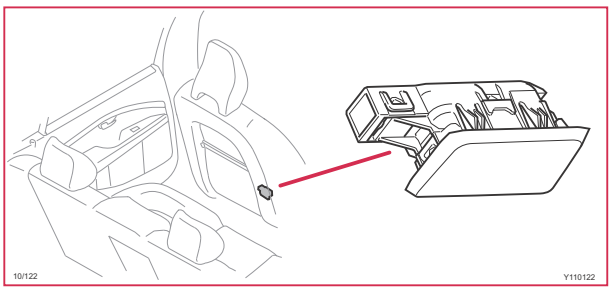

10/123 Right-hand rear courtesy lighting

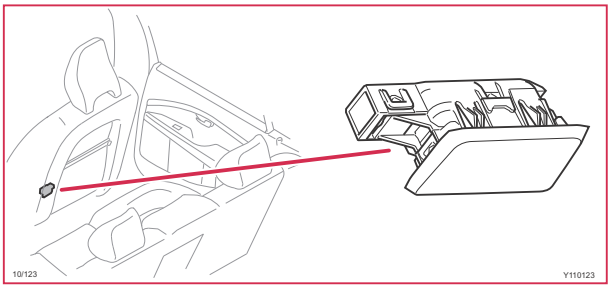

10/127 Lighting, cargo compartment, left-hand side, S80

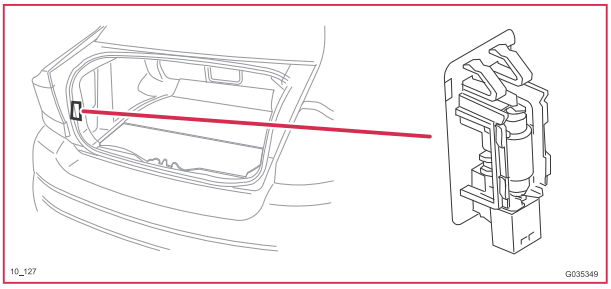

10/128 Lighting, cargo compartment, right-hand side, S80

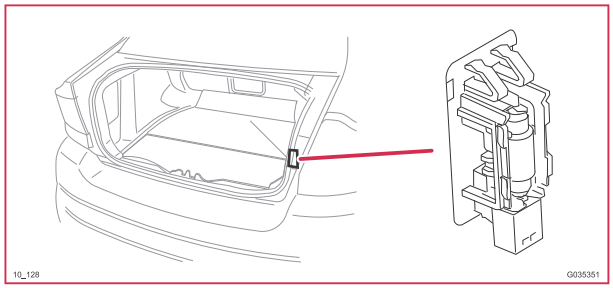

10/150 Rear reading light

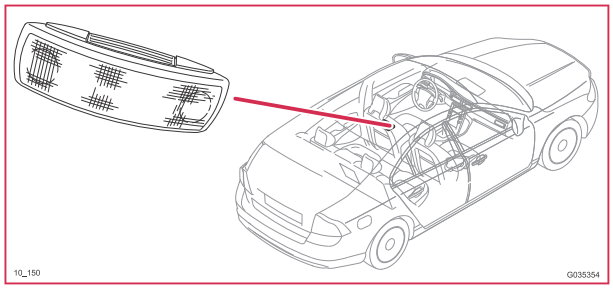

10/161 Cup holder illumination lamp

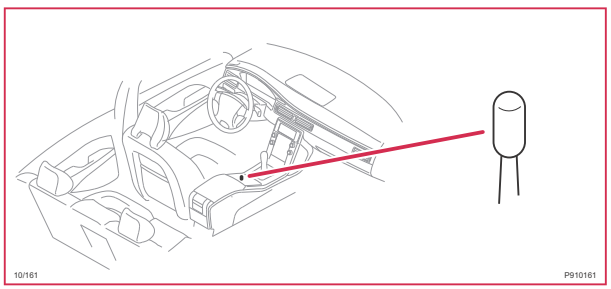

Component illustrations
10/241 - 10/262

10/241 Lighting, left-hand front inner door handle

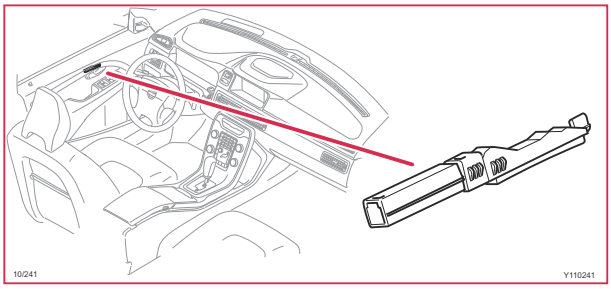

10/242 Lighting, right-hand rear inner door handle

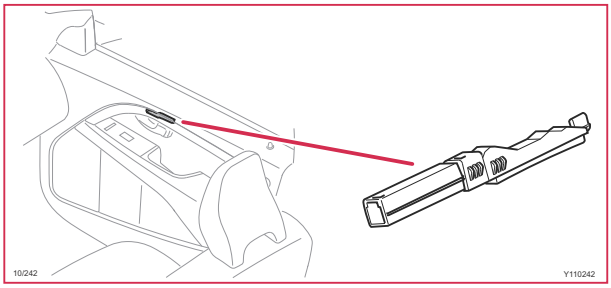

10/243 Lighting, left-hand rear inner door handle

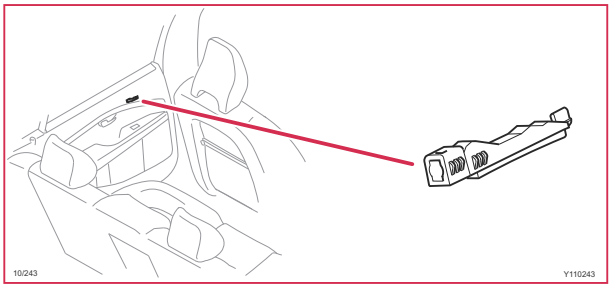

10/244 Lighting, right-hand rear inner door handle

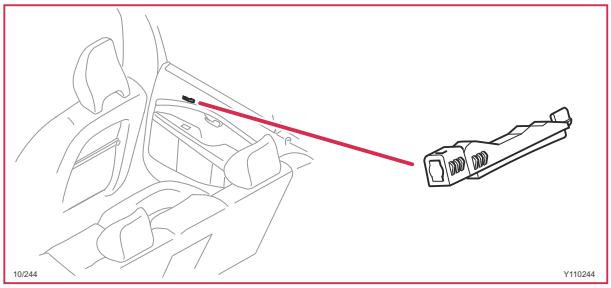

10/249 Sill lighting, front driver's side

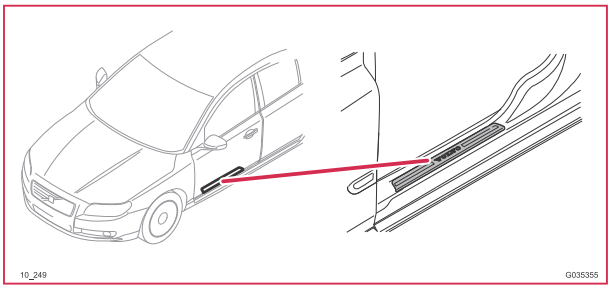

10/250 Sill lighting, front passenger side

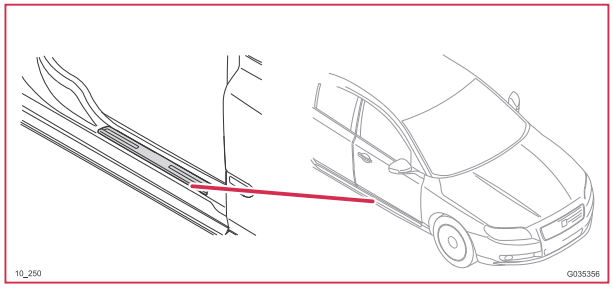

10/251 Sill lighting, rear driver's side, S80

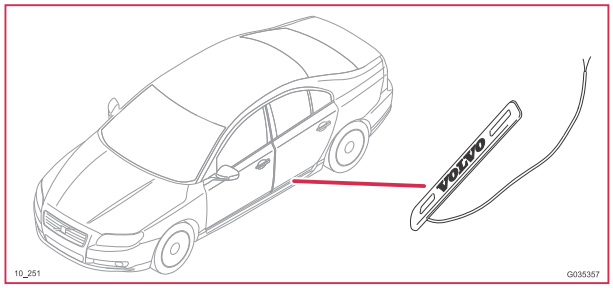

10/252 Sill lighting, rear passenger side, S80

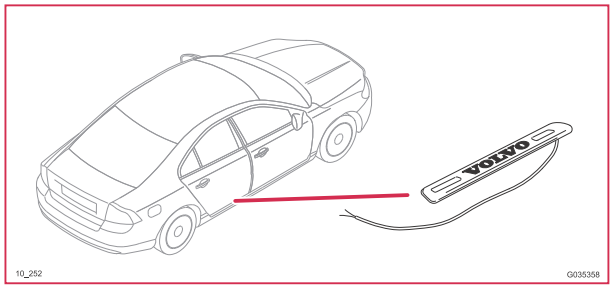

10/261 Ground illumination lighting, left front

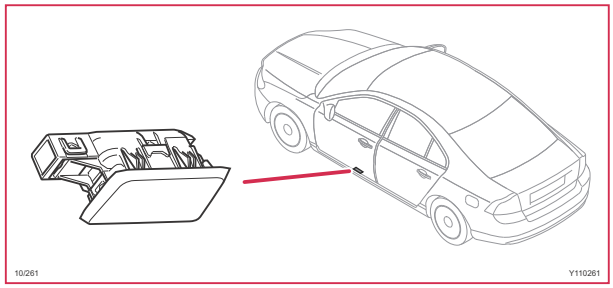

10/262 Ground illumination lighting, right front

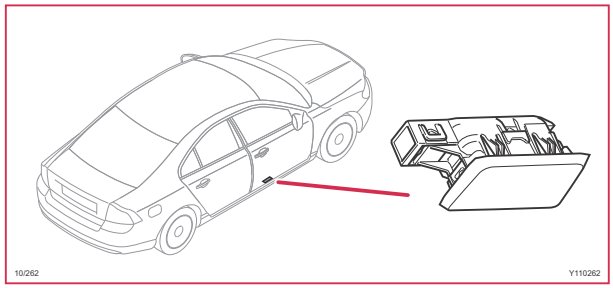

Component illustrations
10/263 - 11C/no.

10/263 Lighting, cup holder tunnel console

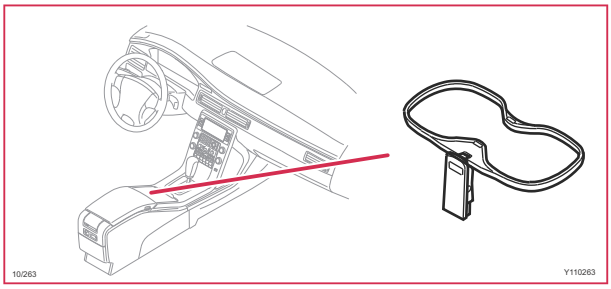

10/286 Lighting floor driver's side

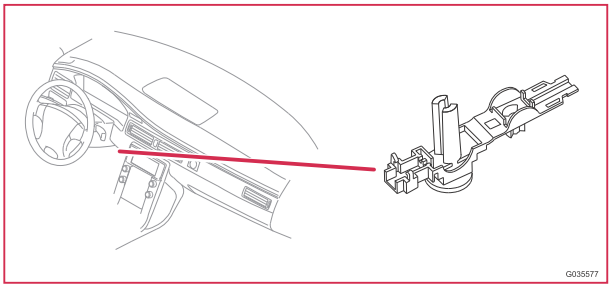

10/287 Lighting floor passenger side

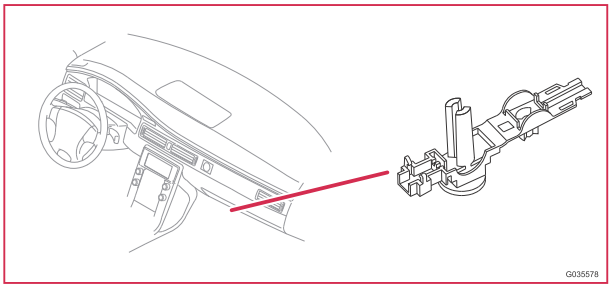

10/289DR Lighting, door pocket, driver's door

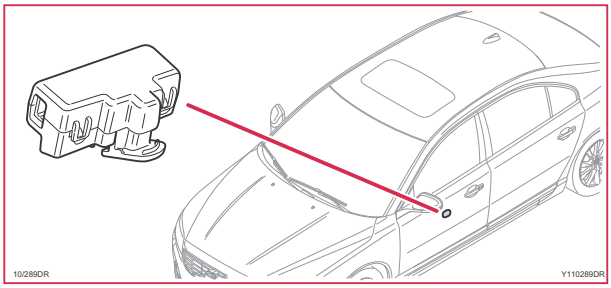

10/289PA Lighting, door pocket, passenger door

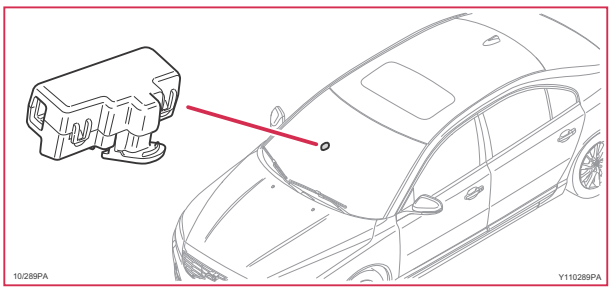

10/294 Lighting floor passenger side

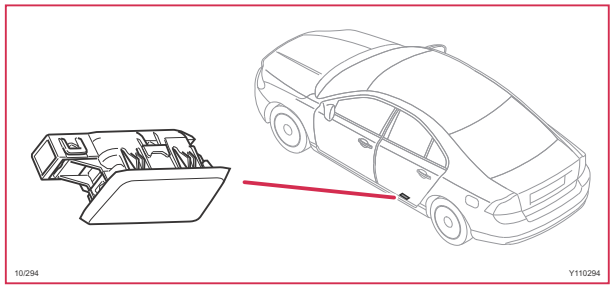

10/295 Lighting floor passenger side

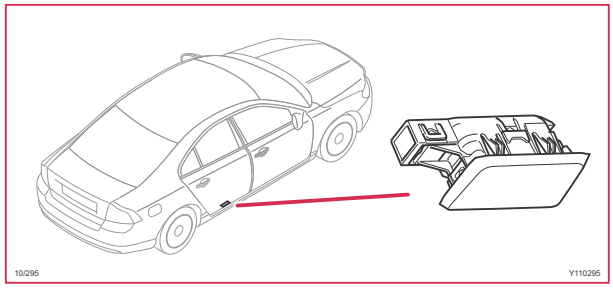

11A/no. Main fuses in distribution box in engine compartment

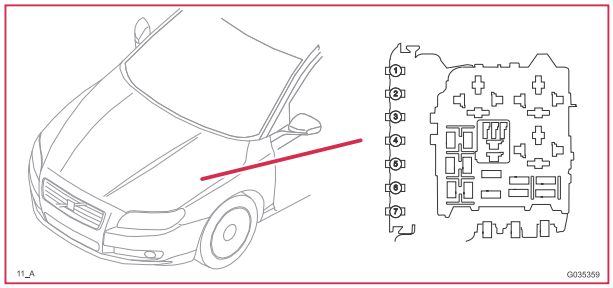

11B/no. Fuses in distribution box in engine compartment

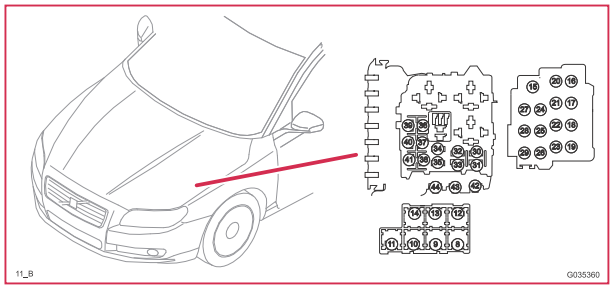

11C/no.Fuses in distribution box in passenger compartment

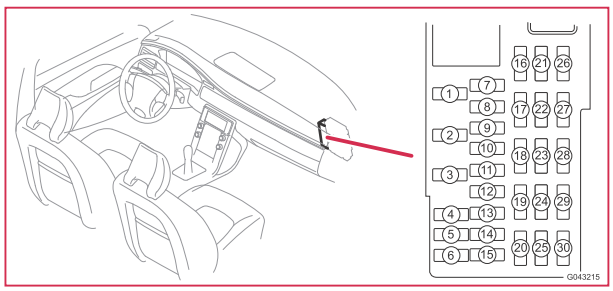

Component illustrations
11D/A - 16/5

11D/A Fuses in distribution box in cargo compartment

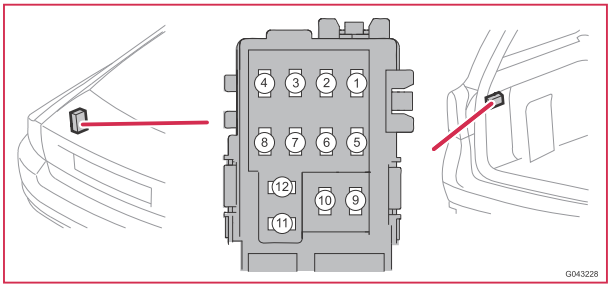

11/no. Fuse in extra fuse holder, passenger compartment

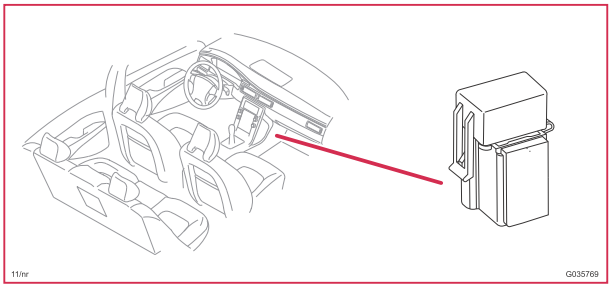

15/31 Distribution box in engine compartment

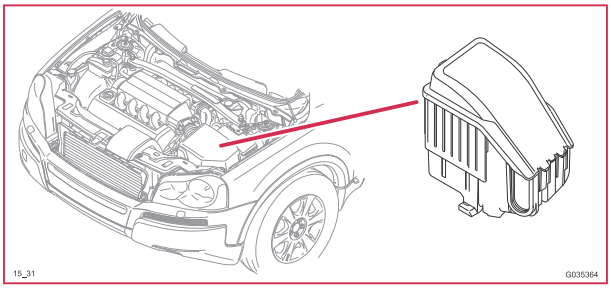

15/32 Distribution box in cargo compartment

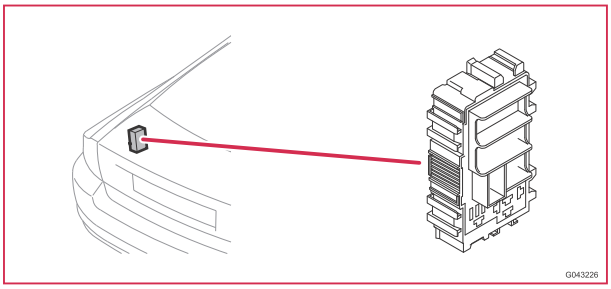

15/36 Distribution box in passenger compartment

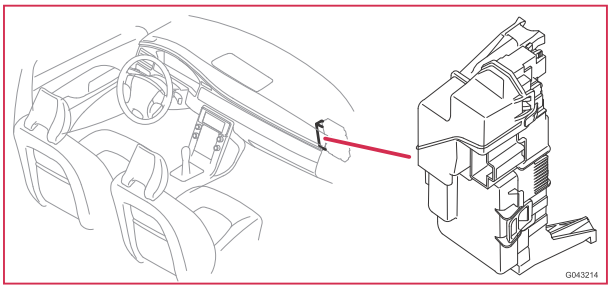

15/37 Distribution box cold zone in engine compartment

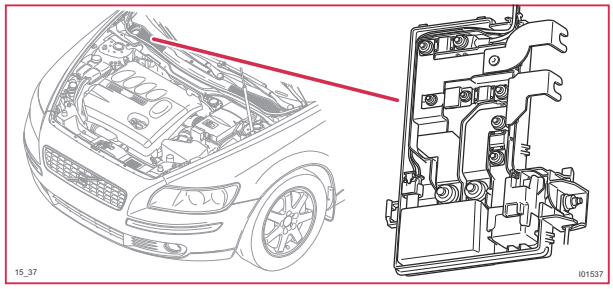

16/1 Integrated Audio Module (IAM)

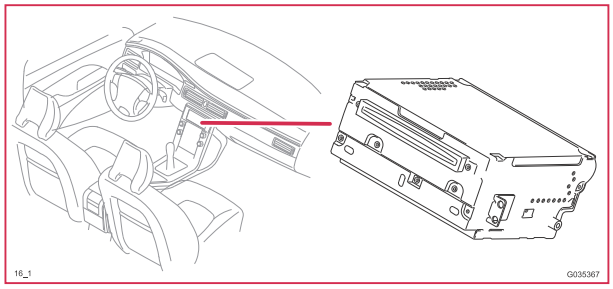

16/3 Right-hand front door speaker

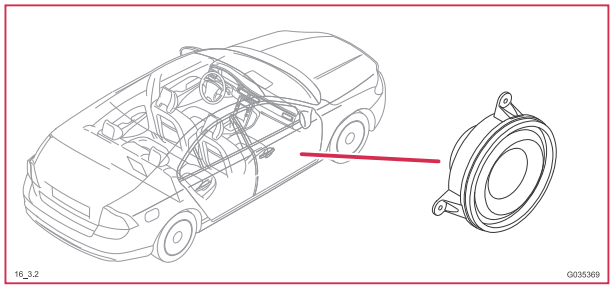

16/4 Left-hand front door speaker

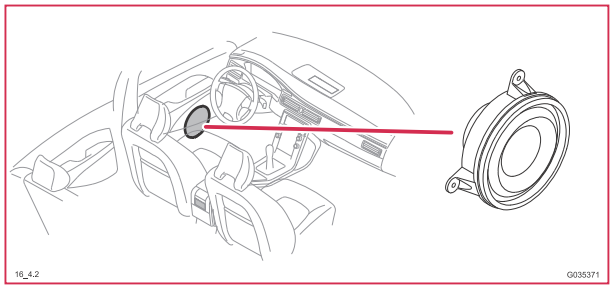

16/5 Right-hand rear door speaker

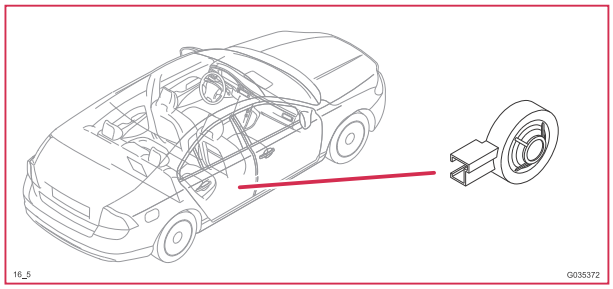

Component illustrations
16/6 - 16/45

16/6 Left-hand rear door speaker

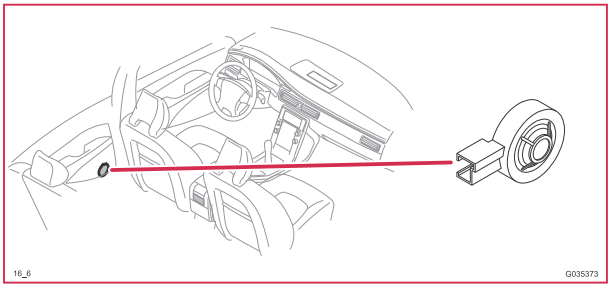

16/10 Horn 1

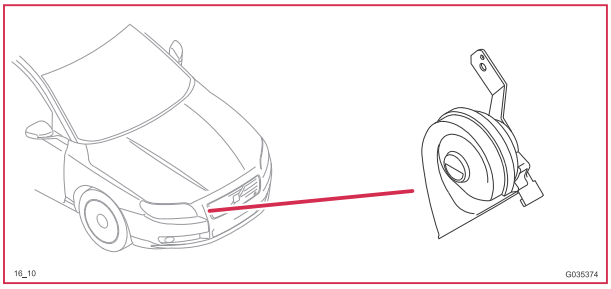

16/11 Horn 2

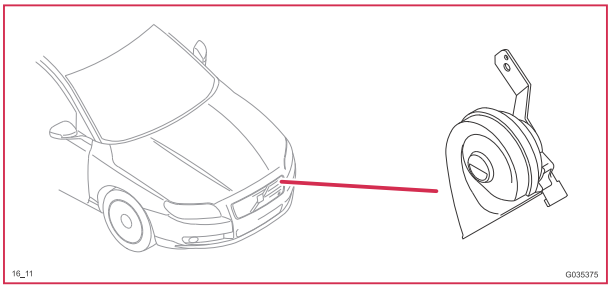

16/16 Window antenna amplifier

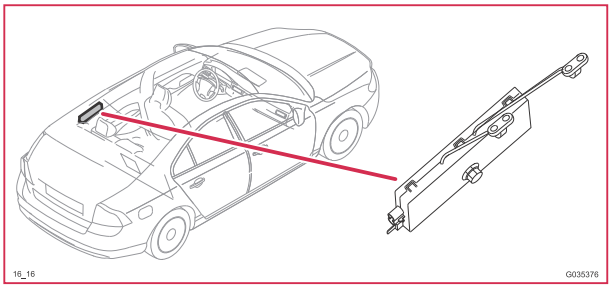

16/26 Center dashboard speaker

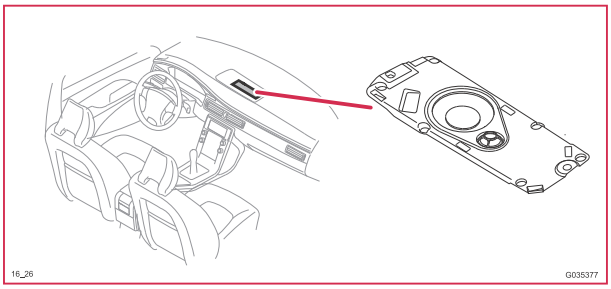

16/29 Loudspeaker mid-range left front

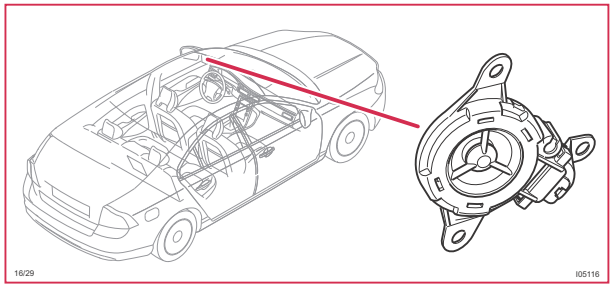

16/30 Loudspeaker mid-range right front

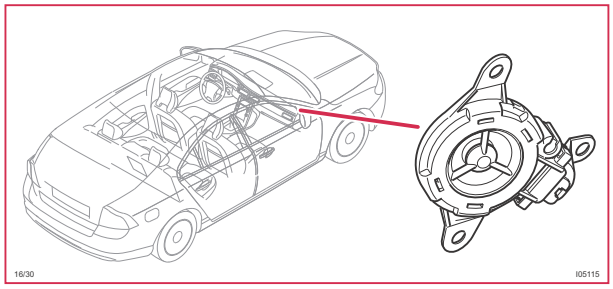

16/35 Siren Control Module (SCM)

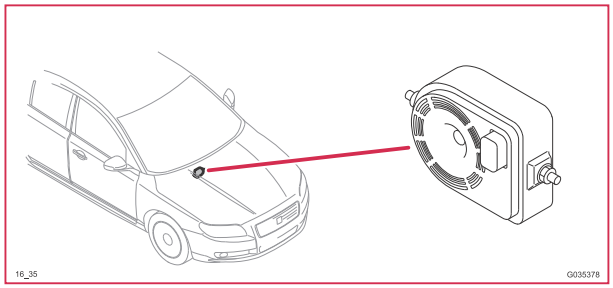

16/36 TV receiver

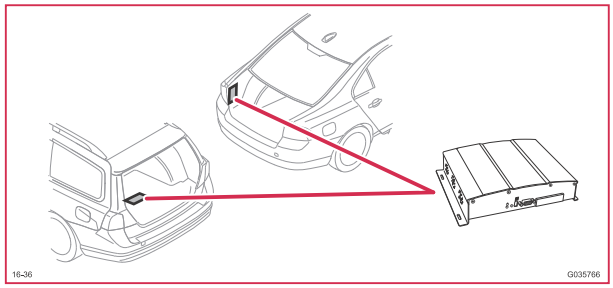

16/45 Portable navigation system

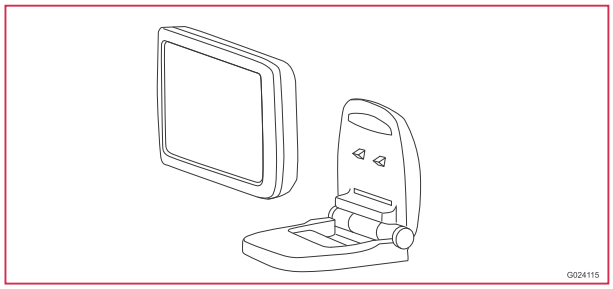

Component illustrations
16/47 - 16/105

16/47 Antenna GSM/GPS/RDAR

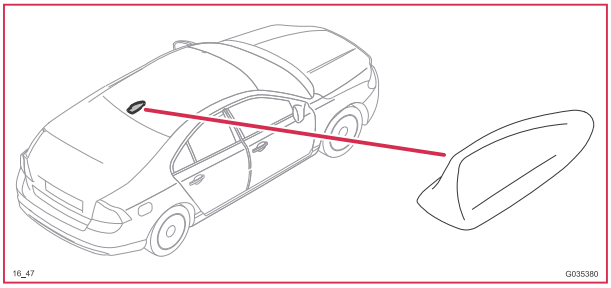

16/49 Traffic Message Channel module (TMC)

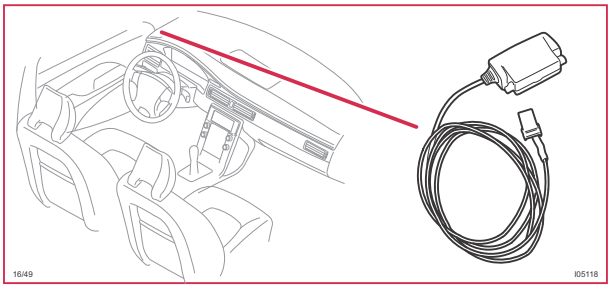

16/55 Left-hand front tweeter

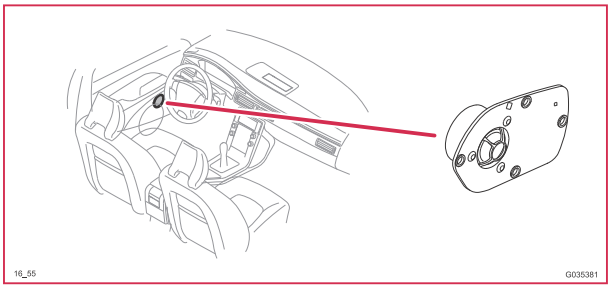

16/56 Right-hand front tweeter

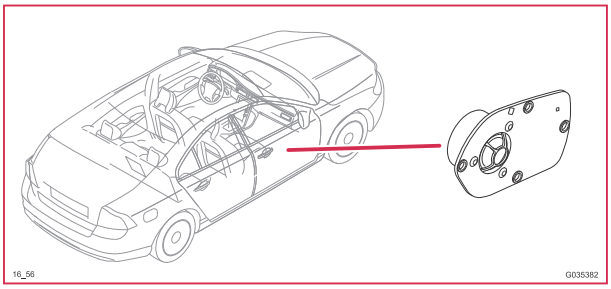

16/60 Phone Module (PHM)

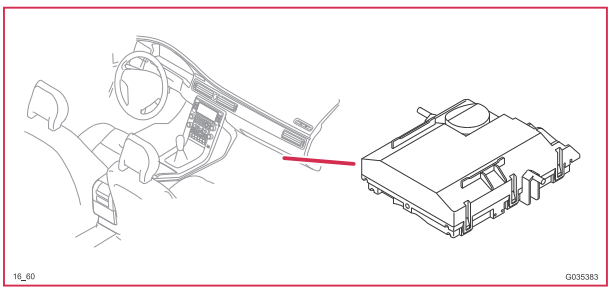

16/65 Immobilizer Antenna Unit (IAU)

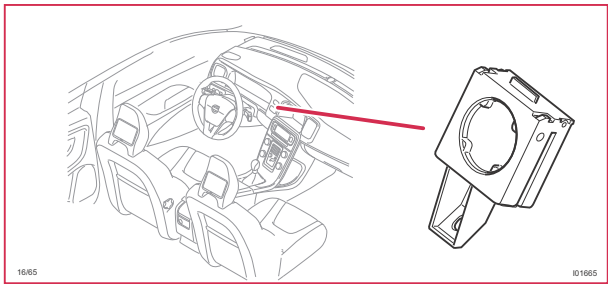

16/71 Window antenna amplifier

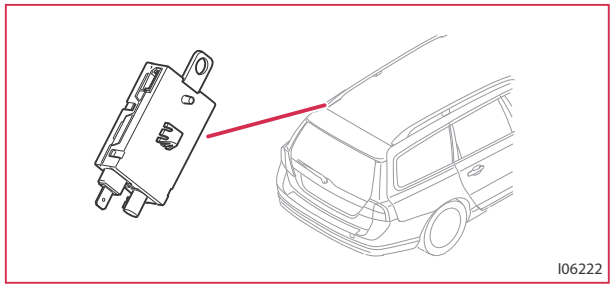

16/79 Subwoofer Module (SUB), V70

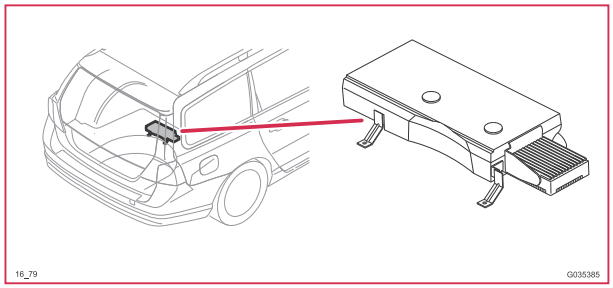

16/98 Microphone

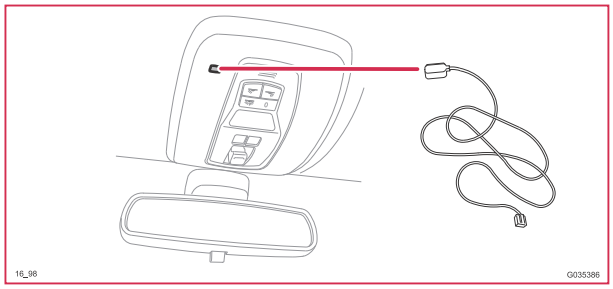

16/105 Audio module (AUD)

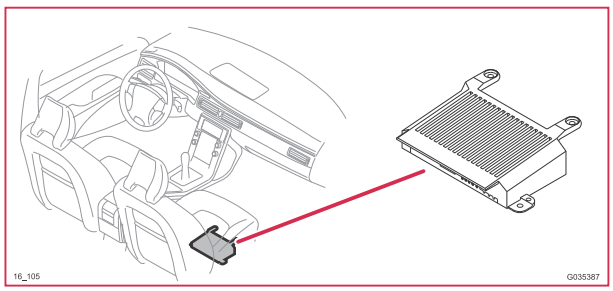

Component illustrations
16/109 - 16/136

16/109 DVD player/control module

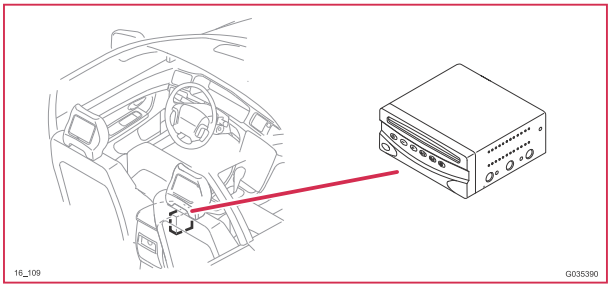

16/121 VICS-antenna

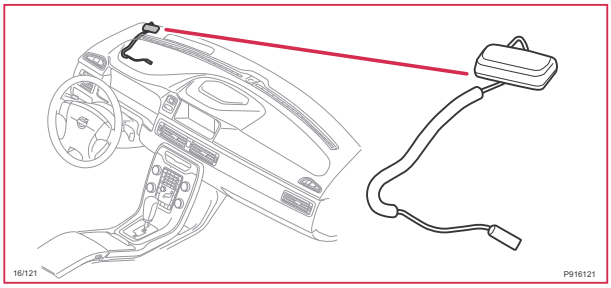

16/123 Auxiliary equipment input (AUX)

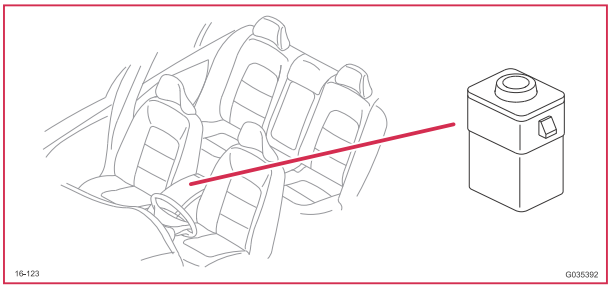

16/127 Microphone, mobile phone handsfree

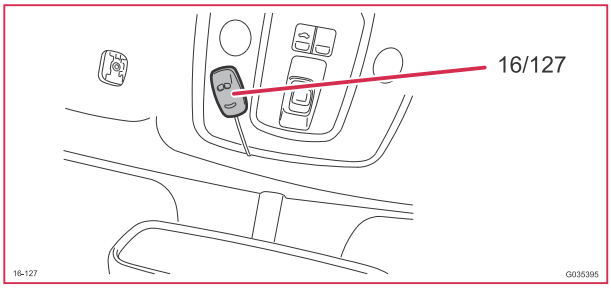

16/132 Antenna door lock trunk lid/tailgate, V70

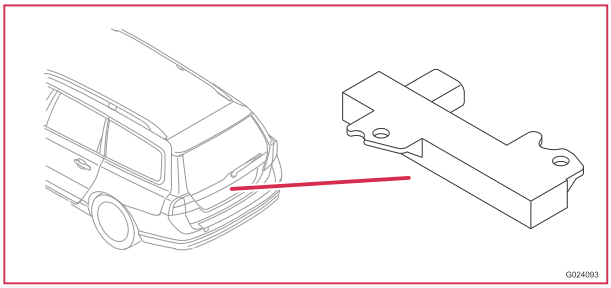

16/132 Antenna, door lock, bumper, S80

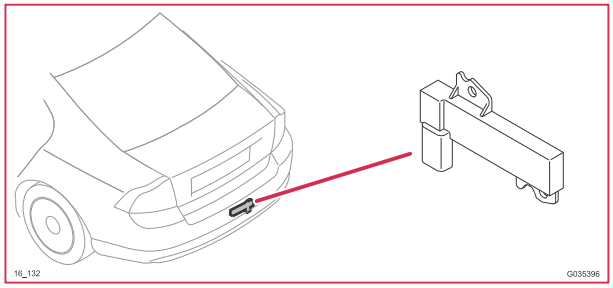

16/133 Antenna, door lock, cargo compartment

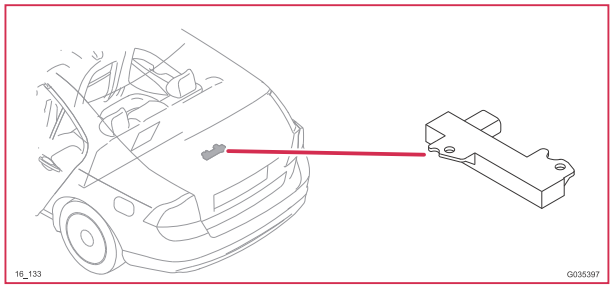

16/134 Antenna, door lock, passenger compartment 2

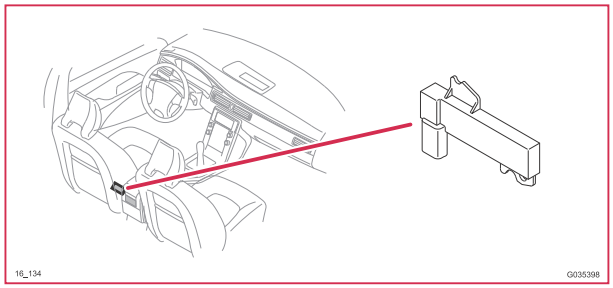

16/135 Antenna, door lock, passenger compartment 3

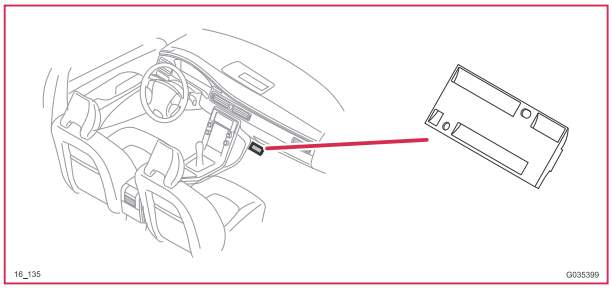

16/136 left rear door tweeter

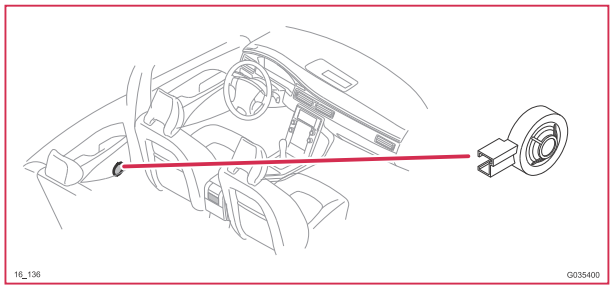

Component illustrations
16/137 - 16/186

16/137 Right rear door tweeter

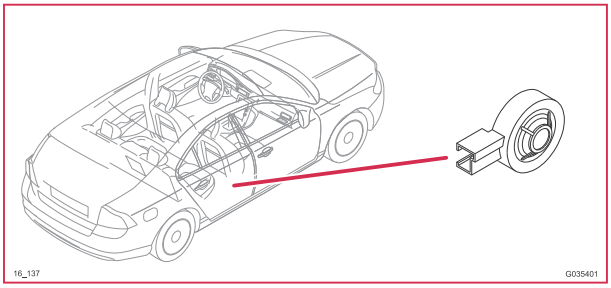

16/140 SIM card reader

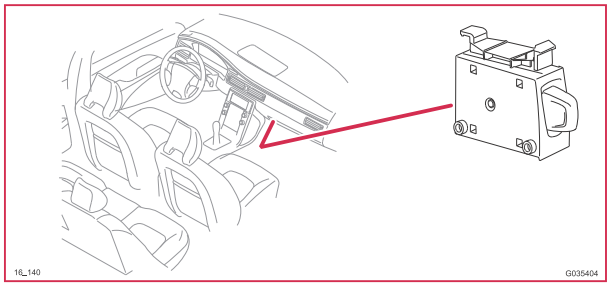

16/141 Interference filter, rear window, left

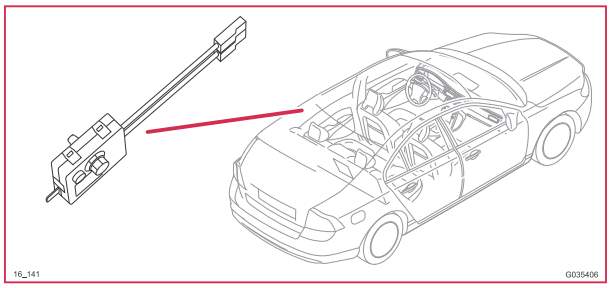

16/145 Remote Digital Audio Receiver (RDAR)

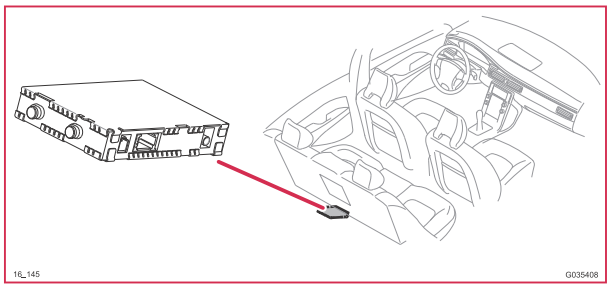

16/159 Control module, cellular phone handsfree

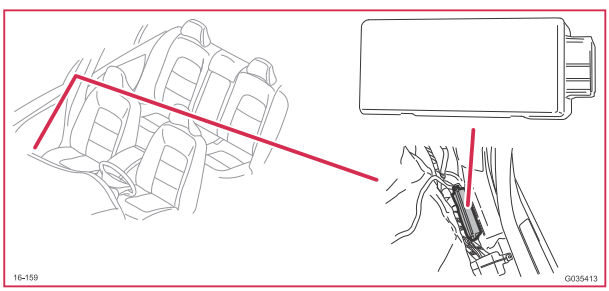

16/162 Digital Audio Broadcast Module (DABM)

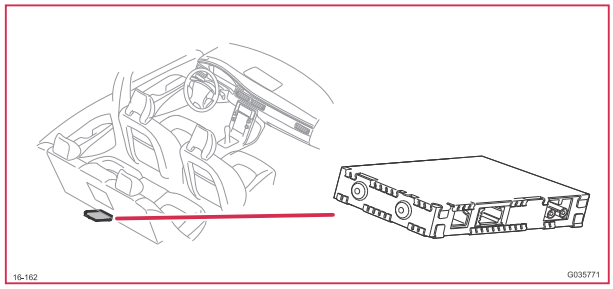

16/164 Screen, left head restraint

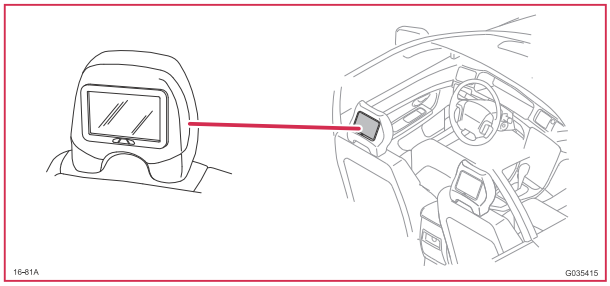

16/165 Screen, right head restraint

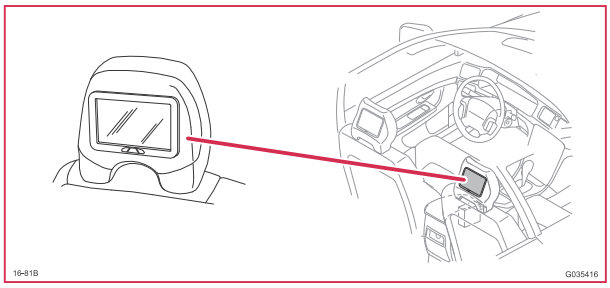

16/185 TV Antenna

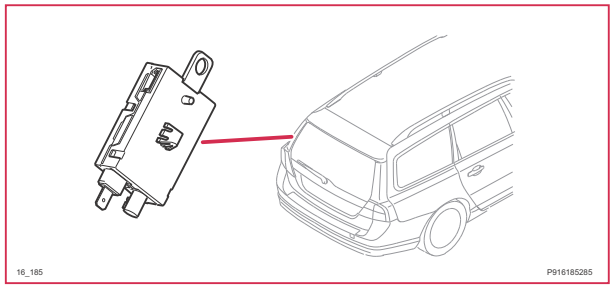

16/186 TV Antenna

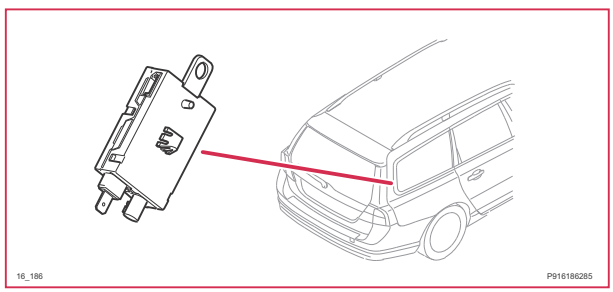

Component illustrations
16/187 - 17/45

16/187 TV Antenna

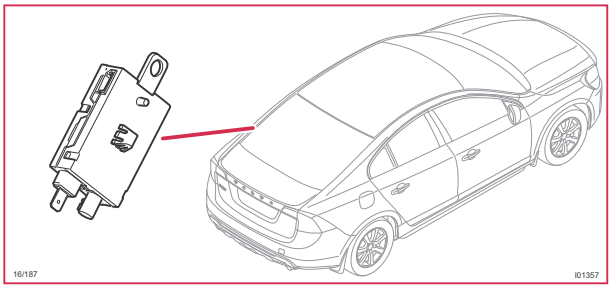

16/188 TV Antenna

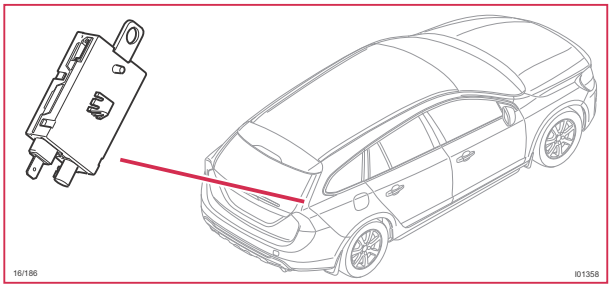

17/13 Data link connector

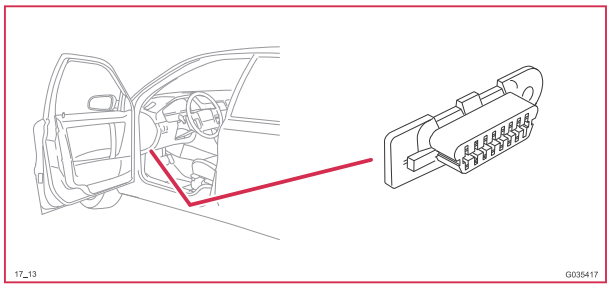

17/19 12 V outlet, cargo compartment, V70

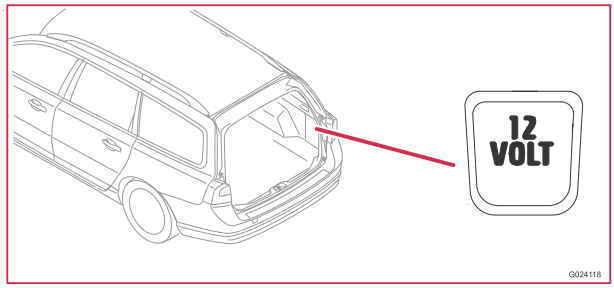

17/19 12 V outlet, cargo compartment, S80

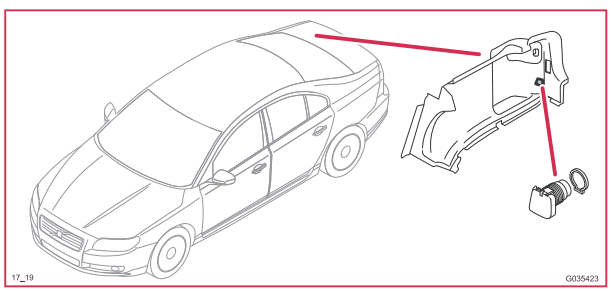

17/37 4-pin outlet, tow hitch cable harness

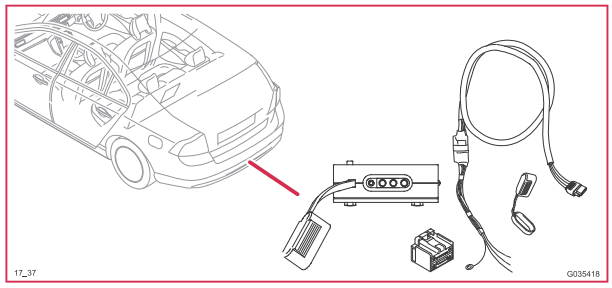

17/38 7-pin outlet, tow hitch cable harness

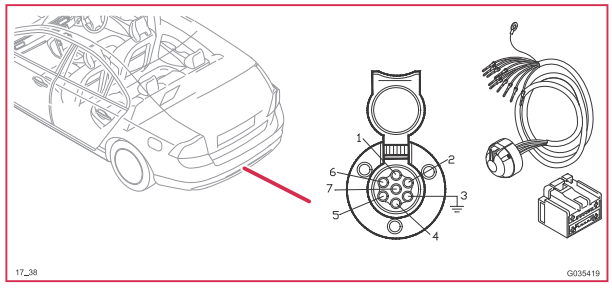

17/39 13-pin outlet, tow hitch cable harness

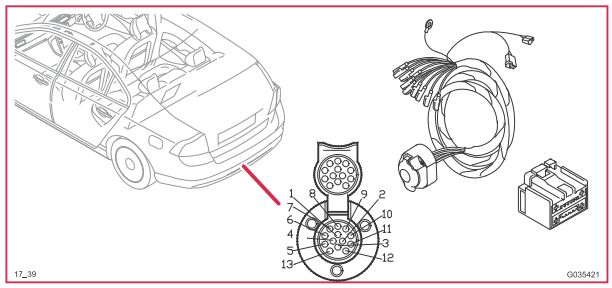

17/42 USB-port

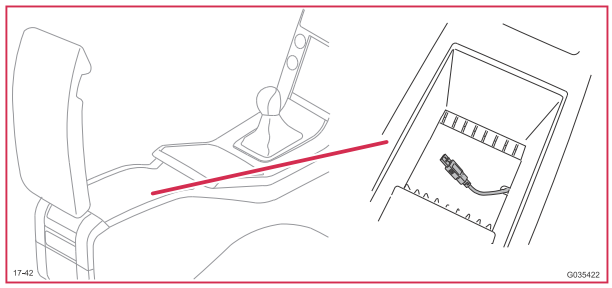

17/45 Alcolock outlet

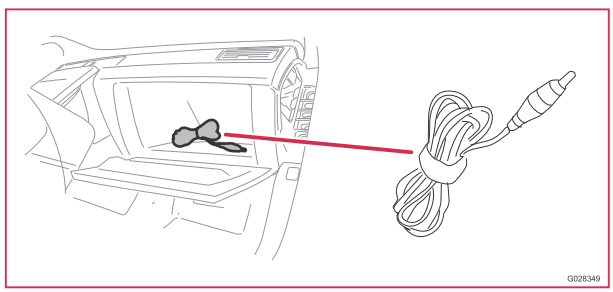

Component illustrations
17/46 - 27/2

17/46 USB software download ICM

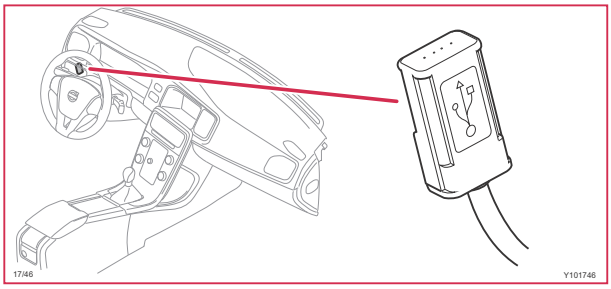

18/4 Contact reel

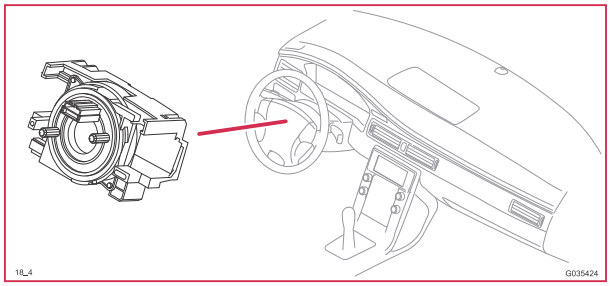

19/4 Analog clock

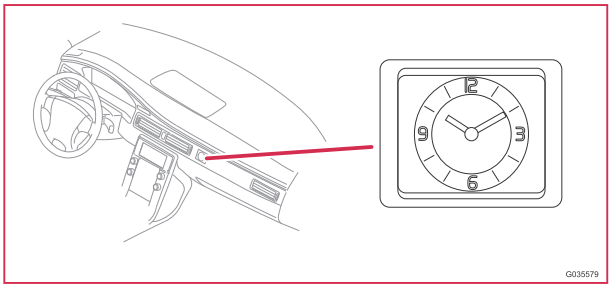

20/3-8 Spark plug and ignition coil

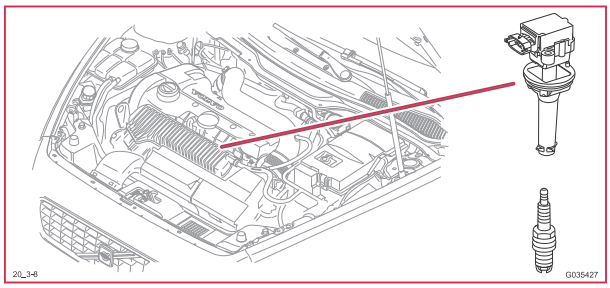

20/16 Capacitor

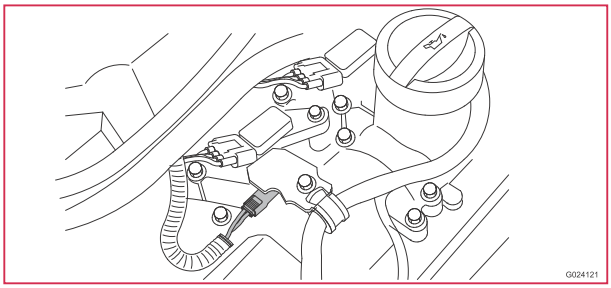

20/22-26 Glow plug

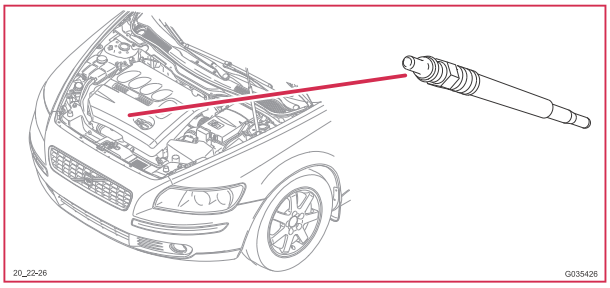

26/6 Converter/control module, sill moldings, driver's side

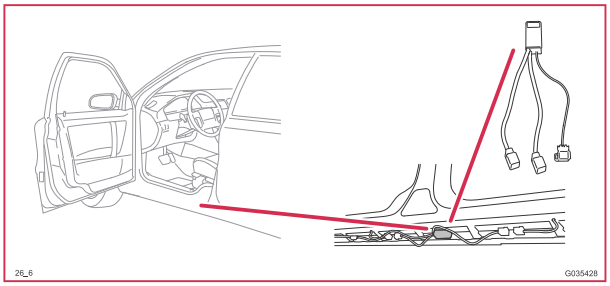

26/7 Converter/control module, sill moldings, passenger side

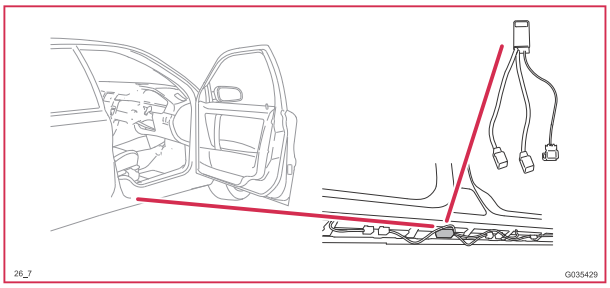

26/8 Alcolock charging cradle

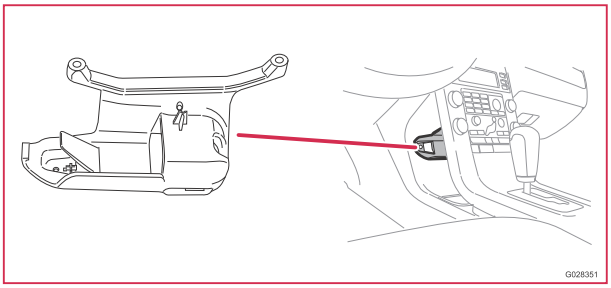

27/2 Indicator, visual collision warning

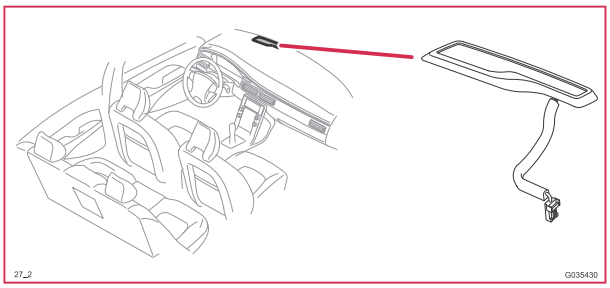

Component illustrations
27/3 - 31/6

27/3 Left Camera Module (LCM)

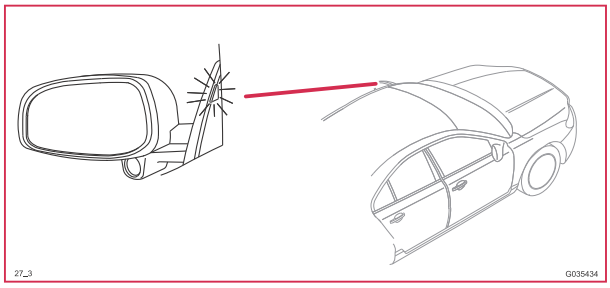

27/4 Right Camera Module (RCM)

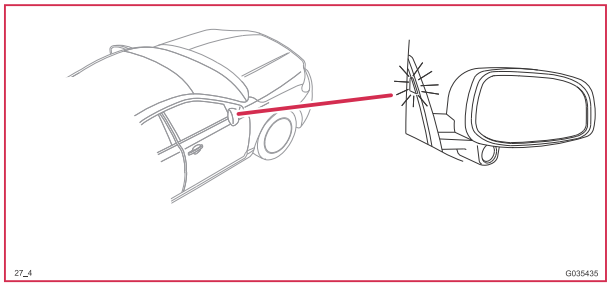

27/5 Forward looking camera

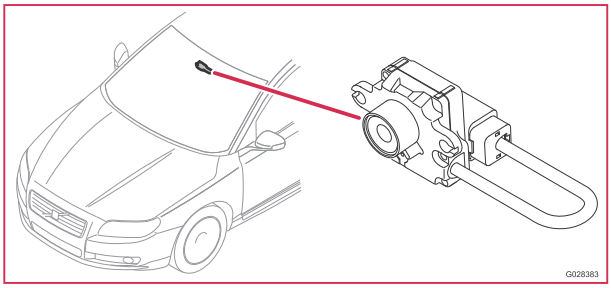

27/6 Camera

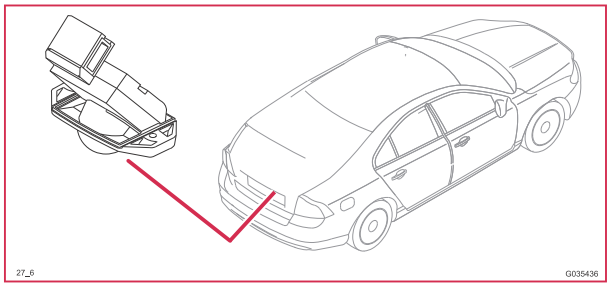

27/8 Camera, wide angle front

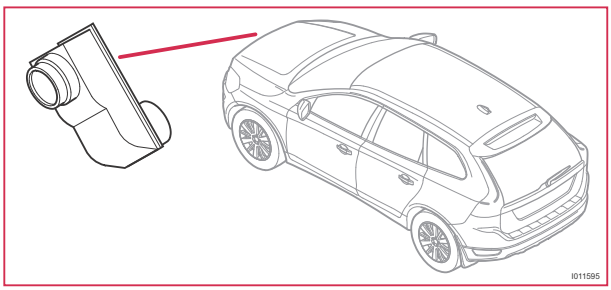

31/1 Ground connection, PTC

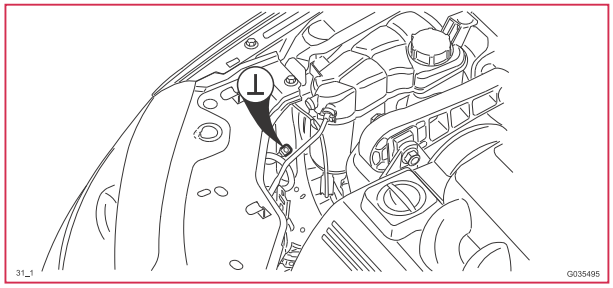

31/2 Ground connection, Left wheel housing

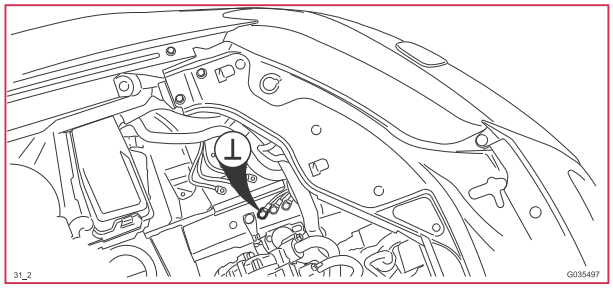

31/3 Ground connection, Body battery

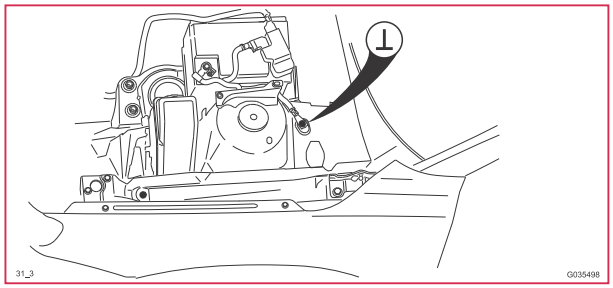

31/4 Ground connection, engine

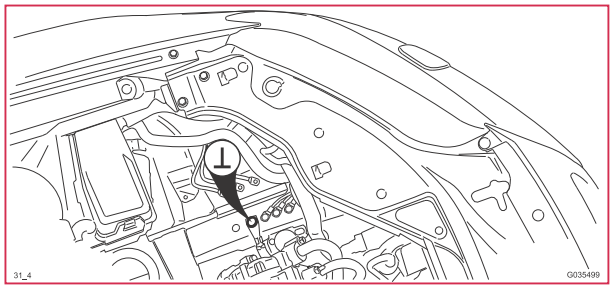

31/6 Ground connection, Left bottom rail

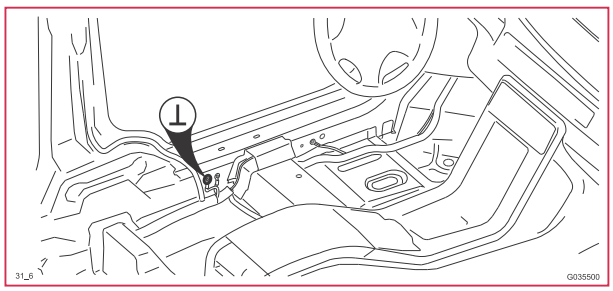

Component illustrations
31/7 - 31/83

31/7 Ground connection, Left bottom rail

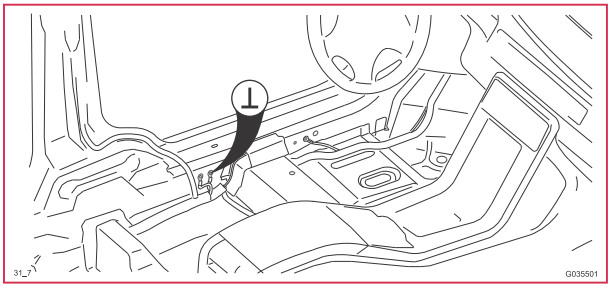

31/10 Ground connection, Left bottom rail

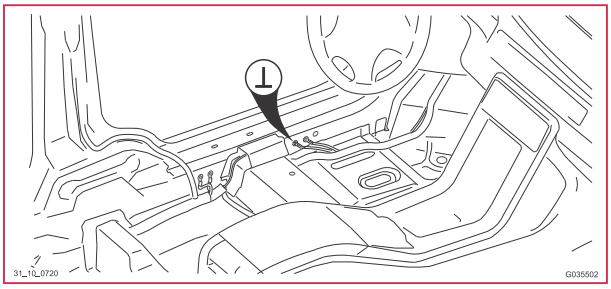

31/15 Ground connection, Right bottom rail

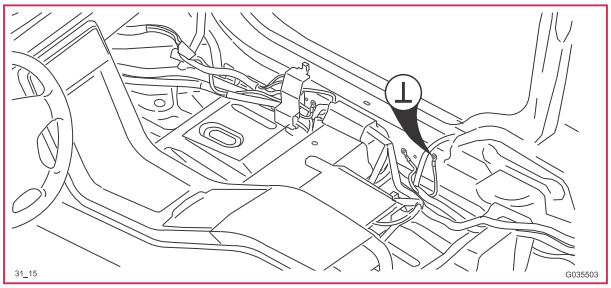

31/47 Ground connection, Left rear bumper abutment

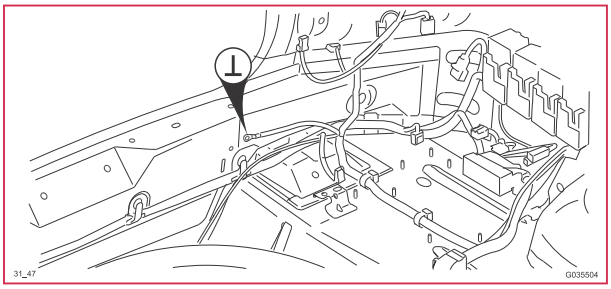

31/48 Ground connection, Right rear bumper abutment

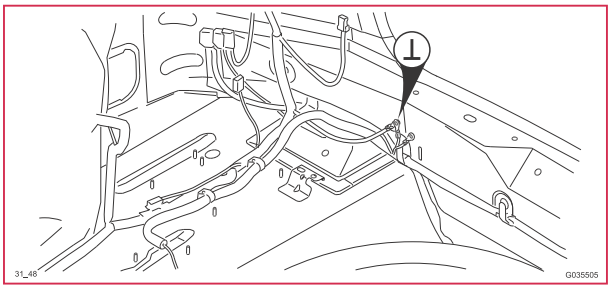

31/65 Ground connection, Rear seat riser, left side 1

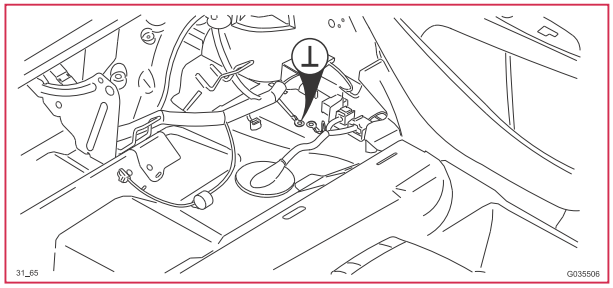

31/66 Ground connection, Rear seat riser, left side 2

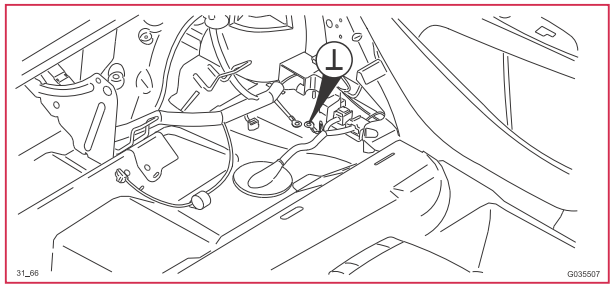

31/67 Ground connection, Rear seat riser, right side 1

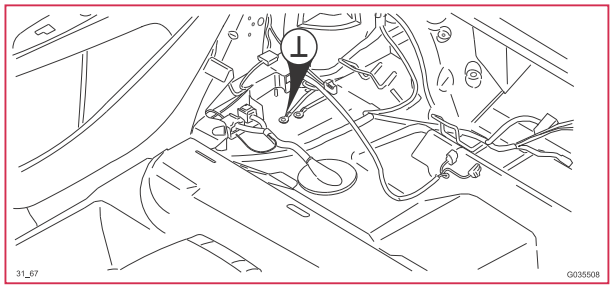

31/68 Ground connection, Rear seat riser, right side 2

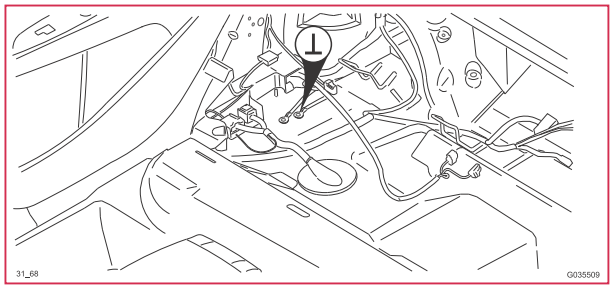

31/83 Ground connection, Left bottom rail

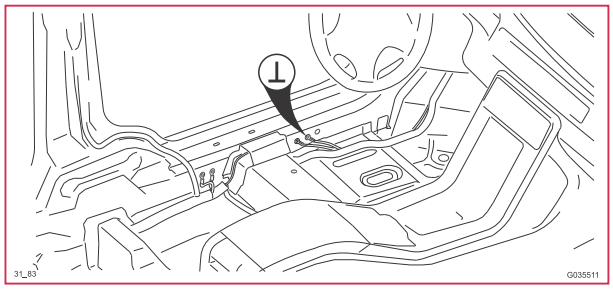

Component illustrations
31/84 - 31/94

31/84 Ground connection, Right bottom rail

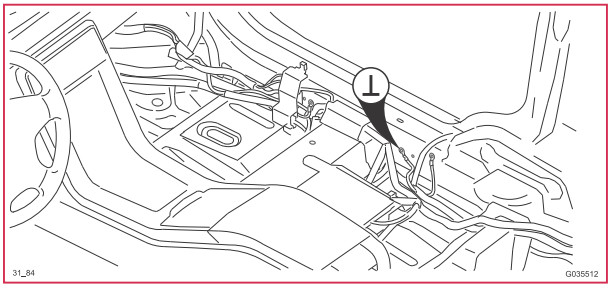

31/88 Ground connection, Engine ignition coils, 4-Cyl.

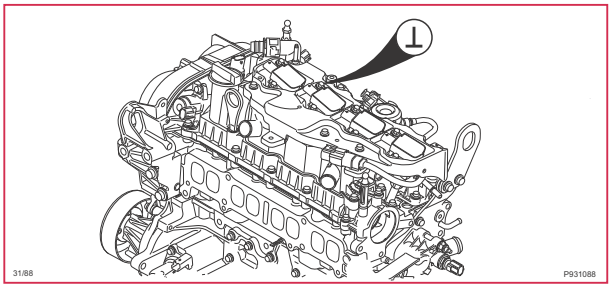

31/88 Ground connection, Engine ignition coils, 5-Cyl.

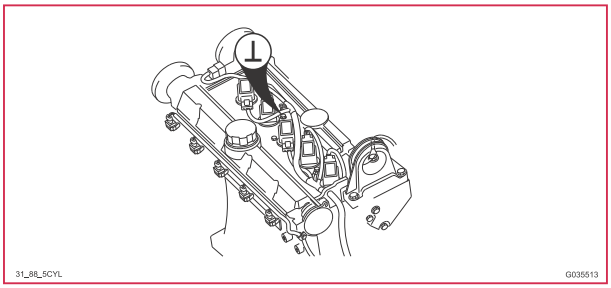

31/88 Ground connection, Engine ignition coils, 6-Cyl.

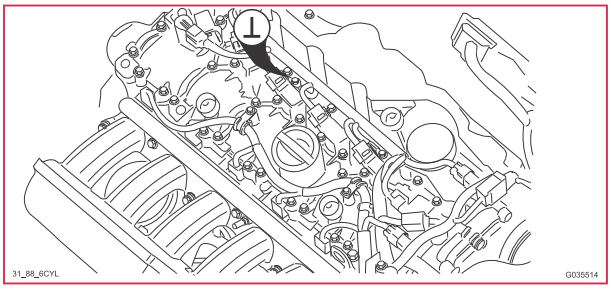

31/89 Ground connection, Engine ignition coils, 4-Cyl.

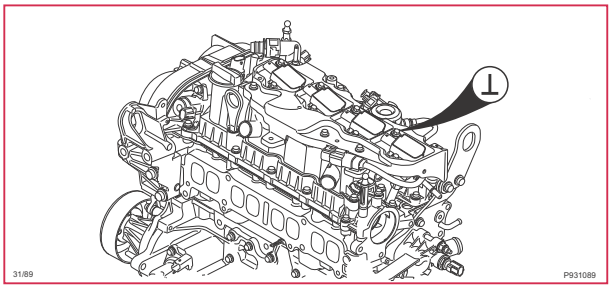

31/89 Ground connection, Engine ignition coils, 5-Cyl.

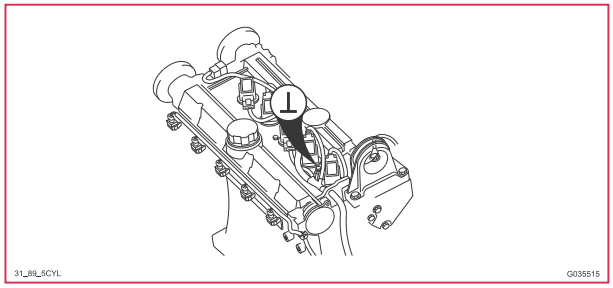

31/89 Ground connection, Engine ignition coils, 6-Cyl.

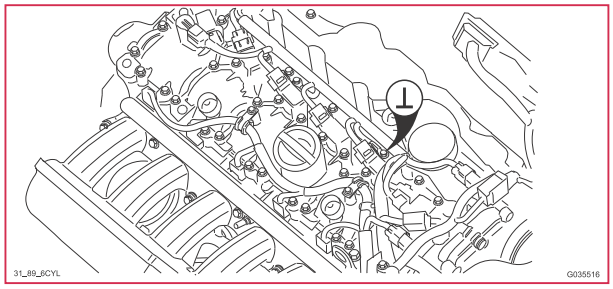

31/90 Ground connection, Engine ignition coils, 6-Cyl. Turbo

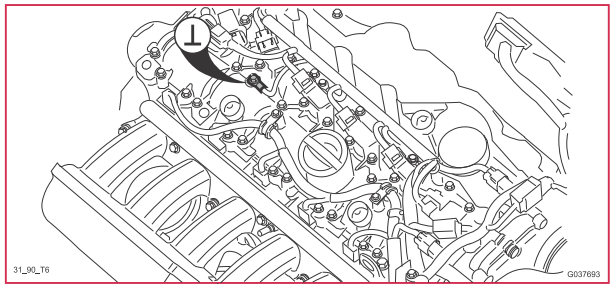

31/93 Ground connection, Left wheel housing 2

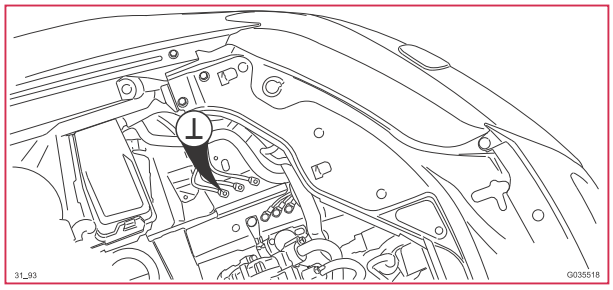

31/94 Ground connection, Right wheel housing 2

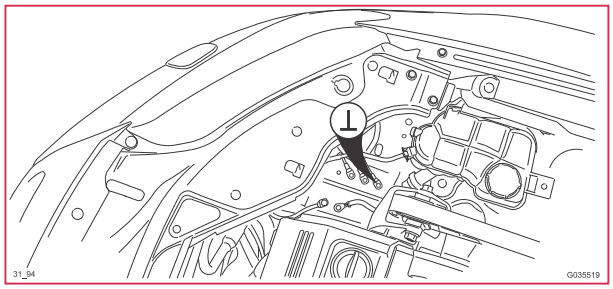

Component illustrations
31/95 - 31/INFOT

31/95 Ground connection, Left wheel housing 3

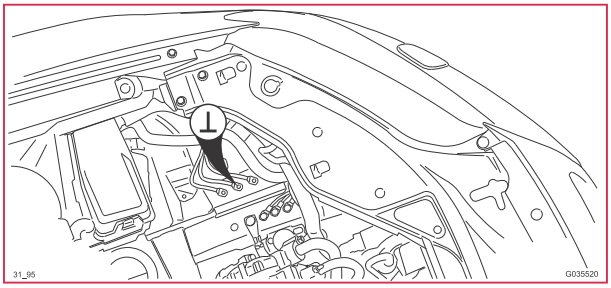

31/96 Ground connection, Right wheel housing 3

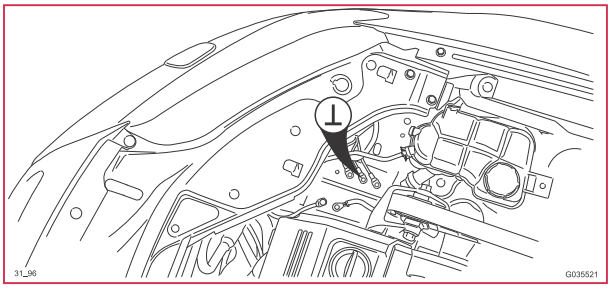

31/107 Ground connection, Roof rear

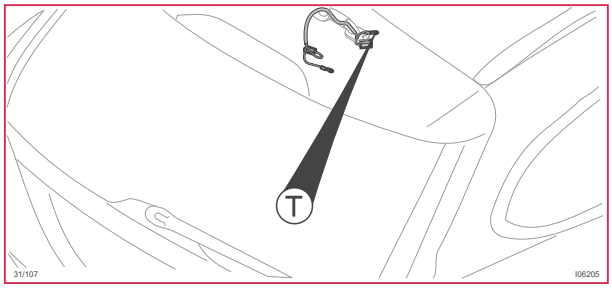

31/115 Ground connection, roof left, A-pillar

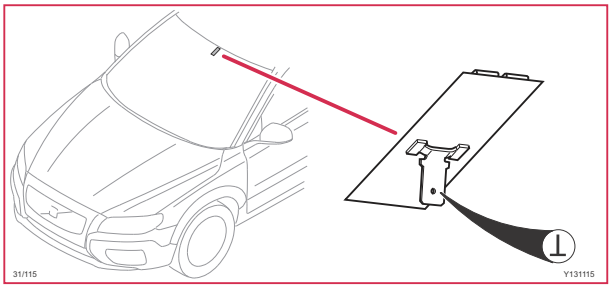

31/131 Ground connection, support battery

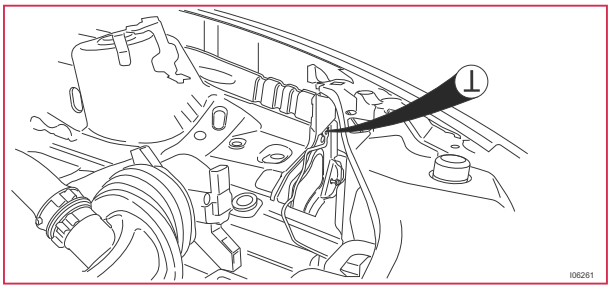

31/XX4 Ground connection, Engine-Body

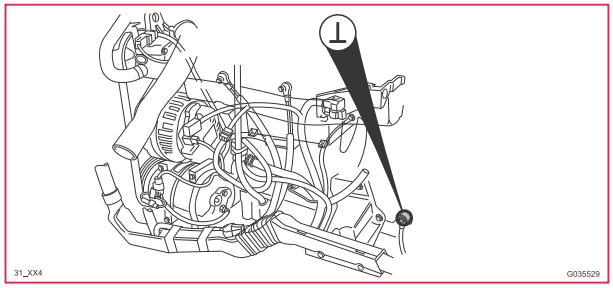

31/XX10 Ground connection, Left wheel housing 1

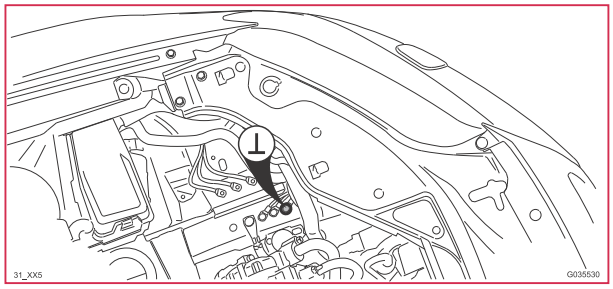

31/XX14 Ground connection, Left wheel housing 3 (ABS)

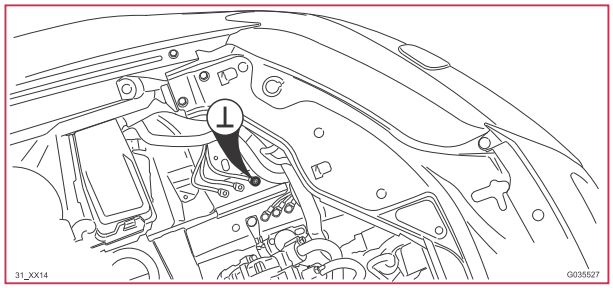

31/AL Ground connection, Auxiliary lights

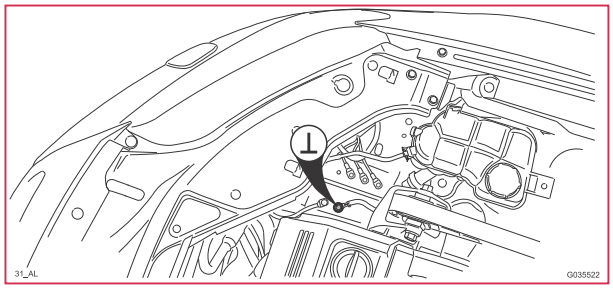

31/INFOT Ground connection, Infotainment

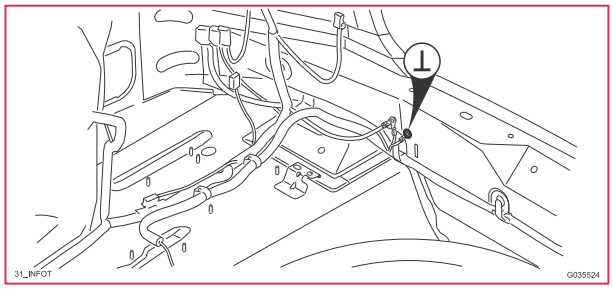

Component illustrations
31/TRM - 74/310

31/TRM Ground connection, Accessories

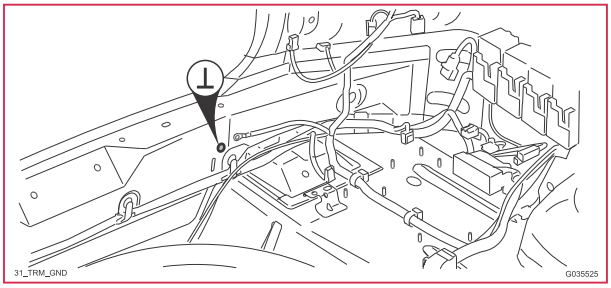

74/302 Connector

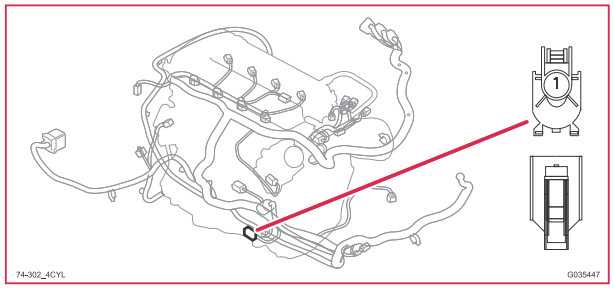

74/9 Connector

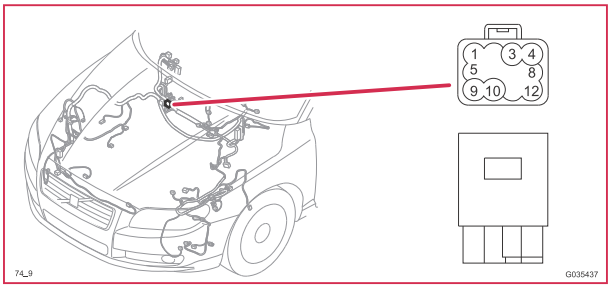

74/304 Connector

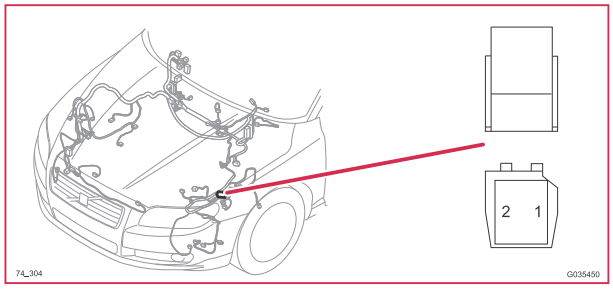

74/30 Connector

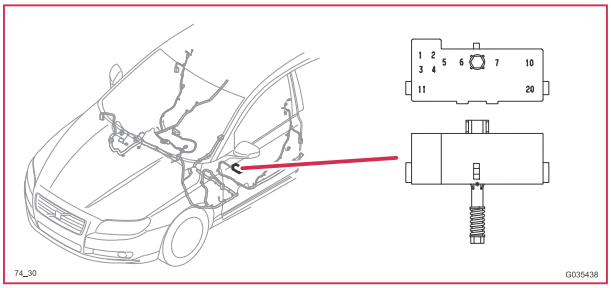

74/307 Connector

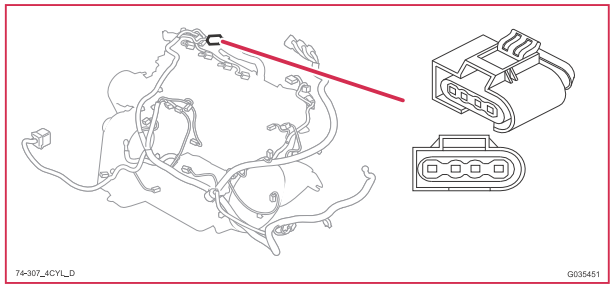

74/31 Connector

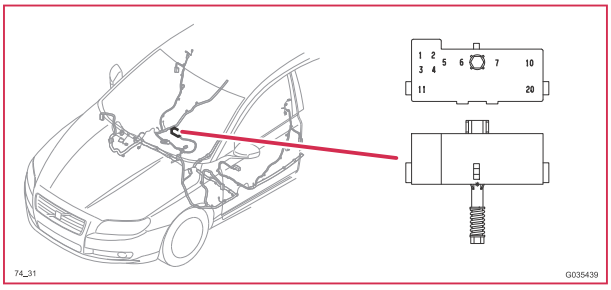

74/309 Connector

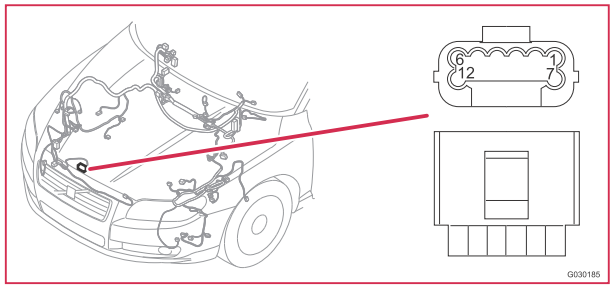

74/301 Connector

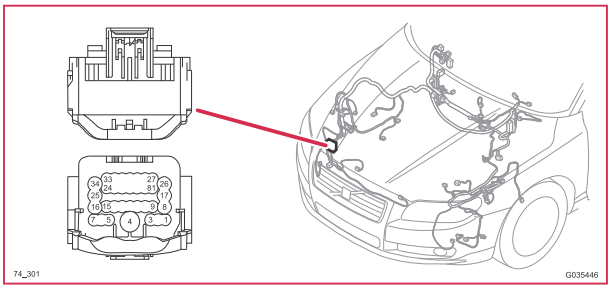

74/310 Connector

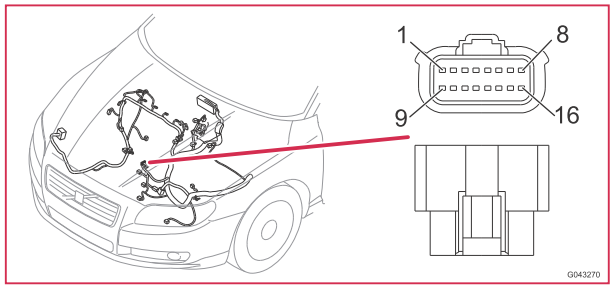

Component illustrations
74/316 - 74/407B

74/316 Connector

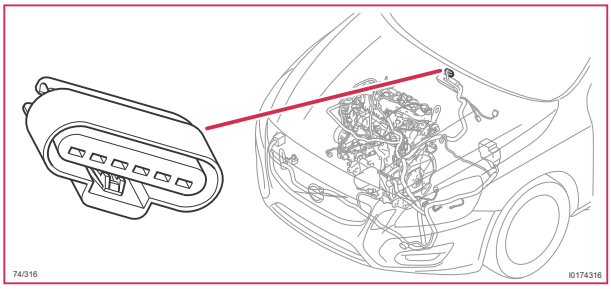

74/321 Connector

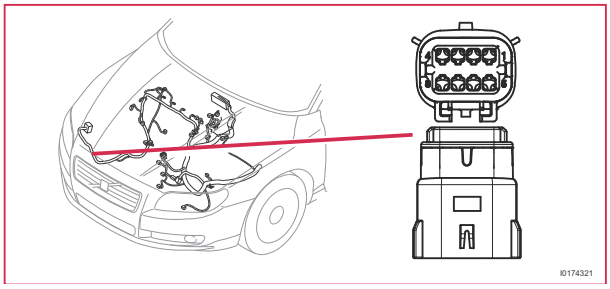

74/401 Connector

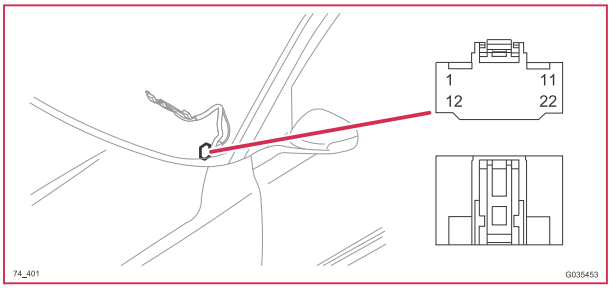

74/402 Connector

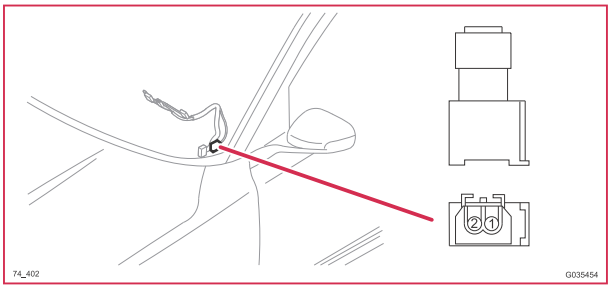

74/403 Connector

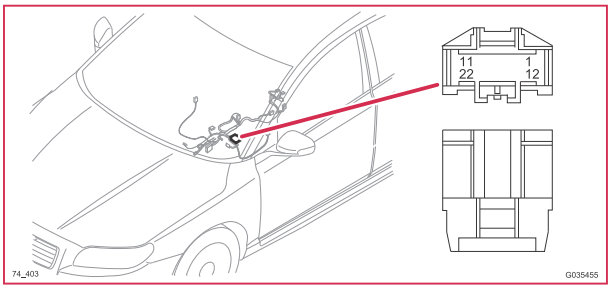

74/404 Connector

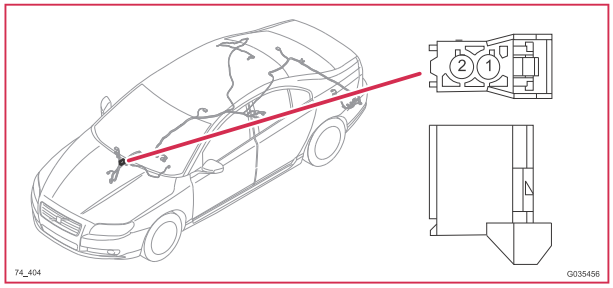

74/405 Connector

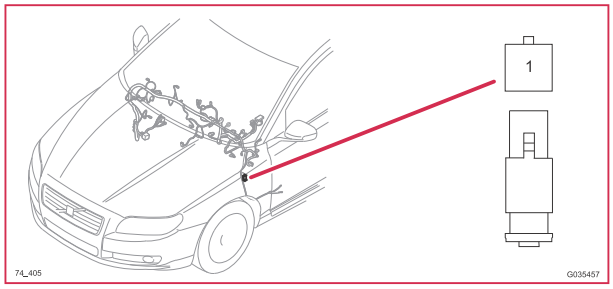

74/406 Connector

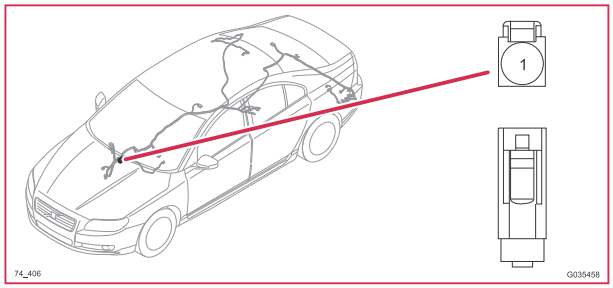

74/407 Connector

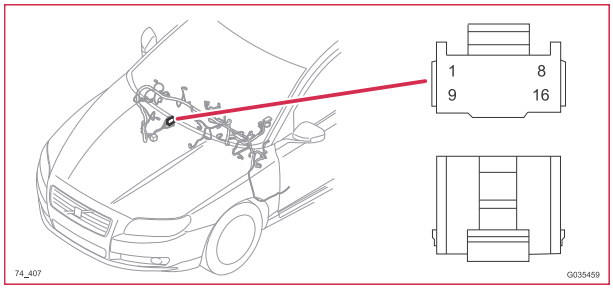

74/407B Connector

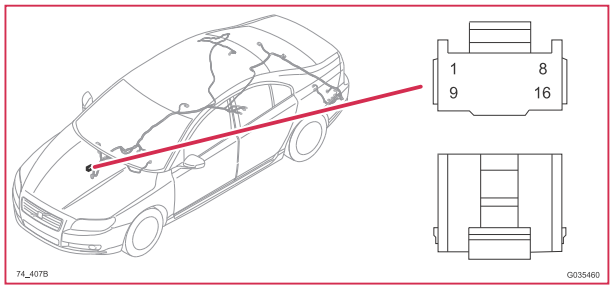

Component illustrations
74/409 - 74/429

74/409 Connector

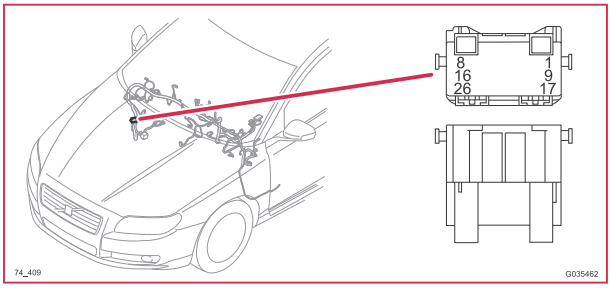

74/411 Connector

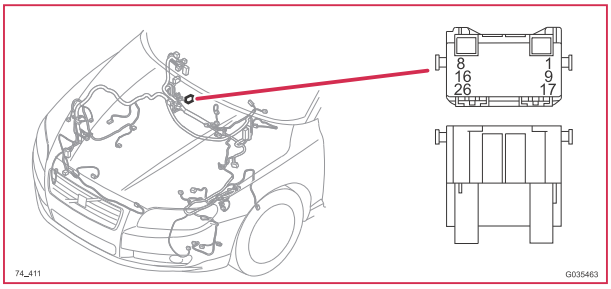

74/412 Connector

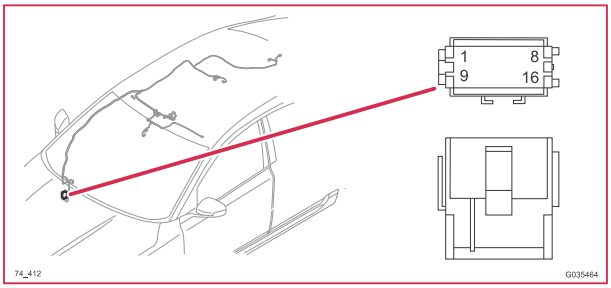

74/414 Connector

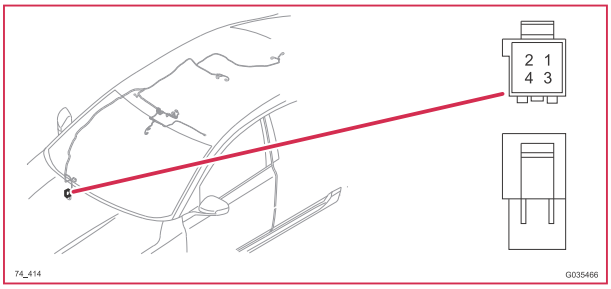

74/417 Connector

74/419 Connector

74/420 Connector

74/421 Connector

74/428 Connector

74/429 Connector

Component illustrations
74/430 - 74/510

74/430 Connector

74/501 Connector

74/502 Connector

74/503 Connector

74/504 Connector

74/504B Connector

74/507 Connector

74/508 Connector

74/509 Connector

74/510 Connector

Component illustrations
74/511 - 74/524

74/511 Connector

74/512 Connector

74/513 Connector

74/514 Connector

74/515 Connector

74/518 Connector

74/519 Connector

74/520 Connector

74/523 Connector

74/524 Connector

Component illustrations
74/531 - PF/no.

74/531 Connector

74/601 Connector

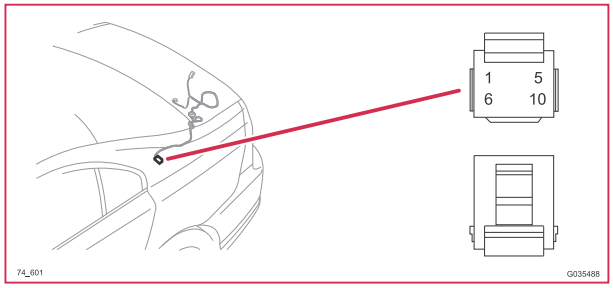

74/532 Connector

74/602 Connector

74/534 Connector

74/603 Connector

74/543 Connector

74/901 Connector

74/545 Connector

PF/no. Main fuse by battery

Component illustrations
F/no.

F/no. Main fuse by battery

Index 1:2

A

Abbreviations ... 7
Accessory USB unit (AUU) ... 174
Active headlight ... 145
Additional electrical equipment, Group 36 ... 149
Alcohol lock ... 164
Alternator and voltage regulator, Group 32 ... 109
Analog clock ... 177
Anti-theft alarm ... 160
Audio ... 181
Audio Premium ... 183
Automatic transmission AWF21 ... 197
Automatic transmission AWF22 ... 198
Automatic transmission MPS6 ... 196
Auxiliary heater ... 250
Auxiliary lights ... 147

B

Beam length adjustment, manual ... 130
Blind spot information system ... 220
Bluetooth Handsfree ... 187
Brake control system & DSTC ... 201
Brake lights S80 ... 136
Brake lights V70 ... 135
Brake system, Group 59 ... 201
Branching points ... 306

C

Cable harness routing in vehicle ... 329
Cable harness towbar/tow hitch 13 pin ... 172
Cable harness towbar/tow hitch 4-pin ... 168
Cable harness towbar/tow hitch 7 pin ... 170
Cellular phone ... 179
Central Electronic Module (CEM) ... 48
Central locking front doors ... 205
Central locking fuel filler flap ... 210
Central locking rear doors ... 207
Central locking trunk lid/tailgate ... 208
Climate control system 4-Cyl. 1.6L Diesel ... 239
Climate control system 4-Cyl. 2.0L Diesel ... 241
Climate control system PTC-elements ... 249
Climate control system, 4-Cyl. 1.6L Turbo ... 235
Climate control system, 4-Cyl. 2.0L Turbo ... 237
Climate control system, 5-Cyl. Diesel ... 247
Climate control system, 5-Cyl. Turbo ... 245
Climate control system, 6-Cyl. ... 243
Climate control system, Group 87 ... 235
Collision warning with power brake booster ... 162
Color abbreviations ... 7
Component illustrations ... 355
Connectors ... 258
Control module overview locations ... 46
Control modules ... 46
Control modules overview designations ... 47
Cooling fan 4-Cyl. 1.6L Turbo ... 62
Cooling fan 4-Cyl. 2.0L Turbo ... 63
Cooling fan 5-Cyl. Turbo ... 64, 65
Cooling fan 6-Cyl. ... 65
Cooling fan, 4-Cyl. 1.6L Diesel ... 66
Cooling fan, 4-Cyl. 2.0L Diesel ... 67
Cooling fan, 5-Cyl. Diesel ... 68
Cooling system, Group 26 ... 62
Countries/Markets, abbreviations ... 7
Cruise control 4-Cyl. 1,6l Turbo ... 69
Cruise control 4-Cyl. 1.6L Diesel ... 71
Cruise control 4-Cyl. 2.0L Diesel ... 72
Cruise control 4-Cyl. 2.0L Turbo ... 70
Cruise control 5-Cyl. & 6-Cyl. ... 73
Cruise control 5-Cyl. Diesel ... 75
Cruise control 5-Cyl. Turbo ... 73
Cruise control 6-Cyl. ... 74

D

DAB Radio ... 186
Dashboard harness, LHD ... 335
Dashboard harness, RHD ... 336
Data communication high speed CAN, 4-Cyl. 1.6L ... 52
Data communication high speed CAN, 4-Cyl. 2.0L ... 53
Data communication high speed CAN, exc. 4-Cyl. ... 51
Data communication Intermediate speed CAN ... 55
Data communication MOST ... 57
Data communication, LIN ... 58
Diagnostics system ... 165
Differential Electronic Module (DEM) ... 199
Direction indicator ... 150
Distribution box in cargo compartment ... 30
Distribution box in passenger compartment ... 27
Doors and openings, Group 83 ... 205
Driver information module ... 176

E

Electric parking brake ... 200
Emission control 4-Cyl. 1.6L Turbo ... 103
Emission control 4-Cyl. 2.0L Turbo ... 104
Emission control 5-Cyl. Turbo ... 105
Emission control 6-Cyl. ... 106, 107
Emission control 6-Cyl. Turbo ... 108
Engine compartment harness LHD ... 334
Engine compartment harness RHD ... 334
Engine controls, Group 27 ... 69, 74
Engine Harness 4-Cyl. 1.6L Turbo ... 329
Engine harness, 4-Cyl. 2.0L Turbo ... 329
Engine management system 6-Cyl. PZEV ... 88
Engine management system, 4-Cyl. 1.6L Turbo ... 81
Engine management system, 4-Cyl. 2.0L Diesel ... 97
Engine management system, 4-Cyl. 2.0L Turbo ... 83
Engine management system, 5-Cyl. Diesel ... 100
Engine management system, 5-Cyl. Turbo ... 86
Engine management system, 6-Cyl. ... 90
Engine management system, 6-Cyl. Turbo ... 92
Executive functions ... 233
Executive harnesses ... 354
Explanations ... 7
Exterior decorative elements, etc. Group 84 ... 216

F

Floor harness, S80 LHD ... 337
Floor harness, S80 RHD ... 338
Floor harness, V70 LHD ... 339
Floor harness, V70 RHD ... 340
Fog/Daytime running lights S80 ... 134
Fog/Daytime running lights V70 & XC70 ... 133
Follow-me-home lighting ... 139
Four-C ... 204
Fuses at Battery ... 32
Fuses in Cold zone engine compartment ... 31
Fuses in passenger compartment ... 26
Fuses in the Central Electronic Module (CEM) ... 23
Fuses in the engine compartment distribution box ... 16

G

Ground connections overview ... 37
Group number, abbreviations ... 7

Index 2:2

H

Harness bumper, front ... 352
Harness bumper,S80, rear ... 353
Harness bumper,V70, rear ... 353
Harness driver door, LHD ... 348
Harness driver door, RHD ... 348
Harness engine 4-Cyl. Diesel 1.6 AUTO ... 330
Harness engine 4-Cyl. Diesel 1.6 MAN ... 330
Harness engine 4-Cyl. Diesel 2.0 ... 331
Harness engine 5-Cyl. Diesel ... 332
Harness engine 5-Cyl. Turbo ... 331
Harness engine 6-Cyl. 3.0L Turbo ... 332
Harness engine 6-Cyl. 3.2L ... 333
Harness engine 6-Cyl. 3.2L PZEV ... 333
Harness passenger door, LH ... 349
Harness passenger door, RHD ... 349
Harness rear door, S80 LHD ... 350
Harness rear door, S80 RHD ... 350
Harness rear door, V70 LHD ... 351
Harness rear door, V70 RHD ... 351
Hazard warning flashers ... 150
Heated door mirrors ... 218
Heated front seats with fans ... 230
Heated front seats without fan ... 231
Heated rear seat ... 232
Heated rear window ... 224
Heated steering wheel ... 229
Heated windscreen adapter harness ... 347
Heated windscreen LHD ... 222
Heated windscreen RHD ... 223
High and low beam, Dual Xenon ... 129
High and low beam, Halogen ... 128
High pressure headlight washer ... 155
Horn ... 159
How to use the wiring diagrams ... 8

I

Ignition and control system, Group 28 ... 81
Ignition switch symbols ... 7
Infotainment harness, S80 LHD ... 341
Infotainment harness, S80 RHD ... 342
Infotainment harness, V70 LHD ... 343
Infotainment harness, V70 RHD ... 344
Instruments, Group 38 ... 175
Interior equipment, Group 85 ... 225
Interior lighting ... 141
Internal equipment, Group 88 ... 253

K

Keyless vehicle ... 157

L

Lighting floor ... 148
Lighting in door sill trims ... 146
Lighting mug holder ... 148
Lighting, Group 35 ... 128
List of symbols ... 9

M

MOST ... 57
Multimedia monitor with DVD, Dual Screen (RSE), S80 ... 189
Multimedia monitor with DVD, Dual Screen (RSE), V70 ... 188

N

Navigation system, portable ... 193

O

Other, abbreviations ... 7
Other, Group 39 ... 178
Outlet 12 V ... 166
Overview with Start/stop function ... 11
Overview without Start/stop function ... 10
Overview, Distribution box in cargo compartment ... 15
Overview, Distribution box in engine compartment, 4-Cyl. 2.0L ... 13
Overview, Distribution box in engine compartment, exc. 4-Cyl. 2.0L ... 12
Overview, Distribution box in passenger compartment 14

P

Parking assistance ... 161
Parking brake, Group 55 ... 200
Parking camera ... 191
Parking camera wide-angle ... 192
Parking heater ... 250
Parking heater, remote start ... 251
Power door mirrors ... 216
Power driver's seat with memory function ... 225
Power folding headrest ... 255
Power passenger seat ... 227
Power steering EHPAS ... 202
Power sunroof ... 215
Power supply 4-Cyl. with Start/Stop ... 110
Power supply 4-Cyl. without Start/Stop ... 109
Power supply 5-Cyl. with Start/Stop ... 112
Power supply 5-Cyl. without Start/Stop ... 111
Power supply 6-Cyl. ... 113
Power windows front doors ... 212
Power windows rear doors ... 214

R

Rain sensor ... 149
Rear-view mirror with automatic dimming ... 257
Refrigeration box rear seat ... 252
Relays in Cargo compartment ... 36
Relays in Distribution box engine compartment ... 33, 34
Relays in Passenger compartment ... 35
Remote control garage opening ... 256
Reversing lights S80 ... 138
Reversing lights V70 ... 137
Roof harness, LHD ... 345
Roof harness, RHD ... 346
Running/Parking light, Tail lights S80 ... 132
Running/Parking light, Tail lights V70 ... 131

S

Satellite radio ... 190
Seat belt reminder ... 175
Sensus Connected Touch ... 194
Shock absorbers, Group 76 ... 204
Signal receiver central locking ... 211
Start-/Stop function 4-Cyl. 1.6L Diesel ... 78
Start-/Stop function 4-Cyl. 1.6L Turbo ... 76
Start-/Stop function 4-Cyl. 2.0L Diesel ... 79
Start-/Stop function 4-Cyl. 2.0L Turbo ... 77
Start-/Stop function 5-Cyl. Diesel ... 80
Starting system 4-Cyl. 1.6L Diesel ... 121
Starting system 4-Cyl. 1.6L Turbo with Start/Stop ... 115
Starting system 4-Cyl. 1.6L Turbo without Start/Stop 114
Starting system 4-Cyl. 2.0L Diesel ... 123

Starting system 4-Cyl. 2.0L Turbo 117
Starting system 5-Cyl. Diesel with Start/Stop 126
Starting system 5-Cyl. Diesel without Start/Stop 125
Starting system 5-Cyl. Turbo 119
Starting system 6-Cyl. 120
Starting system, Group 33 114
Steering Wheel Module (SWM) 61
Steering, Group 64 202
Supplemental restraint system 253

T

Table of Contents 3
Tailgate harness 352
Tire pressure monitoring system (TPMS) 163
Transmission M66 195
Transmission, Group 43 195
Tunnel harness 347
TV 178

W

Wiper/Washer rear window 156
Wiper/Washer Windshield 154
Wiring and fuses, Group 37 165

List of components 1:7

1/1	Battery
1/2	Secondary battery
2/14	Relay, glow plug system
2/16	Rear window wiper relay, V70
2/17	Relay, horn
2/22	Relay, climate control system
2/31	Relay, 15-feed
2/32	Main relay, engine management system
2/35	Relay, starter motor
2/64	Auxiliary light relay, accessory
2/81A	Relay, heated windshield passenger side
2/81B	Relay, heated windshield driver's side
2/82	Relay, rear window defroster, V70
2/82	Relay, rear window defroster, S80
2/88	Relay, 15-feed rear
2/141	Refrigeration box relay
2/166	Battery relay
2/182	Relay, headlight washer motor
2/193	Relay, comfort functions
2/246	Secondary battery relay
2/249	Relay, heated steering wheel
3/1	Ignition switch
3/4	Steering wheel switch left (SWSL)
3/6	Switch, hazard warning flashers
3/8	Switch, heated rear window/rearview mirrors
3/9	Contact brake light
3/10	Reversing light contact
3/27	Switch unit, power passenger seat
3/35	Trunk handle switch, V70
3/35	Trunk handle switch, S80
3/37	Contact horn
3/62	Hood alarm contact
3/65	Switch, heated rear seat
3/74	Left-hand front door lock unit
3/75	Right-hand front door lock unit
3/76	Lock unit, rear left door
3/77	Lock unit, rear right door
3/80	Switch, central locking system, driver's door
3/81	Power window switches, driver's door
3/83	Switch, passenger door power window
3/85	Power window switch, rear left door
3/86	Power window switch, right rear door
3/93	Contact, driver's seat belt buckle
3/94	Contact, passenger seat belt buckle
3/104	Switch, sun curtain rear
3/111	Light Switch Module (LSM)
3/112	Climate Control Module (CCM)
3/117	Switch unit, ceiling light
3/126	Driver Door Module (DDM)
3/127	Passenger Door Module (PDM)
3/128	Left rear door module (LDM)
3/129	Right rear door module (RDM)
3/130	Steering Wheel Module (SWM)
3/131	Steering wheel switch right (SWSR)
3/135	RTI switch
3/156	Gear Selector Module (GSM)
3/157	Switch, passenger side airbag
3/173	Switch, trunk lid/tailgate private lock
3/176	Power window switches, driver's door
3/217	Contact, left rear belt buckle
3/218	Contact, center rear belt buckle
3/219	Contact, right rear belt buckle
3/225	Switch unit, Continuously Controlled Damping (CCD)
3/255	Position sensor, driver's seat
3/256	Position sensor, passenger seat
3/267	Switch unit, telematics
3/271	Contact, immobilizer, clutch pedal
3/272	Switch, parking brake
3/273	Lock contact, leftleft front door
3/274	Lock contact, right front door
3/275	Lock contact, left rear door
3/276	Lock contact, right rear door
3/281	Infotainment Control Module (ICM)
3/282	Switch indicator 1st gear
3/284	Diagnostic contact, brake light
3/291	Tailgate closing switch, V70
3/293	Handsfree control panel cellular phone
3/299	Switch, passenger seat adjustment, rear seat
3/324	Switch, rear seat adjustment, left-hand side
3/325	Switch, rear seat adjustment, right-hand side
3/330	Switch, rear seat massage and ventilation, left
3/331	Switch, rear seat massage and ventilation, right
3/359	Paddle shifter, left
3/360	Paddle shifter, right
4/6	Climate control system
4/7	Combustion Preheater Module (CPM)
4/9	Supplemental restraint system module (SRS)
4/16	Brake Control Module (BCM)
4/28	Transmission Control Module (TCM), AWF21/AWF22
4/28B	Transmission Control Module (TCM), MPS6
4/31	Passenger compartment fan control module
4/33	Sunroof control module

List of components 2:7

4/46	Engine Control Module (ECM), 4-Cyl. 1.6L Turbo
4/46	Engine Control Module (ECM), 4-Cyl. 2.0L Turbo
4/46	Engine Control Module (ECM), 4-Cyl. 1.6L Diesel
4/46	Engine Control Module (ECM), 4-Cyl. 2.0L Diesel
4/46	Engine Control Module (ECM), 5-Cyl. Turbo
4/46	Engine Control Module (ECM), 5-Cyl. Diesel
4/46	Engine Control Module (ECM), 6-Cyl.
4/50	Throttle unit, 4-Cyl. Turbo
4/50	Throttle unit, 5-Cyl.
4/50	Throttle unit, Diesel
4/52	Power Seat Module (PSM)
4/56	Central Electronic Module (CEM)
4/56:C1	Central Electronic Module (CEM)
4/56:C2	Central Electronic Module (CEM)
4/56:C3	Central Electronic Module (CEM)
4/56:C4	Central Electronic Module (CEM)
4/56:C5	Central Electronic Module (CEM)
4/68	Steering Wheel Angle Sensor Module (SAS)
4/71	Cooling fan control module
4/76	Remote control unit for garage door opener
4/80	Forward Sensing Module (FSM)
4/82	Differential Electronic Module (DEM)
4/83	Fuel pump control module
4/84	Suspension Module (SUM)
4/86	Parking Assistance Module (PAM)
4/93	Keyless Vehicle Module (KVM)
4/99	Electronic power steering control module
4/102	Steering Column Lock Module (SCL)
4/106	Control module, remote parking heater start
4/109	Glow plug control module
4/110	Trailer Module (TRM)
4/115	Park Brake Module (PBM)
4/116	Power Operated Tailgate Module (POT), V70
4/119	Remote Keyless Entry (RKE)
4/119.2	Remote Receiver Module (RRX)
4/120	Parking Assistance Camera module (PAC)
4/124	Accessory USB unit (AUU)
4/125	Closing velocity module (CVM)
4/131	Control module back massage left
4/133	Control module back massage right
4/148	Heated Steering Wheel Module (HSWM)
4/156	Accessory Connectivity Unit (ACU)
5/1	Driver Information Module (DIM)
6/1	Wiper Motor Module (WMM)
6/8	Central locking motor, trunk lid
6/16	Driver seat motor, backrest angle
6/17	Driver seat motor, up/down front edge
6/18	Driver seat motor, up/down rear edge
6/19	Driver seat motor, forward/backward
6/20	Passenger seat motor, forward/backward
6/21	Passenger seat motor, up/down front edge
6/22	Passenger seat motor, up/down rear edge
6/23	Passenger seat motor, backrest angle
6/25	Starter motor
6/26	Alternator Control Module (ACM)
6/28	Motor, passenger compartment fan
6/32	Rear window wiper motor, V70
6/33	Fuel pump
6/35	Fuel pump, auxiliary heater
6/36	Lock motor, central locking, left front door
6/37	Lock motor, fuel filler cover
6/48	Damper Motor Module (DMM), recirculation
6/55	Lock motor, central locking, right front door
6/56	Lock motor, central locking, right rear door
6/57	Lock motor, central locking, left rear door
6/58	Motor, front driver's door power window
6/59	Motor, rear left power window
6/60	Motor, front passenger door power window
6/61	Motor, rear right power window
6/62	Power door mirror, left
6/63	Power door mirror, right
6/67	Pump, fuel leakage control
6/71	Valve, speed-dependent power steering
6/73	Coolant pump
6/74	Motor, sun curtain
6/88	Motor, seat backrest reclining, left rear
6/89	Motor, seat backrest reclining, right rear
6/95	Damper Motor Module (DMM), temperature, left side
6/96	Damper Motor Module (DMM), temperature, right side
6/102	Damper Motor Module (DMM), defroster
6/103	Damper Motor Module (DMM), floor/ventilation
6/104	High pressure headlight washer motor
6/113	Coolant water pump
6/120	Throttle unit, 6-Cyl.
6/127	Washer motor
6/139	Upper actuating motor, intake manifold
6/140	Lower actuating motor, intake manifold
6/142	Motor folding head restraint right
6/146	Lock motor, rear left brake disc
6/147	Lock motor, rear right brake disc
6/149	Tailgate closing motor, V70
6/163	Electric power steering module (EPAS)
6/164	Electrohydraulic power steering module (EHPAS)
6/165	Motor tailgate opening left
6/169	Left pump back massage
6/170	Right pump back massage
6/176	Electric oil pump
6/181	Supercharger bypass actuator
6/187	Fan, seat cushion ventilation, left rear
6/188	Fan, seat backrest ventilation, left rear
6/189	Fan, seat cushion ventilation, right rear
6/190	Fan, seat backrest ventilation, right rear
6/197	EGR Cooling pump

List of components 3:7

7/4	Brake fluid level sensor
7/5	Washer fluid level sensor
7/6	Oil pressure monitor
7/8	Pressure sensor, climate control system
7/12	Solar sensor, twilight sensor and indicator alarm
7/15	Front heated oxygen sensor, 4-Cyl.
7/15	Front heated oxygen sensor, 5-Cyl.
7/15	Front oxygen sensor, bank 1, 6-Cyl.
7/15	Front heated oxygen sensor, Diesel
7/16	Sensor, coolant temperature
7/17	Mass airflow sensor (MAF)
7/23	Rear knock sensor
7/24	Front knock sensor
7/25	Impulse sensor, 4-Cyl.
7/25	Impulse sensor, 5-Cyl. & Diesel
7/25	Impulse sensor, 6-Cyl.
7/31	Sensor ABS, front left
7/32	Sensor ABS, front right
7/35	Oil level sensor
7/41	Temperature sensor evaporator
7/51	Accelerator pedal sensor
7/56	Sensor ABS, rear left
7/57	Right-hand rear ABS sensor
7/73	Coolant level sensor
7/81	Pressure sensor intake manifold, 4-Cyl.
7/81	Pressure sensor intake manifold, 5-Cyl. Diesel
7/81	Pressure sensor, intake manifold, 6-Cyl.
7/82	Rear oxygen sensor, bank 1, 4-Cyl.
7/82	Rear oxygen sensor, bank 1, 6-Cyl.
7/87	Acceleration sensor, Four-C, front left
7/88	Acceleration sensor, Four-C, front right
7/89	Acceleration sensor, Four-C, rear left
7/90	Moisture sensor
7/91	Steering angle sensor
7/93	Occupant Weight Sensor (OWS)
7/103	Front oxygen sensor, bank 2, 6-Cyl.
7/104	Rear oxygen sensor, 4-Cyl. 2.0L Diesel
7/104	Rear oxygen sensor, bank 2, 6-Cyl.
7/108	Left-hand rear side impact sensor
7/109	Right-hand rear side impact sensor
7/110	Temperature sensor, driver's seat
7/111	Temperature sensor, passenger seat
7/112	Seat temperature sensor, left rear
7/113	Seat temperature sensor, right rear
7/115	Side impact sensor, left B-post
7/116	Side impact sensor, right B-post
7/118	Height sensor, suspension, front left
7/119	Height sensor, suspension, front right
7/120	Height sensor, suspension, rear left
7/121	Height sensor, suspension, rear right
7/123	Clutch pedal sensor
7/124	Sensor brake pedal
7/131-	
7/134	Rear parking assistance sensor
7/140	Fuel pressure sensor, low
7/149	Rain Sensor Module (RSM)
7/154	Sensor fuel temperature
7/156	Pressure and temperature sensor, fuel
7/159	Air Quality Sensor (AQS)
7/162	Pressure sensor, fuel line
7/164	Body Sensor Cluster Stability Sensor (BSC)
7/165	Pressure and temperature sensor, intake manifold, 4-Cyl.
7/165	Pressure and temperature sensor, intake manifold, 5-Cyl.
7/165	Pressure and temperature sensor, intake manifold, Diesel
7/165	Pressure and temperature sensor, intake manifold, 6-Cyl.
7/166	Oil level sensor, 6-Cyl.
7/172	Camshaft position sensor, intake side, 5-Cyl.
7/172	Camshaft position sensor, intake side, 6-Cyl.
7/172	Position sensor camshaft, intake side, 4-Cyl. Diesel
7/173	Position sensor camshaft, outlet side, 4-Cyl.
7/173	Camshaft position sensor, exhaust side, 5-Cyl.
7/173	Camshaft position sensor, exhaust side, 6-Cyl.
7/173	Camshaft position sensor, exhaust side, Diesel
7/174	Differential pressure sensor, particle filter
7/175	Occupant weight sensor, seat belt reminder
7/178	Front impact sensor, right
7/179	Front impact sensor, left
7/190	Temperature sensor, catalytic converter
7/191	Temperature sensor, particle filter
7/193	Position sensor turbo
7/199	Ultrasonic sensor (IMS)
7/200	Sensor, coolant temperature
7/203	Forward-aimed radar (FLR)
7/204-	
7/207	Front parking assistance sensor
7/208	Side impact sensor, left front door
7/209	Side impact sensor, right front door
7/210-	
7/213	Tire pressure sensor
7/215	Rear heated oxygen sensor, 5-Cyl. Diesel
7/232	Manifold air temperature and pressure sensor
7/238	Alcolock sensor
7/240	Battery monitoring sensor (BMS)
7/243	Gear position sensor neutral position
7/248	Oil pressure and temperature sensor
7/251	Brake vacuum sensor

List of components 4:7

8/3	Electromagnetic clutch, climate control system
8/6-11	Injection valves
8/17	EGR valve, 4-Cyl. Diesel
8/18	EVAP valve, 4-Cyl.
8/18	EVAP valve, 5-Cyl.
8/18	EVAP valve, 6-Cyl.
8/19	Reset valve, camshaft intake
8/20	Shock absorber, Four-C, front left
8/21	Shock absorber, Four-C, front right
8/22	Shock absorber, Four-C, rear left
8/23	Shock absorber, Four-C, rear right
8/28	Turbo control valve
8/33	Igniter, belt tensioner, driver's side
8/34	Igniter, belt tensioner, passenger side
8/36	Solenoid shift lock
8/46	Activation unit, DSTC
8/48	Auto-dimming rearview mirror
8/51	Igniter side airbag front driver's seat
8/52	Igniter side airbag front passenger seat
8/55	Igniter, rear left belt tensioner
8/56	Igniter, rear right belt tensioner
8/59	Rear left head restraint solenoid
8/60	Rear right head restraint solenoid
8/62	Belt tensioner igniter, center rear seat
8/66	Igniter, left inflatable curtain
8/67	Igniter, right inflatable curtain
8/68	Relief valve
8/77	Control valve, fuel volume
8/81	Reset valve, camshaft exhaust, 4-Cyl.
8/81	Reset valve, camshaft exhaust, 5-Cyl.
8/92	Lap belt tensioner, driver
8/93	Lap belt tensioner, passenger
8/98	Control valve fuel pressure
8/99	Steering column igniter
8/111	Control valve fuel flow
8/113	Bypass valve, EGR cooling, 4 Cyl.
8/113	Bypass valve, EGR cooling, 5 Cyl.
8/114	Swirl actuator valve
8/117	Solenoid, variable valve timing, intake, 4-Cyl. 2.0L Turbo
8/117	Solenoid, variable valve timing, intake, 5-Cyl.
8/117	Solenoid, variable valve timing, intake, 6-Cyl.
8/118	Solenoid, variable valve timing, intake, 4-Cyl. 2.0L Turbo
8/120	EGR valve, 5-Cyl. Diesel
8/121	Radiator valve
8/123	Driver airbag
8/124	Passenger airbag
8/125	Solenoid front cam profile
8/126	Solenoid rear cam profile
8/128	Driver's belt force limiter
8/129	Passenger belt force limiter
8/134	Solenoid, reverse interlock, manual
8/157	Turbocharger control valve, 5-Cyl. Diesel
8/159	Bypass valve
8/164	Electric piston cooling valve
8/167	Bypass solenoid
8/180	Engine oil pump solenoid
8/197	Vacuum valve, water cooler bypass
8/199	Vacuum regulator, turbo bypass control
8/200	Vacuum regulator, turbo wastegate control

9/1	Front 12V outlet
9/2	Heated rear window
9/7	Heated windshield
9/8	Heating element, left rear seat cushion
9/9	Heating element, left rear seat backrest
9/10	Heating element, right rear seat cushion
9/11	Heating element, right rear seat backrest
9/12	Seat Heating Module (SHM), driver's side
9/13	Seat Heating Module (SHM), passenger side
9/14	Control module, rear left seat heater
9/15	Control module, right rear seat heater
9/16	Heating element, driver's seat backrest
9/17	Heating element, passenger seat backrest
9/18	Heating element, driver's seat cushion
9/19	Heating element, passenger seat cushion
9/24	Refrigeration box
9/25	Rear 12V outlet
9/30	Auxiliary heater
9/32	PTC resistor, crankcase ventilation
9/38	Electrically heated fuel filter
9/39	Heating element camera
9/42	PTC-element
9/43	Heated windshield washer nozzle, left
9/44	Heated windshield washer nozzle, right

List of components 5:7

10/1	Lamp housing, front left
10/2	Lamp housing, front right
10/3	License plate lighting, V70
10/3	License plate lighting, S80
10/17	Lamp housing, rear right V70
10/17	Lamp housing, rear right, S80
10/18	Lamp housing, rear left, V70
10/18	Lamp housing, rear left, S80
10/19	Auxiliary brake light V70
10/19	Auxiliary brake light, S80
10/22	Ceiling light
10/25	Ceiling light, cargo compartment, V70
10/29	Glove compartment lighting
10/56	Daytime running lamp left, V70 & S80
10/57	Daytime running lamp right, V70 & S80
10/65	Auxiliary light, front right
10/69	Auxiliary light, front left
10/72	Front ashtray lighting
10/97	Left-hand front courtesy lighting
10/102	Right-hand front courtesy lighting
10/114	Left-hand vanity mirror lighting
10/115	Right-hand vanity mirror lighting
10/122	Left-hand rear courtesy lighting
10/123	Right-hand rear courtesy lighting
10/127	Lighting, cargo compartment, left-hand side, S80
10/128	Lighting, cargo compartment, right-hand side, S80
10/150	Rear reading light
10/161	Cup holder illumination lamp
10/241	Lighting, left-hand front inner door handle
10/242	Lighting, right-hand rear inner door handle
10/243	Lighting, left-hand rear inner door handle
10/244	Lighting, right-hand rear inner door handle
10/249	Sill lighting, front driver's side
10/250	Sill lighting, front passenger side
10/251	Sill lighting, rear driver's side, S80
10/252	Sill lighting, rear passenger side, S80
10/261	Ground illumination lighting, left front
10/262	Ground illumination lighting, right front
10/263	Lighting, cup holder tunnel console
10/286	Lighting floor driver's side
10/287	Lighting floor passenger side
10/289DR	Lighting, door pocket, driver's door
10/289PA	Lighting, door pocket, passenger door
10/294	Lighting floor passenger side
10/295	Lighting floor passenger side
11A/no.	Main fuses in distribution box in engine compartment
11B/no.	Fuses in distribution box in engine compartment
11C/no.	Fuses in distribution box in passenger compartment
11D/A	Fuses in distribution box in cargo compartment
11/no.	Fuse in extra fuse holder, passenger compartment
15/31	Distribution box in engine compartment
15/32	Distribution box in cargo compartment
15/36	Distribution box in passenger compartment
15/37	Distribution box cold zone in engine compartment
16/1	Integrated Audio Module (IAM)
16/3	Right-hand front door speaker
16/4	Left-hand front door speaker
16/5	Right-hand rear door speaker
16/6	Left-hand rear door speaker
16/10	Horn 1
16/11	Horn 2
16/16	Window antenna amplifier
16/26	Center dashboard speaker
16/29	Loudspeaker mid-range left front
16/30	Loudspeaker mid-range right front
16/35	Siren Control Module (SCM)
16/36	TV receiver
16/45	Portable navigation system
16/47	Antenna GSM/GPS/RDAR
16/49	Traffic Message Channel module (TMC)
16/55	Left-hand front tweeter
16/56	Right-hand front tweeter
16/60	Phone Module (PHM)
16/65	Immobilizer Antenna Unit (IAU)
16/71	Window antenna amplifier
16/79	Subwoofer Module (SUB), V70
16/98	Microphone
16/105	Audio module (AUD)
16/109	DVD player/control module
16/121	VICS-antenna
16/123	Auxiliary equipment input (AUX)
16/127	Microphone, mobile phone handsfree
16/132	Antenna door lock trunk lid/tailgate, V70
16/132	Antenna, door lock, bumper, S80
16/133	Antenna, door lock, cargo compartment
16/134	Antenna, door lock, passenger compartment 2
16/135	Antenna, door lock, passenger compartment 3
16/136	left rear door tweeter
16/137	Right rear door tweeter
16/140	SIM card reader
16/141	Interference filter, rear window, left
16/145	Remote Digital Audio Receiver (RDAR)
16/159	Control module, cellular phone handsfree
16/162	Digital Audio Broadcast Module (DABM)
16/164	Screen, left head restraint
16/165	Screen, right head restraint
16/185	TV Antenna
16/186	TV Antenna
16/187	TV Antenna

List of components 6:7

17/13	Data link connector
17/19	12 V outlet, cargo compartment, V70
17/19	12 V outlet, cargo compartment, S80
17/37	4-pin outlet, tow hitch cable harness
17/38	7-pin outlet, tow hitch cable harness
17/39	13-pin outlet, tow hitch cable harness
17/42	USB-port
17/45	Alcolock outlet
17/46	USB software download ICM
18/4	Contact reel
19/4	Analog clock
20/3-8	Spark plug and ignition coil
20/16	Capacitor
20/22-26	Glow plug
26/6	Converter/control module, sill moldings, driver's side
26/7	Converter/control module, sill moldings, passenger side
26/8	Alcolock charging cradle
27/2	Indicator, visual collision warning
27/3	Left Camera Module (LCM)
27/4	Right Camera Module (RCM)
27/5	Forward looking camera
27/6	Camera
27/8	Camera, wide angle front
31/1	Ground connection, PTC
31/2	Ground connection, Left wheel housing
31/3	Ground connection, Body battery
31/4	Ground connection, engine
31/6	Ground connection, Left bottom rail
31/7	Ground connection, Left bottom rail
31/10	Ground connection, Left bottom rail
31/15	Ground connection, Right bottom rail
31/47	Ground connection, Left rear bumper abutment
31/48	Ground connection, Right rear bumper abutment
31/65	Ground connection, Rear seat riser, left side 1
31/66	Ground connection, Rear seat riser, left side 2
31/67	Ground connection, Rear seat riser, right side 1
31/68	Ground connection, Rear seat riser, right side 2
31/83	Ground connection, Left bottom rail
31/84	Ground connection, Right bottom rail
31/88	Ground connection, Engine ignition coils, 4-Cyl.
31/88	Ground connection, Engine ignition coils, 5-Cyl.
31/88	Ground connection, Engine ignition coils, 6-Cyl.
31/89	Ground connection, Engine ignition coils, 4-Cyl.
31/89	Ground connection, Engine ignition coils, 5-Cyl.
31/89	Ground connection, Engine ignition coils, 6-Cyl.
31/90	Ground connection, Engine ignition coils, 6-Cyl. Turbo
31/93	Ground connection, Left wheel housing 2
31/94	Ground connection, Right wheel housing 2
31/95	Ground connection, Left wheel housing 3
31/96	Ground connection, Right wheel housing 3
31/107	Ground connection, Roof rear
31/115	Ground connection, roof left, A-pillar
31/131	Ground connection, support battery
31/XX4	Ground connection, Engine-Body
31/XX10	Ground connection, Left wheel housing 1
31/XX14	Ground connection, Left wheel housing 3 (ABS)
31/AL	Ground connection, Auxiliary lights
31/INFOT	Ground connection, Infotainment
31/TRM	Ground connection, Accessories

List of components 7:7

74/9	Connector
74/30	Connector
74/31	Connector
74/301	Connector
74/302	Connector
74/304	Connector
74/307	Connector
74/309	Connector
74/310	Connector
74/316	Connector
74/321	Connector
74/401	Connector
74/402	Connector
74/403	Connector
74/404	Connector
74/405	Connector
74/406	Connector
74/407	Connector
74/407B	Connector
74/409	Connector
74/411	Connector
74/412	Connector
74/414	Connector
74/417	Connector
74/419	Connector
74/420	Connector
74/421	Connector
74/428	Connector
74/429	Connector
74/430	Connector
74/501	Connector
74/502	Connector
74/503	Connector
74/504	Connector
74/504B	Connector
74/507	Connector
74/508	Connector
74/509	Connector
74/510	Connector
74/511	Connector
74/512	Connector
74/513	Connector
74/514	Connector
74/515	Connector
74/518	Connector
74/519	Connector
74/520	Connector
74/523	Connector
74/524	Connector
74/531	Connector
74/532	Connector
74/534	Connector
74/543	Connector
74/545	Connector
74/601	Connector
74/602	Connector
74/603	Connector
74/901	Connector
PF/no.	Main fuse by battery
F/no.	Main fuse by battery